


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

NOTES:

- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

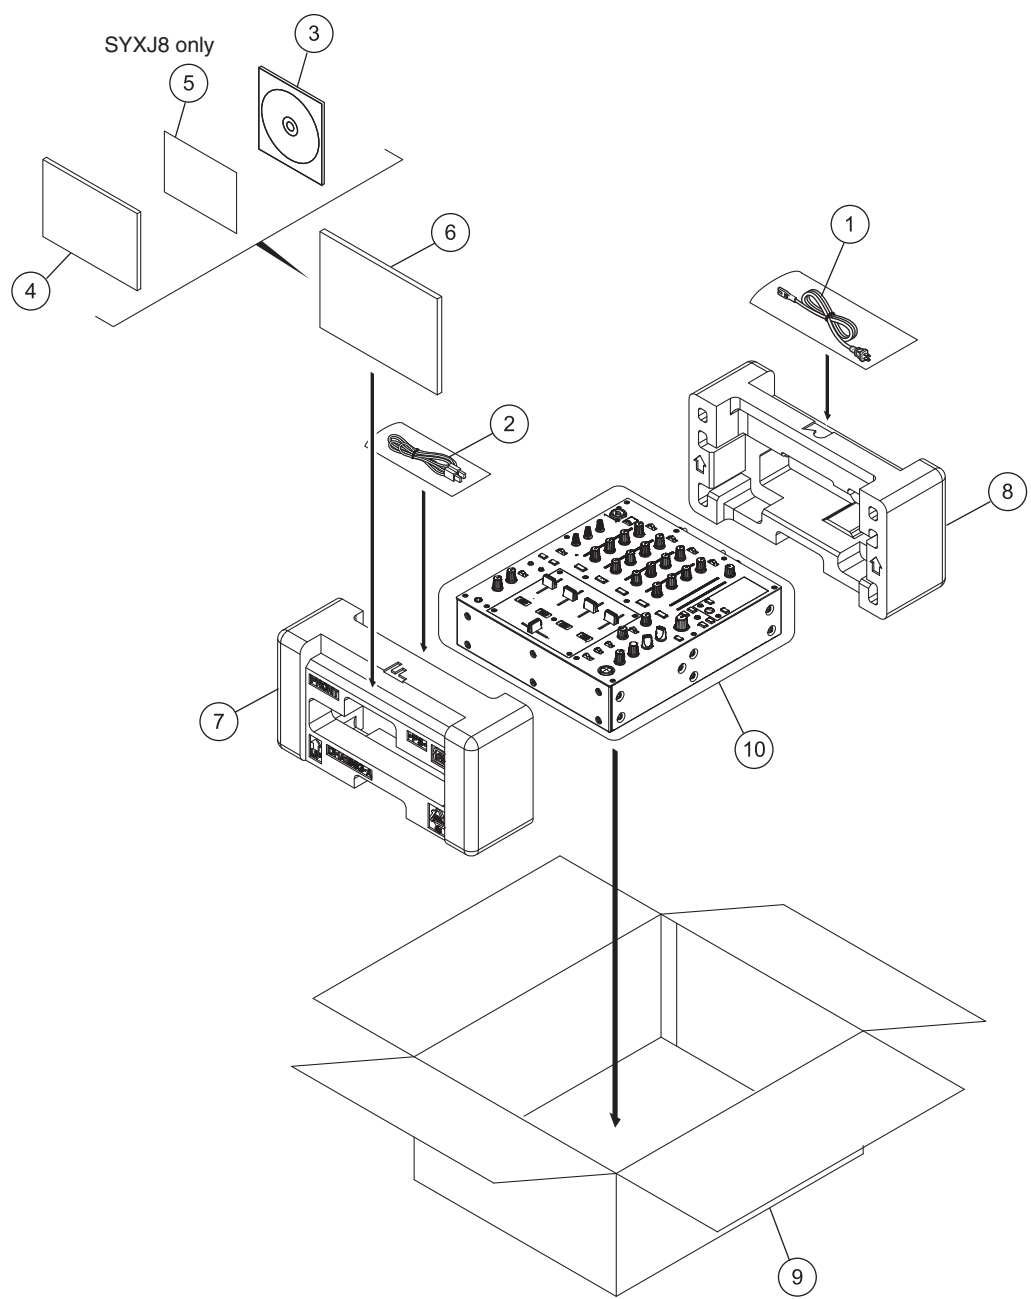

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
⚠ 1	Power Cord	See Contrast table (2)
2	USB Cable	DDE1128
3	Driver Software/ Operating Instructions CD-ROM	DXX2726
4	Read Before Use (Important)/ Quick Start Guide	See Contrast table (2)
NSP 5	Warranty	See Contrast table (2)
NSP 6	Polyethylene Bag	AHG7117
7	Packing Pad/A	DHA1883
8	Packing Pad/B	DHA1884
9	Packing Case	See Contrast table (2)
10	Packing Sheet	RHC1023

(2) CONTRAST TABLE

DJM-750-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-750-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-750-K /SYXJ8	DJM-750-K /UXJCB	DJM-750-K /LXJ	DJM-750-K /KXJ5	DJM-750-K /XJCN5
⚠	1	Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	4	Read Before Use (Important) /Quick Start Guide	DRH1205	DRH1206	DRH1216	DRH1219	DRH1218
NSP	5	Warranty	ARY7158	Not used	Not used	Not used	Not used
	9	Packing Case	DHG3239	DHG3240	DHG3241	DHG3244	DHG3243

Mark	No.	Symbol and Description	DJM-750-S /SYXJ8	DJM-750-S /UXJCB	DJM-750-S /LXJ	DJM-750-S /KXJ5	DJM-750-S /XJCN5
⚠	1	Power Cord	ADG7062	DDG1108	ADG7062	ADG7115	ADG7105
	4	Read Before Use (Important) /Quick Start Guide	DRH1205	DRH1206	DRH1216	DRH1219	DRH1218
NSP	5	Warranty	ARY7158	Not used	Not used	Not used	Not used
	9	Packing Case	DHG3245	DHG3246	DHG3247	DHG3250	DHG3249

9.2 EXTERIOR SECTION

A

Refer to
"9.4 CONTROL PANEL SECTION (1/2)" .


B

C

D

E

F

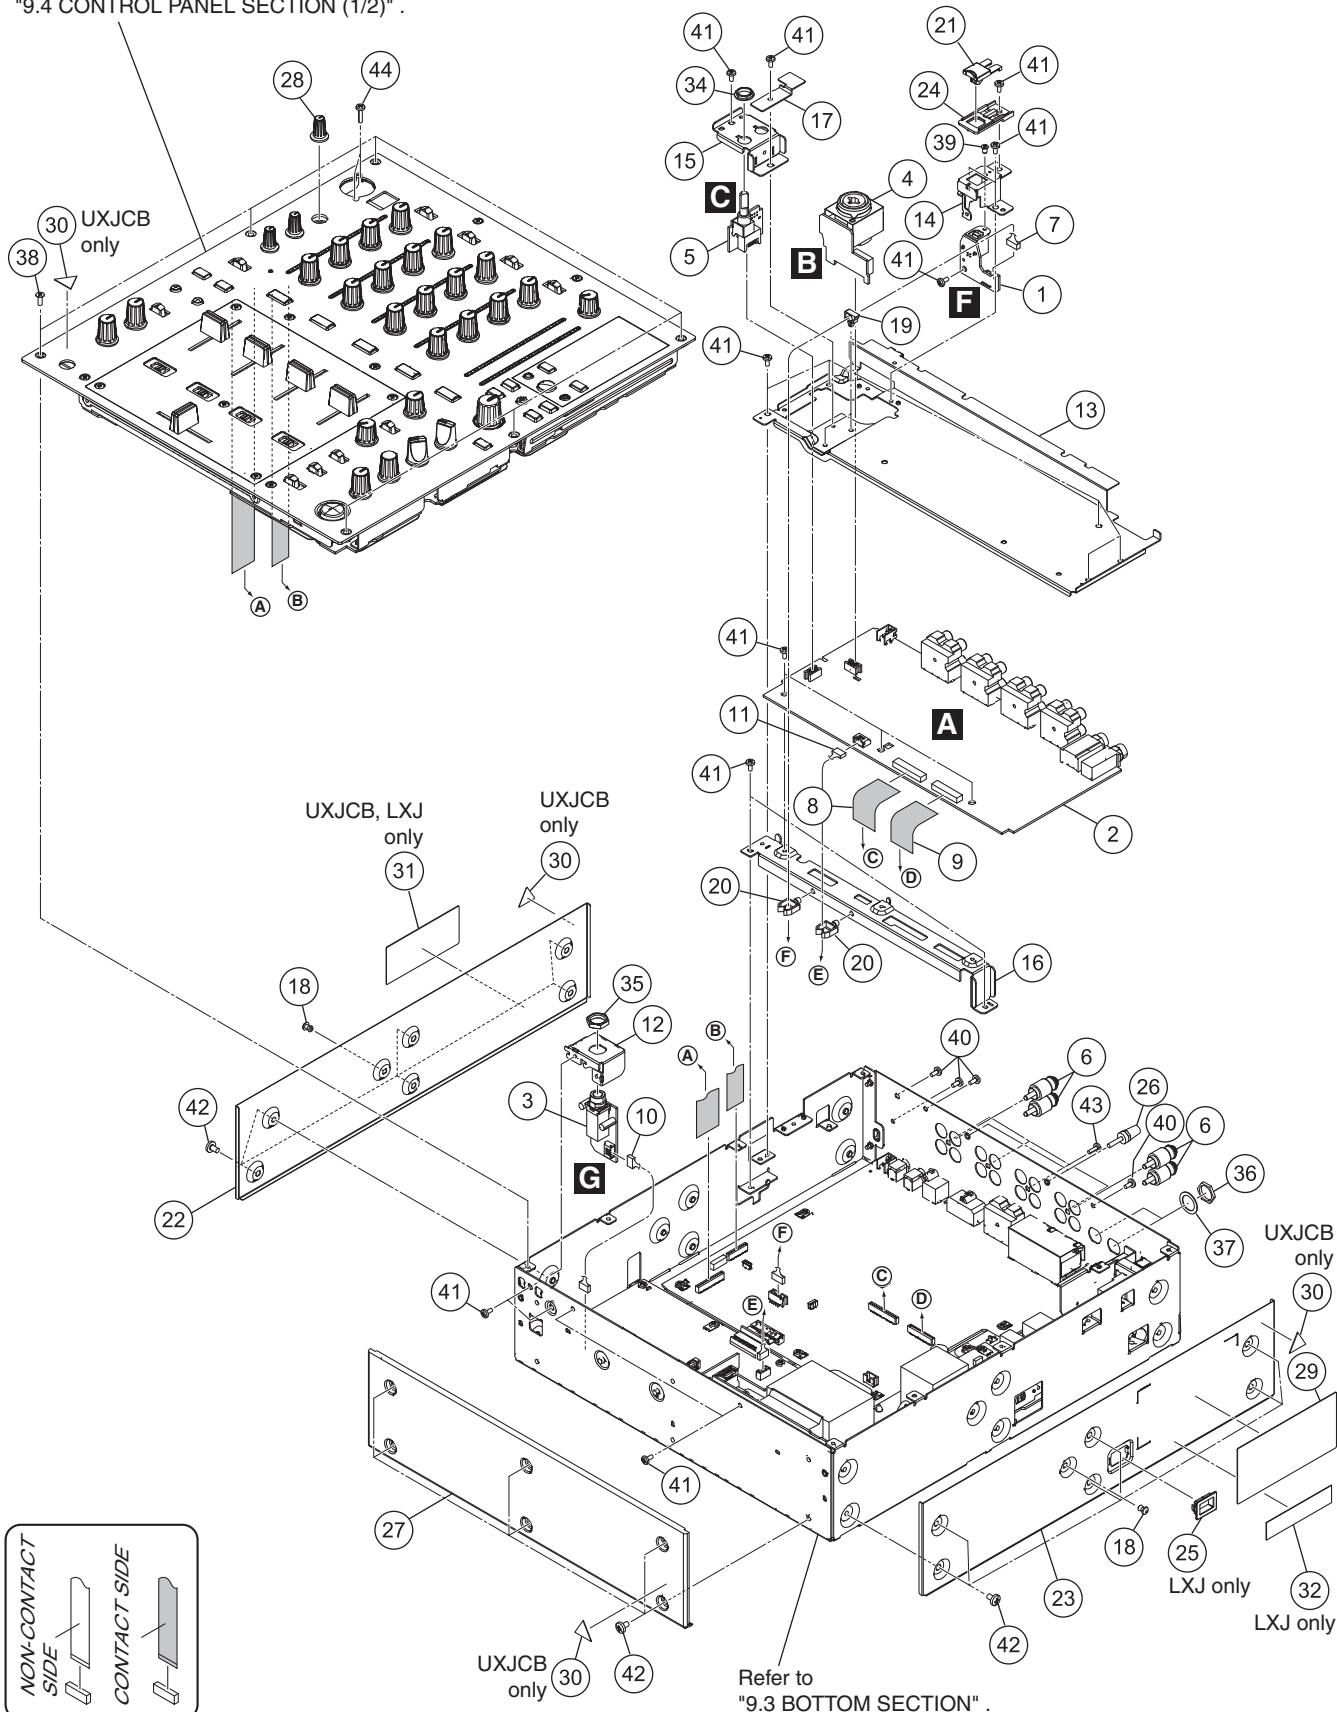

(1) EXTERIOR SECION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	USBI Assy	DWX3431	21	USB Cover B	DNK5868	
2	INPUT Assy	DWX3432	22	Side Panel L	DNK6061	A
3	HPJK Assy	DWX3433	23	Side Panel R	See Contrast table (2)	
4	MIC1 Assy	DWX3441	24	Panel/USB	DNK6120	
5	MTRM Assy	DWX3442	25	Knob/POW	See Contrast table (2)	
6	Plug/Pin	DKM1024	26	Terminal Screw	AKE-031	
7	Shielded Conn-Cable	DDA1043	27	Front Panel	DNK6063	
8	FFC/25P	DDD1597	28	Knob/EQ	DAA1302	
9	FFC/22P	DDD1598	NSP 29	Name Label	See Contrast table (2)	
10	Connector Assy	PF04PP-S05	NSP 30	Label	See Contrast table (2)	
11	Cable	PF04PP-S17	NSP 31	Caution Label	See Contrast table (2)	B
12	Stay/HP	DNF1907	NSP 32	V Select Label	See Contrast table (2)	
13	Shield Plate/INP	DNF1908	33	•••••		
14	Bracket/USB	DNF1909	34	Flange Nut M9	DBN1008	
15	Bracket/MIC	DNF1929	35	Nut (M12)	NKX2FNI	
16	Stay/INP	DNF1911	36	Nut M12	DBN1018	
17	Bracket/SCN	DNH3090	37	Washer	DEC2920	
18	Nylon Rivet	AEC1671	38	Screw (FE)	See Contrast table (2)	
19	Locking Mini Clamp	DEC2439	39	Screw (M3*5)	DBA1340	
20	Holder	VEC1355	40	Screw	BBZ30P060FTB	C
			41	Screw	BBZ30P060FTC	
			42	Screw	BBZ40P060FTB	
			43	Screw	BPZ30P080FTB	
			44	Screw	BPZ30P120FTB	


(2) CONTRAST TABLE

DJM-750-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-750-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-750-K /SYXJ8	DJM-750-K /UXJCB	DJM-750-K /LXJ	DJM-750-K /KXJ5	DJM-750-K /XJCN5	
	23	Side Panel R	DNK6062	DNK6062	DNK6065	DNK6062	DNK6062	
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used	
NSP	29	Name Label	DAL1260	DAL1245	DAL1246	DAL1249	DAL1248	
NSP	30	Label	Not used	DRW1975	Not used	Not used	Not used	
NSP	31	Caution Label	Not used	DRW2429	DRW2430	Not used	Not used	
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used	
	38	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290	

Mark	No.	Symbol and Description	DJM-750-S /SYXJ8	DJM-750-S /UXJCB	DJM-750-S /LXJ	DJM-750-S /KXJ5	DJM-750-S /XJCN5	
	23	Side Panel R	DNK6062	DNK6062	DNK6065	DNK6062	DNK6062	
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used	
NSP	29	Name Label	DAL1261	DAL1251	DAL1252	DAL1255	DAL1254	
NSP	30	Label	Not used	DRW1975	Not used	Not used	Not used	
NSP	31	Caution Label	Not used	DRW2429	DRW2430	Not used	Not used	
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used	
	38	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436	

9.3 BOTTOM SECTION

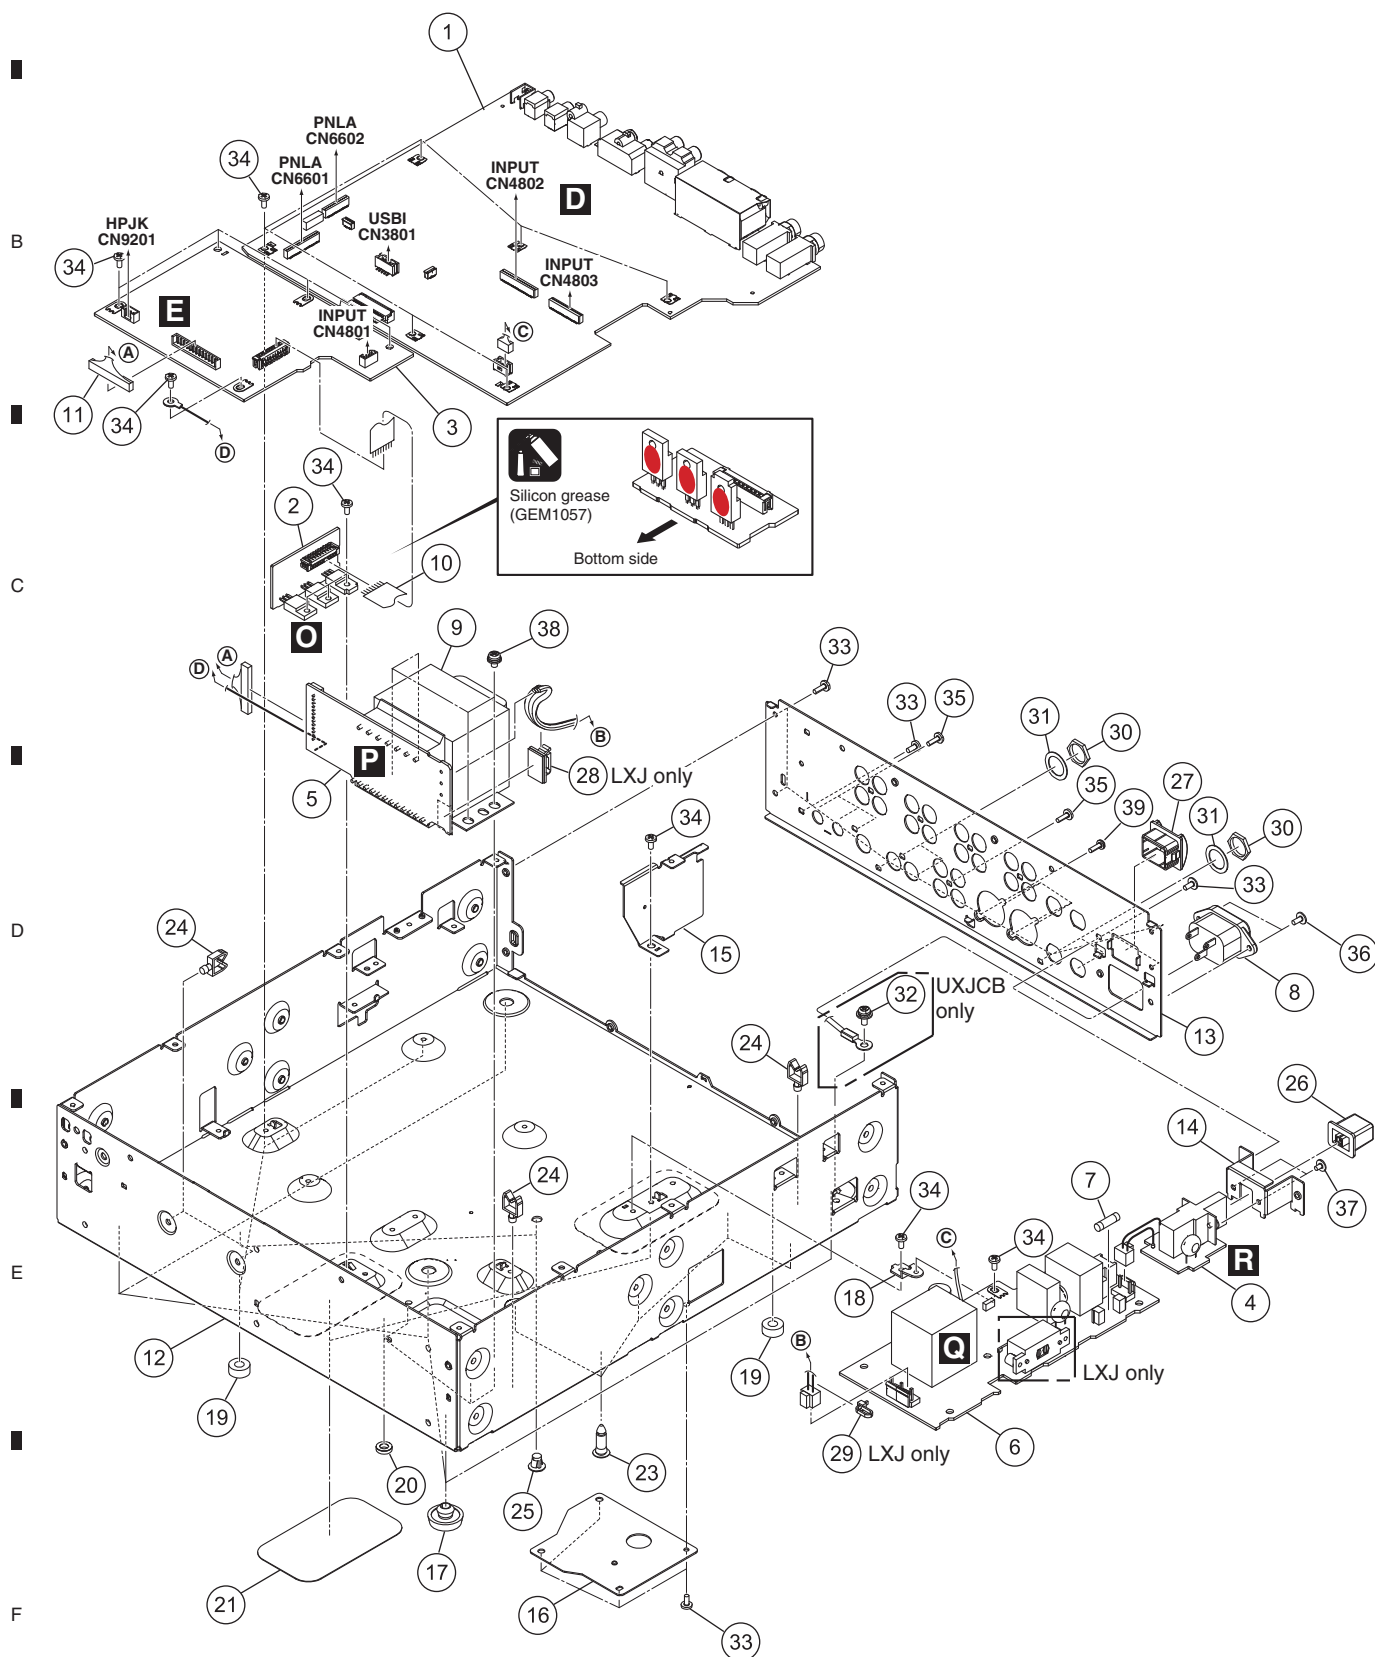

(1) BOTTOM SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	MAIN Assy	DWX3430	21	Sheet/BOT	DEC3404
2	REG Assy	DWR1528	22	•••••	
3	SEC/HP Assy	DWR1529	23	PCB Holder	PNW2029
4	ACSW Assy	DWR1532	24	Holder	VEC1355
5	PRIMARY Assy	See Contrast table (2)	NSP 25	PC Support	VEC1749
6	TRANS Assy	See Contrast table (2)	26	Power Knob	DAC2306
⚠ 7	Fuse (T630 mA)	AEK1052	27	Power Knob Guard	DNK4534
⚠ 8	AC Inlet	See Contrast table (2)	28	Locking Wire Saddle	See Contrast table (2)
⚠ 9	Transformer	See Contrast table (2)	29	Binder	See Contrast table (2)
10	Jumper Wire	D20PYY1010E	30	Nut (M12)	NKX2FNI
11	Connector Assy	PF13EE-S17	31	Washer	DEC2920
NSP 12	Chassis/750	DNA1453	32	Screw	See Contrast table (2)
13	Rear Panel	See Contrast table (2)	33	Screw	BBZ30P060FTB
14	Bracket PSW	DNF1759	34	Screw	BBZ30P060FTC
15	Shield Plate/PW	DNF1906	35	Screw	BPZ30P080FTB
NSP 16	Plate	DNK6124	36	Screw	IBZ30P080FTB
17	Foot (Rubber)	REC-434	37	Screw	IMZ30P040FTC
NSP 18	PCB Stay (FE)	VNE2489	38	Screw	PMB40P060FTB
NSP 19	Spacer	AEB7092	39	Screw	PPZ30P080FTB
20	Spacer	DEB1998			


(2) CONTRAST TABLE

DJM-750-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-750-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-750-K /SYXJ8	DJM-750-K /UXJCB	DJM-750-K /LXJ	DJM-750-K /KXJ5	DJM-750-K /XJCN5
⚠	5	PRIMARY Assy	DWR1535	DWR1537	DWR1530	DWR1535	DWR1535
⚠	6	TRANS Assy	DWR1536	DWR1538	DWR1531	DWR1536	DWR1536
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916
⚠	9	Transformer	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256
	13	Rear Panel	DNC2101	DNC2102	DNC2103	DNC2106	DNC2105
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used

Mark	No.	Symbol and Description	DJM-750-S /SYXJ8	DJM-750-S /UXJCB	DJM-750-S /LXJ	DJM-750-S /KXJ5	DJM-750-S /XJCN5
⚠	5	PRIMARY Assy	DWR1535	DWR1537	DWR1530	DWR1535	DWR1535
⚠	6	TRANS Assy	DWR1536	DWR1538	DWR1531	DWR1536	DWR1536
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916
⚠	9	Transformer	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256
	13	Rear Panel	DNC2101	DNC2102	DNC2103	DNC2106	DNC2105
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used

9.4 CONTROL PANEL SECTION (1/2)

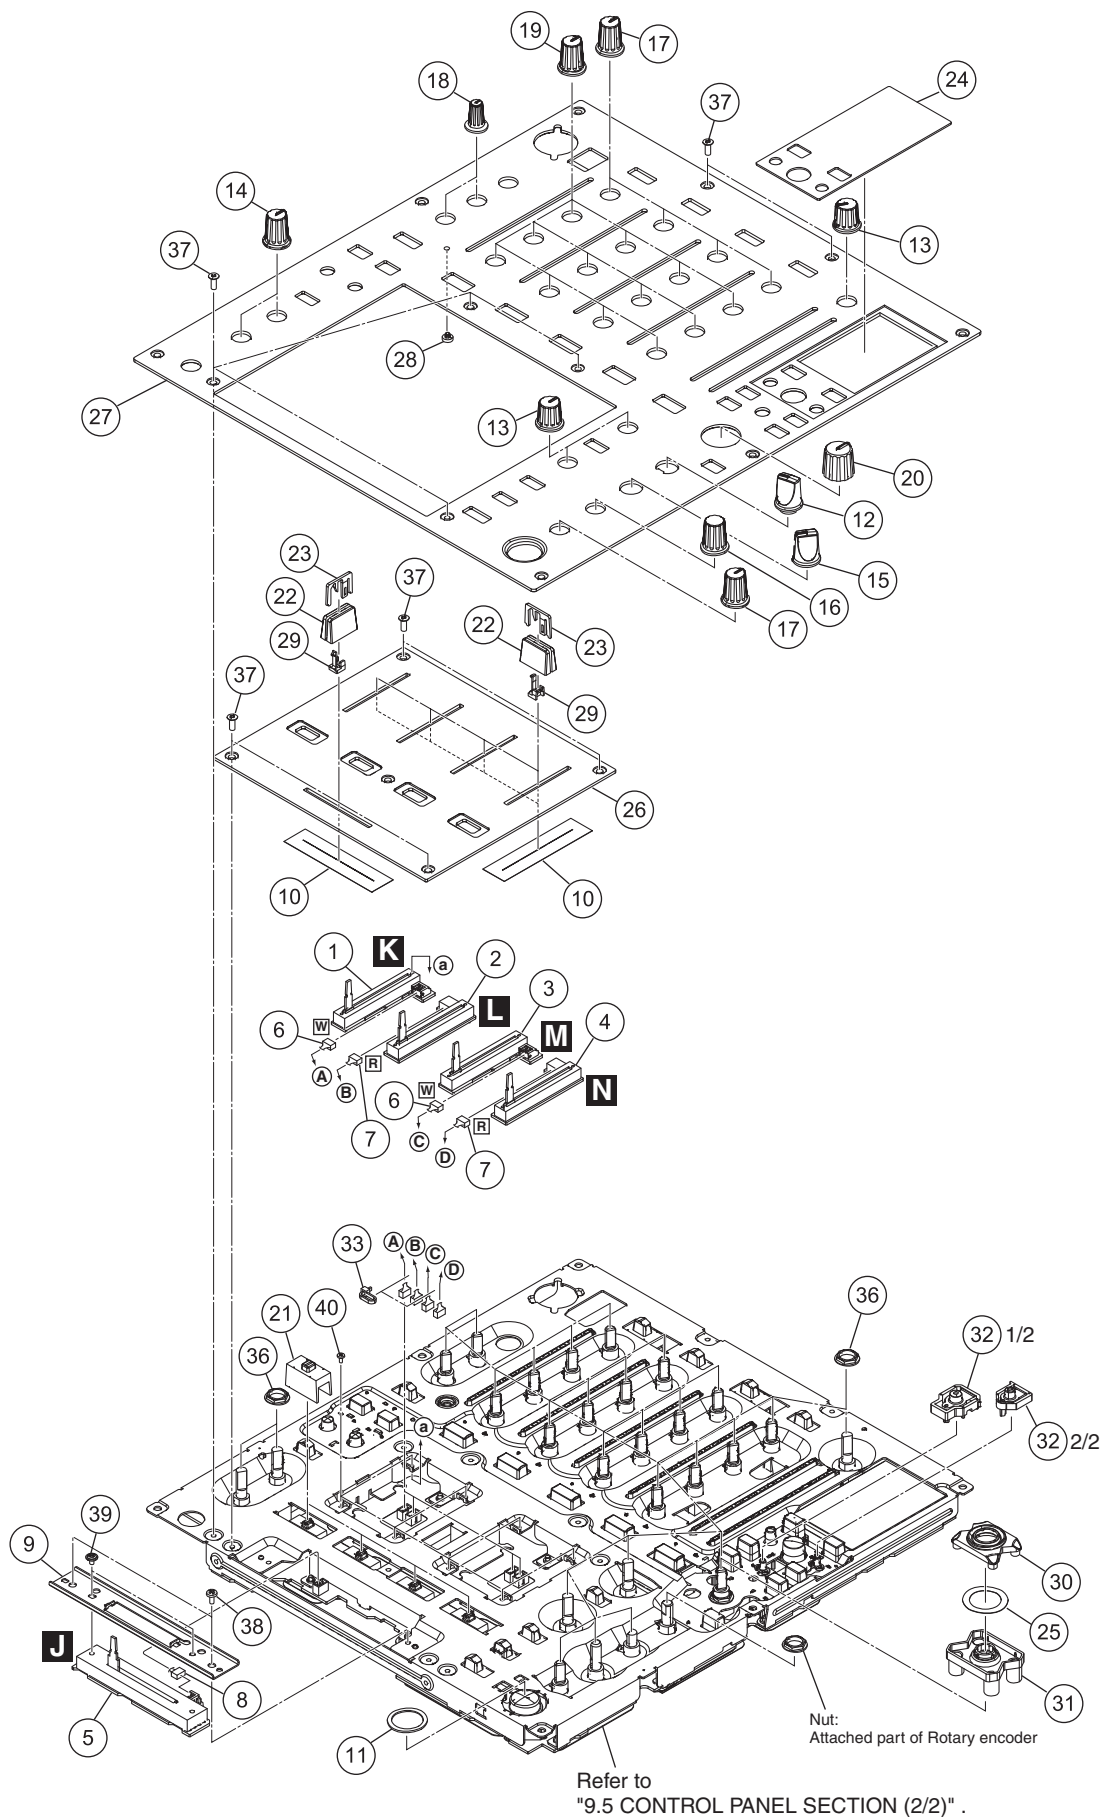

(1) CONTROL PANEL SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	FAD1 Assy	DWX3434	21	Slide SW Cap (W)	DAC2401	
2	FAD2 Assy	DWX3435	22	Slider Knob 1	DAC2684	A
3	FAD3 Assy	DWX3436	23	Slider Knob 2	DAC2685	
4	FAD4 Assy	DWX3437	24	Panel/FL	DAH2936	
5	FADC Assy	DWX3438	25	Ring	DEC3479	
6	Connector Assy	PF03PP-B05	26	Panel/FD	See Contrast table (2)	
7	Connector Assy	PF03PP2B05	27	Control Panel	See Contrast table (2)	
8	Connector Assy	PF03PP6B07	28	Lens	DNK4532	
9	CRF Stay	DNF1870	29	Slider Knob Stopper	DNK5888	
10	Fader Packing	DEC2903	30	Lens	DNK6231	
11	SW Packing (EF)	DEC2929	31	Reflector	DNK6232	B
12	Select Knob	DAA1205	32	Button Assy/UTY	DXB2138	
13	Knob (MA)	DAA1210	33	Binder	ZCA-SKB90BK	
14	Knob (Black)	DAA1212	34	•••••		
15	FX SEL Knob	DAA1213	35	•••••		
16	Knob (TIME)	DAA1214	36	Flange Nut M9	DBN1008	
17	Rotary Knob (BN)	DAA1220	37	Screw (FE)	See Contrast table (2)	
18	Knob/MIC	DAA1301	38	Screw	BBZ30P060FTC	
19	Knob/RSW	DAA1306	39	Screw	IMZ30P040FTC	
20	Knob/FRE	DAA1309	40	Screw	PMA20P040FTC	C

(2) CONTRAST TABLE




DJM-750-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-750-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-750-K /SYXJ8	DJM-750-K /UXJCB	DJM-750-K /LXJ	DJM-750-K /KXJ5	DJM-750-K /XJCN5	
	26	Panel/FD	DNB1216	DNB1216	DNB1216	DNB1216	DNB1216	
	27	Control Panel	DNB1218	DNB1218	DNB1218	DNB1218	DNB1218	D
	37	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290	
Mark	No.	Symbol and Description	DJM-750-S /SYXJ8	DJM-750-S /UXJCB	DJM-750-S /LXJ	DJM-750-S /KXJ5	DJM-750-S /XJCN5	
	26	Panel/FD	DNB1217	DNB1217	DNB1217	DNB1217	DNB1217	
	27	Control Panel	DNB1219	DNB1219	DNB1219	DNB1219	DNB1219	
	37	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436	

9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

Note:
Refer to "7. DISASSEMBLY" for styling of flexible cables, barriers.

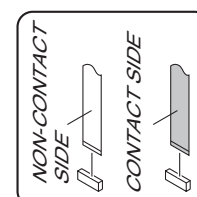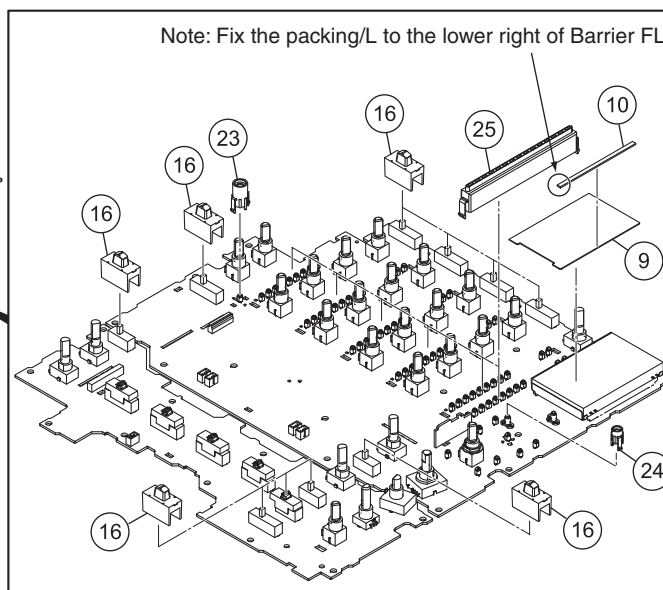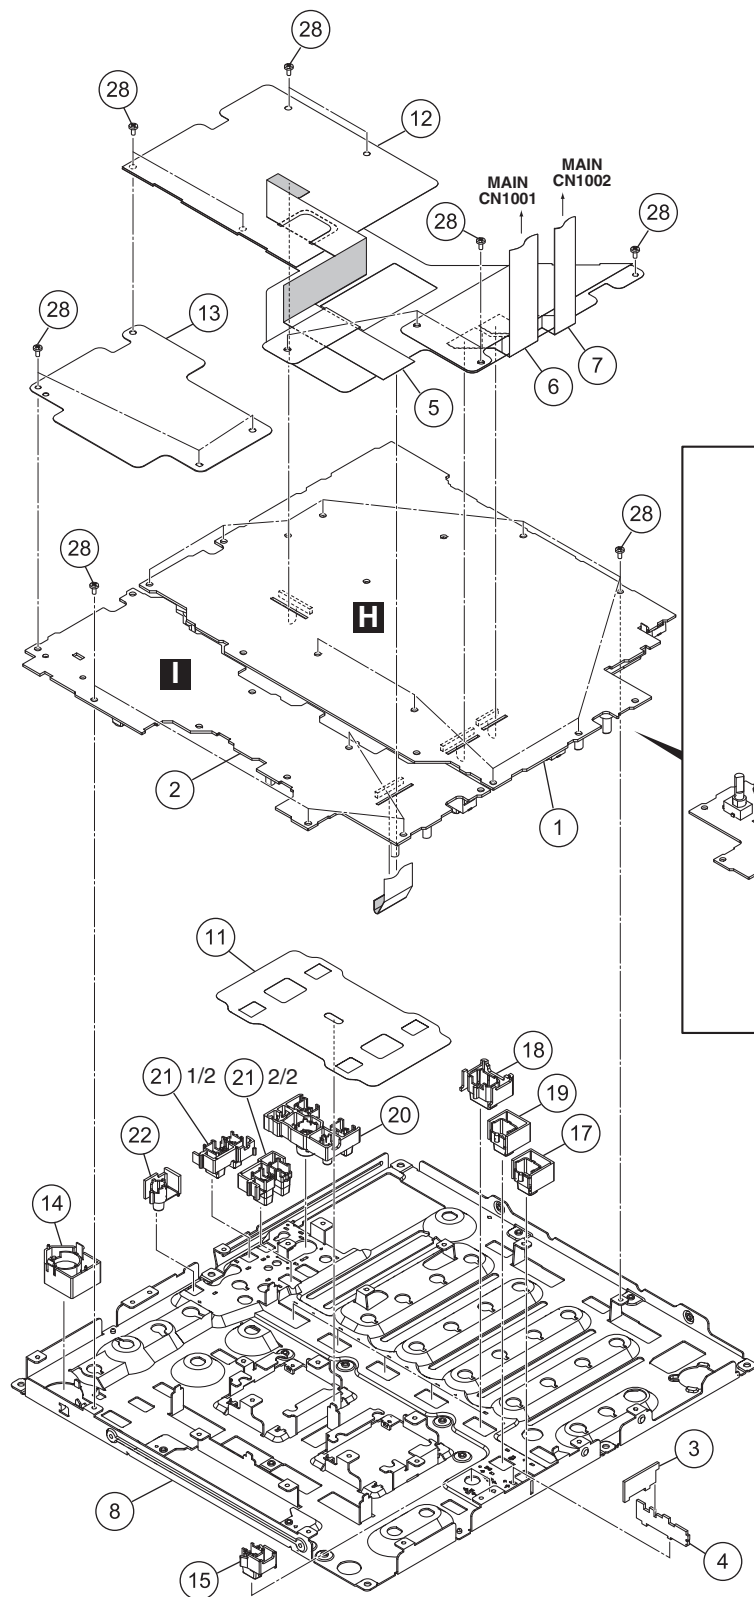

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω → 56 × 10¹ → 561.....RD1/4PU    J

47 kΩ → 47 × 10³ → 473.....RD1/4PU    J

0.5 Ω → R50.....RN2H    K

1 Ω → 1R0.....RS1P    K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ → 562 × 10¹ → 5621.....RN1/4PC     F

Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V
- | Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|--------------------|----------------|-------------|----------|--------------------------------------|----------------------------------|-------------|----------|
| LIST OF ASSEMBLIES | | | | NSP | 1..SUB ASSY (SYXJ8, KXJ5, XJCN5) | DWM2492 | |
| NSP | 1..MOTHER ASSY | DWM2488 | NSP | 1..SUB ASSY (UXJCB) | DWM2493 | | |
| | 2..MAIN ASSY | DWX3430 | NSP | 1..SUB ASSY (LXJ) | DWM2490 | | |
| | 2..USB1 ASSY | DWX3431 | | 2..ACSW ASSY | DWR1532 | | |
| | | | | 2..PRIMARY ASSY (SYXJ8, KXJ5, XJCN5) | DWR1535 | | |
| NSP | 1..AUDIO ASSY | DWM2489 | | 2..PRIMARY ASSY (UXJCB) | DWR1537 | | |
| | 2..REG ASSY | DWR1528 | | 2..PRIMARY ASSY (LXJ) | DWR1530 | | |
| | 2..SEC/HP ASSY | DWR1529 | | 2..TRANS ASSY (SYXJ8, KXJ5, XJCN5) | DWR1536 | | |
| | 2..INPUT ASSY | DWX3432 | | 2..TRANS ASSY (UXJCB) | DWR1538 | | |
| | 2..HPJK ASSY | DWX3433 | | 2..TRANS ASSY (LXJ) | DWR1531 | | |
| | | | | | | | |
| | 2..FAD1 ASSY | DWX3434 | | 2..PNLB ASSY | DWX3440 | | |
| | 2..FAD2 ASSY | DWX3435 | | 2..MIC1 ASSY | DWX3441 | | |
| | 2..FAD3 ASSY | DWX3436 | | 2..MTRM ASSY | DWX3442 | | |
| | 2..FAD4 ASSY | DWX3437 | | 2..SHADE1 ASSY | DWX3479 | | |
| | 2..FADC ASSY | DWX3438 | | 2..SHADE2 ASSY | DWX3483 | | |
| | | | | | | | |
| | | | | 1..PNLA ASSY | DWX3439 | | |
- CONTRAST OF PCB ASSEMBLIES
- P TRANS ASSY
- DWR1536, DWR1538 and DWR1531 are constructed the same except for the following:
- | Mark | Symbol and Description | DWR1536 | DWR1538 | DWR1531 |
|--|---------------------------|----------|----------|----------|
|  | JP3102 Board in jumper/2P | DDX1284 | DDX1284 | Not used |
|  | JP3101 Board in jumper/3P | Not used | Not used | DDX1285 |
- Q PRIMARY ASSY
- DWR1535, DWR1537 and DWR1530 are constructed the same except for the following:
- | Mark | Symbol and Description | DWR1535 | DWR1537 | DWR1530 |
|--|------------------------|----------|----------|----------|
|  | T3001 Transformer | DTT1245 | DTT1255 | DTT1242 |
|  | S3001 Voltage selector | Not used | Not used | AKX7020 |
|  | CN3004 Connector | B2P3-VH | B2P3-VH | Not used |
|  | CN3003 Connector (VH) | Not used | Not used | B3P5-VH |
- | Mark | No. | Description | Part No. | Mark | No. | Description | Part No. |
|------------------------------|------------------------|-------------|----------|---------------------|---------------------|-------------|----------|
| PARTS LIST (DJM-750-K/SYXJ8) | | | | IC | 4401 | NJM4565MD | |
| INPUT ASSY | | | | IC | 4601 | NJM4580MD | |
| SEMICONDUCTORS | | | | Q | 4001-4004,4201-4204 | 2SK209 | |
| | IC 4001,4201 | NJM4580D | Q | 4005,4006,4205,4206 | LTC114EUB | | |
| | IC 4002-4005,4202-4205 | NJM2121MD | Q | 4602,4603 | 2SK209 | | |
- 188

DJM-750-K

1234

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>Part No.</u>
<u>MISCELLANEOUS</u>			
	JA 4001,4002,4201,4202	JACK	DKB1083
	JA 4401	6.5 DIA JACK	DKN1654
	JA 4402	6.5 DIA JACK	DKN1652
	KN4601	SCREW PLATE	VNE1948
	CN 4601,4602	CONNECTOR	CKS3561
	CN 4801	L-PLUG(4P)	KM200NA4L
	CN 4802	25P CONNECTOR	VKN1868
	CN 4803	22P CONNECTOR	VKN1865

RESISTORS

R 4003-4010,4205-4212	RN1/16SE1000D
R 4017-4024,4219-4226	RN1/16SE4702D
R 4025,4027,4029,4030	RN1/16SE1501D
R 4026,4028,4228,4230	RN1/16SE2401D
R 4033,4035,4235,4237	RS1/0SR1500D

R 4037,4038,4239,4240	RN1/16SE8201D
R 4041,4042,4243,4244	RN1/16SE1003D
R 4043-4046,4227,4229	RN1/16SE1501D
R 4047-4050,4249-4252	RN1/16SE1201D
R 4055,4257	RS1/8SQ0RQJ

R 4058,4059,4062-4065	RN1/16SE1001D
R 4231,4232,4245-4248	RN1/16SE1501D
R 4258-4263	RN1/16SE1001D
R 4405,4406	RS1/10SR3302D
R 4409 4410	RS1/10SR1602D

R 4609,4610,4633,4638	RN1/16SE2200D
R 4612,4613	RN1/16SE1002D
R 4615,4625	RN1/16SE1202D
R 4618,4622	RN1/16SE4701D
R 4619,4621	RN1/16SE1501D

R 4620	RN1/16SE8200D
R 4623	RN1/16SE1500D
R 4630,4632	RN1/16SE3900D
R 4639	RN1/16SE2200D
Other Resistors	RS1/10SR###J

CAPACITORS

C 4001-4008,4201-4208	CCSRCH102J50
C 4009-4016,4209-4216	CCSRCH101J50
C 4017,4018,4217,4218	CCSRCH471J50
C 4019,4020,4219,4220	CKSRYB223K50
C 4021,4023,4221, 4223	CCSRCH331J50

C 4022,4024,4222,4224	CEAT221M10
C 4026,4028,4226,4228	CFTLA103J50
C 4029,4030,4033-4036	CKSRYB104K25
C 4031,4032,4231,4232	CEAT101M16
C 4037,4040,4043,4044	CEAT101M25

C 4038,4039,4041,4042	CKSRYB104K25
C 4045,4046,4245,4246	CKSRYB104K16
C 4229,4230,4233-4236	CKSRYB104K25
C 4237,4240,4243,4244	CEAT101M25
C 4238,4239,4241,4242	CKSRYB104K25

C 4401,4402,4625,4626	CCSRCH101J50
C 4403,4404	CCSRCH102J50
C 4405,4408,4801,4802	CEAT101M25
C 4406,4407,4611,4805	CKSRYB103K50
C 4409	CFTLA103J50

C 4605	CKSRYB471K50
C 4607,4613	CGSRCH471J50
C 4612	CKSRYB331K50
C 4614,4615	CKSRYB104K25

Mark	No.	Description	Part No.
	C	4617,4618	CEAT101M16
	C	4630,4803,4804	CKSQYB105K25
	C	4806	CKSRYB103K50

B MIC1 ASSY
SEMICONDUCTORS

D 9001-9004 DZ2J150M0

MISCELLANEOUS

JA 9001	CANON CONNECTOR	DKB1108
CN9001	PLUG	CKS3533
0	MIC SHIELD	DNF1849

RESISTORS

All Resistors

RS1/10SR###.I

MISCELLANEOUS

VA 9001 9002 VARISTORS

F7J71V270RM

CAPACITORS

C 9001,9002	CFLA103J50
C 9009	CKSQYB105K25

C MTRM ASSY
MISCELLANEOUS

VR 8801	ROTARY VR	DCS1123
CN 8801	PLUG	CKS3533

D MAIN ASSY
SEMICONDUCTORS

IC 201	PCM1691DCA
IC 301,302,402,501	NJM4580MD
IC 303,304	NJM4580D
IC 401,602,1603,1803	NJM4565MD
IC 601	AK4384ET

	IC 1001	AK4382AVT
⚠	IC 1401	NJM2831F33
⚠	IC 1402	S-1132B33-U5
⚠	IC 1403	NJM2392M
⚠	IC 1404	BD9325FJ

	IC 1405,1408	BD9328EFJ
	IC 1406	NJM2878F3-33
	IC 1407	S-1132B25-U5
	IC 1601,1602,1801,1802	NJM4580MD
	IC 1604,1804,2004,2204	PCM1804DB

IC 2001,2002,2201,2202	NJM4580MD
IC 2003,2203	NJM4565MD
IC 2401	AK5358AET
IC 2402	AK5359ET
IC 2603	ADSP-BF525BBCZ-5A

IC 2604	M12L64164A-5TG2Y
IC 2801	S-80927CNMC-G8X
IC 2802	DYW1828
IC 2803	DYW1827
IC 2804,3004-3006,3204	TC74VHC08FK

IC 3007	XC3S50A-4FTG256C
IC 3008	DYW1829
IC 3201	D810K013DZKB400

Mark No. Description**Part No.****Mark No. Description****Part No.**

5TG2A	IC 3202	M12L2561616A-
	IC 3205	TC7SG08FU
	IC 3405	AK4114VQ
	Q 201,203,208,209	LTC024EEB
	Q 202,1403,1404	LSCR523UB
	Q 204,205,1402	LSAR523UB
A	Q 214,215,1401,1405	LTC024EEB

■	Q 305-308,405-408	INC2002AC1
	Q 403,404,501,502	2SK209
	Q 503,504,603,604	INC2002AC1
	Q 601,602	2SK209
	Q 701,702,1406,2804	LTA024EEB

B	Q 703-710	INC2002AC1
	Q 1201,1202,1206	HN1A01FU
	Q 1207	HN1B04FU
	Q 1208	LTC114YUB
	Q 2802,2803,3402,3403	LTC024EEB

■	Q 3401	2SC2412K
	D 201-204,302-305	DZ2S180C
	D 301,502,1202	DA2J101
	D 1201,1204,1205	DAN202UM
	⚠ D 1203	1SR154-400

C	⚠ D 1403	RB160L-40
	⚠ D 1406	CMS03
	D 2402-2404	DAN217UM

MISCELLANEOUS

■	L 201 FERRITE CORE	VTF1093
	L 1401 INDUCTOR (470 uH)	DTL1123
	L 1402,1403 POWER INDUCTOR (47 uH)	ATH7048
	L 1404 SMD SPL INDUCTOR (33 uH)	CTH1527
	L 2601 COIL	ATH7015

D	L 2801 CHIP COIL	LCTAW330J2520
	L 3201 SMD FERRITE BEADS	CTF1823
	F 2601,3001,3201 EMI FILTER	DTL1106
	JA 202,203 STEREO MINI JACK	XKN3017
	JA 301,302 CANON CONNECTOR	DKB1093

■	JA 401 JACK	DKB1083
	JA 501 PIN JACK(2P)	AKB7181
	JA 601,602 6.5 DIA JACK	DKN1652
	JA 3401 1P JACK	DKB1089
	KN201 SCREW PLATE	VNE1948

E	KN 1201-1206 WRAPPING TERMINAL	CKF1089
	X 2601 CRYSTAL(24 MHz)	DSS1203
	X 2801 RESONATOR (20 MHz)	CSS1795
	X 3202 CRYSTAL OSCILLATOR (24.576 MHz)	ASS7102
	CN 1001 24P CONNECTOR	VKN1428

■	CN 1002 17P CONNECTOR	VKN1421
	CN 1003 25P CONNECTOR	VKN1429
	CN 1004 22P CONNECTOR	VKN1426
	CN 1005 19P RECEPTACLE	AKP7199
	CN 1201 CONNECTOR	AKM1274

F	CN 2602 CONNECTOR	AKM1276
	0 CANON SHIELD	DNF1789
	0 PHONE SHIELD	DNF1875
	P 301,302 PROTECTOR(1A) (1 A)	AEK1073

RESISTORS

■	R 214,1075,1085,2657	RS1/10SR0R0J
	R 301-308,501,512	RN1/16SE3301D

■	R 309-316,325-332	RN1/16SE2402D
	R 317-324,503,514	RN1/16SE3001D
	R 333-340	RN1/16SE2701D
	R 341-344,403,404	RN1/16SE1002D
	R 345-352	RN1/16SE5601D
■	R 354-361	RN1/16SE6801D
	R 362-365,419,422	DCN1200
	R 367,368,371,372	RN1/16SE2201D
	R 401,402,1439	RS1/16SS3301D
	R 405,406,409,410	RS1/16SS2202D

■	R 407,408,1231	RS1/16SS2701D
	R 413,414	RS1/16SS2401D
	R 420,421	RN1/16SE1202D
	R 423,424	RN1/16SE3302D
	R 425,426	RS1/10SR100J

■	R 427,428,505,517	DCN1200
	R 502,504,513,515	RN1/16SE6202D
	R 516,519	RN1/16SE3001D
	R 611,612	RS1/10SR3301D
	R 613,614,617,618	RS1/10SR2702D

■	R 615,616	RS1/10SR3001D
	R 619,620	RS1/10SR2701D
	R 621,622	RS1/4SA331J
	R 627,628	RS1/10SR104J
	R 701-708,713-720	RS1/8SQ1800F

■	R 725-728	RS1/8SQ2200F
	R 1019,2412,2413,2634	RAB4CQ103J
	R 1205	RS1/16SS1602D
	R 1206	RS1/16SS4302D
	R 1210,1239	RS1/16SS4702D

■	R 1211	RS1/16SS6202D
	R 1213,1428,1431,1440	RS1/16SS1002D
	R 1214	RS1/16SS1001D
	R 1215	RS1/16SS2000D
	R 1216	RS1/16SS8200D

■	R 1233,1240,1245	RS1/16SS3302D
	R 1234,1429	RS1/16SS4701D
	R 1235	RS1/16SS2402D
	R 1236,1430	RS1/16SS2202D
	R 1242,1253	RS1/16SS1003D

■	R 1244	RS1/16SS1202D
	R 1247	RS1/16SS6201D
	R 1248	RS1/16SS7500D
	R 1252	RS1/16SS8202D
	R 1254,1255	RS1/4SA2R0J

■	R 1403	RS1/10SR152J
	R 1404,1405	RS1/8SQ1R5J
	R 1407	RS1/10SR3902D
	R 1408	RS1/10SR1501D
	R 1412,1413,1435	RS1/10SR220J

■	R 1415	RS1/10SR183J
	R 1421-1425	RS1/10SR153J
	R 1426	RS1/16SS7501D
	R 1427	RS1/16SS3902D
	R 1438	RS1/16SS2200D

■	R 1601-1608,1801-1808	RN1/16SE1002D
	R 1609-1612,1809-1812	RN1/16SE1201D
	R 1613-1616,1813-1816	RN1/16SE2200D
	R 1617-1628,1817-1828	RN1/16SE2401D

5		6		7		8	
Mark	No. Description	Part No.	Mark	No. Description	Part No.		
R	2001-2008,2201-2208	RN1/16SE1002D					
R	2009-2012,2209-2212	RN1/16SE1201D	C	511,512	CCSRCH681J50		
R	2013-2016,2213-2216	RN1/16SE2200D	C	518,616,619,1008	CKSRYB104K25		
R	2017-2028,2217-2228	RN1/16SE2401D	C	606,1002,1006,1020	CKSSYB103K16	A	
			C	607,1004,1424-1427	DCH1201		
			C	610,611	CCSQCH562J50		
R	2407,2411,2668	RS1/8SQ0R0J					
R	2627-2632,3217-3219	RAB4CQ820J					
R	2642-2645,3202,3203	RAB4CQ680J	C	612,613	CCSRCH102J50		
R	2647-2650,2652,2660	RAB4CQ470J	C	614,617	CKSRYB334K10		
R	2664-2666,3224,3225	RAB4CQ470J	C	615,621,1211,1404	CCG1236		
			C	618,620	CCSSCH560J50		
			C	622,623,1005,1201	CKSSYB102K50		
R	2808,2861,2862,2870	RS1/10SR0R0J					
R	2818	RAB4CQ222J					
R	2824,2835,2871,3038	RAB4CQ220J	C	624,625,2603,3020	CEVW101M16		
R	2827,2845,2850,2863	RAB4CQ0R0J	C	626,627	CFHXSQ272J50		
R	2843	RAB4CQ103J	C	628,3204	CEVW101M4	B	
			C	1003,1009-1011,1202	CKSSYB104K10		
			C	1007	CEVW221M25		
R	2864	RAB4CQ0R0J					
R	3039	RAB4CQ220J					
R	3042,3046,3050,3063	RAB4CQ330J	C	1012,1216,1461	CKSRYB104K50		
R	3057,3264,3265	RAB4CQ101J	C	1205,1208,1410,1411	CCSSCH102J50		
R	3093-3096,3201,3204	RAB4CQ330J	C	1209,1406,1450,1452	CKSRYB104K25		
			C	1210,1229-1232,1627	CKSSYB102K50		
			C	1214,1217-1228,1402	CKSSYB104K10		
R	3205,3206	RAB4CQ680J					
R	3207,3208,3211,3212	RAB4CQ330J					
R	3216	RAB4CQ330J	C	1215,1233-1242,1632	CKSSYB103K16		
R	3221-3223	RAB4CQ820J	C	1403,1617,1618,1817	CEVW101M25		
R	3226,3230	RS1/10SR0R0J	C	1407,1418,1419,1422	CKSSYB104K10		
			C	1408,1409,1438,2801	CKSRYB105K10	C	
			C	1413,1415,1434	CCG1236		
R	3228,3229	RAB4CQ470J					
R	3240	RAB4CQ102J					
R	3423	RN1/16SE1802D	C	1416	CEVW101M50		
R	3432	RS1/10SR680J	C	1417,1430,1431,1439	CCSSCH102J50		
Other Resistors		RS1/16SS###J	C	1420	CKSSYB223K16		
			C	1421	CKSSYB333K16		
			C	1423,1428,1429,1436	CKSSYB104K10		
CAPACITORS							
C	202,1621,1821,2019	CCH1998					
C	203,222,231,233	CKSSYB104K10	C	1432,1433,1449,3035	CCH1565		
C	204,209,214,217	CKSSYB102K50	C	1435,1441,1445,1446	DCH1201		
C	206,211,212,601	CKSSYB103K16	C	1437,1440,1442-1444	CKSSYB104K10		
C	208,1203,1207,1212	CKSSYB103K25	C	1447,1620,1622,1623	CKSSYB104K10		
			C	1448,1451,1453,1455	CCSSCH102J50	D	
C	213,216,219,1019	CKSRYB105K10					
C	215	CEVW221M4	C	1454,1456,1605-1608	CKSRYB104K25		
C	218,220,401,402	CEVW220M6R3	C	1457,2636	CCSSCH102J50		
C	236,238,603,1001	CKSSYB104K10	C	1613-1616,1813-1816	CCSSCH101J50		
C	249,415,416,605	CKSSYB102K50	C	1624,1631,1824,1831	CKSSYB272K50		
			C	1625,1630,1633,1634	CKSSYB104K10		
C	301-304	CCSRCH222J50					
C	305-308	CCSRCH471J50	C	1626,1629,1635,1826	CEVW220M6R3		
C	309-316,413,414	CCSSCH560J50	C	1628,1636,1827,1828	CKSSYB102K50		
C	317,321,335,348	CEHVAW101M25	C	1637,1832,1836,2030	CKSSYB103K16		
C	318-320,322,337	CKSRYB104K25	C	1805-1808,2005-2008	CKSRYB104K25		
			C	1818	CEVW101M25		
C	338,339,344,345	CCSSCH101J50					
C	340,343,346,409	CKSRYB104K25	C	1820,1822,1823,1825	CKSSYB104K10	E	
C	349-352,1405	CCSSCH101J50	C	1829,1835,2024,2027	CEVW220M6R3		
C	355-358	XCEAT221M16	C	1830,1833,1834,2018	CKSSYB104K10		
C	359-362,427-430	CFHXSQ472J16	C	1837,2025,2026,2034	CKSSYB102K50		
			C	2013-2016,2213-2216	CCSSCH101J50		
C	403,404,502,514	CCSQCH472J50					
C	405,406,503,515	CCSRCH821J50	C	2020,2021,2023,2028	CKSSYB104K10		
C	407,408,505,517	CKSRYB334K10	C	2022,2029,2222,2229	CKSSYB272K50		
C	410,412,417,422	CCG1236	C	2031,2032,2218,2220	CKSSYB104K10		
C	411,419,420,507	CKSRYB104K25	C	2033,2224,2227,2233	CEVW220M6R3		
			C	2035,2230,2235,2419	CKSSYB103K16		
C	423-426,508,520	CEVW101M16					
C	501,513,608,609	CEVW220M6R3	C	2205-2208	CKSRYB104K25	F	
C	504,516	CCSSCH220J50	C	2219	CCH1998		
C	506,519	CEVW470M25	C	2221,2223,2228,2231	CKSSYB104K10		
C	509,521	CFHXSQ472J16	C	2225,2226,2234,2418	CKSSYB102K50		

Mark No. Description**Part No.**

C 2232,2406,2407,2412

CKSSYB104K10

C 2401,2402,2404

CEVW330M25

C 2405,2408,2410,2411

DCH1201

C 2413,2416,2417,2601

CKSSYB104K10

C 2414,2415,2605,2606

DCH1201

C 2421,2423,2424,2633

CKSSYB103K16

C 2422,2615,2617,2621

CKSSYB102K50

C 2602,2607,2608,2616

CKSSYB104K10

C 2609,2610,2819-2823

CKSSYB471K50

C 2614,2619,2808,3021

DCH1201

C 2618

CCSSCH120J50

C 2620,2622,2624,2626

CKSSYB104K10

C 2623,2625,2627,2629

CKSSYB102K50

C 2628,2630,2632,2635

CKSSYB104K10

C 2631

CCSSCH100D50

C 2634,2671,2814,2815

CKSSYB102K50

C 2637,2639,2642,2643

CKSSYB104K10

C 2638,2640,2644,2646

CKSSYB103K16

C 2641,2645,3010-3012

CCSSCH101J50

C 2647,2649,2810-2812

CKSSYB104K10

C 2648,2653-2657,2661

CKSSYB103K16

C 2662,2670,2802,2813

CKSSYB103K16

C 2804,2805

CCSSCH6R0D50

C 2809

CKSRYB105K10

C 2817,3014,3016,3018

CKSSYB102K50

C 2829,2831,2833,3013

CKSSYB104K10

C 3015,3017,3019

CKSSYB104K10

C 3022-3034,3037-3043

CKSSYB104K10

C 3036,3242,3408,3409

DCH1201

C 3044,3209-3211,3213

CKSSYB103K16

C 3201,3202,3205,3206

CKSSYB104K10

C 3203

CEVW470M6R3

C 3207,3208

CKSSYB471K50

C 3212,3214,3216,3218

CKSSYB102K50

C 3215,3217,3219,3221

CKSSYB103K16

C 3220,3222,3224,3226

CKSSYB102K50

C 3223,3225,3227,3229

CKSSYB103K16

C 3228,3230,3232,3234

CKSSYB102K50

C 3231,3233,3235,3237

CKSSYB103K16

C 3236,3251,3257

CKSSYB102K50

C 3238,3250,3255

CCSSCH101J50

C 3239,3243-3249,3258

CKSSYB103K16

C 3240

CKSSYB105K6R3

C 3252,3256,3260,3261

CKSSYB104K10

C 3262-3264,3405,3412

CKSSYB103K16

C 3404,3406,3407,3411

CKSSYB104K10

C 3410

CKSSYB474K6R3

C 3413,3414,3418

CKSSYB104K10

C 3415,3417 (10 uF/10 V)

DCH1201

C 3416

CKSSYB103K16

Mark No. Description**Part No.**

Q 105,107

KTC3209

Q 106,108

KTA1281



D 1,2

RB060L-40



D 3,4,7,8

RB160L-40



D 5,6,9,10

1SR154-400



D 11,12

RB160L-40

MISCELLANEOUS

KN 1,2,101 EARTH TERMINAL

AKF7002

CN1 CONNECTOR

B13B-EH

CN2,101 PLUG(4P)

KM200NA4

CN3 19P PLUG

AKM7077

CN4 10PJUMPER CONNECTOR

52147-1010



P 101 POLYSWITCH

RXEF075P

RESISTORS

R 1,2

RS1/4SA3R9J

R 4

RS1/10SR1102D

R 5

RS1/10SR1302D

R 27,28,136,138

RS1/8SQ0R0J

R 101-104

RN1/16SE3901D

R 105-108

RN1/16SE1502D

R 109-112

RN1/16SE3301D

R 114,115

RN1/16SE5601D

R 120,121

RN1/16SE3001D

R 126,127

RD1/2VM471J

R 128,129

RN1/16SE1001D

R 130-133

RS2LMF330J

R 139,141

RS1/8SQ0R0J

Other Resistors

RS1/10SR###J

CAPACITORS

C 1-11

CKSRYB473K50

C 13-15,17-23

CCSRCH102J50

C 24

CEAT682M16

C 25

CEAT682M25

C 27,29,37,38

CKSRYB103K50

C 28,107,108,115

CKSRYB104K25

C 30

CKSRYB102K50

C 31,32

CEAT332M35

C 35,36

CEAT102M25

C 45,46,49,51

CKSRYB103K50

C 47,48

ACH1480

C 50

CEHAZL101M10

C 52

CKSRYB103K50

C 56-58

CFTLA474J50

C 101,102,112,113

CCSRCH471J50

C 103-106

CCSRCH101J50

C 109,110

CEAT101M16

C 114,117

CEAT100M50

C 116

CKSRYB104K25

C 120,125

DCH1165

C 121-124

CKSRYB104K16

C 126,127

CEANP221M16

**USBI ASSY****MISCELLANEOUS**

JA 9201 HEADPHONE JACK

DKN1622

CN 9201 L-PLUG(4P)

KM200NA4L

0 PHONE SHIELD

DNF1875

**SEC/HP ASSY
SEMICONDUCTORS**

IC 1

S-80927CNMC-G8X

IC 101

NJM4565MD

IC 102

NJM4580D

Q 101,102

2SK209

Q 103,104

INC2002AC1

5	6	7	8
Mark No. Description	Part No.	Mark No. Description	Part No.
RESISTORS		VR6602 POTENTIOMETER	DCS1097
All Resistors	RS1/10SR###J	VR6603-6606 VARIABLE RESISTOR	DCS1100
CAPACITORS		VR6607 POTENTIOMETER	DCS1096
C 9203,9204	CKSRYB224K16	VR6608,6609 VARIABLE RESISTOR	DCS1100
C 9205	CFTLA103J50	VR6611-6614 VARIABLE RESISTOR	DCS1100
		VR6616-6618 VARIABLE RESISTOR	DCS1100
		VR6620 POTENTIOMETER	DCS1095
HPJK ASSY		VR6621-6624 ROTARY VR	DCS1104
MISCELLANEOUS		S 6601-6608,6617-6620 TACT SWITCH	DSG1079
JA 9201 HEADPHONE JACK	DKN1622	S 6612-6616 SLIDE SWITCH	DSH1058
CN9201 L-PLUG(4P)	KM200NA4L	S 6621 SLIDE SWITCH	DSH1066
0 PHONE SHIELD	DNF1875	S 6622 ROTARY ENCODER	DSX1068
RESISTORS		S 6623-6625,6627,6628 TACT SWITCH	DSG1079
All Resistors	RS1/10SR###J	S 6641,6642,6644 TACT SWITCH	DSG1079
CAPACITORS		X 6601 CERAMIC RESONATOR	DSS1180
C 9203,9204	CKSRYB224K16	CN6601 24P CONNECTOR	VKN1839
C 9205	CFTLA103J50	CN6602 17P CONNECTOR	VKN1248
		CN6603 27P CONNECTOR	VKN1842
		CN6609,6610 PLUG(3P)	KM200NA3R
		CN6611,6612 PLUG(3P)	KM200NA3
		0 FL HOLDER	DNF1869
PNLA ASSY		RESISTORS	
SEMICONDUCTORS		R 6616	RS1/10SR1202F
IC 6601	DYW1830	R 6617	RS1/10SR8201D
IC 6602-6604	TC74HC4052AF	R 6884,6896-6899	RS1/4SA100J
IC 6605	NJM2903M	R 6901-6905	RS1/4SA100J
Q 6601,6638-6641	LSAR523UB	Other Resistors	RS1/10SR###J
Q 6602	2SC5712		
Q 6604	LTA114EUB	CAPACITORS	
Q 6605-6618,6621	LSCR523UB	C 6601,6602,6608,6645	CEAT101M16
Q 6619	2SC4097	C 6603,6604,6611,6618	CKSRYB104K16
Q 6622,6624,6626,6628	LTC143EUB	C 6606,6622	CCSRCH102J50
Q 6623,6625,6627,6629	2SB1689	C 6607,6623,6629,6640	CKSRYB103K50
Q 6630,6632,6634,6636	LTC143EUB	C 6610,6612	CKSRYB104K50
Q 6631,6633,6635,6637	2SB1689	C 6614-6617	CCSRCH101J50
Q 6644-6647	LSAR523UB	C 6619,6624,6625,6628	CKSRYB104K16
Q 6650	LTA143EUB	C 6620,6621 (2.2 uF/10 V)	CCG1205
D 6615,6616,6618-6623	DA2J101	C 6626,6631,6643,6743	CKSRYB105K10
D 6624,6626,6627,6643	SLR-343VC(NPQ)	C 6627 (10 uF/10 V)	DCH1201
D 6625,6628-6631,6642	SLI-343YYW(TUV)	C 6630,6633,6641,6642	CKSRYB104K16
D 6632-6640,6649-6657	SLR-343MC(NPQ)	C 6656-6663,6676,6679	CKSRYB104K16
D 6644,6659,6660,6678	SLR-343VC(NPQ)	C 6664,6666,6668-6673	CKSRYB471K50
D 6645-6648,6661-6664	SLI-343YYW(TUV)	C 6680,6697-6707	CKSRYB104K16
D 6665-6673,6684-6692	SLR-343MC(NPQ)	C 6685-6692,6694,6696	CKSRYB471K50
D 6674,6675,6680-6683	SLI-343YYW(TUV)	C 6709-6712,6714-6717	CKSRYB104K16
D 6679,6696,6697,6711	SLR-343VC(NPQ)	C 6719,6729-6732,6745	CKSRYB104K16
D 6693,6694,6698-6701	SLI-343YYW(TUV)	C 6720-6725,6739,6744	CKSRYB103K50
D 6702-6710,6717-6725	SLR-343MC(NPQ)	C 6728 (1 uF/50 V)	CCG1255
D 6712,6735,6787	SLR-343VC(NPQ)	C 6733-6738	CKSRYB471K50
D 6713-6716,6727,6728	SLI-343YYW(TUV)		
D 6731	SLI-343YYW(TUV)	PNLB ASSY	
D 6736-6739	SLR343BC4T(JK)	SEMICONDUCTORS	
D 6740,6779-6781	SLI-343U8R(HJK)	Q 7002	LSCR523UB
D 6742-6747,6749-6760	DA2J101	D 7005,7007	SLI-343YYW(TUV)
D 6762,6763,6771-6776	DA2J101	D 7012-7022,7024-7027	DA2J101
D 6778	DA2J101		
MISCELLANEOUS		MISCELLANEOUS	
L 6601 CHIP COIL	LCTAW330J2520	VR7001,7004 POTENTIOMETER	DCS1096
V 6601 VFD	DEL1071	VR7002 POTENTIOMETER	DCS1097
VR6601 VARIABLE RESISTOR	DCS1100	VR7003 VARIABLE RESISTOR	DCS1100
		S 7001 12MM GS ENCODER	DSX1064

Mark	No.	Description	Part No.
A	S 7002	ROTARY SWITCH	DSG1098
	S 7007	TACT SWITCH	DSG1079
	S 7008,7013,7014	SLIDE SWITCH	DSH1066
	S 7009-7012,7015	SLIDE SWITCH	DSH1058
	CN 7001	27P CONNECTOR	VKN1842
	CN 7002	PLUG(3P)	KM200NA3E

RESISTORS

All Resistors

RS1/10SR###J

CAPACITORS

C 7002,7005,7008,7010
 C 7004,7006
 C 7007,7009
 C 7012,7015,7016,7018

CKSRYB104K16
 CEAT470M35
 CKSRYB103K50
 CKSRYB104K16

J FADC ASSY

MISCELLANEOUS

VR 8001 VARIABLE RESISTOR
 CN 8001 PLUG(3P)

DCV1006
 KM200NA3LE

RESISTORS

All Resistors

RS1/10SR###J

K FAD1 ASSY

MISCELLANEOUS

VR 7201 VARIABLE RESISTOR
 CN 7201 L-PLUG(3P)

DCV1020
 KM200NA3L

L FAD2 ASSY

MISCELLANEOUS

VR 7401 VARIABLE RESISTOR
 CN 7401 PLUG(3P)

DCV1020
 KM200NA3LR

M FAD3 ASSY

MISCELLANEOUS

VR 7601 VARIABLE RESISTOR
 CN 7601 L-PLUG(3P)

DCV1020
 KM200NA3L

N FAD4 ASSY

MISCELLANEOUS

VR 7801 VARIABLE RESISTOR
 CN 7801 PLUG(3P)

DCV1020
 KM200NA3LR

O REG ASSY

SEMICONDUCTORS

⚠ IC 5001
 ⚠ IC 5002
 ⚠ IC 5003
 D 5004,5005

NJM7805FA
 NJM7815FA
 NJM7915FA
 RB501VM-40

MISCELLANEOUS

CN 5001 10PJUMPER CONNECTOR

52147-1010

CAPACITORS

C 5001-5003,5010,5011
 C 5004

CKSRYB103K50
 CKSRYB104K16

Mark	No.	Description	Part No.
	C 5005,5006		CKSRYB104K25
	C 5007 (2.2 uF/10 V)		CCG1205
	C 5008,5009		CKSQYB105K25
	C 5013,5014,5016		CKSRYB102K50
	C 5015		CKSRYB103K50

P TRANS ASSY

RESISTORS

All Resistors

RS1/8SQ###J

MISCELLANEOUS

⚠ JP 3102 BOARD IN JUMPER/2P

DDX1284

CAPACITORS

C 3101-3104,3106,3107
 C 3110,3111

CKSRYB104K50
 CKSRYB104K50

Q PRIMARY ASSY

SEMICONDUCTORS

Q 3001
 D 3001
 D 3002
 ⚠ D 3003-3006

KTC3209
 DAN217UM
 DA2J101
 1SR154-400

MISCELLANEOUS

⚠ L 3001 FILTER
 H 3001,3002 FUSE CLIP
 KN 3001 EARTH TERMINAL
 ⚠ RY 3001 RELAY
 ⚠ T 3001 TRANSFORMER/CU

DTL1131
 AKR1004
 AKF7002
 ASR7029
 DTT1245

⚠ CN 3001 AC CODE SOCKET
 ⚠ CN 3002,3004 CONNECTOR
 JP 3001 CONNECTOR ASSY

RKP1751
 B2P3-VH
 PF03PG-Q07

RESISTORS

R 3002
 Other Resistors

RS1/10SR330J
 RS1/10SR####F

CAPACITORS

⚠ C 3001
 ⚠ C 3003
 C 3004,3005
 C 3006
 C 3007

ACE7027
 ACG7030
 CKSRYB473K50
 CEAT222M25
 CKSRYB103K50

R ACSW ASSY

MISCELLANEOUS

⚠ S 9401 SWITCH
 ⚠ O MASK
 ⚠ JP 9401 CONNECTOR ASSY 2P

DSA1037
 DEC3212
 DKP3847

CAPACITORS

⚠ C 9401

ACG7030