
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING SECTION

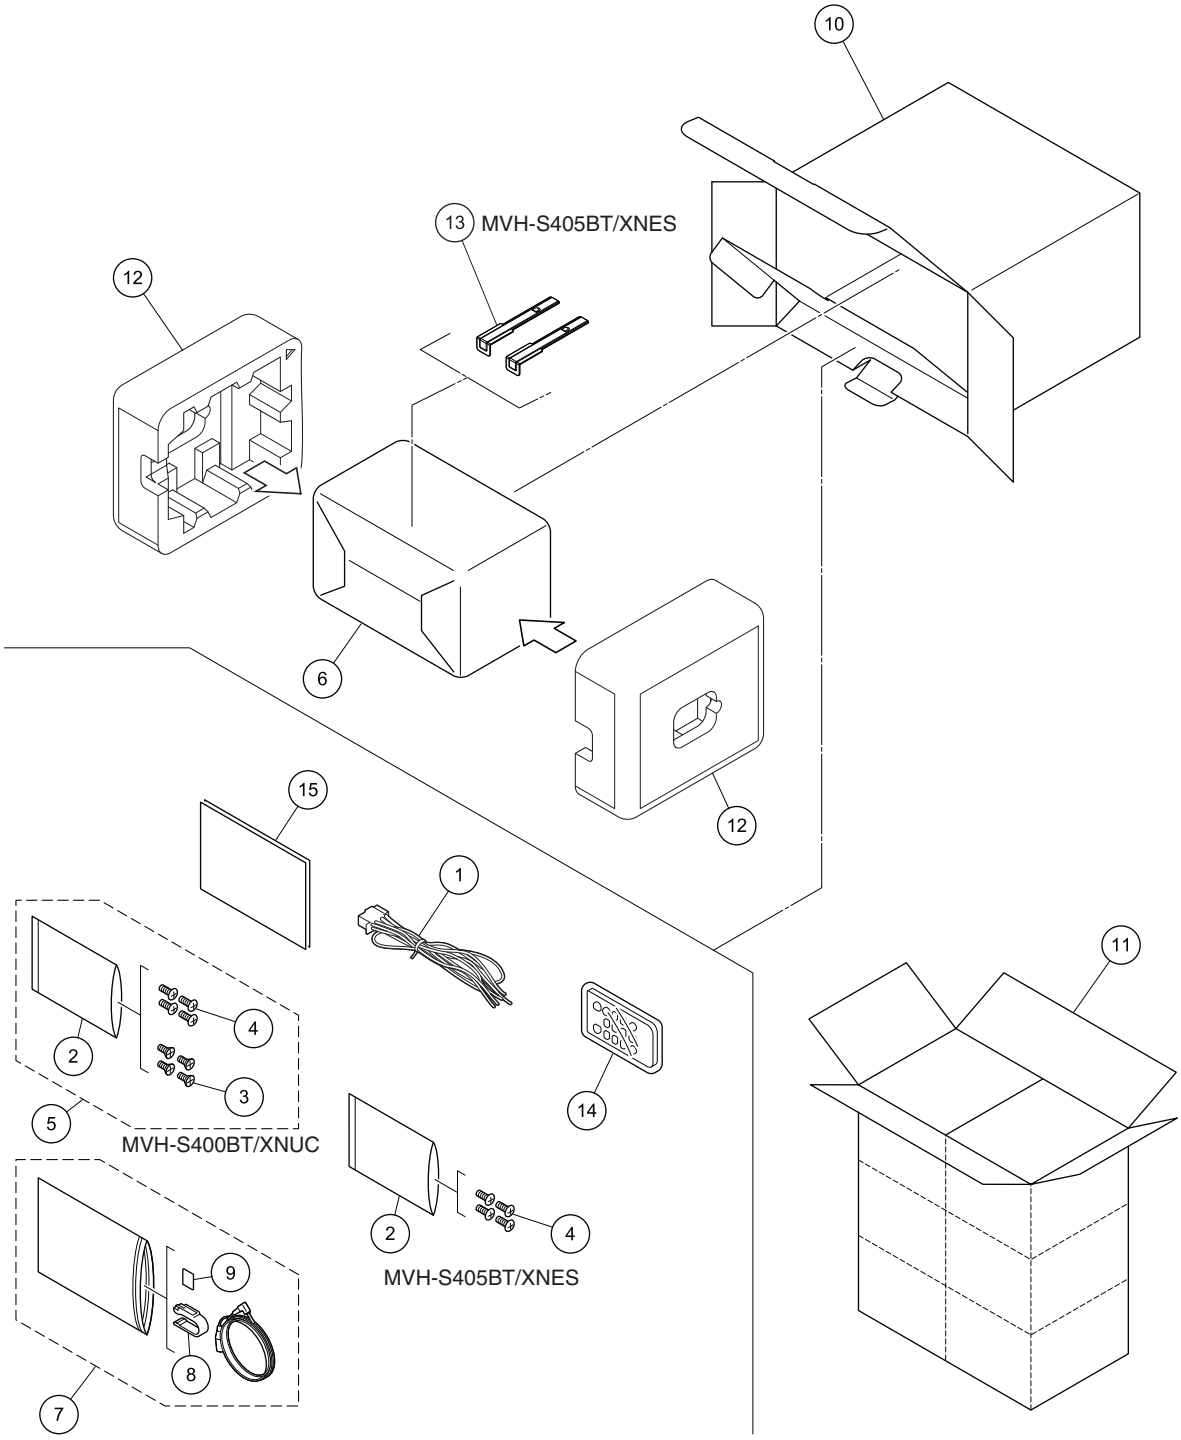

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDP1480
*	2	Polyethylene Bag	CEG1160
	3	Screw	See Contrast table (2)
	4	Screw	CBA2384
	5	Accessory Assy	See Contrast table (2)
	6	Cover	See Contrast table (2)
	7	Microphone Assy	CPM1109
	8	Holder	CZN7192
	9	Cushion	CZN7193
	10	Unit Box	See Contrast table (2)
	11	Contain Box	See Contrast table (2)
	12	Protector	See Contrast table (2)
	13	Handle	See Contrast table (2)
	14	Card Remote Control Unit	CXE9605
	15-1	Owner's Manual	See Contrast table (2)
	15-2	Quick Start Guide	See Contrast table (2)
*	15-3	Web IM	See Contrast table (2)
*	15-4	Warranty Card	See Contrast table (2)

(2) CONTRAST TABLE

MVH-S400BT/XNUC and MVH-S405BT/XNES are constructed the same except for the following:

Mark	No.	Symbol and Description	MVH-S400BT/XNUC	MVH-S405BT/XNES
	3	Screw	CBA2383	Not used
	5	Accessory Assy	QEA3339	Not used
	6	Cover	QEG3007	QEG3008
	10	Unit Box	QHG4140	QHG4141
	11	Contain Box	QHL4140	QHL4141
	12	Protector	QHP3068	QHP3069
	13	Handle	Not used	QNC3168
	15-1	Owner's Manual	Not used	QRD3523
	15-2	Quick Start Guide	QRD3536	Not used
*	15-3	Web IM	See Contents of Web IM (3)	Not used
*	15-4	Warranty Card	QRY3001	Not used

Owner's Manual,Installation Manual


Part No.	Language
QRD3523	English, Traditional Chinese, Arabic, Persian, Portuguese(B), Spanish(Espanol)
QRD3536	English, French, Spanish(Espanol)


(3) CONTENTS OF WEB IM

Part No.	Language
*QRI3030	English, French, Spanish(Espanol)


All operation manuals are supplied in PDF files by the WEB. No printed papers are available.

9.2 EXTERIOR (1) SECTION

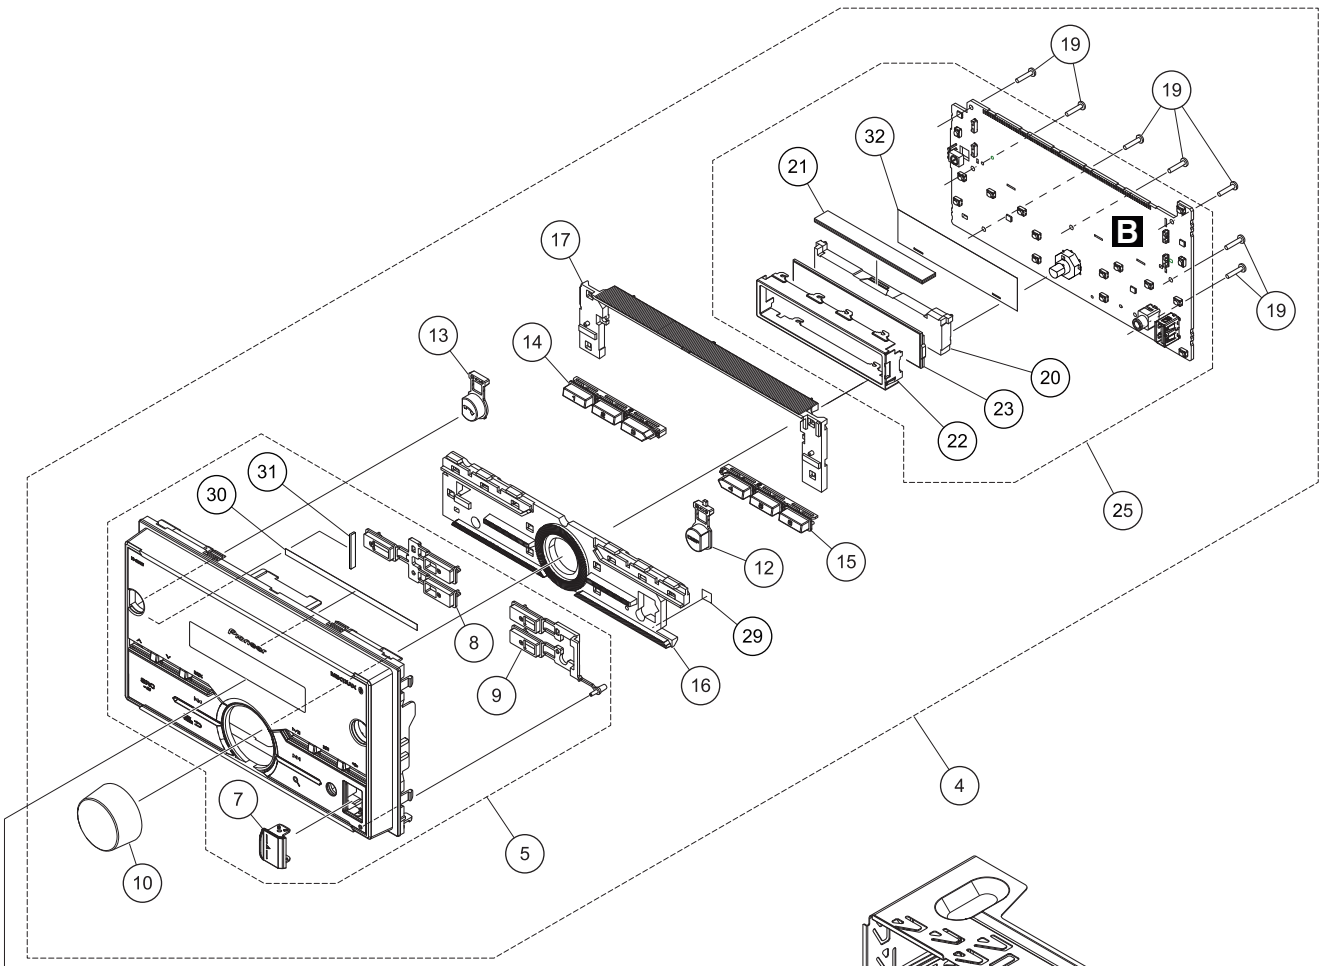

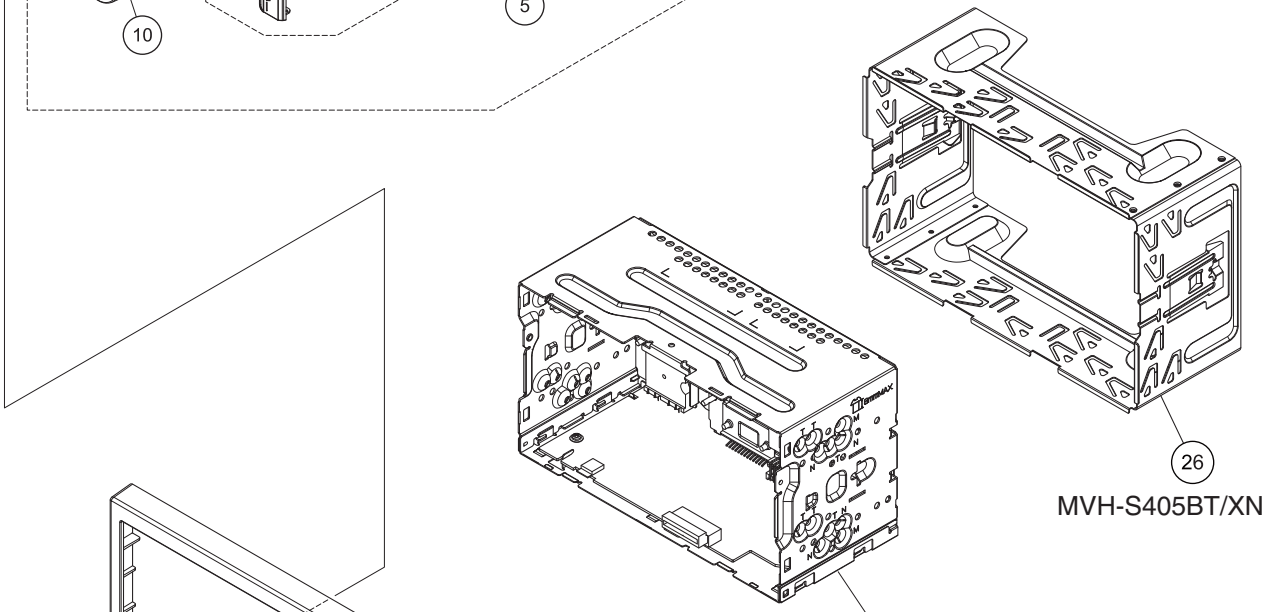

Refer to "EXTERIOR (2)" SECTION.

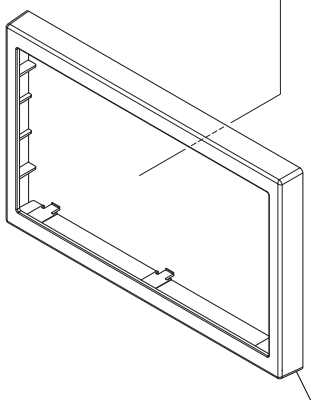

6 MVH-S405BT/XNES

(1) EXTERIOR (1) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	• • • • •	
	2	• • • • •	
	3	• • • • •	
	4	Grille Assy	See Contrast table (2)
	5	Grille Unit	See Contrast table (2)
	6	Panel	See Contrast table (2)
*	7	Door	QAT3032
*	8	Button	QAC3235
*	9	Button	QAC3236
	10	Knob Unit	QXA4278
	11	• • • • •	
	12	Button(DISP)	QAC3231
	13	Button(PHONE)	QAC3232
	14	Button(1-3)	QAC3233
	15	Button(4-6)	QAC3234
	16	Lighting Conductor	QNV3122
	17	Lighting Conductor	QNV3124
	18	• • • • •	
	19	Screw	BPZ20P100FTC
	20	Lighting Conductor	QNV3147
	21	Rubber Connector	QNV3148
	22	Holder	QNC3161
	23	Segment LCD (V1802)	CAW2063
	24	• • • • •	
	25	Keyboard Unit	QWM4653
	26	Holder	See Contrast table (2)
	27	• • • • •	
	28	• • • • •	
	29	Sheet	QNM3145
*	30	Sheet	QNM3213
*	31	Cushion	QNM3152
	32	Sheet	QNM3213

(2) CONTRAST TABLE

MVH-S400BT/XNUC and MVH-S405BT/XNES are constructed the same except for the following:

Mark	No.	Symbol and Description	MVH-S400BT/XNUC	MVH-S405BT/XNES
	4	Grille Assy	QXA5238	QXA5239
	5	Grille Unit	QXA5233	QXA5234
	6	Panel	Not used	QNS4003
	26	Holder	Not used	QNC3167

9.3 EXTERIOR (2) SECTION

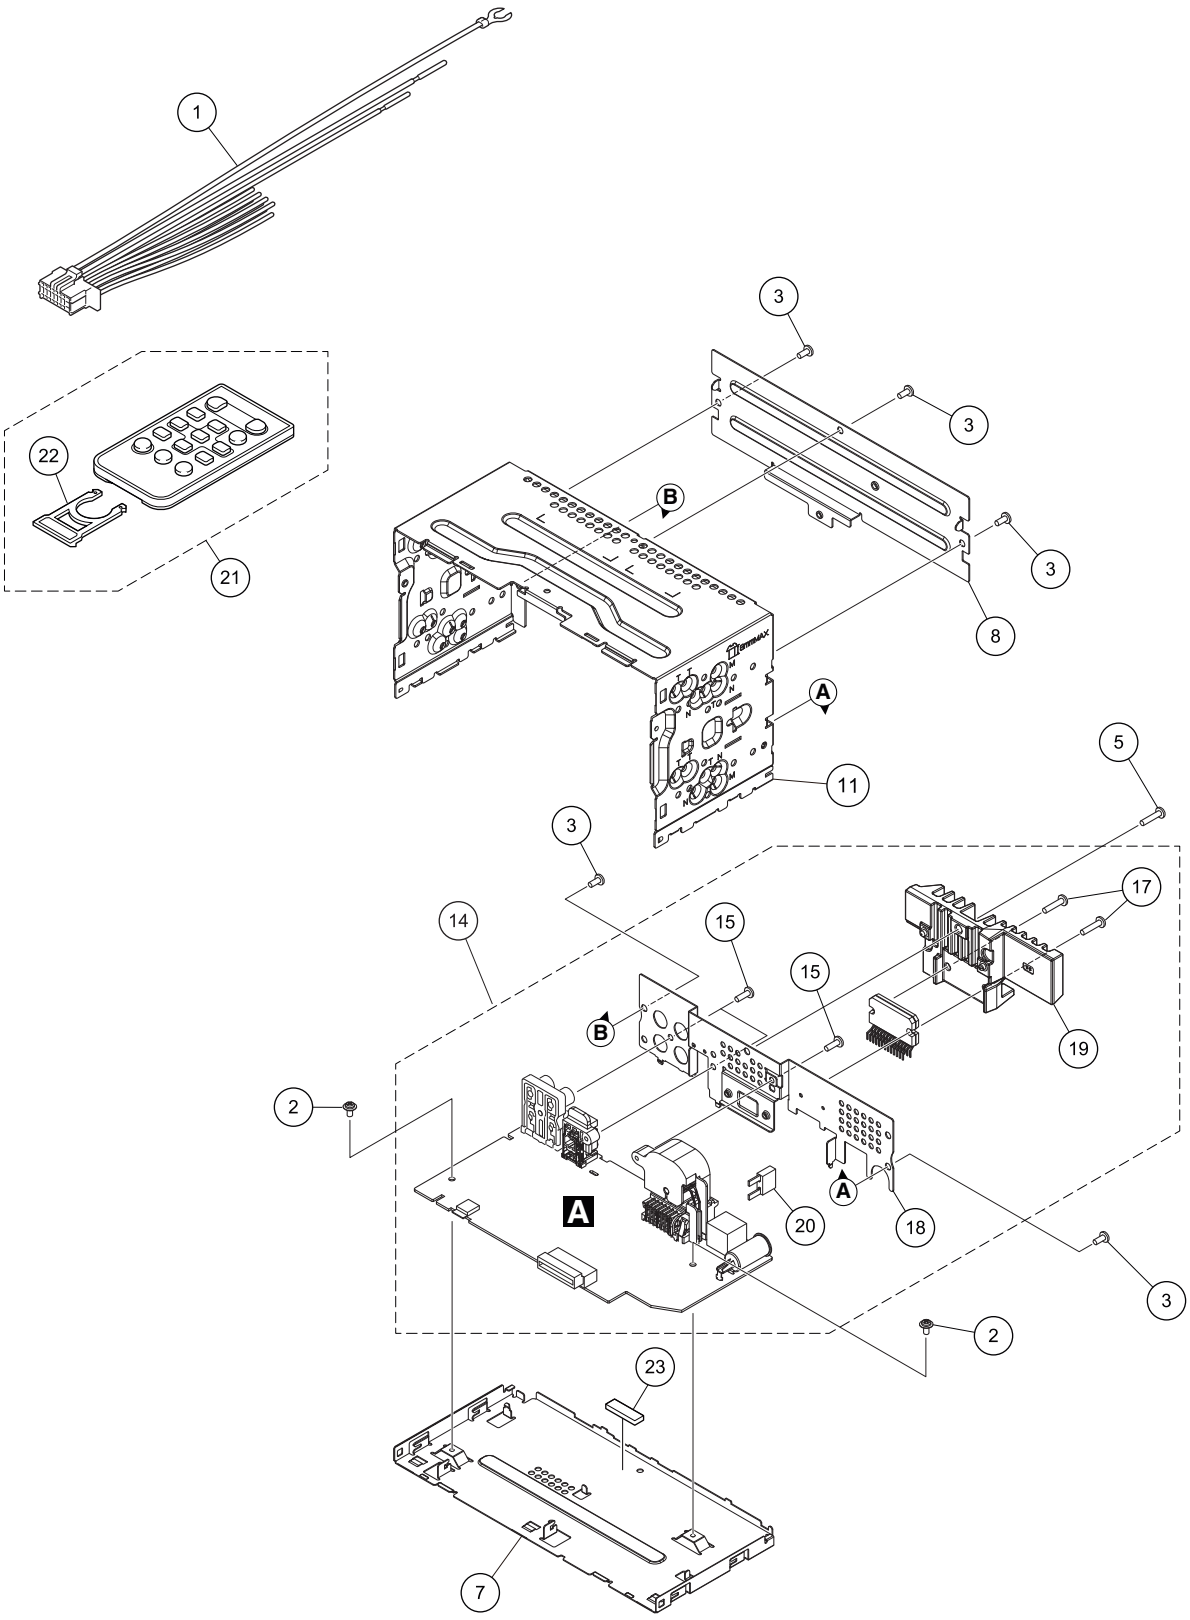

(1) EXTERIOR (2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDP1480
	2	Screw	ASZ26P050FTC
	3	Screw	BSZ26P060FTC
	4	•••••	
	5	Screw	BSZ26P120FTC
	6	•••••	
	7	Case	QNB3054
	8	Holder	QNC3162
	9	•••••	
	10	•••••	
	11	Chassis	QNA3038
	12	•••••	
	13	•••••	
	14	Tuner Amp Unit	See Contrast table (2)
	15	Screw	BPZ26P080FTC
	16	•••••	
	17	Screw	BSZ26P120FTC
	18	Holder	QNC3156
	19	Heat Sink	QNR3010
	20	Fuse	YEK5001
	21	Card Remote Control Unit	CXE9605
	22	Cover	CNU3681
	23	Heat Cond Sheet	QNM3130

(2) CONTRAST TABLE

MVH-S400BT/XNUC and MVH-S405BT/XNES are constructed the same except for the following:

Mark	No.	Symbol and Description	MVH-S400BT/XNUC	MVH-S405BT/XNES
	14	Tuner Amp Unit	QWM4617	QWM4698

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:MVH-S400BT/XNUC
B:MVH-S405BT/XNES

Unit Number: QWM4617(A)
Unit Number: QWM4698(B)
Unit Name : Tuner Amp Unit
Unit Number: QWM4653
Unit Name : Keyboard Unit

A

Unit Number: QWM4617(A)
Unit Number: QWM4698(B)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 201	Regulator IC	NJW4184U2-33A
IC 211	Regulator IC	MM3479A33P
IC 216	Regulator IC	MM3479A12P
IC 221	DC/DC Converter IC	KBD9876EFJ
IC 241	Regulator IC	MM3571A33P
IC 301	DC/DC Converter IC	MM3630BR
IC 501	IC	STA1080
IC 502	IC	S-80827CNMC-B8M
IC 701	IC	337S3959
IC 711	RAM IC	M12L128168A-5TG2N
IC 731	ROM IC	M95512-RMN6P
IC 741	Flash ROM Unit(A)	QVQ1020
IC 741	Flash ROM Unit(B)	QVQ1025
IC 742	IC	MX25L1636EM2I-08G
IC 761	E-VOL System LSI	BD37067FV
IC 851	Tuner IC	TEF6686HN-V102
IC 1101	Power Amp IC(A)	TCB501HQ
IC 1101	Power Amp IC(B)	PAL014A
IC 1102	IC	TC7SH32FUS2
Q 111	Bipolar Transistor	LSCR523UB
Q 141	Bipolar Transistor	LSCR523UB
Q 251	Transistor	ISA1602AM1
Q 252	Transistor	LTC043EEB
Q 261	Transistor	2SCR573DG
Q 262	Transistor	EMD52
Q 271	Transistor	2SAR502UB
Q 272	Transistor	LTC023YEB

Circuit Symbol and No.		Part No.
Q 281	Transistor	2SCR573DG
Q 282	Transistor	EMD52
Q 701	Bipolar Transistor	LSAR523UB
Q 1101	Transistor	EMD52
Q 1102	Transistor	ISA1602AM1
Q 1242	Transistor	IMH23
Q 1243	Transistor	IMH23
Q 1276	Bipolar Transistor(B)	EMD53
Q 1277	Bipolar Transistor(B)	EMD53
Q 1278	Bipolar Transistor(B)	EMD53
Q 1279	Bipolar Transistor(B)	EMD53
D 101	Diode	D1F60-5053
D 102	Diode	D1F60-5053
D 111	Diode	DZ2J068M0
D 141	Diode	DZ2J075M0
D 201	Diode	RR264MM-400TF
D 202	Diode	DZ2J056M0
D 221	Schottky Diode	RB751SM-40
D 222	Diode	RB056L-40
D 261	Diode	DZ2J062M0
D 281	Diode	DZ2J091M0
D 301	Diode	RB060M-30
D 501	Schottky Diode	RB751SM-40
D 502	Schottky Diode(A)	RB751SM-40
D 506	Diode	DZ2J036M0
D 507	Diode	DZ2J036M0
D 584	Diode	DZ2J180M0
D 1101	Diode(B)	RR264MM-400TF
D 1102	Diode	RR264MM-400TF
D 1103	Schottky Diode	RB751SM-40
D 1201	Diode	DZ2S068C
D 1204	Diode	DZ2J180M0
D 1205	Diode	DZ2J180M0
D 1206	Diode	DZ2S068C
D 1207	Diode	DZ2S068C
D 1208	Diode	DZ2S068C
D 1209	Diode	DZ2S068C
D 1210	Diode	DZ2S068C
L 101	Choke Coil	CTH1620
L 221	SMD Inductor	CTH1584
L 271	Inductor	CTF1736
L 301	SMD Inductor	CTH1584
L 502	Inductor	CTF1645
L 711	Chip Beads	VTL1133

Circuit Symbol and No.		Part No.
L 854	Inductor	LCMAR27J1608
L 855	Inductor	CTF1786
L 856	Inductor(A)	CTF1389
L 857	Inductor(B)	LCYAR82J2016
L 858	Chip Coil(B)	LCTAWR27J2520
L 859	Chip Coil(B)	LCTAW3R3J2520
L 860	Inductor(A)	LCYC150K1608
L 951	Inductor	CTF1786
L 1201	Inductor	CTF1713
L 1276	Chip Beads	VTL1133
L 1277	Chip Beads	VTL1133
L 1294	Chip Beads	VTL1126
L 1295	Chip Beads	VTL1126
L 1296	Chip Beads	VTL1126
L 1297	Chip Beads	VTL1126
T 851	Variable Coil	CTC1215
X 501	Resonator 24 MHz	CSS1773
X 502	Resonator 32.768 kHz	CSS1807
X 851	Crystal Resonator	CSS1868
P 852	Surge Absorber	IMSA-6803-01Y900
P 1243	Poly Switch	FSMD075-24R
P 1276	Poly Switch	FSMD075-24R
VA1201	SMD Varistor	MLV0402ES012V0010N
VA1202	SMD Varistor	MLV0402ES012V0010N
U 951	BT Modure	CWX4751
CN1201	Connector	CKS6452
JA101	Plug	CKM1624
JA851	Antenna Jack	CKX1104
JA1241	Jack	CKB1109
JA1276	Jack	CKN1103

RESISTORS

R 111		RS1/16SS223J
R 112		RS1/16SS473J
R 113		RS1/16SS682J
R 114		RS1/4SA102J
R 141		RS1/16SS104J
R 142		RS1/16SS473J
R 201		RS1/10SR104J
R 202		RS1/16SS102J
R 223		RS1/16SS472J
R 225		RS1/16SS2203D
R 226		RS1/16SS6802D
R 227		RS1/10SR471J
R 228		RS1/10SR103J
R 230		RS1/10SR224J
R 251		RS1/16SS471J
R 252		RS1/16SS103J
R 255		RS1/10SR0R0J
R 261		RS1/10SR123J
R 262		RS1/16SS472J
R 271		RS1/16SS103J
R 272		RS1/10SR221J
R 281		RS1/10SR152J
R 304		RS1/16SS273J
R 305		RS1/16SS3001D
R 306		RS1/16SS1602D
R 308		RS1/16SS5600D
R 309		RS1/16SS473J
R 310		RS1/16SS304J
R 311	0.030 ohm	CCN1322
R 314		RS1/4SA331J
R 316		RS1/16SS560J
R 317		RS1/16SS0R0J
R 433		RS1/16SS0R0J
R 434		RS1/16SS0R0J
R 444		RS1/16SS0R0J
R 502		RS1/16SS0R0J
R 503		RS1/16SS221J
R 506		RS1/16SS473J
R 507		RS1/16SS473J
R 508		RS1/16SS473J
R 509		RS1/16SS473J
R 510		RS1/16SS473J
R 511		RS1/16SS473J
R 512		RS1/16SS0R0J
R 513		RS1/16SS222J
R 514		RS1/16SS101J
R 515		RS1/16SS103J
R 516		RS1/16SS101J
R 517		RS1/16SS103J
R 518		RS1/16SS472J
R 519		RS1/16SS271J
R 520		RS1/16SS101J
R 521		RS1/16SS473J
R 522		RS1/16SS0R0J
R 524		RS1/16SS3001D
R 525		RS1/16SS103J
R 526		RS1/16SS1213F
R 527		RS1/16SS101J
R 528		RS1/16SS222J
R 529		RS1/16SS100J
R 530		RS1/16SS100J
R 531		RS1/16SS222J
R 532		RS1/16SS222J
R 533		RS1/10SR103J
R 534		RS1/10SR103J
R 536		RS1/16SS472J
R 539		RS1/16SS473J
R 540		RS1/16SS222J
R 541		RS1/16SS472J
R 546		RS1/16SS273J
R 547		RS1/16SS473J
R 548		RS1/16SS102J
R 550		RS1/16SS273J
R 551		RS1/16SS103J
R 552		RS1/16SS0R0J
R 554		RS1/16SS222J
R 555		RS1/16SS135J
R 556		RS1/16SS102J
R 558		RS1/16SS102J
R 561		RS1/16SS103J
R 562		RS1/16SS0R0J
R 564		RS1/16SS472J
R 565		RS1/16SS0R0J
R 566		RAB4CQ103J
R 570		RS1/16SS221J
R 571		RS1/16SS221J
R 572		RS1/16SS102J

Circuit Symbol and No.		Part No.
R 573		RS1/16SS473J
R 574		RS1/16SS473J
R 575		RS1/16SS473J
R 576		RS1/16SS0R0J
R 577		RS1/16SS330J
R 578		RS1/16SS473J
R 579		RS1/16SS473J
R 580		RS1/16SS473J
R 584		RS1/16SS102J
R 586		RS1/16SS103J
R 587		RS1/16SS0R0J
R 591		RS1/16SS361J
R 597		RS1/16SS473J
R 599		RS1/16SS102J
R 601		RS1/16SS101J
R 602		RS1/16SS101J
R 603		RS1/16SS101J
R 604		RS1/16SS101J
R 605		RS1/16SS101J
R 611		RS1/16SS472J
R 612		RS1/16SS473J
R 614		RS1/16SS473J
R 615		RS1/16SS103J
R 616		RS1/10SR472J
R 617		RS1/16SS473J
R 621		RS1/16SS0R0J
R 627		RS1/16SS153J
R 628		RS1/16SS153J
R 629		RS1/16SS472J
R 630		RS1/16SS473J
R 631		RS1/16SS0R0J
R 632		RS1/16SS473J
R 633		RS1/16SS472J
R 634		RS1/16SS473J
R 635		RS1/16SS473J
R 636		RS1/16SS473J
R 637		RS1/16SS221J
R 638		RS1/16SS221J
R 639		RS1/16SS101J
R 642		RS1/16SS221J
R 643		RS1/16SS101J
R 644		RS1/16SS473J
R 645		RS1/16SS101J
R 647		RS1/16SS102J
R 648		RS1/16SS102J
R 657		RS1/16SS101J
R 658		RS1/16SS101J
R 659		RS1/16SS101J
R 660		RS1/16SS101J
R 661		RS1/16SS101J
R 663		RS1/16SS101J
R 664		RS1/16SS101J
R 672		RS1/16SS101J
R 676		RS1/16SS472J
R 677		RS1/16SS472J
R 678		RS1/16SS472J
R 681		RS1/16SS472J
R 701		RS1/16SS103J
R 702		RS1/16SS472J

Circuit Symbol and No.		Part No.
R 703		RS1/16SS101J
R 704		RS1/16SS0R0J
R 705		RS1/16SS222J
R 706		RS1/16SS222J
R 707		RS1/16SS472J
R 708		RS1/16SS272J
R 709		RS1/16SS473J
R 710		RS1/16SS0R0J
R 714		RAB4CQ121J
R 715		RAB4CQ121J
R 716		RAB4CQ121J
R 717		RAB4CQ121J
R 718		RAB4CQ121J
R 719		RAB4CQ121J
R 720		RAB4CQ121J
R 721		RAB4CQ121J
R 722		RAB4CQ121J
R 724		RS1/16SS121J
R 731		RS1/16SS330J
R 732		RS1/16SS330J
R 733		RS1/16SS103J
R 734		RS1/16SS103J
R 735		RS1/16SS103J
R 736		RS1/16SS330J
R 737		RS1/16SS330J
R 741		RS1/16SS330J
R 742		RS1/16SS103J
R 743		RS1/16SS103J
R 744		RS1/16SS330J
R 745		RS1/16SS330J
R 746		RS1/16SS103J
R 747		RS1/16SS330J
R 748		RS1/16SS330J
R 749		RS1/16SS330J
R 750		RS1/16SS103J
R 751		RS1/16SS103J
R 753		RS1/16SS103J
R 761		RS1/10SR221J
R 763		RS1/16SS101J
R 764		RS1/16SS101J
R 766		RS1/16SS0R0J
R 767		RS1/16SS104J
R 768		RS1/16SS181J
R 769		RS1/8SQ0R0J
R 770		RS1/8SQ0R0J
R 771		RS1/8SQ0R0J
R 851		RS1/16SS105J
R 852		RS1/16SS105J
R 853	(A)	RS1/16SS391J
R 853	(B)	RS1/16SS101J
R 864		RS1/16SS103J
R 868		RS1/16SS103J
R 870		RS1/16SS101J
R 873		RS1/16SS472J
R 874		RS1/16SS101J
R 875		RS1/16SS472J
R 890		RS1/16SS0R0J
R 951		RS1/16SS0R0J
R 952		RS1/16SS221J

Circuit Symbol and No.		Part No.
R 953		RS1/16SS473J
R 954		RS1/16SS221J
R 958		RS1/16SS221J
R 960		RS1/16SS473J
R 961		RS1/16SS473J
R 1101		RS1/16SS123J
R 1102		RS1/16SS103J
R 1103		RS1/16SS221J
R 1106		RS1/16SS103J
R 1107		RS1/16SS0R0J
R 1109		RS1/16SS0R0J
R 1110		RS1/16SS0R0J
R 1111		RS1/16SS0R0J
R 1112		RS1/16SS0R0J
R 1118		RS1/16SS0R0J
R 1119	(A)	RS1/4SA0R0J
R 1122		RS1/16SS103J
R 1123		RS1/16SS102J
R 1125	(B)	RS1/4SA0R0J
R 1203		RS1/16SS223J
R 1204		RS1/16SS223J
R 1205		RS1/10SR222J
R 1206		RS1/10SR221J
R 1207		RS1/10SR221J
R 1208		RS1/10SR0R0J
R 1209		RS1/10SR222J
R 1210		RS1/10SR222J
R 1211		RS1/10SR222J
R 1212		RS1/10SR222J
R 1213		RS1/16SS123J
R 1214		RS1/10SR222J
R 1215		RS1/10SR101J
R 1217		RS1/16SS0R0J
R 1221	(B)	RS1/4SA0R0J
R 1222	(A)	RS1/4SA0R0J
R 1223	(B)	RS1/4SA0R0J
R 1243		RS1/16SS821J
R 1244		RS1/16SS821J
R 1245		RS1/16SS821J
R 1246		RS1/16SS821J
R 1247		RS1/16SS223J
R 1248		RS1/16SS223J
R 1249		RS1/16SS223J
R 1250		RS1/16SS223J
R 1254		RS1/16SS0R0J
R 1256		RS1/16SS0R0J
R 1276	(B)	RS1/16SS8201D
R 1277	(B)	RS1/16SS6800D
R 1278		RS1/16SS102J
R 1279	(B)	RS1/16SS6800D
R 1280		RS1/16SS102J
R 1281		RS1/16SS101J
R 1282		RS1/16SS101J
R 1283	(B)	RS1/16SS8201D
R 1284		RS1/16SS0R0J
R 1285		RS1/16SS0R0J

CAPACITORS

C 101		CEHAT222M16
C 102		CKSRYB103K50
C 111		CKSRYX104K50
C 201		CEHAT332M16
C 202		CKSRYX104K50
C 203		CKSSYB104K10
C 204		CKSQYX106K10
C 205		CKSYX106K35
C 211		CKSRYX105K16
C 212		CKSRYX105K16
C 213		CKSSYB104K10
C 216		CKSRYX105K16
C 217		CKSRYX105K16
C 218		CKSSYB104K10
C 221		CKSYX106K35
C 222		CKSRYX105K50
C 223		CKSRYX104K50
C 224		CKSRYB103K50
C 226		CKSSYB102K50
C 227		CKSRYX475K6R3
C 228		CKSRYX105K16
C 229		CKSSYX105K10
C 230		CEHVW221M16
C 241		CKSRYB474K16
C 242		CKSRYB474K16
C 244		CCSSCH470J50
C 251		CKSRYX105K50
C 252		CKSRYX104K50
C 261		CKSSYB104K10
C 262		CKSRYX105K16
C 263		CKSSYB104K10
C 272		CKSQYX106K10
C 274		CKSQYX106K10
C 281		CKSRYX105K16
C 282		CKSSYB104K16
C 283		CKSRYB104K16
C 301		CKSSYB153K16
C 302		CKSSYB222K50
C 304		CKSSYB221K50
C 305		CKSSYX105K10
C 306		CKSRYB104K16
C 307		CKSYX226M16
C 308		CKSRYX225K10
C 309		CEHVW101M16
C 310	(A)	CKSRYB224K16
C 311	10 uF	CCG1236
C 312		CEHVW101M16
C 313	10 uF	CCG1236
C 314		CKSRYX225K10
C 315	(B)	CKSRYX104K50
C 316	(B)	CKSSYB471K50
C 317	(B)	CKSRYX104K50
C 318		CCSSCH470J50
C 320		CKSRYX475K10
C 502		CKSSYB104K10
C 503		CKSRYX475K6R3
C 505		CKSSYB104K10
C 506		CKSRYX475K6R3
C 507		CKSRYX475K6R3
C 508		CKSSYB104K10
C 509		CKSRYX475K6R3

Circuit Symbol and No.		Part No.
C 510		CKSSYB104K10
C 511		CKSRYX475K6R3
C 512		CKSSYB104K10
C 513		CKSRYX475K6R3
C 514		CKSSYB104K10
C 517		CKSSYB104K10
C 518		CCSSCH100D50
C 519		CCSSCH100D50
C 520		CKSRYX475K6R3
C 521		CKSSYB104K10
C 522		CKSRYX475K6R3
C 523		CKSRYX475K6R3
C 524		CKSRYX475K6R3
C 525		CKSRYX106M6R3
C 526		CKSSYB103K16
C 527		CKSRYX106M6R3
C 528		CKSSYB103K16
C 529		CKSSYB104K10
C 530		CKSRYX475K6R3
C 531		CKSSYX105K10
C 532		CKSSYX105K10
C 533		CKSRYX475K6R3
C 534		CKSSYB104K10
C 535		CEHVW221M16
C 536		CCSSCH101J50
C 537		CKSSYB103K16
C 538		CKSRYX106M6R3
C 539		CKSSYB103K16
C 540		CKSRYX106M6R3
C 541		CKSSYB222K50
C 542		CKSSYB104K10
C 543		CKSSYX105K10
C 544		CKSSYB473K16
C 545		CCSSCH100D50
C 546		CCSSCH120J50
C 551		CKSSYB104K10
C 552		CKSRYX475K6R3
C 553		CKSQYX106K10
C 555		CKSSYB103K16
C 556		CKSSYB104K10
C 559		CKSQYB224K50
C 560		CKSSYB103K16
C 565		CCSRCH330J50
C 566		CCSRCH330J50
C 569		CCSSCH101J50
C 573		CCSSCH101J50
C 574		CCSSCH101J50
C 575		CKSSYB104K10
C 577		CCSSCH101J50
C 580		CKSRYB104K16
C 586		CCSSCH102J50
C 588		CKSSYB104K10
C 590		CKSSYB472K50
C 591		CKSSYB472K50
C 592		CKSSYB472K50
C 593		CKSSYB472K50
C 595		CKSSYB472K50
C 701		CKSSYB104K10
C 702		CKSSYB104K10

Circuit Symbol and No.		Part No.
C 711		CKSRYX475K6R3
C 712		CKSSYX105K10
C 713		CKSSYB104K10
C 714		CKSSYX105K10
C 715		CKSSYX105K10
C 716		CKSSYX105K10
C 718		CKSSYB104K10
C 719		CKSSYB104K10
C 722		CKSSYB104K10
C 731		CKSSYB104K10
C 741		CKSRYX225K10
C 742		CKSSYB104K10
C 743		CKSSYB104K10
C 744		CKSSYB103K16
C 761		CKSRYB105K10
C 762		CKSRYB105K10
C 763		CKSRYB105K10
C 769		CKSRYB105K10
C 770		CKSRYB105K10
C 771		CKSRYB105K10
C 772		CKSRYB105K10
C 773		CKSRYB105K10
C 774		CCSSCH151J50
C 775		CCSSCH151J50
C 776		CKSRYX104K50
C 777	10 uF	CCG1236
C 778		CKSRYB105K10
C 779		CKSQYX106K10
C 780		CKSRYX104K50
C 781		CKSRYB105K10
C 782		CKSRYB105K10
C 783		CKSRYB105K10
C 784		CKSRYB105K10
C 785		CKSRYB105K10
C 787		CKSQYX106K16
C 788		CKSQYX106K16
C 790		CKSQYX106K10
C 791		CKSRYB103K50
C 853		CCSSCH100D50
C 854		CCSSCH471J50
C 858		CCSSCH220J50
C 859		CCSSCH331J50
C 860	(B)	CCSSCK2R0C50
C 861	(B)	CCSSCK1R0C50
C 862	(B)	CCSSCK1R0C50
C 863	(B)	CCSSCH120J50
C 866		CKSSYB224K6R3
C 867		CKSSYB102K50
C 870		CCSSCH102J50
C 871		CKSSYB104K10
C 872		CKSSYB104K10
C 874		CCSSCH390J50
C 878		CKSSYB152K50
C 882		CKSSYX105K10
C 891		CKSRYX225K10
C 892		CKSSYB104K10
C 893		CKSSYB104K10
C 894		CKSRYX475K6R3
C 895		CKSRYX105K16
C 896	(B)	CCG1321

Circuit Symbol and No.		Part No.
C 897	(B)	CCG1321
C 898	(B)	CKSRYB224K16
C 953		CKSRYB104K16
C 954		CKSRYB104K16
C 1101		CKSRYB474K10
C 1102		CKSRYB474K10
C 1103		CKSRYB474K10
C 1104		CKSRYB474K10
C 1106		CKSRYB474K10
C 1110		CKSQYX106K16
C 1111		CKSRYX225K10
C 1112		CKSRYX104K50
C 1116		CKSRYX104K50
C 1118		CKSSYB104K10
C 1119		CKSRYX104K50
C 1120		CKSRYX104K50
C 1121		CKSRYX106M6R3
C 1201		CCSRCH102J50
C 1202		CKSRYX104K50
C 1203		CKSRYB104K16
C 1204		CKSRYX105K16
C 1205		CCSRCH221J50
C 1206		CCSRCH221J50
C 1207		CKSRYB474K10
C 1210		CKSRYX105K16
C 1217		CCSSCH121J50
C 1243		CKSQYX106K10
C 1244		CKSQYX106K10
C 1245		CKSQYX106K10
C 1246		CKSQYX106K10
C 1247		CCSSCH102J50
C 1248		CCSSCH102J50
C 1249		CCSSCH102J50
C 1250		CCSSCH102J50
C 1276		CKSRYB104K16
C 1277		CKSRYB104K16
C 1278		CKSRYB104K16
C 1279		CKSRYB104K16
C 1280		CKSSYB102K50
C 1281		CKSSYB102K50
C 1282	(B)	CCG1321

B

Unit Number: QWM4653
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	Driver IC	BU97540KV-M
IC 1851	IR RC REC Module	SIR8440B5
Q 1951	Bipolar Transistor	LSCR523UB
Q 1952	Bipolar Transistor	LSCR523UB
Q 1953	Bipolar Transistor	LSCR523UB
Q 1954	Bipolar Transistor	LSCR523UB
D 1901	Diode	SZESD7351HG
D 1902	Diode	SZESD7351HG
D 1921	Diode	DZ2S068C
D 1922	Diode	DZ2S068C
D 1923	Diode	DZ2S068C
D 1951	LED	FC-3215BK-470H10
D 1952	LED	FC-3215BK-470H10
D 1953	LED	FC-3215BK-470H10
D 1954	LED	FC-3215BK-470H10
D 1955	LED	FC-3215BK-470H10
D 1956	White LED	SWBA05(FI231719)
S 1821	Push Switch	CSG1155
S 1823	Push Switch	CSG1155
S 1824	Push Switch	CSG1155
S 1825	Push Switch	CSG1155
S 1826	Push Switch	CSG1155
S 1827	Push Switch	CSG1155
S 1828	Push Switch	CSG1155
S 1829	Push Switch	CSG1155
S 1830	Push Switch	CSG1155
S 1831	Push Switch	CSG1155
S 1832	Push Switch	CSG1155
S 1833	Push Switch	CSG1155
S 1834	Push Switch	CSG1155
S 1835	Encoder(MULTI-CONTROL)	CSD1168
S 1941	Push Switch	CSG1155
CN1941	Connector	CKS6451
JA1901	Connector	CKS6443
JA1921	Jack	CKN1090
V 1802	Segment LCD	CAW2063

RESISTORS

R 1802	RS1/10SR472J
R 1821	RS1/10SR273J
R 1854	RS1/10SR101J
R 1941	RS1/10SR222J
R 1942	RS1/10SR222J
R 1943	RS1/10SR222J
R 1944	RS1/10SR222J
R 1951	RS1/10SR2201D
R 1952	RS1/10SR560J
R 1953	RS1/10SR2000D
R 1954	RS1/10SR2701D
R 1955	RS1/10SR2201D
R 1956	RS1/10SR560J
R 1957	RS1/10SR2000D
R 1958	RS1/10SR2701D
R 1959	RS1/10SR2201D
R 1960	RS1/10SR221J
R 1961	RS1/10SR2000D
R 1962	RS1/10SR2701D
R 1963	RS1/10SR222J
R 1964	RS1/4SA181J
R 1965	RS1/10SR910J
R 1966	RS1/10SR152J

CAPACITORS

C 1801	CKSRYB105K10
C 1851	CKSQYX106K10
C 1902	CKSRYB104K16
C 1904	CKSRYX475K6R3
C 1905	CCSRCH330J50
C 1906	CCSRCH330J50