

2. EXPLODED VIEWS AND PARTS LIST

2. EXPLODED VIEWS AND PARTS LIST



NOTE:


- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ26P040FMC	46	Spring	CBH2435
2	Screw	BMZ30P050FMC	47	Seal	CNM7027
3	Connector	CDE6657	48	Seal	CNM7028
4	Connector	CDE6509	49	Holder	CNV6106
5	Chassis	CNA2257	50	Holder	CNV6107
6	Frame	CNC8700	51	Lighting Conductor	CNV6108
7	Insulator	CNM6650	52	Lighting Conductor	CNV6109
8	Seal	CNM7286	53	Lighting Conductor	CNV6118
9	Label	CRW1417	54	Rubber	CNV6119
10	Main Unit	CWM7046	55	Lighting Conductor	CNV6126
11	Screw	BMZ30P060FMC	56	Lighting Conductor	CNV6351
12	Screw(M3x6)	CBA1393	57	Keyboard Unit	CWS1332
13	Terminal(CN800)	CKF1059	58	LCD(LCD901)	CAW1690
14	Plug(CN803)	CKM1221	59	Connector(CN902)	CKS4361
15	Connector(CN802)	CKM1315	60	Holder	CNC8672
16	Connector(CN801)	CKM1322	61	Sheet	CNM6620
17	Plug(CN300)	CKS-291	62	Lighting Conductor	CNV6114
18	Connector(CN301)	CKS3568	63	Connector	CNV6115
19	Connector(CN804)	CKS4361	64	Knob Unit	CXB6372
20	Connector(CN303)	CKS4376	65	Grille Unit	CXB7592
21	86146-48030(ANT1)	CKX1057	66	Screw	BMZ20P080FMC
22	86146-48040(ANT2)	CKX1058	67	Door	CAT2221
23	Holder	CNC8704	68	Washer	CBF1037
24	FM/AM Tuner Unit	CWE1543	69	Spring	CBH2446
25	Holder	CNC6774	70	Lighting Conductor	CNV6110
26	Control Unit	CWM7048	71	Lighting Conductor	CNV6111
27	Terminal(CN703)	CKF1064	72	Holder	CNV6590
28	Connector(CN701)	CKS3989	73	Gear	CNV6726
29	Connector(CN702)	CKS4376	74	Bracket Unit	CXB6083
30	Screw	BPZ20P080FMC	75	Screw	IMS20P030FMC
31	Button(SEEK,TRACK)	CAC6465	76	Chassis Unit	CXB6477
32	Button(RDS,TYPE)	CAC6466	77	Mechanism Assy(Service)	CXX1487
33	Button(1,2)	CAC6467	78	Screw	BMZ20P020FMC
34	Button(3,4)	CAC6468	79	Screw	BMZ26P030FMC
35	Button(5,6)	CAC6469	80	Transistor(Q809,811,812)	2SB1185
36	Button(SCAN,MSG)	CAC6470	81	Screw(M2x2)	CBA1250
37	Button(AM)	CAC6471	82	Spring	CBH2472
38	Button(FM)	CAC6472	83	Spring	CBH2473
39	Button(TAPE)	CAC6473	84	Spring	CBH2478
40	Button(DISC)	CAC6474	85	Tube	CDM1028
41	Button(TAPE EJECT)	CAC6475	86	Chassis	CNA2256
42	Button(LOAD)	CAC6476	87	Case	CNB2549
43	Button(TRAF)	CAC6477	88	Holder	CNC7477
44	Button(CD EJECT)	CAC6493	89	Holder	CNC7826
45	Door	CAT2116	90	Holder	CNC8701

Mark	No.	Description	Part No.
	91	Insulator	CNM5969
	92	Sheet	CNM5981
	93	Sheet	CNM6318
	94	Cushion	CNM7023
	95	PCB	CNP5516
	96	Damper	CNV5120
	97	Holder	CNV5543
	98	Screw	IMS20P040FMC
	99	Cassette Mechanism Module	EXK3891
	100	Screw	IMS26P040FMC
	101	Screw	ISS26P060FMC
	102	Screw	PMB26P060FMC

2.2 CD MECHANISM

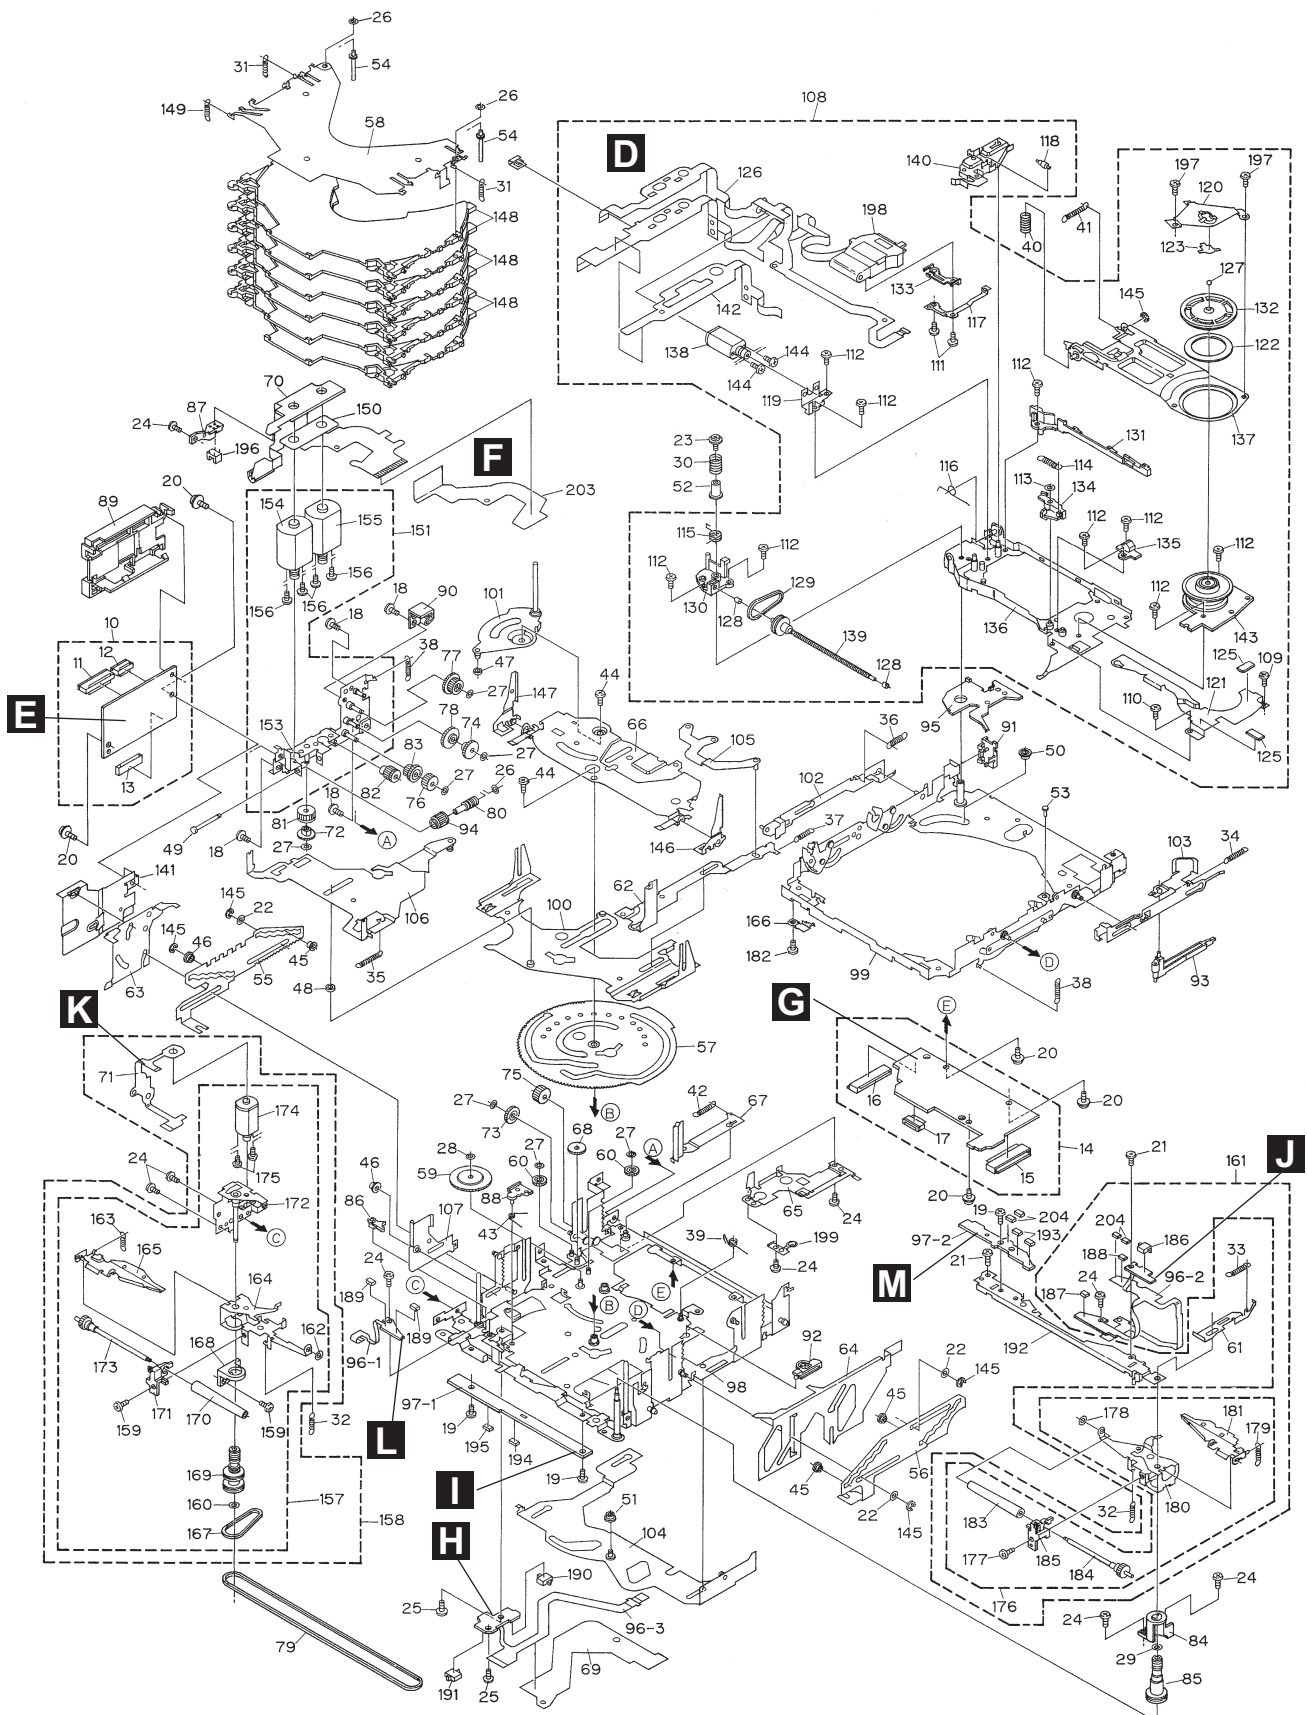


● CD MECHANISM SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1-9	●●●●●		59	Gear	CNC7236
10	CD Core Unit(Servo Unit)	CWX2421	60	Gear	CNC9512
11	Connector(CN101)	CKS2764	61	Lever	CNC7243
12	Connector(CN301)	CKS3966	62	Lever	CNC7244
13	Connector(CN201)	CKS3991	63	Lever	CNC7245
14	CD Core Unit(STS Unit)	CWX2422	64	Lever	CXB4944
15	Connector(CN701)	CKS3989	65	Cover	CNC7441
16	Connector(CN801)	CKS3989	66	Holder Unit	CXB4946
17	Connector(CN802)	CKS4054	67	Lever	CNC9088
18	Screw	CBA1037	68	Gear	CNC8140
19	Screw	CBA1041	69	Sheet	CNM6840
20	Screw	CBA1076	70	PCB	CNP5764
21	Screw	CBA1250	71	PCB	CNP6010
22	Washer	CBA1529	72	Gear	CNR1479
23	Screw	CBA1452	73	Gear	CNR1481
24	Screw	CBA1453	74	Gear	CNR1495
25	Screw	CBA1479	75	Gear	CNR1501
26	Washer	CBF1037	76	Gear	CNR1502
27	Washer	CBF1038	77	Gear	CNR1540
28	Washer	CBF1039	78	Gear	CNR1541
29	Washer	CBF1064	79	Belt	CNT1080
30	Spring	CBH2007	80	Worm Gear	CNV5046
31	Spring	CBH2271	81	Gear	CNV5047
32	Spring	CBH2274	82	Gear	CNV5048
33	Spring	CBH2014	83	Gear	CNV5049
34	Spring	CBH2015	84	Holder	CNV5056
35	Spring	CBH2016	85	Pulley	CNV5058
36	Spring	CBH2017	86	Arm	CNV5061
37	Spring	CBH2290	87	Spacer	CNV5066
38	Spring	CBH2366	88	Arm	CNV5189
39	Spring	CBH2064	89	Cover	CNV5207
40	Spring	CBH2195	90	Cover	CNV5424
41	Spring	CBH2196	91	Cover	CNV5425
42	Spring	CBH2224	92	Lever	CNV5427
43	Spring	CBH2250	93	Arm	CNV5491
44	Screw	CBA1082	94	Gear	CNV5519
45	Roller	CLA3154	95	Holder	CNV5648
46	Roller	CLA3157	* 96	Composite PCB	CNX3501
47	Roller	CLA3159	* 97	Composite PCB	CNX3502
48	Roller	CLA3160	98	Chassis Unit	CXB5940
49	Shaft	CLA3179	99	Frame Unit	CXB5806
50	Spacer	CLA3194	100	Lever Unit	CXB6026
51	Roller	CLA3248	101	Arm Unit	CXB2704
52	Bush	CLA3353	102	Lever Unit	CXB2708
* 53	Shaft	CLA3469	103	Lever Unit	CXB2709
54	Shaft	CLA3693	104	Lever Unit	CXB4949
55	Steer	CNC7215	105	Arm Unit	CXB2712
56	Steer	CNC7216	106	Lever Unit	CXB4948
57	Cam	CNC8774	107	Lever Unit	CXB2714
* 58	Holder	CNC7235	108	Carriage Mechanism Unit(G1)	CXB4941

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	109	Screw	CBA1041		159	Screw	CBA1453
	110	Screw	CBA1250		160	Washer	CBF1038
	111	Screw	CBA1362		161	Loading Arm R Assy(Service)	CXX1486
	112	Screw	CBA1471		162	Washer	CBF1074
	113	Washer	CBF1038		163	Spring	CBH2136
	114	Spring	CBH2008	*	164	Arm	CNC7241
	115	Spring	CBH2009	*	165	Arm	CXB6911
	116	Spring	CBH2010		166	Holder	CBL1508
	117	Spring	CBL1335		167	Belt	CNT1079
	118	Roller	CLA3913		168	Holder	CNV5055
*	119	Bracket	CNC7228		169	Pulley	CNV5057
	120	Guide Unit	CXB4417		170	Roller	CNV6209
	121	Cover	CNC7628		171	Guide	CNV5125
	122	Sheet	CNM6414	*	172	Bracket Unit	CXB5937
	123	Sheet	CNM5378		173	Roller Gear Unit	CXB3176
	124	•••••		*	174	Motor Unit(M2 LOAD)	CXB3177
	125	Sheet	CNM5827		175	Screw	JFZ14P020FMC
	126	PCB	CNP6164		176	Loading Arm R Assy	CXB5839
	127	Ball	CNR1189		177	Screw	CBA1453
	128	Bearing	CNR1423		178	Washer	CBF1074
	129	Belt	CNT1079		179	Spring	CBH2136
	130	Holder	CNV5037	*	180	Arm	CNC7242
	131	Guide	CNV5040	*	181	Arm	CXB6912
	132	Clamper	CNV5042		182	Screw	JFZ20P014FMC
	133	Rack	CNV5111		183	Roller	CNV6209
	134	Arm	CNV5579		184	Roller Gear Unit	CXB3176
	135	Holder	CNV5759		185	Guide	CNV5126
*	136	Chassis	CXB6025		186	Switch(S885 MAX DETECT)	CSN1052
	137	Arm Unit	CXB2705		187	LED(D883)	CL205IRXTU
	138	Motor Unit(M4 CARRIAGE)	CXB3178		188	Photo-transistor(Q881)	CPT230SCTD
	139	Screw Unit	CXB3179		189	LED(D891,892)	CL205IRXTU
	140	Lever Unit	CXB4450		190	Switch(S887 CLAMP)	CSN1051
	141	Bracket	CNC8584		191	Switch(S886 ELV HOME)	CSN1052
	142	Spacer	CNM6345		192	Bracket Unit	CXB6086
	143	Motor(M5 SPINDLE)	CXM1120		193	Photo-transistor(Q851,852)	CPT230SCTD
	144	Screw	JFZ14P020FZK		194	Resistor(R856)	RS1/8S911J
	145	Washer	YE15FUC		195	Resistor(R857)	RS1/8S821J
	146	Arm Unit	CXB6052		196	Photo-interrupter(Q1)	RPI-221
	147	Arm Unit	CXB6053		197	Screw	CBA1387
	148	Tray Assy	CXB4307		198	Pickup Unit(Service)(P8)	CXX1313
	149	Spring	CBH2269		199	Spring	CBL1467
	150	Sheet	CNM7109	200-202	•••••		
	151	Cam Motor Assy	CXB6928		203	Sheet	CNM7025
	152	•••••			204	Inductor(L1,2,801,802)	LCYBR15J1608
*	153	Bracket Unit	CXB5201				
*	154	Motor Unit(M1 Cam Gear)	CXB6929				
*	155	Motor Unit(M3 ELV)	CXB3175				
	156	Screw	JFZ20P025FMC				
	157	Loading Arm L Assy	CXB6957				
	158	Loading Arm L Assy(Service)	CXX1469				

2.3 CASSETTE MECHANISM MODULE

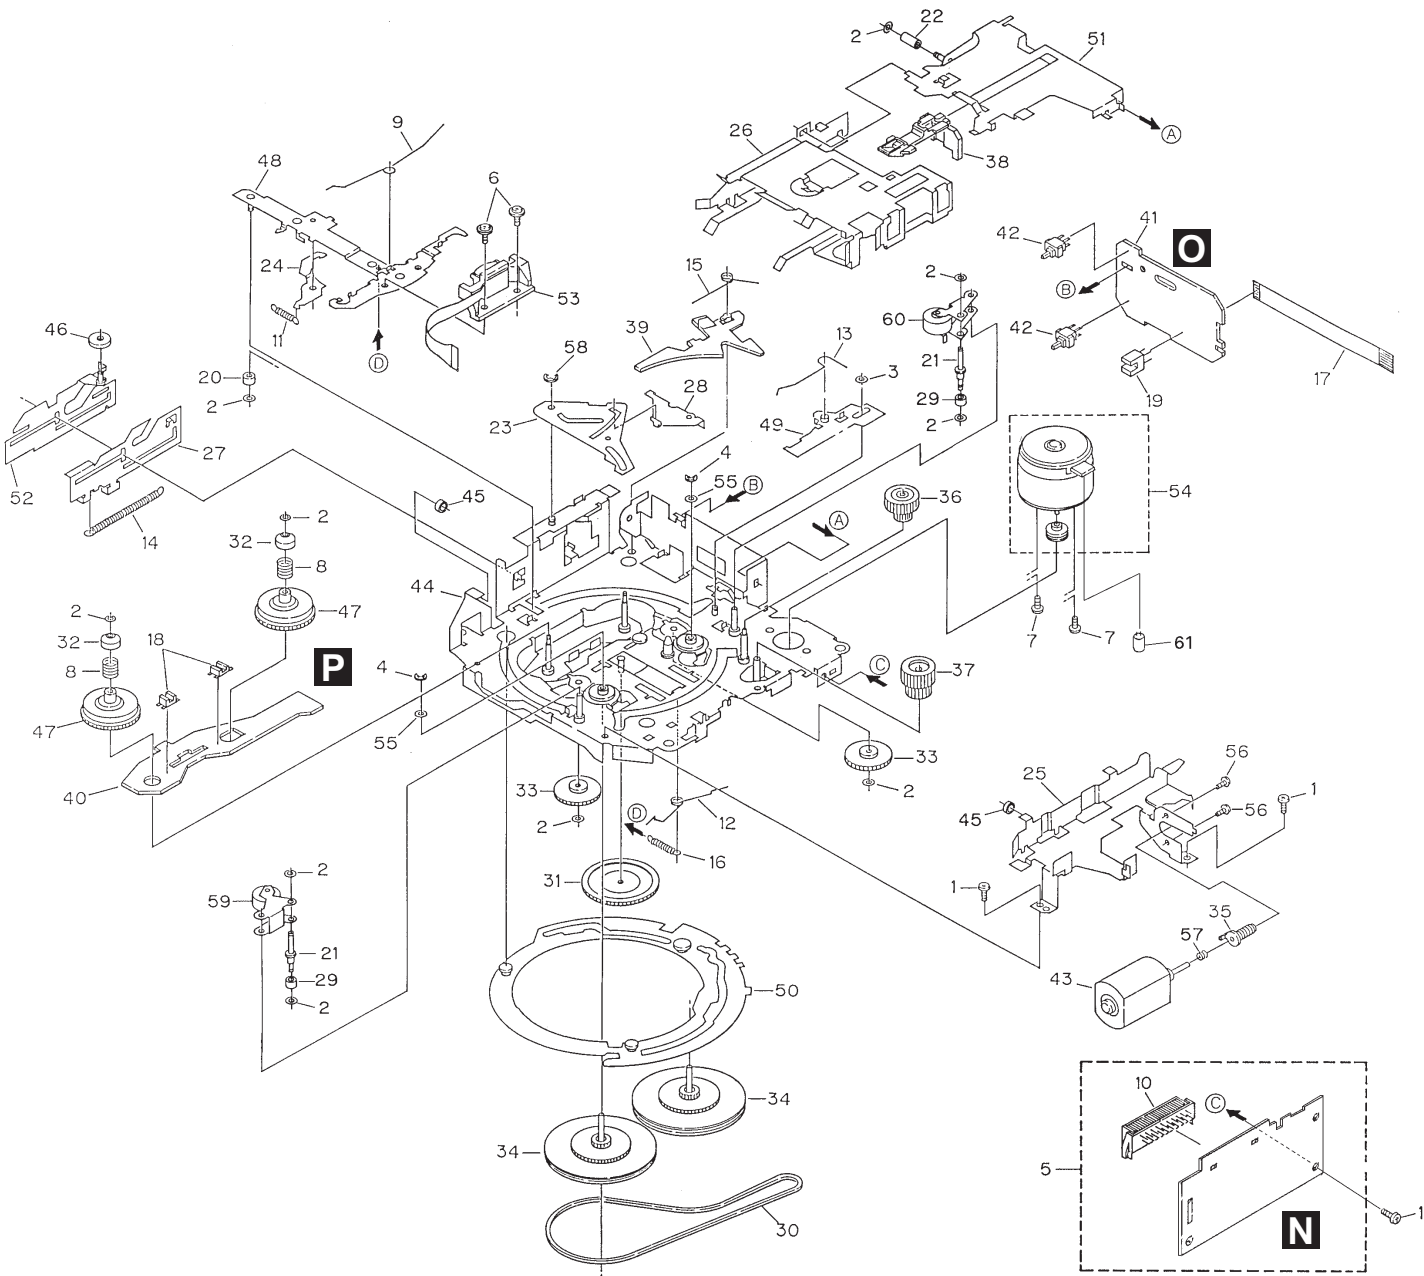

● CASSETTE MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ20P040FMC	31	Gear	ENV1347
2	Washer	CBF1037	32	Collar	ENV1508
3	Washer	CBF1038	33	Gear	ENV1350
4	Washer	CBG1003	34	Flywheel	ENV1500
5	Deck Unit	EWM1030	35	Worm Gear	ENV1439
6	Screw(M2x5)	EBA1028	36	Worm Wheel	ENV1440
7	Screw(M2x2.5)	CBA1037	37	Gear	ENR1037
8	Spring	EBH1531	38	Lever	ENV1533
9	Spring	EBH1589	39	Arm	ENV1525
10	Connector(CN251)	CKS3540	40	Gathering PCB	ENX1037
11	Spring	EBH1515	41	Gathering PCB	ENX1060
12	Spring	EBH1587	42	Switch(S1)(S2)	ESG1004
13	Spring	EBH1517	43	Motor Unit(M2)(SUB)	EXA1382
14	Spring	EBH1518	44	Chassis Unit	EXA1559
15	Spring	EBH1519	45	Tube	ENM1039
16	Spring	EBH1537	46	Roller	ENR1027
17	Cord	EDD1027	47	Reel Unit	EXA1560
18	Photo-interrupter(EGN2,3)	EGN1006	48	Head Base Unit	EXA1434
19	Photo-interrupter(EGN1)	EGN1005	49	Lever Unit	EXA1578
20	Roller	ENR1031	50	Gear Unit	EXA1545
21	Shaft	ELA1362	51	Frame Unit	EXA1476
22	Roller	ELA1348	52	Lever Unit	EXA1439
23	Arm	ENC1490	53	Head Assy(HD1)	EXA1594
24	Arm	ENC1397	54	Motor Unit(M1)(MAIN)	EXA1499
25	Guide	ENC1519	55	Washer	HBF-179
26	Holder	ENC1516	56	Screw	JGZ20P025FNI
27	Lever	ENC1448	57	Spring	EBH1545
28	Arm	ENC1488	58	Washer	YE20FUC
29	Roller	ENR1023	59	Pinch Roller Unit	EXA1533
30	Belt	ENT1027	60	Pinch Roller Unit	EXA1532
			61	Capacitor(C1)	CEAL4R7M35

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor
RS1/○S○○○○J, RS1/○○S○○○○J
Chip Capacitor (except for CQS.....)
CKS....., CCS....., CSZS.....

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
B	Unit Number : CWE1543			VR	101	Semi-fixed 15kΩ(B)	CCP1230
	Unit Name : FM/AM Tuner Unit			VR	151	Semi-fixed 10kΩ(B)	CCP1229
				VR	154	Semi-fixed 150kΩ(B)	CCP1236
				VR	156	Semi-fixed 100kΩ(B)	CCP1235
MISCELLANEOUS				RESISTORS			
IC	1	IC	PA4026A				
IC	2	IC	PA4024A				
Q	1	Chip Transistor	2SC2712	R	3		RS1/16S223J
Q	3	FET	3SK263	R	4		RS1/16S101J
Q	5	Transistor	2SK1067	R	6		RS1/16S101J
				R	8		RS1/16S332J
				R	9		RS1/16S823J
Q	31	Chip Transistor	2SC2712				
Q	151	Transistor	DTC144EU	R	10		RS1/16S223J
Q	165	Transistor	2SC4116	R	11		RS1/16S124J
Q	201	FET	2SK291	R	12		RS1/16S474J
Q	202	Chip Transistor	2SC2712	R	15		RS1/16S161J
				R	16		RS1/16S104J
Q	203	FET	2SK2373				
D	3	Diode	1SV251	R	17		RS1/16S332J
D	4	Diode	1SV250	R	18		RS1/16S332J
D	5	Diode	KV1410-F1	R	19		RS1/16S154J
D	6	Diode	MA157	R	21		RS1/16S332J
				R	22		RS1/16S510J
D	7	Diode	KV1410-F1				
D	8	Diode	KV1410-F1	R	24		RS1/16S101J
D	9	Diode	KV1410-F1	R	25		RS1/16S221J
D	10	Diode	1SV250	R	26		RS1/16S102J
D	201	Diode	MA157	R	31		RS1/16S470J
				R	32		RS1/16S912J
D	202	Diode	1SV251				
D	231	Diode	SVC253	R	33		RS1/16S912J
L	1	Inductor	LCTBR12K2125	R	34		RS1/16S331J
L	2	Air-core Coil	CTC1152	R	35		RS1/16S331J
L	3	Air-core Coil	CTC1152	R	51		RS1/16S331J
				R	55		RS1/16S102J
L	4	Air-core Coil	CTC1151				
L	5	Coil	CTC1147	R	56		RS1/16S823J
L	6	Air-core Coil	CTC1153	R	61		RS1/16S392J
L	40	Inductor	LCTBR15K1608	R	62		RS1/16S273J
L	51	Ferri-Inductor	LAU150K	R	103		RS1/16S333J
				R	104		RS1/16S334J
L	52	Coil	CTC1136				
L	201	Ferri-Inductor	LAU4R7K	R	105		RS1/16S683J
L	202	Ferri-Inductor	LAU330K	R	107		RS1/16S222J
L	203	Inductor	CTF1371	R	152		RS1/16S393J
L	208	Inductor	LAU390K	R	155		RS1/16S393J
				R	157		RS1/10S223J
L	209	Inductor	LCTA680J3225				
L	210	Coil	CTB1103	R	160		RS1/16S222J
L	231	Inductor	LAU3R3J	R	161		RS1/16S563J
T	31	Coil	CTE1116	R	162		RS1/16S225J
TC	1	Trimmer	CCL1019	R	163		RS1/16S222J
				R	164		RS1/16S823J
TC	2	Trimmer	CCL1019				
TC	3	Trimmer	CCL1019	R	165		RS1/16S102J
CF	25	Ceramic Filter	CTF1292	R	201		RS1/16S103J
CF	51	Ceramic Filter	CTF1292	R	202		RS1/16S103J
CF	52	Ceramic Filter	CTF1292	R	203		RS1/16S225J
				R	204		RS1/16S472J
CF	53	Ceramic Filter	CTF1292				
CF	230	Crystal Filter	CTF1262	R	205		RS1/16S471J
CF	232	Ceramic Filter	CTF1348	R	206		RS1/16S220J
X	151	Radiator 918.5Hz	CSS1365	R	207		RS1/16S101J
X	231	Crystal Resonator 10.26MHz	CSS1111	R	208		RS1/16S102J
				R	210		RS1/16S125J

====Circuit Symbol and No.===Part Name		Part No.	====Circuit Symbol and No.===Part Name		Part No.	
R	211	RS1/16S223J	C	157	CEAL3R3M50	
R	214	RS1/16S393J	C	158	CKSYB474K16	
R	215	RS1/16S104J	C	159	CEAL220M6R3	
R	230	RS1/16S0R0J	C	160	CKSQYB104K16	
R	231	RS1/16S242J	C	161	CKSQYB104K16	
R	232	RS1/16S473J	C	162	CEAL3R3M50	
R	237	RS1/16S103J	C	163	CKSRYB102K50	
R	238	RS1/16S104J	C	165	CCSRCH100D50	
R	239	RS1/16S104J	C	201	CKSRYB103K25	
R	240	RS1/16S103J	C	202	CCSRCH100D50	
R	241	RS1/16S202J	C	203	CKSRYB332K50	
R	243	RS1/16S123J	C	204	CKSQYB473K16	
R	244	RS1/16S103J	C	205	CKSQYB473K16	
R	246	RS1/16S0R0J	C	206	CKSRYB103K25	
R	247	RS1/10S303J	C	207	CCSRCH120J50	
R	248	RS1/16S0R0J	C	211	CCSRCH560J50	
R	250	RS1/16S0R0J	C	212	CEAL680M10	
CAPACITORS						
C	1	CCSRCH220J50	C	213	CKSRYB103K25	
C	2	CKSRYB222K50	C	214	CKSQYB225K10	
C	3	CCSRCH4R0D50	C	215	CCSRCH680J50	
C	5	CKSRYB222K50	C	216	CCSRCH101J50	
C	6	CKSQYB473K16	C	217	CEAL2R2M50	
C	7	CKSQYB473K16	C	219	CKSRYB223K25	
C	8	CKSQYB104K16	C	220	CKSRYB103K25	
C	9	CKSRYB222K50	C	221	CKSRYB103K25	
C	10	CEAL1R0M50	C	230	CKSQYB104K16	
C	11	CCSRCH470J50	C	231	CCSRCH330J50	
C	12	CCSRCJ3R0C50	C	232	CCSRCH150J50	
C	13	CKSRYB222K50	C	233	CKSRYB103K25	
C	15	CCSRCJ3R0D50	C	234	CEJA330M10	
C	17	CCSRCH120J50	C	235	CKSRYB332K50	
C	18	CKSRYB103K25	C	236	CKSQYB473K16	
C	19	CCSRCH120J50	C	237	CCSRTH180J50	
C	20	CKSRYB222K50	C	239	CKSRYB103K25	
C	21	CEAL100M16	C	240	CKSYB104K16	
C	22	CCSRRH100D50	C	241	CKSQYB104K16	
C	23	CCSRRH150J50	C	242	CEALR47M50	
C	24	CCSRCH471J50	C	244	CKSQYB473K16	
C	30	CCSRRH201J50	C	245	CKSQYB103K25	
C	31	CKSRYB103K25	C	248	CKSQYB334K16	
C	32	CKSQYB473K16	C	250	CCSRCJ3R0C50	
C	33	CCSRCH220J50	A Unit Number : CWM7046 Unit Name : Main Unit			
C	34	CCSRCH4R0D50	MISCELLANEOUS			
C	41	CKSQYB104K16				
C	51	CKSRYB223K25				
C	52	CKSRYB103K25	IC	201	IC	PM2007A
C	54	CCSRCH470J50	IC	251	IC	NJM2903M
C	55	CKSQYB223K25	IC	252	IC	PM4006B
C	56	CKSQYB104K16	IC	301	IC	NJM2068MD
C	57	CKSRYB472K50	IC	302	IC	NJM2068MD
C	58	CEJA330M10				
C	59	CKSRYB103K25	IC	303	IC	NJM2068MD
C	61	CCSRCH270J50	IC	305	IC	TC74HC4066AF
C	62	CKSRYB103K25	IC	501	IC	LA1061M
C	63	CEALR22M50	IC	553	IC	HA12181FP
C	65	CKSQYB104K16	IC	601	IC	PD5569A
C	101	CEALNP100M10				
C	102	CKSRYB182K50	IC	602	IC	HA12187FP
C	103	CKSQYB682K50	IC	603	IC	S-80730ANDT
C	104	CEAL2R2M50	Q	202	Chip Transistor	2SC2712
C	105	CKSRYB103K25	Q	251	Chip Transistor	2SC2712
C	106	CCSRCH151J50	Q	301	Transistor	FMG13
C	107	CKSRYB103K25	Q	303	Transistor	FMG13
C	151	CKSRYB562K25	Q	304	Transistor	FMG13
C	152	CKSQYB104K16	Q	305	Transistor	DTA114EK
C	153	CEAL3R3M50	Q	307	Transistor	IMD3A
C	154	CKSQYB104K16	Q	308	Transistor	DTC144TK

62

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
R 225	RS1/10S102J	R 349	RS1/10S392J
R 226	RS1/10S102J	R 351	RS1/10S0R0J
R 227	RS1/10S102J	R 352	RS1/10S0R0J
R 228	RS1/10S103J	R 353	RS1/10S0R0J
R 229	RS1/10S473J	R 401	RS1/10S272J
R 231	RS1/10S105J	R 402	RS1/10S272J
R 232	RS1/10S151J	R 403	RS1/10S222J
R 233	RS1/10S0R0J	R 405	RS1/10S102J
R 251	RS1/10S102J	R 406	RS1/10S102J
R 252 1kΩ	CCN1120	R 407	RS1/10S182J
R 256	RS1/10S102J	R 408	RS1/10S182J
R 257	RS1/10S102J	R 409	RS1/10S222J
R 258	RS1/10S0R0J	R 411	RS1/10S683J
R 259	RS1/10S333J	R 412	RS1/10S683J
R 260	RS1/10S104J	R 413	RS1/10S183J
R 261	RS1/10S104J	R 414	RS1/10S183J
R 262	RS1/10S681J	R 415	RS1/10S103J
R 263	RS1/10S684J	R 416	RS1/10S103J
R 264	RS1/10S222J	R 434	RS1/10S224J
R 265	RS1/10S222J	R 435	RS1/10S224J
R 266	RS1/10S562J	R 436	RS1/10S224J
R 267	RS1/10S222J	R 437	RS1/10S222J
R 268	RS1/10S102J	R 438	RS1/10S222J
R 271	RS1/10S562J	R 501	RS1/10S104J
R 301	RS1/10S182J	R 502	RS1/10S103J
R 302	RS1/10S182J	R 503	RS1/10S103J
R 303	RS1/10S473J	R 504	RS1/10S334J
R 304	RS1/10S473J	R 505	RS1/10S101J
R 307	RS1/10S363J	R 506	RS1/10S101J
R 308	RS1/10S363J	R 507	RS1/10S104J
R 309	RS1/10S473J	R 508	RS1/10S104J
R 310	RS1/10S473J	R 509	RS1/10S103J
R 311	RS1/10S563J	R 510	RS1/10S182J
R 312	RS1/10S563J	R 511	RS1/10S683J
R 313	RS1/10S102J	R 512	RS1/10S153J
R 314	RS1/10S102J	R 513	RS1/10S103J
R 315	RS1/10S473J	R 514	RS1/10S224J
R 316	RS1/10S473J	R 515	RS1/10S473J
R 319	RS1/10S223J	R 516	RS1/10S473J
R 320	RS1/10S223J	R 517	RS1/10S102J
R 321	RS1/10S223J	R 519	RS1/10S393J
R 322	RS1/10S223J	R 521	RS1/10S103J
R 323	RS1/10S222J	R 522	RS1/10S114J
R 324	RS1/10S222J	R 523	RS1/10S273J
R 325	RS1/10S222J	R 525	RS1/10S103J
R 326	RS1/10S222J	R 530	RS1/10S225J
R 327	RS1/10S510J	R 531	RS1/10S225J
R 328	RS1/10S510J	R 532	RS1/10S225J
R 329	RS1/10S510J	R 533	RS1/10S225J
R 330	RS1/10S510J	R 536	RS1/10S472J
R 333	RS1/10S510J	R 537	RS1/10S471J
R 334	RS1/10S510J	R 538	RS1/10S102J
R 335	RS1/10S510J	R 541	RS1/10S103J
R 336	RS1/10S510J	R 570	RS1/10S104J
R 337	RS1/10S103J	R 571	RS1/10S123J
R 339	RS1/10S392J	R 572	RS1/10S105J
R 340	RS1/10S392J	R 573	RS1/10S822J
R 341	RS1/10S473J	R 574	RS1/10S822J
R 342	RS1/10S473J	R 575	RS1/10S222J
R 343	RS1/10S472J	R 576	RS1/10S184J
R 344	RS1/10S102J	R 577	RS1/10S223J
R 345	RS1/10S223J	R 578	RS1/10S473J
R 346	RS1/10S103J	R 601	RS1/10S102J
R 347	RS1/10S104J	R 602	RS1/10S222J
R 348	RS1/10S153J	R 603	RS1/10S222J

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
R	604		RS1/10S471J	R	828		RS1/10S102J
R	605		RA3C102J	R	829		RS1/10S223J
R	607		RS1/10S473J	R	830		RS1/10S221J
R	608		RS1/10S102J	R	831		RS1/10S331J
R	609		RS1/10S681J	R	832		RS1/10S471J
R	610		RS1/10S102J				
R	611		RS1/10S473J	R	833		RS1/10S102J
R	612		RA2CQ102J	R	840		RS1/4S1R5J
R	613		RS1/10S473J	R	841		RS1/4S1R5J
R	614		RS1/10S0R0J	R	842		RS1/4S1R5J
				R	843		RS1/4S1R5J
R	616		RS1/10S473J				
R	617		RS1/10S102J	R	844		RS1/10S471J
R	618		RS1/10S472J	R	845		RS1/10S471J
R	619		RA2CQ102J	R	846		RS1/10S105J
R	620		RA2CQ473J	R	847		RS1/10S361J
				R	848		RS1/10S152J
R	621		RA3C102J				
R	622		RA3C473J	R	849		RS1/10S242J
R	623		RA3C103J	R	850		RS1/4S2R2J
R	624		RS1/10S103J	R	851		RS1/10S471J
R	625		RA3C102J	R	852		RS1/10S105J
				R	853		RS1/10S102J
R	626		RA3C473J				
R	627	1kΩ	CCN1120	R	854		RS1/10S152J
R	628	47kΩ	CCN1131	R	855		RS1/10S242J
R	629		RS1/10S473J	R	856		RS1/10S103J
R	631		RA3C102J	R	857		RS1/10S332J
				R	858		RS1/8S821J
R	632	1kΩ	CCN1120				
R	633		RS1/10S473J	R	859		RS1/10S103J
R	634		RS1/10S473J	R	860		RS1/10S103J
R	635		RS1/10S102J	R	861		RS1/10S332J
R	637		RA3C104J	R	862		RS1/10S332J
				R	863		RS1/10S332J
R	639		RS1/10S223J				
R	640	1kΩ	CCN1120	R	864		RS1/10S332J
R	641	47kΩ	CCN1131	R	865		RS1/10S332J
R	642		RS1/10S102J	R	866		RS1/10S332J
R	643		RA3C102J	R	869		RS1/10S103J
				R	870		RS1/4S391J
R	644		RS1/10S681J				
R	645		RA2CQ102J	R	871		RD1/4PU221J
R	646		RS1/10S102J	R	873		RS1/10S223J
R	647		RS1/10S473J	R	874		RS1/10S103J
R	648		RS1/10S102J	R	875		RS1/10S473J
				R	881		RS1/10S103J
R	649		RS1/10S473J				
R	650		RS1/10S102J	R	882		RS1/10S103J
R	651		RS1/10S104J	R	891		RD1/4PU221J
R	652		RS1/4S101J	R	892		RD1/4PU221J
R	653		RS1/4S101J	R	893		RS1/10S223J
				R	894		RS1/10S223J
R	654		RS1PMF680J				
R	655		RS1/8S221J	R	895		RS1/10S103J
R	658		RS1/10S473J	R	896		RS1/10S103J
R	660		RS1/10S0R0J	R	897		RS1/10S473J
R	801		RS1/8S222J	R	898		RS1/10S473J
R	802		RS1/8S472J	CAPACITORS			
R	803		RS1/8S472J				
R	804		RS1/8S472J	C	201		CKSQYB103K50
R	805		RS1/8S472J	C	202		CKSQYB103K50
R	806		RS1/8S472J	C	203		CKSQYB473K50
				C	205		CCSQCH101J50
				C	206		CKSQYB223K50
R	807		RS1/8S221J				
R	810		RS1/10S104J				
R	812		RS1/10S104J	C	207		CKSQYB473K50
R	814		RS1/10S104J	C	208		CEJA101M10
R	815		RS1/10S223J	C	209		CEJA220M10
				C	210		CKSQYB103K50
				C	211		CKSQYB103K50
R	816		RS1/10S102J				
R	819		RS1/10S102J				
R	820		RS1/10S123J	C	212		CEJA220M10
R	821		RS1/10S103J	C	213		CKSQYB103K50
R	822		RS1/10S103J	C	215	4.7μF/10V	CCH1280
				C	216		CKSQYB103K50
				C	220		CKSQYB103K50
R	823		RS1/10S223J				
R	824		RS1/10S102J				
R	825		RS1/10S331J				
R	826		RS1/10S103J				
R	827		RS1/10S471J				

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.
C 221 4.7μF/10V	CCH1280	C 408	CKSQYB103K50
C 223	CKSQYB103K50	C 413 4.7μF/35V	CCH1016
C 224	CCSQCH150J50	C 414 4.7μF/35V	CCH1016
C 225	CCSQCH120J50	C 415	CCSQCH101J50
C 226	CKSQYB102K50	C 416	CCSQCH101J50
C 227	CKSQYB103K50	C 434	CKSQYB153K50
C 229	CKSQYB471K50	C 435	CKSQYB105K16
C 251	CKSQYB104K50	C 436	CEJA101M10
C 253	CEAL4R7M35	C 503	CKSQYB222K50
C 254	CKSQYB473K50	C 504	CKSQYB222K50
C 256	CCSQCH220J50	C 505	CKSQYB222K50
C 257	CCSQCH220J50	C 507	CKSQYB103K50
C 258	CKSQYB472K50	C 508	CKSQYB103K50
C 259	CKSQYB104K50	C 509	CEAL100M16
C 260	CKSQYB105K16	C 510	CKSQYB472K50
C 261	CKSQYB104K50	C 511	CEAL100M16
C 262	CKSQYB222K50	C 512	CKSQYB473K50
C 264	CKSQYB103K50	C 513	CEAL2R2M50
C 265	CKSQYB103K50	C 514	CKSQYB102K50
C 266	CKSQYB223K50	C 515	CKSQYB103K50
C 267	CKSQYB104K50	C 516	CKSQYB103K50
C 301 4.7μF/35V	CCH1016	C 517	CKSQYB392K50
C 302 4.7μF/35V	CCH1016	C 519	CKSQYB472K50
C 305 4.7μF/35V	CCH1016	C 521	CKSQYB222K50
C 306 4.7μF/35V	CCH1016	C 522	CKSQYB104K25
C 307 4.7μF/35V	CCH1016	C 523	CKSQYB102K50
C 308 4.7μF/35V	CCH1016	C 535	CKSQYB103K50
C 309	CCSQCH120J50	C 536	CKSQYB103K50
C 310	CCSQCH120J50	C 537	CKSQYB103K50
C 311 4.7μF/35V	CCH1016	C 581	CEAL3R3M50
C 312 4.7μF/35V	CCH1016	C 582	CKSQYB333K50
C 313 4.7μF/35V	CCH1016	C 583	CEALNP1R0M50
C 314 4.7μF/35V	CCH1016	C 584	QMA683J50
C 315	CCSQCH330J50	C 585	QMA333J50
C 316	CCSQCH330J50	C 586	QMA333J50
C 317	CKSQYB331K50	C 587	QMA333J50
C 318	CKSQYB331K50	C 588	CKSQYB393K50
C 319	CKSQYB682K50	C 589	CKSQYB682K50
C 320	CKSQYB682K50	C 590	CKSQYB682K50
C 321	CKSQYB682K50	C 591	CKSQYB392K50
C 322	CKSQYB682K50	C 592	CKSQYB102K50
C 323	CEALNP4R7M16	C 593	CKSQYB334K16
C 324	CEALNP4R7M16	C 594	CKSQYB334K16
C 325	CEALNP4R7M16	C 601	CKSQYB102K50
C 326	CEALNP4R7M16	C 603	CEAL100M16
C 327	CCSQCH101J50	C 604	CKSQYB104K50
C 328	CCSQCH101J50	C 605	CKSQYB103K50
C 329	CCSQCH101J50	C 606	CCSQCH101J50
C 330	CCSQCH101J50	C 607	CCSQCH101J50
C 331	CKSQYB224K16	C 608	CCSQCH101J50
C 333	CKSQYB103K50	C 609	CCSQCH101J50
C 334	CEAL101M6R3	C 610	CCSQCH101J50
C 335	CEJA470M10	C 611	CCSQCH101J50
C 336	CKSQYB103K50	C 612	CCSQCH101J50
C 337	CEAL4R7M35	C 615	CCSQCH101J50
C 339 4.7μF/35V	CCH1016	C 616	CCSQCH101J50
C 340 4.7μF/35V	CCH1016	C 619	CCSQCH101J50
C 341	CEAL100M16	C 625	CKSQYB103K50
C 343	CCSQCH101J50	C 626	CKSQYB103K50
C 344	CCSQCH101J50	C 627	CKSQYB221K50
C 401	CKSQYB224K25	C 628	CKSQYB221K50
C 402	CKSQYB224K25	C 648	CKSQYB102K50
C 405	CKSQYB273K50	C 650	CKSQYB102K50
C 406	CKSQYB273K50	C 655	CKSQYB473K50
C 407	CKSQYB103K50	C 801	CKSQYB102K50

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
C	802	2200μF/16V	CEAL1R0M50	R	721		RS1/10S102J
C	803		CKSQYB102K50	R	722		RA2CQ222J
C	804		CCH1186	R	723		RA2CQ473J
C	805		CKSQYB473K50	R	724		RS1/10S102J
C	806		CKSQYB102K50	R	725		RA3C471J
C	807	2200μF/16V	CEAL1R0M50	R	726	470Ω	RA2CQ102J
C	808		CKSQYB102K50	R	727		RA2CQ102J
C	809		CCH1186	R	728		CCN1117
C	811		CCSQCH101J50	R	729		CCN1117
C	812		CKSQYB103K50	R	730		CCN1117
C	813	100μF/10V	CEJA221M6R3	R	731	2.2kΩ	RS1/10S471J
C	814		CEAL1R0M50	R	732		RS1/10S912J
C	815		CEAL1R0M50	R	733		RS1/10S102J
C	816		CKSQYB103K50	R	734		CCN1121
C	817		CCH1402	R	735		RS1/10S273J
C	818	100μF/10V	CKSQYB103K50	R	736		RS1/10S512J
C	819		CCH1282	R	737		RS1/10S104J
C	820		CKSQYB103K50	R	738		RS1/10S154J
C	824		CKSQYB472K50	R	739		RS1/10S183J
C	825		CCH1402	R	740		RS1/10S102J
C	826	CKSQYB472K50	CAPACITORS				
C	828	CKSQYB102K50	C	701	CKSYB102K50		
C	829	CKSQYB103K50	C	702	CKSQYB102K50		
C	830	CKSQYB103K50	C	704	CKSQYB102K50		
C	831	CKSQYB103K50	C	705	CKSQYB102K50		
C	832	CKSQYB103K50	C	706	CKSQYB102K50		
C	861	CKSQYB223K50	C	709	CCSQCH101J50		
C	862	CKSQYB223K50	C	711	CKSQYB102K50		
C	863	CKSQYB223K50	C	712	CKSQYB102K50		
C	871	CKSQYB103K50	C	714	CCSQCH180J50		
C	891	CKSQYB103K50	C	715	CCSQCH180J50		
C	892	CKSQYB103K50	C	716	CKSQYB102K50		
				C	717	CKSQYB102K50	
				C	718	CKSQYB102K50	
				C	719	CKSQYB102K50	
				C	721	CKSQYB102K50	
				C	722	CKSQYB105K10	
				C	723	CKSQYB103K50	
				C	724	CKSQYB102K50	
				C	725	CKSQYB102K50	
				C	726	CKSQYB102K50	
TH	701	Thermistor	CCX1036	C	727		CKSQYB102K50
X	701	Ceramic Resonator 6.290MHz	CSS1367	C	728		CKSQYB102K50
RESISTORS				C Unit Number : CWS1332 Unit Name : Keyboard Unit			
R	701		RS1/10S433J	MISCELLANEOUS			
R	702		RS1/10S103J	IC	901	IC	LC75804W
R	703		RS1/10S222J	Q	901	Transistor	2SB1132
R	704		RS1/8S103J	Q	902	Transistor	DTC123YK
R	705		RS1/10S102J	D	901	Chip LED	NSCW310-0371
R	706	330Ω	RA2CQ222J	D	902	Chip LED	NSCW310-0371
R	707		RA2CQ103J	D	904	Chip LED	NSCW310-0371
R	708		CCN1116	D	905	Chip LED	NSCW310-0371
R	709		RA2CQ222J	D	907	Diode	DAP202K
R	710		RS1/10S104J	D	908	Diode	1SS355
R	711		RS1/10S331J	D	909	Diode	1SS355
R	712		RS1/10S103J	D	910	Diode	1SS355
R	713		RS1/10S102J	D	911	Diode	1SS355
R	714		RA2CQ222J	D	912	Diode	1SS355
R	715		RA2CQ103J	D	913	LED	SML210FT
R	716		RA2CQ102J	D	914	LED	SML210FT
R	717		RS1/10S102J				
R	718		RS1/10S471J				
R	719		RS1/10S102J				
R	720		RA2CQ471J				

====Circuit Symbol and No.==Part Name

Part No.

D 920 Diode
S 924 Switch(DC/CLOSE)
IL 901 Lamp 8V 60mA
IL 902 Lamp 8V 60mA
IL 903 Lamp 8V 60mA

HZU4R7(B3)
CSN1051
CEL1685
CEL1685
CEL1686

IL 904 Lamp 8V 60mA
IL 905 Lamp 8V 60mA
IL 906 Lamp 8V 60mA
IL 907 Lamp 8V 60mA
IL 908 Lamp 8V 60mA

CEL1686
CEL1686
CEL1686
CEL1685
CEL1685

IL 909 Lamp 8V 60mA
IL 910 Lamp 8V 60mA
IL 911 Lamp 8V 60mA
IL 912 Lamp 8V 60mA
IL 913 Lamp 8V 60mA

CEL1685
CEL1685
CEL1685
CEL1685
CEL1685

IL 914 Lamp 8V 60mA
VR 901 Encoder
VR 902 Encoder
LCD 901 LCD

CEL1685
CSD1065
CSD1048
CAW1690

RESISTORS

R 901
R 902
R 904
R 905
R 907

RS1/10S241J
RS1/10S241J
RS1/10S241J
RS1/10S241J
RS1/16S223J

R 908
R 909 1kΩ
R 910 1kΩ
R 912
R 914 1kΩ

RS1/16S223J
CCN1120
CCN1120
RS1/16S681J
CCN1120

R 917
R 918
R 919
R 920
R 921

RS1/16S102J
RS1/16S103J
RS1/16S223J
RS1/10S561J
RS1/10S222J

R 923
R 924
R 925
R 933 1kΩ
R 934

RS1/10S222J
RS1/10S222J
RS1/16S393J
CCN1120
RS1/10S241J

R 935
R 936
R 937
R 938
R 939

RS1/10S161J
RS1/10S241J
RS1/10S103J
RS1/10S0R0J
RS1/10S0R0J

CAPACITORS

C 901
C 902
C 904
C 905
C 907

CKSQYB104K50
CKSQYB104K50
CKSQYB104K50
CKSQYB104K50
CCSRCH101J50

C 908
C 909
C 910
C 911
C 913

CCSRCH101J50
CKSRYB474K10
CKSRYB103K50
CKSRYB104K16
CKSRYB104K16

C 914
C 917
C 919
C 923
C 924

CKSRYB104K16
CKSRYB102K50
CKSQYB104K50
CCSRCH101J50
CCSRCH101J50

C 925
C 926

CCSRCH101J50
CCSRCH101J50

====Circuit Symbol and No.==Part Name

Part No.



Unit Number : CWX2421

Unit Name : CD Core Unit(Servo Unit)

MISCELLANEOUS

IC 101 IC
IC 201 IC
IC 301 IC
Q 101 Transistor
Q 102 Transistor

UPC2572GS
UPD63702AGF
BA5986FM
2SD1664
UMD2N

D 301 Diode
L 201 Inductor
L 202 Inductor
X 201 Ceramic Resonator 16.934MHz
EF 201 Filter

1SR154-400
LCYBR15J1608
LCYBR15J1608
CSS1457
CCG1076

EF 202 Filter

CCG1076

RESISTORS

R 101
R 102
R 104
R 105
R 106

RS1/8S100J
RS1/8S120J
RS1/16S822J
RS1/16S682J
RS1/16S183J

R 107
R 108
R 109
R 110
R 111

RS1/16S822J
RS1/16S333J
RS1/16S683J
RS1/16S134J
RS1/16S273J

R 112
R 113
R 114
R 115
R 116

RS1/16S222J
RS1/16S103J
RS1/16S103J
RS1/16S102J
RS1/16S163J

R 117
R 120
R 121
R 201
R 202

RS1/16S163J
RS1/16S101J
RS1/16S101J
RS1/16S104J
RS1/16S103J

R 203
R 204
R 205
R 206
R 250

RS1/16S332J
RS1/16S752J
RS1/16S752J
RS1/16S101J
RS1/16S331J

R 251
R 252
R 253
R 254
R 255

RS1/16S331J
RS1/16S331J
RS1/16S331J
RS1/16S331J
RS1/16S471J

R 256
R 263
R 270
R 271
R 274

RS1/16S471J
RS1/16S471J
RS1/16S101J
RS1/16S101J
RS1/16S471J

R 277
R 301
R 302
R 303
R 304

RS1/16S471J
RS1/16S103J
RS1/16S153J
RS1/16S103J
RS1/16S273J

R 305
R 306
R 307
R 308
R 309

RS1/16S103J
RS1/16S752J
RS1/16S103J
RS1/16S103J
RS1/16S471J

R 311

RS1/16S471J

====Circuit Symbol and No.====Part Name	Part No.
CAPACITORS	
C 101	CEV101M6R3
C 102	CKSQYB104K16
C 103	CEV470M6R3
C 104	CKSQYB334K16
C 105	CCSRCH240J50
C 106	CKSRYB222K50
C 107	CEV4R7M35
C 108	CKSRYB273K25
C 109	CCSRCH101J50
C 110	CKSQYB104K16
C 111	CKSRYB332K50
C 112	CKSQYB473K16
C 113	CKSRYB103K25
C 114	CKSRYB391K50
C 115	CCSRCH121J50
C 116	CKSRYB682K50
C 117	CKSRYB333K16
C 118	CKSQYB334K16
C 119	CKSQYB334K16
C 120	CKSQYB334K16
C 121	CKSQYB334K16
C 122	CKSQYB104K16
C 123	CKSRYB472K50
C 124	CKSQYB104K16
C 125	CCSRCH5R0C50
C 126	CKSRYB153K25
C 127	CKSRYB102K50
C 201	CKSQYB334K16
C 202	CKSQYB104K16
C 203	CKSQYB104K16
C 204	CKSRYB471K50
C 207	CKSQYB683K16
C 208	CKSRYB821K50
C 209	CKSRYB273K25
C 210	CKSQYB334K16
C 211	CKSQYB334K16
C 212	CKSQYB334K16
C 213	CCH1349
C 301	CEV101M10
C 302	CEV101M10

G Unit Number : CWX2422
Unit Name : CD Core Unit(STS Unit)

MISCELLANEOUS

IC 501	IC	CXD2511R
IC 502	IC	MSM514400DP-60TS
IC 601	IC	AK4321VF
IC 701	IC	BA05SFP
IC 801	IC	LB1836M
IC 802	IC	LB1836M
Q 801	Transistor	DTA123JK
Q 802	Transistor	UN2211
D 701	Diode	1SR154-400
D 702	Diode	1SR154-400
D 703	Diode	1SS355
D 704	Diode	1SS355
D 705	Diode	1SS355
D 706	Diode	1SS355
D 707	Diode	1SS355
D 708	Diode	1SS355
S 801	Spring Switch(LOAD)	CSN1052
S 802	Spring Switch(DOOR)	CSN1052
S 803	Spring Switch(MODE)	CSN1052
EF 701	Filter	CCG1051

====Circuit Symbol and No.====Part Name	Part No.
EF 702	Filter
EF 703	Filter
RESISTORS	
R 501	RS1/16S102J
R 502	RS1/16S202J
R 503	RS1/16S392J
R 504	RS1/16S822J
R 505	RS1/16S163J
R 506	RS1/16S512J
R 507	RS1/16S182J
R 508	RS1/16S222J
R 509	RS1/16S102J
R 510	RS1/16S102J
R 511	RS1/16S102J
R 512	RS1/16S102J
R 513	RS1/16S102J
R 514	RS1/16S471J
R 601	RS1/16S101J
R 602	RS1/16S101J
R 603	RS1/16S471J
R 604	RS1/16S471J
R 702	RS1/10S100J
R 716	RS1/16S471J
R 717	RS1/16S471J
R 718	RS1/16S471J
R 801	RS1/10S102J

CAPACITORS

C 501	CKSQYB334K16
C 502	CKSQYB334K16
C 503	CKSQYB334K16
C 504	CCSRCH471J50
C 506	CCSRCH221J50
C 601	CKSQYB334K16
C 602	CCSRCH221J50
C 603	CKSQYB334K16
C 604	CKSQYB334K16
C 605	CSZSR100M10
C 606	CKSQYB334K16
C 701	CCH1349
C 702	CEVL101M6R3
C 703	CKSQYB334K16
C 704	CKSQYB334K16
C 705	CCSRCH151J50
C 706	CCSRCH151J50
C 707	CCSRCH151J50
C 801	CKSQYB104K25
C 802	CKSQYB104K25

C 803 CEVL220M16

L Unit Number :
Unit Name : PCB Unit(A)

D 891	Chip LED	CL205IRXTU
D 892	Chip LED	CL205IRXTU

H Unit Number :
Unit Name : PCB Unit(B)

S 886	Spring Switch(ELV Home)	CSN1052
S 887	Spring Switch(Clamp)	CSN1051

J Unit Number :
Unit Name : PCB Unit(C)

Q 881	Photo-transistor	CPT230SCTD
D 883	Chip LED	CL205IRXTU
S 885	Spring Switch(MAX DETECT)	CSN1052
L 801	Inductor	LCYBR15J1608
L 802	Inductor	LCYBR15J1608

====Circuit Symbol and No.==Part Name

Part No.

M Unit Number :
Unit Name : PCB Unit(D)

Q	851	Photo-transistor	CPT230SCTD
Q	852	Photo-transistor	CPT230SCTD
L	1	Inductor	LCYBR15J1608
L	2	Inductor	LCYBR15J1608

I Unit Number :
Unit Name : PCB Unit(E)

R	856	RS1/8S911J
R	857	RS1/8S821J

F Unit Number :
Unit Name : Motor PCB(A)

Q	1	Photo-interrupter	RPI-221
M	1	Motor Unit(Cam Gear)	CXB6929
M	3	Motor Unit(ELV)	CXB3175

D Unit Number :
Unit Name : Motor PCB(B)

M	4	Motor Unit(Carriage)	CXB3178
M	5	Motor(Spindle)	CXM1120

K Unit Number :
Unit Name : Load Motor PCB

M	2	Motor Unit(Load)	CXB3177
---	---	------------------	---------

N Unit Number : EWM1030
Unit Name : Deck Unit

MISCELLANEOUS

IC	251	IC	HA12216F
IC	351	IC	PA2020A
Q	271	Transistor	2SC4116
Q	351	Transistor	2SB1260
Q	352	Transistor	2SC4102

D	351	Diode	1SS355
VR	301	Semi-fixed 33kΩ(B)	CCP1280
VR	302	Semi-fixed 33kΩ(B)	CCP1280

RESISTORS

R	255	RS1/16S181J
R	256	RS1/16S181J
R	257	RS1/16S183J
R	258	RS1/16S183J
R	259	RS1/16S133J

R	260	RS1/16S133J
R	261	RS1/16S274J
R	262	RS1/16S274J
R	271	RS1/16S183J
R	272	RS1/8S0R0J

R	273	RS1/8S0R0J
R	275	RS1/16S473J
R	276	RS1/16S104J
R	277	RS1/16S224J
R	278	RS1/16S104J

R	281	RS1/8S0R0J
R	282	RS1/8S0R0J
R	283	RS1/8S0R0J
R	284	RS1/8S0R0J
R	285	RS1/8S0R0J

R	286	RS1/8S0R0J
R	287	RS1/8S0R0J
R	288	RS1/8S0R0J
R	292	RS1/8S0R0J
R	296	RS1/16S0R0J

====Circuit Symbol and No.==Part Name

Part No.

R	321	RS1/8S0R0J
R	322	RS1/16S0R0J
R	351	RS1/16S102J
R	352	RS1/16S102J
R	353	RS1/16S102J

R	354	RS1/16S102J
R	355	RS1/10S274J
R	356	RS1/10S202J
R	357	RS1/10S472J
R	358	RS1/10S103J

R	359	RS1/10S103J
R	360	RS1/10S102J
R	361	RS1/10S622J
R	362	RS1/8S181J
R	373	RS1/8S0R0J

R	374	RS1/8S0R0J
R	375	RS1/8S0R0J
R	401	RS1/16S123J
R	402	RS1/16S332J
R	403	RS1/16S911J

R	404	RS1/16S274J
---	-----	-------------

CAPACITORS

C	251	CKSRYB391K50
C	252	CKSRYB391K50
C	253	CKSRYB391K50
C	254	CKSRYB391K50
C	255	CKSRYB103K50

C	256	CKSRYB103K50
C	271	CEV1R0M50
C	272	CKSQYB104K16
C	301	CKSRYB104K16
C	302	CKSRYB104K16

C	309	CKSQYB104K16
C	310	CKSQYB104K16
C	351	CKSYB224K25
C	352	CKSQYB392K50
C	353	CKSQYB103K50

C	354	CKSQYB103K50
C	355	CKSYB104K50
C	356	CKSQYB103K50
C	401	CKSQYB472K50
C	402	CKSQYB334K16

C	403	CKSQYB223K25
C	404	CKSRYB103K50
C	405	CKSRYB333K16

O Unit Number :
Unit Name : PCB Unit

L	1	Inductor	ETH0002
S	1	Switch (LOAD)	ESG1004
S	2	Switch (70μs)	ESG1004
EGN	1	Photo-Interrupter	EGN1005

P Unit Number :
Unit Name : Reel PCB

EGN	2	Photo-Interrupter	EGN1006
EGN	3	Photo-Interrupter	EGN1006

Miscellaneous Parts List

C	1		CEAL4R7M35
M	1	Motor Unit (Main)	EXA1499
M	2	Motor Unit (Sub)	EXA1382
HD	1	Head Assy	EXA1594
		Pickup Unit(Service)(P8)	CXX1313