



EXPLODED VIEW

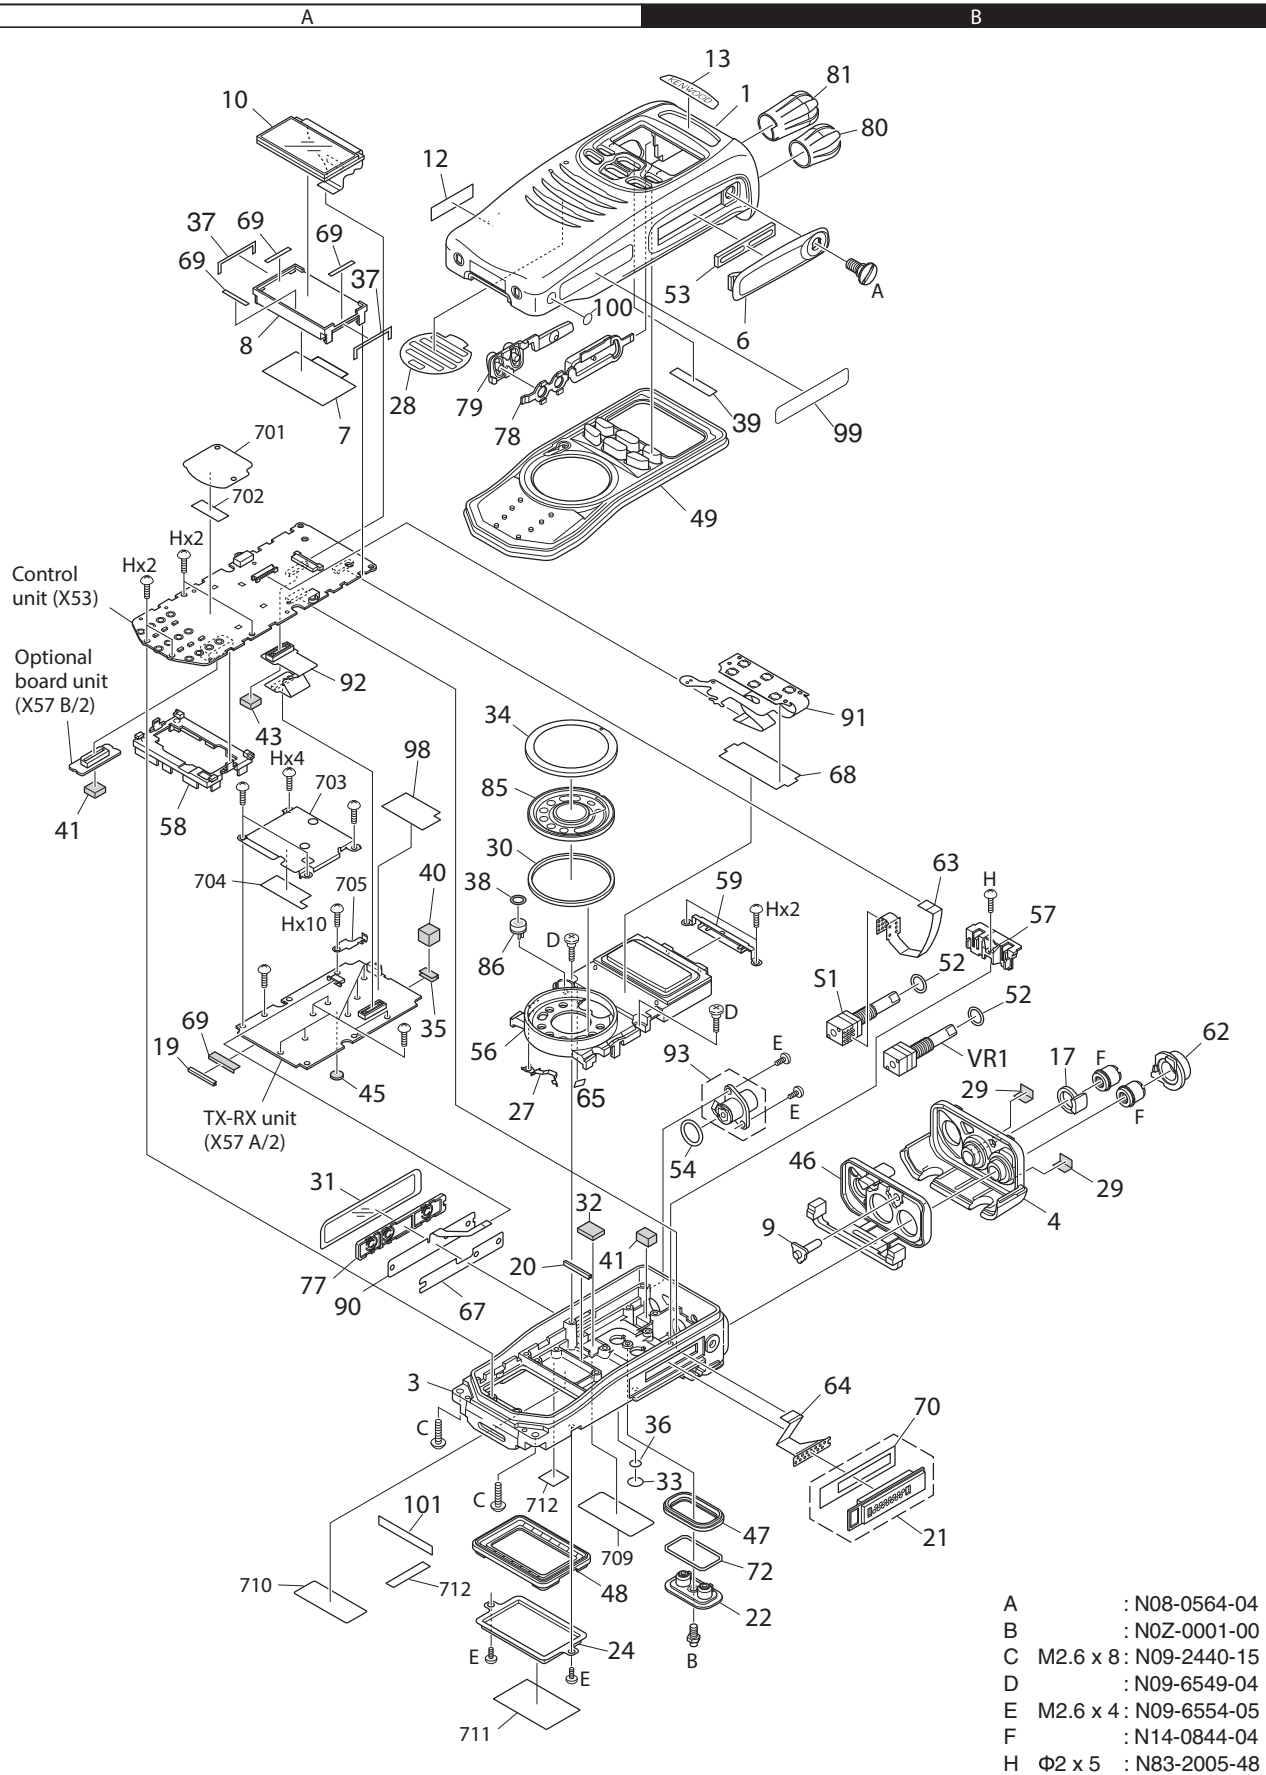

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

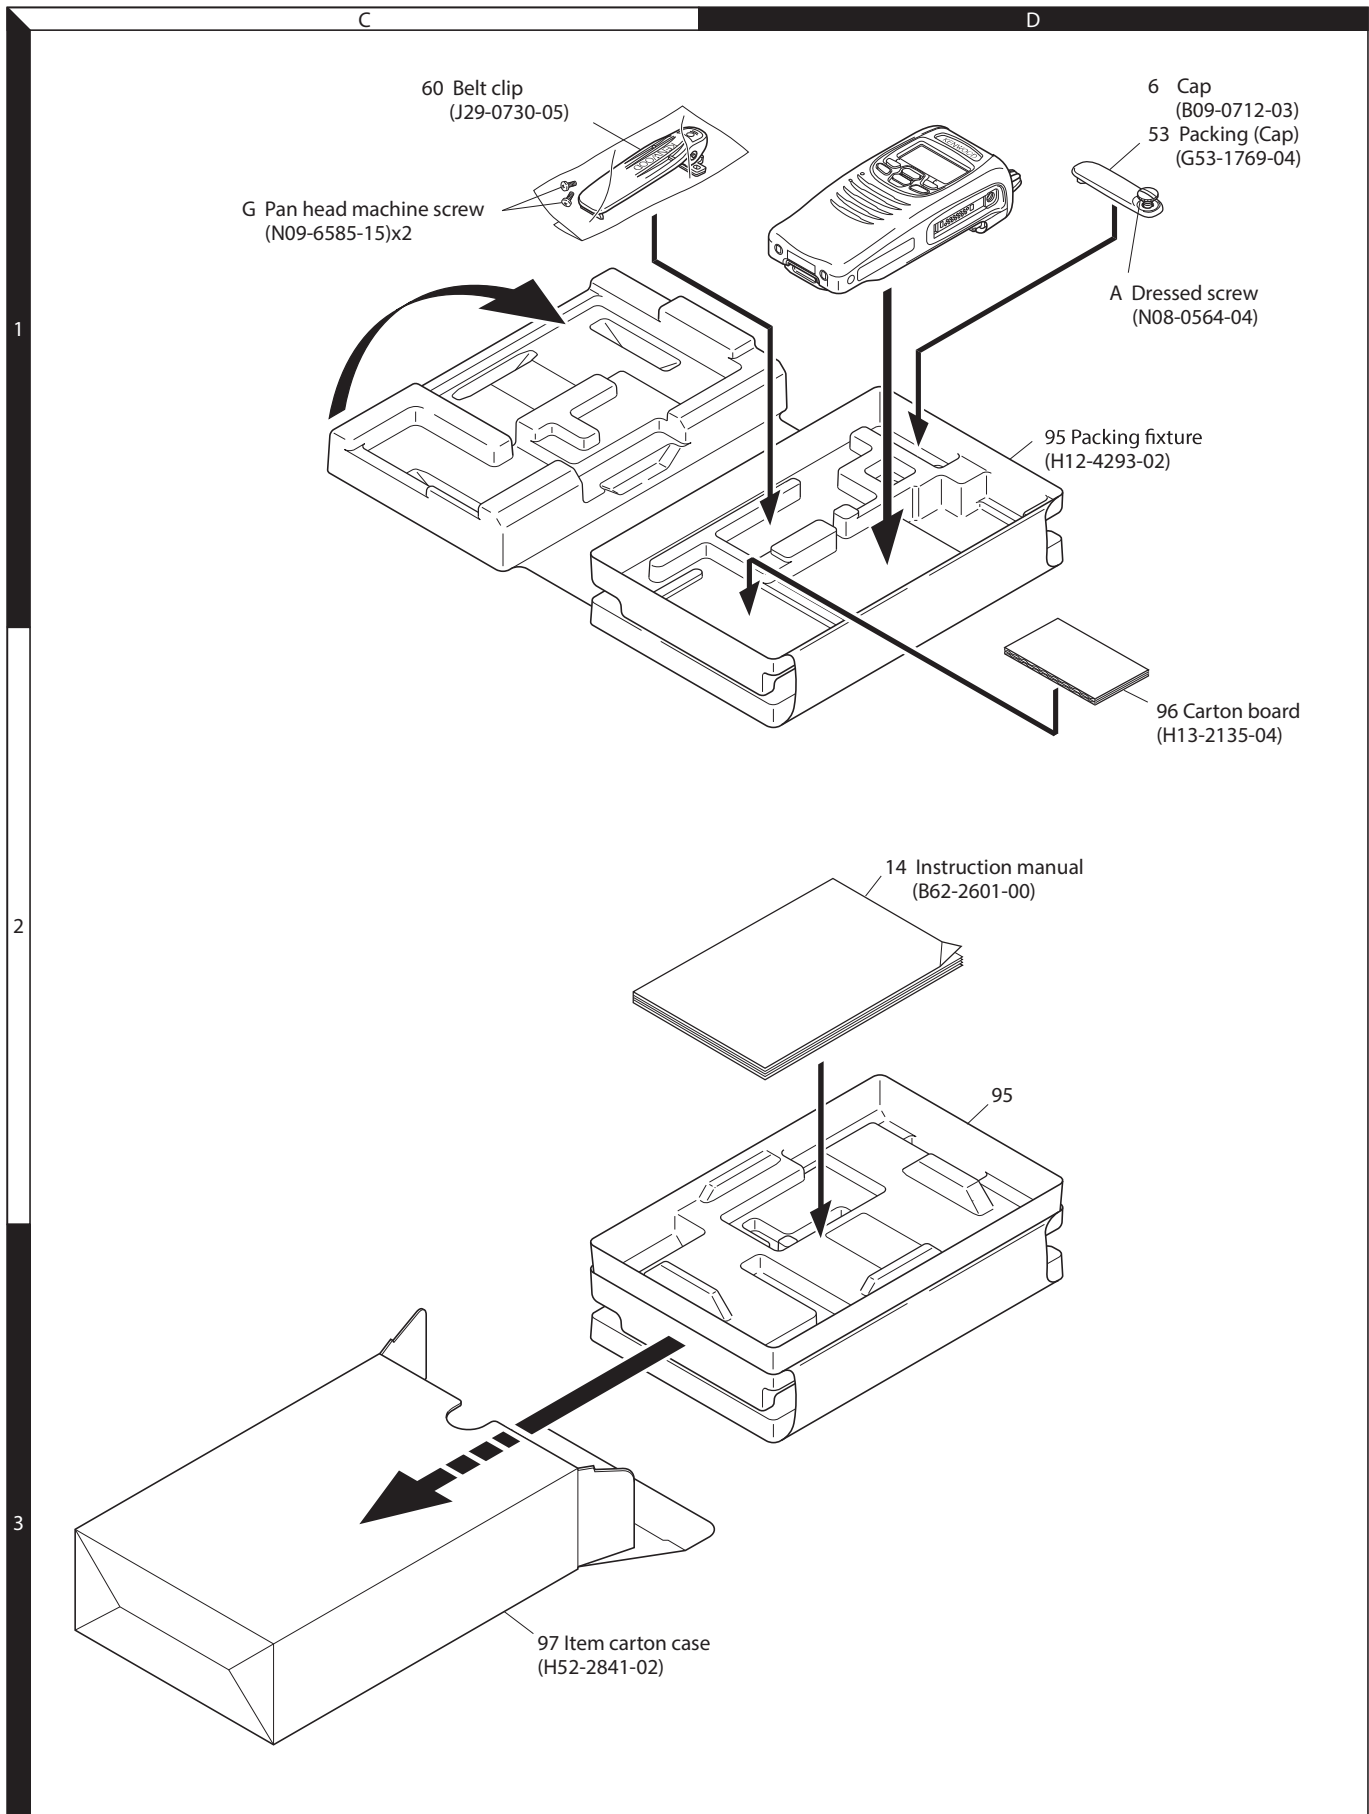

PARTS LIST

△ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

C : China

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

NX-203

CONTROL UNIT (X53-4590-14)

Ref. No.	Address	Parts No.	Description	Destination
NX-203				
1	1A	A02-4002-23	PLASTIC CABINET(6KEYS)	
3	3A	A10-4111-21	CHASSIS	
4	2B	A62-1156-02	PANEL(TOP)	
6	1B,1D	B09-0712-03	CAP ACCESSORY	
7	1A	B11-1853-34	FILTER(LCD)	
8	1A	B11-1854-02	ILLUMINATION GUIDE(LCD)	
9	3B	B11-1855-04	ILLUMINATION GUIDE(TX/BUSY)	
10	1A	B38-0923-05	LCD ASSY	
12	1A	B42-7417-04	STICKER	
13	1B	B43-1606-14	BADGE	
14	2D	B62-2601-00	INSTRUCTION MANUAL	
17	2B	D32-0446-14	STOPPER(16CH)	
19	2A	E29-1241-04	RELAY HARDWARE(VCO-PCB)	
20	3A	E29-1242-04	RELAY HARDWARE(VCO-CHASS)	
21	3B	E58-0532-05	RECTANGULAR RECEPTACLE(SP/MIC)	
22	3B	E72-0425-13	TERMINAL BLOCK	
24	3A	F07-1959-14	COVER(OP BOARD)	
27	2A	G02-1865-13	EARTH SPRING(SP)	
28	1A	G10-1373-04	FIBROUS SHEET(SP)	
29	2B	G10-1807-04	FIBROUS SHEET(TOP PANEL)	
30	2A	G11-4272-14	RUBBER CUSHION(SP)	
31	2A	G11-4428-04	SHEET(PTT)	
32	3A	G11-4429-04	RUBBER SHEET(FET)	
33	3A	G11-4440-04	SHEET(AIR)	
34	2A	G11-4458-14	SHEET(SP)	
35	2A	G11-4459-04	SHEET(TX-RX PCB)	
36	3A	G11-4500-04	SHEET(AIR)	
37	1A	G11-4497-04	SHEET(LCD)	
38	2A	G11-4501-04	SHEET(MIC ELEMENT)	
39	1B	G11-4540-04	SHEET(CABINET)	
41	2A,3B	G13-2220-04	CUSHION(ANT/OP BOARD)	
40	2A	G13-2292-04	CUSHION(TX-RX PCB)	
43	2A	G13-2293-04	CUSHION(50PIN FPC)	
45	2A	G13-2294-04	CUSHION(TERMINAL)	
46	3B	G53-1762-02	PACKING(TOP)	
47	3B	G53-1763-03	PACKING(TERMINAL BLOCK)	
48	3A	G53-1764-03	PACKING(OP BOARD COVER)	
49	1A	G53-1765-11	PACKING(6KEYS)	
52	2B	G53-1768-04	PACKING(VOL,SELECTOR O-RING)	
53	1B,1D	G53-1769-04	PACKING(CAP)	
54	2B	G53-1792-04	PACKING(SMA O-RING)	
56	2A	J19-5505-11	HOLDER(FG-SP)	
57	2B	J19-5506-03	HOLDER(VOL,SELECTOR)	
58	2A	J19-5507-02	HOLDER(OP BOARD)	
59	2B	J21-8638-14	MOUNTING HARDWARE(HOLDER)	
60	1C	J29-0730-05	BELT CLIP ACCESSORY	
62	2B	J30-1296-04	SPACER(VOL)	
63	2B	J87-0028-05	FPC(VOL,SELECTOR)	
64	3B	J87-0007-25	FPC(UNIVERSAL)	
65	2B	J99-0745-04	ADHESIVE SHEET	
67	3A	J99-0711-04	ADHESIVE SHEET(PTT FPC)	
68	2B	J99-0712-14	ADHESIVE SHEET(6KEY FPC)	
69	1A,2A	J99-0714-04	ADHESIVE SHEET(LCD)	
70	3B	J99-0715-08	ADHESIVE SHEET(UNIVERSAL)	

Ref. No.	Address	Parts No.	Description	Destination
72	3B	J99-0747-04	ADHESIVE SHEET(TERMINAL BLOCK)	
77	3A	K25-2001-03	PUSH KNOB(PTT)	
78	1A	K29-9405-03	KNOB(PTT)	
79	1A	K29-9406-03	BUTTON KNOB(SIDE KEY)	
80	1B	K29-9407-03	KNOB(VOL)	
81	1B	K29-9408-13	KNOB(SELECTOR)	
A	1B,1D	N08-0564-04	DRESSED SCREW ACCESSORY	
C	3A	N09-2440-15	SPECIAL SCREW(CASE)	
D	2A,2B	N09-6549-04	STEPPED SCREW(FG-SP HOLDER)	
E	2B,3A	N09-6554-05	PAN HEAD SCREW(ANT/OP BOARD)	
G	1C	N09-6585-15	PAN HEAD MACHINE SCREW ACCESSORY	
B	3B	N0Z-0001-00	HEXAGON HEAD SCREW(BATT-)	
F	2B	N14-0844-04	CIRCULAR NUT(VOL,SELECTOR)	
H	1A,2A,2B	N83-2005-48	PAN HEAD TAPTITE SCREW(PCB)	
S1	2B	S60-0437-05	ROTARY SWITCH	
85	2A	T07-0755-25	SPEAKER	
86	2A	T91-0575-05	MIC ELEMENT	
VR1	2B	R31-0666-15	V RESISTOR	
90	2A	X41-3830-10	SWITCH UNIT(PTT FPC)	
91	2B	X41-3840-10	SWITCH UNIT(6KEY FPC)	
92	2A	X42-3510-10	CORD ASSY(50PIN FPC)	
-		X53-4590-15	SERVICE CONTROL UNIT	
-		X57-8950-11	TX-RX UNIT	
93	2B	X60-4080-10	TERMINAL ASSY(SMA)	
95	1D,2D	H12-4293-02	PACKING FIXTURE	
96	2D	H13-2135-04	CARTON BOARD	
97	3C	H52-2839-02	ITEM CARTON CASE	
98	2A	G1B-0193-00	SHEET	
99	1B	B42-9686-04	STICKER(CASE)	
100	1A	B42-9687-04	STICKER(YELLOW)	
101	3A	B42-9688-04	STICKER(CHASSIS)	

CONTROL UNIT (X53-4590-14)

C1		CK73HBB1A104K	CHIP C	0.10UF	K
C2		CK73GB1E105K	CHIP C	1.0UF	K
C3		CK73GB1E105K	CHIP C	1.0UF	K
C4		CK73GB1E105K	CHIP C	1.0UF	K
C5		CK73GB1E105K	CHIP C	1.0UF	K
C6		CK73GB1E105K	CHIP C	1.0UF	K
C7		CK73HBB1A104K	CHIP C	0.10UF	K
C8		CK73HBB1A104K	CHIP C	0.10UF	K
C10		CK73HBB1A104K	CHIP C	0.10UF	K
C11		CK73HXR0J105K	CHIP C	1.0UF	K
C12		CK73HBB1H471K	CHIP C	470PF	K
C13		CK73HBB1H471K	CHIP C	470PF	K
C14		CK73HBB1H471K	CHIP C	470PF	K
C15		CK73HBB1H471K	CHIP C	470PF	K
C16		CC73HCH1H101J	CHIP C	100PF	J
C17		CC73HCH1H101J	CHIP C	100PF	J
C23		CK73HBB1H102K	CHIP C	1000PF	K
C24		CC73HCH1H470J	CHIP C	47PF	J
C25		CK73HBB1H102K	CHIP C	1000PF	K
C26		CK73HBB1H102K	CHIP C	1000PF	K
C27		CK73HBB1H102K	CHIP C	1000PF	K
C28		CC73HCH1H101J	CHIP C	100PF	J
C29		CC73HCH1H101J	CHIP C	100PF	J
C30		CC73HCH1H101J	CHIP C	100PF	J
C31		CC73HCH1H101J	CHIP C	100PF	J

PARTS LIST

CONTROL UNIT (X53-4590-14)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
C32		CC73HCH1H101J	CHIP C 100PF J		C161		CK73HB1E682K	CHIP C 6800PF K	
C33		CC73HCH1H101J	CHIP C 100PF J		C401		CK73HBB1A104K	CHIP C 0.10UF K	
C34		CC73HCH1H101J	CHIP C 100PF J		C402		CK73HBB1A104K	CHIP C 0.10UF K	
C35		CK73HBB1H102K	CHIP C 1000PF K		C403		CS77MP1C2R2M	CHIP TNTL 2.2UF 16WV	
C36		CK73HB1E682K	CHIP C 6800PF K		C404		CS77MP1C2R2M	CHIP TNTL 2.2UF 16WV	
C37		CK73HBB1H102K	CHIP C 1000PF K		C405		CS77MP1C2R2M	CHIP TNTL 2.2UF 16WV	
C38		CC73HCH1H101J	CHIP C 100PF J		C406		CK73HXRQJ105K	CHIP C 1.0UF K	
C40		CC73HCH1H221J	CHIP C 220PF J		C407		CK73HBB1H102K	CHIP C 1000PF K	
C41		CC73HCH1H101J	CHIP C 100PF J		C408		CK73HBB1H102K	CHIP C 1000PF K	
C101		CK73HBB1A104K	CHIP C 0.10UF K		C409		CK73HXRQJ105K	CHIP C 1.0UF K	
C102		CK73HBB1A104K	CHIP C 0.10UF K		C411		CK73HXRQJ105K	CHIP C 1.0UF K	
C103		CK73HBB1A104K	CHIP C 0.10UF K		C412		CK73HXRQJ105K	CHIP C 1.0UF K	
C104		CK73HBB1A104K	CHIP C 0.10UF K		C414		CK73HXRQJ105K	CHIP C 1.0UF K	
C105		CK73HXRQJ105K	CHIP C 1.0UF K		C415		CS77BP1A100M	CHIP TNTL 10UF 10WV	
C106		CK73HBB1E103K	CHIP C 0.010UF K		C416		CK73FB1A106K	CHIP C 10UF K	
C107		CK73HBB1A104K	CHIP C 0.10UF K		C417		CC73HCH1H221J	CHIP C 220PF J	
C109		CK73HBB1H102K	CHIP C 1000PF K		C418		CK73HBB1E103K	CHIP C 0.010UF K	
C110		CK73HBB1H102K	CHIP C 1000PF K		C419		CK73FB1E475K	CHIP C 4.7UF K	
C111		CK73HBB1A104K	CHIP C 0.10UF K		C420		CK73HBB1E103K	CHIP C 0.010UF K	
C112		CK73HBB1A104K	CHIP C 0.10UF K		C421		CK73HB1E682K	CHIP C 6800PF K	
C113		CK73HBB1A104K	CHIP C 0.10UF K		C422		CC73HCH1H100C	CHIP C 10PF C	
C116		CK73HBB1A104K	CHIP C 0.10UF K		C424		CK73HBB1A104K	CHIP C 0.10UF K	
C117		CK73HBB1A104K	CHIP C 0.10UF K		C425		CK73HBB1A104K	CHIP C 0.10UF K	
C118		CK73HXRQJ105K	CHIP C 1.0UF K		C427		CK73HBB1E103K	CHIP C 0.010UF K	
C119		CK73HXRQJ105K	CHIP C 1.0UF K		C428		CC73HCH1H030C	CHIP C 3.0PF C	
C120		CK73HBB1A104K	CHIP C 0.10UF K		C429		CK73HBB1A104K	CHIP C 0.10UF K	
C121		CK73HBB1A104K	CHIP C 0.10UF K		C430		CK73HBB1A104K	CHIP C 0.10UF K	
C122		CK73HBB1E103K	CHIP C 0.010UF K		C431		CK73FB1A106K	CHIP C 10UF K	
C123		CK73HBB1E103K	CHIP C 0.010UF K		C433		CK73FB1A106K	CHIP C 10UF K	
C124		CK73HBB1E103K	CHIP C 0.010UF K		C435		CK73HB1A563K	CHIP C 0.056UF K	
C130		CK73HBB1E103K	CHIP C 0.010UF K		C436		CK73HB1A563K	CHIP C 0.056UF K	
C131		CK73HBB1A104K	CHIP C 0.10UF K		C437		CK73HB1A563K	CHIP C 0.056UF K	
C133		CS77MPQJ100M	CHIP TNTL 10UF 6.3WV		C438		CK73HB1A563K	CHIP C 0.056UF K	
C134		CK73HBB1E103K	CHIP C 0.010UF K		C439		CK73HBB1A104K	CHIP C 0.10UF K	
C135		CK73HBB1H102K	CHIP C 1000PF K		C440		CK73HBB1A104K	CHIP C 0.10UF K	
C136		CK73HBB1E103K	CHIP C 0.010UF K		C441		CK73GB1E105K	CHIP C 1.0UF K	
C137		CK73GB1E105K	CHIP C 1.0UF K		C442		CK73HBB1H471K	CHIP C 470PF K	
C138		CK73HBB1A104K	CHIP C 0.10UF K		C443		CK73HBB1E103K	CHIP C 0.010UF K	
C139		CK73HBB1A104K	CHIP C 0.10UF K		C445		CK73HBB1H102K	CHIP C 1000PF K	
C140		CK73HBB1A104K	CHIP C 0.10UF K		C446		CK73GB1E105K	CHIP C 1.0UF K	
C141		CC73HCH1H101J	CHIP C 100PF J		C447		CK73HBB1H102K	CHIP C 1000PF K	
C142		CS77MPQJ100M	CHIP TNTL 10UF 6.3WV		C448		CK73HXRQJ105K	CHIP C 1.0UF K	
C143		CK73HBB1E103K	CHIP C 0.010UF K		C449		CK73HXRQJ105K	CHIP C 1.0UF K	
C144		CK73GB1E105K	CHIP C 1.0UF K		C450		CK73HXRQJ105K	CHIP C 1.0UF K	
C145		CK73HBB1A104K	CHIP C 0.10UF K		C452		CK73HBB1E103K	CHIP C 0.010UF K	
C146		CK73HBB1A104K	CHIP C 0.10UF K		C453		CK73HBB1E103K	CHIP C 0.010UF K	
C147		CK73HBB1A104K	CHIP C 0.10UF K		C454		CK73GB1E105K	CHIP C 1.0UF K	
C148		CK73HBB1A104K	CHIP C 0.10UF K		C455		CK73HBB1H471K	CHIP C 470PF K	
C149		CK73HBB1E103K	CHIP C 0.010UF K		C456		CK73HBB1H471K	CHIP C 470PF K	
C150		CK73GB1E105K	CHIP C 1.0UF K		C457		CK73HBB1H471K	CHIP C 470PF K	
C151		CK73HBB1A104K	CHIP C 0.10UF K		C459		CK73HBB1H471K	CHIP C 470PF K	
C152		CK73HBB1A104K	CHIP C 0.10UF K		C460		CK73HB1E682K	CHIP C 6800PF K	
C153		CK73HBB1A104K	CHIP C 0.10UF K		C461		CK73HBB1H471K	CHIP C 470PF K	
C154		CK73HBB1A104K	CHIP C 0.10UF K		C462		CK73HBB1H471K	CHIP C 470PF K	
C155		CK73HBB1A104K	CHIP C 0.10UF K		C463		CK73HBB1H471K	CHIP C 470PF K	
C156		CK73HBB1H102K	CHIP C 1000PF K		C464		CK73HBB1E103K	CHIP C 0.010UF K	
C157		CK73HBB1H102K	CHIP C 1000PF K		C465		CK73HBB1H102K	CHIP C 1000PF K	
C158		CK73HBB1E103K	CHIP C 0.010UF K		C466		CK73HB1E682K	CHIP C 6800PF K	
C159		CK73HBB1A104K	CHIP C 0.10UF K		C467		CK73HBB1A104K	CHIP C 0.10UF K	
C160		CK73HB1E682K	CHIP C 6800PF K		C468		CK73HBB1A104K	CHIP C 0.10UF K	

PARTS LIST

CONTROL UNIT (X53-4590-14)

Ref. No.	Address	Parts No.	Description	Destination	Ref. No.	Address	Parts No.	Description	Destination
C469		CK73HBB1H102K	CHIP C 1000PF K		C763		CK73HBB1E103K	CHIP C 0.010UF K	
C470		CK73HBB1H102K	CHIP C 1000PF K		C764		CK73HBB1H102K	CHIP C 1000PF K	
C471		CK73HBB1C473K	CHIP C 0.047UF K		C765		CK73HBB1A104K	CHIP C 0.10UF K	
C480		CK73HBB1E103K	CHIP C 0.010UF K		C766		CK73HBB1A104K	CHIP C 0.10UF K	
C701		CK73HBB1A104K	CHIP C 0.10UF K		C767		CK73HBB1A104K	CHIP C 0.10UF K	
C703		CK73GXRQJ475K	CHIP C 4.7UF K		C768		CK73HBB1H102K	CHIP C 1000PF K	
C704		CK73HBB1A104K	CHIP C 0.10UF K		C771		CK73HB1A224K	CHIP C 0.22UF K	
C705		CK73HBB1A104K	CHIP C 0.10UF K		C772		CK73HBB1E103K	CHIP C 0.010UF K	
C706		CC73HCH1H680J	CHIP C 68PF J		C775		CC73HCH1H470J	CHIP C 47PF J	
C707		CC73HCH1H270J	CHIP C 27PF J		C777		CK73HBB1H102K	CHIP C 1000PF K	
C708		CK73HBB1A104K	CHIP C 0.10UF K		C778		CK73HXRQJ105K	CHIP C 1.0UF K	
C709		CK73HXRQJ105K	CHIP C 1.0UF K		C779		CK73HBB1E103K	CHIP C 0.010UF K	
C710		CK73HBB1E103K	CHIP C 0.010UF K		C780		CK73HB1A224K	CHIP C 0.22UF K	
C711		CK73HBB1A104K	CHIP C 0.10UF K		C781		CK73HXRQJ105K	CHIP C 1.0UF K	
C712		CK73HBB1E103K	CHIP C 0.010UF K		C782		CK73HXRQJ105K	CHIP C 1.0UF K	
C713		CK73HBB1H332K	CHIP C 3300PF K		C785		CK73HB1A224K	CHIP C 0.22UF K	
C714		CK73HB1H122K	CHIP C 1200PF K		C786		CK73HBB1E103K	CHIP C 0.010UF K	
C715		CK73HBB1A104K	CHIP C 0.10UF K		C787		CK73HXRQJ105K	CHIP C 1.0UF K	
C716		CK73HBB1H681K	CHIP C 680PF K		C788		CC73HCH1H150J	CHIP C 15PF J	
C717		CK73HBB1E103K	CHIP C 0.010UF K		C789		CC73HCH1H680J	CHIP C 68PF J	
C718		CK73HBB1H152K	CHIP C 1500PF K		C790		CK73HBB1A104K	CHIP C 0.10UF K	
C720		CK73HBB1E103K	CHIP C 0.010UF K		C791		CK73HB1A393K	CHIP C 0.039UF K	
C721		CK73HBB1A104K	CHIP C 0.10UF K		C792		CK73HXRQJ105K	CHIP C 1.0UF K	
C722		CK73HBB1E103K	CHIP C 0.010UF K		C793		CK73HBB1A104K	CHIP C 0.10UF K	
C723		CK73HBB1A104K	CHIP C 0.10UF K		C794		CK73HBB1A104K	CHIP C 0.10UF K	
C724		CK73HBB1E103K	CHIP C 0.010UF K		C795		CK73HBB1E103K	CHIP C 0.010UF K	
C725		CC73HCH1E181J	CHIP C 180PF J		C796		CK73HBB1A104K	CHIP C 0.10UF K	
C726		CK73HBB1A104K	CHIP C 0.10UF K		C797		CK73HXRQJ105K	CHIP C 1.0UF K	
C727		CK73HBB1A104K	CHIP C 0.10UF K		C798		CS77BP1A100M	CHIP TNTL 10UF 10WV	
C728		CK73HB1H331K	CHIP C 330PF K		C799		CK73HBB1A104K	CHIP C 0.10UF K	
C730		CK73HB1H331K	CHIP C 330PF K		C800		CK73HBB1H152K	CHIP C 1500PF K	
C731		CK73HBB1E103K	CHIP C 0.010UF K		C801		CK73HB1C223K	CHIP C 0.022UF K	
C732		CK73HBB1E103K	CHIP C 0.010UF K		C802		CK73HBB1E103K	CHIP C 0.010UF K	
C734		CK73HBB1H102K	CHIP C 1000PF K		C803		CK73HBB1H102K	CHIP C 1000PF K	
C735		CK73HB1H122K	CHIP C 1200PF K		C804		CC73HCH1H470J	CHIP C 47PF J	
C736		CK73HBB1A104K	CHIP C 0.10UF K		C805		CK73HBB1H471K	CHIP C 470PF K	
C737		CK73HBB1A104K	CHIP C 0.10UF K		C806		CK73HBB1H471K	CHIP C 470PF K	
C738		CK73HBB1H102K	CHIP C 1000PF K		C808		CK73GXRQJ475K	CHIP C 4.7UF K	
C739		CK73HB1E682K	CHIP C 6800PF K		C809		CK73FB1A106K	CHIP C 10UF K	
C740		CK73HBB1H102K	CHIP C 1000PF K		C812		CK73HXRQJ105K	CHIP C 1.0UF K	
C742		CK73GB1E105K	CHIP C 1.0UF K		CN1		E40-6755-05	FLAT CABLE CONNECTOR	
C743		CK73HXRQJ105K	CHIP C 1.0UF K		CN22		E23-1325-05	TERMINAL	
C744		CK73HBB1E103K	CHIP C 0.010UF K		CN23		E40-6758-05	PIN ASSY	
C745		CK73HBB1E103K	CHIP C 0.010UF K		CN24		E23-1325-05	TERMINAL	
C746		CK73HBB1E103K	CHIP C 0.010UF K		CN403		E40-6813-05	PIN ASSY	
C747		CK73HBB1A104K	CHIP C 0.10UF K		CN404		E40-6421-15	PIN ASSY	
C748		CK73HBB1A104K	CHIP C 0.10UF K		CN405		E40-6754-05	FLAT CABLE CONNECTOR	
C749		CC73HCH1H470J	CHIP C 47PF J		CN701		E40-6586-05	SOCKET FOR PIN ASSY	
C750		CC73HCH1H470J	CHIP C 47PF J		CN710		E40-6757-05	PIN ASSY	
C751		CK73GB1E105K	CHIP C 1.0UF K		D3		B30-2337-05	LED(YELLOW)	
C752		CC73HCH1H101J	CHIP C 100PF J		D4		B30-2337-05	LED(YELLOW)	
C753		CC73HCH1H101J	CHIP C 100PF J		D7		B30-2337-05	LED(YELLOW)	
C755		CC73HCH1H470J	CHIP C 47PF J		D8		B30-2337-05	LED(YELLOW)	
C756		CK73HBB1A104K	CHIP C 0.10UF K		D11		DA2S101	DIODE	
C757		CK73GXRQJ475K	CHIP C 4.7UF K		D12		KDR720F-P	SCHOTTKY BARRIER DIODE	
C758		CK73GXRQJ475K	CHIP C 4.7UF K		D13		KDR720F-P	SCHOTTKY BARRIER DIODE	
C759		CK73HBB1E103K	CHIP C 0.010UF K		D14		KDR720F-P	SCHOTTKY BARRIER DIODE	
C760		CK73HBB1E103K	CHIP C 0.010UF K		D15		KDR720F-P	SCHOTTKY BARRIER DIODE	
C761		CC73HCH1H100D	CHIP C 10PF D		D16		KDR720F-P	SCHOTTKY BARRIER DIODE	
C762		CK73HBB1A104K	CHIP C 0.10UF K		D17		EMZ6.8N	ZENER DIODE	

PARTS LIST

CONTROL UNIT (X53-4590-14)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
D18		HZC6.8-E	ZENER DIODE		IC705		TC75W51FK(F)	MOS-IC	
D19		HZC6.8-E	ZENER DIODE		IC706		TC75S51FE(F)	MOS-IC	
D20		NNCD6.8G-A	ZENER DIODE		IC707		TC7W53FKF	MOS-IC	
D21		NNCD6.8G-A	ZENER DIODE		IC708		XC6209B502P-G	MOS-IC	
D22		KDS123E-P	DIODE		IC709		TC7W53FKF	MOS-IC	
D23		KDS123E-P	DIODE		IC710		TC75W51FK(F)	MOS-IC	
D102		KDR720F-P	SCHOTTKY BARRIER DIODE		IC711		TC75W51FK(F)	MOS-IC	
D401		1SS388F	SCHOTTKY BARRIER DIODE		IC712		TC7S66FUF	MOS-IC	
D402		1SS388F	SCHOTTKY BARRIER DIODE		IC713		TC75W51FK(F)	MOS-IC	
D403		1SS388F	SCHOTTKY BARRIER DIODE		IC714		TC7W53FKF	MOS-IC	
D404		1SS388F	SCHOTTKY BARRIER DIODE		IC715		TC75S51FE(F)	MOS-IC	
D405		1SS388F	SCHOTTKY BARRIER DIODE		IC716		TC75W51FK(F)	MOS-IC	
D406		HRB0502A	DIODE		IC717		XC9235A15CM-G	MOS-IC	
D407		DA2S101	DIODE		L1		L92-0408-05	CHIP FERRITE	
D408		KDS121-P	DIODE		L2		L92-0408-05	CHIP FERRITE	
D409		DA2S101	DIODE		L3		LB73G0BA-004	CHIP FERRITE	
D410		DA2S101	DIODE		L4		L92-0408-05	CHIP FERRITE	
D412		KDS121-P	DIODE		L5		L92-0408-05	CHIP FERRITE	
D414		KDR720F-P	SCHOTTKY BARRIER DIODE		L6		L92-0408-05	CHIP FERRITE	
D415		KDR720F-P	SCHOTTKY BARRIER DIODE		L7		L92-0408-05	CHIP FERRITE	
D416		1SS388F	SCHOTTKY BARRIER DIODE		L8		LB73G0BA-004	CHIP FERRITE	
D417		1SS388F	SCHOTTKY BARRIER DIODE		L101		L92-0408-05	CHIP FERRITE	
D701		KDS121-P	DIODE		L102		L92-0408-05	CHIP FERRITE	
D702		DA2S101	DIODE		L401		L33-1496-05	SMALL FIXED INDUCTOR(22UH)	
D703		KDR731	DIODE		L402		LB73G0AK-001	CHIP FERRITE	
D704		KDR731	DIODE		L403		L92-0466-05	CHIP FERRITE	
D705		KDR731	DIODE		L409		LB73G0AK-001	CHIP FERRITE	
D706		KDR731	DIODE		L410		LB73G0AK-001	CHIP FERRITE	
D707		KDS123E-P	DIODE		L411		LB73G0AK-001	CHIP FERRITE	
F701		F53-0360-05	FUSE		L701		LB73G0BA-004	CHIP FERRITE	
IC1		NJM2130F3-ZB	BI-POLAR IC		L702		LB73H0AV-002	BEADS CORE	
IC101		Note 1	ROM IC		L704		LB73H0AV-002	BEADS CORE	
IC102		Note 1	MPU IC		L705		LB73H0AV-002	BEADS CORE	
IC103		Note 1	SRAM IC		L706		LB73H0AV-002	BEADS CORE	
IC104		TC7SH08FU-F	MOS-IC		L707		LB73H0AV-002	BEADS CORE	
IC105		XC6109C29AN-G	MOS-IC		L708		LB73H0AV-002	BEADS CORE	
IC106		RV5C386A	MOS-IC		L709		LB73H0AV-002	BEADS CORE	
IC107		SM5023CNDH-G	MOS-IC		L710		LB73G0BJ-002	CHIP FERRITE	
IC108		Note1	MOS-IC		L711		LB73G0BJ-002	CHIP FERRITE	
IC109		TC7SH08FU-F	MOS-IC		L712		LB73G0BJ-002	CHIP FERRITE	
IC401		TC74LCX245FK	MOS-IC		L713		LB73H0AV-003	BEADS CORE	
IC402		TC7W2245FK-F	MOS-IC		L714		LB73G0BJ-002	CHIP FERRITE	
IC403		LM2682MMX	MOS-IC		L715		LB73G0BJ-002	CHIP FERRITE	
IC404		XC6204B332D-G	MOS-IC		L716		LB73G0BJ-002	CHIP FERRITE	
IC406		XC6204B332M-G	MOS-IC		L717		LB73G0BJ-002	CHIP FERRITE	
IC407		LT1616ES6-PBF	ANALOGUE IC		L718		L92-0408-05	CHIP FERRITE	
IC408		TC75S51FE(F)	MOS-IC		L719		L33-1494-05	SMALL FIXED INDUCTOR(4.7UH)	
IC409		TC7W66FK-F	MOS-IC		Q1		2SA1362-F(GR)	TRANSISTOR	
IC411		NJM2880U105ZB	ANALOGUE IC		Q2		KTC4075E(Y,GR)	TRANSISTOR	
IC412		TPA6201A1DRBR	ANALOGUE IC		Q3		SSM3K15TE(F)	FET	
IC413		TPA6201A1DRBR	ANALOGUE IC		Q4		SSM3K15TE(F)	FET	
IC414		XC61CC5602N-G	MOS-IC		Q5		2SJ347F	FET	
IC415		TC7SET08FU-F	MOS-IC		Q401		SSM6N16FE-F	FET	
IC416		S-812C31BPI-G	ANALOGUE IC		Q402		SSM6N16FE-F	FET	
IC417		TC7WH126FK	MOS-IC		Q403		2SJ648-A	FET	
IC418		TC7WT125FUF	MOS-IC		Q404		SSM3K15TE(F)	FET	
IC701		PCA9535BS	MOS-IC		Q405		SSM6N16FE-F	FET	
IC702		TC75W51FK(F)	MOS-IC		Q406		2SB798AZ(DLDK	TRANSISTOR	
IC703		M62364FP-F	MOS-IC		Q407		KRC660U-P	DIGITAL TRANSISTOR	
IC704		TC75S51FE(F)	MOS-IC		Q408		EMD12	TRANSISTOR	

PARTS LIST

CONTROL UNIT (X53-4590-14)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
Q409		2SA1955A-F	TRANSISTOR		R120		RK73HB1J474J	CHIP R 470K J 1/16W	
Q410		SSM3K15TE(F)	FET		R121		RK73HB1J104J	CHIP R 100K J 1/16W	
Q411		SSM6N16FE-F	FET		R122		RK73HB1J104J	CHIP R 100K J 1/16W	
Q412		SSM3K15TE(F)	FET		R123		RK73HB1J104J	CHIP R 100K J 1/16W	
Q413		2SA1955A-F	TRANSISTOR		R126		RK73HB1J101J	CHIP R 100 J 1/16W	
Q414		EMD12	TRANSISTOR		R127		RK73HB1J000J	CHIP R 0.0 J 1/16W	
Q415		EMD12	TRANSISTOR		R128		RK73HB1J000J	CHIP R 0.0 J 1/16W	
Q702		SSM3K15TE(F)	FET		R129		RK73HB1J101J	CHIP R 100 J 1/16W	
Q703		SSM3K15TE(F)	FET		R130		RK73HB1J101J	CHIP R 100 J 1/16W	
Q704		KTC4075E(Y,GR)	TRANSISTOR		R131		RK73HB1J101J	CHIP R 100 J 1/16W	
Q705		2SC4738(GR)F	TRANSISTOR		R132		RK73HB1J104J	CHIP R 100K J 1/16W	
Q706		2SA1832(GR)F	TRANSISTOR		R133		RK73HB1J104J	CHIP R 100K J 1/16W	
Q707		2SJ243-A	FET		R135		RK73HB1J104J	CHIP R 100K J 1/16W	
R1		RK73HB1J105J	CHIP R 1.0M J 1/16W		R136		RK73HB1J104J	CHIP R 100K J 1/16W	
R2		RK73HB1J104J	CHIP R 100K J 1/16W		R137		RK73HB1J104J	CHIP R 100K J 1/16W	
R3		RK73HB1J123J	CHIP R 12K J 1/16W		R138		RK73HB1J473J	CHIP R 47K J 1/16W	
R4		RK73HB1J103J	CHIP R 10K J 1/16W		R139		RK73HB1J104J	CHIP R 100K J 1/16W	
R5		RK73HB1J103J	CHIP R 10K J 1/16W		R140		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R6		RK73HB1J103J	CHIP R 10K J 1/16W		R141		RK73HB1J104J	CHIP R 100K J 1/16W	
R7		RK73HB1J103J	CHIP R 10K J 1/16W		R142		RK73HB1J104J	CHIP R 100K J 1/16W	
R8		RK73HB1J103J	CHIP R 10K J 1/16W		R143		RK73HB1J104J	CHIP R 100K J 1/16W	
R9		RK73HB1J103J	CHIP R 10K J 1/16W		R144		RK73HB1J471J	CHIP R 470 J 1/16W	
R10		RK73HB1J103J	CHIP R 10K J 1/16W		R145		RK73HB1J104J	CHIP R 100K J 1/16W	
R11		RK73HB1J104J	CHIP R 100K J 1/16W		R146		RK73HB1J104J	CHIP R 100K J 1/16W	
R12		RK73HB1J103J	CHIP R 10K J 1/16W		R147		RK73HB1J104J	CHIP R 100K J 1/16W	
R14		RK73HB1J472J	CHIP R 4.7K J 1/16W		R148		RK73HB1J151J	CHIP R 150 J 1/16W	
R15		RK73HB1J000J	CHIP R 0.0 J 1/16W		R149		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R16		RK73HB1J331J	CHIP R 330 J 1/16W		R150		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R17		RK73HB1J000J	CHIP R 0.0 J 1/16W		R153		RK73HB1J104J	CHIP R 100K J 1/16W	
R18		RK73HB1J822J	CHIP R 8.2K J 1/16W		R154		RK73HB1J104J	CHIP R 100K J 1/16W	
R19		RK73HB1J471J	CHIP R 470 J 1/16W		R155		RK73HB1J473J	CHIP R 47K J 1/16W	
R20		RK73HB1J102J	CHIP R 1.0K J 1/16W		R156		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R21		RK73HB1J122J	CHIP R 1.2K J 1/16W		R157		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R22		RK73HB1J102J	CHIP R 1.0K J 1/16W		R158		RK73HB1J220J	CHIP R 22 J 1/16W	
R23		RK73HB1J102J	CHIP R 1.0K J 1/16W		R159		RK73HB1J220J	CHIP R 22 J 1/16W	
R24		RK73HB1J102J	CHIP R 1.0K J 1/16W		R160		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R25		RK73HB1J122J	CHIP R 1.2K J 1/16W		R161		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R26		RK73HB1J102J	CHIP R 1.0K J 1/16W		R162		RK73HB1J474J	CHIP R 470K J 1/16W	
R27		RK73HB1J104J	CHIP R 100K J 1/16W		R163		RK73HB1J104D	CHIP R 100K D 1/16W	
R28		RK73HB1J102J	CHIP R 1.0K J 1/16W		R165		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R29		RK73HB1J102J	CHIP R 1.0K J 1/16W		R166		RK73HB1J104J	CHIP R 100K J 1/16W	
R30		RK73HB1J101J	CHIP R 100 J 1/16W		R167		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R31		RK73HB1J102J	CHIP R 1.0K J 1/16W		R168		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R32		RK73HB1J101J	CHIP R 100 J 1/16W		R170		RK73HB1J103D	CHIP R 10K D 1/16W	
R33		RK73HB1J101J	CHIP R 100 J 1/16W		R171		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R34		RK73HB1J101J	CHIP R 100 J 1/16W		R172		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R35		RK73HB1J101J	CHIP R 100 J 1/16W		R173		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R40		RK73HB1J000J	CHIP R 0.0 J 1/16W		R174		RK73HB1J104J	CHIP R 100K J 1/16W	
R101		RK73HB1J474J	CHIP R 470K J 1/16W		R175		RK73HB1J104J	CHIP R 100K J 1/16W	
R102		RK73HB1J474J	CHIP R 470K J 1/16W		R176		RK73HB1J104J	CHIP R 100K J 1/16W	
R103		RK73HB1J102J	CHIP R 1.0K J 1/16W		R177		RK73HB1J104J	CHIP R 100K J 1/16W	
R105		RK73HB1J104J	CHIP R 100K J 1/16W		R178		RK73HB1J104J	CHIP R 100K J 1/16W	
R107		RK73HB1J104J	CHIP R 100K J 1/16W		R180		RK73HB1J104J	CHIP R 100K J 1/16W	
R110		RK73HB1J104J	CHIP R 100K J 1/16W		R181		RK73HB1J104J	CHIP R 100K J 1/16W	
R111		RK73HB1J104J	CHIP R 100K J 1/16W		R182		RK73HB1J474J	CHIP R 470K J 1/16W	
R113		RK73HB1J104J	CHIP R 100K J 1/16W		R183		RK73HB1J104J	CHIP R 100K J 1/16W	
R115		RK73HB1J104J	CHIP R 100K J 1/16W		R184		RK73HB1J473J	CHIP R 47K J 1/16W	
R116		RK73HB1J473J	CHIP R 47K J 1/16W		R185		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R118		RK73HB1J473J	CHIP R 47K J 1/16W		R186		RK73HB1J473J	CHIP R 47K J 1/16W	
R119		RK73HB1J104J	CHIP R 100K J 1/16W		R187		RK73HB1J102J	CHIP R 1.0K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4590-14)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
R188		RK73HB1J473J	CHIP R 47K J 1/16W		R461		RK73HB1J103J	CHIP R 10K J 1/16W	
R189		RK73HB1J104J	CHIP R 100K J 1/16W		R462		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R190		RK73HB1J102J	CHIP R 1.0K J 1/16W		R463		RK73HB1J104J	CHIP R 100K J 1/16W	
R191		RK73HB1J474J	CHIP R 470K J 1/16W		R465		RK73HB1J103J	CHIP R 10K J 1/16W	
R192		RK73HB1J102J	CHIP R 1.0K J 1/16W		R466		RK73HB1J104J	CHIP R 100K J 1/16W	
R193		RK73HB1J104J	CHIP R 100K J 1/16W		R467		RK73HB1J104J	CHIP R 100K J 1/16W	
R194		RK73HB1J104J	CHIP R 100K J 1/16W		R468		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R402		RK73HB1J151J	CHIP R 150 J 1/16W		R469		RK73HB1J474J	CHIP R 470K J 1/16W	
R404		RK73HB1J151J	CHIP R 150 J 1/16W		R470		RK73HB1J183J	CHIP R 18K J 1/16W	
R406		RK73HB1J000J	CHIP R 0.0 J 1/16W		R471		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R407		RK73HB1J103J	CHIP R 10K J 1/16W		R472		RK73HB1J223J	CHIP R 22K J 1/16W	
R408		RK73HB1J103J	CHIP R 10K J 1/16W		R473		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R409		RK73HB1J470J	CHIP R 47 J 1/16W		R474		RK73HB1J333J	CHIP R 33K J 1/16W	
R410		RK73HB1J471J	CHIP R 470 J 1/16W		R475		RK73HB1J333J	CHIP R 33K J 1/16W	
R411		RK73HB1J471J	CHIP R 470 J 1/16W		R477		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R412		RK73HB1J471J	CHIP R 470 J 1/16W		R478		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R413		RK73HB1J471J	CHIP R 470 J 1/16W		R481		RK73HB1J474J	CHIP R 470K J 1/16W	
R414		RK73HB1J471J	CHIP R 470 J 1/16W		R483		RK73HB1J473J	CHIP R 47K J 1/16W	
R415		RK73HB1J471J	CHIP R 470 J 1/16W		R484		RK73HB1J223J	CHIP R 22K J 1/16W	
R416		RK73HB1J471J	CHIP R 470 J 1/16W		R485		RK73HB1J103J	CHIP R 10K J 1/16W	
R417		RK73HB1J000J	CHIP R 0.0 J 1/16W		R487		RK73HH1J223D	CHIP R 22K D 1/16W	
R418		RK73HB1J471J	CHIP R 470 J 1/16W		R488		RK73HH1J223D	CHIP R 22K D 1/16W	
R419		RK73HB1J000J	CHIP R 0.0 J 1/16W		R489		RK73HH1J223D	CHIP R 22K D 1/16W	
R420		RK73HB1J000J	CHIP R 0.0 J 1/16W		R490		RK73HH1J223D	CHIP R 22K D 1/16W	
R424		RK73HH1J683D	CHIP R 68K D 1/16W		R491		RK73HB1J104J	CHIP R 100K J 1/16W	
R425		RK73HH1J333D	CHIP R 33K D 1/16W		R492		RK73HB1J474J	CHIP R 470K J 1/16W	
R426		RK73HB1J000J	CHIP R 0.0 J 1/16W		R493		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R427		RK73HB1J000J	CHIP R 0.0 J 1/16W		R494		RK73HH1J104D	CHIP R 100K D 1/16W	
R428		RK73HB1J000J	CHIP R 0.0 J 1/16W		R495		RK73HH1J104D	CHIP R 100K D 1/16W	
R429		RK73HB1J000J	CHIP R 0.0 J 1/16W		R496		RK73HH1J104D	CHIP R 100K D 1/16W	
R431		RK73HB1J474J	CHIP R 470K J 1/16W		R497		RK73HH1J104D	CHIP R 100K D 1/16W	
R432		RK73HB1J000J	CHIP R 0.0 J 1/16W		R500		RK73HB1J473J	CHIP R 47K J 1/16W	
R433		RK73HB1J000J	CHIP R 0.0 J 1/16W		R501		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R434		RK73HB1J393J	CHIP R 39K J 1/16W		R502		RK73HB1J103J	CHIP R 10K J 1/16W	
R435		RK73HB1J104J	CHIP R 100K J 1/16W		R503		RK73HB1J103J	CHIP R 10K J 1/16W	
R436		RK73HB1J104J	CHIP R 100K J 1/16W		R504		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R437		RK73HB1J471J	CHIP R 470 J 1/16W		R506		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R438		RK73HB1J104J	CHIP R 100K J 1/16W		R507		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R439		RK73HB1J104J	CHIP R 100K J 1/16W		R508		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R440		RK73HB1J000J	CHIP R 0.0 J 1/16W		R509		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R441		RK73HB1J153J	CHIP R 15K J 1/16W		R510		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R442		RK73HB1J102J	CHIP R 1.0K J 1/16W		R511		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R443		RK73HB1J474J	CHIP R 470K J 1/16W		R512		RK73HB1J101J	CHIP R 100 J 1/16W	
R444		RK73HB1J564J	CHIP R 560K J 1/16W		R513		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R445		RK73HB1J154J	CHIP R 150K J 1/16W		R514		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R446		RK73HB1J274J	CHIP R 270K J 1/16W		R515		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R447		RK73HB1J104J	CHIP R 100K J 1/16W		R516		RK73HB1J101J	CHIP R 100 J 1/16W	
R448		RK73HB1J103J	CHIP R 10K J 1/16W		R517		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R449		RK73HB1J474J	CHIP R 470K J 1/16W		R518		RK73HB1J101J	CHIP R 100 J 1/16W	
R450		RK73HB1J474J	CHIP R 470K J 1/16W		R519		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R451		RK73HB1J474J	CHIP R 470K J 1/16W		R520		RK73HB1J560J	CHIP R 56 J 1/16W	
R452		RK73HB1J474J	CHIP R 470K J 1/16W		R521		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R453		RK73HB1J104J	CHIP R 100K J 1/16W		R522		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R454		RK73HB1J474J	CHIP R 470K J 1/16W		R523		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R455		RK73HB1J102J	CHIP R 1.0K J 1/16W		R524		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R456		RK73HB1J474J	CHIP R 470K J 1/16W		R525		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R457		RK73HB1J104J	CHIP R 100K J 1/16W		R526		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R458		RK73HB1J104J	CHIP R 100K J 1/16W		R527		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R459		RK73HB1J102J	CHIP R 1.0K J 1/16W		R528		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R460		RK73HB1J102J	CHIP R 1.0K J 1/16W		R529		RK73HB1J101J	CHIP R 100 J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4590-14)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
R530		RK73HB1J101J	CHIP R 100 J 1/16W		R743		RK73HB1J103J	CHIP R 10K J 1/16W	
R531		RK73HB1J101J	CHIP R 100 J 1/16W		R744		RK73HB1J223J	CHIP R 22K J 1/16W	
R532		RK73HB1J102J	CHIP R 1.0K J 1/16W		R745		RK73HB1J682J	CHIP R 6.8K J 1/16W	
R533		RK73HB1J101J	CHIP R 100 J 1/16W		R746		RK73HB1J563J	CHIP R 56K J 1/16W	
R534		RK73HB1J101J	CHIP R 100 J 1/16W		R748		RK73HB1J103J	CHIP R 10K J 1/16W	
R535		RK73HB1J101J	CHIP R 100 J 1/16W		R749		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R536		RK73HB1J102J	CHIP R 1.0K J 1/16W		R750		RK73HB1J103J	CHIP R 10K J 1/16W	
R537		RK73HB1J102J	CHIP R 1.0K J 1/16W		R752		RK73HB1J101J	CHIP R 100 J 1/16W	
R538		RK73HB1J102J	CHIP R 1.0K J 1/16W		R753		RK73HB1J683J	CHIP R 68K J 1/16W	
R539		RK73HB1J102J	CHIP R 1.0K J 1/16W		R754		RK73HB1J564J	CHIP R 560K J 1/16W	
R540		RK73HB1J102J	CHIP R 1.0K J 1/16W		R755		RK73HB1J104J	CHIP R 100K J 1/16W	
R541		RK73HB1J101J	CHIP R 100 J 1/16W		R756		RK73HB1J101J	CHIP R 100 J 1/16W	
R543		RK73HB1J101J	CHIP R 100 J 1/16W		R757		RK73HB1J223J	CHIP R 22K J 1/16W	
R544		RK73HB1J102J	CHIP R 1.0K J 1/16W		R758		RK73HB1J103J	CHIP R 10K J 1/16W	
R545		RK73HB1J101J	CHIP R 100 J 1/16W		R759		RK73HB1J101J	CHIP R 100 J 1/16W	
R546		RK73HB1J102J	CHIP R 1.0K J 1/16W		R761		RK73HB1J223J	CHIP R 22K J 1/16W	
R547		RK73HB1J102J	CHIP R 1.0K J 1/16W		R762		RK73HB1J223J	CHIP R 22K J 1/16W	
R548		RK73HB1J473J	CHIP R 47K J 1/16W		R763		RK73HB1J223J	CHIP R 22K J 1/16W	
R549		RK73HB1J473J	CHIP R 47K J 1/16W		R764		RK73HB1J223J	CHIP R 22K J 1/16W	
R550		RK73HB1J000J	CHIP R 0.0 J 1/16W		R765		RK73HB1J334J	CHIP R 330K J 1/16W	
R701		RK73HB1J000J	CHIP R 0.0 J 1/16W		R766		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R702		RK73HB1J000J	CHIP R 0.0 J 1/16W		R767		RK73HB1J103J	CHIP R 10K J 1/16W	
R703		RK73HB1J000J	CHIP R 0.0 J 1/16W		R768		RK73HB1J224J	CHIP R 220K J 1/16W	
R704		RK73HB1J000J	CHIP R 0.0 J 1/16W		R769		RK73HB1J334J	CHIP R 330K J 1/16W	
R705		RK73HB1J000J	CHIP R 0.0 J 1/16W		R770		RK73HB1J334J	CHIP R 330K J 1/16W	
R706		RK73HB1J000J	CHIP R 0.0 J 1/16W		R771		RK73HB1J153J	CHIP R 15K J 1/16W	
R707		RK73HB1J000J	CHIP R 0.0 J 1/16W		R775		RK73HB1J183J	CHIP R 18K J 1/16W	
R709		RK73HB1J000J	CHIP R 0.0 J 1/16W		R777		RK73HB1J473J	CHIP R 47K J 1/16W	
R710		RK73HB1J000J	CHIP R 0.0 J 1/16W		R778		RK73HB1J333J	CHIP R 33K J 1/16W	
R711		RK73HB1J000J	CHIP R 0.0 J 1/16W		R779		RK73HB1J473J	CHIP R 47K J 1/16W	
R712		RK73HB1J000J	CHIP R 0.0 J 1/16W		R780		RK73HB1J104J	CHIP R 100K J 1/16W	
R713		RK73HB1J000J	CHIP R 0.0 J 1/16W		R782		RK73HB1J104J	CHIP R 100K J 1/16W	
R714		RK73HB1J000J	CHIP R 0.0 J 1/16W		R783		RK73HB1J183J	CHIP R 18K J 1/16W	
R715		RK73HB1J000J	CHIP R 0.0 J 1/16W		R784		RK73HB1J104J	CHIP R 100K J 1/16W	
R716		RK73GB2A000J	CHIP R 0.0 J 1/10W		R785		RK73HB1J682J	CHIP R 6.8K J 1/16W	
R717		RK73HB1J104J	CHIP R 100K J 1/16W		R786		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R718		RK73HB1J104J	CHIP R 100K J 1/16W		R787		RK73HB1J124J	CHIP R 120K J 1/16W	
R719		RK73HB1J104J	CHIP R 100K J 1/16W		R788		RK73HB1J473J	CHIP R 47K J 1/16W	
R720		RK73HB1J104J	CHIP R 100K J 1/16W		R789		RK73HB1J154J	CHIP R 150K J 1/16W	
R721		RK73HB1J104J	CHIP R 100K J 1/16W		R790		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R722		RK73HB1J104J	CHIP R 100K J 1/16W		R791		RK73HB1J474J	CHIP R 470K J 1/16W	
R723		RK73HB1J105J	CHIP R 1.0M J 1/16W		R793		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R724		RK73HB1J104J	CHIP R 100K J 1/16W		R794		RK73HB1J104J	CHIP R 100K J 1/16W	
R725		RK73HB1J100J	CHIP R 10 J 1/16W		R795		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R726		RK73HB1J104J	CHIP R 100K J 1/16W		R796		RK73HB1J333J	CHIP R 33K J 1/16W	
R727		RK73HB1J105J	CHIP R 1.0M J 1/16W		R797		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R728		RK73HB1J105J	CHIP R 1.0M J 1/16W		R798		RK73HB1J104J	CHIP R 100K J 1/16W	
R729		RK73HB1J105J	CHIP R 1.0M J 1/16W		R799		RK73HB1J334J	CHIP R 330K J 1/16W	
R730		RK73HB1J471J	CHIP R 470 J 1/16W		R800		RK73HB1J474J	CHIP R 470K J 1/16W	
R731		RK73HB1J105J	CHIP R 1.0M J 1/16W		R801		RK73HB1J473J	CHIP R 47K J 1/16W	
R732		RK73HB1J105J	CHIP R 1.0M J 1/16W		R802		RK73HB1J474J	CHIP R 470K J 1/16W	
R733		RK73HB1J473J	CHIP R 47K J 1/16W		R803		RK73HB1J103J	CHIP R 10K J 1/16W	
R735		RK73HB1J473J	CHIP R 47K J 1/16W		R804		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R736		RK73HB1J823J	CHIP R 82K J 1/16W		R805		RK73HB1J473J	CHIP R 47K J 1/16W	
R737		RK73HB1J153J	CHIP R 15K J 1/16W		R806		RK73HB1J473J	CHIP R 47K J 1/16W	
R738		RK73HB1J563J	CHIP R 56K J 1/16W		R807		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R739		RK73HB1J823J	CHIP R 82K J 1/16W		R808		RK73HB1J471J	CHIP R 470 J 1/16W	
R740		RK73HB1J000J	CHIP R 0.0 J 1/16W		R809		RK73HB1J334J	CHIP R 330K J 1/16W	
R741		RK73HB1J474J	CHIP R 470K J 1/16W		R810		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R742		RK73HB1J103J	CHIP R 10K J 1/16W		R811		RK73HB1J823J	CHIP R 82K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4590-14)
TX-RX UNIT (X57-8950-11)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
R812		RK73HB1J562J	CHIP R 5.6K J 1/16W		C18		CK73HB1C103K	CHIP C 0.010UF K	
R813		RK73HB1J273J	CHIP R 27K J 1/16W		C19		CK73HBB1H471K	CHIP C 1000PF K	
R814		RK73HB1J564J	CHIP R 560K J 1/16W		C20		CC73HCH1H220G	CHIP C 22PF G	
R815		RK73HB1J104J	CHIP R 100K J 1/16W		C21		CK73HBB1H471K	CHIP C 1000PF K	
R816		RK73HB1J683J	CHIP R 68K J 1/16W		C22		CC73HCH1H390G	CHIP C 39PF G	
R818		RK73HB1J104J	CHIP R 100K J 1/16W		C24		CC73HCH1H101J	CHIP C 100PF J	
R819		RK73HB1J103J	CHIP R 10K J 1/16W		C25		CC73HCH1H101J	CHIP C 100PF J	
R820		RK73HB1J103J	CHIP R 10K J 1/16W		C26		CC73HCH1H030B	CHIP C 3.0PF B	
R821		RK73HB1J104J	CHIP R 100K J 1/16W		C27		CK73HBB1A104K	CHIP C 1000PF K	
R822		RK73HB1J103J	CHIP R 10K J 1/16W		C28		CC73HCH1H101J	CHIP C 100PF J	
R823		RK73HB1J103J	CHIP R 10K J 1/16W		C29		CK73HBB1A104K	CHIP C 0.10UF K	
R824		RK73HB1J393J	CHIP R 39K J 1/16W		C30		CC730AD1H104J	CHIP C 0.1UF J	
R825		RK73HB1J104J	CHIP R 100K J 1/16W		C31		CC73HCH1H220G	CHIP C 22PF G	
R826		RK73HB1J334J	CHIP R 330K J 1/16W		C32		CC73HCH1H101J	CHIP C 100PF J	
R827		RK73HB1J184J	CHIP R 180K J 1/16W		C34		CC73HCH1H470G	CHIP C 47PF G	
R828		RK73HB1J000J	CHIP R 0.0 J 1/16W		C35		CC73HCH1H101J	CHIP C 100PF J	
R829		RK73HB1J000J	CHIP R 0.0 J 1/16W		C36		CK73HBB1H471K	CHIP C 470PF K	
R830		RK73HB1J105J	CHIP R 1.0M J 1/16W		C37		CK73HBB1H471K	CHIP C 470PF K	
R831		RK73HB1J474J	CHIP R 470K J 1/16W		C38		CK73HBB1H102K	CHIP C 1000PF K	
R832		RK73HB1J473J	CHIP R 47K J 1/16W		C41		CK73HBB1H472K	CHIP C 4700PF K	
R833		RK73HB1J684J	CHIP R 680K J 1/16W		C42		CK73HBB1H471K	CHIP C 470PF K	
R834		RK73HB1J000J	CHIP R 0.0 J 1/16W		C43		CS77MA1VR15M	CHIP TNL 0.15UF 35WV	
R835		RK73HB1J153J	CHIP R 15K J 1/16W		C44		CS77ABE1D100M	CHIP TNL 10UF 20WV	
R836		RK73HB1J473J	CHIP R 47K J 1/16W		C45		CK73HBB1H471K	CHIP C 470PF K	
R837		RK73HB1J683J	CHIP R 68K J 1/16W		C46		CK73HBB1H471K	CHIP C 470PF K	
R838		RK73HB1J564J	CHIP R 560K J 1/16W		C47		CK73HBB1H471K	CHIP C 470PF K	
R839		RK73HB1J333J	CHIP R 33K J 1/16W		C48		C93-1906-05	PLASTIC FILM CAP	
R840		RK73HB1J123J	CHIP R 12K J 1/16W		C50		CC73HCH1H101J	CHIP C 100PF J	
R841		RK73HB1J564J	CHIP R 560K J 1/16W		C51		CC73HCH1H101J	CHIP C 100PF J	
R842		RK73HB1J104J	CHIP R 100K J 1/16W		C52		CK73HBB1H471K	CHIP C 470PF K	
R843		RK73HB1J102J	CHIP R 1.0K J 1/16W		C53		CK73FB0J106K	CHIP C 10UF K	
R844		RK73HB1J472J	CHIP R 4.7K J 1/16W		C54		CK73HBB1H471K	CHIP C 470PF K	
R845		RK73HB1J104J	CHIP R 100K J 1/16W		C55		CK73GXR0J475K	CHIP C 4.7UF K	
R846		RK73HB1J471J	CHIP R 470 J 1/16W		C56		CK73HXR0J105K	CHIP C 1.0UF K	
R847		RK73HB1J182J	CHIP R 1.8K J 1/16W		C57		CC73HCH1H270J	CHIP C 27PF J	
R850		RK73HB1J000J	CHIP R 0.0 J 1/16W		C58		CC73HCH1H470J	CHIP C 47PF J	
R851		RK73HB1J683J	CHIP R 68K J 1/16W		C60		CK73HBB1H471K	CHIP C 470PF K	
R852		RK73HB1J683J	CHIP R 68K J 1/16W		C62		CC73HCH1H030B	CHIP C 3.0PF B	
TH1		ERTJOV104H	THERMISTOR		C63		CK73HBB1H471K	CHIP C 470PF K	
TH701		ERTJOV104H	THERMISTOR		C64		CC73HCH1H030B	CHIP C 3.0PF B	
X101		L77-1802-05	CRYSTAL RESONATOR(32768HZ)		C65		CC73HCH1HR75B	CHIP C 0.75PF B	
X102		L77-3015-05	TCXO (18.432M)		C66		CC73HCH1H080B	CHIP C 8.0PF B	
					C67		CC73HCH1H100B	CHIP C 10PF B	
					C68		CC73HCH1H100B	CHIP C 10PF B	
					C69		CC73HCH1H100B	CHIP C 10PF B	
TX-RX UNIT (X57-8950-11)					C70		CK73HBB1H102K	CHIP C 1000PF K	
C1		CC73HCH1H101J	CHIP C 100PF J		C71		CK73GBB1H103K	CHIP C 0.010UF K	
C3		CK73HB1C103K	CHIP C 0.010UF K		C72		CK73GBB1H102K	CHIP C 1000PF K	
C4		CC73HCH1H101J	CHIP C 100PF J		C74		CC73HCH1H0R5B	CHIP C 0.5PF B	
C5		CC73HCH1H100C	CHIP C 10PF C		C75		CC73HCH1H0R5B	CHIP C 0.5PF B	
C6		CK73HB1C103K	CHIP C 0.010UF K		C76		CK73HBB1H102K	CHIP C 1000PF K	
C7		CK73GXR1C225K	CHIP C 2.2UF K		C77		CC73HCH1H220J	CHIP C 22PF J	
C8		CK73HBB1H102K	CHIP C 1000PF K		C78		CK73HBB1H471K	CHIP C 1000PF K	
C9		CC73HCH1H100C	CHIP C 10PF C		C79		CC73HCH1H101J	CHIP C 100PF J	
C10		CC73HCH1H101J	CHIP C 100PF J		C81		CC73HCH1H470J	CHIP C 47PF J	
C11		CC73HCH1H101J	CHIP C 100PF J		C82		CK73FB0J106K	CHIP C 10UF K	
C12		CK73HBB1H471K	CHIP C 1000PF K		C83		CK73HBB1H471K	CHIP C 470PF K	
C13		CC73HCH1H101J	CHIP C 100PF J		C84		CC73HCH1H050B	CHIP C 5.0PF B	
C15		CK73HBB1H471K	CHIP C 1000PF K		C85		CK73HXR0J105K	CHIP C 1.0UF K	
C16		CC73HCH1H101J	CHIP C 100PF J		C87		CK73HB1C103K	CHIP C 0.010UF K	
C17		CC73HCH1H101J	CHIP C 100PF J						

PARTS LIST

TX-RX UNIT (X57-8950-11)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
C88		CC73HCH1H101J	CHIP C 100PF J		C178		CC73HCH1H120J	CHIP C 12PF J	
C90		CK73HBB1A104K	CHIP C 0.10UF K		C179		CC73HCH1H100B	CHIP C 10PF B	
C91		CK73HBB1A104K	CHIP C 0.10UF K		C180		CC73GCH1H120G	CHIP C 12PF G	
C92		CC73HCH1H020B	CHIP C 2.0PF B		C190		CC73GCH1H270G	CHIP C 27PF G	
C93		CC73HCH1H330J	CHIP C 33PF J		C191		CC73GCH1H181J	CHIP C 180PF J	
C100		CC73HCH1H150J	CHIP C 15PF J		C193		CC73GCH1H330G	CHIP C 33PF G	
C101		CK73HBB1H102K	CHIP C 1000PF K		C201		CK73GB1H104K	CHIP C 0.10UF K	
C102		CK73HBB1H102K	CHIP C 1000PF K		C202		CK73GB1H104K	CHIP C 0.10UF K	
C104		CC73HCH1H100C	CHIP C 10PF C		C203		CC73HCH1H070B	CHIP C 7.0PF B	
C106		CK73HBB1H102K	CHIP C 1000PF K		C204		CK73HB1C103K	CHIP C 0.010UF K	
C109		CK73HBB1H471K	CHIP C 470PF K		C206		CK73HB1C103K	CHIP C 0.010UF K	
C111		CK73HBB1H102K	CHIP C 1000PF K		C207		CC73HCH1H100B	CHIP C 10PF B	
C112		CC73HCH1H560J	CHIP C 56PF J		C208		CC73HCH1H680J	CHIP C 68PF J	
C114		CK73HBB1H102K	CHIP C 1000PF K		C209		CC73HCH1H101J	CHIP C 100PF J	
C115		CK73HBB1H102K	CHIP C 1000PF K		C210		CK73HBB1H471K	CHIP C 470PF K	
C116		CK73HBB1A104K	CHIP C 0.10UF K		C211		CK73HB1C103K	CHIP C 0.010UF K	
C117		CK73HBB1H102K	CHIP C 1000PF K		C212		CC73HCH1H680J	CHIP C 68PF J	
C119		CC73HCH1H180J	CHIP C 18PF J		C213		CK73HB1C103K	CHIP C 0.010UF K	
C120		CK73HBB1H471K	CHIP C 470PF K		C215		CC73HCH1H050B	CHIP C 5.0PF B	
C122		CK73HBB1H102K	CHIP C 1000PF K		C216		CC73HCH1H220G	CHIP C 22PF G	
C123		CK73HBB1A104K	CHIP C 0.10UF K		C217		CC73HCH1H470J	CHIP C 47PF J	
C124		CC73HCH1H560J	CHIP C 56PF J		C219		CC73HCH1H060B	CHIP C 6.0PF B	
C125		CK73HBB1H102K	CHIP C 1000PF K		C220		CK73HB1C103K	CHIP C 0.010UF K	
C127		CC73HCH1H100C	CHIP C 10PF C		C221		CK73HBB1A104K	CHIP C 0.10UF K	
C128		CS77MA1A6R8M	CHIP TNL 6.8UF 10WV		C222		CK73HB1C103K	CHIP C 0.010UF K	
C129		CK73HBB1A104K	CHIP C 0.10UF K		C223		CK73HB1C103K	CHIP C 0.010UF K	
C130		CK73HBB1H102K	CHIP C 1000PF K		C224		CK73HBB1A104K	CHIP C 0.10UF K	
C131		CK73GB1E105K	CHIP C 1.0UF K		C225		CK73HBB1A104K	CHIP C 0.10UF K	
C132		CK73HBB1H102K	CHIP C 1000PF K		C226		CK73HBB1H471K	CHIP C 470PF K	
C133		CK73HBB1H471K	CHIP C 470PF K		C227		CK73HBB1A104K	CHIP C 0.10UF K	
C134		CK73HBB1H471K	CHIP C 470PF K		C228		CK73HBB1A104K	CHIP C 0.10UF K	
C135		CC73GCH1H220G	CHIP C 22PF G		C229		CC73HCH1H100B	CHIP C 10PF B	
C136		CK73GBB1H102K	CHIP C 1000PF K		C230		CK73HBB1A104K	CHIP C 0.10UF K	
C139		CK73HBB1H471K	CHIP C 470PF K		C231		CC73HCH1H100B	CHIP C 10PF B	
C140		CC73GCH1H070B	CHIP C 7.0PF B		C232		CK73HBB1H102K	CHIP C 1000PF K	
C141		CK73HBB1H471K	CHIP C 470PF K		C233		CK73HB1C103K	CHIP C 0.010UF K	
C142		CC73GCH1H090B	CHIP C 9.0PF B		C234		CK73FBB1E474K	CHIP C 0.47UF K	
C143		CC73HCH1H101J	CHIP C 100PF J		C235		CK73HBB1H102K	CHIP C 1000PF K	
C144		CC73GCH1H240G	CHIP C 24PF G		C236		CK73FB1A106K	CHIP C 10UF K	
C145		CK73HB1C103K	CHIP C 0.010UF K		C237		CK73FB1A106K	CHIP C 10UF K	
C146		CC73GCH1H090B	CHIP C 9.0PF B		C238		CK73HB1C103K	CHIP C 0.010UF K	
C148		CK73HBB1H102K	CHIP C 1000PF K		C239		CK73HBB1A104K	CHIP C 0.10UF K	
C149		CC73GCH1H120G	CHIP C 12PF G		C240		CC73HCH1H040B	CHIP C 4.0PF B	
C150		CK73HBB1A104K	CHIP C 0.10UF K		C241		CK73HBB1H102K	CHIP C 1000PF K	
C151		CK73GBB1C104K	CHIP C 0.10UF K		C242		CK73HBB1H102K	CHIP C 1000PF K	
C152		CK73GB1E105K	CHIP C 1.0UF K		C244		CC73HCH1H120G	CHIP C 12PF G	
C154		CC73GCH1H030B	CHIP C 3.0PF B		C245		CK73FB1A475K	CHIP C 4.7UF K	
C155		CK73HBB1H471K	CHIP C 470PF K		C246		CK73HBB1A104K	CHIP C 0.10UF K	
C156		CK73HB1C103K	CHIP C 0.010UF K		C247		CC73HCH1H050B	CHIP C 5.0PF B	
C158		CC73GCH1H330G	CHIP C 33PF G		C248		CC73HCH1H220G	CHIP C 22PF G	
C159		CK73HBB1H471K	CHIP C 470PF K		C249		CK73HBB1A104K	CHIP C 0.10UF K	
C160		CK73HBB1A104K	CHIP C 0.10UF K		C250		CC73HCH1H030B	CHIP C 3.0PF B	
C163		CC73GCH1H120G	CHIP C 12PF G		C251		CC73HCH1H060B	CHIP C 6.0PF B	
C165		CC73GCH1H070B	CHIP C 7.0PF B		C252		CC73HCH1H470G	CHIP C 47PF G	
C166		CC73GCH1H560J	CHIP C 56PF J		C254		CC73HCH1H100B	CHIP C 10PF B	
C167		CC73HCH1H101J	CHIP C 100PF J		C259		CC73HCH1H820J	CHIP C 82PF J	
C168		CC73HCH1H101J	CHIP C 100PF J		C261		CC73HCH1H270J	CHIP C 27PF J	
C169		CK73HBB1A104K	CHIP C 0.10UF K		C262		CK73HB1C103K	CHIP C 0.010UF K	
C173		CK73HBB1H471K	CHIP C 470PF K		C264		CC73HCH1H270J	CHIP C 27PF J	
C177		CC73HCH1H220J	CHIP C 22PF J		C267		CK73HBB1H102K	CHIP C 1000PF K	

PARTS LIST

TX-RX UNIT (X57-8950-11)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
C268		CC73HCH1H390J	CHIP C 39PF J		C429		CC73HCH1H470J	CHIP C 47PF J	
C270		CC73HCH1H1R5B	CHIP C 1.5PF B		C430		CC73HCH1H470J	CHIP C 47PF J	
C273		CC73HCH1H330J	CHIP C 33PF J		C431		CC73HCH1H470J	CHIP C 47PF J	
C274		CK73HBB1H102K	CHIP C 1000PF K		C432		CC73HCH1H470J	CHIP C 47PF J	
C275		CK73HBB1A104K	CHIP C 0.10UF K		C433		CC73HCH1H470J	CHIP C 47PF J	
C276		CK73HBB1A104K	CHIP C 0.10UF K		C434		CC73HCH1H470J	CHIP C 47PF J	
C278		CK73HBB1H102K	CHIP C 1000PF K		C435		CC73HCH1H470J	CHIP C 47PF J	
C281		CK73HB1C103K	CHIP C 0.010UF K		C436		CC73HCH1H470J	CHIP C 47PF J	
C282		CK73GB1E105K	CHIP C 1.0UF K		C437		CC73HCH1H470J	CHIP C 47PF J	
C283		CK73HBB1H102K	CHIP C 1000PF K		C438		CC73HCH1H470J	CHIP C 47PF J	
C284		CK73HBB1H102K	CHIP C 1000PF K		C439		CC73HCH1H470J	CHIP C 47PF J	
C285		CK73HBB1H102K	CHIP C 1000PF K		C440		CC73HCH1H470J	CHIP C 47PF J	
C286		CK73HBB1H102K	CHIP C 1000PF K		C441		CC73HCH1H470J	CHIP C 47PF J	
C290		CC73HCH1H150J	CHIP C 15PF J		C442		CC73HCH1H470J	CHIP C 47PF J	
C291		CK73HBB1H102K	CHIP C 1000PF K		C443		CC73HCH1H470J	CHIP C 47PF J	
C295		CC73HCH1H100B	CHIP C 10PF B		C444		CC73HCH1H470J	CHIP C 47PF J	
C296		CC73HCH1H020B	CHIP C 2.0PF B		C445		CC73HCH1H470J	CHIP C 47PF J	
C297		CC73HCH1H010B	CHIP C 1.0PF B		C447		CC73HCH1H470J	CHIP C 47PF J	
C298		CC73HCH1H020B	CHIP C 2.0PF B		C449		CC73HCH1H470J	CHIP C 47PF J	
C299		CC73HCH1H180J	CHIP C 18PF J		C450		CC73HCH1H470J	CHIP C 47PF J	
C301		CC73HCH1H180J	CHIP C 18PF J		C451		CC73HCH1H470J	CHIP C 47PF J	
C304		CC73HCH1H120J	CHIP C 12PF J		C452		CC73HCH1H470J	CHIP C 47PF J	
C306		CC73HCH1H390J	CHIP C 39PF J		C453		CC73HCH1H470J	CHIP C 47PF J	
C307		CC73HCH1H180J	CHIP C 18PF J		C454		CC73HCH1H470J	CHIP C 47PF J	
C310		CC73HCH1H470G	CHIP C 47PF G		C455		CC73HCH1H470J	CHIP C 47PF J	
C311		CK73HB1C103K	CHIP C 0.010UF K		C456		CC73HCH1H470J	CHIP C 47PF J	
C312		CK73GB1H104K	CHIP C 0.10UF K		C457		CC73HCH1H470J	CHIP C 47PF J	
C314		CK73HBB1A104K	CHIP C 0.10UF K		C458		CC73HCH1H470J	CHIP C 47PF J	
C316		CK73HBB1H102K	CHIP C 1000PF K		C460		CC73HCH1H470J	CHIP C 47PF J	
C317		CC73HCH1H100B	CHIP C 10PF B		C462		CK73HBB1H471K	CHIP C 470PF K	
C320		CC73HCH1H010B	CHIP C 1.0PF B		C463		CK73HBB1H471K	CHIP C 470PF K	
C355		CK73HBB1A104K	CHIP C 0.10UF K		C464		CK73HBB1H102K	CHIP C 1000PF K	
C356		CK73HBB1A104K	CHIP C 0.10UF K		C465		CK73HBB1H102K	CHIP C 1000PF K	
C362		CC73HCH1H330J	CHIP C 33PF J		C466		CK73HBB1H102K	CHIP C 1000PF K	
C386		CC73HCH1H070B	CHIP C 7.0PF B		C467		CK73HBB1H102K	CHIP C 1000PF K	
C400		CC73GCH1H220J	CHIP C 22PF J		C468		CK73HBB1H102K	CHIP C 1000PF K	
C402		CK73HBB1H471K	CHIP C 470PF K		C470		CC73HCH1H470J	CHIP C 47PF J	
C403		CK73HBB1H471K	CHIP C 470PF K		C472		CC73HCH1H470J	CHIP C 47PF J	
C404		CK73GB1E105K	CHIP C 1.0UF K		C473		CC73HCH1H470J	CHIP C 47PF J	
C405		CK73GB1E105K	CHIP C 1.0UF K		C474		CC73HCH1H470J	CHIP C 47PF J	
C406		CK73GB1E105K	CHIP C 1.0UF K		C475		CK73HXR0J105K	CHIP C 1.0UF K	
C407		CK73GBB1C224K	CHIP C 0.22UF K		C476		CC73HCH1H470J	CHIP C 47PF J	
C408		CK73GB1E105K	CHIP C 1.0UF K		C478		CC73HCH1H470J	CHIP C 47PF J	
C409		C92-0765-05	CHIP TNTL 4.7UF 16WV		C479		CC73HCH1H470J	CHIP C 47PF J	
C410		CK73GBB1C224K	CHIP C 0.22UF K		C480		CK73GB1E105K	CHIP C 1.0UF K	
C411		CK73HBB1A104K	CHIP C 0.10UF K		C499		CC73HCH1H470J	CHIP C 47PF J	
C414		CK73GBB1C224K	CHIP C 0.22UF K		CF200		L72-1017-05	CERAMIC FILTER	
C415		CK73HBB1H471K	CHIP C 470PF K		CF201		L72-1020-05	CERAMIC FILTER	
C416		CK73GB1E105K	CHIP C 1.0UF K		CN102		E23-1326-05	TERMINAL	
C417		CC73HCH1E181J	CHIP C 180PF J		CN400		E40-6422-15	SOCKET FOR PIN ASSY	
C418		CK73GB1E105K	CHIP C 1.0UF K		CN401		E40-6752-05	FLAT CABLE CONNECTOR	
C419		CC73HCH1H220J	CHIP C 22PF J		CN736		E40-6358-05	SOCKET FOR PIN ASSY	
C420		CK73HBB1H471K	CHIP C 470PF K		D2		HVC131	DIODE	
C421		CK73GBB1C224K	CHIP C 0.22UF K		D3		HVC131	DIODE	
C422		CK73GB1E105K	CHIP C 1.0UF K		D4		KDS123E-P	DIODE	
C423		CK73GBB1C224K	CHIP C 0.22UF K		D5		HVC131	DIODE	
C424		CK73GB1E105K	CHIP C 1.0UF K		D6		HVC131	DIODE	
C425		CK73GB1E105K	CHIP C 1.0UF K		D7		HSC119	DIODE	
C426		CC73HCH1H470J	CHIP C 47PF J		D8		1SV325F	VARIABLE CAPACITANCE DIODE	
C428		CC73HCH1H470J	CHIP C 47PF J		D9		1SV282-F	VARIABLE CAPACITANCE DIODE	

PARTS LIST

TX-RX UNIT (X57-8950-11)

Ref. No.	Address	Parts No.	Description	Destination	Ref. No.	Address	Parts No.	Description	Destination
D12		1SV282-F	VARIABLE CAPACITANCE DIODE		L24		L40-2778-67	SMALL FIXED INDUCTOR(27NH)	
D13		HVC376B	VARIABLE CAPACITANCE DIODE		L25		L40-1285-92	SMALL FIXED INDUCTOR(120NH)	
D14		1SV282-F	VARIABLE CAPACITANCE DIODE		L26		LK73G0AQ3R3K	SMALL FIXED INDUCTOR(3.3UH)	
D15		1SV282-F	VARIABLE CAPACITANCE DIODE		L27		LK73G0AQ3R3K	SMALL FIXED INDUCTOR(3.3UH)	
D16		1SV282-F	VARIABLE CAPACITANCE DIODE		L29		L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
D17		1SV282-F	VARIABLE CAPACITANCE DIODE		L30		L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
D18		1SV278F	VARIABLE CAPACITANCE DIODE		L98		LB73H0AV-003	BEADS CORE	
D100		HSC277	DIODE		L99		LB73H0AV-003	BEADS CORE	
D103		HZU2ALL	ZENER DIODE		L100		LK73G0AFR10J	SMALL FIXED INDUCTOR(100NH)	
D104		HVC131	DIODE		L102		L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
D105		HVC131	DIODE		L103		LK73G0AFR10J	SMALL FIXED INDUCTOR(100NH)	
D106		HZU5CLL	ZENER DIODE		L104		LB73G0BD-005	CHIP FERRITE	
D201		HSC277	DIODE		L105		L40-4775-92	SMALL FIXED INDUCTOR(47NH)	
D204		1SV305F	VARIABLE CAPACITANCE DIODE		L106		L41-1085-43	SMALL FIXED INDUCTOR(100NH)	
D205		1SV305F	VARIABLE CAPACITANCE DIODE		L107		LB73F0AW-002	CHIP FERRITE	
D207		1SV305F	VARIABLE CAPACITANCE DIODE		L108		LK73G0AF15NJ	SMALL FIXED INDUCTOR(15NH)	
D208		1SV305F	VARIABLE CAPACITANCE DIODE		L109		LR79Z0DD37N7J	CHIP INDUCTOR	
D209		HVC131	DIODE		L110		LR79Z0DD37N7J	CHIP INDUCTOR	
D211		HVC131	DIODE		L111		L34-4576-05	AIR-CORE COIL	
D213		HVC131	DIODE		L112		LB73F0AW-002	CHIP FERRITE	
D400		1SR154-400	DIODE		L113		LR79Z0DD27N4J	AIR-CORE COIL	
D401		HSC119	DIODE		L114		LR79Z0DD21N9J	AIR-CORE COIL	
D402		B30-2278-05	LED(RED/YELLOW)		L115		L41-2295-39	SMALL FIXED INDUCTOR(2.2U)	
D403		1SS388F	SCHOTTKY BARRIER DIODE		L117		LR79Z0DC45N5J	AIR-CORE COIL	
D404		1PMT5929BT1G	ZENER DIODE		L118		LR79Z0DD16N9J	AIR-CORE COIL	
D405		1PMT5929BT1G	ZENER DIODE		L119		LR79Z0DD12N2J	AIR-CORE COIL	
F400		F53-0324-15	FUSE(2.5A)		L201		L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
F401		F53-0479-05	FUSE(0.15A)		L202		L40-1891-86	SMALL FIXED INDUCTOR(1.8U)	
IC1		LM73C1MKX-0	MOS-IC		L203		L41-4778-45	SMALL FIXED INDUCTOR(47NH)	
IC2		LMC7101BIM5	MOS-IC		L204		LB73G0BD-005	CHIP FERRITE	
IC3		SKY72310362LF	MOS-IC		L205		LR77Z0AER27J	SMALL FIXED INDUCTOR(0.27U)	
IC4		TC75W51FUF	MOS-IC		L206		LR77Z0AER56J	SMALL FIXED INDUCTOR(0.56U)	
IC5		TLV2381IDBV	MOS-IC		L207		LK73G0AFR10J	SMALL FIXED INDUCTOR(100NH)	
IC100		TA75W01FUF	BIPOLAR IC		L208		LK73G0AF33NJ	SMALL FIXED INDUCTOR(33NH)	
IC200		TLV2381IDBV	MOS-IC		L209		LK73G0AF33NJ	SMALL FIXED INDUCTOR(33NH)	
IC201		TLV2381IDBV	MOS-IC		L210		L41-6878-14	SMALL FIXED INDUCTOR(68NH)	
IC202		TK10931VTL-G	ANALOGUE IC		L214		LB73G0BD-005	CHIP FERRITE	
IC203		MCP6021-E/OT	MOS-IC		L215		L41-6878-14	SMALL FIXED INDUCTOR(68NH)	
IC400		TK11250CUCB	MOS-IC		L220		L41-6878-14	SMALL FIXED INDUCTOR(68NH)	
IC401		TC75S51FE(F)	MOS-IC		L223		L40-5675-92	SMALL FIXED INDUCTOR(56NH)	
IC402		XC9101D09AK-G	MOS-IC		L224		L41-5678-14	SMALL FIXED INDUCTOR(56NH)	
IC403		TK71733S	BI-POLAR IC		L226		LB73G0BD-005	CHIP FERRITE	
IC404		TC75W51FUF	MOS-IC		L230		L40-2702-86	SMALL FIXED INDUCTOR(27U)	
L1		LR77Z0AE4R7J	SMALL FIXED INDUCTOR(4.7U)		L250		L40-1085-57	SMALL FIXED INDUCTOR(100NH)	
L2		L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)		L400		LB73F0AW-002	CHIP FERRITE	
L3		L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)		L401		L33-1462-05	SMALL FIXED INDUCTOR(68UH)	
L5		L40-8275-92	SMALL FIXED INDUCTOR(82NH)		L402		L41-2285-14	SMALL FIXED INDUCTOR(220NH)	
L6		L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)		Q1		EMD12	TRANSISTOR	
L7		L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)		Q2		1TA014YEBFS8	TRANSISTOR	
L8		LK73G0AF39NJ	SMALL FIXED INDUCTOR(39NH)		Q4		2SC5636	TRANSISTOR	
L10		LB73H0AV-003	BEADS CORE		Q6		2SC5383-T111	TRANSISTOR	
L11		L40-1891-86	SMALL FIXED INDUCTOR(1.8U)		Q7		SSM6L05FU-F	FET	
L12		LK73G0AQ3R3K	SMALL FIXED INDUCTOR(3.3UH)		Q8		2SK508NV(K52)	FET	
L15		L92-0446-05	SMALL FIXED INDUCTOR(220NH)		Q9		2SJ347F	FET	
L16		LK73G0AFR22J	SMALL FIXED INDUCTOR(220NH)		Q10		2SK508NV(K52)	FET	
L17		LK73G0AFR22J	SMALL FIXED INDUCTOR(220NH)		Q11		2SC5636	TRANSISTOR	
L18		LK73G0AFR22J	SMALL FIXED INDUCTOR(220NH)		Q12		2SK879-F(Y)	FET	
L19		LK73G0AFR22J	SMALL FIXED INDUCTOR(220NH)		Q13		SSM3K15TE(F)	FET	
L20		LK73G0AFR22J	SMALL FIXED INDUCTOR(220NH)		Q100		2SC5636	TRANSISTOR	
L23		L40-5678-67	SMALL FIXED INDUCTOR(56NH)		Q102		2SK3077F	FET	

PARTS LIST

TX-RX UNIT (X57-8950-11)

Ref. No.	Address	Parts No.	Description	Destination	Ref. No.	Address	Parts No.	Description	Destination
Q103		RD01MUS1-T113	FET		R49		RK73HB1J154J	CHIP R 150K J 1/16W	
Q104		2SC5383-T111	TRANSISTOR		R50		RK73HB1J101J	CHIP R 100 J 1/16W	
Q105		LTC044EEBFS8	DIGITAL TRANSISTOR		R51		RK73HB1J102J	CHIP R 1.0K J 1/16W	
Q106		RD07MVS1BT122	FET		R52		RK73HB1J473J	CHIP R 47K J 1/16W	
Q107		2SK1824-A	FET		R53		RK73HB1J683J	CHIP R 68K J 1/16W	
Q109		SSM3K15TE(F)	FET		R54		RK73HB1J102J	CHIP R 1.0K J 1/16W	
Q110		EMD5	DIGITAL TRANSISTOR ARRAY		R55		RK73HB1J104J	CHIP R 100K J 1/16W	
Q201		2SC5108F/Y/	TRANSISTOR		R56		RK73HB1J000J	CHIP R 0.0 J 1/16W	
Q202		2SC4215-F(Y)	TRANSISTOR		R57		RK73HB1J124J	CHIP R 120K J 1/16W	
Q203		3SK318	FET		R58		RK73HB1J823J	CHIP R 82K J 1/16W	
Q204		3SK294-FP	FET		R59		RN73HH1J104D	CHIP R 100K D 1/16W	
Q401		SSM6L05FU-F	FET		R60		RN73HH1J104D	CHIP R 100K D 1/16W	
Q402		SSM6L05FU-F	FET		R62		RK73HB1J104J	CHIP R 100K J 1/16W	
Q403		SSM6L05FU-F	FET		R63		RK73HB1J220J	CHIP R 22 J 1/16W	
Q404		SSM5H01TU-F	FET		R64		RK73HB1J473J	CHIP R 47K J 1/16W	
Q405		2SA1955A-F	TRANSISTOR		R67		RK73HB1J472J	CHIP R 4.7K J 1/16W	
Q406		UMG9N	DIGITAL TRANSISTOR ARRAY		R69		RK73HB1J560J	CHIP R 56 J 1/16W	
R1		RK73HH1J474D	CHIP R 470K D 1/16W		R70		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R2		RK73HB1J470J	CHIP R 47 J 1/16W		R71		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R3		RK73HB1J100J	CHIP R 10 J 1/16W		R72		RK73HB1J104J	CHIP R 100K J 1/16W	
R5		RK73HB1J100J	CHIP R 10 J 1/16W		R74		RK73HB1J153J	CHIP R 15K J 1/16W	
R6		RK73HB1J100J	CHIP R 10 J 1/16W		R75		RK73HB1J100J	CHIP R 10 J 1/16W	
R7		RK73HB1J472J	CHIP R 4.7K J 1/16W		R76		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R8		RK73HB1J100J	CHIP R 10 J 1/16W		R77		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R9		RK73HB1J102J	CHIP R 1.0K J 1/16W		R100		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R10		RK73HB1J000J	CHIP R 0.0 J 1/16W		R101		RK73HB1J103J	CHIP R 10K J 1/16W	
R11		RK73HB1J223J	CHIP R 22K J 1/16W		R102		RK73HB1J271J	CHIP R 270 J 1/16W	
R12		RK73HB1J223J	CHIP R 22K J 1/16W		R103		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R15		RK73HB1J100J	CHIP R 10 J 1/16W		R104		RK73HB1J470J	CHIP R 47 J 1/16W	
R17		RK73HH1J184D	CHIP R 180K D 1/16W		R105		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R18		RK73HH1J473D	CHIP R 47K D 1/16W		R106		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R19		RK73HB1J102J	CHIP R 1.0K J 1/16W		R107		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R21		RK73HB1J106J	CHIP R 10M J 1/16W		R111		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R22		RK73HB1J100J	CHIP R 10 J 1/16W		R118		RK73HB1J101J	CHIP R 100 J 1/16W	
R23		RK73HB1J100J	CHIP R 10 J 1/16W		R119		RK73HB1J103J	CHIP R 10K J 1/16W	
R24		RK73HB1J000J	CHIP R 0.0 J 1/16W		R120		RK73HB1J223J	CHIP R 22K J 1/16W	
R25		RK73HB1J000J	CHIP R 0.0 J 1/16W		R123		RK73HB1J331J	CHIP R 330 J 1/16W	
R26		RK73HB1J331J	CHIP R 330 J 1/16W		R124		RK73HB1J180J	CHIP R 18 J 1/16W	
R27		RK73HB1J000J	CHIP R 0.0 J 1/16W		R126		RK73HB1J273J	CHIP R 27K J 1/16W	
R28		RK73HB1J223J	CHIP R 22K J 1/16W		R127		RK73HB1J473J	CHIP R 47K J 1/16W	
R29		RK73HB1J000J	CHIP R 0.0 J 1/16W		R129		RK73HB1J470J	CHIP R 47 J 1/16W	
R30		RK73HB1J563J	CHIP R 56K J 1/16W		R130		RK73HB1J333J	CHIP R 33K J 1/16W	
R31		RK73HB1J121J	CHIP R 120 J 1/16W		R131		RK73HB1J561J	CHIP R 560 J 1/16W	
R32		RK73HB1J000J	CHIP R 0.0 J 1/16W		R133		RK73HB1J331J	CHIP R 330 J 1/16W	
R33		RK73HB1J223J	CHIP R 22K J 1/16W		R134		RK73HB1J561J	CHIP R 560 J 1/16W	
R34		RK73HH1J391D	CHIP R 390 D 1/16W		R135		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R35		RK73HB1J103J	CHIP R 10K J 1/16W		R136		RK73EB2ER39J	CHIP R 0.39 J 1/4W	
R36		RK73HB1J472J	CHIP R 4.7K J 1/16W		R137		RK73HB1J100J	CHIP R 10 J 1/16W	
R37		RK73HB1J000J	CHIP R 0.0 J 1/16W		R138		RK73EB2ER39J	CHIP R 0.39 J 1/4W	
R38		RK73HB1J000J	CHIP R 0.0 J 1/16W		R139		RK73HB1J473J	CHIP R 47K J 1/16W	
R39		RK73HB1J152J	CHIP R 1.5K J 1/16W		R141		RK73EB2ER39J	CHIP R 0.39 J 1/4W	
R40		RK73HB1J103J	CHIP R 10K J 1/16W		R142		RK73HB1J223J	CHIP R 22K J 1/16W	
R41		RK73HB1J474J	CHIP R 470K J 1/16W		R144		RK73HH1J154D	CHIP R 150K D 1/16W	
R42		RK73HB1J473J	CHIP R 47K J 1/16W		R145		RK73HH1J154D	CHIP R 150K D 1/16W	
R43		RK73HB1J102J	CHIP R 1.0K J 1/16W		R146		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R44		RK73HB1J473J	CHIP R 47K J 1/16W		R147		RK73HH1J184D	CHIP R 180K D 1/16W	
R45		RK73HB1J473J	CHIP R 47K J 1/16W		R148		RK73HH1J184D	CHIP R 180K D 1/16W	
R46		RK73HH1J331D	CHIP R 330 D 1/16W		R149		RK73HH1J184D	CHIP R 180K D 1/16W	
R47		RK73HB1J220J	CHIP R 22 J 1/16W		R150		RK73HH1J184D	CHIP R 180K D 1/16W	
R48		RK73HH1J271D	CHIP R 270 D 1/16W		R151		RK73HB1J103J	CHIP R 10K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8950-11)

Ref. No.	Address	Parts No.	Description	Desti- nation	Ref. No.	Address	Parts No.	Description	Desti- nation
R152		RK73EB2E823J	CHIP R 82K J 1/4W		R254		RK73HB1J103J	CHIP R 10K J 1/16W	
R153		RK73HB1J473J	CHIP R 47K J 1/16W		R255		RK73HB1J272J	CHIP R 2.7K J 1/16W	
R154		RK73HB1J000J	CHIP R 0.0 J 1/16W		R256		RK73HB1J103J	CHIP R 10K J 1/16W	
R155		RK73HB1J474J	CHIP R 470K J 1/16W		R257		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R156		RK73HB1J182J	CHIP R 1.8K J 1/16W		R260		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R157		RK73HB1J104J	CHIP R 100K J 1/16W		R262		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R158		RK73HB1J104J	CHIP R 100K J 1/16W		R263		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R161		RK73HB1J000J	CHIP R 0.0 J 1/16W		R265		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R162		RK73HB1J271J	CHIP R 270 J 1/16W		R268		RK73HB1J680J	CHIP R 68 J 1/16W	
R163		RK73HB1J271J	CHIP R 270 J 1/16W		R269		RK73HB1J221J	CHIP R 220 J 1/16W	
R164		RK73HB1J103J	CHIP R 10K J 1/16W		R272		RK73HB1J154J	CHIP R 150K J 1/16W	
R165		RK73HB1J474J	CHIP R 470K J 1/16W		R273		RK73HB1J823J	CHIP R 82K J 1/16W	
R166		RK73HB1J102J	CHIP R 1.0K J 1/16W		R274		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R167		RK73HB1J183J	CHIP R 18K J 1/16W		R276		RK73HB1J104J	CHIP R 100K J 1/16W	
R168		RK73HB1J124J	CHIP R 120K J 1/16W		R277		RK73HB1J104J	CHIP R 100K J 1/16W	
R170		RK73HB1J224J	CHIP R 220K J 1/16W		R279		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R171		RK73GB2A000J	CHIP R 0.0 J 1/10W		R280		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R176		RK73HB1J331J	CHIP R 330 J 1/16W		R281		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R177		RK73HB1J331J	CHIP R 330 J 1/16W		R282		RK73HB1J103J	CHIP R 10K J 1/16W	
R202		RK73HB1J103J	CHIP R 10K J 1/16W		R283		RK73HB1J104J	CHIP R 100K J 1/16W	
R203		RK73HB1J103J	CHIP R 10K J 1/16W		R285		RK73HB1J103J	CHIP R 10K J 1/16W	
R204		RK73HB1J561J	CHIP R 560 J 1/16W		R289		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R205		RK73HB1J224J	CHIP R 220K J 1/16W		R293		RK73HB1J473J	CHIP R 47K J 1/16W	
R206		RK73HB1J104J	CHIP R 100K J 1/16W		R295		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R207		RK73HB1J224J	CHIP R 220K J 1/16W		R296		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R208		RK73HB1J104J	CHIP R 100K J 1/16W		R299		RK73HB1J470J	CHIP R 47 J 1/16W	
R209		RK73HB1J104J	CHIP R 100K J 1/16W		R300		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R210		RK73HB1J104J	CHIP R 100K J 1/16W		R301		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R211		RK73HB1J334J	CHIP R 330K J 1/16W		R302		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R212		RK73HB1J221J	CHIP R 220 J 1/16W		R303		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R214		RK73HB1J564J	CHIP R 560K J 1/16W		R304		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R216		RK73HB1J221J	CHIP R 220 J 1/16W		R305		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R218		RK73HB1J221J	CHIP R 220 J 1/16W		R307		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R220		RK73HB1J470J	CHIP R 47 J 1/16W		R310		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R221		RK73HB1J104J	CHIP R 100K J 1/16W		R311		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R222		RK73HB1J100J	CHIP R 10 J 1/16W		R313		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R223		RK73HB1J274J	CHIP R 270K J 1/16W		R314		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R225		RK73HB1J681J	CHIP R 680 J 1/16W		R318		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R226		RK73HB1J103J	CHIP R 10K J 1/16W		R319		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R227		RK73HB1J472J	CHIP R 4.7K J 1/16W		R320		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R228		RK73HB1J221J	CHIP R 220 J 1/16W		R321		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R229		RK73HB1J103J	CHIP R 10K J 1/16W		R322		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R230		RK73HB1J102J	CHIP R 1.0K J 1/16W		R325		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R231		RK73HB1J223J	CHIP R 22K J 1/16W		R326		RK73HB1J104J	CHIP R 100K J 1/16W	
R233		RK73HB1J183J	CHIP R 18K J 1/16W		R400		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R234		RK73HB1J823J	CHIP R 82K J 1/16W		R402		RK73HB1J330J	CHIP R 33 J 1/16W	
R235		RK73HB1J823J	CHIP R 82K J 1/16W		R404		RK73HB1J474J	CHIP R 470K J 1/16W	
R236		RK73HB1J222J	CHIP R 2.2K J 1/16W		R405		RK73HB1J474J	CHIP R 470K J 1/16W	
R237		RK73HB1J472J	CHIP R 4.7K J 1/16W		R406		RK73HB1J474J	CHIP R 470K J 1/16W	
R238		RK73HB1J222J	CHIP R 2.2K J 1/16W		R407		RK73HB1J473J	CHIP R 47K J 1/16W	
R239		RK73HB1J823J	CHIP R 82K J 1/16W		R408		RK73GB2A100J	CHIP R 10 J 1/10W	
R240		RK73HB1J823J	CHIP R 82K J 1/16W		R409		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R241		RK73GB2A000J	CHIP R 0.0 J 1/10W		R410		RK73HB1J474J	CHIP R 470K J 1/16W	
R242		RK73HB1J473J	CHIP R 47K J 1/16W		R411		RK73HB1J474J	CHIP R 470K J 1/16W	
R243		RK73HB1J183J	CHIP R 18K J 1/16W		R412		RK73HB1J474J	CHIP R 470K J 1/16W	
R245		RK73HB1J104J	CHIP R 100K J 1/16W		R413		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R246		RK73HB1J101J	CHIP R 100 J 1/16W		R415		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R248		RK73HB1J100J	CHIP R 10 J 1/16W		R417		RK73HB1J154J	CHIP R 150K J 1/16W	
R251		RK73HB1J000J	CHIP R 0.0 J 1/16W		R418		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R253		RK73HB1J102J	CHIP R 1.0K J 1/16W		R419		RK73HB1J473J	CHIP R 47K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8950-11)

Ref. No.	Address	Parts No.	Description				Desti-nation	Ref. No.	Address	Parts No.	Description	Desti-nation
R420		RK73HB1J473J	CHIP R	47K	J	1/16W						
R421		RK73HB1J102J	CHIP R	1.0K	J	1/16W						
R422		RK73HB1J474J	CHIP R	470K	J	1/16W						
R423		RK73HB1J123J	CHIP R	12K	J	1/16W						
R424		RK73HH1J274D	CHIP R	270K	D	1/16W						
R425		RK73HH1J223D	CHIP R	22K	D	1/16W						
R426		RK73HB1J100J	CHIP R	10	J	1/16W						
R427		RK73HB1J391J	CHIP R	390	J	1/16W						
R428		RK73HB1J821J	CHIP R	820	J	1/16W						
R429		RK73GB2A000J	CHIP R	0.0	J	1/10W						
R430		RK73GB2A000J	CHIP R	0.0	J	1/10W						
R436		RK73HB1J102J	CHIP R	1.0K	J	1/16W						
R438		RK73GB2A000J	CHIP R	0.0	J	1/10W						
R439		RK73HH1J183D	CHIP R	18K	D	1/16W						
R440		RK73HB1J474J	CHIP R	470K	J	1/16W						
R451		RK73HB1J000J	CHIP R	0.0	J	1/16W						
R452		RK73HB1J102J	CHIP R	1.0K	J	1/16W						
R490		RK73HB1J000J	CHIP R	0.0	J	1/16W						
R498		RK73HB1J000J	CHIP R	0.0	J	1/16W						
R499		RK73HB1J000J	CHIP R	0.0	J	1/16W						
R500		RK73HB1J103J	CHIP R	10K	J	1/16W						
R501		RK73HB1J103J	CHIP R	10K	J	1/16W						
R959		RK73HB1J562J	CHIP R	5.6K	J	1/16W						
S1		S70-0483-05	TACT SWITCH									
TH100		ERTJOV104H	THERMISTOR									
X1		L77-3014-05	TCXO	(19.2M)								
XF200		L71-0679-05	MCF	(58.05MHZ)								