



EXPLODED VIEW (CD MECHANISM)

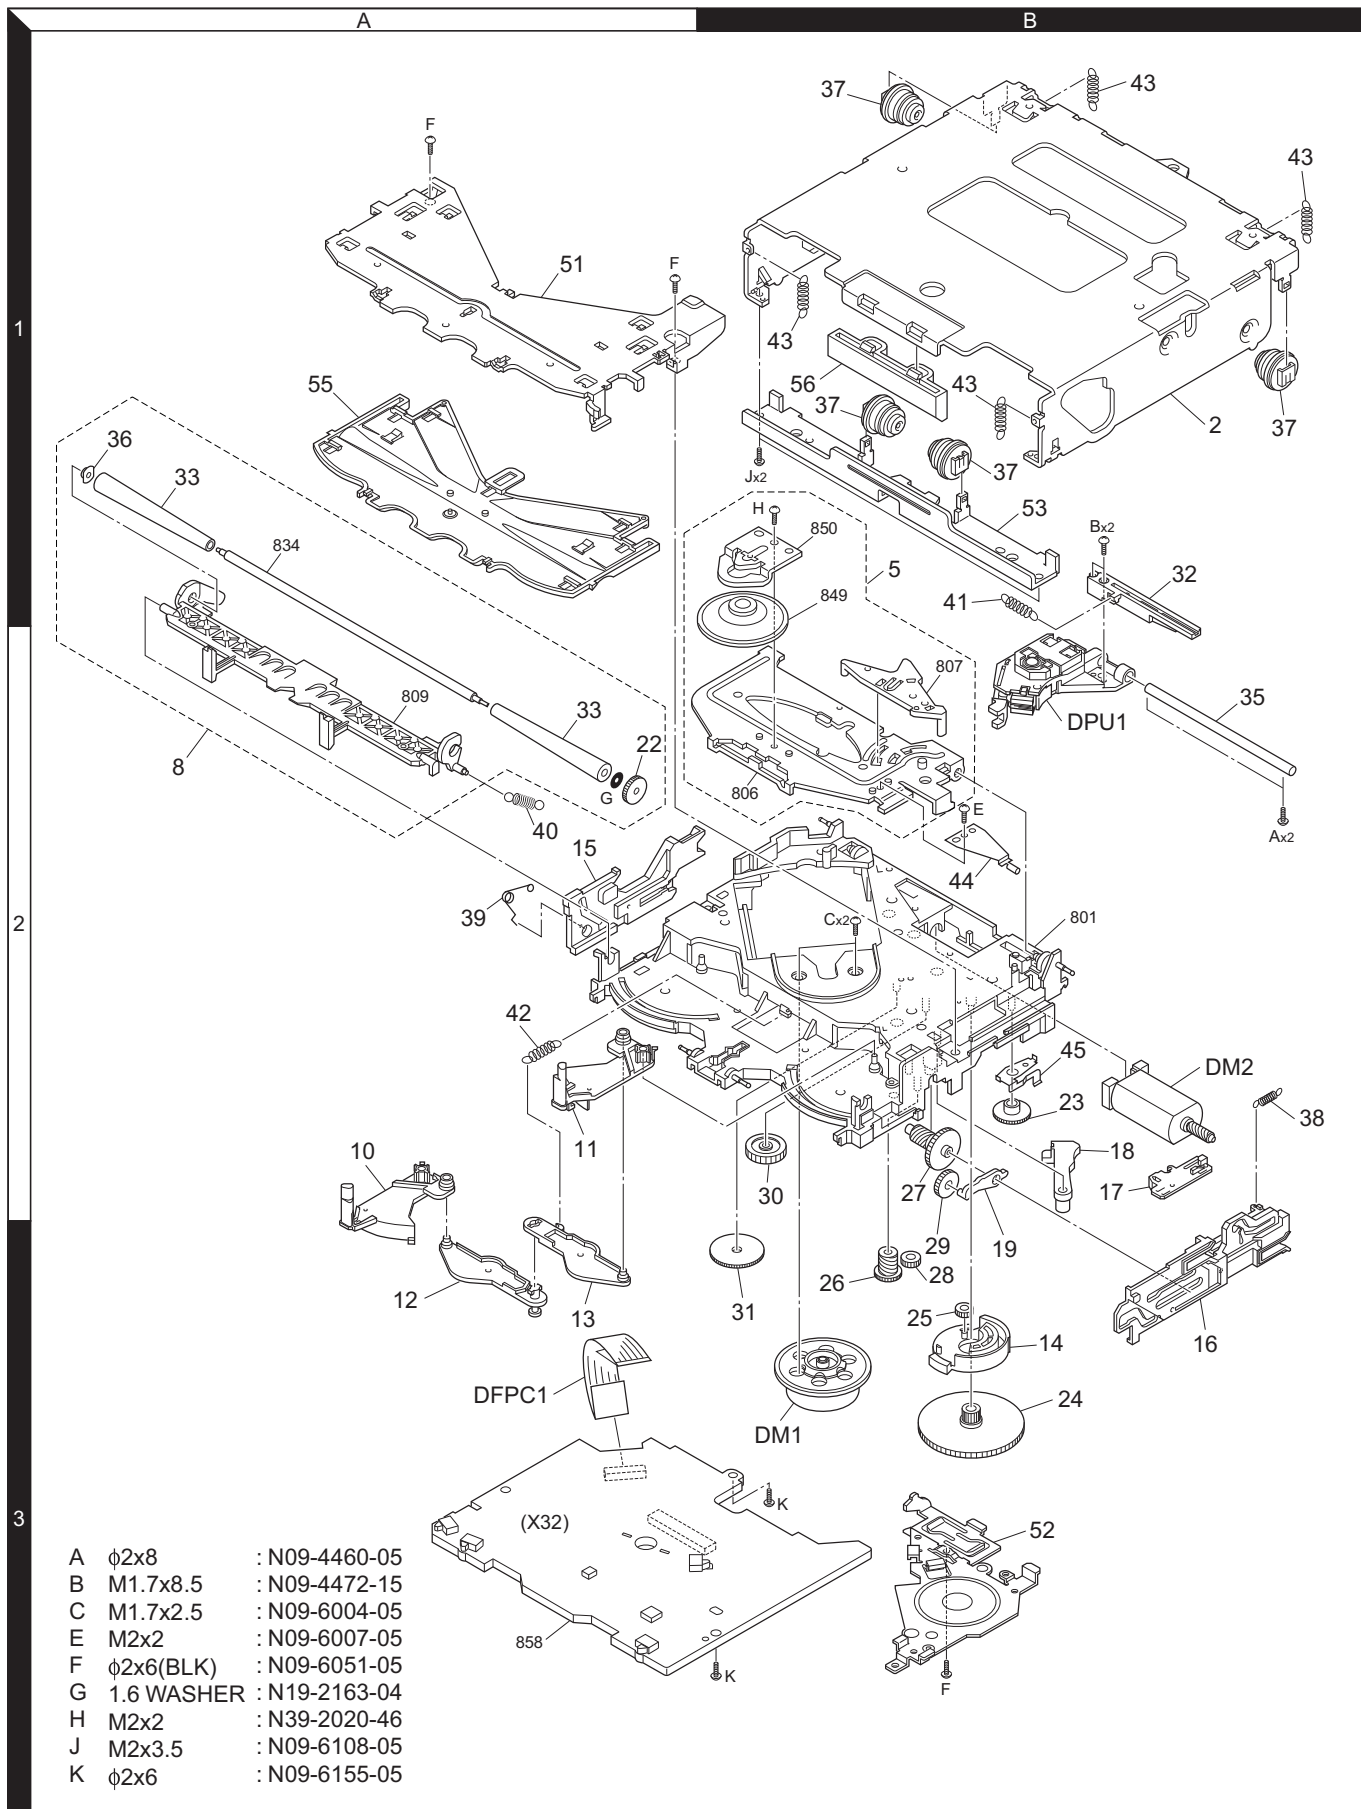

EXPLODED VIEW (UNIT)

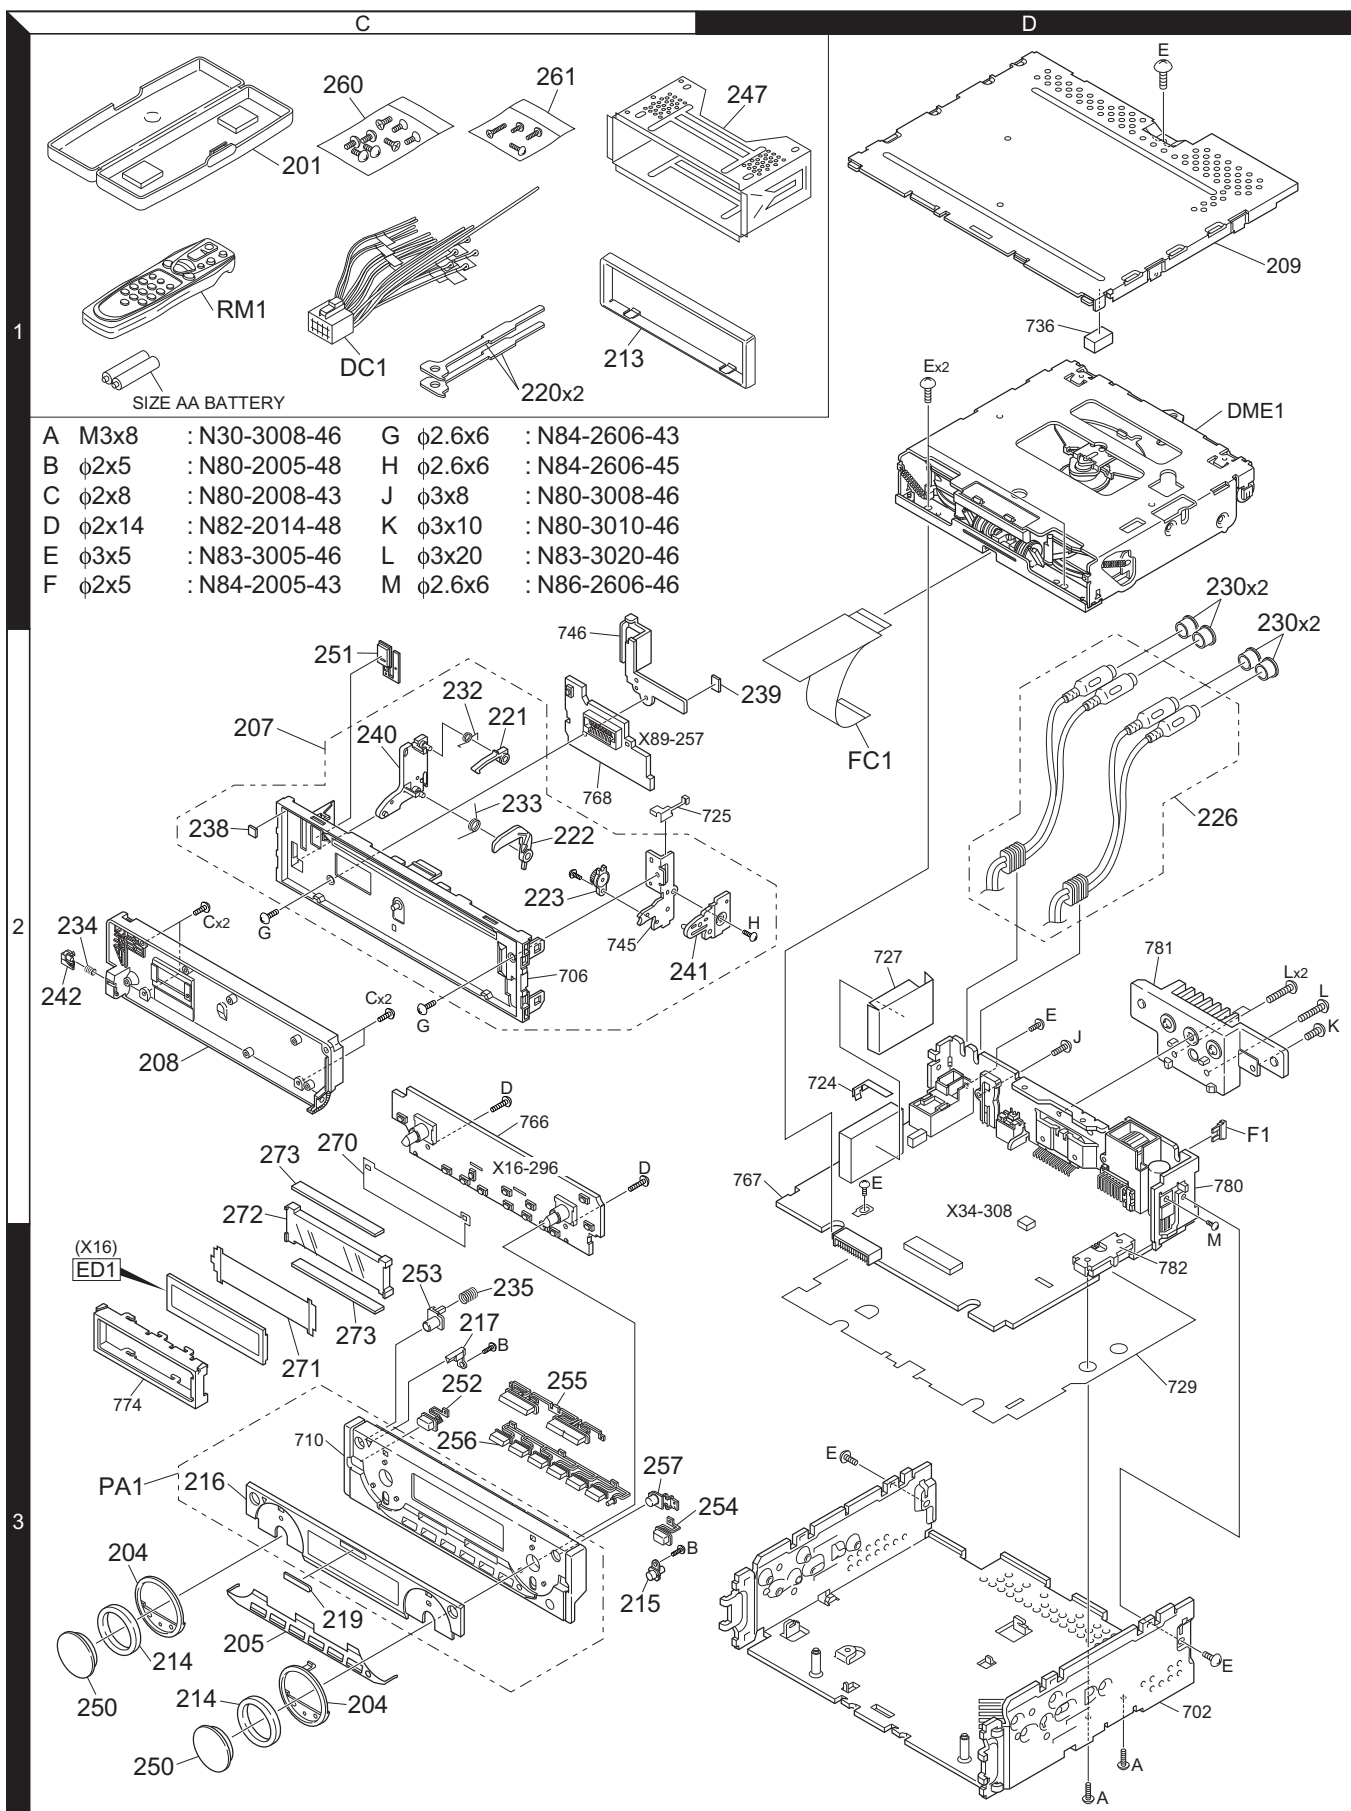

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
EZ500					
201	1C	*	A02-2735-03	PLASTIC CABINET ASSY	
204	3C	*	A21-4377-03	DRESSING PANEL (RING)	
205	3C	*	A21-4378-13	DRESSING PANEL (ALUMINUM)	
207	2C	*	A22-3061-02	SUB PANEL ASSY	
208	2C		A46-1797-01	REAR COVER	
209	1D		A52-0829-02	TOP PLATE	
PA1	3C	*	A64-3418-12	PANEL ASSY	
RM1	1C		A70-2059-05	REMOTE CONTROLLER ASSY (RC-505)	
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-		*	B64-2854-00	INSTRUCTION MANUAL (ENG.FRE.SPA)	
213	1C	*	B07-3117-02	ESCUTCHEON	
214	3C	*	B09-0537-03	CAP (VOL)	
215	3C	*	B10-4585-04	FRONT GLASS (REMOTE)	
216	3C	*	B10-4593-02	FRONT GLASS	
217	3C	*	B19-2283-04	LIGHTING BOARD	
219	3C		B43-1518-04	BADGE	
220	1C		D10-4589-04	LEVER	
221	2C		D10-4730-03	LEVER (LOCK)	
222	2C		D10-4731-03	LEVER (PUSH)	
223	2C		D39-0255-05	DAMPER	
226	2D		E30-6278-05	CORD WITH PINPLUG (AUX, FRONT)	
DC1	1C		E30-6294-05	DC CORD	
FC1	2D		E39-0438-05	FLAT CABLE (24PIN)	
230	2D		F29-0626-04	INSULATING COVER	
F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE) (10A)	
232	2C		G01-3171-04	TORSION COIL SPRING (LOCK)	
233	2C		G01-3172-04	TORSION COIL SPRING (PUSH)	
234	2C		G01-3173-04	COMPRESSION SPRING (REAR COVER)	
235	3C		G01-3203-04	COMPRESSION SPRING	
238	2C		G13-1267-04	CUSHION	
239	2D		G13-1273-04	CUSHION	
-		*	H10-4919-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-3233-03	ITEM CARTON CASE	
240	2C		J19-5203-03	HOLDER (LEFT)	
241	2C		J19-5204-03	HOLDER (RIGHT)	
242	2C		J19-5205-03	HOLDER (REAR COVER)	
247	1D		J22-0011-03	MOUNTING HARDWARE ASSY	
250	3C	*	K23-1091-03	KNOB (VOL)	
251	2C		K24-4000-03	PUSH KNOB (EJECT)	
252	3C	*	K24-4196-03	PUSH KNOB (AUTO)	
253	3C	*	K24-4197-04	PUSH KNOB (REL)	
254	3C	*	K24-4198-03	PUSH KNOB (PLAY)	
255	3C	*	K25-1671-02	PUSH KNOB (SRC/AM,FM)	
256	3C	*	K25-1672-02	PUSH KNOB (PRESET)	
257	3C	*	K29-7111-04	KNOB ASSY (DISP ASSY)	
260	1C		N99-1719-05	SCREW SET	
261	1C		N99-1730-15	SCREW SET	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
A	3D		N30-3008-46	PAN HEAD MACHINE SCREW (M3X 8)	
B	3C		N80-2005-48	PAN HEAD TAPTITE SCREW (2X 5)	
C	2C		N80-2008-43	PAN HEAD TAPTITE SCREW (2X 8)	
D	2C	*	N82-2014-48	BINDING HEAD TAP SCREW (2X14)	
E	1D		N83-3005-46	PAN HEAD TAPTITE SCREW (3X 5)	
F	2C	*	N84-2005-43	PAN HEAD TAPTITE SCREW (2X5)	
G	2C	*	N84-2606-43	PAN HEAD TAPTITE SCREW (2.6X6)	
H	2C		N84-2606-45	PAN HEAD TAPTITE SCREW (2.6X6)	
DME1	1D		X92-4850-00	CD MECHANISM ASSY (DXM-6540W)	
SWITCH UNIT (X16-2960-10)					
270	2C	*	B11-1463-04	REFLECTION SHEET	
271	3C	*	B11-1464-04	OPTICAL DIFFUSER	
272	2C	*	B19-2276-03	LIGHTING BOARD	
D1			B30-1566-05	LED (1608,RED)	
D2,3			B30-1698-05	LED	
ED1		*	B38-1159-05	LCD	
C1			CK73GB1H102K	CHIP C 1000PF	K
C2-4			CK73GB1C104K	CHIP C 0.10UF	K
C6			CK73GB1H103K	CHIP C 0.010UF	K
C7			CK73FB1A225K	CHIP C 2.2UF	K
C10,11			CK73GB1H103K	CHIP C 0.010UF	K
273	2C	*	E29-2015-04	CONDUCTIVE RUBBER	
J1		*	E59-0843-05	RECTANGULAR PLUG	
CP1			R90-0714-05	MULTI-COMP 10K X4	
CP2			R90-1016-05	MULTI-COMP 470 X4	
CP3,4			R90-0724-05	MULTI-COMP 1K X4	
R1			RK73GB2A303J	CHIP R 30K	J 1/10W
R2-5			RK73GB2A222J	CHIP R 2.2K	J 1/10W
R6			RK73GB2A473J	CHIP R 47K	J 1/10W
R7			RK73GB2A472J	CHIP R 4.7K	J 1/10W
R8			RK73GB2A47J	CHIP R 4.7	J 1/10W
R9			RK73GB2A471J	CHIP R 470	J 1/10W
R10			RK73GB2A101J	CHIP R 100	J 1/10W
R11			RK73GB2A102J	CHIP R 1.0K	J 1/10W
R12			RK73GB2A222J	CHIP R 2.2K	J 1/10W
R14			RK73GB2A222J	CHIP R 2.2K	J 1/10W
R16			RK73GB2A102J	CHIP R 1.0K	J 1/10W
R21			RK73FB2B561J	CHIP R 560	J 1/8W
R22-25			RK73FB2B331J	CHIP R 330	J 1/8W
R31			RK73FB2B271J	CHIP R 270	J 1/8W
R32,33			RK73GB2A472J	CHIP R 4.7K	J 1/10W
S2-13			S70-0856-05	TACT SWITCH	
S14			S70-0901-05	TACT SWITCH	
S15		*	S68-0888-05	PUSH SWITCH	
S1		*	T99-0454-05	ROTARY ENCODER	
D21		*	MAZS0820L	ZENER DIODE	
D22-29			UDZS6.2B	ZENER DIODE	
IC1			LC75808W-E	MOS-IC	
IC2			RS-171	ANALOGUE IC	
Q2			DTA114EE	DIGITAL TRANSISTOR	
Q3-5			2SC4617	TRANSISTOR	

K : North America

△ Indicates safety critical components.

PARTS LIST

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
CD PLAYER UNIT (X32-5500-00)						CP1			RK74GA1J104J	CHIP-COM 100K J 1/16W	
C1,2			CK73GB1H222K	CHIP C 2200PF K		CP2,3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
C3,4			CK73GB0J105K	CHIP C 1.0UF K		CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W	
C5			CK73GB1C104K	CHIP C 0.10UF K		CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
C6			CK73GB1H103K	CHIP C 0.010UF K		CP6			RK74GA1J104J	CHIP-COM 100K J 1/16W	
C7-9			CK73GB0J105K	CHIP C 1.0UF K		CP7			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
C10-15			CK73GB1C104K	CHIP C 0.10UF K		CP8			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
C16			CK73FB0J475K	CHIP C 4.7UF K		CP9			RK74GB1J101J	CHIP-COM 100 J 1/16W	
C17			CK73FB0J106M	CHIP C 10UF M		CP10			RK74GB1J103J	CHIP-COM 10K J 1/16W	
C18			CK73GB1C104K	CHIP C 0.10UF K		CP11			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
C19			CK73FB0J475K	CHIP C 4.7UF K		CP12			RK74GA1J104J	CHIP-COM 100K J 1/16W	
C20			CK73GB1C104K	CHIP C 0.10UF K		CP13,14			RK74GB1J104J	CHIP-COM 100K J 1/16W	
C21			CK73GB1H102K	CHIP C 1000PF K		CP15			RK74GA1J104J	CHIP-COM 100K J 1/16W	
C22,23			CK73GB0J105K	CHIP C 1.0UF K		CP16			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
C24-27			CK73GB1C104K	CHIP C 0.10UF K		R1			RK73GB2A100J	CHIP R 10 J 1/10W	
C28			CK73FB0J106M	CHIP C 10UF M		R2			R92-3494-05	CHIP R 5.6 F 1/2W	
C29			CK73GB1C104K	CHIP C 0.10UF K		R3,4			RK73FB2B331J	CHIP R 330 J 1/8W	
C30			CK73GB1H152K	CHIP C 1500PF K		R5			RK73GB2A101J	CHIP R 100 J 1/10W	
C31			CC73GCH1H470J	CHIP C 47PF J		R6			RN73GH1J223D	CHIP R 22K D 1/16W	
C32,33			CK73GB1C104K	CHIP C 0.10UF K		R7			RK73GB2A104J	CHIP R 100K J 1/10W	
C34			CC73GCH1H560J	CHIP C 56PF J		R8			RN73GH1J393D	CHIP R 39K D 1/16W	
C35,36			CK73GB1C104K	CHIP C 0.10UF K		R9			RK73GB2A104J	CHIP R 100K J 1/10W	
C37			CK73GB1H102K	CHIP C 1000PF K		R10			RK73GB2A101J	CHIP R 100 J 1/10W	
C38			CK73GB1H682K	CHIP C 6800PF K		R11,12			RK73GB2A104J	CHIP R 100K J 1/10W	
C39			CK73GB1C104K	CHIP C 0.10UF K		R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C41			CK73GB1A334K	CHIP C 0.33UF K		R14-17			RK73GB2A104J	CHIP R 100K J 1/10W	
C42-45			CK73GB1C104K	CHIP C 0.10UF K		R18			RK73GB2A101J	CHIP R 100 J 1/10W	
C46			CK73GB1H682K	CHIP C 6800PF K		R21-23			RK73GB2A103J	CHIP R 10K J 1/10W	
C47			CK73GB1C104K	CHIP C 0.10UF K		R24,25			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
C48			CC73GCH1H040C	CHIP C 4.0PF C		R27			RK73GB2A104J	CHIP R 100K J 1/10W	
C49			CK73GB1H332K	CHIP C 3300PF K		R28			RK73GB2A103J	CHIP R 10K J 1/10W	
C50			CK73GB1C104K	CHIP C 0.10UF K		R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C51			CC73GCH1H330J	CHIP C 33PF J		R31-33			RK73GB2A104J	CHIP R 100K J 1/10W	
C52			CK73FB1A225K	CHIP C 2.2UF K		R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C53			CK73GB0J105K	CHIP C 1.0UF K		R35			RK73GB2A104J	CHIP R 100K J 1/10W	
C54,55			CK73GB1H103K	CHIP C 0.010UF K		R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
C56,57			CK73GB1H331K	CHIP C 330PF K		R37			RK73GB2A103J	CHIP R 10K J 1/10W	
C58			CK73GB1H472K	CHIP C 4700PF K		R38			RK73GB2A221J	CHIP R 220 J 1/10W	
C59-63			CK73GB1H152K	CHIP C 1500PF K		R39			RK73GB2A152J	CHIP R 1.5K J 1/10W	
C64			CK73GB1C104K	CHIP C 0.10UF K		R40			RK73GB2A394J	CHIP R 390K J 1/10W	
C66			CC73GCH1H120J	CHIP C 12PF J		R42			RK73GB2A101J	CHIP R 100 J 1/10W	
C67			CC73GCH1H180J	CHIP C 18PF J		R43			RK73GB2A393J	CHIP R 39K J 1/10W	
C68			CK73GB1H103K	CHIP C 0.010UF K		R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
C69			CK73FB1A225K	CHIP C 2.2UF K		R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
C70			CK73FB1A105K	CHIP C 1.0UF K		R47			RK73GB2A104J	CHIP R 100K J 1/10W	
C71			CK73FB0J106M	CHIP C 10UF M		R48,49			RK73GB2A331J	CHIP R 330 J 1/10W	
C72			CK73GB1H102K	CHIP C 1000PF K		R50			RK73GB2A101J	CHIP R 100 J 1/10W	
CN1			E41-2083-05	FLAT CABLE CONNECTOR		R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
CN2			E41-2068-05	FLAT CABLE CONNECTOR		R52			RK73GB2A163J	CHIP R 16K J 1/10W	
CN2			E41-2085-15	FLAT CABLE CONNECTOR		R53			RK73GB2A123J	CHIP R 12K J 1/10W	
L1,2			L92-0386-05	CHIP FERRITE		R54			RK73GB2A333J	CHIP R 33K J 1/10W	
X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)		R55			RK73GB2A103J	CHIP R 10K J 1/10W	
X2			L78-0896-05	RESONATOR (16.00MHZ)		R56			RK73GB2A123J	CHIP R 12K J 1/10W	
						R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
						R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	

K : North America

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5500-00)

Ref. No.	Add	New	Parts No.	Description	Destination
R60			RK73GB2A123J	CHIP R 12K J 1/10W	
R61			RK73GB2A183J	CHIP R 18K J 1/10W	
R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R63			RK73GB2A133J	CHIP R 13K J 1/10W	
R64			RK73GB2A241J	CHIP R 240 J 1/10W	
R65			RK73GB2A104J	CHIP R 100K J 1/10W	
R66			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R67			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R68,69			RK73GB2A104J	CHIP R 100K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D2			DA204UF	DIODE	
D3			DAN202UF	DIODE	
IC1			91CW12AFG-5AR1	MICROCONTROLLER IC	
IC2			UPD63712GC	MOS-IC	
IC3			TC94A20F-010	MOS-IC	
IC4			BA5824FP-F	ANALOGUE IC	
IC5			NJM2880U133	ANALOGUE IC	
IC5			NJM2880U33	ANALOGUE IC	
IC6			S-1112B33MCG	ANALOGUE IC	
IC6			XC6219B332MR	ANALOGUE IC	
IC7			S-1112B25MCG	ANALOGUE IC	
IC7			XC6219B252MR	ANALOGUE IC	
IC8			TC7SH08FU	MOS-IC	
IC9			TAR5S33-F	ANALOGUE IC	
Q1			2SK3018F	FET	
Q3			UMD9N	TRANSISTOR	
Q4			2SK3018F	FET	
Q5			UMD9N	TRANSISTOR	
Q6			UMD12N	TRANSISTOR	
Q7			DTC124EUAUF	DIGITAL TRANSISTOR	
Q8			2SB0970	TRANSISTOR	
Q9,10			DTC114YUAF	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-3080-14)					
C1			C90-5682-05	ELECTRO 2200UF 16WV	
C2			CK73GB1H103K	CHIP C 0.010UF K	
C3			CK73GB1H102K	CHIP C 1000PF K	
C4-6			CK73GB1H103K	CHIP C 0.010UF K	
C21			CD04AS1A101M	ELECTRO 100UF 10WV	
C22,23			CD04AS1E100M	ELECTRO 10UF 25WV	
C24,25			CD04AS1C100M	ELECTRO 10UF 16WV	
C26			CD04BH1A100M	ELECTRO 10UF 10WV	
C27			CD04AT1H100M	ELECTRO 10UF 50WV	
C28			C90-5635-05	ELECTRO 220UF 16WV	
C29			CD04AS1C100M	ELECTRO 10UF 16WV	
C31			CK73GB1H103K	CHIP C 0.010UF K	
C32			CK73GB1E223K	CHIP C 0.022UF K	
C33			CD04AS1H010M	ELECTRO 1UF 50WV	
C41,42			CD04BF1E101M	ELECTRO 100UF 25WV	
C43,44			CD04BF1C221M	ELECTRO 220UF 16WV	
C45			CK73GB1A224K	CHIP C 0.22UF K	
C51,52			CK73GB1H103K	CHIP C 0.010UF K	
C111			CK73GB1H102K	CHIP C 1000PF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C119			CK73GB1H103K	CHIP C 0.010UF K	
C163			CK73GB1H103K	CHIP C 0.010UF K	
C201,202			CD04AS1HR47M	ELECTRO 0.47UF 50WV	
C203			CK73GB1H223K	CHIP C 0.022UF K	
C204			CK73GB1H103K	CHIP C 0.010UF K	
C205			CK73GB1A474K	CHIP C 0.47UF K	
C206			CC73GCH1H151J	CHIP C 150PF J	
C207,208			CD04AS1H010M	ELECTRO 1UF 50WV	
C209			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C210			CK73GB1H103K	CHIP C 0.010UF K	
C211			CD04AS1A470M	ELECTRO 47UF 10WV	
C212,213			CK73GB1C104K	CHIP C 0.10UF K	
C214,215			CK73GB1H103K	CHIP C 0.010UF K	
C216,217			CD04AS1H010M	ELECTRO 1UF 50WV	
C218-221			CD04AS1H0R1M	ELECTRO 0.1UF 50WV	
C251-254			C90-5684-05	ELECTRO 0.22UF 50WV	
C255			CD04AS1H010M	ELECTRO 1UF 50WV	
C256			CD04AS1C220M	ELECTRO 22UF 16WV	
C257			CK73GB1A105K	CHIP C 1.0UF K	
C258			C94-0048-05	ELECTRO 0.22UF 50WV	
C301,302			CD04AS1HR47M	ELECTRO 0.47UF 50WV	
C303			CD04AS1A470M	ELECTRO 47UF 10WV	
C304			CK73GB1H103K	CHIP C 0.010UF K	
C351-354			CD04AS1C100M	ELECTRO 10UF 16WV	
C355			CD04AS1A470M	ELECTRO 47UF 10WV	
C356,357			CK73GB1H103K	CHIP C 0.010UF K	
C358,359			CD04AS1HR47M	ELECTRO 0.47UF 50WV	
C360			CK73GB1H103K	CHIP C 0.010UF K	
C401-404			CK73GB1H103K	CHIP C 0.010UF K	
C405			CK73GB0J105K	CHIP C 1.0UF K	
C406			CK73GB1C104K	CHIP C 0.10UF K	
C407			CC73GCH1H220J	CHIP C 22PF J	
C408			CC73GCH1H270J	CHIP C 27PF J	
C409			CD04AT0J470M	ELECTRO 47UF 6.3WV	
C500			CK73FB1A225K	CHIP C 2.2UF K	
C501,502			CK73GB1H103K	CHIP C 0.010UF K	
C503			CK73GB1H472K	CHIP C 4700PF K	
CN1			E41-0167-05	PIN ASSY	
CN2			E41-0168-05	FLAT CABLE CONNECTOR	
CN4			E40-3241-05	PIN ASSY	
CN5			E40-3260-05	PIN ASSY	
CN6			E40-3261-05	PIN ASSY	
△ J1			E58-0863-15	RECTANGULAR RECEPTACLE	
J2			E56-0834-05	CYLINDRICAL RECEPTACLE	
J3			E63-0887-05	PIN JACK	
J4			E04-0312-05	RF COAXIAL CABLE RECEPTACLE	
L1			L33-1170-05	CHOKE COIL ASSY	
L3			L33-1123-05	LINE FILTER	
L6-8			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L10,11			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L12			L33-1925-05	CHOKE COIL	
X1			L78-0821-05	RESONATOR	
X2			L77-2738-05	CRYSTAL RESONATOR	

K : North America

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3080-14)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
E	2D		N83-3005-46	PAN HEAD TAPTITE SCREW		R168,169			RK73GB2A102J	CHIP R 1.0K J 1/10W	
J	2D		N80-3008-46	PAN HEAD TAPTITE SCREW		R185,186			RK73GB2A474J	CHIP R 470K J 1/10W	
K	2D		N80-3010-46	PAN HEAD TAPTITE SCREW		R187			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L	2D		N83-3020-46	PAN HEAD TAPTITE SCREW		R188			RK73GB2A473J	CHIP R 47K J 1/10W	
M	2D		N86-2606-46	BINDING HEAD TAPTITE SCREW		R201			RK73GB2A103J	CHIP R 10K J 1/10W	
R1			RK73GB2A823J	CHIP R 82K J 1/10W		R202-204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R2			RK73GB2A363J	CHIP R 36K J 1/10W		R205			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R3			RK73GB2A104J	CHIP R 100K J 1/10W		R207,208			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R4			RK73FB2B203J	CHIP R 20K J 1/8W		R209,210			RK73GB2A103J	CHIP R 10K J 1/10W	
R5,6			RK73GB2A103J	CHIP R 10K J 1/10W		R211,212			RK73GB2A333J	CHIP R 33K J 1/10W	
R7			RK73GB2A223J	CHIP R 22K J 1/10W		R251			RK73GB2A473J	CHIP R 47K J 1/10W	
R8			RD14DB2H332J	SMALL-RD 3.3K J 1/2W		R253			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R9			RD14BB2C333J	RD 33K J 1/6W		R254			RK73GB2A100J	CHIP R 10 J 1/10W	
R10,11			RK73GB2A223J	CHIP R 22K J 1/10W		R255			RK73GB2A331J	CHIP R 330 J 1/10W	
R12			RK73GB2A473J	CHIP R 47K J 1/10W		R256			RK73GB2A334J	CHIP R 330K J 1/10W	
R13			RK73GB2A562J	CHIP R 5.6K J 1/10W		R257			RK73GB2A153J	CHIP R 15K J 1/10W	
R21			RK73FB2B152J	CHIP R 1.5K J 1/8W		R301,302			RK73EB2E100J	CHIP R 10 J 1/4W	
R22,23			RD14BB2C472J	RD 4.7K J 1/6W		R303			RK73EB2E101J	CHIP R 100 J 1/4W	
R24-28			RK73GB2A103J	CHIP R 10K J 1/10W		R304,305			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R31			RK73EB2E103J	CHIP R 10K J 1/4W		R306			RK73EB2E477J	CHIP R 4.7 J 1/4W	
R32			RK73GB2A223J	CHIP R 22K J 1/10W		R307-309			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R33			RK73GB2A473J	CHIP R 47K J 1/10W		R310,311			RK73EB2E101J	CHIP R 100 J 1/4W	
R34			RK73EB2E103J	CHIP R 10K J 1/4W		R312-315			RK73GB2A104J	CHIP R 100K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W		R351,352			RK73GB2A361J	CHIP R 360 J 1/10W	
R36			RK73GB2A222J	CHIP R 2.2K J 1/10W		R355,356			RK73GB2A223J	CHIP R 22K J 1/10W	
R37			RK73EB2E102J	CHIP R 1.0K J 1/4W		R357,358			RK73EB2E181J	CHIP R 180 J 1/4W	
R38			RK73GB2A561J	CHIP R 560 J 1/10W		R359,360			RK73GB2A361J	CHIP R 360 J 1/10W	
R41-44			RK73GB2A473J	CHIP R 47K J 1/10W		R361,362			RK73GB2A223J	CHIP R 22K J 1/10W	
R51,52			RK73GB2A222J	CHIP R 2.2K J 1/10W		R363,364			RK73EB2E181J	CHIP R 180 J 1/4W	
R53-56			RK73GB2A102J	CHIP R 1.0K J 1/10W		R365			RK73FB2B477J	CHIP R 4.7 J 1/8W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W		R366-368			RK73FB2B471J	CHIP R 470 J 1/8W	
R59			RK73GB2A101J	CHIP R 100 J 1/10W		R369			RK73EB2E471J	CHIP R 470 J 1/4W	
R60			RK73GB2A222J	CHIP R 2.2K J 1/10W		R370-372			RK73GB2A101J	CHIP R 100 J 1/10W	
R61,62			RK73GB2A104J	CHIP R 100K J 1/10W		R373			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W		R378,379			RK73FB2B100J	CHIP R 10 J 1/8W	
R64,65			RK73GB2A104J	CHIP R 100K J 1/10W		R401-406			RK73GB2A104J	CHIP R 100K J 1/10W	
R67,68			RK73GB2A471J	CHIP R 470 J 1/10W		R407			RK73GB2A223J	CHIP R 22K J 1/10W	
R101			RK73GB2A102J	CHIP R 1.0K J 1/10W		R408			RK73GB2A104J	CHIP R 100K J 1/10W	
R102			RK73GB2A471J	CHIP R 470 J 1/10W		R409			RK73GB2A153J	CHIP R 15K J 1/10W	
R103			RK73GB2A472J	CHIP R 4.7K J 1/10W		R410			RK73GB2A104J	CHIP R 100K J 1/10W	
R104			RK73GB2A471J	CHIP R 470 J 1/10W		R412			RK73GB2A223J	CHIP R 22K J 1/10W	
R105			RK73GB2A472J	CHIP R 4.7K J 1/10W		R415			RK73GB2A223J	CHIP R 22K J 1/10W	
R106			RK73GB2A222J	CHIP R 2.2K J 1/10W		R417			RK73GB2A223J	CHIP R 22K J 1/10W	
R152			RK73GB2A102J	CHIP R 1.0K J 1/10W		R419			RK73GB2A223J	CHIP R 22K J 1/10W	
R153			RK73GB2A471J	CHIP R 470 J 1/10W		R421			RK73GB2A223J	CHIP R 22K J 1/10W	
R154			RK73GB2A102J	CHIP R 1.0K J 1/10W		R422			RK73GB2A103J	CHIP R 10K J 1/10W	
R155			RK73GB2A222J	CHIP R 2.2K J 1/10W		W105-109			R92-1252-05	CHIP R 0 OHM J 1/6W	
R157,158			RK73GB2A471J	CHIP R 470 J 1/10W		W201-204			R92-1252-05	CHIP R 0 OHM J 1/6W	
R159			RK73GB2A102J	CHIP R 1.0K J 1/10W		S1			S74-0821-05	MICRO SWITCH	
R160			RK73GB2A222J	CHIP R 2.2K J 1/10W		D1			1N5393G-M6	DIODE	
R161			RK73GB2A225J	CHIP R 2.2M J 1/10W		D2-4			MA4068(N)-M	ZENER DIODE	
R162,163			RK73GB2A104J	CHIP R 100K J 1/10W		D21			MA4082(N)-L	ZENER DIODE	
R164,165			RK73GB2A473J	CHIP R 47K J 1/10W		D22-25			AM01ZNF	DIODE	
R166			RK73GB2A472J	CHIP R 4.7K J 1/10W		D26			DAN202U	DIODE	
R167			RK73GB2A474J	CHIP R 470K J 1/10W							

K : North America

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3080-14)

Ref. No.	Add	New	Parts No.	Description	Destination
D31 D32 D41 D151-155 D151-155			HZS5B1 MA4056-M SFPB-54V DA204K KDS226	ZENER DIODE ZENER DIODE DIODE DIODE DIODE	
D157-162 D157-162 D163 D164 D165			DA204K KDS226 MA4062-L MA4120-L MA4062-L	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
D166 D203-205 D269 D271 D301			DA204U DAP202U 1SS133 1SS133 MA4062-L	DIODE DIODE DIODE DIODE ZENER DIODE	
D303,304 D307,308 D309-311 D356 D357,358			MA4062-L MA4062-L MA4068(N)-M MA4062-L MA4068(N)-M	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
D359 D401 IC1 IC2 IC3		*	DA204U 1SS133 UPD703030GC052 TDA7411 BA4911-V4	DIODE DIODE MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC	
IC4 IC6 IC8 IC9 Q1-3			TB2903H HD74HC27FP-E PST3436UL-E SI-8050JD 2SC4081	ANALOGUE IC MOS-IC MOS-IC ANALOGUE IC TRANSISTOR	
Q4 Q21 Q22,23 Q31 Q32			2SA1036K 2SD2375 UMC2N DTC144EUA DTA123JK	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q41 Q151 Q152 Q153 Q154			2SC4081 DTA114YUA 2SA1576A DTC144EUA 2SA1577	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q201 Q350 Q351,352 Q354 Q355,356			DTC143TUA DTA124EUA DTC143TUA DTA124EUA DTC143TUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
TH1 A1			PRF21BE471QB2 X86-3720-11	POSITIVE RESISTOR FRONT-END UNIT	
DAUGHTER UNIT (X89-2570-10)					
C1 CN1 J1 R1			CK73GB1H103K E41-0169-05 E58-0865-05 RK73EB2E102J	CHIP C 0.010UF K SOCKET FOR PIN ASSY RECTANGULAR RECEPTACLE CHIP R 1.0K J 1/4W	

K : North America

Ref. No.	Add	New	Parts No.	Description	Destination
R2-5 R6,7 R8 R9,10 R11-13			RK73EB2E471J RK73EB2E102J RK73EB2E241J RK73EB2E471J RK73EB2E102J	CHIP R 470 J 1/4W CHIP R 1.0K J 1/4W CHIP R 240 J 1/4W CHIP R 470 J 1/4W CHIP R 1.0K J 1/4W	
S1			S70-0871-05	TACT SWITCH	
CD MECHANISM ASSY (X92-4850-00)					
2	1B		A10-4827-32	CHASSIS	
5	1B		D10-4576-83	ARM ASSY	
8	2A		D10-4579-23	LEVER ASSY	
10	3A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	3B		D10-4588-13	SLIDER	
18	3B		D10-4595-04	ARM	
19	3B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	3B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	3B		D13-2158-04	GEAR	
30	3B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	2B		D13-2172-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-14	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-4472-15	MACHINE SCREW (M1.7X8.0)	
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	

△ Indicates safety critical components.

PARTS LIST

CD MECHANISM ASSY (X92-4850-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)							
F	1A		N09-6051-05	TAPTITE SCREW (BIND 2X5)							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW							
J	1B		N09-6108-05	MACHINE SCREW (M2*3.5TYPE3)							
K	3B		N09-6155-05	SEMS (TAPTITE SCREW) (PT2X6)							
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)							
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)							
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY							

K : North America

△ Indicates safety critical components.