
# 2. EXPLODED VIEWS AND PARTS LIST

## 2.1 PACKING(SDV-P7/UC)

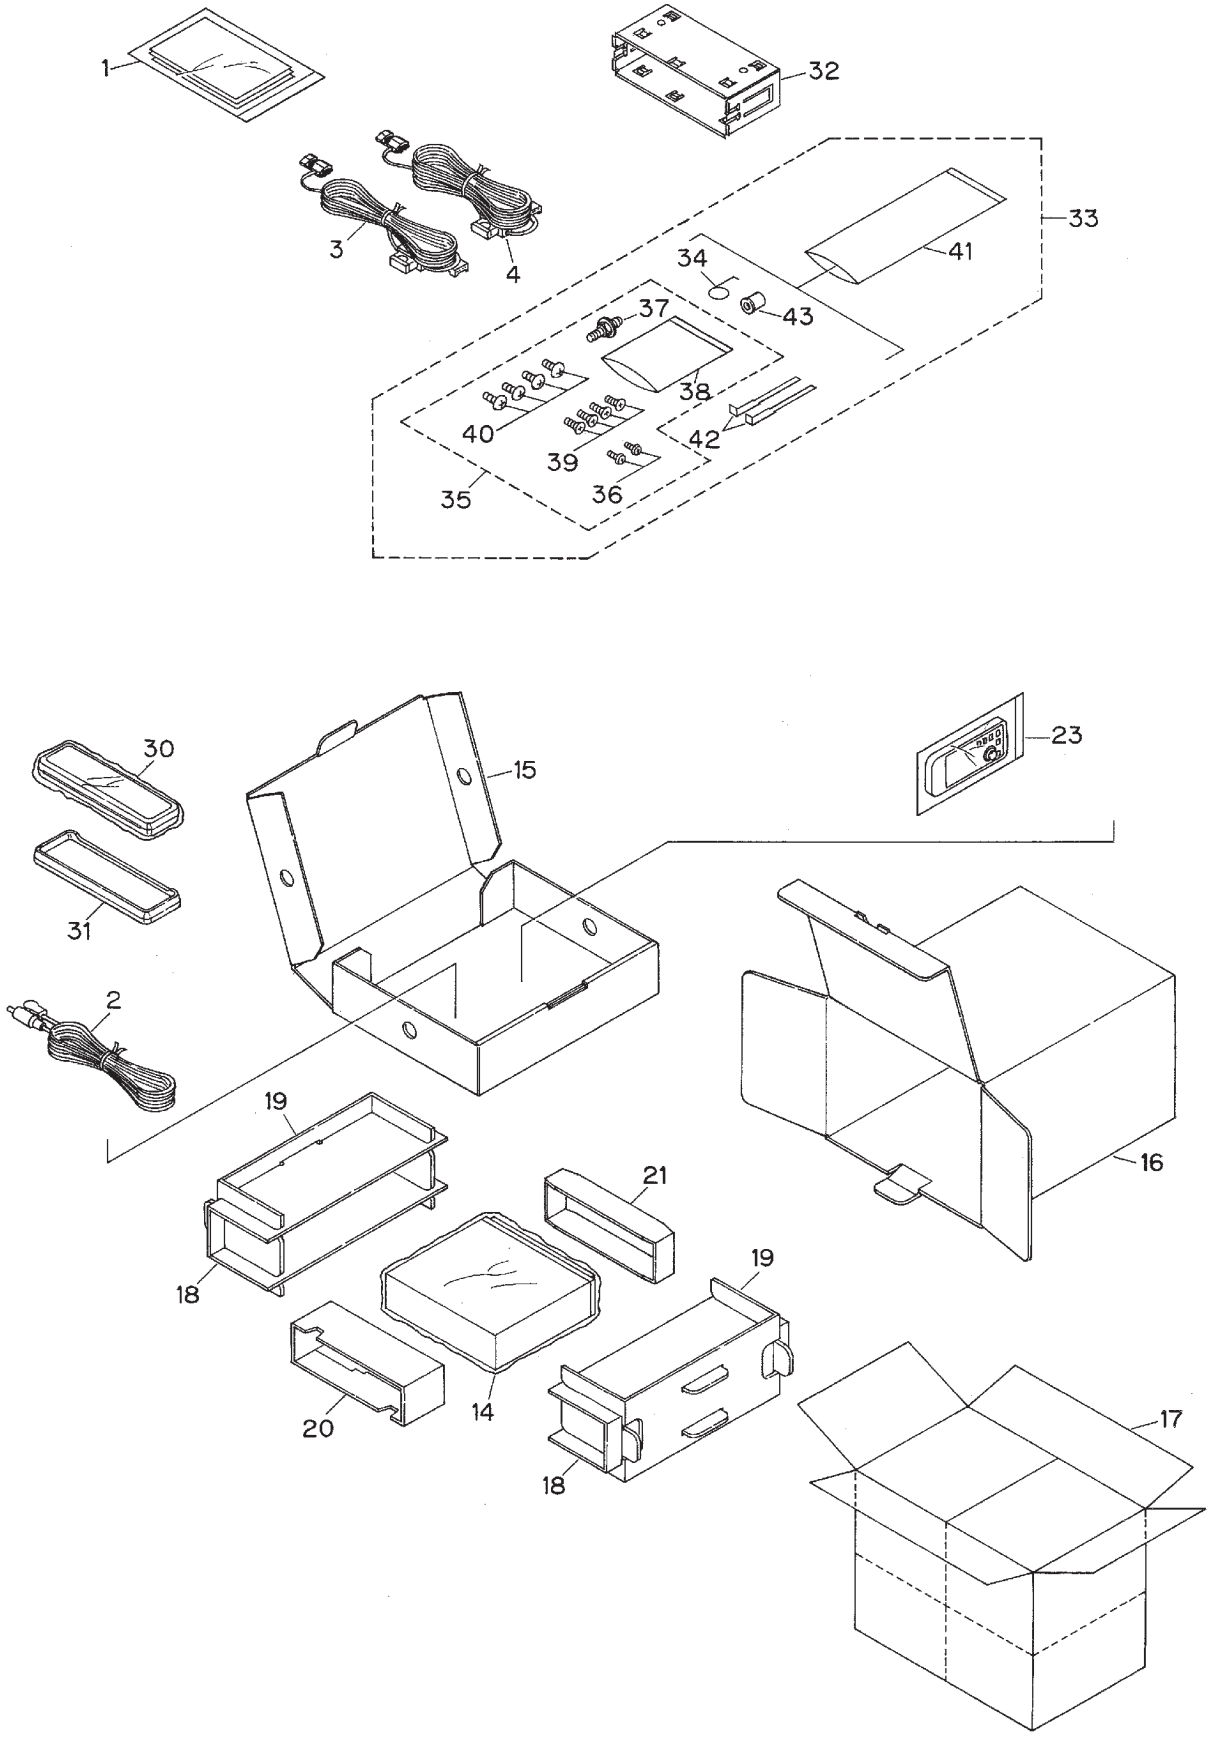

**NOTE:**

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ∇ mark on the product are used for disassembly.


## ● PACKING SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| * | 1-1 | Card | ARY1048 |
| | 1-2 | Polyethylene Bag | CEG1116 |
| | 1-3 | Owner's Manual | CRB1700 |
| | 1-4 | Owner's Manual | CRB1703 |
| | 1-5 | Installation Manual | CRD3465 |
| * | 1-6 | Caution Card | CRP1252 |
| | 2 | Cord | CDE6576 |
| | 3 | Cord Assy(45cm) | CDE6588 |
| | 4 | Cord Assy(6m) | CDE6682 |
| | 5-13 | ••••• | |
| | 14 | Polyethylene Bag | CEG1173 |
| | 15 | Sub Carton | CHG4392 |
| | 16 | Carton | CHG4462 |
| | 17 | Contain Box | CHL4462 |
| | 18 | Protector | CHP2383 |
| | 19 | Protector | CHP2384 |
| | 20 | Protector | CHP2386 |
| | 21 | Protector | CHP2432 |
| | 22 | ••••• | |
| | 23 | Remote Control Unit | CXB7969 |
| | 24-29 | ••••• | |
| | 30 | Case Assy | CXB3520 |
| | 31 | Panel | CNS6552 |
| | 32 | Holder | CNC8659 |
| | 33 | Accessory Assy | CEA2773 |
| | 34 | Spring | CBH-865 |
| | 35 | Screw Assy | CEA2796 |
| | 36 | Screw | BPZ20P060FZK |
| | 37 | Screw | CBA1002 |
| * | 38 | Polyethylene Bag | CEG-127 |
| | 39 | Screw | CRZ50P090FMC |
| | 40 | Screw | TRZ50P080FMC |
| * | 41 | Polyethylene Bag | CEG-158 |
| | 42 | Handle | CNC5395 |
| | 43 | Bush | CNV3930 |

## ● Owner's Manual, Installation Manual

| Model | Part No. | Language |
|---|---|---|
| SDV-P7/UC | CRB1700 | English |
| | CRB1703 | French |
| | CRD3465 | English, French |

## 2.2 PACKING(SDV-P7/EW)

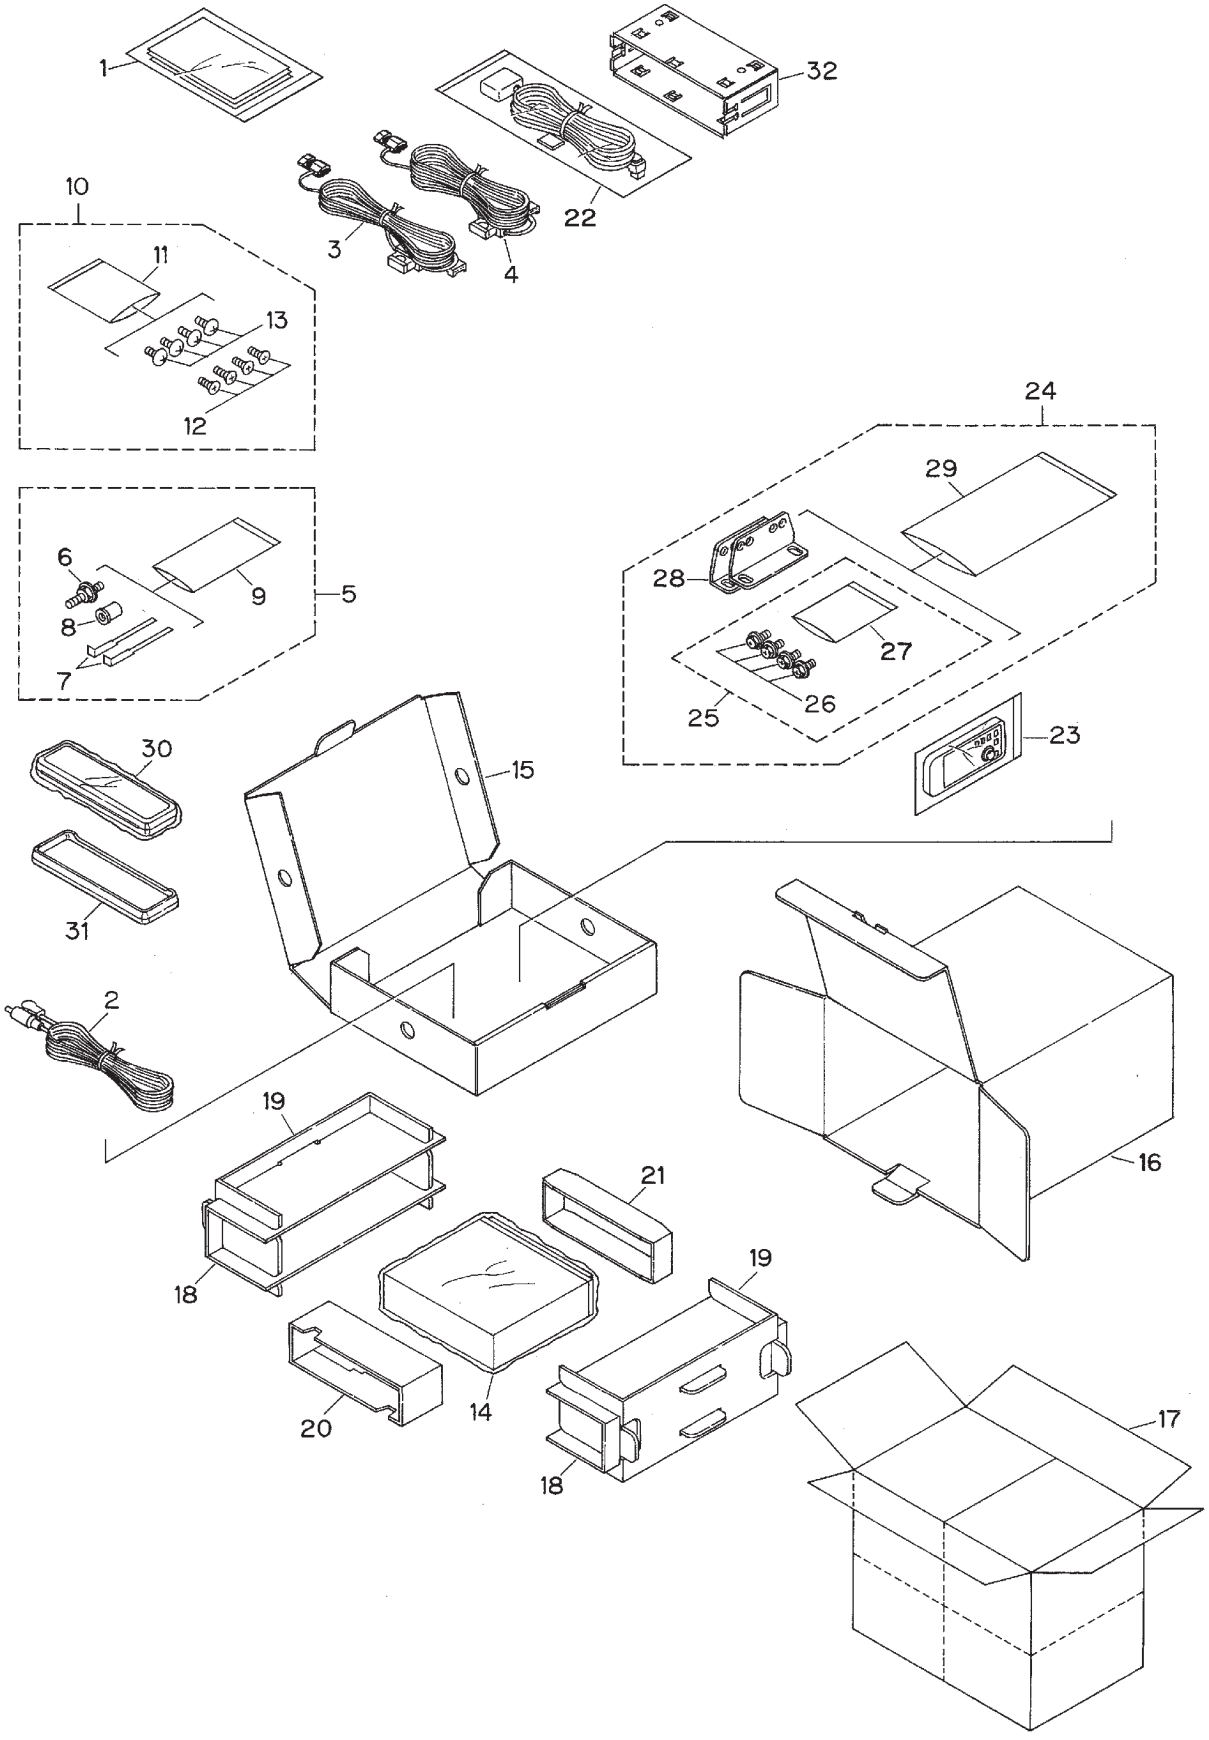


## ● PACKING SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1-1 | Polyethylene Bag | CEG1116 |
| | 1-2 | Owner's Manual | CRB1700 |
| | 1-3 | Owner's Manual | CRB1701 |
| | 1-4 | Owner's Manual | CRB1702 |
| | 1-5 | Owner's Manual | CRB1703 |
| | 1-6 | Owner's Manual | CRB1704 |
| | 1-7 | Owner's Manual | CRB1705 |
| | 1-8 | Installation Manual | CRD3464 |
| * | 1-9 | Caution Card | CRP1251 |
| * | 1-10 | Caution Card | CRP1252 |
| * | 1-11 | Warranty Card | CRY1157 |
| | 2 | Cord | CDE6576 |
| | 3 | Cord Assy(45cm) | CDE6588 |
| | 4 | Cord Assy(6m) | CDE6682 |
| | 5 | Accessory Assy | CEA1917 |
| | 6 | Screw | CBA1284 |
| | 7 | Handle | CNC5395 |
| | 8 | Bush | CNV1009 |
| * | 9 | Polyethylene Bag | E36-615 |
| | 10 | Screw Assy | CEA1926 |
| * | 11 | Polyethylene Sheet | CNM5157 |
| | 12 | Screw | CRZ50P090FMC |
| | 13 | Screw | TRZ50P080FMC |
| | 14 | Polyethylene Bag | CEG-162 |
| | 15 | Sub Carton | CHG4392 |
| | 16 | Carton | CHG4396 |
| | 17 | Contain Box | CHL4396 |
| | 18 | Protector | CHP2383 |
| | 19 | Protector | CHP2384 |
| | 20 | Protector | CHP2386 |
| | 21 | Protector | CHP2432 |
| | 22 | Remote Sensor Assy | CXB7618 |
| | 23 | Remote Control Unit | CXB7969 |
| | 24 | Accessory Assy | CEA2827 |
| | 25 | Screw Assy | CEA2938 |
| | 26 | Screw(M6x16) | CBA1295 |
| * | 27 | Polyethylene Bag | E36-613 |
| | 28 | Angle | CNC9520 |
| * | 29 | Polyethylene Bag | E36-637 |
| | 30 | Case Assy | CXB3520 |
| | 31 | Panel | CNS6552 |
| | 32 | Holder | CNC8659 |

## ● Owner's Manual, Installation Manual

| Model | Part No. | Language |
|---|---|---|
| SDV-P7/EW | CRB1700 | English |
| | CRB1701 | Spanish |
| | CRB1702 | German |
| | CRB1703 | French |
| | CRB1704 | Italian |
| | CRB1705 | Dutch |
| | CRD3464 | English, Spanish, French, German, Italian, Dutch |

## 2.3 PACKING(SDV-P7/ES/RD, ES/RC)

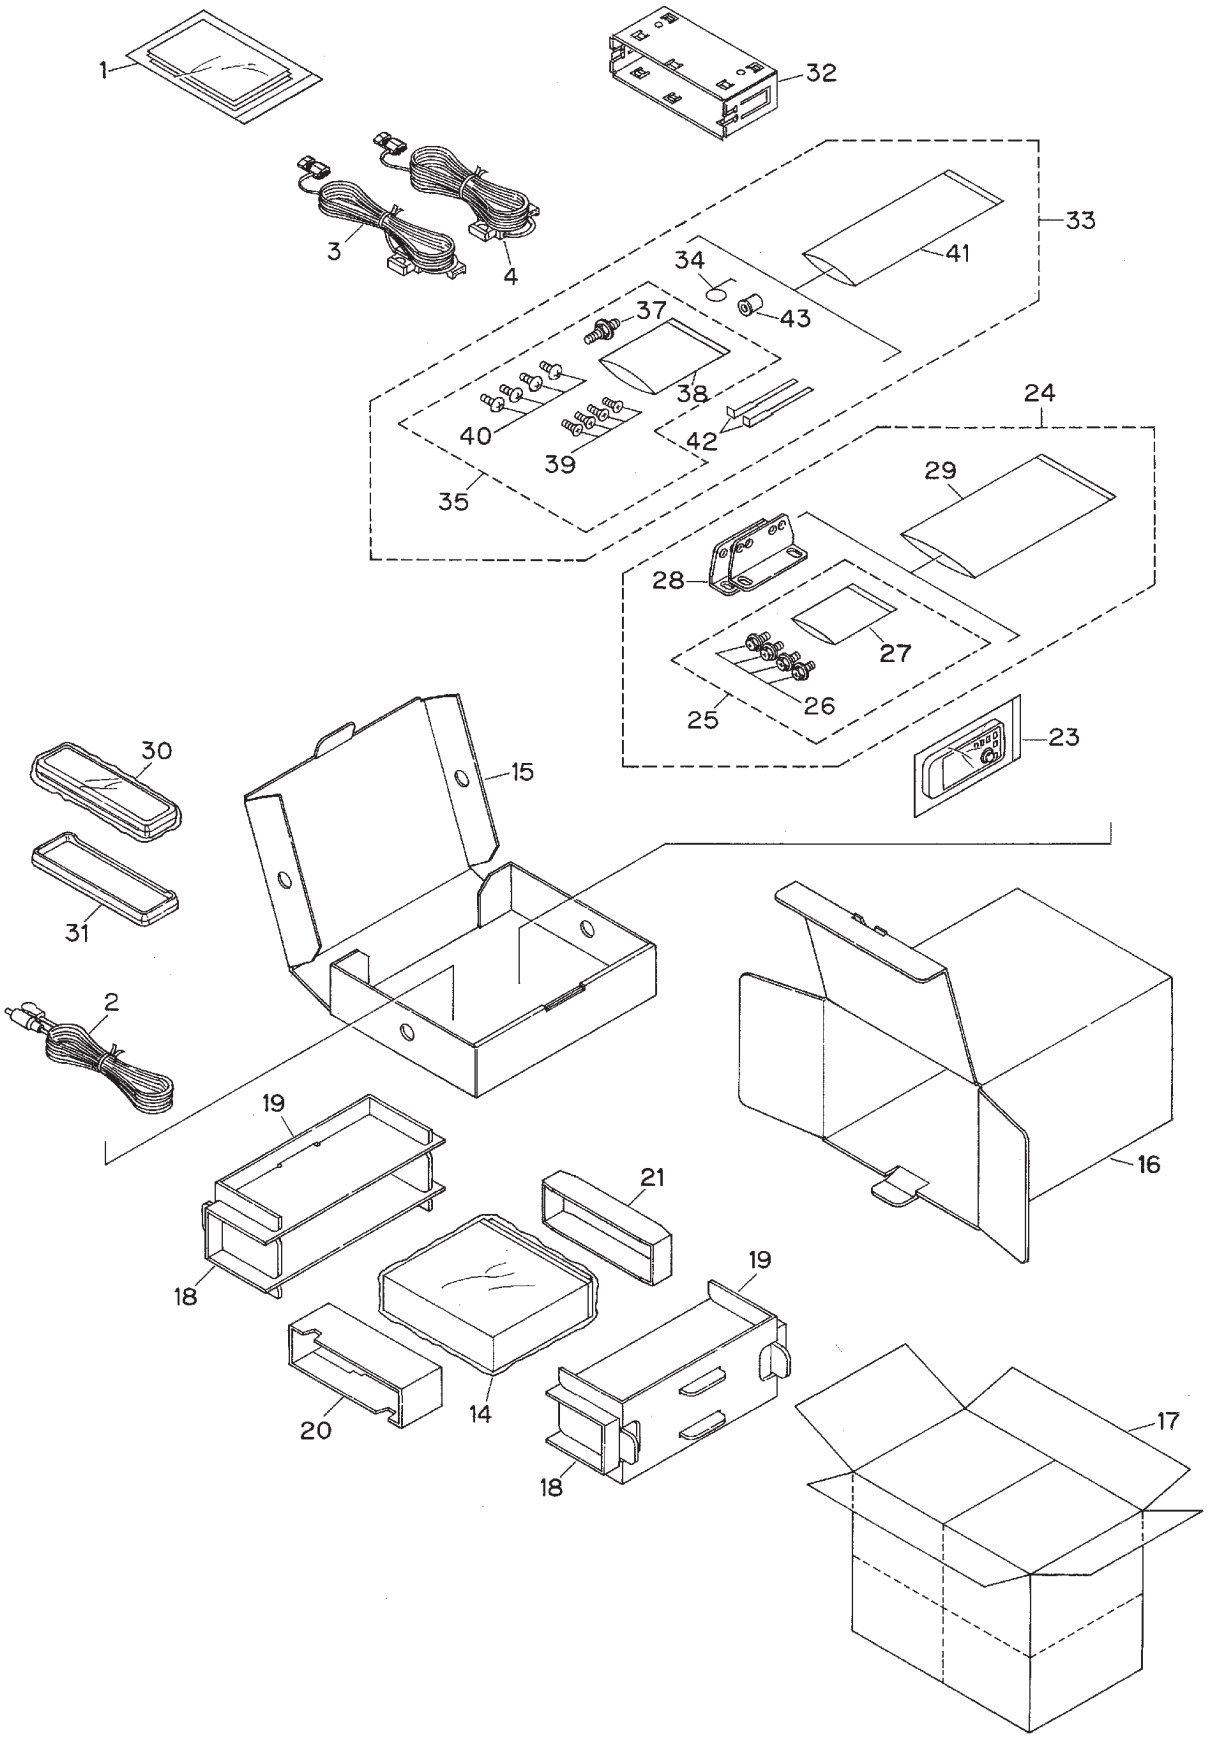

## ● PACKING SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1-1 | Polyethylene Bag | CEG1116 |
| | 1-2 | Owner's Manual | CRB1700 |
| | 1-3 | Installation Manual(ES/RD) | CRB1738 |
| | | Installation Manual(ES/RC) | CRD3466 |
| * | 1-4 | Caution Card | CRP1252 |
| | 1-5 | Owner's Manual(ES/RC) | CRB1706 |
| | 2 | Cord | CDE6576 |
| | 3 | Cord Assy(45cm) | CDE6588 |
| | 4 | Cord Assy(6m) | CDE6682 |
| | 5-13 | ••••• | |
| | 14 | Polyethylene Bag | CEG-162 |
| | 15 | Sub Carton | CHG4392 |
| | 16 | Carton(ES/RD) | CHG4464 |
| | | Carton(ES/RC) | CHG4463 |
| | 17 | Contain Box(ES/RD) | CHL4464 |
| | | Contain Box(ES/RC) | CHL4463 |
| | 18 | Protector | CHP2383 |
| | 19 | Protector | CHP2384 |
| | 20 | Protector | CHP2386 |
| | 21 | Protector | CHP2432 |
| | 22 | ••••• | |
| | 23 | Remote Control Unit | CXB7969 |
| | 24 | Accessory Assy | CEA2828 |
| | 25 | Screw Assy | CEA2938 |
| | 26 | Screw(M6x16) | CBA1295 |
| * | 27 | Polyethylene Bag | E36-613 |
| | 28 | Angle | CNC9521 |
| * | 29 | Polyethylene Bag | E36-637 |
| | 30 | Case Assy | CXB3520 |
| | 31 | Panel | CNS6553 |
| | 32 | Holder | CNC8659 |
| | 33 | Accessory Assy | CEA2002 |
| | 34 | Spring | CBH-865 |
| | 35 | Screw Assy | CEA2003 |
| | 36 | ••••• | |
| | 37 | Screw | CBA1284 |
| * | 38 | Polyethylene Bag | CEG-127 |
| | 39 | Screw | CRZ50P090FMC |
| | 40 | Screw | TRZ50P080FMC |
| * | 41 | Polyethylene Bag | CEG-158 |
| | 42 | Handle | CNC5395 |
| | 43 | Bush | CNV1009 |


## ● Owner's Manual, Installation Manual

| Model | Part No. | Language |
|---|---|---|
| SDV-P7/ES/RC | CRB1700 | English |
| | CRB1706 | Chinese |
| | CRD3466 | English, Chinese |

## ● Owner's Manual, Installation Manual

| Model | Part No. | Language |
|---|---|---|
| SDV-P7/ES/RD | CRB1700 | English |
| | CRB1738 | English |


## 2.4 EXTERIOR(SDV-P7/UC)

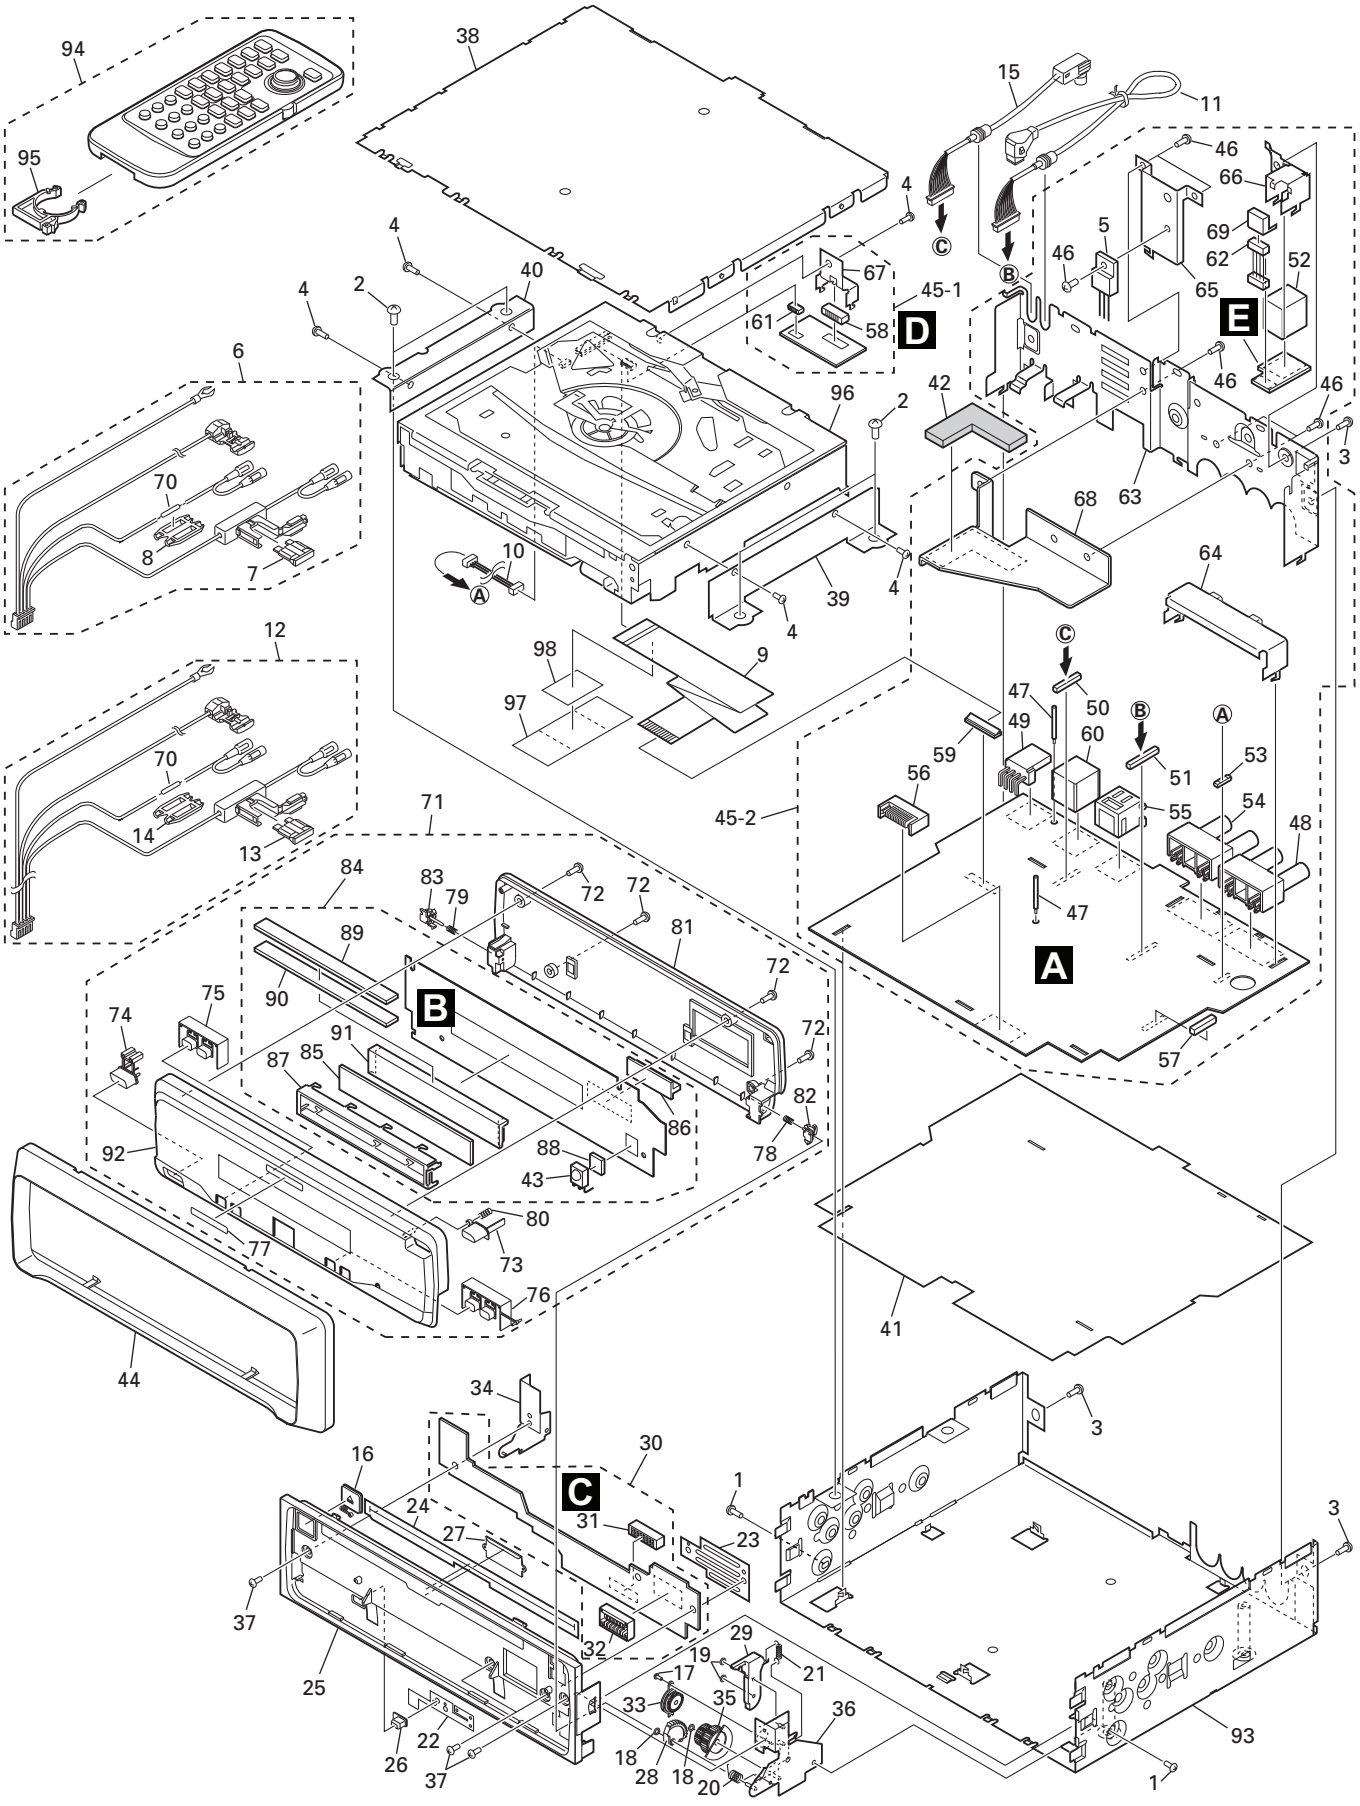

## ● EXTERIOR SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | Screw | BMZ30P040FZK |
| | 2 | Screw | BSZ26P060FMC |
| | 3 | Screw | BSZ30P060FMC |
| | 4 | Screw(M2x2.2) | CBA1419 |
| | 5 | Transistor(Q907) | 2SD2396 |
| | 6 | Cord Assy | CDE6588 |
| | 7 | Fuse(4A) | CEK1001 |
| | 8 | Cap | CNS1472 |
| | 9 | Cable | CDE6600 |
| | 10 | Cord | CDE6601 |
| | 11 | Cord Assy | CDE6606 |
| | 12 | Cord Assy | CDE6682 |
| | 13 | Fuse(4A) | CEK1001 |
| | 14 | Cap | CNS1472 |
| | 15 | Cord Assy | CDE6721 |
| | 16 | Button(EJECT) | CAC6839 |
| | 17 | Screw(M2x2) | CBA1176 |
| | 18 | Washer | CBF1038 |
| | 19 | Washer | CBF1039 |
| | 20 | Spring | CBH2428 |
| | 21 | Spring | CBH2429 |
| | 22 | Spring | CBL1512 |
| | 23 | Holder | CNC9096 |
| | 24 | Cover | CNM6854 |
| | 25 | Panel | CNS6278 |
| | 26 | Pin | CNV6486 |
| | 27 | Lighting Conductor | CNV6487 |
| | 28 | Gear | CNV6507 |
| | 29 | Arm | CNV6508 |
| | 30 | Panel PCB Unit | CWM7887 |
| | 31 | Socket(CN851) | CKS3550 |
| | 32 | Connector(CN852) | CKS4462 |
| | 33 | Damper Unit | CXB5070 |
| | 34 | Holder Unit | CXB6357 |
| | 35 | Clutch Unit | CXB6358 |
| | 36 | Holder Unit | CXB7506 |
| | 37 | Screw | IMS20P045FZK |
| | 38 | Case | CNB2672 |
| | 39 | Bracket | CNC9396 |
| | 40 | Bracket | CNC9397 |
| | 41 | Insulator | CNM7258 |
| | 42 | Sheet | CNM7457 |
| | 43 | IC(IC861) | TSOP1840SB1 |
| | 44 | Panel | CNS6552 |
| | 45 | Audio Control Unit | CWM7684 |
| | 46 | Screw | BSZ26P060FMC |
| | 47 | Clamper | CEF1008 |
| | 48 | Pin Jack(CN202) | CKB1049 |
| | 49 | Plug(CN901) | CKS-461 |
| * | 50 | Plug(CN701) | CKS-792 |
| | 51 | Plug(CN101) | CKS1043 |
| | 52 | Connector(CN304) | CKS2104 |
| | 53 | Connector(CN301) | CKS3124 |
| | 54 | Pin Jack(CN161) | CKS3144 |
| | 55 | Connector(CN102) | CKS3408 |
| | 56 | Plug(CN801) | CKS3537 |
| | 57 | Connector(CN601) | CKS3814 |
| | 58 | Connector(CN203) | CKS3902 |
| | 59 | Connector(CN201) | CKS4052 |
| | 60 | Connector(CN702) | CKS4362 |
| | 61 | Connector(CN204) | CKS4496 |
| | 62 | Connector(CN302) | CKS4533 |
| | 63 | Panel | CNB2673 |
| | 64 | Holder | CNC9392 |
| | 65 | Holder | CNC9393 |
| | 66 | Holder | CNC9394 |
| | 67 | Holder | CNC9502 |
| | 68 | Heat Sink | CNC9518 |
| | 69 | Connector(CN303) | HKS-193 |
| | 70 | Resistor | RS1/2PMF102J |
| | 71 | Grille Panel Assy | CXB8306 |
| | 72 | Screw | BPZ20P100FZK |
| | 73 | Button(OPEN) | CAC6780 |
| | 74 | Button(POWER) | CAC6989 |
| | 75 | Button(PLAY/PAUSE, STOP) | CAC6990 |
| | 76 | Button(+,-) | CAC6991 |
| * | 77 | Badge | CAH1754 |
| | 78 | Spring | CBH2430 |
| | 79 | Spring | CBH2431 |
| | 80 | Spring | CBH2491 |
| | 81 | Cover | CNS6282 |
| | 82 | Holder | CNV6505 |
| | 83 | Holder | CNV6506 |
| | 84 | Keyboard Unit | CWM7888 |
| | 85 | LCD | CAW1687 |
| | 86 | Connector(CN861) | CKS4524 |
| | 87 | Holder | CNC9395 |
| | 88 | Cushion | CNM7260 |
| | 89 | Spacer | CNM7585 |
| | 90 | Rubber | CNV6708 |
| | 91 | Lighting Conductor | CNV6709 |
| | 92 | Grille Unit | CXB7539 |
| | 93 | Chassis Unit | CXB7243 |
| | 94 | Remote Control Unit | CXB7969 |
| | 95 | Cover | CZN5357 |
| | 96 | DVD Mechanism Module(MS2) | CXK6111 |
| | 97 | Insulator | CNM7533 |
| | 98 | Ferrite | CTX1086 |

## 2.5 EXTERIOR(SDV-P7/EW)

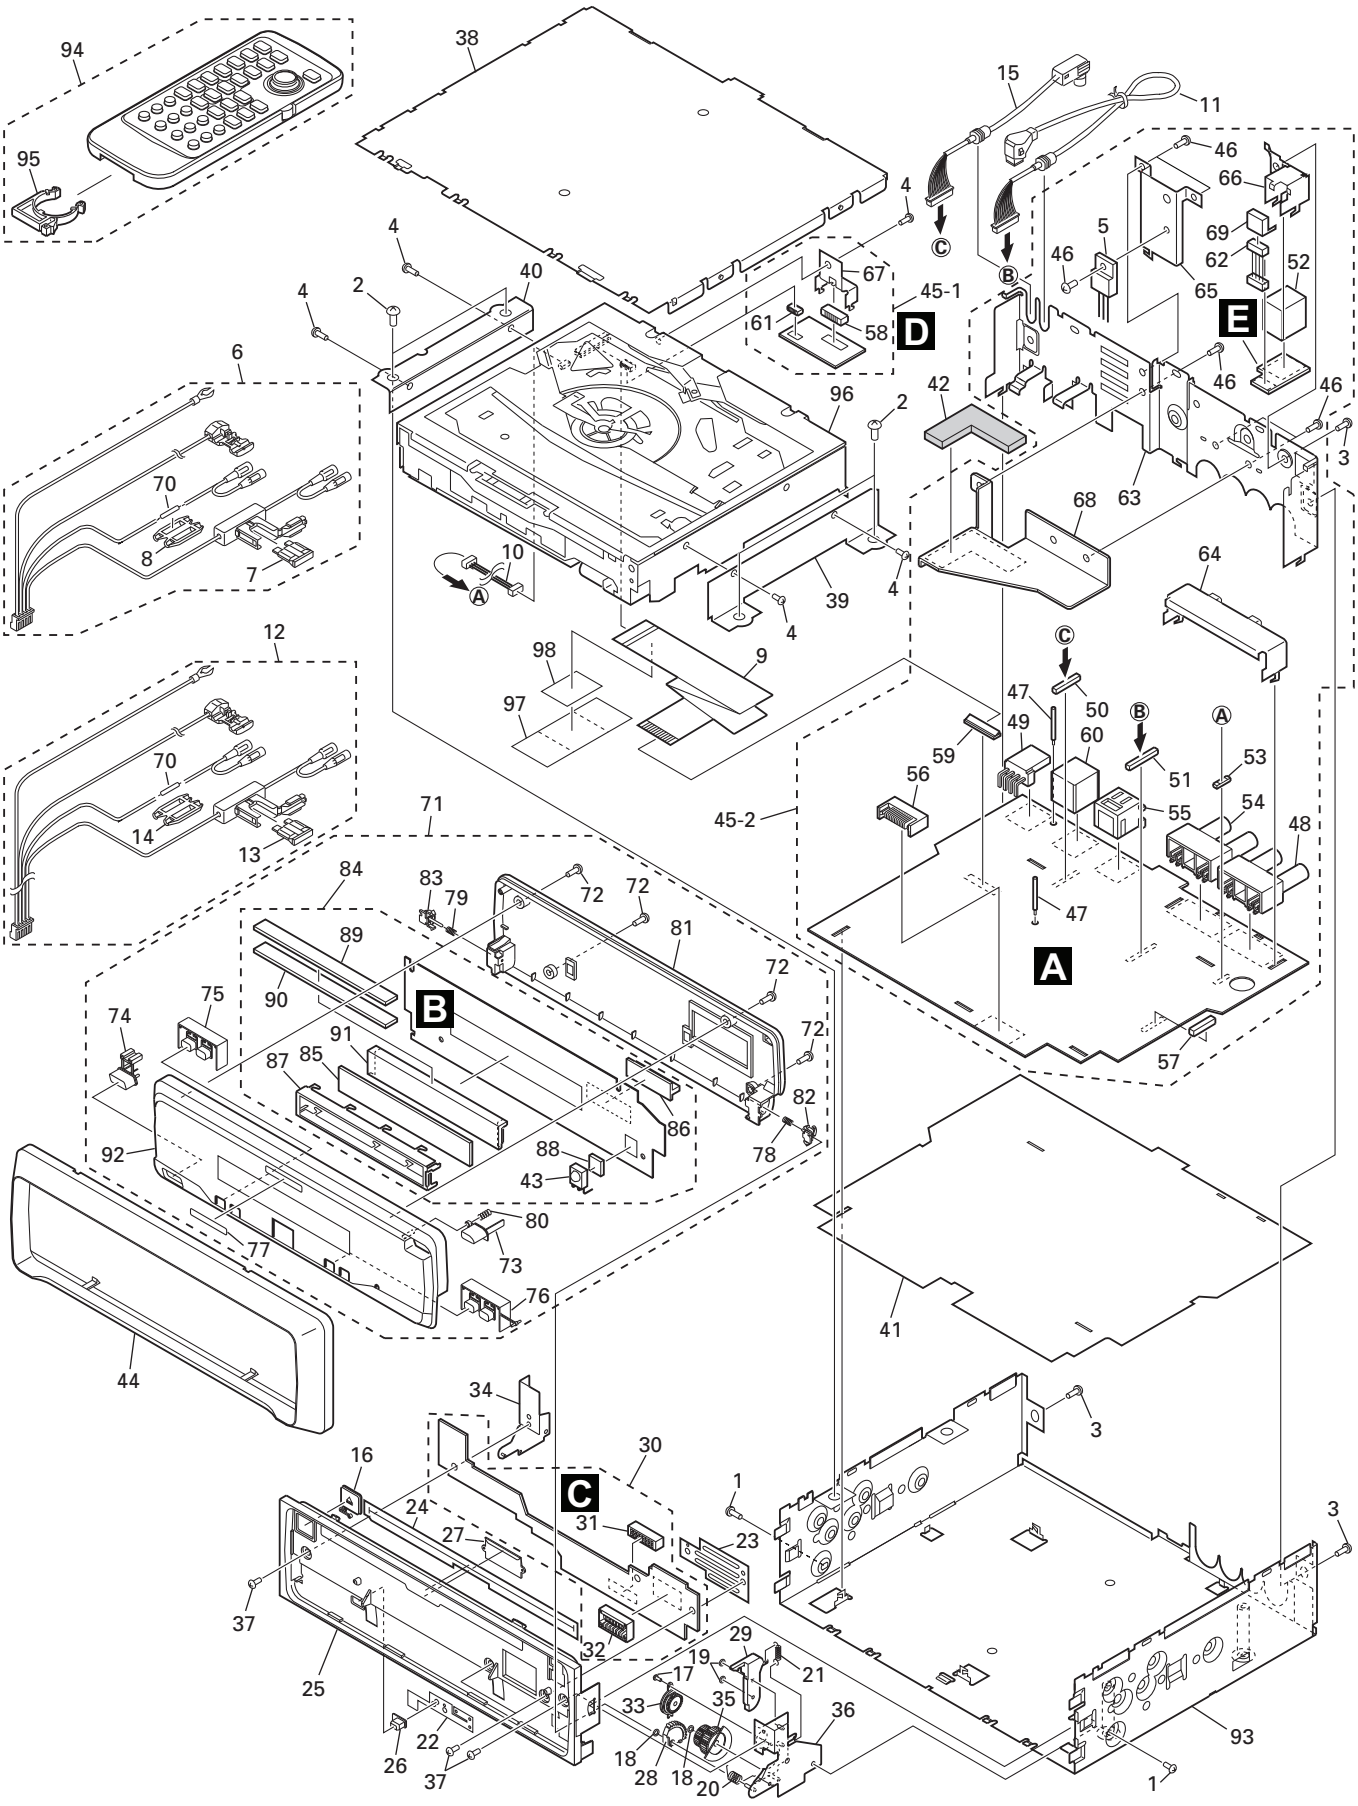


## ● EXTERIOR SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | Screw | BMZ30P040FZK |
| | 2 | Screw | BSZ26P060FMC |
| | 3 | Screw | BSZ30P060FMC |
| | 4 | Screw(M2x2.2) | CBA1419 |
| | 5 | Transistor(Q907) | 2SD2396 |
| | 6 | Cord Assy | CDE6588 |
| | 7 | Fuse(4A) | CEK1001 |
| | 8 | Cap | CNS1472 |
| | 9 | Cable | CDE6600 |
| | 10 | Cord | CDE6601 |
| | 11 | Cord Assy | CDE6606 |
| | 12 | Cord Assy | CDE6682 |
| | 13 | Fuse(4A) | CEK1001 |
| | 14 | Cap | CNS1472 |
| | 15 | Cord Assy | CDE6721 |
| | 16 | Button(EJECT) | CAC6839 |
| | 17 | Screw(M2x2) | CBA1176 |
| | 18 | Washer | CBF1038 |
| | 19 | Washer | CBF1039 |
| | 20 | Spring | CBH2428 |
| | 21 | Spring | CBH2429 |
| | 22 | Spring | CBL1512 |
| | 23 | Holder | CNC9096 |
| | 24 | Cover | CNM6854 |
| | 25 | Panel | CNS6278 |
| | 26 | Pin | CNV6486 |
| | 27 | Lighting Conductor | CNV6487 |
| | 28 | Gear | CNV6507 |
| | 29 | Arm | CNV6508 |
| | 30 | Panel PCB Unit | CWM7887 |
| | 31 | Socket(CN851) | CKS3550 |
| | 32 | Connector(CN852) | CKS4462 |
| | 33 | Damper Unit | CXB5070 |
| | 34 | Holder Unit | CXB6357 |
| | 35 | Clutch Unit | CXB6358 |
| | 36 | Holder Unit | CXB7506 |
| | 37 | Screw | IMS20P045FZK |
| | 38 | Case | CNB2672 |
| | 39 | Bracket | CNC9396 |
| | 40 | Bracket | CNC9397 |
| | 41 | Insulator | CNM7258 |
| | 42 | Sheet | CNM7457 |
| | 43 | IC(IC861) | TSOP1840SB1 |
| | 44 | Panel | CNS6552 |
| | 45 | Audio Control Unit | CWM7683 |
| | 46 | Screw | BSZ26P060FMC |
| | 47 | Clamper | CEF1008 |
| | 48 | Pin Jack(CN202) | CKB1049 |
| | 49 | Plug(CN901) | CKS-461 |
| * | 50 | Plug(CN701) | CKS-792 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 51 | Plug(CN101) | CKS1043 |
| | 52 | Connector(CN304) | CKS2104 |
| | 53 | Connector(CN301) | CKS3124 |
| | 54 | Pin Jack(CN161) | CKS3144 |
| | 55 | Connector(CN102) | CKS3408 |
| | 56 | Plug(CN801) | CKS3537 |
| | 57 | Connector(CN601) | CKS3814 |
| | 58 | Connector(CN203) | CKS3902 |
| | 59 | Connector(CN201) | CKS4052 |
| | 60 | Connector(CN702) | CKS4362 |
| | 61 | Connector(CN204) | CKS4496 |
| | 62 | Connector(CN302) | CKS4533 |
| | 63 | Panel | CNB2673 |
| | 64 | Holder | CNC9392 |
| | 65 | Holder | CNC9393 |
| | 66 | Holder | CNC9394 |
| | 67 | Holder | CNC9502 |
| | 68 | Heat Sink | CNC9518 |
| | 69 | Connector(CN303) | HKS-193 |
| | 70 | Resistor | RS1/2PMF102J |
| | 71 | Grille Panel Assy | CXB8305 |
| | 72 | Screw | BPZ20P100FZK |
| | 73 | Button(OPEN) | CAC6780 |
| | 74 | Button(POWER) | CAC6989 |
| | 75 | Button(PLAY/PAUSE, STOP) | CAC6990 |
| | 76 | Button(+,-) | CAC6991 |
| * | 77 | Badge | CAH1754 |
| | 78 | Spring | CBH2430 |
| | 79 | Spring | CBH2431 |
| | 80 | Spring | CBH2491 |
| | 81 | Cover | CNS6282 |
| | 82 | Holder | CNV6505 |
| | 83 | Holder | CNV6506 |
| | 84 | Keyboard Unit | CWM7888 |
| | 85 | LCD | CAW1687 |
| | 86 | Connector(CN861) | CKS4524 |
| | 87 | Holder | CNC9395 |
| | 88 | Cushion | CNM7260 |
| | 89 | Spacer | CNM7585 |
| | 90 | Rubber | CNV6708 |
| | 91 | Lighting Conductor | CNV6709 |
| | 92 | Grille Unit | CXB7538 |
| | 93 | Chassis Unit | CXB7242 |
| | 94 | Remote Control Unit | CXB7969 |
| | 95 | Cover | CZN5357 |
| | 96 | DVD Mechanism Module(MS2) | CXK6111 |
| | 97 | Insulator | CNM7533 |
| | 98 | Ferrite | CTX1086 |

## 2.6 EXTERIOR(SDV-P7/ES/RD,/ES/RC)

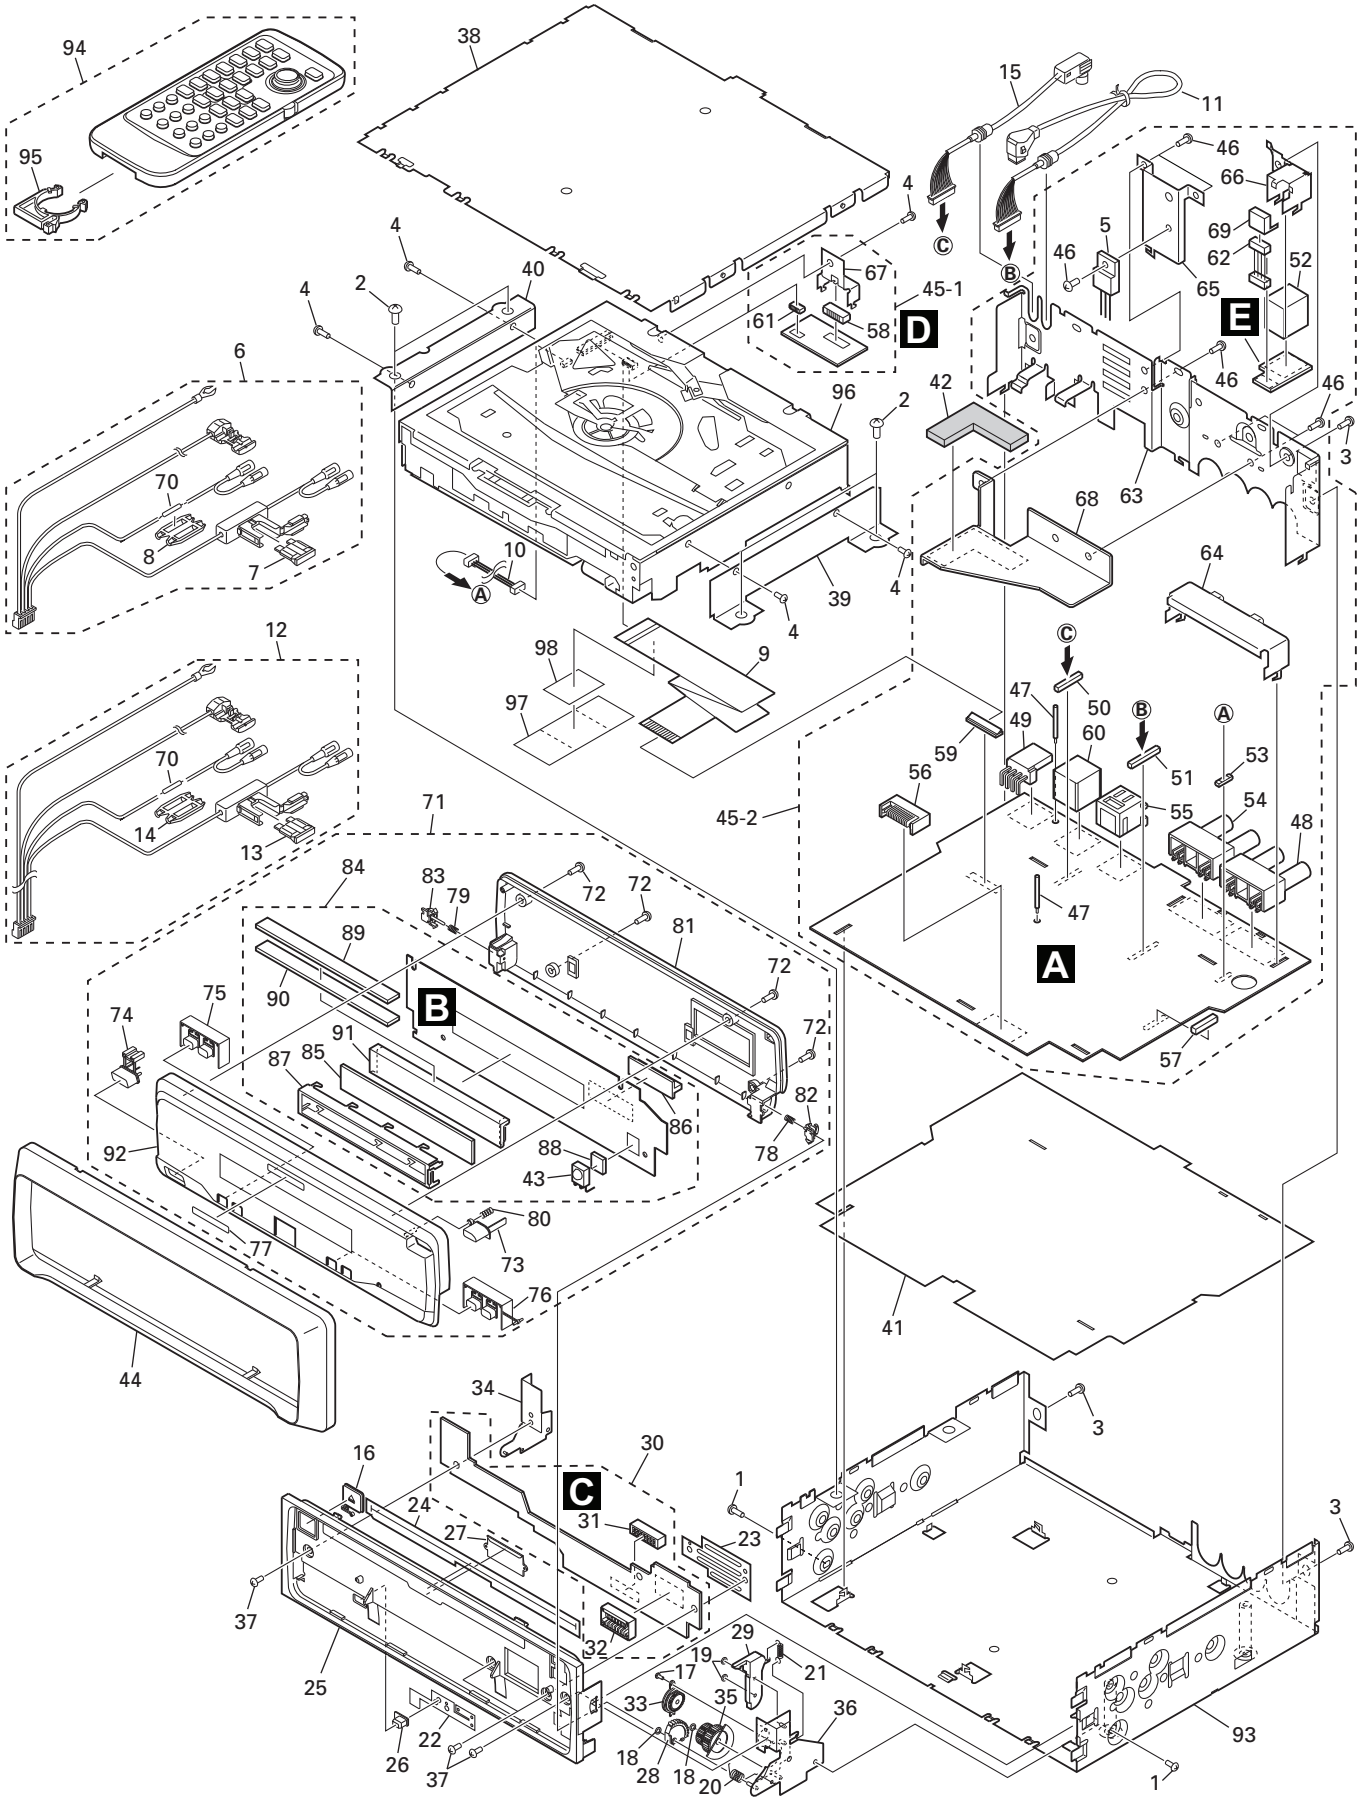


## ● EXTERIOR SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | Screw | BMZ30P040FZK |
| | 2 | Screw | BSZ26P060FMC |
| | 3 | Screw | BSZ30P060FMC |
| | 4 | Screw(M2x2.2) | CBA1419 |
| | 5 | Transistor(Q907) | 2SD2396 |
| | 6 | Cord Assy | CDE6588 |
| | 7 | Fuse(4A) | CEK1001 |
| | 8 | Cap | CNS1472 |
| | 9 | Cable | CDE6600 |
| | 10 | Cord | CDE6601 |
| | 11 | Cord Assy | CDE6606 |
| | 12 | Cord Assy | CDE6682 |
| | 13 | Fuse(4A) | CEK1001 |
| | 14 | Cap | CNS1472 |
| | 15 | Cord Assy | CDE6721 |
| | 16 | Button(EJECT) | CAC6839 |
| | 17 | Screw(M2x2) | CBA1176 |
| | 18 | Washer | CBF1038 |
| | 19 | Washer | CBF1039 |
| | 20 | Spring | CBH2428 |
| | 21 | Spring | CBH2429 |
| | 22 | Spring | CBL1512 |
| | 23 | Holder | CNC9096 |
| | 24 | Cover | CNM6854 |
| | 25 | Panel | CNS6278 |
| | 26 | Pin | CNV6486 |
| | 27 | Lighting Conductor | CNV6487 |
| | 28 | Gear | CNV6507 |
| | 29 | Arm | CNV6508 |
| | 30 | Panel PCB Unit | CWM7887 |
| | 31 | Socket(CN851) | CKS3550 |
| | 32 | Connector(CN852) | CKS4462 |
| | 33 | Damper Unit | CXB5070 |
| | 34 | Holder Unit | CXB6357 |
| | 35 | Clutch Unit | CXB6358 |
| | 36 | Holder Unit | CXB7506 |
| | 37 | Screw | IMS20P045FZK |
| | 38 | Case | CNB2693 |
| | 39 | Bracket | CNC9396 |
| | 40 | Bracket | CNC9397 |
| | 41 | Insulator | CNM7258 |
| | 42 | Sheet | CNM7457 |
| | 43 | IC(IC861) | TSOP1840SB1 |
| | 44 | Panel | CNS6553 |
| | 45 | Audio Control Unit(ES/RD) | CWM7686 |
| | | Audio Control Unit(ES/RC) | CWM7685 |
| | 46 | Screw | BSZ26P060FMC |
| | 47 | Clamper | CEF1008 |
| | 48 | Pin Jack(CN202) | CKB1049 |
| | 49 | Plug(CN901) | CKS-461 |
| * | 50 | Plug(CN701) | CKS-792 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 51 | Plug(CN101) | CKS1043 |
| | 52 | Connector(CN304) | CKS2104 |
| | 53 | Connector(CN301) | CKS3124 |
| | 54 | Pin Jack(CN161) | CKS3144 |
| | 55 | Connector(CN102) | CKS3408 |
| | 56 | Plug(CN801) | CKS3537 |
| | 57 | Connector(CN601) | CKS3814 |
| | 58 | Connector(CN203) | CKS3902 |
| | 59 | Connector(CN201) | CKS4052 |
| | 60 | Connector(CN702) | CKS4362 |
| | 61 | Connector(CN204) | CKS4496 |
| | 62 | Connector(CN302) | CKS4533 |
| | 63 | Panel | CNB2673 |
| | 64 | Holder | CNC9392 |
| | 65 | Holder | CNC9393 |
| | 66 | Holder | CNC9394 |
| | 67 | Holder | CNC9502 |
| | 68 | Heat Sink | CNC9518 |
| | 69 | Connector(CN303) | HKS-193 |
| | 70 | Resistor | RS1/2PMF102J |
| | 71 | Grille Panel Assy(ES/RD) | CXB8308 |
| | | Grille Panel Assy(ES/RC) | CXB8307 |
| | 72 | Screw | BPZ20P100FZK |
| | 73 | Button(OPEN) | CAC6780 |
| | 74 | Button(POWER) | CAC6989 |
| | 75 | Button(PLAY/PAUSE, STOP) | CAC6990 |
| | 76 | Button(+,-) | CAC6991 |
| * | 77 | Badge | CAH1754 |
| | 78 | Spring | CBH2430 |
| | 79 | Spring | CBH2431 |
| | 80 | Spring | CBH2491 |
| | 81 | Cover | CNS6282 |
| | 82 | Holder | CNV6505 |
| | 83 | Holder | CNV6506 |
| | 84 | Keyboard Unit | CWM7888 |
| | 85 | LCD | CAW1687 |
| | 86 | Connector(CN861) | CKS4524 |
| | 87 | Holder | CNC9395 |
| | 88 | Cushion | CNM7260 |
| | 89 | Spacer | CNM7585 |
| | 90 | Rubber | CNV6708 |
| | 91 | Lighting Conductor | CNV6709 |
| | 92 | Grille Unit | CXB7540 |
| | 93 | Chassis Unit | CXB7620 |
| | 94 | Remote Control Unit | CXB7969 |
| | 95 | Cover | CZN5357 |
| | 96 | DVD Mechanism Module(MS2) | CXK6111 |
| | 97 | Insulator | CNM7533 |
| | 98 | Ferrite | CTX1086 |

## 2.7 DVD MECHANISM MODULE

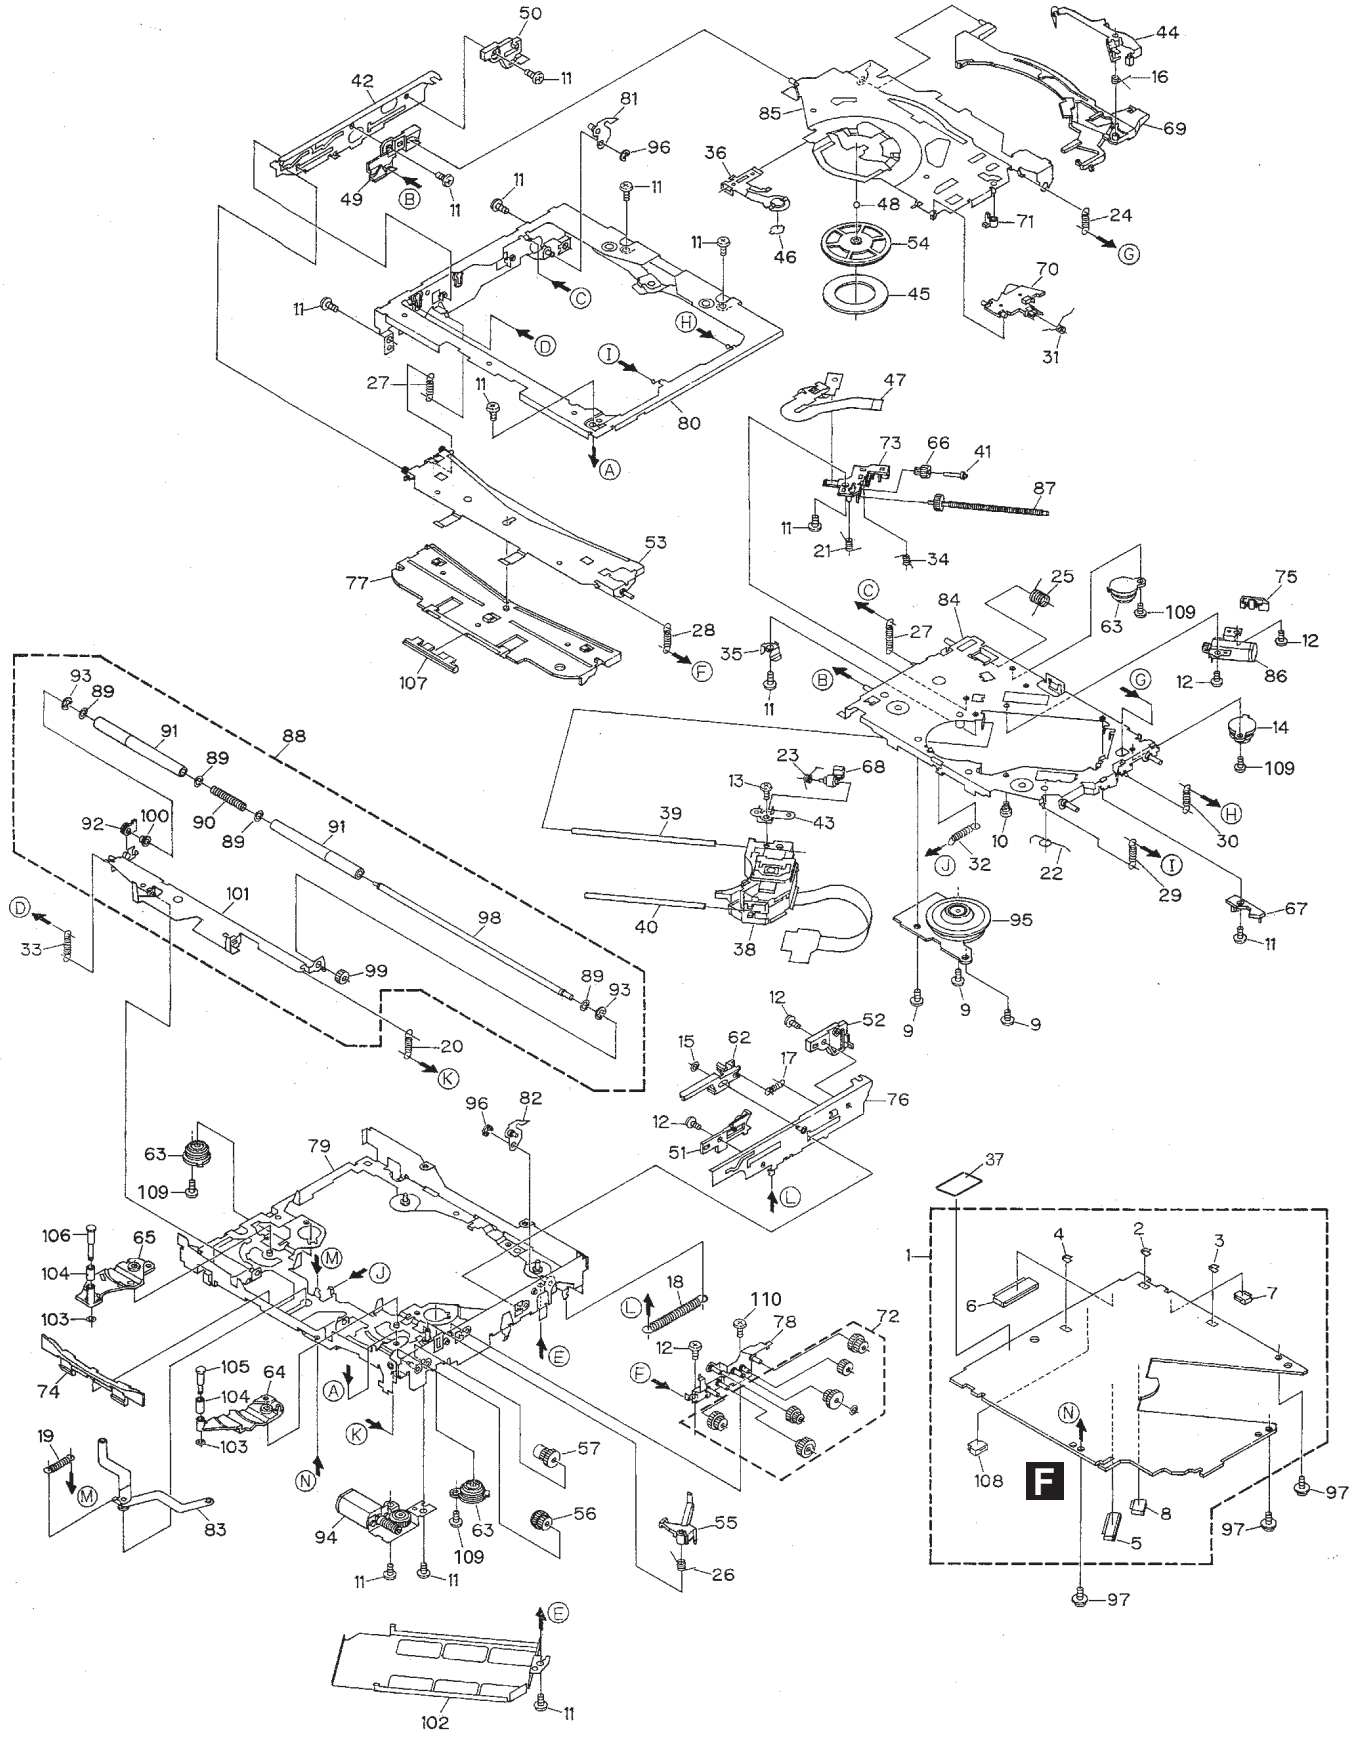

## ● DVD MECHANISM MODULE SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | DVD core unit V | CWX2574 |
| | 2 | Terminal(CN1703) | CKF1065 |
| | 3 | Terminal(CN1705) | CKF1065 |
| | 4 | Terminal(CN1706) | CKF1065 |
| | 5 | Connector(CN1100) | CKS3749 |
| | 6 | Connector(CN1701) | CKS4052 |
| | 7 | Connector(CN1700) | CKS4374 |
| | 8 | Connector(CN1300) | CKS4507 |
| | 9 | Screw(M2x3) | CBA1486 |
| | 10 | Screw | CBA1535 |
| | 11 | Screw(M2x2.2) | CBA1547 |
| | 12 | Screw(M2x2.2) | CBA1548 |
| | 13 | Screw(M1.4x2) | CBA1549 |
| | 14 | Damper | CNV6927 |
| | 15 | Washer | CBF1038 |
| | 16 | Spring | CBH2394 |
| | 17 | Spring | CBH2395 |
| | 18 | Spring | CBH2396 |
| | 19 | Spring | CBH2397 |
| | 20 | Spring | CBH2398 |
| | 21 | Spring | CBH2399 |
| | 22 | Spring | CBH2400 |
| | 23 | Spring | CBH2401 |
| | 24 | Spring | CBH2402 |
| | 25 | Spring | CBH2403 |
| | 26 | Spring | CBH2404 |
| | 27 | Spring | CBH2405 |
| | 28 | Spring | CBH2406 |
| | 29 | Spring | CBH2407 |
| | 30 | Spring | CBH2408 |
| | 31 | Spring | CBH2410 |
| | 32 | Spring | CBH2411 |
| | 33 | Spring | CBH2413 |
| | 34 | Spring | CBH2414 |
| | 35 | Spring | CBL1499 |
| | 36 | Spring | CBL1500 |
| | 37 | Sheet | CNM7590 |
| | 38 | Pickup Unit(Service)(DP4) | CXX1530 |
| | 39 | Shaft | CLA3878 |
| | 40 | Shaft | CLA3879 |
| | 41 | Shaft | CLA3881 |
| | 42 | Lever | CNC8988 |
| | 43 | Bracket | CNC8992 |
| | 44 | Arm | CNC8994 |
| | 45 | Sheet | CNM6883 |
| | 46 | Sheet | CNM6884 |
| | 47 | PCB | CNP5971 |
| | 48 | Ball | CNR1189 |
| | 49 | Guide | CNV6352 |
| | 50 | Guide | CNV6353 |
| | 51 | Guide | CNV6354 |
| | 52 | Guide | CNV6355 |
| | 53 | Guide | CNV6356 |
| | 54 | Clamper | CNV6357 |
| | 55 | Arm | CNV6358 |
| | 56 | Gear | CNV6361 |
| | 57 | Gear | CNV6362 |
| | 58-61 | ••••• | |
| | 62 | Rack | CNV6367 |
| | 63 | Damper | CNV6368 |
| | 64 | Arm | CNV6369 |
| | 65 | Arm | CNV6370 |
| | 66 | Gear | CNV6372 |
| | 67 | Holder | CNV6374 |
| | 68 | Rack | CNV6376 |
| | 69 | Arm | CNV6377 |
| | 70 | Arm | CNV6378 |
| | 71 | Arm | CNV6379 |
| | 72 | Gear Unit | CXB5959 |
| | 73 | Holder | CNV6383 |
| | 74 | Guide | CNV6384 |
| | 75 | Holder | CNV6385 |
| | 76 | Lever Unit | CXB5943 |
| | 77 | Holder Unit | CXB5944 |
| * | 78 | Holder Unit | CXB5947 |
| | 79 | Frame Unit | CXB5948 |
| | 80 | Frame Unit | CXB5949 |
| | 81 | Arm Unit | CXB5950 |
| | 82 | Arm Unit | CXB5951 |
| | 83 | Arm Unit | CXB5952 |
| | 84 | Chassis Unit | CXB5953 |
| | 85 | Arm Unit | CXB5954 |
| | 86 | Motor Unit(CRG) | CXB5955 |
| | 87 | Screw Unit | CXB5957 |
| | 88 | Roller Unit | CXB5958 |
| | 89 | Washer | CBF1060 |
| | 90 | Spring | CBH2170 |
| | 91 | Roller | CNV6068 |
| | 92 | Holder | CNV6210 |
| | 93 | Washer | YE20FUC |
| | 94 | Motor Unit(LOAD) | CXB5960 |
| | 95 | Motor Unit(SPDL) | CXB6218 |
| | 96 | Washer | YE15FUC |
| | 97 | Screw | IMS20P030FMC |
| * | 98 | Shaft | CLA3877 |
| * | 99 | Gear | CNV6359 |
| * | 100 | Caller | CNV6382 |
| * | 101 | Arm Unit | CXB5945 |
| | 102 | Cover | CNC9532 |
| | 103 | Washer | CBF1087 |
| | 104 | Roller | CNV6928 |
| | 105 | Shaft | CLA4091 |
| | 106 | Shaft | CLA4092 |
| | 107 | Guide | CNV6805 |
| | 108 | Connector(CN1702) | CKS4282 |
| | 109 | Screw (M2x3.5) | CBA1560 |
| | 110 | Screw (M2x2.2) | CBA1419 |

# 5. ELECTRICAL PARTS LIST

**NOTES:**

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

| Audio Control Unit |
|---|
| Consists of |
| Audio Control PCB |
| Extension PCB |
| Optical PCB |

A Unit Number : CWM7684(SDV-P7/UC)
D Unit Number : CWM7683(SDV-P7/EW)
D Unit Number : CWM7685(SDV-P7/ES/RC)
D Unit Number : CWM7686(SDV-P7/ES/RD)
E Unit Name : Audio Control Unit

MISCELLANEOUS

| =====Circuit Symbol and No. | | Part Name | Part No. |
|---|---|---|---|
| IC | 101 | IC | NJM4558MD |
| IC | 102 | IC | BA3131FS |
| IC | 103 | IC | TA2050F |
| IC | 151 | IC | HA12187FP |
| IC | 201 | IC | NJM2267M |
| IC | 202 | IC | NJM2246M |
| IC | 203 | IC | NJM2235M |
| IC | 204 | IC | BA7623F |
| IC | 301 | IC | TC7WT125FU |
| IC | 601 | IC | PE5229A |
| IC | 603 | IC | S-80734ANDYI |
| IC | 604 | IC | TC74VHCT08AFT |
| IC | 605 | IC | TC74VHC08FT |
| IC | 691 | IC | TC7W53FU |
| IC | 901 | IC | BA08SFP |
| IC | 903 | IC | BP5250 |
| IC | 905 | IC | BA00ASFP |
| Q | 104 | Transistor | IMD2A |
| Q | 107 | Transistor | DTC323TU |
| Q | 108 | Transistor | DTC323TU |
| Q | 161 | Transistor | IMD2A |
| Q | 163 | Transistor | DTC323TU |
| Q | 164 | Transistor | DTC323TU |
| Q | 301 | Transistor | DTA123EU |
| Q | 302 | Transistor | DTC114EU |
| Q | 601 | Transistor | DTC114EU |
| Q | 602 | Transistor | DTC124EU |
| Q | 603 | Transistor | DTC124EU |
| Q | 604 | Transistor | DTA144EU |
| Q | 605 | Transistor | DTC124EK |
| Q | 607 | Transistor | 2SC2412K |
| Q | 651 | Transistor | 2SC2412K |
| Q | 652 | Transistor | 2SC2412K |
| Q | 653 | Transistor | 2SC2412K |
| Q | 654 | Transistor | 2SA1037K |
| Q | 701 | Transistor | 2SA1037K |
| Q | 702 | Transistor | DTC124EU |
| Q | 703 | Transistor | IMD2A |
| Q | 901 | Transistor | 2SD1760F5 |
| Q | 902 | Transistor | IMD2A |

| =====Circuit Symbol and No. | | Part Name | Part No. |
|---|---|---|---|
| Q | 905 | Transistor | IMD2A |
| Q | 906 | Transistor | 2SD1760F5 |
| Q | 907 | Transistor | 2SD2396 |
| Q | 908 | Transistor | IMD2A |
| Q | 909 | Transistor | 2SJ529S |
| Q | 910 | Transistor | 2SA1797 |
| Q | 911 | Transistor | 2SA1797 |
| Q | 912 | Transistor | DTC124EU |
| Q | 913 | Transistor | 2SA1037K |
| Q | 914 | Transistor | DTC124EU |
| Q | 915 | Transistor | 2SA1037K |
| Q | 916 | Transistor | 2SA1037K |
| Q | 917 | Transistor | 2SA1037K |
| Q | 918 | Transistor | DTC124EU |
| Q | 919 | Transistor | 2SA1037K |
| Q | 920 | Transistor | DTC124EU |
| Q | 921 | Transistor | DTC124EU |
| Q | 922 | Transistor | 2SC2412K |
| Q | 923 | Transistor | 2SC2412K |
| Q | 924 | Transistor | DTC114EU |
| Q | 926 | Transistor | DTC114EU |
| Q | 927 | Transistor | IMD2A |
| Q | 928 | Transistor | 2SC2412K |
| Q | 929 | Transistor | 2SA1037K |
| Q | 930 | Transistor | DTC124EU |
| Q | 931 | Transistor | DTC115EUA |
| D | 101 | Diode | 1SS355 |
| D | 102 | Diode | 1SS355 |
| D | 163 | Diode | 1SS355 |
| D | 164 | Diode | 1SS355 |
| D | 202 | Diode | UDZ12(B) |
| D | 203 | Diode | UDZ12(B) |
| D | 601 | Diode | MA111 |
| D | 602 | Diode | UDZ8R2(B) |
| D | 603 | Diode | DAN202U |
| D | 651 | Diode | UDZ7R5(B) |
| D | 652 | Diode | UDZ5R6(B) |
| D | 653 | Diode | MA111 |
| D | 654 | Diode | MA111 |
| D | 701 | Diode | UDZ12(B) |
| D | 702 | Diode | UDZ12(B) |
| D | 703 | Diode | UDZ12(B) |
| D | 704 | Diode | UDZ12(B) |
| D | 705 | Diode | UDZ12(B) |
| D | 706 | Diode | UDZ12(B) |
| D | 707 | Diode | UDZ12(B) |
| D | 708 | Diode | UDZ12(B) |
| D | 709 | Diode | DAN202U |
| D | 710 | Diode | DAN202U |
| D | 801 | Diode | UDZ12(B) |
| D | 802 | Diode | UDZ12(B) |
| D | 803 | Diode | UDZ12(B) |
| D | 804 | Diode | UDZ12(B) |
| D | 805 | Diode | UDZ12(B) |
| D | 806 | Diode | UDZ12(B) |

| Circuit Symbol and No. | | Part Name | Part No. |
|---|---|---|---|
| D | 807 | Diode | UDZ12(B) |
| D | 808 | Diode | UDZ12(B) |
| D | 811 | Diode | UDZ12(B) |
| D | 901 | Diode | ERA15-02VH |
| D | 902 | Diode | UDZS5R6(B) |
| D | 903 | Diode | ERA15-02VH |
| D | 904 | Diode | SC802-06 |
| D | 905 | Diode | HZS9L(B1) |
| D | 906 | Diode | F2J4S |
| D | 907 | Diode | HZS6L(B2) |
| D | 908 | Diode | F2J4S |
| D | 909 | Diode | ERA15-02VH |
| D | 910 | Diode | MA111 |
| D | 911 | Diode | F2J4S |
| D | 912 | Diode | UDZS5R6(B) |
| D | 913 | Diode | MA111 |
| L | 102 | Inductor | CTF1399 |
| L | 103 | Inductor | CTF1399 |
| L | 104 | Inductor | CTF1473 |
| L | 105 | Inductor | CTF1379 |
| L | 106 | Inductor | CTF1379 |
| L | 107 | Inductor | CTF1473 |
| L | 108 | Inductor | CTF1379 |
| L | 109 | Inductor | CTF1379 |
| L | 110 | Inductor | CTF1379 |
| L | 111 | Inductor | CTF1379 |
| L | 112 | Inductor | CTF1379 |
| L | 113 | Inductor | CTF1379 |
| L | 114 | Inductor | CTF1379 |
| L | 115 | Inductor | CTF1379 |
| L | 116 | Inductor | CTF1379 |
| L | 117 | Inductor | CTF1379 |
| L | 118 | Inductor | CTF1379 |
| L | 119 | Inductor | CTF1473 |
| L | 151 | Inductor | CTF1379 |
| L | 161 | Inductor | CTF1379 |
| L | 162 | Inductor | CTF1379 |
| L | 163 | Inductor | CTF1473 |
| L | 201 | Inductor | CTF1399 |
| L | 202 | Inductor | CTF1305 |
| L | 203 | Inductor | CTF1305 |
| L | 204 | Inductor | LCTA150J2520 |
| L | 205 | Inductor | CTF1383 |
| L | 206 | Inductor | CTF1383 |
| L | 209 | Inductor | CTF1473 |
| L | 211 | Inductor | CTF1379 |
| L | 213 | Inductor | CTF1379 |
| L | 214 | Inductor | CTF1379 |
| L | 215 | Inductor | CTF1473 |
| L | 216 | Inductor | CTF1473 |
| L | 302 | Inductor | CTF1379 |
| L | 601 | Inductor | CTF1379 |
| L | 602 | Inductor | CTF1305 |
| L | 603 | Inductor | CTF1379 |
| L | 604 | Inductor | CTF1420 |
| L | 605 | Inductor | CTF1420 |
| L | 606 | Inductor | CTF1306 |
| L | 607 | Inductor | CTF1306 |
| L | 608 | Inductor | CTF1399 |
| L | 609 | Inductor | CTF1420 |
| L | 610 | Inductor | CTF1305 |
| L | 611 | Inductor | CTF1305 |
| L | 613 | Inductor | CTF1379 |
| L | 614 | Inductor | CTF1379 |
| L | 615 | Inductor | CTF1379 |
| L | 616 | Inductor | CTF1379 |
| L | 617 | Inductor | CTF1379 |
| L | 618 | Inductor | CTF1379 |
| L | 619 | Inductor | CTF1379 |
| L | 620 | Inductor | CTF1379 |
| L | 621 | Inductor | CTF1379 |
| L | 622 | Inductor | CTF1379 |
| L | 623 | Inductor | CTF1379 |
| L | 651 | Ferri-Inductor | LAU2R2K |
| L | 701 | Inductor | CTF1473 |
| L | 702 | Inductor | CTF1379 |
| L | 703 | Inductor | CTF1379 |
| L | 704 | Inductor | CTF1379 |
| L | 705 | Inductor | CTF1379 |
| L | 706 | Inductor | CTF1379 |
| L | 707 | Inductor | CTF1379 |
| L | 712 | Inductor | CTF1383 |
| L | 713 | Inductor | CTF1379 |
| L | 714 | Inductor | CTF1379 |
| L | 715 | Inductor | CTF1473 |
| L | 716 | Inductor | CTF1379 |
| L | 717 | Inductor | CTF1379 |
| L | 718 | Inductor | CTF1383 |
| L | 719 | Inductor | CTF1379 |
| L | 720 | Inductor | CTF1379 |
| L | 721 | Inductor | CTF1473 |
| L | 722 | Inductor | CTF1379 |
| L | 723 | Inductor | CTF1379 |
| L | 724 | Inductor | CTF1379 |
| L | 901 | Coil | CTH1113 |
| L | 902 | Coil | CTH1246 |
| L | 903 | Coil | CTH1246 |
| L | 904 | Coil | CTH1246 |
| L | 908 | Inductor | CTF1399 |
| X | 601 | Radiator 12.5829MHz | CSS1495 |
| S | 601 | Slide Switch(M/S SELECT) | CSH1051 |
| S | 651 | Switch(DSEN) | CSN1039 |
| FU | 201 | Fuse 2A | CEK1190 |
| FU | 202 | Fuse 2A | CEK1190 |
| FU | 701 | Fuse 2A | CEK1190 |
| FU | 702 | Fuse 2A | CEK1190 |
| FU | 901 | Fuse 400mA | CEK1184 |
| FU | 902 | Fuse 400mA | CEK1184 |
| FU | 903 | Fuse 2A | CEK1190 |
| EF | 901 | Filter | CCG1164 |
| EF | 902 | EMI Filter | CCG1165 |
| BZ | 601 | Buzzer | CPV1050 |
| VR | 901 | Semi-fixed 470Ω(B) | CCP1338 |

## RESISTORS

| | | | |
|---|---|---|---|
| R | 105 | | RS1/16S152J |
| R | 106 | | RS1/16S152J |
| R | 107 | | RS1/16S333J |
| R | 108 | | RS1/16S333J |
| R | 111 | | RS1/16S0R0J |
| R | 112 | | RS1/16S0R0J |
| R | 113 | | RS1/16S472J |
| R | 114 | | RS1/16S472J |
| R | 115 | | RS1/16S104J |
| R | 116 | | RS1/16S104J |
| R | 117 | | RS1/16S473J |
| R | 118 | | RS1/16S473J |
| R | 119 | | RS1/16S332J |
| R | 120 | | RS1/16S332J |
| R | 121 | | RS1/16S473J |
| R | 122 | | RS1/16S473J |
| R | 123 | | RS1/16S821J |
| R | 124 | | RS1/16S821J |
| R | 125 | | RS1/16S223J |
| R | 126 | | RS1/16S223J |
| R | 127 | | RS1/16S102J |
| R | 128 | | RS1/16S102J |
| R | 129 | | RS1/16S223J |
| R | 130 | | RS1/16S223J |
| R | 131 | | RS1/16S181J |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| R | 132 | | RS1/16S181J |
| R | 133 | | RS1/16S472J |
| R | 134 | | RS1/16S472J |
| R | 135 | | RS1/16S473J |
| R | 137 | | RS1/16S102J |
| R | 138 | | RS1/16S102J |
| R | 151 | | RS1/16S473J |
| R | 152 | | RS1/16S102J |
| R | 153 | | RS1/16S473J |
| R | 154 | | RS1/16S102J |
| R | 155 | | RS1/16S101J |
| R | 156 | | RS1/16S101J |
| R | 161 | | RS1/16S821J |
| R | 162 | | RS1/16S821J |
| R | 163 | | RS1/16S223J |
| R | 164 | | RS1/16S223J |
| R | 165 | | RS1/16S102J |
| R | 166 | | RS1/16S102J |
| R | 201 | | RS1/16S151J |
| R | 202 | | RS1/16S105J |
| R | 203 | | RS1/16S101J |
| R | 204 | | RS1/16S101J |
| R | 205 | | RS1/16S105J |
| R | 206 | | RS1/16S105J |
| R | 207 | | RS1/16S101J |
| R | 208 | | RS1/16S105J |
| R | 209 | | RS1/16S101J |
| R | 210 | | RS1/16S151J |
| R | 211 | | RS1/16S151J |
| R | 212 | | RS1/16S151J |
| R | 213 | | RS1/16S151J |
| R | 214 | | RS1/16S105J |
| R | 215 | | RS1/16S151J |
| R | 216 | | RS1/16S151J |
| R | 217 | | RS1/16S151J |
| R | 218 | | RS1/16S151J |
| R | 219 | | RS1/16S151J |
| R | 221 | | RS1/8S0R0J |
| R | 222 | | RS1/8S0R0J |
| R | 301 | | RS1/16S621J |
| R | 302 | | RS1/16S221J |
| R | 306 | | RS1/16S473J |
| R | 308 | | RS1/16S361J |
| R | 601 | | RS1/16S473J |
| R | 602 | | RS1/16S102J |
| R | 603 | | RS1/16S473J |
| R | 604 | | RS1/16S473J |
| R | 605 | | RS1/16S473J |
| R | 606 | | RS1/16S473J |
| R | 607 | | RS1/16S473J |
| R | 609 | | RS1/16S102J |
| R | 610 | | RS1/16S102J |
| R | 611 | | RS1/16S102J |
| R | 612 | | RAB4C102J |
| R | 613 | | RS1/16S102J |
| R | 614 | | RAB4C102J |
| R | 615 | | RAB4C102J |
| R | 616 | | RS1/16S102J |
| R | 617 | | RS1/16S473J |
| R | 618 | (SDV-P7/UC) | RS1/16S333J |
| | | (SDV-P7/EW) | RS1/16S223J |
| | | (SDV-P7/ES/RC) | RS1/16S103J |
| | | (SDV-P7/ES/RD) | RS1/16S473J |
| R | 619 | (SDV-P7/UC) | RS1/16S103J |
| | | (SDV-P7/EW) | RS1/16S223J |
| | | (SDV-P7/ES/RC) | RS1/16S333J |
| R | 622 | | RS1/16S103J |
| R | 623 | | RS1/16S473J |
| R | 624 | | RS1/16S224J |
| R | 625 | | RS1/16S102J |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| R | 626 | | RS1/16S102J |
| R | 627 | | RS1/16S473J |
| R | 628 | | RS1/16S473J |
| R | 629 | | RS1/16S102J |
| R | 630 | | RS1/16S473J |
| R | 631 | | RS1/16S473J |
| R | 632 | | RS1/16S102J |
| R | 633 | | RS1/16S473J |
| R | 634 | | RS1/16S102J |
| R | 635 | | RS1/16S102J |
| R | 636 | | RAB4C102J |
| R | 640 | | RS1/16S473J |
| R | 641 | | RS1/16S472J |
| R | 642 | | RS1/16S102J |
| R | 643 | | RS1/16S472J |
| R | 644 | | RS1/16S473J |
| R | 645 | | RS1/16S333J |
| R | 651 | | RS1/16S473J |
| R | 652 | | RS1/16S473J |
| R | 653 | | RS1/16S223J |
| R | 654 | | RS1/16S223J |
| R | 655 | | RS1/16S223J |
| R | 656 | | RS1/16S4R7J |
| R | 657 | | RS1/16S473J |
| R | 658 | | RS1/16S222J |
| R | 659 | | RS1/16S223J |
| R | 660 | | RS1/16S472J |
| R | 661 | | RS1/16S183J |
| R | 662 | | RS1/16S182J |
| R | 663 | | RS1/16S473J |
| R | 664 | | RS1/16S473J |
| R | 665 | | RS1/16S103J |
| R | 666 | | RS1/16S153J |
| R | 677 | | RS1/16S102J |
| R | 678 | | RS1/16S102J |
| R | 679 | | RS1/16S473J |
| R | 691 | | RS1/16S102J |
| R | 692 | | RS1/16S473J |
| R | 693 | | RS1/16S102J |
| R | 695 | | RS1/16S102J |
| R | 696 | | RS1/16S102J |
| R | 701 | | RS1/8S0R0J |
| R | 702 | | RS1/8S0R0J |
| R | 714 | | RS1/16S332J |
| R | 715 | | RS1/16S822J |
| R | 718 | | RS1/16S102J |
| R | 719 | | RS1/16S102J |
| R | 901 | | RS1/16S682J |
| R | 902 | | RD1/4PU122J |
| R | 904 | | RS1/16S473J |
| R | 908 | | RS1/16S561J |
| R | 909 | | RS1/16S561J |
| R | 910 | | RS1/16S472J |
| R | 911 | | RS1/16S3002D |
| R | 912 | | RS1/16S1002D |
| R | 914 | | RS1/16S332J |
| R | 915 | | RS1/16S473J |
| R | 916 | | RS1/16S473J |
| R | 917 | | RS1/16S391J |
| R | 918 | | RS1/16S561J |
| R | 919 | | RS1/16S473J |
| R | 920 | | RS1/16S682J |
| R | 921 | | RS1/16S273J |
| R | 922 | | RS1/16S822J |
| R | 923 | | RS1/16S392J |
| R | 924 | | RS1/16S473J |
| R | 925 | | RS1/16S1001D |
| R | 926 | | RS1/16S183J |
| R | 927 | | RS1/16S153J |
| R | 928 | | RS1/16S472J |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| R | 929 | | RS1/16S222J |
| R | 930 | | RS1/16S221J |
| R | 931 | | RS1/16S183J |
| R | 932 | | RS1/16S153J |
| R | 933 | | RS1/16S3301D |
| R | 935 | | RD1/4PU241J |
| R | 936 | | RD1/4PU241J |
| R | 937 | | RD1/4PU470J |
| R | 938 | | RD1/4PU390J |
| R | 939 | | RD1/4PU390J |
| R | 940 | | RS1/16S180J |
| R | 941 | | RS1/16S180J |
| R | 942 | | RS1/16S180J |
| R | 943 | | RS1/16S180J |
| R | 944 | | RS1/16S180J |
| R | 945 | | RS1/16S180J |
| R | 946 | | RS1/16S4700D |
| R | 948 | | RS1/16S221J |
| R | 949 | | RS1/16S102J |
| R | 950 | | RS1/16S391J |
| R | 951 | | RS1/16S473J |
| R | 952 | | RS1/16S332J |
| R | 953 | | RS1/16S223J |
| R | 955 | | RS1/16S391J |
| R | 956 | | RS1/16S391J |
| R | 957 | | RS1/16S1801F |

## CAPACITORS

| | | | |
|---|---|---|---|
| C | 103 | | CEJQ100M16 |
| C | 104 | | CEJQ100M16 |
| C | 105 | | CEJQ101M6R3 |
| C | 106 | | CKSRYB104K16 |
| C | 109 | | CKSRYB104K16 |
| C | 110 | | CEJQ100M16 |
| C | 111 | | CEJQ101M10 |
| C | 113 | | CEJQ4R7M25 |
| C | 114 | | CEJQ4R7M25 |
| C | 115 | | CEJQNP100M10 |
| C | 116 | | CEJQNP100M10 |
| C | 117 | | CEJQ100M16 |
| C | 118 | | CKSRYB104K16 |
| C | 119 | | CEJQ100M16 |
| C | 121 | | CEJQ1R0M50 |
| C | 122 | | CEJQ1R0M50 |
| C | 123 | | CEJQ1R0M50 |
| C | 124 | | CEJQ1R0M50 |
| C | 125 | | CKSRYB104K16 |
| C | 129 | | CEJQ220M6R3 |
| C | 130 | | CEJQ101M6R3 |
| C | 131 | | CKSRYB103K50 |
| C | 133 | | CCSRCH220J50 |
| C | 134 | | CCSRCH220J50 |
| C | 151 | | CKSRYB104K16 |
| C | 152 | | CCSRCH471J50 |
| C | 153 | | CCSRCH471J50 |
| C | 161 | | CEJQ4R7M25 |
| C | 162 | | CEJQ4R7M25 |
| C | 165 | | CCSRCH221J50 |
| C | 201 | 470µF/6.3V | CCH1182 |
| C | 202 | | CEJQ4R7M25 |
| C | 203 | | CEJQ1R0M50 |
| C | 204 | | CCSRCH220J50 |
| C | 207 | | CCSRCH220J50 |
| C | 208 | | CEJQ101M6R3 |
| C | 209 | | CKSRYB104K16 |
| C | 210 | | CEJQ100M16 |
| C | 211 | | CKSRYB104K16 |
| C | 212 | | CKSRYB103K50 |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| C | 213 | | CEJQ470M6R3 |
| C | 214 | | CCSRCH220J50 |
| C | 215 | | CEJQ100M16 |
| C | 216 | | CKSRYB104K16 |
| C | 217 | | CKSRYB104K16 |
| C | 218 | | CKSRYB103K50 |
| C | 219 | | CEJQ470M6R3 |
| C | 220 | | CCSRCH220J50 |
| C | 221 | 470µF/6.3V | CCH1182 |
| C | 222 | 470µF/6.3V | CCH1182 |
| C | 223 | 470µF/6.3V | CCH1182 |
| C | 224 | | CKSRYB223K25 |
| C | 225 | | CEJQ470M6R3 |
| C | 226 | | CEJQ100M16 |
| C | 229 | | CCSRCH221J50 |
| C | 230 | | CCSRCH221J50 |
| C | 301 | | CCSRCH150J50 |
| C | 304 | | CKSRYB104K16 |
| C | 305 | | CEJQ100M16 |
| C | 601 | | CKSRYB103K50 |
| C | 602 | | CCSRCH101J50 |
| C | 604 | | CCSRCH270J50 |
| C | 605 | | CCSRCH270J50 |
| C | 606 | | CCSRCH101J50 |
| C | 608 | | CEJQ1R0M50 |
| C | 609 | | CKSRYB103K50 |
| C | 610 | | CEJQ1R0M50 |
| C | 611 | | CKSRYB102K50 |
| C | 612 | | CKSRYB102K50 |
| C | 613 | | CKSRYB102K50 |
| C | 614 | | CKSRYB102K50 |
| C | 651 | | CKSRYB472K50 |
| C | 652 | | CKSRYB103K50 |
| C | 691 | | CKSRYB104K16 |
| C | 701 | | CKSRYB103K50 |
| C | 702 | | CCSRCH221J50 |
| C | 901 | 2200µF/16V | CCH1383 |
| C | 902 | | CKSRYB103K50 |
| C | 903 | | CEJQ101M10 |
| C | 904 | | CKSRYB103K50 |
| C | 905 | 1500µF/16V | CCH1312 |
| C | 906 | | CEJQ100M16 |
| C | 908 | | CKSRYB103K50 |
| C | 909 | 220µF/16V | CCH1180 |
| C | 910 | | CEJQ101M16 |
| C | 911 | | CKSRYB103K50 |
| C | 912 | | CKSRYB103K50 |
| C | 913 | | CEJQ101M10 |
| C | 914 | | CEJQ101M16 |
| C | 915 | | CKSRYB103K50 |
| C | 916 | | CKSRYB103K50 |
| C | 917 | | CEJQ101M10 |
| C | 919 | | CKSRYB103K50 |
| C | 920 | | CKSRYB104K16 |
| C | 921 | | CASA221M10 |
| C | 923 | | CEJQR33M50 |
| C | 924 | | CEJQ220M10 |
| C | 928 | | CKSQYB104K25 |
| C | 929 | | CKSRYB103K50 |
| C | 931 | | CKSRYB103K50 |
| C | 932 | | CEHAZL471M16 |
| C | 933 | 0.1F/5.5V | CCL1023 |
| C | 934 | | CKSRYB102K50 |
| C | 935 | 470µF/10V | CCH1019 |
| C | 936 | | CKSRYB102K50 |
| C | 937 | 470µF/10V | CCH1019 |
| C | 938 | 3300µF/16V | CCH1018 |
| C | 940 | | CKSRYB104K16 |
| C | 941 | | CKSRYB104K16 |
| C | 942 | | CEJQ100M16 |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| C | 943 | | CKSRYB102K50 |
| C | 944 | | CKSRYB103K50 |
| C | 945 | | CKSRYB103K50 |
| C | 946 | | CEJQ100M16 |
| C | 947 | | CKSRYB222K50 |

## B Unit Number : CWM7888
## Unit Name : Keyboard Unit

### MISCELLANEOUS

| | | | |
|---|---|---|---|
| IC | 861 | IC | TSOP1840SB1 |
| IC | 862 | IC | LC75822W |
| D | 864 | Diode | DAN202U |
| D | 865 | Diode | DAN202U |
| D | 866 | Diode | DAP202U |
| D | 867 | Diode | DAP202U |
| D | 868 | Diode | DAN217U |
| D | 872 | LED | NSSW440-9159 |
| D | 873 | LED | NSSW440-9159 |
| L | 861 | Inductor | LCTA2R2J2520 |
| S | 861 | Push Switch(RESET) | CSG1111 |
| S | 862 | Push Switch | CSG1112 |
| S | 863 | Switch | CSG1107 |
| S | 864 | Switch | CSG1107 |
| S | 865 | Switch | CSG1107 |
| S | 866 | Switch | CSG1107 |
| | | LCD | CAW1687 |

### RESISTORS

| | | |
|---|---|---|
| R | 861 | RS1/16S101J |
| R | 863 | RS1/16S104J |
| R | 864 | RS1/16S0R0J |
| R | 865 | RS1/16S472J |
| R | 866 | RS1/16S122J |
| R | 867 | RS1/16S182J |
| R | 868 | RS1/16S392J |
| R | 869 | RS1/16S123J |
| R | 870 | RS1/16S102J |
| R | 871 | RS1/16S102J |
| R | 872 | RS1/16S102J |
| R | 873 | RS1/16S101J |
| R | 874 | RS1/16S102J |
| R | 875 | RS1/16S472J |
| R | 881 | RS1/16S680J |
| R | 882 | RS1/16S820J |
| R | 884 | RS1/16S180J |
| R | 885 | RS1/16S820J |
| R | 886 | RS1/16S820J |
| R | 887 | RS1/16S820J |
| R | 888 | RS1/16S820J |

### CAPACITORS

| | | |
|---|---|---|
| C | 861 | CKSRYB104K16 |
| C | 862 | CKSRYB473K50 |
| C | 863 | CCSRCH331J50 |
| C | 864 | CKSRYB103K50 |
| C | 872 | CKSQYB104K25 |
| C | 873 | CKSQYB104K25 |

## C Unit Number : CWM7887
## Unit Name : Panel PCB Unit

### MISCELLANEOUS

| | | | |
|---|---|---|---|
| D | 851 | LED | CL220PGC |
| S | 851 | Push Switch(EJECT) | CSG1112 |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|

## F Unit Number : CWX2574
## Unit Name : DVD Core Unit V

### MISCELLANEOUS

| | | | |
|---|---|---|---|
| IC | 1100 | IC | AN8702FH |
| IC | 1101 | IC | NJM2904M |
| IC | 1200 | IC | MN677061ZYUB |
| IC | 1300 | IC | BA5985FM |
| IC | 1400 | IC | MNZS25BDAUB |
| IC | 1403 | IC | TC74LCX244FT |
| IC | 1405 | IC | TC7SH04FU |
| IC | 1500 | IC | MSM56V16160F8TKFM |
| IC | 1501 | IC | MSM56V16160F8TKFM |
| IC | 1502 | IC | MN677532JAUB |
| IC | 1503 | IC | TC74VCX74FT |
| IC | 1504 | IC | TC74VCX04FT |
| IC | 1506 | IC | SM8703AV |
| IC | 1509 | IC | TC74VCX74FT |
| IC | 1601 | IC | AK4380VT |
| IC | 1700 | IC | PE5277A |
| IC | 1701 | IC | M5M5V216ATP-70HI |
| IC | 1702 | IC | PD6354B |
| IC | 1704 | IC | TC74VCX08FT |
| IC | 1705 | IC | TC7SH04FU |
| IC | 1706 | IC | TC7SH32FU |
| IC | 1802 | IC | BA033SFP |
| IC | 1803 | IC | BA18BC0WFP |
| IC | 1804 | IC | BA00BC0WFP |
| Q | 1102 | Transistor | 2SD601A |
| Q | 1104 | Transistor | 2SB1260 |
| Q | 1105 | Transistor | 2SB709A |
| Q | 1107 | Transistor | UN2211 |
| Q | 1108 | Transistor | 2SB1260 |
| Q | 1109 | Chip Transistor | 2SC2712 |
| Q | 1110 | Chip Transistor | 2SC2712 |
| Q | 1111 | Chip Transistor | 2SC2712 |
| Q | 1600 | Transistor | 2SA1037K |
| Q | 1601 | Transistor | 2SA1037K |
| Q | 1602 | Transistor | FMG12 |
| Q | 1603 | Transistor | IMD2A |
| Q | 1700 | Transistor | DTA123JK |
| D | 1100 | Diode | 1SS355 |
| D | 1101 | Diode | 1SS355 |
| D | 1401 | Diode | UDZ2R7(B) |
| D | 1601 | Chip Diode | MA151WA |
| D | 1802 | Diode | S2G-6600 |
| D | 1804 | Diode | 1SR154-400 |
| L | 1201 | Inductor | CTF1409 |
| L | 1202 | Inductor | CTF1409 |
| L | 1401 | Inductor | CTF1409 |
| L | 1402 | Inductor | CTF1409 |
| L | 1403 | Inductor | CTF1395 |
| L | 1404 | Inductor | CTF1473 |
| L | 1500 | Inductor | CTF1395 |
| L | 1501 | Inductor | CTF1394 |
| L | 1502 | Inductor | CTF1409 |
| L | 1503 | Inductor | CTF1399 |
| L | 1504 | Inductor | CTF1399 |
| L | 1505 | Inductor | CTF1399 |
| L | 1506 | Inductor | CTF1409 |
| L | 1507 | Inductor | CTF1473 |
| L | 1508 | Inductor | CTF1473 |
| L | 1509 | Inductor | CTF1473 |
| L | 1512 | Inductor | CTF1470 |
| L | 1536 | Inductor | CTF1470 |
| L | 1600 | Inductor | CTF1473 |
| L | 1602 | Inductor | CTF1399 |
| L | 1700 | Inductor | CTF1395 |
| L | 1701 | Inductor | CTF1409 |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| L | 1702 | Inductor | CTF1473 |
| L | 1704 | Inductor | CTF1473 |
| L | 1720 | Inductor | CTF1473 |
| X | 1500 | Resonator 27MHz | CSS1531 |
| X | 1700 | Ceramic Resonator 5MHz | CSS1547 |
| S | 1301 | Spring Switch(CLAMP) | CSN1051 |
| S | 1302 | Spring Switch(L/E ON/OFF) | CSN1051 |
| S | 1303 | Spring Switch(8cm DETECT) | CSN1051 |
| S | 1304 | Spring Switch(12cm DETECT) | CSN1051 |
| VR | 1500 | Semi-fixed 2.2kΩ(B) | CCP1177 |
| F | 1600 | Filter | CTF1515 |

## RESISTORS

| | | | |
|---|---|---|---|
| R | 1101 | | RS1/16SS330J |
| R | 1102 | | RS1/16SS3R9J |
| R | 1103 | | RS1/16SS330J |
| R | 1104 | | RS1/16SS3R9J |
| R | 1105 | | RS1/16SS122J |
| R | 1106 | | RS1/16SS472J |
| R | 1107 | | RS1/16S6201D |
| R | 1108 | | RS1/16SS3R9J |
| R | 1109 | | RS1/16SS3R9J |
| R | 1110 | | RS1/16S1002D |
| R | 1113 | | RS1/16S2402D |
| R | 1114 | | RS1/16SS823J |
| R | 1115 | | RS1/16SS682J |
| R | 1116 | | RS1/16SS3R9J |
| R | 1117 | | RS1/16SS3R9J |
| R | 1118 | | RS1/16SS223J |
| R | 1119 | | RS1/16SS202J |
| R | 1120 | | RS1/16SS105J |
| R | 1121 | | RS1/16SS105J |
| R | 1122 | | RS1/16SS103J |
| R | 1123 | | RS1/16SS103J |
| R | 1124 | | RS1/16SS103J |
| R | 1125 | | RS1/16SS103J |
| R | 1126 | | RS1/16SS103J |
| R | 1127 | | RS1/16SS103J |
| R | 1128 | | RS1/16SS3R9J |
| R | 1129 | | RS1/16SS3R9J |
| R | 1130 | | RS1/16SS102J |
| R | 1131 | | RS1/16SS102J |
| R | 1132 | | RS1/16SS102J |
| R | 1133 | | RS1/16SS102J |
| R | 1134 | | RS1/16SS102J |
| R | 1135 | Resistor Array | RAB4CQ0R0J |
| R | 1136 | | RS1/16SS133J |
| R | 1137 | | RS1/16SS133J |
| R | 1138 | | RS1/16SS0R0J |
| R | 1139 | | RS1/16SS0R0J |
| R | 1140 | | RS1/16SS0R0J |
| R | 1141 | | RS1/16SS0R0J |
| R | 1142 | | RS1/16SS183J |
| R | 1143 | | RS1/16SS273J |
| R | 1144 | | RS1/16SS273J |
| R | 1145 | | RS1/16SS0R0J |
| R | 1146 | | RS1/16SS0R0J |
| R | 1147 | | RS1/16SS0R0J |
| R | 1148 | | RS1/16SS0R0J |
| R | 1149 | | RS1/16SS102J |
| R | 1150 | | RS1/16SS102J |
| R | 1151 | | RS1/16SS102J |
| R | 1152 | | RS1/16SS154J |
| R | 1153 | | RS1/16SS154J |
| R | 1154 | | RS1/16SS154J |
| R | 1156 | | RS1/16SS224J |
| R | 1157 | | RS1/16SS0R0J |
| R | 1201 | | RS1/16SS203J |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| R | 1202 | | RS1/16SS102J |
| R | 1203 | | RS1/16SS471J |
| R | 1204 | | RS1/16SS221J |
| R | 1205 | | RS1/16SS221J |
| R | 1206 | | RS1/16SS473J |
| R | 1207 | | RS1/16SS101J |
| R | 1208 | | RS1/16SS101J |
| R | 1209 | | RS1/16SS473J |
| R | 1210 | | RS1/16SS222J |
| R | 1212 | | RS1/16SS473J |
| R | 1213 | | RS1/16SS101J |
| R | 1215 | | RS1/16SS123J |
| R | 1216 | | RS1/16SS473J |
| R | 1219 | | RS1/16SS123J |
| R | 1220 | | RS1/16SS105J |
| R | 1221 | | RS1/16SS562J |
| R | 1222 | | RS1/16SS273J |
| R | 1223 | | RS1/16SS273J |
| R | 1226 | | RS1/16SS153J |
| R | 1227 | | RS1/16SS123J |
| R | 1228 | | RS1/16SS472J |
| R | 1229 | | RS1/16SS472J |
| R | 1230 | | RS1/16SS472J |
| R | 1231 | | RS1/16SS273J |
| R | 1232 | | RS1/16S6801D |
| R | 1233 | | RS1/16SS273J |
| R | 1234 | | RS1/16SS183J |
| R | 1235 | | RS1/16SS102J |
| R | 1242 | Resistor Array | RAB4CQ221J |
| R | 1245 | | RS1/16SS562J |
| R | 1246 | | RS1/16SS242J |
| R | 1251 | | RS1/16SS473J |
| R | 1255 | | RS1/16SS0R0J |
| R | 1257 | | RS1/16S221J |
| R | 1258 | | RS1/16SS221J |
| R | 1259 | | RS1/16SS221J |
| R | 1260 | | RS1/16SS221J |
| R | 1261 | | RS1/16SS221J |
| R | 1262 | | RS1/16SS273J |
| R | 1263 | | RS1/16SS273J |
| R | 1264 | | RS1/16SS104J |
| R | 1301 | | RS1/16S3902D |
| R | 1302 | | RS1/16S3902D |
| R | 1303 | | RS1/16S3002D |
| R | 1304 | | RS1/16S3902D |
| R | 1305 | | RS1/16SS221J |
| R | 1306 | | RS1/16SS0R0J |
| R | 1307 | | RS1/16SS221J |
| R | 1308 | | RS1/16S3002D |
| R | 1310 | | RS1/16SS102J |
| R | 1311 | | RS1/16S3902D |
| R | 1312 | | RS1/16S0R0J |
| R | 1314 | | RS1/16SS221J |
| R | 1321 | | RS1/16SS221J |
| R | 1323 | | RS1/16SS104J |
| R | 1324 | | RS1/16SS473J |
| R | 1325 | | RS1/16SS273J |
| R | 1400 | Resistor Array | RAB4CQ681J |
| R | 1401 | Resistor Array | RAB4CQ681J |
| R | 1403 | | RS1/16SS222J |
| R | 1405 | | RS1/16SS221J |
| R | 1406 | | RS1/16SS103J |
| R | 1409 | | RS1/16SS103J |
| R | 1413 | | RS1/16SS681J |
| R | 1416 | | RS1/16SS681J |
| R | 1417 | | RS1/16SS103J |
| R | 1418 | | RS1/16SS681J |
| R | 1425 | | RS1/16SS104J |
| R | 1426 | | RS1/16SS103J |
| R | 1429 | | RS1/16S470J |

| =====Circuit Symbol and No. | ===Part Name | Part No. |
|---|---|---|
| R 1434 | | RS1/16SS681J |
| R 1436 | | RS1/16SS103J |
| R 1437 | | RS1/16SS103J |
| R 1438 | | RS1/16SS221J |
| R 1439 | Resistor Array | RAB4CQ0R0J |
| R 1440 | Resistor Array | RAB4CQ0R0J |
| R 1441 | | RS1/16SS0R0J |
| R 1442 | | RS1/16SS221J |
| R 1443 | | RS1/16SS221J |
| R 1500 | | RS1/16SS560J |
| R 1501 | | RS1/16SS560J |
| R 1502 | | RS1/16SS560J |
| R 1503 | | RS1/16SS560J |
| R 1504 | | RS1/16SS560J |
| R 1505 | | RS1/16SS560J |
| R 1506 | | RS1/16SS560J |
| R 1507 | | RS1/16SS560J |
| R 1508 | | RS1/16SS560J |
| R 1509 | | RS1/16SS560J |
| R 1510 | | RS1/16SS560J |
| R 1511 | | RS1/16SS560J |
| R 1513 | | RS1/16SS750J |
| R 1514 | | RS1/16SS622J |
| R 1515 | | RS1/16SS162J |
| R 1516 | | RS1/16SS182J |
| R 1517 | | RS1/16SS201J |
| R 1518 | | RS1/16SS201J |
| R 1519 | | RS1/16S101J |
| R 1520 | | RS1/16S101J |
| R 1521 | | RS1/16S101J |
| R 1523 | | RS1/16SS221J |
| R 1524 | | RS1/16S470J |
| R 1527 | | RS1/16SS103J |
| R 1529 | | RS1/16SS104J |
| R 1534 | | RS1/16SS221J |
| R 1535 | | RS1/16SS101J |
| R 1537 | | RS1/16SS391J |
| R 1538 | | RS1/16SS391J |
| R 1539 | Resistor Array | RAB4CQ391J |
| R 1540 | Resistor Array | RAB4CQ391J |
| R 1541 | Resistor Array | RAB4CQ391J |
| R 1542 | Resistor Array | RAB4CQ391J |
| R 1543 | Resistor Array | RAB4CQ391J |
| R 1544 | Resistor Array | RAB4CQ391J |
| R 1545 | Resistor Array | RAB4CQ391J |
| R 1546 | | RS1/16SS103J |
| R 1548 | | RS1/16SS103J |
| R 1549 | | RS1/16SS560J |
| R 1550 | | RS1/16SS560J |
| R 1551 | | RS1/16SS560J |
| R 1552 | | RS1/16SS560J |
| R 1553 | | RS1/16SS560J |
| R 1554 | | RS1/16SS560J |
| R 1555 | | RS1/16SS560J |
| R 1556 | | RS1/16SS560J |
| R 1557 | | RS1/16SS560J |
| R 1558 | | RS1/16SS560J |
| R 1559 | | RS1/16SS560J |
| R 1560 | | RS1/16SS560J |
| R 1561 | | RS1/16SS560J |
| R 1562 | | RS1/16SS560J |
| R 1563 | | RS1/16SS560J |
| R 1564 | | RS1/16SS560J |
| R 1565 | | RS1/16SS560J |
| R 1566 | | RS1/16S101J |
| R 1567 | | RS1/16SS560J |
| R 1568 | | RS1/16SS560J |
| R 1569 | | RS1/16SS560J |
| R 1570 | | RS1/16SS560J |
| R 1571 | | RS1/16SS560J |

| =====Circuit Symbol and No. | ===Part Name | Part No. |
|---|---|---|
| R 1572 | | RS1/16SS560J |
| R 1573 | | RS1/16SS560J |
| R 1574 | | RS1/16SS560J |
| R 1575 | | RS1/16SS560J |
| R 1577 | | RS1/16S0R0J |
| R 1579 | | RS1/16S0R0J |
| R 1600 | | RS1/16SS271J |
| R 1601 | | RS1/16SS152J |
| R 1602 | | RS1/16SS101J |
| R 1604 | | RS1/16S3300D |
| R 1605 | | RS1/16SS122J |
| R 1607 | | RS1/16SS0R0J |
| R 1623 | | RS1/16SS102J |
| R 1624 | | RS1/16SS102J |
| R 1625 | | RS1/16SS223J |
| R 1626 | | RS1/16SS223J |
| R 1628 | | RS1/16S68R0D |
| R 1634 | | RS1/16SS472J |
| R 1635 | | RS1/16SS472J |
| R 1636 | | RS1/16SS472J |
| R 1637 | | RS1/16SS472J |
| R 1701 | | RN1/16SE1502D |
| R 1702 | | RS1/16SS221J |
| R 1703 | | RS1/16SS221J |
| R 1704 | | RS1/16SS104J |
| R 1705 | | RS1/16SS103J |
| R 1706 | | RS1/16SS103J |
| R 1707 | | RS1/16SS221J |
| R 1708 | | RS1/16SS0R0J |
| R 1709 | | RS1/16SS221J |
| R 1710 | | RS1/16SS473J |
| R 1711 | | RS1/16SS330J |
| R 1712 | | RS1/16SS0R0J |
| R 1713 | | RS1/16SS104J |
| R 1714 | | RS1/16SS104J |
| R 1715 | | RS1/16SS472J |
| R 1716 | | RS1/16SS104J |
| R 1717 | | RS1/16SS473J |
| R 1718 | | RS1/16SS104J |
| R 1719 | | RS1/16SS104J |
| R 1720 | | RS1/16SS473J |
| R 1721 | | RS1/16SS104J |
| R 1722 | | RS1/16SS104J |
| R 1723 | | RS1/16SS473J |
| R 1724 | | RS1/16SS221J |
| R 1725 | | RS1/16S0R0J |
| R 1726 | | RS1/16SS104J |
| R 1727 | | RS1/16SS103J |
| R 1728 | | RS1/16SS104J |
| R 1729 | | RS1/16SS104J |
| R 1730 | | RS1/16SS473J |
| R 1733 | | RS1/16SS104J |
| R 1734 | | RS1/16SS104J |
| R 1735 | | RS1/16SS222J |
| R 1736 | | RS1/16SS221J |
| R 1737 | | RS1/16SS221J |
| R 1738 | | RS1/16SS104J |
| R 1739 | | RS1/16SS103J |
| R 1740 | | RS1/16SS103J |
| R 1741 | | RS1/16SS221J |
| R 1742 | | RS1/16SS104J |
| R 1743 | | RS1/16SS221J |
| R 1744 | | RS1/16SS221J |
| R 1745 | | RS1/16SS221J |
| R 1746 | | RS1/16SS221J |
| R 1747 | | RS1/16SS222J |
| R 1748 | | RS1/16SS473J |
| R 1749 | | RS1/16SS104J |
| R 1750 | | RS1/16SS472J |
| R 1751 | | RS1/16SS103J |

| =====Circuit Symbol and No. | Part Name | Part No. |
|---|---|---|
| R 1752 | | RS1/16SS104J |
| R 1753 | | RS1/16SS104J |
| R 1754 | | RS1/16SS104J |
| R 1755 | | RS1/16SS104J |
| R 1756 | | RS1/16SS473J |
| R 1757 | | RS1/16SS472J |
| R 1758 | | RS1/16SS104J |
| R 1762 | | RS1/16SS104J |
| R 1763 | | RS1/16SS104J |
| R 1764 | | RS1/16SS104J |
| R 1766 | | RS1/16SS104J |
| R 1771 | | RS1/16SS104J |
| R 1772 | | RS1/16SS104J |
| R 1773 | | RS1/16SS104J |
| R 1774 | | RS1/16SS473J |
| R 1775 | | RS1/16SS221J |
| R 1776 | | RS1/16SS104J |
| R 1777 | | RS1/16SS104J |
| R 1778 | | RS1/16SS0R0J |
| R 1801 | | RS1/16S3902D |
| R 1802 | | RS1/16S3302D |
| R 1808 | | RS1/16SS102J |
| R 1809 | | RS1/16SS102J |
| R 1812 | | RS1/16S0R0J |
| R 1813 | | RS1/16S0R0J |
| R 1814 | | RS1/16S0R0J |
| R 1815 | | RS1/16S0R0J |

## CAPACITORS

| =====Circuit Symbol and No. | Part Name | Part No. |
|---|---|---|
| C 1100 | | CKSRYB105K10 |
| C 1101 | | CKSRYB473K25 |
| C 1102 | | CKSSYB103K16 |
| C 1103 | | CSZSR101M6R3 |
| C 1104 | | CKSSYB104K10 |
| C 1105 | | CKSSYB104K10 |
| C 1106 | | CKSRYB473K25 |
| C 1107 | | CKSSYB103K16 |
| C 1108 | | CSZSR101M6R3 |
| C 1109 | | CKSSYB104K10 |
| C 1110 | | CKSRYB154K10 |
| C 1111 | | CCSSCH221J25 |
| C 1114 | | CCSSCH330J50 |
| C 1115 | | CKSSYB104K10 |
| C 1116 | | CCSSCH221J25 |
| C 1117 | | CKSRYB105K10 |
| C 1118 | | CKSSYB104K10 |
| C 1119 | | CKSSYB104K10 |
| C 1120 | | CKSSYB104K10 |
| C 1121 | | CKSSYB104K10 |
| C 1122 | | CSZSC470M16 |
| C 1123 | | CKSRYB273K25 |
| C 1124 | | CKSSYB104K10 |
| C 1125 | | CKSSYB104K10 |
| C 1126 | | CKSSYB473K10 |
| C 1127 | | CCSRCH561J50 |
| C 1128 | | CKSSYB104K10 |
| C 1129 | | CKSSYB104K10 |
| C 1130 | | CCSRCH102J50 |
| C 1131 | | CCSSCH120J50 |
| C 1133 | | CCSRCH561J50 |
| C 1134 | | CKSSYB104K10 |
| C 1136 | | CCSSCH101J50 |
| C 1137 | | CCSSCH101J50 |
| C 1138 | | CCSSCH101J50 |
| C 1139 | | CKSSYB104K10 |
| C 1140 | | CKSSYB103K16 |
| C 1141 | | CKSSYB104K10 |
| C 1142 | | CKSSYB104K10 |
| C 1143 | | CKSSYB473K10 |

| =====Circuit Symbol and No. | Part Name | Part No. |
|---|---|---|
| C 1144 | | CKSSYB473K10 |
| C 1145 | | CKSSYB103K16 |
| C 1146 | | CKSSYB473K10 |
| C 1148 | | CKSSYB103K16 |
| C 1201 | | CKSRYB105K10 |
| C 1202 | | CCSSCH101J50 |
| C 1203 | | CKSRYB474K10 |
| C 1204 | | CCSRCH561J50 |
| C 1205 | | CCSRCH331J50 |
| C 1206 | | CKSRYB105K10 |
| C 1207 | | CKSSYB104K10 |
| C 1208 | | CCSRCH471J50 |
| C 1209 | | CCSRCH391J50 |
| C 1210 | | CKSRYB105K10 |
| C 1211 | | CCSSCH101J50 |
| C 1212 | | CKSSYB104K10 |
| C 1213 | | CKSRYB474K10 |
| C 1214 | | CCSRCH102J50 |
| C 1215 | | CCSRCH102J50 |
| C 1216 | | CKSSYB562K25 |
| C 1217 | | CCSRCH102J50 |
| C 1218 | | CKSSYB104K10 |
| C 1219 | | CKSSYB104K10 |
| C 1220 | | CKSRYB474K10 |
| C 1221 | | CCSSCH470J50 |
| C 1222 | | CKSRYB183K25 |
| C 1223 | | CCSRCH102J50 |
| C 1224 | | CKSSYB104K10 |
| C 1225 | | CKSSYB104K10 |
| C 1227 | | CKSSYB103K16 |
| C 1228 | | CKSSYB104K10 |
| C 1229 | | CCSRCH102J50 |
| C 1230 | | CKSSYB103K16 |
| C 1231 | | CKSSYB104K10 |
| C 1232 | | CKSRYB154K10 |
| C 1233 | | CKSSYB104K10 |
| C 1234 | | CKSSYB104K10 |
| C 1235 | | CKSSYB104K10 |
| C 1236 | | CKSSYB471K50 |
| C 1241 | | CKSSYB103K16 |
| C 1242 | | CKSSYB103K16 |
| C 1243 | | CKSSYB104K10 |
| C 1300 | | CKSSYB103K16 |
| C 1301 | | CKSSYB103K16 |
| C 1304 | | CKSRYB104K16 |
| C 1305 | | CEV101M16 |
| C 1308 | | CKSSYB104K10 |
| C 1400 | | CKSSYB104K10 |
| C 1401 | | CKSSYB104K10 |
| C 1402 | | CKSSYB104K10 |
| C 1403 | | CKSSYB104K10 |
| C 1404 | | CKSSYB104K10 |
| C 1405 | | CKSSYB104K10 |
| C 1406 | | CKSSYB104K10 |
| C 1407 | | CKSSYB104K10 |
| C 1408 | | CKSSYB104K10 |
| C 1409 | | CKSSYB104K10 |
| C 1410 | | CKSSYB104K10 |
| C 1411 | | CKSSYB104K10 |
| C 1412 | | CKSSYB104K10 |
| C 1413 | | CKSSYB104K10 |
| C 1414 | | CKSRYB105K10 |
| C 1415 | | CKSSYB104K10 |
| C 1416 | | CKSSYB104K10 |
| C 1418 | | CKSSYB471K50 |
| C 1421 | | CKSSYB104K10 |
| C 1423 | | CKSSYB104K10 |
| C 1500 | | CKSSYB104K10 |
| C 1501 | | CKSSYB104K10 |
| C 1502 | | CKSSYB104K10 |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| C | 1503 | | CKSSYB104K10 |
| C | 1504 | | CKSSYB104K10 |
| C | 1505 | | CKSSYB104K10 |
| C | 1506 | | CSZSC101M10 |
| C | 1507 | | CKSSYB104K10 |
| C | 1508 | | CKSSYB104K10 |
| C | 1509 | | CKSSYB104K10 |
| C | 1510 | | CKSSYB104K10 |
| C | 1511 | | CKSSYB104K10 |
| C | 1512 | | CKSSYB104K10 |
| C | 1513 | | CKSSYB104K10 |
| C | 1514 | | CKSSYB104K10 |
| C | 1515 | | CKSSYB104K10 |
| C | 1516 | | CKSSYB104K10 |
| C | 1517 | | CKSSYB104K10 |
| C | 1518 | | CKSSYB104K10 |
| C | 1519 | | CKSSYB104K10 |
| C | 1520 | | CKSSYB104K10 |
| C | 1521 | | CKSSYB104K10 |
| C | 1522 | | CKSSYB104K10 |
| C | 1523 | | CKSSYB104K10 |
| C | 1524 | | CKSSYB104K10 |
| C | 1525 | | CKSSYB104K10 |
| C | 1526 | | CKSSYB104K10 |
| C | 1527 | | CKSSYB104K10 |
| C | 1528 | | CKSSYB104K10 |
| C | 1529 | | CKSSYB471K50 |
| C | 1530 | | CKSSYB104K10 |
| C | 1532 | | CKSSYB104K10 |
| C | 1534 | | CCSSCH150J50 |
| C | 1535 | | CKSSYB104K10 |
| C | 1536 | | CKSSYB104K10 |
| C | 1537 | | CCSSCH150J50 |
| C | 1538 | | CKSSYB104K10 |
| C | 1539 | | CKSSYB104K10 |
| C | 1540 | | CKSRYB105K10 |
| C | 1541 | | CKSRYB105K10 |
| C | 1542 | | CKSSYB104K10 |
| C | 1543 | | CKSSYB104K10 |
| C | 1544 | | CKSSYB104K10 |
| C | 1545 | | CKSSYB104K10 |
| C | 1546 | | CKSSYB104K10 |
| C | 1547 | | CKSSYB104K10 |
| C | 1548 | | CKSSYB104K10 |
| C | 1549 | | CKSSYB104K10 |
| C | 1550 | | CKSSYB104K10 |
| C | 1551 | | CKSSYB104K10 |
| C | 1552 | | CKSSYB104K10 |
| C | 1553 | | CKSSYB104K10 |
| C | 1554 | | CKSSYB104K10 |
| C | 1555 | | CKSSYB104K10 |
| C | 1556 | | CKSSYB104K10 |
| C | 1570 | | CSZSR101M6R3 |
| C | 1571 | | CSZSR101M6R3 |
| C | 1572 | | CEV101M10 |
| C | 1573 | | CEV101M10 |
| C | 1574 | | CSZSC470M10 |
| C | 1575 | | CSZSC470M10 |
| C | 1576 | | CKSSYB104K10 |
| C | 1577 | | CKSSYB104K10 |
| C | 1578 | | CKSSYB104K10 |
| C | 1579 | | CKSSYB104K10 |
| C | 1600 | | CKSRYB104K16 |
| C | 1601 | | CSZSR4R7M16 |
| C | 1602 | | CKSSYB102K50 |
| C | 1608 | | CSZSR4R7M16 |
| C | 1609 | | CSZSR4R7M16 |
| C | 1634 | 10µF/10V | CCH1349 |
| C | 1635 | 10µF/10V | CCH1349 |
| C | 1636 | | CKSSYB104K10 |

| =====Circuit Symbol and No. | | ===Part Name | Part No. |
|---|---|---|---|
| C | 1637 | | CKSSYB104K10 |
| C | 1700 | | CKSSYB104K10 |
| C | 1701 | | CKSSYB104K10 |
| C | 1702 | | CKSRYB105K10 |
| C | 1703 | | CKSRYB105K10 |
| C | 1704 | | CKSSYB104K10 |
| C | 1705 | | CKSRYB105K10 |
| C | 1706 | | CKSSYB104K10 |
| C | 1707 | | CKSRYB105K10 |
| C | 1708 | | CKSSYB104K10 |
| C | 1709 | | CKSSYB104K10 |
| C | 1710 | | CKSSYB104K10 |
| C | 1711 | | CKSSYB104K10 |
| C | 1712 | | CKSSYB103K16 |
| C | 1713 | | CKSSYB104K10 |
| C | 1714 | | CKSYB106K6R3 |
| C | 1715 | | CKSSYB104K10 |
| C | 1716 | | CKSSYB104K10 |
| C | 1717 | | CKSSYB104K10 |
| C | 1719 | | CKSSYB471K50 |
| C | 1720 | | CKSSYB103K16 |
| C | 1721 | | CKSSYB104K10 |
| C | 1722 | | CKSSYB103K16 |
| C | 1727 | | CCSRCH180J50 |
| C | 1728 | | CCSRCH180J50 |
| C | 1800 | | CKSRYB474K10 |
| C | 1801 | | CKSRYB474K10 |
| C | 1802 | | CKSRYB474K10 |
| C | 1803 | | CKSRYB474K10 |
| C | 1804 | 22µF/6.3V | CCH1300 |
| C | 1805 | 22µF/6.3V | CCH1300 |
| C | 1808 | | CSZSC101M10 |
| C | 1809 | | CCSRCH102J50 |
| C | 1810 | | CCSRCH102J50 |
| C | 1811 | | CSZSR101M6R3 |
| C | 1812 | | CSZSC101M10 |

## Miscellaneous Parts List

| | | | |
|---|---|---|---|
| | | Pickup Unit(Service)(DP4) | CXX1530 |
| M | 1 | Motor Unit(LOADING) | CXB5960 |
| M | 2 | Motor Unit(CARRIAGE) | CXB5955 |
| M | 3 | Motor(SPINDLE) | CXB6218 |