


9. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to  mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

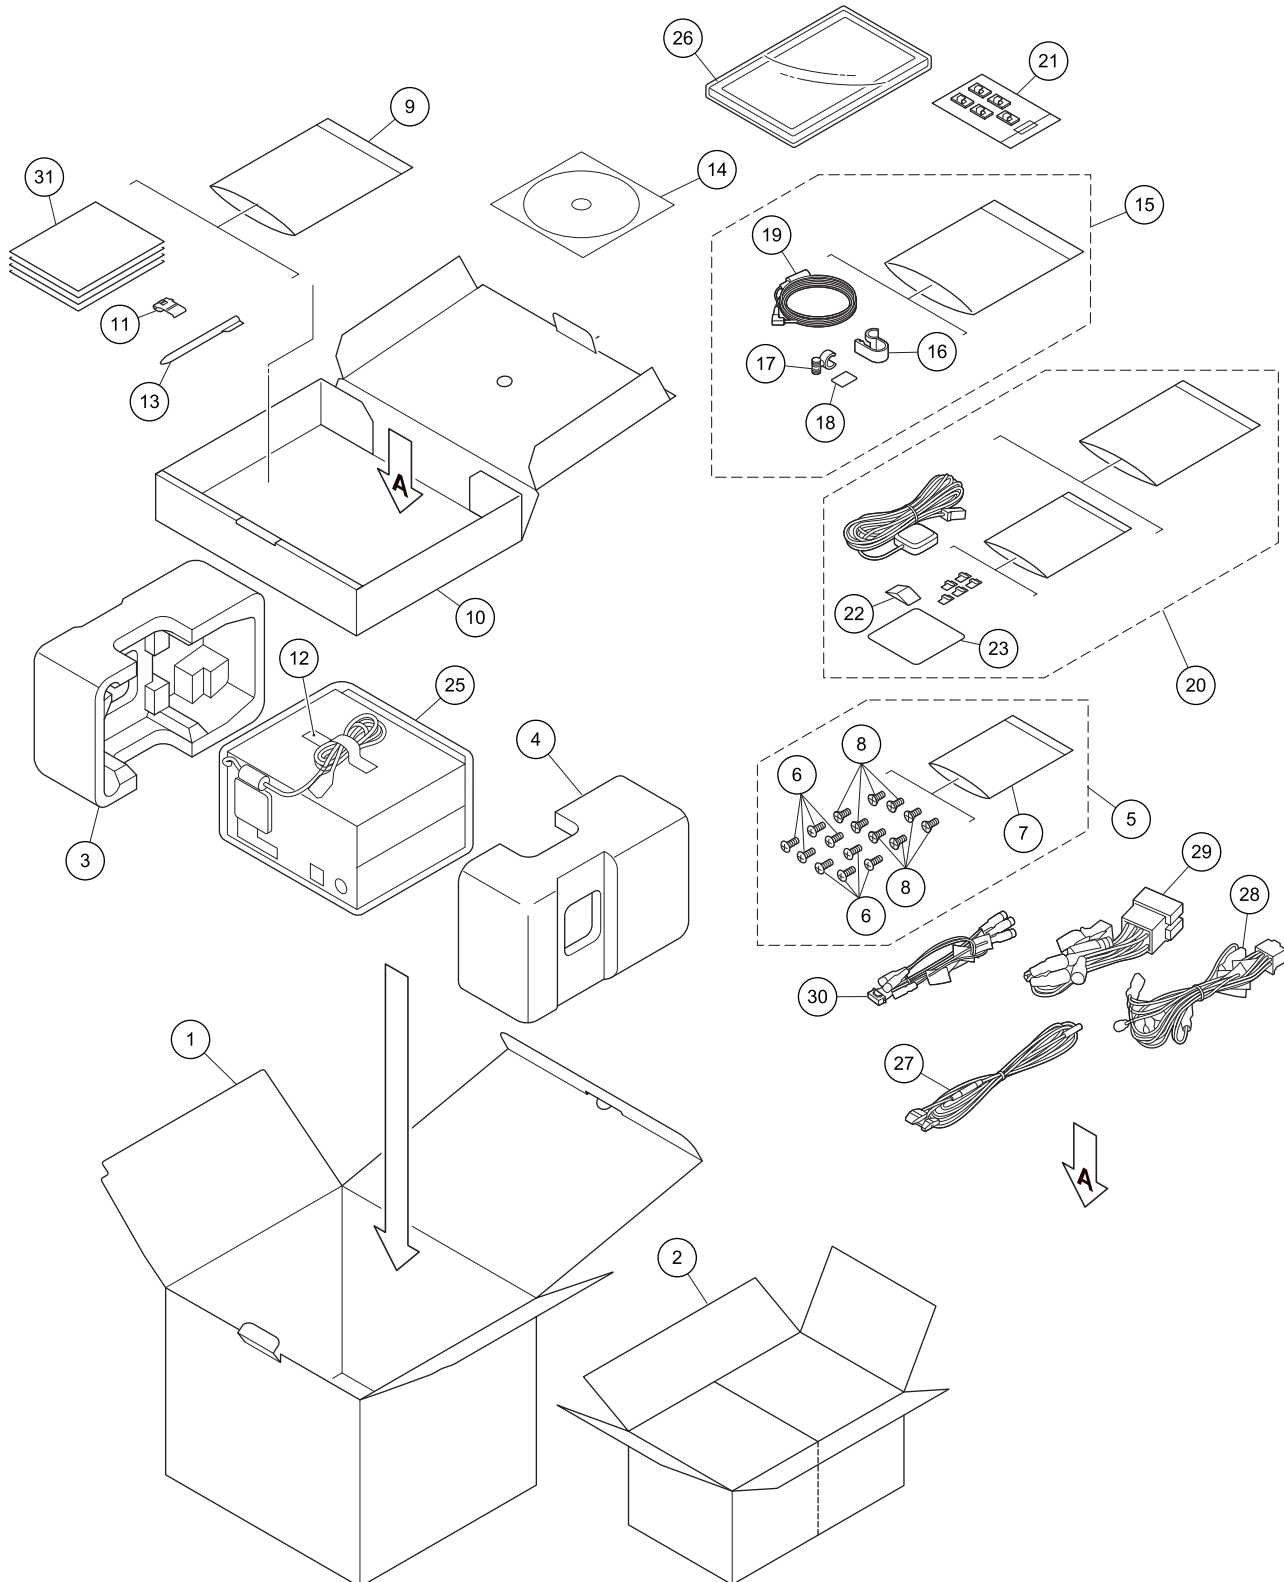

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Unit Box	See Contrast table(2)	20	GPS Antenna Assy	CXC8574
2	Contain Box	See Contrast table(2)			
3	Protector	See Contrast table(2)	21	Attachment Assy	CEA4636
4	Protector	See Contrast table(2)	22	Water Proof Pad	CZN7150
5	Screw Assy	See Contrast table(2)	23	Sheet	CZN7151
			24		
6	Screw	BMZ50P060FTC	25	Polyethylene Bag	See Contrast table(2)
* 7	Polyethylene Bag	CEG-127			
8	Screw	See Contrast table(2)	26	Panel	See Contrast table(2)
9	Polyethylene Bag	CEG1116	27	Cord	CDE6825
10	Sub Unit Box	CHG6491	28	Cord Assy	See Contrast table(2)
			29	Cord Assy	See Contrast table(2)
11	Connector	CKX1049	30	Cord Assy	See Contrast table(2)
12	Seal	CNN2515			
13	Pen	CNV8969	31-1	Installation Manual	See Contrast table(2)
14	CD-ROM	See Contrast table(2)	31-2	Caution Card	See Contrast table(2)
15	Microphone Assy	CPM1064	* 31-3	Registration Card	See Contrast table(2)
			* 31-4	Warranty Card	See Contrast table(2)
16	Clip Holder	CZN5471	31-5	Owner's Manual	See Owner's manual parts list(3)
17	Microphone Holder	CZN5472			
18	Cushion	CZN5473	* 31-6	Passport	See Contrast table(2)
* 19	Microphone	CZX5059	* 31-7	Caution Card	See Contrast table(2)

(2) CONTRAST TABLE

AVIC-F700BT/XS/UC, AVIC-F7010BT/XS/UC and AVIC-F700BT/XS/EW5 are constructed the same except for the following:

Mark	No.	Description	AVIC-F700BT/XS/UC	AVIC-F7010BT/XS/UC	AVIC-F700BT/XS/EW5
	1	Unit Box	CHG6484	CHG6573	CHG6482
	2	Contain Box	CHL6484	CHL6573	CHL6482
	3	Protector	CHP3552	CHP3552	CHP3550
	4	Protector	CHP3553	CHP3553	CHP3551
	5	Screw Assy	CEA3797	CEA3797	CEA7395
	8	Screw	CMZ50P060FTC(x8)	CMZ50P060FTC(x8)	CMZ50P060FTC(x4)
	14	CD-ROM	Not Used	Not Used	CPJ1262
	25	Polyethylene Bag	CEG1402	CEG1402	CEG1401
	26	Panel	Not Used	Not Used	CNS8665
	28	Cord Assy	CDP1137	CDP1137	Not Used
	29	Cord Assy	Not Used	Not Used	CDP1138
	30	Cord Assy	CDP1143	CDP1143	CDP1092
	31-1	Installation Manual	CRD4335	CRD4335	CRD4336
	31-2	Caution Card	CRP1310	CRP1310	Not Used
*	31-3	Registration Card	CRY1271	CRY1271	Not Used
*	31-4	Warranty Card	CRY1246	CRY1246	CRY1265
*	31-6	Passport	Not Used	Not Used	CRY1268
*	31-7	Caution Card	CRP1376	CRP1376	CRP1375

Installation Manual

Part No.	Language
CRD4335	English, French
CRD4336	English, Spanish, German, French, Italian, Dutch

(3) OWNER'S MANUAL PARTS LIST

A

AVIC-F700BT/XS/UC		AVIC-F7010BT/XS/UC		AVIC-F700BT/XS/EW5	
Part No.	Language	Part No.	Language	Part No.	Language
CRB2684	English	CRB2684	English	CRB2700	English
CRB2685	French	CRB2685	French	CRB2701	Spanish
CRB2686	English	CRB2686	English	CRB2702	German
				CRB2703	French
CRB2687	French	CRB2687	French		
				CRB2704	Italian
				CRB2705	Dutch
				CRB2706	English
				CRB2707	Spanish
				CRB2708	German
				CRB2709	French
				CRB2710	Italian
				CRB2711	Dutch

B


C

D

E

F

9.2 EXTERIOR(1)

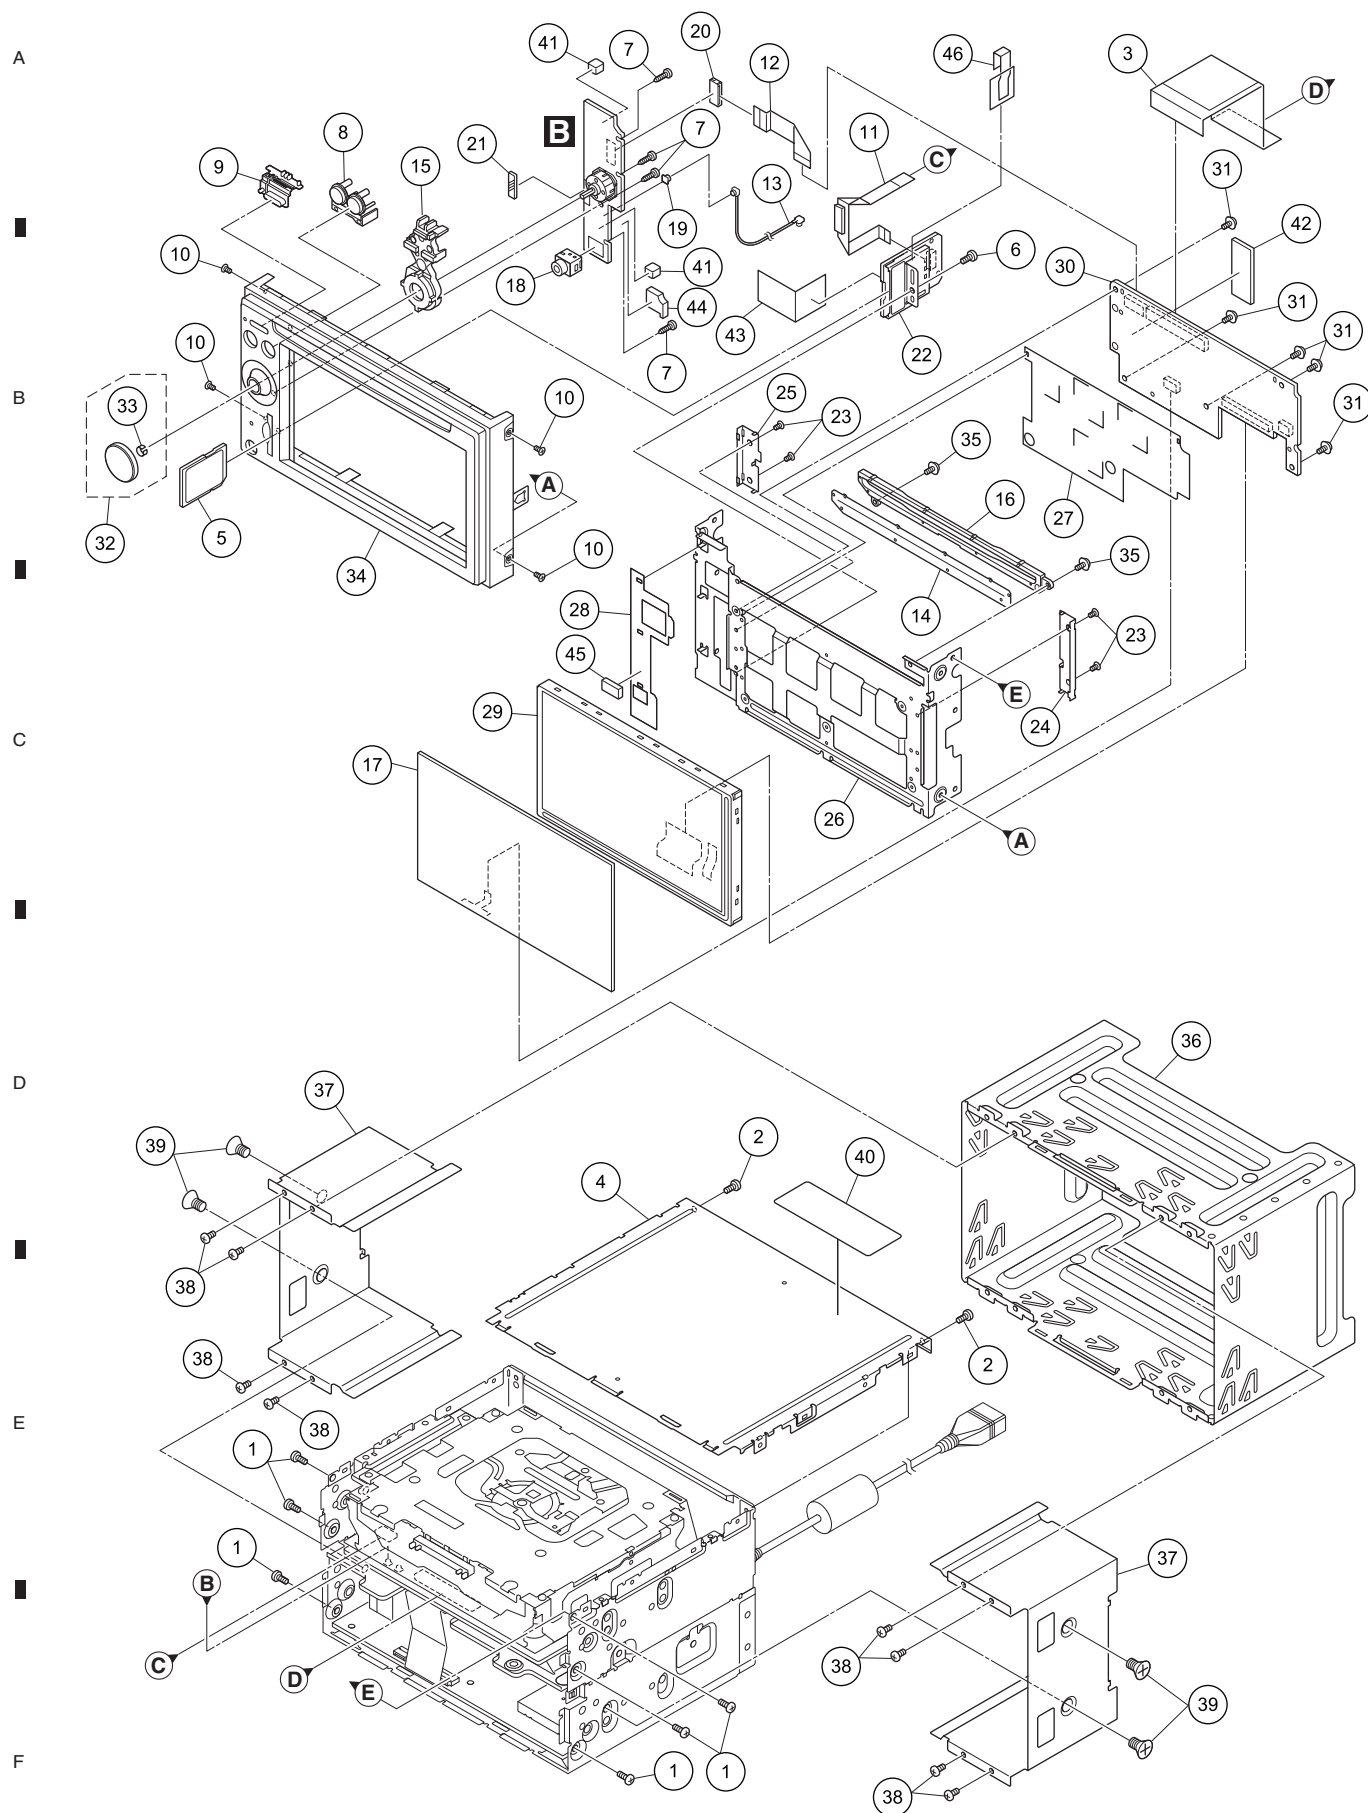


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	BMZ26P050FTC	25	Holder	CND3759
2	Screw	CBA2145			
3	FFC	CDE8556	26	Holder	CND4319
4	Case	CNB3472	27	Insulator	CNN2044
5	Card	CNW1231	28	Insulator	CNN2045
			29	LCD Module	CWX3611
6	Screw	BMZ26P050FTC	30	Panel Unit	CWX3651
7	Screw	BPZ20P080FTC			
8	Button(MENU, MAP)	CAI1707	31	Screw	PMB20P040FTC
9	Button(RESET, EJECT)	CAI1708	32	Knob Unit	See Contrast table(2)
10	Screw(M2 x 3)	CBA1797	33	Spring	YBL5013
			34	Grille Unit	See Contrast table(2)
11	FFC	CDE8554	35	Screw	IMS26P040FTC
12	FFC	CDE8555			
13	Cord Assy	CDE8559	36	Holder	See Contrast table(2)
14	Cover	CNN2046	37	Holder	See Contrast table(2)
15	Lighting Conductor	CNV9902	38	Screw	See Contrast table(2)
			39	Screw	See Contrast table(2)
16	Holder	CNV9903	40	Label	See Contrast table(2)
17	Touch Panel	CSX1136			
18	Jack(CN802)	CKN1049	41	Gasket	CNN2501
19	Connector(CN803)	CKS5749	42	Gasket	CNN2533
20	Connector(CN801)	CKS5862	43	Insulator	CNN2534
			44	Cushion	See Contrast table(2)
21	Antenna(ANT801)	CTX1095	45	Gasket	See Contrast table(2)
22	SD Unit	CWX3652			
23	Screw(M2 x 2)	CBA1771	46	Insulator	See Contrast table(2)
24	Holder	CND3758			

(2) CONTRAST TABLE

AVIC-F700BT/XS/UC, AVIC-F7010BT/XS/UC and AVIC-F700BT/XS/EW5 are constructed the same except for the following:

Mark	No.	Description	AVIC-F700BT/XS/UC	AVIC-F7010BT/XS/UC	AVIC-F700BT/XS/EW5
	32	Knob Unit	CXC8995	CXC8995	CXC8994
	34	Grille Unit	CXC8990	CXC9776	CXC8991
	36	Holder	Not Used	Not Used	CND3430
	37	Holder	Not Used	Not Used	CND3431
	38	Screw	Not Used	Not Used	BMZ30P060FTB
	39	Screw	Not Used	Not Used	CMZ50P060FTC
	40	Label	Not Used	Not Used	CAN5448
	44	Cushion	CNN2723	CNN2723	Not Used
	45	Gasket	CNN2724	CNN2724	Not Used
	46	Insulator	CNN2725	CNN2725	Not Used

9.3 EXTERIOR(2)

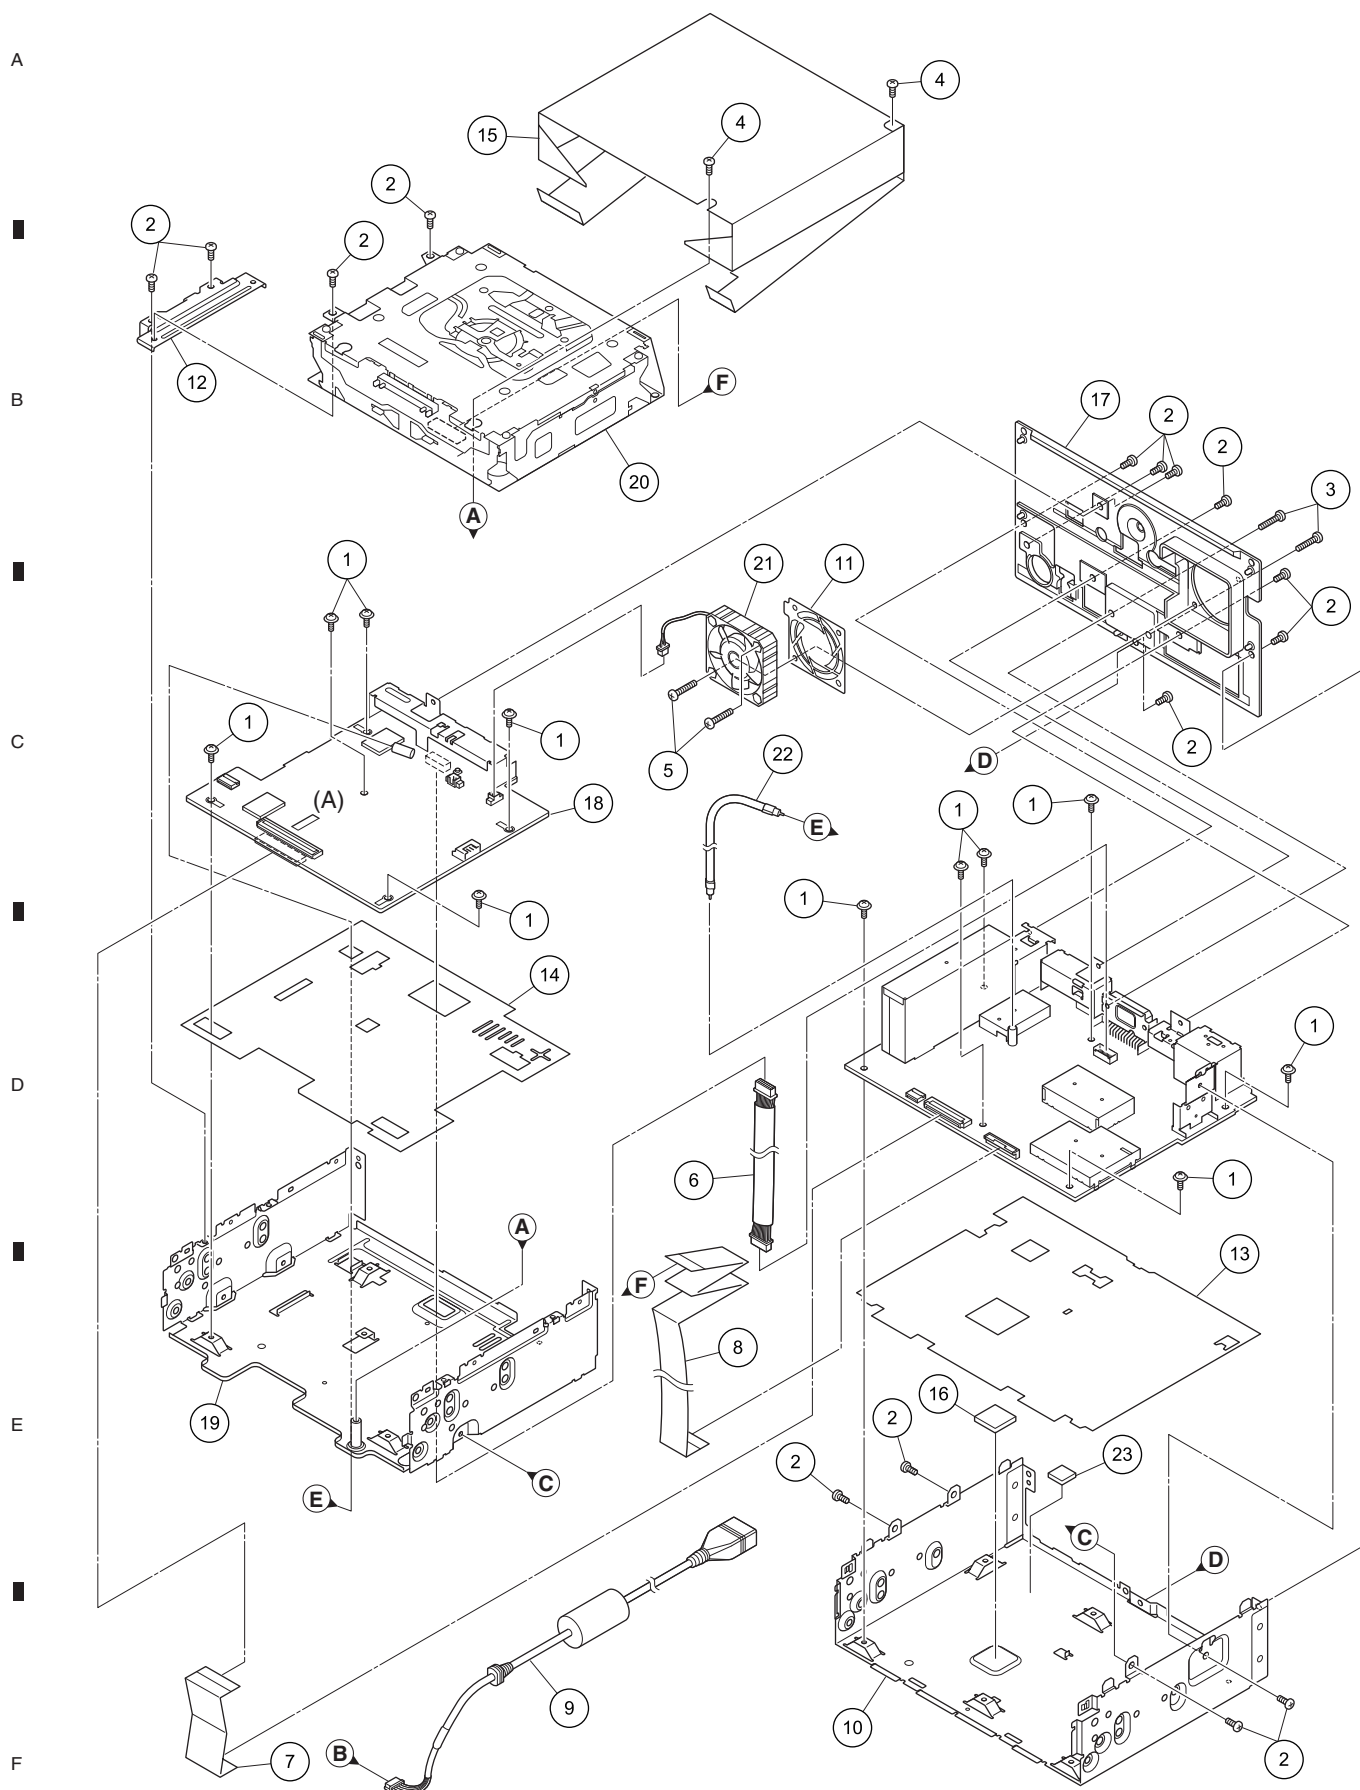

(A) GYH1031(Mylay tape)

* Hold the flexible cable to the shield on the Navi Unit.

(1) EXTERIOR(2) SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	ASZ26P050FTC	13	Insulator	CNN2042
2	Screw	BMZ26P050FTC	14	Insulator	CNN2043
3	Screw	BMZ26P160FTB	15	Sheet	CNN2281
4	Screw	BSZ26P050FTB			
5	Screw(M2.6 x 12)	CBA2102	16	Sheet	CNN2294
			17	Heat Sink	CNR1944
6	Cord Assy	CDE8393	18	Navi Unit(U1)	See Contrast table(2)
7	FFC	CDE8550	19	Chassis Unit	CXC8981
8	FFC	CDE8552	20	CD Mechanism Module(S10.5)	CXK5763
9	Cord Assy	CDE8561			
10	Chassis	CNA3042	21	Fan Motor	CXM1320
			22	Cord Assy	See Contrast table(2)
11	Cover	CND3917	23	Gasket	CNN2529
12	Bracket	CND4564			

(2) CONTRAST TABLE

AVIC-F700BT/XS/UC, AVIC-F7010BT/XS/UC and AVIC-F700BT/XS/EW5 are constructed the same except for the following:

Mark	No.	Description	AVIC-F700BT/XS/UC	AVIC-F7010BT/XS/UC	AVIC-F700BT/XS/EW5
	18	Navi Unit(U1)	CWX3641	CWX3641	CWX3639
	22	Cord Assy	Not Used	Not Used	CDH1381

9.4 EXTERIOR(3)

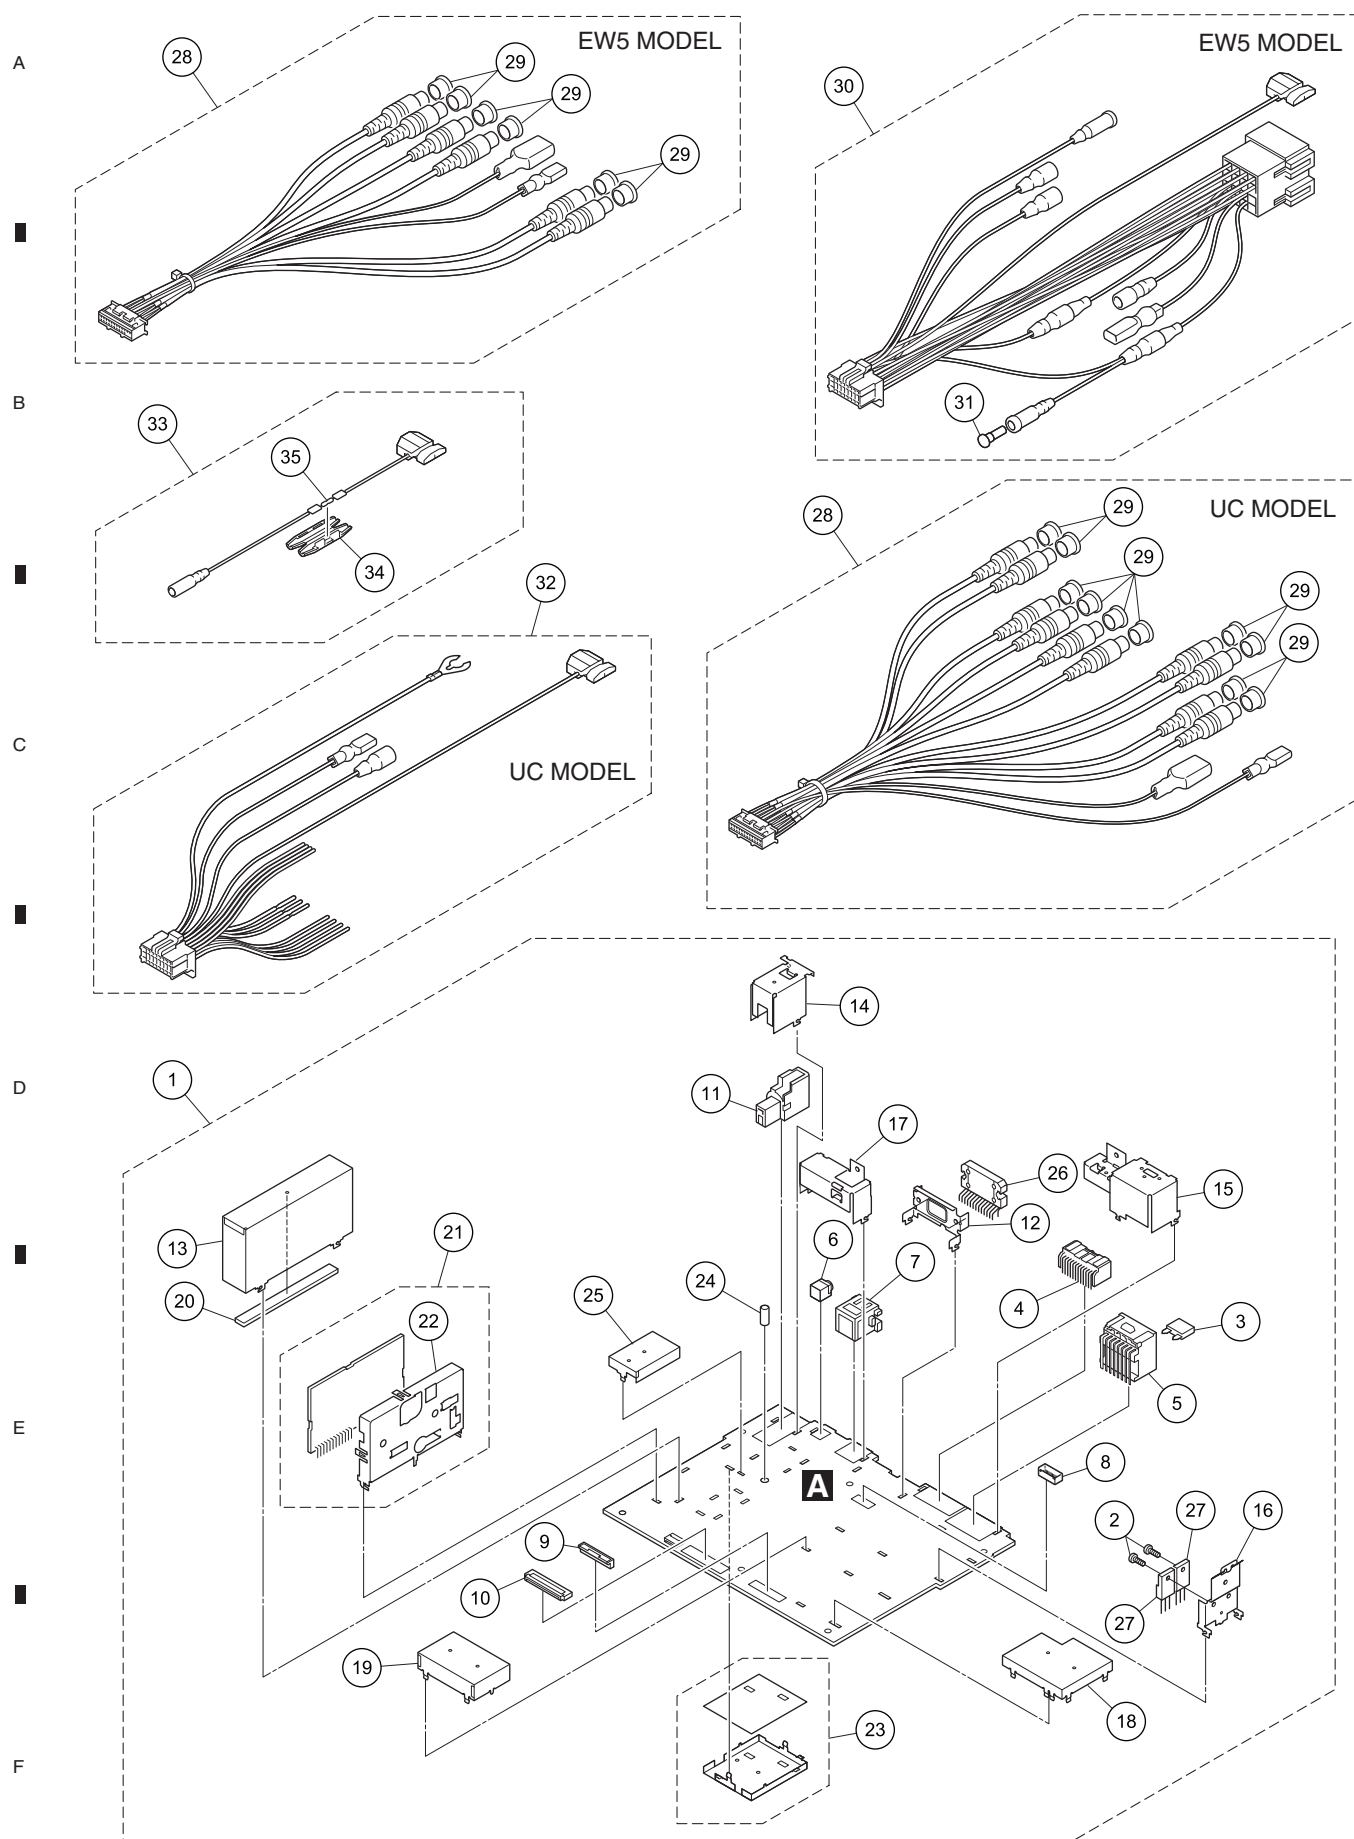

(1) EXTERIOR(3) SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	AV Unit	See Contrast table(2)	19	Shield	CND4563
2	Screw	BMZ26P060FTC	20	Sheet	CNM9805
⚠ 3	Fuse(10 A)	CEK1208			
4	Connector(CN1016)	CKM1460	21	FM/AM Tuner Unit(Y1461)	See Contrast table(2)
5	Plug(CN1005)	CKM1550	22	Holder	CND4324
			23	Shield Unit	CXC8983
6	Jack(CN1015)	CKN1042	24	Pin Jack(CN1441)	See Contrast table(2)
7	Connector(CN1021)	See Contrast table(2)	25	Shield	See Contrast table(2)
8	Connector(CN1001)	CKS4674			
9	Connector(CN701)	CKS4808	26	IC(IC1007)	PAL007C
10	Connector(CN1000)	CKS5732	27	IC(IC2801, IC2820)	BA00CC0WCP-V5
			28	Cord Assy	See Contrast table(2)
11	Antenna Jack(ANT1401)	CKX1060	29	Cap	CNV6727
12	Holder	CNC9921	30	Cord Assy	See Contrast table(2)
13	Shield	CND3004			
14	Holder	CND3181	31	Terminal Cover	See Contrast table(2)
15	Holder	CND3693	32	Cord Assy	See Contrast table(2)
			33	Cord	CDE6825
16	Holder	CND3695	34	Cap	CNS1472
17	Holder	See Contrast table(2)	35	Resistor	RS1/2PMF102J
18	Shield	CND4320			

(2) CONTRAST TABLE

AVIC-F700BT/XS/UC, AVIC-F7010BT/XS/UC and AVIC-F700BT/XS/EW5 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>AVIC-F700BT/XS/UC</u>	<u>AVIC-F7010BT/XS/UC</u>	<u>AVIC-F700BT/XS/EW5</u>
	1	AV Unit	CWN3170	CWN3170	CWN3168
	7	Connector(CN1021)	CKS3408	CKS3408	Not Used
	17	Holder	CND4314	CND4314	CND4315
	21	FM/AM Tuner Unit(Y1461)	CWE2098	CWE2098	CWE2127
	24	Pin Jack(CN1441)	Not Used	Not Used	CKX1046
	25	Shield	Not Used	Not Used	CND3769
	28	Cord Assy	CDP1143	CDP1143	CDP1092
	30	Cord Assy	Not Used	Not Used	CDP1138
	31	Terminal Cover	Not Used	Not Used	CKX-003
	32	Cord Assy	CDP1137	CDP1137	Not Used

9.5 CD MECHANISM MODULE

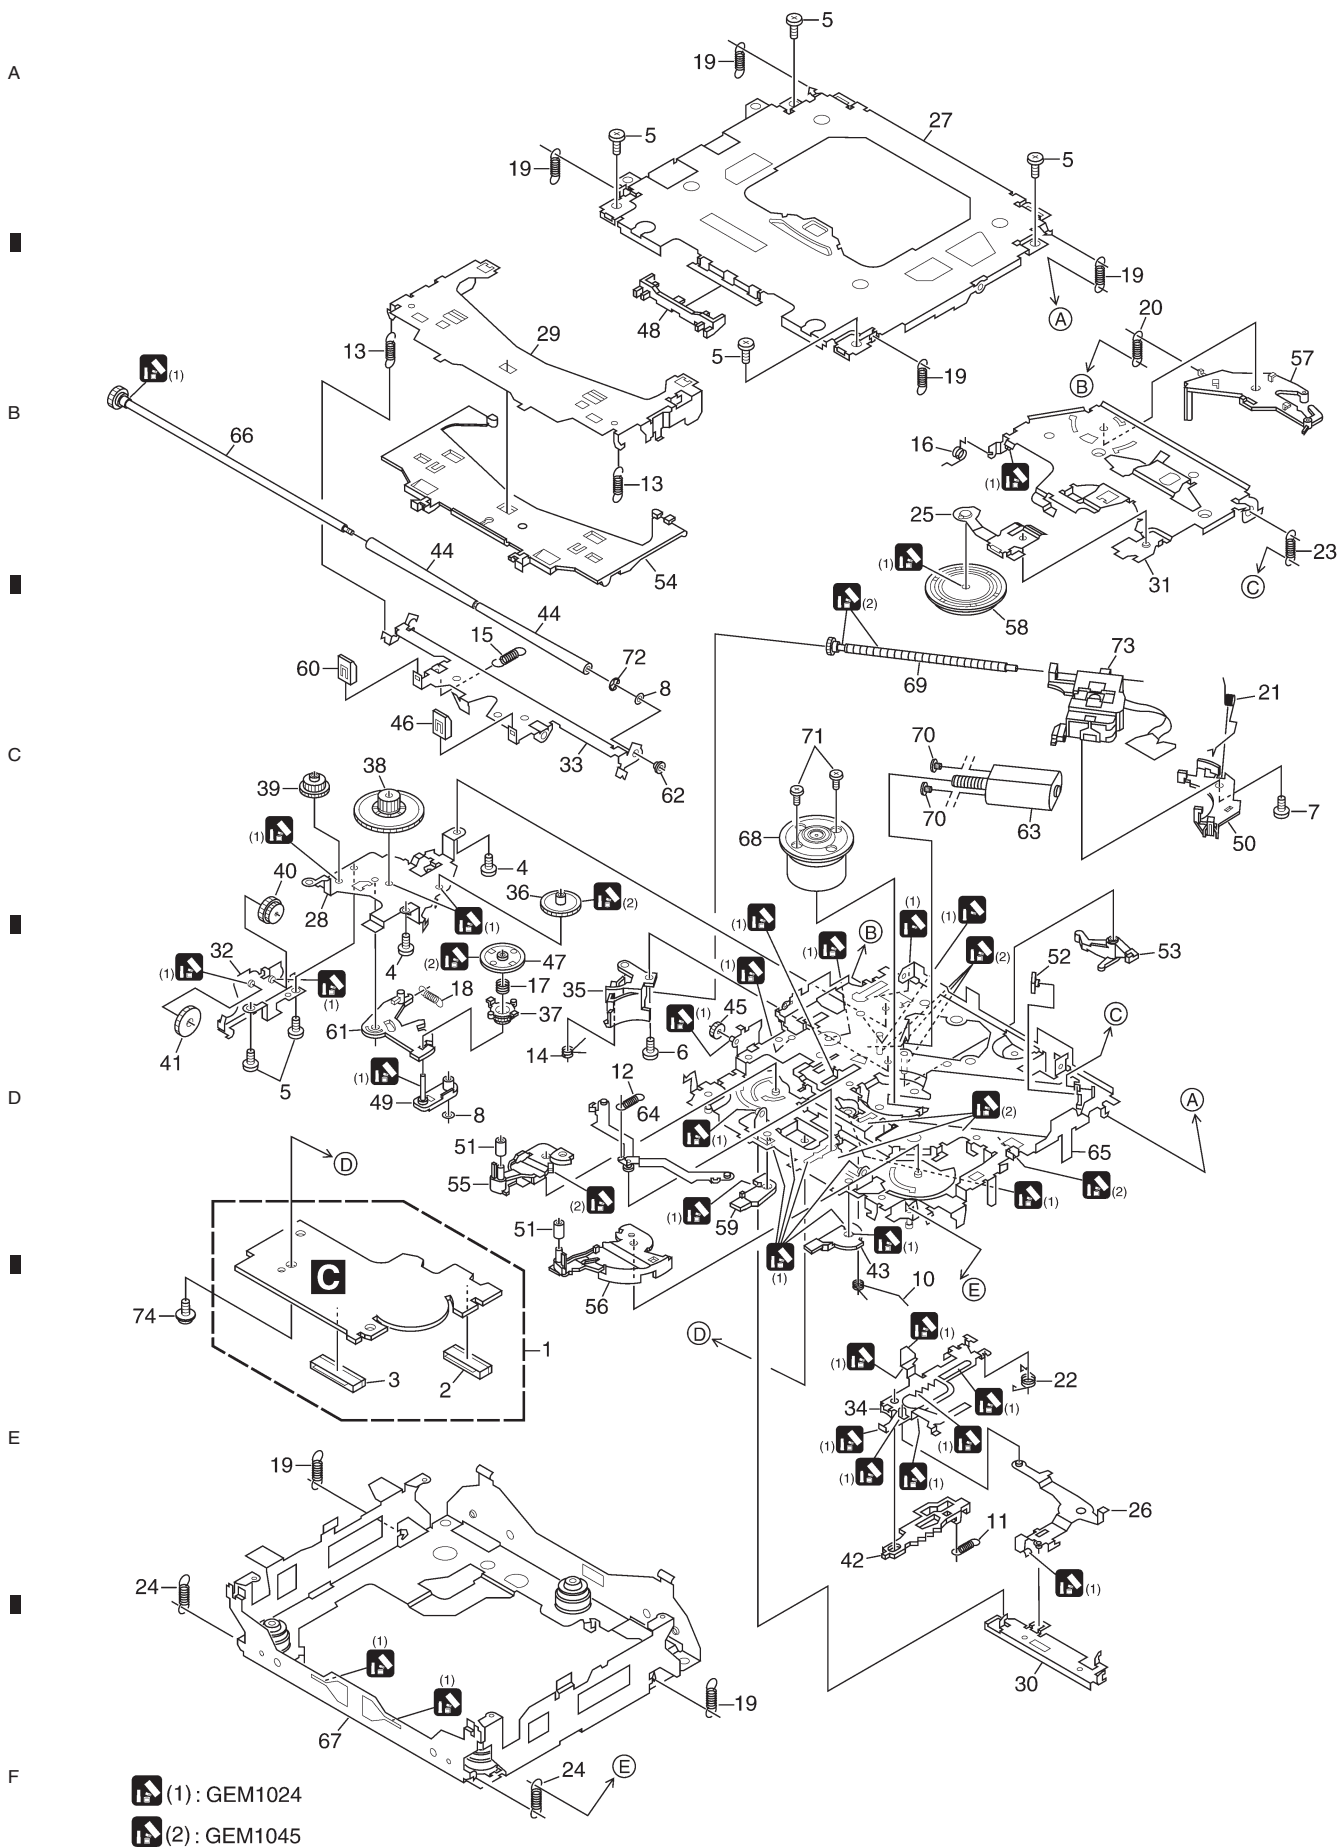

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10.5COMP2)	CWX3514	50	Rack	CNV8342	
2	Connector(CN101)	CKS4911				
3	Connector(CN701)	CKS4808	51	Roller	CNV8343	A
4	Screw	BMZ20P025FTC	52	Holder	CNV8344	
5	Screw	BSZ20P040FTC	53	Arm	CNV8345	
			54	Guide	CNV8347	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9			57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
			59	Arm	CNV8386	
11	Spring	CBH2612	60	Guide	CNV8396	B
12	Spring	CBH2614				
13	Spring	CBH2616	61	Arm	CNV9521	
14	Spring	CBH2617	62	Collar	CNV8447	
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026	
			64	Arm Unit	CXC4027	
16	Spring	CBH2855	65	Chassis Unit	CXC4028	
17	Spring	CBH2937				
18	Spring	CBH2735	66	Gear Unit	CXC4029	
19	Spring	CBH2854	67	Frame Unit	CXC4031	
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134	
			69	Screw Unit	CXC6359	C
21	Spring	CBH2856	70	Screw	JFZ20P025FTC	
22	Spring	CBH2857				
23	Spring	CBH2860	71	Screw	JGZ17P022FTC	
24	Spring	CBH2861	72	Washer	YE20FTC	
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942	
			74	Screw	IMS26P030FTC	
26	Arm	CND1909				
27	Frame	CND2582				
28	Bracket	CND2583				
29	Arm	CND2584				
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND2588				
34	Lever	CND2589				
35	Holder	CNV9522				
36	Gear	CNV7207				
37	Gear	CNV9513				
38	Gear	CNV7209				E
39	Gear	CNV9514				
40	Gear	CNV9515				
41	Gear	CNV9516				
42	Rack	CNV9517				
43	Arm	CNV7216				
44	Roller	CNV8189				
45	Gear	CNV9518				
46	Guide	CNV9519				
47	Gear	CNV7595				F
48	Guide	CNV9520				
49	Arm	CNV7805				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J,RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
Unit Number: CWN3170(UC)		IC 4641	(B,150,24) IC TPS5103IDB
Unit Number: CWN3168(EW5)		IC 4701	(B,88,55) IC BD3931HFP
Unit Name : AV Unit		IC 4702	(B,95,7) IC NJM2885DL1-33
Unit Number:		IC 4703	(A,86,45) IC S-L2980A33MC-C6S
Unit Name : Keyboard Unit		IC 4721	(B,44,129) IC(UC) HA12241FP
Unit Number: CWX3514		Q 601	(B,116,19) Chip Transistor 2SA1576A
Unit Name : CD Core Unit(S10.5COMP2)		Q 661	(B,116,46) Chip Transistor DTC114EUA
		Q 662	(B,113,22) Chip Transistor DTC114EUA
		Q 751	(A,79,33) Chip Transistor(EW5) DTC124EUA
		Q 752	(A,80,40) Chip Transistor(EW5) DTC124EUA
		Q 753	(A,80,37) Chip Transistor(EW5) DTC124EUA
		Q 754	(A,84,35) Chip Transistor(EW5) DTC124EUA
		Q 1016	(A,56,31) Transistor IMD2A
		Q 1401	(B,38,104) Transistor(EW5) 2SC3357
		Q 1421	(B,38,95) Transistor(EW5) 2SC3127
		Q 1441	(A,35,86) Transistor(EW5) 2SC3130
		Q 2810	(B,102,98) Transistor 2SD1760F5
		Q 2811	(A,103,96) Chip Transistor DTA114EUA
		Q 2812	(A,110,98) Chip Transistor DTC114EUA
		Q 2860	(B,120,106) Transistor UMD2N
		Q 2861	(B,120,109) Transistor UMD2N
		Q 2862	(B,112,104) Transistor 2SC4081
		Q 2863	(B,118,113) Transistor UMD2N
		Q 2864	(B,115,111) Chip Transistor DTC114EUA
		Q 2865	(B,112,111) Chip Transistor DTC124EUA
		Q 2870	(A,150,112) Transistor 2SC4116
		Q 2880	(A,164,111) Chip Transistor DTC114EUA
		Q 2881	(B,124,24) Chip Transistor DTC114EUA
		Q 2882	(B,122,19) Chip Transistor 2SA1576A
		Q 2900	(A,165,123) Transistor 2SC4116
		Q 3601	(B,30,21) Transistor UMX1N
		Q 3602	(B,22,18) Transistor UMX1N
		Q 3603	(B,14,18) Transistor UMX1N
		Q 3604	(B,28,15) Transistor UMX1N
		Q 3605	(B,19,17) Transistor UMX1N
		Q 3606	(B,10,16) Transistor UMX1N
		Q 4231	(B,59,23) Transistor 2SC4081
		Q 4232	(B,55,18) Chip Transistor 2SA1576A
		Q 4312	(B,77,39) Transistor IMD3A
		Q 4314	(B,77,34) Transistor DTC323TK

MISCELLANEOUS

IC 601	(B,46,6) IC	TC7SH08FUS1
IC 603	(B,121,44) IC	TC7SH04FUS1
IC 604	(B,121,41) IC	TC7S32FU
IC 605	(A,42,8) IC	TC74VHCT08AFTS1
IC 608	(B,97,44) IC	BD5335FVE

IC 609	(B,27,8) IC	TC74VHC08FTS1
IC 610	(A,107,34) IC(UC)	PEG447A
	(A,107,34) IC(EW5)	PEG446A
IC 1007	(A,88,128) IC	PAL007C
IC 1008	(A,56,38) IC	NJM2125F

IC 1016	(B,69,33) IC	BA4558RFVM
IC 2801	(A,168,99) IC	BA00CC0WCP-V5
IC 2820	(A,168,88) IC	BA00CC0WCP-V5
IC 2830	(B,33,36) IC	BA00BC0WFP
IC 2890	(B,156,104) IC	TPD1018F

IC 3601	(A,11,20) IC	M62343FP
IC 4171	(B,67,49) IC	AN15887A
IC 4251	(B,103,107) IC	NJM2505AF
IC 4271	(B,68,73) IC	PML018A
IC 4601	(B,118,65) IC	TPS5103IDB

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
Q 4331	(B,102,91) Transistor(UC)	FMG12		D 4360	(B,129,112) Diode	1SR154-400	
Q 4332	(B,93,85) Transistor	FMG12		D 4361	(A,131,107) Diode	1SS355	
Q 4333	(B,93,92) Transistor(UC)	FMG12		D 4362	(B,129,106) Diode	1SR154-400	
Q 4601	(B,106,64) Chip Transistor	DTC114EUA		D 4363	(B,113,119) Diode	MALS068X	A
Q 4602	(A,117,65) FET	SP8K2		D 4364	(A,128,106) Diode	PTZ27(B)	
Q 4631	(A,119,86) Transistor	2SD1767		D 4365	(A,125,106) Diode	PTZ27(B)	
Q 4632	(A,126,86) Transistor	UMD2N		D 4366	(B,122,133) Diode	MALS068X	
Q 4641	(B,140,22) Chip Transistor	DTC114EUA		D 4371	(A,41,117) Diode	UDZS5R6(B)	
Q 4642	(A,150,24) FET	SP8K2		D 4372	(B,44,123) Diode	UDZS5R6(B)	
Q 4661	(B,112,72) Chip Transistor	DTC114EUA		D 4601	(B,126,60) Diode	RB400D	
Q 4731	(B,143,87) Transistor	2SC4081		D 4602	(A,115,71) Diode	RB060L-40	
Q 4732	(B,129,98) Chip Transistor(UC)	DTC114EUA		D 4631	(A,122,89) Diode	UDZS9R1(B)	
Q 4733	(B,150,89) Transistor	2SC4081		D 4641	(B,159,21) Diode	RB400D	
Q 4734	(B,122,99) Chip Transistor(UC)	2SA1576A		D 4642	(A,147,30) Diode	RB060L-40	
Q 4738	(B,141,91) Transistor	2SC4081		D 4643	(A,163,17) Diode	RB083L-20	B
Q 4751	(A,31,12) Chip Transistor	2SA1576A		D 4701	(A,128,5) Diode	RR264M-400	
Q 4752	(A,32,8) Chip Transistor	2SA1576A		D 4702	(B,130,7) Diode	RR264M-400	
Q 4753	(B,35,10) Chip Transistor	DTC114EUA		D 4721	(B,48,122) Diode(UC)	MALS068X	
Q 4754	(B,32,6) Chip Transistor	2SA1576A		D 4722	(B,50,118) Diode(UC)	MALS068X	
Q 4771	(B,110,93) Chip Transistor	DTA114EUA		D 4723	(B,54,115) Diode(UC)	MALS068X	
Q 4772	(B,112,92) Chip Transistor	DTC114EUA		D 4724	(B,49,127) Diode(UC)	MALS068X	
Q 4773	(B,115,92) Transistor	2SA1587		D 4725	(B,56,115) Diode(UC)	UDZS18(B)	
Q 4774	(B,114,85) Transistor	IMX1		D 4726	(B,63,115) Diode(UC)	UDZS18(B)	
Q 4775	(B,127,85) Chip Transistor	DTC114EUA		D 4727	(B,58,115) Diode(UC)	UDZS18(B)	
Q 4776	(B,122,93) Transistor	2SD1760F5		D 4731	(B,146,89) Diode	HZU7R5(B3)	C
D 2802	(A,159,105) Diode	RB060L-40		D 4732	(B,146,93) Diode	RB500V-40	
D 2810	(A,106,95) Diode	UDZS5R6(B)		D 4733	(B,150,93) Diode	RB500V-40	
D 2821	(A,159,92) Diode	RB060L-40		D 4734	(B,145,96) Diode	EDZ20(B)	
D 2822	(A,110,94) Diode	DAN202U		D 4735	(B,148,93) Diode	RB500V-40	
D 2823	(A,120,80) Diode	1SR154-400		D 4736	(B,141,96) Diode	RB500V-40	
D 2824	(A,127,80) Diode	1SR154-400		D 4737	(B,141,95) Diode	HZU7R5(B3)	
D 2825	(A,131,47) Diode	1SS400G		D 4751	(A,29,13) Diode	1SS355	
D 2831	(B,38,26) Diode	RR264M-400		D 4752	(A,27,13) Diode	1SS355	
D 2860	(B,124,105) Diode	MA111		D 4771	(B,120,86) Diode	RB500V-40	
D 2861	(B,119,104) Diode	UDZS8R2(B)		D 4772	(B,122,86) Diode	RB500V-40	
D 2862	(B,116,108) Diode	DAN202U		D 4773	(B,124,83) Diode	HZU8R2(B1)	D
D 2863	(B,113,107) Diode	DAN202U		D 4774	(B,125,87) Diode	HZU11(B2)	
D 2870	(A,153,106) Diode	UDZS5R1(B)		ZNR1401	(B,16,112) Surge Protector	CSA30-201N	
D 2874	(B,158,111) Diode	PTZ18A		L 601	(B,123,41) Inductor	CTF1410	
D 2880	(B,152,131) Diode	1SR154-400		L 602	(B,41,5) Inductor	CTF1410	
D 2890	(A,155,110) Diode	1SR154-400		L 604	(B,120,48) Inductor	CTF1410	
D 2891	(A,158,110) Diode	1SR154-400		L 605	(A,42,13) Inductor	CTF1410	
D 2900	(A,170,125) Diode	HZU8R2(B1)		L 608	(B,100,32) Inductor	CTF1410	
D 2910	(B,146,72) Diode	KS926S2		L 609	(B,100,47) Inductor	CTF1410	
D 2911	(A,59,93) Diode	RB060L-40		L 610	(B,32,12) Inductor	CTF1410	
D 2912	(B,145,102) Diode	KS926S2		L 611	(A,98,20) Inductor	CTF1410	
D 2930	(A,140,107) Diode	ST70-27F		L 612	(A,102,46) Inductor	CTF1410	E
D 4061	(A,60,48) Diode	EDZ4R3(B)		L 613	(A,109,20) Inductor	CTF1410	
D 4062	(A,58,48) Diode	1SS355		L 614	(B,121,24) Inductor	CTF1410	
D 4311	(B,82,30) Diode	DAN202K		L 615	(A,120,34) Inductor	CTF1410	
D 4312	(B,86,32) Diode	DAN202K		L 701	(B,129,12) Inductor	CTF1453	
D 4331	(B,91,96) Diode	DAP202K		L 702	(B,113,12) Inductor	CTF1410	
D 4351	(B,109,113) Diode	EDZ20(B)		L 1401	(B,22,112) Inductor(EW5)	LCTAWR12J2520	
D 4352	(B,107,112) Diode	EDZ6R8(B)		L 1402	(B,28,110) Inductor(EW5)	LCYCR10K2125	
D 4353	(B,123,133) Diode	MALS068X		L 1403	(A,45,89) Inductor(EW5)	LCTAW101J2520	
D 4354	(B,124,133) Diode	MALS068X		L 1421	(B,41,96) Inductor(EW5)	LCTCR22K2125	
D 4355	(A,121,109) Diode	DAN202U		L 1422	(B,29,104) Inductor(EW5)	LCTCR10K2125	F
D 4357	(A,107,119) Diode	MALS068X		L 1423	(B,44,88) Inductor(EW5)	LCTAW101J2520	
D 4358	(A,117,119) Diode	MALS068X		L 1441	(A,38,85) Inductor(EW5)	LCTCR15K2125	
D 4359	(A,121,119) Diode	MALS068X		L 1443	(A,44,83) Chip Coil(EW5)	LCTAW1R0J2520	

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	L 1461 (B,17,109) Chip Coil	LCTAW4R7J2520		
	L 1462 (A,38,70) Inductor	LCTAW2R2J3225	R 601 (A,38,6)	RS1/16S104J
	L 1463 (B,24,56) Inductor	LCTAW2R2J2520	R 602 (B,39,6)	RS1/16S104J
	L 1464 (B,26,54) Chip Ferrite Bead	CTF1399	R 603 (A,95,23)	RS1/16SS220J
	L 1465 (A,33,40) Inductor	LCTAW2R2J3225	R 604 (A,96,22)	RS1/16S220J
			R 605 (B,120,38)	RS1/16SS104J
	L 2871 (B,159,114) Inductor	CTF1410		
	L 2872 (B,148,114) Inductor	CTF1410	R 607 (A,86,31) (EW5)	RS1/16SS681J
	L 2930 (A,135,94) Choke Coil 600 uH	CTH1347	R 608 (A,88,39) (EW5)	RAB4C681J
	L 3601 (A,16,13) Chip Coil	LCTAW100J2520	R 609 (B,100,36)	RS1/16SS104J
	L 4171 (B,71,62) Chip Coil	LCTAW100J2520	R 610 (B,95,37)	RS1/16SS102J
			R 612 (B,97,31)	RS1/16SS104J
B	L 4172 (B,59,60) Chip Coil	LCTAW100J2520		
	L 4231 (B,63,25) Inductor	CTF1473	R 613 (A,94,41)	RS1/16SS471J
	L 4271 (A,65,85) Inductor	LCYA2R2J2520	R 614 (A,93,41)	RS1/16SS471J
	L 4351 (A,124,110) Inductor	LCTC2R2K1608	R 615 (A,94,40)	RS1/16SS222J
	L 4352 (A,129,112) Inductor	CTF1556	R 616 (A,93,40)	RS1/16SS0R0J
			R 617 (A,94,39)	RS1/16SS0R0J
	L 4371 (A,38,117) Inductor	CTF1334		
	L 4372 (B,40,123) Inductor	CTF1334	R 618 (B,24,10)	RS1/16SS104J
	L 4601 (A,106,63) Choke Coil 27 uH	CTH1402	R 619 (B,110,37)	RS1/16SS104J
	L 4602 (A,129,63) Choke Coil 10 uH	CTH1403	R 620 (A,95,34)	RS1/16SS101J
	L 4641 (A,140,21) Inductor	CTH1255	R 627 (A,95,25)	RS1/16SS104J
			R 628 (B,88,39) (EW5)	RAB4C223J
	L 4642 (A,160,24) Inductor	CTH1257		
	L 4701 (B,86,44) Inductor	CTF1393	R 632 (B,100,45)	RS1/16SS0R0J
	L 4721 (A,43,129) Inductor(UC)	LCYC2R2K1608	R 633 (B,103,42)	RS1/16SS102J
	L 4722 (B,49,123) Inductor(UC)	CTF1334	R 634 (A,101,21)	RS1/16SS104J
	L 4723 (B,49,120) Inductor(UC)	CTF1334	R 636 (B,100,39)	RS1/16SS104J
C			R 639 (B,105,39)	RS1/16SS102J
	L 4724 (B,52,114) Inductor(UC)	CTF1334		
	L 4725 (B,48,125) Inductor(UC)	CTF1334	R 640 (B,102,39)	RS1/16SS103J
	T 1401 (A,40,104) Coil(EW5)	CTC1194	R 641 (B,100,41)	RS1/16SS103J
	T 1402 (A,42,95) Coil(EW5)	CTC1193	R 642 (B,105,24)	RS1/16SS220J
	T 1403 (A,32,96) Coil(EW5)	CTC1192	R 643 (A,100,17)	RS1/16SS104J
	TH601 (A,69,28) Thermister	CCX1051	R 646 (A,101,17)	RS1/16SS104J
	X 601 (A,91,33) Resonator 20.000 MHz	VSS1186	R 648 (B,107,24)	RS1/16S104J
	VR4231 (A,55,25) Semi-fixed 1 kohm(OB)	CCP1483	R 649 (B,104,45)	RS1/16SS220J
	⚠️FU2900 (B,71,7) Fuse 250 mA	CEK1276	R 650 (A,102,17)	RS1/16SS104J
	⚠️FU4351 (B,116,117) Fuse 40 A	MINISMDC075F/24	R 652 (B,106,44)	RS1/16SS220J
D	⚠️FU4352 (B,128,133) Fuse 3.15 A	CEK1259	R 653 (A,109,46)	RS1/16SS102J
	⚠️FU4601 (B,103,60) Fuse 5 A	CEK1261	R 654 (A,104,17)	RS1/16SS104J
	⚠️FU4602 (B,143,58) Fuse 5 A	CEK1261	R 658 (A,106,15)	RS1/16SS104J
	⚠️FU4631 (A,114,85) Fuse 200 mA	CEK1247	R 660 (A,115,19)	RS1/16S104J
	⚠️FU4641 (A,141,8) Fuse 3.15 A	CEK1259	R 663 (A,116,20)	RS1/16SS102J
	⚠️FU4642 (B,157,71) Fuse 2.5 A	CEK1258	R 664 (A,116,18)	RS1/16SS473J
	⚠️FU4771 (A,115,106) Fuse 1 A	CEK1254	R 665 (B,117,49)	RS1/16SS104J
	EF4351 (B,121,119) EMI Filter	CCG1067	R 666 (B,115,23)	RS1/16SS104J
	EF4352 (B,126,119) EMI Filter(UC)	CCG1067	R 668 (B,118,21)	RS1/16SS472J
	EF4353 (A,128,119) EMI Filter(UC)	CCG1067	R 670 (A,124,32)	RS1/16SS104J
E	EF4354 (A,109,119) EMI Filter	CCG1067	R 671 (A,120,31)	RS1/16SS102J
	EF4356 (A,115,119) EMI Filter	CCG1067	R 676 (A,120,28)	RS1/16SS0R0J
	EF4357 (A,119,119) EMI Filter	CCG1067	R 677 (A,120,27)	RS1/16SS0R0J
	EF4358 (A,123,119) EMI Filter	CCG1067	R 680 (B,119,22)	RS1/16SS472J
	EF4359 (B,123,119) EMI Filter	CCG1067	R 681 (B,118,48)	RS1/16SS473J
	EF4360 (B,128,119) EMI Filter(UC)	CCG1067	R 682 (A,124,35)	RS1/16SS0R0J
	EF4361 (A,130,119) EMI Filter(UC)	CCG1067	R 683 (A,122,42)	RAB4C104J
	EF4731 (B,156,77) EMI Filter	CCG1172	R 684 (A,122,38)	RAB4C681J
	EF4732 (B,153,57) EMI Filter	CCG1172	R 685 (A,69,26)	RS1/16S102J
	ANT1401 (A,18,118) Antenna Jack	CKX1060	R 688 (B,43,8)	RS1/16SS104J
F	Y 1461 (A,17,93) FM/AM Tuner Unit(UC)	CWE2098	R 689 (B,39,9)	RS1/16SS104J
	(A,17,93) FM/AM Tuner Unit(EW5)	CWE2127	R 690 (A,109,48)	RS1/16SS472J
	⚠️ Fuse 10 A	CEK1208	R 694 (A,113,47)	RS1/16SS102J
			R 701 (B,106,6)	RS1/16S221J
			R 702 (B,108,6)	RS1/16S221J

RESISTORS

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 703	(B,109,6)	RS1/16S221J		R 2861	(B,124,108)	RS1/16SS391J	
R 704	(B,110,6)	RS1/16S221J		R 2862	(B,121,103)	RS1/16SS473J	
R 705	(B,112,6)	RS1/16S221J		R 2863	(B,115,104)	RS1/16SS223J	
R 706	(B,108,16)	RS1/16SS472J		R 2864	(B,117,105)	RS1/16SS103J	A
R 707	(B,110,16)	RS1/16SS472J		R 2865	(B,122,112)	RS1/10S102J	
R 708	(B,105,6)	RS1/16SS104J		R 2866	(B,113,115)	RS1/16SS103J	
R 709	(B,107,16)	RS1/16SS473J		R 2867	(B,116,114)	RS1/16SS103J	
R 710	(B,109,16)	RS1/16SS473J		R 2868	(B,114,114)	RS1/16SS221J	
R 713	(B,123,15)	RS1/10S0R0J		R 2869	(B,112,114)	RS1/16SS101J	
R 716	(B,107,9)	RS1/16S473J		R 2870	(A,152,110)	RS1/16S473J	
R 731	(B,94,34)	RS1/16SS0R0J		R 2871	(A,153,112)	RS1/16S104J	
R 1016	(B,69,15)	RS1/16SS0R0J		R 2872	(B,153,108)	RS1/16S102J	
R 1409	(B,20,111) (EW5)	RS1/16S105J		R 2873	(B,156,108)	RS1/16S472J	
R 1410	(A,35,102) (EW5)	RS1/16S821J		R 2874	(B,149,110)	RS1/4S102J	
R 1411	(A,34,107) (EW5)	RS1/16S330J		R 2875	(B,151,113)	RS1/4S472J	B
R 1412	(A,43,88) (EW5)	RS1/16S332J		R 2880	(A,165,120)	RS1/16S103J	
R 1413	(A,32,91) (EW5)	RS1/16S101J		R 2881	(B,147,132)	RS1/4S472J	
R 1421	(B,37,92) (EW5)	RS1/16S151J		R 2882	(B,142,132)	RS1/4S102J	
R 1422	(B,36,93) (EW5)	RS1/16S680J		R 2883	(B,124,22)	RS1/16SS472J	
R 1423	(B,40,92) (EW5)	RS1/16S152J		R 2884	(B,121,21)	RS1/16SS472J	
R 1424	(B,42,93) (EW5)	RS1/16S681J		R 2900	(A,168,124)	RS1/16S473J	
R 1425	(B,43,96) (EW5)	RS1/16S181J		R 2901	(A,169,121)	RS1/16S104J	
R 1426	(B,26,104) (UC)	RS1/4S0R0J		R 2902	(A,166,127)	RS1/4S102J	
R 1441	(A,31,84) (EW5)	RS1/16S151J		R 2903	(A,166,130)	RS1/4S472J	
R 1442	(A,32,87) (EW5)	RS1/16S680J		R 2910	(B,153,71)	RS1/16S473J	
R 1443	(A,39,87) (EW5)	RS1/16S152J		R 2911	(B,144,108)	RS1/16S473J	C
R 1444	(A,40,85) (EW5)	RS1/16S681J		R 2912	(A,59,90)	RS1/4S4R7J	
R 1445	(A,38,83) (EW5)	RS1/16S151J		R 2913	(A,64,92)	RS1/4S4R7J	
R 1461	(B,24,70)	RS1/16SS681J		R 2920	(B,91,109)	RS1/16S0R0J	
R 1462	(B,24,69)	RS1/16SS681J		R 2921	(B,87,114)	RS1/16S0R0J	
R 1463	(B,24,68)	RS1/16SS681J		R 2922	(B,87,117)	RS1/16S0R0J	
R 1464	(B,24,67)	RS1/16SS681J		R 2923	(B,94,108)	RS1/16S0R0J	
R 1465	(B,24,66)	RS1/16SS681J		R 2924	(A,95,120)	RS1/16S103J	
R 1466	(B,26,65)	RS1/16SS223J		R 2925	(A,92,120)	RS1/16S103J	
R 1467	(B,24,65) (EW5)	RS1/16SS681J		R 2926	(A,102,118)	RS1/16S103J	
R 1468	(B,24,58)	RS1/16SS681J		R 2940	(B,60,6)	RS1/16S0R0J	D
R 1470	(B,25,46)	RS1/16SS0R0J		R 2941	(A,56,9)	RS1/16SS101J	
R 1471	(B,25,44)	RS1/16SS0R0J		R 2942	(A,60,15)	RS1/16SS101J	
R 1474	(B,29,46)	RS1/16SS0R0J		R 2943	(B,61,12)	CTF1556	
R 1475	(B,32,44)	RS1/16SS0R0J		R 2944	(B,61,13)	CTF1556	
R 1476	(B,27,49) (EW5)	RS1/16SS0R0J		R 2945	(B,58,13)	CTF1556	
R 1477	(B,27,51) (EW5)	RS1/16SS0R0J		R 2946	(B,65,8)	CTF1556	
R 1478	(B,27,50) (EW5)	RS1/16SS0R0J		R 2947	(A,59,21)	CTF1675	
R 1479	(B,27,52) (EW5)	RS1/16SS0R0J		R 2948	(A,60,21)	CTF1675	
R 2801	(B,160,95)	RN1/16SE1002D		R 2949	(A,64,21)	CTF1675	
R 2802	(B,158,94)	RN1/16SE2701D		R 2950	(A,66,21)	CTF1675	
R 2803	(B,157,96)	RN1/16SE2201D		R 2951	(B,66,18)	RS1/16SS0R0J	E
R 2804	(B,158,99)	RS1/16S104J		R 2952	(B,68,18)	RS1/16SS0R0J	
R 2810	(B,110,98)	RS1/8S0R0J		R 2953	(B,65,13)	RS1/16SS0R0J	
R 2811	(A,99,97)	RS1/16S471J		R 2954	(B,69,11)	RS1/16SS0R0J	
R 2820	(B,159,84)	RS1/16S2201D		R 2959	(B,76,4)	RS1/16S0R0J	
R 2821	(B,159,86)	RS1/16S1002D		R 2960	(B,73,8)	RS1/16SS0R0J	
R 2822	(B,159,88)	RS1/16S2201D		R 2961	(B,74,8)	RS1/16SS0R0J	
R 2823	(A,139,48)	RS1/16SS105J		R 2962	(A,77,17)	RS1/16SS0R0J	
R 2830	(B,32,27)	RS1/16S3601D		R 2963	(A,78,17)	RS1/16SS0R0J	
R 2831	(B,30,24)	RS1/16S10R0D		R 2964	(A,80,21)	RS1/16SS0R0J	
R 2832	(A,27,35)	RS1/16S2201D		R 2967	(B,76,18)	RS1/16SS0R0J	F
R 2833	(A,32,27) (EW5)	RS1/16S0R0J		R 2968	(B,76,7)	RS1/16SS0R0J	
R 2834	(B,37,30)	RS1/16S104J		R 2969	(B,77,7)	RS1/16SS0R0J	
R 2860	(B,125,107)	RS1/16SS391J		R 2970	(B,79,14)	RS1/16SS0R0J	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	R 2971	(B,78,7)	RS1/16SS0R0J	R 4254	(B,99,111)	RS1/16SS101J
	R 2972	(B,80,7)	RS1/16SS0R0J	R 4255	(B,106,112)	RS1/16SS101J
	R 2973	(B,81,14)	RS1/16SS0R0J	R 4263	(A,104,109)	RS1/16SS0R0J
	R 2976	(B,83,7)	RS1/16SS0R0J	R 4271	(B,57,65)	RS1/16S0R0J
	R 2977	(B,84,7)	RS1/16SS0R0J			
	R 2978	(A,84,20)	RS1/16SS0R0J	R 4272	(B,85,64) (UC)	RS1/16S181J
	R 2979	(A,86,18)	RS1/16SS0R0J	R 4273	(B,55,68) (UC)	RS1/16S181J
	R 2980	(A,87,18)	RS1/16SS0R0J	R 4274	(B,86,66) (UC)	RS1/16S223J
	R 2981	(A,87,22)	RS1/16SS0R0J	R 4275	(B,84,67) (UC)	RS1/16S102J
	R 2982	(A,89,9)	RS1/16SS0R0J	R 4276	(B,52,68) (UC)	RS1/16S223J
B	R 3601	(B,28,21)	RS1/16S224J	R 4277	(B,50,69) (UC)	RS1/16S102J
	R 3602	(B,33,21)	RS1/16S102J	R 4283	(B,59,74)	RS1/16SS0R0J
	R 3603	(B,26,24)	RS1/16S222J	R 4284	(B,86,70)	RS1/16SS0R0J
	R 3604	(B,22,20)	RS1/16S224J	R 4287	(B,75,74)	RS1/16SS102J
	R 3605	(B,18,13)	RS1/16S102J	R 4289	(B,75,75)	RS1/16SS102J
	R 3606	(B,23,22)	RS1/16S222J	R 4291	(B,75,76)	RS1/16SS102J
	R 3607	(B,15,20)	RS1/16S224J	R 4293	(B,77,80)	RS1/16SS0R0J
	R 3608	(B,15,15)	RS1/16S102J	R 4295	(B,58,76)	RS1/16SS0R0J
	R 3609	(B,14,23)	RS1/16S222J	R 4296	(A,53,74)	RS1/16S0R0J
	R 3610	(B,28,18)	RS1/16S121J	R 4312	(B,77,31)	RS1/16SS821J
C	R 3611	(B,26,20)	RS1/16S101J	R 4313	(B,78,36)	RS1/16SS104J
	R 3612	(B,30,15)	RS1/16S101J	R 4316	(B,83,44)	RS1/16SS0R0J
	R 3616	(B,19,20)	RS1/16S121J	R 4317	(B,79,44)	RS1/16SS0R0J
	R 3617	(B,19,22)	RS1/16S151J	R 4331	(B,106,92) (UC)	RS1/16SS821J
	R 3618	(B,20,15)	RS1/16S101J	R 4332	(B,99,92) (UC)	RS1/16SS821J
	R 3622	(B,10,20)	RS1/16S151J	R 4333	(B,96,85)	RS1/16SS821J
	R 3623	(B,11,22)	RS1/16S181J	R 4334	(B,89,85)	RS1/16SS821J
	R 3624	(B,13,16)	RS1/16S101J	R 4335	(B,96,92) (UC)	RS1/16SS821J
	R 3629	(B,70,7)	RS1/16S0R0J	R 4336	(B,89,92) (UC)	RS1/16SS821J
	R 4001	(B,57,61)	RS1/16S750J	R 4337	(B,104,92) (UC)	RS1/16SS223J
D	R 4021	(A,53,49)	RS1/16S750J	R 4338	(B,95,85)	RS1/16SS223J
	R 4041	(B,57,37)	RS1/16S750J	R 4339	(B,95,92) (UC)	RS1/16SS223J
	R 4061	(A,57,48)	RS1/16S102J	R 4340	(B,100,92) (UC)	RS1/16SS223J
	R 4151	(B,64,32)	RS1/16SS103J	R 4341	(B,90,85)	RS1/16SS223J
	R 4152	(B,63,33)	RS1/16SS103J	R 4342	(B,90,92) (UC)	RS1/16SS223J
	R 4153	(B,66,33)	RS1/16SS103J	R 4343	(B,103,89) (UC)	RS1/16SS471J
	R 4154	(B,65,32)	RS1/16SS103J	R 4344	(B,94,82)	RS1/16SS471J
	R 4155	(B,68,35)	RS1/16SS102J	R 4345	(B,94,89) (UC)	RS1/16SS471J
	R 4156	(B,69,36)	RS1/16SS104J	R 4346	(B,101,89) (UC)	RS1/16SS471J
	R 4157	(B,72,34)	RS1/16SS104J	R 4347	(B,92,82)	RS1/16SS471J
E	R 4158	(B,74,33)	RS1/16SS683J	R 4348	(B,92,89) (UC)	RS1/16SS471J
	R 4159	(B,72,32)	RS1/16SS473J	R 4351	(A,126,111)	RS1/16S153J
	R 4170	(B,82,53)	RS1/16SS223J	R 4352	(A,130,111)	RS1/10S103J
	R 4171	(B,79,49)	RS1/16SS223J	R 4601	(B,106,61)	RS1/10S0R0J
	R 4174	(B,65,21)	RS1/16SS223J	R 4602	(B,110,59)	RS1/16S2200D
	R 4175	(B,63,21)	RS1/16SS223J	R 4603	(B,111,59)	RS1/16S4701D
	R 4176	(B,75,57)	RS1/16SS0R0J	R 4604	(B,112,59)	RS1/16S1501D
	R 4194	(B,62,41)	RS1/16SS221J	R 4605	(B,108,59)	RS1/16S101J
	R 4195	(B,63,40)	RS1/16SS221J	R 4606	(B,115,59)	RS1/16S332J
				R 4607	(B,118,59)	RS1/16S104J
F	R 4231	(B,59,26)	RS1/16SS223J	R 4608	(B,115,69)	RS1/16S473J
	R 4232	(B,59,21)	RS1/16SS303J	R 4609	(B,111,64)	RS1/16S1503D
	R 4233	(B,57,21)	RS1/16SS681J	R 4610	(B,109,62)	RS1/16S8203D
	R 4234	(B,57,23)	RS1/16SS102J	R 4611	(B,120,60)	RS1/10S100J
	R 4235	(B,62,21)	RS1/16SS681J	R 4612	(B,125,67)	RS1/16S100J
	R 4236	(B,54,18)	RS1/16SS152J	R 4614	(B,125,64)	RS1/16S184J
	R 4237	(B,57,18)	RS1/16SS0R0J	R 4615	(B,142,55)	RS1/16S105J
	R 4240	(B,59,27)	RS1/16SS0R0J	R 4616	(B,92,99)	RS1/8S222J
	R 4251	(B,101,113)	RS1/16S750J	R 4633	(A,128,85)	RS1/16SS821J
	R 4252	(B,103,112)	RS1/16SS473J	R 4641	(B,140,8)	RS1/4SA561J
	R 4253	(B,101,111)	RS1/16SS473J	R 4643	(B,142,19)	RS1/16S331J

1

2

3

4

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 2810 (A,105,101)
 C 2811 (B,101,102)
 C 2812 (A,106,96)
 A C 2820 (A,158,86) 100 uF/16 V

CEVW101M16
 CKSRYB104K50
 CKSRYB104K50
 CCH1565

C 4171 (A,70,61)
 C 4172 (B,73,60)

CEVLW470M16
 CKSRYB104K50

C 2821 (A,163,87)
 C 2823 (A,163,91)
 C 2830 (A,32,34)
 C 2831 (B,32,29)
 C 2833 (B,35,28)

CKSRYB103K50
 CKSRYB104K50
 CEVW101M16
 CKSRYB103K50
 CKSRYB104K50

C 4173 (A,58,58)
 C 4174 (B,74,60)
 C 4181 (B,61,57)
 C 4182 (B,76,59)
 C 4183 (B,63,59)

CEVLW470M16
 CKSYB226K6R3
 CKSRYB104K50
 CKSRYB104K50
 CKSYB226K6R3

C 2860 (A,119,114)
 C 2861 (B,120,114)
 C 2862 (A,110,113)
 C 2870 (A,150,109)
 C 2871 (B,146,114)

CEVW470M16
 CKSRYB104K50
 CEVW330M10
 CKSRYB102K50
 CKSRYB102K50

C 4184 (B,64,61)
 C 4185 (B,58,39)
 C 4186 (B,57,49)
 C 4187 (B,58,42)
 C 4188 (B,66,61)

CKSRYB104K50
 CKSQYB475K10
 CKSQYB475K10
 CKSRYB105K10

B C 2872 (B,157,114)
 C 2881 (A,167,110)
 C 2882 (B,145,132)
 C 2890 (B,161,103)
 C 2891 (B,161,106)

CKSRYB102K50
 CKSQYB105K16
 CKSRYB102K50
 CKSRYB104K50
 CKSRYB102K50

C 4189 (B,68,61)
 C 4190 (B,69,58)
 C 4191 (B,70,58)
 C 4192 (B,67,58)
 C 4193 (B,78,59)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10

C 2892 (A,161,110)
 C 2901 (A,169,129)
 C 2910 (A,150,64)
 C 2911 (A,59,104)
 C 2912 (A,77,95)

CKSRYB102K50
 CKSRYB104K50
 CEAT103M16(P30)
 CEAT103M16(P30)
 CEAT103M16(P30)

C 4194 (B,65,58)
 C 4195 (B,57,55)
 C 4197 (B,57,58)
 C 4198 (B,79,59)
 C 4199 (A,57,53)

CKSRYB105K10
 CKSQYB475K10
 CKSQYB475K10
 CKSRYB105K10
 CKSRYB105K10

C C 2920 (B,92,113)
 C 2921 (B,81,114)
 C 2922 (B,81,117)
 C 2923 (B,96,115)
 C 2924 (A,99,120)

CKSQYB105K16
 CKSQYB105K16
 CKSQYB105K16
 CKSQYB105K16
 CKSRYB104K50

C 4200 (B,78,52)
 C 4201 (A,57,51)
 C 4202 (B,79,54)
 C 4203 (B,57,52)
 C 4204 (B,78,51)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSQYB475K10
 CKSRYB105K10

C 2925 (B,92,116)
 C 2926 (B,78,114)
 C 2927 (B,78,117)
 C 2928 (B,94,116)
 C 2929 (A,93,114)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CEVW101M25

C 4206 (B,77,50)
 C 4207 (B,57,48)
 C 4208 (A,78,22)
 C 4210 (A,74,21)
 C 4211 (B,57,43)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSQYB475K10

D C 2930 (A,102,114)
 C 2931 (A,99,118)
 C 2932 (A,76,119)
 C 2933 (A,81,119)
 C 2934 (A,81,116)

CKSRYB104K50
 CKSRYB105K10
 CKSQYB225K10
 CKSYB225K16
 CEVW100M16

C 4212 (A,71,21)
 C 4213 (A,68,21)
 C 4215 (B,76,44)
 C 4216 (B,58,36)
 C 4217 (B,75,43)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSQYB475K10
 CKSRYB105K10

C 2935 (A,147,80) 3 300 uF/16 V
 C 3601 (B,26,22)
 C 3602 (A,15,18) 10 uF
 C 3604 (B,21,22)
 C 3607 (B,13,22)

CCH1018(P30)
 CKSQYB475K6R3
 CCG1203
 CKSQYB475K6R3
 CKSQYB475K6R3

C 4221 (B,72,39)
 C 4222 (B,73,40)
 C 4224 (B,57,46)
 C 4231 (B,61,24)
 C 4232 (A,63,26)

CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CEVWNP220M10

E C 3611 (A,7,25)
 C 3612 (A,7,23)
 C 3613 (A,7,22)
 C 4061 (A,53,37)

CKSSYB102K50
 CKSSYB102K50
 CKSSYB102K50
 CKSRYB103K50

C 4233 (A,55,17)
 C 4251 (B,104,112)
 C 4252 (B,100,110) 10 uF
 C 4253 (B,105,110) 10 uF
 C 4254 (B,101,104)

CEVQW101M10
 CKSRYB473K50
 CCG1203
 CCG1203
 CKSRYB104K25

C 4062 (A,59,43)
 C 4063 (A,53,40)
 C 4151 (B,63,30) 10 uF
 C 4152 (B,60,31) 10 uF

CEVW100M16
 CKSRYB104K50
 CCG1203
 CCG1203

C 4264 (A,85,109)
 C 4271 (B,81,67) 10 uF(UC)
 C 4273 (B,84,65) (UC)
 C 4274 (B,78,64)
 C 4275 (B,60,63)

CEVQW101M10
 CCG1203
 CKSRYB105K6R3
 CKSRYB105K6R3
 CKSRYB105K6R3

C 4153 (B,66,32)
 C 4154 (B,70,30)
 C 4155 (B,66,35)
 C 4156 (B,74,34)
 F C 4157 (B,73,34)

CCSSCH221J50
 CKSSYB104K16
 CKSSYB103K25
 CKSSYB104K16
 CCSSCH151J50

C 4276 (B,58,66)
 C 4277 (B,53,70) 10 uF(UC)
 C 4280 (B,61,68) (UC)
 C 4281 (B,59,71)
 C 4284 (B,83,68)

CKSRYB105K6R3
 CCG1203
 CKSRYB105K6R3
 CKSRYB105K6R3
 CKSRYB105K6R3

C 4158 (B,71,35)
 C 4159 (B,77,29)
 C 4160 (B,65,33)

CCSSCH151J50
 CKSQYB225K10
 CCSSCH221J50

C 4285 (B,61,70)
 C 4286 (B,78,71)
 C 4287 (B,60,72)

CKSRYB105K6R3
 CKSRYB105K6R3
 CKSRYB105K6R3

1

2

3

4

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 870	(A,7,56) Diode	MALS068X
D 871	(A,9,67) Diode	MALS068X
D 872	(A,9,65) Diode	MALS068X
S 801	(A,8,86) Push Switch	CSG1155
S 802	(A,11,80) Push Switch	CSG1155
S 803	(A,18,51) Switch(ROTARY COMMANDER)	CSX1135
S 804	(A,18,84) Push Switch	CSG1155
S 805	(A,24,80) Push Switch	CSG1155
ANT801	(A,4,39) Antenna	CTX1095

R 222	(B,35,32)	RS1/16SS103J
R 225	(A,49,49)	RS1/16SS103J
R 226	(A,49,50)	RS1/16SS393J
R 227	(B,45,51)	RS1/16SS562J
R 228	(B,42,53)	RS1/16SS122J
R 229	(B,44,53)	RS1/16SS472J
R 230	(B,21,28)	RS1/16SS0R0J
R 232	(B,43,51)	RS1/16SS122J
R 233	(B,29,52)	RS1/16SS103J
R 234	(B,30,61)	RS1/16SS473J

RESISTORS

R 801	(B,23,57)	RS1/16S0R0J
R 802	(A,10,62)	RS1/16S0R0J
R 803	(B,8,61)	RS1/16S102J
R 804	(B,17,50)	RS1/16S162J
R 805	(B,6,76)	RS1/16S123J
R 806	(B,20,50)	RS1/16S302J
R 807	(A,18,76)	RS1/16S132J
R 808	(B,18,83)	RS1/16S103J
R 809	(A,18,79)	RS1/16S272J
R 810	(A,23,66)	RS1/16S241J

R 235	(A,25,63)	RS1/16SS473J
R 239	(B,26,48)	RS1/16SS473J
R 240	(B,10,31)	RS1/16SS473J
R 241	(B,9,32)	RS1/16SS103J

R 244	(A,20,52)	RS1/16SS473J
R 255	(A,27,63)	RAB4CQ104J
R 307	(A,34,19)	RS1/16SS183J
R 308	(A,38,20)	RS1/16SS183J
R 309	(A,35,21)	RS1/16SS183J

R 310	(A,38,21)	RS1/16SS183J
R 601	(B,28,38)	RS1/16SS0R0J
R 602	(B,27,41)	RS1/16SS0R0J
R 606	(B,23,41)	RS1/16SS0R0J
R 701	(B,16,35)	RS1/16SS221J

CAPACITORS

C 803	(A,19,63)	CKSRYB103K25
C 804	(A,10,63)	CKSRYB103K25
C 805	(A,13,67)	CKSRYB104K25
C 806	(A,14,67)	CKSRYB104K25

R 702 (A,23,55) RS1/16SS221J

CAPACITORS

C 106	(B,56,69)	CKSQYB475K6R3
C 202	(A,27,57)	CKSSYB104K10
C 204	(A,24,63)	CKSSYB103K16
C 205	(B,23,43)	CKSQYB475K6R3

C 206	(A,22,39)	CKSSYB104K10
C 207	(A,24,37)	CKSRYB104K10
C 209	(B,33,40)	CEVW220M6R3
C 210	(B,29,42)	CKSSYB104K10
C 211	(A,27,34)	CKSSYB104K10

C 212	(B,29,32)	CKSRYB104K16
C 213	(A,44,37)	CKSSYB104K10
C 214	(A,28,33)	CKSSYB104K10
C 216	(A,50,51)	CKSSYB332K50
C 217	(A,46,51)	CKSSYB104K10

C 218	(A,49,51)	CKSSYB473K10
C 219	(A,45,53)	CKSSYB104K10
C 220	(A,46,53)	CKSSYB182K50
C 221	(A,44,53)	CKSSYB104K10
C 222	(B,43,53)	CCSSCH560J50

C 223	(B,45,53)	CCSSCH4R0C50
C 224	(A,43,55)	CKSSYB104K10
C 226	(A,40,58)	CCSSCH680J50
C 227	(A,40,60)	CCSSCH470J50
C 228	(A,39,62)	CKSSYB103K16

C 229	(B,49,59)	CKSSYB104K10
C 236	(A,42,61)	CKSSYB104K10
C 239	(B,44,51)	CCSSCH220J50
C 240	(A,35,61)	CKSSYB104K10
C 250	(B,36,30)	CKSSYB102K50

C 251	(B,33,29)	CKSSYB102K50
C 303	(A,35,19)	CKSSYB472K25

**Unit Number: CWX3514****Unit Name : CD Core Unit(S10.5COMP2)****MISCELLANEOUS**

IC 201	(A,34,46) IC	PE5547A
IC 301	(A,27,14) IC	BA5839FP
Q 101	(B,56,72) Transistor	2SA1577
Q 102	(B,47,57) Chip Transistor	2SB1689
X 201	(A,23,35) Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,53,37) Switch(HOME)	CSN1067
S 903	(B,19,58) Switch(DSCSNS)	CSN1067
S 904	(B,38,67) Switch(12EJ)	CSN1068
S 905	(B,24,68) Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,60,73)	RS1/10SR2R4J
R 102	(B,59,71)	RS1/10SR2R4J
R 103	(B,60,71)	RS1/10SR2R7J
R 104	(B,52,69)	RS1/16SS222J
R 105	(B,41,57)	RS1/16SS102J

R 107	(B,41,59)	RS1/16SS105J
R 202	(B,32,62)	RS1/16SS473J
R 203	(B,42,45)	RS1/16S473J
R 204	(A,25,61)	RS1/16SS221J

R 206	(B,26,53)	RS1/16SS104J
R 210	(B,13,32)	RS1/16SS102J
R 214	(B,36,34)	RS1/16SS472J
R 216	(B,47,49)	RS1/16SS472J
R 221	(B,36,32)	RS1/16SS103J

1

2

3

4

	5	6	7	8
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>		
	C 304 (A,34,21)	CKSSYB223K16		
	C 307 (B,25,9)	CKSRYB104K16		
	C 308 (B,10,27)	CKSRYB105K10		
	C 703 (B,11,37)	CCSSCH101J50		A
	C 704 (B,8,36)	CKSSYB102K50		
	C 711 (A,25,26)	CKSSYB104K10		

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942	
M 1	Motor Unit(SPINDLE)	CXC7134	
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026	
U 1	Navi Unit(UC)	CWX3641	
	Navi Unit(EW5)	CWX3639	