

1. SAFETY INFORMATION

CAUTION


This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely; you should not risk trying to do so and refer the repair to a qualified service technician.


WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

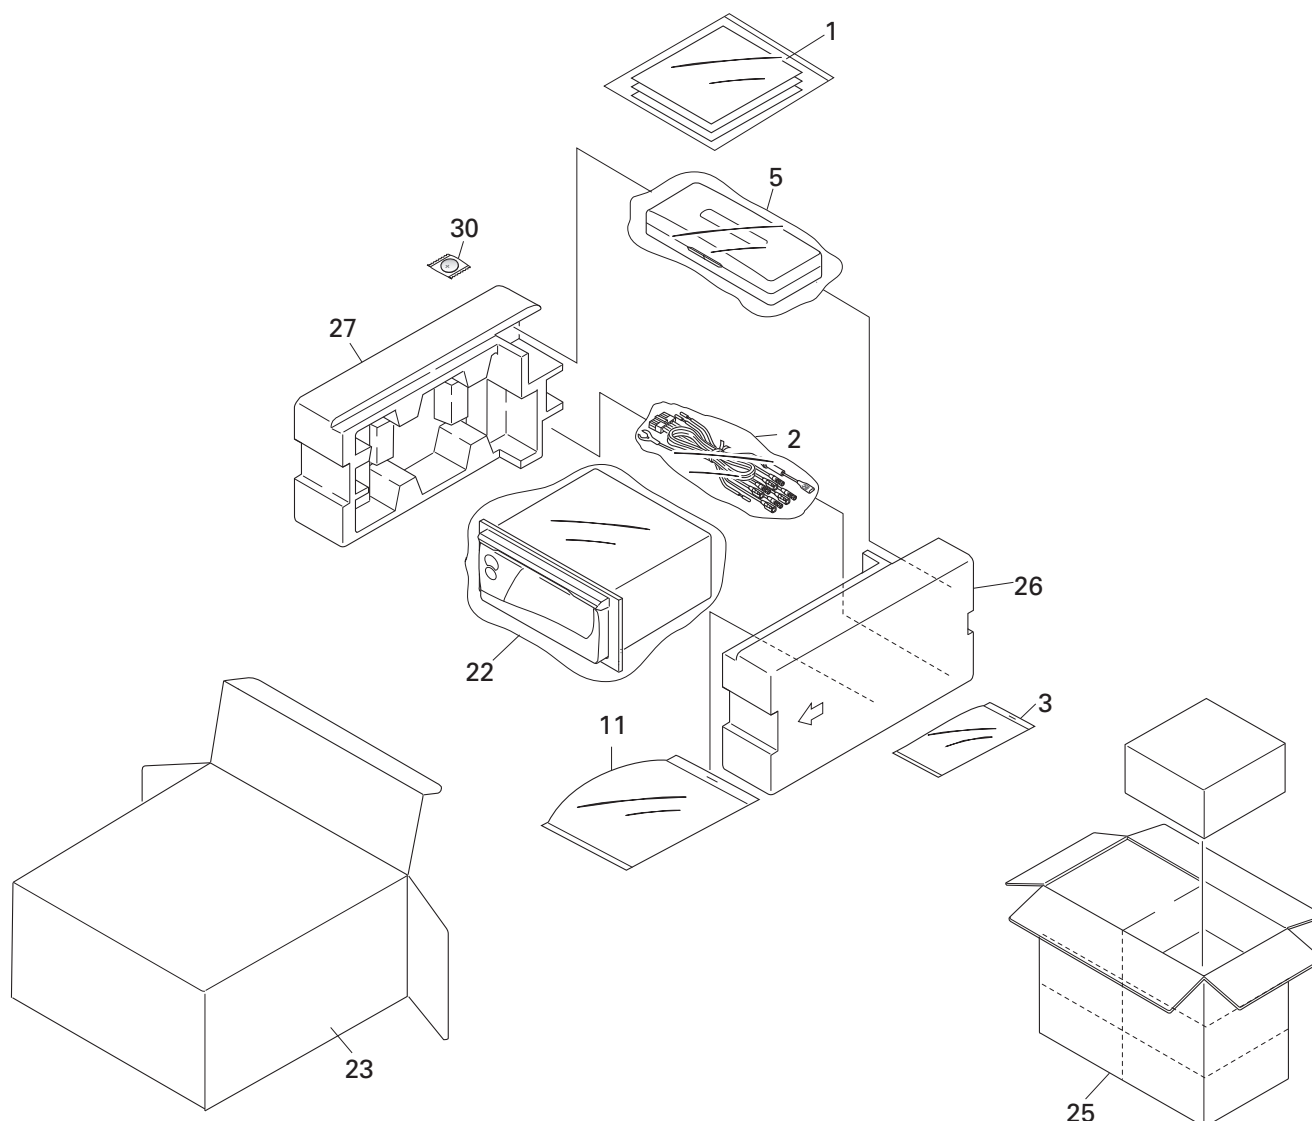

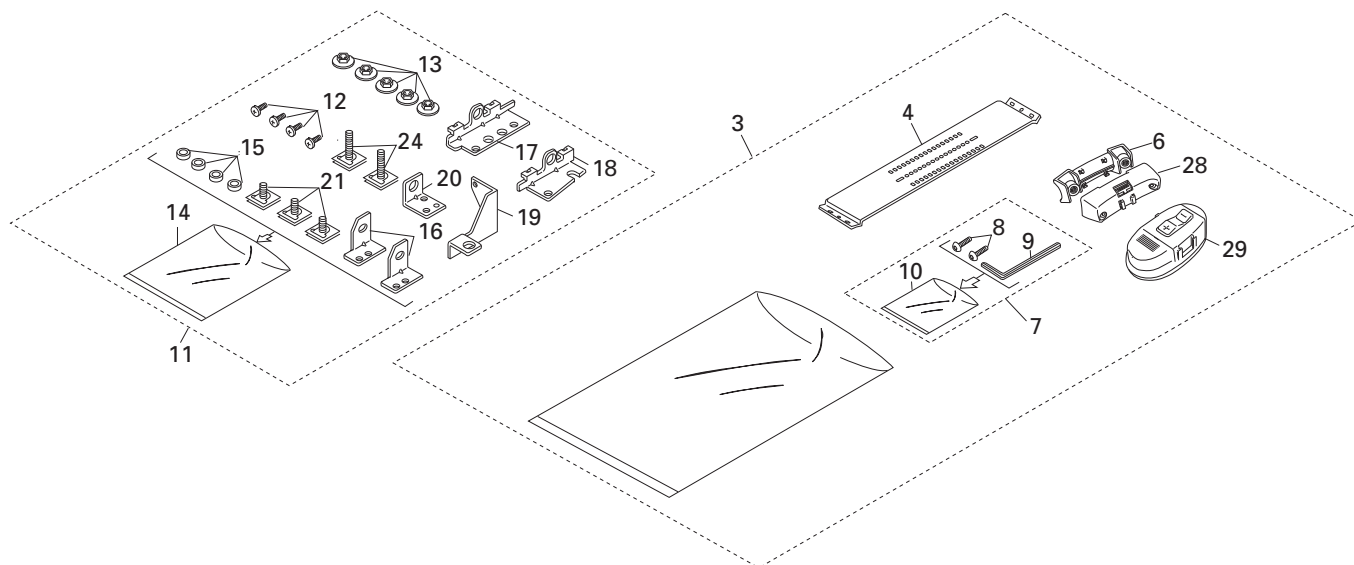**NOTE:**

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ▽ mark on the product are used for disassembly.

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
* 1-1	Card	ARY1048	15	Spacer	CLA2598
1-2	Owner's Manual	See Contrast table(2)	16	Bracket	CNC6767
1-3	Installation Manual	See Contrast table(2)	17	Bracket	CNC5506
1-4	Polyethylene Bag	CEG1116	18	Bracket	CNC5507
* 1-5	Caution Card	CRP1158	19	Bracket	CNC5686
* 1-6	Label	CRW1343	20	Bracket	CNC5687
* 1-7	Caution Card	See Contrast table(2)	21	Bolt Unit	CXA7960
2	Cord	CDE5885	22	Cover	CEG1228
3	Remote Control Assy	CXB3488	23	Carton	See Contrast table(2)
4	Belt	CZN6416	24	Bolt Unit	CXA7961
5	Detach Case Assy	CXB3705	25	Contain Box	See Contrast table(2)
6	Holder Assy	CZX3173	26	Protector	CHP2113
7	Screw Assy	CZE3169	27	Protector	CHP2114
* 8	Screw	RMZ30H060FBK	28	Holder Assy	CZX3172
* 9	Hexagonal Wrench	CZE3176	29	Remote Control Assy	CZX3231
* 10	Polyethylene Bag	CEG-127	30	Battery	CEX1030
11	Accessory Assy	CEA2006			
12	Screw	BSZ30P050FMC			
13	Nut	CBN1012			
* 14	Polyethylene Bag	CEG1101			


(2) CONTRAST TABLE

DEH-P86DHR/UC and DEH-P76DH/UC have the same construction except for the following:

Mark No.	Description	Part No.	
		DEH-P86DHR/UC	DEH-P76DH/UC
1-2	Owner's Manual	CRB1530(English)	CRD2867(English, French)
1-3	Installation Manual	CRB1531(English)	CRD2868(English, French)
* 1-7	Caution Card	CRN1051	Not used
23	Carton	CHG3675	CHG3676
25	Contain Box	CHL3675	CHL3676

2.2 EXTERIOR


● DEH-P86DHR

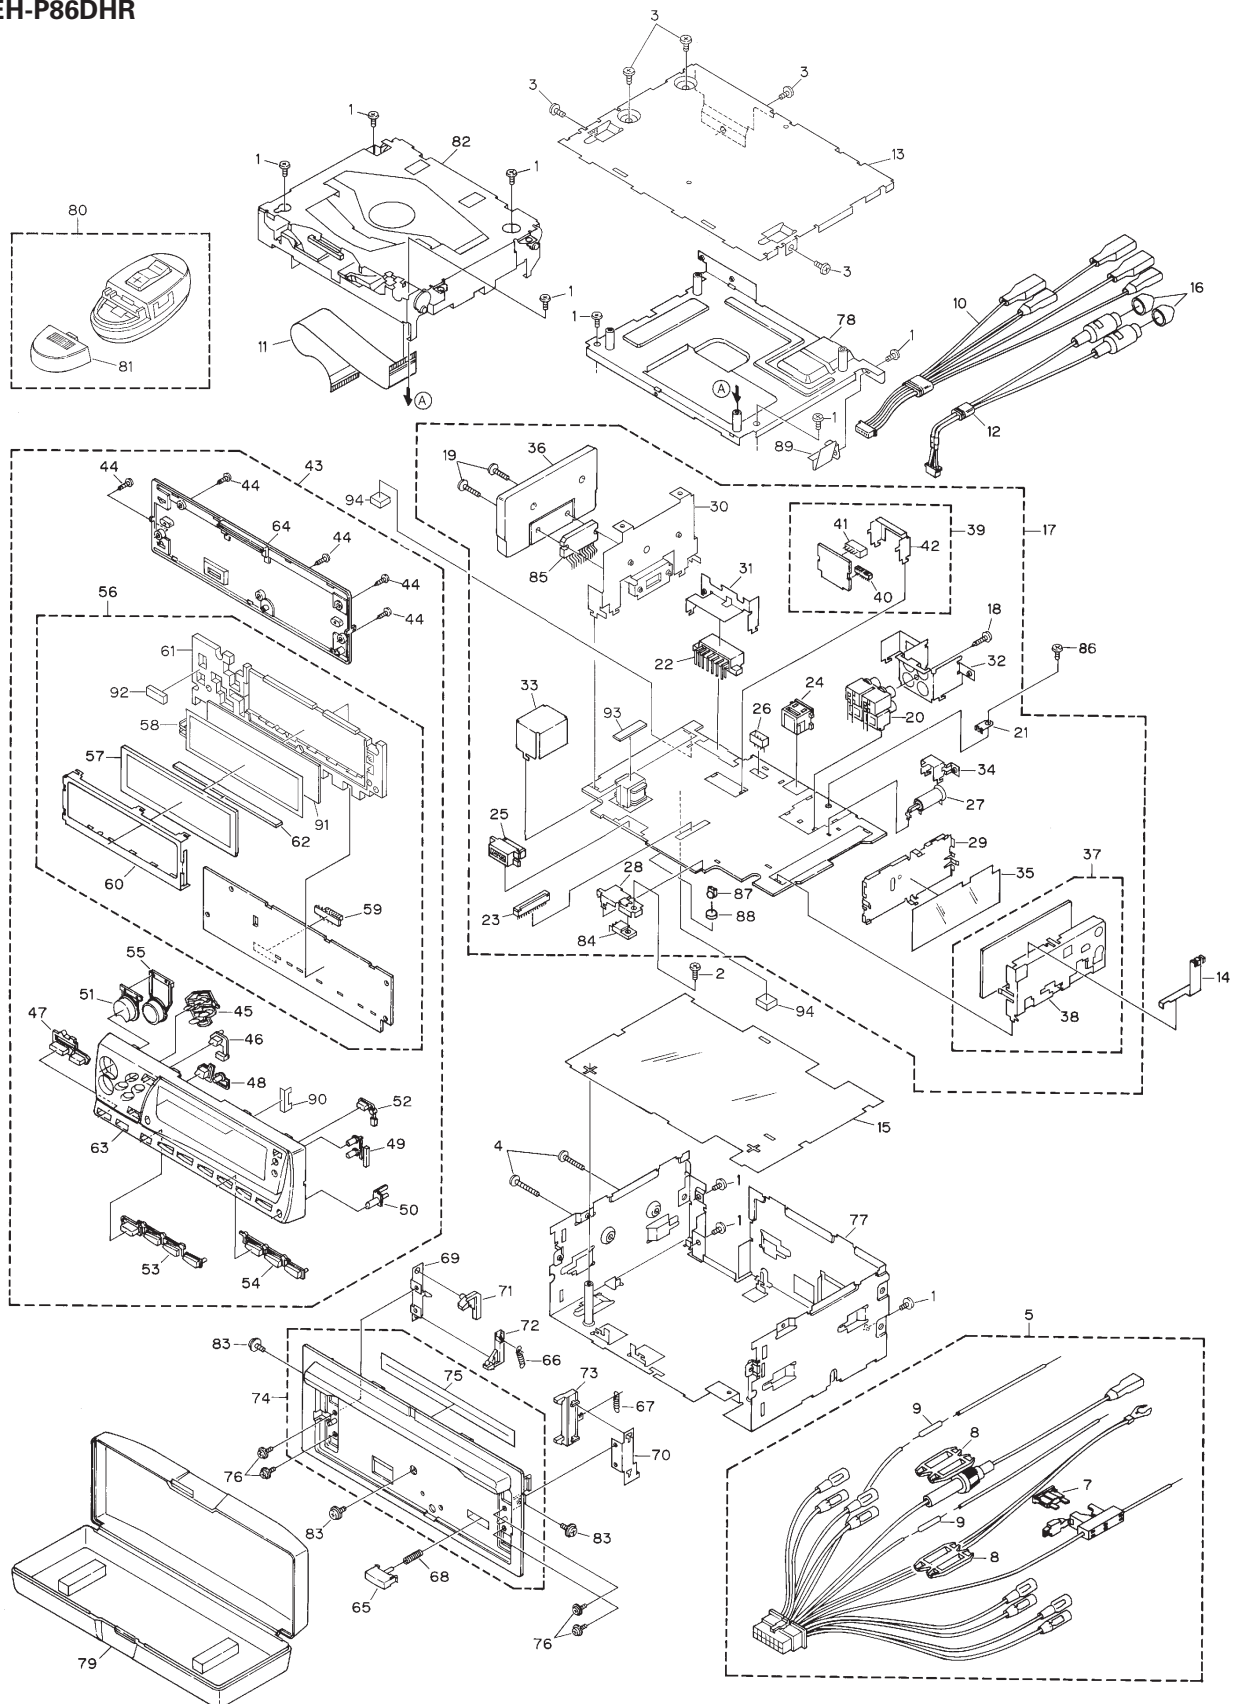

● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ26P060FMC	46	Button(FUNC)	CAC4887
2	Screw	BSZ26P080FMC	47	Button(SOURCE)	CAC4888
3	Screw	BSZ30P050FMC	48	Button(AUDIO)	CAC4889
4	Screw	BSZ30P200FMC	49	Button(LOUD,CLOCK)	CAC4893
5	Cord Assy	CDE5885	50	Button(DETACH)	CAC5951
6			51	Button(+)	CAC6033
7	Fuse(10A)	CEK1136	52	Button(EJECT)	CAC6035
8	Cap	CNS1472	53	Button(1,2,3,DISP)	CAC6093
9	Resistor	RS1/2PMF102J	54	Button(4,5,6)	CAC6094
10	Cord Assy	CDE5997	55	Button(-)	CAC6034
11	Cable	CDE5269	56	Keyboard Unit	CWX2069
12	Cord Assy	CDE5297	57	LCD	CAW1389
13	Case	CNB2468	58	EL	CEL1488
14	Holder	CNC7005	59	Connector(CN1901)	CKS3580
15	Insulator	CNM5076	60	Holder	CNC7198
16	Cap	CNV2680	61	Holder	CNV4772
17	Tuner Amp Unit	CWM6379	62	Connector	CNV4791
18	Screw	BPZ26P100FMC	63	Grille Unit	CXB3509
19	Screw	BSZ26P160FMC	64	Cover Unit	CXB3513
20	Pin Jack(CN251)	CKB1031	65	Button	CAC5180
21	Terminal(CN504)	CKF1059	66	Spring	CBH1834
22	Plug(CN901)	CKM1304	67	Spring	CBH1835
23	Connector(CN651)	CKS2255	68	Spring	CBH1996
24	Connector(CN101)	CKS3408	69	Bracket	CNC6135
25	Connector(CN801)	CKS3581	70	Bracket	CNC6791
26	Connector(CN271)	CKS3584	71	Arm	CNV4692
27	Antenna Jack(CN503)	CKX1056	72	Arm	CNV4693
28	Holder	CNC5013	73	Arm	CNV4951
29	Holder	CNC8021	74	Panel Unit	CXB3507
30	Holder	CNC8278	75	Cover	CNM4875
31	Holder	CNC6880	76	Screw	IMS20P040FZK
32	Holder	CNC7196	77	Chassis Unit	CXA9714
33	Holder	CNC6889	78	Chassis Unit	CXA9718
34	Holder	CNC7001	79	Detach Case Assy	CXB3705
35	Insulator	CNM4684	80	Remote Control Assy	CZX3231
36	Heat Sink	CNR1435	81	Cover	CZN6410
37	FM/AM Tuner Unit	CWE1472	82	CD Mechanism Module	CXK5005
38	Holder	CNC6554	83	Screw	ISS26P060FZK
39	Detach Alarm Unit	CWM5291	84	Transistor(Q971)	2SD2396
40	Plug(CN852)	CKS1617	85	IC(IC201)	PAL005A
41	Connector(CN851)	CKS3585	86	Screw	ISS26P060FMC
42	Holder	CNC6912	87	LED(D851)	BR4361F
43	Detach Grille Assy	CXB3728	88	Bush	CNV-724
44	Screw	BPZ20P100FZK	89	Holder	CNC8190
45	Button	CAC5947	90	Spacer	CNM5385
			*	91 Cushion	CNM5316
			*	92 Cushion	CNM5315
			*	93 Cushion	CNM6297
				94 Spacer	CNM4154


● DEH-P76DH

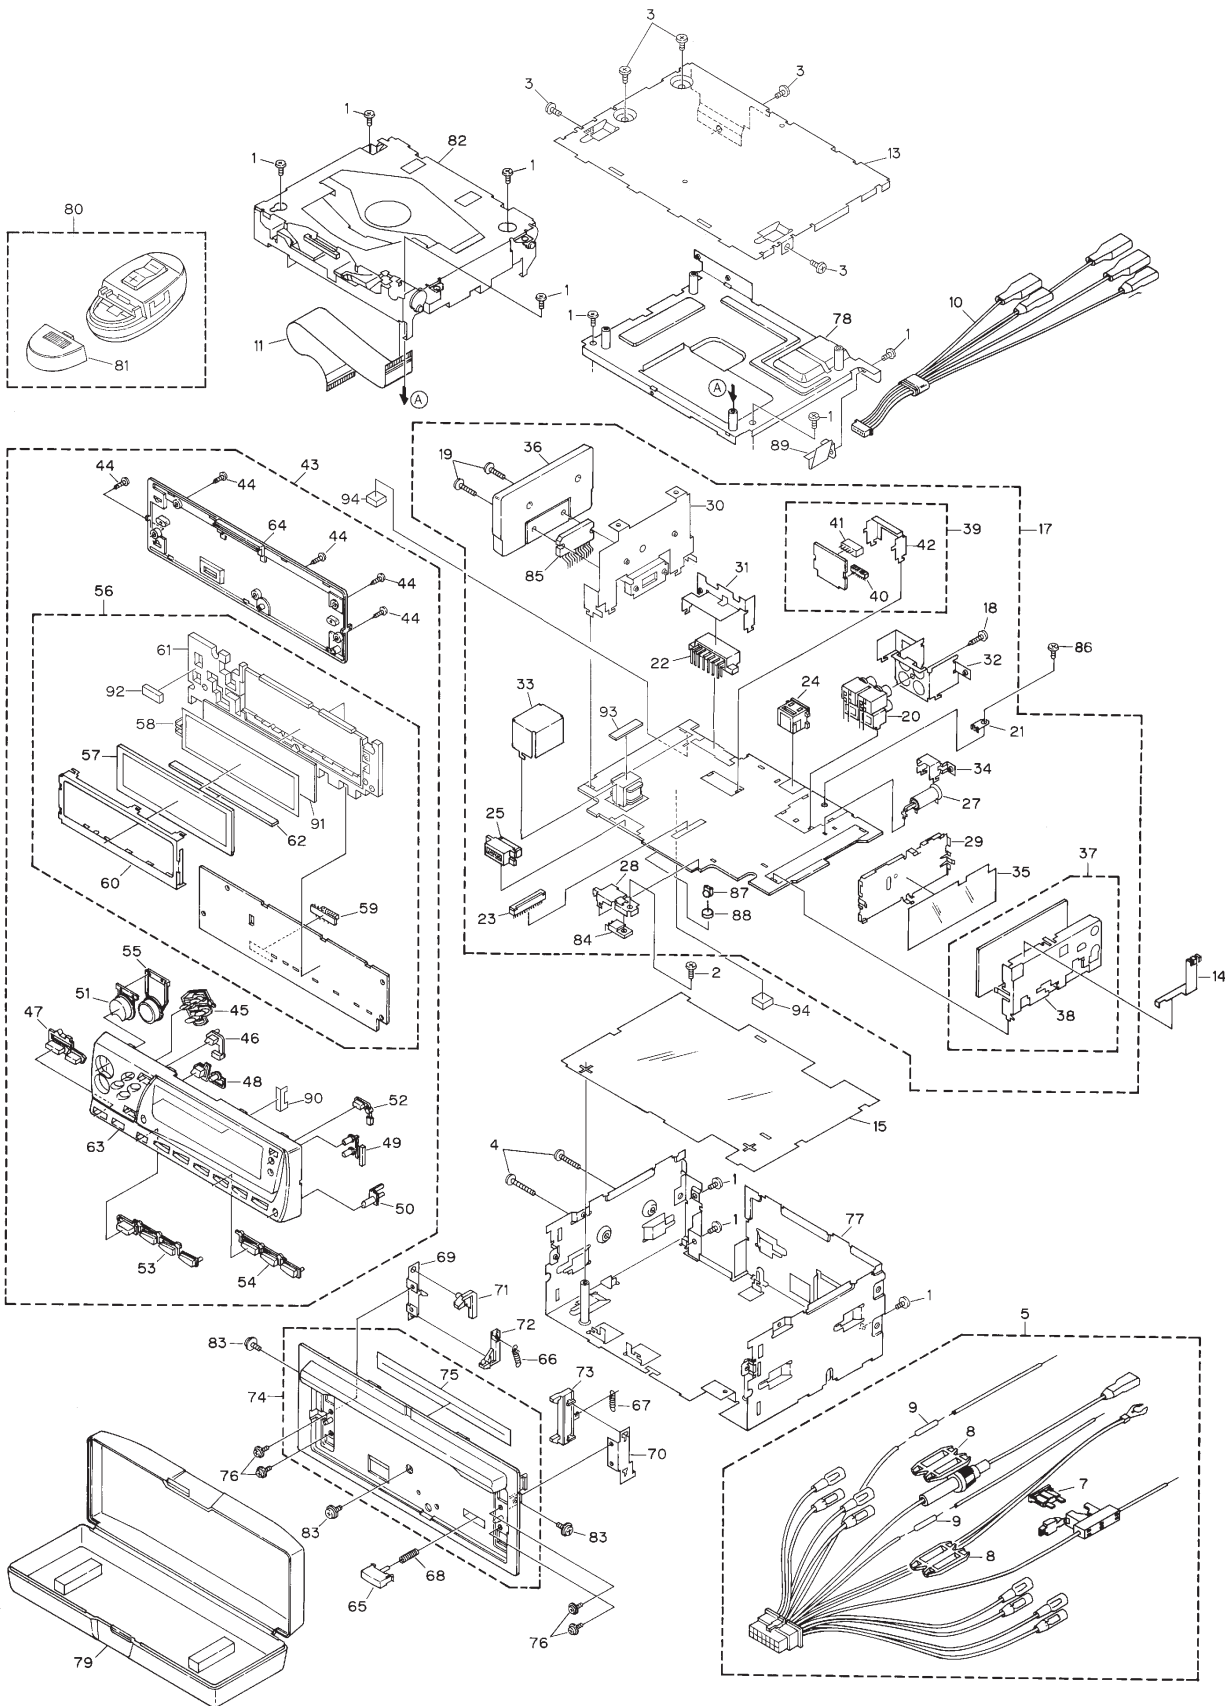

● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ26P060FMC	46	Button(FUNC)	CAC4887
2	Screw	BSZ26P080FMC	47	Button(SOURCE)	CAC4888
3	Screw	BSZ30P050FMC	48	Button(AUDIO)	CAC4889
4	Screw	BSZ30P200FMC	49	Button(LOUD,CLOCK)	CAC4893
5	Cord Assy	CDE5885	50	Button(DETACH)	CAC5951
6			51	Button(+)	CAC6033
7	Fuse(10A)	CEK1136	52	Button(EJECT)	CAC6035
8	Cap	CNS1472	53	Button(1,2,3,DISP)	CAC6036
9	Resistor	RS1/2PMF102J	54	Button(4,5,6)	CAC6037
10	Cord Assy	CDE5997	55	Button(-)	CAC6034
11	Cable	CDE5269	56	Keyboard Unit	CWX2070
12			57	LCD	CAW1390
13	Case	CNB2468	58	EL	CEL1488
14	Holder	CNC7005	59	Connector(CN1901)	CKS3580
15	Insulator	CNM5076	60	Holder	CNC7198
16			61	Holder	CNV4772
17	Tuner Amp Unit	CWM6380	62	Connector	CNV4791
18	Screw	BPZ26P100FMC	63	Grille Unit	CXB3510
19	Screw	BSZ26P160FMC	64	Cover Unit	CXB3513
20	Pin Jack(CN251)	CKB1031	65	Button	CAC5180
21	Terminal(CN504)	CKF1059	66	Spring	CBH1834
22	Plug(CN901)	CKM1304	67	Spring	CBH1835
23	Connector(CN651)	CKS2255	68	Spring	CBH1996
24	Connector(CN101)	CKS3408	69	Bracket	CNC6135
25	Connector(CN801)	CKS3581	70	Bracket	CNC6791
26			71	Arm	CNV4692
27	Antenna Jack(CN503)	CKX1056	72	Arm	CNV4693
28	Holder	CNC5013	73	Arm	CNV4951
29	Holder	CNC8021	74	Panel Unit	CXB3507
30	Holder	CNC8278	75	Cover	CNM4875
31	Holder	CNC6892	76	Screw	IMS20P040FZK
32	Holder	CNC7196	77	Chassis Unit	CXA9714
33	Holder	CNC6889	78	Chassis Unit	CXA9718
34	Holder	CNC7001	79	Detach Case Assy	CXB3705
35	Insulator	CNM4684	80	Remote Control Assy	CZX3231
36	Heat Sink	CNR1435	81	Cover	CZN6510
37	FM/AM Tuner Unit	CWE1417	82	CD Mechanism Module	CXK5005
38	Holder	CNC6555	83	Screw	ISS26P060FZK
39	Detach Alarm Unit	CWM5291	84	Transistor(Q971)	2SD2396
40	Plug(CN852)	CKS1617	85	IC(IC201)	PAL005A
41	Connector(CN851)	CKS3585	86	Screw	ISS26P060FMC
42	Holder	CNC6912	87	LED(D851)	BR4361F
43	Detach Grille Assy	CXB3729	88	Bush	CNV-724
44	Screw	BPZ20P100FZK	89	Holder	CNC8190
45	Button	CAC5947	90	Spacer	CNM5385
			*	91 Cushion	CNM5316
			*	92 Cushion	CNM5315
			*	93 Cushion	CNM6297
				94 Spacer	CNM4154

2.3 CD MECHANISM MODULE

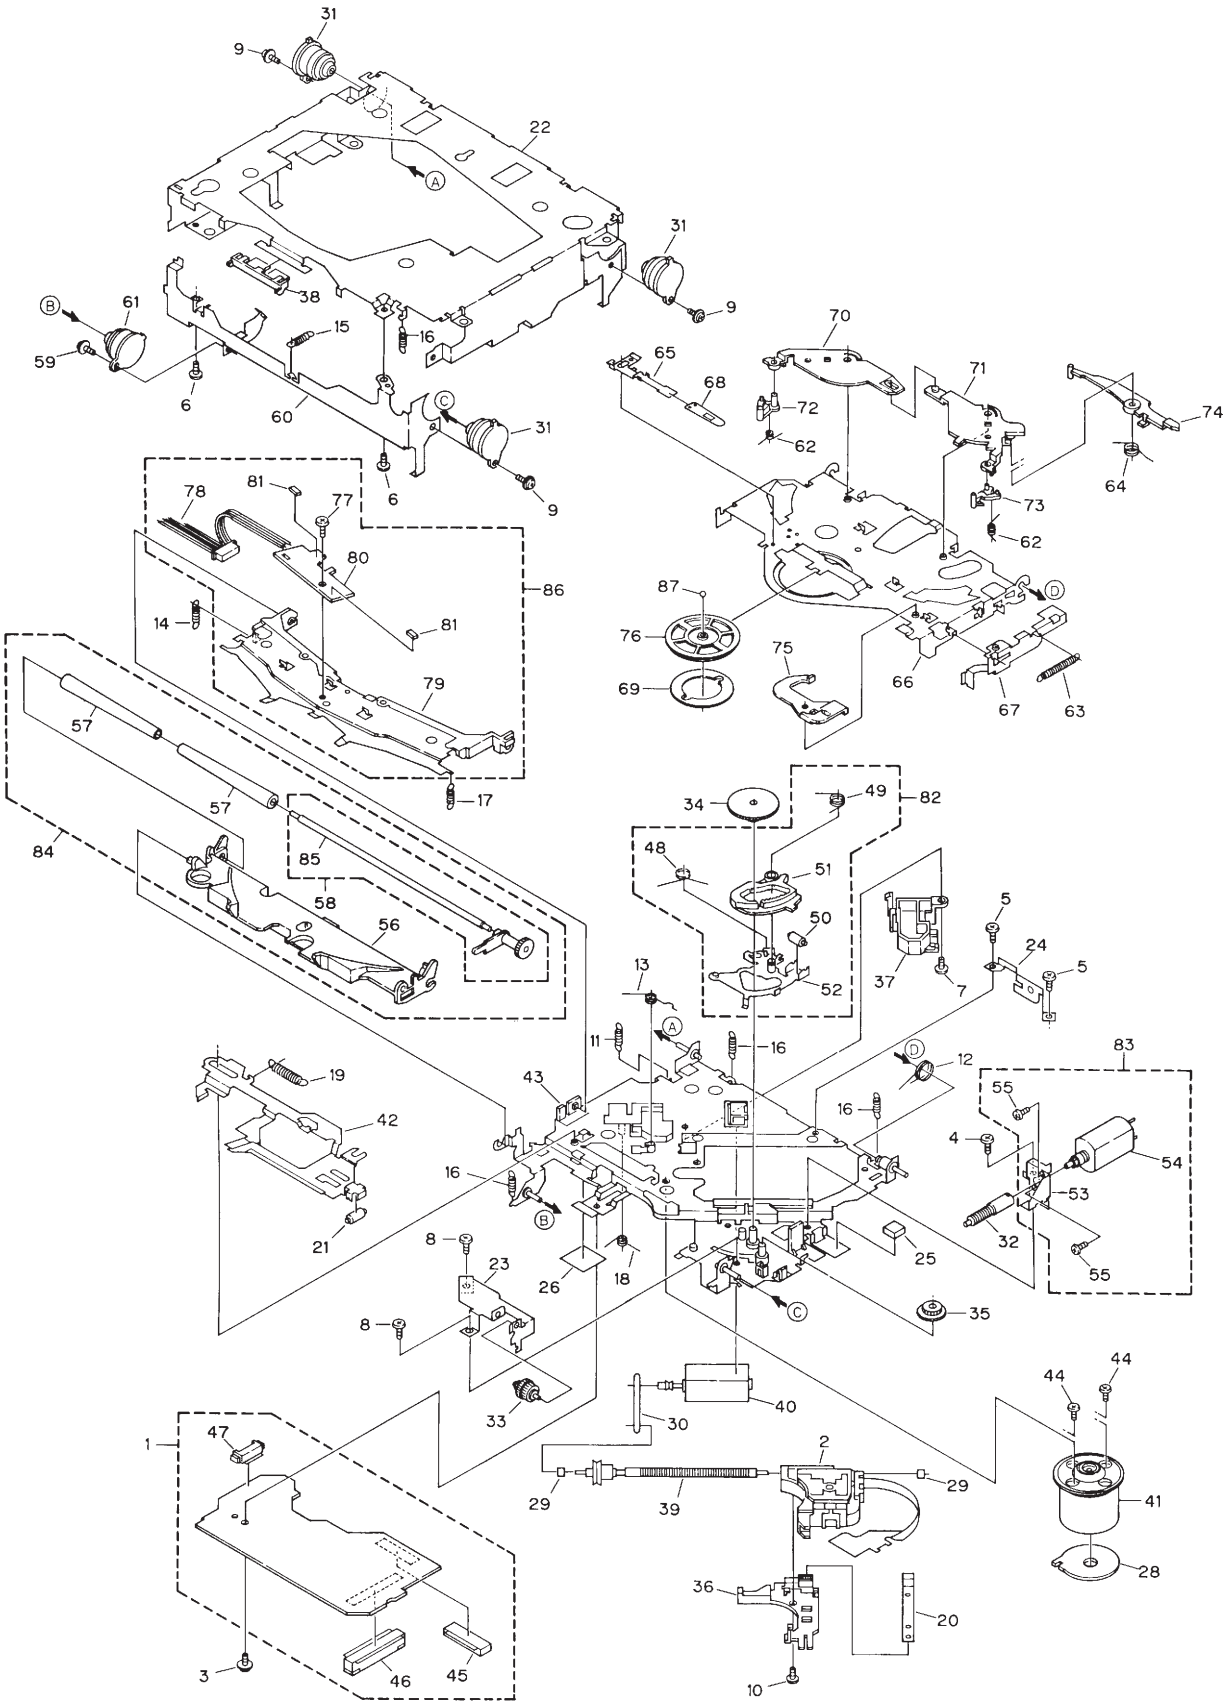

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Control Unit	CWX2268	46	Connector(CN701)	CKS2774
2	Pickup Unit(Service)	CXX1230	47	Connector(CN801)	CKS2196
3	Screw	IMS26P035FMC	48	Spring	CBH1832
4	Screw	BMZ20P025FMC	49	Spring	CBH1833
5	Screw	BMZ20P040FMC	50	Roller	CLA2627
6	Screw	BSZ20P040FMC	51	Arm	CNV4136
7	Screw	CBA1077	52	Arm Unit	CXA8565
8	Screw	CBA1250	53	Bracket	CNC6056
9	Screw	CBA1296	54	Load Motor Unit(S7)(M3)	CXA8702
10	Screw	CBA1362	55	Screw	JFZ20P025FMC
11	Spring	CBH1724	56	Arm	CNV4120
12	Spring	CBH1729	57	Roller	CNV4509
13	Spring	CBH1730	58	Gear Unit(S7)	CXA8701
14	Spring	CBH1731	59	Screw	CBA1455
15	Spring	CBH1732	60	Frame	CNC5797
16	Spring	CBH1745	61	Damper	CNV3974
17	Spring	CBH1848	62	Spring	CBH1736
18	Spring	CBH1849	63	Spring	CBH1863
19	Spring	CBH1939	64	Spring	CBH1945
20	Spring	CBL1214	65	Spring	CBL1326
21	Roller	CLA2627	66	Arm	CNC8364
22	Frame	CNC5796	67	Lever	CNC6054
23	Bracket	CNC5871	68	Spacer	CNM3315
* 24	Bracket	CNC6376	69	Sheet	CNM4849
25	Cushion	CNM3917	70	Arm	CNV5031
26	Sheet	CNM4873	71	Arm	CNV4123
27			72	Arm	CNV4124
* 28	PCB	CNP4230	73	Arm	CNV4125
29	Bearing	CNR1415	74	Arm	CNV4138
30	Belt	CNT1071	75	Arm	CNV5032
31	Damper	CNV3974	76	Clamper	CNV5308
32	Gear	CNV5789	77	Screw	CBA1250
33	Gear	CNV5820	78	Connector(CN1)	CDE4576
34	Gear	CNV4857	79	Arm	CNC7383
35	Gear	CNV5821	* 80	Gathering PCB	CNX2445
36	Holder	CNV4663	81	Photo-transistor(Q1, 2)	CPT-230S-X
37	Holder	CNV5071	82	Elbow Arm Assy(S7)	CXA8889
38	Guide	CNV5823	83	Load Motor Assy(S7)	CXA8891
39	Screw Unit(S7)	CXA8699	84	LO Arm Assy(S7)	CXA8892
40	CRG Motor Unit(S7)(M2)	CXB3043	85	Shaft	CLA3133
41	Motor Unit(M1)	CXA8912	86	Guide Arm Assy(S7)	CXB1850
42	Lever Unit	CXA9300	87	Ball	CNR1189
43	Chassis Unit	CXB2574			
44	Screw	JFZ20P025FMC			
45	Connector(CN101)	CKS1953			

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/OS○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No. Part Name=====	Part No.	====Circuit Symbol & No. Part Name=====	Part No.
B Unit Number : CWE1472 (DEH-P86DHR) Unit Number : CWE1417 (DEH-P76DH) Unit Name : FM/AM Tuner Unit		RESISTORS	
MISCELLANEOUS		R 1	RS1/16S225J
IC 1 IC	PA4023B	R 2	RS1/16S225J
IC 2 IC	PA4024A	R 4	RS1/16S154J
Q 1 Transistor	2SC2412K	R 5	RS1/16S391J
Q 2 Transistor	DTC124EU	R 6	RS1/16S223J
Q 3 FET	3SK263	R 7	RS1/16S123J
Q 31 Transistor	2SC2412K	R 8	RS1/16S332J
Q 201 FET	2SK932	R 9	RS1/16S473J
Q 202 Transistor	2SC2412K	R 10	RS1/16S223J
Q 203 Transistor	DTC124EU	R 11	RS1/16S124J
D 1 Diode	RD39JS	R 13	RS1/16S563J
D 2 Diode	RD39JS	R 15	RS1/16S271J
D 4 Diode	1SV250	R 16	RS1/16S104J
D 5 Diode	KV1410-F1	R 17	RS1/16S332J
D 6 Diode	MA157	R 18	RS1/16S332J
D 7 Diode	KV1410-F1	R 31	RS1/16S470J
D 8 Diode	KV1410-F1	R 32	RS1/16S822J
D 201 Diode	MA157	R 33	RS1/16S822J
D 202 Diode	MA157	R 34	RS1/16S331J
D 231 Diode	SVC253	R 35	RS1/16S331J
L 2 Coil(DEH-P86DHR)	CTC1126	R 51	RS1/16S271J
L 2 Coil(DEH-P76DH)	CTC1108	R 52	RS1/16S560J
L 3 Inductor	LCTB2R2K2125	R 55	RS1/16S102J
L 4 Coil(DEH-P86DHR)	CTC1126	R 56	RS1/16S823J
L 4 Coil(DEH-P76DH)	CTC1108	R 61	RS1/16S392J
L 5 Coil(DEH-P86DHR)	CTC1125	R 62	RS1/16S273J
L 5 Coil(DEH-P76DH)	CTC1107	R 101	RS1/16S272J
L 51 Ferri-Inductor	LAU150K	R 102	RS1/16S682J
L 201 Ferri-Inductor	LAU4R7K	R 103	RS1/16S333J
L 202 Ferri-Inductor	LAU330K	R 104	RS1/16S334J
L 203 Inductor	CTF1287	R 105	RS1/16S683J
L 208 Inductor	LAU121K	R 107	RS1/16S222J
L 231 Inductor	LCTA3R3J3225	R 151	RS1/16S222J
T 31 Coil	CTE1116	R 152	RS1/16S393J
T 51 Coil(DEH-P86DHR)	CTC1159	R 155	RS1/16S273J
T 51 Coil(DEH-P76DH)	CTC1136	R 156	RS1/16S243J
CF 51 Ceramic Filter(DEH-P86DHR)	CTF1442	R 157	RS1/16S203J
CF 51 Ceramic Filter(DEH-P76DH)	CTF1441	R 160	RS1/16S222J
CF 52 Ceramic Filter(DEH-P86DHR)	CTF1442	R 161	RS1/16S563J
CF 52 Ceramic Filter(DEH-P76DH)	CTF1441	R 162	RS1/16S105J
CF 53 Ceramic Filter(DEH-P86DHR)	CTF1442	R 163	RS1/16S223J
CF 53 Ceramic Filter(DEH-P76DH)	CTF1441	R 202	RS1/16S223J
CF 232 Ceramic Filter	CTF1348	R 203	RS1/16S225J
X 151 Resonator 920.5kHz	CSS1365	R 204	RS1/16S103J
X 231 Crystal Resonator 10.26MHz	CSS1111	R 206	RS1/16S220J
VR 154 Semi-fixed 150kΩ(B)	CCP1213	R 207	RS1/16S101J
		R 208	RS1/16S102J
		R 209	RS1/16S471J
		R 214	RS1/16S822J
		R 215	RS1/16S822J

====Circuit Symbol and No. Part	Name=====	Part No.	====Circuit Symbol and No. Part	Name=====	Part No.
R 217		RS1/16S102J	C 161		CKSQYB104K16
R 231		RS1/16S272J	C 162		CEJA3R3M50
R 232		RS1/16S473J	C 163		CKSRYB102K50
R 237		RS1/16S103J	C 170		CCSRCH100D50
R 238		RS1/16S104J	C 201		CCSRCH471J50
R 239		RS1/16S104J	C 202		CCSRCH100D50
R 240		RS1/16S332J	C 203		CKSRYB332K50
R 241		RS1/16S202J	C 204		CKSQYB473K16
R 243		RS1/16S183J	C 205		CKSQYB473K16
R 244		RS1/16S392J	C 206		CKSQYB104K16
R 247		RS1/16S123J	C 207		CCSRCH560J50
CAPACITORS			C 209		CKSQYB104K16
C 1		CCSQCH6R0D50	C 211		CCSRCH101J50
C 2		CCSRCK2R0C50	C 212		CEJA470M6R3
C 4		CCSRCH820J50	C 213		CKSRYB103K25
C 6		CCSRCH820J50	C 216		CCSRCH101J50
C 8		CKSRYB103K25	C 217		CEJA1R5M50
C 9		CKSQYB104K16	C 219		CCSRCH471J50
C 10		CCSRCKR50C50	C 220		CKSRYB103K25
C 11		CEJA1R0M50	C 230		CKSRYB103K25
C 12		CKSRYB222K50	C 231		CCSRCH330J50
C 13		CKSRYB222K50	C 232		CCSRCH150J50
C 14		CCSRCH220J50	C 233		CKSQYB104K16
C 15		CCSRCH6R0D50	C 234		CEJA330M10
C 16		CCSRCH8R0D50	C 235		CKSRYB332K50
C 17		CKSRYB222K50	C 236		CKSQYB473K16
C 18		CKSRYB103K25	C 237		CCSRCH120J50
C 19		CKSRYB222K50	C 239		CKSRYB472K50
C 20		CKSRYB222K50	C 240		CEJAR47M50
C 21		CEJA100M16	C 241		CKSQYB104K16
C 22		CCSRTH9R0D50	C 242		CEJAR47M50
C 23		CCSRTH120J50	C 243		CEJAR33M50
C 24		CCSRCH471J50	C 244		CKSQYB473K16
C 25		CKSRYB103K25	C 245		CKSRYB333K16
C 26		CCSRCH101J50	C 246		CKSQYB473K16
C 31		CKSRYB103K25	C 250		CCSRCH471J50
C 32		CKSQYB472K50			
C 33		CCSRCH5R0C50			
C 34		CKSQYB104K16			
C 36		CCSRRH201J50			
C 51		CKSRYB223K25			
C 52		CKSRYB103K25			
C 54		CCSRCH470J50			
C 55		CKSQYB223K25			
C 56		CKSQYB104K16			
C 57		CKSRYB472K50			
C 58		CEJA330M10			
C 59		CKSRYB103K25			
C 60	(DEH-P76DH)	CKSRYB102K50			
C 61		CCSRCH270J50			
C 62		CKSRYB103K25			
C 63		CEJAR22M50			
C 101		CEJANP100M10			
C 102		CKSRYB182K50			
C 103		CKSRYB682K25			
C 104		CEJA2R2M50			
C 105		CKSRYB103K25			
C 106		CCSRCH151J50			
C 107		CKSRYB103K25			
C 151		CKSRYB472K50			
C 152		CKSQYB104K16			
C 153		CEJA3R3M50			
C 154		CKSQYB104K16			
C 157		CEJA3R3M50			
C 158		CKSYB474K16			
C 159		CEJA220M6R3			
C 160		CKSQYB104K16			



Unit Number : CWX2268
Unit Name : Control Unit

MISCELLANEOUS

IC 101	IC	UPC2572GS
IC 201	IC	UPD63702AGF
IC 301	IC	BA6997FM
IC 302	IC	BA6285FP
IC 601	IC	TA2063F
IC 701	IC	BA05SFP
Q 101	Transistor	2SD1664
Q 102	Transistor	MA151WA
Q 601	Transistor	2SD1781K
Q 602	Transistor	2SD1781K
Q 603	Transistor	2SB709A
D 601	Diode	MA151WA
D 701	Diode	1SR154-400
D 801	Chip LED	CL200IRX
D 802	Chip LED	CL200IRX
X 201	Ceramic Resonator 16.93MHz	CSS1363
S 801	Switch (Home)	CSN1028
S 802	Spring Switch (Clamp)	CSN1044

RESISTORS

R 101	RS1/8S100J
R 102	RS1/8S120J
R 103	RS1/16S102J
R 104	RS1/16S822J
R 105	RS1/16S682J

====Circuit Symbol and No. Part Name=====	Part No.	====Circuit Symbol and No. Part Name=====	Part No.
R 106	RS1/16S183J	C 605	CKSRYB152K50
R 107	RS1/16S822J	C 606	CKSRYB152K50
R 108	RS1/16S333J	C 607	CEV220M6R3
R 109	RS1/16S683J	C 701	CCH1300
R 110	RS1/16S134J	C 702	CKSYB334K16
R 111	RS1/16S273J	C 703	CEV101M6R3
R 112	RS1/16S222J	C 901	CCSRCH471J50
R 113	RS1/16S103J	C 902	CCSRCH271J50
R 114	RS1/16S103J	C 903	CCSRCH471J50
R 115	RS1/16S102J	C 904	CCSRCH101J50
R 116	RS1/16S163J	F Unit Number : CWM5291 Unit Name : Detach Alarm Unit	
R 117	RS1/16S163J		
R 201	RS1/16S104J		
R 202	RS1/16S473J		
R 501	RS1/16S0R0J		
MISCELLANEOUS			
R 505	RS1/16S102J	IC 851	IC TPD1018F
R 507	RA3C102J	IC 852	IC TPD1018F
R 508	RA4C681J	Q 851	Transistor IMD2A
R 601	RS1/16S102J	Q 852	Transistor DTC123EK
R 602	RS1/16S102J	Q 853	Transistor DTC123EK
R 603	RS1/16S223J	Q 854	Transistor DTC123EK
R 604	RS1/16S223J	D 858	Diode ERA15-02VH
R 605	RS1/16S162J	D 859	Diode ERA15-02VH
R 606	RS1/16S162J	D 860	Diode ERA15-02VH
R 607	RS1/16S103J	D 861	Diode ERA15-02VH
R 801	RS1/8S751J	RESISTORS	
R 802	RS1/8S751J	R 852	RS1/10S103J
CAPACITORS			
C 101	CEV101M6R3	R 853	RS1/10S103J
C 102	CKSQYB104K16	R 854	RS1/10S223J
C 103	CEV470M6R3	R 856	RS1/10S163J
C 104	CKSYB334K16	R 858	RS1/10S163J
C 105	CCSRCH330J50	R 860	RS1/10S103J
C 106	CKSRYB103K25	R 861	RS1/10S103J
C 107	CEV4R7M35	R 862	RS1/8S102J
C 108	CKSQYB273K50	R 863	RS1/8S102J
C 109	CCSRCH101J50	R 864	RS1/8S102J
C 110	CKSQYB104K16	CAPACITORS	
C 111	CKSRYB332K50	C 852	CKSQYB473K25
C 112	CKSQYB473K16	C 854	CKSQYB473K25
C 113	CKSRYB103K25	C 855	CKSQYB103K50
C 114	CKSRYB391K50	C 856	CKSQYB103K50
C 115	CCSRCH121J50	C 857	CKSQYB103K50
C 116	CKSRYB682K50	A Unit Number : CWM6379(DEH-P86DHR) Unit Name : Tuner Amp Unit	
C 117	CKSRYB333K16		
C 118	CKSYB334K16		
C 119	CKSYB334K16		
C 120	CKSYB334K16		
MISCELLANEOUS			
C 121	CKSYB334K16	IC 101	IC TA2050S
C 122	CKSQYB104K16	IC 102	IC CA0008AM
C 123	CKSRYB472K50	IC 151	IC SN761027DL
C 124	CKSQYB104K16	IC 201	IC PAL005A
C 125	CCSRCH6R0D50	IC 271	IC M5282FP
C 126	CKSRYB153K25	IC 272	IC MC14052BF
C 127	CCSRCH102J25	IC 273	IC NJM2068MD
C 201	CKSYB334K16	IC 501	IC LC72146M
C 202	CKSQYB104K16	IC 601	IC PD4722B
C 203	CKSQYB104K16	IC 661	IC PD4623B
C 303	CEV470M16	IC 701	IC PD6191A
C 304	CKSRYB103K25	IC 731	IC PMW001B
C 305	CKSRYB103K25	IC 751	IC PD8027A
C 306	CKSRYB103K25	IC 941	IC S-80734ANDYI
C 307	CEV100M25	Q 101	Transistor 2SA1037K
C 502	CKSRYB471K50	Q 102	Transistor DTC124EK
C 601	CEV101M6R3	Q 201	Transistor DTC124EK
C 602	CKSQYB104K16	Q 251	Transistor IMH3A
C 603	CEV4R7M35	Q 252	Transistor IMH3A
C 604	CEV4R7M35	Q 253	Transistor IMD2A

DEH-P86DHR,P76DH

====Circuit Symbol and No. Part Name=====			Part No.	====Circuit Symbol and No. Part Name=====			Part No.
Q	271	Transistor	DTC343TK	L	751	Inductor	LAU100K
Q	301	Transistor	DTA124EK	L	801	Ferri-Inductor	LAU2R2K
Q	302	Transistor	IMH3A	L	802	Transformer	MTX9005
Q	501	Transistor	2SC2412K	L	901	Choke Coil 600μH	CTH1171
Q	502	Transistor	2SK208	X	501	Crystal Resonator 7.2MHz	CSS1334
Q	503	Transistor	2SC2412K	X	601	Ceramic Resonator 6.29MHz	CSS1310
Q	601	Transistor	DTC124EK	X	661	Resonator 8.380MHz	CSS1354
Q	661	Transistor	DTA124EK	X	701	Crystal Resonator 4.332MHz	CSS1056
Q	801	Transistor	2SA1037K	S	941	Switch(Reset)	CSG1059
Q	802	Transistor	2SD1760F5			FM/AM Tuner Unit	CWE1472
Q	803	Transistor	DTC114EK			Detach Alarm Unit	CWM5291
Q	804	Transistor	DTA143EK	BZ	601	Buzzer	CPV1011
Q	805	Transistor	DTC114EK				
Q	806	Transistor	2SC2412K	RESISTORS			
Q	807	Transistor	2SB1238				
Q	808	Transistor	DTC143EK	R	101		RS1/10S620J
Q	809	Transistor	2SD1864	R	102		RS1/10S101J
Q	911	Transistor	2SD1760F5	R	103		RS1/10S101J
Q	921	Transistor	IMX1	R	104		RS1/10S222J
Q	922	Transistor	DTC114EK	R	105		RS1/10S122J
Q	941	Transistor	DTA144TK	R	106		RS1/10S122J
Q	951	Transistor	2SD2396	R	107		RS1/10S181J
Q	952	Transistor	2SB1243	R	108		RS1/10S181J
Q	953	Transistor	DTC124EK	R	109		RS1/10S153J
Q	954	Transistor	2SA1674	R	110		RS1/10S153J
Q	955	Transistor	2SA1674	R	111		RS1/10S222J
Q	956	Transistor	IMH1A	R	112		RS1/10S222J
Q	957	Transistor	2SC2412K	R	113		RS1/10S102J
Q	958	Transistor	DTC144EK	R	114		RS1/10S102J
Q	971	Transistor	2SD2396	R	115		RS1/10S473J
Q	972	Transistor	IMD2A	R	116		RS1/10S473J
D	201	Diode	DAN202K	R	117		RS1/10S332J
D	501	Diode	DAN202K	R	118		RS1/10S682J
D	502	Diode	HZS3LL(B)	R	119		RS1/10S103J
D	731	Diode	MA3047(M)	R	133		RS1/10S162J
D	801	Diode	DA204K	R	134		RS1/10S162J
D	802	Diode	DA204K	R	151		RS1/10S272J
D	803	Diode	DA204K	R	152		RS1/10S272J
D	804	Diode	MA3062(M)	R	153		RS1/10S151J
D	805	Diode	HZS9L(B3)	R	154		RS1/10S151J
D	806	Diode	HZS5LL(A)	R	201		RS1/10S103J
D	851	LED	BR4361F	R	202		RS1/10S331J
D	901	Diode	ERA15-02VH	R	204		RS1/10S103J
D	902	Diode	ERA15-02VH	R	205		RS1/10S103J
D	911	Diode	ERA15-02VH	R	251		RS1/10S821J
D	912	Diode	HZS6L(B1)	R	252		RS1/10S821J
D	921	Diode	HZS7L(C3)	R	253		RS1/10S471J
D	922	Diode	1SS133	R	254		RS1/10S471J
D	923	Diode	HZS7L(A1)	R	255		RS1/10S223J
D	931	Diode	ERA15-02VH	R	256		RS1/10S223J
D	932	Diode	ERA15-02VH	R	257		RS1/10S223J
D	941	Diode	DAN212K	R	258		RS1/10S223J
D	951	Diode	HZS9L(B3)	R	271		RS1/10S183J
D	952	Diode	HZS9L(A2)	R	272		RS1/10S183J
D	953	Diode	1SS133	R	273		RS1/10S103J
D	971	Diode	HZS9L(B1)	R	274		RS1/10S243J
L	101	Inductor	LAU3R3K	R	275		RS1/10S683J
L	501	Ferri-Inductor	LAU2R2K	R	276		RS1/10S473J
L	502	Ferri-Inductor	LAU220K	R	277		RS1/10S103J
L	503	Inductor	LCTBR39K2125	R	278		RS1/10S103J
L	601	Ferri-Inductor	LAU2R2K	R	279		RS1/10S104J
L	602	Inductor	LAU100K	R	280		RS1/10S104J
L	661	Ferri-Inductor	LAU2R2K	R	281		RS1/10S104J
L	701	Inductor	LAU2R2K	R	282		RS1/10S104J
L	731	Ferri-Inductor	LAU100K	R	283		RS1/10S104J

====Circuit Symbol and No. Part	Name=====	Part No.	====Circuit Symbol and No. Part	Name=====	Part No.
R 284		RS1/10S104J	R 671		RS1/10S473J
R 285		RS1/10S105J	R 672		RS1/10S222J
R 286		RS1/10S821J	R 673		RS1/10S473J
R 287		RS1/10S223J	R 674		RS1/10S473J
R 301		RS1/10S471J	R 701		RS1/10S681J
R 302		RS1/10S471J	R 702		RS1/10S681J
R 303		RS1/10S104J	R 703		RS1/10S222J
R 304		RS1/10S104J	R 704		RS1/10S105J
R 501		RS1/10S102J	R 705		RS1/10S681J
R 502		RS1/10S102J	R 706		RS1/10S0R0J
R 503		RS1/10S102J	R 710		RS1/10S473J
R 506		RS1/10S103J	R 711		RA3C681J
R 508		RS1/10S472J	R 712		RS1/10S0R0J
R 509		RS1/10S152J	R 713		RS1/10S473J
R 510		RS1/10S102J	R 714		RA4C473J
R 511		RS1/10S472J	R 731		RA3C102J
R 512		RS1/10S103J	R 732		RS1/10S681J
R 513		RS1/10S102J	R 733		RS1/10S393J
R 515		RS1/10S103J	R 735		RS1/10S102J
R 516		RS1/10S222J	R 736		RD1/4PU151J
R 517		RS1/10S473J	R 751		RS1/10S473J
R 518		RS1/10S473J	R 752		RS1/10S473J
R 519		RS1/10S473J	R 753		RS1/10S473J
R 520		RS1/10S224J	R 802		RS1/8S222J
R 521		RS1/10S473J	R 804		RS1/8S472J
R 522		RS1/10S473J	R 806		RS1/8S472J
R 523		RS1/10S472J	R 808		RS1/10S472J
R 524		RS1/10S472J	R 809		RS1/10S472J
R 525		RS1/10S222J	R 810		RS2PMF100J
R 526		RS1/10S223J	R 811		RD1/4PU471J
R 601		RS1/10S473J	R 812		RS1/10S103J
R 602		RS1/10S473J	R 813		RS1/10S224J
R 603		RS1/10S473J	R 814		RS1/10S222J
R 604		RS1/10S473J	R 815		RD1/4PU102J
R 605		RS1/10S473J	R 816		RS1/10S391J
R 606		RS1/10S473J	R 817		RS1/10S752J
R 607		RS1/10S473J	R 818		RS1/10S104J
R 608		RS1/10S221J	R 819		RS2P300JL
R 609		RS1/10S682J	R 851		RS1/8S331J
R 610		RA4C221J	R 865		RS1/10S103J
R 611		RS1/10S682J	R 866		RS1/10S102J
R 613		RS1/10S682J	R 867		RS1/10S473J
R 615		RS1/10S682J	R 868		RS1/10S473J
R 617		RA4C681J	R 869		RS1/10S473J
R 623		RS1/10S473J	R 911		RS1/10S332J
R 624		RS1/10S102J	R 912		RS1/10S101J
R 625		RS1/10S202J	R 921		RS1/10S103J
R 626		RS1/10S473J	R 922		RS1/10S473J
R 627		RS1/10S473J	R 923		RS1/10S103J
R 628		RS1/10S473J	R 924		RS1/10S103J
R 629		RS1/10S473J	R 925		RS1/10S473J
R 630		RS1/10S222J	R 926		RS1/10S472J
R 631		RS1/10S473J	R 931		RS1/10S103J
R 633		RS1/10S473J	R 941		RS1/10S102J
R 634		RS1/10S473J	R 942		RS1/10S822J
R 637		RS1/10S393J	R 943		RS1/8S471J
R 651		RS1/10S681J	R 944		RS1/10S473J
R 652		RS1/10S102J	R 951		RD1/4PU221J
R 653		RS1/10S102J	R 952		RD1/4PU301J
R 654		RS1/10S102J	R 953		RS1/10S1R0J
R 662		RS1/10S473J	R 954		RD1/4PU331J
R 663		RS1/10S222J	R 955		RD1/4PU331J
R 668		RS1/10S103J	R 956		RS1/8S472J
R 669		RS1/10S203J	R 957		RD1/4PU102J
R 670		RS1/10S222J	R 958		RS1/10S472J

====Circuit Symbol and No. Part	Name=====	Part No.	====Circuit Symbol and No. Part	Name=====	Part No.
R 959		RD1/4PU102J	C 274		CEJA4R7M35
R 960		RS1/10S472J	C 275		CEJANP220M10
R 961		RS1/10S103J	C 276		CKSQYB222K50
R 962		RS1/10S473J	C 277		CKSQYB183K25
R 963		RS1/10S473J	C 278		CKSQYB473K25
R 971		RD1/4PU221J	C 279		CKSQYB273K25
R 972		RS1/10S221J	C 280		CKSQYB103K50
R 973		RS1/10S472J	C 281		CKSQYB223K25
R 974		RS1/8S122J	C 282		CKSQYB153K50
			C 283		CEAS4R7M25
CAPACITORS			C 284		CKSQYB104K16
C 103		CEJA1R0M50	C 285		CKSYB105K16
C 104		CEJA1R0M50	C 301		CEJA3R3M50
C 105		CEJA1R0M50	C 302		CEJA3R3M50
C 106		CEJA1R0M50	C 501		CKSQYB223K25
C 107		CEJA100M16			
C 108		CKSQYB473K25	C 502		CKSQYB223K25
C 109		CKSQYB104K16	C 503		CKSQYB103K50
C 131		CEJA4R7M35	C 504		CKSQYB103K50
C 132		CEJA4R7M35	C 505		CKSQYB103K50
C 133		CKSQYB473K25	C 506		CKSQYB473K25
C 134		CKSQYB473K25	C 507		CKSQYB102K50
C 135		CEJA4R7M35	C 509		CKLSR473K16
C 136		CEJA4R7M35	C 510		CKSQYB103K50
C 137		CEJA4R7M35	C 512		CEJA100M16
C 138		CEJA4R7M35	C 513		CKSQYB103K50
C 151		CKSQYB104K16	C 514		CCSQCH101J50
C 152		CEAS470M10	C 515		CCSQCH101J50
C 153		CEJANP100M10	C 516		CKSQYB103K50
C 154		CEJANP100M10	C 518	4.7μF/16V	CCH1250
C 155		CKSQYB822K50	C 519		CKSQYB103K50
C 156		CKSQYB822K50	C 520		CCSQCH150J50
C 157		CEJA1R0M50	C 521		CCSQCH150J50
C 158		CEJA1R0M50	C 522		CKSQYB223K25
C 159		CKSQYB183K25	C 603		CEJA100M16
C 160		CKSQYB183K25	C 604		CKSQYB103K50
C 161		CKSQYB102K50	C 605		CCSQCH101J50
C 162		CKSQYB102K50	C 606		CCSQCH101J50
C 163		CEJANP2R2M35	C 607		CASA1R0M16
C 164		CEJANP2R2M35	C 609		CCSQCH101J50
C 165		CKSQYB333K25	C 661		CCSQCH101J50
C 166		CKSQYB333K25	C 662		CEJA4R7M35
C 167		CEJA220M6R3	C 663		CKSQYB104K16
C 168		CEJA2R2M50	C 664		CKSQYB473K25
C 169		CKSQYB104K16	C 702		CCSQCH270J50
C 201		CKSYB224K16	C 703		CCSQCH270J50
C 202		CKSYB224K16	C 705		CKSYB473K16
C 203		CKSYB224K16	C 706		CKSQYB473K25
C 204		CKSYB224K16	C 708		CKSQYB104K16
C 205		CEHAR010M50	C 731		CEJA100M16
C 206	3300μF/16V	CCH1163	C 733		CKSQYB102K50
C 207		CKSQYB103K50	C 734		CKSQYB472K50
C 208		CEHAR100M16	C 735		CKSQYB104K16
C 209		CKSYB105K16	C 736		CKSYB105K16
C 210		CEHAR330M10	C 737		CKSQYB104K16
C 251		CEJA4R7M35	C 738		CEJA100M16
C 252		CEJA4R7M35	C 751		CEJA100M16
C 253		CEJA4R7M35	C 752		CKSQYB103K50
C 254		CEJA4R7M35	C 753		CKSYB103K50
C 255		CKSQYB221K50	C 801		CKSYB104K16
C 256		CKSQYB221K50	C 802		CCSQCH101J50
C 257		CKSQYB221K50	C 803		CEHAR100M16
C 258		CKSQYB221K50	C 804		CKSQYB103K50
C 271		CEAS220M10	C 805		CEHAR100M16
C 272		CEAS101M10	C 806		CKSQYB103K50
C 273		CKSQYB472K50	C 807		CKSQYB333K25

====Circuit Symbol and No. Part Name=====			Part No.	====Circuit Symbol and No. Part Name=====			Part No.	
C	808		CKSQYB333K25	Q	955	Transistor	2SA1674	
C	809		CEJANP4R7M16	Q	956	Transistor	IMH1A	
C	858		CKSQYB473K25	Q	957	Transistor	2SC2412K	
C	901		CKSQYB103K50	Q	958	Transistor	DTC144EK	
C	911		CKSQYB103K50	Q	971	Transistor	2SD2396	
C	912	0.22F/5.5V	CCL1037					
				Q	972	Transistor	IMD2A	
C	913		CKSQYB472K50	D	201	Diode	DAN202K	
C	914		CEHAQ102M16	D	501	Diode	DAN202K	
C	915		CEAS470M10	D	502	Diode	HZS3LL(B)	
C	921		CKSYB105K16	D	801	Diode	DA204K	
C	922		CKSYB102K50					
				D	802	Diode	DA204K	
C	931		CKSQYB473K25	D	803	Diode	DA204K	
C	941		CEJA2R2M50	D	804	Diode	MA3062(M)	
C	951		CKSQYB103K50	D	805	Diode	HZS9L(B3)	
C	952		CEHAQ101M16	D	806		HZS5LL(A)	
C	953		CKSQYB103K50					
				D	851	LED	BR4361F	
C	954	330μF/10V	CCH1181	D	901	Diode	ERA15-02VH	
C	971		CKSQYB473K25	D	902	Diode	ERA15-02VH	
C	972		CKSQYB102K50	D	911	Diode	ERA15-02VH	
C	973		CEAS101M10	D	912	Diode	HZS6L(B1)	
				D	921	Diode	HZS7L(C3)	
				D	922	Diode	1SS133	
				D	923	Diode	HZS7L(A1)	
				D	931	Diode	ERA15-02VH	
				D	932	Diode	ERA15-02VH	
MISCELLANEOUS								
IC	101	IC	TA2050S	D	941	Diode	DAN212K	
IC	102	IC	CA0008AM	D	951	Diode	HZS9L(B3)	
IC	151	IC	SN761027DL	D	952	Diode	HZS9L(A2)	
IC	201	IC	PAL005A	D	953	Diode	1SS133	
IC	501	IC	LC72146M	D	971	Diode	HZS9L(B1)	
IC	601	IC	PD4754B	L	101	Inductor	LAU3R3K	
IC	661	IC	PD4623B	L	501	Ferri-Inductor	LAU2R2K	
IC	701	IC	PD6194A	L	502	Ferri-Inductor	LAU220K	
IC	751	IC	PD8027A	L	503	Inductor	LCTBR39K2125	
IC	941	IC	S-80734ANDYI	L	601	Ferri-Inductor	LAU2R2K	
Q	101	Transistor	2SA1037K	L	602	Inductor	LAU100K	
Q	102	Transistor	DTC124EK	L	661	Ferri-Inductor	LAU2R2K	
Q	201	Transistor	DTC124EK	L	701	Inductor	LAU100K	
Q	251	Transistor	IMH3A	L	751	Inductor	LAU100K	
Q	252	Transistor	IMH3A	L	801	Ferri-Inductor	LAU2R2K	
Q	253	Transistor	IMD2A	L	802	Transformer	MTX9005	
Q	301	Transistor	DTA124EK	L	901	Choke Coil 600μH	CTH1171	
Q	302	Transistor	IMH3A	X	501	7.2MHz	CSS1334	
Q	501	Transistor	2SC2412K	X	601	Ceramic Resonator 6.29MHz	CSS1310	
Q	502	Transistor	2SK208	X	661	Resonator 8.380MHz	CSS1354	
Q	503	Transistor	2SC2412K	X	701	Crystal Resonator 4.330MHz	CSS1338	
Q	601	Transistor	DTC124EK	S	941	Switch(Reset)	CSG1059	
Q	661	Transistor	DTA124EK			FM/AM Tuner Unit	CWE1417	
Q	801	Transistor	2SA1037K			Detach Alarm Unit	CWM5291	
Q	802	Transistor	2SD1760F5	BZ	601	Buzzer	CPV1011	
Q	803	Transistor	DTC114EK	RESISTORS				
Q	804	Transistor	DTA143EK					
Q	805	Transistor	DTC114EK	R	101		RS1/10S620J	
Q	806	Transistor	2SC2412K	R	102		RS1/10S101J	
Q	807	Transistor	2SB1238	R	103		RS1/10S101J	
				R	104		RS1/10S222J	
				R	105		RS1/10S122J	
Q	808	Transistor	DTC143EK					
Q	809	Transistor	2SD1864					
Q	911	Transistor	2SD1760F5	R	106		RS1/10S122J	
Q	921	Transistor	IMX1	R	107		RS1/10S181J	
Q	922	Transistor	DTC114EK	R	108		RS1/10S181J	
				R	109		RS1/10S153J	
				R	110		RS1/10S153J	
Q	941	Transistor	DTA144TK					
Q	951	Transistor	2SD2396					
Q	952	Transistor	2SB1243	R	111		RS1/10S222J	
Q	953	Transistor	DTC124EK	R	112		RS1/10S222J	
Q	954	Transistor	2SA1674	R	113		RS1/10S102J	
				R	114		RS1/10S102J	
				R	115		RS1/10S473J	

====Circuit Symbol and No. Part	Name=====	Part No.	====Circuit Symbol and No. Part	Name=====	Part No.
R 116		RS1/10S473J	R 626		RS1/10S473J
R 117		RS1/10S332J	R 627		RS1/10S473J
R 118		RS1/10S682J	R 628		RS1/10S473J
R 119		RS1/10S103J	R 629		RS1/10S473J
R 133		RS1/10S162J	R 630		RS1/10S222J
R 134		RS1/10S162J	R 631		RS1/10S473J
R 151		RS1/10S272J	R 633		RS1/10S473J
R 152		RS1/10S272J	R 635		RS1/10S473J
R 153		RS1/10S151J	R 637		RS1/10S393J
R 154		RS1/10S151J	R 651		RS1/10S681J
R 201		RS1/10S103J	R 652		RS1/10S102J
R 202		RS1/10S331J	R 653		RS1/10S102J
R 204		RS1/10S103J	R 654		RS1/10S102J
R 205		RS1/10S103J	R 662		RS1/10S473J
R 251		RS1/10S821J	R 663		RS1/10S222J
R 252		RS1/10S821J	R 668		RS1/10S103J
R 253		RS1/10S471J	R 669		RS1/10S203J
R 254		RS1/10S471J	R 670		RS1/10S222J
R 255		RS1/10S223J	R 671		RS1/10S473J
R 256		RS1/10S223J	R 672		RS1/10S222J
R 257		RS1/10S223J	R 673		RS1/10S473J
R 258		RS1/10S223J	R 674		RS1/10S473J
R 301		RS1/10S471J	R 701		RS1/10S681J
R 302		RS1/10S471J	R 702		RS1/10S681J
R 303		RS1/10S104J	R 703		RS1/10S0R0J
R 304		RS1/10S104J	R 704		RS1/10S105J
R 501		RS1/10S102J	R 705		RS1/10S681J
R 502		RS1/10S102J	R 706		RS1/10S0R0J
R 503		RS1/10S102J	R 710		RS1/10S473J
R 506		RS1/10S103J	R 711		RA3C681J
R 508		RS1/10S472J	R 713		RS1/10S473J
R 509		RS1/10S152J	R 714		RA4C473J
R 510		RS1/10S102J	R 751		RS1/10S473J
R 511		RS1/10S472J	R 752		RS1/10S473J
R 512		RS1/10S103J	R 753		RS1/10S473J
R 513		RS1/10S102J	R 802		RS1/8S222J
R 515		RS1/10S103J	R 804		RS1/8S472J
R 516		RS1/10S222J	R 806		RS1/8S472J
R 517		RS1/10S473J	R 808		RS1/10S472J
R 518		RS1/10S473J	R 809		RS1/10S472J
R 519		RS1/10S473J	R 810		RS2PMF100J
R 520		RS1/10S224J	R 811		RD1/4PU471J
R 521		RS1/10S473J	R 812		RS1/10S103J
R 522		RS1/10S473J	R 813		RS1/10S224J
R 523		RS1/10S472J	R 814		RS1/10S222J
R 524		RS1/10S472J	R 815		RD1/4PU102J
R 525		RS1/10S222J	R 816		RS1/10S391J
R 526		RS1/10S223J	R 817		RS1/10S752J
R 601		RS1/10S473J	R 818		RS1/10S104J
R 602		RS1/10S473J	R 819		RS2P300JL
R 603		RS1/10S473J	R 851		RS1/8S331J
R 604		RS1/10S473J	R 865		RS1/10S103J
R 605		RS1/10S473J	R 866		RS1/10S102J
R 606		RS1/10S473J	R 867		RS1/10S473J
R 607		RS1/10S473J	R 868		RS1/10S473J
R 608		RS1/10S221J	R 869		RS1/10S473J
R 609		RS1/10S682J	R 911		RS1/10S332J
R 610		RA4C221J	R 912		RS1/10S101J
R 611		RS1/10S682J	R 921		RS1/10S103J
R 613		RS1/10S682J	R 922		RS1/10S473J
R 615		RS1/10S682J	R 923		RS1/10S103J
R 617		RA4C681J	R 924		RS1/10S103J
R 623		RS1/10S473J	R 925		RS1/10S473J
R 624		RS1/10S102J	R 926		RS1/10S472J
R 625		RS1/10S202J	R 931		RS1/10S103J

====Circuit Symbol and No. Part	Name=====	Part No.	====Circuit Symbol and No. Part	Name=====	Part No.
R 941		RS1/10S102J	C 252		CEJA4R7M35
R 942		RS1/10S822J	C 253		CEJA4R7M35
R 943		RS1/8S471J	C 254		CEJA4R7M35
R 944		RS1/10S473J	C 255		CKSQYB221K50
R 951		RD1/4PU221J	C 256		CKSQYB221K50
R 952		RD1/4PU301J	C 257		CKSQYB221K50
R 953		RS1/10S1R0J	C 258		CKSQYB221K50
R 954		RD1/4PU331J	C 301		CEJA3R3M50
R 955		RD1/4PU331J	C 302		CEJA3R3M50
R 956		RS1/8S472J	C 501		CKSQYB223K25
R 957		RD1/4PU102J	C 502		CKSQYB223K25
R 958		RS1/10S472J	C 503		CKSQYB103K50
R 959		RD1/4PU102J	C 504		CKSQYB103K50
R 960		RS1/10S472J	C 505		CKSQYB103K50
R 961		RS1/10S103J	C 506		CKSQYB473K25
R 962		RS1/10S473J	C 507		CKSQYB102K50
R 963		RS1/10S473J	C 509		CKLSR473K16
R 971		RD1/4PU221J	C 510		CKSQYB103K50
R 972		RS1/10S221J	C 512		CEJA100M16
R 973		RS1/10S472J	C 513		CKSQYB103K50
R 974		RS1/8S122J	C 514		CCSQCH101J50
CAPACITORS			C 515		CCSQCH101J50
			C 516		CKSQYB103K50
			C 518	4.7μF/16V	CCH1250
			C 519		CKSQYB103K50
C 103		CEJA1R0M50			
C 104		CEJA1R0M50			
C 105		CEJA1R0M50	C 520		CCSQCH150J50
C 106		CEJA1R0M50	C 521		CCSQCH150J50
C 107		CEJA100M16	C 522		CKSQYB223K25
			C 603		CEJA100M16
C 108		CKSQYB473K25	C 604		CKSQYB103K50
C 109		CKSQYB104K16			
C 131		CEJA4R7M35	C 605		CCSQCH101J50
C 132		CEJA4R7M35	C 606		CCSQCH101J50
C 133		CKSQYB473K25	C 607		CASA1R0M16
			C 609		CCSQCH101J50
C 134		CKSQYB473K25	C 661		CCSQCH101J50
C 135		CEJA4R7M35			
C 136		CEJA4R7M35	C 662		CEJA4R7M35
C 137		CEJA4R7M35	C 663		CKSQYB104K16
C 138		CEJA4R7M35	C 664		CKSQYB473K25
			C 705		CKSYB473K16
C 151		CKSQYB104K16	C 706		CKSQYB473K25
C 152		CEAS470M10			
C 153		CEJANP100M10	C 708		CKSQYB104K16
C 154		CEJANP100M10	C 751		CEJA100M16
C 155		CKSQYB822K50	C 752		CKSQYB103K50
			C 753		CKSYB103K50
C 156		CKSQYB822K50	C 801		CKSYB104K16
C 157		CEJA1R0M50			
C 158		CEJA1R0M50	C 802		CCSQCH101J50
C 159		CKSQYB183K25	C 803		CEHAR100M16
C 160		CKSQYB183K25	C 804		CKSQYB103K50
			C 805		CEHAR100M16
C 161		CKSQYB102K50	C 806		CKSQYB103K50
C 162		CKSQYB102K50			
C 163		CEJANP2R2M35	C 807		CKSQYB333K25
C 164		CEJANP2R2M35	C 808		CKSQYB333K25
C 165		CKSQYB333K25	C 809		CEJANP4R7M16
			C 858		CKSQYB473K25
C 166		CKSQYB333K25	C 901		CKSQYB103K50
C 167		CEJA220M6R3			
C 168		CEJA2R2M50	C 911		CKSQYB103K50
C 169		CKSQYB104K16	C 912	0.22F/5.5V	CCL1037
C 201		CKSYB224K16	C 913		CKSQYB472K50
			C 914		CEHAQ102M16
C 202		CKSYB224K16	C 915		CEAS470M10
C 203		CKSYB224K16			
C 204		CKSYB224K16	C 921		CKSYB105K16
C 205		CEHAR010M50	C 922		CKSYB102K50
C 206	3300μF/16V	CCH1163	C 931		CKSQYB473K25
			C 941		CEJA2R2M50
C 207		CKSQYB103K50	C 951		CKSQYB103K50
C 208		CEHAR100M16			
C 209		CKSYB105K16			
C 210		CEHAR330M10			
C 251		CEJA4R7M35			

DEH-P86DHR,P76DH

====Circuit Symbol and No. Part	Name=====	Part No.
C 952		CEHAQ101M16
C 953		CKSQYB103K50
C 954	330μF/10V	CCH1181
C 971		CKSQYB473K25
C 972		CKSQYB102K50
C 973		CEAS101M10
C	Unit Number : CWX2069(DEH-P86DHR) Unit Number : CWX2070(DEH-P76DH) Unit Name : Keyboard Unit	
MISCELLANEOUS		
IC 1901	IC	PD6197A
IC 1902	IC	RS-140
D 1901	Diode	DA204K
D 1902	Diode	DA204K
D 1903	LED	CL220PGC
D 1904	LED	CL220PGC
D 1905	LED	CL220PGC
D 1906	LED	CL170PGCD
D 1907	LED	CL170PGCD
D 1908	LED	CL170PGCD
L 1901	Inductor	LCTB1R0K2125
X 1901	Ceramic Resonator 4.9152MHz	CSS1449
S 1901	Switch	CSG1085
S 1902	Switch	CSG1084
S 1903	Switch	CSG1085
S 1904	Switch	CSG1085
S 1905	Switch	CSG1085
S 1906	Switch	CSG1085
S 1907	Switch	CSG1085
S 1908	Switch	CSG1085
S 1909	Switch	CSG1061
S 1910	Switch	CSG1061
S 1911	Switch	CSG1084
S 1912	Switch	CSG1084
S 1913	Switch	CSG1084
S 1914	Switch	CSG1084
S 1915	Switch	CSG1084
S 1916	Switch	CSG1084
S 1917	Switch	CSG1085
S 1918	Switch	CSG1084
S 1919	Switch	CSG1084
S 1920	Switch	CSG1084
S 1921	Switch	CSG1086
	LCD(DEH-P86DHR)	CAW1389
	LCD(DEH-P76DH)	CAW1390
EL		CEL1488

RESISTORS

R 1901	RS1/8S222J
R 1902	RS1/8S222J
R 1903	RS1/8S562J
R 1904	RS1/8S470J
R 1905	RS1/8S2R2J
R 1906	RS1/8S121J
R 1907	RS1/8S121J
R 1908	RS1/8S121J
R 1909	RS1/8S121J
R 1910	RS1/8S121J
R 1911	RS1/8S121J
R 1912	RS1/8S121J
R 1913	RS1/8S121J
R 1914	RS1/8S121J
R 1915	RS1/8S121J

====Circuit Symbol and No. Part	Name=====	Part No.
R 1916		RS1/8S0R0J
R 1917		RS1/8S0R0J
CAPACITORS		
C 1901		CKSQYB103K50
C 1902		CEV470M6R3
C 1903		CKSQYB104K16
C 1904		CKSQYB104K16
C 1905		CKSYB104K25
C 1906		CKSQYB104K16

D Unit Number :
Unit Name : Photo Unit

Q 1	Photo-transistor	CPT-230S-X
Q 2	Photo-transistor	CPT-230S-X

Miscellaneous Parts List

M 1	Pickup Unit(SERVICE)	CXX1230
M 2	Motor Unit(Spindle)	CXA8912
M 3	CRG Motor Unit(Carriage)	CXB3043
M 3	Load Motor Unit>Loading)	CXA8702