



EXPLODED VIEW (CD MECHANISM)

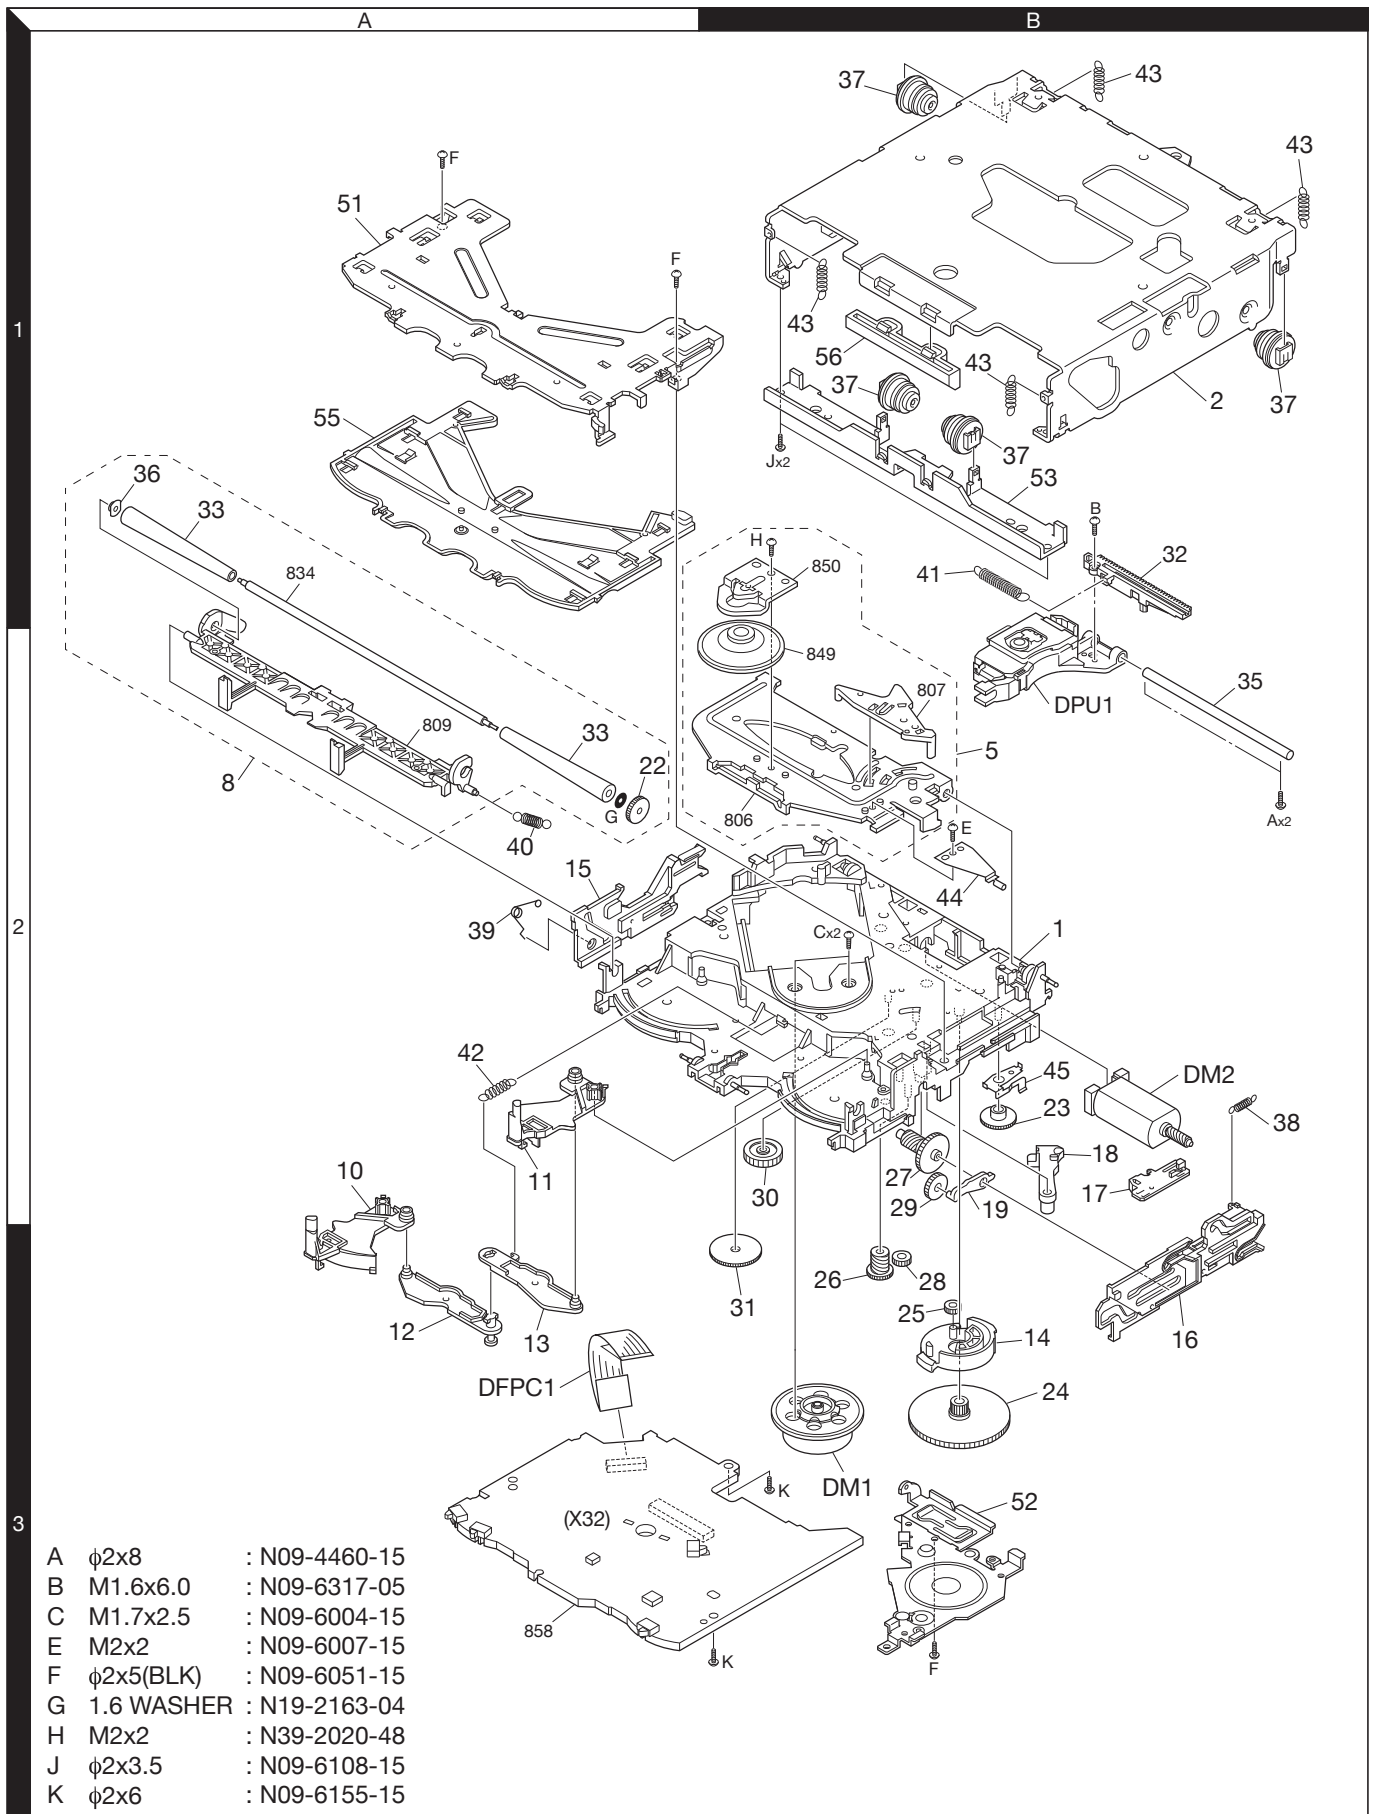

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

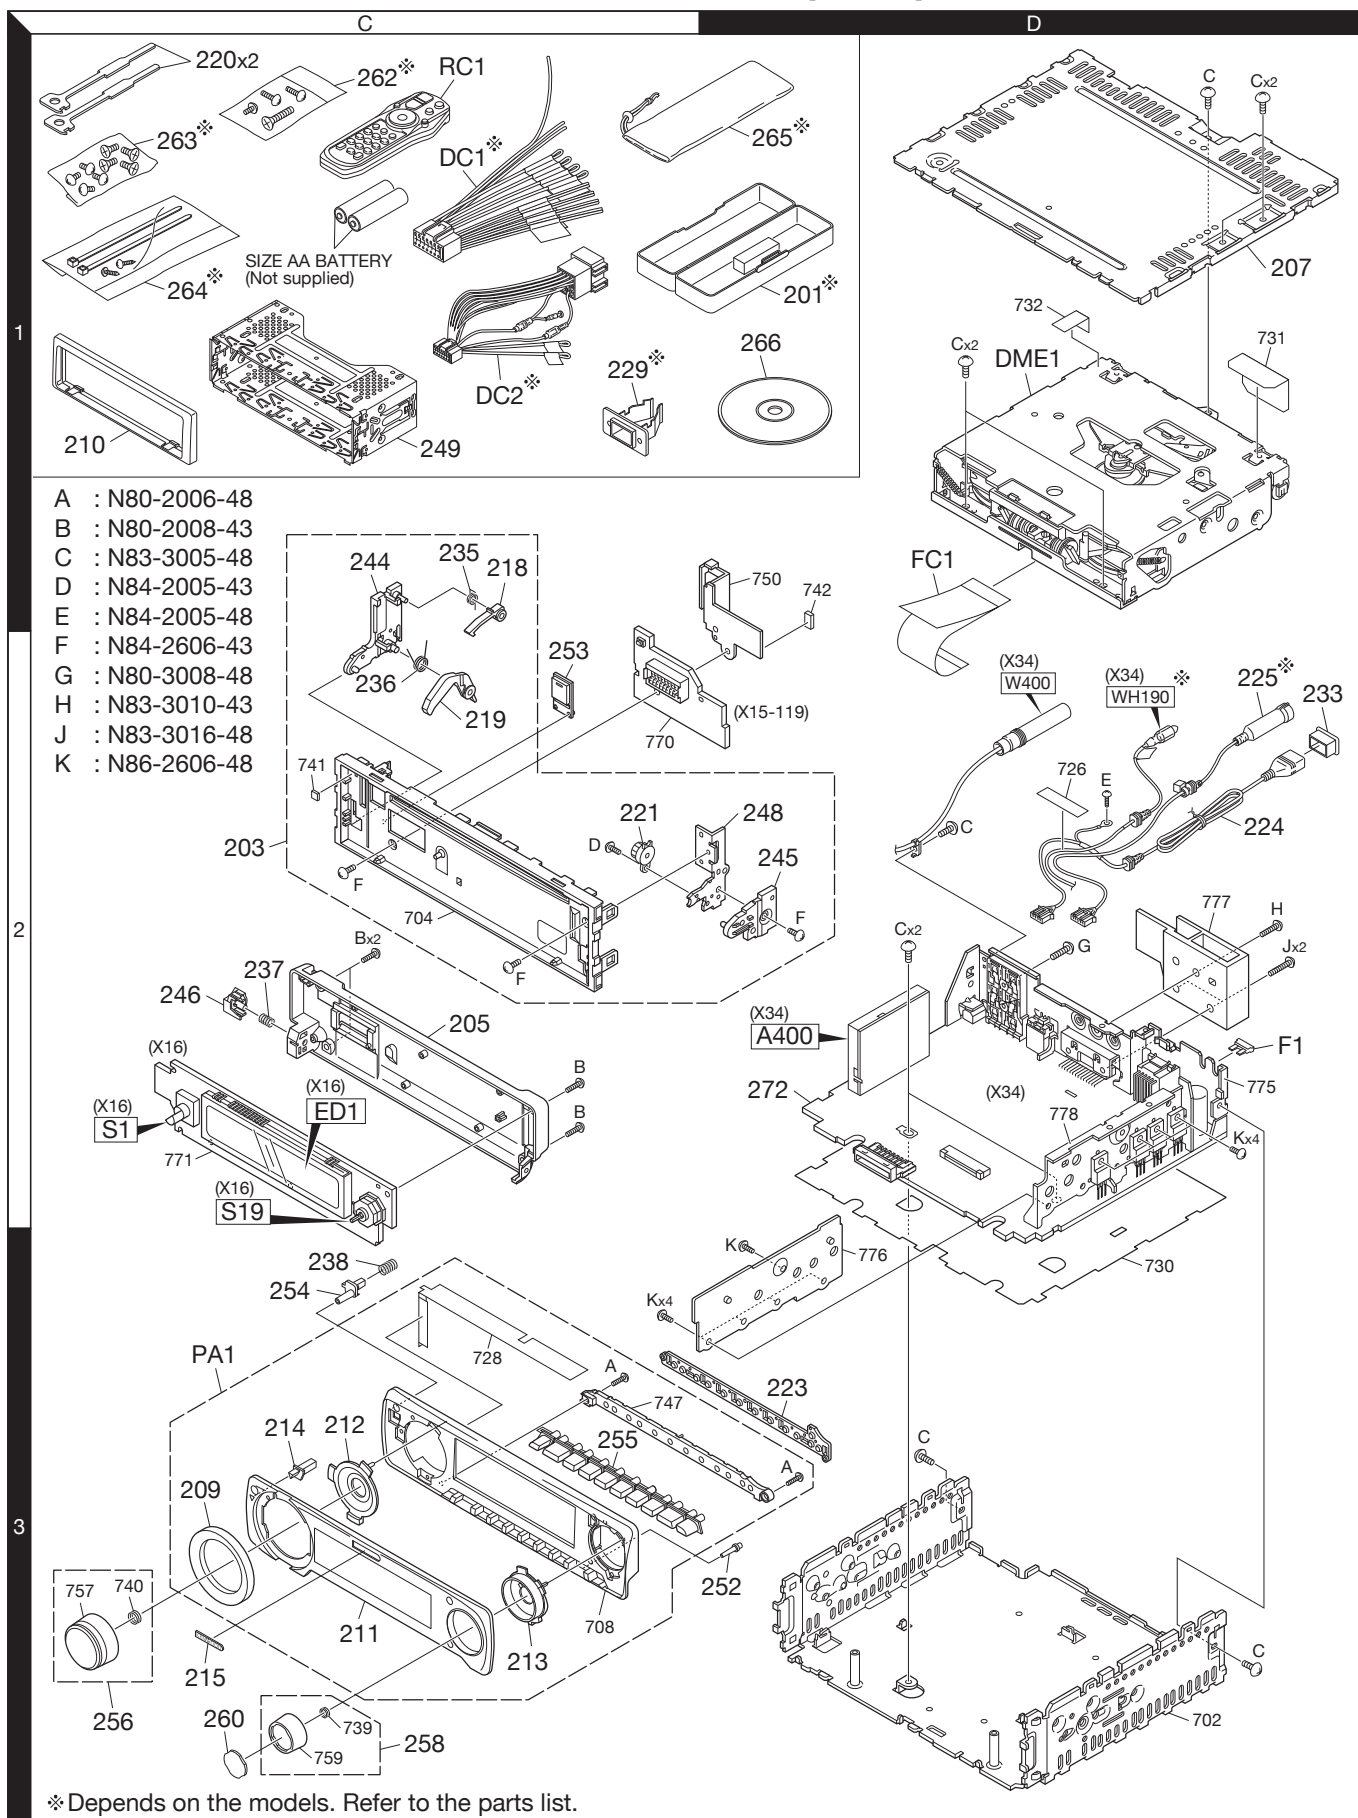

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP738U/W7541U/W7541UY/X792/X8009U					
201	1D		A02-2757-03	PLASTIC CABINET ASSY	M1
203	2C	*	A22-3164-02	SUB PANEL ASSY	
205	2C	*	A46-1865-01	REAR COVER	
207	1D		A52-0897-02	TOP PLATE	
PA1	3C	*	A64-4424-02	PANEL ASSY	K
PA1	3C	*	A64-4425-02	PANEL ASSY	K1
PA1	3C	*	A64-4428-02	PANEL ASSY	E1E2
PA1	3C		A64-4431-02	PANEL ASSY	M1
RC1	1C		A70-2085-05	REMOTE CONTROLLER ASSY(RC-547)	
-		*	B64-4048-00	INSTRUCTION MANUA (ENG.FRE.SPA)	KK1
-		*	B64-4049-00	INSTRUCTION MANUAL (ENG.)	E1E2
-		*	B64-4050-00	INSTRUCTION MANUA (FRE.GER.DUT)	E1
-		*	B64-4051-00	INSTRUCTION MANUA (ITA.SPA.POR)	E1
-		*	B64-4052-00	INSTRUCTION MANUAL (RUS.)	E2
-			B64-4053-00	INSTRUCTION MANUAL (ENG.S-CHI.)	M1
-			B64-4054-00	INSTRUCTION MANUAL (ARA.)	M1
209	3C	*	B07-3234-03	ESCUTCHEON	
210	1C	*	B07-3235-03	ESCUTCHEON	KE1E2
210	1C	*	B07-3235-03	ESCUTCHEON	M1
210	1C	*	B07-3238-03	ESCUTCHEON	K1
211	3C	*	B10-5082-01	FRONT GLASS	K
211	3C	*	B10-5083-01	FRONT GLASS	K1
211	3C	*	B10-5086-01	FRONT GLASS	E1E2
211	3C	*	B10-5089-01	FRONT GLASS	M1
212	3C	*	B19-2471-03	LIGHTING BOARD	
213	3C	*	B19-2472-03	LIGHTING BOARD	
214	3C	*	B19-2474-04	LIGHTING BOARD	
215	3C		B43-1518-04	BADGE	
218	1C		D10-4730-03	LEVER	
219	2C		D10-4731-03	LEVER	
220	1C		D10-7012-04	LEVER	
221	2C		D39-0255-05	DAMPER	
223	3D	*	E29-2120-03	CONDUCTIVE RUBBER	
224	2D	*	E30-6821-05	CORD WITH CONNECTOR (USB)	
225	2D	*	E30-6823-05	CORD WITH DIN CONNECTOR (OPEL)	E1
△ DC1	1C		E30-6428-05	DC CORD	KK1M1
△ DC2	1C		E30-6671-05	DC CORD (ISO)	E1E2
FC1	1D	*	E39-0974-05	FLAT CABLE (30PIN 1MM)	
229	1C	*	F19-1475-04	COVER (USB BRACKET)	K
233	2D		F29-0637-04	INSULATING COVER (USB)	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) 10A	
235	1C		G01-3171-04	TORSION COIL SPRING	
236	2C		G01-3172-04	TORSION COIL SPRING	
237	2C		G01-3173-04	COMPRESSION SPRING	
238	3C		G01-3203-04	COMPRESSION SPRING	
-		*	H54-4324-03	ITEM CARTON CASE	K
-		*	H54-4325-03	ITEM CARTON CASE	K1
-		*	H54-4328-03	ITEM CARTON CASE	E1
-		*	H54-4329-03	ITEM CARTON CASE	E2
-		*	H54-4332-03	ITEM CARTON CASE	M1
244	2C		J19-5203-03	HOLDER	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
245	2D		J19-5204-03	HOLDER	
246	2C		J19-5205-03	HOLDER	
248	2D	*	J21-9977-03	MOUNTING HARDWARE	
249	1C		J22-0011-03	MOUNTING HARDWARE ASSY	
252	3D	*	K24-4801-04	PUSH KNOB (RESET)	
253	2C	*	K24-4802-03	PUSH KNOB (EJECT)	
254	3C	*	K24-4803-03	PUSH KNOB (RELEASE)	
255	3C	*	K25-1919-03	PUSH KNOB (PRESET)	
256	3C	*	K28-0282-14	KNOB ASSY (VOL)	KE1E2
256	3C	*	K28-0282-14	KNOB ASSY (VOL)	M1
256	3C	*	K28-0290-14	KNOB ASSY (VOL)	K1
258	3C	*	K28-0284-04	KNOB ASSY (FM/AM)	
260	3C	*	K28-0287-04	KEY TOP	KE1E2
260	3C	*	K28-0287-04	KEY TOP	M1
260	3C	*	K28-0288-04	KEY TOP	K1
262	1C	*	N99-1730-35	SCREW SET	KK1M1
263	1C		N99-1757-15	SCREW SET	KK1M1
264	1C	*	N99-1790-05	SCREW SET	K
A	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
B	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
C	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
D	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
E	2D		N84-2005-48	PAN HEAD TAPTITE SCREW	
F	2C		N84-2606-43	PAN HEAD TAPTITE SCREW	
265	1C		W01-1664-05	CARRYING CASE	K
265	1C		W01-1710-05	CARRYING CASE	K1E1E2
266	1C	*	W01-1723-05	COMPACT DISC	
272	2D	*	X34-5790-10	ELECTRIC UNIT	K
272	2D	*	X34-5790-11	ELECTRIC UNIT	K1
272	2D	*	X34-5790-21	ELECTRIC UNIT	M1
272	2D	*	X34-5792-71	ELECTRIC UNIT	E1
272	2D	*	X34-5792-73	ELECTRIC UNIT	E2
DME1	1D		X92-6130-00	CD MECHANISM ASSY (DXM-6E20W)	
DISPLAY UNIT (X15-1190-10)					
D1			B30-1779-05	LED (1608_SR)	
CN1		*	E41-2984-05	PIN ASSY	
J1			E58-1008-05	RECTANGULAR RECEPTACLE	
R1-4			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R5-8			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R9,10			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R11			RK73FB2B331J	CHIP R 330 J 1/8W	
S1			S70-0901-05	TACT SWITCH	
SWITCH UNIT (X16-624x-xx)					
D1			B30-1780-05	LED (1608_PG)	K
D2			B30-1566-05	LED (1608,RED)	
D6,7		*	B30-1790-05	LED (1608_BLUE)	
D10-19			B30-1779-05	LED (1608_SR)	K1
D10-19		*	B30-1790-05	LED (1608_BLUE)	KE1E2
D10-19		*	B30-1790-05	LED (1608_BLUE)	M1
D41-43		*	B30-1790-05	LED (1608_BLUE)	

E1 : KDC-W7541U E2 : KDC-W7541UY (Europe)
 K : KDC-X792 K1 : KDC-MP738U (North America)
 M : KDC-X8009U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-624x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C10 C16-23 C26,27 C30 C32			CK73GB1A105K CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1A105K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 1.0UF K	
C33 C35,36 C38 C39 C40			CK73GB1H103K CK73GB1H103K CK73FB1A225K CK73FB0J106K CK73GB0J475K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 10UF K CHIP C 4.7UF K	
C41,42 C43			CK73FB0J106K CC73GCH1H101J	CHIP C 10UF K CHIP C 100PF J	
J1			E59-0850-05	RECTANGULAR PLUG	
X1			L78-1208-05	RESONATOR (6.6M)	
CP1 CP3 CP8 CP9-14 CP16			RK74HB1J223J RK74GA1J223J RK74GA1J331J RK74HB1J331J RK74HB1J331J	CHIP-COM 22K J 1/16W CHIP-COM 22K J 1/16W CHIP-COM 330 J 1/16W CHIP-COM 330 J 1/16W CHIP-COM 330 J 1/16W	
CP18 CP20 CP21 CP23 CP24			RK74HB1J331J RK74GA1J101J RK74HB1J331J RK74HB1J101J RK74HB1J102J	CHIP-COM 330 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 330 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 1.0K J 1/16W	
CP25 CP26 CP27 CP28 CP29			RK74HB1J332J RK74HB1J223J RK74HB1J101J RK74GA1J101J RK74HB1J101J	CHIP-COM 3.3K J 1/16W CHIP-COM 22K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W	
CP30 CP31 CP32 CP36,37 R1			RK74HB1J102J RK74HB1J223J RK74GA1J101J RK74GA1J332J RK73FB2B331J	CHIP-COM 1.0K J 1/16W CHIP-COM 22K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 3.3K J 1/16W CHIP R 330 J 1/8W	
R3-9 R3-9 R3,4 R5-9 R10			RK73EB2E621J RK73EB2E621J RK73EB2E621J RK73EB2E821J RK73EB2E911J	CHIP R 620 J 1/4W CHIP R 620 J 1/4W CHIP R 620 J 1/4W CHIP R 820 J 1/4W CHIP R 910 J 1/4W	KE1E2 M1 K1 K1
R13 R18 R20 R23,24 R25			RK73GB2A222J RK73GB2A473J RK73GB2A332J RK73GB2A472J RK73GB2A101J	CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 3.3K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W	KE1E2
R26 R30 R31 R33 R34			RK73GB2A223J RK73GB2A223J RK73GB2A223J RK73GB2A102J RK73GB2A101J	CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W	K1M1 KE1E2
R36 R37 R38 R43,44			RK73GB2A101J RK73GB2A473J RK73GB2A102J RK73PB2H3R9J	CHIP R 100 J 1/10W CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 3.9 J 1/2W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R52 R53 R54 R55 R59			RK73GB2A223J RK73GB2A102J RK73EB2E333J RK73GB2A473J RK73GB2A473J	CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 33K J 1/4W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	
R60 R61 R68 R71 R77			RK73FB2B150J RK73GB2A753J RK73GB2A333J RK73GB2A102J RK73GB2A223J	CHIP R 15 J 1/8W CHIP R 75K J 1/10W CHIP R 33K J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W	
R79 R80 W4			RK73GB2A822J RK73GB2A332J RK73GB2A000J	CHIP R 8.2K J 1/10W CHIP R 3.3K J 1/10W CHIP R 0.0 J 1/10W	
S19			S70-0947-05	TACT SWITCH	
S1			T99-0456-15	ROTARY ENCODER	
ED1 IC1 IC1 IC3 IC4	*		JN12832A MX233213TI9Z7 29L32CBT179Z6 BR24L04FV-W 703134AGJ018A	FLUORESCENT INDICATOR TUBE ROM IC ROM IC ROM IC MICROCONTROLLER IC	K1M1 KE1E2
IC6 IC7 IC8 IC9 IC10	*		PIC95603 74LVC08APW 74HC2G08DP 74AHC1G32GW SI-3025KMNF	ANALOGUE IC MOS-IC MOS-IC MOS-IC ANALOGUE IC	
IC11 Q1-4 Q2-4 Q2-4 Q5			S-1132B33U5T1G DTC143ZE DTC143ZE DTC143ZE 2SC4081	ANALOGUE IC DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	K K1E1E2 M1
Q6 Q11 Q13			2SB1689 2SC2713-F 2SB1260	TRANSISTOR TRANSISTOR TRANSISTOR	
CD PLAYER UNIT (X32-6130-00)					
C20 C23 C24 C25 C26			CC73GCH1H330J CC73GCH1H151J CK73FB1A225K CK73GB1A105K CK73GB1H153K	CHIP C 33PF J CHIP C 150PF J CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 0.015UF K	
C27 C30-32 C33 C34 C35			CC73GCH1H470J CK73GB1H103K CK73GB1H332K CK73GB1H104K CK73GB1H153K	CHIP C 47PF J CHIP C 0.010UF K CHIP C 3300PF K CHIP C 0.10UF K CHIP C 0.015UF K	
C36 C38 C39 C41 C44			CK73GB1H104K CC73GCH1H680J CK73GB1H104K CK73GB1A105K CK73GB1H104K	CHIP C 0.10UF K CHIP C 68PF J CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K	
C45 C46 C47,48 C49,50			CK73GB1H223K CK73GB1H103K CK73GB1H333K CK73GB1H104K	CHIP C 0.022UF K CHIP C 0.010UF K CHIP C 0.033UF K CHIP C 0.10UF K	

PARTS LIST

CD PLAYER UNIT (X32-6130-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C51			CK73GB1H222K	CHIP C 2200PF K	
C52,53			CK73GB1H104K	CHIP C 0.10UF K	
C54			CK73GB1A105K	CHIP C 1.0UF K	
C58			CK73GB1A105K	CHIP C 1.0UF K	
C60			CK73EB0J226K	CHIP C 22UF K	
C61-64			CK73GB1H104K	CHIP C 0.10UF K	
C66			CK73FB1C105K	CHIP C 1.0UF K	
C68,69			CK73GB1H104K	CHIP C 0.10UF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73FB0J106K	CHIP C 10UF K	
C87,88			CK73GB1H332K	CHIP C 3300PF K	
C89-91			CK73GB1H104K	CHIP C 0.10UF K	
C94,95			CK73GB1A105K	CHIP C 1.0UF K	
C96			CK73GB1H103K	CHIP C 0.010UF K	
C97			CK73GB1H104K	CHIP C 0.10UF K	
C101			CK73GB1C224K	CHIP C 0.22UF K	
C102			CK73GB1A474K	CHIP C 0.47UF K	
C103			CK73GB1H153K	CHIP C 0.015UF K	
C104			CK73FB1A225K	CHIP C 2.2UF K	
CN1			E41-2612-05	FLAT CABLE CONNECTOR	
CN2			E41-2630-05	FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R20			RK73GB2A184J	CHIP R 180K J 1/10W	
R27			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A224J	CHIP R 220K J 1/10W	
R32			RK73GB2A181J	CHIP R 180 J 1/10W	
R33			RK73GB2A153J	CHIP R 15K J 1/10W	
R34			RK73GB2A473J	CHIP R 47K J 1/10W	
R35			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R36			RK73GB2A154J	CHIP R 150K J 1/10W	
R37			RK73GB2A334J	CHIP R 330K J 1/10W	
R38			RK73GB2A223J	CHIP R 22K J 1/10W	
R40			RK73GB2A114J	CHIP R 110K J 1/10W	
R41			RK73GB2A473J	CHIP R 47K J 1/10W	
R45			RK73GB2A221J	CHIP R 220 J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R50			RK73GB2A560J	CHIP R 56 J 1/10W	
R51			RK73EB2E220J	CHIP R 22 J 1/4W	
R52			RK73EB2E100J	CHIP R 10 J 1/4W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R59			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R60,61			RK73GB2A103J	CHIP R 10K J 1/10W	
R82,83			RK73GB2A331J	CHIP R 330 J 1/10W	
R207			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R216,217			RK73GB2A103J	CHIP R 10K J 1/10W	
R221,222			RK73GB2A101J	CHIP R 100 J 1/10W	
R226			RK73GB2A101J	CHIP R 100 J 1/10W	
R228-230			RK73GB2A101J	CHIP R 100 J 1/10W	
R231			RK73GB2A473J	CHIP R 47K J 1/10W	
R232			RK73GB2A104J	CHIP R 100K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R233			RK73GB2A331J	CHIP R 330 J 1/10W	
R240			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R241			RK73GB2A104J	CHIP R 100K J 1/10W	
R243			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R244			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R246			RK73GB2A104J	CHIP R 100K J 1/10W	
R247			RK73GB2A101J	CHIP R 100 J 1/10W	
R252			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R257-261			RK73GB2A101J	CHIP R 100 J 1/10W	
R262-264			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R280			RK73GB2A103J	CHIP R 10K J 1/10W	
R281,282			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R284,285			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R287			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R288			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R289			RK73GB2A103J	CHIP R 10K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D2			DAP202U	DIODE	
D3,4			DA204U	DIODE	
IC3			BD8222EFV	ANALOGUE IC	
IC4			TC94A70FG-010	MOS-IC	
IC5			S-1132B15U5T1G	ANALOGUE IC	
IC6			S-1132B33U5T1G	ANALOGUE IC	
IC11			XC6218S152MR	MOS-IC	
Q1			2SB0970	TRANSISTOR	
Q13			DTC114YUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-579x-xx)					
C1			C90-6783-05	ERECTRO 3900 16WV	K1E1E2 M1 K E1E2
C1			C90-6783-05	ERECTRO 3900 16WV	
C1			C90-6784-05	ELECTRO 3900UF 16WV	
C3			C93-1470-05	CHIP C 1500PF K	
C10			CD04AY1A221M	ELECTRO 220UF 10WV	
C11			CK73GB1H103K	CHIP C 0.010UF K	K K
C20			C90-6851-05	ELECTRO 220UF 25WV	
C22			CD04BA1C100M	ELECTRO 10UF 16WV	
C23			CD04BA0J101M	ELECTRO 100UF 6.3WV	
C24			C90-6851-05	ELECTRO 220UF 25WV	
C25			CK73GB0J475K	CHIP C 4.7UF K	K K
C26			CK73GB1A105K	CHIP C 1.0UF K	
C30			CK73GB1A105K	CHIP C 1.0UF K	
C31			CD04AY1H220M	ELECTRO 22UF 50WV	
C60			CK73GB1H103K	CHIP C 0.010UF K	
C63			CK73GB1H103K	CHIP C 0.010UF K	K K
C64			CC73GCH1H101J	CHIP C 100PF J	
C65		*	C93-1457-05	CHIP C 1UF K	
C66,67			C93-0059-05	CERAMIC 1UF K	
C68		*	C93-1457-05	CHIP C 1UF K	
C69			CK73FB1C105K	CHIP C 1.0UF K	K K K K K
C81			CK73FB0J106K	CHIP C 10UF K	
C82			CK73FB1E474K	CHIP C 0.47UF K	
C83			CK73GB1H102K	CHIP C 1000PF K	
C84			CK73EB1C106K	CHIP C 10UF K	

E1 : KDC-W7541U E2 : KDC-W7541UY (Europe)
K : KDC-X792 K1 : KDC-MP738U (North America)
M : KDC-X8009U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-579x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C85,86 C87 C88 C122 C140			CK73GB1C104K CK73FB1C105K CK73GB1C104K CK73GB1H103K CK73GB1H104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	E1E2	C491 C492-495 C496 C497 C498			CD04AS1H2R2M CK73GB1A105K CK73GB1H103K CD04AS1V100M CD04AS1C470M	ELECTRO 2.2UF 50WV CHIP C 1.0UF K CHIP C 0.010UF K ELECTRO 10UF 35WV ELECTRO 47UF 16WV	K1
C141 C142 C170 C180 C181			CK73GB1A105K CD04AS1H3R3M CK73GB1H103K CK73GB1A105K CK73GB1H223K	CHIP C 1.0UF K ELECTRO 3.3UF 50WV CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.022UF K		C500 C501 C502 C503-506 C508,509			CC73GCH1H220J CC73GCH1H180J CK73GB1C104K CK73GB1H103K CK73GB1H103K	CHIP C 22PF J CHIP C 18PF J CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.010UF K	
C200 C301 C310-312 C313 C340,341			CD04BF1C221M CK73GB1C104K CK73GB1C104K CK73GB1A105K CC73GCH1H270J	ELECTRO 220UF 16WV CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 27PF J	K K KE1E2	C510 C511 C513 C514 C515		*	CK73GB1H102K CK73GB1H103K CK73GB0J225K CK73GB1H103K CD04AY2A4R7M	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 0.010UF K ELECTRO 4.7UF 100WV	
C343 C344 C345 C350 C350			CK73GB1H103K CK73GB0J225K CC73GCH1H271J CD04AS1C470M CD04AS1C470M	CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 270PF J ELECTRO 47UF 16WV ELECTRO 47UF 16WV	KE1E2 KE1E2 KE1E2 KE1E2 M1	C600 C602 C652 C700 C701			CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1C104K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C351 C351 C352 C352 C353			CD04AS1C220M CD04AS1C220M CD04AS1V100M CD04AS1V100M CD04AJ1C101M	ELECTRO 22UF 16WV ELECTRO 22UF 16WV ELECTRO 10UF 35WV ELECTRO 10UF 35WV ELECTRO 100UF 16WV	KE1E2 M1 KE1E2 M1 KE1E2	C702 C703 C704-710 C711,712 C713,714			CC73GCH1H220J CC73GCH1H180J CK73GB1H103K CC73GCH1H150J CK73GB1H103K	CHIP C 22PF J CHIP C 18PF J CHIP C 0.010UF K CHIP C 15PF J CHIP C 0.010UF K	
C353 C371 C373 C375 C377			CD04AJ1C101M CD04AS1V100M CD04AS1V100M CD04AS1V100M CD04AS1V100M	ELECTRO 100UF 16WV ELECTRO 10UF 35WV ELECTRO 10UF 35WV ELECTRO 10UF 35WV ELECTRO 10UF 35WV	M1	C715 C716,717 C750 C751 C753			CK73GB1A105K CK73FB0J106K CK73GB1H103K CC73GCH1H050C CK73GB1H103K	CHIP C 1.0UF K CHIP C 10UF K CHIP C 0.010UF K CHIP C 5.0PF C CHIP C 0.010UF K	
C379 C381 C400-403 C410,411 C412			CD04AS1V100M CD04AS1V100M CK73GB1H103K CK73GB1A105K CD04AS0J470M	ELECTRO 10UF 35WV ELECTRO 10UF 35WV CHIP C 0.010UF K CHIP C 1.0UF K ELECTRO 47UF 6.3WV		C754 C900,901 C909 C964 C965			CC73GCH1H050C CK73GB1H103K CC73GCH1H101J CK73GB1C104K CK73GB1A105K	CHIP C 5.0PF C CHIP C 0.010UF K CHIP C 100PF J CHIP C 0.10UF K CHIP C 1.0UF K	E1E2
C420 C421 C422 C450,451 C452			CK73GB1A105K CD04AS0J470M CK73GB1A105K CK73FB1C105K CD04BA1C100M	CHIP C 1.0UF K ELECTRO 47UF 6.3WV CHIP C 1.0UF K CHIP C 1.0UF K ELECTRO 10UF 16WV	Δ	CN190 CN200 CN300 CN362 J1		*	E41-1702-05 E41-1701-05 E41-2630-05 E40-9747-05 E58-1003-05	PIN ASSY PIN ASSY FLAT CABLE CONNECTOR PIN ASSY RECTANGULAR RECEPTACLE	E1
C461-464 C461-464 C465-468 C475 C475			CK73GB1C224K CK73GB1C224K C90-6768-05 CK73FB1C105K CK73FB1C105K	CHIP C 0.22UF K CHIP C 0.22UF K ELECTRO 0.22UF 16WV CHIP C 1.0UF K CHIP C 1.0UF K	K1E1E2 M1 K K1E1E2 M1	J361 J361 J361 J410 J420		*	E63-0953-05 E63-0953-05 E63-0958-05 E11-0625-05 E56-0855-05	PIN JACK PIN JACK PIN JACK PHONE JACK CYLINDRICAL RECEPTACLE	K1E1E2 M1 K
C476 C478,479 C480-483 C480-483 C482,483			C90-6765-05 CD04AS1H2R2M CK73GB1A105K CK73GB1A105K CK73GB1A105K	ELECTRO 1UF 16WV ELECTRO 2.2UF 50WV CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K	K K K1E1E2 M1 K	W400 WH190 WH190		*	E30-6803-05 E30-6822-05 E30-6822-05	CORD WITH PLUG (FM/AM ANT) WIRING HARNESS (REMO) WIRING HARNESS (REMO)	KK1E2 M1
C484,485 C486,487 C488 C488-490 C488-490			CD04AS1H2R2M CK73GB1A474K CK73GB1A105K CK73GB1A105K CK73GB1A105K	ELECTRO 2.2UF 50WV CHIP C 0.47UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K	K K K K1E1E2 M1	Δ L1 L60 L80 L515 X340		*	L33-2436-05 L33-2464-05 L33-2297-05 L92-0639-05 L77-2002-05	CHOKE COIL ASSY SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR CHIP FERRITE CRYSTAL RESONATOR	KE1E2
						X501			L78-0872-05	RESONATOR (12MHZ)	

E1 : KDC-W7541U E2 : KDC-W7541UY (Europe)
K : KDC-X792 K1 : KDC-MP738U (North America)
46 M : KDC-X8009U (Other Areas)

ΔIndicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-579x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
X502			L77-2921-05	CRYSTAL RESONATOR (32.768KHZ)	
X700			L77-2921-05	CRYSTAL RESONATOR (32.768KHZ)	
X701			L77-2964-05	CRYSTAL RESONATOR (9.00MHZ)	
X750			L77-2921-05	CRYSTAL RESONATOR (32.768KHZ)	
C	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
G	2D		N80-3008-48	PAN HEAD TAPTITE SCREW	
H	2D		N83-3010-43	PAN HEAD TAPTITE SCREW	
J	2D		N83-3016-48	PAN HEAD TAPTITE SCREW	
K	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
CP190			RK74HB1J101J	CHIP-COM 100 J 1/16W	E1
CP420			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP421			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP501			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP503			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP504			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
CP506			RK74GA1J101J	CHIP-COM 100 J 1/16W	
R10			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R11			RK73GH2A243D	CHIP R 24K D 1/10W	
R12			RK73FB2B221J	CHIP R 220 J 1/8W	
R20			RK73FB2B153J	CHIP R 15K J 1/8W	
R21			RK73GB2A223J	CHIP R 22K J 1/10W	
R22			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R30			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R40			RK73FB2B471J	CHIP R 470 J 1/8W	
R41			RK73GB2A223J	CHIP R 22K J 1/10W	
R46			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R47			RK73GB2A223J	CHIP R 22K J 1/10W	
R50			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R60			RK73GB2A203J	CHIP R 20K J 1/10W	
R61			RK73PB2H1R0J	CHIP R 1.0 J 1/2W	
R65			RK73GB2A103J	CHIP R 10K J 1/10W	
R66			RK73GH2A103D	CHIP R 10K D 1/10W	
R67		*	RK73GH2A514D	CHIP R 510K D 1/10W	
R72			RK73GH2A912D	CHIP R 9.1K D 1/10W	
R73			RK73EB2E361J	CHIP R 360 J 1/4W	
R80			RK73GH2A104D	CHIP R 100K D 1/10W	
R81			RK73GH2A473D	CHIP R 47K D 1/10W	
R82			RK73GB2A103J	CHIP R 10K J 1/10W	
R83			RK73GH2A333D	CHIP R 33K D 1/10W	
R84			RK73GH2A163D	CHIP R 16K D 1/10W	
R120,121			RK73GB2A103J	CHIP R 10K J 1/10W	
R126			RK73GB2A183J	CHIP R 18K J 1/10W	
R127			RK73FB2B203J	CHIP R 20K J 1/8W	
R128			RK73GB2A104J	CHIP R 100K J 1/10W	
R129			RK73EB2E473J	CHIP R 47K J 1/4W	
R130			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W	
R132			RK73FB2B683J	CHIP R 68K J 1/8W	
R133,134			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R140-142			RK73PB2H561J	CHIP R 560 J 1/2W	
R143			RK73GB2A223J	CHIP R 22K J 1/10W	
R144			RK73PB2H561J	CHIP R 560 J 1/2W	
R145			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R146			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R150			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1
R151,152			RK73PB2H221J	CHIP R 220 J 1/2W	KK1M1
R153			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R170			RK73GB2A473J	CHIP R 47K J 1/10W	
R171			RK73GB2A104J	CHIP R 100K J 1/10W	
R172			RK73EB2E103J	CHIP R 10K J 1/4W	
R180			RK73GB2A104J	CHIP R 100K J 1/10W	
R181			RK73EB2E103J	CHIP R 10K J 1/4W	
R190			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R191-193			RK73EB2E471J	CHIP R 470 J 1/4W	E1
R194			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R195			RK73GB2A473J	CHIP R 47K J 1/10W	
R200			RK73GB2A101J	CHIP R 100 J 1/10W	
R210			RK73GB2A473J	CHIP R 47K J 1/10W	
R211			RK73GB2A104J	CHIP R 100K J 1/10W	
R214-216			RK73GB2A101J	CHIP R 100 J 1/10W	
R300			RK73GB2A223J	CHIP R 22K J 1/10W	
R310,311			RK73GB2A102J	CHIP R 1.0K J 1/10W	K
R312			RK73GH2A111D	CHIP R 110 D 1/10W	K
R313			RK73GH2A241D	CHIP R 240 D 1/10W	K
R314			RK73GB2A223J	CHIP R 22K J 1/10W	K
R340-342			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2
R343			RK73GB2A102J	CHIP R 1.0K J 1/10W	KE1E2
R344			RK73GB2A223J	CHIP R 22K J 1/10W	KE1E2
R345			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2
R350			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	KE1E2
R350			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	M1
R351			RK73GB2A332J	CHIP R 3.3K J 1/10W	KE1E2
R351			RK73GB2A332J	CHIP R 3.3K J 1/10W	M1
R352			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	KE1E2
R352			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	M1
R353			RK73GB2A221J	CHIP R 220 J 1/10W	KE1E2
R353			RK73GB2A221J	CHIP R 220 J 1/10W	M1
R354-356			RK73GB2A102J	CHIP R 1.0K J 1/10W	KE1E2
R354-356			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1
R357			RK73GB2A513J	CHIP R 51K J 1/10W	KE1E2
R357			RK73GB2A513J	CHIP R 51K J 1/10W	M1
R358			RK73GB2A472J	CHIP R 4.7K J 1/10W	KE1E2
R358			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1
R359			RK73FB2B102J	CHIP R 1.0K J 1/8W	KE1E2
R359			RK73FB2B102J	CHIP R 1.0K J 1/8W	M1
R360			RK73GB2A473J	CHIP R 47K J 1/10W	KE1E2
R360			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R361			RK73PB2H220J	CHIP R 22 J 1/2W	KE1E2
R361			RK73PB2H220J	CHIP R 22 J 1/2W	M1
R362			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2
R362			RK73GB2A222J	CHIP R 2.2K J 1/10W	M1
R370			RK73FB2B181J	CHIP R 180 J 1/8W	
R371			RK73GB2A331J	CHIP R 330 J 1/10W	
R372,373			RK73GB2A223J	CHIP R 22K J 1/10W	
R374			RK73FB2B181J	CHIP R 180 J 1/8W	
R375			RK73GB2A331J	CHIP R 330 J 1/10W	
R376			RK73FB2B181J	CHIP R 180 J 1/8W	
R377			RK73GB2A331J	CHIP R 330 J 1/10W	
R378,379			RK73GB2A223J	CHIP R 22K J 1/10W	

E1 : KDC-W7541U E2 : KDC-W7541UY (Europe)
K : KDC-X792 K1 : KDC-MP738U (North America)
M : KDC-X8009U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-579x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R380 R381 R382 R383 R384,385			RK73FB2B181J RK73GB2A331J RK73FB2B181J RK73GB2A331J RK73GB2A223J	CHIP R 180 J 1/8W CHIP R 330 J 1/10W CHIP R 180 J 1/8W CHIP R 330 J 1/10W CHIP R 22K J 1/10W	
R386 R387 R401 R402 R403,404			RK73FB2B181J RK73GB2A331J RK73GB2A223J RK73FB2B21J RK73GB2A471J	CHIP R 180 J 1/8W CHIP R 330 J 1/10W CHIP R 22K J 1/10W CHIP R 820 J 1/8W CHIP R 470 J 1/10W	
R410,411 R412,413 R414 R415 R420-424			RK73GB2A123J RK73EB2E100J RK73EB2E4R7J RK73GB2A102J RK73EB2E432J	CHIP R 12K J 1/10W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 1.0K J 1/10W CHIP R 4.3K J 1/4W	
R425 R426 R427 R428 R429			RK73EB2E101J RK73EB2E100J RK73EB2E4R7J RK73EB2E100J RK73EB2E432J	CHIP R 100 J 1/4W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 4.3K J 1/4W	
R430 R431 R432 R433,434 R435			RK73EB2E101J RK73GB2A102J RK73GB2A104J RK73GB2A473J RK73GB2A101J	CHIP R 100 J 1/4W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W	
R440 R441 R442 R450 R451			RK73GB2A473J RK73GB2A101J RK73GB2A104J RK73GB2A133J RK73GB2A473J	CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W CHIP R 13K J 1/10W CHIP R 47K J 1/10W	
R452 R453 R456 R469 R482,483			RK73GB2A331J RK73GB2A432J RK73GB2A100J RK73GB2A473J RK73GB2A103J	CHIP R 330 J 1/10W CHIP R 4.3K J 1/10W CHIP R 10 J 1/10W CHIP R 47K J 1/10W CHIP R 10K J 1/10W	
R490 R500,501 R502 R503 R505			RK73EB2E2R2J RK73GB2A103J RK73GB2A104J RK73GB2A102J RK73GB2A473J	CHIP R 2.2 J 1/4W CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W	
R506 R507 R508,509 R511 R512-514			RK73GB2A104J RK73GB2A102J RK73GB2A472J RK73GB2A101J RK73GB2A473J	CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W	
R515,516 R517,518 R519,520 R522,523 R525			RK73GB2A471J RK73GB2A104J RK73GB2A473J RK73GB2A473J RK73GB2A222J	CHIP R 470 J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W	
R526 R527 R528 R529 R530			RK73EB2E333J RK73GB2A333J RK73GB2A223J RK73GB2A473J RK73GB2A223J	CHIP R 33K J 1/4W CHIP R 33K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W	K KK1M1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R530 R532 R533 R534 R540			RK73GB2A473J RK73GB2A473J RK73GB2A223J RK73GB2A000J RK73GB2A223J	CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 0.0 J 1/10W CHIP R 22K J 1/10W	E2 E1E2
R540 R542 R543 R544 R600-602			RK73GB2A473J RK73GB2A104J RK73GB2A223J RK73GB2A222J RK73GB2A101J	CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100 J 1/10W	M1
R603,604 R605 R606,607 R650 R651			RK73GB2A223J RK73GB2A102J RK73GB2A223J RK73GB2A471J RK73GB2A104J	CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 470 J 1/10W CHIP R 100K J 1/10W	
R653 R700 R701 R702 R704			RK73GB2A102J RK73GB2A000J RK73FB2B2R2J RK73GB2A000J RK73GB2A223J	CHIP R 1.0K J 1/10W CHIP R 0.0 J 1/10W CHIP R 2.2 J 1/8W CHIP R 0.0 J 1/10W CHIP R 22K J 1/10W	
R705 R706 R707 R708 R709,710			RK73GB2A101J RK73GB2A223J RK73GB2A104J RK73GB2A101J RK73GB2A102J	CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W	
R711 R713 R714 R715 R716			RK73GB2A223J RK73GB2A101J RK73GB2A223J RK73GB2A102J RK73GB2A101J	CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W	
R719 R720 R721,722 R723 R724			RK73GB2A101J RK73GB2A223J RK73GB2A101J RK73GB2A223J RK73GB2A101J	CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/10W	
R725 R726 R727 R728 R729			RK73GB2A472J RK73GB2A101J RK73GB2A105J RK73GB2A153J RK73GB2A330J	CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0M J 1/10W CHIP R 15K J 1/10W CHIP R 33 J 1/10W	
R730 R731 R732 R733 R734-737			RK73GB2A153J RK73GB2A330J RK73GB2A153J RK73GB2A472J RK73GB2A101J	CHIP R 15K J 1/10W CHIP R 33 J 1/10W CHIP R 15K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W	
R738 R739 R741 R743 R744-746			RK73GB2A223J RK73GB2A101J RK73GB2A332J RK73GB2A332J RK73GB2A101J	CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 3.3K J 1/10W CHIP R 3.3K J 1/10W CHIP R 100 J 1/10W	
R747 R750 R751 R757 R758-760			RK73GB2A223J RK73GB2A333J RK73GB2A515J RK73GH2A104D RK73GB2A473J	CHIP R 22K J 1/10W CHIP R 33K J 1/10W CHIP R 5.1M J 1/10W CHIP R 100K D 1/10W CHIP R 47K J 1/10W	

△Indicates safety critical compo nents.

E1 : KDC-W7541U E2 : KDC-W7541UY (Europe)
K : KDC-X792 K1 : KDC-MP738U (North America)

48 M : KDC-X8009U (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-579x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R761			RK73GB2A101J	CHIP R 100 J 1/10W		IC300			STMP52151STR	MOS-IC	
R763			RK73GB2A223J	CHIP R 22K J 1/10W		IC310		*	MMA6270QR2	ANALOGUE IC	K
R767			RK73GB2A223J	CHIP R 22K J 1/10W		IC340			E-TDA7478AD	ANALOGUE IC	KE1E2
R769			RK73GB2A473J	CHIP R 47K J 1/10W		IC350			NJM4565V-ZB	ANALOGUE IC	KE1E2
R901			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC350			NJM4565V-ZB	ANALOGUE IC	M1
R903			RK73GB2A100J	CHIP R 10 J 1/10W		IC450			TB2923HQ	ANALOGUE IC	
R908			RK73GB2A100J	CHIP R 10 J 1/10W		IC480			E-TDA7415CB	ANALOGUE IC	
R963			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC500		*	30624MGPB77GP	MICROCONTROLLER IC	
R990			RK73GB2A1R5J	CHIP R 1.5 J 1/10W		IC510			XC6120N362N1	MOS-IC	
R999			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		IC520			BR24L04FV-W	ROM IC	
W350			R92-2053-05	CHIP R 0 OHM J 1/8W	K1	IC530			74HC2G02DP	MOS-IC	
W401			R92-2053-05	CHIP R 0 OHM J 1/8W		IC600			74AHCT08PW	MOS-IC	
S650			S74-0809-05	MICRO SWITCH		IC602			74LVC08APW	MOS-IC	
D1			S2V60-5009F46	DIODE		IC700		*	92CD28AFG6V1	MICROCONTROLLER IC	
D20		*	D1FJ4	DIODE		IC751			BR24L04FV-W	ROM IC	
D21			UDZW5.6 (B)	ZENER DIODE		IC752			341S2094	MICROPROCESSOR IC	
D30			UDZW8.2 (B)	ZENER DIODE		Q10			KTA1046-P	TRANSISTOR	
D50			UDZW12 (B)	ZENER DIODE		Q11			DTA124EUA	DIGITAL TRANSISTOR	
D61-63		*	D1FJ4	DIODE		Q12			DTC124EUA	DIGITAL TRANSISTOR	
D70		*	UDZW15 (B)	ZENER DIODE		Q13			DTA124EUA	DIGITAL TRANSISTOR	
D80			EC31QS04AG	DIODE		Q14			DTC124EUA	DIGITAL TRANSISTOR	
D121,122			UDZW6.8 (B)	ZENER DIODE		Q20			KTA1046-P	TRANSISTOR	
D123			UDZW6.2 (B)	ZENER DIODE		Q21			2SC4081	TRANSISTOR	
D140			DAP202U	DIODE		Q22			2SA1577	TRANSISTOR	
D141,142			1SR154-400	DIODE		Q23			DTC124EUA	DIGITAL TRANSISTOR	
D150,151			1SR154-400	DIODE		Q30			KTA1046-P	TRANSISTOR	
D170			UDZW4.7 (B)	ZENER DIODE		Q31			2SC4081	TRANSISTOR	
D190			UDZW6.2 (B)	ZENER DIODE	KK1E2	Q40			2SB1689	TRANSISTOR	
D190			UDZW6.2 (B)	ZENER DIODE	M1	Q41			DTC114YUA	DIGITAL TRANSISTOR	
D190-193			UDZW6.2 (B)	ZENER DIODE	E1	Q45			2SB1689	TRANSISTOR	
D200,201			AVRL1613R3FTA	VARISTOR		Q46			DTC114YUA	DIGITAL TRANSISTOR	
D350			1SR154-400	DIODE	KE1E2	Q50			2SB1184	TRANSISTOR	
D350			1SR154-400	DIODE	M1	Q51			2SC4081	TRANSISTOR	
D351			DAP202U	DIODE	KE1E2	Q52			DTA124EUA	DIGITAL TRANSISTOR	
D351			DAP202U	DIODE	M1	Q53			DTC124EUA	DIGITAL TRANSISTOR	
D352			UDZW12 (B)	ZENER DIODE	KE1E2	Q70			KTA1046-P	TRANSISTOR	
D352			UDZW12 (B)	ZENER DIODE	M1	Q71			2SC4081	TRANSISTOR	
D353			UDZW5.6 (B)	ZENER DIODE	KE1E2	Q80			DTC144EUA	DIGITAL TRANSISTOR	
D353			UDZW5.6 (B)	ZENER DIODE		Q120			2SC4081	TRANSISTOR	
D353			UDZW5.6 (B)	ZENER DIODE	M1	Q122,123			2SC4081	TRANSISTOR	
D370			DAP202U	DIODE		Q140			DTC114YUA	DIGITAL TRANSISTOR	
D373			DAP202U	DIODE		Q141			DTA114EUA	DIGITAL TRANSISTOR	
D410-412			UDZW6.8 (B)	ZENER DIODE		Q142			2SA1576A	TRANSISTOR	
D420-422			UDZW6.8 (B)	ZENER DIODE		Q143			2SB1188 (Q,R)	TRANSISTOR	
D423			UDZW6.2 (B)	ZENER DIODE		Q150			2SB1188 (Q,R)	TRANSISTOR	KK1M1
D428			UDZW6.2 (B)	ZENER DIODE		Q151			DTC114YUA	DIGITAL TRANSISTOR	KK1M1
D451			DAP202U	DIODE		Q180			DTC144EUA	DIGITAL TRANSISTOR	
D454			1SR154-400	DIODE		Q350			2SB1443	TRANSISTOR	KE1E2
D458			1SR154-400	DIODE		Q350			2SB1443	TRANSISTOR	M1
D484-486			DAP202U	DIODE		Q351,352			2SC4081	TRANSISTOR	KE1E2
IC10			M5237ML-CF0J	ANALOGUE IC		Q351,352			2SC4081	TRANSISTOR	M1
IC20			R1114N331B-TR	ANALOGUE IC (3.3V LF)		Q353			DTA124EUA	DIGITAL TRANSISTOR	KE1E2
IC60		*	LT3489	ANALOGUE IC		Q353			DTA124EUA	DIGITAL TRANSISTOR	M1
IC80			LT3684EMSE	ANALOGUE IC		Q354			DTC124EUA	DIGITAL TRANSISTOR	KE1E2
						Q354			DTC124EUA	DIGITAL TRANSISTOR	M1

E1 : KDC-W7541U E2 : KDC-W7541UY (Europe)
K : KDC-X792 K1 : KDC-MP738U (North America)
M : KDC-X8009U (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-579x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q370 Q371 Q372-376 Q377 Q400			DTC143TUA DTA124EUA DTC143TUA DTA124EUA 2SA1577	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q401 Q500 Q501 Q650 Q702			DTC124EUA 2SB1260 2SC2713-F DTA114YUA DTC114YUA	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q703 Q704,705 TH450			2SA1577 DTC114YUA PRF18BE471QS2	TRANSISTOR DIGITAL TRANSISTOR POSITIVE RESISTOR	
A400 A400			X86-4030-11 X86-4032-70	FRONT-END UNIT FRONT-END UNIT	KK1M1 E1E2
CD MECHANISM ASSY (X92-6130-00) (DXM-6E20W)					
1 2	2B 1B		A10-5328-31 A10-5329-11	CHASSIS CHASSIS	
5 8 10 11 12	2B 2A 2A 2A 3A		D10-4910-13 D10-4911-23 D10-4906-33 D10-4907-33 D10-4908-03	ARM ASSY LEVER ASSY ARM ARM ARM	
13 14 15 16 17	3A 3B 2A 3B 2B		D10-4909-03 D10-4915-03 D10-4916-23 D10-4914-22 D10-4588-13	ARM ARM SLIDER SLIDER SLIDER	
18 19 22 23 24	2B 2B 2A 2B 3B		D10-4917-04 D10-4596-24 D13-2151-04 D13-2152-04 D13-2153-04	ARM ARM GEAR GEAR GEAR	
25 26 27 28 29	3B 3B 2B 3B 2B		D13-2154-04 D13-2155-04 D13-2156-14 D13-2157-04 D13-2158-04	GEAR WORM GEAR GEAR GEAR	
30 31 32 33 35	2B 3B 1B 2A 2B		D13-2168-04 D13-2171-04 D13-2400-23 D14-0759-04 D21-2382-04	GEAR GEAR RACK (GEAR) ROLLER SHAFT	
36 37	1A 1B		D23-0954-04 D39-0271-05	RETAINER DAMPER	
38 39 40 41 42	2B 2A 2A 1B 2A		G01-3072-04 G01-3073-04 G01-3074-04 G01-4615-04 G01-3076-04	EXTENSION SPRING TORSION COIL SPRING EXTENSION SPRING EXTENSION SPRING EXTENSION SPRING	
43 44 45	1B 2B 2B		G01-3077-14 G02-1399-14 G02-1547-14	EXTENSION SPRING FLAT SPRING FLAT SPRING	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
51 52 53 55 56	1A 3B 1B 1A 1B		J22-0473-21 J22-0474-12 J22-0519-13 J90-1138-41 J90-1023-03	MOUNTING HARDWARE MOUNTING HARDWARE MOUNTING HARDWARE GUIDE GUIDE	
DFPC1	3A		J86-0039-05	FPC (LEAD FREE)	
A B C E F	2B 1B 2B 2B 1A		N09-4460-15 N09-6317-05 N09-6004-15 N09-6007-15 N09-6051-15	TAPTITE SCREW (PT 2X8) TAPTITE SCREW (PT 1.7X6) MACHINE SCREW (M1.7X2.5) MACHINE SCREW (PAN M2X2) TAPTITE SCREW (BIND P 2X5)	
G H J K	2A 1B 1B 3B		N19-2163-04 N39-2020-48 N09-6108-15 N09-6155-15	FLAT WASHER (1.6X6X0.25) PAN HEAD MACHINE SCREW TAPTITE SCREW (M2X3.5) SEMS (TAPTITE SCREW) (PT 2X6)	
DM1 DM2	3B 2B		T42-1066-14 T42-1067-14	DC MOTOR (SPINDLE) DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY	

E1 : KDC-W7541U E2 : KDC-W7541UY (Europe)
K : KDC-X792 K1 : KDC-MP738U (North America)
50 M : KDC-X8009U (Other Areas)

△Indicates safety critical compo nents.