



A


B

- A : N09-6108-15
 B : N09-6426-15
 C : N09-6735-05
 D : N09-6737-15
 E : N09-6738-15
 F : N19-2335-14
 G : N35-2003-48
 H : N39-1720-48

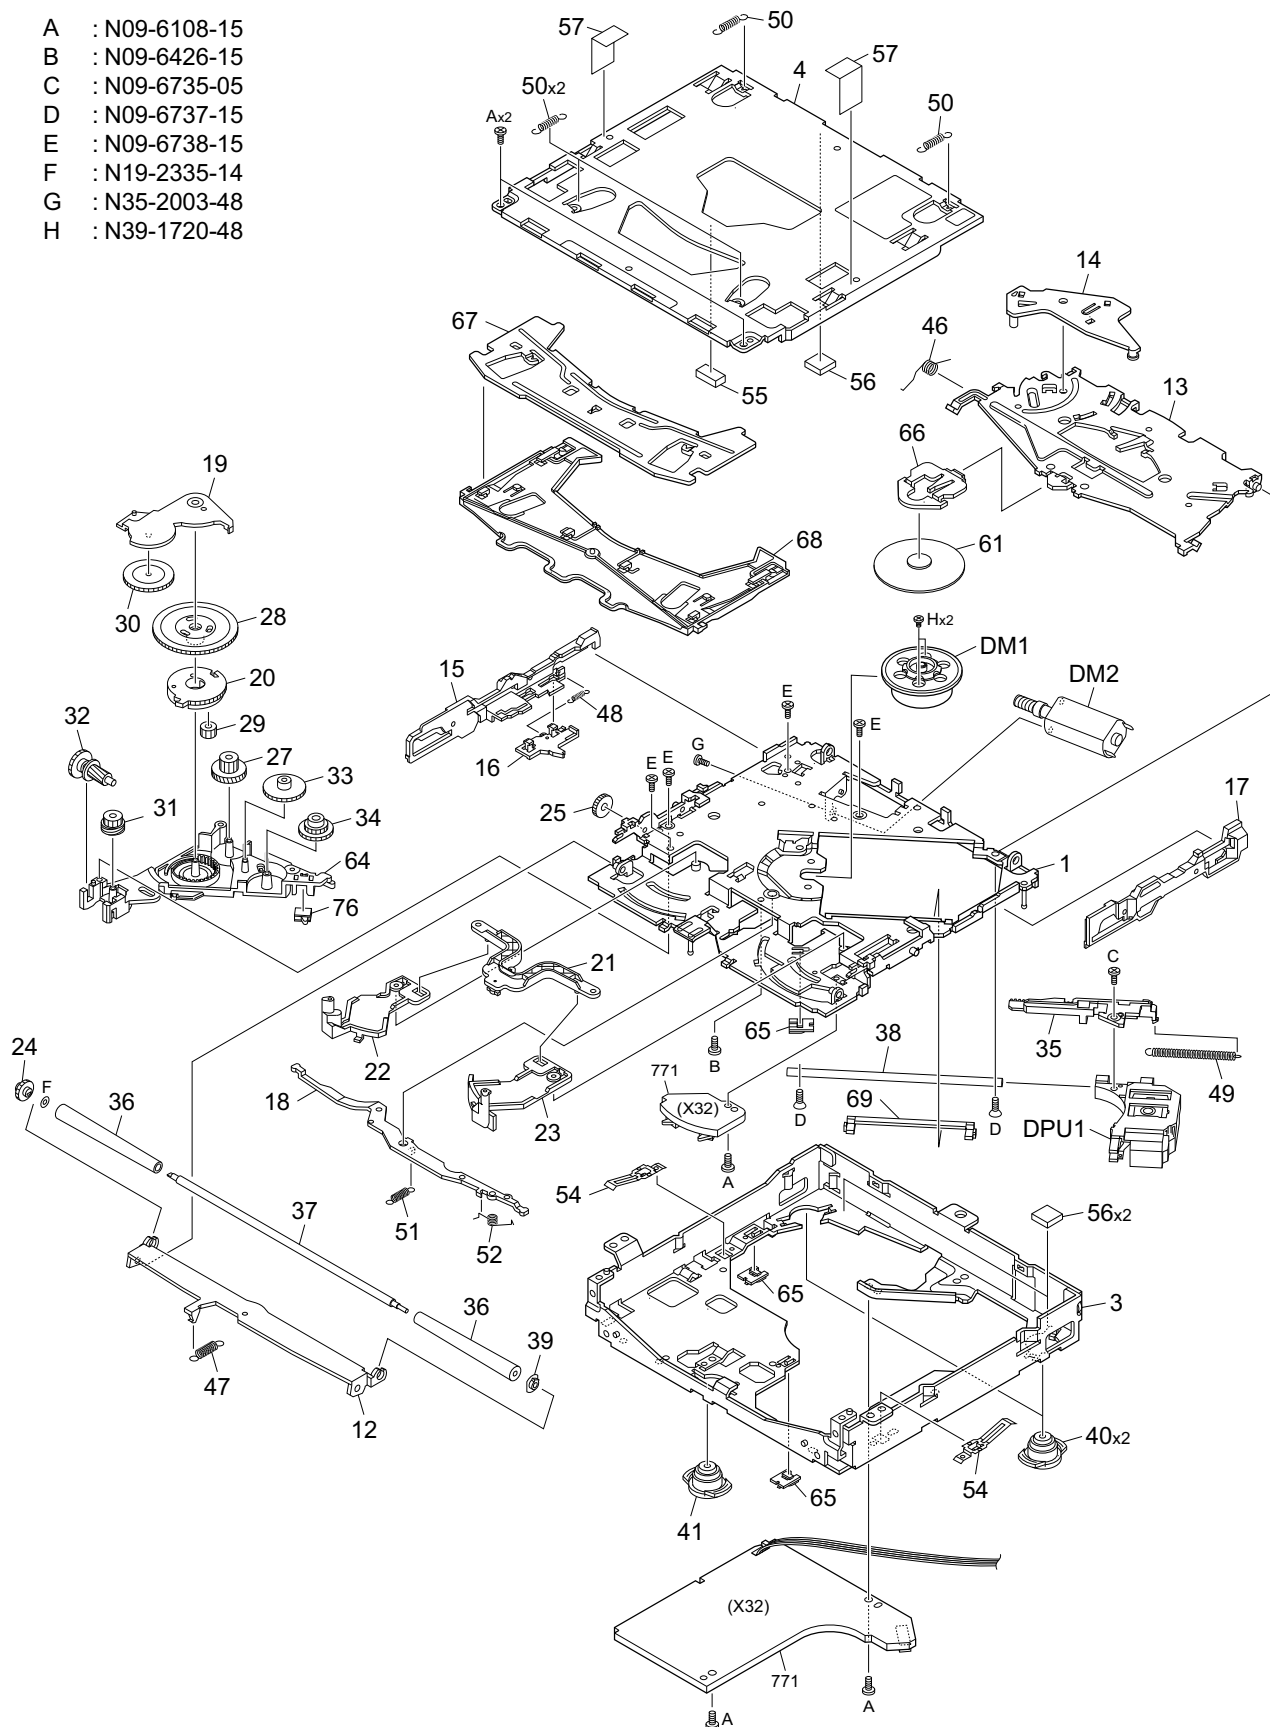

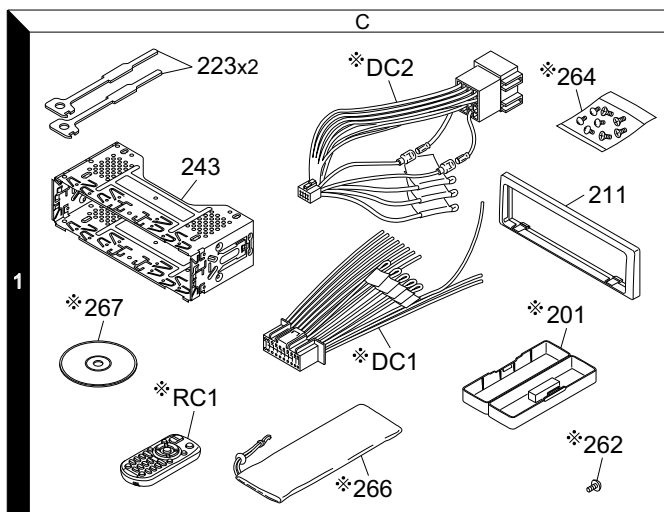


B : N09-6758-05
 D : N80-2008-43
 H : N86-2604-43
 J : N86-2606-48
 K : N80-3008-48
 L : N83-3005-48
 M : N83-3008-48
 N : N83-3016-48
 P : N86-2604-43

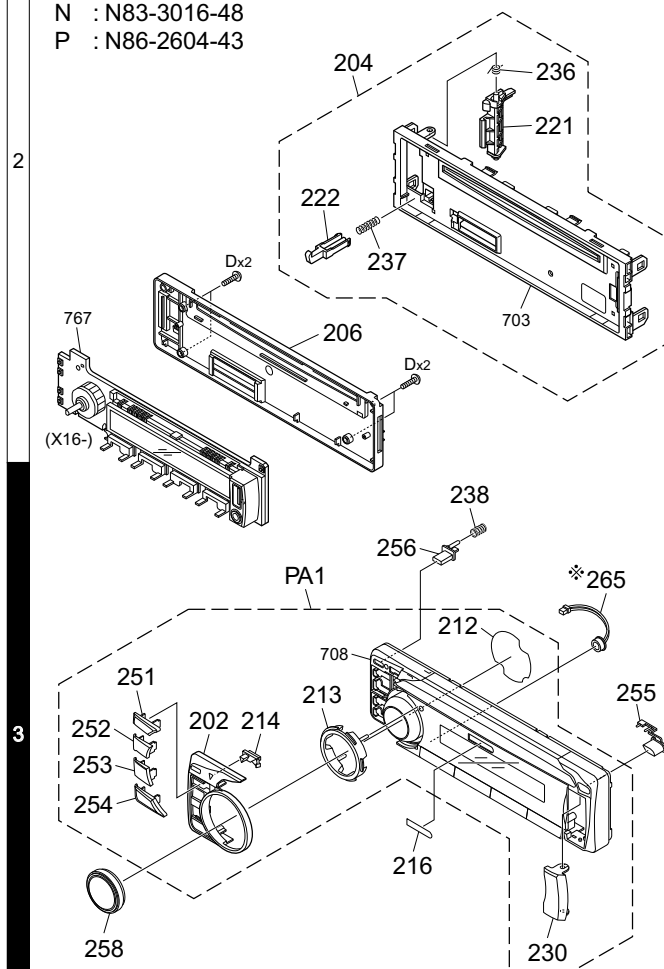

3

※ Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

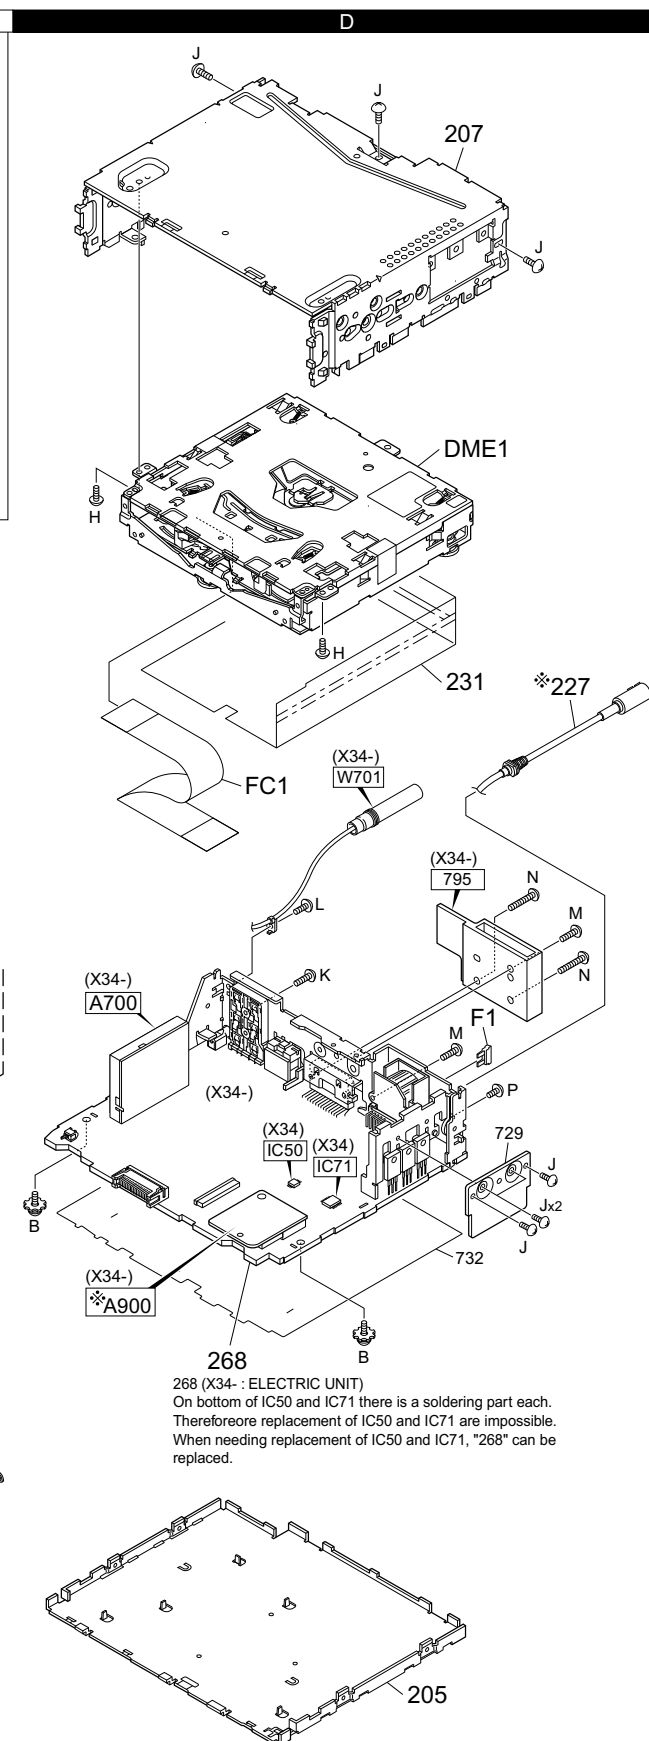

KDC-X494

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref.No.	A d d w	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d w	N e w	Parts No.	Description	Dest inati on
KDC-5047U/BT50U/MP445U/U6046/KDC-U7046BT/X494						KMR-440U					
201	1C		A02-2757-13	PLASTIC CABINET ASSY	M1M2M3	236	2C		G01-4750-04	TORSION COIL SPRING	
201	1C		A02-2757-13	PLASTIC CABINET ASSY	M4	237	2C		G01-4749-04	COMPRESSION SPRING	
202	3C	*	A21-6760-02	DRESSING PANEL	KM3M4	238	3C		G01-3244-04	COMPRESSION SPRING	
202	3C	*	A21-6761-02	DRESSING PANEL	K1E1M1	-		*	H54-4794-03	ITEM CARTON CASE	K
202	3C	*	A21-6761-02	DRESSING PANEL	M2E2	-		*	H54-4795-03	ITEM CARTON CASE	K1
						-		*	H54-4796-03	ITEM CARTON CASE	E1
						-		*	H54-4797-03	ITEM CARTON CASE	M1
						-		*	H54-4798-03	ITEM CARTON CASE	M2
202	3C	*	A21-6762-02	DRESSING PANEL	K2E3	-		*	H54-4800-03	ITEM CARTON CASE	E2
204	2C	*	A22-3264-13	SUB PANEL ASSY		-		*	H54-4801-03	ITEM CARTON CASE	M3
205	3D	*	A40-1388-02	BOTTOM PLATE		-		*	H54-4802-03	ITEM CARTON CASE	M4
206	2C	*	A46-1904-01	REAR COVER		-		*	H54-4803-03	ITEM CARTON CASE	K2
207	1D	*	A52-1109-11	TOP COVER		-		*	H54-4804-03	ITEM CARTON CASE	E3
PA1	3C	*	A64-5025-02	PANEL ASSY	K	243	1C	*	J22-0789-03	MOUNTING HARDWARE ASSY	
PA1	3C	*	A64-5026-02	PANEL ASSY	K1						
PA1	3C	*	A64-5027-02	PANEL ASSY	E1	251	3C	*	K24-5045-03	PUSH KNOB (SRC)	
PA1	3C	*	A64-5028-02	PANEL ASSY	M1M2	252	3C	*	K24-5046-03	PUSH KNOB (SEARCH)	
PA1	3C	*	A64-5031-02	PANEL ASSY	E2	253	3C	*	K24-5047-03	PUSH KNOB (RETURN)	
						254	3C	*	K24-5048-03	PUSH KNOB (FNC)	
PA1	3C	*	A64-5032-02	PANEL ASSY	M3M4	255	3C	*	K24-5055-03	PUSH KNOB (EJECT)	
PA1	3C	*	A64-5056-02	PANEL ASSY	K2	256	3C	*	K24-5056-04	PUSH KNOB (RELEASE)	
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-40)	KK1M1	258	3C	*	K28-0398-04	KNOB ASSY (VOL)	
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-40)	M2M3M4						
-		*	B59-2005-00	SUB-INST. MANUAL (ENG.FRE.SPA.)	KK1K2	262	1C		N80-2006-48	PAN HEAD TAPTITE SCREW	KK1M1
-		*	B59-2006-00	SUB-INST. MANUAL (ENG.FRE.)	E1E2E3	262	1C		N80-2006-48	PAN HEAD TAPTITE SCREW	K2
-		*	B59-2006-00	SUB-INST. MANUAL (GER.DUT.)	E1E2E3	262	1C		N80-2006-48	PAN HEAD TAPTITE SCREW	M2M3
-		*	B59-2007-00	SUB-INST. MANUAL (ITA.SPA.POR.)	E1E2E3	264	1C		N99-1757-15	SCREW SET	KK1M1
-		*	B59-2007-00	SUB-INST. MANUAL (RUS.UKR.)	E1E2E3	264	1C		N99-1757-15	SCREW SET	K2
-		*	B59-2008-00	SUB-INST. MANUAL (ENGLISH)	M1M2M3						
-		*	B59-2008-00	SUB-INST. MANUAL (S-CHI.ARA.)	M4	264	1C		N99-1757-15	SCREW SET	M2M3
-		*	B64-4640-00	INST. MANUAL (ENGLISH)	M1M2M3	B	3D		N09-6758-05	TAPTITE SCREW	
-		*	B64-4640-00	INST. MANUAL (ENGLISH)	M4	D	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
-		*	B64-4641-00	INST. MANUAL (S-CHINESE)	M1M3	H	1D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
-		*	B64-4641-00	INST. MANUAL (S-CHINESE)	M1M3	J	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
-		*	B64-4642-00	INST. MANUAL (ARABIC)	M2M4						
211	1C		B07-3244-01	ESCUTCHEON	K1	265	3C	*	T91-1007-05	MICROHONE ASSY	E2M3
211	1C		B07-3245-01	ESCUTCHEON	KE1M1						
211	1C		B07-3245-01	ESCUTCHEON	M2E2M3	266	1C		W01-1664-05	CARRYING CASE (EXCELON)	K
211	1C		B07-3245-01	ESCUTCHEON	M4	266	1C		W01-1710-05	CARRYING CASE	K1E1E
						266	1C		W01-1710-05	CARRYING CASE	K2E3
211	1C		B07-3247-01	ESCUTCHEON	K2E3	267	1C	*	W01-1777-05	COMPACT DISC (INST. MANUAL)	E2K2E
212	3C	*	B11-2045-04	OPTICAL DIFFUSER		267	1C	*	W01-1777-05	COMPACT DISC (INST. MANUAL)	KK1E1
213	3C	*	B19-2558-03	LIGHTING BOARD (VOL)							
214	3C	*	B19-2560-03	LIGHTING BOARD (TRIANGLE)		268	3D	*	X34-6650-10	ELECTRIC UNIT (For IC50,71)	K
216	3C	*	B43-1545-14	BADGE		268	3D	*	X34-6650-11	ELECTRIC UNIT (For IC50,71)	K1
						268	3D	*	X34-6650-21	ELECTRIC UNIT (For IC50,71)	M1
						268	3D	*	X34-6650-22	ELECTRIC UNIT (For IC50,71)	M2
						268	3D	*	X34-6652-71	ELECTRIC UNIT (For IC50,71)	E1
221	2C		D10-7099-03	LEVER		268	3D	*	X34-6660-21	ELECTRIC UNIT (For IC50,71)	M3
222	2C		D10-7098-03	LEVER		268	3D	*	X34-6660-22	ELECTRIC UNIT (For IC50,71)	M4
223	1C		D10-7106-04	LEVER (ACCESSORY)		268	3D	*	X34-6662-70	ELECTRIC UNIT (For IC50,71)	E2
						268	3D	*	X34-6670-10	ELECTRIC UNIT (For IC50,71)	K2
						268	3D	*	X34-6672-71	ELECTRIC UNIT (For IC50,71)	E3
227	2D	*	E30-6944-05	CORD WITH CONNECTOR (REMOTE)	K2E3	DME1	1D		X92-6360-04	MECHANISM ASSY (DXM-9B34W)	
⚠ DC1	1C	*	E30-6939-05	DC CORD	KK1M1	SWITCH UNIT (X16-68xx-xx)					
⚠ DC1	1C	*	E30-6939-05	DC CORD	K2	D11 ,12			B30-1779-05	LED (1608,SR)	E1E2
⚠ DC1	1C	*	E30-6939-05	DC CORD	M2M3M4	D12			B30-1779-05	LED (1608,SR)	KK1M1
⚠ DC2	1C	*	E30-6940-05	DC CORD	E1E2E3	D12			B30-1779-05	LED (1608,SR)	K2E3
FC1	2D		E39-1104-05	FLAT CABLE							
230	3C	*	F07-2220-03	COVER							
231	2D		F11-1874-03	SHIELDING COVER							
⚠ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)							

K: KDC-X494 **K1:** KDC-MP445U **K2:** KMR-440U **M1:** KDC-U6046 **M2:** KDC-U6046L

M3: KDC-U7046BT **M4:** KDC-U7046BTL **E1:** KDC-5047U **E2:** KDC-BT50U **E3:** : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-68xx-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
D12			B30-1779-05	LED (1608,SR)	M2M3M4	R14 ,15			RK73GB2A472J	CHIP R 4.7K J 1/10W	M2M3
D100-108			B30-3208-05	LED (RGB,F9)	E1E2	R14 ,15			RK73HB1J472J	CHIP R 4.7K J 1/16W	E1E2
D100-111			B30-3210-05	LED (1608,BLUE)	M3M4	R16			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
D100-113			B30-3210-05	LED (1608,BLUE)	KK1M1	R16			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
D100-113			B30-3210-05	LED (1608,BLUE)	M2K2E3	R16			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3
D112			B30-3221-05	LED (HI GREEN)	M3M4	R16			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
D113			B30-1779-05	LED (1608,SR)	M3M4	R17			RK73GB2A303J	CHIP R 30K J 1/10W	M3
C3			CK73GB1A105K	CHIP C 1.0UF K	KK1M1	R17			RK73GB2A333J	CHIP R 33K J 1/10W	M4
C3			CK73GB1A105K	CHIP C 1.0UF K	M2M3M4	R17			RK73GB2A393J	CHIP R 39K J 1/10W	M1
C3			CK73HB0J105K	CHIP C 1.0UF K	E1E2	R17			RK73GB2A433J	CHIP R 43K J 1/10W	M2
C5 ,6			CK73GB1H103K	CHIP C 0.010UF K	KK1M1	R17			RK73GB2A513J	CHIP R 51K J 1/10W	K2E3
C5 ,6			CK73GB1H103K	CHIP C 0.010UF K	K2E3	R17 -19			RK73GB2A473J	CHIP R 47K J 1/10W	KK1
C5 ,6			CK73GB1H103K	CHIP C 0.010UF K	M2M3M4	R17 -19			RK73HB1J473J	CHIP R 47K J 1/16W	E1E2
C5 ,6			CK73HB1E103K	CHIP C 0.010UF K	E1E2	R18 ,19			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2
C7			CK73GB1H104K	CHIP C 0.10UF K	KK1M1	R18 ,19			RK73GB2A473J	CHIP R 47K J 1/10W	M4K2E
C7			CK73GB1H104K	CHIP C 0.10UF K	K2E3	R21			RK73GB2A561J	CHIP R 560 J 1/10W	KK1M1
C7			CK73GB1H104K	CHIP C 0.10UF K	M2M3M4	R21			RK73GB2A561J	CHIP R 560 J 1/10W	K2E3
C7			CK73HB1A104K	CHIP C 0.10UF K	E1E2	R21			RK73GB2A561J	CHIP R 560 J 1/10W	M2M3
C8			CK73GB1H103K	CHIP C 0.010UF K	KK1M1	R21			RK73HB1J561J	CHIP R 560 J 1/16W	E1E2
C8			CK73GB1H103K	CHIP C 0.010UF K	K2E3	R22			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
C8			CK73GB1H103K	CHIP C 0.010UF K	M2M3M4	R22 -24			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
C8			CK73HB1E103K	CHIP C 0.010UF K	E1E2	R22 -24			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
C10 ,11			CK73GB1H104K	CHIP C 0.10UF K		R22 -24			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3
C15			CK73FB0J226M	CHIP C 22UF M		R23			RK73GB2A361J	CHIP R 360 J 1/10W	E1E2
CN1			E41-1486-05	PIN ASSY	E2M3M4	R25			RK73GB2A473J	CHIP R 47K J 1/10W	KK1M1
J1			E59-0855-05	RECTANGULAR PLUG		R25			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3
J2			E58-1129-05	RECTANGULAR RECEPTACLE		R25			RK73HB1J473J	CHIP R 47K J 1/16W	M2M3
J4			E11-0669-05	3.5D PHONE JACK		R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2
L1			L92-0616-05	CHIP FERRITE		R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1M1
L2			L92-0386-05	CHIP FERRITE		R26			RK73HB1J102J	CHIP R 1.0K J 1/16W	K2E3
X1			L78-0872-05	RESONATOR (12MHZ)		R26			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2
CP2		*	RK74HB1J561J	CHIP-COM 560 J 1/16W		R27			RK73GB2A104J	CHIP R 100K J 1/10W	KK1M1
CP3			RK74HB1J223J	CHIP-COM 22K J 1/16W		R27			RK73GB2A104J	CHIP R 100K J 1/10W	K2E3
CP4			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R27			RK73GB2A104J	CHIP R 100K J 1/10W	M2M3
CP5			RK74HB1J223J	CHIP-COM 22K J 1/16W		R27			RK73HB1J104J	CHIP R 100K J 1/16W	E1E2
CP6			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R28 ,29			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1
CP7			RK74HB1J223J	CHIP-COM 22K J 1/16W		R28 ,29			RK73GB2A223J	CHIP R 22K J 1/10W	K2E3
CP8			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R28 ,29			RK73GB2A223J	CHIP R 22K J 1/10W	M2M3
CP9			RK74HB1J101J	CHIP-COM 100 J 1/16W	KK1M1	R28 ,29			RK73HB1J223J	CHIP R 22K J 1/16W	E1E2
CP9			RK74HB1J101J	CHIP-COM 100 J 1/16W	K2E3	R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1M1
CP9			RK74HB1J101J	CHIP-COM 100 J 1/16W	M2M3M4	R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2E3
CP9 -11			RK74HB1J101J	CHIP-COM 100 J 1/16W	E1E2	R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	M2M3
CP11			RK74HB1J101J	CHIP-COM 100 J 1/16W	KK1M1	R30			RK73HB1J102J	CHIP R 1.0K J 1/16W	E1E2
CP11			RK74HB1J101J	CHIP-COM 100 J 1/16W	K2E3	R32			RK73GB2A103J	CHIP R 10K J 1/10W	KK1M1
CP11			RK74HB1J101J	CHIP-COM 100 J 1/16W	M2M3M4	R32			RK73GB2A103J	CHIP R 10K J 1/10W	K2E3
CP12			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	E1E2	R32			RK73HB1J103J	CHIP R 10K J 1/16W	E1E2
CP13,14			RK74HB1J101J	CHIP-COM 100 J 1/16W	KK1M1	R33			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
R13			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3	R33			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
R13			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M4	R33			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3
R13			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2	R33			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
R14 ,15			RK73GB2A472J	CHIP R 4.7K J 1/10W	KK1M1	R34			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1
R14 ,15			RK73GB2A472J	CHIP R 4.7K J 1/10W	K2E3	R34			RK73GB2A223J	CHIP R 22K J 1/10W	K2E3
						R34			RK73GB2A223J	CHIP R 22K J 1/10W	M2M3

K: KDC-X494 K1: KDC-MP445U K2: KMR-440U M1: KDC-U6046 M2: KDC-U6046L
M3: KDC-U7046BT M4: KDC-U7046BTL E1: KDC-5047U E2: KDC-BT50U E3: : KMR-440U

▲ indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-68xx-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R34			RK73HB1J223J	CHIP R 22K J 1/16W	E1E2	R114,115			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1M1	R116			RK73FB2B181J	CHIP R 180 J 1/8W	E1
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2E3	R117,118			RK73GB2A111J	CHIP R 110 J 1/10W	E1
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	M2M3M4	R119			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R35			RK73HB1J102J	CHIP R 1.0K J 1/16W	E1E2	R120,121			RK73GB2A111J	CHIP R 110 J 1/10W	E1
R36			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1	R121			RK73GB2A111J	CHIP R 110 J 1/10W	E2
R36			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M4	R122			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R36			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2	R123,124			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R37			RK73HB1J100J	CHIP R 10 J 1/16W	E1E2	R125			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R37 ,38			RK73GB2A100J	CHIP R 10 J 1/10W	KK1M1	R126			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R37 ,38			RK73GB2A100J	CHIP R 10 J 1/10W	K2E3	S1 -9	*		S70-0960-05	TACT SWITCH	
R37 ,38			RK73GB2A100J	CHIP R 10 J 1/10W	M2M3M4	S10	*		S70-0961-05	TACT SWITCH	
R38			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2	D10			1SS355	DIODE	
R39			RK73GB2A301J	CHIP R 300 J 1/10W	KK1M1	D13			1SS355	DIODE	
R39			RK73GB2A301J	CHIP R 300 J 1/10W	K2E3	ED1	*		GP1254AI	FLUORESCENT INDICATOR TUBE	
R39			RK73GB2A301J	CHIP R 300 J 1/10W	M2M3M4	IC1	*		W05-1609-00	MICROCONTROLLER IC	E1E2E
R39			RK73GB2A361J	CHIP R 360 J 1/10W	E1E2	IC1	*		W05-1609-00	MICROCONTROLLER IC	K2
R40			RK73GH2A201D	CHIP R 200 D 1/10W	KK1M1	IC1	*		W05-1610-00	MICROCONTROLLER IC	M1M3
R40			RK73GH2A201D	CHIP R 200 D 1/10W	K2E3	IC1	*		W05-1611-00	MICROCONTROLLER IC	M2M4
R40			RK73GH2A201D	CHIP R 200 D 1/10W	M2M3M4	IC1	*		W05-1612-00	MICROCONTROLLER IC	KK1
R40			RK73HH1J201D	CHIP R 200 D 1/16W	E1E2	IC3			PIC95603	ANALOGUE IC	E1E2K
R41			RK73GH2A471D	CHIP R 470 D 1/10W	KK1M1	IC3			PIC95603	ANALOGUE IC	K1M1M
R41			RK73GH2A471D	CHIP R 470 D 1/10W	K2E3	IC3			PIC95603	ANALOGUE IC	M3M4
R41			RK73GH2A471D	CHIP R 470 D 1/10W	M2M3M4	Q1			RT1N144M-T111	TRANSISTOR	KK1M1
R41			RK73HH1J471D	CHIP R 470 D 1/16W	E1E2	Q1			RT1N144M-T111	TRANSISTOR	K2E3
R44 ,45			RK73GB2A330J	CHIP R 33 J 1/10W	KK1M1	Q1			RT1N144M-T111	TRANSISTOR	M2M3
R44 ,45			RK73GB2A330J	CHIP R 33 J 1/10W	K2E3	Q1 ,2			RT1N144M-T111	TRANSISTOR	E1E2
R44 ,45			RK73GB2A330J	CHIP R 33 J 1/10W	M2M3M4	Q3			2SB1188	TRANSISTOR	
R46			RK73GB2A104J	CHIP R 100K J 1/10W	KK1M1	Q100-102			RT1N237M-T111	TRANSISTOR	E1E2
R46			RK73GB2A104J	CHIP R 100K J 1/10W	K2E3	Q100,101			RT1N436M-T111	TRANSISTOR	KK1M1
R46			RK73GB2A104J	CHIP R 100K J 1/10W	M2M3M4	Q100,101			RT1N436M-T111	TRANSISTOR	K2E3
R46			RK73HB1J104J	CHIP R 100K J 1/16W	E1E2	Q100,101			RT1N436M-T111	TRANSISTOR	M2M3
R50			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1	Q102-105			RT1N144M-T111	TRANSISTOR	KK1M1
R50			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3	Q102-105			RT1N144M-T111	TRANSISTOR	K2E3
R50			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M4	Q102-105			RT1N144M-T111	TRANSISTOR	M2M3
R50			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2	Q103-109			RT1N436M-T111	TRANSISTOR	E2
R51			RK73GB2A103J	CHIP R 10K J 1/10W	KK1M1	Q103-114			RT1N436M-T111	TRANSISTOR	E1
R51			RK73GB2A103J	CHIP R 10K J 1/10W	K2E3	Q106			RT1N436M-T111	TRANSISTOR	KK1M1
R51			RK73GB2A103J	CHIP R 10K J 1/10W	M2M3M4	Q106			RT1N436M-T111	TRANSISTOR	K2E3
R51			RK73HB1J103J	CHIP R 10K J 1/16W	E1E2	Q106			RT1N436M-T111	TRANSISTOR	M2M3
R100			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2	Q113			RT1N436M-T111	TRANSISTOR	E2
R100-111			RK73GB2A561J	CHIP R 560 J 1/10W	M3M4	CD PLAYER UNIT (X32-6260-01) IN CD MECHA					
R100-113			RK73GB2A561J	CHIP R 560 J 1/10W	KK1M1	C1 ,2			CK73GB1A105K	CHIP C 1.0UF K	
R100-113			RK73GB2A561J	CHIP R 560 J 1/10W	M2K2E3	C3			CK73GB1A474K	CHIP C 0.47UF K	
R101			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2	C4 -7			CK73GB1A105K	CHIP C 1.0UF K	
R102,103			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2	C9			CK73GB1C104K	CHIP C 0.10UF K	
R104			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2	C11			CK73GB1H153K	CHIP C 0.015UF K	
R105,106			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2	C12			CK73GB1H103K	CHIP C 0.010UF K	
R107			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2	C21			CK73GB1H103K	CHIP C 0.010UF K	
R108,109			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2	C22			CC73GCH1H220J	CHIP C 22PF J	
R110			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2	C23			CC73GCH1H180J	CHIP C 18PF J	
R111,112			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2	C24 ,25			CK73GB1H103K	CHIP C 0.010UF K	
R112			RK73GB2A331J	CHIP R 330 J 1/10W	M3M4	C26			CK73FB0J106K	CHIP C 10UF K	
R113			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2	C27			CK73GB1A105K	CHIP C 1.0UF K	
R113			RK73GB2A361J	CHIP R 360 J 1/10W	M3M4						

K: KDC-X494 K1: KDC-MP445U K2: KMR-440U M1: KDC-U6046 M2: KDC-U6046L
M3: KDC-U7046BT M4: KDC-U7046BTL E1: KDC-5047U E2: KDC-BT50U E3: : KMR-440U

▲ indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6260-01) IN CD MECHA

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C28			CK73GB1H103K	CHIP C 0.010UF K		R23			RK73GB2A223J	CHIP R 22K J 1/10W	
C29			CK73FB0J106K	CHIP C 10UF K		R24			RK73GB2A101J	CHIP R 100 J 1/10W	
C30 -33			CK73GB1H103K	CHIP C 0.010UF K		R25			RK73GB2A104J	CHIP R 100K J 1/10W	
C34 ,35			CC73GCH1H150J	CHIP C 15PF J		R26			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
C36			CK73GB1H103K	CHIP C 0.010UF K		R27			RK73GB2A101J	CHIP R 100 J 1/10W	
C37			CK73GB1A105K	CHIP C 1.0UF K		R28 ,29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C38			CK73GB1H103K	CHIP C 0.010UF K		R30			RK73GB2A223J	CHIP R 22K J 1/10W	
C51			CK73GB1C104K	CHIP C 0.10UF K		R31			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C52			CK73GB1H222K	CHIP C 2200PF K		R33			RK73GB2A223J	CHIP R 22K J 1/10W	
C53			CK73FB1C105K	CHIP C 1.0UF K		R36			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C54			CK73GB1H103K	CHIP C 0.010UF K		R38			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C55			CK73GB1H332K	CHIP C 3300PF K		R41			RK73GB2A223J	CHIP R 22K J 1/10W	
C56			CK73GB1C104K	CHIP C 0.10UF K		R44			RK73GB2A223J	CHIP R 22K J 1/10W	
C57			CK73GB1H153K	CHIP C 0.015UF K		R45			RK73GB2A101J	CHIP R 100 J 1/10W	
C58			CK73GB1C104K	CHIP C 0.10UF K		R47			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C59			CC73GCH1H680J	CHIP C 68PF J		R48			RK73GB2A105J	CHIP R 1.0M J 1/10W	
C61			CK73GB1C104K	CHIP C 0.10UF K		R49			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C62			CK73FB0J106K	CHIP C 10UF K		R50			RK73GB2A223J	CHIP R 22K J 1/10W	
C63			CK73GB1H333K	CHIP C 0.033UF K		R51			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C64			CK73GB1H472K	CHIP C 4700PF K		R52			RK73GB2A100J	CHIP R 10 J 1/10W	
C65			CK73GB1C104K	CHIP C 0.10UF K		R53			RK73GB2A153J	CHIP R 15K J 1/10W	
C66			CK73GB1H153K	CHIP C 0.015UF K		R54			RK73GB2A100J	CHIP R 10 J 1/10W	
C67			CK73GB1H103K	CHIP C 0.010UF K		R55			RK73GB2A153J	CHIP R 15K J 1/10W	
C68			CK73GB1C104K	CHIP C 0.10UF K		R57			RK73GB2A223J	CHIP R 22K J 1/10W	
C69			CK73FB0J106K	CHIP C 10UF K		R58 ,59			RK73GB2A101J	CHIP R 100 J 1/10W	
C71			CK73FB0J106K	CHIP C 10UF K		R63			RK73GB2A223J	CHIP R 22K J 1/10W	
C73 ,74			CK73GB1H102K	CHIP C 1000PF K		R65 ,66			RK73GB2A332J	CHIP R 3.3K J 1/10W	
C75 -77			CK73GB1C104K	CHIP C 0.10UF K		R67 -69			RK73GB2A101J	CHIP R 100 J 1/10W	
C78			CK73GB1A105K	CHIP C 1.0UF K		R70			RK73GB2A223J	CHIP R 22K J 1/10W	
C79 -81			CK73GB1C104K	CHIP C 0.10UF K		R81 ,82			RK73GB2A101J	CHIP R 100 J 1/10W	
C83			CC73GCH1H470J	CHIP C 47PF J		R84			RK73GB2A101J	CHIP R 100 J 1/10W	
C84			CK73GB1H153K	CHIP C 0.015UF K		R86			RK73GB2A101J	CHIP R 100 J 1/10W	
C85			CK73GB1A105K	CHIP C 1.0UF K		R88			RK73GB2A101J	CHIP R 100 J 1/10W	
C86			CK73GB1H103K	CHIP C 0.010UF K		R90 -94			RK73GB2A101J	CHIP R 100 J 1/10W	
C92			CK73FB1A225K	CHIP C 2.2UF K		R95 -98			RK73GB2A223J	CHIP R 22K J 1/10W	
C93			CC73GCH1H101J	CHIP C 100PF J		R101			RK73GB2A221J	CHIP R 220 J 1/10W	
C94			CC73GCH1H560J	CHIP C 56PF J		R102			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
C101,102			CK73GB1H103K	CHIP C 0.010UF K		R103			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C113			CK73GB1C104K	CHIP C 0.10UF K		R104			RK73GB2A225J	CHIP R 2.2M J 1/10W	
						R105			RK73GB2A104J	CHIP R 100K J 1/10W	
CN1			E41-2954-05	FLAT CABLE CONNECTOR		R106			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CN2			E41-2083-15	FLAT CABLE CONNECTOR		R107			RK73GB2A560J	CHIP R 56 J 1/10W	
X1			L77-2964-05	CRYSTAL RESONATOR (9.00MHZ)		R108			RK73GB2A333J	CHIP R 33K J 1/10W	
X2			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)		R109			RK73GB2A622J	CHIP R 6.2K J 1/10W	
X3			L78-1221-05	RESONATOR (16.93MHZ)		R110			RK73GB2A913J	CHIP R 91K J 1/10W	
CP10			RK74GA1J101J	CHIP-COM 100 J 1/16W		R112,113			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
CP11,12			RK74GB1J101J	CHIP-COM 100 J 1/16W		R115			RK73GB2A105J	CHIP R 1.0M J 1/10W	
CP15			RK74GB1J103J	CHIP-COM 10K J 1/16W		R116			RK73GB2A681J	CHIP R 680 J 1/10W	
CP22			RK74GB1J103J	CHIP-COM 10K J 1/16W		R117-121			RK73GB2A103J	CHIP R 10K J 1/10W	
R1 ,2			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R123			RK73GB2A104J	CHIP R 100K J 1/10W	
R3			RK73GB2A202J	CHIP R 2.0K J 1/10W		R127			RK73GB2A153J	CHIP R 15K J 1/10W	
R4			RK73GB2A103J	CHIP R 10K J 1/10W		R128			RK73GB2A334J	CHIP R 330K J 1/10W	
R10			RK73GB2A000J	CHIP R 0.0 J 1/10W		R131			RK73GB2A204J	CHIP R 200K J 1/10W	
R19			RK73GB2A223J	CHIP R 22K J 1/10W		R132			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A102J	CHIP R 1.0K J 1/10W		R136			RK73GB2A363J	CHIP R 36K J 1/10W	

K: KDC-X494 K1: KDC-MP445U K2: KMR-440U M1: KDC-U6046 M2: KDC-U6046L
M3: KDC-U7046BT M4: KDC-U7046BTL E1: KDC-5047U E2: KDC-BT50U E3: : KMR-440U

▲ indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6260-01) IN CD MECHA

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R137			RK73GB2A223J	CHIP R 22K J 1/10W	
R139			RK73GB2A393J	CHIP R 39K J 1/10W	
R151			RK73GB2A333J	CHIP R 33K J 1/10W	
R152			RK73GB2A223J	CHIP R 22K J 1/10W	
R173-178			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R180			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1 ,2			S68-0924-05	PUSH SWITCH	
D1			DAP202U	DIODE	
D2 ,3			DA204U	DIODE	
IC1			92CD28AFG7EG0	MICROCONTROLLER IC	
IC2			TC94A92FG-301	MOS-IC	
IC3			BD8222EFV	ANALOGUE IC	
IC4			MFI341S2162	MICROPROCESSOR IC	
IC5			74AHCT08PW	MOS-IC	
IC6			74LVC08APW	MOS-IC	
IC7			XC6415S001P1	MOS-IC	
IC9			XC6219B332MR	ANALOGUE IC	
Q3			RUE003N02	FET	
Q5			2SA1577	TRANSISTOR	
Q6			DTC114YUA	DIGITAL TRANSISTOR	
Q7			2SA1365-T1(E)	TRANSISTOR	
Q9			DTC144EUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-66xx-xx)					
C2			CD04AZ1C332M2	ELECTRO 3300UF 16WV	
C20			CD04BF1C221M	ELECTRO 220UF 16WV	
C22			CK73GB1A105K	CHIP C 1.0UF K	
C30			CK73EB1C106K	CHIP C 10UF K	
C31			CK73FB0J106K	CHIP C 10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
C33			C90-6851-05	ELECTRO 220UF 25WV	
C40			CD04AJ1C101M	ELECTRO 100UF 16WV	
C41			CK73GB1A474K	CHIP C 0.47UF K	
C50			CK73GB0J106M	CHIP C 10UF M	
C51			CC73GCH1H220J	CHIP C 22PF J	
C52			CK73GB0J106M	CHIP C 10UF M	
C53			CK73GB1A474K	CHIP C 0.47UF K	
C54			CK73GB1H103K	CHIP C 0.010UF K	
C55			CK73EB1H475K	CHIP C 4.7UF K	
C56			CK73GB1C224K	CHIP C 0.22UF K	
C57			CC73GCH1H331J	CHIP C 330PF J	
C58			CK73GB1H104K	CHIP C 0.10UF K	
C59			CK73GB1H103K	CHIP C 0.010UF K	
C60			CD04BF1C221M	ELECTRO 220UF 16WV	
C61			CK73GB1C104K	CHIP C 0.10UF K	
C64			CK73GB1H104K	CHIP C 0.10UF K	
C71			C93-0059-05	CERAMIC 1UF K	
C72			CK73GB1H102K	CHIP C 1000PF K	
C73			CK73GB1H103K	CHIP C 0.010UF K	
C74 -76			CK73GB1H104K	CHIP C 0.10UF K	
C77			CK73FB1E475K	CHIP C 4.7UF K	
C78			CK73GB1H103K	CHIP C 0.010UF K	
C79			CK73GB1H104K	CHIP C 0.10UF K	
C80			CK73GB1H103K	CHIP C 0.010UF K	
C81			CK73GB1H222K	CHIP C 2200PF K	
C82			CK73FB0J106K	CHIP C 10UF K	
C83			CK73GB1H104K	CHIP C 0.10UF K	
C84			CK73GB0J475K	CHIP C 4.7UF K	
C85			CK73GB1H103K	CHIP C 0.010UF K	
C86			CK73FB1E475K	CHIP C 4.7UF K	
C87 ,88			CK73GB1H103K	CHIP C 0.010UF K	
C89			CK73GB1C225K	CHIP C 2.2UF K	
C90			CD04BA1C100M	ELECTRO 10UF 16WV	K
C91 ,92			CK73GB1H102K	CHIP C 1000PF K	K
C93			CD04BA1C100M	ELECTRO 10UF 16WV	K
C94			CK73GB1H104K	CHIP C 0.10UF K	
C95			CC73GCH1H331J	CHIP C 330PF J	
C96			CK73GB1H104K	CHIP C 0.10UF K	
C97			CK73GB1H103K	CHIP C 0.010UF K	
C101,102			CK73GB1H103K	CHIP C 0.010UF K	
C120			CK73GB1H104K	CHIP C 0.10UF K	
C121			CK73GB1A105K	CHIP C 1.0UF K	
C122			CD04BA1H3R3M	ELECTRO 3.3UF 50WV	
C140			CK73GB1A105K	CHIP C 1.0UF K	
C141			CK73GB1H223K	CHIP C 0.022UF K	
C142			CK73GB1H103K	CHIP C 0.010UF K	
C150			CK73GB1H102K	CHIP C 1000PF K	K2E3
C151,152			CK73GB1H104K	CHIP C 0.10UF K	K2E3
C153			CK73GB1H103K	CHIP C 0.010UF K	K2E3
C154			CK73GB1C104K	CHIP C 0.10UF K	K2E3
C155			C93-0059-05	CERAMIC 1UF K	K2E3
C156			CK73GB1A105K	CHIP C 1.0UF K	K2E3
C170			CC73GCH1H150J	CHIP C 15PF J	
C200-203			CK73GB1H392K	CHIP C 3900PF K	
C204			CK73GB1A105K	CHIP C 1.0UF K	
C205			CD04BA1C100M	ELECTRO 10UF 16WV	
C207			CK73GB1H103K	CHIP C 0.010UF K	
C208			CC73GCH1H221J	CHIP C 220PF J	
C209			CK73GB1C224K	CHIP C 0.22UF K	
C210			CC73GCH1H221J	CHIP C 220PF J	
C211			CK73GB1C224K	CHIP C 0.22UF K	
C212			CC73GCH1H221J	CHIP C 220PF J	
C213			CK73GB1C224K	CHIP C 0.22UF K	
C214			CC73GCH1H221J	CHIP C 220PF J	
C215			CK73GB1C224K	CHIP C 0.22UF K	
C216			CK73GB1H103K	CHIP C 0.010UF K	
C217			CK73FB1C105K	CHIP C 1.0UF K	
C218-221			CK73GB1H392K	CHIP C 3900PF K	
C222			CK73GB1A105K	CHIP C 1.0UF K	
C300			CK73GB1A105K	CHIP C 1.0UF K	
C301			CK73GB1A474K	CHIP C 0.47UF K	
C302			CK73GB1A105K	CHIP C 1.0UF K	
C303			CK73GB1A474K	CHIP C 0.47UF K	
C304-306			CK73GB1A105K	CHIP C 1.0UF K	
C308			CK73GB1A105K	CHIP C 1.0UF K	
C309			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C310			CK73GB1A105K	CHIP C 1.0UF K	
C312			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C313,314			CC73GCH1H100D	CHIP C 10PF D	

K: KDC-X494 **K1:** KDC-MP445U **K2:** KMR-440U **M1:** KDC-U6046 **M2:** KDC-U6046L
M3: KDC-U7046BT **M4:** KDC-U7046BTL **E1:** KDC-5047U **E2:** KDC-BT50U **E3:** : KMR-440U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C315			CD04AS1H2R2M	ELECTRO 2.2UF 50WV		C900,901			CK73GB1H104K	CHIP C 0.10UF K	E2M3N
C316			CK73GB1H103K	CHIP C 0.010UF K		C911			CK73GB1H104K	CHIP C 0.10UF K	E2M3N
C317			CC73GCH1H470J	CHIP C 47PF J		C915,916			CC73GCH1H221J	CHIP C 220PF J	E2M3N
C318			CD04AS1V100M	ELECTRO 10UF 35WV		C917,918			CK73GB1H102K	CHIP C 1000PF K	E2M3N
C319-322			CK73GB1A105K	CHIP C 1.0UF K		C920,921			CK73GB1A105K	CHIP C 1.0UF K	E2M3N
C323			CC73GCH1H330J	CHIP C 33PF J		C923			CC73GCH1H220J	CHIP C 22PF J	E2M3N
C350			CK73EB1A475K	CHIP C 4.7UF K		C924,925			CK73GB1A105K	CHIP C 1.0UF K	E2M3N
C351			CC73GCH1H101J	CHIP C 100PF J		C940			CK73FB0J106K	CHIP C 10UF K	E2M3N
C352-355			CK73GB1A105K	CHIP C 1.0UF K		C941			CK73GB1A105K	CHIP C 1.0UF K	E2M3N
C356			CK73GB1H103K	CHIP C 0.010UF K		C942-944			CC73GCH1H220J	CHIP C 22PF J	E2M3N
C357			CK73GB0J225K	CHIP C 2.2UF K		C945,946			CK73GB1A105K	CHIP C 1.0UF K	
C382			CD04AS1C470M	ELECTRO 47UF 16WV		C949,950			CK73GB1A105K	CHIP C 1.0UF K	
C400			CK73FB1E474K	CHIP C 0.47UF K	KK1E1						
C400			CK73FB1E474K	CHIP C 0.47UF K	M1M2M3	CN150			E41-1703-05	PIN ASSY	K2E3
C400			CK73FB1E474K	CHIP C 0.47UF K	M4K2E3	CN170			E41-1822-05	FLAT CABLE CONNECTOR	
						CN910			E41-3140-05	PIN ASSY	E2M3N
C401			CD04AT0J470M	ELECTRO 47UF 6.3WV	KK1E1	J1			E58-0991-05	RECTANGULAR RECEPTACLE	
C401			CD04AT0J470M	ELECTRO 47UF 6.3WV	M1M2M3	J400			E56-0855-05	CYLINDRICAL RECEPTACLE	KK1E1
C401			CD04AT0J470M	ELECTRO 47UF 6.3WV	M4K2E3						
C402			CK73FB1E474K	CHIP C 0.47UF K	KK1E1	J400			E56-0855-05	CYLINDRICAL RECEPTACLE	M1M2N
C402			CK73FB1E474K	CHIP C 0.47UF K	M1M2M3	J400			E56-0855-05	CYLINDRICAL RECEPTACLE	M4K2E
						J600			E63-0972-05	PIN JACK	
C402			CK73FB1E474K	CHIP C 0.47UF K	M4K2E3	J800			E58-1095-15	RECTANGULAR RECEPTACLE	
C403			CK73GB1H103K	CHIP C 0.010UF K	KK1E1	J801			E11-0625-05	PHONE JACK	E2M3N
C403			CK73GB1H103K	CHIP C 0.010UF K	M1M2M3						
C403			CK73GB1H103K	CHIP C 0.010UF K	M4K2E3	W701	2D		E30-6438-05	CORD WITH PLUG	
C500			CK73GB1C104K	CHIP C 0.10UF K							
C501			CK73GB1H103K	CHIP C 0.010UF K		L1			L33-2365-05	CHOKE COIL ASSY	
C502,503			CC73GCH1H220J	CHIP C 22PF J		L50			L92-0365-05	CHIP FERRITE	
C504-506			CK73GB1C104K	CHIP C 0.10UF K		L51	*		L33-2561-05	SMALL FIXED INDUCTOR (10UH)	
C507,508			CK73GB1H103K	CHIP C 0.010UF K		L52	*		L92-0672-05	CHIP FERRITE	
C509			CK73GB1C104K	CHIP C 0.10UF K		L53			L92-0365-05	CHIP FERRITE	
C510			CK73GB1H103K	CHIP C 0.010UF K		L70			L92-0612-05	CHIP FERRITE	
C511			CD04AS0J470M	ELECTRO 47UF 6.3WV		L71	*		L33-2598-05	SMALL FIXED INDUCTOR (33UH)	
C512			CK73GB1A105K	CHIP C 1.0UF K		L72			L92-0365-05	CHIP FERRITE	
C513			CK73GB1H103K	CHIP C 0.010UF K		L73	*		L33-2597-05	SMALL FIXED INDUCTOR (10UH)	
C515			CK73GB1H103K	CHIP C 0.010UF K		L74			L92-0365-05	CHIP FERRITE	
C516			CC73GCH1H101J	CHIP C 100PF J		L75			L92-0612-05	CHIP FERRITE	
C517			CC73GCH1H102J	CHIP C 1000PF J		L76			L92-0076-05	CHIP FERRITE	
C610			CD04AS1V100M	ELECTRO 10UF 35WV		L77	*		L92-0672-05	CHIP FERRITE	
C611,612			CK73GB1H102K	CHIP C 1000PF K		L90			L92-0386-05	CHIP FERRITE	
C613			CD04AS1V100M	ELECTRO 10UF 35WV		L500			L92-0612-05	CHIP FERRITE	
C620			CD04AS1V100M	ELECTRO 10UF 35WV		X500			L78-0872-05	RESONATOR (12MHZ)	
C621,622			CK73GB1H102K	CHIP C 1000PF K		X501			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
C623			CD04AS1V100M	ELECTRO 10UF 35WV		X750			L77-3825-05	CRYSTAL RESONATOR (4.332MHZ)	E1E2E
C630			CD04AS1V100M	ELECTRO 10UF 35WV		K	2D		N80-3008-48	PAN HEAD TAPTITE SCREW	
C631,632			CK73GB1H102K	CHIP C 1000PF K		L	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
						M	2D		N83-3008-48	PAN HEAD TAPTITE SCREW	
C633			CD04AS1V100M	ELECTRO 10UF 35WV		N	2D		N83-3016-48	PAN HEAD TAPTITE SCREW	
C700-704			CK73GB1H103K	CHIP C 0.010UF K		P	2D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
C751			CK73GB0J225K	CHIP C 2.2UF K	E1E2E3	CP500			RK74HB1J101J	CHIP-COM 100 J 1/16W	
C752			CC73GCH1H271J	CHIP C 270PF J	E1E2E3	CP501			RK74GA1J101J	CHIP-COM 100 J 1/16W	KK1E1
C753			CK73GB1H103K	CHIP C 0.010UF K	E1E2E3	CP501			RK74GA1J101J	CHIP-COM 100 J 1/16W	M1M2N
						CP501			RK74GA1J101J	CHIP-COM 100 J 1/16W	M4K2E
C754,755			CC73GCH1H120J	CHIP C 12PF J	E1E2E3	CP502			RK74HB1J101J	CHIP-COM 100 J 1/16W	E2
C800			CK73FB1E474K	CHIP C 0.47UF K		CP502,503			RK74HB1J101J	CHIP-COM 100 J 1/16W	KK1E1
C802			CD04AT0J470M	ELECTRO 47UF 6.3WV		CP502,503			RK74HB1J101J	CHIP-COM 100 J 1/16W	M1M2N
C803			CK73GB1H103K	CHIP C 0.010UF K							
C805			CK73FB1E474K	CHIP C 0.47UF K							

K: KDC-X494 K1: KDC-MP445U K2: KMR-440U M1: KDC-U6046 M2: KDC-U6046L
M3: KDC-U7046BT M4: KDC-U7046BTL E1: KDC-5047U E2: KDC-BT50U E3: : KMR-440U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
CP502,503			RK74HB1J101J	CHIP-COM 100 J 1/16W	M4K2E3	R97			RK73GB2A621J	CHIP R 620 J 1/10W	
CP505			RK74GA1J222J	CHIP-COM 2.2K J 1/16W		R98			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
CP506,507			RK74HB1J101J	CHIP-COM 100 J 1/16W		R100,101			RK73GB2A103J	CHIP R 10K J 1/10W	
CP508,509			RK74GA1J101J	CHIP-COM 100 J 1/16W		R106			RK73GB2A183J	CHIP R 18K J 1/10W	
CP750			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	E1E2E3	R107			RK73GB2A104J	CHIP R 100K J 1/10W	
R1 ,2			RK73EB2E103J	CHIP R 10K J 1/4W		R108			RK73FB2B203J	CHIP R 20K J 1/8W	
R20			RK73GH2A243D	CHIP R 24K D 1/10W		R109			RK73EB2E473J	CHIP R 47K J 1/4W	
R21			RK73GH2A432D	CHIP R 4.3K D 1/10W		R110			RK73FB2B683J	CHIP R 68K J 1/8W	
R22			RK73FB2B221J	CHIP R 220 J 1/8W		R111			RK73GB2A473J	CHIP R 47K J 1/10W	
R23			RK73GB2A102J	CHIP R 1.0K J 1/10W		R112-114			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R30			RK73FB2B822J	CHIP R 8.2K J 1/8W		R120,121			RK73PB2H561J	CHIP R 560 J 1/2W	
R31			RK73GB2A223J	CHIP R 22K J 1/10W		R122			RK73GB2A223J	CHIP R 22K J 1/10W	
R33			RK73FB2B473J	CHIP R 47K J 1/8W		R123,124			RK73PB2H561J	CHIP R 560 J 1/2W	
R34			RK73EB2E1R0J	CHIP R 1.0 J 1/4W		R125			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R41			RK73EB2E681J	CHIP R 680 J 1/4W		R126			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1
R50			RK73GH2A163D	CHIP R 16K D 1/10W		R126			RK73GB2A223J	CHIP R 22K J 1/10W	K2
R51			RK73GH2A823D	CHIP R 82K D 1/10W		R126			RK73GB2A223J	CHIP R 22K J 1/10W	M2M3
R52			RK73GB2A622J	CHIP R 6.2K J 1/10W		R127			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2E
R53			RK73GB2A333J	CHIP R 33K J 1/10W		R128,129			RK73PB2H221J	CHIP R 220 J 1/2W	KK1M1
R54			RK73GH2A153D	CHIP R 15K D 1/10W		R128,129			RK73PB2H221J	CHIP R 220 J 1/2W	K2
R55			RK73GB2A330J	CHIP R 33 J 1/10W		R128,129			RK73PB2H221J	CHIP R 220 J 1/2W	M2M3
R56 -59			RK73EB2E201J	CHIP R 200 J 1/4W	E3	R130			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R56 -59			RK73EB2E201J	CHIP R 200 J 1/4W	KK1E1	R140,141			RK73GB2A104J	CHIP R 100K J 1/10W	
R56 -59			RK73EB2E201J	CHIP R 200 J 1/4W	M1M2K2	R142			RK73GB2A473J	CHIP R 47K J 1/10W	
R60			RK73GB2A223J	CHIP R 22K J 1/10W		R150			RK73EB2E471J	CHIP R 470 J 1/4W	
R61			RK73GB2A102J	CHIP R 1.0K J 1/10W	E3	R151			RK73GB2A332J	CHIP R 3.3K J 1/10W	K2E3
R61			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1E1	R152			RK73GB2A104J	CHIP R 100K J 1/10W	K2E3
R61			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2K2	R153			RK73GB2A103J	CHIP R 10K J 1/10W	K2E3
R62			RK73GB2A223J	CHIP R 22K J 1/10W	E3	R154,155			RK73GB2A471J	CHIP R 470 J 1/10W	K2E3
R62			RK73GB2A223J	CHIP R 22K J 1/10W	KK1E1	R156			RK73GB2A103J	CHIP R 10K J 1/10W	K2E3
R62			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2K2	R157			RK73EB2E101J	CHIP R 100 J 1/4W	K2E3
R70 ,71			RK73GB2A473J	CHIP R 47K J 1/10W		R158			RK73GB2A223J	CHIP R 22K J 1/10W	K2E3
R72			RK73GH2A753D	CHIP R 75K D 1/10W		R159			RK73EB2E100J	CHIP R 10 J 1/4W	K2E3
R73			RK73GH2A132D	CHIP R 1.3K D 1/10W		R160			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3
R74			RK73EB2E113J	CHIP R 11K J 1/4W		R161			RK73GB2A163J	CHIP R 16K J 1/10W	K2E3
R76			RK73GB2A1R0J	CHIP R 1.0 J 1/10W		R163-165			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3
R77			RK73GB2A333J	CHIP R 33K J 1/10W		R166			RK73FB2B47J	CHIP R 4.7 J 1/8W	K2E3
R79			RK73GB2A330J	CHIP R 33 J 1/10W		R167			RK73GB2A104J	CHIP R 100K J 1/10W	K2E3
R80			RK73GH2A163D	CHIP R 16K D 1/10W		R168			RK73GB2A334J	CHIP R 330K J 1/10W	K2E3
R81			RK73GH2A103D	CHIP R 10K D 1/10W		R170			RK73GB2A100J	CHIP R 10 J 1/10W	
R82			RK73GH2A132D	CHIP R 1.3K D 1/10W		R201			RK73GB2A333J	CHIP R 33K J 1/10W	
R83			RK73GH2A331D	CHIP R 330 D 1/10W		R202			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R84			RK73GB2A822J	CHIP R 8.2K J 1/10W		R204-207	*		RK73GB2A680JH	CHIP R 68 J 1/10W	
R85			RK73EB2E113J	CHIP R 11K J 1/4W		R209			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R86			RK73EB2E102J	CHIP R 1.0K J 1/4W		R210			RK73GB2A104J	CHIP R 100K J 1/10W	
R87			RK73GH2A752D	CHIP R 7.5K D 1/10W		R211	*		RK73GB2A100JH	CHIP R 10 J 1/10W	
R88			RK73GH2A132D	CHIP R 1.3K D 1/10W		R212			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R89			RK73GH2A101D	CHIP R 100 D 1/10W		R213			RK73GB2A331J	CHIP R 330 J 1/10W	
R90			RK73GB2A362J	CHIP R 3.6K J 1/10W	K	R214			RK73GB2A223J	CHIP R 22K J 1/10W	
R91			RK73GB2A432J	CHIP R 4.3K J 1/10W	K	R216			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R92			RK73GB2A562J	CHIP R 5.6K J 1/10W	K	R300			RK73GB2A103J	CHIP R 10K J 1/10W	
R93			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	K	R301,302	*		RK73GB2A220JH	CHIP R 22 J 1/10W	
R94			RK73FB2B102J	CHIP R 1.0K J 1/8W	K	R303			RK73GB2A103J	CHIP R 10K J 1/10W	
R95			RK73GB2A102J	CHIP R 1.0K J 1/10W		R304			RK73GB2A100J	CHIP R 10 J 1/10W	
R96			RK73GB2A561J	CHIP R 560 J 1/10W		R305			RK73GB2A222J	CHIP R 2.2K J 1/10W	K

K: KDC-X494 K1: KDC-MP445U K2: KMR-440U M1: KDC-U6046 M2: KDC-U6046L

M3: KDC-U7046BT M4: KDC-U7046BTL E1: KDC-5047U E2: KDC-BT50U E3: : KMR-440U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R306			RK73GB2A101J	CHIP R 100 J 1/10W	K	R510			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R350			RK73GB2A473J	CHIP R 47K J 1/10W		R511			RK73GB2A473J	CHIP R 47K J 1/10W	
R352			RK73GB2A333J	CHIP R 33K J 1/10W		R512,513			RK73GB2A101J	CHIP R 100 J 1/10W	KK1E1
R353			RK73GB2A473J	CHIP R 47K J 1/10W		R512,513			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2M3
R354			RK73GB2A334J	CHIP R 330K J 1/10W		R512,513			RK73GB2A101J	CHIP R 100 J 1/10W	M4K2E
R355			RK73GB2A102J	CHIP R 1.0K J 1/10W		R513			RK73GB2A101J	CHIP R 100 J 1/10W	E2
R356			RK73GB2A821J	CHIP R 820 J 1/10W		R514			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R357			RK73GB2A473J	CHIP R 47K J 1/10W		R515			RK73GB2A101J	CHIP R 100 J 1/10W	
R358			RK73GB2A334J	CHIP R 330K J 1/10W		R516			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R359			RK73GB2A104J	CHIP R 100K J 1/10W		R518			RK73GB2A104J	CHIP R 100K J 1/10W	
R360,361			RK73GB2A103J	CHIP R 10K J 1/10W		R519			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1
R380			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R519			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2M3
R400,401			RK73EB2E432J	CHIP R 4.3K J 1/4W	KK1E1	R519			RK73GB2A473J	CHIP R 47K J 1/10W	M4K2E
R400,401			RK73EB2E432J	CHIP R 4.3K J 1/4W	M1M2M3	R520			RK73GB2A101J	CHIP R 100 J 1/10W	KK1E1
R400,401			RK73EB2E432J	CHIP R 4.3K J 1/4W	M4K2E3	R520			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2M3
R402			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1E1	R520			RK73GB2A101J	CHIP R 100 J 1/10W	M4K2E
R402			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1M2M3	R521			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1
R402			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4K2E3	R521			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2M3
R403			RK73EB2E432J	CHIP R 4.3K J 1/4W	KK1E1	R521			RK73GB2A473J	CHIP R 47K J 1/10W	M4K2E
R403			RK73EB2E432J	CHIP R 4.3K J 1/4W	M1M2M3	R522			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R403			RK73EB2E432J	CHIP R 4.3K J 1/4W	M4K2E3	R523			RK73GB2A104J	CHIP R 100K J 1/10W	E2
R404			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1E1	R523,524			RK73GB2A104J	CHIP R 100K J 1/10W	KK1E1
R404			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1M2M3	R523,524			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2M3
R404			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4K2E3	R523,524			RK73GB2A104J	CHIP R 100K J 1/10W	M4K2E
R405			RK73EB2E101J	CHIP R 100 J 1/4W	KK1E1	R526,527			RK73GB2A473J	CHIP R 47K J 1/10W	
R405			RK73EB2E101J	CHIP R 100 J 1/4W	M1M2M3	R528			RK73GB2A104J	CHIP R 100K J 1/10W	KK1E1
R405			RK73EB2E101J	CHIP R 100 J 1/4W	M4K2E3	R528			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2M3
R406			RK73EB2E100J	CHIP R 10 J 1/4W	KK1E1	R528			RK73GB2A104J	CHIP R 100K J 1/10W	M4K2E
R406			RK73EB2E100J	CHIP R 10 J 1/4W	M1M2M3	R529			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R406			RK73EB2E100J	CHIP R 10 J 1/4W	M4K2E3	R530			RK73GB2A101J	CHIP R 100 J 1/10W	
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	KK1E1	R531			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	M1M2M3	R532			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	M4K2E3	R533-535			RK73GB2A104J	CHIP R 100K J 1/10W	
R408			RK73EB2E100J	CHIP R 10 J 1/4W	KK1E1	R536			RK73GB2A471J	CHIP R 470 J 1/10W	
R408			RK73EB2E100J	CHIP R 10 J 1/4W	M1M2M3	R537			RK73GB2A104J	CHIP R 100K J 1/10W	
R408			RK73EB2E100J	CHIP R 10 J 1/4W	M4K2E3	R538			RK73GB2A471J	CHIP R 470 J 1/10W	
R409			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1E1	R540,541			RK73GB2A473J	CHIP R 47K J 1/10W	
R409			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1M2M3	R542			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R409			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4K2E3	R543			RK73GB2A473J	CHIP R 47K J 1/10W	
R410			RK73EB2E101J	CHIP R 100 J 1/4W	KK1E1	R545			RK73GB2A473J	CHIP R 47K J 1/10W	
R410			RK73EB2E101J	CHIP R 100 J 1/4W	M1M2M3	R546			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W	M4K2E3	R547			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1E1	R548			RK73GB2A223J	CHIP R 22K J 1/10W	
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2M3	R549			RK73GB2A101J	CHIP R 100 J 1/10W	
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W	M4K2E3	R550			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R500			RK73GB2A473J	CHIP R 47K J 1/10W		R551-553			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
R501			RK73GB2A103J	CHIP R 10K J 1/10W		R554			RK73GB2A473J	CHIP R 47K J 1/10W	
R502			RK73GB2A104J	CHIP R 100K J 1/10W	E2	R555-557			RK73GB2A101J	CHIP R 100 J 1/10W	
R502,503			RK73GB2A104J	CHIP R 100K J 1/10W	KK1E1	R558			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R502,503			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2M3	R559			RK73GB2A473J	CHIP R 47K J 1/10W	
R502,503			RK73GB2A104J	CHIP R 100K J 1/10W	M4K2E3	R560			RK73GB2A104J	CHIP R 100K J 1/10W	
R504			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2E3	R561			RK73GB2A473J	CHIP R 47K J 1/10W	E1M1M
R505			RK73GB2A104J	CHIP R 100K J 1/10W		R561			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3M
R506,507			RK73GB2A472J	CHIP R 4.7K J 1/10W		R561			RK73GB2A473J	CHIP R 47K J 1/10W	E3
R508			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2E3	R561,562			RK73GB2A473J	CHIP R 47K J 1/10W	KK1K2

K: KDC-X494 K1: KDC-MP445U K2: KMR-440U M1: KDC-U6046 M2: KDC-U6046L
M3: KDC-U7046BT M4: KDC-U7046BTU E1: KDC-5047U E2: KDC-BT50U E3: : KMR-440U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R562			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2M3	R915			RK73GB2A472J	CHIP R 4.7K J 1/10W	E2M3N
R562			RK73GB2A223J	CHIP R 22K J 1/10W	M4	R916			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3N
R563			RK73GB2A473J	CHIP R 47K J 1/10W	M2M4E3	R917,918			RK73GB2A681J	CHIP R 680 J 1/10W	E2M3N
R563,564			RK73GB2A473J	CHIP R 47K J 1/10W	E1M1E2	R920			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3N
R563,564			RK73GB2A473J	CHIP R 47K J 1/10W	M3	R923			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3N
R564			RK73GB2A223J	CHIP R 22K J 1/10W	K2	R925-928			RK73GH2A473D	CHIP R 47K D 1/10W	E2M3N
R564			RK73GB2A473J	CHIP R 47K J 1/10W	K	R931,932			RK73GH2A473D	CHIP R 47K D 1/10W	E2M3N
R565			RK73GB2A473J	CHIP R 47K J 1/10W	K1M2M4	R934			RK73GH2A473D	CHIP R 47K D 1/10W	E2M3N
R565			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3	R940			RK73GH2A473D	CHIP R 47K D 1/10W	E3
R567,568			RK73GB2A473J	CHIP R 47K J 1/10W		R940			RK73GH2A473D	CHIP R 47K D 1/10W	KK1E1
R569			RK73GB2A101J	CHIP R 100 J 1/10W	KK1E1	R940			RK73GH2A473D	CHIP R 47K D 1/10W	M1M2N
R569			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2M3	R940,941			RK73GH2A473D	CHIP R 47K D 1/10W	E2M3N
R569			RK73GB2A101J	CHIP R 100 J 1/10W	M4K2E3	R945-950			RK73GH2A473D	CHIP R 47K D 1/10W	
R570,571			RK73GB2A472J	CHIP R 4.7K J 1/10W		R952			RK73GH2A473D	CHIP R 47K D 1/10W	
R610			RK73FB2B101J	CHIP R 100 J 1/8W		W90			R92-2053-05	CHIP R 0 OHM J 1/8W	K1E1M
R611			RK73GB2A471J	CHIP R 470 J 1/10W		W90			R92-2053-05	CHIP R 0 OHM J 1/8W	M2E2N
R612,613			RK73GB2A223J	CHIP R 22K J 1/10W		W90			R92-2053-05	CHIP R 0 OHM J 1/8W	M4K2E
R614			RK73FB2B101J	CHIP R 100 J 1/8W		W700			R92-2053-05	CHIP R 0 OHM J 1/8W	
R615			RK73GB2A471J	CHIP R 470 J 1/10W		W702-705			R92-2053-05	CHIP R 0 OHM J 1/8W	
R620			RK73FB2B101J	CHIP R 100 J 1/8W		S800			S70-0959-05	TACT SWITCH	
R621			RK73GB2A471J	CHIP R 470 J 1/10W		D1			S2V60-5009F46	DIODE	
R622,623			RK73GB2A223J	CHIP R 22K J 1/10W		D30			UDZW5.6(B)	ZENER DIODE	
R624			RK73FB2B101J	CHIP R 100 J 1/8W		D31			1SR154-400	DIODE	
R625			RK73GB2A471J	CHIP R 470 J 1/10W		D32			1SS355	DIODE	
R630			RK73FB2B101J	CHIP R 100 J 1/8W		D40			UDZW8.2(B)	ZENER DIODE	
R631			RK73GB2A471J	CHIP R 470 J 1/10W		D50	*		CMS20	DIODE	
R632,633			RK73GB2A223J	CHIP R 22K J 1/10W		D70	*		CUS02	DIODE	
R634			RK73FB2B101J	CHIP R 100 J 1/8W		D71 ,72			1SS388	DIODE	
R635			RK73GB2A471J	CHIP R 470 J 1/10W		D73			UDZW15(B)	ZENER DIODE	
R642,643			RK73EB2E101J	CHIP R 100 J 1/4W	E2M3M4	D74			1SS355	DIODE	
R700			RK73GB2A223J	CHIP R 22K J 1/10W		D75	*		CUS02	DIODE	
R701,702			RK73GB2A471J	CHIP R 470 J 1/10W		D90			1SR154-400	DIODE	K
R703			RK73FB2B821J	CHIP R 820 J 1/8W		D91			UDZW5.6(B)	ZENER DIODE	K
R704			RK73GB2A223J	CHIP R 22K J 1/10W		D100			UDZW6.2(B)	ZENER DIODE	
R705			RK73GB2A472J	CHIP R 4.7K J 1/10W		D102,103			UDZW6.8(B)	ZENER DIODE	
R751			RK73GB2A512J	CHIP R 5.1K J 1/10W	E1E2E3	D120			1SS355	DIODE	
R752			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2E3	D121-124			1SR154-400	DIODE	
R800,801			RK73EB2E101J	CHIP R 100 J 1/4W		D140			UDZW4.7(B)	ZENER DIODE	
R802			RK73EB2E102J	CHIP R 1.0K J 1/4W		D150			UDZW6.2(B)	ZENER DIODE	
R803			RK73EB2E432J	CHIP R 4.3K J 1/4W		D152			UDZW6.2(B)	ZENER DIODE	K2E3
R804			RK73GB2A102J	CHIP R 1.0K J 1/10W		D153			CVL10C270M300	VARISTOR	K2E3
R805			RK73EB2E100J	CHIP R 10 J 1/4W		D200			DAP202U	DIODE	
R806			RK73GB2A102J	CHIP R 1.0K J 1/10W		D300-302			DAP202U	DIODE	
R807			RK73GB2A123J	CHIP R 12K J 1/10W		D303			UDZW5.6(B)	ZENER DIODE	K
R808			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		D350			DA204U	DIODE	
R809			RK73GB2A123J	CHIP R 12K J 1/10W		D403			UDZW6.2(B)	ZENER DIODE	KK1E1
R810			RK73EB2E100J	CHIP R 10 J 1/4W		D403			UDZW6.2(B)	ZENER DIODE	M1M2N
R811,812			RK73EB2E432J	CHIP R 4.3K J 1/4W		D403			UDZW6.2(B)	ZENER DIODE	M4K2E
R816,817			RK73GB2A220J	CHIP R 22 J 1/10W		D406			UDZW6.2(B)	ZENER DIODE	KK1E1
R819			RK73EB2E432J	CHIP R 4.3K J 1/4W		D406			UDZW6.2(B)	ZENER DIODE	M1M2N
R900,901			RK73GB2A101J	CHIP R 100 J 1/10W	E2M3M4	D406			UDZW6.2(B)	ZENER DIODE	M4K2E
R910			RK73GB2A472J	CHIP R 4.7K J 1/10W	E2M3M4	D408-410			UDZW6.8(B)	ZENER DIODE	KK1E1
R911			RK73GB2A223J	CHIP R 22K J 1/10W	E2M3M4	D408-410			UDZW6.8(B)	ZENER DIODE	M1M2N
R912			RK73GB2A101J	CHIP R 100 J 1/10W	E2M3M4	D408-410			UDZW6.8(B)	ZENER DIODE	M4K2E
R913			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3M4						

K: KDC-X494 K1: KDC-MP445U K2: KMR-440U M1: KDC-U6046 M2: KDC-U6046L
M3: KDC-U7046BT M4: KDC-U7046BTL E1: KDC-5047U E2: KDC-BT50U E3: : KMR-440U

▲ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
D610			DAP202U	DIODE		Q91			2SC5053	TRANSISTOR	K
D630			DAP202U	DIODE		Q92			DTA124EUA	DIGITAL TRANSISTOR	K
D642,643			UDZW4.7(B)	ZENER DIODE	E2M3M4	Q93			DTC124EUA	DIGITAL TRANSISTOR	K
D701			UDZW5.6(B)	ZENER DIODE		Q100			2SC4081	TRANSISTOR	
D800,801			UDZW6.2(B)	ZENER DIODE		Q102,103			2SC4081	TRANSISTOR	
D804-806			UDZW6.8(B)	ZENER DIODE		Q120			DTC114YUA	DIGITAL TRANSISTOR	
D810-813			LVS10C270S030	VARIATOR		Q121			DTA114EUA	DIGITAL TRANSISTOR	
D815,816			LVS10C270S030	VARIATOR		Q122			2SA1576A	TRANSISTOR	
IC20			M5237ML-CF0J	ANALOGUE IC		Q123			2SB1188(Q,R)	TRANSISTOR	E1E2E
IC50	2D	*	Impossible to repla	ANALOGUE IC (See exploded view)		Q123,124			2SB1188(Q,R)	TRANSISTOR	KK1M1
IC60			BD6538G	MOS-IC		Q123,124			2SB1188(Q,R)	TRANSISTOR	K2
IC71	2D	*	Impossible to repla	ANALOGUE IC (See exploded view)		Q123,124			2SB1188(Q,R)	TRANSISTOR	M2M3
IC80			TC7WH00FU-F	MOS-IC		Q125			DTC114YUA	DIGITAL TRANSISTOR	KK1M1
IC200			E-TDA7851A	ANALOGUE IC		Q125			DTC114YUA	DIGITAL TRANSISTOR	K2
IC300			E-TDA7415CB	ANALOGUE IC		Q125			DTC114YUA	DIGITAL TRANSISTOR	M2M3
IC350			NJM4565V-ZB	ANALOGUE IC		Q140			DTC144EUA	DIGITAL TRANSISTOR	
IC500			XC6120N292N1	MOS-IC		Q150			SSM3J15FU-F	FET	K2E3
IC502		*	W05-1603-00	MICROCONTROLLER IC	E2	Q151			2SK3018	FET	K2E3
IC502		*	W05-1604-00	MICROCONTROLLER IC	M3M4	Q152			DTC124EUA	DIGITAL TRANSISTOR	K2E3
IC502		*	W05-1605-00	MICROCONTROLLER IC	KK1M1	Q156,157			2SC4081	TRANSISTOR	K2E3
IC502		*	W05-1605-00	MICROCONTROLLER IC	M2	Q158			2SJ518-E	FET	K2E3
IC502		*	W05-1606-00	MICROCONTROLLER IC	E1	Q159			2SC4081	TRANSISTOR	K2E3
IC502		*	W05-1607-00	MICROCONTROLLER IC	K2	Q160			2SA1576A	TRANSISTOR	K2E3
IC502		*	W05-1608-00	MICROCONTROLLER IC	E3	Q350			2SC4081	TRANSISTOR	
IC503			M24C08-RDW6TP	ROM IC	K2E3	Q610			DTC143TUA	DIGITAL TRANSISTOR	
IC504			74HC2G02DP	MOS-IC		Q611			DTA124EUA	DIGITAL TRANSISTOR	
IC750			E-TDA7478AD	ANALOGUE IC	E1E2E3	Q612			DTC143TUA	DIGITAL TRANSISTOR	
IC900			TC7SET08FU-F	MOS-IC	E2M3M4	Q620,621			DTC143TUA	DIGITAL TRANSISTOR	
IC901			TC7SH08FU-F	MOS-IC	E2M3M4	Q630			DTC143TUA	DIGITAL TRANSISTOR	
IC910			NJM4565V-ZB	ANALOGUE IC	E2M3M4	Q631			DTA124EUA	DIGITAL TRANSISTOR	
IC912			NJM4565V-ZB	ANALOGUE IC		Q632			DTC143TUA	DIGITAL TRANSISTOR	
IC915			NJM2886DL3-33	ANALOGUE IC	E2M3M4	Q700			DTC124EUA	DIGITAL TRANSISTOR	
Q20			DTA124EUA	DIGITAL TRANSISTOR		Q701			2SA1577	TRANSISTOR	
Q21			DTC144EUA	DIGITAL TRANSISTOR		Q702			2SC4081	TRANSISTOR	
Q22			2SA1869-Q(Y)	TRANSISTOR		Q900			DTC124EUA	DIGITAL TRANSISTOR	E2M3M
Q23			DTA124EUA	DIGITAL TRANSISTOR		TH200			PRF18BE471QS2	POSITIVE RESISTOR	
Q24			DTC124EUA	DIGITAL TRANSISTOR		A900	3D	*	W02-5372-05	ELECTRIC CIRCUIT MODULE	E2M3M
Q30			2SA1576A	TRANSISTOR		A700	2D		X86-4032-70	FRONT-END UNIT	E1E2E
Q31			DTC124EUA	DIGITAL TRANSISTOR		A700	2D		X86-4230-11	FRONT-END UNIT	KK1M1
Q32			2SC4081	TRANSISTOR		A700	2D		X86-4230-11	FRONT-END UNIT	K2
Q33			2SB1184(Q,R)	TRANSISTOR		A700	2D		X86-4230-11	FRONT-END UNIT	M2M3
Q40			2SC4081	TRANSISTOR		MECHANISM ASSY (X92-6360-04) DXM-9B30W					
Q41		*	2SA1869-Q(Y)	TRANSISTOR	E3	1	2B		A10-5450-63	CHASSIS ASSY	
Q50			DTC124EUA	DIGITAL TRANSISTOR	KK1E1	3	3B		A10-5452-41	CHASSIS	
Q50			DTC124EUA	DIGITAL TRANSISTOR		4	1B		A10-5453-32	CHASSIS	
Q50			DTC124EUA	DIGITAL TRANSISTOR	M1M2K2	12	3A		D10-4993-52	LEVER	
Q51			2SB1689	TRANSISTOR	E3	13	1B		D10-4991-22	ARM	
Q51			2SB1689	TRANSISTOR	KK1E1	14	1B		D10-4992-13	ARM	
Q51			2SB1689	TRANSISTOR	M1M2K2	15	2A		D10-4994-02	SLIDER	
Q70			DTC124EUA	DIGITAL TRANSISTOR		16	2A		D10-4995-03	SLIDER	
Q71			2SA1576A	TRANSISTOR		17	2B		D10-4996-02	SLIDER	
Q72			2SC4081	TRANSISTOR		18	2A		D10-4997-03	LEVER	
Q73		*	2SA1869-Q(Y)	TRANSISTOR		19	1A		D10-4998-03	ARM	
Q74			2SD1760	TRANSISTOR							
Q90			2SC4081	TRANSISTOR	K						

K: KDC-X494 K1: KDC-MP445U K2: KMR-440U M1: KDC-U6046 M2: KDC-U6046L
M3: KDC-U7046BT M4: KDC-U7046BTL E1: KDC-5047U E2: KDC-BT50U E3: : KMR-440U

▲ indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-6360-04) DXM-9B30W

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
20	2A		D10-4999-03	ARM							
21	2A		D10-7001-03	ARM							
22	2A		D10-7002-03	ARM							
23	2A		D10-7003-03	ARM							
24	2A		D13-2445-04	GEAR							
25	2A		D13-2446-04	GEAR							
27	2A		D13-2448-04	GEAR							
28	2A		D13-2449-04	GEAR							
29	2A		D13-2450-04	GEAR							
30	2A		D13-2451-04	GEAR							
31	2A		D13-2452-04	GEAR							
32	2A		D13-2453-04	GEAR							
33	2A		D13-2454-04	GEAR							
34	2A		D13-2455-04	GEAR							
35	2B		D13-2456-03	RACK (GEAR)							
36	2A		D14-1028-04	ROLLER							
37	3A		D21-2507-04	SHAFT							
38	2B		D21-2508-04	SHAFT							
39	3A		D23-0963-04	RETAINER							
40	3B		D39-0277-15	DAMPER							
41	3B		D39-0278-15	DAMPER							
46	1B		G01-4682-34	TORSION COIL SPRING							
47	3A *		G01-4756-04	EXTENSION SPRING							
48	2A		G01-4684-04	EXTENSION SPRING							
49	2B		G01-4685-04	EXTENSION SPRING							
50	1B		G01-4686-14	EXTENSION SPRING							
51	3A		G01-4688-14	EXTENSION SPRING							
52	3A		G01-4692-24	TORSION COIL SPRING							
54	3A		G02-1588-04	FLAT SPRING							
55	1B		G13-1297-04	CUSHION							
56	1B		G13-1299-14	CUSHION							
57	1A		G16-1715-04	SHEET							
61	1B		J11-0675-03	CLAMPER							
64	2A		J19-7210-21	HOLDER							
65	2B		J19-7225-04	HOLDER							
66	1B		J22-0706-03	MOUNTING HARDWARE							
67	1A		J22-0707-12	MOUNTING HARDWARE							
68	1B		J90-1166-11	GUIDE							
69	2B		J90-1168-03	RAIL							
A	1A		N09-6108-15	TAPTITE SCREW (M2X3.5)							
B	2B		N09-6426-15	MACHINE SCREW							
C	2B		N09-6735-05	TAPTITE SCREW							
D	2B		N09-6737-15	MACHINE SCREW							
E	2B		N09-6738-15	TAPTITE SCREW							
F	2A		N19-2335-14	FLAT WASHER							
G	2B		N35-2003-48	BINDING HEAD MACHINE SCREW							
H	2B		N39-1720-48	PAN HEAD MACHINE SCREW							
76	2A		S68-0921-05	PUSH SWITCH							
DM1	2B		X94-2090-00	SPINDLE MOTOR ASSY							
DM2	2B		X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)							
DPU1	2B		X93-2280-00	OPTICAL PICKUP ASSY							

K: KDC-X494 **K1:** KDC-MP445U **K2:** KMR-440U **M1:** KDC-U6046 **M2:** KDC-U6046L
M3: KDC-U7046BT **M4:** KDC-U7046BTL **E1:** KDC-5047U **E2:** KDC-BT50U **E3:** : KMR-440U

 indicates safety critical components.