



EXPLODED VIEW (DVD MECHANISM)

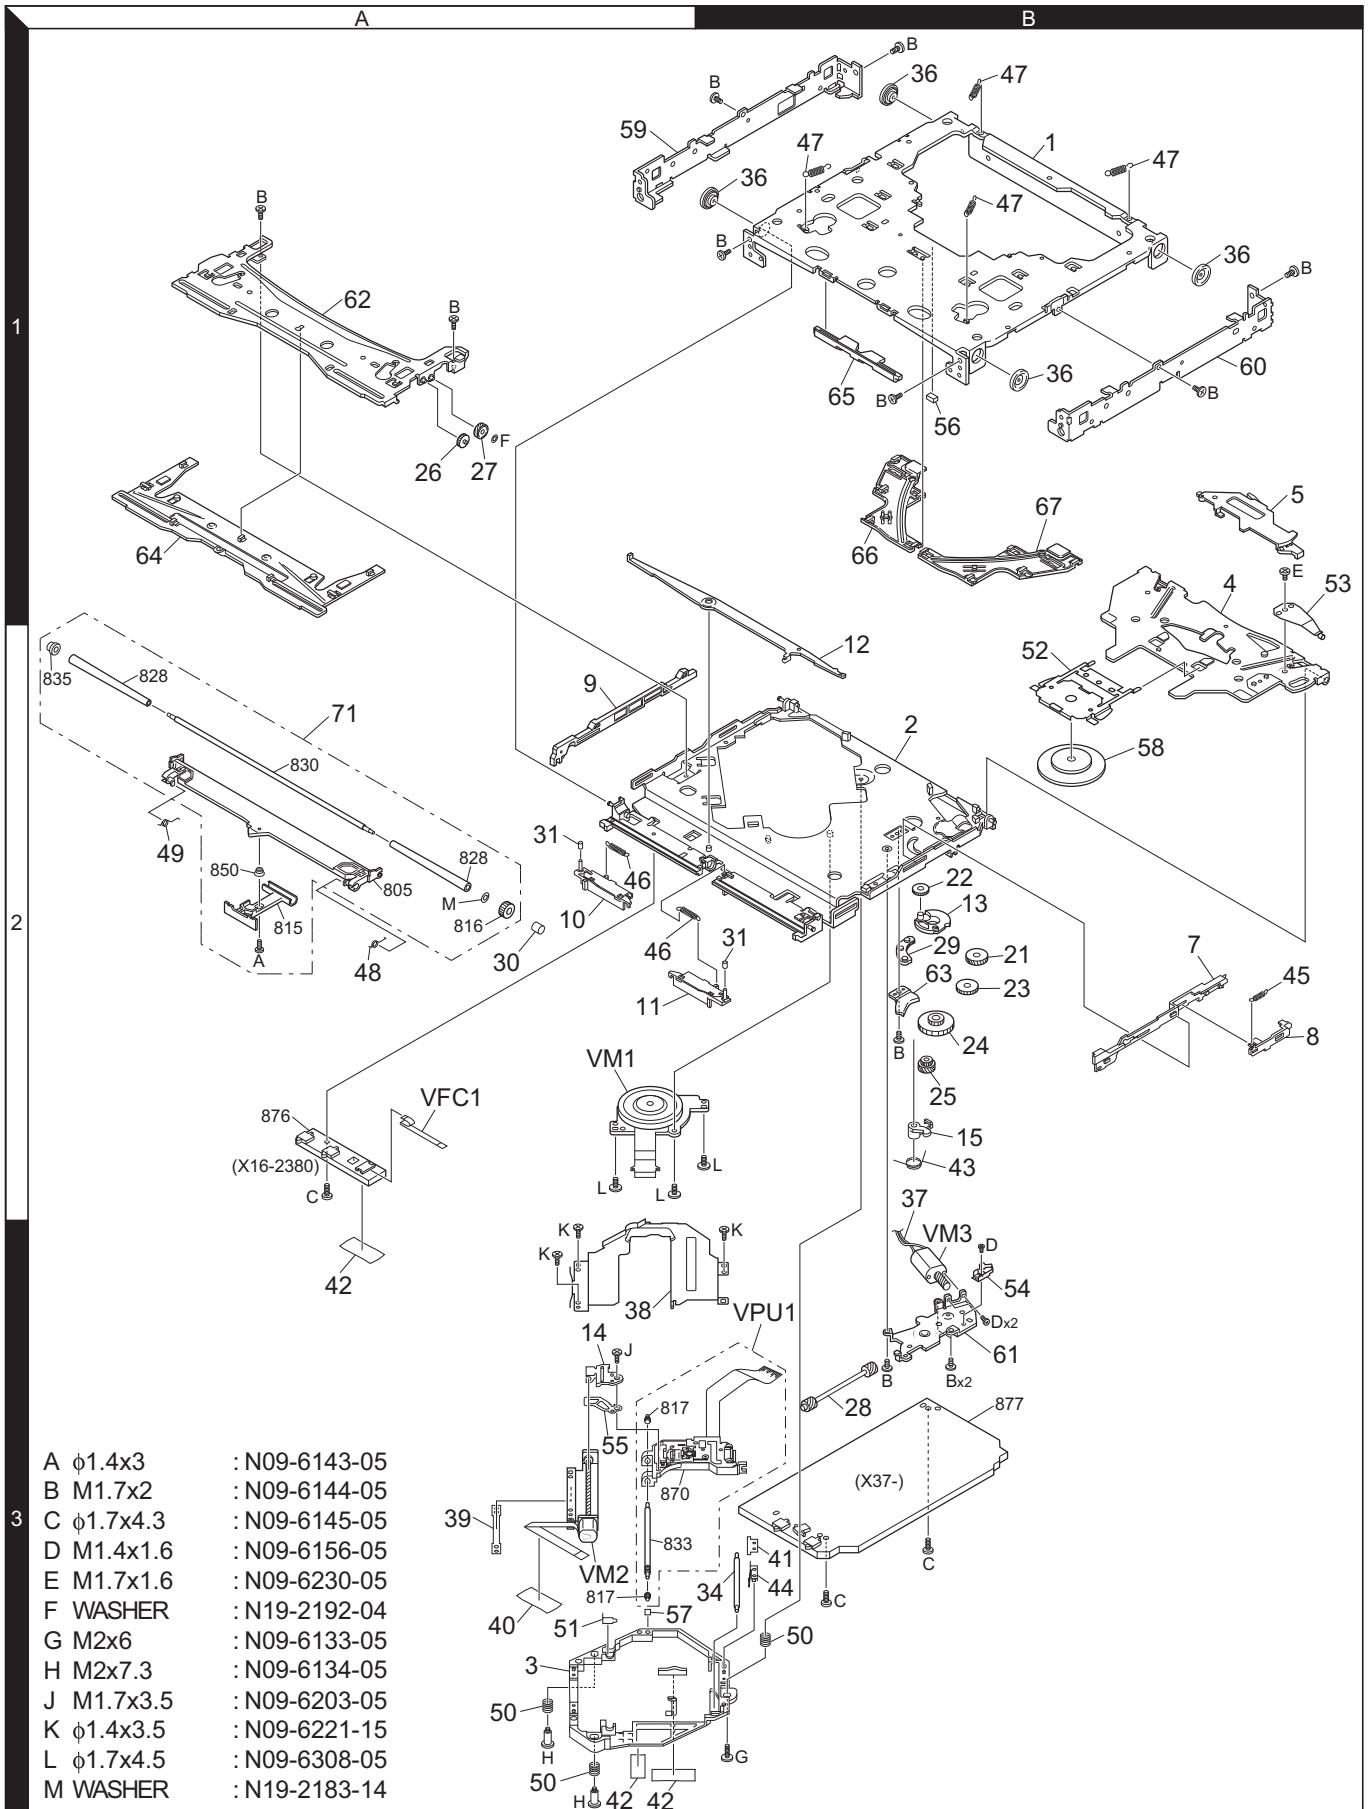

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

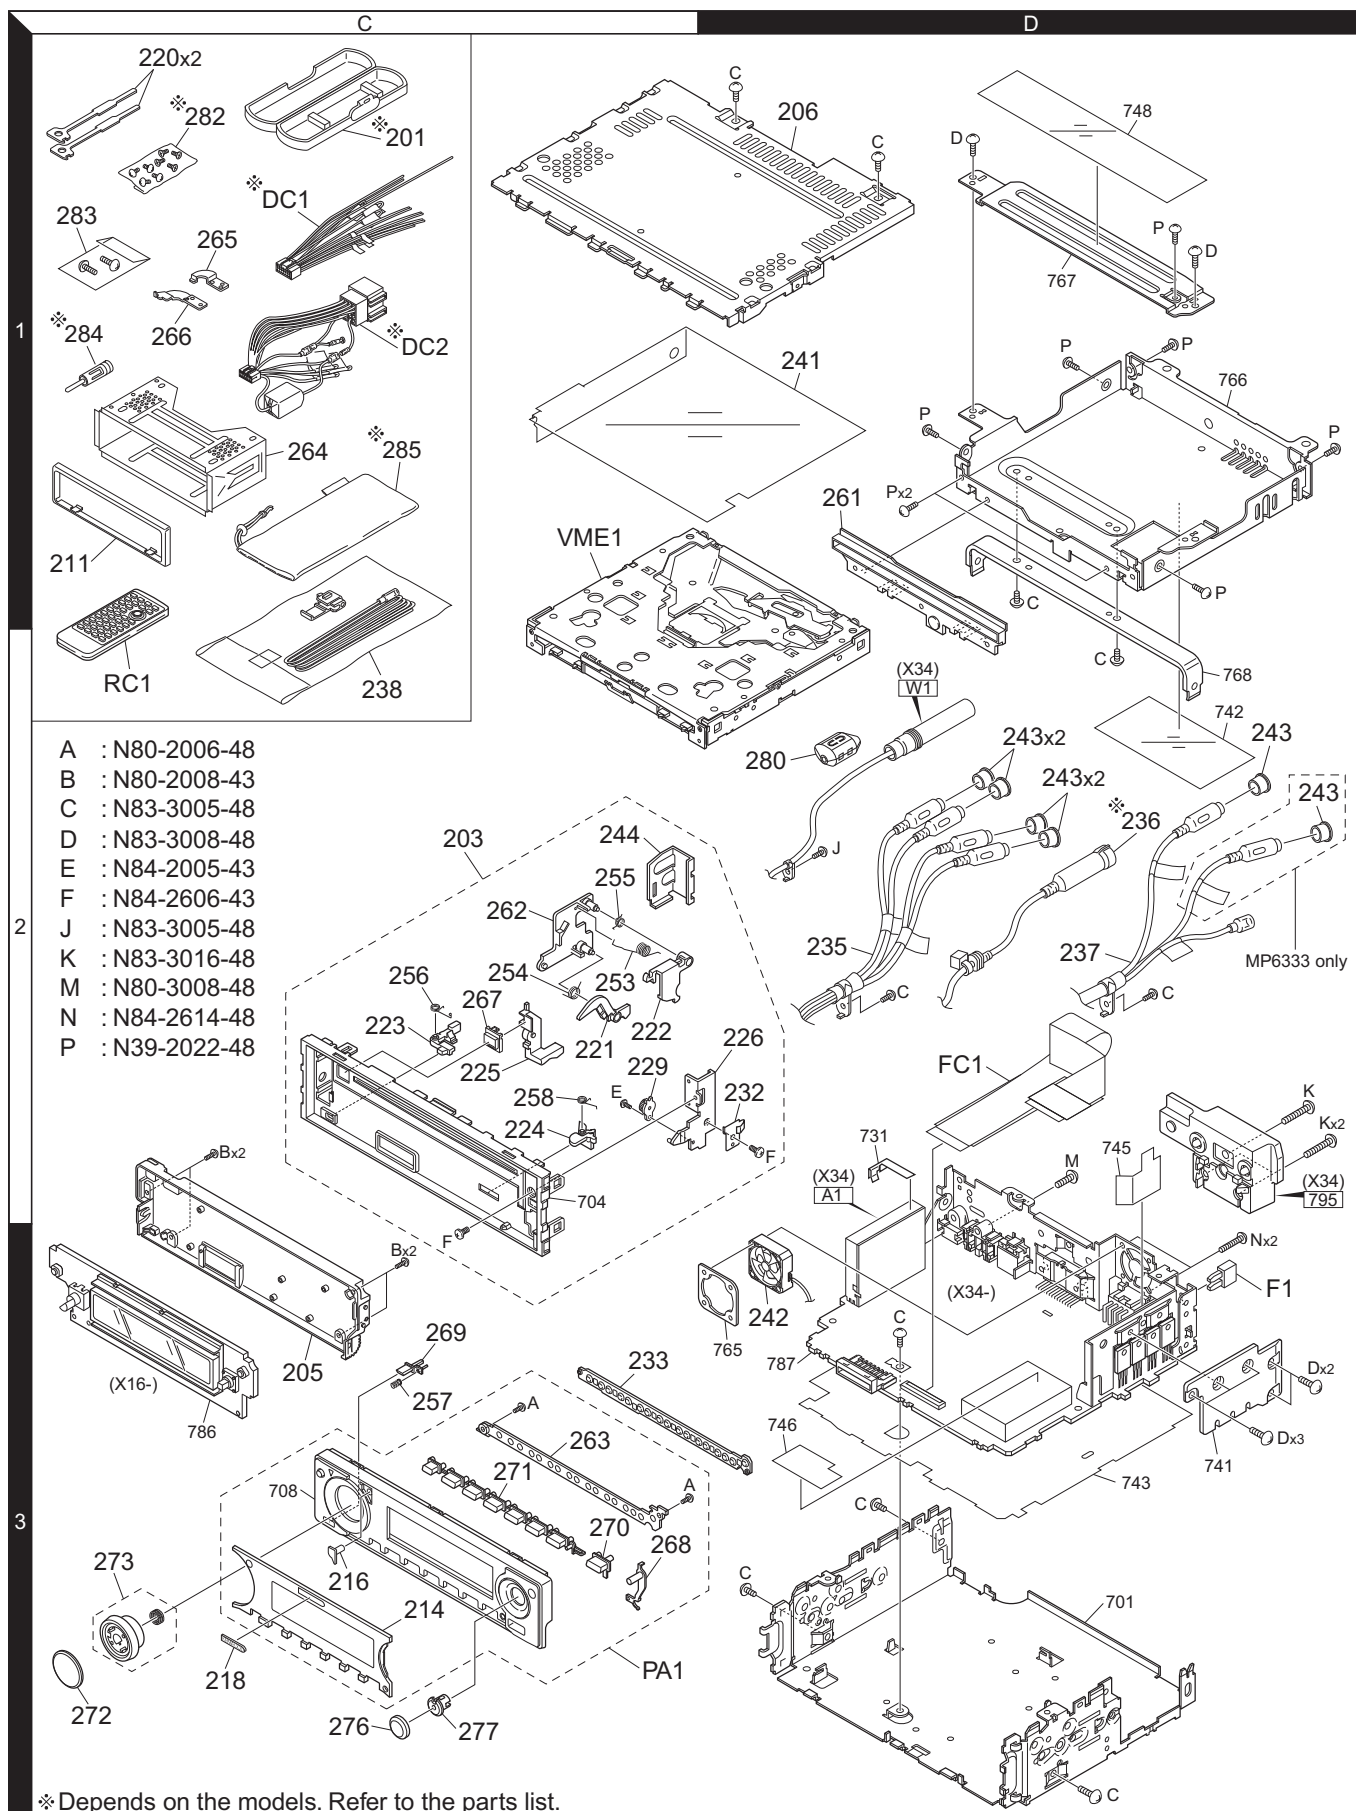

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDV-412/5234/5234Y/MP6333/MP6433						237	2D	*	E30-6609-05	CORD WITH PINPLUG (VIDEO 2CH)	M1
201	1C		A02-2743-03	PLASTIC CABINET ASSY	M1X1	238	2C	*	E30-6610-05	CONNECTING CORD ASSY (PARK)	
203	2C		A22-3059-12	SUB PANEL ASSY		Δ DC1	1C	*	E30-6604-05	DC CORD	M1X1
205	3C		A46-1833-11	REAR COVER		Δ DC1	1C	*	E30-6605-05	DC CORD	K
206	1D	*	A52-0877-02	TOP PLATE		Δ DC2	1C	*	E30-6607-05	DC CORD	E1E2
PA1	3C	*	A64-3937-01	PANEL ASSY	K	FC1	2D		E39-0874-05	FLAT CABLE (50-PIN)	
PA1	3C	*	A64-3938-01	PANEL ASSY	E1E2	241	1D	*	F09-2829-03	SHEET (DVD MECHA)	
PA1	3C	*	A64-3939-01	PANEL ASSY	M1	242	3D	*	F09-2854-05	FAN	
PA1	3C	*	A64-3940-01	PANEL ASSY	X1	243	2D		F29-0626-04	INSULATING COVER	
RC1	2C		A70-2077-05	REMOTE CONTROLLER ASSY (RC-DV430)		244	2C		F31-0716-04	REINFORCING HARDWARE	
-			B46-0612-14	ID CARD	E1E2M1	Δ F1	3D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
-			B46-0612-14	ID CARD	X1	253	2C		G01-3246-04	TORSION COIL SPRING	
-			B46-0681-04	ID CARD	K	254	2C		G01-3247-04	TORSION COIL SPRING	
-			B46-0682-00	WARRANTY CARD	KE1M1	255	2C		G01-3248-04	TORSION COIL SPRING	
-			B46-0682-00	WARRANTY CARD	X1	256	2C		G01-3249-04	TORSION COIL SPRING	
-			B58-1426-04	CAUTION CARD	K	257	3C		G01-4611-04	COMPRESSION SPRING (REL)	
-		*	B64-3435-00	INST. MANUAL (ENGLISH)	K	258	2C		G01-3270-04	TORSION COIL SPRING	
-		*	B64-3436-00	INST. MANUAL (FRENCH)	K	-			H10-4983-02	POLYSTYRENE FOAMED FIXTURE	
-		*	B64-3437-00	INST. MANUAL (SPANISH)	K	-		*	H13-2072-04	CARTON BOARD	E1
-		*	B64-3438-00	INST. MANUAL (ENGLISH)	E1E2	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	KE2M1
-		*	B64-3439-00	INST. MANUAL (FRENCH)	E1	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	X1
-		*	B64-3440-00	INST. MANUAL (GERMAN)	E1	-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	B64-3441-00	INST. MANUAL (DUTCH)	E1	-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1
-		*	B64-3442-00	INST. MANUAL (ITALIAN)	E1	-		*	H54-3811-03	ITEM CARTON CASE	K
-		*	B64-3443-00	INST. MANUAL (SPANISH)	E1	-		*	H54-3812-03	ITEM CARTON CASE	E1
-		*	B64-3444-00	INST. MANUAL (PORTUGUESE)	E1	-		*	H54-3813-03	ITEM CARTON CASE	E2
-		*	B64-3445-00	INST. MANUAL (RUSSIAN)	E2	-		*	H54-3814-03	ITEM CARTON CASE	M1
-		*	B64-3446-00	INST. MANUAL (ENGLISH)	M1X1	-		*	H54-3815-03	ITEM CARTON CASE	X1
-		*	B64-3447-00	INST. MANUAL (T-CHINESE)	M1	261	1D		J90-1139-03	GUIDE (DVD MECHA)	
-		*	B64-3448-00	INST. MANUAL (KOREAN)	M1	262	2C		J19-7049-03	HOLDER (ARM)	
211	1C		B07-3125-01	ESCUTCHEON	E1E2X1	263	3C	*	J19-7112-02	HOLDER	
211	1C		B07-3126-01	ESCUTCHEON	KM1	264	1C		J22-0011-03	MOUNTING HARDWARE ASSY	
214	3C	*	B10-4841-02	FRONT GLASS	K	265	1C		J22-0258-04	MOUNTING HARDWARE (L)	
214	3C	*	B10-4842-02	FRONT GLASS	E1E2	266	1C		J22-0259-04	MOUNTING HARDWARE (R)	
214	3C	*	B10-4843-02	FRONT GLASS	M1	267	2C		K24-4282-04	PUSH KNOB (EJECT)	
214	3C	*	B10-4844-02	FRONT GLASS	X1	268	3C		K24-4460-03	PUSH KNOB (AME)	
216	3C		B19-2364-04	LIGHTING BOARD (REMOTE)		268	3C		K24-4461-03	PUSH KNOB (AME)	
218	3C		B43-1518-04	BADGE		269	3C		K24-4464-03	PUSH KNOB (RELEASE)	
220	1C		D10-4589-04	LEVER		270	3C		K24-4462-03	PUSH KNOB (SRC)	
221	2C		D10-4865-03	LEVER (PUSH)		271	3C		K25-1784-02	PUSH KNOB (PRESET)	
222	2C		D10-4866-03	LEVER (HOOK)		272	3C		K28-0103-03	KEY TOP (VOL)	
223	2C		D10-4867-04	LEVER (LOCK)		273	3C		K29-7200-03	KNOB ASSY (VOL)	
224	2C		D10-4868-04	LEVER (DETECT)		276	3C		K28-0106-03	KEY TOP (FM/AM)	
225	2C		D10-4869-03	LEVER (EJECT)		277	3C		K28-0122-03	KNOB BASE (FM/AM)	
226	2D		D10-4870-04	ARM ASSY		280	2D		L92-0606-05	FERRITE CORE	
229	2C		D39-0255-05	DAMPER		282	1C		N99-1757-05	SCREW SET	
232	2D		E29-2028-04	LEAD PLATE		283	1C		N99-1780-05	SCREW SET	
233	3C		E29-2067-03	CONDUCTIVE RUBBER		A	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
235	2D	*	E30-6602-05	CORD WITH PINPLUG (R/NON+AUX)	E1E2M1	B	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
235	2D	*	E30-6603-05	CORD WITH PINPLUG (R+NON)	KX1	C	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
236	2D		E30-6292-15	CORD WITH DIN CONNECTOR (OPEL)	E1E2	D	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
237	2D	*	E30-6608-05	CORD WITH PINPLUG (VIDEO 1CH)	KE1E2						
237	2D	*	E30-6608-05	CORD WITH PINPLUG (VIDEO 1CH)	X1						

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

Δ Indicates safety critical components.

PARTS LIST

KDV-412/5234/5234Y/MP6333/MP6433

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
F	2D		N84-2606-43	PAN HEAD TAPTITE SCREW	
N	3D		N84-2614-48	PAN HEAD TAPTITE SCREW	
P	1D		N39-2022-48	PAN HEAD MACHINE SCREW	
284	1C		T90-0523-05	ANTENNA ADAPTOR	E1E2
285	1C		W01-1661-05	CARRYING CASE	KE1E2
VME1	1C	*	X92-5550-01	MECHANISM ASSY (DVS-7621V)	
SWITCH UNIT (X16-2380-01) IN DVD MECHA					
CN1			E41-2623-05	FLAT CABLE CONNECTOR	
S1,2			S68-0827-05	PUSH SWITCH	
SWITCH UNIT (X16-3492-71)					
D1-3			B30-1567-05	LED (1608,RED)	
D4-6			B30-1533-05	LED (1608,PG)	
D7-9			B30-1567-05	LED (1608,RED)	
D10-12			B30-1533-05	LED (1608,PG)	
D13-15			B30-1567-05	LED (1608,RED)	
D16-18			B30-1533-05	LED (1608,PG)	
D19			B30-1567-05	LED (1608,RED)	
D20-23			B30-1729-05	LED (1608,BLUE)	
D25			B30-1567-05	LED (1608,RED)	
D26			B30-1533-05	LED (1608,PG)	
C8			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73GB1H104K	CHIP C 0.10UF K	
C13-16			CK73GB1H103K	CHIP C 0.010UF K	
C19,20			CK73GB1H104K	CHIP C 0.10UF K	
C27,28			CC73GCH1H102J	CHIP C 1000PF J	
C29			CC73GCH1H471J	CHIP C 470PF J	
C31			CK73GB1H104K	CHIP C 0.10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
CP10,11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13,14			RK73GB2A101J	CHIP R 100 J 1/10W	
R20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RK73GB2A473J	CHIP R 47K J 1/10W	
R26			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A473J	CHIP R 47K J 1/10W	
R51			RK73FB2B471J	CHIP R 470 J 1/8W	
R52-54			RK73EB2E681J	CHIP R 680 J 1/4W	
R55,56			RK73EB2E301J	CHIP R 300 J 1/4W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R59,60			RK73EB2E821J	CHIP R 820 J 1/4W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R66,67			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R73			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R80			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R81			RK73GB2A223J	CHIP R 22K J 1/10W	
R112			RK73GB2A104J	CHIP R 100K J 1/10W	
R113			RK73FB2B221J	CHIP R 220 J 1/8W	
W5			R92-1252-05	CHIP R 0 OHM J 1/16W	
W8			R92-1252-05	CHIP R 0 OHM J 1/16W	
W10			R92-2053-05	CHIP R 0 OHM J 1/8W	
S2			S70-0106-05	TACT SWITCH	
S10			S70-0939-05	TACT SWITCH	
S27			S70-0939-05	TACT SWITCH	
S1			T99-0457-15	ROTARY ENCODER	
D102			UDZS5.6B	ZENER DIODE	
D110			DA204U	DIODE	
ED1			3-BT-235INK	FLUORESCENT INDICATOR TUBE	
IC2			PNA4S22M02KW	ANALOGUE IC	
Q4			DTA114EE	DIGITAL TRANSISTOR	
Q5			KTC4075EP(Y,GR	TRANSISTOR	
Q10			KTC4075EP(Y,GR	TRANSISTOR	
Q12-14			KTA2014EP(Y,GR	TRANSISTOR	
Q15			KTC4075EP(Y,GR	TRANSISTOR	
Q20			DTC144EE	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-429x-xx)					
D302			B30-1710-05	LED (RED)	
C1			C90-6783-05	ELECTRO 3900UF 16WV	
C3			C90-5692-05	ELECTRO 220UF 16WV	
C4			CK73GB1H103K	CHIP C 0.010UF K	
C5			CD04AY1H100M	ELECTRO 10UF 50WV	
C6			CD04AY1A101M	ELECTRO 100UF 10WV	
C7			CK73FB1C105K	CHIP C 1.0UF K	
C8			CD04AY1A221M	ELECTRO 220UF 10WV	
C14			CD04AS1C101M	ELECTRO 100UF 16WV	KX1
C15			CD04AS1C220M	ELECTRO 22UF 16WV	KX1
C16			CD04AS1C470M	ELECTRO 47UF 16WV	KX1
C101			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
C102			CK73GB1A105K	CHIP C 1.0UF K	
C103			CK73GB1H104K	CHIP C 0.10UF K	
C104			CK73GB1H103K	CHIP C 0.010UF K	
C105			CK73GB1H223K	CHIP C 0.022UF K	
C106			CK73GB1A105K	CHIP C 1.0UF K	
C107			CK73GB1H102K	CHIP C 1000PF K	
C108-110			CK73GB1H103K	CHIP C 0.010UF K	
C203,204			CC73GCH1H220J	CHIP C 22PF J	
C205			CK73GB1A334K	CHIP C 0.33UF K	
C206,207			CK73GB1H103K	CHIP C 0.010UF K	
C208			CK73GB1H102K	CHIP C 1000PF K	
C209-211			CK73GB1H103K	CHIP C 0.010UF K	
C214			CC73GCH1H101J	CHIP C 100PF J	
C304,305			CK73GB1H103K	CHIP C 0.010UF K	
C306			CD04AS1V100M	ELECTRO 10UF 35WV	
C307			CK73GB1H103K	CHIP C 0.010UF K	

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-429x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C308			CD04AS1V100M	ELECTRO 10UF 35WV		C735,736			CK73FB0J106K	CHIP C 10UF K	
C309			CK73GB1H103K	CHIP C 0.010UF K		C737			CD04BK1E101M	ELECTRO 100UF 25WV	
C322			CD04AS1V100M	ELECTRO 10UF 35WV		C738			CD04BK1A221M	ELECTRO 220UF 10WV	
C323			CK73GB1H103K	CHIP C 0.010UF K		C739,740			CK73GB1H473K	CHIP C 0.047UF K	
C401			CD04AS1C470M	ELECTRO 47UF 16WV		C743			CK73EB1E105K	CHIP C 1.0UF K	
C402,403			CD04AS1H3R3M	ELECTRO 3.3UF 50WV		C744			CD04BK1E101M	ELECTRO 100UF 25WV	
C404			CK73GB1A105K	CHIP C 1.0UF K		C745			CK73GB1H104K	CHIP C 0.10UF K	
C406,407			CD04AS1H3R3M	ELECTRO 3.3UF 50WV		C746			CK73GB1H473K	CHIP C 0.047UF K	
C410			CK73GB1H103K	CHIP C 0.010UF K		C747			CD04BK1A221M	ELECTRO 220UF 10WV	
C411			CD04AS1V100M	ELECTRO 10UF 35WV	E1E2M1	C749			CD04BK1E101M	ELECTRO 100UF 25WV	
C411,412			CD04AS1V100M	ELECTRO 10UF 35WV	KX1	C750			CD04BK1A221M	ELECTRO 220UF 10WV	
C413,414			CK73FB1E474K	CHIP C 0.47UF K		C754-756			CK73GB1H104K	CHIP C 0.10UF K	
C415,416			C90-6814-05	ELECTRO 2.2UF 16WV		C757			CC73GCH1H221J	CHIP C 220PF J	KE1E2
C417-420			CD04AS1C220M	ELECTRO 22UF 16WV	E1E2M1	C757			CC73GCH1H221J	CHIP C 220PF J	X1
C417-422			CD04AS1C220M	ELECTRO 22UF 16WV	KX1	C757,758			CC73GCH1H221J	CHIP C 220PF J	M1
C423,424			CC73GCH1H101J	CHIP C 100PF J		C759			CK73EB1E105K	CHIP C 1.0UF K	
C426,427			CK73FB1E474K	CHIP C 0.47UF K	E1E2M1	C760			CK73GB1H103K	CHIP C 0.010UF K	
C428			CD04AS0J470M	ELECTRO 47UF 6.3WV	E1E2M1	C761-764			CC73GCH1H101J	CHIP C 100PF J	
C429			CK73GB1H103K	CHIP C 0.010UF K	E1E2M1	C770			CC73GCH1H221J	CHIP C 220PF J	
C431			CD04AS1V100M	ELECTRO 10UF 35WV		C771,772			CC73GCH1H471J	CHIP C 470PF J	
C501			CK73FB1C105K	CHIP C 1.0UF K		C773			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C502			CD04BM1E330M	ELECTRO 33UF 25WV		C774			CC73GCH1H470J	CHIP C 47PF J	
C503-506			C90-6779-05	ELECTRO 0.47UF 16WV		C801			CC73GCH1H070D	CHIP C 7.0PF D	KM1X1
C507			CK73FB1C105K	CHIP C 1.0UF K		C801			CK73GB1H103K	CHIP C 0.010UF K	E1E2
C510,511			CK73FB1E474K	CHIP C 0.47UF K		C802-805			CC73GCH1H070D	CHIP C 7.0PF D	KM1X1
C512			CD04AS0J470M	ELECTRO 47UF 6.3WV		C807-822			CC73GCH1H150J	CHIP C 15PF J	
C513			CK73GB1H103K	CHIP C 0.010UF K		C825			CC73GCH1H070D	CHIP C 7.0PF D	KM1X1
C529,530			C90-6802-05	ELECTRO 1UF 50WV		C912			CD04BK1E101M	ELECTRO 100UF 25WV	
C702			CD04AY1H100M	ELECTRO 10UF 50WV		C920			CC73GCH1H101J	CHIP C 100PF J	
C703,704			CC73GCH1H150J	CHIP C 15PF J	KE1E2	△			E41-2603-05	FLAT CABLE CONNECTOR	
C705			CC73GCH1H331J	CHIP C 330PF J	KE1E2	CN1			E41-0959-05	PIN ASSY	
C706			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	KE1E2	CN9			E41-0927-05	PIN ASSY	
C707			CK73GB1H103K	CHIP C 0.010UF K	KE1E2	CN702			E41-0930-05	PIN ASSY	E1E2
C708			CD04AS1V100M	ELECTRO 10UF 35WV	KE1E2	CN703			E41-0943-05	PIN ASSY	
C710			CK73FB1C105K	CHIP C 1.0UF K		CN704					
C711			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	KE1E2	J1			E58-0991-05	RECTANGULAR RECEPTACLE	
C711			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	X1	J2			E56-0855-05	CYLINDRICAL RECEPTACLE	
C711,712			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	M1	J4			E58-0992-05	RECTANGULAR RECEPTACLE	
C713			CD04AS1C470M	ELECTRO 47UF 16WV		J701		*	E63-0940-05	PIN JACK	
C714			CD04AS1C101M	ELECTRO 100UF 16WV	KE1E2	W1	2D	*	E30-6601-05	CORD WITH PLUG	
C714			CD04AS1C101M	ELECTRO 100UF 16WV	X1	L201			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
C714,715			CD04AS1C101M	ELECTRO 100UF 16WV	M1	L301			L33-2260-05	CHOKE COIL	
C716			CD04AS1V100M	ELECTRO 10UF 35WV	KE1E2	L302-304			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	KE1E2
C716			CD04AS1V100M	ELECTRO 10UF 35WV	X1	L701			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
C716-718			CD04AS1V100M	ELECTRO 10UF 35WV	M1	L702			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
C718			CD04AS1V100M	ELECTRO 10UF 35WV	KE1E2	L703		*	L33-2310-05	CHOKE COIL	
C718			CD04AS1V100M	ELECTRO 10UF 35WV	X1	L704,705		*	L33-2323-05	CHOKE COIL	
C721-723			CK73GB1H103K	CHIP C 0.010UF K	M1	L706			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
C721,722			CK73GB1H103K	CHIP C 0.010UF K	KE1E2	L707			L92-0329-05	CHIP FERRITE	
C721,722			CK73GB1H103K	CHIP C 0.010UF K	X1	L903			L92-0339-05	CHIP FERRITE	
C724,725			CK73GB1H104K	CHIP C 0.10UF K		X1			L77-2880-05	CRYSTAL RESONATOR (32.768KHZ)	
C726,727			CK73FB1C105K	CHIP C 1.0UF K		X2			L78-0872-05	RESONATOR (12MHZ)	
C728			CK73EB1E105K	CHIP C 1.0UF K		X701			L77-2002-05	CRYSTAL RESONATOR (4.332MHZ)	KE1E2
C730-733			CK73GB1H104K	CHIP C 0.10UF K		J	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
C734			CD04BK1E101M	ELECTRO 100UF 25WV		K	2D		N83-3016-48	PAN HEAD TAPTITE SCREW	

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-429x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
M	2D		N80-3008-48	PAN HEAD TAPTITE SCREW	
CP201			RK74GB1J101J	CHIP-COM 100 J 1/16W	E1E2
CP209			RK74GB1J101J	CHIP-COM 100 J 1/16W	
R1			RK73FB2B153J	CHIP R 15K J 1/8W	
R2			RK73GB2A101J	CHIP R 100 J 1/10W	
R3			RK73GB2A223J	CHIP R 22K J 1/10W	
R4			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R5			RK73FB2B221J	CHIP R 220 J 1/8W	
R7			RK73GH2A243D	CHIP R 24K D 1/10W	
R8			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R17,18			RK73GB2A223J	CHIP R 22K J 1/10W	KX1
R19			RK73PB2H100J	CHIP R 10 J 1/2W	KX1
R20			RK73GB2A473J	CHIP R 47K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W	
R22			RK73PB2H100J	CHIP R 10 J 1/2W	KX1
R23			RK73GB2A102J	CHIP R 1.0K J 1/10W	KX1
R24			RK73GB2A513J	CHIP R 51K J 1/10W	KX1
R25,26			RK73GB2A102J	CHIP R 1.0K J 1/10W	KX1
R27			RK73GB2A221J	CHIP R 220 J 1/10W	KX1
R28,29			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	KX1
R30			RK73GB2A332J	CHIP R 3.3K J 1/10W	KX1
R31,32			RK73PB2H2R7J	CHIP R 2.7 J 1/2W	
R101			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1E2M1
R101			RK73EB2E102J	CHIP R 1.0K J 1/4W	X1
R102,103			RK73EB2E103J	CHIP R 10K J 1/4W	
R104			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R105			RK73PB2H221J	CHIP R 220 J 1/2W	KM1X1
R106			RK73GB2A223J	CHIP R 22K J 1/10W	KM1X1
R107			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R108			R92-5024-05	CHIP R 1K J 3/4W	
R109			RK73GB2A223J	CHIP R 22K J 1/10W	
R110			R92-5024-05	CHIP R 1K J 3/4W	
R111			RK73PB2H221J	CHIP R 220 J 1/2W	KM1X1
R112			RK73GB2A473J	CHIP R 47K J 1/10W	
R113,114			RK73GB2A104J	CHIP R 100K J 1/10W	
R115			RK73FB2B683J	CHIP R 68K J 1/8W	
R116			RK73GB2A393J	CHIP R 39K J 1/10W	
R117			RK73FB2B203J	CHIP R 20K J 1/8W	
R118			RK73GB2A104J	CHIP R 100K J 1/10W	
R122,123			RK73GB2A103J	CHIP R 10K J 1/10W	
R124,125			RK73GB2A223J	CHIP R 22K J 1/10W	
R126			R92-5088-05	CHIP R 3.3K J 3/4W	
R127			RK73EB2E333J	CHIP R 33K J 1/4W	
R128			RK73GB2A103J	CHIP R 10K J 1/10W	
R201			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R202			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R203			RK73GB2A104J	CHIP R 100K J 1/10W	
R204			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R206			RK73GB2A114J	CHIP R 110K J 1/10W	
R207,208			RK73GB2A103J	CHIP R 10K J 1/10W	
R210			RK73GB2A473J	CHIP R 47K J 1/10W	
R211			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R212			RK73GB2A473J	CHIP R 47K J 1/10W	
R213,214			RK73GB2A102J	CHIP R 1.0K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R215			RK73GB2A104J	CHIP R 100K J 1/10W	
R216			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R217			RK73GB2A101J	CHIP R 100 J 1/10W	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R220			RK73GB2A223J	CHIP R 22K J 1/10W	KE1E2
R221,222			RK73GB2A471J	CHIP R 470 J 1/10W	
R227,228			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R229,230			RK73GB2A473J	CHIP R 47K J 1/10W	
R234,235			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R239			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R241			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R243			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2X1
R244			RK73GB2A473J	CHIP R 47K J 1/10W	KM1
R246			RK73GB2A473J	CHIP R 47K J 1/10W	KE1E2
R246,247			RK73GB2A473J	CHIP R 47K J 1/10W	M1X1
R248-250			RK73GB2A473J	CHIP R 47K J 1/10W	KE1E2
R249,250			RK73GB2A473J	CHIP R 47K J 1/10W	M1X1
R253			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R257,258			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R259,260			RK73GB2A104J	CHIP R 100K J 1/10W	
R261			RK73GB2A333J	CHIP R 33K J 1/10W	
R262,263			RK73GB2A473J	CHIP R 47K J 1/10W	
R271-279			RK73GB2A101J	CHIP R 100 J 1/10W	
R280			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R281-283			RK73GB2A101J	CHIP R 100 J 1/10W	
R284-286			RK73GB2A104J	CHIP R 100K J 1/10W	
R287,288			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R289			RK73GB2A471J	CHIP R 470 J 1/10W	
R291			RK73GB2A473J	CHIP R 47K J 1/10W	
R299			RK73GB2A473J	CHIP R 47K J 1/10W	
R301			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R302,303			RK73EB2E101J	CHIP R 100 J 1/4W	
R304			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R305-309			RK73EB2E101J	CHIP R 100 J 1/4W	
R310			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R311			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R312			RK73GB2A473J	CHIP R 47K J 1/10W	
R320			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R321			RK73GB2A223J	CHIP R 22K J 1/10W	
R322			RK73GB2A471J	CHIP R 470 J 1/10W	
R323			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R324			RK73GB2A471J	CHIP R 470 J 1/10W	
R325			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R326			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R332			RK73GB2A241J	CHIP R 240 J 1/10W	
R333			RK73GB2A471J	CHIP R 470 J 1/10W	
R336			RK73GB2A104J	CHIP R 100K J 1/10W	
R337,338			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R339			RK73GB2A473J	CHIP R 47K J 1/10W	
R401			RK73GB2A103J	CHIP R 10K J 1/10W	
R402,403			RK73GB2A361J	CHIP R 360 J 1/10W	
R404,405			RK73GB2A223J	CHIP R 22K J 1/10W	
R406,407			RK73GB2A361J	CHIP R 360 J 1/10W	
R408,409			RK73GB2A223J	CHIP R 22K J 1/10W	

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-429x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R410,411			RK73GB2A361J	CHIP R 360 J 1/10W	KX1	R734			RK73GH2A393D	CHIP R 39K D 1/10W	
R412,413			RK73GB2A223J	CHIP R 22K J 1/10W	KX1	R735			RK73GH2A152D	CHIP R 1.5K D 1/10W	
R414-419			RK73FB2B181J	CHIP R 180 J 1/8W	KX1	R738			RK73GB2A223J	CHIP R 22K J 1/10W	
R414,415			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2M1	R739			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R420,421			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2M1	R740		*	RK73PB2H101J	CHIP R 100 J 1/2W	
R422			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E1E2M1	R749			RK73GH2A151D	CHIP R 150 D 1/10W	
R423,424			RK73EB2E100J	CHIP R 10 J 1/4W	E1E2M1	R751			RK73FB2B182J	CHIP R 1.8K J 1/8W	
R425			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2M1	R752			RK73GB2A471J	CHIP R 470 J 1/10W	KE1E2
R426			RK73GB2A222J	CHIP R 2.2K J 1/10W	KX1	R752			RK73GB2A471J	CHIP R 470 J 1/10W	X1
R427			RK73GB2A472J	CHIP R 4.7K J 1/10W	KX1	R752,753			RK73GB2A471J	CHIP R 470 J 1/10W	M1
R428			RK73GB2A102J	CHIP R 1.0K J 1/10W	KX1	R754		*	RK73EB2E1R2J	CHIP R 1.2 J 1/4W	
R429			RK73GB2A473J	CHIP R 47K J 1/10W	KX1	R755,756			RK73GB2A103J	CHIP R 10K J 1/10W	
R431			RK73GB2A100J	CHIP R 10 J 1/10W		R757			RK73GB2A474J	CHIP R 470K J 1/10W	
R432			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R758,759			RK73GB2A103J	CHIP R 10K J 1/10W	
R433,434			RK73GB2A101J	CHIP R 100 J 1/10W		R760			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R501			RK73GB2A102J	CHIP R 1.0K J 1/10W		R761			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R502			RK73GB2A510J	CHIP R 51 J 1/10W		R762			RK73GB2A473J	CHIP R 47K J 1/10W	
R503			RK73GB2A392J	CHIP R 3.9K J 1/10W		R763			RK73FB2B681J	CHIP R 680 J 1/8W	KE1E2
R505,506			RK73GB2A223J	CHIP R 22K J 1/10W		R763			RK73FB2B681J	CHIP R 680 J 1/8W	X1
R507			RK73GB2A221J	CHIP R 220 J 1/10W		R763,764			RK73FB2B681J	CHIP R 680 J 1/8W	M1
R508			RK73EB2E472J	CHIP R 4.7K J 1/4W		R765			RK73PB2H2R7J	CHIP R 2.7 J 1/2W	
R509			RK73EB2E101J	CHIP R 100 J 1/4W		R766			RK73FB2B1R0J	CHIP R 1.0 J 1/8W	
R510			RK73EB2E472J	CHIP R 4.7K J 1/4W		R767			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R511-517			RK73EB2E101J	CHIP R 100 J 1/4W		R768			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R518			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R770			RK73GB2A103J	CHIP R 10K J 1/10W	
R519			RK73GB2A102J	CHIP R 1.0K J 1/10W		R771		*	R92-5139-05	CHIP R 0.10	
R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1E2	R772			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R521-523			RK73EB2E471J	CHIP R 470 J 1/4W	E1E2	R773,774			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2
R703			RK73FB2B182J	CHIP R 1.8K J 1/8W		R801			RK73GB2A101J	CHIP R 100 J 1/10W	KM1X1
R704-706			RK73GB2A222J	CHIP R 2.2K J 1/10W	KE1E2	R802			RK73GB2A111J	CHIP R 110 J 1/10W	KM1X1
R707			RK73FB2B561J	CHIP R 560 J 1/8W	E1E2M1	R803			RK73GB2A3R3J	CHIP R 3.3 J 1/10W	KM1X1
R707			RK73FB2B561J	CHIP R 560 J 1/8W	X1	R804			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	KM1X1
R709			RK73EB2E103J	CHIP R 10K J 1/4W		R805			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1X1
R710			RK73EB2E750J	CHIP R 75 J 1/4W	KE1E2	R805,806			RK73GB2A102J	CHIP R 1.0K J 1/10W	KE1E2
R710			RK73EB2E750J	CHIP R 75 J 1/4W	X1	R810,811			RK73GB2A750J	CHIP R 75 J 1/10W	
R710,711			RK73EB2E750J	CHIP R 75 J 1/4W	M1	R812,813			RK73GB2A680J	CHIP R 68 J 1/10W	
R713			RK73GB2A473J	CHIP R 47K J 1/10W		R814			RK73GB2A561J	CHIP R 560 J 1/10W	
R714			RK73GB2A104J	CHIP R 100K J 1/10W		R815			RK73GB2A101J	CHIP R 100 J 1/10W	
R716			RK73GB2A472J	CHIP R 4.7K J 1/10W		R816			RK73GB2A3R9J	CHIP R 3.9 J 1/10W	KM1X1
R718			RK73GB2A220J	CHIP R 22 J 1/10W		R817			RK73GB2A130J	CHIP R 13 J 1/10W	KM1X1
R719			RK73FB2B152J	CHIP R 1.5K J 1/8W		R818,819			RK73GB2A910J	CHIP R 91 J 1/10W	
R720			RK73GH2A683D	CHIP R 68K D 1/10W		R820,821			RK73GB2A101J	CHIP R 100 J 1/10W	
R721			RK73GH2A823D	CHIP R 82K D 1/10W		R822			RK73GB2A111J	CHIP R 110 J 1/10W	KM1X1
R722			RK73GH2A114D	CHIP R 110K D 1/10W		R823			RK73GB2A130J	CHIP R 13 J 1/10W	KM1X1
R723			RK73GB2A153J	CHIP R 15K J 1/10W		R824			RK73GB2A120J	CHIP R 12 J 1/10W	KM1X1
R724			RK73GB2A332J	CHIP R 3.3K J 1/10W		R924			RK73GB2A104J	CHIP R 100K J 1/10W	
R725			RK73GH2A123D	CHIP R 12K D 1/10W		W3			R92-1252-05	CHIP R 0 OHM J 1/16W	
R726			RK73GH2A124D	CHIP R 120K D 1/10W		W14			R92-2053-05	CHIP R 0 OHM J 1/8W	KX1
R727			RK73GH2A183D	CHIP R 18K D 1/10W		W15			R92-2053-05	CHIP R 0 OHM J 1/8W	E1E2M1
R728			RK73GH2A823D	CHIP R 82K D 1/10W		W704			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2
R729			RK73GH2A822D	CHIP R 8.2K D 1/10W		W708,709			R92-2052-05	CHIP R 0 OHM J 1/10W	
R730			RK73GH2A203D	CHIP R 20K D 1/10W		W711			R92-2052-05	CHIP R 0 OHM J 1/10W	
R731			RK73GH2A134D	CHIP R 130K D 1/10W		W712			R92-2052-05	CHIP R 0 OHM J 1/10W	E1E2
R732			RK73GB2A563J	CHIP R 56K J 1/10W		W801			R92-2052-05	CHIP R 0 OHM J 1/10W	
R733			RK73GH2A103D	CHIP R 10K D 1/10W		W803			R92-2052-05	CHIP R 0 OHM J 1/10W	

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-429x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
S3 S4			S74-0822-05 S70-0931-05	MICRO SWITCH TACT SWITCH		IC703 IC703 IC703,704 IC705 IC706		*	TK15446L-G TK15446L-G TK15446L-G BD9781HFP BD9302FP	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	KE1E2 X1 M1
D1 D2 D3 D8 D9		*	S2V60-5009F46 RB160L-40 02DZ5.6F-Y 02DZ12F-X 1SR154-400	DIODE DIODE ZENER DIODE ZENER DIODE DIODE	KX1 KX1	IC707 IC708 Q1 Q2 Q3			TC74VHCT08AFT TC7W14FU-F 2SB1565 2SC4081 2SA1576A	MOS-IC MOS-IC TRANSISTOR TRANSISTOR TRANSISTOR	E1E2M1
D101-105 D107 D108,109 D110 D111			1SR154-400 02DZ4.7F-Y 02DZ6.8F-Y BAV70W 02DZ6.2F-Y	DIODE ZENER DIODE ZENER DIODE DIODE ZENER DIODE		Q3,4 Q5 Q6 Q9 Q11			2SA1576A 2SB1565 UMC2N RT1N241M RT1N241M	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	KX1 KX1
D301 D401-403 D405,406 D407 D411			IMSA-6802-E BAW56W 02DZ6.8F-Y 02DZ5.6F-Y BAW56W	SURGE ABSORBER DIODE ZENER DIODE ZENER DIODE DIODE	E1E2M1 KX1 KX1	Q13 Q14,15 Q16 Q101 Q102			2SA1576A 2SC4081 2SB1443 2SB1188(Q,R) RT1N144M	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	KX1 KX1 KM1X1 KM1X1
D500 D501,502 D503-510 D511,512 D513-515			1SS355 BAW56W 1SR154-400 02DZ6.8F-Y 02DZ6.2F-Y	DIODE DIODE DIODE ZENER DIODE ZENER DIODE	E1E2	Q103 Q104 Q105 Q106 Q108			2SB1188(Q,R) 2SA1576A RT1P141M RT1N144M RT1N441M	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D517-522 D518-520 D523,524 D524 D701-703			02DZ6.2F-Y 02DZ6.2F-Y 02DZ6.8F-Y 02DZ6.8F-Y BAW56W	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	E1E2 KM1X1 E1E2M1 KX1 KX1	Q109 Q111,112 Q115,116 Q300 Q301			2SC4081 2SC4081 RT1P241M 2SB1689 RT1N241M	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D701,702 D704 D705 D705 D706			BAW56W 02DZ12F-Y 02DZ5.6F-Y 02DZ5.6F-Y BAV70W	DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	E1E2M1 E1E2M1 X1	Q304 Q305 Q306 Q400-403 Q400-405			RT1N144M 2SA1577 RT1N441M DTC143TUA DTC143TUA	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	E1E2M1 KX1
D707-710 D707,708 D707,708 D711 D712			DA204U DA204U DA204U 1SR154-400 02DZ12F-Y	DIODE DIODE DIODE DIODE ZENER DIODE	M1 KE1E2 X1	Q701 Q702 Q704 Q704 Q705			2SB1565 2SC4081 DTA123JK DTA123JK RT1P441M	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	E1E2M1 X1
D713 D714,715 D718 D719 D720,721			RB095B-60 SFPB-54VNF UDZS18B 02DZ16F-Y BAW56W	DIODE DIODE ZENER DIODE ZENER DIODE DIODE		Q706 Q707 Q708 Q709 Q710			2SB1565 UMC2N 2SB1565 UMC2N 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D722 D723 D801 IC1 IC2		*	1SS355 BAV70W UDZS3.3B 30625MWPB13GP E-TDA7415C	DIODE DIODE ZENER DIODE MICROCONTROLLER IC ANALOGUE IC		Q711,712 Q713 Q717 Q718 Q719,720			RT1N430M RT1N441M 2SC4081 RTQ025P02 RT1N441M	TRANSISTOR TRANSISTOR TRANSISTOR FET TRANSISTOR	
IC3 IC4 IC6 IC7 IC10			M5237ML-CF0J E-TDA7560A TC7W02FU-F S-80836CNNB-J BR24L04FV-W	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC ROM IC		TH1			PRF18BE471QS2	POSITIVE RESISTOR	
IC11 IC701			TA75S558F-F E-TDA7479AD	ANALOGUE IC ANALOGUE IC	KX1 KE1E2	A1 A1 A1	2D 2D 2D	*	W05-1297-00 W05-1298-00 W05-1299-00	FRONT-END UNIT FRONT-END UNIT FRONT-END UNIT	E1E2 K M1

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-429x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
A1	2D	*	W05-1300-00	FRONT-END UNIT	X1
A2		*	W02-5205-05	OSCILLATING MODULE	
DVD UNIT (X37-1150-02) IN DVD MECHA					
C1-3			CK73HB1A104K	CHIP C 0.10UF K	
C4,5			CK73HB0J105K	CHIP C 1.0UF K	
C6			CK73GB0J475K	CHIP C 4.7UF K	
C7			CK73FB0J106K	CHIP C 10UF K	
C8			CK73FB0J226M	CHIP C 22UF M	
C10			CK73HB1A104K	CHIP C 0.10UF K	
C14			CK73FB0J106K	CHIP C 10UF K	
C15			CK73HB0J105K	CHIP C 1.0UF K	
C16			CK73HB1A104K	CHIP C 0.10UF K	
C17			CK73HB0J105K	CHIP C 1.0UF K	
C18			CK73HB1H332K	CHIP C 3300PF K	
C19			CK73HB1A104K	CHIP C 0.10UF K	
C20			CK73FB0J106K	CHIP C 10UF K	
C21			CK73FB0J226M	CHIP C 22UF M	
C23			CK73HB1A104K	CHIP C 0.10UF K	
C24			CC73GCH1H471J	CHIP C 470PF J	
C25			CK73HB1A104K	CHIP C 0.10UF K	
C26			CK73HB1C473K	CHIP C 0.047UF K	
C27			CK73HB1A104K	CHIP C 0.10UF K	
C28			CK73HB1E103K	CHIP C 0.010UF K	
C29			CK73HB0J105K	CHIP C 1.0UF K	
C31			CK73HB1E223K	CHIP C 0.022UF K	
C32			CC73HCH1H470J	CHIP C 47PF J	
C33			CC73GCH1H102J	CHIP C 1000PF J	
C35			CC73GCH1H102J	CHIP C 1000PF J	
C36			CC73GCH1H681J	CHIP C 680PF J	
C37			CK73HB1H682K	CHIP C 6800PF K	
C38			CK73HB0J105K	CHIP C 1.0UF K	
C39			CC73GCH1H331J	CHIP C 330PF J	
C40			CC73GCH1H102J	CHIP C 1000PF J	
C41			CK73HB0J105K	CHIP C 1.0UF K	
C42			CC73GCH1H681J	CHIP C 680PF J	
C43			CK73HB1H222K	CHIP C 2200PF K	
C44			CK73HB1H152K	CHIP C 1500PF K	
C45			CK73HB1H102K	CHIP C 1000PF K	
C46			CK73HB1A104K	CHIP C 0.10UF K	
C47-52			CK73HB0J105K	CHIP C 1.0UF K	
C53			CK73HB1A104K	CHIP C 0.10UF K	
C54,55			CK73HB0J105K	CHIP C 1.0UF K	
C56			C93-1228-05	CHIP C 1UF M	
C57,58			CK73HB0J105K	CHIP C 1.0UF K	
C60			CK73HB1A104K	CHIP C 0.10UF K	
C61			C93-1228-05	CHIP C 1UF M	
C62,63			CC73HCH1H120J	CHIP C 12PF J	
C64			CK73HB1E103K	CHIP C 0.010UF K	
C66			CK73FB0J106K	CHIP C 10UF K	
C67			C93-1228-05	CHIP C 1UF M	
C68,69			CK73HB0J105K	CHIP C 1.0UF K	
C70			CK73HB1A104K	CHIP C 0.10UF K	
C72,73			CK73HB1A104K	CHIP C 0.10UF K	
C76			CK73HB1A104K	CHIP C 0.10UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C80			CK73FB0J106K	CHIP C 10UF K	
C81			CK73FB0J226M	CHIP C 22UF M	
C82			CK73HB1A104K	CHIP C 0.10UF K	
C83,84			C92-1908-05	ELECTRO 47UF 6.3WV	
C85,86			CK73HB1H102K	CHIP C 1000PF K	
C87-90			CK73HB1E103K	CHIP C 0.010UF K	
C91			CK73HB1E223K	CHIP C 0.022UF K	
C92,93			CK73HB1E103K	CHIP C 0.010UF K	
C94			CK73GB0J475K	CHIP C 4.7UF K	
C95			CK73FB0J106K	CHIP C 10UF K	
C96			CK73FB0J226M	CHIP C 22UF M	
C97			CK73HB1E103K	CHIP C 0.010UF K	
C98			CK73GB0J475K	CHIP C 4.7UF K	
C99			CK73FB0J226M	CHIP C 22UF M	
C101			CK73FB0J226M	CHIP C 22UF M	
C102			C92-1908-05	ELECTRO 47UF 6.3WV	
C104			CC73HCH1H100D	CHIP C 10PF D	
C105-108			CC73HCH1H151J	CHIP C 150PF J	
C109			CK73HB1H102K	CHIP C 1000PF K	
C308			CK73HB1E103K	CHIP C 0.010UF K	
C309			CK73HB1A104K	CHIP C 0.10UF K	
C312,313			CK73HB1A104K	CHIP C 0.10UF K	
C315,316			CK73HB0J105K	CHIP C 1.0UF K	
C319-323			CK73HB0J105K	CHIP C 1.0UF K	
C325-342			CK73HB0J105K	CHIP C 1.0UF K	
C344			CK73HB0J105K	CHIP C 1.0UF K	
C347			CC73HCH1H120J	CHIP C 12PF J	
C348			CC73HCH1H060D	CHIP C 6.0PF D	
C353			CK73GB1A105K	CHIP C 1.0UF K	
C361			CK73HB1A104K	CHIP C 0.10UF K	
C362			CC73GCH1E392J	CHIP C 3900PF J	
C363			CK73HB1A104K	CHIP C 0.10UF K	
C364			CC73GCH1E392J	CHIP C 3900PF J	
C365-367			CC73GCH1H681J	CHIP C 680PF J	
C370			CC73GCH1H681J	CHIP C 680PF J	
C384			CK73HB1A104K	CHIP C 0.10UF K	
C385			CK73FB0J226M	CHIP C 22UF M	
C386			CK73FB0J106K	CHIP C 10UF K	
C388			CK73FB0J226M	CHIP C 22UF M	
C389			CK73FB0J106K	CHIP C 10UF K	
C390			CK73HB1E103K	CHIP C 0.010UF K	
C391			CK73HB0J105K	CHIP C 1.0UF K	
C392			CK73FB0J226M	CHIP C 22UF M	
C394			CK73FB0J226M	CHIP C 22UF M	
C396			CK73HB1A104K	CHIP C 0.10UF K	
C397			CK73FB0J226M	CHIP C 22UF M	
C398-404			CK73HB0J105K	CHIP C 1.0UF K	
C405			CK73FB0J226M	CHIP C 22UF M	
C408			CK73FB0J226M	CHIP C 22UF M	
C411			CK73GB0J475K	CHIP C 4.7UF K	
C412			CK73HB1H102K	CHIP C 1000PF K	
C413			CK73GB0J475K	CHIP C 4.7UF K	
C415			CK73HB1H102K	CHIP C 1000PF K	
C416			CK73FB0J226M	CHIP C 22UF M	
C417			CK73HB1H102K	CHIP C 1000PF K	

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1150-02) IN DVD MECHA

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C418 C419 C420-422 C423 C425			CK73HB1A104K CK73HB0J105K CK73HB1A104K CK73GB0J475K CK73FB0J226M	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 22UF M	
C426,427 C428-433 C434,435 C436 C440			CC73GCH1H101J CK73HB1A104K CK73HB1E223K CK73HB1A104K CK73HB0J105K	CHIP C 100PF J CHIP C 0.10UF K CHIP C 0.022UF K CHIP C 0.10UF K CHIP C 1.0UF K	
C442 C501			CK73HB1A104K CK73HB1H102K	CHIP C 0.10UF K CHIP C 1000PF K	
CN2 CN3 CN5 CN6 CN9			E41-2595-05 E41-2622-05 E41-2625-05 E41-2050-05 E41-2603-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR SOCKET FOR PIN ASSY FLAT CABLE CONNECTOR	
CN10 CN11			E41-2624-05 E41-2594-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
L1-5 L301 X1 X4			L92-0365-05 L92-0365-05 L77-2870-05 L77-2886-05	CHIP FERRITE CHIP FERRITE CRYSTAL RESONATOR (16.897849MHZ) CRYSTAL RESONATOR (27.00MHZ)	
CP1-4 CP5-9 CP10 CP302-310 CP312-318			RK74HB1J103J RK74HB1J330J RK74HB1J820J RK74HB1J220J RK74HB1J220J	CHIP-COM 10K J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 82 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 22 J 1/16W	
CP319,320 CP322,323 CP324 CP326-331 CP336			RK74HB1J470J RK74HB1J472J RK74HB1J101J RK74HB1J472J RK74HB1J472J	CHIP-COM 47 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 4.7K J 1/16W	
CP337 CP338-342 R1 R2,3 R5-7			RK74HB1J102J RK74HB1J472J RK73GH2A101D RK73HB1J104J RK73HB1J103J	CHIP-COM 1.0K J 1/16W CHIP-COM 4.7K J 1/16W CHIP R 100 D 1/10W CHIP R 100K J 1/16W CHIP R 10K J 1/16W	
R8 R10 R11 R12 R15			RK73HB1J104J RK73HB1J103J RK73HB1J225J RK73HB1J103J RK73GH2A113D	CHIP R 100K J 1/16W CHIP R 10K J 1/16W CHIP R 2.2M J 1/16W CHIP R 10K J 1/16W CHIP R 11K D 1/10W	
R16 R18 R21 R22 R23			RK73GH2A273D RK73HB1J125J RK73GH2A153D RK73HB1J105J RK73HB1J472J	CHIP R 27K D 1/10W CHIP R 1.2M J 1/16W CHIP R 15K D 1/10W CHIP R 1.0M J 1/16W CHIP R 4.7K J 1/16W	
R24 R25-27 R28,29 R30-32 R33			RK73GH2A123D RK73HB1J103J RK73HB1J102J RK73HB1J132J RK73HB1J103J	CHIP R 12K D 1/10W CHIP R 10K J 1/16W CHIP R 1.0K J 1/16W CHIP R 1.3K J 1/16W CHIP R 10K J 1/16W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R34,35 R36 R37 R38,39 R40,41			RK73HB1J472J RK73HB1J102J RK73HB1J132J RK73HB1J102J RK73HB1J473J	CHIP R 4.7K J 1/16W CHIP R 1.0K J 1/16W CHIP R 1.3K J 1/16W CHIP R 1.0K J 1/16W CHIP R 47K J 1/16W	
R45 R46 R47 R49 R51			RK73HB1J105J RK73HB1J152J RK73HB1J472J RK73HB1J273J RK73HB1J102J	CHIP R 1.0M J 1/16W CHIP R 1.5K J 1/16W CHIP R 4.7K J 1/16W CHIP R 27K J 1/16W CHIP R 1.0K J 1/16W	
R52 R53 R55 R58 R61			RK73HB1J132J RK73HB1J103J RK73HB1J202J RK73GH2A273D RK73GB2A121J	CHIP R 1.3K J 1/16W CHIP R 10K J 1/16W CHIP R 2.0K J 1/16W CHIP R 27K D 1/10W CHIP R 120 J 1/10W	
R62 R63 R64 R65,66 R67			R92-3475-05 RK73GB2A241J RK73HB1J222J RK73HB1J103J RK73HB1J472J	CHIP R 0.27 F 1/2W CHIP R 240 J 1/10W CHIP R 2.2K J 1/16W CHIP R 10K J 1/16W CHIP R 4.7K J 1/16W	
R68,69 R70,71 R72 R73 R74			RK73HB1J102J RK73GH2A123D RK73GH2A333D RK73GH2A203D RK73HB1J123J	CHIP R 1.0K J 1/16W CHIP R 12K D 1/10W CHIP R 33K D 1/10W CHIP R 20K D 1/10W CHIP R 12K J 1/16W	
R75 R76 R77 R78 R79			RK73HB1J152J RK73HB1J122J RK73HB1J511J RK73HB1J472J R92-5031-05	CHIP R 1.5K J 1/16W CHIP R 1.2K J 1/16W CHIP R 510 J 1/16W CHIP R 4.7K J 1/16W CHIP R 5.1 F 1/8W	
R80 R81 R82 R83 R84			RK73GB2A3R6J RK73HB1J134J RK73HB1J103J RK73HB1J820J RK73HB1J103J	CHIP R 3.6 J 1/10W CHIP R 130K J 1/16W CHIP R 10K J 1/16W CHIP R 82 J 1/16W CHIP R 10K J 1/16W	
R85 R86-88 R91 R92 R93			RK73HB1J330J RK73HB1J820J RK73GH2A101D RK73HB1J104J RK73HB1J222J	CHIP R 33 J 1/16W CHIP R 82 J 1/16W CHIP R 100 D 1/10W CHIP R 100K J 1/16W CHIP R 2.2K J 1/16W	
R95 R96,97 R100,101 R102,103 R104			R92-5031-05 RK73HB1J102J RK73HB1J510J RK73HB1J202J RK73HB1J103J	CHIP R 5.1 F 1/8W CHIP R 1.0K J 1/16W CHIP R 51 J 1/16W CHIP R 2.0K J 1/16W CHIP R 10K J 1/16W	
R105 R106,107 R108 R109 R115			RK73HB1J132J RK73HB1J103J RK73HB1J223J RK73HB1J123J RK73GH2A132D	CHIP R 1.3K J 1/16W CHIP R 10K J 1/16W CHIP R 22K J 1/16W CHIP R 12K J 1/16W CHIP R 1.3K D 1/10W	
R116,117 R201-204 R205-207 R302 R307			RK73HB1J1R0J RK73GB2A000J RK73HB1J000J RK73GH2A151D RK73HH1J202D	CHIP R 1.0 J 1/16W CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/16W CHIP R 150 D 1/10W CHIP R 2.0K D 1/16W	

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1150-02) IN DVD MECHA

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R312			RK73HB1J220J	CHIP R 22 J 1/16W	
R313-316			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R332			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R333			RK73HB1J681J	CHIP R 680 J 1/16W	
R335			RK73HB1J220J	CHIP R 22 J 1/16W	
R338			RK73HB1J103J	CHIP R 10K J 1/16W	
R340			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R342,343			RK73HB1J103J	CHIP R 10K J 1/16W	
R347-350			RK73GH2A752D	CHIP R 7.5K D 1/10W	
R351,352			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R353-356			RK73GB2A241J	CHIP R 240 J 1/10W	
R357,358			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R362,363			RK73HB1J121J	CHIP R 120 J 1/16W	
R386			RK73HB1J101J	CHIP R 100 J 1/16W	
R387			RK73HB1J220J	CHIP R 22 J 1/16W	
R388			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R393			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R394,395			RK73HB1J220J	CHIP R 22 J 1/16W	
R396-398			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R399-405			RK73HB1J103J	CHIP R 10K J 1/16W	
R406,407			RK73GH2A750D	CHIP R 75 D 1/10W	
R410			RK73GH2A123D	CHIP R 12K D 1/10W	
R412			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R414-416			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R417			RK73HB1J101J	CHIP R 100 J 1/16W	
R418			RK73HB1J103J	CHIP R 10K J 1/16W	
R419,420			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R421			RK73HB1J103J	CHIP R 10K J 1/16W	
R422			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R423			RK73HB1J103J	CHIP R 10K J 1/16W	
R424-427			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R428,429			RK73HB1J220J	CHIP R 22 J 1/16W	
R432,433			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R435			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R436			RK73HB1J470J	CHIP R 47 J 1/16W	
R438			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R439			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R440			RK73GH2A391D	CHIP R 390 D 1/10W	
R441			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R442			RK73HB1J220J	CHIP R 22 J 1/16W	
R443			RK73HB1J101J	CHIP R 100 J 1/16W	
R444			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R445			RK73HB1J223J	CHIP R 22K J 1/16W	
R446,447			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R448,449			RK73HB1J123J	CHIP R 12K J 1/16W	
R454			RK73HB1J431J	CHIP R 430 J 1/16W	
R457			RK73GH2A111D	CHIP R 110 D 1/10W	
R459,460			R92-3350-05	CHIP R 2.2 F 1/10W	
S3			S68-0822-05	PUSH SWITCH	
S4			S68-0895-05	PUSH SWITCH	
S5			S68-0822-05	PUSH SWITCH	
D1,2			MAZS0510M	ZENER DIODE	
D3,4			1SS402-F	DIODE	
D5,6			DAP202U	DIODE	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D8			1SS402-F	DIODE	
D10			MA2S111	DIODE	
D73			MAZS0510M	ZENER DIODE	
IC1			AN22022A-V	ANALOGUE IC	
IC2			AN41204A	ANALOGUE IC	
IC3			M29W400DB55N6E	ROM IC	
IC4			MN103S71F	MOS-IC	
IC5			S-80829CNP	ANALOGUE IC	
IC8			S-80813CNP	ANALOGUE IC	
IC9			NJM2880U115	ANALOGUE IC	
IC10			NJM2886DL2-33	ANALOGUE IC	
IC11			S-24CS04AFT	ROM IC	
IC12			AK4382AVT	ANALOGUE IC	
IC30			ES6218SAF-K	MOS-IC	
IC40			TAR5S50-F	ANALOGUE IC	
IC41			NJM4580V-ZB	ANALOGUE IC	
IC42			74CBT16210DGR	MOS-IC	
IC46			NJM2871AF04	ANALOGUE IC	
IC47			NJM2575	ANALOGUE IC	
IC48			74CBT3245APWR	MOS-IC	
IC50		*	W16ET70NE73W0	ROM IC	
IC51			MT48LC8M16P75I	DRAM IC	
IC52			S-1170B20UC	ANALOGUE IC	
IC53			NJM2130F3	ANALOGUE IC	
IC54			S-1170B33UC	ANALOGUE IC	
IC56			HD74LV1GT00AVS	MOS-IC	
IC57-60			HD74LV2G74AU-E	MOS-IC	
IC61,62			HD74LV1G32AVSE	MOS-IC	
IC65			NJU7042	ANALOGUE IC	
Q1,2			2SK3018	FET	
Q7,8			2SB0970	TRANSISTOR	
Q9,10			2SJ0536	FET	
Q11-14			DTA114YUA	DIGITAL TRANSISTOR	
Q16			2SK210-F(Y)	FET	
Q17			SSM3J13T-F	FET	
Q18			2SB0970	TRANSISTOR	
Q19,20			DTC114EUA	DIGITAL TRANSISTOR	
Q21			2SJ0536	FET	
Q22			DTA114YUA	DIGITAL TRANSISTOR	
MECHANISM ASSY (X92-5550-01) DVS-7621V					
1	1B		A10-5084-31	CHASSIS	
2	2B		A10-5083-21	CHASSIS ASSY	
3	3A		A11-1650-01	SUB CHASSIS	
4	1B		D10-4763-32	ARM	
5	1B		D10-4764-23	ARM	
7	2B		D10-4768-12	SLIDER	
8	2B		D10-4769-03	SLIDER	
9	2A		D10-4771-02	SLIDER	
10	2A		D10-4772-03	SLIDER	
11	2A		D10-4773-13	SLIDER	
12	2B		D10-4774-03	LEVER	
13	2B		D10-4776-23	ARM	
14	3A		D10-4795-23	ARM	
15	2B	*	D10-4804-13	ARM	

K : KDV-412 M1 : KDV-MP6333 X1 : KDV-MP6433 E1 : KDV-5234 E2 : KDV-5234Y
(E : Europe K : North America X : Australia M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-5550-01) DVS-7621V

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
21	2B		D13-2298-04	GEAR	
22	2B		D13-2299-04	GEAR	
23	2B		D13-2303-04	GEAR	
24	2B		D13-2305-04	GEAR	
25	2B		D13-2306-04	GEAR	
26	1A		D13-2308-04	GEAR	
27	1A		D13-2309-04	GEAR	
28	3B		D13-2316-24	GEAR ASSY	
29	2B		D13-2300-14	GEAR	
30	2A		D14-0799-14	ROLLER	
31	2A		D14-1006-04	ROLLER	
34	3B		D21-2476-14	SHAFT	
36	1B		D39-0259-05	DAMPER	
37	2B		E39-0556-05	LEAD WIRE	
VFC1	2A		E39-0806-05	FLAT CABLE	
38	3A		F07-1134-12	COVER	
39	3A		F09-1930-14	SHEET	
40	3A		F09-1960-04	SHEET	
41	3B		F09-2806-04	SHEET	
42	3A		F09-1870-04	SHEET	
43	2B	*	G01-4621-04	TORSION COIL SPRING	
44	3B		G02-1541-04	FLAT SPRING	
45	2B		G01-3192-04	EXTENSION SPRING	
46	2A		G01-3194-24	EXTENSION SPRING	
47	1B		G01-3195-14	EXTENSION SPRING	
48	2A		G01-3206-24	TORSION COIL SPRING	
49	2A		G01-3207-24	TORSION COIL SPRING	
50	3A		G01-3209-04	COMPRESSION SPRING	
51	3A		G02-1468-04	FLAT SPRING	
52	2B		G02-1504-43	FLAT SPRING ASSY	
53	1B		G02-1466-24	FLAT SPRING	
54	3B		G02-1488-04	FLAT SPRING	
55	3A		G02-1473-14	FLAT SPRING	
56	1B		G11-3614-04	CUSHION (PORON)	
57	3A		G11-3622-04	CUSHION (PORON)	
58	2B		J11-0654-13	CLAMPER	
59	1A		J22-0042-12	MOUNTING HARDWARE	
60	1B		J22-0043-12	MOUNTING HARDWARE	
61	3B		J22-0044-03	MOUNTING HARDWARE	
62	1A		J22-0103-23	MOUNTING HARDWARE ASSY	
63	2B		J22-0177-14	MOUNTING HARDWARE	
64	1A		J90-1066-41	GUIDE	
65	1B		J90-1067-13	GUIDE	
66	1B		J90-1087-32	GUIDE	
67	1B		J90-1088-32	GUIDE	
A	2A		N09-6143-05	MACHINE SCREW	
B	1A		N09-6144-05	MACHINE SCREW	
C	3B		N09-6145-05	MACHINE SCREW	
D	3B		N09-6156-05	MACHINE SCREW (M1.4X1.6)	
E	1B		N09-6230-05	MACHINE SCREW	
F	1A		N19-2192-04	FLAT WASHER	
G	3B		N09-6133-05	MACHINE SCREW (SERRATED)	
H	3A		N09-6134-05	STEPPED SCREW (STEPPED)	
J	3A		N09-6203-05	MACHINE SCREW	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
K	3A		N09-6221-15	MACHINE SCREW (1.4X3.5)	
L	2A		N09-6308-05	MACHINE SCREW (1.4X4.5)	
M	2A		N19-2183-14	FLAT WASHER	
VM1	2A		T42-1329-05	MOTOR ASSY (SPINDLE)	
VM2	3A		T42-1330-05	MOTOR ASSY (SLED)	
71	2A		X94-2010-01	ROLLER ASSY	
VM3	3B		X94-2000-01	MOTOR ASSY (LOADING/EJECT)	
VPU1	3B		X94-2030-00	OPTICAL PICKUP ASSY	