

EXPLODED VIEW (DVD MECHANISM)

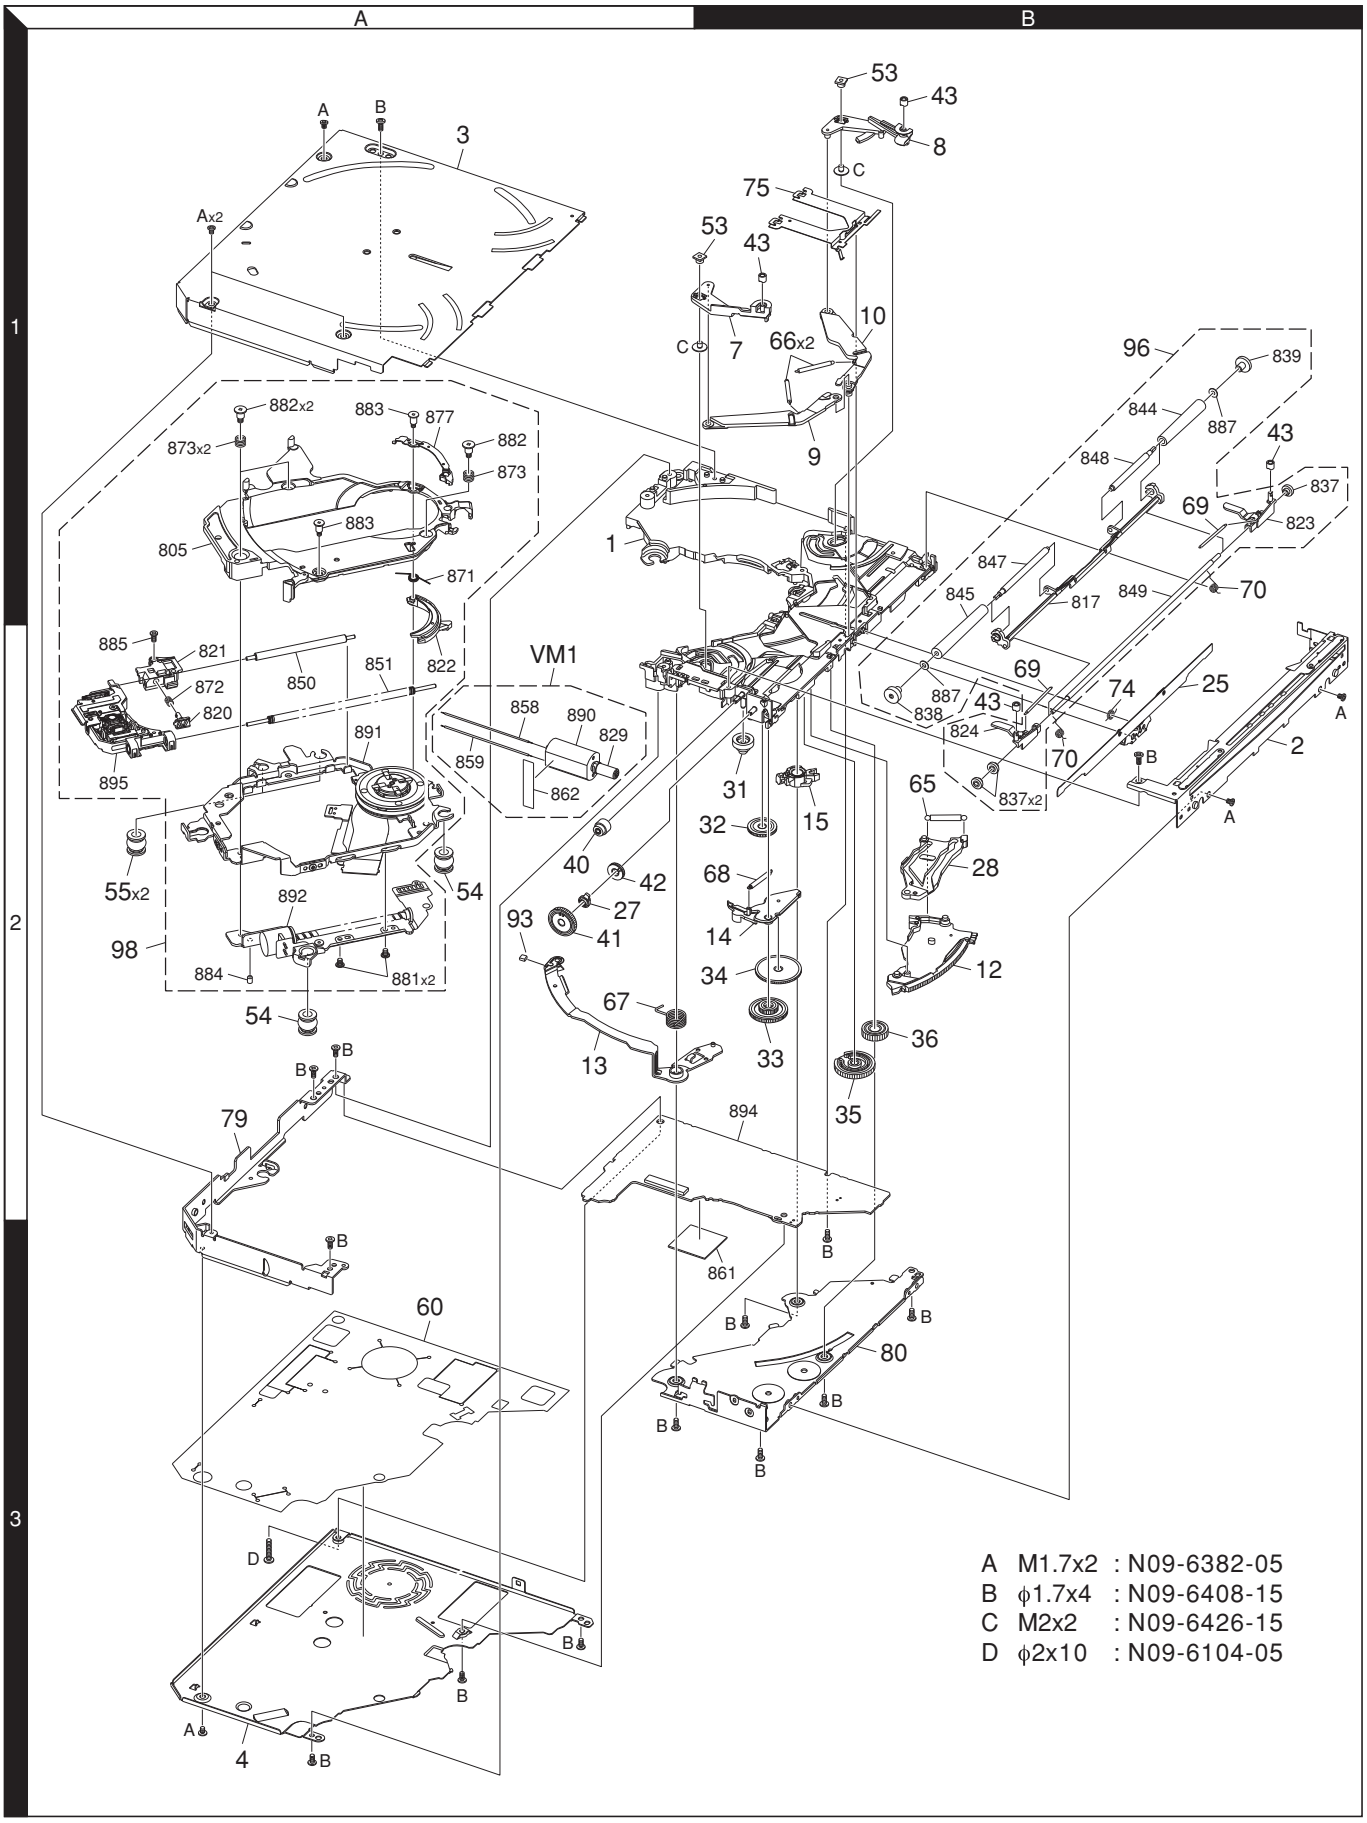

Parts with the exploded numbers larger than 700 are not supplied.


EXPLODED VIEW (UNIT)

A	M3x14	: N09-6731-05
B	M2.6x4	: N35-2604-43
C	M2.6x20	: N35-2620-48
E	ϕ2.6x5	: N86-2605-48
F	M2x3	: N35-2003-48
H	ϕ2.6x8	: N82-2608-48
K	ϕ3x8	: N09-6727-05
L	ϕ3x8	: N82-3008-48

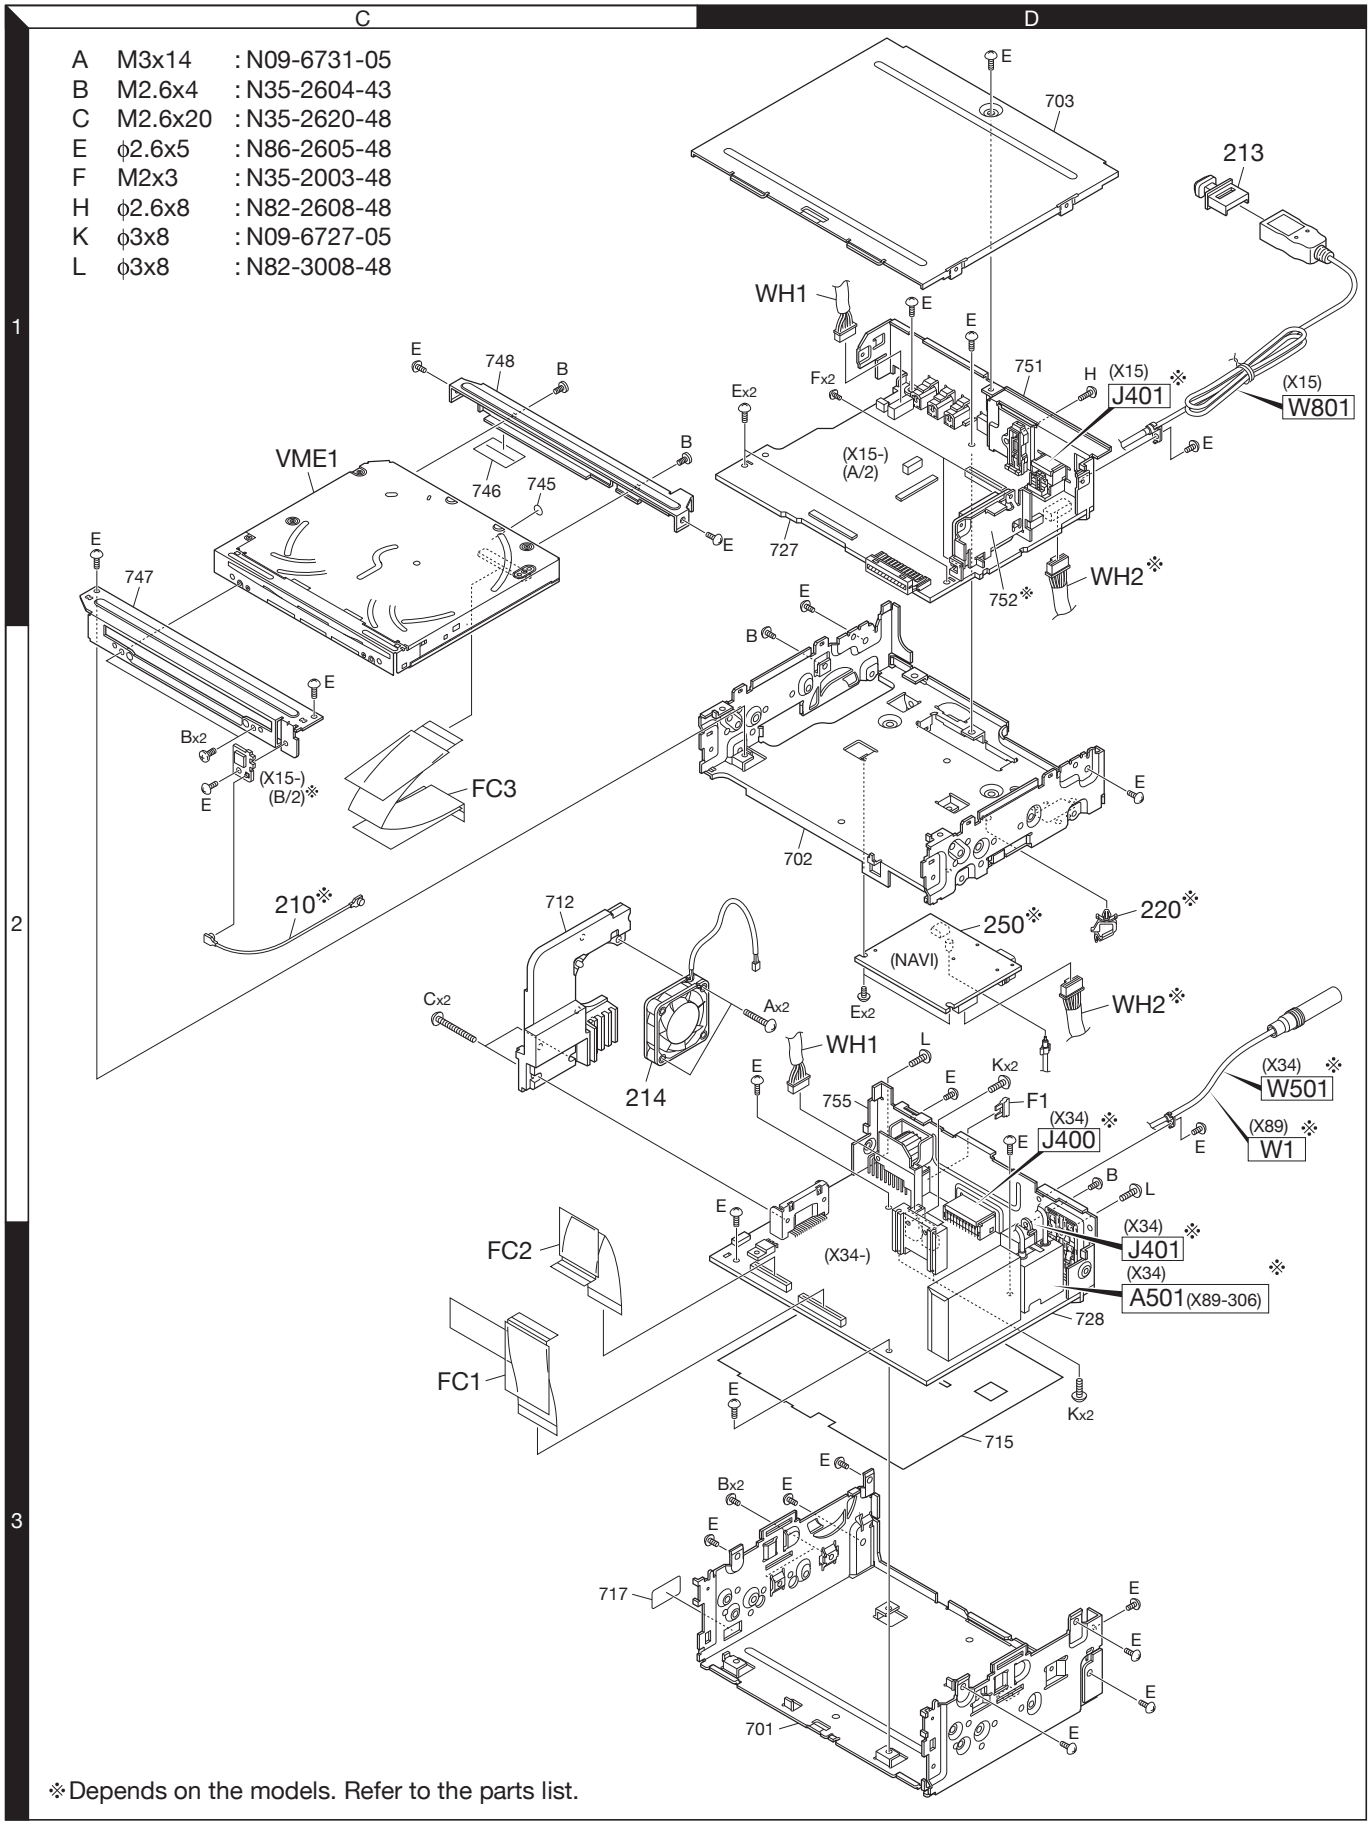

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL MECHANISM)

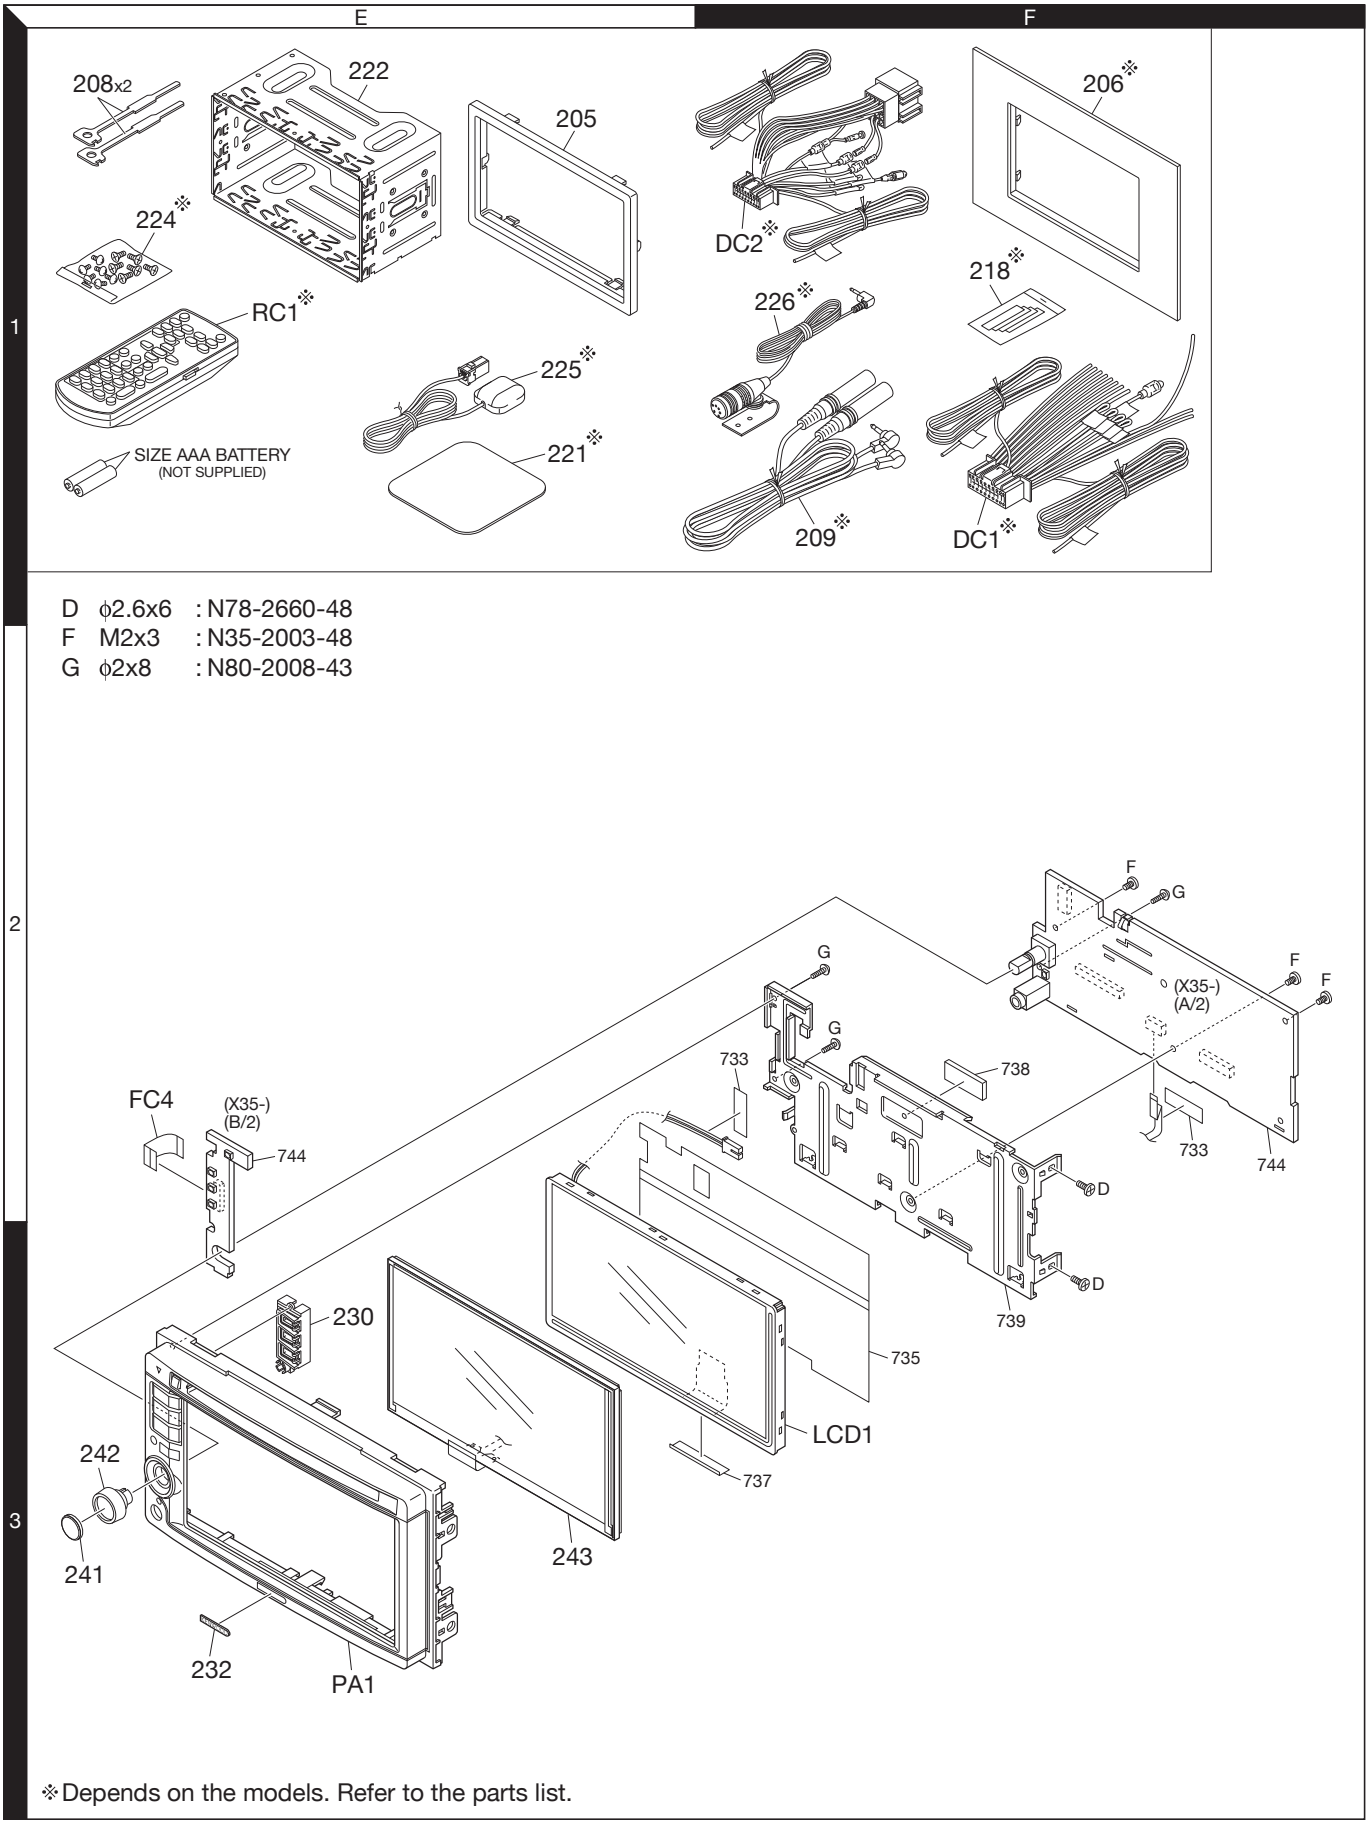

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DDX5022/5022Y/5032/5032M/512/52RY DNX5120/512EX/5220/5220BT					
RC1	1E		A70-2083-15	REMOTE CONTROLLER ASSY	E2M1M2
RC1	1E		A70-2083-15	REMOTE CONTROLLER ASSY	X1E5
-		✻	B54-4618-00	INSTALLATION MANUA (ENG.FRE.SPA	KR1
-		✻	B54-4619-00	INSTALLATION MANUAL (PORTUGUESE	R1
-		✻	B54-4620-00	INSTALLATION MAN (ENG.S-CHI.KOR	M1M2X1
-		✻	B54-4621-00	INSTALLATION MANUAL (ENGLISH)	E1E2E5
-		✻	B54-4622-00	INSTALLATION MANUA (F.G.D.I.S.P	E1
-		✻	B54-4623-00	INSTALLATION MANUAL (RUSSIAN)	E2E5
-		✻	B54-4624-00	INSTALLATION MANUA (ENG.FRE.SPA	K1K2
-		✻	B54-4626-00	INSTALLATION MAN (E.F.G.D.I.S.P	E3E4
-		✻	B64-3971-00	INSTRUCTION MANUAL (ENGLISH)	KR1K1
-		✻	B64-3971-00	INSTRUCTION MANUAL (ENGLISH)	K2
-		✻	B64-3972-00	INSTRUCTION MANUAL (FRENCH)	KK1K2
-		✻	B64-3973-00	INSTRUCTION MANUAL (SPANISH)	KR1K1
-		✻	B64-3973-00	INSTRUCTION MANUAL (SPANISH)	K2
-		✻	B64-3974-00	INSTRUCTION MANUAL (PORTUGUESE)	R1
-		✻	B64-3975-00	INSTRUCTION MANUAL (ENGLISH)	M1M2X1
-		✻	B64-3976-00	INSTRUCTION MANUAL (S-CHINESE)	M1
-		✻	B64-3977-00	INSTRUCTION MANUAL (KOREAN)	M1
-		✻	B64-3978-00	INSTRUCTION MANUAL (ENGLISH)	E1E2E5
-		✻	B64-3978-00	INSTRUCTION MANUAL (ENGLISH)	E3E4
-		✻	B64-3979-00	INSTRUCTION MANUAL (FRENCH)	E1E3E4
-		✻	B64-3980-00	INSTRUCTION MANUAL (GERMAN)	E1E3E4
-		✻	B64-3981-00	INSTRUCTION MANUAL (DUTCH)	E1E3E4
-		✻	B64-3982-00	INSTRUCTION MANUAL (ITALIAN)	E1E3E4
-		✻	B64-3983-00	INSTRUCTION MANUAL (SPANISH)	E1E3E4
-		✻	B64-3984-00	INSTRUCTION MANUAL (PORTUGUESE)	E1E3E4
-		✻	B64-3985-00	INSTRUCTION MANUAL (RUSSIAN)	E2E5
-		✻	B64-4004-00	INSTRUCTION MANUAL (ENGLISH)	K1K2
-		✻	B64-4005-00	INSTRUCTION MANUAL (FRE.SPA.)	K1K2
-		✻	B64-4006-00	INSTRUCTION MANUAL (ENGLISH)	E3E4
-		✻	B64-4007-00	INSTRUCTION MANUAL (FRE.GER.DUT	E3E4
-		✻	B64-4008-00	INSTRUCTION MANUAL (ITA.SPA.POR	E3E4
205	1E		B07-3165-02	ESCUTCHEON	
206	1F		B07-3172-12	ESCUTCHEON	KR1M1
206	1F		B07-3172-12	ESCUTCHEON	K2
206	1F		B07-3172-12	ESCUTCHEON	M2X1K1
208	1E		D10-4589-04	LEVER	
209	1F	✻	E30-6785-05	CORD WITH PLUG	KR1K1
209	1F	✻	E30-6785-05	CORD WITH PLUG	K2
210	2C	✻	E30-6810-05	CORD WITH PLUG	E3
DC1	1F	✻	E30-6795-05	DC CORD	KR1M1
DC1	1F	✻	E30-6795-05	DC CORD	K2
DC1	1F	✻	E30-6795-05	DC CORD	M2X1K1
DC2	1F	✻	E30-6796-05	DC CORD	E1E2E5
DC2	1F	✻	E30-6796-05	DC CORD	E3E4
FC1	3C	✻	E39-0995-15	FLAT CABLE	
FC2	3C	✻	E39-0996-15	FLAT CABLE	
FC3	2C	✻	E39-0997-15	FLAT CABLE	
WH1	1D	✻	E39-0994-15	WIRING HARNESS	
213	1D		F09-2929-04	CAP	
214	2C	✻	F09-2959-05	FAN	
⚠ F1	2D		F52-0007-05	FUSE (MINI BLADE TYPE) 15A	
-		✻	H54-4274-13	ITEM CARTON CASE	K
-		✻	H54-4275-13	ITEM CARTON CASE	R1
-		✻	H54-4276-13	ITEM CARTON CASE	E1
-		✻	H54-4277-13	ITEM CARTON CASE	E2
-		✻	H54-4278-13	ITEM CARTON CASE	M1X1
-		✻	H54-4279-13	ITEM CARTON CASE	M2
-		✻	H54-4282-13	ITEM CARTON CASE	K1
-		✻	H54-4283-03	ITEM CARTON CASE	E3
-		✻	H54-4284-03	ITEM CARTON CASE	E4
-		✻	H54-4379-03	ITEM CARTON CASE	E5
-		✻	H54-4380-03	ITEM CARTON CASE	K2
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KR1M1
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K2
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M2X1K1
220	2D		J11-0660-05	CLAMPER	E4
220	2D		J11-0660-05	CLAMPER	K1K2E3
221	1E		J21-9867-04	MOUNTING HARDWARE	E4
221	1E		J21-9867-04	MOUNTING HARDWARE	K1K2E3
222	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
224	1E		N99-1779-15	SCREW SET	KR1M1
224	1E		N99-1779-15	SCREW SET	K2
224	1E		N99-1779-15	SCREW SET	M2X1K1
A	2D	✻	N09-6731-05	MACHINE SCREW (BAINDO M3X14)	
B	3D		N35-2604-43	BINDING HEAD MACHINE SCREW	
C	2C	✻	N35-2620-48	BINDING HEAD MACHINE SCREW	
D	3F		N78-2660-48	PAN HEAD TAPTITE SCREW	
E	1D		N86-2605-48	BINDING HEAD TAPTITE SCREW	
225	1E	✻	W02-5305-05	ANTENNA MODULE	E4
225	1E	✻	W02-5305-05	ANTENNA MODULE	K1K2E3
226	1F	✻	W01-1718-05	MICROPHONE	E3

DISPLAY ASSY

Ref. No.	Add	New	Parts No.	Description	Destination
PA1	3E	✻	A64-4530-11	PANEL ASSY	K
PA1	3E	✻	A64-4532-11	PANEL ASSY	E1E2
PA1	3E	✻	A64-4535-11	PANEL ASSY	K1
PA1	3E	✻	A64-4536-11	PANEL ASSY	E3
PA1	3E	✻	A64-4537-11	PANEL ASSY	E4
PA1	3E	✻	A64-4539-01	PANEL ASSY	R1M1M2
PA1	3E	✻	A64-4539-01	PANEL ASSY	X1
PA1	3E	✻	A64-4540-01	PANEL ASSY	E5
PA1	3E	✻	A64-4551-01	PANEL ASSY	K2
230	3E	✻	B19-2492-13	LIGHTING BOARD	
232	3E		B43-1518-04	BADGE	
LCD1	3F	✻	B38-1202-05	LCD	
FC4	2E	✻	E39-0998-15	FLAT CABLE	
241	3E	✻	K28-0302-04	KEY TOP (VOL)	
242	3E	✻	K28-0304-03	KNOB ASSY (VOL)	
F	2F		N35-2003-48	BINDING HEAD MACHINE SCREW	
G	2F		N80-2008-43	PAN HEAD TAPTITE SCREW	
243	3E	✻	S79-0862-05	SWITCH ASSY	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

Ref. No.	Add	New	Parts No.	Description			Destination
DVD PLAYER ASSY							
B	3D		N35-2604-43	BINDING HEAD MACHINE SCREW			
VME1	1C	✻	X92-6160-00	DVD MECHANISM ASSY (DVS-8020V)			
CONTROL ASSY (NAVI MODULE ASSY)							
WH2	2D	✻	E39-0993-25	WIRING HARNESS			E4
WH2	2D	✻	E39-0993-25	WIRING HARNESS			K1K2E3
250	2D	✻	W02-5306-05	NAVIGATION MODULE			K1K2
250	2D	✻	W02-5308-05	NAVIGATION MODULE			E3E4
VIDEO CONTROL UNIT (X15-108x-xx)							
C1			C90-5670-05	ELECTRO	2200UF	16WV	
C4,5			CK73GB1H104K	CHIP C	0.10UF	K	
C8			CK73GB1H104K	CHIP C	0.10UF	K	
C9			CK73FB1A225K	CHIP C	2.2UF	K	
C10			CE32BF1E101M	CHIP EL	100UF	25WV	
C100,101			CC73GCH1H101J	CHIP C	100PF	J	
C102			CK73GB1H104K	CHIP C	0.10UF	K	
C103			CC73GCH1H221J	CHIP C	220PF	J	
C104,105			CC73GCH1H470J	CHIP C	47PF	J	
C106,107			CK73GB1C473K	CHIP C	0.047UF	K	
C108			CC73GCH1H221J	CHIP C	220PF	J	
C109,110			CC73GCH1H470J	CHIP C	47PF	J	
C111			CK73GB1C473K	CHIP C	0.047UF	K	
C112,113			CC73GCH1H221J	CHIP C	220PF	J	
C116			CK73GB1H103K	CHIP C	0.010UF	K	
C117			CK73GB1H223K	CHIP C	0.022UF	K	
C118,119			CK73GB1H103K	CHIP C	0.010UF	K	
C120			CK73GB1H153K	CHIP C	0.015UF	K	
C121			CK73GB1H223K	CHIP C	0.022UF	K	
C124-129			CK73GB1H102K	CHIP C	1000PF	K	
C130,131			CK73FB0J106K	CHIP C	10UF	K	
C132,133			CK73GB1H104K	CHIP C	0.10UF	K	
C134,135			CK73FB0J106K	CHIP C	10UF	K	
C136-141			CK73GB1H104K	CHIP C	0.10UF	K	
C142,143			CK73EB1E225K	CHIP C	2.2UF	K	
C144-149			CK73GB1H104K	CHIP C	0.10UF	K	
C150-157			CK73GB1H103K	CHIP C	0.010UF	K	
C158-161			CK73GB1H104K	CHIP C	0.10UF	K	
C162-169			CK73GB1H102K	CHIP C	1000PF	K	
C170			C93-1367-05	CHIP C	10UF	K	
C171			CK73GB1H103K	CHIP C	0.010UF	K	
C172			CK73GB1H104K	CHIP C	0.10UF	K	
C173,174		✻	CE32BQ1E680M	CHIP EL	68UF	25WV	
C175			CK73GB1H104K	CHIP C	0.10UF	K	
C176			CK73GB1H103K	CHIP C	0.010UF	K	
C177,178			C93-1367-05	CHIP C	10UF	K	
C179			CK73GB1H103K	CHIP C	0.010UF	K	
C180			CK73GB1H104K	CHIP C	0.10UF	K	
C181,182		✻	CE32BQ1E680M	CHIP EL	68UF	25WV	
C183			CK73GB1H104K	CHIP C	0.10UF	K	
C184			CK73GB1H103K	CHIP C	0.010UF	K	
C185			C93-1367-05	CHIP C	10UF	K	
C186-189			CK73GB1H102K	CHIP C	1000PF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C190			CE32AV0J221M	CHIP EL	220UF	6.3WV	
C191			CK73GB1H103K	CHIP C	0.010UF	K	
C192,193			CK73GB1H104K	CHIP C	0.10UF	K	
C194			CK73GB1H103K	CHIP C	0.010UF	K	
C195			CE32AV0J221M	CHIP EL	220UF	6.3WV	
C196			CE32AV0G331M	CHIP EL	330UF	4.0WV	
C197			CK73GB1H103K	CHIP C	0.010UF	K	
C198,199			CK73GB1H104K	CHIP C	0.10UF	K	
C200			CK73GB1H103K	CHIP C	0.010UF	K	
C201			CK73GB1H102K	CHIP C	1000PF	K	
C204,205			CK73GB1A474K	CHIP C	0.47UF	K	
C206			CE32BJ1C470M	CHIP EL	47UF	16WV	
C207			CK73GB1A474K	CHIP C	0.47UF	K	
C208			CK73GB1H103K	CHIP C	0.010UF	K	
C209			CK73GB1A474K	CHIP C	0.47UF	K	
C210			CK73GB0J475K	CHIP C	4.7UF	K	
C211			CK73FB0J106K	CHIP C	10UF	K	
C212			CK73GB0J475K	CHIP C	4.7UF	K	
C213			CK73GB1H102K	CHIP C	1000PF	K	
C214			CE32AV1A121M	CHIP EL	120UF	10WV	
C215-217			CK73GB1H102K	CHIP C	1000PF	K	
C218			CK73GB1A105K	CHIP C	1.0UF	K	
C219			CK73FB0J106K	CHIP C	10UF	K	
C220			CE32BJ1C470M	CHIP EL	47UF	16WV	
C222			CK73GB1H103K	CHIP C	0.010UF	K	E1E2E5
C225-227			CK73GB1A105K	CHIP C	1.0UF	K	
C229			CK73GB1H103K	CHIP C	0.010UF	K	
C232			CK73GB1H104K	CHIP C	0.10UF	K	
C233,234			CK73GB1A105K	CHIP C	1.0UF	K	
C235,236			CE32BJ1C220M	CHIP EL	22UF	16WV	
C239			CK73GB1H103K	CHIP C	0.010UF	K	
C240-243			CK73GB1A105K	CHIP C	1.0UF	K	
C244			CK73FB0J106K	CHIP C	10UF	K	
C245			CK73GB1H104K	CHIP C	0.10UF	K	
C246			CK73FB0J106K	CHIP C	10UF	K	
C247			CK73GB1H104K	CHIP C	0.10UF	K	
C248			CE32BQ0J331M	CHIP EL	330UF	6.3WV	
C249			CK73GB1A105K	CHIP C	1.0UF	K	
C250			CK73FB0J106K	CHIP C	10UF	K	
C251-253			CK73GB1H103K	CHIP C	0.010UF	K	
C254			CK73FB0J106K	CHIP C	10UF	K	
C255-257			CK73GB1A474K	CHIP C	0.47UF	K	
C265			CK73GB1H102K	CHIP C	1000PF	K	
C300,301			CK73GB1H104K	CHIP C	0.10UF	K	E4K2
C300,301			CK73GB1H104K	CHIP C	0.10UF	K	E5R1K1
C300,301			CK73GB1H104K	CHIP C	0.10UF	K	KM1M2
C300,301			CK73GB1H104K	CHIP C	0.10UF	K	X1E1E2
C301			CK73GB1H104K	CHIP C	0.10UF	K	E3
C302			CK73GB1H103K	CHIP C	0.010UF	K	
C303			CK73GB1H104K	CHIP C	0.10UF	K	
C304			CK73GB1H103K	CHIP C	0.010UF	K	
C307			CK73GB1H104K	CHIP C	0.10UF	K	
C308			CK73GB1H103K	CHIP C	0.010UF	K	
C309			CE32BF1E101M	CHIP EL	100UF	25WV	
C312,313			CK73GB1H102K	CHIP C	1000PF	K	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe)
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C314			CK73GB1H103K	CHIP C	0.010UF	K	
C408			CK73GB1A474K	CHIP C	0.47UF	K	
C410			CE32BJ0J470M	CHIP EL	47UF	6.3WV	
C412			CK73GB1A474K	CHIP C	0.47UF	K	
C413			CE32BF1C221M	CHIP EL	220UF	16WV	E4
C413			CE32BF1C221M	CHIP EL	220UF	16WV	K1K2E3
C414			CK73GB1H103K	CHIP C	0.010UF	K	E4
C414			CK73GB1H103K	CHIP C	0.010UF	K	K1K2E3
C501			CK73GB1H104K	CHIP C	0.10UF	K	E3
C502,503			CC73GCH1H100D	CHIP C	10PF	D	E3
C504-507			CK73GB1A105K	CHIP C	1.0UF	K	E3
C508			CK73FB0J106K	CHIP C	10UF	K	E3
C509			CC73GCH1H101J	CHIP C	100PF	J	E3
C510,511			CK73GB1H104K	CHIP C	0.10UF	K	E3
C601-603			CK73GB1H104K	CHIP C	0.10UF	K	
C604-606			CK73GB1A105K	CHIP C	1.0UF	K	
C607			CK73FB0J106K	CHIP C	10UF	K	
C621-624			CK73GB1H104K	CHIP C	0.10UF	K	
C625			CK73GB0J475K	CHIP C	4.7UF	K	
C626-630			CK73GB1H104K	CHIP C	0.10UF	K	
C631			CK73GB0J475K	CHIP C	4.7UF	K	
C632-638			CK73GB1H104K	CHIP C	0.10UF	K	
C651			CK73GB1A105K	CHIP C	1.0UF	K	
C652			CK73GB1H104K	CHIP C	0.10UF	K	
C653			CK73FB0J106K	CHIP C	10UF	K	
C654			CK73GB1H104K	CHIP C	0.10UF	K	
C655,656			CK73FB0J106K	CHIP C	10UF	K	
C657,658			CK73GB1H104K	CHIP C	0.10UF	K	
C661,662			CK73EB1A106K	CHIP C	10UF	K	
C663,664			CK73GB1H222K	CHIP C	2200PF	K	
C665,666			CK73GB1H271K	CHIP C	270PF	K	
C667-670			CK73EB1A106K	CHIP C	10UF	K	
C672			CK73FB0J106K	CHIP C	10UF	K	
C673			CK73GB1H103K	CHIP C	0.010UF	K	
C691-693			CK73GB1H104K	CHIP C	0.10UF	K	
C701,702			CK73FB0J106K	CHIP C	10UF	K	
C703		✻	CE32BQ1E680M	CHIP EL	68UF	25WV	
C704			CK73GB1A105K	CHIP C	1.0UF	K	
C705-725			CK73GB1H104K	CHIP C	0.10UF	K	
C726,727			CC73GCH1H100D	CHIP C	10PF	D	
C728			CK73GB1H104K	CHIP C	0.10UF	K	
C729,730			CC73GCH1H220J	CHIP C	22PF	J	
C731			CK73FB0J106K	CHIP C	10UF	K	
C732			CK73GB1H104K	CHIP C	0.10UF	K	
C741			CK73GB0J475K	CHIP C	4.7UF	K	
C742-748			CK73GB1H104K	CHIP C	0.10UF	K	
C751			CK73GB0J475K	CHIP C	4.7UF	K	
C752-758			CK73GB1H104K	CHIP C	0.10UF	K	
C761,762			CK73FB0J106K	CHIP C	10UF	K	
C763,764			CK73GB1H104K	CHIP C	0.10UF	K	
C801-804			CK73GB1A105K	CHIP C	1.0UF	K	
C807			CK73GB1A105K	CHIP C	1.0UF	K	
C808,809			CK73GB1H104K	CHIP C	0.10UF	K	
C811			CK73GB1A105K	CHIP C	1.0UF	K	
C812-825			CK73GB1H104K	CHIP C	0.10UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C826			CK73GB1A105K	CHIP C	1.0UF	K	
C827,828			CK73GB1H104K	CHIP C	0.10UF	K	
C829			CK73GB1A105K	CHIP C	1.0UF	K	
C830			CK73GB1H104K	CHIP C	0.10UF	K	
C833			CK73GB1A105K	CHIP C	1.0UF	K	
C834,835			CC73GCH1H100D	CHIP C	10PF	D	
C836-839			CK73FB0J106K	CHIP C	10UF	K	
C840			CK73GB1H104K	CHIP C	0.10UF	K	
C841			CE32BF1C221M	CHIP EL	220UF	16WV	
C842			CK73GB1H104K	CHIP C	0.10UF	K	
C843			CK73FB0J106K	CHIP C	10UF	K	
C851			CK73FB0J106K	CHIP C	10UF	K	
C852			CK73GB1H104K	CHIP C	0.10UF	K	
C853,854			CC73GCH1H050C	CHIP C	5.0PF	C	
C855			CK73GB1H104K	CHIP C	0.10UF	K	
C864			CK73GB1H104K	CHIP C	0.10UF	K	
C865			CK73GB1H102K	CHIP C	1000PF	K	
CN1		✻	E41-2685-05	PIN ASSY			
CN2			E41-2735-05	PIN ASSY			
CN301			E41-2237-05	FLAT CABLE CONNECTOR			
CN401			E41-2772-05	PIN ASSY			E4
CN401			E41-2772-05	PIN ASSY			K1K2E3
CN701			E41-2153-05	FLAT CABLE CONNECTOR			
J201			E11-0625-05	PHONE JACK (IPOD-A)			
J202		✻	E11-0656-05	PHONE JACK (IPOD-V YELLOW)			
J203		✻	E63-0956-05	RCA PIN JACK (AV-OUT,V-IN)			
J301			E58-1095-05	RECTANGULAR RECEPTACLE			
J401			E56-0864-05	CYLINDRICAL RECEPTACLE			E5R1
J401			E56-0864-05	CYLINDRICAL RECEPTACLE			KM1M2
J401			E56-0864-05	CYLINDRICAL RECEPTACLE			X1E1E2
J501			E11-0625-05	PHONE JACK			E3
J502			E04-0324-05	RF COAXIAL CABLE RECEPTACLE			E3
J681			E11-0625-05	PHONE JACK (DIGITAL-OUT)			
W801		✻	E30-6777-05	CORD WITH CONNECTOR (USB CABLE)			
⚠ L1			L33-2358-05	CHOKE COIL			
L100-103			L33-2369-05	CHOKE COIL (10U)			
L104-107			L33-2370-05	CHOKE COIL (10U)			
L108			L92-0373-05	CHIP FERRITE			
L201			L92-0319-05	CHIP FERRITE			
L202			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L203			L92-0319-05	CHIP FERRITE			
L204			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L300			L92-0373-05	CHIP FERRITE			E4K2
L300			L92-0373-05	CHIP FERRITE			E5R1K1
L300			L92-0373-05	CHIP FERRITE			KM1M2
L300			L92-0373-05	CHIP FERRITE			X1E1E2
L302			L33-2369-05	CHOKE COIL			
L303			L92-0329-05	CHIP FERRITE			
L401			L33-2369-05	CHOKE COIL			E4
L401			L33-2369-05	CHOKE COIL			K1K2E3
L501,502			L92-0373-05	CHIP FERRITE			E3
L601,602			L92-0319-05	CHIP FERRITE			
L651			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L701-706			L92-0373-05	CHIP FERRITE			

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
L731			L92-0373-05	CHIP FERRITE	
L741			L92-0373-05	CHIP FERRITE	
L751			L92-0373-05	CHIP FERRITE	
L801			L92-0642-05	CHIP FERRITE	
L803			L92-0642-05	CHIP FERRITE	
L804,805			L92-0641-05	FERRITE CORE	
L806		✻	L92-0651-05	CHIP FERRITE	E5R1
L806		✻	L92-0651-05	CHIP FERRITE	KM1M2
L806		✻	L92-0651-05	CHIP FERRITE	X1E1E2
L806,807		✻	L92-0651-05	CHIP FERRITE	E4
L806,807		✻	L92-0651-05	CHIP FERRITE	K1K2E3
L808			L92-0641-05	FERRITE CORE	E4
L808			L92-0641-05	FERRITE CORE	K1K2E3
L811			L92-0373-05	CHIP FERRITE	
L851			L92-0319-05	CHIP FERRITE	
X701			L77-2866-05	CRYSTAL RESONATOR (27MHZ)	
X801			L77-2943-05	CRYSTAL RESONATOR (24.000MHZ)	
X851			L77-2921-05	CRYSTAL RESONATOR (32.768KHZ)	
F	1D		N35-2003-48	BINDING HEAD MACHINE SCREW	E3
H	1D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
CP701-715			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP721-724			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP751,752			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP753,754			RK74HB1J220J	CHIP-COM 22 J 1/16W	
R6			RK73GB2A823J	CHIP R 82K J 1/10W	
R7			RK73GB2A103J	CHIP R 10K J 1/10W	
R8			RK73GB2A224J	CHIP R 220K J 1/10W	
R9			RK73GB2A333J	CHIP R 33K J 1/10W	
R10			RK73GB2A224J	CHIP R 220K J 1/10W	
R100			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R101			RK73GH2A681D	CHIP R 680 D 1/10W	
R102			RK73GH2A221D	CHIP R 220 D 1/10W	
R103			RK73GH2A681D	CHIP R 680 D 1/10W	
R104			RK73GH2A561D	CHIP R 560 D 1/10W	
R105-108			RK73GB2A683J	CHIP R 68K J 1/10W	
R109			RK73GB2A103J	CHIP R 10K J 1/10W	
R110			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R111			RK73GB2A103J	CHIP R 10K J 1/10W	
R112			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R113			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R114			RK73GH2A103D	CHIP R 10K D 1/10W	
R119-122			RK73GH2A333D	CHIP R 33K D 1/10W	
R123-134			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R135,136			RK73GB2A220J	CHIP R 22 J 1/10W	
R137,138			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R139			RK73GB2A220J	CHIP R 22 J 1/10W	
R140,141			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R142			RK73GB2A220J	CHIP R 22 J 1/10W	
R143-152			RK73EB2E100J	CHIP R 10 J 1/4W	
R153-156			R92-5158-05	CHIP R 0.022 J 1/4W	
R158			R92-5159-05	CHIP R 0.033 J 1/4W	
R159			R92-5158-05	CHIP R 0.022 J 1/4W	
R161-167			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R201,202			RK73HB1J202J	CHIP R 2.0K J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R203			RK73EB2E100J	CHIP R 10 J 1/4W	
R204			RK73HB1J223J	CHIP R 22K J 1/16W	
R205,206			RK73EB2E100J	CHIP R 10 J 1/4W	
R207			RK73HB1J223J	CHIP R 22K J 1/16W	
R208			RK73EB2E100J	CHIP R 10 J 1/4W	
R209			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R210			RK73FB2B101J	CHIP R 100 J 1/8W	
R211			RK73GB2A750J	CHIP R 75 J 1/10W	
R212			RK73EB2E101J	CHIP R 100 J 1/4W	
R213			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R215			RK73HB1J100J	CHIP R 10 J 1/16W	
R216,217			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R219			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R228			RK73GH2A471D	CHIP R 470 D 1/10W	
R229			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R235			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R236-238			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R239			RK73HB1J103J	CHIP R 10K J 1/16W	
R240			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R241			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R243			RK73HB1J101J	CHIP R 100 J 1/16W	
R244			RK73HB1J103J	CHIP R 10K J 1/16W	
R245			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R246-249			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R250			RK73HB1J103J	CHIP R 10K J 1/16W	
R251,252			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R253			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R254			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R255,256			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R257,258			RK73HB1J101J	CHIP R 100 J 1/16W	
R259			RK73HB1J103J	CHIP R 10K J 1/16W	
R260,261			RK73HB1J101J	CHIP R 100 J 1/16W	
R263			RK73HB1J101J	CHIP R 100 J 1/16W	
R265			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R266			RK73EB2E750J	CHIP R 75 J 1/4W	
R267-269			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R270			RK73GB2A750J	CHIP R 75 J 1/10W	
R271			RK73EB2E101J	CHIP R 100 J 1/4W	
R272			RK73HB1J100J	CHIP R 10 J 1/16W	
R273-276			RK73HB1J473J	CHIP R 47K J 1/16W	
R277			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R279			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R282			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R283			RK73HB1J103J	CHIP R 10K J 1/16W	E4
R283			RK73HB1J103J	CHIP R 10K J 1/16W	K1K2E3
R284			RK73HB1J000J	CHIP R 0.0 J 1/16W	E5R1
R284			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1M2
R284			RK73HB1J000J	CHIP R 0.0 J 1/16W	X1E1E2
R284-289			RK73HB1J102J	CHIP R 1.0K J 1/16W	E4
R284-289			RK73HB1J102J	CHIP R 1.0K J 1/16W	K1K2E3
R286			RK73HB1J000J	CHIP R 0.0 J 1/16W	E5R1
R286			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1M2
R286			RK73HB1J000J	CHIP R 0.0 J 1/16W	X1E1E2
R288			RK73HB1J000J	CHIP R 0.0 J 1/16W	E5R1
R288			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1M2

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe)
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R288			RK73HB1J000J	CHIP R	0.0	J	1/16W	X1E1E2
R290			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R302			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R304,305			RK73HB1J101J	CHIP R	100	J	1/16W	E4K2
R304,305			RK73HB1J101J	CHIP R	100	J	1/16W	E5R1K1
R304,305			RK73HB1J101J	CHIP R	100	J	1/16W	KM1M2
R304,305			RK73HB1J101J	CHIP R	100	J	1/16W	X1E1E2
R309			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R310			RK73HB1J472J	CHIP R	4.7K	J	1/16W	E4K2
R310			RK73HB1J472J	CHIP R	4.7K	J	1/16W	E5R1K1
R310			RK73HB1J472J	CHIP R	4.7K	J	1/16W	KM1M2
R310			RK73HB1J472J	CHIP R	4.7K	J	1/16W	X1E1E2
R311-314			RK73HB1J103J	CHIP R	10K	J	1/16W	E4K2
R311-314			RK73HB1J103J	CHIP R	10K	J	1/16W	E5R1K1
R311-314			RK73HB1J103J	CHIP R	10K	J	1/16W	KM1M2
R311-314			RK73HB1J103J	CHIP R	10K	J	1/16W	X1E1E2
R403-405			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R406			RK73HB1J101J	CHIP R	100	J	1/16W	
R407			RK73GB2A000J	CHIP R	0.0	J	1/10W	E4
R407			RK73GB2A000J	CHIP R	0.0	J	1/10W	K1K2E3
R412-415			RK73GB2A750J	CHIP R	75	J	1/10W	E5R1
R412-415			RK73GB2A750J	CHIP R	75	J	1/10W	KM1M2
R412-415			RK73GB2A750J	CHIP R	75	J	1/10W	X1E1E2
R416			RK73EB2E101J	CHIP R	100	J	1/4W	E5R1
R416			RK73EB2E101J	CHIP R	100	J	1/4W	KM1M2
R416			RK73EB2E101J	CHIP R	100	J	1/4W	X1E1E2
R417			RK73HB1J100J	CHIP R	10	J	1/16W	E5R1
R417			RK73HB1J100J	CHIP R	10	J	1/16W	KM1M2
R417			RK73HB1J100J	CHIP R	10	J	1/16W	X1E1E2
R418			RK73EB2E101J	CHIP R	100	J	1/4W	E5R1
R418			RK73EB2E101J	CHIP R	100	J	1/4W	KM1M2
R418			RK73EB2E101J	CHIP R	100	J	1/4W	X1E1E2
R419			RK73HB1J100J	CHIP R	10	J	1/16W	E5R1
R419			RK73HB1J100J	CHIP R	10	J	1/16W	KM1M2
R419			RK73HB1J100J	CHIP R	10	J	1/16W	X1E1E2
R420			RK73EB2E101J	CHIP R	100	J	1/4W	E5R1
R420			RK73EB2E101J	CHIP R	100	J	1/4W	KM1M2
R420			RK73EB2E101J	CHIP R	100	J	1/4W	X1E1E2
R421			RK73HB1J100J	CHIP R	10	J	1/16W	E5R1
R421			RK73HB1J100J	CHIP R	10	J	1/16W	KM1M2
R421			RK73HB1J100J	CHIP R	10	J	1/16W	X1E1E2
R422			RK73EB2E101J	CHIP R	100	J	1/4W	E5R1
R422			RK73EB2E101J	CHIP R	100	J	1/4W	KM1M2
R422			RK73EB2E101J	CHIP R	100	J	1/4W	X1E1E2
R423			RK73HB1J100J	CHIP R	10	J	1/16W	E5R1
R423			RK73HB1J100J	CHIP R	10	J	1/16W	KM1M2
R423			RK73HB1J100J	CHIP R	10	J	1/16W	X1E1E2
R424			RK73EB2E100J	CHIP R	10	J	1/4W	
R425			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R428			RK73EB2E100J	CHIP R	10	J	1/4W	
R501,502			RK73HB1J104J	CHIP R	100K	J	1/16W	E3
R503,504			RK73HB1J223J	CHIP R	22K	J	1/16W	E3
R505,506			RK73HB1J104J	CHIP R	100K	J	1/16W	E3
R507,508			RK73HB1J223J	CHIP R	22K	J	1/16W	E3
R509			RK73HB1J473J	CHIP R	47K	J	1/16W	E3
R512,513			RK73EB2E101J	CHIP R	100	J	1/4W	E3
R601			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R603			RK73GH2A471D	CHIP R	470	D	1/10W	
R604-606			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R613			RK73GH2A331D	CHIP R	330	D	1/10W	
R614		✻	RK73GH2A150D	CHIP R	15	D	1/10W	
R615-617			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R620-625			RK73GH2A750D	CHIP R	75	D	1/10W	
R626		✻	RK73GH2A240D	CHIP R	24	D	1/10W	
R627			RK73GH2A151D	CHIP R	150	D	1/10W	
R628			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R629			RK73GH2A750D	CHIP R	75	D	1/10W	
R651-654			RK73HB1J220J	CHIP R	22	J	1/16W	
R655-657			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R658-660			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R661,662			RK73HB1J103J	CHIP R	10K	J	1/16W	
R663,664			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R665,666			RK73HB1J752J	CHIP R	7.5K	J	1/16W	
R667,668			RK73HB1J471J	CHIP R	470	J	1/16W	
R669-672			RK73HB1J473J	CHIP R	47K	J	1/16W	
R673,674			RK73HB1J103J	CHIP R	10K	J	1/16W	
R681			RK73HB1J103J	CHIP R	10K	J	1/16W	
R683-686			RK73HB1J220J	CHIP R	22	J	1/16W	
R687			RK73HB1J103J	CHIP R	10K	J	1/16W	
R688			RK73HB1J220J	CHIP R	22	J	1/16W	
R690			RK73HB1J220J	CHIP R	22	J	1/16W	
R691			RK73HB1J100J	CHIP R	10	J	1/16W	
R692			RK73GB2A151J	CHIP R	150	J	1/10W	
R693			RK73EB2E750J	CHIP R	75	J	1/4W	
R694,695			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R696			RK73HB1J220J	CHIP R	22	J	1/16W	
R697,698			RK73HB1J151J	CHIP R	150	J	1/16W	
R699			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R702			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R703			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R704			RK73HB1J101J	CHIP R	100	J	1/16W	
R706-708			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R709-713			RK73HB1J220J	CHIP R	22	J	1/16W	
R715-730			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R732-738			RK73HB1J220J	CHIP R	22	J	1/16W	
R739,740			RK73HB1J101J	CHIP R	100	J	1/16W	
R742-746			RK73HB1J101J	CHIP R	100	J	1/16W	
R748-753			RK73HB1J220J	CHIP R	22	J	1/16W	
R754-756			RK73HB1J101J	CHIP R	100	J	1/16W	
R758			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R759			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R760-762			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R763,764			RK73HB1J220J	CHIP R	22	J	1/16W	
R765			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R767			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R769			RK73GH2A153D	CHIP R	15K	D	1/10W	
R770			RK73GH2A123D	CHIP R	12K	D	1/10W	
R771			RK73HB1J103J	CHIP R	10K	J	1/16W	E5R1E3
R771			RK73HB1J103J	CHIP R	10K	J	1/16W	KM1M2
R771			RK73HB1J103J	CHIP R	10K	J	1/16W	X1E1E2

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R772,773			RK73HB1J103J	CHIP R	10K	J	1/16W	K1E4K2
R773			RK73HB1J103J	CHIP R	10K	J	1/16W	E5R1E3
R773			RK73HB1J103J	CHIP R	10K	J	1/16W	KM1M2
R773			RK73HB1J103J	CHIP R	10K	J	1/16W	X1E1E2
R776			RK73HB1J103J	CHIP R	10K	J	1/16W	
R777			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R780			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R781			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R805,806			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R808,809			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	E4
R808,809			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	K1K2E3
R810,811			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R812			RK73HB1J103J	CHIP R	10K	J	1/16W	
R814			RK73HB1J103J	CHIP R	10K	J	1/16W	
R815			RK73GH2A622D	CHIP R	6.2K	D	1/10W	
R820			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R821			RK73GH2A622D	CHIP R	6.2K	D	1/10W	
R823			RK73HB1J103J	CHIP R	10K	J	1/16W	
R825			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R826			RK73HB1J103J	CHIP R	10K	J	1/16W	
R831			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R832			RK73GB2A515J	CHIP R	5.1M	J	1/10W	
R833-836			RK73HB1J103J	CHIP R	10K	J	1/16W	
R837			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R838			RK73HB1J220J	CHIP R	22	J	1/16W	
R840,841			RK73HB1J103J	CHIP R	10K	J	1/16W	
R843			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R844			RK73HB1J103J	CHIP R	10K	J	1/16W	
R845			RK73GH2A104D	CHIP R	100K	D	1/10W	
R846			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R847			RK73HB1J103J	CHIP R	10K	J	1/16W	
R848			RK73HB1J331J	CHIP R	330	J	1/16W	
R851			RK73HB1J473J	CHIP R	47K	J	1/16W	
R853-856			RK73HB1J103J	CHIP R	10K	J	1/16W	
R857-860			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R861			RK73HB1J472J	CHIP R	4.7K	J	1/16W	E4K2
R861			RK73HB1J472J	CHIP R	4.7K	J	1/16W	E5R1K1
R861			RK73HB1J472J	CHIP R	4.7K	J	1/16W	KM1M2
R861			RK73HB1J472J	CHIP R	4.7K	J	1/16W	X1E1E2
R861,862			RK73HB1J472J	CHIP R	4.7K	J	1/16W	E3
R863-880			RK73HB1J103J	CHIP R	10K	J	1/16W	
R881			RK73HB1J202J	CHIP R	2.0K	J	1/16W	
R883			RK73HB1J103J	CHIP R	10K	J	1/16W	
R884,885			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R886			RK73HB1J473J	CHIP R	47K	J	1/16W	
R887			RK73HB1J103J	CHIP R	10K	J	1/16W	
R900			RK73HB1J220J	CHIP R	22	J	1/16W	
R905,906			RK73HB1J220J	CHIP R	22	J	1/16W	
R907			RK73HB1J103J	CHIP R	10K	J	1/16W	
R913,914			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R915			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R919			RK73HB1J000J	CHIP R	0.0	J	1/16W	
L503		✻	T90-0587-05	CHIP ANTENNA				E3

Ref. No.	Add	New	Parts No.	Description	Destination
D100-103			1SS357-F	DIODE	
D201			DAP202U	DIODE	
D202			UDZS4.7B	ZENER DIODE	
D203			CVL10C270M300	VARISTOR	
D204-206			CVS10A120M	VARISTOR	
D207			CVL10C270M300	VARISTOR	
D212,213			CVL10C270M300	VARISTOR	
D301			1SS355	DIODE	E4K2
D301			1SS355	DIODE	E5R1K1
D301			1SS355	DIODE	KM1M2
D301			1SS355	DIODE	X1E1E2
D400-403			UDZS6.2B	ZENER DIODE	E5R1
D400-403			UDZS6.2B	ZENER DIODE	KM1M2
D400-403			UDZS6.2B	ZENER DIODE	X1E1E2
D404			STZ6.8N	ZENER DIODE	E5R1
D404			STZ6.8N	ZENER DIODE	KM1M2
D404			STZ6.8N	ZENER DIODE	X1E1E2
D405-408			CVL10C270M300	VARISTOR	E5R1
D405-408			CVL10C270M300	VARISTOR	KM1M2
D405-408			CVL10C270M300	VARISTOR	X1E1E2
D501			STZ6.8N	ZENER DIODE	E3
D651			DAP202U	DIODE	
D681			CVL10C270M300	VARISTOR	
D682			DA204U	DIODE	
D701			DAP202U	DIODE	
D801,802			AVRL1613R3FTA	VARISTOR	
IC100,101			LTC3728LEGN	ANALOGUE IC	
IC201			NJM2794RB2ZB	ANALOGUE IC	
IC202			NJM2505AF-ZB	ANALOGUE IC	
IC203			XC6201P502PR	ANALOGUE IC	
IC205		✻	AN15885A-VF	ANALOGUE IC	
IC206			MM1508XNRE-E	ANALOGUE IC	
IC207		✻	NJM2286V-ZB	ANALOGUE IC	
IC301			74AHCT08PW	MOS-IC	E4K2
IC301			74AHCT08PW	MOS-IC	E5R1K1
IC301			74AHCT08PW	MOS-IC	KM1M2
IC301			74AHCT08PW	MOS-IC	X1E1E2
IC501			NJM4565V-ZB	ANALOGUE IC	E3
IC502			TC7WH126FU-F	MOS-IC	E3
IC601			MM1671XNRE	ANALOGUE IC	
IC602			NJM2573V-ZB	ANALOGUE IC	
IC651			PCM1754DB	MOS-IC	
IC652			NJM4565V-ZB	ANALOGUE IC	
IC653			XC6201P502PR	ANALOGUE IC	
IC654			NJM4565V-ZB	ANALOGUE IC	
IC691		✻	74AHC1G04GW	MOS-IC	
IC692			74AHC1G08GW	MOS-IC	
IC701		✻	MS8312A-CMG	MICROPROCESSOR IC	
IC702			S29GL64A9I4Z4	ROM IC	
IC703,704		✻	A2V28S40CTPG6	DRAM IC	
IC705			SI-3010KD	ANALOGUE IC	
IC801		✻	S1R72C05F15	MOS-IC	
IC804		✻	MIC2005-08YM6	MOS-IC	
IC805			XC6219B332PR	ANALOGUE IC	
IC806			XC6219B182PR	ANALOGUE IC	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe)
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-108x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
IC851			341S2094	MICROPROCESSOR IC	
IC853		✻	74AHC573PW	MOS-IC	
Q1			DTC143ZUA	DIGITAL TRANSISTOR	
Q2,3			2SA1576A	TRANSISTOR	
Q4			TPC8110-F	FET	
Q100-103			DTC124XUA	DIGITAL TRANSISTOR	
Q104-107			HAT2218R-E	DUAL FET	
Q202-204			2SA1576A	TRANSISTOR	
Q205-207			2SC4081	TRANSISTOR	
Q301,302			2SC4081	TRANSISTOR	E4K2
Q301,302			2SC4081	TRANSISTOR	E5R1K1
Q301,302			2SC4081	TRANSISTOR	KM1M2
Q301,302			2SC4081	TRANSISTOR	X1E1E2
Q303			UMG2N	TRANSISTOR	E4K2
Q303			UMG2N	TRANSISTOR	E5R1K1
Q303			UMG2N	TRANSISTOR	KM1M2
Q303			UMG2N	TRANSISTOR	X1E1E2
Q651,652			DTC643TU	DIGITAL TRANSISTOR	
Q653			DTA114EUA	DIGITAL TRANSISTOR	
Q654			DTC143ZUA	DIGITAL TRANSISTOR	
Q681			2SA1576A	TRANSISTOR	
A501		✻	W02-5292-05	ELECTRIC CIRCUIT MODULE (BLUET)	E3

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C1			CK73FB1E474K	CHIP C	0.47UF	K	
C2			CK73GB1H222K	CHIP C	2200PF	K	
C4			C90-6851-05	ELECTRO	220UF	25WV	
C6			CK73GB1H222K	CHIP C	2200PF	K	
C8			CK73GB1H103K	CHIP C	0.010UF	K	
C9,10			CK73GB1H222K	CHIP C	2200PF	K	
C14			CK73FB1A335K	CHIP C	3.3UF	K	
C15			CK73GB1A105K	CHIP C	1.0UF	K	
C16			CK73GB1H103K	CHIP C	0.010UF	K	
C17			CK73GB1A105K	CHIP C	1.0UF	K	
C18,19			CK73GB1H222K	CHIP C	2200PF	K	
C20			CK73GB1H103K	CHIP C	0.010UF	K	E4
C20			CK73GB1H103K	CHIP C	0.010UF	K	K1K2E3
C21			CK73FB0J106K	CHIP C	10UF	K	
C24,25			CK73GB1H222K	CHIP C	2200PF	K	
C26			CK73GB1H104K	CHIP C	0.10UF	K	
C29			CD04AS0J101M	ELECTRO	100UF	6.3WV	
C30			CK73FB1C105K	CHIP C	1.0UF	K	
C31			CK73GB1A105K	CHIP C	1.0UF	K	
C32			CK73GB1H103K	CHIP C	0.010UF	K	
C33			CK73GB1A105K	CHIP C	1.0UF	K	
C34			CD04AR1C221M	ELECTRO	220UF	16WV	
C35			CK73GB1A105K	CHIP C	1.0UF	K	
C36			CC73GCH1H101J	CHIP C	100PF	J	E1E2E5
C36			CC73GCH1H101J	CHIP C	100PF	J	E3E4
C37			CK73GB1H103K	CHIP C	0.010UF	K	
C38			C93-1470-05	CHIP C	15000PF	F	E1E2E5
C38			C93-1470-05	CHIP C	15000PF	F	E3E4
C41			CK73GB1A105K	CHIP C	1.0UF	K	
C43-45			CK73GB1H103K	CHIP C	0.010UF	K	
C46			CK73FB1E474K	CHIP C	0.47UF	K	
C47			C90-5612-05	ELECTRO	3900UF	16WV	
C100			CK73GB1H104K	CHIP C	0.10UF	K	
C101			CK73GB1H103K	CHIP C	0.010UF	K	
C102			CK73GB1H104K	CHIP C	0.10UF	K	
C104			CK73GB1H104K	CHIP C	0.10UF	K	
C105,106			CK73GB1H103K	CHIP C	0.010UF	K	E4
C105,106			CK73GB1H103K	CHIP C	0.010UF	K	K1K2E3
C106			CK73GB1H103K	CHIP C	0.010UF	K	E5R1
C106			CK73GB1H103K	CHIP C	0.010UF	K	KM1M2
C106			CK73GB1H103K	CHIP C	0.010UF	K	X1E1E2
C108			CC73GCH1H220J	CHIP C	22PF	J	
C109			CC73GCH1H180J	CHIP C	18PF	J	
C110			CK73FB0J106K	CHIP C	10UF	K	
C111			CK73GB1H473K	CHIP C	0.047UF	K	
C112			CK73GB1H102K	CHIP C	1000PF	K	
C113			CK73GB1H103K	CHIP C	0.010UF	K	
C114			CD04AS0J101M	ELECTRO	100UF	6.3WV	
C115,116			CK73GB1H103K	CHIP C	0.010UF	K	
C117			CK73GB1H104K	CHIP C	0.10UF	K	
C119			CK73GB1H104K	CHIP C	0.10UF	K	
C120			CK73GB1H102K	CHIP C	1000PF	K	
C121			CK73GB1H104K	CHIP C	0.10UF	K	
C122,123			CK73GB1H103K	CHIP C	0.010UF	K	
C124			CK73GB1H104K	CHIP C	0.10UF	K	
C125			CK73GB1H102K	CHIP C	1000PF	K	
C126-129			CK73GB1H104K	CHIP C	0.10UF	K	
C132,133			CC73GCH1H070D	CHIP C	7.0PF	D	
C302			CD04AS1C470M	ELECTRO	47UF	16WV	
C303,304			CK73GB1A474K	CHIP C	0.47UF	K	
C305,306			CE32BJ1H2R2M	CHIP EL	2.2UF	50WV	
C307,308			CK73GB1A474K	CHIP C	0.47UF	K	
C316			CK73GB1A105K	CHIP C	1.0UF	K	
C318			CE32BJ1C100M	CHIP EL	10UF	16WV	
C321			CK73GB1H103K	CHIP C	0.010UF	K	
C322			CE32BJ1C100M	CHIP EL	10UF	16WV	
C323,324			CK73GB1H103K	CHIP C	0.010UF	K	
C325			CK73FB1A335K	CHIP C	3.3UF	K	
C326			CK73GB1A105K	CHIP C	1.0UF	K	
C327			CK73FB1A335K	CHIP C	3.3UF	K	
C328,329			CK73GB1A105K	CHIP C	1.0UF	K	
C330-332			CE32BJ1H010M	CHIP EL	1.0UF	50WV	
C334			CK73FB1E474K	CHIP C	0.47UF	K	
C335			CE32BJ0J470M	CHIP EL	47UF	6.3WV	
C336			CK73FB1E474K	CHIP C	0.47UF	K	
C400			CD04AS1C220M	ELECTRO	22UF	16WV	E1E2M1
C400			CD04AS1C220M	ELECTRO	22UF	16WV	E3E4
C400			CD04AS1C220M	ELECTRO	22UF	16WV	M2X1E5
C401			CK73GB1H103K	CHIP C	0.010UF	K	E1E2M1
C401			CK73GB1H103K	CHIP C	0.010UF	K	E3E4
C401			CK73GB1H103K	CHIP C	0.010UF	K	M2X1E5
C402-405			CK73GB1A474K	CHIP C	0.47UF	K	E1E2M1
C402-405			CK73GB1A474K	CHIP C	0.47UF	K	E3E4
C402-405			CK73GB1A474K	CHIP C	0.47UF	K	M2X1E5
C417-420			CK73GB1A474K	CHIP C	0.47UF	K	E4K2

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C417-420			CK73GB1A474K	CHIP C	0.47UF	K	E5R1K1
C417-420			CK73GB1A474K	CHIP C	0.47UF	K	KM1M2
C417-420			CK73GB1A474K	CHIP C	0.47UF	K	X1E1E2
C424			CK73GB1H104K	CHIP C	0.10UF	K	E4K2
C424			CK73GB1H104K	CHIP C	0.10UF	K	E5R1K1
C424			CK73GB1H104K	CHIP C	0.10UF	K	KM1M2
C424			CK73GB1H104K	CHIP C	0.10UF	K	X1E1E2
C425			CD04AS1C220M	ELECTRO	22UF	16WV	E4K2
C425			CD04AS1C220M	ELECTRO	22UF	16WV	E5R1K1
C425			CD04AS1C220M	ELECTRO	22UF	16WV	KM1M2
C425			CD04AS1C220M	ELECTRO	22UF	16WV	X1E1E2
C426,427			CK73GB1H103K	CHIP C	0.010UF	K	E4K2
C426,427			CK73GB1H103K	CHIP C	0.010UF	K	E5R1K1
C426,427			CK73GB1H103K	CHIP C	0.010UF	K	KM1M2
C426,427			CK73GB1H103K	CHIP C	0.010UF	K	X1E1E2
C430			CK73GB1H103K	CHIP C	0.010UF	K	E1E2M1
C430			CK73GB1H103K	CHIP C	0.010UF	K	E3E4
C430			CK73GB1H103K	CHIP C	0.010UF	K	M2X1E5
C500			CK73GB1A105K	CHIP C	1.0UF	K	
C501			CC73GCH1H100D	CHIP C	10PF	D	E2M1M2
C501			CC73GCH1H100D	CHIP C	10PF	D	E3E4
C501			CC73GCH1H100D	CHIP C	10PF	D	E5K1K2
C501			CC73GCH1H100D	CHIP C	10PF	D	KR1E1
C502			CD04AS1C101M	ELECTRO	100UF	16WV	
C512-514			CK73GB1H103K	CHIP C	0.010UF	K	
C515			CK73GB1H102K	CHIP C	1000PF	K	E3E4
C520			CC73GCH1H100D	CHIP C	10PF	D	E2M1M2
C520			CC73GCH1H100D	CHIP C	10PF	D	E3E4
C520			CC73GCH1H100D	CHIP C	10PF	D	E5K1K2
C520			CC73GCH1H100D	CHIP C	10PF	D	KR1E1
C521			CK73GB1H103K	CHIP C	0.010UF	K	E2M1M2
C521			CK73GB1H103K	CHIP C	0.010UF	K	E3E4
C521			CK73GB1H103K	CHIP C	0.010UF	K	E5K1K2
C521			CK73GB1H103K	CHIP C	0.010UF	K	KR1E1
C522			CD04AS1V100M	ELECTRO	10UF	35WV	E2M1M2
C522			CD04AS1V100M	ELECTRO	10UF	35WV	E3E4
C522			CD04AS1V100M	ELECTRO	10UF	35WV	E5K1K2
C522			CD04AS1V100M	ELECTRO	10UF	35WV	KR1E1
C523			CC73GCH1H331J	CHIP C	330PF	J	E2M1M2
C523			CC73GCH1H331J	CHIP C	330PF	J	E3E4
C523			CC73GCH1H331J	CHIP C	330PF	J	E5K1K2
C523			CC73GCH1H331J	CHIP C	330PF	J	KR1E1
C524			CD04AS1V100M	ELECTRO	10UF	35WV	E2M1M2
C524			CD04AS1V100M	ELECTRO	10UF	35WV	E3E4
C524			CD04AS1V100M	ELECTRO	10UF	35WV	E5K1K2
C524			CD04AS1V100M	ELECTRO	10UF	35WV	KR1E1
C526,527			CK73GB1H103K	CHIP C	0.010UF	K	E2M1M2
C526,527			CK73GB1H103K	CHIP C	0.010UF	K	E3E4
C526,527			CK73GB1H103K	CHIP C	0.010UF	K	E5K1K2
C526,527			CK73GB1H103K	CHIP C	0.010UF	K	KR1E1
C527			CK73GB1H103K	CHIP C	0.010UF	K	X1
C600			C90-6779-05	ELECTRO	0.47UF	16WV	
C602			C90-6779-05	ELECTRO	0.47UF	16WV	
C616			CK73GB1A105K	CHIP C	1.0UF	K	
C619			CD04BM1E330M	ELECTRO	33UF	25WV	
C620,621			C90-6780-05	ELECTRO	1UF	16WV	
C623,624			C90-6779-05	ELECTRO	0.47UF	16WV	
C626			CK73GB1A105K	CHIP C	1.0UF	K	
C627			CC73GCH1H050C	CHIP C	5.0PF	C	
C700			CE32BJ1C100M	CHIP EL	10UF	16WV	
C701,702			CK73GB1H102K	CHIP C	1000PF	K	
C703,704			CE32BJ1C100M	CHIP EL	10UF	16WV	
C705,706			CK73GB1H102K	CHIP C	1000PF	K	
C707			CE32BJ1C100M	CHIP EL	10UF	16WV	
C711			CE32BJ1C100M	CHIP EL	10UF	16WV	
C712,713			CK73GB1H102K	CHIP C	1000PF	K	
C714			CE32BJ1C100M	CHIP EL	10UF	16WV	
C715			CK73GB1H104K	CHIP C	0.10UF	K	
C800,801			CK73GB1H103K	CHIP C	0.010UF	K	
C807,808			CK73GB1H222K	CHIP C	2200PF	K	
C809			CK73FB1C105K	CHIP C	1.0UF	K	
C810			CD04AS1C101M	ELECTRO	100UF	16WV	
C811			CK73GB1H103K	CHIP C	0.010UF	K	
CN1		✻	E41-2685-05	PIN ASSY			
CN100			E41-2248-05	PIN ASSY			
CN800		✻	E41-2979-05	FLAT CABLE CONNECTOR			
CN801		✻	E41-2980-05	FLAT CABLE CONNECTOR			
J1			E58-1043-05	RECTANGULAR RECEPTACLE (POWER)			
J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)			E1E2M1
J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)			E3E4
J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)			M2X1E5
J401		✻	E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			E4K2
J401		✻	E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			E5R1K1
J401		✻	E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			KM1M2
J401		✻	E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			X1E1E2
J700			E63-0953-05	RCA PIN JACK (L/R)			
W501		✻	E30-6809-05	CORD WITH PLUG (ANT)			E5R1K1
W501		✻	E30-6809-05	CORD WITH PLUG (ANT)			KM1M2
W501		✻	E30-6809-05	CORD WITH PLUG (ANT)			K2
W501		✻	E30-6809-05	CORD WITH PLUG (ANT)			X1E1E2
257	-	✻	F12-0962-04	SHIELDING TUBE (IN F/E CASE)			
F1			F53-0297-05	FUSE (UL,CSA) 1.6A			
F2			F53-0306-05	FUSE (UL,CSA) 5A			E4K2
F2			F53-0306-05	FUSE (UL,CSA) 5A			E5R1K1
F2			F53-0306-05	FUSE (UL,CSA) 5A			KM1M2
F2			F53-0306-05	FUSE (UL,CSA) 5A			X1E1E2
L1			L33-2319-05	CHOKE COIL ASSY			
L100			L92-0319-05	CHIP FERRITE			
L101			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			
L501-504			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			
L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			E2M1M2
L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			E3E4
L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			E5K1K2
L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			KR1E1
L509			L92-0329-05	CHIP FERRITE			E3E4
X100		✻	L77-2974-05	CRYSTAL RESONATOR (11.0592MHZ)			
X101			L77-2921-05	CRYSTAL RESONATOR (32.768KHZ)			
X500			L77-2002-05	CRYSTAL RESONATOR			E2M1M2

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe)
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
X500			L77-2002-05	CRYSTAL RESONATOR	E3E4
X500			L77-2002-05	CRYSTAL RESONATOR	E5K1K2
X500			L77-2002-05	CRYSTAL RESONATOR	KR1E1
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	E4K2
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	E5R1K1
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	KM1M2
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	X1E1E2
K	3D	✻	N09-6727-05	TAPTITE SCREW	
L	2D		N82-3008-48	BINDING HEAD TAPTITE SCREW	
R2			RK73FB2B221J	CHIP R 220 J 1/8W	
R3			RK73GB2A103J	CHIP R 10K J 1/10W	
R5			RK73FB2B223J	CHIP R 22K J 1/8W	
R6			RK73EB2E272J	CHIP R 2.7K J 1/4W	
R7			RK73GB2A101J	CHIP R 100 J 1/10W	
R8			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R9			RK73GB2A101J	CHIP R 100 J 1/10W	
R10			RK73GB2A473J	CHIP R 47K J 1/10W	
R11			RK73GB2A100J	CHIP R 10 J 1/10W	E4
R11			RK73GB2A100J	CHIP R 10 J 1/10W	K1K2E3
R12			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R13			RK73GB2A223J	CHIP R 22K J 1/10W	
R14			RK73PB2H102J	CHIP R 1.0K J 1/2W	
R15			RK73GB2A473J	CHIP R 47K J 1/10W	
R16			RK73PB2H102J	CHIP R 1.0K J 1/2W	
R17			RK73GB2A103J	CHIP R 10K J 1/10W	
R18			RK73EB2E103J	CHIP R 10K J 1/4W	
R19			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2E5
R19			RK73GB2A000J	CHIP R 0.0 J 1/10W	E3E4
R20			RK73GB2A100J	CHIP R 10 J 1/10W	
R21			RK73GB2A223J	CHIP R 22K J 1/10W	
R22			RK73EB2E272J	CHIP R 2.7K J 1/4W	
R23			RK73GH2A243D	CHIP R 24K D 1/10W	
R24			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R25			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R27			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1
R27			RK73GB2A103J	CHIP R 10K J 1/10W	K2
R27			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K1
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1M1
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W	K2
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W	M2X1K1
R29			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R30			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R31			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R32			RK73GB2A104J	CHIP R 100K J 1/10W	
R33,34			RK73PB2H102J	CHIP R 1.0K J 1/2W	KR1M1
R33,34			RK73PB2H102J	CHIP R 1.0K J 1/2W	K2
R33,34			RK73PB2H102J	CHIP R 1.0K J 1/2W	M2X1K1
R35			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1
R35			RK73GB2A103J	CHIP R 10K J 1/10W	K2
R35			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K1
R36			RK73GB2A153J	CHIP R 15K J 1/10W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R38			RK73GB2A822J	CHIP R 8.2K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R44			RK73GB2A683J	CHIP R 68K J 1/10W	
R46			RK73EB2E103J	CHIP R 10K J 1/4W	
R48			RK73GB2A473J	CHIP R 47K J 1/10W	
R49,50			RK73GB2A104J	CHIP R 100K J 1/10W	
R51			RK73GB2A473J	CHIP R 47K J 1/10W	
R52			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R53			RK73GB2A473J	CHIP R 47K J 1/10W	
R54			RK73GB2A153J	CHIP R 15K J 1/10W	
R55			RK73GB2A561J	CHIP R 560 J 1/10W	
R56			RK73EB2E622J	CHIP R 6.2K J 1/4W	
R57			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R58			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R59			RK73EB2E622J	CHIP R 6.2K J 1/4W	
R100			RK73GB2A101J	CHIP R 100 J 1/10W	
R101			RK73GB2A104J	CHIP R 100K J 1/10W	E4
R101			RK73GB2A104J	CHIP R 100K J 1/10W	K1K2E3
R102			RK73GB2A473J	CHIP R 47K J 1/10W	
R106			RK73GB2A473J	CHIP R 47K J 1/10W	
R107			RK73GB2A101J	CHIP R 100 J 1/10W	E4
R107			RK73GB2A101J	CHIP R 100 J 1/10W	K1K2E3
R109			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2M1
R109			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R109			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1E5
R110			RK73GB2A104J	CHIP R 100K J 1/10W	E4
R110			RK73GB2A104J	CHIP R 100K J 1/10W	K1K2E3
R112			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R113			RK73GB2A473J	CHIP R 47K J 1/10W	
R114			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2M1
R114			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4
R114			RK73GB2A101J	CHIP R 100 J 1/10W	M2X1E5
R115			RK73GB2A100J	CHIP R 10 J 1/10W	E4
R115			RK73GB2A100J	CHIP R 10 J 1/10W	K1K2E3
R118			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R119			RK73GH2A333D	CHIP R 33K D 1/10W	
R120			RK73GH2A222D	CHIP R 2.2K D 1/10W	
R121			RK73GH2A153D	CHIP R 15K D 1/10W	
R122			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R125			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2M1
R125			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R125			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1E5
R126,127			RK73GB2A103J	CHIP R 10K J 1/10W	
R128			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1
R128			RK73GB2A473J	CHIP R 47K J 1/10W	K2
R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2M1
R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1E5
R130,131			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1
R130,131			RK73GB2A473J	CHIP R 47K J 1/10W	K2
R133,134			RK73GB2A473J	CHIP R 47K J 1/10W	
R135			RK73GB2A101J	CHIP R 100 J 1/10W	
R136			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2M1
R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4
R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	M2X1E5
R139-141			RK73GB2A101J	CHIP R 100 J 1/10W	KR1K1

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R139-141			RK73GB2A101J	CHIP R 100 J 1/10W	K2
R143			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R144			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R145			RK73GB2A473J	CHIP R 47K J 1/10W	
R146,147			RK73GB2A101J	CHIP R 100 J 1/10W	
R148			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R149			RK73GB2A101J	CHIP R 100 J 1/10W	
R150			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R151			RK73GB2A623J	CHIP R 62K J 1/10W	
R152			RK73GB2A101J	CHIP R 100 J 1/10W	
R153			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R154			RK73GB2A101J	CHIP R 100 J 1/10W	
R155			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R156			RK73GB2A101J	CHIP R 100 J 1/10W	
R157			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1
R157			RK73GB2A473J	CHIP R 47K J 1/10W	K2
R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2M1
R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1E5
R159			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1
R159			RK73GB2A473J	CHIP R 47K J 1/10W	K2
R160			RK73GB2A101J	CHIP R 100 J 1/10W	
R161			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R164			RK73GB2A471J	CHIP R 470 J 1/10W	
R165			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R166			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R168			RK73GB2A471J	CHIP R 470 J 1/10W	
R169			RK73GB2A104J	CHIP R 100K J 1/10W	
R170			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R172			RK73GB2A101J	CHIP R 100 J 1/10W	E2M1M2
R172			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4
R172			RK73GB2A101J	CHIP R 100 J 1/10W	E5K1K2
R172			RK73GB2A101J	CHIP R 100 J 1/10W	KR1E1
R173			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	E2M1M2
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	E5K1K2
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	KR1E1
R175			RK73GB2A473J	CHIP R 47K J 1/10W	X1
R177			RK73GB2A473J	CHIP R 47K J 1/10W	E2M1M2
R177			RK73GB2A473J	CHIP R 47K J 1/10W	E3E4
R177			RK73GB2A473J	CHIP R 47K J 1/10W	E5K1K2
R177			RK73GB2A473J	CHIP R 47K J 1/10W	KR1E1
R180			RK73GB2A103J	CHIP R 10K J 1/10W	
R181			RK73GB2A104J	CHIP R 100K J 1/10W	
R182			RK73GB2A103J	CHIP R 10K J 1/10W	E4
R182			RK73GB2A103J	CHIP R 10K J 1/10W	K1K2E3
R183			RK73GB2A473J	CHIP R 47K J 1/10W	
R184			RK73GB2A103J	CHIP R 10K J 1/10W	E5R1
R184			RK73GB2A103J	CHIP R 10K J 1/10W	KM1M2
R184			RK73GB2A103J	CHIP R 10K J 1/10W	X1E1E2
R185			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R186			RK73GB2A223J	CHIP R 22K J 1/10W	
R187			RK73GB2A473J	CHIP R 47K J 1/10W	
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2M1M2
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	E5K1K2
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1E1
R189			RK73GB2A103J	CHIP R 10K J 1/10W	X1
R190			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R191,192			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R193			RK73GB2A101J	CHIP R 100 J 1/10W	
R194			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R195			RK73GB2A153J	CHIP R 15K J 1/10W	
R196			RK73GB2A103J	CHIP R 10K J 1/10W	E4
R196			RK73GB2A103J	CHIP R 10K J 1/10W	R1E1E2
R196			RK73GB2A103J	CHIP R 10K J 1/10W	X1E5E3
R196,197			RK73GB2A103J	CHIP R 10K J 1/10W	M1M2
R197			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2
R197			RK73GB2A303J	CHIP R 30K J 1/10W	X1
R197			RK73GB2A332J	CHIP R 3.3K J 1/10W	E1E2E5
R197			RK73GB2A332J	CHIP R 3.3K J 1/10W	E3E4
R198			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R200			RK73GB2A101J	CHIP R 100 J 1/10W	
R202			RK73GB2A153J	CHIP R 15K J 1/10W	
R203			RK73GB2A101J	CHIP R 100 J 1/10W	
R208			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R209-213			RK73GB2A101J	CHIP R 100 J 1/10W	
R215			RK73GB2A103J	CHIP R 10K J 1/10W	E4K2
R215			RK73GB2A103J	CHIP R 10K J 1/10W	E5R1K1
R215			RK73GB2A103J	CHIP R 10K J 1/10W	KM1M2
R215			RK73GB2A103J	CHIP R 10K J 1/10W	X1E1E2
R216			RK73GB2A103J	CHIP R 10K J 1/10W	E3
R222			RK73GB2A104J	CHIP R 100K J 1/10W	
R223			RK73GB2A101J	CHIP R 100 J 1/10W	
R224			RK73GB2A473J	CHIP R 47K J 1/10W	
R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2M1
R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	E3E4
R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	M2X1E5
R226			RK73GB2A101J	CHIP R 100 J 1/10W	KR1K1
R226			RK73GB2A101J	CHIP R 100 J 1/10W	K2
R227			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2M1
R227			RK73GB2A104J	CHIP R 100K J 1/10W	E3E4
R227			RK73GB2A104J	CHIP R 100K J 1/10W	M2X1E5
R228-233			RK73GB2A101J	CHIP R 100 J 1/10W	
R234,235			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R236			RK73GB2A104J	CHIP R 100K J 1/10W	
R237			RK73GB2A473J	CHIP R 47K J 1/10W	
R238-253			RK73GB2A101J	CHIP R 100 J 1/10W	
R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R255-258			RK73GB2A104J	CHIP R 100K J 1/10W	
R259			RK73GB2A153J	CHIP R 15K J 1/10W	
R260,261			RK73GB2A104J	CHIP R 100K J 1/10W	
R263			RK73GB2A103J	CHIP R 10K J 1/10W	
R302			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R303-306			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R307-310			RK73GB2A101J	CHIP R 100 J 1/10W	
R311,312			RK73GB2A103J	CHIP R 10K J 1/10W	
R317			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R318			RK73GB2A104J	CHIP R 100K J 1/10W	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe)
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R319,320			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R321,322			RK73GB2A103J	CHIP R 10K J 1/10W	
R323,324			RK73GB2A101J	CHIP R 100 J 1/10W	
R325-327			RK73GB2A103J	CHIP R 10K J 1/10W	
R329			RK73GB2A103J	CHIP R 10K J 1/10W	
R400,401			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2M1
R400,401			RK73GB2A100J	CHIP R 10 J 1/10W	E3E4
R400,401			RK73GB2A100J	CHIP R 10 J 1/10W	M2X1E5
R402			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2M1
R402			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4
R402			RK73GB2A222J	CHIP R 2.2K J 1/10W	M2X1E5
R403			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2M1
R403			RK73GB2A102J	CHIP R 1.0K J 1/10W	E3E4
R403			RK73GB2A102J	CHIP R 1.0K J 1/10W	M2X1E5
R404,405			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2M1
R404,405			RK73GB2A100J	CHIP R 10 J 1/10W	E3E4
R404,405			RK73GB2A100J	CHIP R 10 J 1/10W	M2X1E5
R406			RK73EB2E100J	CHIP R 10 J 1/4W	E1E2M1
R406			RK73EB2E100J	CHIP R 10 J 1/4W	E3E4
R406			RK73EB2E100J	CHIP R 10 J 1/4W	M2X1E5
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E1E2M1
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E3E4
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	M2X1E5
R408			RK73EB2E100J	CHIP R 10 J 1/4W	E1E2M1
R408			RK73EB2E100J	CHIP R 10 J 1/4W	E3E4
R408			RK73EB2E100J	CHIP R 10 J 1/4W	M2X1E5
R409-411			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1E2M1
R409-411			RK73EB2E102J	CHIP R 1.0K J 1/4W	E3E4
R409-411			RK73EB2E102J	CHIP R 1.0K J 1/4W	M2X1E5
R412-414			RK73EB2E101J	CHIP R 100 J 1/4W	E1E2M1
R412-414			RK73EB2E101J	CHIP R 100 J 1/4W	E3E4
R412-414			RK73EB2E101J	CHIP R 100 J 1/4W	M2X1E5
R415,416			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1E2M1
R415,416			RK73EB2E102J	CHIP R 1.0K J 1/4W	E3E4
R415,416			RK73EB2E102J	CHIP R 1.0K J 1/4W	M2X1E5
R417			RK73EB2E101J	CHIP R 100 J 1/4W	E1E2M1
R417			RK73EB2E101J	CHIP R 100 J 1/4W	E3E4
R417			RK73EB2E101J	CHIP R 100 J 1/4W	M2X1E5
R418			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2M1
R418			RK73GB2A100J	CHIP R 10 J 1/10W	E3E4
R418			RK73GB2A100J	CHIP R 10 J 1/10W	M2X1E5
R419			RK73GB2A750J	CHIP R 75 J 1/10W	E1E2M1
R419			RK73GB2A750J	CHIP R 75 J 1/10W	E3E4
R419			RK73GB2A750J	CHIP R 75 J 1/10W	M2X1E5
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	E4K2
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	E5R1K1
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	KM1M2
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	X1E1E2
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	E4K2
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	E5R1K1
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	KM1M2
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	X1E1E2
R440			RK73EB2E101J	CHIP R 100 J 1/4W	E4K2
R440			RK73EB2E101J	CHIP R 100 J 1/4W	E5R1K1
R440			RK73EB2E101J	CHIP R 100 J 1/4W	KM1M2
R440			RK73EB2E101J	CHIP R 100 J 1/4W	X1E1E2
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	E4K2
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	E5R1K1
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	KM1M2
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	X1E1E2
R442			RK73EB2E100J	CHIP R 10 J 1/4W	E4K2
R442			RK73EB2E100J	CHIP R 10 J 1/4W	E5R1K1
R442			RK73EB2E100J	CHIP R 10 J 1/4W	KM1M2
R442			RK73EB2E100J	CHIP R 10 J 1/4W	X1E1E2
R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E4K2
R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E5R1K1
R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	KM1M2
R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	X1E1E2
R444			RK73EB2E100J	CHIP R 10 J 1/4W	E4K2
R444			RK73EB2E100J	CHIP R 10 J 1/4W	E5R1K1
R444			RK73EB2E100J	CHIP R 10 J 1/4W	KM1M2
R444			RK73EB2E100J	CHIP R 10 J 1/4W	X1E1E2
R445			RK73GB2A100J	CHIP R 10 J 1/10W	E4K2
R445			RK73GB2A100J	CHIP R 10 J 1/10W	E5R1K1
R445			RK73GB2A100J	CHIP R 10 J 1/10W	KM1M2
R445			RK73GB2A100J	CHIP R 10 J 1/10W	X1E1E2
R446			RK73GB2A473J	CHIP R 47K J 1/10W	E4K2
R446			RK73GB2A473J	CHIP R 47K J 1/10W	E5R1K1
R446			RK73GB2A473J	CHIP R 47K J 1/10W	KM1M2
R446			RK73GB2A473J	CHIP R 47K J 1/10W	X1E1E2
R447			RK73GB2A104J	CHIP R 100K J 1/10W	E4K2
R447			RK73GB2A104J	CHIP R 100K J 1/10W	E5R1K1
R447			RK73GB2A104J	CHIP R 100K J 1/10W	KM1M2
R447			RK73GB2A104J	CHIP R 100K J 1/10W	X1E1E2
R448			RK73GB2A473J	CHIP R 47K J 1/10W	E4K2
R448			RK73GB2A473J	CHIP R 47K J 1/10W	E5R1K1
R448			RK73GB2A473J	CHIP R 47K J 1/10W	KM1M2
R448			RK73GB2A473J	CHIP R 47K J 1/10W	X1E1E2
R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	E4K2
R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	E5R1K1
R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	KM1M2
R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	X1E1E2
R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4K2
R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	E5R1K1
R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1M2
R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	X1E1E2
R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4K2
R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	E5R1K1
R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1M2
R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	X1E1E2
R456			RK73EB2E103J	CHIP R 10K J 1/4W	E4K2
R456			RK73EB2E103J	CHIP R 10K J 1/4W	E5R1K1
R456			RK73EB2E103J	CHIP R 10K J 1/4W	KM1M2
R456			RK73EB2E103J	CHIP R 10K J 1/4W	X1E1E2
R458			RK73GB2A104J	CHIP R 100K J 1/10W	
R500			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R501			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R502			RK73GB2A223J	CHIP R 22K J 1/10W	
R503			RK73GB2A100J	CHIP R 10 J 1/10W	
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2M1M2

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	E5K1K2
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1E1
R600,601			RK73GB2A470J	CHIP R 47 J 1/10W	
R603,604			RK73GB2A470J	CHIP R 47 J 1/10W	
R605			RK73GB2A333J	CHIP R 33K J 1/10W	
R606			RK73GB2A331J	CHIP R 330 J 1/10W	
R607			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R608			RK73GB2A221J	CHIP R 220 J 1/10W	
R609			RK73GB2A223J	CHIP R 22K J 1/10W	
R610			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R611			RK73GB2A100J	CHIP R 10 J 1/10W	
R700			RK73FB2B101J	CHIP R 100 J 1/8W	
R701			RK73GB2A471J	CHIP R 470 J 1/10W	
R702			RK73GB2A223J	CHIP R 22K J 1/10W	
R705			RK73GB2A223J	CHIP R 22K J 1/10W	
R707			RK73FB2B101J	CHIP R 100 J 1/8W	
R708			RK73GB2A471J	CHIP R 470 J 1/10W	
R709			RK73FB2B101J	CHIP R 100 J 1/8W	
R710			RK73GB2A471J	CHIP R 470 J 1/10W	
R712			RK73GB2A223J	CHIP R 22K J 1/10W	
R716			RK73GB2A223J	CHIP R 22K J 1/10W	
R717			RK73FB2B101J	CHIP R 100 J 1/8W	
R718			RK73GB2A471J	CHIP R 470 J 1/10W	
R719			RK73FB2B101J	CHIP R 100 J 1/8W	
R720			RK73GB2A471J	CHIP R 470 J 1/10W	
R721			RK73GB2A223J	CHIP R 22K J 1/10W	
R724			RK73GB2A223J	CHIP R 22K J 1/10W	
R725			RK73FB2B101J	CHIP R 100 J 1/8W	
R726			RK73GB2A471J	CHIP R 470 J 1/10W	
R800,801			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R802-811			RK73GB2A101J	CHIP R 100 J 1/10W	
R812			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R813			RK73FB2B100J	CHIP R 10 J 1/8W	
R814			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R818			RK73FB2B100J	CHIP R 10 J 1/8W	
R819,820			RK73GB2A103J	CHIP R 10K J 1/10W	
R821			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R822			RK73FB2B821J	CHIP R 820 J 1/8W	
R823			RK73GB2A100J	CHIP R 10 J 1/10W	
W4			R92-1252-05	CHIP R 0 OHM J 1/16W	
W100			R92-1252-05	CHIP R 0 OHM J 1/16W	
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	E5R1
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1M2
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	X1E1E2
W102,103			R92-1252-05	CHIP R 0 OHM J 1/16W	E4
W102,103			R92-1252-05	CHIP R 0 OHM J 1/16W	K1K2E3
W105			R92-2052-05	CHIP R 0 OHM J 1/10W	
W300-303			R92-1252-05	CHIP R 0 OHM J 1/16W	KR1K1
W300-303			R92-1252-05	CHIP R 0 OHM J 1/16W	K2
W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2M1
W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	E3E4
W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	M2X1E5
W304-309			R92-1252-05	CHIP R 0 OHM J 1/16W	E3
W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	E4K2

Ref. No.	Add	New	Parts No.	Description	Destination
W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	E5R1K1
W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1M2
W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	X1E1E2
W800			R92-1252-05	CHIP R 0 OHM J 1/16W	
W802			R92-1252-05	CHIP R 0 OHM J 1/16W	
D1			RB160L-40	DIODE	
D2			UDZS5.6B	ZENER DIODE	
D3			DAP202U	DIODE	
D4			DAN202U	DIODE	
D6,7			1SR154-400	DIODE	
D8			DAN202U	DIODE	
D9			1SR154-400	DIODE	
D10			DAN202U	DIODE	
D11			1SR154-400	DIODE	
D12			UDZS6.2B	ZENER DIODE	
D13			UDZS6.8B	ZENER DIODE	
D15			UDZS6.8B	ZENER DIODE	
D17			RM4ZLF-J1NF	DIODE	
D18			UDZS4.7B	ZENER DIODE	
D19			UDZS6.2B	ZENER DIODE	
D20			DAN202U	DIODE	
D300,301			DAP202U	DIODE	
D302,303			UDZS6.8B	ZENER DIODE	
D304-306			DAP202U	DIODE	
D307			UDZS6.8B	ZENER DIODE	
D400			UDZS4.7B	ZENER DIODE	E1E2M1
D400			UDZS4.7B	ZENER DIODE	E3E4
D400			UDZS4.7B	ZENER DIODE	M2X1E5
D401			DAP202U	DIODE	E1E2M1
D401			DAP202U	DIODE	E3E4
D401			DAP202U	DIODE	M2X1E5
D402,403			UDZS6.2B	ZENER DIODE	E1E2M1
D402,403			UDZS6.2B	ZENER DIODE	E3E4
D402,403			UDZS6.2B	ZENER DIODE	M2X1E5
D404,405			UDZS6.8B	ZENER DIODE	E1E2M1
D404,405			UDZS6.8B	ZENER DIODE	E3E4
D404,405			UDZS6.8B	ZENER DIODE	M2X1E5
D406-413			UDZS6.2B	ZENER DIODE	E1E2M1
D406-413			UDZS6.2B	ZENER DIODE	E3E4
D406-413			UDZS6.2B	ZENER DIODE	M2X1E5
D417			UDZS6.2B	ZENER DIODE	E1E2M1
D417			UDZS6.2B	ZENER DIODE	E3E4
D417			UDZS6.2B	ZENER DIODE	M2X1E5
D418			DA204U	DIODE	
D419-421			UDZS6.2B	ZENER DIODE	E4K2
D419-421			UDZS6.2B	ZENER DIODE	E5R1K1
D419-421			UDZS6.2B	ZENER DIODE	KM1M2
D419-421			UDZS6.2B	ZENER DIODE	X1E1E2
D422,423			UDZS6.8B	ZENER DIODE	E4K2
D422,423			UDZS6.8B	ZENER DIODE	E5R1K1
D422,423			UDZS6.8B	ZENER DIODE	KM1M2
D422,423			UDZS6.8B	ZENER DIODE	X1E1E2
D424-426			UDZS6.2B	ZENER DIODE	E4K2
D424-426			UDZS6.2B	ZENER DIODE	E5R1K1
D424-426			UDZS6.2B	ZENER DIODE	KM1M2

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe)
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D424-426			UDZS6.2B	ZENER DIODE	X1E1E2
D427			UDZS4.7B	ZENER DIODE	E4K2
D427			UDZS4.7B	ZENER DIODE	E5R1K1
D427			UDZS4.7B	ZENER DIODE	KM1M2
D427			UDZS4.7B	ZENER DIODE	X1E1E2
D430			DAP202U	DIODE	E4K2
D430			DAP202U	DIODE	E5R1K1
D430			DAP202U	DIODE	KM1M2
D430			DAP202U	DIODE	X1E1E2
D431			1SS355	DIODE	E4K2
D431			1SS355	DIODE	E5R1K1
D431			1SS355	DIODE	KM1M2
D431			1SS355	DIODE	X1E1E2
D500			UDZS9.1B	ZENER DIODE	
D600,601			DAP202U	DIODE	
D704-707			DAP202U	DIODE	
D710,711			DAP202U	DIODE	
D712			DA204U	DIODE	
D802-806			CVS10A120M	VARISTOR	
D808-812			CVS10A120M	VARISTOR	
D816			UDZS10B	ZENER DIODE	
IC1			M5237ML-CF0J	ANALOGUE IC	
IC2			R1114N331B-TR	ANALOGUE IC (3.3V LF)	
IC100			74AHC1G08GW	MOS-IC	
IC101			S-80835CNNB-G	MOS-IC	
IC103			W05-1387-00	ROM IC	KK1K2
IC103			W05-1388-00	ROM IC	E1E2E3
IC103			W05-1388-00	ROM IC	E4E5
IC103			W05-1389-00	ROM IC	M1M2
IC103			W05-1390-00	ROM IC	R1X1
IC103			W05-1391-00	ROM IC	V
IC104		✻	30878MJBA21GP	MICROCONTROLLER IC	
IC105		✻	74AHCT1G08GW	MOS-IC	E4
IC105		✻	74AHCT1G08GW	MOS-IC	K1K2E3
IC302			E-TDA7415CB	ANALOGUE IC	
IC303,304			TC4052BFT	MOS-IC	
IC400			NJM2794RB2ZB	ANALOGUE IC	E3
IC400,401			NJM2794RB2ZB	ANALOGUE IC	E1E2M1
IC400,401			NJM2794RB2ZB	ANALOGUE IC	E4
IC400,401			NJM2794RB2ZB	ANALOGUE IC	M2X1E5
IC401			NJM2794RB2ZB	ANALOGUE IC	KR1K1
IC401			NJM2794RB2ZB	ANALOGUE IC	K2
IC402			TC7WHU04FU-F	MOS-IC	E1E2M1
IC402			TC7WHU04FU-F	MOS-IC	E3E4
IC402			TC7WHU04FU-F	MOS-IC	M2X1E5
IC500			E-TDA7478AD	ANALOGUE IC	E2M1M2
IC500			E-TDA7478AD	ANALOGUE IC	E3E4
IC500			E-TDA7478AD	ANALOGUE IC	E5K1K2
IC500			E-TDA7478AD	ANALOGUE IC	KR1E1
IC600			E-TDA7850A	ANALOGUE IC	
Q1			KTA1046-P	TRANSISTOR	
Q2			DTA124EUA	DIGITAL TRANSISTOR	
Q3			2SB1188 (R)	TRANSISTOR	
Q4			2SA1576A	TRANSISTOR	
Q5			KTA1046-P	TRANSISTOR	
Q6			DTC143EUA	DIGITAL TRANSISTOR	
Q7			DTC144EUA	DIGITAL TRANSISTOR	
Q8			2SC4081	TRANSISTOR	
Q9			DTA114EUA	DIGITAL TRANSISTOR	
Q10			2SA1576A	TRANSISTOR	
Q11			DTC143ZUA	DIGITAL TRANSISTOR	
Q12			2SB1689	TRANSISTOR	
Q13			DTC124EUA	DIGITAL TRANSISTOR	
Q14			2SB1188 (R)	TRANSISTOR	KR1M1
Q14			2SB1188 (R)	TRANSISTOR	K2
Q14			2SB1188 (R)	TRANSISTOR	M2X1K1
Q15			DTC144EUA	DIGITAL TRANSISTOR	
Q16,17			2SC4081	TRANSISTOR	KR1M1
Q16,17			2SC4081	TRANSISTOR	K2
Q16,17			2SC4081	TRANSISTOR	M2X1K1
Q17			2SC4081	TRANSISTOR	E1E2E5
Q17			2SC4081	TRANSISTOR	E3E4
Q20			2SC4081	TRANSISTOR	
Q21			DTC144EUA	DIGITAL TRANSISTOR	
Q22			2SB1689	TRANSISTOR	
Q23			2SC4081	TRANSISTOR	
Q24			DTA124EUA	DIGITAL TRANSISTOR	
Q25			DTC143ZUA	DIGITAL TRANSISTOR	
Q100			DTC144EUA	DIGITAL TRANSISTOR	E4
Q100			DTC144EUA	DIGITAL TRANSISTOR	K1K2E3
Q101			2SA1576A	TRANSISTOR	E4
Q101			2SA1576A	TRANSISTOR	K1K2E3
Q102			DTA114EUA	DIGITAL TRANSISTOR	E4
Q102			DTA114EUA	DIGITAL TRANSISTOR	K1K2E3
Q103,104			DTC114TUA	DIGITAL TRANSISTOR	
Q105			DTA114TUA	DIGITAL TRANSISTOR	
Q107			DTA114EUA	DIGITAL TRANSISTOR	
Q108			2SC4081	TRANSISTOR	
Q110			DTA114YUA	DIGITAL TRANSISTOR	
Q111			2SC4081	TRANSISTOR	
Q112			DTC143ZUA	DIGITAL TRANSISTOR	
Q113-115			2SC4081	TRANSISTOR	
Q116			2SA1576A	TRANSISTOR	
Q117			2SC4081	TRANSISTOR	
Q118			2SA1576A	TRANSISTOR	
Q300,301			DTC143ZUA	DIGITAL TRANSISTOR	
Q303-305			DTC143ZUA	DIGITAL TRANSISTOR	E1E2M1
Q303-305			DTC143ZUA	DIGITAL TRANSISTOR	E3E4
Q303-305			DTC143ZUA	DIGITAL TRANSISTOR	M2X1E5
Q304,305			DTC143ZUA	DIGITAL TRANSISTOR	KR1K1
Q304,305			DTC143ZUA	DIGITAL TRANSISTOR	K2
Q403			DTC143ZUA	DIGITAL TRANSISTOR	E4K2
Q403			DTC143ZUA	DIGITAL TRANSISTOR	E5R1K1
Q403			DTC143ZUA	DIGITAL TRANSISTOR	KM1M2
Q403			DTC143ZUA	DIGITAL TRANSISTOR	X1E1E2
Q406			TPC8110-F	FET	E4K2
Q406			TPC8110-F	FET	E5R1K1
Q406			TPC8110-F	FET	KM1M2
Q406			TPC8110-F	FET	X1E1E2
Q407			DTA114YUA	DIGITAL TRANSISTOR	E4K2

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q407			DTA114YUA	DIGITAL TRANSISTOR	E5R1K1
Q407			DTA114YUA	DIGITAL TRANSISTOR	KM1M2
Q407			DTA114YUA	DIGITAL TRANSISTOR	X1E1E2
Q500			DTC144EUA	DIGITAL TRANSISTOR	
Q501			DTA144EUA	DIGITAL TRANSISTOR	
Q502			2SB1449 (R)-E	TRANSISTOR	
Q503			2SC4081	TRANSISTOR	
Q504			DTC143ZUA	DIGITAL TRANSISTOR	
Q505			2SA1577	TRANSISTOR	
Q700-702			DTC143ZUA	DIGITAL TRANSISTOR	
Q703			DTC143TUA	DIGITAL TRANSISTOR	
Q704			DTA144EUA	DIGITAL TRANSISTOR	
Q705,706			DTC143TUA	DIGITAL TRANSISTOR	
Q707			DTA144EUA	DIGITAL TRANSISTOR	
Q708,709			DTC143TUA	DIGITAL TRANSISTOR	
Q710			DTA144EUA	DIGITAL TRANSISTOR	
Q711			DTC143TUA	DIGITAL TRANSISTOR	
Q800			DTA144EUA	DIGITAL TRANSISTOR	
Q801			DTC144EUA	DIGITAL TRANSISTOR	
Q802			KTA1046-P	TRANSISTOR	
Q803			2SC4081	TRANSISTOR	
Q804			DTA124XUA	DIGITAL TRANSISTOR	
TH600			PRF18BE471QS2	POSITIVE RESISTOR	
A500			X86-4030-11	FRONT-END UNIT	KR1X1
A500			X86-4030-11	FRONT-END UNIT	K1K2
A500			X86-4032-70	FRONT-END UNIT	E1E2M1
A500			X86-4032-70	FRONT-END UNIT	E4
A500			X86-4032-70	FRONT-END UNIT	M2E5E3
A501		✻	X89-3062-70	DAUGHTER UNIT	E3E4

VIDEO UNIT (X35-4890-10)

D712,713		✻	B30-3201-05	LED (RGB F3)			
D721			B30-1566-05	LED (1608,RED)			
D722			B30-1713-05	LED (SR,TS)			
D733			B30-1566-05	LED (1608,RED)			
C1			CK73DF1E106Z	CHIP C	10UF	Z	
C2-5			CK73GB1H103K	CHIP C	0.010UF	K	
C6			CK73GB0J225K	CHIP C	2.2UF	K	
C7			CK73GB1E183K	CHIP C	0.018UF	K	
C8			CK73GB0J225K	CHIP C	2.2UF	K	
C9			CK73GB1A474K	CHIP C	0.47UF	K	
C10			CK73GB1H152K	CHIP C	1500PF	K	
C11			CK73GB0J225K	CHIP C	2.2UF	K	
C12			CK73GB1H103K	CHIP C	0.010UF	K	
C13,14			CK73GB1H473K	CHIP C	0.047UF	K	
C15			C93-1383-05	CHIP C	220PF	F	
C16,17			CK73DF1E106Z	CHIP C	10UF	Z	
C19-21			C93-1283-05	CHIP C	1.0UF	K	
C22			C93-1270-05	CHIP C	3300PF	K	
C23			C93-1273-05	CHIP C	15PF	J	
C24			C93-1278-05	CHIP C	0.018UF	K	
C25			C93-1283-05	CHIP C	1.0UF	K	
C102			CK73EB0J226K	CHIP C	22UF	K	
C103			CK73FB0J106K	CHIP C	10UF	K	
C104			CK73GB1H104K	CHIP C	0.10UF	K	
C105			CK73GB1H103K	CHIP C	0.010UF	K	
C107			CK73GB1H104K	CHIP C	0.10UF	K	
C108			CK73DF1E106Z	CHIP C	10UF	Z	
C109			CK73GB1H103K	CHIP C	0.010UF	K	
C112			CK73FB1E154K	CHIP C	0.15UF	K	
C113			CK73GB1H104K	CHIP C	0.10UF	K	
C114			CC73GCH1H151J	CHIP C	150PF	J	
C115,116			CK73GB1C224K	CHIP C	0.22UF	K	
C117			CC73GCH1H151J	CHIP C	150PF	J	
C118			CK73EB1E225K	CHIP C	2.2UF	K	
C119			CE32AU1C220M	CHIP EL	22UF	16WV	
C120			CK73GB1H103K	CHIP C	0.010UF	K	
C121			CK73FB1C105K	CHIP C	1.0UF	K	
C122-124			CK73EB1C106K	CHIP C	10UF	K	
C125			CK73GB1H103K	CHIP C	0.010UF	K	
C126,127			CK73GB1H104K	CHIP C	0.10UF	K	
C128			CK73EB1C106K	CHIP C	10UF	K	
C200			CK73GB1A105K	CHIP C	1.0UF	K	
C201			CK73FB0J106K	CHIP C	10UF	K	
C202			CK73GB1H104K	CHIP C	0.10UF	K	
C203			CK73GB1A105K	CHIP C	1.0UF	K	
C204			CK73FB0J106K	CHIP C	10UF	K	
C205			CK73GB1H104K	CHIP C	0.10UF	K	
C206			CK73EB1E225K	CHIP C	2.2UF	K	
C207,208			CC73GCH1H270J	CHIP C	27PF	J	
C210-218			CK73GB1H104K	CHIP C	0.10UF	K	
C219			CC73GCH1H560J	CHIP C	56PF	J	
C220			CK73FB0J106K	CHIP C	10UF	K	
C221-224			CK73GB1H104K	CHIP C	0.10UF	K	
C225			CK73DF1E106Z	CHIP C	10UF	Z	
C226,227			CK73GB1H103K	CHIP C	0.010UF	K	
C228			CK73DF1E106Z	CHIP C	10UF	Z	
C229-246			CK73GB1H104K	CHIP C	0.10UF	K	
C247			CC73GCH1H101J	CHIP C	100PF	J	
C248			CK73GB1H103K	CHIP C	0.010UF	K	
C249-251			CK73GB1H104K	CHIP C	0.10UF	K	
C252			CK73GB1A105K	CHIP C	1.0UF	K	
C253			CK73GB1H102K	CHIP C	1000PF	K	
C254			CK73GB1H104K	CHIP C	0.10UF	K	
C255			CK73GB1A105K	CHIP C	1.0UF	K	
C256,257			CK73GB1H104K	CHIP C	0.10UF	K	
C260			CC73GCH1H101J	CHIP C	100PF	J	
C261,262			CK73FB0J106K	CHIP C	10UF	K	
C263			CK73DF1E106Z	CHIP C	10UF	Z	
C264			CK73EB1E225K	CHIP C	2.2UF	K	
C266			CK73GB1H104K	CHIP C	0.10UF	K	
C267-270			CC73GCH1H101J	CHIP C	100PF	J	
C271			CK73EB1E106K	CHIP C	10UF	K	
C272-275			CK73GB1H104K	CHIP C	0.10UF	K	
C276,277			CK73GB1A105K	CHIP C	1.0UF	K	
C278			CK73GB1H104K	CHIP C	0.10UF	K	
C279			CK73DF1E106Z	CHIP C	10UF	Z	
C405			CC73GCH1H330J	CHIP C	33PF	J	
C451			CC73GCH1H560J	CHIP C	56PF	J	
C458			CC73GCH1H102J	CHIP C	1000PF	J	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe)
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	Add	New	Parts No.	Description	Destination
C459			CK73EB1C106K	CHIP C 10UF K	
C460			CK73GB1H103K	CHIP C 0.010UF K	
C462			CK73GB1H103K	CHIP C 0.010UF K	
C464			CK73GB1H103K	CHIP C 0.010UF K	
C466			CE32BJ1C220M	CHIP EL 22UF 16WV	
C467			CK73GB1H103K	CHIP C 0.010UF K	
C500			CK73FB0J106K	CHIP C 10UF K	
C501,502			CK73GB1H103K	CHIP C 0.010UF K	
C503			CK73GB1H104K	CHIP C 0.10UF K	
C504			CK73GB1A105K	CHIP C 1.0UF K	
C601			CK73GB1H104K	CHIP C 0.10UF K	
C608			CK73FB0J106K	CHIP C 10UF K	
C610,611			CK73GB1H102K	CHIP C 1000PF K	
C701			CK73EB0J226K	CHIP C 22UF K	
CN1		✻	E41-2874-05	PIN ASSY	
CN3		✻	E41-2979-05	FLAT CABLE CONNECTOR	
CN4			E41-2204-05	FLAT CABLE CONNECTOR	
CN5			E41-2088-05	FLAT CABLE CONNECTOR	
CN6		✻	E41-2953-05	FLAT CABLE CONNECTOR	
CN7		✻	E41-2301-05	FLAT CABLE CONNECTOR	
J1			E59-0854-05	RECTANGULAR PLUG	
J2			E11-1001-05	3.5D PHONE JACK	
F1			F53-0297-05	FUSE (UL,CSA) 1.6A	
F100			F53-0280-05	FUSE 0.63A	
L1			L19-0788-05	TRANSFORMER FOR CONVERTER	
L2			L33-2316-05	CHOKE COIL	
L100			L33-2316-05	CHOKE COIL	
L101			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)	
L102			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L103,104			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)	
L105,106			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L200,201			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L202-206			L92-0319-05	CHIP FERRITE	
L207			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L208			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)	
L209-212			L92-0319-05	CHIP FERRITE	
L401			L41-2205-33	SMALL FIXED INDUCTOR (22U)	
L450			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L500			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L600			L92-0319-05	CHIP FERRITE	
X200			L77-2965-05	CRYSTAL RESONATOR (12.000MHZ)	
R1			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R4			RK73GB2A153J	CHIP R 15K J 1/10W	
R5			RK73GB2A220J	CHIP R 22 J 1/10W	
R6			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R7			RK73GH2A433D	CHIP R 43K D 1/10W	
R9			RK73GB2A220J	CHIP R 22 J 1/10W	
R10			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R11			RK73GH2A513D	CHIP R 51K D 1/10W	
R12			RK73GB2A101J	CHIP R 100 J 1/10W	
R13			RK73GB2A104J	CHIP R 100K J 1/10W	
R14			RK73GH2A204D	CHIP R 200K D 1/10W	
R15			RK73GB2A105J	CHIP R 1.0M J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R16			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R17			RK73GH2A563D	CHIP R 56K D 1/10W	
R18			RK73GH2A824D	CHIP R 820K D 1/10W	
R19-21			RK73GB2A220J	CHIP R 22 J 1/10W	
R22			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R23			RK73GB2A220J	CHIP R 22 J 1/10W	
R25			RK73GH2A471D	CHIP R 470 D 1/10W	
R26,27			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R100			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R102			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R104			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R107			RK73GH2A124D	CHIP R 120K D 1/10W	
R108			RK73GH2A113D	CHIP R 11K D 1/10W	
R109			RK73GH2A104D	CHIP R 100K D 1/10W	
R110			RK73GH2A113D	CHIP R 11K D 1/10W	
R111			RK73GB2A473J	CHIP R 47K J 1/10W	
R112			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R114			RK73GH2A513D	CHIP R 51K D 1/10W	
R115,116			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R117			RK73GH2A113D	CHIP R 11K D 1/10W	
R201			RK73GB2A513J	CHIP R 51K J 1/10W	
R203			RK73GB2A563J	CHIP R 56K J 1/10W	
R204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R205-207			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R208			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R210			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R211			RK73GH2A222D	CHIP R 2.2K D 1/10W	
R212			RK73GH2A153D	CHIP R 15K D 1/10W	
R213			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R214,215			RK73GB2A101J	CHIP R 100 J 1/10W	
R216			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R217-221			RK73GB2A101J	CHIP R 100 J 1/10W	
R222			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R223-225			RK73GB2A101J	CHIP R 100 J 1/10W	
R226,227			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R228			RK73GB2A300J	CHIP R 30 J 1/10W	
R231			RK73GB2A101J	CHIP R 100 J 1/10W	
R233,234			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R235			RK73GB2A101J	CHIP R 100 J 1/10W	
R237			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R240			RK73GB2A820J	CHIP R 82 J 1/10W	
R241,242			RK73FB2B470J	CHIP R 47 J 1/8W	
R243			RK73GB2A473J	CHIP R 47K J 1/10W	
R244-246			RK73GB2A101J	CHIP R 100 J 1/10W	
R248			RK73GB2A473J	CHIP R 47K J 1/10W	
R251			RK73GB2A103J	CHIP R 10K J 1/10W	
R253-259			RK73GB2A101J	CHIP R 100 J 1/10W	
R260			RK73GH2A513D	CHIP R 51K D 1/10W	
R261			RK73GH2A433D	CHIP R 43K D 1/10W	
R262			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R263			RK73GB2A103J	CHIP R 10K J 1/10W	
R264-266			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R267			RK73GB2A103J	CHIP R 10K J 1/10W	
R268			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R269			RK73GB2A101J	CHIP R 100 J 1/10W	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R270			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R271,272			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R273			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R274-277			RK73GB2A473J	CHIP R 47K J 1/10W	
R278,279			RK73GB2A101J	CHIP R 100 J 1/10W	
R280-283			RK73GB2A103J	CHIP R 10K J 1/10W	
R400			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R401			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R402			RK73GB2A101J	CHIP R 100 J 1/10W	
R406			RK73GB2A203J	CHIP R 20K J 1/10W	
R407			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R408			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R410			RK73GB2A203J	CHIP R 20K J 1/10W	
R458			RK73GH2A202D	CHIP R 2.0K D 1/10W	
R459			RK73GH2A182D	CHIP R 1.8K D 1/10W	
R460			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R461			RK73GH2A473D	CHIP R 47K D 1/10W	
R462			RK73GH2A333D	CHIP R 33K D 1/10W	
R464			RK73GB2A103J	CHIP R 10K J 1/10W	
R470			RK73GB2A103J	CHIP R 10K J 1/10W	
R476			RK73GB2A103J	CHIP R 10K J 1/10W	
R500,501			RK73GB2A333J	CHIP R 33K J 1/10W	
R502-505			RK73EB2E100J	CHIP R 10 J 1/4W	
R600,601			RK73GB2A103J	CHIP R 10K J 1/10W	
R602,603			RK73EB2E100J	CHIP R 10 J 1/4W	
R604,605			RK73GB2A103J	CHIP R 10K J 1/10W	
R608			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R609,610			RK73GB2A303J	CHIP R 30K J 1/10W	
R611,612			RK73GB2A103J	CHIP R 10K J 1/10W	
R613			RK73GB2A750J	CHIP R 75 J 1/10W	
R614			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R615,616			RK73GB2A103J	CHIP R 10K J 1/10W	
R617			RK73EB2E100J	CHIP R 10 J 1/4W	
R618			RK73GB2A103J	CHIP R 10K J 1/10W	
R619			RK73EB2E100J	CHIP R 10 J 1/4W	
R620			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R621			RK73EB2E100J	CHIP R 10 J 1/4W	
R622			RK73GB2A103J	CHIP R 10K J 1/10W	
R623-628			RK73EB2E100J	CHIP R 10 J 1/4W	
R629			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R630			RK73EB2E100J	CHIP R 10 J 1/4W	
R632			RK73GB2A100J	CHIP R 10 J 1/10W	
R633			RK73EB2E101J	CHIP R 100 J 1/4W	
R700			RK73FB2B101J	CHIP R 100 J 1/8W	
R701			RK73GB2A221J	CHIP R 220 J 1/10W	
R706			RK73GB2A183J	CHIP R 18K J 1/10W	
R707			RK73GH2A471D	CHIP R 470 D 1/10W	
R708		✻	RK73GH2A511D	CHIP R 510 D 1/10W	
R709			RK73GH2A361D	CHIP R 360 D 1/10W	
R710			RK73GB2A681J	CHIP R 680 J 1/10W	
R711			RK73GH2A201D	CHIP R 200 D 1/10W	
R712			RK73GH2A561D	CHIP R 560 D 1/10W	
R713			RK73GH2A201D	CHIP R 200 D 1/10W	
R716			RK73GB2A151J	CHIP R 150 J 1/10W	
VR200		✻	R32-0350-05	SEMI FIXED VARIABLE RESISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
S600			S70-0901-05	TACT SWITCH	
S701-704			S70-0901-05	TACT SWITCH	
S601		✻	T99-0482-05	ROTARY ENCODER	
D1			UDZS5.6B	ZENER DIODE	
D2,3			1SS355	DIODE	
D4			UDZS5.6B	ZENER DIODE	
D5			MA2S784-F	DIODE	
D6			UDZS5.6B	ZENER DIODE	
D7,8			DA204U	DIODE	
D9			CVS10A120M	VARISTOR	
D100			EP05Q06	DIODE	
D101-103			EP05Q04	DIODE	
D201,202			CVL10C270M300	VARISTOR	
D500-503			UDZS6.2B	ZENER DIODE	
D601-606			CVS10A180M	VARISTOR	
D608-611			CVS10A180M	VARISTOR	
D612			DA204U	DIODE	
D613			CVL10C270M300	VARISTOR	
D700			UDZS6.2B	ZENER DIODE	
D709-711			CVS10A180M	VARISTOR	
D714-716			CVS10A180M	VARISTOR	
D719			CVS10A180M	VARISTOR	
D725			CVS10A180M	VARISTOR	
D734			CVS10A180M	VARISTOR	
IC1			OZ964ISN-C-SN	ANALOGUE IC	
IC101		✻	74AHC1G04GW	MOS-IC	
IC102			LT1947-PBF	ANALOGUE IC	
IC200			S-1112B25MCG	ANALOGUE IC	
IC201			TA75W558FU-F	ANALOGUE IC	
IC202			TC7WH74FU-F	MOS-IC	
IC203			MST7988LA-ALF	MOS-IC	
IC204			74AHC1G32GW	MOS-IC	
IC205		✻	XC6201P532MR	ANALOGUE IC	
IC206		✻	74LVC3G34DP	MOS-IC	
IC207		✻	AT25F2048	ROM IC	
IC208			XC6201P502MR	ANALOGUE IC	
IC501		✻	74AHCT1G08GW	MOS-IC	
IC700			PIC95603	ANALOGUE IC	
Q1,2			2SC4081	TRANSISTOR	
Q3			DTC143ZUA	DIGITAL TRANSISTOR	
Q4,5			SI5504DC-E3	DUAL FET	
Q100			2SC4081	TRANSISTOR	
Q101			2SA1576A	TRANSISTOR	
Q201			2SC4097	TRANSISTOR	
Q202			2SA1577	TRANSISTOR	
Q400,401			2SA1576A	TRANSISTOR	
Q450			DTC123JUA	DIGITAL TRANSISTOR	
Q451			UMZ1N	TRANSISTOR	
Q500,501			DTC123JUA	DIGITAL TRANSISTOR	
Q502			DTA123JUA	DIGITAL TRANSISTOR	
Q503			DTC143ZUA	DIGITAL TRANSISTOR	
Q504			DTA123JUA	DIGITAL TRANSISTOR	
Q600-604			2SC4081	TRANSISTOR	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical components.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	Add	New	Parts No.	Description			Destination
Q606			DTA144EUA	DIGITAL TRANSISTOR			
DVD UNIT (X37-1100-03)							
C3			CK73HB1A104K	CHIP C	0.10UF	K	
C4			CC73HCH1H471J	CHIP C	470PF	J	
C5-7			CK73HB1E103K	CHIP C	0.010UF	K	
C8			CC73HCH1H471J	CHIP C	470PF	J	
C9			CK73HB0J105K	CHIP C	1.0UF	K	
C10			CK73GB0J475K	CHIP C	4.7UF	K	
C11,12			CK73HB1E103K	CHIP C	0.010UF	K	
C13			CK73HB1H472K	CHIP C	4700PF	K	
C14			CK73GB0J106M	CHIP C	10UF	M	
C15			CK73HB1A104K	CHIP C	0.10UF	K	
C16			CK73GB0J106M	CHIP C	10UF	M	
C17			CK73GB0J475K	CHIP C	4.7UF	K	
C18			CK73FB0J226M	CHIP C	22UF	M	
C21			CK73GB0J106M	CHIP C	10UF	M	
C22,23			CK73GB0J475K	CHIP C	4.7UF	K	
C50			CK73HB1E103K	CHIP C	0.010UF	K	
C51			CK73HB1A104K	CHIP C	0.10UF	K	
C52			CK73HB1E223K	CHIP C	0.022UF	K	
C53			CC73HCH1H470J	CHIP C	47PF	J	
C54			CC73HCH1H102J	CHIP C	1000PF	J	
C55			CC73HCH1H100D	CHIP C	10PF	D	
C56			CC73HCH1H102J	CHIP C	1000PF	J	
C57			CC73HCH1E681J	CHIP C	680PF	J	
C58			CK73HB1H682K	CHIP C	6800PF	K	
C60,61			CK73HB1A104K	CHIP C	0.10UF	K	
C62			CC73HCH1H102J	CHIP C	1000PF	J	
C63			CC73HCH1H331J	CHIP C	330PF	J	
C64			CK73HB1H222K	CHIP C	2200PF	K	
C65			CC73HCH1E681J	CHIP C	680PF	J	
C66			CK73HB1H152K	CHIP C	1500PF	K	
C67,68			CC73HCH1H102J	CHIP C	1000PF	J	
C69-72			CC73HCH1H151J	CHIP C	150PF	J	
C73-82			CK73HB1A104K	CHIP C	0.10UF	K	
C83			C93-1228-05	CHIP C	1UF	M	
C84			CK73HB0J105K	CHIP C	1.0UF	K	
C85			CK73HB1A104K	CHIP C	0.10UF	K	
C86			C93-1228-05	CHIP C	1UF	M	
C90			CK73HB1E103K	CHIP C	0.010UF	K	
C92			C93-1228-05	CHIP C	1UF	M	
C93-95			CK73HB1A104K	CHIP C	0.10UF	K	
C97			CK73HB1A104K	CHIP C	0.10UF	K	
C99			CK73HB1A104K	CHIP C	0.10UF	K	
C100			CK73FB0J226M	CHIP C	22UF	M	
C101			CK73GB0J475K	CHIP C	4.7UF	K	
C103,104			CK73FB0J226M	CHIP C	22UF	M	
C120,121			CK73HB1E223K	CHIP C	0.022UF	K	
C143,144			CC73HCH1H120J	CHIP C	12PF	J	
C202			CK73FB0J226M	CHIP C	22UF	M	
C207,208			CK73HB1A104K	CHIP C	0.10UF	K	
C210			CK73HB1A104K	CHIP C	0.10UF	K	
C212			CK73HB1A104K	CHIP C	0.10UF	K	
C213			CK73HB1H332K	CHIP C	3300PF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C214,215			CK73HB1A104K	CHIP C	0.10UF	K	
C216			CC73HCH1H471J	CHIP C	470PF	J	
C217			CK73HB1A104K	CHIP C	0.10UF	K	
C218			CK73HB1C473K	CHIP C	0.047UF	K	
C219-224			CK73HB1A104K	CHIP C	0.10UF	K	
C225			CK73GB0J475K	CHIP C	4.7UF	K	
C227			CK73FB0J226M	CHIP C	22UF	M	
C434			CK73GB0J106M	CHIP C	10UF	M	
C435			CK73HB1E103K	CHIP C	0.010UF	K	
C436,437			CK73HB1A104K	CHIP C	0.10UF	K	
C440-442			CK73FB0J226M	CHIP C	22UF	M	
C444			CC73HCH1H102J	CHIP C	1000PF	J	
C445			CK73HB1E103K	CHIP C	0.010UF	K	
C446			CC73HCH1H101J	CHIP C	100PF	J	
C447,448			CC73HCH1H102J	CHIP C	1000PF	J	
C449,450			CK73HB1H472K	CHIP C	4700PF	K	
C451			CC73HCH1H102J	CHIP C	1000PF	J	
CN1			E41-2594-05	FLAT CABLE CONNECTOR			
CN2			E41-2603-05	FLAT CABLE CONNECTOR			
CN3			E41-2596-05	FLAT CABLE CONNECTOR			
P2			E23-0766-05	TERMINAL			
P8			E23-0766-05	TERMINAL			
L1			L92-0365-05	CHIP FERRITE			
L5			L92-0365-05	CHIP FERRITE			
L6			L92-0617-05	CHIP FERRITE			
X1			L77-2870-05	CRYSTAL RESONATOR			
CP2-4			RK74HB1J103J	CHIP-COM	10K	J 1/16W	
CP5-9			RK74HB1J330J	CHIP-COM	33	J 1/16W	
CP10			RK74HB1J820J	CHIP-COM	82	J 1/16W	
CP11			RK74HB1J103J	CHIP-COM	10K	J 1/16W	
R1			RK73HB1J103J	CHIP R	10K	J 1/16W	
R3,4			RK73HB1J103J	CHIP R	10K	J 1/16W	
R5,6			RK73HH1J123D	CHIP R	12K	D 1/16W	
R7			RK73HH1J333D	CHIP R	33K	D 1/16W	
R8,9			RK73HB1J103J	CHIP R	10K	J 1/16W	
R10			RK73HB1J163J	CHIP R	16K	J 1/16W	
R11			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R13			RK73HB1J103J	CHIP R	10K	J 1/16W	
R16			RK73HB1J103J	CHIP R	10K	J 1/16W	
R17			RK73HB1J271J	CHIP R	270	J 1/16W	
R18			RK73HH1J270D	CHIP R	27	D 1/16W	
R19			RK73HB1J301J	CHIP R	300	J 1/16W	
R21,22			RK73HH1J103D	CHIP R	10K	D 1/16W	
R26,27			R92-5146-05	CHIP R	1.0	D 1/4W	
R28,29			R92-5147-05	CHIP R	1.2	D 1/4W	
R31			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R50,51			RK73HB1J510J	CHIP R	51	J 1/16W	
R52			RK73HH1J153D	CHIP R	15K	D 1/16W	
R53			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R54			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R55			RK73HB1J103J	CHIP R	10K	J 1/16W	
R56			RK73HH1J472D	CHIP R	4.7K	D 1/16W	
R57,58			RK73HB1J202J	CHIP R	2.0K	J 1/16W	
R59,60			RK73HB1J103J	CHIP R	10K	J 1/16W	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

PARTS LIST

DVD UNIT (X37-1100-03)

Ref. No.	Add	New	Parts No.	Description				Destination
R63			RK73HB1J103J	CHIP R	10K	J	1/16W	
R64,65			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R81			RK73HB1J103J	CHIP R	10K	J	1/16W	
R83,84			RK73HB1J473J	CHIP R	47K	J	1/16W	
R85			RK73HB1J223J	CHIP R	22K	J	1/16W	
R86			RK73HB1J103J	CHIP R	10K	J	1/16W	
R87			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R88			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R89,90			RK73HB1J123J	CHIP R	12K	J	1/16W	
R91			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R92			RK73HB1J273J	CHIP R	27K	J	1/16W	
R96			RK73HB1J103J	CHIP R	10K	J	1/16W	
R98			RK73HB1J202J	CHIP R	2.0K	J	1/16W	
R101			RK73HH1J273D	CHIP R	27K	D	1/16W	
R102			RK73GB2A470J	CHIP R	47	J	1/10W	
R105			RK73HB1J103J	CHIP R	10K	J	1/16W	
R113			RK73HB1J153J	CHIP R	15K	J	1/16W	
R120			RK73HB1J103J	CHIP R	10K	J	1/16W	
R121			RK73HB1J820J	CHIP R	82	J	1/16W	
R122			RK73HB1J103J	CHIP R	10K	J	1/16W	
R123			RK73HB1J330J	CHIP R	33	J	1/16W	
R124-126			RK73HB1J820J	CHIP R	82	J	1/16W	
R150,151			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R152,153			RK73HB1J104J	CHIP R	100K	J	1/16W	
R154,155			RK73HB1J103J	CHIP R	10K	J	1/16W	
R158,159			RK73HB1J1R0J	CHIP R	1.0	J	1/16W	
R160			R92-3350-05	CHIP R	2.2	F	1/10W	
R162,163			RK73HB1J104J	CHIP R	100K	J	1/16W	
R164,165			RK73HH1J101D	CHIP R	100	D	1/16W	
R166			RK73HB1J225J	CHIP R	2.2M	J	1/16W	
R167			RK73HH1J113D	CHIP R	11K	D	1/16W	
R168			RK73HH1J273D	CHIP R	27K	D	1/16W	
R169			RK73HB1J125J	CHIP R	1.2M	J	1/16W	
R255			R92-5112-05	CHIP R	4.7	F	1/10W	
R256			RK73HH1J111D	CHIP R	110	D	1/16W	
R257			RK73HH1J202D	CHIP R	2.0K	D	1/16W	
R258,259			RK73HB1J103J	CHIP R	10K	J	1/16W	
R260			RK73HH1J132D	CHIP R	1.3K	D	1/16W	
R261			RK73HH1J203D	CHIP R	20K	D	1/16W	
R262			RK73HB1J821J	CHIP R	820	J	1/16W	
R263			RK73HB1J242J	CHIP R	2.4K	J	1/16W	
R265-268			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R270			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R271			RK73HB1J471J	CHIP R	470	J	1/16W	
R272			RK73HH1J682D	CHIP R	6.8K	D	1/16W	
R273			RK73HH1J122D	CHIP R	1.2K	D	1/16W	
R274			RK73HH1J682D	CHIP R	6.8K	D	1/16W	
R275			RK73HH1J122D	CHIP R	1.2K	D	1/16W	
R278			R92-5112-05	CHIP R	4.7	F	1/10W	
R279			RK73HH1J102D	CHIP R	1.0K	D	1/16W	
R280			RK73HB1J4R7J	CHIP R	4.7	J	1/16W	
R284			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R285-287			RK73GB2A000J	CHIP R	0.0	J	1/10W	
S1			S68-0911-15	PUSH SWITCH				
S2			S68-0914-05	PUSH SWITCH				
D1			1SS402-F	DIODE				
D5,6			015AZ5.1-F (Y)	ZENER DIODE				
D8			1SS387-F	DIODE				
IC1			AN22022ABV	ANALOGUE IC				
IC3			-	ROM IC				
IC4			MN103S71F	MOS-IC				
IC5			S1000N28I4T1G	ANALOGUE IC				
IC7			TA48S033AF-Q	ANALOGUE IC				
IC8			S-80812CNPF-G	ANALOGUE IC				
IC9			TA48S015AF-Q	ANALOGUE IC				
IC10			AN41250A-VB	ANALOGUE IC				
IC11			-	ROM IC				
IC12			NJU7042	ANALOGUE IC				
Q1-4			DTA143XE	TRANSISTOR				
Q5,6			2SK3019	FET				
Q12,13			2SB1709	TRANSISTOR				
Q14			SSM3J15FU-F	FET				
Q15			DTA143ZE	TRANSISTOR				
Q18			DTA143ZE	TRANSISTOR				
Q19			DTC114EE	TRANSISTOR				

DAUGHTER UNIT (X89-3062-70)

C1			CC73GCH1H180J	CHIP C	18PF	J		E3E4
C2			CC73GCH1H070D	CHIP C	7.0PF	D		E3E4
C3			CC73GCH1H150J	CHIP C	15PF	J		E3E4
C4			CC73GCH1H180J	CHIP C	18PF	J		E3E4
C5			CC73GCH1H390J	CHIP C	39PF	J		E3E4
C6			CC73GCH1H020C	CHIP C	2.0PF	C		E3E4
C7			CC73GCH1H120J	CHIP C	12PF	J		E3E4
C8			CK73FB1C105K	CHIP C	1.0UF	K		E3E4
C10-12			CC73GCH1H102J	CHIP C	1000PF	J		E3E4
C13			CC73GCH1H221J	CHIP C	220PF	J		E3E4
C14			CC73GCH1H030C	CHIP C	3.0PF	C		E3E4
C15,16			CC73GCH1H560J	CHIP C	56PF	J		E3E4
C17			CC73GCH1H102J	CHIP C	1000PF	J		E3E4
CN1		*	E41-3008-05	PIN ASSY				E3E4
W1		*	E30-6808-05	CORD WITH PLUG (ANT)				E3E4
W2		*	E30-6807-05	CORD WITH PLUG				E3E4
L1			L41-2705-33	SMALL FIXED INDUCTOR (27U)				E3E4
L2			L41-1588-18	SMALL FIXED INDUCTOR				E3E4
L3			L41-1805-33	SMALL FIXED INDUCTOR (18U)				E3E4
L4,5			L41-1588-18	SMALL FIXED INDUCTOR				E3E4
L6			L19-0825-05	BALUN TRANSFORMER				E3E4
L8			L41-1888-18	SMALL FIXED INDUCTOR (0.18U)				E3E4
R1			RK73GB2A104J	CHIP R	100K	J	1/10W	E3E4
R3			RK73GB2A562J	CHIP R	5.6K	J	1/10W	E3E4
R4			RK73GB2A332J	CHIP R	3.3K	J	1/10W	E3E4
R5			RK73GB2A331J	CHIP R	330	J	1/10W	E3E4
R6			RK73GB2A391J	CHIP R	390	J	1/10W	E3E4
R7,8			RK73GB2A330J	CHIP R	33	J	1/10W	E3E4
R10			RK73GB2A431J	CHIP R	430	J	1/10W	E3E4
R11			RK73GB2A270J	CHIP R	27	J	1/10W	E3E4
R12			RK73GB2A431J	CHIP R	430	J	1/10W	E3E4

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe)
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)

The IC3, and IC11 in the DVD unit (X37-1100-03) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6160-00).

PARTS LIST

DAUGHTER UNIT (X89-3062-70)

Ref. No.	Add	New	Parts No.	Description	Destination
R13			RK73GB2A151J	CHIP R 150 J 1/10W	E3E4
R14			RK73GB2A431J	CHIP R 430 J 1/10W	E3E4
R15			RK73GB2A270J	CHIP R 27 J 1/10W	E3E4
R17			RK73GB2A431J	CHIP R 430 J 1/10W	E3E4
D1			IMSA-6801-E	SURGE ABSORBER	E3E4
Q1			2SC3357-A	TRANSISTOR	E3E4
DVD MECHANISM ASSY (X92-6160-00) (DVS-8020V)					
1	1A		A10-5331-51	CHASSIS	
2	2B		A10-5332-51	CHASSIS	
3	1A		A10-5333-31	CHASSIS	
4	3A	✻	A10-5460-02	CHASSIS	
7	1B		D10-4918-22	ARM	
8	1B		D10-4919-22	ARM	
9	1B		D10-4920-02	LEVER	
10	1B		D10-4921-02	LEVER	
12	2B		D10-4922-12	SLIDER	
13	2A	✻	D10-7011-02	ARM	
14	2B		D10-4924-13	ARM	
15	2B		D10-4925-12	ARM	
25	2B	✻	D10-4973-04	SLIDER ASSY	
27	2A		D10-4945-04	LEVER	
28	2B		D12-0639-02	CAM	
31	2B		D13-2402-04	GEAR	
32	2B		D13-2403-04	GEAR	
33	2B		D13-2404-04	GEAR	
34	2B		D13-2405-04	GEAR	
35	2B		D13-2406-04	GEAR	
36	2B		D13-2407-04	GEAR	
40	2A		D13-2413-04	GEAR	
41	2A		D13-2415-04	GEAR	
42	2A		D13-2416-04	GEAR	
43	1B		D14-1013-14	ROLLER	
53	1B		D21-2487-24	SHAFT	
54	2A	✻	D39-0275-05	DAMPER	
55	2A	✻	D39-0276-05	DAMPER	
60	3A		F09-2825-23	SHEET	
65	2B		G01-3298-04	EXTENSION SPRING	
66	1B		G01-3299-04	EXTENSION SPRING	
67	2A		G01-3300-14	TORSION COIL SPRING	
68	2B		G01-4601-04	EXTENSION SPRING	
69	1B		G01-4602-04	EXTENSION SPRING	
70	1B		G01-4604-04	TORSION COIL SPRING	
74	2B		G01-4609-14	TORSION COIL SPRING	
75	1B	✻	G02-1564-03	FLAT SPRING	
79	2A	✻	J22-0475-21	MOUNTING HARDWARE	
80	3B	✻	J22-0636-01	MOUNTING HARDWARE	
A	1A		N09-6382-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4 P-TITE)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW	
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A		T99-0471-05	MAGNET	

Ref. No.	Add	New	Parts No.	Description	Destination
96	1B		X94-2080-00	ROLLER ASSY	
98	2A		X94-2060-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	

E1: DDX5022 **E2**: DDX5022Y **E3**: DNX5220BT **E4**: DNX5220 **E5**: DDX52RY (Europe) ⚠Indicates safety critical compo nents.
K: DDX512 **K1**: DNX5120 **K2**: DNX512EX (North America)
X1: DDX5032 (Australia) **R1**: DDX5032 (Latin America)
M1: DDX5032 **M2**: DDX5032M (Other Areas)