



### EXPLODED VIEW (CD MECHANISM)

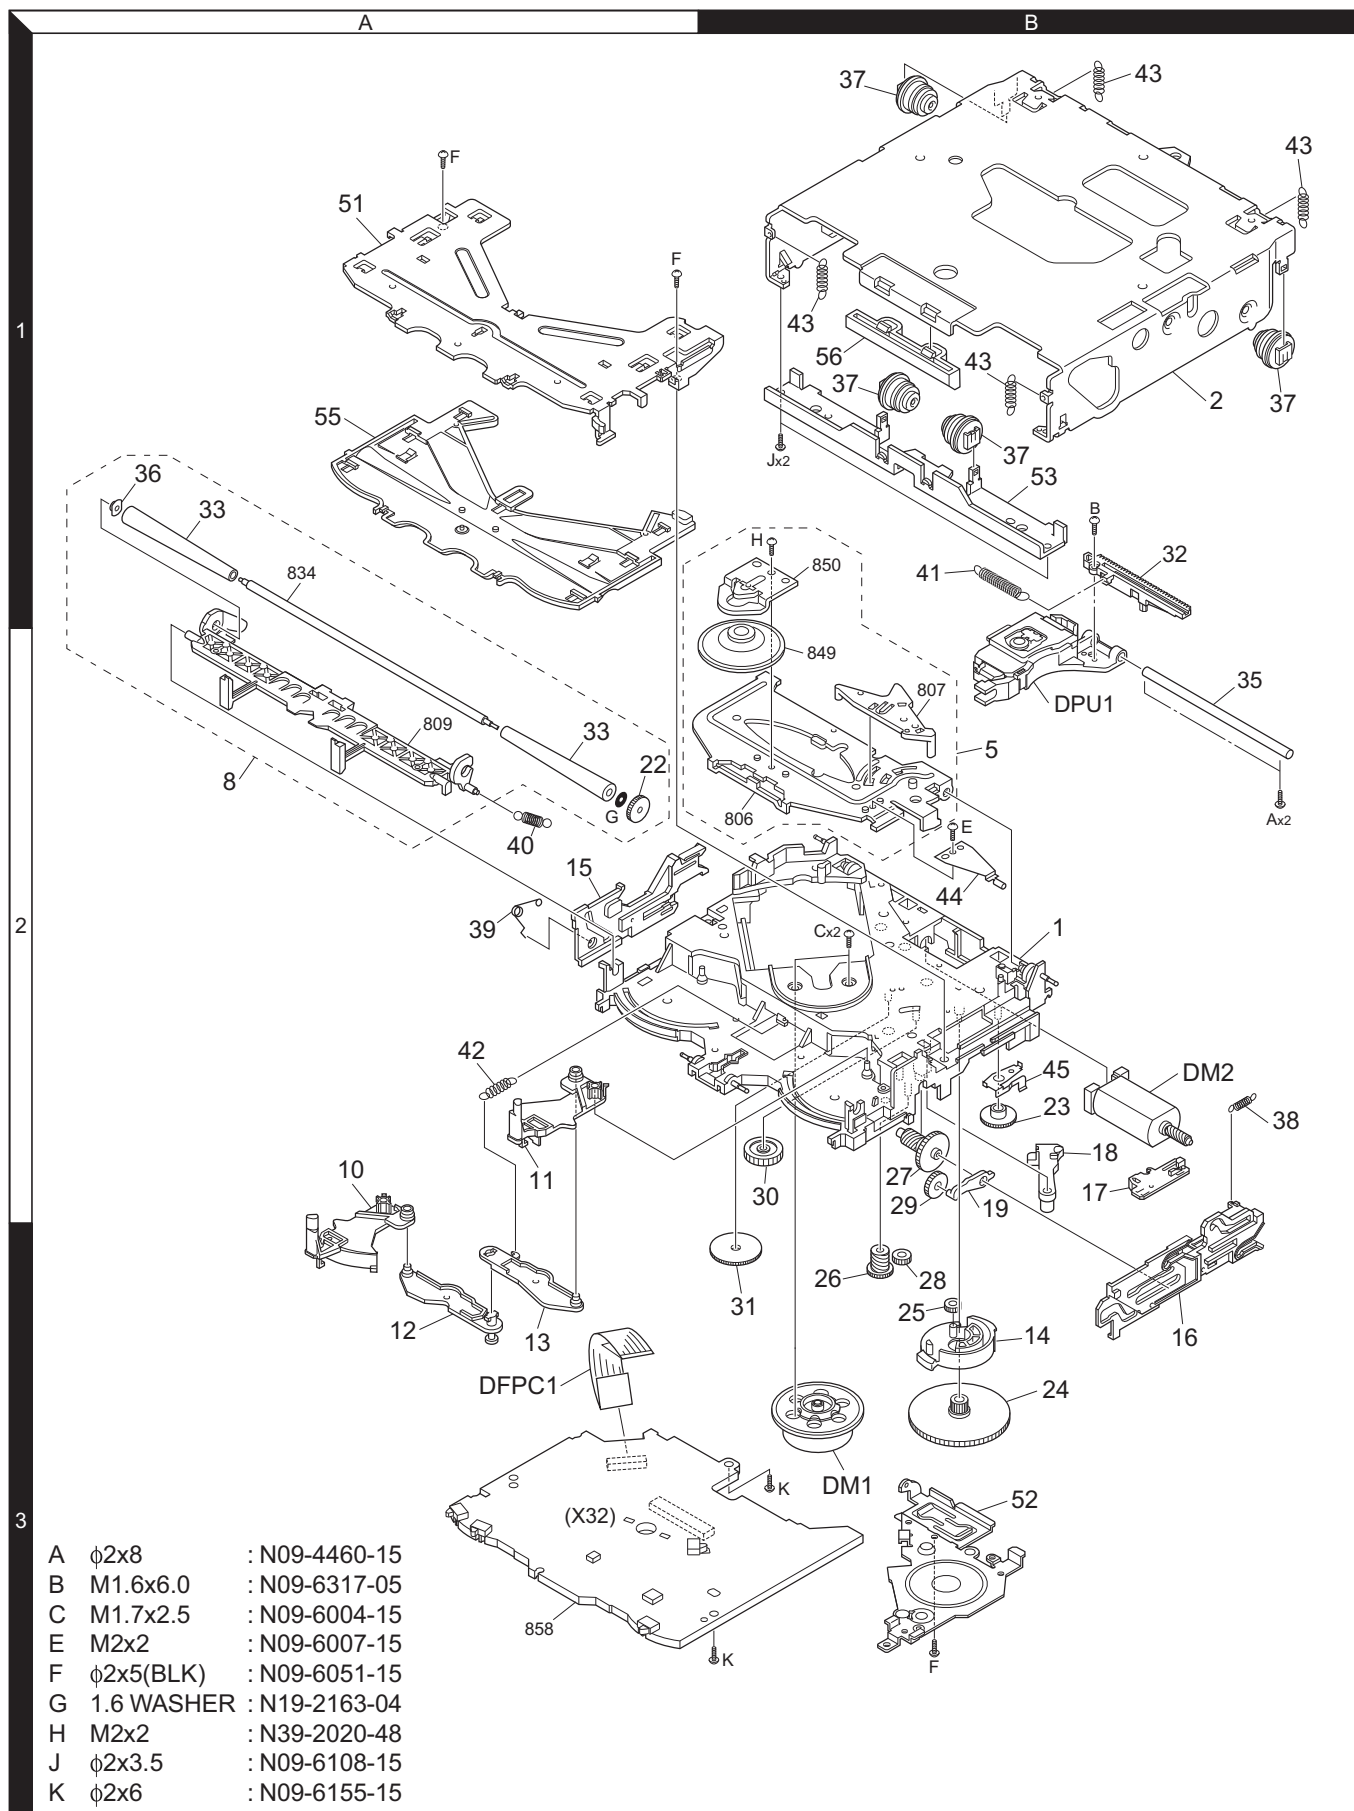

# EXPLODED VIEW (UNIT)

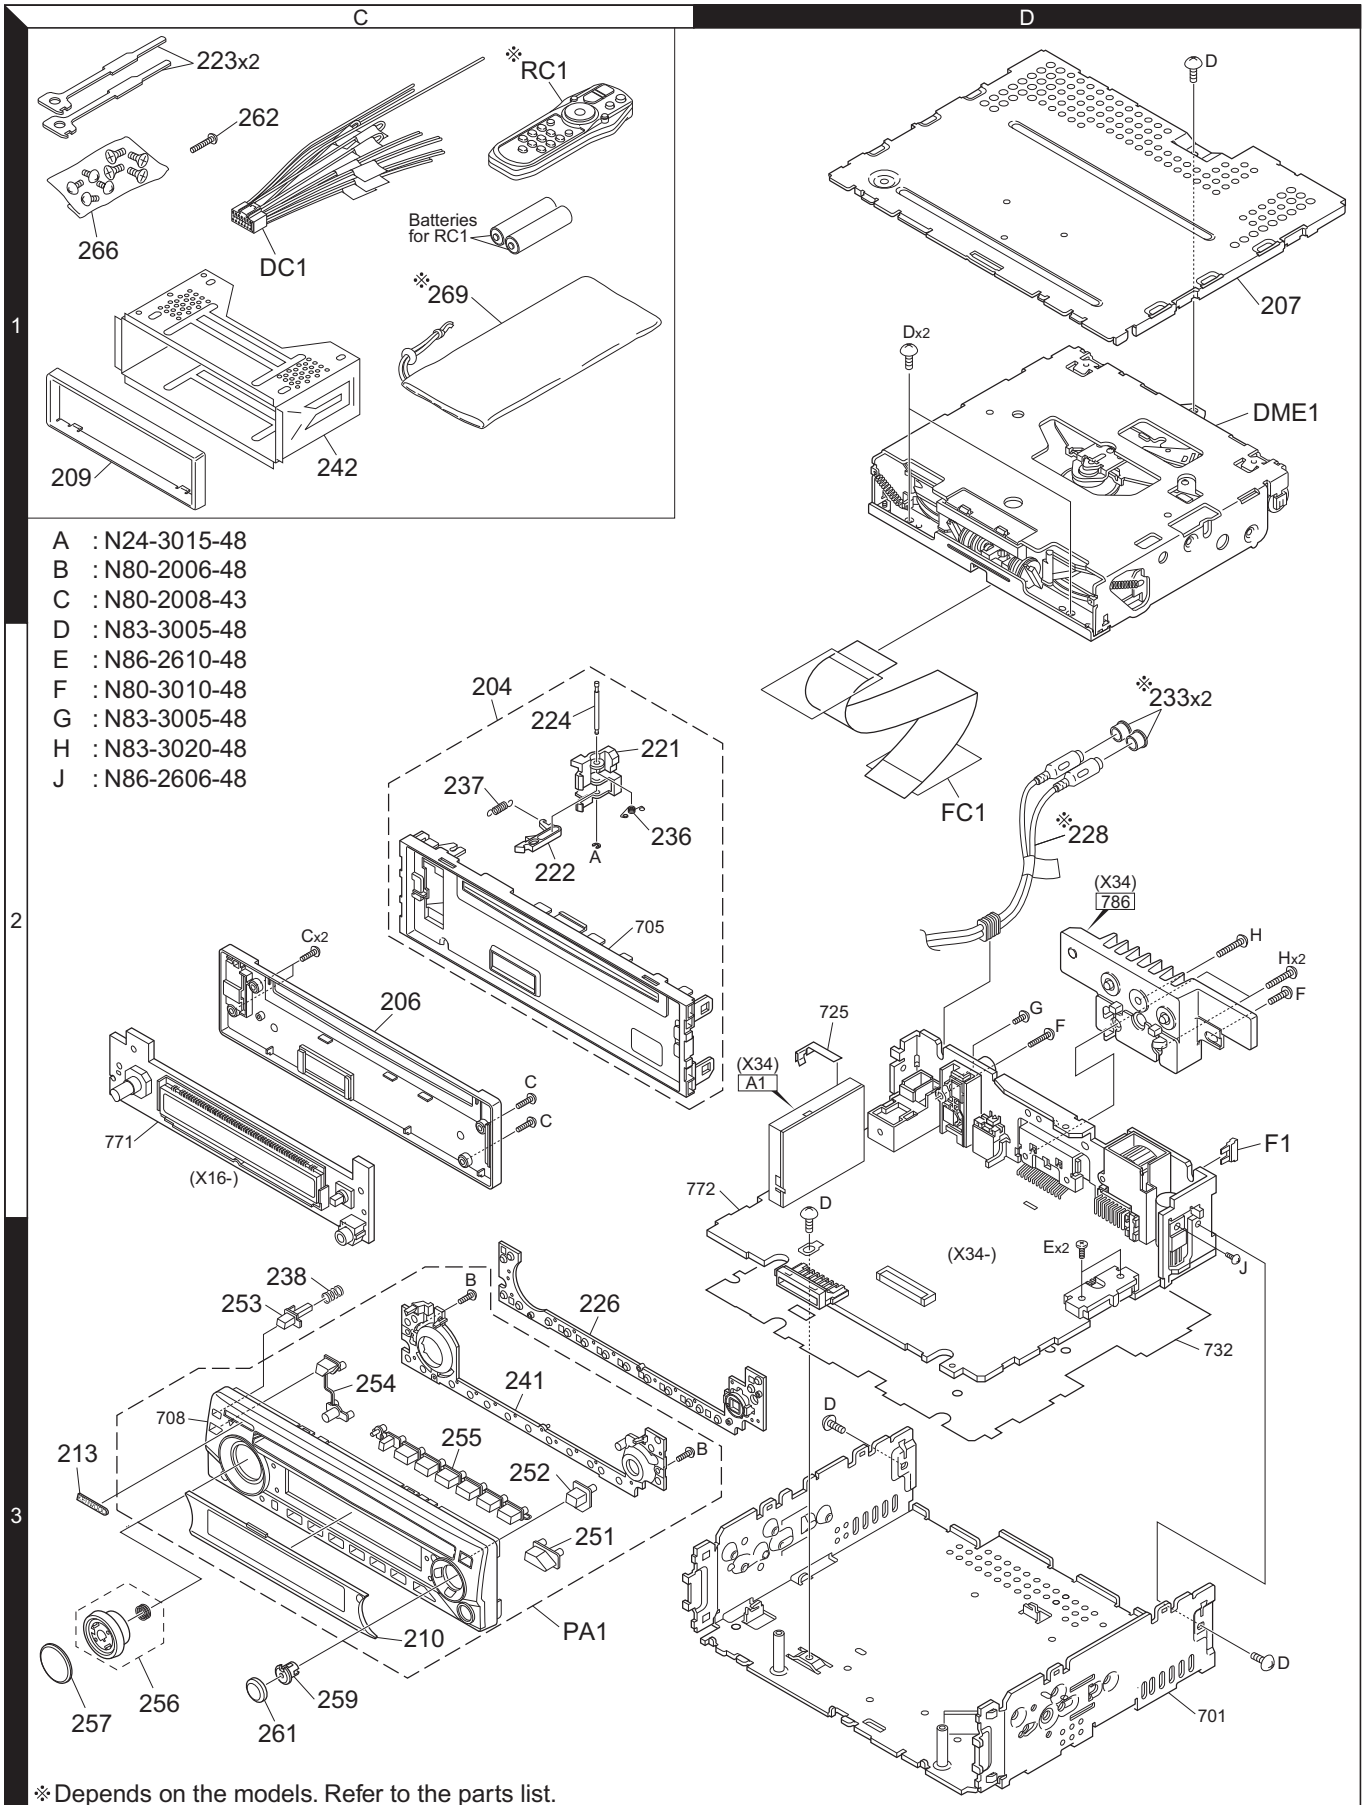

Parts with the exploded numbers larger than 700 are not supplied.

# KDC-MP2035/MP205 KDC-MP235/MP235CR

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.                              | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                     | Desti-<br>nation |
|---------------------------------------|-------------|-------------|-------------|---------------------------------|------------------|
| <b>KDC-MP2035/MP205/MP235/MP235CR</b> |             |             |             |                                 |                  |
| 204                                   | 2C          | *           | A22-3117-13 | SUB PANEL ASSY                  |                  |
| 206                                   | 2C          | *           | A46-1846-11 | REAR COVER                      |                  |
| 207                                   | 1D          |             | A52-0804-12 | TOP PLATE                       |                  |
| PA1                                   | 3C          | *           | A64-4037-12 | PANEL ASSY                      | K                |
| PA1                                   | 3C          | *           | A64-4043-12 | PANEL ASSY                      | K1               |
| PA1                                   | 3C          | *           | A64-4044-12 | PANEL ASSY                      | K2               |
| PA1                                   | 3C          | *           | A64-4045-02 | PANEL ASSY                      | K3               |
| RC1                                   | 1C          | *           | A70-2087-05 | REMOTE CONTROLLER ASSY (RC-557) | KK1              |
| -                                     |             |             | B46-0681-04 | ID CARD                         |                  |
| -                                     |             | *           | B64-3492-00 | INST. MANUAL (ENG.FRE.SPA)      |                  |
| 209                                   | 1C          |             | B07-3122-01 | ESCUTCHEON                      | KK3              |
| 209                                   | 1C          |             | B07-3126-01 | ESCUTCHEON                      | K1K2             |
| 210                                   | 3C          | *           | B10-4907-11 | FRONT GLASS                     | K                |
| 210                                   | 3C          | *           | B10-4913-11 | FRONT GLASS                     | K1               |
| 210                                   | 3C          | *           | B10-4914-11 | FRONT GLASS                     | K2               |
| 210                                   | 3C          | *           | B10-4915-01 | FRONT GLASS                     | K3               |
| 213                                   | 3C          |             | B43-1518-04 | BADGE                           |                  |
| 221                                   | 2C          |             | D10-4446-03 | LEVER                           |                  |
| 222                                   | 2C          |             | D10-4447-03 | LEVER                           |                  |
| 223                                   | 1C          |             | D10-4589-04 | LEVER                           |                  |
| 224                                   | 2C          |             | D21-2329-04 | SHAFT                           |                  |
| 226                                   | 3C          | *           | E29-2089-02 | CONDUCTIVE RUBBER               |                  |
| 228                                   | 2D          |             | E30-6499-05 | CORD WITH PINPLUG               | K                |
| DC1                                   | 1C          |             | E30-6415-15 | DC CORD                         |                  |
| FC1                                   | 2D          |             | E39-0736-05 | FLAT CABLE (24-PIN)             |                  |
| 233                                   | 2D          |             | F29-0626-04 | INSULATING COVER                | K                |
| F1                                    | 2D          |             | F52-0023-05 | FUSE (MINI BLADE TYPE) (10A)    |                  |
| 236                                   | 2C          |             | G01-2987-04 | TORSION COIL SPRING             |                  |
| 237                                   | 2C          |             | G01-3096-04 | EXTENSION SPRING                |                  |
| 238                                   | 3C          |             | G01-3244-04 | COMPRESSION SPRING (REL)        |                  |
| -                                     |             | *           | H54-3907-03 | ITEM CARTON CASE                | K                |
| -                                     |             | *           | H54-3908-03 | ITEM CARTON CASE                | K1               |
| -                                     |             | *           | H54-3909-03 | ITEM CARTON CASE                | K2               |
| -                                     |             | *           | H54-3910-03 | ITEM CARTON CASE                | K3               |
| 241                                   | 3C          |             | J19-7158-01 | HOLDER                          |                  |
| 242                                   | 1C          |             | J21-9716-03 | MOUNTING HARDWARE ASSY          |                  |
| 251                                   | 3C          | *           | K24-4653-04 | PUSH KNOB (SRC)                 |                  |
| 252                                   | 3C          | *           | K24-4652-04 | PUSH KNOB (EJECT)               |                  |
| 253                                   | 3C          | *           | K24-4654-04 | PUSH KNOB (RELEASE)             |                  |
| 254                                   | 3C          | *           | K25-1860-03 | PUSH KNOB (MENU/ATT)            |                  |
| 255                                   | 3C          | *           | K25-1859-02 | PUSH KNOB (PRESET)              |                  |
| 256                                   | 3C          | *           | K28-0201-03 | KNOB ASSY (VOL)                 | KK1K3            |
| 257                                   | 3C          | *           | K28-0190-03 | KEY TOP (VOL)                   | K2               |
| 257                                   | 3C          | *           | K28-0191-03 | KEY TOP (VOL)                   |                  |
| 259                                   | 3C          |             | K29-7141-03 | KNOB BASE (FM/AM)               |                  |
| 261                                   | 3C          | *           | K28-0195-03 | KEY TOP (FM/AM)                 | KK1K3            |
| 261                                   | 3C          | *           | K28-0196-03 | KEY TOP (FM/AM)                 | K2               |
| 262                                   | 1C          |             | N84-4016-48 | PAN HEAD TAPTITE SCREW          |                  |
| 266                                   | 1C          |             | N99-1757-05 | SCREW SET                       |                  |
| A                                     | 2C          |             | N24-3015-48 | E TYPE RETAINING RING           |                  |

| Ref. No.                         | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description                | Desti-<br>nation |
|----------------------------------|-------------|-------------|---------------|----------------------------|------------------|
| B                                | 3C          |             | N80-2006-48   | PAN HEAD TAPTITE SCREW     |                  |
| C                                | 2C          |             | N80-2008-43   | PAN HEAD TAPTITE SCREW     |                  |
| D                                | 1D          |             | N83-3005-48   | PAN HEAD TAPTITE SCREW     |                  |
| E                                | 3D          |             | N86-2610-48   | BINDING HEAD TAPTITE SCREW |                  |
| 269                              | 1C          | *           | W01-1691-05   | CARRYING CASE              | KK1K3            |
| DME1                             | 1D          | *           | X92-5880-00   | MECHANISM ASSY (DXM-6E00W) |                  |
| <b>SWITCH UNIT (X16-386x-xx)</b> |             |             |               |                            |                  |
| D1                               |             |             | B30-1566-05   | LED (1608,RED)             |                  |
| D2                               |             | *           | B30-1767-05   | LED                        | KK1              |
| D3,4                             |             |             | B30-1566-05   | LED (1608,RED)             | K2K3             |
| D5                               |             | *           | B30-1767-05   | LED                        | KK1              |
| D6-9                             |             |             | B30-1566-05   | LED (1608,RED)             | K2K3             |
| D7,8                             |             | *           | B30-1767-05   | LED                        | KK1              |
| D11-22                           |             |             | B30-1566-05   | LED (1608,RED)             |                  |
| C10                              |             |             | CK73GB0J225K  | CHIP C 2.2UF K             |                  |
| C11,12                           |             |             | CK73GB1H103K  | CHIP C 0.010UF K           |                  |
| C15                              |             |             | CC73GCH1H470J | CHIP C 47PF J              |                  |
| C16                              |             |             | CK73GB1H103K  | CHIP C 0.010UF K           |                  |
| C21                              |             |             | CK73FB1A225K  | CHIP C 2.2UF K             | KK1K3            |
| C24,25                           |             |             | CK73GB1H102K  | CHIP C 1000PF K            |                  |
| J1                               |             | *           | E59-0852-05   | RECTANGULAR PLUG           |                  |
| J2                               |             | *           | E11-0649-05   | 3.5D PHONE JACK            | K2K3             |
| J2                               |             | *           | E11-0650-05   | 3.5D PHONE JACK            | KK1              |
| CP11,12                          |             |             | RK74GA1J222J  | CHIP-COM 2.2K J 1/16W      |                  |
| R11                              |             |             | RK73GB2A101J  | CHIP R 100 J 1/10W         |                  |
| R13-17                           |             |             | RK73GB2A221J  | CHIP R 220 J 1/10W         |                  |
| R18                              |             |             | RK73GB2A102J  | CHIP R 1.0K J 1/10W        |                  |
| R19                              |             |             | RK73GB2A101J  | CHIP R 100 J 1/10W         |                  |
| R21                              |             |             | RK73GB2A104J  | CHIP R 100K J 1/10W        | KK1K3            |
| R22                              |             |             | RK73GB2A101J  | CHIP R 100 J 1/10W         | KK1K3            |
| R23                              |             |             | RK73GB2A104J  | CHIP R 100K J 1/10W        | K2               |
| R31-34                           |             |             | RK73FB2B471J  | CHIP R 470 J 1/8W          |                  |
| R61                              |             |             | RK73EB2E471J  | CHIP R 470 J 1/4W          | K2K3             |
| R61                              |             |             | RK73EB2E561J  | CHIP R 560 J 1/4W          | KK1              |
| R62                              |             |             | RK73EB2E821J  | CHIP R 820 J 1/4W          | KK1              |
| R62,63                           |             |             | RK73EB2E681J  | CHIP R 680 J 1/4W          | K2K3             |
| R63                              |             |             | RK73EB2E681J  | CHIP R 680 J 1/4W          | KK1              |
| R70                              |             |             | RK73GB2A221J  | CHIP R 220 J 1/10W         |                  |
| R72                              |             |             | RK73GB2A472J  | CHIP R 4.7K J 1/10W        |                  |
| R74                              |             |             | RK73GB2A4R7J  | CHIP R 4.7 J 1/10W         |                  |
| R75                              |             |             | RK73GB2A203J  | CHIP R 20K J 1/10W         |                  |
| R78                              |             |             | RK73GB2A102J  | CHIP R 1.0K J 1/10W        |                  |
| R80-82                           |             |             | RK73PB2H470J  | CHIP R 47 J 1/2W           |                  |
| R96                              |             |             | RK73GB2A473J  | CHIP R 47K J 1/10W         |                  |
| W2                               |             |             | R92-1252-05   | CHIP R 0 OHM J 1/16W       | K2K3             |
| W2-4                             |             |             | R92-1252-05   | CHIP R 0 OHM J 1/16W       | KK1              |
| S1                               |             |             | S70-0106-05   | TACT SWITCH                |                  |
| S2                               |             | *           | T99-0474-05   | ROTARY ENCODER             |                  |
| D71-77                           |             |             | UDZS5.6B      | ZENER DIODE                |                  |
| D79                              |             |             | UDZS5.6B      | ZENER DIODE                |                  |

**K** : KDC-MP2035 **K1** : KDC-MP235 **K2** : KDC-MP205 **K3** : KDC-MP235CR

(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

△ Indicates safety critical components.

# PARTS LIST

## SWITCH UNIT (X16-386x-xx)

| Ref. No.                                        | Add | New | Parts No.     | Description                | Destination |
|-------------------------------------------------|-----|-----|---------------|----------------------------|-------------|
| ED1                                             |     |     | 3-BT-224N     | FLUORESCENT INDICATOR TUBE |             |
| IC1                                             |     |     | LC75756W      | MOS-IC                     |             |
| IC3                                             |     |     | PNA4S22M02KW  | ANALOGUE IC                | KK1K3       |
| <b>CD PLAYER UNIT (X32-5970-00) IN CD MECHA</b> |     |     |               |                            |             |
| C20                                             |     |     | CC73GCH1H680J | CHIP C 68PF J              |             |
| C21                                             |     |     | CK73GB1H472K  | CHIP C 4700PF K            |             |
| C22                                             |     |     | CK73GB1H222K  | CHIP C 2200PF K            |             |
| C23                                             |     |     | CC73GCH1H220J | CHIP C 47PF J              |             |
| C24                                             |     |     | CK73EB1A475K  | CHIP C 4.7UF K             |             |
| C25                                             |     |     | CK73FB0J106K  | CHIP C 10UF K              |             |
| C26                                             |     |     | CK73GB1H153K  | CHIP C 0.015UF K           |             |
| C27                                             |     |     | CC73GCH1H470J | CHIP C 47PF J              |             |
| C29                                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C30-33                                          |     |     | CK73GB1H103K  | CHIP C 0.010UF K           |             |
| C34                                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C35                                             |     |     | CK73GB1H153K  | CHIP C 0.015UF K           |             |
| C36                                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C38                                             |     |     | CC73GCH1H680J | CHIP C 68PF J              |             |
| C39,40                                          |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C41                                             |     |     | CK73GB1A105K  | CHIP C 1.0UF K             |             |
| C44                                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C45,46                                          |     |     | CK73GB1H222K  | CHIP C 2200PF K            |             |
| C47,48                                          |     |     | CK73GB1H333K  | CHIP C 0.033UF K           |             |
| C49,50                                          |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C51                                             |     |     | CK73GB1H222K  | CHIP C 2200PF K            |             |
| C52,53                                          |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C54                                             |     |     | CK73GB1A105K  | CHIP C 1.0UF K             |             |
| C58                                             |     |     | CK73EB1E105K  | CHIP C 1.0UF K             |             |
| C60                                             |     |     | CK73EB0J226K  | CHIP C 22UF K              |             |
| C61-64                                          |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C66                                             |     |     | CK73FB1C105K  | CHIP C 1.0UF K             |             |
| C68,69                                          |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C71                                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C72                                             |     |     | CK73EB1A106K  | CHIP C 10UF K              |             |
| C73                                             |     |     | CK73GB1A105K  | CHIP C 1.0UF K             |             |
| C74                                             |     |     | CK73GB1C224K  | CHIP C 0.22UF K            |             |
| C76                                             |     |     | CK73GB1H103K  | CHIP C 0.010UF K           |             |
| C77                                             |     |     | CK73FB1A225K  | CHIP C 2.2UF K             |             |
| C87,88                                          |     |     | CK73GB1H222K  | CHIP C 2200PF K            |             |
| C89-91                                          |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C94,95                                          |     |     | CK73GB1A105K  | CHIP C 1.0UF K             |             |
| C96                                             |     |     | CK73GB1H103K  | CHIP C 0.010UF K           |             |
| C97                                             |     |     | CK73GB1H104K  | CHIP C 0.10UF K            |             |
| C100,101                                        |     |     | CK73GB1A105K  | CHIP C 1.0UF K             |             |
| C102                                            |     |     | CK73FB1A225K  | CHIP C 2.2UF K             |             |
| C103                                            |     |     | CK73GB1H153K  | CHIP C 0.015UF K           |             |
| CN1                                             |     |     | E41-2612-05   | FLAT CABLE CONNECTOR       |             |
| CN2                                             |     |     | E41-2083-15   | FLAT CABLE CONNECTOR       |             |
| X1                                              |     | *   | L78-1221-05   | RESONATOR (16.93MHZ)       |             |
| CP7                                             |     |     | RK74GB1J103J  | CHIP-COM 10K J 1/16W       |             |
| R20                                             |     |     | RK73GB2A393J  | CHIP R 39K J 1/10W         |             |
| R21                                             |     |     | RK73GB2A163J  | CHIP R 16K J 1/10W         |             |
| R22                                             |     |     | RK73GB2A562J  | CHIP R 5.6K J 1/10W        |             |

| Ref. No. | Add | New | Parts No.     | Description         | Destination |
|----------|-----|-----|---------------|---------------------|-------------|
| R23      |     |     | RK73GB2A273J  | CHIP R 27K J 1/10W  |             |
| R25      |     |     | RK73GB2A562J  | CHIP R 5.6K J 1/10W |             |
| R26      |     |     | RK73GB2A683J  | CHIP R 68K J 1/10W  |             |
| R27      |     |     | RK73GB2A333J  | CHIP R 33K J 1/10W  |             |
| R28      |     |     | RK73GB2A563J  | CHIP R 56K J 1/10W  |             |
| R29      |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W |             |
| R30      |     |     | RK73GB2A101J  | CHIP R 100 J 1/10W  |             |
| R31      |     |     | RK73GB2A133J  | CHIP R 13K J 1/10W  |             |
| R32      |     |     | RK73GB2A181J  | CHIP R 180 J 1/10W  |             |
| R33      |     |     | RK73GB2A153J  | CHIP R 15K J 1/10W  |             |
| R34      |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W  |             |
| R35      |     |     | RK73GB2A562J  | CHIP R 5.6K J 1/10W |             |
| R36      |     |     | RK73GB2A154J  | CHIP R 150K J 1/10W |             |
| R37      |     |     | RK73GB2A334J  | CHIP R 330K J 1/10W |             |
| R38      |     |     | RK73GB2A223J  | CHIP R 22K J 1/10W  |             |
| R40      |     |     | RK73GB2A273J  | CHIP R 27K J 1/10W  |             |
| R41      |     |     | RK73GB2A393J  | CHIP R 39K J 1/10W  |             |
| R45      |     |     | RK73GB2A221J  | CHIP R 220 J 1/10W  |             |
| R46      |     |     | RK73GB2A105J  | CHIP R 1.0M J 1/10W |             |
| R48,49   |     |     | RK73GB2A105J  | CHIP R 1.0M J 1/10W |             |
| R50      |     |     | RK73GB2A560J  | CHIP R 56 J 1/10W   |             |
| R51      |     |     | RK73EB2E220J  | CHIP R 22 J 1/4W    |             |
| R52      |     |     | RK73EB2E100J  | CHIP R 10 J 1/4W    |             |
| R55      |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W  |             |
| R59      |     |     | RK73GB2A4R7J  | CHIP R 4.7 J 1/10W  |             |
| R60,61   |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W  |             |
| R82,83   |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W |             |
| R216,217 |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W  |             |
| R218     |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W |             |
| R219,220 |     |     | RK73GB2A472J  | CHIP R 4.7K J 1/10W |             |
| R221,222 |     |     | RK73GB2A101J  | CHIP R 100 J 1/10W  |             |
| R223     |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W  |             |
| R226-230 |     |     | RK73GB2A101J  | CHIP R 100 J 1/10W  |             |
| R231     |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W  |             |
| R232     |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W |             |
| R233     |     |     | RK73GB2A331J  | CHIP R 330 J 1/10W  |             |
| R239     |     |     | RK73GB2A472J  | CHIP R 4.7K J 1/10W |             |
| R240     |     |     | RK73EB2E470J  | CHIP R 47 J 1/4W    |             |
| R241     |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W |             |
| R243     |     |     | RK73GB2A472J  | CHIP R 4.7K J 1/10W |             |
| R244     |     |     | RK73GB2A225J  | CHIP R 2.2M J 1/10W |             |
| R245     |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  |             |
| R246     |     |     | RK73GB2A333J  | CHIP R 33K J 1/10W  |             |
| R247     |     |     | RK73GB2A183J  | CHIP R 18K J 1/10W  |             |
| R248     |     |     | RK73GB2A472J  | CHIP R 4.7K J 1/10W |             |
| R251     |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W  |             |
| R252     |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  |             |
| S1,2     |     |     | S68-0863-05   | PUSH SWITCH         |             |
| S3       |     |     | S68-0862-05   | PUSH SWITCH         |             |
| D1       |     |     | DA204U        | DIODE               |             |
| D2       |     |     | DAP202U       | DIODE               |             |
| D3,4     |     |     | DA204U        | DIODE               |             |
| IC3      |     |     | BA5824FP      | ANALOGUE IC         |             |
| IC4      |     | *   | TC94A70FG-007 | MOS-IC              |             |

K : KDC-MP2035 K1 : KDC-MP235 K2 : KDC-MP205 K3 : KDC-MP235CR  
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

# PARTS LIST

## CD PLAYER UNIT (X32-5970-00) IN CD MECHA

| Ref. No.                           | A<br>d<br>d | N<br>e<br>w | Parts No.      | Description          | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description                   | Desti-<br>nation |
|------------------------------------|-------------|-------------|----------------|----------------------|------------------|----------|-------------|-------------|--------------|-------------------------------|------------------|
| IC5                                |             | *           | S-1132B15U5T1G | ANALOGUE IC          |                  | J1       |             |             | E58-0991-05  | RECTANGULAR RECEPTACLE        |                  |
| IC6                                |             | *           | S-1132B33U5T1G | ANALOGUE IC          |                  | J2       |             | *           | E04-0334-05  | RF COAXIAL CABLE RECEPTACLE   |                  |
| IC7                                |             |             | TAR5S33-F      | ANALOGUE IC          |                  | J3       |             | *           | E58-1060-05  | RECTANGULAR RECEPTACLE        |                  |
| IC11                               |             | *           | XC6206P152MR   | ANALOGUE IC          |                  | J4       |             | *           | E56-0855-05  | CYLINDRICAL RECEPTACLE        | KK1              |
| Q1                                 |             |             | 2SB0970        | TRANSISTOR           |                  | J5       |             | *           | E63-0941-05  | PIN JACK                      |                  |
| Q10-12                             |             |             | UM6K1N         | DUAL FET             |                  | L1       |             |             | L33-2319-05  | CHOKE COIL ASSY               |                  |
| Q13                                |             |             | DTC114YUA      | DIGITAL TRANSISTOR   |                  | L401     |             |             | L41-4795-33  | SMALL FIXED INDUCTOR (4.7UH)  |                  |
| <b>ELECTRIC UNIT (X34-463x-xx)</b> |             |             |                |                      |                  | X1       |             | *           | L78-1218-05  | RESONATOR (10.000MHZ)         |                  |
| D302                               |             |             | B30-1567-05    | LED (1608,RED)       |                  | X2       |             |             | L77-2920-05  | CRYSTAL RESONATOR (32.768KHZ) |                  |
| C1                                 |             | *           | CD04AZ1C332M2  | ELECTRO 3300UF 16WV  |                  | F        | 2D          |             | N80-3010-48  | PAN HEAD TAPTITE SCREW        |                  |
| C2                                 |             |             | CD04AB1C220M   | ELECTRO 22UF 16WV    |                  | G        | 2D          |             | N83-3005-48  | PAN HEAD TAPTITE SCREW        |                  |
| C3                                 |             |             | CK73GB1H104K   | CHIP C 0.10UF K      |                  | H        | 2D          |             | N83-3020-48  | PAN HEAD TAPTITE SCREW        |                  |
| C5,6                               |             |             | CD04AT1E101M   | ELECTRO 100UF 25WV   |                  | J        | 3D          |             | N86-2606-48  | BINDING HEAD TAPTITE SCREW    |                  |
| C7                                 |             |             | CD04AB0J101M   | ELECTRO 100UF 6.3WV  |                  | R1       |             |             | RD14BB2C102J | RD 1.0K J 1/6W                |                  |
| C9                                 |             |             | CK73GB1H104K   | CHIP C 0.10UF K      |                  | R2-5     |             |             | RD14BB2C103J | RD 10K J 1/6W                 |                  |
| C11                                |             |             | CK73FB1A225K   | CHIP C 2.2UF K       |                  | R11      |             |             | RD14DB2H100J | SMALL-RD 10 J 1/2W            |                  |
| C12                                |             |             | CK73GB1H104K   | CHIP C 0.10UF K      |                  | R12-14   |             |             | RK73PB2H100J | CHIP R 10 J 1/2W              |                  |
| C14                                |             |             | CK73GB1H104K   | CHIP C 0.10UF K      |                  | R15      |             |             | RD14DB2H100J | SMALL-RD 10 J 1/2W            |                  |
| C15                                |             |             | CD04AB1C220M   | ELECTRO 22UF 16WV    |                  | R16      |             |             | RK73FB2B681J | CHIP R 680 J 1/8W             |                  |
| C101,102                           |             |             | CK73GB1H103K   | CHIP C 0.010UF K     |                  | R17      |             |             | RK73GB2A272J | CHIP R 2.7K J 1/10W           |                  |
| C202                               |             |             | CC73GCH1H180J  | CHIP C 18PF J        | KK1              | R101     |             |             | RD14BB2C472J | RD 4.7K J 1/6W                |                  |
| C203                               |             |             | CC73GCH1H220J  | CHIP C 22PF J        | KK1              | R103     |             |             | RD14BB2C103J | RD 10K J 1/6W                 |                  |
| C204                               |             |             | CK73GB1H104K   | CHIP C 0.10UF K      |                  | R104     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W            |                  |
| C205                               |             |             | CK73GB1H102K   | CHIP C 1000PF K      |                  | R105     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W           |                  |
| C301,302                           |             |             | CD04AB1HR47M   | ELECTRO 0.47UF 50WV  |                  | R106     |             |             | RD14DB2H332J | SMALL-RD 3.3K J 1/2W          |                  |
| C306,307                           |             |             | CK73FB1E474K   | CHIP C 0.47UF K      |                  | R107     |             |             | RD14BB2C333J | RD 33K J 1/6W                 |                  |
| C308                               |             |             | CD04AB0J470M   | ELECTRO 47UF 6.3WV   |                  | R108     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W            |                  |
| C309                               |             |             | CK73GB1H103K   | CHIP C 0.010UF K     |                  | R109     |             |             | RD14BB2C223J | RD 22K J 1/6W                 |                  |
| C401                               |             |             | CD04AB1C470M   | ELECTRO 47UF 16WV    |                  | R110     |             |             | RK73FB2B683J | CHIP R 68K J 1/8W             |                  |
| C403                               |             |             | CD04AB1H010M   | ELECTRO 1.0UF 50WV   |                  | R111     |             |             | RK73GB2A393J | CHIP R 39K J 1/10W            |                  |
| C404                               |             |             | CK73GB1H103K   | CHIP C 0.010UF K     | KK1              | R112     |             |             | RD14BB2C203J | RD 20K J 1/6W                 |                  |
| C405                               |             |             | CK73GB1H104K   | CHIP C 0.10UF K      | KK1              | R113     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W           |                  |
| C502                               |             |             | CK73GB1H103K   | CHIP C 0.010UF K     |                  | R114,115 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W            |                  |
| C504                               |             |             | CK73GB1H103K   | CHIP C 0.010UF K     |                  | R116,117 |             |             | RD14BB2C103J | RD 10K J 1/6W                 |                  |
| C506                               |             |             | CK73GB1H103K   | CHIP C 0.010UF K     |                  | R201     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W            | KK1              |
| C508                               |             |             | CK73GB1H103K   | CHIP C 0.010UF K     |                  | R202     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W           | KK1              |
| C509,510                           |             |             | CK73GB1A474K   | CHIP C 0.47UF K      |                  | R203,204 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W            |                  |
| C601,602                           |             |             | CK73FB1E474K   | CHIP C 0.47UF K      | KK1              | R205-207 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W            |                  |
| C603                               |             | *           | CD04AC0J470M   | ELECTRO 47UF 6.3WV   | KK1              | R208     |             |             | RD14BB2C473J | RD 47K J 1/6W                 |                  |
| C604                               |             |             | CK73GB1H103K   | CHIP C 0.010UF K     | KK1              | R209,210 |             |             | RD14BB2C471J | RD 470 J 1/6W                 |                  |
| C701,702                           |             |             | CD04AB1V100M   | ELECTRO 10UF 35WV    |                  | R211,212 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W            |                  |
| C703,704                           |             |             | CC73GCH1H681J  | CHIP C 680PF J       |                  | R218     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W            |                  |
| C705,706                           |             |             | CD04AB1V100M   | ELECTRO 10UF 35WV    | K                | R219,220 |             |             | RD14BB2C104J | RD 100K J 1/6W                | KK1              |
| C707,708                           |             |             | CC73GCH1H681J  | CHIP C 680PF J       | K                | R223     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W           |                  |
| C801-804                           |             |             | C90-6735-05    | NP-ELECT 0.22UF 50WV |                  | R225     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W            | K1K3             |
| C805                               |             |             | CD04AB1V100M   | ELECTRO 10UF 35WV    |                  | R226     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W            | K1K3             |
| C807                               |             |             | CD04AB1H010M   | ELECTRO 1.0UF 50WV   |                  | R226     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W            | KK2              |
| C808                               |             |             | C90-6802-05    | ELECTRO 1UF 50WV     |                  | R228     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W            |                  |
| C809                               |             |             | CD04AB1H010M   | ELECTRO 1.0UF 50WV   |                  | R229     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W           | KK1              |
| C901,902                           |             |             | CD04AB1C101M   | ELECTRO 100UF 16WV   |                  | R301     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W           |                  |
| C990                               |             |             | CK73GB1H223K   | CHIP C 0.022UF K     |                  | R302     |             |             | RD14BB2C101J | RD 100 J 1/6W                 |                  |
| CN2                                |             |             | E41-2581-05    | FLAT CABLE CONNECTOR |                  | R303     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W           |                  |
| CN4                                |             |             | E41-2446-05    | PIN ASSY             | K                | R304     |             |             | RD14BB2C102J | RD 1.0K J 1/6W                |                  |
|                                    |             |             |                |                      |                  | R305     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W           |                  |

K : KDC-MP2035 K1 : KDC-MP235 K2 : KDC-MP205 K3 : KDC-MP235CR  
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-463x-xx)

| Ref. No. | Add | New | Parts No.    | Description         | Destination | Ref. No. | Add | New | Parts No.     | Description         | Destination |
|----------|-----|-----|--------------|---------------------|-------------|----------|-----|-----|---------------|---------------------|-------------|
| R306     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             | R802     |     |     | RK73GB2A154J  | CHIP R 150K J 1/10W |             |
| R307     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W |             | R804     |     |     | RK73GB2A331J  | CHIP R 330 J 1/10W  |             |
| R310-313 |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | R805     |     |     | RK73GB2A154J  | CHIP R 150K J 1/10W |             |
| R314     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W |             | R806     |     |     | RK73GB2A472J  | CHIP R 4.7K J 1/10W |             |
| R315     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             | R807     |     |     | RK73GB2A432J  | CHIP R 4.3K J 1/10W |             |
| R316,317 |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W |             | R808     |     |     | RK73GB2A100J  | CHIP R 10 J 1/10W   |             |
| R318     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             | R892     |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  |             |
| R319     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W |             | R901,902 |     |     | RK73GB2A334J  | CHIP R 330K J 1/10W |             |
| R320     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             | R903     |     |     | RK73GB2A153J  | CHIP R 15K J 1/10W  |             |
| R323     |     |     | RD14BB2C241J | RD 240 J 1/6W       |             | R904     |     |     | RK73GB2A223J  | CHIP R 22K J 1/10W  |             |
| R330     |     |     | RD14BB2C222J | RD 2.2K J 1/6W      |             | R905,906 |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W |             |
| R331     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             | R907-914 |     |     | RD14BB2C104J  | RD 100K J 1/6W      |             |
| R332     |     |     | RD14BB2C222J | RD 2.2K J 1/6W      |             | R915     |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W |             |
| R333,334 |     |     | RD14BB2C102J | RD 1.0K J 1/6W      |             | R951     |     |     | RK73EB2E000J  | CHIP R 0.0 J 1/4W   |             |
| R335     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             | R952     |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  |             |
| R336-339 |     |     | RD14BB2C222J | RD 2.2K J 1/6W      |             | R955     |     |     | RK73EB2E000J  | CHIP R 0.0 J 1/4W   |             |
| R340     |     |     | RK73GB2A225J | CHIP R 2.2M J 1/10W |             | R958     |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  | K1K2K3      |
| R341     |     |     | RD14BB2C222J | RD 2.2K J 1/6W      |             | R958,959 |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  | K           |
| R342     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             | R962,963 |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  |             |
| R343     |     |     | RD14BB2C102J | RD 1.0K J 1/6W      |             | R964,965 |     |     | RK73EB2E000J  | CHIP R 0.0 J 1/4W   |             |
| R344,345 |     |     | RD14BB2C4R7J | RD 4.7 J 1/6W       |             | R967     |     |     | RK73GB2A471J  | CHIP R 470 J 1/10W  |             |
| R346     |     |     | RD14BB2C2R2J | RD 2.2 J 1/6W       |             | R968-971 |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  |             |
| R347     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | R972     |     |     | RK73EB2E000J  | CHIP R 0.0 J 1/4W   |             |
| R402,403 |     |     | RD14BB2C471J | RD 470 J 1/6W       |             | R973     |     |     | RK73GB2A000J  | CHIP R 0.0 J 1/10W  |             |
| R404     |     |     | RD14BB2C102J | RD 1.0K J 1/6W      | KK1         | D1       |     |     | S2V60*A       | DIODE               |             |
| R405     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  | KK1         | D2       |     |     | MTZJ8.2(B)    | ZENER DIODE         |             |
| R406     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  | KK1K2       | D3       |     |     | D1F60-5063    | DIODE               |             |
| R407     |     |     | RD14BB2C103J | RD 10K J 1/6W       | KK1K2       | D4       |     |     | 1SS133        | DIODE               |             |
| R408     |     |     | RK73GB2A152J | CHIP R 1.5K J 1/10W | KK1K2       | D7       |     |     | MTZJ12(B)     | ZENER DIODE         |             |
| R409     |     |     | RK73GB2A392J | CHIP R 3.9K J 1/10W | KK1K2       | D101,102 |     |     | D1F60-5063    | DIODE               |             |
| R491,492 |     |     | RK73GB2A100J | CHIP R 10 J 1/10W   | K2K3        | D105     |     |     | MTZJ4.7(B)    | ZENER DIODE         |             |
| R493     |     |     | RD14BB2C100J | RD 10 J 1/6W        | K2K3        | D106-108 |     |     | MTZJ6.8(B)    | ZENER DIODE         |             |
| R501     |     |     | RK73GB2A471J | CHIP R 470 J 1/10W  |             | D109     |     |     | 1SS133        | DIODE               |             |
| R502     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             | D110     |     |     | MC2848        | DIODE               |             |
| R503     |     |     | RK73GB2A471J | CHIP R 470 J 1/10W  |             | D301     |     |     | DA204U        | DIODE               |             |
| R504     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             | D304,305 |     |     | UDZS6.8B      | ZENER DIODE         |             |
| R598     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  |             | D306     |     |     | MTZJ6.8(B)    | ZENER DIODE         |             |
| R599     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             | D401     |     |     | 1SS133        | DIODE               |             |
| R601,602 |     |     | RD14BB2C100J | RD 10 J 1/6W        | KK1         | D404     |     |     | 1SS133        | DIODE               | KK1K2       |
| R603     |     |     | RD14BB2C4R7J | RD 4.7 J 1/6W       | KK1         | D601-606 |     |     | MTZJ6.8(B)    | ZENER DIODE         | KK1         |
| R604     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W | KK1         | D801     |     |     | MC2848        | DIODE               |             |
| R605     |     |     | RD14BB2C101J | RD 100 J 1/6W       | KK1         | D803     |     |     | 1SS133        | DIODE               |             |
| R606,607 |     |     | RD14BB2C102J | RD 1.0K J 1/6W      | KK1         | D901     |     |     | MTZJ4.7(B)    | ZENER DIODE         |             |
| R608,609 |     |     | RD14BB2C101J | RD 100 J 1/6W       | KK1         | IC1      | *   |     | 30622MEPB25FP | MICROCONTROLLER IC  | K2K3        |
| R610     |     |     | RD14BB2C472J | RD 4.7K J 1/6W      | KK1         | IC1      | *   |     | 30622MGPB23FP | MICROCONTROLLER IC  | KK1         |
| R611     |     |     | RD14BB2C101J | RD 100 J 1/6W       | KK1         | IC2      | *   |     | E-TDA7419     | ANALOGUE IC         | KK1K2       |
| R612     |     |     | RD14BB2C472J | RD 4.7K J 1/6W      | KK1         | IC3      | *   |     | E-TDA7418     | ANALOGUE IC         | K3          |
| R701,702 |     |     | RK73GB2A331J | CHIP R 330 J 1/10W  |             | IC4      | *   |     | BD4913-V4     | ANALOGUE IC         |             |
| R703,704 |     |     | RD14BB2C223J | RD 22K J 1/6W       |             | IC6      | *   |     | KKZ10Z        | ANALOGUE IC         |             |
| R705,706 |     |     | RD14BB2C181J | RD 180 J 1/6W       |             | IC8      |     |     | S-80836CNNB-J | MOS-IC              | KK1         |
| R707,708 |     |     | RK73GB2A331J | CHIP R 330 J 1/10W  | K           | IC9      |     |     | HEF4053BT     | MOS-IC              |             |
| R709,710 |     |     | RD14BB2C223J | RD 22K J 1/6W       | K           | Q1       |     |     | UMC2N         | TRANSISTOR          |             |
| R711,712 |     |     | RD14BB2C181J | RD 180 J 1/6W       | K           | Q2       |     |     | 2SB1565       | TRANSISTOR          |             |
| R791,792 |     |     | RK73GB2A000J | CHIP R 0.0 J 1/10W  | K3          | Q3       |     |     | 2SC4081       | TRANSISTOR          |             |
| R793     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W   | KK1K2       |          |     |     |               |                     |             |

K : KDC-MP2035 K1 : KDC-MP235 K2 : KDC-MP205 K3 : KDC-MP235CR  
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-463x-xx)

| Ref. No.                                      | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description         | Desti-<br>nation |
|-----------------------------------------------|-------------|-------------|---------------|---------------------|------------------|
| Q7                                            |             |             | UMC2N         | TRANSISTOR          |                  |
| Q8                                            |             |             | 2SB1565       | TRANSISTOR          |                  |
| Q9                                            |             |             | 2SC4081       | TRANSISTOR          |                  |
| Q101-103                                      |             |             | 2SC4081       | TRANSISTOR          |                  |
| Q104,105                                      |             |             | RT1N441M      | TRANSISTOR          |                  |
| Q301                                          |             |             | RT1P144M      | TRANSISTOR          |                  |
| Q302                                          |             |             | RT1N144M      | TRANSISTOR          |                  |
| Q401                                          |             |             | RT1N441M      | TRANSISTOR          | KK1              |
| Q402                                          |             |             | 2SC4081       | TRANSISTOR          | KK1K2            |
| Q701-704                                      |             |             | RT1N430M      | TRANSISTOR          | K                |
| Q701,702                                      |             |             | RT1N430M      | TRANSISTOR          | K1K2K3           |
| Q705                                          |             |             | RT1P241M      | TRANSISTOR          |                  |
| Q901                                          |             |             | 2SC4081       | TRANSISTOR          |                  |
| Q902,903                                      |             |             | 2SA1576A      | TRANSISTOR          |                  |
| TH1                                           |             |             | PRF18BE471QS2 | POSITIVE RESISTOR   |                  |
| A1                                            | 2D          | *           | X86-4030-11   | FRONT-END UNIT      |                  |
| <b>MECHANISM ASSY (X92-5880-00) DXM-6E00W</b> |             |             |               |                     |                  |
| 1                                             | 2B          |             | A10-5328-11   | CHASSIS             |                  |
| 2                                             | 1B          |             | A10-5329-01   | CHASSIS             |                  |
| 5                                             | 2B          |             | D10-4910-13   | ARM ASSY            |                  |
| 8                                             | 2A          |             | D10-4911-03   | LEVER ASSY          |                  |
| 10                                            | 2A          |             | D10-4906-33   | ARM                 |                  |
| 11                                            | 2A          |             | D10-4907-33   | ARM                 |                  |
| 12                                            | 3A          |             | D10-4908-03   | ARM                 |                  |
| 13                                            | 3A          |             | D10-4909-03   | ARM                 |                  |
| 14                                            | 3B          |             | D10-4915-03   | ARM                 |                  |
| 15                                            | 2A          |             | D10-4916-23   | SLIDER              |                  |
| 16                                            | 3B          |             | D10-4914-12   | SLIDER              |                  |
| 17                                            | 2B          |             | D10-4588-13   | SLIDER              |                  |
| 18                                            | 2B          |             | D10-4917-04   | ARM                 |                  |
| 19                                            | 2B          |             | D10-4596-24   | ARM                 |                  |
| 22                                            | 2A          |             | D13-2151-04   | GEAR                |                  |
| 23                                            | 2B          |             | D13-2152-04   | GEAR                |                  |
| 24                                            | 3B          |             | D13-2153-04   | GEAR                |                  |
| 25                                            | 3B          |             | D13-2154-04   | GEAR                |                  |
| 26                                            | 3B          |             | D13-2155-04   | WORM                |                  |
| 27                                            | 2B          |             | D13-2156-14   | GEAR                |                  |
| 28                                            | 3B          |             | D13-2157-04   | GEAR                |                  |
| 29                                            | 2B          |             | D13-2158-04   | GEAR                |                  |
| 30                                            | 2B          |             | D13-2168-04   | GEAR                |                  |
| 31                                            | 3B          |             | D13-2171-04   | GEAR                |                  |
| 32                                            | 1B          |             | D13-2400-13   | RACK (GEAR)         |                  |
| 33                                            | 2A          |             | D14-0759-04   | ROLLER              |                  |
| 35                                            | 2B          |             | D21-2382-04   | SHAFT               |                  |
| 36                                            | 1A          |             | D23-0954-04   | RETAINER            |                  |
| 37                                            | 1B          |             | D39-0246-05   | DAMPER              |                  |
| 38                                            | 2B          |             | G01-3072-04   | EXTENSION SPRING    |                  |
| 39                                            | 2A          |             | G01-3073-04   | TORSION COIL SPRING |                  |
| 40                                            | 2A          |             | G01-3074-04   | EXTENSION SPRING    |                  |
| 41                                            | 1B          |             | G01-4615-04   | EXTENSION SPRING    |                  |
| 42                                            | 2A          |             | G01-3076-04   | EXTENSION SPRING    |                  |
| 43                                            | 1B          |             | G01-3077-14   | EXTENSION SPRING    |                  |
| 44                                            | 2B          |             | G02-1399-04   | FLAT SPRING         |                  |

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                   | Desti-<br>nation |
|----------|-------------|-------------|-------------|-------------------------------|------------------|
| 45       | 2B          |             | G02-1547-04 | FLAT SPRING                   |                  |
| 51       | 1A          |             | J22-0473-21 | MOUNTING HARDWARE             |                  |
| 52       | 3B          |             | J22-0474-12 | MOUNTING HARDWARE             |                  |
| 53       | 1B          |             | J22-0519-03 | MOUNTING HARDWARE             |                  |
| 55       | 1A          |             | J90-1138-31 | GUIDE                         |                  |
| 56       | 1B          |             | J90-1023-03 | GUIDE                         |                  |
| DFPC1    | 3A          |             | J86-0027-05 | FPC (LEAD FREE)               |                  |
| A        | 2B          |             | N09-4460-15 | TAPTITE SCREW (PT2X8)         |                  |
| B        | 1B          |             | N09-6317-05 | TAPTITE SCREW (1.6X6.0)       |                  |
| C        | 2B          |             | N09-6004-15 | MACHINE SCREW (M1.7X2.5)      |                  |
| E        | 2B          |             | N09-6007-15 | MACHINE SCREW (M2X2)          |                  |
| F        | 1A          |             | N09-6051-15 | TAPTITE SCREW (PT2X5)         |                  |
| G        | 2A          |             | N19-2163-04 | FLAT WASHER (1.6X6X0.25)      |                  |
| H        | 1B          |             | N39-2020-48 | PAN HEAD MACHINE SCREW (M2X2) |                  |
| J        | 1B          |             | N09-6108-15 | TAPTITE SCREW (M2X3.5)        |                  |
| K        | 3B          |             | N09-6155-15 | SEMS (TAPTITE SCREW) (PT2X6)  |                  |
| DM1      | 3B          |             | T42-1066-14 | DC MOTOR (SPINDLE)            |                  |
| DM2      | 2B          |             | T42-1067-14 | DC MOTOR (LOADING/SLED)       |                  |
| DPU1     | 2B          |             | X93-2130-01 | OPTICAL PICKUP ASSY (LF)      |                  |