


A

B

- A : N09-6108-15  
 B : N09-6426-15  
 C : N09-6735-05  
 D : N09-6737-15  
 E : N09-6738-15  
 F : N19-2335-14  
 G : N35-2003-48  
 H : N39-1720-48



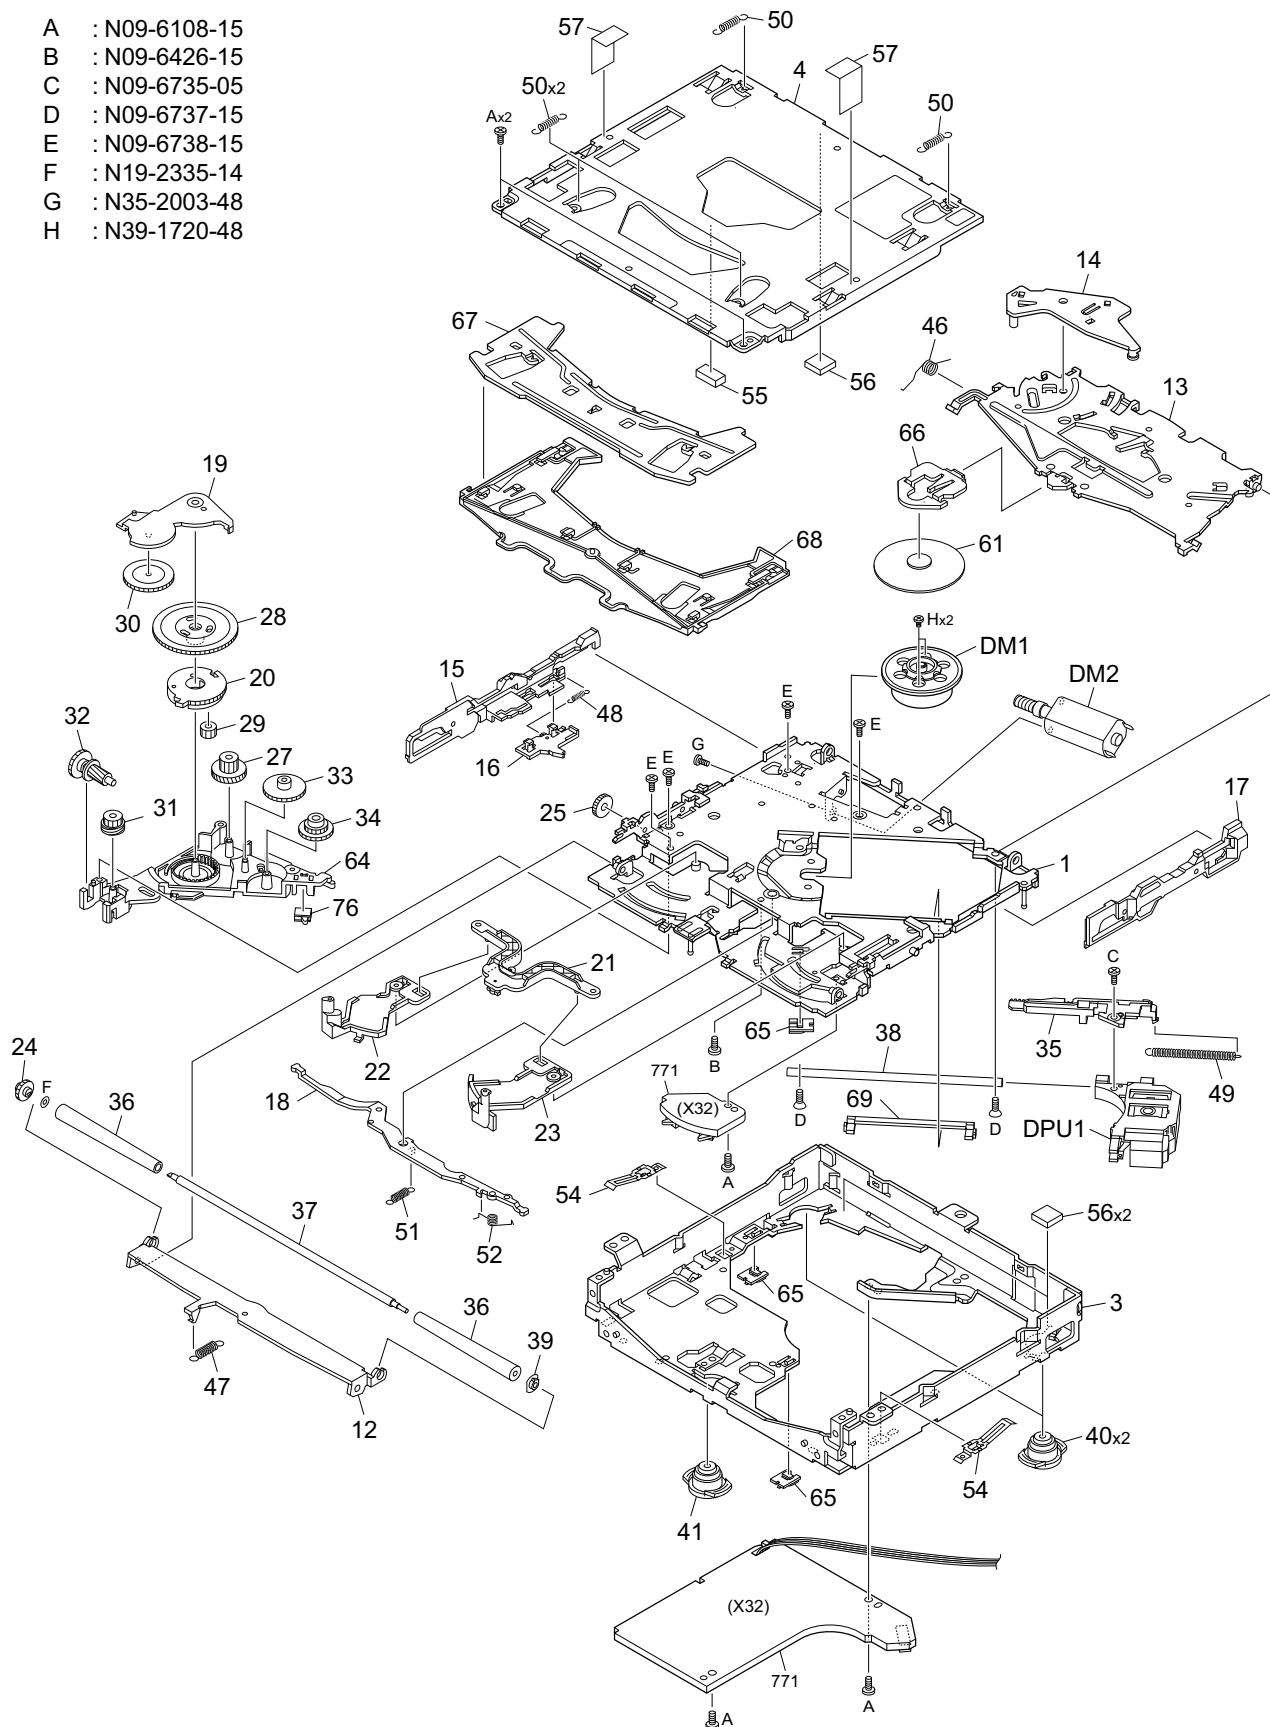

# PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

| Ref.No.                                                            | A<br>d<br>d<br>w | N<br>e<br>w | Parts No.    | Description                     | Dest<br>inati<br>on | Ref.No.                               | A<br>d<br>d<br>w | N<br>e<br>w | Parts No.     | Description                | Dest<br>inati<br>on |
|--------------------------------------------------------------------|------------------|-------------|--------------|---------------------------------|---------------------|---------------------------------------|------------------|-------------|---------------|----------------------------|---------------------|
| <b>KDC-348U/4751SD/BT41U/BT648U/U4549/U4549SD/U549BT/X395/X695</b> |                  |             |              |                                 |                     | -                                     |                  | *           | H54-5024-03   | ITEM CARTON CASE           | K2                  |
| 201                                                                | 1C               |             | A02-2757-13  | PLASTIC CABINET ASSY            | M3M1M2              | -                                     |                  | *           | H54-5025-03   | ITEM CARTON CASE           | K3                  |
| 202                                                                | 1D               | *           | A52-1156-01  | TOP COVER                       |                     | -                                     |                  | *           | H54-5026-03   | ITEM CARTON CASE           | M3                  |
| 204                                                                | 2C               | *           | A46-1918-01  | REAR COVER                      |                     | -                                     |                  | *           | H54-5027-03   | ITEM CARTON CASE           | K                   |
| 205                                                                | 3D               | *           | A40-1410-01  | BOTTOM PLATE                    |                     | -                                     |                  | *           | H54-5028-03   | ITEM CARTON CASE           | K1                  |
| 208                                                                | 2C               | *           | A22-3297-03  | SUB PANEL ASSY                  | KK1E1               | -                                     |                  | *           | H54-5029-03   | ITEM CARTON CASE           | E1                  |
| 208                                                                | 2C               | *           | A22-3297-03  | SUB PANEL ASSY                  | K2K3M3              | -                                     |                  | *           | H54-5031-03   | ITEM CARTON CASE           | M1                  |
| 208                                                                | 2C               | *           | A22-3298-13  | SUB PANEL ASSY                  | M1                  | -                                     |                  | *           | H54-5032-03   | ITEM CARTON CASE           | E3                  |
| PA1                                                                | 3C               | *           | A64-5235-12  | PANEL ASSY                      | E3M2                | -                                     |                  | *           | H54-5033-03   | ITEM CARTON CASE           | M2                  |
| PA1                                                                | 3C               | *           | A64-5236-02  | PANEL ASSY                      | K2                  | 247                                   | 1C               | *           | J22-2049-03   | MOUNTING HARDWARE ASSY     |                     |
| PA1                                                                | 3C               | *           | A64-5237-12  | PANEL ASSY                      | K3                  | 250                                   | 3C               |             | GE34053-001A  | ACCENT BUTTON BASE         |                     |
| PA1                                                                | 3C               | *           | A64-5240-02  | PANEL ASSY                      | M3                  | 251                                   | 3C               |             | GE34052-001A  | ACCENT BUTTON TOP (iPod)   | K2K3M               |
| PA1                                                                | 3C               | *           | A64-5241-12  | PANEL ASSY                      | K                   | 251                                   | 3C               | *           | K28-0453-03   | ACCENT BUTTON TOP (TEL)    | KK1E1               |
| PA1                                                                | 3C               | *           | A64-5242-12  | PANEL ASSY                      | K1                  | 251                                   | 3C               | *           | K28-0453-03   | ACCENT BUTTON TOP (TEL)    | M1                  |
| PA1                                                                | 3C               | *           | A64-5244-12  | PANEL ASSY                      | E1                  | 251                                   | 3C               | *           | K28-0454-03   | ACCENT BUTTON TOP (SD)     | E3M2                |
| PA1                                                                | 3C               | *           | A64-5245-02  | PANEL ASSY                      | M1                  | 252                                   | 3C               |             | GE34059-001A  | EJECT BUTTON               |                     |
| PA1                                                                | 3C               | *           | A64-5246-12  | PANEL ASSY                      | E3                  | 253                                   | 3C               |             | GE34060-001A  | DETACH BUTTON              |                     |
| RC1                                                                | 1C               |             | A70-2104-05  | REMOTE CONTROLLER ASSY (RC-405) | M2                  | 254                                   | 3C               |             | GE34061-001A  | SRC BUTTON                 |                     |
| RC1                                                                | 1C               |             | A70-2104-05  | REMOTE CONTROLLER ASSY (RC-405) | KK1M1               | 255                                   | 3C               |             | GE34063-001A  | SEARCH BUTTON              |                     |
| RC1                                                                | 1C               |             | A70-2104-05  | REMOTE CONTROLLER ASSY (RC-405) | K2K3M3              | 256                                   | 3C               |             | GE34064-001A  | PRESET BUTTON              |                     |
| -                                                                  |                  | *           | B64-4798-10  | INST. MANUAL (ENG.FRE.SPA.)     | M2                  | 259                                   | 3C               |             | GE40511-001A  | VOL KNOB RUBBER            | K1E1M               |
| -                                                                  |                  | *           | B64-4798-10  | INST. MANUAL (ENG.FRE.SPA.)     | K1                  | 259                                   | 3C               |             | GE40511-001A  | VOL KNOB RUBBER            | K2K3K               |
| -                                                                  |                  | *           | B64-4799-10  | INST. MANUAL (ENGLISH)          | K2K3K               | 259                                   | 3C               |             | GE40511-001A  | VOL KNOB RUBBER            | M2                  |
| -                                                                  |                  | *           | B64-4800-10  | INST. MANUAL (FRE.GER.DUT.)     | E1E3                | 259                                   | 3C               |             | GE40511-002A  | VOL KNOB RUBBER            | M3E3                |
| -                                                                  |                  | *           | B64-4801-10  | INST. MANUAL (ITA.SPA.POR.)     | E1E3                | 261                                   | 1C               |             | N99-1757-15   | SCREW SET                  | KK1M1               |
| -                                                                  |                  | *           | B64-4802-10  | INST. MANUAL (RUS.URK.)         | E1E3                | 261                                   | 1C               |             | N99-1757-15   | SCREW SET                  | K2K3M               |
| -                                                                  |                  | *           | B64-4803-10  | INST. MANUAL (ENG.ARA.)         | E1E3                | 261                                   | 1C               |             | N99-1757-15   | SCREW SET                  | M2                  |
| -                                                                  |                  | *           | B64-4804-10  | INST. MANUAL (S-CHINESE)        | E1E3                | 263                                   | 1C               |             | N80-2008-48   | TAP SCREW (ACCESSORY)      | KK1M1               |
| 216                                                                | 3C               |             | GE10289-001A | LIGHT GUIDE                     | M1                  | 263                                   | 1C               |             | N80-2008-48   | TAP SCREW (ACCESSORY)      | K2K3M               |
| 217                                                                | 1C               | *           | B07-3361-02  | TRIM PLATE                      | K2K1E1              | 263                                   | 1C               |             | N80-2008-48   | TAP SCREW (ACCESSORY)      | M2                  |
| 217                                                                | 1C               | *           | B07-3361-02  | TRIM PLATE                      | M1                  | A                                     | 3C               |             | N80-2006-48   | TAP SCREW                  |                     |
| 217                                                                | 1C               |             | GE20274-001A | TRIM PLATE                      | E3M2                | B                                     | 3D               |             | N09-6358-05   | TAPTITE SCREW              | E3M2                |
| 217                                                                | 1C               |             | GE20274-001A | TRIM PLATE                      | K3M3K               | C                                     | 2C               |             | N09-6758-05   | TAPTITE SCREW              |                     |
| 221                                                                | 2C               |             | GE34045-001A | LOCK LEVER                      |                     | D                                     | 3D               |             | N35-2610-48   | BINDING HEAD MACHINE SCREW |                     |
| 222                                                                | 2C               |             | GE34046-001A | RELEASE LEVER                   |                     | E                                     | 2C               |             | N80-2008-43   | PAN HEAD TAPTITE SCREW     |                     |
| 223                                                                | 1C               | *           | D10-7139-04  | LEVER                           |                     | G                                     | 1D               |             | N86-2604-43   | BINDING HEAD TAPTITE SCREW |                     |
| 226                                                                | 3C               |             | GE34058-001A | CONDUCTIVE RUBBER               |                     | H                                     | 1D               |             | N86-2606-48   | BINDING HEAD TAPTITE SCREW |                     |
| ⚠ DC1                                                              | 1C               |             | E30-6933-05  | DC CORD                         | KK1M1               | 265                                   | 3C               |             | T91-1007-05   | MICROPHONE ASSY            | KE1M1               |
| ⚠ DC1                                                              | 1C               |             | E30-6933-05  | DC CORD                         | K2K3M3              | 266                                   | 1C               |             | W01-1664-05   | CARRYING CASE              | K2K1                |
| ⚠ DC1                                                              | 1C               |             | E30-6933-05  | DC CORD                         | M2                  | 266                                   | 1C               |             | W01-1710-05   | CARRYING CASE              | E3                  |
| ⚠ DC2                                                              | 1C               |             | E30-6934-05  | DC CORD                         | E1E3                | 266                                   | 1C               |             | W01-1710-05   | CARRYING CASE              | K3KE1               |
| FC1                                                                | 2D               |             | E39-1077-05  | FLAT CABLE                      |                     | 268                                   | 1C               |             | W01-1768-15   | MICROPHONE (3m)            | K1                  |
| 232                                                                | 2D               |             | F11-1874-03  | SHIELDING COVER                 | KK1E1               | DME1                                  | 1D               | *           | X92-6370-04   | MECHANISM ASSY (DXM-9B24W) |                     |
| 232                                                                | 2D               |             | F11-1874-03  | SHIELDING COVER                 | K2K3M3              | <b>SYNTHESIZER UNIT (X15-1552-70)</b> |                  |             |               |                            |                     |
| 232                                                                | 2D               |             | F11-1874-03  | SHIELDING COVER                 | M1                  | C1 -3                                 |                  |             | CC73HCH1H221J | CHIP C 220PF J             | E3M2                |
| 232                                                                | 2D               | *           | F11-1884-13  | SHIELDING COVER                 | E3M2                | CN1                                   |                  | *           | E41-3250-05   | PIN ASSY                   | E3M2                |
| 233                                                                | 3C               |             | GE34055-001A | USB DOOR COVER                  |                     | J1                                    |                  |             | E68-0826-05   | JACK                       | E3M2                |
| ⚠ F1                                                               | 2D               |             | F52-0023-05  | FUSE (MINI BLADE TYPE) (10A)    |                     | <b>SWITCH UNIT (X16-707x-xx)</b>      |                  |             |               |                            |                     |
| 238                                                                | 2C               |             | GE40504-001A | SPRING (TORSION)                |                     | D51                                   |                  |             | B30-1566-05   | LED (1608,RED)             |                     |
| 239                                                                | 2C               |             | GE40505-001A | SPRING (COMPRESSION)            |                     | D52 -55                               |                  |             | B30-1788-05   | LED (1608,WHITE)           | M3M1                |
| 240                                                                | 3C               |             | GE40505-002A | SPRING (DETACH)                 |                     | D52 -55                               |                  |             | B30-3210-05   | LED (1608,BLUE)            | K1E1E               |

**K:** KDC-BT648U **K1:** KDC-X695 **K2:** KDC-X395 **K3:** KDC-348U

**M1:** KDC-U549BT **M2:** KDC-U4549SD **M3:** KDC-U4549 **E1:** KDC-BT41U **E3:** KDC-4751SD

⚠ indicates safety critical components.

# PARTS LIST

## SWITCH UNIT (X16-707x-xx)

| Ref.No. | A<br>d<br>d<br>w | N<br>e<br>w | Parts No.     | Description                | Dest<br>inati<br>on |
|---------|------------------|-------------|---------------|----------------------------|---------------------|
| D52 -55 |                  |             | B30-3210-05   | LED (1608,BLUE)            | K2K3K               |
| D60 -64 |                  |             | B30-3210-05   | LED (1608,BLUE)            | M3M2                |
| D60 -65 |                  |             | B30-1779-05   | LED (1608,SR)              | K3E3                |
| D60 -69 |                  |             | B30-1788-05   | LED (1608,WHITE)           | M1                  |
| D60 -69 |                  |             | B30-3210-05   | LED (1608,BLUE)            | E1                  |
| D60 -69 |                  |             | B30-3210-05   | LED (1608,BLUE)            | K2KK1               |
| D65 -69 |                  |             | B30-1788-05   | LED (1608,WHITE)           | M3M2                |
| D66 -69 |                  |             | B30-3210-05   | LED (1608,BLUE)            | K3E3                |
| C10     |                  |             | CK73HB1A104K  | CHIP C 0.10UF K            |                     |
| C11     |                  |             | CK73GB1C104K  | CHIP C 0.10UF K            |                     |
| C12     |                  |             | CK73HB1A104K  | CHIP C 0.10UF K            |                     |
| C13     |                  |             | CK73GB1H102K  | CHIP C 1000PF K            |                     |
| C21     |                  |             | CK73HB0J105K  | CHIP C 1.0UF K             |                     |
| C81 ,82 |                  |             | CC73GCH1H471J | CHIP C 470PF J             |                     |
| C83     |                  |             | CK73GB1H472K  | CHIP C 4700PF K            |                     |
| C84     |                  |             | CK73GB1H102K  | CHIP C 1000PF K            |                     |
| C100    |                  |             | CK73GB1H102K  | CHIP C 1000PF K            |                     |
| CN1     |                  |             | E41-1486-05   | PIN ASSY                   | KE1M1               |
| J1      |                  | *           | E59-0864-05   | RECTANGULAR PLUG           |                     |
| J2      |                  |             | QNS0308-001   | DIA 3.5 TYPE JACK          |                     |
| J3      |                  |             | QNZ1057-001   | USB CONNECTOR              |                     |
| L2      |                  |             | L92-0639-05   | CHIP FERRITE               | K1E1E3              |
| L2      |                  |             | L92-0639-05   | CHIP FERRITE               | K2K3K               |
| CP11    |                  |             | RK74GA1J101J  | CHIP-COM 100 J 1/16W       |                     |
| CP13    |                  |             | RK74HB1J101J  | CHIP-COM 100 J 1/16W       |                     |
| CP14    |                  |             | RK74HB1J473J  | CHIP-COM 47K J 1/16W       |                     |
| CP15    |                  |             | RK74HB1J101J  | CHIP-COM 100 J 1/16W       |                     |
| R10     |                  |             | RK73HB1J104J  | CHIP R 100K J 1/16W        |                     |
| R12     |                  |             | RK73HB1J223J  | CHIP R 22K J 1/16W         |                     |
| R13     |                  |             | RK73HB1J101J  | CHIP R 100 J 1/16W         |                     |
| R15     |                  |             | RK73HB1J101J  | CHIP R 100 J 1/16W         |                     |
| R22     |                  |             | RK73HB1J101J  | CHIP R 100 J 1/16W         |                     |
| R30     |                  |             | RK73PB2H7R5J  | CHIP R 7.5 J 1/2W          |                     |
| R51     |                  |             | RK73EB2E821J  | CHIP R 820 J 1/4W          |                     |
| R52 ,53 |                  |             | RK73GB2A821J  | CHIP R 820 J 1/10W         |                     |
| R56 -58 |                  |             | RK73FB2B511J  | CHIP R 510 J 1/8W          | K1E1M1              |
| R56 -58 |                  |             | RK73FB2B511J  | CHIP R 510 J 1/8W          | K2M3K               |
| R56 -58 |                  |             | RK73FB2B511J  | CHIP R 510 J 1/8W          | M2                  |
| R56 -58 |                  |             | RK73FB2B621J  | CHIP R 620 J 1/8W          | K3E3                |
| R59 ,60 |                  |             | RK73FB2B821J  | CHIP R 820 J 1/8W          |                     |
| R81 ,82 |                  |             | RK73GB2A220J  | CHIP R 22 J 1/10W          |                     |
| R106    |                  |             | RK73GB2A000J  | CHIP R 0.0 J 1/10W         | M3M1M2              |
| S2 ,3   |                  |             | NSW0326-001X  | TACT SWITCH                |                     |
| S10 ,11 |                  |             | NSW0326-001X  | TACT SWITCH                |                     |
| S15 ,16 |                  |             | NSW0326-001X  | TACT SWITCH                |                     |
| S1      |                  |             | T99-0484-05   | ROTARY ENCODER             |                     |
| D1      |                  |             | RKZ4.7K(B2)   | ZENER DIODE                |                     |
| D9 ,10  |                  |             | RKZ4.7K(B2)   | ZENER DIODE                | KE1M1               |
| D79     |                  |             | DA204U        | DIODE                      |                     |
| D81     |                  |             | HZM6.8ZMWA-E  | ZENER DIODE                |                     |
| D82     |                  |             | DA204U        | DIODE                      |                     |
| ED1     |                  |             | QLF0202-001   | FLUORESCENT INDICATOR TUBE |                     |

| Ref.No.                                         | A<br>d<br>d<br>w | N<br>e<br>w | Parts No.     | Description                  | Dest<br>inati<br>on |
|-------------------------------------------------|------------------|-------------|---------------|------------------------------|---------------------|
| IC2                                             |                  |             | KSM-2003TN5B  | IR DETECT FOR REMOTO CONTROL |                     |
| Q20                                             |                  |             | RT1N436M-T111 | TRANSISTOR                   |                     |
| Q21 -23                                         |                  |             | RT1P141M-T111 | TRANSISTOR                   |                     |
| <b>CD PLAYER UNIT (X32-6250-02) IN CD MECHA</b> |                  |             |               |                              |                     |
| C1                                              |                  |             | CK73FB0J106K  | CHIP C 10UF K                |                     |
| C3                                              |                  |             | CC73GCH1H680J | CHIP C 68PF J                |                     |
| C4                                              |                  |             | CK73GB1A105K  | CHIP C 1.0UF K               |                     |
| C6                                              |                  |             | CK73FB1C105K  | CHIP C 1.0UF K               |                     |
| C8                                              |                  |             | CK73GB1H222K  | CHIP C 2200PF K              |                     |
| C9 ,10                                          |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C11                                             |                  |             | CK73GB1H153K  | CHIP C 0.015UF K             |                     |
| C12                                             |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C13                                             |                  |             | CK73GB1H332K  | CHIP C 3300PF K              |                     |
| C14                                             |                  |             | CK73GB1H103K  | CHIP C 0.010UF K             |                     |
| C15                                             |                  |             | CK73GB1C333K  | CHIP C 0.033UF K             |                     |
| C16                                             |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C18                                             |                  |             | CK73GB1H153K  | CHIP C 0.015UF K             |                     |
| C19                                             |                  |             | CK73GB1H103K  | CHIP C 0.010UF K             |                     |
| C20                                             |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C22                                             |                  |             | CK73GB1H103K  | CHIP C 0.010UF K             |                     |
| C23                                             |                  |             | CK73GB1H153K  | CHIP C 0.015UF K             |                     |
| C24                                             |                  |             | CC73GCH1H470J | CHIP C 47PF J                |                     |
| C25                                             |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C26                                             |                  |             | CK73GB1A105K  | CHIP C 1.0UF K               |                     |
| C27                                             |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C29 ,30                                         |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C31                                             |                  |             | CK73GB1A105K  | CHIP C 1.0UF K               |                     |
| C36                                             |                  |             | CK73GB1A105K  | CHIP C 1.0UF K               |                     |
| C41 ,42                                         |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C43 ,44                                         |                  |             | CK73GB1H102K  | CHIP C 1000PF K              |                     |
| C45                                             |                  |             | CK73GB1H103K  | CHIP C 0.010UF K             |                     |
| C46                                             |                  |             | CK73GB1A105K  | CHIP C 1.0UF K               |                     |
| C47                                             |                  |             | CC73GCH1H560J | CHIP C 56PF J                |                     |
| C48                                             |                  |             | CC73GCH1H101J | CHIP C 100PF J               |                     |
| C49                                             |                  |             | CK73GB1A105K  | CHIP C 1.0UF K               |                     |
| C50                                             |                  |             | CK73FB1A225K  | CHIP C 2.2UF K               |                     |
| C51                                             |                  |             | CK73FB0J106K  | CHIP C 10UF K                |                     |
| C54                                             |                  |             | CK73FB0J106K  | CHIP C 10UF K                |                     |
| C57                                             |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C59                                             |                  |             | CK73GB1H472K  | CHIP C 4700PF K              |                     |
| C61                                             |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| C101                                            |                  |             | CK73GB1A105K  | CHIP C 1.0UF K               |                     |
| C103                                            |                  |             | CK73GB1C104K  | CHIP C 0.10UF K              |                     |
| CN1                                             |                  |             | E41-2954-05   | FLAT CABLE CONNECTOR         |                     |
| CN2                                             |                  |             | E41-2630-05   | FLAT CABLE CONNECTOR         |                     |
| X1                                              |                  |             | L78-1221-05   | RESONATOR (16.93MHZ)         |                     |
| CP7                                             |                  |             | RK74GB1J103J  | CHIP-COM 10K J 1/16W         |                     |
| R1                                              |                  |             | RK73GB2A560J  | CHIP R 56 J 1/10W            |                     |
| R2                                              |                  |             | RK73GB2A472J  | CHIP R 4.7K J 1/10W          |                     |
| R3                                              |                  |             | RK73GB2A4R7J  | CHIP R 4.7 J 1/10W           |                     |
| R4                                              |                  |             | RK73GB2A104J  | CHIP R 100K J 1/10W          |                     |
| R5                                              |                  |             | RK73GB2A225J  | CHIP R 2.2M J 1/10W          |                     |
| R6                                              |                  |             | RK73GB2A102J  | CHIP R 1.0K J 1/10W          |                     |

K: KDC-BT648U K1: KDC-X695 K2: KDC-X395 K3: KDC-348U

M1: KDC-U549BT M2: KDC-U4549SD M3: KDC-U4549 E1: KDC-BT41U E3: KDC-4751SD

▲ indicates safety critical components.

# PARTS LIST

## CD PLAYER UNIT (X32-6250-02) IN CD MECHA

| Ref.No.                            | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description         | Dest<br>inati<br>on |
|------------------------------------|-------------|-------------|---------------|---------------------|---------------------|
| R7                                 |             |             | RK73GB2A221J  | CHIP R 220 J 1/10W  |                     |
| R8                                 |             |             | RK73GB2A622J  | CHIP R 6.2K J 1/10W |                     |
| R9                                 |             |             | RK73GB2A913J  | CHIP R 91K J 1/10W  |                     |
| R10                                |             |             | RK73GB2A334J  | CHIP R 330K J 1/10W |                     |
| R11                                |             |             | RK73GB2A153J  | CHIP R 15K J 1/10W  |                     |
| R13                                |             |             | RK73GB2A104J  | CHIP R 100K J 1/10W |                     |
| R14                                |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W  |                     |
| R15                                |             |             | RK73GB2A101J  | CHIP R 100 J 1/10W  |                     |
| R17 ,18                            |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W  |                     |
| R25                                |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W  |                     |
| R27                                |             |             | RK73EB2E4R7J  | CHIP R 4.7 J 1/4W   |                     |
| R39                                |             |             | RK73GB2A105J  | CHIP R 1.0M J 1/10W |                     |
| R40                                |             |             | RK73GB2A681J  | CHIP R 680 J 1/10W  |                     |
| R43 ,44                            |             |             | RK73GB2A4R7J  | CHIP R 4.7 J 1/10W  |                     |
| R49                                |             |             | RK73GB2A393J  | CHIP R 39K J 1/10W  |                     |
| R50                                |             |             | RK73GB2A363J  | CHIP R 36K J 1/10W  |                     |
| R51                                |             |             | RK73GB2A102J  | CHIP R 1.0K J 1/10W |                     |
| R52 -58                            |             |             | RK73GB2A101J  | CHIP R 100 J 1/10W  |                     |
| R59                                |             |             | RK73GB2A204J  | CHIP R 200K J 1/10W |                     |
| R64                                |             |             | RK73GB2A223J  | CHIP R 22K J 1/10W  |                     |
| R65                                |             |             | RK73GB2A333J  | CHIP R 33K J 1/10W  |                     |
| R69 -73                            |             |             | RK73GB2A101J  | CHIP R 100 J 1/10W  |                     |
| R74 ,75                            |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W  |                     |
| R76                                |             |             | RK73GB2A202J  | CHIP R 2.0K J 1/10W |                     |
| R102                               |             |             | RK73GB2A102J  | CHIP R 1.0K J 1/10W |                     |
| S1 ,2                              |             |             | S68-0924-05   | PUSH SWITCH         |                     |
| D2                                 |             |             | DAP202U       | DIODE               |                     |
| D3 ,4                              |             |             | DA204U        | DIODE               |                     |
| IC3                                |             |             | BD8222EFV     | ANALOGUE IC         |                     |
| IC4                                |             |             | JCV8023       | MOS-IC              |                     |
| IC5                                |             |             | XC6415S001P1  | MOS-IC              |                     |
| Q1                                 |             |             | 2SA2188-T1(E) | TRANSISTOR          |                     |
| Q14                                |             |             | RUE003N02     | FET                 |                     |
| <b>ELECTRIC UNIT (X34-696x-xx)</b> |             |             |               |                     |                     |
| C1                                 |             |             | C90-6906-05   | ELECTRO 3300UF 16WV |                     |
| C4                                 |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C6                                 |             |             | CK73GB1H104K  | CHIP C 0.10UF K     |                     |
| C6                                 |             |             | CK73GB1H104K  | CHIP C 0.10UF K     |                     |
| C6 ,7                              |             |             | CK73GB1H104K  | CHIP C 0.10UF K     |                     |
| C8                                 |             |             | CD04BN1C221M  | ELECTRO 220UF 16WV  |                     |
| C9                                 |             |             | CD04AV0J101M  | ELECTRO 100UF 6.3WV |                     |
| C11 -13                            |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C15                                |             |             | CK73GB1C224K  | CHIP C 0.22UF K     |                     |
| C21                                |             |             | CK73GB1H103K  | CHIP C 0.010UF K    |                     |
| C22 ,23                            |             |             | CK73GB1A105K  | CHIP C 1.0UF K      |                     |
| C24                                |             |             | CD04AV0J470M  | ELECTRO 47UF 6.3WV  |                     |
| C52                                |             |             | CK73FB0J106K  | CHIP C 10UF K       |                     |
| C53                                |             |             | CC73HCH1H151J | CHIP C 150PF J      |                     |
| C54                                |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C55                                |             |             | CK73GB1H102K  | CHIP C 1000PF K     |                     |
| C58                                |             |             | CK73EB1H475K  | CHIP C 4.7UF K      |                     |
| C71                                |             |             | CK73HB1A104K  | CHIP C 0.10UF K     |                     |
| C72                                |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C73                                |             | *           | C90-6990-05   | ELECTRO 220UF 10WV  |                     |
| C91                                |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV   |                     |
| C92 ,93                            |             |             | CK73GB1H102K  | CHIP C 1000PF K     |                     |
| C94                                |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV   |                     |
| C101                               |             |             | CK73HB1E103K  | CHIP C 0.010UF K    |                     |
| C102                               |             |             | CK73GB1H104K  | CHIP C 0.10UF K     |                     |
| C201                               |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C202,203                           |             |             | CC73HCH1H220J | CHIP C 22PF J       |                     |
| C204                               |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C205                               |             |             | CK73GB1H102K  | CHIP C 1000PF K     |                     |
| C210-212                           |             |             | CK73HB1A104K  | CHIP C 0.10UF K     |                     |
| C213                               |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C214-216                           |             |             | CK73HB1A104K  | CHIP C 0.10UF K     |                     |
| C217,218                           |             |             | CC73HCH1H080D | CHIP C 8.0PF D      |                     |
| C261                               |             |             | CK73HB1A104K  | CHIP C 0.10UF K     |                     |
| C301,302                           |             |             | CD04AV1HR47M  | ELECTRO 0.47UF 50WV |                     |
| C303,304                           |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C305,306                           |             |             | CK73GB1H102K  | CHIP C 1000PF K     |                     |
| C307                               |             |             | CD04AV0J470M  | ELECTRO 47UF 6.3WV  |                     |
| C308                               |             |             | CK73GB1H103K  | CHIP C 0.010UF K    |                     |
| C311                               |             |             | CC73GCH1H040C | CHIP C 4.0PF C      |                     |
| C401                               |             |             | CK73GB1A105K  | CHIP C 1.0UF K      |                     |
| C402                               |             |             | CK73GB1A474K  | CHIP C 0.47UF K     |                     |
| C403                               |             |             | CK73GB1A105K  | CHIP C 1.0UF K      |                     |
| C404                               |             |             | CK73GB1A474K  | CHIP C 0.47UF K     |                     |
| C405-409                           |             |             | CK73GB1A105K  | CHIP C 1.0UF K      |                     |
| C410                               |             | *           | CD04AV1H2R2M  | ELECTRO 2.2UF 50WV  |                     |
| C411                               |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV   |                     |
| C411                               |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV   |                     |
| C411                               |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV   |                     |
| C411,412                           |             |             | CD04AV1C470M  | ELECTRO 47UF 16WV   |                     |
| C412                               |             |             | CD04AV1C470M  | ELECTRO 47UF 16WV   |                     |
| C412                               |             |             | CD04AV1C470M  | ELECTRO 47UF 16WV   |                     |
| C415-418                           |             |             | CC73GCH1H100D | CHIP C 10PF D       |                     |
| C419                               |             |             | CC73GCH1H470J | CHIP C 47PF J       |                     |
| C501                               |             |             | CK73GB1H102K  | CHIP C 1000PF K     |                     |
| C502                               |             |             | CK73GB1A105K  | CHIP C 1.0UF K      |                     |
| C505                               |             |             | CK73GB1C224K  | CHIP C 0.22UF K     |                     |
| C506                               |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C507                               |             |             | CC73GCH1H090D | CHIP C 9.0PF D      |                     |
| C509-511                           |             |             | CK73GB1A105K  | CHIP C 1.0UF K      |                     |
| C512-514                           |             |             | CK73GB1H103K  | CHIP C 0.010UF K    |                     |
| C515                               |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C516                               |             |             | CK73GB1H103K  | CHIP C 0.010UF K    |                     |
| C517                               |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C518                               |             |             | CK73GB1H102K  | CHIP C 1000PF K     |                     |
| C519                               |             |             | CD04AV1C470M  | ELECTRO 47UF 16WV   |                     |
| C520                               |             |             | CK73GB1C104K  | CHIP C 0.10UF K     |                     |
| C523                               |             |             | CK73GB1H102K  | CHIP C 1000PF K     |                     |
| C524                               |             |             | CK73GB1C224K  | CHIP C 0.22UF K     |                     |
| C525                               |             |             | CC73GCH1H270J | CHIP C 27PF J       |                     |
| C527                               |             |             | CC73GCH1H150J | CHIP C 15PF J       |                     |
| C528                               |             |             | CC73GCH1H471J | CHIP C 470PF J      |                     |
| C530                               |             |             | CK73GB1H102K  | CHIP C 1000PF K     |                     |
| C531                               |             |             | CC73GCH1H070D | CHIP C 7.0PF D      |                     |

K: KDC-BT648U K1: KDC-X695 K2: KDC-X395 K3: KDC-348U

M1: KDC-U549BT M2: KDC-U4549SD M3: KDC-U4549 E1: KDC-BT41U E3: KDC-4751SD

▲ indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-696x-xx)

| Ref.No.  | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description            | Dest<br>inati<br>on | Ref.No.  | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description                   | Dest<br>inati<br>on |
|----------|-------------|-------------|---------------|------------------------|---------------------|----------|-------------|-------------|--------------|-------------------------------|---------------------|
| C532     |             |             | CC73GCH1H060D | CHIP C 6.0PF D         |                     | J701     |             |             | E63-0972-05  | PIN JACK                      | KK1M2               |
| C533     |             |             | CC73GCH1H020C | CHIP C 2.0PF C         |                     | J701     |             |             | E63-0972-05  | PIN JACK                      | K2K3M               |
| C539,540 |             |             | CC73GCH1H040C | CHIP C 4.0PF C         |                     | J701     |             |             | E63-0973-05  | PIN JACK                      | M1                  |
| C541     |             |             | CK73GB1H102K  | CHIP C 1000PF K        |                     | J701     |             |             | E63-0974-05  | PIN JACK                      | E1E3                |
| C601,602 |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | KK1M2               | J921     |             |             | E11-0625-05  | PHONE JACK                    | K1E1                |
| C601,602 |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | K2K3M3              | W551     | 2D          |             | E30-6803-05  | CORD WITH PLUG                |                     |
| C603     |             |             | CD04AV0J470M  | ELECTRO 47UF 6.3WV     | KK1M2               | F1       |             |             | F53-0406-05  | FUSE (UL,CSA) (2.5A)          |                     |
| C603     |             |             | CD04AV0J470M  | ELECTRO 47UF 6.3WV     | K2K3M3              |          |             |             |              |                               |                     |
| C701-706 |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV      | KK1M2               |          |             |             |              |                               |                     |
| C701-706 |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV      | K2K3M3              | L1       |             |             | L33-2459-05  | CHOKE COIL ASSY               |                     |
| C703-706 |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV      | M1                  | L51      |             |             | L33-2462-05  | SMALL FIXED INDUCTOR          |                     |
| C705,706 |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV      | E1E3                | L52,53   |             |             | L92-0639-05  | CHIP FERRITE                  |                     |
| C711-716 |             |             | CK73GB1H102K  | CHIP C 1000PF K        | KK1M2               | L302     |             |             | L92-0616-05  | CHIP FERRITE                  |                     |
| C711-716 |             |             | CK73GB1H102K  | CHIP C 1000PF K        | K2K3M3              | L401-405 |             |             | L92-0648-05  | CHIP FERRITE                  |                     |
| C713-716 |             |             | CK73GB1H102K  | CHIP C 1000PF K        | M1                  | L501     |             |             | L40-4791-58  | SMALL FIXED INDUCTOR          |                     |
| C715,716 |             |             | CK73GB1H102K  | CHIP C 1000PF K        | E1E3                | L502,503 |             |             | L33-1031-05  | SMALL FIXED INDUCTOR          |                     |
| C801-804 |             |             | CK73GB1C224K  | CHIP C 0.22UF K        |                     | L504     |             |             | L40-2781-58  | SMALL FIXED INDUCTOR (0.27UH) |                     |
| C805     |             |             | CD04AV1C330M  | ELECTRO 33UF 16WV      |                     | L505     |             |             | L40-4791-58  | SMALL FIXED INDUCTOR          |                     |
| C806     |             |             | CK73GB1A105K  | CHIP C 1.0UF K         |                     | L506     |             |             | L40-4781-58  | SMALL FIXED INDUCTOR          |                     |
| C807     |             |             | CK73HB0J105K  | CHIP C 1.0UF K         |                     | L507     |             |             | L40-1891-58  | SMALL FIXED INDUCTOR (1.8UH)  |                     |
| C808     |             |             | CK73GB1A105K  | CHIP C 1.0UF K         |                     | L508     |             |             | L40-4781-58  | SMALL FIXED INDUCTOR          |                     |
| C821-828 |             |             | CC73GCH1H471J | CHIP C 470PF J         |                     | L509     |             |             | L92-0607-05  | CHIP FERRITE                  | K1                  |
| C901     |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | KK1E1               | L509     |             |             | L92-0607-05  | CHIP FERRITE                  | K2K3K               |
| C901     |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | M1                  | L551     |             |             | QQR1872-001  | RF COIL                       |                     |
| C902     |             |             | CK73FB0J106K  | CHIP C 10UF K          | KK1E1               | X201     |             | *           | L77-3846-05  | CRYSTAL RESONATOR (12MHZ)     |                     |
| C902     |             |             | CK73FB0J106K  | CHIP C 10UF K          | M1                  | X202     |             |             | L77-2921-15  | CRYSTAL RESONATOR (32.768KHZ) |                     |
| C903,904 |             |             | CC73GCH1H101J | CHIP C 100PF J         | KK1E1               | X501     |             |             | L77-3824-05  | CRYSTAL RESONATOR (4.000MHZ)  |                     |
| C903,904 |             |             | CC73GCH1H101J | CHIP C 100PF J         | M1                  | J        | 2D          |             | N80-3008-48  | PAN HEAD TAPTITE SCREW        |                     |
| C905,906 |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | KK1E1               | K        | 2D          |             | N83-3005-48  | PAN HEAD TAPTITE SCREW        |                     |
| C905,906 |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | M1                  | L        | 2D          |             | N84-3014-48  | PAN HEAD TAPTITE SCREW        |                     |
| C908     |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV      | KK1E1               | M        | 3D          |             | N86-2606-48  | BINDING HEAD TAPTITE SCREW    |                     |
| C908     |             |             | CD04AV1V100M  | ELECTRO 10UF 35WV      | M1                  | N        | 2D          |             | N89-3010-48  | BINDING HEAD TAPTITE SCREW    |                     |
| C909     |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | KK1M1               | CP901    |             |             | RK74GA1J101J | CHIP-COM 100 J 1/16W          | KK1M1               |
| C909     |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | M2E1E3              | CP901    |             |             | RK74GA1J101J | CHIP-COM 100 J 1/16W          | M2E1E               |
| C910     |             |             | C90-6989-05   | ELECTRO 330UF 6.3WV    | KK1E1               | R1       |             |             | RD14BB2C102J | RD 1.0K J 1/6W                |                     |
| C910     |             |             | C90-6989-05   | ELECTRO 330UF 6.3WV    | M1                  | R2       |             |             | RK73HB1J102J | CHIP R 1.0K J 1/16W           |                     |
| C912     |             |             | CK73HB1A104K  | CHIP C 0.10UF K        | KK1E1               | R11      |             |             | RD14DB2H7R5J | SMALL-RD 7.5 J 1/2W           |                     |
| C912     |             |             | CK73HB1A104K  | CHIP C 0.10UF K        | M1                  | R51      |             |             | RK73GH2A303D | CHIP R 30K D 1/10W            |                     |
| C913     |             |             | CK73GB1H102K  | CHIP C 1000PF K        | KK1E1               | R52      |             |             | RK73GH2A164D | CHIP R 160K D 1/10W           |                     |
| C913     |             |             | CK73GB1H102K  | CHIP C 1000PF K        | M1                  | R53      |             |             | RK73HB1J164J | CHIP R 160K J 1/16W           |                     |
| C914     |             |             | CK73GB0J225K  | CHIP C 2.2UF K         | KK1M1               | R54      |             |             | RK73GH2A823D | CHIP R 82K D 1/10W            |                     |
| C914     |             |             | CK73GB0J225K  | CHIP C 2.2UF K         | M2E1E3              | R55      |             |             | RK73GH2A134D | CHIP R 130K D 1/10W           |                     |
| C915     |             |             | CK73FB1H334K  | CHIP C 0.33UF K        | KK1M1               | R57      |             |             | RK73HB1J102J | CHIP R 1.0K J 1/16W           |                     |
| C915     |             |             | CK73FB1H334K  | CHIP C 0.33UF K        | M2E1E3              | R59      |             |             | RK73EB2E150J | CHIP R 15 J 1/4W              |                     |
| C916,917 |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | KK1E1               | R71      |             |             | RK73GB2A223J | CHIP R 22K J 1/10W            |                     |
| C916,917 |             |             | CK73GB1C104K  | CHIP C 0.10UF K        | M1                  | R91      |             |             | RK73GB2A362J | CHIP R 3.6K J 1/10W           | K2K1                |
| C921     |             |             | CK73GB1H103K  | CHIP C 0.010UF K       | E1                  | R92      |             |             | RK73GB2A432J | CHIP R 4.3K J 1/10W           | K2K1                |
| CN301    |             |             | E41-1828-05   | FLAT CABLE CONNECTOR   |                     | R93      |             |             | RK73GB2A562J | CHIP R 5.6K J 1/10W           | K2K1                |
| CN901    |             |             | E41-3043-05   | PIN ASSY               | KK1M1               | R94      |             |             | RK73GB2A2R2J | CHIP R 2.2 J 1/10W            | K2K1                |
| CN901    |             |             | E41-3043-05   | PIN ASSY               | M2E1E3              | R95      |             |             | RK73FB2B102J | CHIP R 1.0K J 1/8W            | K2K1                |
| J1       |             |             | E58-0991-05   | RECTANGULAR RECEPTACLE |                     | R96      |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W           | K2K1                |
| J301     |             | *           | E58-1144-05   | RECTANGULAR RECEPTACLE |                     | R97      |             |             | RK73GB2A101J | CHIP R 100 J 1/10W            | K2K1                |
| J601     |             |             | E56-0855-05   | CYLINDRICAL RECEPTACLE | KK1M2               | R99      |             |             | RK73EB2E000J | CHIP R 0.0 J 1/4W             | E1E3M               |
| J601     |             |             | E56-0855-05   | CYLINDRICAL RECEPTACLE | K2K3M3              | R99      |             |             | RK73EB2E000J | CHIP R 0.0 J 1/4W             | K3M3K               |
|          |             |             |               |                        |                     | R99      |             |             | RK73EB2E000J | CHIP R 0.0 J 1/4W             | M2                  |

K: KDC-BT648U K1: KDC-X695 K2: KDC-X395 K3: KDC-348U

M1: KDC-U549BT M2: KDC-U4549SD M3: KDC-U4549 E1: KDC-BT41U E3: KDC-4751SD

▲ indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-696x-xx)

| Ref.No.  | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description         | Dest<br>inati<br>on | Ref.No.  | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description         | Dest<br>inati<br>on |
|----------|-------------|-------------|--------------|---------------------|---------------------|----------|-------------|-------------|--------------|---------------------|---------------------|
| R101     |             |             | RK73FB2B472J | CHIP R 4.7K J 1/8W  | K1                  | R242     |             |             | RK73GB2A000J | CHIP R 0.0 J 1/10W  |                     |
| R101     |             |             | RK73FB2B472J | CHIP R 4.7K J 1/8W  | K2K3K               | R261     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  |                     |
| R101,102 |             |             | RK73FB2B472J | CHIP R 4.7K J 1/8W  | M1M2                | R262     |             |             | RK73HB1J223J | CHIP R 22K J 1/16W  |                     |
| R101,102 |             |             | RK73FB2B472J | CHIP R 4.7K J 1/8W  | M3E1E3              | R263     |             |             | RK73HB1J333J | CHIP R 33K J 1/16W  |                     |
| R103-105 |             |             | RK73EB2E102J | CHIP R 1.0K J 1/4W  |                     | R266,267 |             |             | RK73GB2A332J | CHIP R 3.3K J 1/10W |                     |
| R106     |             |             | RK73EB2E333J | CHIP R 33K J 1/4W   |                     | R271     |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     |
| R107     |             |             | RK73HB1J103J | CHIP R 10K J 1/16W  |                     | R301     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                     |
| R108     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  |                     | R302     |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     |
| R109     |             |             | RK73FB2B683J | CHIP R 68K J 1/8W   |                     | R303     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                     |
| R110     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                     | R304     |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     |
| R111     |             |             | RK73EB2E203J | CHIP R 20K J 1/4W   |                     | R305,306 |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                     |
| R112     |             |             | RK73HB1J104J | CHIP R 100K J 1/16W |                     | R307     |             |             | RK73HB1J222J | CHIP R 2.2K J 1/16W |                     |
| R113     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                     | R308     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                     |
| R114,115 |             |             | RK73HB1J103J | CHIP R 10K J 1/16W  |                     | R309,310 |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     |
| R117     |             |             | RK73GB2A123J | CHIP R 12K J 1/10W  |                     | R311     |             |             | RK73GB2A101J | CHIP R 100 J 1/10W  |                     |
| R118     |             |             | RK73GB2A683J | CHIP R 68K J 1/10W  |                     | R312,313 |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     |
| R119     |             |             | RK73HB1J103J | CHIP R 10K J 1/16W  |                     | R314     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  |                     |
| R124     |             |             | RK73HB1J363J | CHIP R 36K J 1/16W  |                     | R315     |             |             | RK73GB2A100J | CHIP R 10 J 1/10W   |                     |
| R125     |             |             | RK73HB1J104J | CHIP R 100K J 1/16W |                     | R318,319 |             |             | RK73HB1J222J | CHIP R 2.2K J 1/16W |                     |
| R151     |             |             | RK73HB1J000J | CHIP R 0.0 J 1/16W  | M3M1M2              | R321     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                     |
| R152     |             |             | RK73HB1J000J | CHIP R 0.0 J 1/16W  | E1E3                | R322     |             |             | RK73HB1J104J | CHIP R 100K J 1/16W |                     |
| R201,202 |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                     | R323     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                     |
| R203     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  |                     | R324     |             |             | RK73EB2E102J | CHIP R 1.0K J 1/4W  |                     |
| R204     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                     | R327     |             |             | RK73HB1J225J | CHIP R 2.2M J 1/16W |                     |
| R205     |             |             | RK73HB1J102J | CHIP R 1.0K J 1/16W |                     | R331     |             |             | RK73EB2E102J | CHIP R 1.0K J 1/4W  |                     |
| R206     |             |             | RK73GB2A100J | CHIP R 10 J 1/10W   |                     | R332,333 |             |             | RK73EB2E222J | CHIP R 2.2K J 1/4W  |                     |
| R207     |             |             | RK73HB1J153J | CHIP R 15K J 1/16W  |                     | R334-336 |             |             | RK73EB2E102J | CHIP R 1.0K J 1/4W  |                     |
| R208     |             |             | RK73GB2A100J | CHIP R 10 J 1/10W   |                     | R337,338 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                     |
| R209     |             |             | RK73HB1J153J | CHIP R 15K J 1/16W  |                     | R339,340 |             |             | RK73EB2E100J | CHIP R 10 J 1/4W    |                     |
| R212     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | K3M3K               | R341     |             |             | RK73EB2E4R7J | CHIP R 4.7 J 1/4W   |                     |
| R213     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | K2K1                | R342     |             |             | RK73EB2E102J | CHIP R 1.0K J 1/4W  |                     |
| R213,214 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | E1E3M1              | R343     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                     |
| R213,214 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | M2                  | R347     |             |             | RK73GB2A000J | CHIP R 0.0 J 1/10W  |                     |
| R214     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | M3                  | R401,402 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                     |
| R215     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  | M3M1M2              | R403     |             |             | RK73HB1J472J | CHIP R 4.7K J 1/16W |                     |
| R215     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | K1                  | R404     |             |             | RK73EB2E2R2J | CHIP R 2.2 J 1/4W   |                     |
| R215     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | K2K3K               | R505     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W |                     |
| R216     |             |             | RK73HB1J104J | CHIP R 100K J 1/16W |                     | R506     |             |             | RK73EB2E220J | CHIP R 22 J 1/4W    |                     |
| R217     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                     | R507,508 |             |             | RK73GB2A221J | CHIP R 220 J 1/10W  |                     |
| R218     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                     | R513,514 |             |             | RK73GB2A684J | CHIP R 680K J 1/10W |                     |
| R219     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                     | R515,516 |             |             | RK73GB2A332J | CHIP R 3.3K J 1/10W |                     |
| R220     |             |             | RK73HB1J104J | CHIP R 100K J 1/16W |                     | R518     |             |             | RK73GB2A000J | CHIP R 0.0 J 1/10W  | M1M2                |
| R222     |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     | R518     |             |             | RK73GB2A000J | CHIP R 0.0 J 1/10W  | M3E1E               |
| R223     |             |             | RK73HB1J102J | CHIP R 1.0K J 1/16W |                     | R519,520 |             |             | RK73GB2A221J | CHIP R 220 J 1/10W  |                     |
| R224,225 |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     | R528     |             |             | RK73EB2E000J | CHIP R 0.0 J 1/4W   | K1E1E               |
| R226,227 |             |             | RK73HB1J223J | CHIP R 22K J 1/16W  |                     | R528     |             |             | RK73EB2E000J | CHIP R 0.0 J 1/4W   | K2K3K               |
| R228,229 |             |             | RK73GB2A101J | CHIP R 100 J 1/10W  |                     | R601,602 |             |             | RK73EB2E100J | CHIP R 10 J 1/4W    | KK1M2               |
| R230     |             |             | RK73HB1J223J | CHIP R 22K J 1/16W  |                     | R601,602 |             |             | RK73EB2E100J | CHIP R 10 J 1/4W    | K2K3M               |
| R231     |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     | R603     |             |             | RK73EB2E4R7J | CHIP R 4.7 J 1/4W   | KK1M2               |
| R232     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                     | R603     |             |             | RK73EB2E4R7J | CHIP R 4.7 J 1/4W   | K2K3M               |
| R233     |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     | R605     |             |             | RK73EB2E101J | CHIP R 100 J 1/4W   | KK1M2               |
| R234     |             |             | RK73HB1J102J | CHIP R 1.0K J 1/16W |                     | R605     |             |             | RK73EB2E101J | CHIP R 100 J 1/4W   | K2K3M               |
| R238     |             |             | RK73EB2E471J | CHIP R 470 J 1/4W   |                     | R606,607 |             |             | RK73EB2E473J | CHIP R 47K J 1/4W   | KK1M2               |
| R240     |             |             | RK73GB2A332J | CHIP R 3.3K J 1/10W |                     | R606,607 |             |             | RK73EB2E473J | CHIP R 47K J 1/4W   | K2K3M               |
| R241     |             |             | RK73HB1J332J | CHIP R 3.3K J 1/16W |                     | R608     |             |             | RK73EB2E101J | CHIP R 100 J 1/4W   | KK1M2               |

K: KDC-BT648U K1: KDC-X695 K2: KDC-X395 K3: KDC-348U

M1: KDC-U549BT M2: KDC-U4549SD M3: KDC-U4549 E1: KDC-BT41U E3: KDC-4751SD

▲ indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-696x-xx)

| Ref.No.  | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description         | Dest<br>inati<br>on | Ref.No.  | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description         | Dest<br>inati<br>on |
|----------|-------------|-------------|--------------|---------------------|---------------------|----------|-------------|-------------|---------------|---------------------|---------------------|
| R608     |             |             | RK73EB2E101J | CHIP R 100 J 1/4W   | K2K3M3              | R907     |             |             | RK73GB2A2R2J  | CHIP R 2.2 J 1/10W  | KK1E1               |
| R609     |             |             | RK73EB2E473J | CHIP R 47K J 1/4W   | KK1M2               | R907     |             |             | RK73GB2A2R2J  | CHIP R 2.2 J 1/10W  | M1                  |
| R609     |             |             | RK73EB2E473J | CHIP R 47K J 1/4W   | K2K3M3              | R908,909 |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W  | KK1E1               |
| R610     |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W  | KK1M2               | R908,909 |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W  | M1                  |
| R610     |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W  | K2K3M3              | R913     |             |             | RK73HB1J000J  | CHIP R 0.0 J 1/16W  | KK1E1               |
| R611     |             |             | RK73EB2E432J | CHIP R 4.3K J 1/4W  | KK1M2               | R913     |             |             | RK73HB1J000J  | CHIP R 0.0 J 1/16W  | M1                  |
| R611     |             |             | RK73EB2E432J | CHIP R 4.3K J 1/4W  | K2K3M3              | R913     |             |             | RK73HB1J330J  | CHIP R 33 J 1/16W   | E3M2                |
| R612     |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W  | KK1M2               | R914     |             |             | RK73GB2A473J  | CHIP R 47K J 1/10W  | E3M2                |
| R612     |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W  | K2K3M3              | R915     |             |             | RK73GB2A000J  | CHIP R 0.0 J 1/10W  | KK1E1               |
| R616     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | KK1M2               | R915     |             |             | RK73GB2A000J  | CHIP R 0.0 J 1/10W  | M1                  |
| R616     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | K2K3M3              | R917     |             |             | RK73EB2E000J  | CHIP R 0.0 J 1/4W   | KK1E1               |
| R617     |             |             | RK73HB1J104J | CHIP R 100K J 1/16W | KK1M2               | R917     |             |             | RK73EB2E000J  | CHIP R 0.0 J 1/4W   | M1                  |
| R617     |             |             | RK73HB1J104J | CHIP R 100K J 1/16W | K2K3M3              | R921,922 |             |             | RK73EB2E101J  | CHIP R 100 J 1/4W   | K1E1                |
| R618     |             |             | RK73GB2A683J | CHIP R 68K J 1/10W  | KK1M2               | R923,924 |             |             | RK73HB1J000J  | CHIP R 0.0 J 1/16W  | K1                  |
| R618     |             |             | RK73GB2A683J | CHIP R 68K J 1/10W  | K2K3M3              | R925,926 |             |             | RK73HB1J000J  | CHIP R 0.0 J 1/16W  | KM1                 |
| R619,620 |             |             | RK73HB1J683J | CHIP R 68K J 1/16W  | KK1M2               | R927,928 |             |             | RK73GB2A101J  | CHIP R 100 J 1/10W  | KE1M1               |
| R619,620 |             |             | RK73HB1J683J | CHIP R 68K J 1/16W  | K2K3M3              | R929     |             |             | RK73HB1J473J  | CHIP R 47K J 1/16W  | E1                  |
| R701,702 |             |             | RK73GB2A331J | CHIP R 330 J 1/10W  | KK1M2               | R951     |             |             | RK73HB1J101J  | CHIP R 100 J 1/16W  | E3M2                |
| R701,702 |             |             | RK73GB2A331J | CHIP R 330 J 1/10W  | K2K3M3              | R952     |             |             | RK73HB1J473J  | CHIP R 47K J 1/16W  | E3M2                |
| R703,704 |             |             | RK73HB1J223J | CHIP R 22K J 1/16W  | KK1M2               | R953     |             |             | RK73GB2A473J  | CHIP R 47K J 1/10W  | E3M2                |
| R703,704 |             |             | RK73HB1J223J | CHIP R 22K J 1/16W  | K2K3M3              | R954     |             |             | RK73HB1J101J  | CHIP R 100 J 1/16W  | E3M2                |
| R705,706 |             |             | RK73FB2B181J | CHIP R 180 J 1/8W   | KK1M2               | R955     |             |             | RK73HB1J102J  | CHIP R 1.0K J 1/16W | E3M2                |
| R705,706 |             |             | RK73FB2B181J | CHIP R 180 J 1/8W   | K2K3M3              | R956     |             |             | RK73HB1J473J  | CHIP R 47K J 1/16W  | E3M2                |
| R707,708 |             |             | RK73GB2A331J | CHIP R 330 J 1/10W  | KK1M1               | S301     |             |             | S70-0959-05   | TACT SWITCH         |                     |
| R707,708 |             |             | RK73GB2A331J | CHIP R 330 J 1/10W  | K2K3M3              | D1       |             |             | S2V60-5009F46 | DIODE               |                     |
| R707,708 |             |             | RK73GB2A331J | CHIP R 330 J 1/10W  | M2                  | D2       |             |             | HZS9-E(A1)    | ZENER DIODE         |                     |
| R709,710 |             |             | RK73HB1J223J | CHIP R 22K J 1/16W  | KK1M1               | D3       |             |             | 1SR154-400    | DIODE               |                     |
| R709,710 |             |             | RK73HB1J223J | CHIP R 22K J 1/16W  | K2K3M3              | D4       |             |             | HSS4148       | DIODE               |                     |
| R711,712 |             |             | RK73FB2B181J | CHIP R 180 J 1/8W   | M2                  | D6       |             |             | HSS4148       | DIODE               |                     |
| R711,712 |             |             | RK73FB2B181J | CHIP R 180 J 1/8W   | KK1M1               | D51      |             |             | CMS14         | DIODE               |                     |
| R711,712 |             |             | RK73FB2B181J | CHIP R 180 J 1/8W   | K2K3M3              | D52      |             |             | 1SS355        | DIODE               |                     |
| R713,714 |             |             | RK73GB2A331J | CHIP R 330 J 1/10W  | M2                  | D91      |             |             | 1SR154-400    | DIODE               | K2K1                |
| R715,716 |             |             | RK73HB1J223J | CHIP R 22K J 1/16W  |                     | D92,93   |             |             | UDZW5.6(B)    | ZENER DIODE         | K2K1                |
| R717,718 |             |             | RK73FB2B181J | CHIP R 180 J 1/8W   |                     | D101-104 |             |             | 1SR154-400    | DIODE               | M1M2                |
| R801     |             |             | RK73HB1J333J | CHIP R 33K J 1/16W  |                     | D101-104 |             |             | 1SR154-400    | DIODE               | M3E1E               |
| R802     |             |             | RK73HB1J473J | CHIP R 47K J 1/16W  |                     | D101,102 |             |             | 1SR154-400    | DIODE               | K1                  |
| R803     |             |             | RK73HB1J331J | CHIP R 330 J 1/16W  |                     | D101,102 |             |             | 1SR154-400    | DIODE               | K2K3K               |
| R804     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  |                     | D105     |             |             | MC2846-T111   | DIODE               |                     |
| R805     |             |             | RK73GB2A622J | CHIP R 6.2K J 1/10W |                     | D106-108 |             |             | UDZW6.8(B)    | ZENER DIODE         |                     |
| R806     |             |             | RK73GB2A100J | CHIP R 10 J 1/10W   |                     | D201     |             |             | RB521S-30     | DIODE               |                     |
| R807,808 |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                     | D301     |             |             | MC2850-T111   | DIODE               |                     |
| R809     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                     | D302-304 |             |             | RKZ6.8KG(B2)  | ZENER DIODE         |                     |
| R810     |             |             | RK73GB2A272J | CHIP R 2.7K J 1/10W |                     | D305,306 |             |             | LVS10C270S030 | VARISTOR            |                     |
| R821     |             |             | RK73GB2A000J | CHIP R 0.0 J 1/10W  |                     | D307     |             |             | HZM6.8ZMWA-E  | ZENER DIODE         |                     |
| R822,823 |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  |                     | D308     |             |             | MC2850-T111   | DIODE               |                     |
| R901     |             |             | RK73HB1J101J | CHIP R 100 J 1/16W  | E3M2                | D401-403 |             |             | MC2846-T111   | DIODE               |                     |
| R901     |             |             | RK73HB1J220J | CHIP R 22 J 1/16W   | KK1E1               | D502     |             |             | MC2850-T111   | DIODE               |                     |
| R901     |             |             | RK73HB1J220J | CHIP R 22 J 1/16W   | M1                  | D601-605 |             |             | RKZ6.8KG(B2)  | ZENER DIODE         | KK1M2               |
| R902     |             |             | RK73HB1J473J | CHIP R 47K J 1/16W  | KK1M1               | D601-605 |             |             | RKZ6.8KG(B2)  | ZENER DIODE         | K2K3M               |
| R902     |             |             | RK73HB1J473J | CHIP R 47K J 1/16W  | M2E1E3              | D611     |             |             | RKZ6.8KG(B2)  | ZENER DIODE         | KK1M2               |
| R903,904 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | KK1E1               | D611     |             |             | RKZ6.8KG(B2)  | ZENER DIODE         | K2K3M               |
| R903,904 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  | M1                  | D701,702 |             |             | MC2846-T111   | DIODE               | KK1M1               |
| R905,906 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  | KK1E1               | D701,702 |             |             | MC2846-T111   | DIODE               | K2K3M               |
| R905,906 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  | M1                  | D701,702 |             |             | MC2846-T111   | DIODE               | M2                  |

K: KDC-BT648U K1: KDC-X695 K2: KDC-X395 K3: KDC-348U

M1: KDC-U549BT M2: KDC-U4549SD M3: KDC-U4549 E1: KDC-BT41U E3: KDC-4751SD

▲ indicates safety critical components.

# PARTS LIST

## ELECTRIC UNIT (X34-696x-xx)

| Ref.No.  | A<br>d<br>d | N<br>e<br>w | Parts No.      | Description       | Dest<br>inati<br>on | Ref.No.                                       | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description             | Dest<br>inati<br>on |
|----------|-------------|-------------|----------------|-------------------|---------------------|-----------------------------------------------|-------------|-------------|---------------|-------------------------|---------------------|
| D702     |             |             | MC2846-T111    | DIODE             | E1E3                | Q703-706                                      |             |             | RT1N430M-T111 | TRANSISTOR              | M1                  |
| D801     |             |             | MC2846-T111    | DIODE             |                     | Q705,706                                      |             |             | RT1N430M-T111 | TRANSISTOR              | E1E3                |
| D921,922 |             |             | RKZ4.7KG(B2)   | ZENER DIODE       | K1E1                | Q707,708                                      |             |             | RT1P144M-T111 | TRANSISTOR              | KK1M1               |
| IC1      |             |             | BD49131-V4     | ANALOGUE IC       |                     | Q707,708                                      |             |             | RT1P144M-T111 | TRANSISTOR              | K2K3M               |
| IC21     |             |             | R1114N331B-TR  | ANALOGUE IC       |                     | Q707,708                                      |             |             | RT1P144M-T111 | TRANSISTOR              | M2                  |
| IC51     |             |             | MP2562DS-X     | ANALOGUE IC       |                     | Q708                                          |             |             | RT1P144M-T111 | TRANSISTOR              | E1E3                |
| IC71     |             |             | BD2224G        | MOS-IC            |                     | Q921                                          |             |             | RT1N436M-T111 | TRANSISTOR              | E1                  |
| IC201    | *           |             | W05-1654-00    | MCU               | KK1E1               | Q951                                          |             |             | 2SB1689       | TRANSISTOR              | E3M2                |
| IC201    | *           |             | W05-1654-00    | MCU               | M1                  | TH801                                         |             |             | PRF18BE471QS2 | POSITIVE RESISTOR       |                     |
| IC201    | *           |             | W05-1656-00    | MCU               | E3M2                |                                               |             |             |               |                         |                     |
| IC201    | *           |             | W05-1657-00    | MCU               | K2K3M3              | A901                                          |             |             | W02-5374-15   | ELECTRIC CIRCUIT MODULE | KK1E1               |
| IC202    | *           |             | XC6119N28AN-G  | MOS-IC            |                     | A901                                          |             |             | W02-5374-15   | ELECTRIC CIRCUIT MODULE | M1                  |
| IC203    | *           |             | EX24002ATAS0A  | ROM IC            | E3M2                | <b>MECHANISM ASSY (X92-6370-04) DXM-9B24W</b> |             |             |               |                         |                     |
| IC203    | *           |             | EX24002ATAS0A  | ROM IC            | K2K3M3              | 1                                             | 2B          |             | A10-5450-63   | CHASSIS ASSY            |                     |
| IC203    | *           |             | EX24008ATAS0A  | ROM IC            | KK1E1               | 3                                             | 3B          |             | A10-5452-41   | CHASSIS                 |                     |
|          |             |             |                |                   |                     | 4                                             | 1B          |             | A10-5453-32   | CHASSIS                 |                     |
| IC203    | *           |             | EX24008ATAS0A  | ROM IC            | M1                  | 12                                            | 3A          |             | D10-4993-52   | LEVER                   |                     |
| IC261    |             |             | MFI341S2162    | MICROPROCESSOR IC |                     | 13                                            | 1B          |             | D10-4991-22   | ARM                     |                     |
| IC301    |             |             | TC7SET125FU-F  | MOS-IC            |                     | 14                                            | 1B          |             | D10-4992-13   | ARM                     |                     |
| IC401    |             |             | E-TDA7415CB    | ANALOGUE IC       |                     | 15                                            | 2A          |             | D10-4994-02   | SLIDER                  |                     |
| IC501    |             |             | TEF6614TV1S3-X | ANALOGUE IC       | E1E3                | 16                                            | 2A          |             | D10-4995-03   | SLIDER                  |                     |
| IC501    |             |             | TEF6614TV1S4-X | ANALOGUE IC       | KK1M1               | 17                                            | 2B          |             | D10-4996-02   | SLIDER                  |                     |
| IC501    |             |             | TEF6614TV1S4-X | ANALOGUE IC       | K2K3M3              | 18                                            | 2A          |             | D10-4997-03   | LEVER                   |                     |
| IC601    |             |             | TC74VHCT08AFT  | MOS-IC            | M2                  | 19                                            | 1A          |             | D10-4998-03   | ARM                     |                     |
| IC601    |             |             | TC74VHCT08AFT  | MOS-IC            | KK1M2               | 20                                            | 2A          |             | D10-4999-03   | ARM                     |                     |
| IC602    |             |             | TC7SET08FU-F   | MOS-IC            | K2K3M3              | 21                                            | 2A          |             | D10-7001-03   | ARM                     |                     |
| IC602    |             |             | TC7SET08FU-F   | MOS-IC            | KK1M2               | 22                                            | 2A          |             | D10-7002-03   | ARM                     |                     |
| IC801    |             |             | E-TDA7851A     | ANALOGUE IC       | K2K3M3              | 23                                            | 2A          |             | D10-7003-03   | ARM                     |                     |
| IC802    |             |             | 74HCT2G08DP    | MOS-IC            |                     | 24                                            | 2A          |             | D13-2445-04   | GEAR                    |                     |
| IC901    |             |             | NJM4565V-ZB    | ANALOGUE IC       | KK1E1               | 25                                            | 2A          |             | D13-2446-04   | GEAR                    |                     |
| IC901    |             |             | NJM4565V-ZB    | ANALOGUE IC       | M1                  | 27                                            | 2A          |             | D13-2448-04   | GEAR                    |                     |
| IC902    |             |             | NJM2845DL133B  | ANALOGUE IC       | KK1M1               | 28                                            | 2A          |             | D13-2449-04   | GEAR                    |                     |
| IC902    |             |             | NJM2845DL133B  | ANALOGUE IC       | M2E1E3              | 29                                            | 2A          |             | D13-2450-04   | GEAR                    |                     |
| IC921    |             |             | TC4053BFT(N)   | ANALOGUE IC       | E1                  | 30                                            | 2A          |             | D13-2451-04   | GEAR                    |                     |
| Q1       |             |             | KTA1046-P      | TRANSISTOR        |                     | 31                                            | 2A          |             | D13-2452-04   | GEAR                    |                     |
| Q2       |             |             | 2SC4081        | TRANSISTOR        |                     | 32                                            | 2A          |             | D13-2453-04   | GEAR                    |                     |
| Q3       |             |             | RT1N241M-T111  | TRANSISTOR        |                     | 33                                            | 2A          |             | D13-2454-04   | GEAR                    |                     |
| Q4       |             |             | RT1P241M-T111  | TRANSISTOR        |                     | 34                                            | 2A          |             | D13-2455-04   | GEAR                    |                     |
| Q5       |             |             | RT1N436M-T111  | TRANSISTOR        | M3M1M2              | 35                                            | 2B          |             | D13-2456-03   | RACK (GEAR)             |                     |
| Q6       |             |             | RT1P241M-T111  | TRANSISTOR        | M3M1M2              | 36                                            | 2A          |             | D14-1028-04   | ROLLER                  |                     |
| Q7       |             |             | RT1N436M-T111  | TRANSISTOR        |                     | 37                                            | 3A          |             | D21-2507-04   | SHAFT                   |                     |
| Q8       |             |             | RT1P241M-T111  | TRANSISTOR        |                     | 38                                            | 2B          |             | D21-2508-04   | SHAFT                   |                     |
| Q9       |             |             | RT1N436M-T111  | TRANSISTOR        |                     | 39                                            | 3A          |             | D23-0963-04   | RETAINER                |                     |
| Q10      |             |             | RT1P241M-T111  | TRANSISTOR        |                     | 40                                            | 3B          |             | D39-0277-15   | DAMPER                  |                     |
| Q51      |             |             | RT1N436M-T111  | TRANSISTOR        |                     | 41                                            | 3B          |             | D39-0278-15   | DAMPER                  |                     |
| Q91      |             |             | 2SC4081        | TRANSISTOR        | K2K1                | 46                                            | 1B          |             | G01-4682-34   | TORSION COIL SPRING     |                     |
| Q92      |             |             | 2SC5053        | TRANSISTOR        | K2K1                | 47                                            | 3A          |             | G01-4756-04   | EXTENSION SPRING        |                     |
| Q93      |             |             | RT1P241M-T111  | TRANSISTOR        | K2K1                | 48                                            | 2A          |             | G01-4684-04   | EXTENSION SPRING        |                     |
| Q94      |             |             | RT1N436M-T111  | TRANSISTOR        | K2K1                | 49                                            | 2B          |             | G01-4685-04   | EXTENSION SPRING        |                     |
| Q101-104 |             |             | 2SC4081        | TRANSISTOR        |                     | 50                                            | 1B          |             | G01-4686-14   | EXTENSION SPRING        |                     |
| Q301     |             |             | RT1P237M-T111  | TRANSISTOR        | KK1M1               | 51                                            | 3A          |             | G01-4688-14   | EXTENSION SPRING        |                     |
| Q301     |             |             | RT1P237M-T111  | TRANSISTOR        | M2E1E3              | 52                                            | 3A          |             | G01-4692-24   | TORSION COIL SPRING     |                     |
| Q301,302 |             |             | RT1P237M-T111  | TRANSISTOR        | K2K3M3              | 54                                            | 3A          |             | G02-1588-04   | FLAT SPRING             |                     |
| Q701-706 |             |             | RT1N430M-T111  | TRANSISTOR        | KK1M2               | 55                                            | 1B          |             | G13-1297-04   | CUSHION                 |                     |
| Q701-706 |             |             | RT1N430M-T111  | TRANSISTOR        | K2K3M3              | 56                                            | 1B          |             | G13-1299-14   | CUSHION                 |                     |

K: KDC-BT648U K1: KDC-X695 K2: KDC-X395 K3: KDC-348U

M1: KDC-U549BT M2: KDC-U4549SD M3: KDC-U4549 E1: KDC-BT41U E3: KDC-4751SD

▲ indicates safety critical components.

# PARTS LIST

## MECHANISM ASSY (X92-6370-04) DXM-9B24W

| Ref.No. | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                 | Dest<br>inati<br>on | Ref.No. | A<br>d<br>d | N<br>e<br>w | Parts No. | Description | Dest<br>inati<br>on |
|---------|-------------|-------------|-------------|-----------------------------|---------------------|---------|-------------|-------------|-----------|-------------|---------------------|
| 57      | 1A          |             | G16-1715-04 | SHEET                       |                     |         |             |             |           |             |                     |
| 61      | 1B          |             | J11-0675-03 | CLAMPER                     |                     |         |             |             |           |             |                     |
| 64      | 2A          |             | J19-7210-21 | HOLDER                      |                     |         |             |             |           |             |                     |
| 65      | 2B          |             | J19-7225-04 | HOLDER                      |                     |         |             |             |           |             |                     |
| 66      | 1B          |             | J22-0706-03 | MOUNTING HARDWARE           |                     |         |             |             |           |             |                     |
| 67      | 1A          |             | J22-0707-12 | MOUNTING HARDWARE           |                     |         |             |             |           |             |                     |
| 68      | 1B          |             | J90-1166-11 | GUIDE                       |                     |         |             |             |           |             |                     |
| 69      | 2B          |             | J90-1168-03 | RAIL                        |                     |         |             |             |           |             |                     |
| A       | 1A          |             | N09-6108-15 | TAPTITE SCREW (M2X3.5)      |                     |         |             |             |           |             |                     |
| B       | 2B          |             | N09-6426-15 | MACHINE SCREW               |                     |         |             |             |           |             |                     |
| C       | 2B          |             | N09-6735-05 | TAPTITE SCREW               |                     |         |             |             |           |             |                     |
| D       | 2B          |             | N09-6737-15 | MACHINE SCREW               |                     |         |             |             |           |             |                     |
| E       | 2B          |             | N09-6738-15 | TAPTITE SCREW               |                     |         |             |             |           |             |                     |
| F       | 2A          |             | N19-2335-14 | FLAT WASHER                 |                     |         |             |             |           |             |                     |
| G       | 2B          |             | N35-2003-48 | BINDING HEAD MACHINE SCREW  |                     |         |             |             |           |             |                     |
| H       | 2B          |             | N39-1720-48 | PAN HEAD MACHINE SCREW      |                     |         |             |             |           |             |                     |
| 76      | 2A          |             | S68-0921-05 | PUSH SWITCH                 |                     |         |             |             |           |             |                     |
| DM1     | 2B          |             | X94-2090-00 | SPINDLE MOTOR ASSY          |                     |         |             |             |           |             |                     |
| DM2     | 2B          |             | X94-2100-00 | FEED MOTOR ASSY (LOAD/SLED) |                     |         |             |             |           |             |                     |
| DPU1    | 2B          |             | X93-2280-00 | OPTICAL PICKUP ASSY         |                     |         |             |             |           |             |                     |

K: KDC-BT648U K1: KDC-X695 K2: KDC-X395 K3: KDC-348U

M1: KDC-U549BT M2: KDC-U4549SD M3: KDC-U4549 E1: KDC-BT41U E3: KDC-4751SD

 indicates safety critical components.