
2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " " are generally unavailable because they are not in our Master Spare Parts List.*
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lobricants or glue, follow the instructions in this manual.
(In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING(DEH-P560MP/XM/UC)

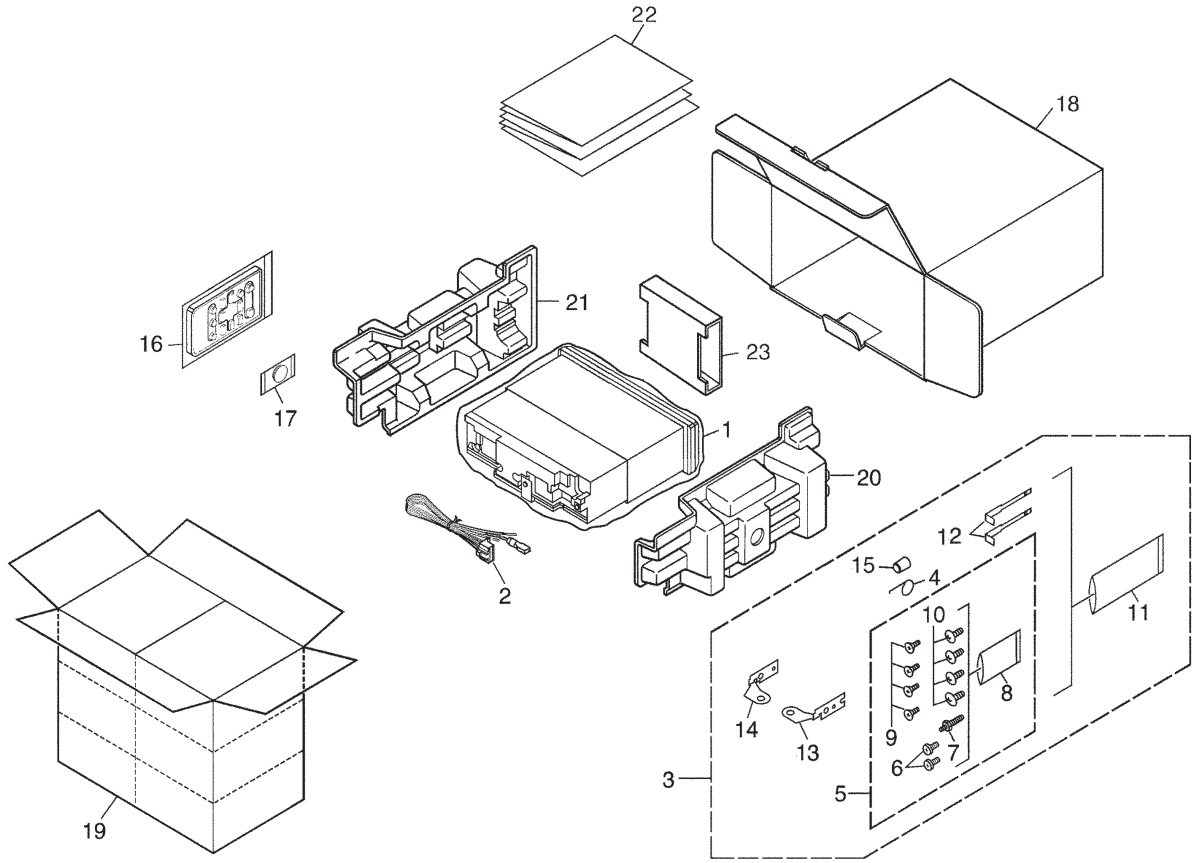


PACKING(DEH-P560MP/XM/UC) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG1173
	2	Cord Assy	CDE7154
	3	Accessory Assy	CEA3376
	4	Spring	CBH1650
	5	Screw Assy	CEA3848
	6	Fixing Screw	BPZ20P060FZK
	7	Screw	CBA1650
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FTC
	10	Screw	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CNC5395
	13	Holder	CND1249
	14	Holder	CND1250
	15	Bush	CNV3930
	16	Remote Control Unit	CXC3173
*	17	Battery	CEX1065
	18	Carton	XHG7004
	19	Contain Box	XHL7004
	20	Protector	CHP2663
	21	Protector	CHP2664
	22-1	Owner's Manual	XRD7008
	22-2	Installation Manual	XRD7009
*	22-3	Warranty Card	CRY1070
*	22-4	Caution Card	XRP7001
	23	Inner Box	XHW7001

Owner's Manual,Installation Manual

Part No.	Language
XRD7008	English, French, Spanish
XRD7009	English, French, Spanish

2.2 PACKING(DEH-P5650MP/XM/ES)

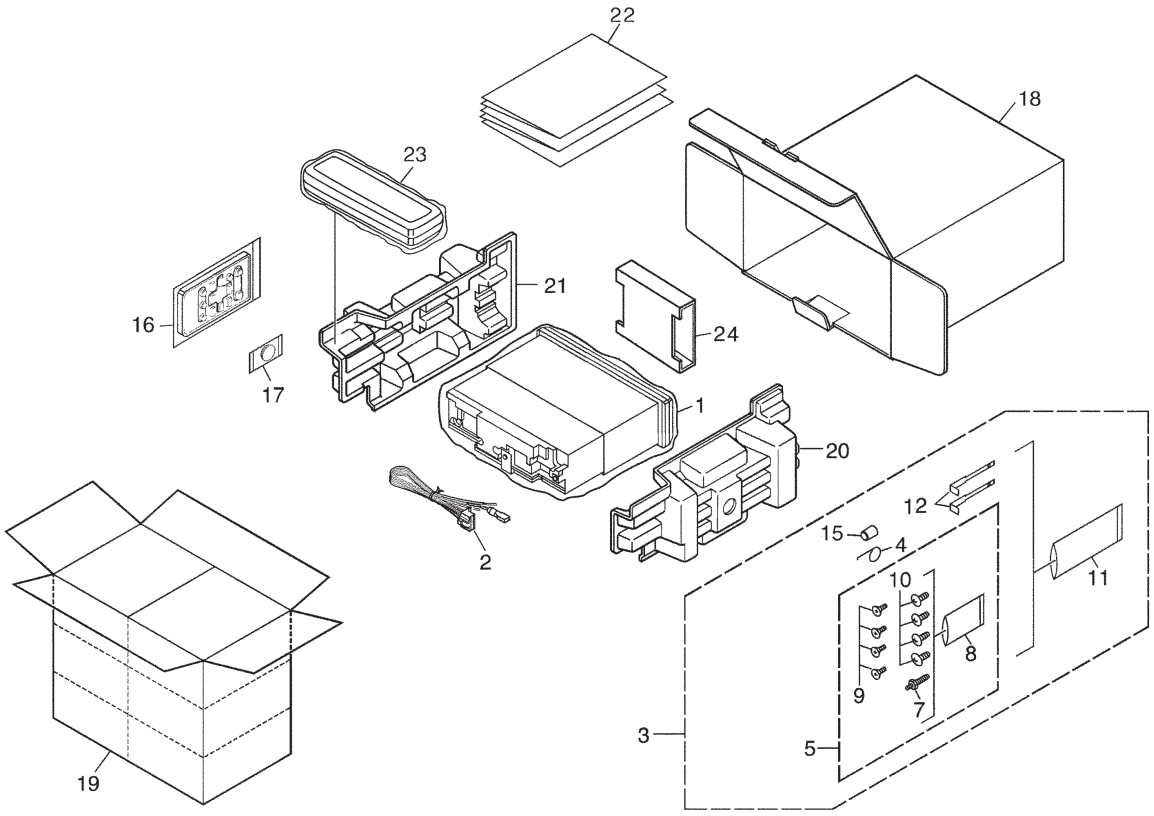


PACKING(DEH-P5650MP/XM/ES) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG-162
	2	Cord Assy	CDE7154
	3	Accessory Assy	CEA3439
	4	Spring	CBH1650
	5	Screw Assy	CEA3849
	6	•••••	
	7	Screw	CBA1650
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FTC
	10	Screw	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CNC5395
	13	•••••	
	14	•••••	
	15	Bush	CNV3930
	16	Remote Control Unit	CXC3173
*	17	Battery	CEX1065
	18	Carton	XHG7001
	19	Contain Box	XHL7001
	20	Protector	CHP2663
	21	Protector	CHP2664
	22-1	Owner's Manual	XRD7001
	22-2	Owner's Manual	XRD7002
	22-3	Installation Manual	XRD7003
*	22-4	Caution Card	XRP7001
	23	Case Assy	CXB3520
	24	Inner Box	XHW7001

Owner's Manual,Installation Manual

Part No.	Language
XRD7001	English, Spanish, Portuguese(B)
XRD7002	Traditional Chinese, Arabic
XRD7003	English, Spanish, Portuguese(B), Traditional Chinese, Arabic

2.3 EXTERIOR

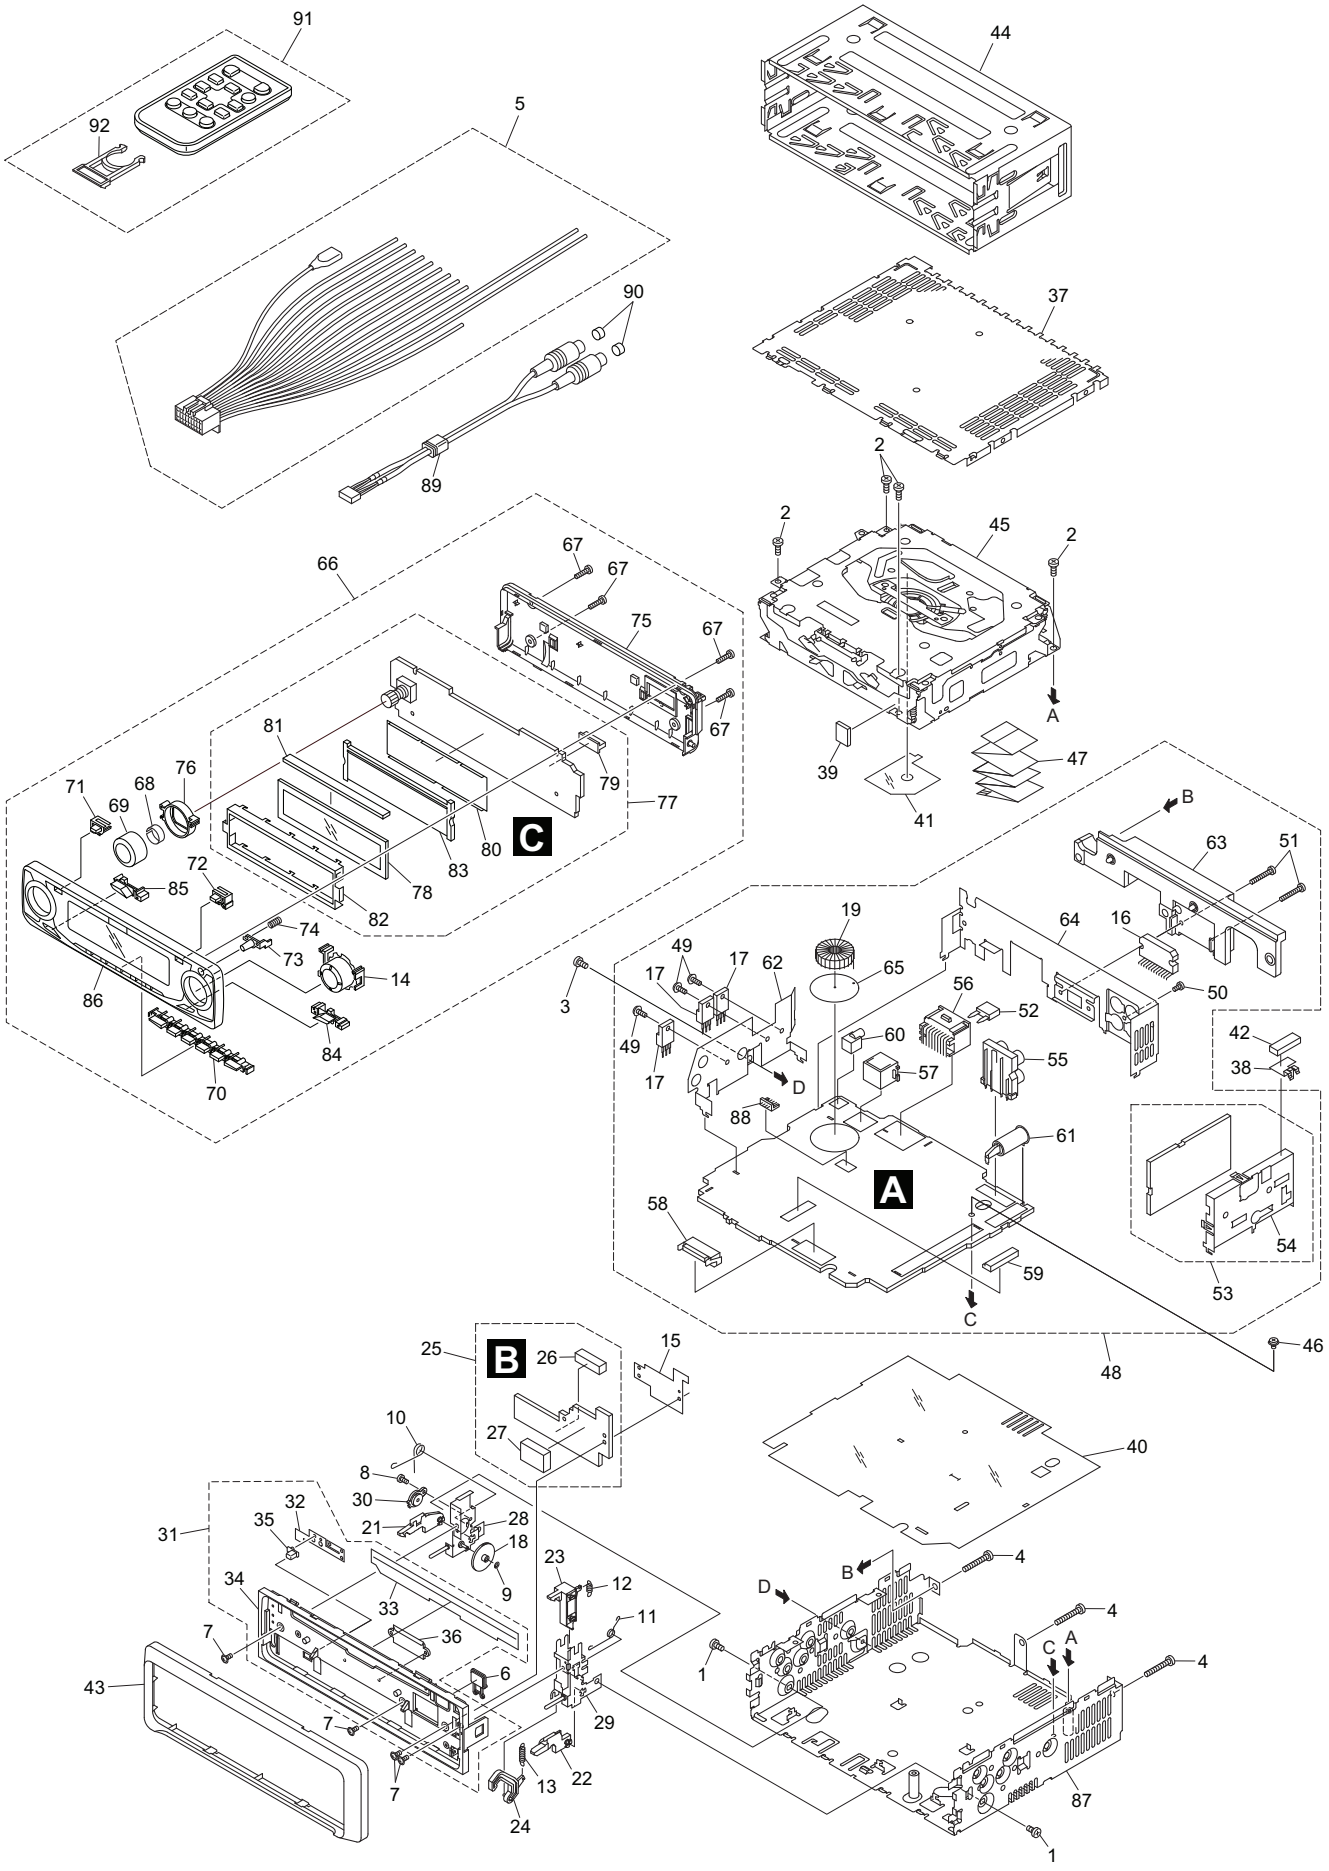
91
92
5
44
90
37
89
2
45
66
67
75
81
79
77
71
68
76
69
80
83
78
82
72
85
74
73
14
86
84
70
39
41
47
B
63
51
64
16
19
49
17
62
65
56
52
50
60
57
55
42
38
88
61
58
59
54
53
48
46
25
26
15
27
10
8
30
21
28
18
9
40
31
32
35
34
33
36
7
43
6
23
12
11
29
13
22
24
4
1
87

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Cord Assy	CDE7154
	6	Button(EJECT)	CAC7752
	7	Screw(M2x4.5)	CBA1647
	8	Screw(M2x4)	CBA1649
	9	Washer	CBF1038
	10	Spring	CBH2650
	11	Spring	CBH2651
	12	Spring	CBH2652
	13	Spring	CBH2653
	14	Sub Button Assy(SELECT)	XXA7229
	15	Holder	CND1254
	16	IC(IC301)	PAL007A
	17	Transistor(Q651,911,921)	2SD2396
	18	Gear	CNV5997
	19	Choke Coil(L301)	CTH1280
	20	•••••	
	21	Arm	CNV7400
	22	Arm	CNV7401
	23	Arm	CNV7402
	24	Arm	CNV7403
	25	Panel Unit	CWM8758
	26	Socket(CN1950)	CKS3550
	27	Connector(CN1951)	CKS4806
	28	Holder Unit	CXB9501
	29	Holder Unit	CXB9502
	30	Damper Unit	CXB9503
	31	Service Panel Unit	CXX1691
	32	Spring	CBL1512
	33	Cover	CNM6854
	34	Panel	CNS7245
	35	Pin	CNV6486
	36	Lighting Conductor	CNV6487
	37	Case	CNB2870
	38	Earth Plate	CNC8915
	39	Insulator	CNM7682
	40	Insulator	CNM7935
	41	Insulator	CNM8174
	42	Cushion	CNM8890
	43	Panel	CNS6935
	44	Holder Unit	CXB6681
	45	CD Mechanism Module(S10CODE2)	CXK5665
	46	Screw	ISS26P055FTC
	47	Cable	XDE7002
	48	Tuner Amp Unit	See Contrast table(2)
	49	Screw	ASZ26P060FTC
	50	Screw	BPZ26P080FTC
	51	Screw	BSZ26P160FTC
	52	Fuse(10A)	CEK1208
	53	FM/AM Tuner Unit	CWE1646
	54	Holder	CND1054
	55	Pin Jack(CN352)	CKB1051
	56	Plug(CN901)	CKM1376
	57	Connector(CN101)	CKS3408
	58	Plug(CN801)	CKS3537
	59	Connector(CN651)	CKS3837
	60	Connector(CN161)	See Contrast table(2)
	61	Antenna Jack(CN401)	CKX1056
	62	Holder	CND1352
	63	Heat Sink	CNR1668
	64	Holder	See Contrast table(2)
	65	Insulator	XNM7031
	66	Detachable Assy	See Contrast table(2)
	67	Screw	BPZ20P100FZK
	68	Spring	CBL1470
	69	Knob	XAA7009
	70	Button(1-6)	XAC7005
	71	Button(CLOCK)	XAC7014
	72	Button(BAND)	XAC7007
	73	Button(OPEN)	XAC7026
	74	Spring	XBH7001
	75	Cover	XNS7013
*	76	Lighting Conductor	XNV7012
	77	Keyboard Unit	See Contrast table(2)
	78	LCD	CAW1755
	79	Connector(CN1901)	CKS4524
	80	Sheet	CNM7921
	81	Connector	CNV7365
	82	Holder	XNC7001
	83	Lighting Conductor	XNV7003
	84	Button Unit(EQ-EX)	XXA7007
	85	Button Unit(EQ)	XXA7008
	86	Sub Grille Assy	See Contrast table(2)
	87	Chassis Unit	CXB9528
	88	Plug(CN351)	See Contrast table(2)
	89	Cord Assy	See Contrast table(2)
	90	Cap	See Contrast table(2)
	91	Remote Control Unit	CXC3173
	92	Cover	CNS7068

(2) CONTRAST TABLE

DEH-P560MP/XM/UC and DEH-P5650MP/XM/ES are constructed the same except for the following:

Mark	NO.	Description	DEH-P560MP/XM/UC	DEH-P5650MP/XM/ES
	48	Tuner Amp Unit	XWM7020	XWM7017
	60	Connector(CN161)	CKS4124	Not used
	64	Holder	CND1270	CND1477
	66	Detachable Assy	XXA7032	XXA7033
	77	Keyboard Unit	XWM7039	XWM7036
	86	Sub Grille Assy	XXA7040	XXA7041
	88	Plug(CN351)	CKS1238	Not used
	89	Cord Assy	CDE7129	Not used
	90	Cap	CNV6727	Not used

2.4 CD MECHANISM MODULE

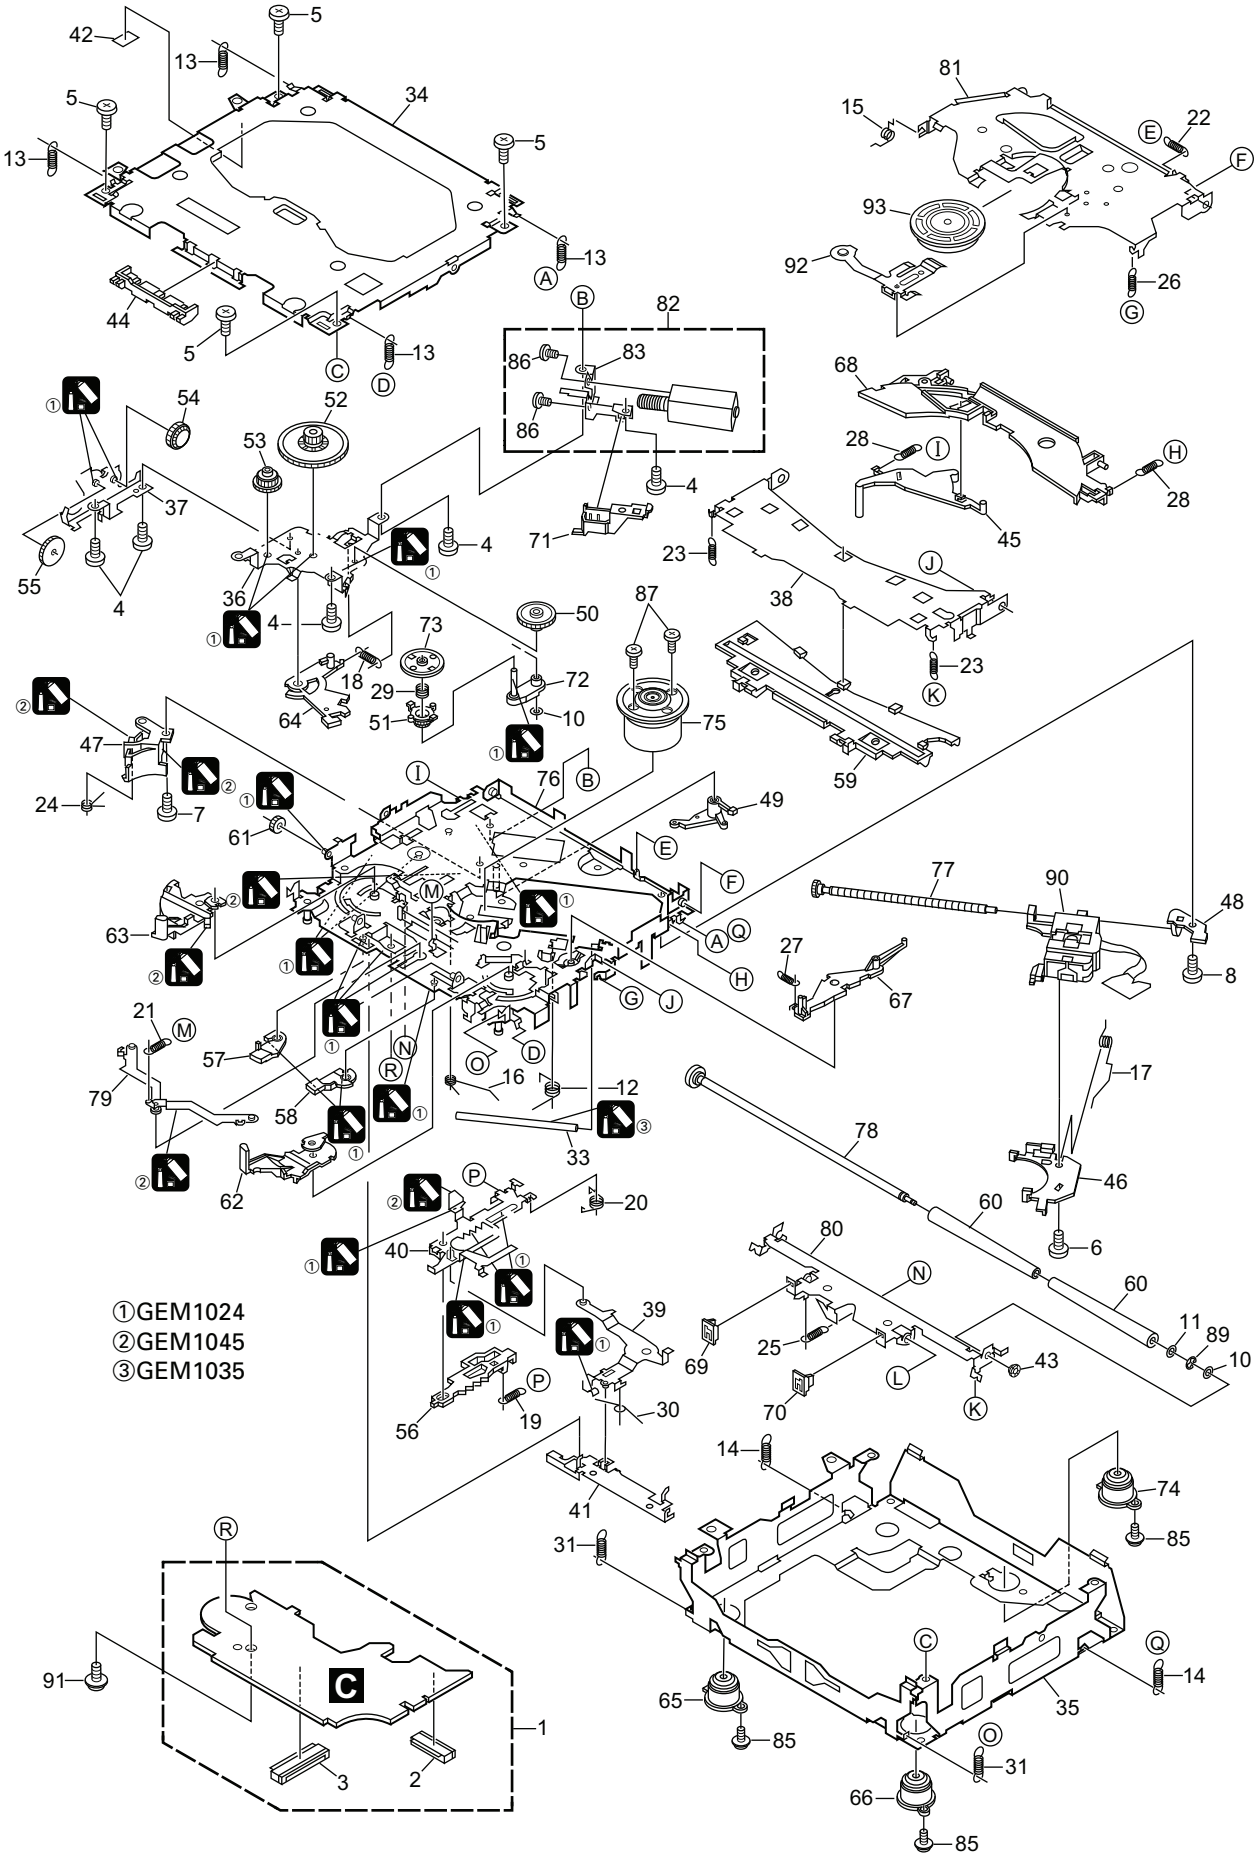

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10WMA)	CWX2851
	2	Connector(CN101)	CKS4182
	3	Connector(CN901)	CKS4017
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1511
	8	Screw(M2x3)	CBA1527
	9	•••••	
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2735
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
	32	•••••	
	33	Shaft	CLA4441
	34	Frame	CNC9962
	35	Frame	CNC9963
	36	Bracket	CNC9966
	37	Bracket	CND1895
	38	Arm	CNC9968
	39	Arm	CND1909
	40	Lever	CND2032
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV7798
	44	Guide	CNV7799
	45	Arm	CNV7800
	46	Rack	CNV7199
	47	Holder	CNV7201
	48	Holder	CNV7202
	49	Arm	CNV7203
	50	Gear	CNV7207
	51	Gear	CNV7208
	52	Gear	CNV7209
	53	Gear	CNV7210
	54	Gear	CNV7211
	55	Gear	CNV7212
	56	Rack	CNV7214
	57	Arm	CNV7215
	58	Arm	CNV7216
	59	Guide	CNV7217
	60	Roller	CNV7218
	61	Gear	CNV7219
	62	Arm	CNV7221
	63	Arm	CNV7220
	64	Arm	CNV7222
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV7341
	68	Arm	CNV7342
	69	Guide	CNV7360
	70	Guide	CNV7361
	71	Holder	CNV7437
	72	Arm	CNV7805
	73	Gear	CNV7595
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXB6007
	76	Chassis Unit	CXC2318
	77	Screw Unit	CXB8729
	78	Gear Unit	CXC2397
	79	Arm Unit	CXC2316
	80	Arm	CND1896
	81	Arm	CND1894
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	•••••	
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	•••••	
	89	Washer	YE20FTC
	90	Pickup Unit(P10)(Service)	CXX1641
	91	Screw	IMS26P030FTC
	92	Spring	CBL1635
	93	Clamper	CNV7197

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A

Unit Number:XWM7020(P560MP)
Unit Number:XWM7017(P5650MP)
Unit Name:Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 101	IC	HA12240FP
IC 131	IC	NJM4558MD
IC 201	IC	PML009A
IC 301	IC	PAL007A
IC 401	IC	NJM2391DL1-33
IC 601	IC	PD5919A
IC 602	IC	S-80835CNUA-B8U
Q 101	Transistor	2SA1576
Q 102	Transistor	DTC114EU
Q 301	Transistor	DTC124EU
Q 351	Transistor(P560MP)	UMH3N
Q 352	Transistor	UMH3N
Q 353	Transistor	UMH3N
Q 650	Transistor	2SD1760F5
Q 651	Transistor	2SD2396
Q 652	Transistor	UMD2N
Q 653	Transistor	UMD2N
Q 803	Transistor	2SD1767
Q 804	Transistor	UMD2N
Q 805	Transistor	DTC143EU
Q 806	Transistor	IMD14
Q 807	Transistor	2SA1576
Q 808	Transistor	DTC114EU
Q 911	Transistor	2SD2396
Q 913	Transistor	UMD2N
Q 921	Transistor	2SD2396
Q 922	Transistor	DTC114EU
Q 923	Transistor	2SB1243
Q 931	Transistor	UMX1N
Q 932	Transistor	DTC114EU
Q 951	Transistor	2SA1576
Q 981	Transistor	2SC4081
Q 982	Transistor	UMD2N
D 131	Diode Network	DA204U
D 132	Diode Network	DA204U
D 133	Diode	DAN202U
D 134	Diode	DAP202U
D 301	Diode	S5688G
D 302	Diode	S5688G
D 303	Diode	S5688G
D 304	Diode	S5688G
D 401	Diode	S5688G
D 402	Diode	S5688G
D 403	Diode	S5688G
D 650	Diode	HZS6L(C1)
D 651	Diode	HZS9L(B1)
D 803	Diode Network	DA204U
D 804	Diode	DAN202U
D 805	Diode	DAP202U
D 806	Diode	DAN202U
D 807	Diode	DAP202U
D 808	Diode	HZS11L(A1)
D 911	Diode	S5688G
D 912	Diode	HZS6L(B1)
D 921	Diode	HZS9L(B3)
D 931	Diode	HZS7L(A1)
D 932	Diode	HZS7L(C3)
D 937	Diode	MA111
D 951	Diode	DAN202U
D 981	Diode	DAN202U
D 982	Diode	HZS9L(A2)
L 101	Inductor	LAU2R2K
L 201	Ferri-Inductor	LAU4R7K
L 301	Choke Coil 600µH	CTH1280
L 401	Ferri-Inductor	LAU4R7K
L 403	Inductor	LAU1R0K
L 404	Inductor	LAU1R0K
L 406	Inductor	CTF1385
L 601	Ferri-Inductor	LAU100K
L 683	Ferri-Inductor	LAU100K
L 801	Inductor	LAU2R2K
L 951	Inductor	LAU2R2K
X 601	Radiator 10.00MHz	CSS1599
S 802	Switch(DETACH SENSE)	CSN1039
FU351	Fuse 3A(P560MP)	CEK1286
FU353	Fuse 3A	CEK1286
BZ641	Buzzer	CPV1062
AR401	Surge Protector	DSP-201M-S00B
	Fuse 10A	CEK1208
	FM/AM Tuner Unit	CWE1646

RESISTORS

R 101		RS1/16S101J
R 102		RS1/16S620J
R 103		RS1/16S101J
R 104		RS1/16S222J
R 105		RS1/16S102J
R 106		RS1/16S472J

Circuit Symbol and No.		Part No.
R 107		RS1/16S223J
R 108		RS1/16S472J
R 109		RS1/16S821J
R 110		RS1/16S821J
R 111		RS1/16S223J
R 112		RS1/16S223J
R 113		RS1/16S102J
R 114		RS1/16S102J
R 115		RS1/16S472J
R 133		RS1/16S563J
R 134		RS1/16S104J
R 139		RS1/16S563J
R 140		RS1/16S104J
R 147		RS1/16S474J
R 148		RS1/16S474J
R 161	(P560MP)	RS1/16S102J
R 162	(P560MP)	RS1/16S102J
R 163	(P560MP)	RS1/16S103J
R 164	(P560MP)	RS1/16S103J
R 165	(P5650MP)	RS1/16S104J
R 201		RAB4C102J
R 241		RS1/16S102J
R 242		RS1/16S102J
R 247		RS1/16S101J
R 248		RS1/16S101J
R 249		RS1/16S101J
R 250		RS1/16S101J
R 301		RS1/16S103J
R 302		RS1/16S103J
R 303		RS1/16S153J
R 304		RS1/16S331J
R 351	(P560MP)	RS1/16S821J
R 352	(P560MP)	RS1/16S821J
R 353		RS1/16S821J
R 354		RS1/16S821J
R 355		RS1/16S821J
R 356		RS1/16S821J
R 357	(P560MP)	RS1/16S223J
R 358	(P560MP)	RS1/16S223J
R 359		RS1/16S223J
R 360		RS1/16S223J
R 361		RS1/16S223J
R 362		RS1/16S223J
R 403		RS1/16S681J
R 404		RS1/16S0R0J
R 405		RS1/16S681J
R 406		RS1/16S681J
R 407		RS1/16S681J
R 408		RS1/16S681J
R 410		RS1/16S681J
R 416		RS1/16S681J
R 417		RS1/16S681J
R 419		RS1/16S681J
R 421		RS1/16S681J
R 601		RS1/16S104J
R 603	(P560MP)	RS1/16S104J
R 604	(P5650MP)	RS1/16S104J
R 605		RS1/16S0R0J
R 606		RS1/16S104J
R 607		RS1/16S822J

Circuit Symbol and No.		Part No.
R 608		RS1/16S221J
R 609		RS1/16S221J
R 610		RS1/16S682J
R 611		RS1/16S682J
R 612		RS1/16S104J
R 613		RS1/16S102J
R 616		RS1/16S473J
R 617		RS1/16S102J
R 618	(P5650MP)	RS1/16S104J
R 619		RS1/16S104J
R 630		RS1/16S104J
R 632		RS1/16S104J
R 641		RS1/16S102J
R 645		RS1/16S271J
R 651		RD1/4PU221J
R 652		RD1/4PU221J
R 656		RS1/16S102J
R 657		RS1/16S102J
R 665		RD1/4PU0R0J
R 666		RS1/16S0R0J
R 669		RS1/16S0R0J
R 671		RS1/16S0R0J
R 672		RS1/16S0R0J
R 676		RS1/16S102J
R 677		RS1/16S104J
R 678		RS1/16S102J
R 680		RS1/16S222J
R 681		RS1/16S104J
R 689		RS1/16S0R0J
R 802		RS1/16S222J
R 803		RS1/16S472J
R 804		RS1/16S1R0J
R 805		RS1/16S391J
R 806		RS1/16S391J
R 807		RS1/16S473J
R 808		RS1/16S473J
R 809		RS1/16S102J
R 810		RS1/16S222J
R 811		RS1/16S222J
R 812		RS1/16S222J
R 813		RS1/16S222J
R 814		RS1/16S222J
R 815		RS1/16S473J
R 816		RS1/16S104J
R 817		RD1/4PU391J
R 818		RS1/16S104J
R 819		RS1/16S222J
R 820		RS1/16S222J
R 821		RS1/16S472J
R 822		RS1/16S0R0J
R 823		RS1/16S102J
R 824		RS1/16S473J
R 825		RS1/16S102J
R 826		RS1/16S102J
R 827		RS1/16S102J
R 828		RS1/16S102J
R 903		RS1/16S223J
R 912		RS1/16S222J
R 913		RS1/16S223J
R 914		RS1/16S104J

Circuit Symbol and No.	Part No.
R 915	RS1/16S104J
R 916	RS1/16S104J
R 923	RS1/16S103J
R 924	RD1/4PU122J
R 925	RS1/16S182J
R 931	RS1/16S472J
R 932	RS1/16S473J
R 933	RS1/16S103J
R 934	RS1/16S473J
R 935	RS1/16S104J
R 936	RS1/16S103J
R 938	RD1/4PU102J
R 939	RD1/4PU102J
R 951	RD1/4PU153J
R 952	RS1/16S472J
R 953	RS1/16S472J
R 954	RS1/16S102J
R 983	RS1/16S223J
R 984	RS1/16S473J
R 985	RS1/16S102J

CAPACITORS

C 101	CKSRYB104K16
C 102	CKSRYB473K25
C 131	CKSRYB104K16
C 132	CKSRYB104K16
C 141	CKSRYB104K16
C 142	CKSRYB103K50
C 143	CKSRYB474K10
C 144	CKSRYB474K10
C 145	CCSRCH101J50
C 146	CCSRCH101J50
C 147	CKSRYB104K16
C 201	CEJQ1R0M50
C 202	CEJQ1R0M50
C 203	CKSRYB104K16
C 204	CKSRYB104K16
C 205	CKSRYB105K10
C 206	CEJQ470M16
C 207	CEJQ1R0M50
C 208	CEJQ1R0M50
C 209	CEJQ1R0M50
C 210	CEJQ1R0M50
C 211	CEJQ4R7M35
C 212	CEJQ4R7M35
C 213	CEJQ4R7M35
C 214	CEJQ4R7M35
C 215	CEJQ4R7M35
C 216	CEJQ4R7M35
C 217	CEJQ4R7M35
C 218	CEJQ4R7M35
C 219	CCSRCH120J50
C 220	CCSRCH120J50
C 221	CCSRCH120J50
C 222	CCSRCH120J50
C 225	CEJQ100M16
C 241	CKSRYB152K50
C 242	CKSRYB152K50
C 301	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 306		CEJQ330M10
C 307	3300µF/16V	CCH1486
C 309		CKSRYB104K16
C 310		CEJQ100M16
C 311		CKSYB475K16
C 312		CKSYB475K16
C 317		CKSRYB474K10
C 318		CKSRYB474K10
C 321		CKSRYB474K10
C 322		CKSRYB474K10
C 323		CKSRYB474K10
C 324		CKSRYB474K10
C 325		CKSQYB225K10
C 326		CKSQYB225K10
C 327		CKSRYB474K10
C 328		CKSRYB474K10
C 351	(P560MP)	CEJQ4R7M35
C 352	(P560MP)	CEJQ4R7M35
C 353		CEJQ4R7M35
C 354		CEJQ4R7M35
C 355		CEJQ4R7M35
C 356		CEJQ4R7M35
C 363		CKSRYB104K16
C 401		CKSRYB103K50
C 402		CEJQ101M10
C 403		CKSQYB105K16
C 404		CKSYB475K10
C 406		CEJQ470M10
C 408		CKSYB475K10
C 409		CEJQ1R0M50
C 411		CCSRCH101J50
C 412		CCSRCH470J50
C 601		CEJQ4R7M35
C 602		CKSQYB105K16
C 603		CEJQ2R2M50
C 604		CCSRCH200J50
C 605		CCSRCH200J50
C 609		CCSRCH101J50
C 644		CEJQ101M10
C 645		CKSRYB473K16
C 646		CCSRCH470J50
C 651		CEJQ101M10
C 652		CKSRYB473K25
C 654		CKSRYB152K50
C 655		CKSRYB152K50
C 657		CCSRCH470J50
C 658	470µF/16V	CCH1183
C 662		CCSRCH471J50
C 755		CKSRYB104K16
C 806		CKSRYB473K25
C 807		CKSRYB473K25
C 808		CKSRYB104K16
C 811		CKSQYB105K16
C 854		CKSRYB473K25
C 911	470µF/16V	CCH1331
C 912		CKSRYB472K50
C 913		CKSRYB103K50
C 914		CEJQ470M10
C 921		CEJQ221M10
C 922		CKSRYB103K50

Circuit Symbol and No.		Part No.
C 923		CEJQ101M16
C 931		CEJQ1R0M50
C 932		CKSRYB104K16

B
Unit Number:CWM8758
Unit Name:Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch(EJECT)	CSG1112

RESISTORS

R 1970	RS1/16S101J
R 1971	RS1/16S101J
R 1972	RS1/16S0R0J

CAPACITORS

C 1970	CKSRYB104K16

C
Unit Number:XWM7039
Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1900	IC	PD6294A
IC 1901	HIC Module	RS-140
Q 1910	Transistor	DTC114EU
D 1909	White LED	NSCW505C-3388
D 1914	White LED	NSCW505C-3388
D 1930	LED	CL-195PG-CD
D 1931	LED	CL-195PG-CD
D 1932	LED	CL-195PG-CD
D 1935	LED	CL-195PG-CD
D 1936	LED	CL-195PG-CD
D 1937	LED	CL-195PG-CD
D 1942	LED	CL-190UB2-X
D 1943	LED	CL-190UB2-X
D 1946	LED	CL-195PG-CD
X 1900	Ceramic Resonator 5.00MHz	CSS1547
S 1901	Switch	CSG1107
S 1902	Push Switch	CSG1112
S 1903	Push Switch	CSG1112
S 1904	Switch	CSG1107
S 1905	Switch	CSG1107
S 1906	Switch	CSG1107
S 1907	Switch	CSG1107
S 1908	Switch	CSG1107
S 1909	Switch	CSG1107
S 1910	Push Switch	CSG1112
S 1911	Switch	CSG1107
S 1912	Switch	CSG1107
S 1913	Switch	CSG1107
S 1914	Switch	CSG1107
S 1915	Switch	CSG1107
S 1916	Push Switch	CSG1112
S 1917	Switch	CSG1110

Circuit Symbol and No.		Part No.
S 1918	Switch	CSG1110
S 1950	Encoder(VOLUME)	XSD7001
	LCD	CAW1755

RESISTORS

R 1900	RS1/16S222J
R 1901	RS1/16S222J
R 1902	RS1/16S121J
R 1903	RS1/16S2R2J
R 1909	RS1/16S181J
R 1910	RS1/16S181J
R 1914	RS1/16S181J
R 1915	RS1/16S181J
R 1919	RS1/16S101J
R 1930	RS1/16S470J
R 1931	RS1/16S470J
R 1932	RS1/16S470J
R 1933	RS1/16S121J
R 1934	RS1/16S470J
R 1938	RS1/16S620J
R 1939	RS1/16S620J
R 1940	RS1/16S470J
R 1941	RS1/16S470J
R 1950	RS1/16S472J
R 1960	RS1/16S473J

CAPACITORS

C 1900	CKSRYB104K16
C 1901	CKSYF106Z10
C 1902	CKSRYB104K16
C 1903	CKSRYB104K16
C 1904	CKSRYB104K16
C 1942	CKSRYF104Z25
C 1943	CKSRYF104Z25

D
Unit Number:CWX2851
Unit Name:CD CORE UNIT(S10WMA)

MISCELLANEOUS

IC 201	IC	UPD63761GJ
IC 203	IC	NJM2391DL1-33
IC 301	IC	BA5835FM
IC 501	IC	S-L2980A15MC-C6A
IC 701	IC	PE5440A
IC 703	IC	S-812C33AUA-C2N
Q 101	Transistor	2SB1132
Q 601	Transistor	IMH20
Q 603	Transistor	2SB709A
Q 701	Transistor	UN2111
D 101	Diode	1SS355
D 601	Diode	MA152WA
L 203	Inductor	CTF1389
L 207	Inductor	CTF1389
L 209	Inductor	CTF1389
L 703	Inductor	CTF1389
X 201	Ceramic Resonator 16.934MHz	CSS1603
X 701	Ceramic Resonator 4.00MHz	CSS1652
S 901	Switch(HOME)	CSN1051

Circuit Symbol and No.		Part No.
S 902	Switch(CLAMP)	CSN1051
S 903	Spring Switch(DSCSNS)	CSN1052
S 904	Switch(12EJ)	CSN1051
S 905	Switch(8EJ)	CSN1051

RESISTORS

R 101		RS1/10S1R5J
R 102		RS1/10S1R5J
R 103		RS1/10S1R5J
R 104		RS1/10S1R5J
R 105		RS1/10S1R5J
R 107		RS1/16SS0R0J
R 201		RS1/16SS102J
R 202		RS1/16SS333J
R 205		RS1/16SS473J
R 207		RS1/16SS473J
R 209		RS1/16SS473J
R 214		RS1/16SS472J
R 216		RS1/16SS472J
R 218		RS1/16SS472J
R 220		RS1/16SS472J
R 221		RS1/16SS103J
R 222		RS1/16SS103J
R 223		RS1/16SS0R0J
R 224		RS1/16SS0R0J
R 225		RS1/16SS103J
R 226		RS1/16SS393J
R 227		RS1/16SS562J
R 228		RS1/16SS122J
R 229		RS1/16SS472J
R 231		RS1/16SS0R0J
R 232		RS1/16SS122J
R 233		RS1/16SS0R0J
R 240		RS1/16SS0R0J
R 241		RS1/16SS333J
R 242		RS1/16SS0R0J
R 243		RS1/16SS333J
R 245		RS1/16SS333J
R 250		RS1/16SS0R0J
R 256		RS1/16SS0R0J
R 261		RS1/16S0R0J
R 262		RS1/16S0R0J
R 263		RS1/16S0R0J
R 264		RS1/16S0R0J
R 267		RS1/16S0R0J
R 301		RS1/16SS183J
R 302		RS1/16SS822J
R 304		RS1/16SS183J
R 305		RS1/16SS822J
R 307		RS1/16SS183J
R 308		RS1/16SS183J
R 309		RS1/16SS183J
R 310		RS1/16SS183J
R 501		RS1/16SS0R0J
R 601		RS1/16S101J
R 602		RS1/16S101J
R 603		RS1/16S223J
R 604		RS1/16S223J
R 605		RS1/16SS103J
R 606		RS1/16S0R0J
R 701		RS1/16S0R0J
R 702		RS1/16SS0R0J
R 703		RS1/16SS104J
R 704		RS1/16SS104J
R 705		RS1/16SS221J
R 706		RS1/16SS221J
R 707		RS1/16SS0R0J
R 708		RS1/16SS221J
R 709		RS1/16SS473J
R 710		RS1/16SS102J
R 711		RS1/16SS102J
R 712		RS1/16SS102J
R 713		RS1/16SS102J
R 714		RS1/16SS473J
R 715		RS1/16SS0R0J
R 716		RS1/16SS472J
R 719		RS1/16SS221J
R 720		RS1/16SS471J
R 721		RS1/16S0R0J
R 724		RS1/16S473J
R 725		RS1/16SS222J
R 726		RS1/16SS103J
R 727		RS1/16SS473J
R 729		RS1/16SS223J
R 730		RS1/16SS473J
R 731		RS1/16SS104J
R 732		RS1/16SS104J
R 733		RS1/16SS104J
R 735		RS1/16SS473J
R 737		RS1/16SS104J
R 740		RS1/16SS473J
R 742		RS1/16SS104J
R 745		RS1/16SS473J
R 746		RS1/16SS104J
R 750		RS1/16SS473J
R 754		RS1/16SS102J
R 755		RS1/16SS102J
R 756		RS1/16SS104J
R 765		RAB4CQ221J
R 769		RAB4CQ221J
R 773		RAB4CQ221J
R 777		RS1/16SS221J
R 778		RS1/16SS221J
R 779		RS1/16SS221J
R 901		RAB4CQ221J
R 902		RS1/16S0R0J
R 905		RS1/16SS221J
R 906		RS1/16SS221J
R 908		RS1/16SS0R0J
R 910		RS1/16SS0R0J

CAPACITORS

C 101		CKSSYB104K10
C 102		CKSSYB104K10
C 103	100µF/16V	CCH1504
C 104	47µF/6.3V	CCH1506
C 105		CKSSYB104K10
C 106		CCSSCH101J50

Circuit Symbol and No.		Part No.
C 107		CKSRYB224K16
C 108		CKSSYB104K10
C 110		CKSSYB104K10
C 201		CKSSYB471K50
C 202		CKSSYB104K10
C 203		CKSSYB104K10
C 204	22µF/6.3V	CCH1507
C 205		CKSSYB104K10
C 207	220µF/4V	CCH1590
C 208		CKSSYB104K10
C 209		CKSSYB104K10
C 216		CKSSYB332K50
C 217		CKSSYB104K10
C 218		CKSSYB223K16
C 219		CKSSYB104K10
C 220		CKSSYB103K16
C 221		CKSSYB104K10
C 222		CCSSCH560J50
C 223		CCSSCH5R0C50
C 224		CKSSYB104K10
C 225		CKSSYB103K16
C 226		CCSSCH680J50
C 227		CCSSCH470J50
C 228		CKSSYB682K25
C 230		CKSSYB104K10
C 232		CKSSYB104K10
C 233	10µF/6.3V	CCH1470
C 234	220µF/4V	CCH1590
C 235		CKSRYB224K16
C 237		CKSSYB104K10
C 239		CCSSCH330J50
C 242		CKSSYB104K10
C 246		CKSSYB104K10
C 250		CKSRYB102K50
C 251		CKSRYB102K50
C 260		CKSSYB104K10
C 301		CKSSYB221K50
C 302		CKSSYB221K50
C 303		CKSSYB472K25
C 304		CKSSYB103K16
C 305	100µF/16V	CCH1504
C 306		CKSSYB104K10
C 307		CKSSYB104K10
C 501		CKSRYB224K16
C 505		CKSQYB475K6R3
C 601		CCSRCH102J50
C 602		CCSRCH102J50
C 603	4.7µF/25V	CCH1568
C 604	4.7µF/25V	CCH1568
C 701		CKSSYB104K10
C 702		CKSSYB471K50
C 703		CKSSYB103K16
C 704	4.7µF/25V	CCH1592
C 706		CKSSYB104K10
C 707		CKSSYB104K10
C 712		CKSRYB224K16
C 713		CKSSYB104K10
C 714		CKSSYB104K10
C 716		CKSSYB103K16
C 720		CKSQYB225K10
C 722		CKSRYB105K10
C 903		CKSSYB471K50
C 906		CKSRYB224K16
C 907		CKSSYB103K16
C 910		CKSQYB225K10

Miscellaneous Parts List

	Pickup Unit(P10)(Service)	CXX1641
M 1	Motor Unit(SPINDLE)	CXB6007
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933