
9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

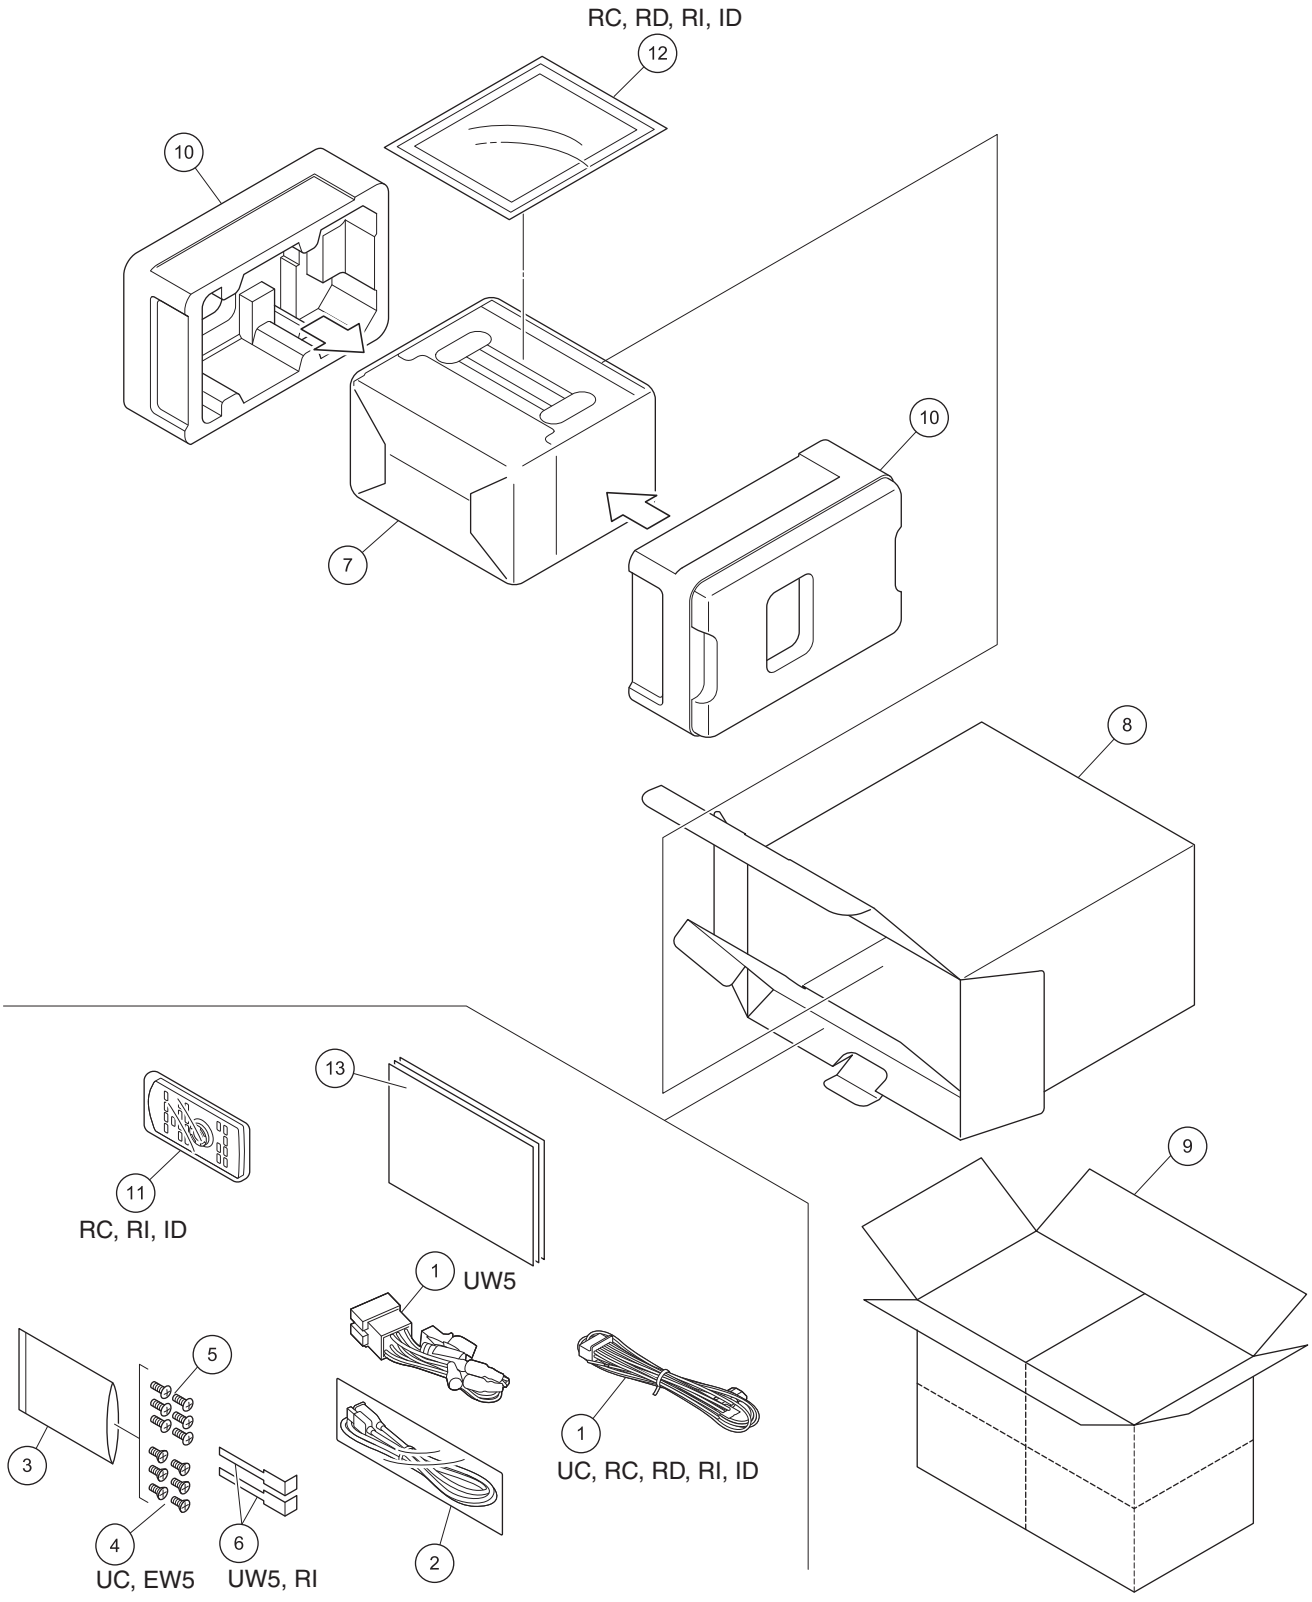

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	See Contrast table (2)
	2	USB Extended Cable	CDP1587
	3	Polyethylene Bag	CEG1160
	4	Screw	See Contrast table (2)
	5	Screw	TRZ50P080FTC
	6	Handle	See Contrast table (2)
	7	Cover	See Contrast table (2)
	8	Unit Box	See Contrast table (2)
	9	Contain Box	See Contrast table (2)
	10	Protector	See Contrast table (2)
	11	Card Remote Control Unit	See Contrast table (2)
	12	Panel	See Contrast table (2)
	13-1	Owner's Manual	See Contrast table (2)
*	13-2	Warranty Card	See Contrast table (2)
*	13-3	Service Network	See Contrast table (2)

(2) CONTRAST TABLE

AVH-100DVD/XNUC, AVH-160DVD/XNUW5, AVH-165DVD/XNRC, AVH-165DVD/XNRD, AVH-165DVD/XNRI and AVH-169DVD/XNID are constructed the same except for the following:


Mark	No.	Description	AVH-100DVD/XNUC	AVH-160DVD/XNUW5	AVH-165DVD/XNRC
	1	Cord Assy	CDP1583	CDP1584	CDP1583
	4	Screw	CRZ50P090FTC	CRZ50P090FTC	Not used
	6	Handle	Not used	CND6289	Not used
	7	Cover	CEG1359	CEG1356	CEG1356
	8	Unit Box	YHG5753	YHG5744	YHG5745
	9	Contain Box	YHL5753	YHL5744	YHL5745
	10	Protector	CHP4598	CHP4599	CHP4598
	11	Card Remote Control Unit	Not used	Not used	CXE5116
	12	Panel	Not used	Not used	CNS9475
	13-1	Owner's Manual	YRD5383	YRB5284	YRD5380
*	13-2	Warranty Card	QRY3001	CRY1330	Not used
*	13-3	Service Network	Not used	Not used	Not used

Mark	No.	Description	AVH-165DVD/XNRD	AVH-165DVD/XNRI	AVH-169DVD/XNID
	1	Cord Assy	CDP1583	CDP1583	CDP1583
	4	Screw	Not used	Not used	Not used
	6	Handle	Not used	CND6289	Not used
	7	Cover	CEG1356	CEG1356	CEG1356
	8	Unit Box	YHG5746	YHG5747	YHG5748
	9	Contain Box	YHL5746	YHL5747	YHL5748
	10	Protector	CHP4598	CHP4599	CHP4598
	11	Card Remote Control Unit	Not used	CXE5116	CXE5116
	12	Panel	CNS9475	CNS9475	CNS9475
	13-1	Owner's Manual	YRD5381	YRD5382	YRB5283
*	13-2	Warranty Card	Not used	Not used	CRY1304
*	13-3	Service Network	Not used	Not used	CRY1305

Owner's Manual,Installation Manual

Part No.	Language
YRD5383	English, French, Spanish(Espanol)
YRB5284	Russian
YRD5380	English, Traditional Chinese
YRD5381	English, Spanish(Espanol), Portuguese(B)
YRD5382	English, Arabic, Persian
YRB5283	English

9.2 EXTERIOR (1)

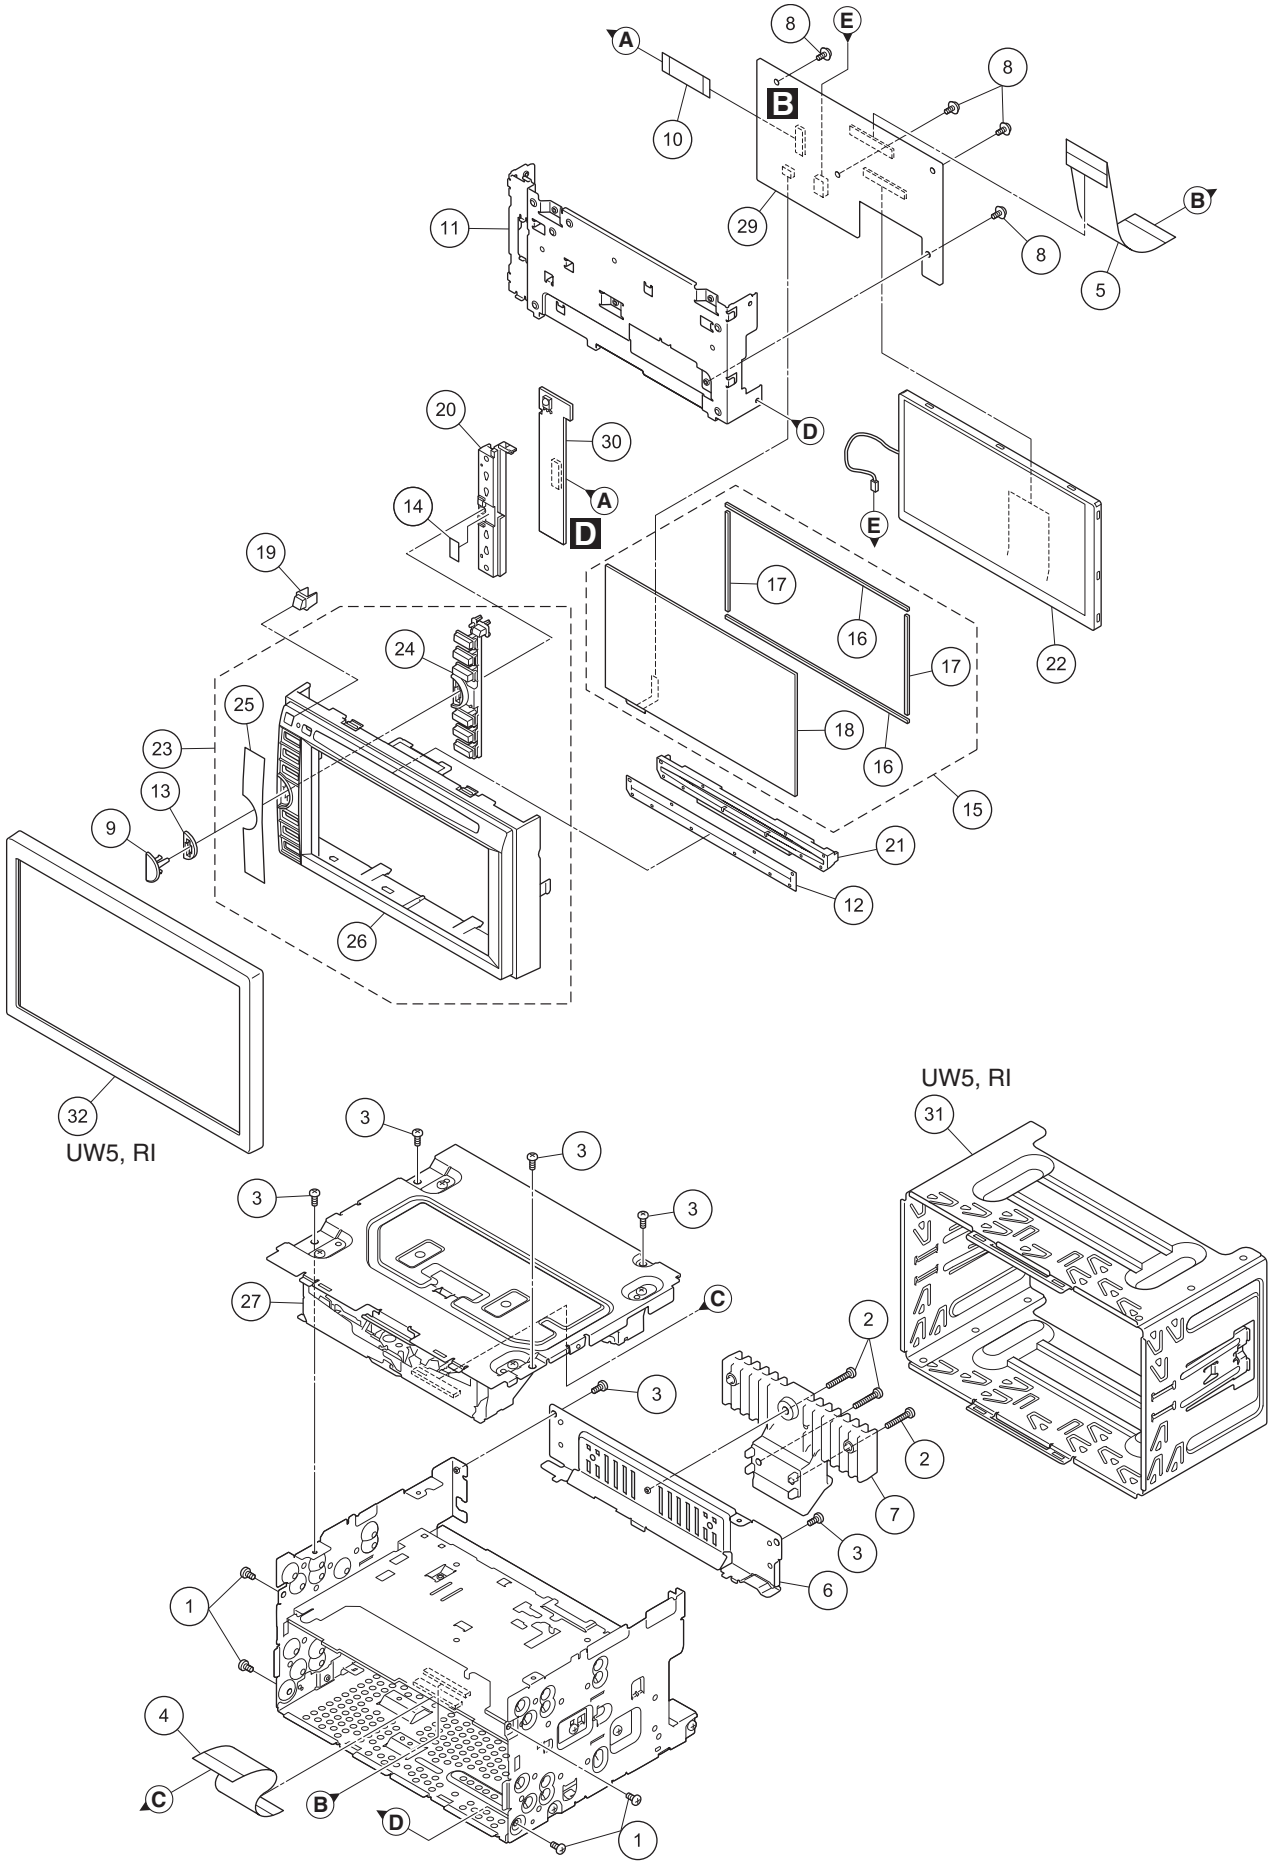

(1) EXTERIOR (1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P050FTC
	2	Screw	BSZ26P120FTC
	3	Screw	BSZ26P060FTC
	4	FFC	CDE9765
	5	FFC	CDE9767
	6	Holder	YND5148
	7	Heat Sink	CNR2147
	8	Screw	ASZ26P050FTC
	9	Button (HOME)	CAI3845
	10	FFC	CDE9768
	11	Holder	YND5145
	12	Cover	CNN2628
	13	Cushion	CNN4186
	14	Sheet	CNN4187
	15	Service Unit (Touch Panel)	CXX6233
	16	Cushion	CNN4273
	17	Cushion	CNN4274
	18	Touch Panel	CSX1184
	19	Lighting Conductor	CNW2588
	20	Lighting Conductor	CNW2589
	21	Holder	CNW2590
	22	TFT LCD	CWX4526
	23	Grille Assy	See Contrast table (2)
	24	Button	CAI3844
	25	Plate	YNN5079
	26	Grille	See Contrast table (2)
	27	DVD Mechanism Module (LS2)	CXK8003
	28	•••••	
	29	Monitor Unit (Service)	YXX5281
	30	Key Unit (Service)	YXX5282
	31	Holder	See Contrast table (2)
	32	Panel	See Contrast table (2)


(2) CONTRAST TABLE

AVH-100DVD/XNUC, AVH-160DVD/XNUW5, AVH-165DVD/XNRC, AVH-165DVD/XNRD, AVH-165DVD/XNRI and AVH-169DVD/XNID are constructed the same except for the following:

Mark	No.	Description	AVH-100DVD/XNUC	AVH-160DVD/XNUW5	AVH-165DVD/XNRC
	23	Grille Assy	YXE5121	YXE5117	YXE5118
	26	Grille	YNS5767	YNS5763	YNS5764
	31	Holder	Not used	CND6288	Not used
	32	Panel	Not used	CNS9952	Not used

Mark	No.	Description	AVH-165DVD/XNRD	AVH-165DVD/XNRI	AVH-169DVD/XNID
	23	Grille Assy	YXE5118	YXE5118	YXE5119
	26	Grille	YNS5764	YNS5764	YNS5765
	31	Holder	Not used	CND6288	Not used
	32	Panel	Not used	CNS9952	Not used

9.3 EXTERIOR (2)

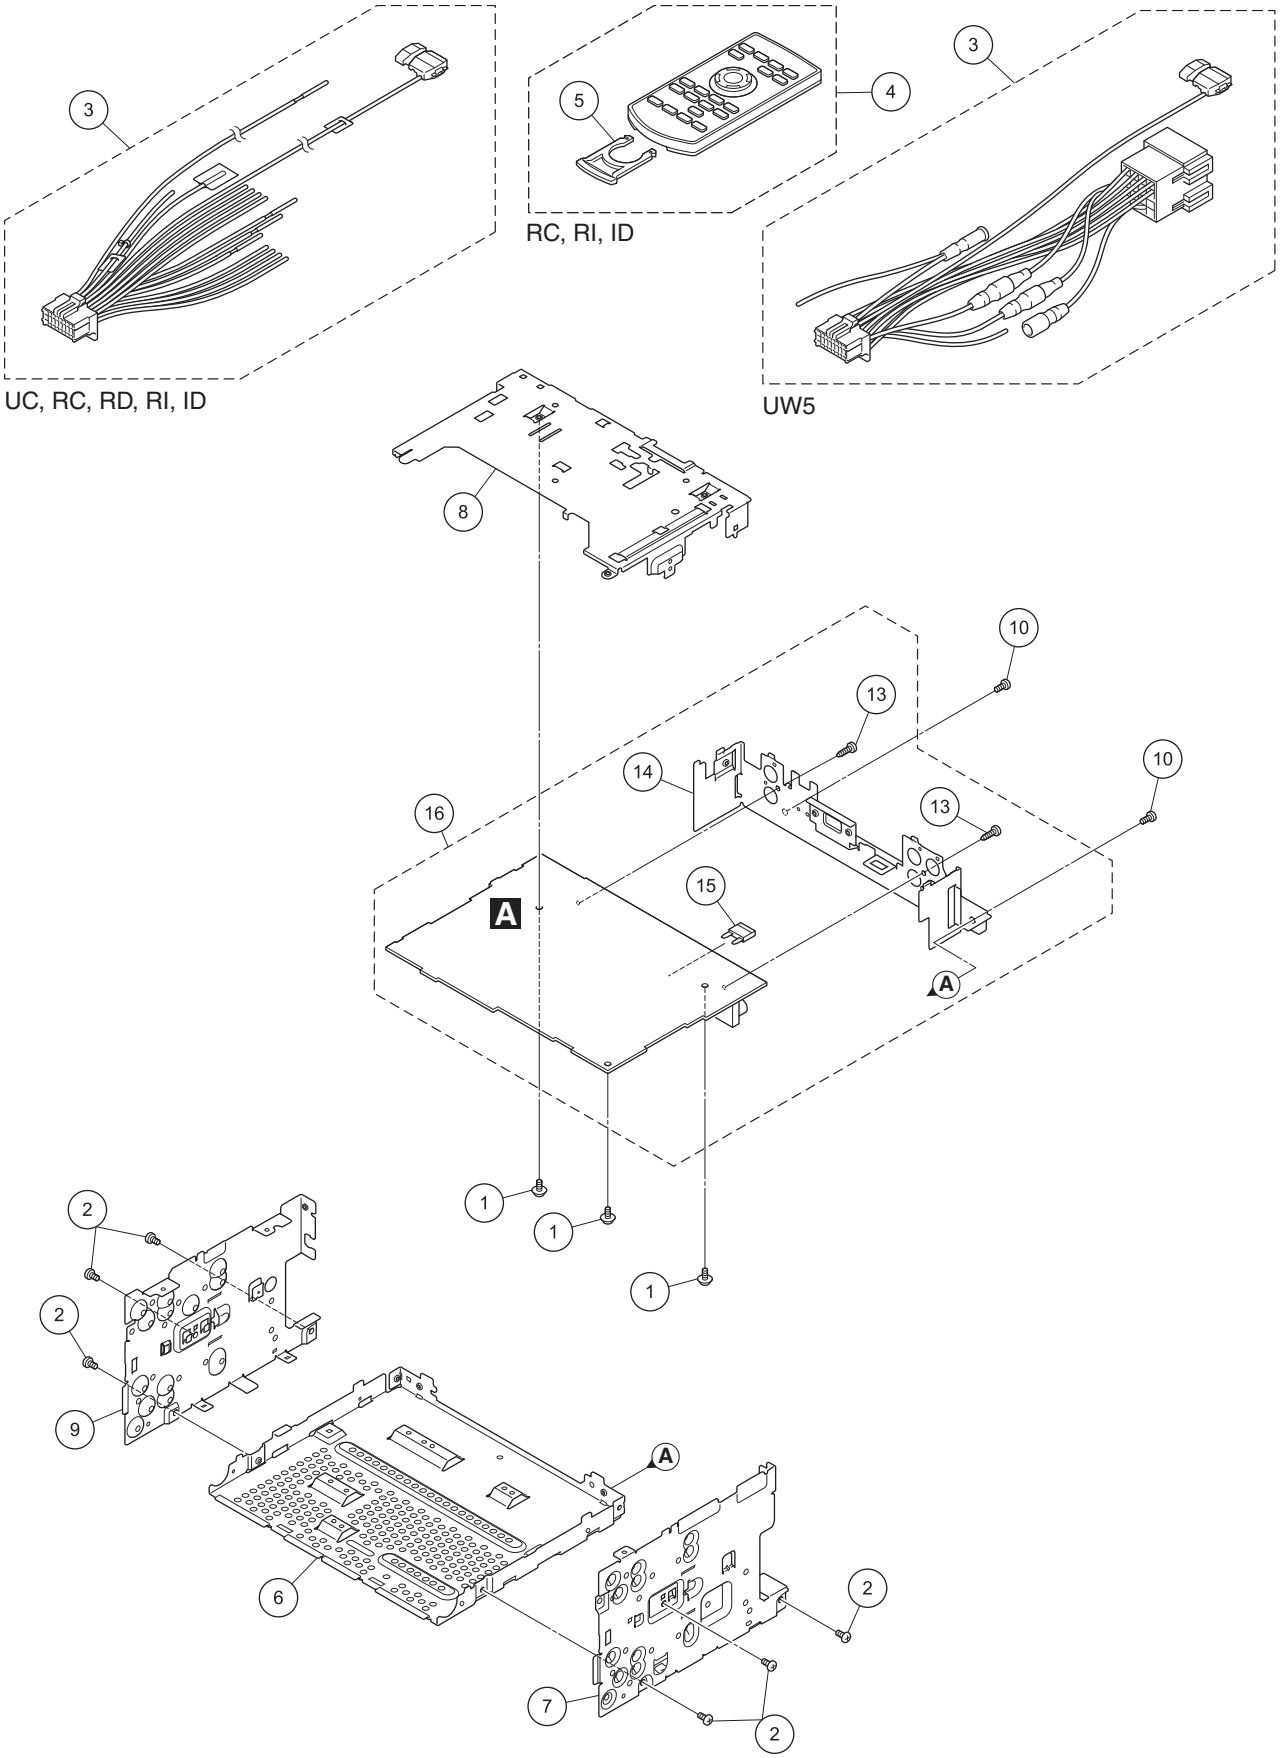

(1) EXTERIOR (2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BSZ26P050FTC
	3	Cord Assy	See Contrast table (2)
	4	Card Remote Control Unit	See Contrast table (2)
	5	Battery Cover	See Contrast table (2)
	6	Chassis	CNA3210
	7	Bracket	CND6336
	8	Holder	CND6530
	9	Bracket	CND6635
	10	Screw	BSZ26P060FTC
	11	•••••	
	12	•••••	
	13	Screw	BPZ26P080FTC
	14	Holder	See Contrast table (2)
⚠	15	Fuse (10 A)	YEK5001
	16	Mother Unit (Service)	See Contrast table (2)


(2) CONTRAST TABLE

AVH-100DVD/XNUC, AVH-160DVD/XNUW5, AVH-165DVD/XNRC, AVH-165DVD/XNRD, AVH-165DVD/XNRI and AVH-169DVD/XNID are constructed the same except for the following:

Mark	No.	Description	AVH-100DVD/XNUC	AVH-160DVD/XNUW5	AVH-165DVD/XNRC
	3	Cord Assy	CDP1583	CDP1584	CDP1583
	4	Card Remote Control Unit	Not used	Not used	CXE5116
	5	Battery Cover	Not used	Not used	CNU1624
	14	Holder	YND5147	YND5161	YND5161
	16	Service Unit (Mother)	YXX5274	YXX5275	YXX5276

Mark	No.	Description	AVH-165DVD/XNRD	AVH-165DVD/XNRI	AVH-169DVD/XNID
	3	Cord Assy	CDP1583	CDP1583	CDP1583
	4	Card Remote Control Unit	Not used	CXE5116	CXE5116
	5	Battery Cover	Not used	CNU1624	CNU1624
	14	Holder	YND5161	YND5161	YND5161
	16	Service Unit (Mother)	YXX5277	YXX5278	YXX5279

9.4 DVD MECHANISM MODULE (1)

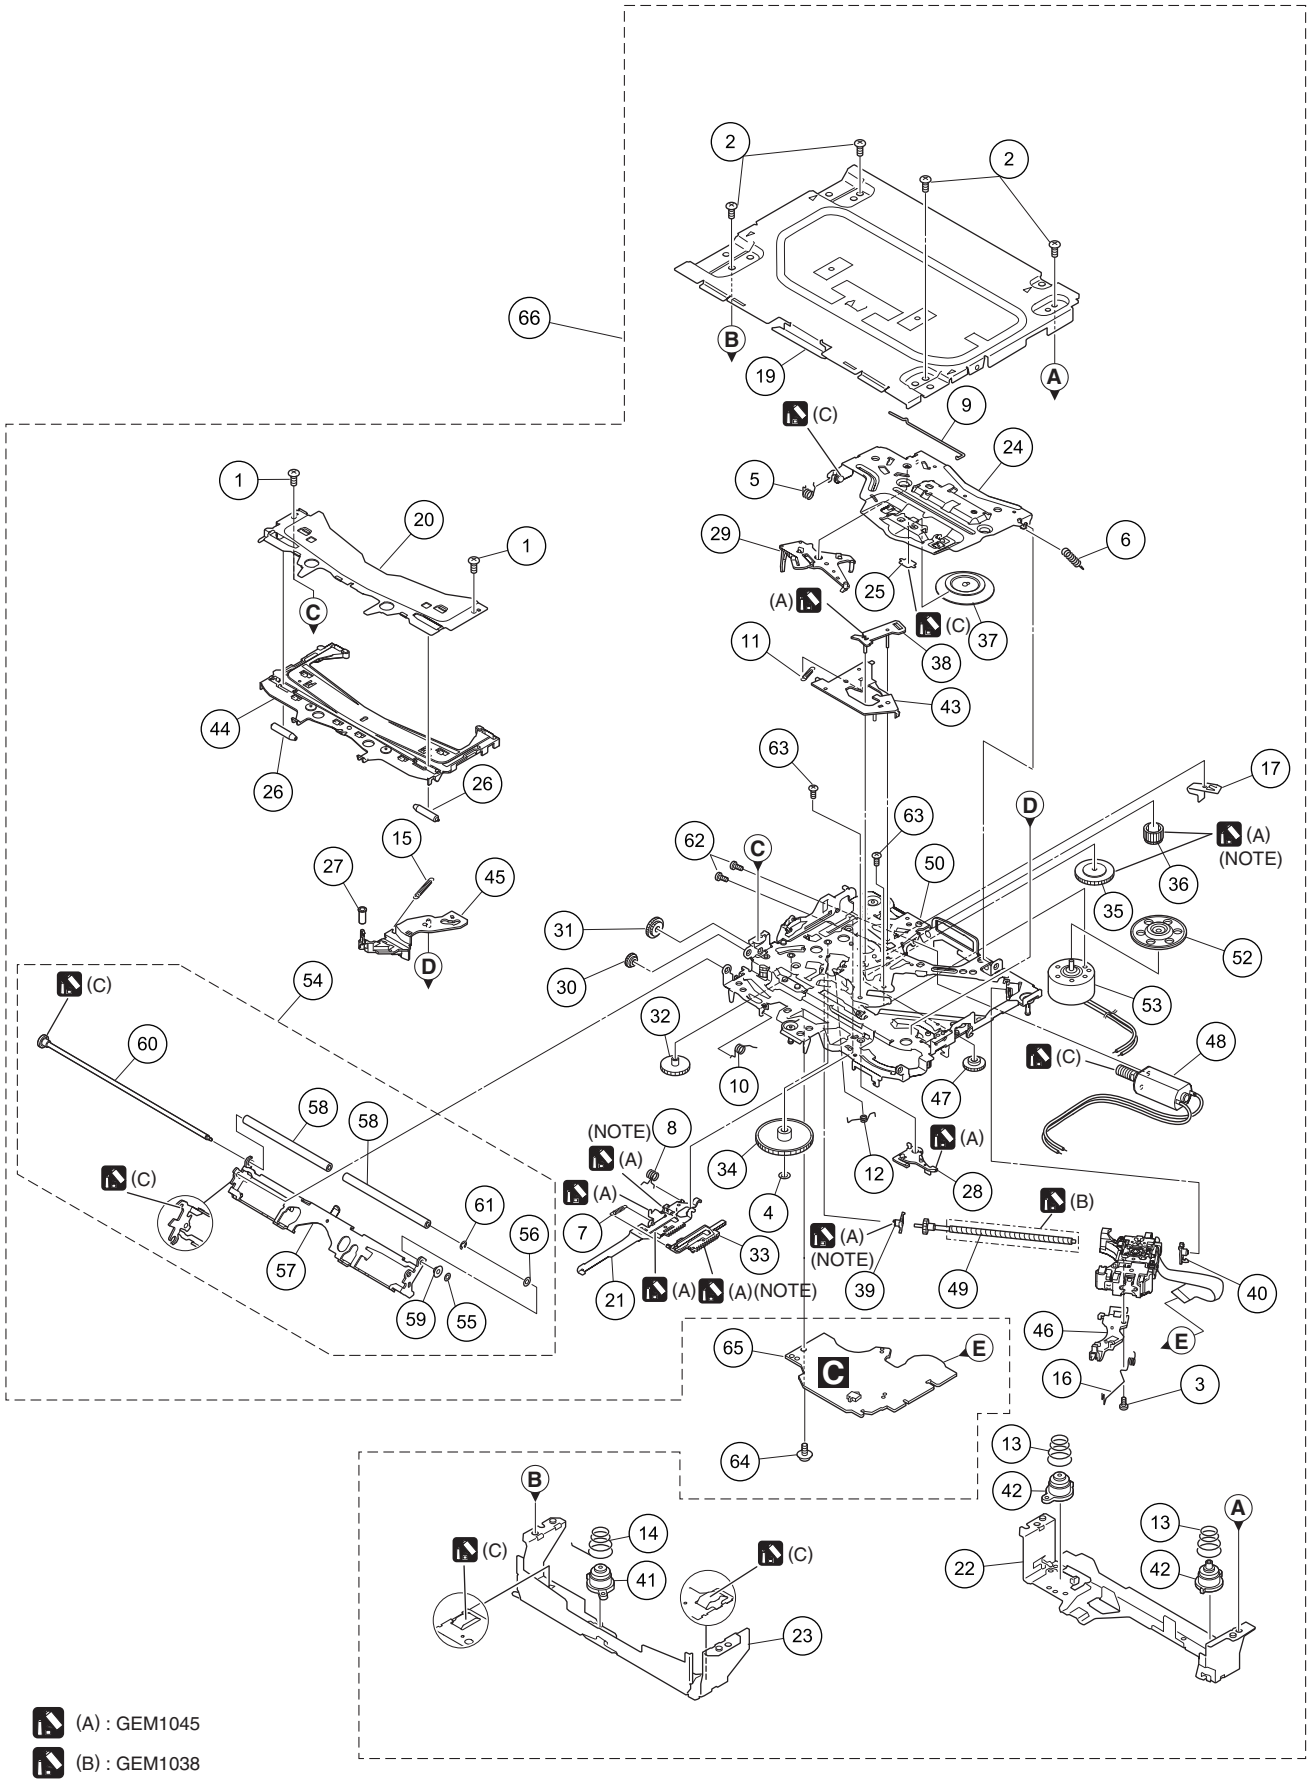

(NOTE) Apply grease to the whole part.

DVD MECHANISM MODULE (1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ20P040FTC
	2	Screw	BSZ26P060FTC
	3	Screw (M2 x 4)	CBA1835
	4	Washer	CBF1038
	5	Spring	CBH2855
	6	Spring	CBH2860
	7	Spring	CBH3010
	8	Spring	CBH3011
	9	Spring	CBH3014
	10	Spring	CBH3015
	11	Spring	CBH3016
	12	Spring	CBH3017
	13	Spring	CBH3019
	14	Spring	CBH3086
	15	Spring	CBH3095
	16	Spring	CBH3096
	17	Plate Spring	CBL1824
	18	•••••	
	19	Case	CNB3763
	20	Bracket	CND4553
	21	Lever	CND5398
	22	Bracket	CND5710
	23	Bracket	CND6127
	24	Arm	CND6406
	25	Sheet	CNN3678
	26	Roller	CNW1172
	27	Roller	CNW1175
	28	Arm	CNW1177
	29	Arm	CNW1178
	30	Gear	CNW1180
	31	Gear	CNW1181
	32	Gear	CNW1183
	33	Rack	CNW1184
	34	Gear	CNW1185
	35	Gear	CNW1186
	36	Gear	CNW1187
	37	Clamper	CNW1190
	38	Arm	CNW1192
	39	Holder	CNW1193
	40	Holder	CNW1194
	41	Damper	CNW2439
	42	Damper	CNW2440
	43	Arm	CNW1726
	44	Guide	CNW2240
	45	Arm	CNW2241
	46	Rack	CNW2265
	47	Gear	CNW2287
	48	Motor Unit(M1)(CRG(L/E))	CXC4026
	49	Screw Unit	CXC8894
*	50	Chassis Unit	CXE6044
	51	•••••	
*	52	Support Wheel	CNW2052
*	53	Spindle Motor(M2)(SPINDLE)	EXM2002
	54	Arm Assy	CXE6232
	55	Washer	CBF1037
	56	Washer	CBF1038
	57	Arm	CND6242
	58	Roller	CNW2500
	59	Collar	CNW2444
	60	Gear Unit	CXC6225
	61	Washer	YE15FTC
	62	Screw	JFZ20P025FTC
	63	Screw	JGZ17P020FTC
	64	Screw (M2 x 5)	EBA1028
	65	DVD Core Unit	YWX5032
	66	Mechanism Unit(Service)	CXX4548

(NOTE) Pickup, Spindle Motor and Support Wheel are not available as service parts, because they need adjustment by special equipment after replacing.

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:AVH-100DVD/XNUC
B:AVH-160DVD/XNUW5
C:AVH-165DVD/XNRC
D:AVH-165DVD/XNRD
E:AVH-165DVD/XNRI
F:AVH-169DVD/XNID

Unit Number : YXX5274(A)
Unit Number : YXX5275(B)
Unit Number : YXX5276(C)
Unit Number : YXX5277(D)
Unit Number : YXX5278(E)
Unit Number : YXX5279(F)
Unit Name : Mother Unit(Service)
Unit Number : YXX5281
Unit Name : Monitor Unit(Service)
Unit Number : YWX5032
Unit Name : DVD Core Unit
Unit Number : YXX5282
Unit Name : Key Unit(Service)

A

Unit Number : YXX5274(A)
Unit Number : YXX5275(B)
Unit Number : YXX5276(C)
Unit Number : YXX5277(D)
Unit Number : YXX5278(E)
Unit Number : YXX5279(F)

Unit Name : Mother Unit(Service)

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 101	(B,103,70) IC	AK4223VQ
IC 251	(B,99,87) IC	PM9012A
IC 341	(A,97,118) IC	PA2032A
IC 501	(A,40,75) IC	TDA7706
IC 601	(A,56,52) IC(A)	PDB120A8
	(A,56,52) IC(B,C,D,E,F)	PDB121A8
IC 1101	(B,123,38) RAM IC	M12L128168A-5TG2N
IC 1151	(B,104,46) IC	WM8761BGED
IC 1202	(B,105,37) IC(A)	337S3959
IC 1251	(B,146,51) Flash ROM Unit(Service) (A,C)	YXX5283
	(B,146,51)Flash ROM Unit(Service) (B,D,E,F)	YXX5284
IC 1301	(B,96,19) IC	MX25L8006EM2I-12G
IC 1302	(A,107,39) IC	R5S72690RW266FP
IC 1601	(A,123,69) IC	TC7USB221FT
IC 1801	(B,60,80) Regulator IC	NJW4181U3-33B
IC 1821	(A,114,94) IC	NJM2387ADL3
IC 1901	(B,33,50) IC	NJM2886DL3-05
IC 1951	(B,158,65) IC	AN33012UA
IC 2011	(B,115,12) Regulator IC	BD00IA5WEFJ
IC 2101	(B,164,93) Regulator IC	BD9876EFJ
IC 2161	(B,150,96) IC(A)	AN33014UA
IC 2162	(B,140,64) IC(B,C,D,E,F)	BD2232G-G
Q 303	(B,94,98) Transistor	LSCR523UB
Q 311	(B,90,100) Transistor	RT3T14M
Q 321	(B,87,104) Chip Transistor	RN1903
Q 710	(A,38,42) Chip Transistor(C,D,E,F)	HN1B04FU
Q 741	(A,75,46) Chip Transistor	HN1C03FU
Q 742	(B,81,58) Transistor	UMF5N
Q 743	(B,81,54) Transistor	UMF5N
Q 751	(B,65,15) Chip Transistor	HN1C01FU
Q 752	(B,61,15) Chip Transistor	RN4982
Q 831	(B,65,74) Transistor	LTC014EEB
Q 841	(B,67,70) Transistor	LTC014EEB
Q 854	(A,52,95) Transistor	LSAR523UB
Q 871	(A,56,75) Chip Transistor	HN1C01FU
Q 1201	(B,110,29) Transistor(A)	LSAR523UB
Q 1631	(A,39,108) Chip Transistor	HN1C01FU

Circuit Symbol and No.		Part No.
Q 1633	(A,29,110) Chip Transistor	HN1C01FU
Q 1951	(A,163,67) Power MOS FET	RSD140P06
Q 1952	(A,153,64) Power MOS FET	RSD140P06
D 301	(B,86,100) Diode	DA2J101
D 302	(B,91,95) Diode	DZ2J082M0
D 312	(B,90,97) Diode	DA2J101
D 501	(A,46,92) Diode	RN731VN
D 502	(A,46,85) Diode	RN731VN
D 601	(B,61,46) Diode	RB501VM-40
D 602	(B,63,47) Diode	DB2J31400
D 741	(A,72,44) Diode	DA2J101
D 801	(B,64,119) Diode	1SR154-400
D 802	(B,60,119) Diode	1SR154-400
D 831	(B,63,73) Diode	DZ2J056M0
D 841	(B,70,73) Diode	DA2J101
D 853	(A,51,99) Diode	MC2848-11
D 871	(B,63,100) Diode	UDZV6R2(B)
D 873	(B,67,98) Diode	UDZV7R5(B)
D 1601	(A,133,111) Diode	PESD0402-140
D 1602	(A,133,109) Diode	PESD0402-140
D 1603	(A,122,65) Diode	PESD0402-140
D 1604	(A,124,65) Diode	PESD0402-140
D 1651	(B,164,105) Diode	DZ2S068C
D 1652	(B,170,106) Diode	DZ2S068C
D 1653	(B,166,106) Diode	DZ2S068C
D 1801	(B,66,80) Diode	1SR154-400
D 1901	(B,38,41) Diode	CRG03
D 1951	(A,161,60) Diode	RB056L-40
D 1952	(A,153,56) Diode	RB056L-40
D 1953	(A,159,109) Diode	RB060M-30
D 1954	(A,159,106) Diode	RB060M-30
D 2101	(A,164,91) Diode	RB056L-40
D 2161	(B,141,100) Diode(A)	RB060M-30
D 2162	(B,152,103) Diode(A)	RB060M-30
L 501	(A,46,88) Chip Coil	LCTAWR15J2520
L 502	(A,43,87) Chip Coil	LCTAWR27J2520
L 503	(A,40,87) Inductor	CTF1786
L 504	(A,38,86) SMD Ferrite Beads	CTF1806
L 505	(A,34,92) Inductor	CTF1389
L 506	(A,43,85) Inductor	CTF1794
L 507	(A,32,86) Inductor	LCYC220K1608
L 508	(A,32,82) Inductor(A,D)	LCYB68NJ1005
L 509	(A,29,76) Chip Coil	LCTAW470J2520
L 510	(A,31,72) Inductor	CTF1786
L 511	(A,35,67) Inductor	CTF1786
L 512	(A,50,80) Inductor	CTF1786
L 513	(A,51,80) Inductor	CTF1786
L 514	(A,44,65) Inductor	CTF1786
L 517	(A,50,68) Inductor	CTF1786
L 519	(A,33,90) Inductor	LCYB10NJ1608
L 801	(A,63,89) Choke Coil 600 uH	CTH1221
L 1101	(B,135,40) Inductor	CTF1786
L 1107	(B,119,47) Inductor	CTF1645
L 1151	(B,106,52) Inductor	CTF1786
L 1251	(B,138,52) Inductor	CTF1786
L 1301	(B,109,41) Inductor	CTF1786
L 1302	(B,110,54) Inductor	CTF1545
L 1303	(B,108,18) Chip Beads	VTL1129
L 1304	(B,138,40) Chip Beads	VTL1129
L 1305	(A,127,34) Chip Beads	VTL1126

Circuit Symbol and No.		Part No.
L 1306	(A,86,31) Chip Beads	VTL1127
L 1311	(A,124,26) Chip Beads	VTL1127
L 1312	(A,126,29) Chip Beads	VTL1127
L 1313	(A,124,32) Chip Beads	VTL1127
L 1315	(A,125,38) Chip Beads	VTL1127
L 1316	(A,124,40) Chip Beads	VTL1127
L 1317	(A,125,39) Chip Beads	VTL1127
L 1318	(A,125,43) Chip Beads	VTL1127
L 1319	(A,125,46) Chip Beads	VTL1127
L 1322	(A,125,51) Chip Beads	VTL1127
L 1323	(A,125,55) Chip Beads	VTL1127
L 1377	(A,86,27) Chip Beads	VTL1126
L 1381	(A,87,51) Chip Beads	VTL1126
L 1383	(A,83,51) Chip Beads	VTL1126
L 1384	(A,85,49) Chip Beads	VTL1126
L 1387	(A,87,43) Chip Beads	VTL1126
L 1390	(A,83,43) Chip Beads	VTL1126
L 1391	(A,87,42) Chip Beads	VTL1126
L 1393	(A,83,41) Chip Beads	VTL1126
L 1394	(A,87,41) Chip Beads	VTL1126
L 1397	(A,83,40) Chip Beads	VTL1126
L 1399	(A,87,40) Chip Beads	VTL1126
L 1401	(A,87,39) Chip Beads	VTL1126
L 1403	(A,84,38) Chip Beads	VTL1126
L 1405	(A,87,37) Chip Beads	VTL1126
L 1407	(A,84,36) Chip Beads	VTL1126
L 1409	(A,87,35) Chip Beads	VTL1126
L 1411	(A,87,34) Chip Beads	VTL1126
L 1413	(A,87,33) Chip Beads	VTL1126
L 1415	(A,86,32) Chip Beads	VTL1126
L 1601	(A,132,101) Inductor	CTF1713
L 1951	(A,164,52) Coil	CTH1463
L 1952	(A,151,51) Choke Coil 22 uH(A)	CTH1561
	(A,151,51) Inductor(B,C,D,E,F)	CTH1524
L 1953	(A,163,100) Choke Coil 10 uH	CTH1486
L 2101	(A,158,91) Choke Coil 22 uH	CTH1561
L 2161	(A,140,101) Inductor(A)	CTH1524
X 501	(A,52,72) Resonator 36.480 MHz	CSS1805
X 601	(A,71,53) Crystal Resonator 12.500 MHz	CSS1839
X 1301	(A,103,62) Resonator 48.000 MHz	CSS1760
X 1302	(A,113,62)Crystal Resonator 13.333 33 MHz	CSS1840
X 1303	(A,86,47) Resonator 16.93 MHz	CSS1794
X 1304	(A,98,64) Resonator 27.000 MHz	CSS1768
P 451	(A,21,93) Surge Absorber	IMSA-6803-01Y900
P 1621	(B,160,103) Poly Switch	FSMD075-24R
P 1631	(B,44,106) Poly Switch	FSMD075-24R
⚠ P1951	(A,45,34) Fuse 1.0 A	CEK1381
⚠ P2071	(A,145,35) Fuse 1.25 A	CEK1382
⚠ P2101	(B,84,14) Fuse 0.75 A	CEK1380
⚠ P2151	(A,46,22) Fuse 2.5 A	CEK1385
⚠ P2152	(A,47,24) Fuse 1.5 A	CEK1383
BZ1621	(A,126,13) Buzzer	CPV1062
CN602	(A,24,7) L-Plug	KM200NA5L
CN751	(A,63,11) Connector	CKS6025
CN1751	(A,67,24) Connector	CKS6536
JA451	(A,14,108) Antenna Jack	YKS5041
JA801	(A,62,115) Plug	CKM1376
JA1601	(A,137,107) USB Jack	CKN1097
JA1621	(A,151,121) Jack	CKB1108
JA1631	(A,35,118) Pin Jack	CKB1099

Circuit Symbol and No.			Part No.
JA1641	(A,125,118)	Jack	CKS6437
JA1651	(A,165,126)	Mini Jack	AKN1073

RESISTORS

R 104	(B,97,74)		RS1/16SS75R0D
R 105	(B,97,76)		RS1/16SS75R0F
R 110	(B,118,69)		RAB4CQ101J
R 121	(B,93,68)		RS1/16SS101J
R 122	(B,92,69)		RS1/16SS101J
R 123	(B,93,71)		RS1/16SS101J
R 124	(B,93,72)		RS1/16SS101J
R 252	(A,100,105)		RS1/10SR0R0J
R 253	(A,97,105)		RS1/10SR0R0J
R 254	(A,94,105)		RS1/10SR0R0J
R 255	(A,104,104)		RS1/10SR0R0J
R 306	(A,66,40)		RS1/16SS103J
R 309	(A,82,107)		RS1/16SS0R0J
R 310	(B,87,101)		RS1/16SS103J
R 312	(B,88,95)		RS1/16SS102J
R 313	(B,95,95)		RS1/16SS104J
R 314	(B,94,95)		RS1/16SS473J
R 321	(B,85,103)		RS1/16SS683J
R 322	(B,85,105)		RS1/16SS152J
R 323	(B,83,102)		RS1/16SS683J
R 324	(B,85,106)		RS1/16SS101J
R 452	(A,9,92)		RS1/10SR0R0J
R 454	(B,49,81)		RS1/8SQ0R0J
R 456	(A,15,71)		RS1/10SR0R0J
R 457	(B,22,93)		RS1/10SR0R0J
R 458	(B,38,84)		RS1/8SQ0R0J
R 459	(B,39,79)		RS1/8SQ0R0J
R 519	(A,47,83)		RS1/16SS221J
R 520	(A,31,91)		RS1/16SS105J
R 521	(A,47,84)		RS1/16SS751J
R 522	(A,32,84)		RS1/16SS152J
R 523	(A,33,82)		RS1/16SS105J
R 524	(A,31,82)	(B,C,E,F)	RS1/16SS0R0J
R 525	(A,29,79)		RS1/16SS471J
R 526	(A,31,78)		RS1/16SS330J
R 527	(A,31,76)		RS1/16SS681J
R 528	(A,28,68)		RS1/4SA5R6J
R 529	(A,26,69)		RS1/4SA5R6J
R 530	(A,26,72)		RS1/4SA5R6J
R 539	(A,33,70)		RS1/16SS102J
R 540	(A,48,74)		RS1/16SS0R0J
R 601	(B,51,38)	(B,C,D)	RS1/16SS104J
R 602	(B,49,38)	(E,F)	RS1/16SS104J
R 603	(B,51,37)	(B,E,F)	RS1/16SS104J
R 604	(B,49,37)	(C,D)	RS1/16SS104J
R 605	(B,51,36)	(C,E)	RS1/16SS104J
R 606	(B,49,36)	(B,D,F)	RS1/16SS104J
R 607	(B,51,34)		RS1/16SS104J
R 611	(B,51,42)		RS1/16SS103J
R 612	(B,55,47)		RS1/16SS221J
R 613	(B,61,37)		RS1/16SS472J
R 614	(B,63,37)		RS1/16SS471J
R 615	(B,64,37)		RS1/16SS472J
R 616	(B,62,37)		RS1/16SS471J
R 617	(B,55,42)		RS1/16SS104J
R 618	(B,55,41)		RS1/16SS104J

Circuit Symbol and No.			Part No.
R 619	(A,59,63)		RS1/16SS102J
R 620	(B,50,42)		RS1/16SS103J
R 621	(B,66,58)		RS1/16SS473J
R 622	(A,55,39)		RS1/16SS101J
R 623	(B,61,41)	(A,B)	RS1/16SS104J
	(B,61,41)	(C,D,E,F)	RS1/16SS103J
R 624	(B,61,42)		RS1/16SS1002D
R 627	(B,62,42)		RS1/16SS473J
R 629	(A,69,53)		RS1/16SS0R0J
R 634	(B,64,42)		RS1/16SS473J
R 636	(A,69,48)		RS1/16SS472J
R 637	(A,68,50)		RS1/16SS472J
R 638	(A,63,66)		RS1/16SS102J
R 642	(B,65,49)		RS1/16SS473J
R 644	(A,70,50)		RS1/16SS102J
R 645	(B,66,57)		RS1/16SS102J
R 646	(A,68,59)		RS1/16SS121J
R 647	(A,68,61)		RS1/16SS104J
R 648	(A,68,60)		RS1/16SS121J
R 658	(B,68,56)		RS1/16SS104J
R 663	(A,61,66)		RS1/16SS473J
R 664	(A,59,66)		RS1/16SS103J
R 665	(B,54,64)		RS1/16SS0R0J
R 666	(A,59,69)		RS1/16SS104J
R 667	(A,58,66)		RS1/16SS103J
R 668	(B,56,64)		RS1/16SS102J
R 681	(A,44,41)		RS1/16SS221J
R 682	(B,43,41)		RS1/16SS221J
R 683	(A,43,41)		RS1/16SS221J
R 686	(B,44,41)		RS1/16SS221J
R 688	(A,44,53)		RS1/16SS473J
R 689	(A,43,58)		RS1/16SS473J
R 690	(B,47,57)		RS1/10SR0R0J
R 691	(A,42,46)		RS1/16SS102J
R 692	(B,53,43)		RS1/16SS104J
R 698	(B,42,41)		RS1/16SS473J
R 699	(A,45,41)		RS1/16SS104J
R 700	(B,54,47)		RS1/16SS221J
R 701	(A,68,58)		RS1/16SS473J
R 707	(B,50,47)		RS1/16SS104J
R 708	(A,41,43)	(C,D,E,F)	RS1/16SS473J
R 709	(A,40,42)	(C,D,E,F)	RS1/16SS473J
R 710	(A,34,42)	(C,D,E,F)	RS1/16SS102J
R 711	(A,35,43)	(C,D,E,F)	RS1/16SS102J
R 712	(A,38,39)	(C,D,E,F)	RS1/16SS4700D
R 741	(A,68,44)		RS1/16SS102J
R 742	(A,58,39)		RS1/16SS102J
R 743	(A,75,48)		RS1/16SS222J
R 744	(A,74,47)		RS1/10SR222J
R 745	(B,83,58)		RS1/16SS103J
R 746	(B,83,57)		RS1/16SS103J
R 747	(B,83,55)		RS1/16SS103J
R 748	(B,83,53)		RS1/16SS103J
R 749	(B,76,58)		RS1/16SS105J
R 750	(B,77,55)		RS1/16SS105J
R 751	(B,59,20)		RAB4CQ221J
R 752	(B,58,15)		RS1/16SS471J
R 753	(B,58,16)		RS1/16SS102J
R 754	(B,68,15)		RS1/16SS0R0J
R 757	(B,64,13)		RS1/16SS472J

Circuit Symbol and No.			Part No.
R 758	(B,66,13)		RS1/16SS472J
R 759	(B,61,13)		RS1/16SS102J
R 832	(B,65,72)		RS1/16SS104J
R 833	(B,59,72)		RS1/16SS103J
R 834	(B,55,100)		RS1/4SA102J
R 841	(B,69,72)		RS1/16SS103J
R 842	(B,72,76)		RS1/4SA102J
R 843	(B,68,76)		RS1/16SS472J
R 864	(A,55,94)		RS1/16SS473J
R 865	(A,49,95)		RS1/16SS473J
R 866	(A,51,102)		RS1/16SS103J
R 868	(B,43,63)		RS1/16SS102J
R 873	(B,66,100)		RS1/16SS103J
R 874	(B,65,100)		RS1/16SS473J
R 875	(B,60,100)		RS1/16SS392J
R 878	(B,62,98)		RS1/16SS104J
R 879	(B,64,98)		RS1/16SS473J
R 880	(B,55,97)		RS1/4SA102J
R 1101	(B,128,26)		RAB4CQ221J
R 1102	(B,125,26)		RAB4CQ221J
R 1103	(B,120,30)		RAB4CQ471J
R 1104	(B,116,30)		RAB4CQ471J
R 1105	(B,113,30)		RAB4CQ471J
R 1106	(B,122,47)		RS1/16SS471J
R 1108	(B,130,49)		RAB4CQ221J
R 1109	(B,126,49)		RAB4CQ221J
R 1110	(B,115,48)		RAB4CQ471J
R 1111	(B,112,48)		RAB4CQ471J
R 1112	(B,118,48)		RS1/16SS471J
R 1151	(B,98,49)		RS1/16SS0R0J
R 1152	(B,109,49)		RS1/16SS0R0J
R 1201	(B,107,38)	(A)	RS1/16SS222J
R 1202	(B,109,34)	(A)	RS1/16SS183J
R 1203	(B,104,39)	(A)	RS1/16SS222J
R 1205	(B,108,38)	(A)	RS1/16SS101J
R 1206	(B,104,40)	(A)	RS1/16SS101J
R 1209	(B,109,38)	(A)	RS1/16SS221J
R 1251	(A,126,47)		RS1/16SS220J
R 1252	(A,130,49)		RS1/16SS470J
R 1257	(A,128,49)		RS1/16SS470J
R 1258	(A,130,46)		RS1/16SS470J
R 1259	(A,129,53)		RS1/16SS470J
R 1260	(B,139,54)		RS1/16SS470J
R 1302	(A,97,19)		RS1/16SS273J
R 1303	(B,107,41)		RS1/16SS0R0J
R 1305	(A,104,20)		RS1/16SS121J
R 1306	(A,106,19)		RS1/16SS104J
R 1307	(B,123,24)		RS1/16SS473J
R 1310	(B,102,29)		RS1/16SS101J
R 1311	(B,120,25)		RS1/16SS472J
R 1312	(B,121,26)		RS1/16SS472J
R 1313	(B,118,25)		RS1/16SS472J
R 1314	(A,124,28)		RS1/16SS472J
R 1315	(B,119,25)		RS1/16SS472J
R 1316	(B,117,25)		RS1/16SS472J
R 1317	(A,128,34)	(B,C,D,E,F)	RS1/16SS104J
R 1318	(B,110,48)		RS1/16SS104J
R 1319	(A,128,40)		RS1/16SS104J
R 1320	(A,126,49)		RS1/16SS104J
R 1321	(A,126,53)		RS1/16SS104J

Circuit Symbol and No.			Part No.
R 1322	(A,128,48)		RS1/16SS473J
R 1323	(A,118,58)		RS1/16SS101J
R 1324	(A,123,54)		RS1/16SS104J
R 1325	(A,94,66)		RS1/16SS2402F
R 1326	(A,103,58)		RS1/16SS681J
R 1327	(B,105,57)		RS1/16SS5601F
R 1328	(A,112,59)		RS1/16SS222J
R 1329	(B,113,54)		RS1/16SS473J
R 1330	(B,114,54)		RS1/16SS473J
R 1331	(A,106,61)		RS1/16SS103J
R 1332	(A,107,62)		RS1/16SS101J
R 1333	(B,118,55)	(A)	RS1/16SS473J
R 1334	(A,114,59)	(A)	RS1/16SS473J
R 1335	(B,99,25)		RS1/16SS0R0J
R 1337	(A,96,20)		RS1/16SS101J
R 1338	(A,109,61)		RS1/16SS104J
R 1339	(A,92,68)		RS1/16SS273J
R 1340	(A,89,66)		RS1/16SS104J
R 1341	(B,105,41)	(B,C,D,E,F)	RS1/16SS473J
R 1342	(B,103,12)		RS1/16SS104J
R 1344	(B,119,50)		RS1/16SS150J
R 1345	(B,103,26)		RS1/16SS473J
R 1347	(A,129,43)		RS1/16SS0R0J
R 1348	(A,94,22)		RS1/16SS101J
R 1349	(B,95,13)		RS1/16SS0R0J
R 1350	(A,90,47)		RS1/16SS152J
R 1351	(A,91,56)		RS1/16SS102J
R 1352	(A,86,66)		RAB4CQ473J
R 1353	(B,118,51)		RS1/16SS0R0J
R 1355	(B,115,52)		RS1/16SS0R0J
R 1356	(A,129,44)		RS1/16SS0R0J
R 1359	(A,128,46)		RS1/16SS0R0J
R 1360	(B,122,53)		RS1/16SS0R0J
R 1361	(B,104,24)		RS1/16SS104J
R 1362	(B,103,16)		RS1/16SS104J
R 1365	(A,91,21)		RS1/16SS331J
R 1376	(A,91,24)		RS1/16SS0R0J
R 1378	(A,88,25)		RS1/16SS0R0J
R 1379	(A,87,29)		RS1/16SS0R0J
R 1380	(A,89,51)		RS1/16SS101J
R 1381	(A,88,23)		RS1/16SS0R0J
R 1382	(A,85,50)		RS1/16SS101J
R 1383	(A,117,58)		RS1/16SS101J
R 1384	(A,120,58)		RS1/16SS102J
R 1385	(A,89,50)		RS1/16SS101J
R 1386	(A,88,43)		RS1/16SS101J
R 1387	(B,113,52)	(A)	RS1/16SS472J
R 1388	(A,84,43)		RS1/16SS101J
R 1389	(A,88,42)		RS1/16SS101J
R 1391	(A,111,59)		RS1/16SS102J
R 1392	(A,84,41)		RS1/16SS101J
R 1393	(A,90,27)		RS1/16SS101J
R 1395	(A,88,41)		RS1/16SS101J
R 1396	(A,85,40)		RS1/16SS101J
R 1398	(A,89,40)		RS1/16SS101J
R 1400	(A,89,39)		RS1/16SS101J
R 1402	(A,86,38)		RS1/16SS101J
R 1404	(A,89,37)		RS1/16SS101J
R 1406	(A,86,37)		RS1/16SS101J
R 1408	(A,89,35)		RS1/16SS101J

Circuit Symbol and No.			Part No.
R 1410	(A,89,34)		RS1/16SS101J
R 1412	(A,89,33)		RS1/16SS101J
R 1414	(A,87,32)		RS1/16SS101J
R 1416	(A,87,31)		RS1/16SS0R0J
R 1418	(A,126,36)		RS1/16SS332J
R 1419	(A,97,22)		RS1/16SS0R0J
R 1423	(A,113,20)		RS1/16SS222J
R 1424	(A,123,56)		RS1/16SS0R0J
R 1425	(A,89,21)		RS1/16SS0R0J
R 1426	(A,91,23)		RS1/16SS0R0J
R 1427	(A,85,29)		RS1/16SS0R0J
R 1428	(A,130,43)		RS1/16SS0R0J
R 1429	(A,130,44)		RS1/16SS0R0J
R 1431	(A,93,66)		RS1/16SS104J
R 1432	(A,91,65)		RS1/16SS104J
R 1433	(A,91,62)		RS1/16SS104J
R 1434	(A,91,58)		RS1/16SS104J
R 1435	(A,91,60)		RS1/16SS104J
R 1436	(B,92,51)		RS1/16SS104J
R 1437	(A,99,61)		RS1/16SS122J
R 1438	(A,101,57)		RS1/16SS105J
R 1439	(B,76,67)		RS1/10SR0R0J
R 1440	(B,78,66)		RS1/16SS750J
R 1603	(A,128,69)		RS1/10SR0R0J
R 1604	(B,126,102)		RS1/10SR102J
R 1605	(A,115,70)		RS1/10SR1001D
R 1606	(A,131,83)	(B,C,D,E,F)	RS1/10SR0R0J
R 1607	(A,135,93)	(A)	RS1/10SR0R0J
R 1621	(B,149,107)		RS1/16SS750J
R 1631	(B,35,107)		RS1/16SS821J
R 1632	(A,37,109)		RS1/16SS223J
R 1633	(A,39,111)		RS1/16SS472J
R 1634	(A,41,108)		RS1/16SS223J
R 1635	(A,40,111)		RS1/16SS472J
R 1636	(B,40,107)		RS1/16SS821J
R 1643	(B,26,107)		RS1/16SS821J
R 1644	(A,27,111)		RS1/16SS223J
R 1645	(A,29,112)		RS1/16SS472J
R 1646	(A,30,112)		RS1/16SS472J
R 1647	(A,32,109)		RS1/16SS223J
R 1648	(B,32,107)		RS1/16SS821J
R 1651	(B,170,100)		RS1/16SS223J
R 1652	(B,171,100)		RS1/16SS223J
R 1653	(B,166,102)		RS1/16SS750J
R 1654	(B,164,102)		RS1/10SR0R0J
R 1822	(A,105,95)		RS1/16SS5602D
R 1823	(A,105,93)		RS1/16SS1202D
R 1824	(A,110,97)		RS1/16SS1202D
R 1952	(B,149,63)		RS1/16SS561J
R 1953	(B,150,64)		RS1/16SS3302D
R 1954	(B,150,62)		RS1/16SS4301D
R 1955	(B,150,61)		RS1/16SS3601D
R 1956	(B,150,65)		RS1/16SS123J
R 1957	(B,159,60)		RS1/16SS103J
R 1959	(B,160,72)	0.011 ohm	CCN1341
R 1960	(B,163,61)		RS1/16SS204J
R 1961	(B,163,60)		RS1/16SS394J
R 1962	(B,154,72)	0.012 ohm	CCN1321
R 1963	(B,157,60)		RS1/16SS224J
R 1964	(B,165,64)		RS1/16SS272J

Circuit Symbol and No.			Part No.
R 1965	(B,165,61)		RS1/16SS1101D
R 1966	(B,167,61)		RS1/16SS3000D
R 1967	(B,165,63)		RS1/16SS1002D
R 1968	(B,167,62)		RS1/16SS511J
R 2003	(B,145,36)		RS1/10SR0R0J
R 2011	(B,109,11)		RS1/16SS472J
R 2012	(B,110,10)		RS1/16SS223J
R 2013	(B,110,12)		RS1/16SS473J
R 2101	(B,170,95)		RS1/16SS3601D
R 2102	(B,168,95)		RS1/16SS4702D
R 2103	(B,168,96)		RS1/16SS2202D
R 2104	(B,169,97)		RS1/16SS222J
R 2105	(B,158,87)		RS1/8SQ0R0J
R 2161	(A,142,94)	(A)	RS1/16SS102J
R 2162	(A,141,94)	(A)	RS1/16SS102J
R 2163	(A,144,94)	(A)	RS1/16SS102J
R 2164	(B,144,93)	(A)	RS1/16SS224J
R 2165	(B,142,95)	(A)	RS1/16SS4702D
R 2166	(B,153,91)	(A)	RS1/16SS152J
R 2167	(B,153,90)	(A)	RS1/16SS3302D
R 2168	(B,150,88)	(A)	RS1/16SS8201D
R 2169	(B,150,89)	(A)	RS1/16SS752J
R 2170	(A,143,94)	(A)	RS1/16SS102J
R 2171	(A,137,96)	0.056 ohm(A)	ACN7160
R 2172	(B,155,96)	(A)	RS1/16SS0R0J
R 2173	(B,147,90)	(A)	RS1/16SS394J
R 2174	(B,147,91)	(A)	RS1/16SS204J
R 2177	(B,151,88)	(A)	RS1/16SS0R0J
R 2178	(B,152,90)	(A)	RS1/16SS0R0J

CAPACITORS

C 101	(B,95,67)		CKSSYB104K10
C 102	(B,95,68)		CKSSYB104K10
C 103	(B,95,69)		CKSSYB104K10
C 104	(B,95,70)		CKSSYB104K10
C 105	(B,95,71)		CKSSYB104K10
C 106	(B,95,72)		CKSSYB104K10
C 109	(B,98,72)		CKSSYB104K10
C 110	(B,101,77)	10 uF	CCG1192
C 111	(B,97,77)		CKSSYB104K10
C 112	(B,96,77)		CKSSYB104K10
C 113	(B,96,65)	10 uF	CCG1192
C 114	(B,96,66)		CKSSYB104K10
C 115	(B,110,78)		CKSRYB104K16
C 116	(B,108,78)	10 uF	CCG1192
C 117	(B,112,75)		CKSRYB104K16
C 118	(B,114,75)	10 uF	CCG1192
C 122	(B,112,68)		CKSRYB105K10
C 123	(B,115,68)		CKSRYB105K10
C 124	(B,112,69)		CKSRYB105K10
C 125	(B,112,70)		CKSRYB105K10
C 126	(B,112,72)		CKSRYB105K10
C 127	(B,112,73)		CKSRYB105K10
C 128	(B,99,62)		CKSRYB105K10
C 129	(B,99,64)		CKSRYB105K10
C 134	(B,110,65)		CKSRYB105K10
C 135	(B,112,66)		CKSRYB105K10
C 136	(B,115,67)		CKSRYB105K10
C 137	(B,102,64)		CKSRYB105K10
C 251	(B,114,87)	10 uF	CCG1192

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
C 252	(B,111,86)	CKSSYB104K10	C 549	(A,33,67)	CKSSYB104K10
C 253	(B,115,84) 10 uF	CCG1192	C 550	(A,29,72)	CKSSYB104K10
C 254	(B,112,82)	CKSSYB104K10	C 553	(A,32,69) (A,D)	CCSSCH220J50
C 255	(B,93,90)	CKSRYB105K10	C 554	(A,34,70)	CKSSYB102K50
C 262	(B,106,91)	CKSRYB105K10	C 555	(A,38,68)	CKSSYB104K10
C 263	(B,109,89) 10 uF	CCG1192	C 556	(A,48,80) (A,D)	CCSSCH220J50
C 264	(B,105,88)	CKSRYB105K10	C 557	(A,52,82)	CKSRYB224K16
C 266	(B,109,83) 10 uF	CCG1192	C 558	(A,48,78)	CKSSYB224K6R3
C 267	(B,93,88)	CKSRYB105K10	C 559	(A,51,79)	CKSRYB105K10
C 270	(B,107,83)	CCSSCH100D50	C 560	(A,50,76) (A,D)	CCSSCH100D50
C 271	(B,109,86)	CCSSCH100D50	C 561	(A,52,77) (A,D)	CCSSCH100D50
C 302	(B,87,97) 10 uF	CCG1192	C 562	(A,53,77)	CKSSYB472K25
C 305	(A,113,108)	CKSRYB104K16	C 563	(A,51,76)	CKSSYB472K25
C 307	(B,74,120)	CCSSCH101J50	C 564	(A,52,75)	CCSSCH100D50
C 308	(B,74,119)	CCSSCH100D50	C 565	(A,48,75)	CKSSYB104K10
C 311	(A,89,84)	XCEHVW101M16	C 566	(A,52,70)	CCSSCH100D50
C 321	(B,84,104) 2.2 uF	CCG1218	C 568	(A,46,68) 2.2 uF	CCG1218
C 341	(A,96,108)	CKSRYB224K16	C 569	(A,46,69) (A,D)	CCSRCH220J50
C 342	(A,94,108)	CKSRYB224K16	C 570	(A,46,67)	CKSSYB104K10
C 343	(A,102,109)	CKSRYB224K16	C 571	(A,43,67) 2.2 uF	CCG1218
C 344	(A,99,109)	CKSRYB224K16	C 573	(A,44,68)	CKSSYB104K10
C 352	(B,74,118)	CKSRYB104K16	C 574	(A,48,72) (A,D)	CCSSCH220J50
C 354	(A,92,106) 10 uF	CCG1236	C 601	(A,62,40)	CKSSYB104K10
C 355	(A,105,107)	CKSRYB105K16	C 602	(A,65,40)	CKSSYB104K10
C 454	(A,30,93) (A,D)	CCSSCK2R0C50	C 604	(A,63,65)	CKSSYB104K16
C 455	(A,23,93) (A,D)	CCSSCJ3R0C50	C 606	(A,71,51)	CCSSCH100D50
C 456	(B,24,80)	CCSSCH5R0C50	C 607	(A,68,54)	CCSSCH100D50
C 458	(B,35,85) (A,D)	CCSSCH5R0C50	C 608	(A,68,57)	CKSSYB104K10
C 459	(B,31,79) (A,D)	CCSSCH4R0C50	C 610	(B,64,53)	CKSSYB104K10
C 460	(B,33,79) (A,D)	CCSSCH4R0C50	C 612	(B,65,56)	CKSSYB102K50
C 461	(B,29,81) (A,D)	CCSSCH4R0C50	C 613	(A,44,51)	CKSSYB104K10
C 509	(A,43,90)	CCSSCH330J50	C 614	(A,57,70)	CKSSYB103K16
C 510	(A,45,90)	CCSSCH6R0D50	C 619	(A,73,60) 1 uF	DCH1246
C 512	(A,32,93)	CKSRYB103K50	C 620	(A,68,56) 1 uF	DCH1246
C 513	(A,48,90)	CKSSYB103K16	C 741	(A,60,40)	CKSSYB473K16
C 514	(A,40,85)	CKSSYB104K10	C 742	(B,82,60)	CKSSYB104K10
C 515	(A,37,84)	CKSSYB104K10	C 743	(B,77,58)	CKSSYB102K50
C 517	(A,48,87)	CKSSYB103K16	C 744	(B,78,55)	CKSSYB102K50
C 518	(A,46,82)	CKSSYB103K16	C 745	(A,70,44)	CKSSYB473K16
C 519	(A,39,84)	CKSSYB104K10	C 751	(B,49,19)	CKSSYB104K10
C 520	(A,33,87) (A,D)	CCSSCJ3R0C50	C 753	(B,47,16) 10 uF	CCG1192
C 521	(A,39,83)	CKSSYB103K16	C 754	(B,54,15) 10 uF	CCG1192
C 522	(A,36,84)	CKSSYB103K16	C 801	(A,78,95)	XCEAT332M16
C 523	(A,35,84) 10 uF	CCG1192	C 831	(B,63,75)	CKSRYB104K50
C 524	(A,33,83)	CKSSYB223K16	C 841	(B,68,73)	CKSRYB105K10
C 525	(A,41,87)	CKSRYB105K10	C 861	(A,54,99)	CKSRYB104K50
C 527	(A,42,83)	CKSSYB103K16	C 1101	(B,135,35)	CKSSYB104K10
C 529	(A,38,89) 10 uF	CCG1192	C 1102	(B,131,30)	CKSSYB104K10
C 530	(A,30,80) 10 uF	CCG1192	C 1103	(B,127,30)	CKSSYB104K10
C 531	(A,33,80) (A,D)	CCSSCJ3R0C50	C 1104	(B,123,30)	CKSSYB104K10
C 538	(A,31,79)	CKSSYB104K10	C 1105	(B,110,35)	CKSSYB104K10
C 539	(A,29,78)	CCSSCH101J50	C 1106	(B,129,46)	CKSSYB104K10
C 540	(A,35,82)	CKSSYB104K10	C 1107	(B,125,46)	CKSSYB104K10
C 541	(A,28,78)	CKSSYB103K16	C 1108	(B,120,46)	CCSSCH470J50
C 542	(A,32,76)	CCSSCH820J50	C 1152	(B,98,46) 10 uF	CCG1192
C 543	(A,31,73) (A,D)	CKSSYB104K10	C 1153	(B,104,52)	CKSSYB104K10
C 544	(A,30,70) 2.2 uF	CCG1218	C 1154	(B,102,53) 10 uF	CCG1192
C 545	(A,32,74)	CCSSCH101J50	C 1157	(B,98,53)	CCSSCH221J50
C 547	(A,31,69)	CKSSYB104K10	C 1201	(B,109,35) (A)	CKSSYB104K10
C 548	(A,34,67)	CKSSYB104K10	C 1202	(B,109,36) (A)	CKSSYB102K50

Circuit Symbol and No.			Part No.
C 1251	(B,139,50)		CKSSYB104K10
C 1301	(A,96,22)		CKSSYB104K16
C 1302	(A,101,22)		CKSSYB104K16
C 1303	(A,103,23)		CKSSYB104K16
C 1304	(A,106,22)		CKSSYB104K16
C 1305	(A,108,21)		CKSSYB104K16
C 1306	(A,110,22)		CKSSYB104K16
C 1307	(A,114,22)		CKSSYB104K16
C 1308	(A,117,22)		CKSSYB104K16
C 1309	(B,109,40)		CCSSCH470J50
C 1310	(A,124,27)		CKSSYB104K16
C 1311	(A,124,29)		CKSSYB104K16
C 1312	(A,124,31)		CKSSYB104K16
C 1313	(A,125,33)		CKSSYB104K16
C 1314	(A,124,35)		CKSSYB104K16
C 1315	(A,124,37)		CKSSYB104K16
C 1316	(A,124,38)		CKSSYB104K16
C 1317	(A,125,40)		CKSSYB104K16
C 1318	(A,124,43)		CKSSYB104K16
C 1319	(A,124,46)		CKSSYB104K16
C 1320	(B,122,49)		CKSSYB104K16
C 1321	(B,122,50)		CKSSYB104K16
C 1322	(A,123,51)		CKSSYB104K16
C 1323	(A,125,54)		CKSSYB104K16
C 1324	(A,94,57)		CKSSYB104K16
C 1325	(A,95,57)		CKSSYB104K16
C 1326	(A,100,59)		CKSSYB104K16
C 1327	(A,102,57)		CKSSYB104K16
C 1328	(B,105,54)		CKSSYB104K16
C 1329	(B,106,54)		CKSSYB104K16
C 1330	(A,105,57)		CKSSYB104K16
C 1331	(B,107,54)		CKSSYB104K16
C 1332	(A,109,57)		CKSSYB104K16
C 1333	(A,113,57)		CKSSYB104K16
C 1334	(B,111,54)		CKSSYB104K16
C 1335	(A,114,57)		CKSSYB104K16
C 1336	(A,106,60)	1 uF	DCH1246
C 1337	(A,104,60)		CCSSCH100D50
C 1338	(A,103,64)		CCSSCH100D50
C 1339	(A,110,61)		CCSSCH120J50
C 1340	(A,116,62)		CCSSCH120J50
C 1341	(B,93,19)		CKSSYB104K10
C 1342	(B,92,29)		CKSSYB104K16
C 1343	(B,92,30)		CKSSYB104K16
C 1344	(B,92,34)		CKSSYB104K16
C 1345	(B,92,35)		CKSSYB104K16
C 1346	(B,92,38)		CKSSYB104K16
C 1347	(B,92,39)		CKSSYB104K16
C 1348	(B,92,42)		CKSSYB104K16
C 1349	(B,92,43)		CKSSYB104K16
C 1350	(B,92,46)		CKSSYB104K16
C 1351	(A,84,46)		CCSSCH120J50
C 1352	(B,92,47)		CKSSYB104K16
C 1353	(A,89,47)		CCSSCH120J50
C 1354	(B,93,48)		CKSSYB104K16
C 1355	(B,108,19)		CKSSYB103K16
C 1356	(B,138,43)		CKSSYB103K16
C 1357	(B,106,22)	10 uF	CCG1192
C 1358	(B,139,42)	10 uF	CCG1192
C 1360	(A,88,27)		CCSSCH470J50

Circuit Symbol and No.			Part No.
C 1361	(B,101,31)		CCSSCH560J50
C 1362	(A,84,31)		CCSSCH560J50
C 1363	(A,83,32)		CCSSCH560J50
C 1364	(A,82,32)		CCSSCH560J50
C 1365	(A,86,34)		CCSSCH560J50
C 1366	(A,84,34)		CCSSCH560J50
C 1367	(A,83,35)		CCSSCH560J50
C 1368	(A,81,35)		CCSSCH560J50
C 1369	(A,82,38)		CCSSCH560J50
C 1370	(A,82,37)		CCSSCH560J50
C 1371	(A,80,38)		CCSSCH560J50
C 1372	(A,80,39)		CCSSCH560J50
C 1373	(A,79,39)		CCSSCH560J50
C 1374	(A,77,39)		CCSSCH560J50
C 1375	(A,81,43)		CCSSCH560J50
C 1376	(A,79,43)		CCSSCH560J50
C 1377	(A,81,47)		CCSSCH560J50
C 1379	(A,81,49)		CCSSCH560J50
C 1380	(A,81,51)		CCSSCH560J50
C 1382	(A,86,23)		CCSSCH150J50
C 1383	(A,86,30)		CCSSCH6R0D50
C 1384	(A,110,57)	1 uF	DCH1246
C 1390	(A,90,28)		CCSSCH100D50
C 1400	(A,95,64)		CCSSCH100D50
C 1401	(A,98,66)		CCSSCH100D50
C 1402	(A,96,61)		CKSRYB105K10
C 1403	(A,97,60)		CKSSYB104K10
C 1404	(A,98,59)		CKSSYB104K10
C 1601	(A,131,90)		CKSRYB104K50
C 1602	(A,127,70)		CKSSYB104K10
C 1631	(B,37,105)	4.7 uF	CCG1201
C 1632	(B,39,105)	4.7 uF	CCG1201
C 1635	(B,28,106)	4.7 uF	CCG1201
C 1636	(B,34,105)	4.7 uF	CCG1201
C 1638	(A,45,108)		CKSRYB102K50
C 1651	(B,163,103)		CKSRYB104K50
C 1652	(B,168,104)		CKSRYB104K50
C 1782	(A,83,28)		CKSSYB104K16
C 1783	(B,77,26)		CKSSYB104K10
C 1801	(A,69,70)		XCEVW470M16
C 1802	(B,57,82)		CKSSYB104K10
C 1803	(B,63,79)		CKSRYB104K50
C 1804	(A,76,83)		XCEAT102M16
C 1821	(A,106,81)		XCEHVW101M16
C 1822	(A,116,102)		CKSRYB105K16
C 1901	(B,35,59)	10 uF	CCG1192
C 1902	(B,32,58)		CKSRYB105K10
C 1951	(B,150,63)		CCSSCH471J50
C 1952	(B,150,66)	(A)	CKSSYB103K16
	(B,150,66)	(B,C,D,E,F)	CKSSYB222K50
C 1953	(B,152,65)		CCSSCH8R0D50
C 1954	(B,164,65)		CCSSCH8R0D50
C 1955	(B,166,65)		CKSRYB224K16
C 1956	(B,165,62)		CCSSCH102J50
C 1957	(A,163,36)		CKSSYB102K50
C 1958	(A,163,37)		CKSSYB104K10
C 1959	(A,162,39)	10 uF	CCG1236
C 1960	(A,162,41)	10 uF	CCG1236
C 1961	(A,162,44)	47 uF	CCG1229
C 1963	(B,159,70)		CKSRYB473K50

Circuit Symbol and No.			Part No.
C 1964	(B,156,70)		CKSRYB102K50
C 1965	(B,156,79)	10 uF	CCG1236
C 1966	(B,158,60)		CKSSYB104K10
C 1967	(B,156,76)	10 uF	CCG1236
C 1968	(B,156,74)	10 uF	CCG1236
C 1969	(B,164,66)		CKSSYB104K16
C 1970	(B,152,67)		CKSSYB104K16
C 1971	(B,156,60)		CKSSYB104K10
C 1972	(B,152,63)		CKSRYB105K10
C 1974	(A,152,45)	47 uF	CCG1229
C 1975	(B,158,83)		CKSRYB102K50
C 1976	(A,152,42)	10 uF	CCG1236
C 1977	(B,156,81)	10 uF	CCG1236
C 1978	(A,152,40)	10 uF	CCG1236
C 1979	(A,164,80)		XCEAT332M16
C 1980	(A,151,38)		CKSSYB104K10
C 1981	(A,151,37)		CKSSYB102K50
C 2011	(B,108,12)		CKSRYB105K10
C 2012	(B,119,11)		CKSRYB105K10
C 2071	(A,147,35)		CKSSYB104K10
C 2101	(A,157,87)		CKSSYB103K16
C 2102	(A,156,85)	10 uF	CCG1236
C 2105	(B,168,98)		CKSSYB682K25
C 2106	(B,163,88)		CKSSYB103K16
C 2107	(B,159,90)	10 uF	CCG1236
C 2108	(B,161,89)		CKSSYB103K25
C 2109	(A,154,78)		XCEVW470M16
C 2110	(B,88,18)		CKSSYB104K10
C 2151	(A,48,20)		CKSRYB104K16
C 2152	(A,140,80)		CKSSYB102K50
C 2161	(B,144,99)	(A)	CKSSYB104K16
C 2162	(B,149,101)	10 uF(A)	CCG1236
C 2163	(A,150,97)	(A)	XCEVW101M16
C 2164	(B,142,97)	(A)	CKSRYB105K10
C 2165	(B,144,94)	(A)	CKSSYB102K50
C 2166	(B,144,92)	(A)	CKSSYB472K25
C 2167	(B,144,96)	(A)	CKSSYB104K16
C 2168	(B,152,91)	(A)	CCSSCH471J50
C 2169	(B,149,90)	(A)	CKSSYB222K50
C 2170	(B,150,90)	(A)	CCSSCH270J50
C 2171	(B,142,66)	(B,C,D,E,F)	CKSRYB104K16
C 2172	(A,147,109)	(A)	XCEVW470M16
C 2173	(B,155,94)	(A)	CKSSYB104K16
C 2174	(A,139,70)	(B,C,D,E,F)	CKSRYB105K10
C 2176	(A,139,69)	(B,C,D,E,F)	CKSRYB104K16
C 2177	(A,135,75)	(B,C,D,E,F)	XCEVW101M16
C 2185	(A,145,94)	(A)	CKSSYB104K16
C 2186	(A,143,97)	22 uF(A)	DCH1256

B

Unit Number : YXX5281
Unit Name : Monitor Unit(Service)

MISCELLANEOUS

IC 5101	(A,25,67)	IC	R1290K103A
IC 5201	(A,110,69)	IC	BD81A04EFV-M
Q 5101	(A,30,61)	Transistor	LTC014EEB
Q 5103	(A,23,35)	Transistor	LSAR523UB
Q 5106	(A,24,76)	Transistor	2SA1577
Q 5402	(A,99,45)	Transistor	LSCR523UB
D 5101	(A,17,71)	Diode	RB162M-40
D 5103	(A,32,75)	Diode	DB3S308F0
D 5104	(A,34,75)	Diode	DB3S308F0
D 5105	(A,34,67)	Diode	DB3S308F0
D 5201	(A,111,57)	Diode	RB060M-30
L 5001	(A,17,50)	Inductor	CTF1635
L 5002	(A,16,55)	Chip Inductor	DTL1096
L 5003	(A,30,56)	Chip Inductor	DTL1096
L 5004	(A,27,52)	Chip Ferrite Bead	BTX1042
L 5101	(A,21,73)	Choke Coil 22 uH	CTH1426
L 5102	(A,14,40)	Inductor	LCTAW101J2520
L 5202	(A,106,58)	Inductor	CTH1526
TH5201	(A,86,17)	Thermistor	CCX1058
CN5001	(A,48,46)	Connector	CKS6536
CN5202	(A,97,16)	Connector	CKS4428
CN5301	(A,121,17)	Connector	CKS6548
CN5401	(A,58,69)	Connector	CKS6536
CN5402	(A,113,42)	Connector	CKS6063

RESISTORS

R 5001	(A,72,42)	RS1/16SS82R0D
R 5002	(A,71,42)	RS1/16SS0R0J
R 5003	(A,72,41)	RS1/16SS1500D
R 5004	(A,70,40)	RS1/16SS0R0J
R 5005	(A,72,39)	RS1/16SS39R0D
R 5006	(A,70,38)	RS1/16SS0R0J
R 5007	(A,72,37)	RS1/16SS33R0D
R 5008	(A,70,36)	RS1/16SS0R0J
R 5009	(A,72,36)	RS1/16SS68R0D
R 5010	(A,70,35)	RS1/16SS220J
R 5011	(A,72,34)	RS1/16SS1500D
R 5012	(A,70,33)	RS1/16SS1R0J
R 5013	(A,72,32)	RS1/16SS82R0D
R 5014	(A,70,31)	RS1/16SS100J
R 5015	(A,72,30)	RS1/16SS33R0D
R 5016	(A,70,29)	RS1/16SS0R0J
R 5017	(A,72,29)	RS1/16SS39R0D
R 5018	(A,70,28)	RS1/16SS0R0J
R 5019	(A,72,27)	RS1/16SS1200D
R 5020	(A,70,26)	RS1/16SS27R0D
R 5021	(A,72,25)	RS1/16SS56R0D
R 5022	(A,74,23)	RS1/16SS0R0J
R 5024	(B,45,47)	RS1/16SS473J
R 5026	(B,39,46)	RS1/16SS473J
R 5028	(B,40,49)	RS1/16SS473J
R 5029	(B,41,49)	RS1/16SS473J
R 5101	(A,17,60)	RS1/16SS103J
R 5103	(A,24,61)	RS1/16SS203J
R 5104	(A,25,60)	RS1/16SS104J
R 5106	(A,27,63)	RS1/16SS472J
R 5107	(A,21,70)	RS1/16SS0R0J
R 5108	(A,24,73)	RS1/16SS103J
R 5109	(A,30,63)	RS1/16SS1502D
R 5110	(A,28,64)	RS1/16SS8201D
R 5111	(A,28,63)	RS1/16SS1502D
R 5112	(B,65,79)	RS1/16SS0R0J
R 5116	(A,21,63)	RS1/16SS3001D

Circuit Symbol and No.		Part No.
R 5117	(A,21,62)	RS1/16SS1502D
R 5122	(A,18,35)	RS1/16SS472J
R 5124	(A,19,35)	RS1/16SS105J
R 5125	(A,22,38)	RS1/16SS682J
R 5126	(A,24,38)	RS1/16SS0R0J
R 5128	(A,24,43)	RS1/16SS101J
R 5129	(A,25,40)	RS1/16SS0R0J
R 5134	(A,16,62)	RS1/16SS0R0J
R 5135	(A,19,62)	RS1/16SS1203D
R 5136	(A,18,62)	RS1/16SS472J
R 5140	(A,30,67)	RS1/16SS9102D
R 5141	(A,30,66)	RS1/16SS1802D
R 5142	(A,30,69)	RS1/16SS1003D
R 5143	(A,28,69)	RS1/16SS9101D
R 5202	(A,113,76)	RS1/16SS273J
R 5203	(A,114,76)	RS1/16SS511J
R 5205	(B,108,66)	RS1/16SS1203D
R 5206	(B,108,67)	RS1/16SS2202D
R 5207	(A,97,74)	RS1/16SS332J
R 5212	(B,106,65)	RS1/16SS1803D
R 5213	(B,106,66)	RS1/16SS1802D
R 5219	(A,103,74)	RS1/16SS104J
R 5220	(A,103,73)	RS1/16SS154J
R 5222	(A,111,60)	RS1/16SS2R2J
R 5409	(A,97,44)	RS1/16SS560J
R 5410	(A,96,44)	RS1/16SS0R0J
R 5415	(A,96,46)	RS1/16SS472J
R 5416	(A,37,58)	RS1/16SS0R0J
R 5417	(A,38,59)	RS1/16SS0R0J
R 5418	(A,39,58)	RS1/16SS0R0J
R 5419	(A,40,59)	RS1/16SS0R0J
R 5420	(A,43,60)	RS1/16SS270J
R 5421	(A,45,61)	RS1/16SS0R0J
R 5422	(A,46,60)	RS1/16SS270J
R 5423	(A,47,61)	RS1/16SS270J
R 5424	(A,47,60)	RS1/16SS270J
R 5425	(A,48,61)	RS1/16SS270J
R 5426	(A,49,60)	RS1/16SS270J
R 5427	(A,50,61)	RS1/16SS270J
R 5428	(A,50,60)	RS1/16SS270J
R 5429	(A,51,61)	RS1/16SS270J
R 5430	(A,52,60)	RS1/16SS270J
R 5431	(A,53,61)	RS1/16SS270J
R 5432	(A,53,60)	RS1/16SS270J
R 5433	(A,54,61)	RS1/16SS270J
R 5434	(A,55,60)	RS1/16SS270J
R 5435	(A,56,61)	RS1/16SS270J
R 5436	(A,56,59)	RS1/16SS270J
R 5437	(A,57,59)	RS1/16SS270J
R 5438	(A,58,59)	RS1/16SS270J
R 5439	(A,59,59)	RS1/16SS270J
R 5440	(A,62,58)	RS1/16SS0R0J
R 5441	(A,70,46)	RS1/10SR0R0J

CAPACITORS

C 5009	(A,74,35)	CKSSYB102K50
C 5010	(A,74,34)	CKSSYB104K16
C 5011	(A,74,33)	CKSSYB102K50
C 5012	(A,74,32)	CKSSYB104K16

Circuit Symbol and No.			Part No.
C 5021	(B,46,50)		CKSSYB102K50
C 5023	(B,46,47)		CKSSYB104K16
C 5025	(A,21,48)	10 uF	CCG1236
C 5026	(A,14,47)		CKSSYB102K50
C 5029	(B,42,46)		CKSSYB102K50
C 5030	(B,41,46)		CKSSYB104K10
C 5031	(A,20,55)	10 uF	CCG1192
C 5034	(A,34,56)		CKSSYB104K16
C 5035	(A,33,56)	4.7 uF	CCG1201
C 5037	(A,27,56)		CKSQYB225K16
C 5039	(A,33,52)		CKSRYB104K50
C 5040	(A,31,53)		CKSQYB334K50
C 5042	(A,25,42)		CKSSYB104K16
C 5101	(A,20,78)		CKSQYB475K6R3
C 5102	(A,21,67)		CKSSYB102K50
C 5103	(A,20,66)	1 uF	DCH1246
C 5104	(A,21,60)		CKSSYB473K16
C 5105	(A,23,60)		CKSSYB104K10
C 5106	(A,28,60)		CKSRYB105K10
C 5107	(A,24,62)		CKSSYB682K25
C 5109	(A,32,63)		CCSSCH101J50
C 5110	(A,35,64)		CKSSYB473K16
C 5111	(A,15,64)	10 uF	CCG1236
C 5112	(A,15,67)	10 uF	CCG1236
C 5113	(A,21,64)		CKSSYB471K50
C 5114	(A,20,35)		CKSSYB104K16
C 5115	(A,17,40)	10 uF	CCG1236
C 5120	(A,33,72)		CKSQYB105K25
C 5121	(A,35,72)		CKSQYB105K25
C 5122	(A,32,67)		CKSRYB105K10
C 5123	(A,35,66)		CKSRYB104K50
C 5124	(A,31,77)		CKSQYB104K25
C 5125	(A,34,77)		CKSQYB104K25
C 5127	(A,28,73)		CKSYB475K16
C 5140	(A,30,70)		CKSSYB561K50
C 5203	(B,110,66)	2.2 uF	CCG1218
C 5204	(A,115,76)		CKSSYB104K10
C 5205	(A,101,62)	10 uF	CCG1236
C 5206	(A,114,77)		CKSSYB104K10
C 5208	(A,116,57)	10 uF	CCG1236
C 5209	(A,87,17)		CKSSYB104K10
C 5212	(A,122,63)		CCSSCH101J50
C 5213	(A,79,65)		CKSSYB104K16
C 5214	(A,116,74)		CKSSYB104K16
C 5215	(A,111,61)		CKSSYB332K50
C 5401	(A,68,64)		CKSSYB104K10

C

Unit Number : YWX5032
Unit Name : DVD Core Unit

MISCELLANEOUS

IC 1002	(B,15,13)	Regulator IC	S-1133B50-U5
IC 1003	(B,37,11)	IC	S-1200B50-M5
IC 1004	(B,64,28)	IC	NJM2855DL1-33
IC 1251	(A,12,42)	IC	BA5839FP
IC 1401	(B,27,41)	Flash ROM Unit	CWW5043

Circuit Symbol and No.			Part No.
IC 1402	(B,45,28)	Flash ROM Unit	CWW5044
IC 1480	(A,64,30)	RAM IC	M12L64164A-5TG2Y
IC 1501	(A,39,33)	IC	MN2DS0018MA
IC 1801	(B,34,16)	D/A Converter	PCM1753DBQ
IC 1951	(A,28,49)	Logic IC	TC7SZU04FU
IC 1953	(B,57,17)	IC	S-1135D12-A6
Q 1101	(B,13,59)	Transistor	LSCR523UB
Q 1102	(B,13,56)	Transistor	LSCR523UB
Q 1103	(B,10,63)	Transistor	2SB1132
Q 1104	(B,22,54)	Transistor	2SB1132
D 1901	(B,50,10)	Diode	RSB6R8SM
D 1902	(B,50,9)	Diode	RSB6R8SM
L 1501	(A,54,31)	Inductor	CTF1743
L 1511	(A,48,17)	Chip Beads	VTL1126
L 1902	(A,17,17)	Inductor	CTF1487
L 1903	(B,63,16)	Inductor	CTF1558
L 1904	(A,68,18)	Ferrite Bead	CTF1528
X 1501	(B,48,18)	Oscillator 27.000 MHz	CSS1823
X 1950	(A,23,51)	Oscillator 48.000 MHz	CSS1760
F 1001	(A,14,19)	Chip EMI Filter	DTF1106
F 1002	(B,63,18)	Chip EMI Filter	DTL1106
S 1	(A,47,55)	Spring Switch(HOME)	CSN1080
S 3	(B,25,13)	Spring Switch(12EJ)	CSN1081
VR1101	(A,7,63)	Semi-fixed 6.8 kohm(B)	CCP1447
VR1102	(A,7,60)	Semi-fixed 15 kohm(B)	CCP1449
CN1101	(A,21,63)	Connector	CKS6331
CN1952	(A,42,11)	Connector	CKS6025

RESISTORS

R 1004	(B,12,20)		RS1/16SS4702D
R 1007	(B,12,21)		RS1/16SS6801D
R 1019	(B,34,7)		RS1/16SS101J
R 1025	(B,36,6)		RS1/16SS101J
R 1027	(A,40,18)		RS1/16SS101J
R 1101	(B,15,57)		RS1/16SS104J
R 1102	(B,10,56)		RS1/16SS104J
R 1103	(B,14,61)		RS1/16SS4300F
R 1104	(B,11,59)		RS1/16SS5100F
R 1105	(B,17,54)		RS1/16SS4300F
R 1106	(B,10,57)		RS1/16SS5600F
R 1109	(B,6,57)		RS1/16SS3R3J
R 1110	(B,16,54)		RS1/16SS3R3J
R 1111	(B,6,63)		RS1/10SR3R3J
R 1112	(B,5,58)		RS1/10SR3R3J
R 1113	(B,15,59)		RS1/10SR3R9J
R 1114	(B,19,57)		RS1/10SR3R3J
R 1115	(B,6,61)		RS1/10SR2R7J
R 1116	(B,6,62)		RS1/10SR2R7J
R 1117	(B,17,59)		RS1/10SR3R9J
R 1118	(B,16,59)		RS1/10SR3R9J
R 1223	(A,42,50)		RS1/16SS561J
R 1225	(B,29,8)		RS1/16SS471J
R 1251	(A,5,48)		RS1/16SS333J
R 1252	(A,5,47)		RS1/16SS473J
R 1253	(A,5,46)		RS1/16SS333J
R 1254	(A,5,45)		RS1/16SS473J
R 1255	(A,21,48)		RS1/16SS183J
R 1256	(A,21,46)		RS1/16SS752J
R 1257	(B,8,37)		RS1/16SS221J
R 1258	(A,19,39)		RS1/16SS221J
R 1401	(B,34,28)		RS1/16SS221J
R 1402	(B,34,47)		RS1/16SS104J
R 1405	(B,55,35)		RS1/16SS104J
R 1406	(B,39,45)		RS1/16SS472J
R 1480	(A,72,24)		RAB4CQ560J
R 1481	(A,72,28)		RAB4CQ560J
R 1482	(A,72,32)		RAB4CQ560J
R 1483	(A,72,35)		RAB4CQ560J
R 1484	(A,72,39)		RAB4CQ560J
R 1485	(A,55,22)		RAB4CQ560J
R 1486	(A,55,28)		RAB4CQ560J
R 1487	(A,56,37)		RAB4CQ560J
R 1488	(A,55,40)		RAB4CQ560J
R 1489	(A,54,30)		RS1/16SS560J
R 1490	(A,72,21)		RS1/16SS560J
R 1501	(B,48,21)		RS1/16SS122J
R 1503	(B,46,21)		RS1/16SS105J
R 1504	(A,50,17)		RS1/16SS121J
R 1505	(B,45,15)		RS1/16SS101J
R 1506	(B,45,14)		RS1/16SS101J
R 1507	(B,43,17)		RS1/16SS101J
R 1508	(B,42,18)		RS1/16SS221J
R 1509	(A,20,34)		RS1/16SS102J
R 1510	(A,11,29)		RS1/16SS102J
R 1512	(A,55,32)		RS1/16SS470J
R 1513	(A,23,38)		RS1/16SS103J
R 1514	(A,24,40)		RS1/16SS183J
R 1516	(A,24,36)		RS1/16SS104J
R 1517	(B,57,22)		RS1/16SS103J
R 1518	(B,33,31)		RS1/16SS103J
R 1519	(A,24,43)		RS1/16SS102J
R 1522	(A,21,37)		RS1/16SS104J
R 1523	(A,22,37)		RS1/16SS221J
R 1524	(B,29,33)		RS1/16SS472J
R 1525	(A,24,44)		RS1/16SS103J
R 1526	(A,22,40)		RS1/16SS103J
R 1527	(A,35,49)		RS1/16SS682J
R 1528	(B,19,34)		RS1/16SS103J
R 1529	(B,35,21)		RS1/16SS103J
R 1530	(B,17,34)		RS1/16SS103J
R 1531	(B,33,30)		RS1/16SS103J
R 1532	(A,24,42)		RS1/16SS101J
R 1534	(B,29,48)		RS1/16SS221J
R 1535	(A,22,44)		RS1/16SS104J
R 1536	(B,32,48)		RS1/16SS104J
R 1537	(A,24,46)		RS1/16SS104J
R 1538	(A,55,35)		RS1/16SS104J
R 1539	(B,33,48)		RS1/16SS104J
R 1540	(A,26,46)		RS1/16SS221J
R 1541	(A,26,45)		RS1/16SS221J
R 1542	(B,26,34)		RS1/16SS103J
R 1543	(A,32,48)		RS1/16SS181J
R 1544	(A,36,48)		RS1/16SS181J
R 1546	(A,33,49)		RS1/16SS682J
R 1601	(A,32,17)		RS1/16SS123J
R 1602	(A,32,18)		RS1/16SS123J
R 1603	(B,31,21)		RS1/16SS1002D
R 1604	(A,23,21)		RS1/16SS105J
R 1605	(A,22,23)		RS1/16SS105J

Circuit Symbol and No.			Part No.
R 1670	(B,40,21)		RS1/16SS1002D
R 1671	(B,42,19)		RS1/16SS2402D
R 1672	(A,39,18)		RS1/16SS2000D
R 1674	(A,36,17)		RS1/16SS3002D
R 1801	(B,41,8)		RS1/16SS104J
R 1802	(B,43,8)		RS1/16SS104J
R 1803	(B,37,13)		RS1/16SS821J
R 1804	(B,39,14)		RS1/16SS821J
R 1950	(A,44,18)		RS1/10SR24R0F
R 1951	(A,42,18)		RS1/10SR24R0F
R 1952	(A,26,50)		RS1/16SS105J
R 1953	(A,26,51)		RS1/16SS821J
R 1954	(A,48,5)		RS1/16SS153J
R 1955	(A,50,5)		RS1/16SS153J
R 1982	(A,10,62)		RS1/16SS822J
R 1983	(B,40,20)		RS1/16SS1000D
R 1987	(B,43,21)		RS1/16SS0R0J

CAPACITORS

C 1001	(B,34,10)		CKSRYB105K10
C 1002	(B,12,17)		CKSSYB104K16
C 1003	(B,15,19)		CKSSYB104K16
C 1004	(B,15,17)	4.7 uF	CCG1201
C 1005	(B,40,11)		CKSRYB105K16
C 1010	(B,60,23)		CKSQYB225K10
C 1011	(B,64,22)		CKSRYB105K10
C 1015	(A,25,7)		CKSSYB102K50
C 1016	(B,64,15)		CKSSYB102K50
C 1018	(B,14,21)		CKSSYB104K10
C 1040	(B,51,7)		CCSRCH821J50
C 1041	(B,19,11)		CCSRCH271J50
C 1101	(B,14,53)	10 uF	CCG1192
C 1104	(B,7,57)		CKSSYB104K10
C 1105	(B,18,54)		CKSSYB104K10
C 1106	(B,8,66)		CKSSYB103K16
C 1107	(B,25,53)		CKSSYB103K16
C 1108	(A,19,57)		CKSSYB103K16
C 1109	(A,7,57)		CKSRYB224K16
C 1110	(A,17,58)		CKSSYB103K16
C 1111	(A,9,66)		CKSRYB224K16
C 1112	(B,17,52)	22 uF	DCH1256
C 1113	(B,8,58)	22 uF	DCH1256
C 1210	(B,77,34)		CKSSYB104K16
C 1251	(B,12,41)		CEVW101M16
C 1252	(B,7,41)	4.7 uF	CCG1222
C 1253	(B,7,39)		CKSSYB104K16
C 1254	(A,6,38)		CKSSYB104K16
C 1255	(A,18,37)		CKSSYB104K16
C 1401	(B,34,27)		CKSSYB104K16
C 1403	(B,39,40)		CKSSYB104K10
C 1404	(B,40,40)	4.7 uF	CCG1201
C 1408	(B,57,27)		CKSSYB104K10
C 1409	(B,58,29)	4.7 uF	CCG1201
C 1410	(B,33,29)		CKSSYB104K16
C 1480	(A,71,19)		CKSSYB104K10
C 1481	(A,72,22)		CKSSYB104K10
C 1482	(A,72,26)		CKSSYB104K10
C 1484	(A,72,30)		CKSSYB104K10
C 1485	(A,72,41)		CKSSYB104K10

Circuit Symbol and No.			Part No.
C 1487	(A,57,29)		CKSSYB104K10
C 1488	(A,57,25)		CKSSYB104K10
C 1489	(A,64,17)	10 uF	CCG1192
C 1490	(A,66,18)		CKSSYB102K50
C 1501	(B,61,20)	10 uF	CCG1192
C 1502	(B,54,20)	10 uF	CCG1192
C 1503	(A,54,33)		CKSSYB104K10
C 1504	(A,53,24)		CKSSYB104K10
C 1505	(A,53,27)		CKSSYB104K10
C 1506	(B,52,35)		CKSSYB104K10
C 1507	(A,53,36)		CKSSYB104K10
C 1508	(A,53,39)		CKSSYB104K10
C 1509	(A,53,42)		CKSSYB104K10
C 1510	(B,51,18)		CCSSCH100D50
C 1511	(A,48,18)		CKSSYB104K10
C 1512	(B,45,18)		CCSSCH100D50
C 1513	(A,48,48)		CKSSYB104K10
C 1514	(B,45,21)		CKSSYB104K10
C 1515	(A,45,18)		CKSSYB104K10
C 1516	(A,43,48)		CKSSYB104K10
C 1517	(A,42,48)		CKSSYB104K10
C 1518	(A,38,48)		CKSSYB104K10
C 1519	(A,34,47)		CKSSYB104K10
C 1520	(A,27,47)		CKSSYB104K10
C 1521	(A,24,34)		CKSSYB104K10
C 1522	(A,25,38)		CKSSYB104K10
C 1523	(A,20,46)		CKSSYB224K6R3
C 1524	(A,20,48)		CKSSYB473K16
C 1526	(A,24,37)		CKSSYB103K16
C 1528	(B,30,48)		CCSSCH471J50
C 1601	(A,32,19)		CKSSYB103K16
C 1602	(A,34,17)		CCSSCH101J50
C 1603	(A,33,18)		CCSSCH101J50
C 1604	(A,30,17)		CCSSCH680J50
C 1605	(A,30,18)		CCSSCH680J50
C 1606	(A,35,19)		CKSSYB104K10
C 1607	(A,20,24)	10 uF	CCG1192
C 1608	(A,28,18)	4.7 uF	CCG1201
C 1609	(A,26,22)		CKSSYB104K10
C 1612	(A,24,24)		CKSSYB104K10
C 1613	(A,24,25)		CKSSYB104K10
C 1614	(A,22,24)		CKSSYB104K10
C 1615	(A,23,26)		CKSSYB104K10
C 1616	(A,24,27)		CKSSYB104K10
C 1617	(B,27,28)		CKSSYB104K10
C 1618	(A,22,29)		CCSSCH101J50
C 1619	(A,23,30)		CKSSYB562K25
C 1620	(B,27,30)		CKSSYB224K6R3
C 1621	(A,22,31)		CKSSYB224K6R3
C 1622	(A,24,31)		CKSSYB333K16
C 1623	(A,27,20)		CKSRYB105K10
C 1624	(A,24,32)		CKSSYB104K10
C 1625	(A,24,29)		CKSSYB104K10
C 1671	(A,41,18)		CKSSYB104K10
C 1673	(A,37,19)		CKSSYB104K10
C 1674	(B,42,20)		CKSSYB104K10
C 1676	(B,38,21)		CKSRYB105K10
C 1801	(B,42,10)	4.7 uF	CCG1201
C 1802	(B,46,10)	4.7 uF	CCG1201
C 1803	(B,42,12)		CCSRCH182J50

Circuit Symbol and No.			Part No.
C 1804	(B,45,12)		CCSRCH182J50
C 1805	(B,34,13)		CKSSYB104K10
C 1806	(B,32,13)	10 uF	CCG1192
C 1809	(B,39,16)		CKSSYB104K10
C 1950	(A,27,51)		CKSSYB104K10
C 1951	(A,23,54)		CCSSCH100D50
C 1952	(A,24,48)		CCSSCH100D50
C 1953	(B,60,17)		CKSRYB105K10
C 1954	(B,54,17)		CKSRYB105K10
C 1955	(B,77,40)		CKSSYB104K16

D

Unit Number : YXX5282
Unit Name : Key Unit(Service)

MISCELLANEOUS

IC 4801	(A,10,91)	IR RC REC Module	PNJ4833M
D 4801	(A,14,44)	Blue LED	FM-3528BK-470M
S 4801	(A,13,18)	Push Switch	CSG1155
S 4802	(A,13,8)	Push Switch	CSG1155
S 4803	(A,13,29)	Push Switch	CSG1155
S 4804	(A,9,44)	Push Switch	CSG1155
S 4805	(A,23,93)	Push Switch	CSG1155
S 4806	(A,13,59)	Push Switch	CSG1155
S 4807	(A,13,80)	Push Switch	CSG1155
S 4808	(A,13,69)	Push Switch	CSG1155
S 4809	(A,17,93)	Push Switch	CSG1155
CN4801	(B,15,43)	Connector	CKS6063

RESISTORS

R 4801	(B,9,73)		RS1/16SS470J
R 4802	(A,11,13)		RS1/16SS222J
R 4803	(A,9,13)		RS1/16SS472J
R 4804	(A,8,39)		RS1/16SS123J
R 4805	(A,16,63)		RS1/16SS182J
R 4806	(A,14,65)		RS1/16SS222J
R 4807	(A,15,72)		RS1/16SS472J
R 4808	(A,11,14)		RS1/16SS182J

CAPACITORS

C 4805	(B,11,92)	10 uF	CCG1192