


## PACKING

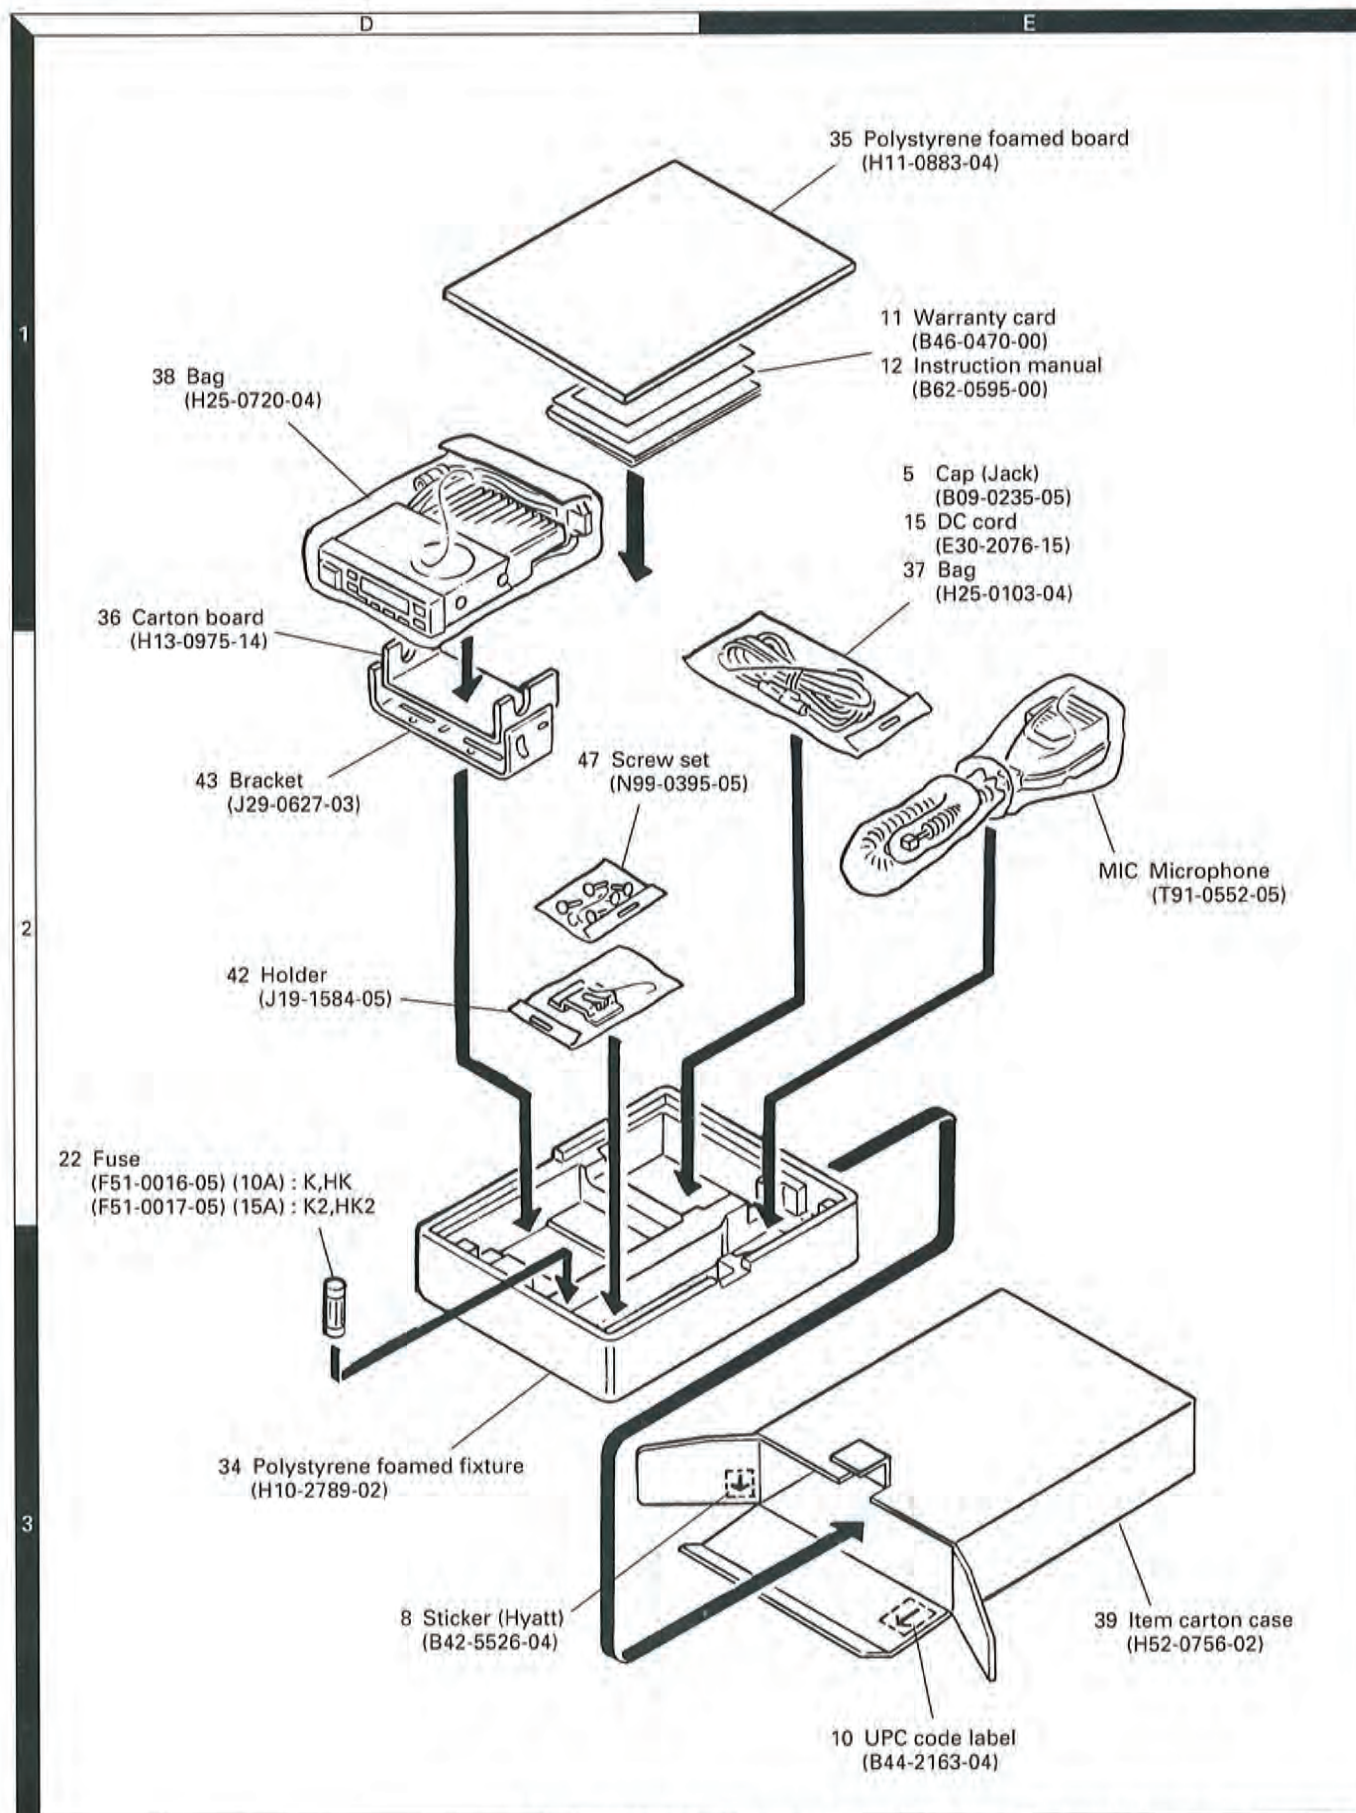

# TK-760/762

## PARTS LIST

\* New Parts.  indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

Y : AAFES (Europe)

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

### TK-760/762

#### TX-RX UNIT (X57-4950-XX)/(X57-5100-XX)

| Ref. No.          | Address | New parts | Parts No.   | Description                   | Destination | Remarks |
|-------------------|---------|-----------|-------------|-------------------------------|-------------|---------|
| <b>TK-760/762</b> |         |           |             |                               |             |         |
| 1                 | 1B      | *         | A01-2112-03 | CABINET (UPPER)               |             |         |
| 2                 | 2B      | *         | A01-2113-03 | CABINET (LOWER)               |             |         |
| 3                 | 2A      | *         | A62-0449-13 | PANEL ASSY                    |             | 760     |
| 3                 | 2A      | *         | A62-0450-13 | PANEL ASSY                    |             | 762     |
| 5                 | 2E      |           | B09-0235-05 | CAP (JACK)                    | ACSY        |         |
| 6                 | 2A      | *         | B10-1230-04 | FRONT GLASS                   |             | 760     |
| 6                 | 2A      | *         | B10-1252-04 | FRONT GLASS                   |             | 762     |
| 7                 | 1B,1C   |           | B42-2455-04 | STICKER (M4x8 MAX)            |             |         |
| 8                 | 3E      |           | B42-5526-04 | STICKER (HYATT)               |             |         |
| 9                 | 1C      |           | B42-5850-04 | S/NO LABEL                    |             |         |
| 10                | 3E      |           | B44-2163-04 | UPC CODE LABEL (ITEM)         |             |         |
| 11                | 1D      | *         | B46-0470-00 | WARRANTY CARD                 | ACSY        |         |
| 12                | 1D      | *         | B62-0595-00 | INSTRUCTION MANUAL            | ACSY        |         |
| 13                | 1C      | *         | B72-1002-04 | MODEL NAME PLATE              | K           | 760     |
| 13                | 1C      | *         | B72-1003-04 | MODEL NAME PLATE              | K2          | 760     |
| 13                | 1C      | *         | B72-1004-04 | MODEL NAME PLATE              | HK          | 760     |
| 13                | 1C      | *         | B72-1005-04 | MODEL NAME PLATE              | HK2         | 760     |
| 13                | 1C      | *         | B72-1006-04 | MODEL NAME PLATE              | K           | 762     |
| 13                | 1C      | *         | B72-1007-04 | MODEL NAME PLATE              | K2          | 762     |
| 13                | 1C      | *         | B72-1008-04 | MODEL NAME PLATE              | HK          | 762     |
| 13                | 1C      | *         | B72-1009-04 | MODEL NAME PLATE              | HK2         | 762     |
| 15                | 2E      |           | E30-2076-15 | DC CORD                       | ACSY        |         |
| 16                | 1C      |           | E30-2145-15 | ANTENNA CABLE                 |             |         |
| 17                | 1C      |           | E30-2172-15 | DC CORD (BODY)                |             |         |
| 18                | 1C      |           | E37-0461-05 | LEAD WIRE WITH CONNECTOR (SP) |             |         |
| 19                | 2B      | *         | E37-0587-05 | FLAT CABLE                    |             |         |
| 21                | 1B      | *         | F10-2202-04 | SHIELDING PLATE               |             |         |
| 22                | 3D      |           | F51-0016-05 | FUSE (10A : DC CORD)          | K, HK       |         |
| 22                | 3D      |           | F51-0017-05 | FUSE (15A : DC CORD)          | K2, HK2     |         |
| 25                | 1B      | *         | G02-0791-04 | FLAT SPRING (AVR, APC)        |             |         |
| -                 | -       |           | G10-0769-04 | AUXILIARY PART                |             |         |
| 27                | 2A      | *         | G10-0710-04 | AUXILIARY PART (PANEL)        |             |         |
| 28                | 1B,2C   | *         | G10-0781-04 | AUXILIARY PART (CHASSIS)      |             |         |
| 29                | 1C      |           | G10-0786-04 | AUXILIARY PART (SP)           |             |         |
| 30                | 1B      |           | G13-1468-04 | FORMED PLATE (DC CORD)        |             |         |
| 31                | 2A      | *         | G13-1535-04 | CUSHION (PANEL)               |             | 762     |
| 32                | 2B      | *         | G53-0796-04 | PACKING (JACK)                |             |         |
| 34                | 3D      | *         | H10-2789-02 | POLYSTYRENE FOAMED FIXTURE    |             |         |
| 35                | 1E      | *         | H11-0883-04 | POLYSTYRENE FOAMED BOARD      |             |         |
| 36                | 2D      | *         | H13-0975-14 | CARTON BOARD                  |             |         |
| 37                | 2E      |           | H25-0103-04 | BAG (DC CORD)                 |             |         |
| 38                | 1D      |           | H25-0720-04 | BAG (BODY)                    |             |         |
| 39                | 3E      | *         | H52-0756-02 | ITEM CARTON CASE              |             |         |
| 41                | 1C      |           | J19-1580-04 | HOLDER (SP)                   |             |         |
| 42                | 2D      | *         | J19-1584-05 | HOLDER                        | ACSY        |         |
| 43                | 2D      | *         | J29-0627-03 | BRACKET                       | ACSY        |         |
| 45                | 2A      | *         | K29-5081-02 | KEY TOP (RUBBER)              |             |         |
| A                 | 1B,2B   |           | N33-2606-45 | SCREW (CABINET)               |             |         |
| B                 | 2B      |           | N87-3008-46 | SCREW (IC)                    |             |         |
| C                 | 1B,1C   |           | N87-2608-46 | SCREW (PCB, ANT)              |             |         |

| Ref. No.                                   | Address | New parts | Parts No.     | Description       | Destination | Remarks |
|--------------------------------------------|---------|-----------|---------------|-------------------|-------------|---------|
| 47                                         | 2D      | *         | N99-0395-05   | SCREW SET         | ACSY        |         |
| MIC                                        | 2E      | *         | T91-0552-05   | MICROPHONE        | ACSY        |         |
| SP                                         | 1C      |           | T07-0331-05   | SPEAKER           |             |         |
| IC501                                      | 2B      | *         | M67741H-32    | IC (POWER MODULE) | K           |         |
| IC501                                      | 2B      | *         | M67741L-32    | IC (POWER MODULE) | K2          |         |
| IC501                                      | 2B      | *         | M67781H-32    | IC (POWER MODULE) | HK          |         |
| IC501                                      | 2B      | *         | M67781L-32    | IC (POWER MODULE) | HK2         |         |
| <b>TX-RX UNIT (X57-4950-XX) : TK-760</b>   |         |           |               |                   |             |         |
| <b>TX-RX UNIT (X57-5100-XX) : TK-762</b>   |         |           |               |                   |             |         |
| <b>-10 : K -11 : K2 -12 : HK -13 : HK2</b> |         |           |               |                   |             |         |
| 101                                        | 2A      | *         | B11-1148-04   | REFLECTOR         |             | 760     |
| 102                                        | 2B      | *         | B11-1149-04   | FILTER            |             | 760     |
| 103                                        | 2A      | *         | B38-0759-05   | LCD               |             | 760     |
| C1-10                                      |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C12                                        |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C15, 16                                    |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C17                                        |         |           | CE04EW1E471M  | ELECTRO           | 470UF       | 25WV    |
| C19                                        |         |           | CK73GB1H471K  | CHIP C            | 470PF       | K       |
| C20                                        |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C23                                        |         |           | C92-0512-05   | CHIP-TAN          | 1.0UF       | 16WV    |
| C24                                        |         |           | C92-0036-05   | CHIP-ELE          | 4.7UF       | 16WV    |
| C25                                        |         |           | CK73GB1H471K  | CHIP C            | 470PF       | K       |
| C26                                        |         |           | CK73GB1H103K  | CHIP C            | 0.010UF     | K       |
| C27                                        |         |           | C92-0507-05   | CHIP-TAN          | 4.7UF       | 6.3WV   |
| C28                                        |         |           | CK73GB1H471K  | CHIP C            | 470PF       | K       |
| C29                                        |         |           | C92-0004-05   | CHIP-TAN          | 1.0UF       | 16WV    |
| C30, 31                                    |         |           | CK73FB1E104K  | CHIP C            | 0.10UF      | K       |
| C33                                        |         |           | CK73GB1H103K  | CHIP C            | 0.010UF     | K       |
| C35                                        |         |           | CK73FB1E104K  | CHIP C            | 0.10UF      | K       |
| C37                                        |         |           | CK73GB1H103K  | CHIP C            | 0.010UF     | K       |
| C38                                        |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C39                                        |         |           | CK73FB1E104K  | CHIP C            | 0.10UF      | K       |
| C41                                        |         |           | C92-0507-05   | CHIP-TAN          | 4.7UF       | 6.3WV   |
| C42                                        |         |           | C92-0543-05   | CHIP-TAN          | 3.3UF       | 10WV    |
| C43, 44                                    |         |           | C92-0507-05   | CHIP-TAN          | 4.7UF       | 6.3WV   |
| C46                                        |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C47                                        |         |           | CK73FF1C105Z  | CHIP C            | 1.0UF       | Z       |
| C48                                        |         |           | CK73FB1E104K  | CHIP C            | 0.10UF      | K       |
| C50                                        |         |           | CK73FB1E104K  | CHIP C            | 0.10UF      | K       |
| C51                                        |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C53                                        |         |           | C92-0543-05   | CHIP-TAN          | 3.3UF       | 10WV    |
| C54                                        |         |           | CC73GCH1H150J | CHIP C            | 15PF        | J       |
| C55                                        |         |           | CC73GCH1H220J | CHIP C            | 22PF        | J       |
| C57                                        |         |           | CC73GCH1H180J | CHIP C            | 18PF        | J       |
| C58                                        |         |           | CK73GB1H103K  | CHIP C            | 0.010UF     | K       |
| C60                                        |         |           | CC73GCH1H220J | CHIP C            | 22PF        | J       |
| C61                                        |         |           | C92-0543-05   | CHIP-TAN          | 3.3UF       | 10WV    |
| C63                                        |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C65, 66                                    |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |
| C67                                        |         |           | C92-0546-05   | CHIP-TAN          | 68UF        | 6.3WV   |
| C68, 69                                    |         |           | CK73GB1H103K  | CHIP C            | 0.010UF     | K       |
| C70                                        |         |           | CK73GB1H102K  | CHIP C            | 1000PF      | K       |

760 : TK-760 (K,K2,HK,HK2)

762 : TK-762 (K,K2,HK,HK2)

## PARTS LIST

TX-RX UNIT (X57-4950-XX)

TX-RX UNIT (X57-5100-XX)

| Ref. No. | Address | New parts | Parts No.     | Description          | Destination | Re-<br>marks | Ref. No. | Address | New parts | Parts No.     | Description          | Destination | Re-<br>marks |
|----------|---------|-----------|---------------|----------------------|-------------|--------------|----------|---------|-----------|---------------|----------------------|-------------|--------------|
| C71      |         |           | C92-0044-05   | CHIP-ELE 47UF 10WV   |             |              | C164     |         | *         | C93-0565-05   | CHIP C 27PF J        |             |              |
| C73      |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |              | C167     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C74      |         |           | C92-0044-05   | CHIP-ELE 47UF 10WV   |             |              | C175     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |              |
| C75      |         |           | C92-0004-05   | CHIP-TAN 1.0UF 16WV  |             |              | C186     |         |           | CK73FB1E104K  | CHIP C 0.10UF K      |             |              |
| C77      |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              | C187,188 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C79      |         |           | C92-0507-05   | CHIP-TAN 4.7UF 6.3WV |             |              | C201,202 |         |           | CK73FB1E104K  | CHIP C 0.10UF K      |             |              |
| C81      |         |           | C92-0040-05   | CHIP-ELE 47UF 16WV   |             |              | C203,204 |         |           | CC73GCH1H120J | CHIP C 12PF J        | K,HK        |              |
| C82      |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              | C203,204 |         |           | CC73GCH1H180J | CHIP C 18PF J        | K2,HK2      |              |
| C83      |         |           | CC73GCH1H180J | CHIP C 18PF J        |             |              | C205-206 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C84,85   |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C212     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |              |
| C86      |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              | C213     |         |           | CC73GCH1H101J | CHIP C 100PF J       |             |              |
| C87      |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C214-217 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C88      |         |           | CC73GCH1H120J | CHIP C 12PF J        |             |              | C218     |         |           | CC73GCH1H270J | CHIP C 27PF J        |             |              |
| C90      |         |           | CC73GCH1H180J | CHIP C 18PF J        |             |              | C219     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C93      |         |           | CK73FF1C105Z  | CHIP C 1.0UF Z       |             |              | C220     |         |           | CK73GB1H472K  | CHIP C 4700PF K      |             |              |
| C95      |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              | C221     |         |           | CC73FCH1H220J | CHIP C 22PF J        |             |              |
| C97      |         |           | C92-0044-05   | CHIP-ELE 47UF 10WV   |             |              | C222,223 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C98      |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C224     |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              |
| C99      |         |           | C92-0044-05   | CHIP-ELE 47UF 10WV   |             |              | C225     |         |           | CC73GCH1H150J | CHIP C 15PF J        |             |              |
| C101     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C226     |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              |
| C102     |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              | C227     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C104     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |              | C228     |         |           | CC73GCH1H150J | CHIP C 15PF J        |             |              |
| C105     |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              | C229     |         |           | CC73GCH1H150J | CHIP C 15PF J        | K,HK        |              |
| C108     |         |           | C92-0040-05   | CHIP-ELE 47UF 16WV   |             |              | C229     |         |           | CC73GCH1H180J | CHIP C 18PF J        | K2,HK2      |              |
| C110     |         |           | CE04EW1A471M  | ELECTRO 470UF 10WV   |             |              | C230     |         |           | CC73GCH1HR75C | CHIP C 0.75PF C      |             |              |
| C111     |         |           | CK73FB1E104K  | CHIP C 0.10UF K      |             |              | C231     |         |           | CC73GCH1H120J | CHIP C 12PF J        | K,HK        |              |
| C113     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C231     |         |           | CC73GCH1H180J | CHIP C 18PF J        | K2,HK2      |              |
| C118     |         |           | C92-0004-05   | CHIP-TAN 1.0UF 16WV  |             |              | C232     |         |           | CC73GCH1HR75C | CHIP C 0.75PF C      |             |              |
| C119-121 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C233     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C123     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C234     |         |           | CC73GCH1H090D | CHIP C 9.0PF D       | K,HK        |              |
| C124     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |              | C234     |         |           | CC73GCH1H180J | CHIP C 18PF J        | K2,HK2      |              |
| C125     |         |           | C92-0040-05   | CHIP-ELE 47UF 16WV   |             |              | C235-237 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C126     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C239     |         |           | CC73FCH1H030C | CHIP C 3.0PF C       |             |              |
| C127     |         |           | CK73FB1E473K  | CHIP C 0.047UF K     |             |              | C240     |         |           | CC73GCH1H100D | CHIP C 10PF D        |             |              |
| C128,129 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C241-243 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C137     |         |           | C92-0040-05   | CHIP-ELE 47UF 16WV   |             |              | C244-246 |         |           | CC73GCH1H101J | CHIP C 100PF J       |             |              |
| C138,139 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C247     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C141     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |              | C248     |         |           | CK73FB1E104K  | CHIP C 0.10UF K      |             |              |
| C142     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C249     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C143     |         |           | CK73FB1E104K  | CHIP C 0.10UF K      |             |              | C250     |         |           | C92-0543-05   | CHIP-TAN 3.3UF 10WV  |             |              |
| C146     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C251     |         |           | C92-0536-05   | CHIP-TAN 10UF 10WV   |             |              |
| C147     |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              | C252     |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              |
| C148     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C253,254 |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C151     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              | C255     |         |           | C92-0003-05   | CHIP-TAN 0.47UF 25WV |             |              |
| C152     |         |           | C93-0557-05   | CHIP C 7.0pF D       | K           |              | C256     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C152     |         |           | C93-0561-05   | CHIP C 12PF J        | K2          |              | C257     |         |           | C92-0516-05   | CHIP-TAN 4.7UF 16WV  |             |              |
| C152     |         | *         | C93-0564-05   | CHIP C 22PF J        | HK2         |              | C258     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C153     |         |           | CK73GB1H103K  | CHIP C 0.010UF K     |             |              | C259     |         |           | C92-0001-05   | CHIP-TAN 0.1UF 35WV  |             |              |
| C154     |         |           | C93-0603-05   | CHIP C 1000PF K      |             |              | C260     |         |           | CC73GCH1H050C | CHIP C 5.0PF C       |             |              |
| C155     |         |           | C93-0557-05   | CHIP C 7.0PF D       | HK          |              | C261     |         |           | CK73FB1E223K  | CHIP C 0.022UF K     |             |              |
| C155     |         |           | C93-0561-05   | CHIP C 12PF J        | K           |              | C262     |         |           | CC73GCH1H020C | CHIP C 2.0PF C       |             |              |
| C155     |         | *         | C93-0564-05   | CHIP C 22PF J        | K2,HK2      |              | C263     |         |           | C92-0003-05   | CHIP-TAN 0.47UF 25WV |             |              |
| C156     |         | *         | C93-0563-05   | CHIP C 18PF J        | K2,HK2      |              | C264     |         |           | CC73GCH1H180J | CHIP C 18PF J        |             |              |
| C156     |         | *         | C93-0564-05   | CHIP C 22PF J        | K,HK        |              | C265     |         |           | CC73GCH1H180J | CHIP C 18PF J        | K,HK        |              |
| C157     |         | *         | C93-0564-05   | CHIP C 22PF J        |             |              | C265     |         |           | CC73GCH1H220J | CHIP C 22PF J        | K2,HK2      |              |
| C159     |         |           | C93-0603-05   | CHIP C 1000PF K      |             |              | C266     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |              |
| C160     |         |           | CC73GCH1H101J | CHIP C 100PF J       |             |              | C267     |         |           | C92-0507-05   | CHIP-TAN 4.7UF 6.3WV |             |              |
| C161     |         | *         | C93-0563-05   | CHIP C 18PF J        |             |              | C268     |         |           | CK73FF1C105Z  | CHIP C 1.0UF Z       |             |              |
| C162     |         | *         | C93-0567-05   | CHIP C 39PF J        |             |              | C269     |         |           | CC73GCH1H180J | CHIP C 18PF J        | K,HK        |              |

760 : TK-760 (K,K2,HK,HK2)

762 : TK-762 (K,K2,HK,HK2)

## PARTS LIST

TX-RX UNIT (X57-4950-XX)

TX-RX UNIT (X57-5100-XX)

| Ref. No. | Address | New parts | Parts No.     | Description          | Destination | Re-marks | Ref. No. | Address | New parts | Parts No.     | Description                    | Destination | Re-marks |
|----------|---------|-----------|---------------|----------------------|-------------|----------|----------|---------|-----------|---------------|--------------------------------|-------------|----------|
| C269     |         |           | CC73GCH1H220J | CHIP C 22PF J        | K2,HK2      |          | C467     |         |           | C92-0507-05   | CHIP-TAN 4.7UF 6.3WV           |             |          |
| C271     |         |           | CC73GCH1H0R5B | CHIP C 0.5PF B       | HK,HK2      |          | C468     |         |           | CK73GB1E223K  | CHIP C 0.022UF K               |             |          |
| C273     |         |           | CK73GB1H102K  | CHIP C 1000PF K      | HK,HK2      |          | C469     |         |           | CK73GB1C104K  | CHIP C 0.10UF K                |             |          |
| C274,275 |         |           | CC73GCH1H101J | CHIP C 100PF J       |             |          | C470     |         |           | CC73GCH1H101J | CHIP C 100PF J                 |             |          |
| C277     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |          | C471     |         |           | CK73GB1E103K  | CHIP C 0.010UF K               |             |          |
| C401,402 |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          | C472-475 |         |           | CC73GCH1H101J | CHIP C 100PF J                 |             |          |
| C403     |         |           | CK73GB1C104K  | CHIP C 0.10UF K      |             |          | C476-479 |         |           | CK73GB1H471K  | CHIP C 470PF K                 |             | 762      |
| C404,405 |         |           | CK73GB1E123K  | CHIP C 0.012UF K     |             |          | C480     |         |           | CC73GCH1H030C | CHIP C 3.0PF C                 |             |          |
| C406     |         |           | C92-0543-05   | CHIP-TAN 3.3UF 10WV  |             |          | C481,482 |         |           | CC73GCH1H100D | CHIP C 10PF D                  |             |          |
| C407,408 |         |           | CK73GB1C104K  | CHIP C 0.10UF K      |             |          | C483-485 |         |           | CK73GB1H471K  | CHIP C 470PF K                 |             | 762      |
| C409     |         |           | CC73GCH1H101J | CHIP C 100PF J       |             |          | C486     |         |           | CK73GB1C104K  | CHIP C 0.10UF K                |             |          |
| C410,411 |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          | C487     |         |           | C92-0012-05   | CHIP-TAN 22UF 6.3WV            |             |          |
| C412     |         |           | C92-0507-05   | CHIP-TAN 4.7UF 6.3WV |             |          | C488,489 |         |           | CK73GB1H471K  | CHIP C 470PF K                 |             |          |
| C413     |         |           | CK73GB1E223K  | CHIP C 0.022UF K     |             |          | C490     |         |           | C92-0507-05   | CHIP-TAN 4.7UF 6.3WV           |             |          |
| C414     |         |           | CC73GCH1H101J | CHIP C 100PF J       |             |          | C491     |         |           | CK73GB1C104K  | CHIP C 0.10UF K                |             |          |
| C415     |         |           | C92-0507-05   | CHIP-TAN 4.7UF 6.3WV |             |          | C492     |         |           | CC73GCH1H470J | CHIP C 47PF J                  |             |          |
| C416     |         |           | CK73GB1H222K  | CHIP C 2200PF K      |             |          | C493,494 |         |           | CK73GB1H103K  | CHIP C 0.010UF K               |             |          |
| C417     |         |           | CK73GB1E223K  | CHIP C 0.022UF K     |             |          |          |         |           |               |                                |             |          |
| C418     |         |           | CK73GB1C273K  | CHIP 0.027UF K       |             |          | 105      | 2B      | *         | E29-1139-04   | INTER CONNECTOR (LCD)          |             | 760      |
| C419     |         |           | CC73GCH1H470J | CHIP C 47PF J        |             |          | CN1      |         |           | E40-5737-05   | PIN CONNECTOR FOR INSIDE (8P)  |             |          |
|          |         |           |               |                      |             |          | CN2      |         |           | E40-5738-05   | PIN CONNECTOR FOR INSIDE (3P)  |             |          |
|          |         |           |               |                      |             |          | CN4      |         |           | E40-3247-05   | PIN CONNECTOR FOR INSIDE (3P)  |             |          |
|          |         |           |               |                      |             |          | CN5      |         |           | E40-3246-05   | PIN CONNECTOR FOR INSIDE (2P)  |             |          |
| C420     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          |          |         |           |               |                                |             |          |
| C421     |         |           | CK73GB1H472K  | CHIP C 4700PF K      |             |          | CN6      |         | *         | E40-5851-05   | FLAT CABLE CONNECTOR (26P)     |             |          |
| C422     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          | CN201    |         |           | E40-3247-05   | PIN CONNECTOR FOR INSIDE (3P)  |             |          |
| C423     |         |           | C92-0507-05   | CHIP-TAN 4.7UF 6.3WV |             |          | CN401    |         | *         | E40-5851-05   | CONNECTOR (26P)                |             |          |
| C424     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          | J1       |         |           | E11-0442-05   | PHONE JACK (3.5D)              |             |          |
|          |         |           |               |                      |             |          | J401     |         |           | E08-0673-05   | MODULAR JACK                   |             |          |
| C425,426 |         |           | CK73GB1C273K  | CHIP C 0.027UF K     |             |          | F1       |         |           | F53-0108-05   | FUSE (1.8A)                    |             |          |
| C427     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |          |          |         |           |               |                                |             |          |
| C428     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          |          |         |           |               |                                |             |          |
| C430     |         |           | CK73FF1C105Z  | CHIP C 1.0UF Z       |             |          |          |         |           |               |                                |             |          |
| C431     |         |           | CK73GB1E223K  | CHIP C 0.022UF K     |             |          | 107      | 2A      | *         | J21-4479-04   | HARDWARE FIXTURE               |             | 760      |
|          |         |           |               |                      |             |          | -        |         |           | J30-0545-05   | SPACER                         |             |          |
| C432     |         |           | CC73GCH1H100D | CHIP C 10PF D        |             |          | -        |         | *         | J31-0543-05   | COLLAR                         |             | 762      |
| C433     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          |          |         |           |               |                                |             |          |
| C434,435 |         |           | CK73GB1H682K  | CHIP C 6800PF K      |             |          | CD1      |         |           | L79-1013-05   | DISCL (455KHZ)                 |             |          |
| C436     |         |           | C92-0507-05   | CHIP-TAN 4.7UF 6.3WV |             |          | CF201    |         |           | L72-0372-05   | CERAMIC FILTER (455KHZ)        |             |          |
| C437     |         |           | C92-0004-05   | CHIP-TAN 1.0UF 16WV  |             |          | CF202    |         |           | L72-0376-05   | CERAMIC FILTER (455KHZ)        |             |          |
|          |         |           |               |                      |             |          | L1       |         |           | L40-1092-34   | SMALL FIXED INDUCTOR           |             |          |
| C438     |         |           | CK73GB1H682K  | CHIP C 6800PF K      |             |          | L2       |         |           | L40-1005-34   | SMALL FIXED INDUCTOR (10UH)    |             |          |
| C439     |         |           | CK73GB1E103K  | CHIP C 0.010UF K     |             |          |          |         |           |               |                                |             |          |
| C440     |         |           | CC73GCH1H470J | CHIP C 47PF J        |             |          | L3       |         |           | L40-1081-37   | SMALL FIXED INDUCTOR (0.1UH)   |             |          |
| C441     |         |           | CK73GB1E103K  | CHIP C 0.010UF K     |             |          | L19      |         | *         | L34-4480-05   | COIL (5T)                      |             |          |
| C442     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             | 760      | L20      |         | *         | L34-4479-05   | COIL (2.5T)                    |             |          |
|          |         |           |               |                      |             |          | L20      |         | *         | L34-4481-05   | COIL (6T)                      |             |          |
| C443     |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          | L21      |         | *         | L34-4478-05   | COIL (9.5T)                    |             |          |
| C444     |         |           | CC73FCH1H751J | CHIP C 750PF J       |             |          |          |         |           |               |                                |             |          |
| C445     |         |           | CK73GB1H122K  | CHIP C 1200PF K      |             |          |          |         |           |               |                                |             |          |
| C446,447 |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          | L22,23   |         | *         | L34-4481-05   | COIL (6T)                      |             |          |
| C448     |         |           | CC73GCH1H151J | CHIP C 150PF J       |             |          | L24      |         | *         | L34-4478-05   | COIL (9.5T)                    |             |          |
|          |         |           |               |                      |             |          | L201     |         |           | L40-6871-34   | SMALL FIXED INDUCTOR (68NH)    |             |          |
| C449     |         |           | CK73GB1E103K  | CHIP C 0.010UF K     |             |          | L202     |         |           | L40-8271-34   | SMALL FIXED INDUCTOR (82NH)    |             |          |
| C450     |         |           | CK73GB1H332K  | CHIP C 3300PF K      |             |          | L203     |         |           | L40-2781-37   | SMALL FIXED INDUCTOR (0.27UH)  |             |          |
| C451     |         |           | C92-0004-05   | CHIP-TAN 1.0UF 16WV  |             |          |          |         |           |               |                                |             |          |
| C452     |         |           | C92-0536-05   | CHIP-TAN 10UF 10WV   |             |          |          |         |           |               |                                |             |          |
| C453,454 |         |           | CK73GB1C104K  | CHIP C 0.10UF K      |             |          | L204     |         |           | L40-3381-37   | SMALL FIXED INDUCTOR (0.33UH)  |             |          |
|          |         |           |               |                      |             |          | L205     |         | *         | L34-4472-05   | COIL                           |             |          |
| C455     |         |           | CK73GB1E103K  | CHIP C 0.010UF K     |             |          | L206,207 |         | *         | L34-4473-05   | COIL                           |             |          |
| C456,457 |         |           | CK73GB1H471K  | CHIP C 470PF K       |             |          | L208     |         | *         | L34-4472-05   | COIL                           |             |          |
| C458     |         |           | CK73GB1E103K  | CHIP C 0.010UF K     |             |          | L209     |         |           | L40-1581-37   | SMALL FIXED INDUCTOR (0.15UH)  | K,HK        |          |
| C459     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |          |          |         |           |               |                                |             |          |
| C460     |         |           | CK73GB1E103K  | CHIP C 0.010UF K     |             |          | L209     |         |           | L40-6872-37   | SMALL FIXED INDUCTOR (0.088UH) |             |          |
|          |         |           |               |                      |             |          | L210     |         |           | L40-3971-36   | SMALL FIXED INDUCTOR (39NH)    |             |          |
| C461     |         |           | CK73GB1H102K  | CHIP C 1000PF K      |             |          | L211     |         |           | L40-1081-37   | SMALL FIXED INDUCTOR (0.1UH)   |             |          |
| C462     |         |           | CK73GB1H472K  | CHIP C 4700PF K      |             |          | X1       |         | *         | L77-1676-05   | VCO (12.8MHZ)                  |             |          |
| C463     |         |           | C92-0606-05   | CHIP-TAN 4.7UF 10WV  |             |          | X2       |         |           | L77-1595-05   | CRYSTAL RESONATOR (44.595MHZ)  |             |          |
| C464-466 |         |           | CK73GB1E103K  | CHIP C 0.010UF K     |             |          | X401     |         |           | L77-1630-05   | CRYSTAL RESONATOR (8.388MHZ)   |             |          |

760 : TK-760 (K,K2,HK,HK2)

762 : TK-762 (K,K2,HK,HK2)

## PARTS LIST

TX-RX UNIT (X57-4950-XX)

TX-RX UNIT (X57-5100-XX)

| Ref. No. | Address | New parts | Parts No.    | Description         | Destination | Re-marks | Ref. No. | Address | New parts | Parts No.    | Description         | Destination | Re-marks |
|----------|---------|-----------|--------------|---------------------|-------------|----------|----------|---------|-----------|--------------|---------------------|-------------|----------|
| XF1      |         | *         | L71-0476-05  | MCF (45.050MHZ)     |             |          | R81      |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          |
| XF1      |         | *         | L71-0478-05  | MCF (45.050MHZ)     |             |          | R83      |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          |
| R1       |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          | R85      |         |           | RK73GB1J681J | CHIP R 680 J 1/16W  |             |          |
| R2       |         |           | R92-1252-05  | CHIP R 0 OHM        |             |          | R86      |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          |
| R3       |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |          | R88      |         |           | RK73FB2A2R2J | CHIP R 2.2 J 1/10W  |             |          |
| R4       |         |           | R92-1252-05  | CHIP R 0 OHM        |             |          | R92      |         |           | RK73GB1J472J | CHIP R 4.7K J 1/16W |             |          |
| R5,6     |         |           | R92-0670-05  | CHIP R 0 OHM        |             |          | R93      |         |           | RK73FB2A102J | CHIP R 1.0K J 1/10W |             |          |
| R7,8     |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          | R94      |         |           | R92-0685-05  | CHIP R 22 J 1/2W    |             |          |
| R9,10    |         |           | R92-1252-05  | CHIP R 0 OHM        |             |          | R99      |         |           | RK73FB2A470J | CHIP R 47 J 1/10W   |             |          |
| R11      |         |           | RK73GB1J224J | CHIP R 220K J 1/16W |             |          | R101     |         |           | RK73FB2A470J | CHIP R 47 J 1/10W   |             |          |
| R12      |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          | R102     |         |           | RK73EB2B181J | CHIP R 180 J 1/8W   |             |          |
| R13      |         |           | R92-1252-05  | CHIP R 0 OHM        |             |          | R103     |         |           | RK73EB2B151J | CHIP R 150 J 1/8W   |             |          |
| R14      |         |           | RK73FB2A102J | CHIP R 1.0K J 1/10W |             |          | R104     |         |           | RK73FB2A103J | CHIP R 10K J 1/10W  |             |          |
| R15      |         |           | R92-1252-05  | CHIP R 0 OHM        |             |          | R106     |         |           | RK73FB2A154J | CHIP R 150K J 1/10W |             |          |
| R16      |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |          | R107     |         |           | RK73FB2A473J | CHIP R 47K J 1/10W  |             |          |
| R17      |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          | R108     |         | *         | R92-2554-05  | FIXED R 0.047 3W    | K,K2        |          |
| R18      |         |           | RK73GB1J123J | CHIP R 12K J 1/16W  |             |          | R108     |         | *         | R92-2562-05  | FIXED R 0.047 5W    | HK, HK2     |          |
| R19      |         |           | RK73GB1J472J | CHIP R 4.7K J 1/16W |             |          | R112     |         |           | RK73FB2A472J | CHIP R 4.7K J 1/10W | K,K2        |          |
| R21      |         |           | RK73GB1J153J | CHIP R 15K J 1/16W  |             |          | R112     |         |           | RK73FB2A473J | CHIP R 47K J 1/10W  | HK, HK2     |          |
| R22      |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          | R113     |         |           | RK73FB2A272J | CHIP R 2.7K J 1/10W |             |          |
| R23      |         |           | R92-1215-05  | CHIP R 470 J 1/2W   |             |          | R115,116 |         |           | RK73FB2A472J | CHIP R 4.7K J 1/10W |             |          |
| R25      |         |           | RK73GB1J104J | CHIP R 100K J 1/16W | K2, HK2     |          | R117     |         |           | R92-1268-05  | RN 4.7K B 1/8W      |             |          |
| R25      |         |           | RK73GB1J124J | CHIP R 120K J 1/16W | K, HK       |          | R118     |         |           | R92-2538-05  | RN 3.9K B 1/8W      |             |          |
| R26      |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          | R119     |         |           | R92-1261-05  | CHIP R 150 J 1/2W   |             |          |
| R27      |         |           | RK73GB1J394J | CHIP R 390K J 1/16W |             |          | R124     |         |           | RK73GB1J271J | CHIP R 270 J 1/16W  |             |          |
| R28      |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          | R125     |         |           | RK73GB1J180J | CHIP R 18 J 1/16W   |             |          |
| R30      |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          | R126     |         |           | RK73GB1J271J | CHIP R 270 J 1/16W  |             |          |
| R34      |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |          | R137     |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          |
| R36      |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |          | R139     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |          |
| R37      |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |          | R140,141 |         |           | RK73FB2A821J | CHIP R 820 J 1/10W  |             |          |
| R38      |         |           | RK73GB1J182J | CHIP R 1.8K J 1/16W |             |          | R142,143 |         |           | RK73FB2A100J | CHIP R 10 J 1/10W   |             |          |
| R40      |         |           | RK73GB1J152J | CHIP R 1.5K J 1/16W |             |          | R144     |         |           | RK73GB1J333J | CHIP R 33K J 1/16W  |             |          |
| R41      |         |           | RK73GB1J224J | CHIP R 220K J 1/16W |             |          | R147     |         |           | RK73GB1J474J | CHIP R 470K J 1/16W |             |          |
| R42      |         |           | RK73GB1J472J | CHIP R 4.7K J 1/16W |             |          | R201     |         |           | RK73GB1J153J | CHIP R 15K J 1/16W  |             |          |
| R44      |         |           | RK73GB1J220J | CHIP R 22 J 1/16W   |             |          | R202-205 |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |          |
| R46      |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |          | R206     |         |           | RK73GB1J153J | CHIP R 15K J 1/16W  |             |          |
| R49      |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          | R207-210 |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |          |
| R50      |         |           | RK73GB1J472J | CHIP R 4.7K J 1/16W |             |          | R211     |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          |
| R51      |         |           | RK73GB1J104J | CHIP R 100K J 1/16W | K, HK, HK2  |          | R212     |         |           | RK73GB1J560J | CHIP R 56 J 1/16W   |             |          |
| R51      |         |           | RK73GB1J333J | CHIP R 33K J 1/16W  | K2          |          | R213     |         |           | RK73GB1J392J | CHIP R 3.9K J 1/16W | K2          |          |
| R52      |         |           | RK73GB1J220J | CHIP R 22 J 1/16W   |             |          | R218,219 |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          |
| R53      |         |           | RK73GB1J274J | CHIP R 270K J 1/16W |             |          | R221     |         |           | RK73GB1J392J | CHIP R 3.9K J 1/16W |             |          |
| R55      |         |           | RK73GB1J332J | CHIP R 3.3K J 1/16W |             |          | R222     |         |           | RK73FB2A222J | CHIP R 2.2K J 1/10W |             |          |
| R56      |         |           | R92-1252-05  | CHIP R 0 OHM        |             |          | R223     |         |           | RK73FB2A103J | CHIP R 10K J 1/10W  |             |          |
| R57      |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          | R224     |         |           | RK73FB2A100J | CHIP R 10 J 1/10W   |             |          |
| R59      |         |           | RK73GB1J122J | CHIP R 1.2K J 1/16W |             |          | R225     |         |           | RK73FB2A222J | CHIP R 2.2K J 1/10W |             |          |
| R60,61   |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |          | R226     |         |           | RK73FB2A560J | CHIP R 56 J 1/10W   |             |          |
| R64      |         |           | RK73GB1J471J | CHIP R 470 J 1/16W  |             |          | R227     |         |           | RK73FB2A470J | CHIP R 47 J 1/10W   |             |          |
| R66      |         |           | RK73GB1J152J | CHIP R 1.5K J 1/16W |             |          | R228     |         |           | RK73FB2A152J | CHIP R 1.5K J 1/10W |             |          |
| R68      |         |           | RK73GB1J471J | CHIP R 470 J 1/16W  |             |          | R229     |         |           | RK73FB2A100J | CHIP R 10 J 1/10W   |             |          |
| R71      |         |           | RK73GB1J684J | CHIP R 680K J 1/16W |             |          | R230     |         |           | RK73GB1J331J | CHIP R 330 J 1/16W  |             |          |
| R72      |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |          | R231     |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |          |
| R73      |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |          | R232     |         |           | RK73GB1J151J | CHIP R 150 J 1/16W  |             |          |
| R74      |         |           | RK73GB1J391J | CHIP R 390 J 1/16W  |             |          | R234     |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |          |
| R76      |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |          | R235     |         |           | RK73GB1J333J | CHIP R 33K J 1/16W  |             |          |
| R77      |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |          | R236,237 |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          |
| R78      |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |          | R238     |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |          |
| R79,80   |         |           | R92-0670-05  | CHIP R 0 OHM        |             |          | R239     |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |          |
|          |         |           |              |                     |             |          | R240     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |          |

760 : TK-760 (K,K2,HK,HK2)

762 : TK-762 (K,K2,HK,HK2)

## PARTS LIST

TX-RX UNIT (X57-4950-XX)

TX-RX UNIT (X57-5100-XX)

| Ref. No. | Address | New parts | Parts No.    | Description         | Destination | Remarks | Ref. No. | Address | New parts | Parts No.    | Description         | Destination | Remarks |
|----------|---------|-----------|--------------|---------------------|-------------|---------|----------|---------|-----------|--------------|---------------------|-------------|---------|
| R241     |         |           | RK73GB1J680J | CHIP R 68 J 1/16W   |             |         | R437     |         |           | RK73GB1J224J | CHIP R 220K J 1/16W |             |         |
| R242     |         |           | RK73GB1J184J | CHIP R 180K J 1/16W |             |         | R438     |         |           | RK73GB1J563J | CHIP R 56K J 1/16W  |             |         |
| R243     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         | R439     |         |           | RK73GB1J683J | CHIP R 68K J 1/16W  |             |         |
| R244     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         | R441     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         |
| R245     |         |           | RK73GB1J274J | CHIP R 270K J 1/16W |             |         | R442     |         |           | RK73GB1J561J | CHIP R 560 J 1/16W  |             |         |
| R246     |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |         | R443     |         |           | RK73GB1J824J | CHIP R 820K J 1/16W |             |         |
| R247     |         |           | R92-1281-05  | FIXED R 4.7 1/4W    |             |         | R444     |         |           | RK73GB1J224J | CHIP R 220K J 1/16W |             |         |
| R248     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         | R445     |         |           | RK73GB1J153J | CHIP R 15K J 1/16W  |             |         |
| R250-252 |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |         | R447     |         |           | RK73GB1J273J | CHIP R 27K J 1/16W  |             |         |
| R253     |         |           | RK73GB1J124J | CHIP R 120K J 1/16W |             |         | R448     |         |           | RK73GB1J822J | CHIP R 8.2K J 1/16W |             |         |
| R254     |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |         | R449     |         |           | RK73GB1J563J | CHIP R 56K J 1/16W  |             |         |
| R255     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         | R450     |         |           | RK73GB1J334J | CHIP R 330K J 1/16W |             |         |
| R256     |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |         | R451     |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |         |
| R257     |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |         | R452     |         |           | RK73GB1J224J | CHIP R 220K J 1/16W |             |         |
| R259     |         |           | RK73GB1J152J | CHIP R 1.5K J 1/16W |             |         | R453,454 |         |           | RK73GB1J824J | CHIP R 820K J 1/16W |             |         |
| R260     |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |         | R455     |         |           | RK73GB1J100J | CHIP R 10 J 1/16W   |             | 760     |
| R261     |         |           | RK73GB1J122J | CHIP R 1.2K J 1/16W |             |         | R456     |         |           | RK73GB1J822J | CHIP R 8.2K J 1/16W |             |         |
| R262     |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |         | R457,458 |         |           | RK73GB1J823J | CHIP R 82K J 1/16W  |             |         |
| R263     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         | R459     |         |           | RK73GB1J392J | CHIP R 3.9K J 1/16W |             | 760     |
| R264     |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |         | R460     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         |
| R265     |         |           | RK73GB1J330J | CHIP R 33 J 1/16W   |             |         | R461     |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |         |
| R266     |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |         | R462,463 |         |           | RK73GB1J683J | CHIP R 68K J 1/16W  |             |         |
| R267     |         |           | RK73GB1J124J | CHIP R 120K J 1/16W |             |         | R464     |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |         |
| R268     |         |           | RK73GB1J184J | CHIP R 180K J 1/16W |             |         | R465     |         |           | RK73GB1J682J | CHIP R 6.8K J 1/16W |             |         |
| R269     |         |           | RK73GB1J154J | CHIP R 150K J 1/16W |             |         | R466     |         |           | RK73GB1J183J | CHIP R 18K J 1/16W  |             |         |
| R270     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         | R467     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         |
| R272     |         |           | RK73GB1J101J | CHIP R 100 J 1/16W  |             |         | R468     |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |         |
| R401     |         |           | RK73GB1J391J | CHIP R 390 J 1/16W  |             |         | R469-471 |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         |
| R402     |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |         | R472     |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |         |
| R403-405 |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         | R473     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         |
| R406     |         |           | RK73GB1J104J | CHIP R 100K J 1/16W |             |         | R474     |         |           | R92-0670-05  | CHIP R 0 OHM        |             | 760     |
| R407     |         |           | RK73GB1J683J | CHIP R 68K J 1/16W  |             |         | R475     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         |
| R408     |         |           | RK73GB1J472J | CHIP R 4.7K J 1/16W |             |         | R476-478 |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             | 760     |
| R409     |         |           | RK73GB1J563J | CHIP R 56K J 1/16W  |             |         | R479     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         |
| R410,411 |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         | R480     |         |           | R92-1252-05  | CHIP R 0 OHM        |             | 760     |
| R412     |         |           | RK73GB1J681J | CHIP R 680 J 1/16W  |             |         | R481-488 |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |         |
| R413     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         | R489     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         |
| R414     |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |         | R490     |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |         |
| R415     |         |           | RK73GB1J684J | CHIP R 680K J 1/16W |             |         | R491     |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |         |
| R416     |         |           | RK73GB1J152J | CHIP R 1.5K J 1/16W |             |         | R492     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         |
| R417     |         |           | RK73GB1J272J | CHIP R 2.7K J 1/16W |             |         | R493     |         |           | RK73GB1J391J | CHIP R 390 J 1/16W  |             |         |
| R418     |         |           | RK73GB1J124J | CHIP R 120K J 1/16W |             |         | R494-497 |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |         |
| R419     |         |           | RK73GB1J154J | CHIP R 150K J 1/16W |             |         | R498,499 |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |         |
| R420     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         | R500,501 |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         |
| R421     |         |           | RK73GB1J153J | CHIP R 15K J 1/16W  |             |         | R502     |         |           | RK73GB1J105J | CHIP R 1.0M J 1/16W |             |         |
| R422     |         |           | RK73GB1J183J | CHIP R 18K J 1/16W  |             |         | R503     |         |           | RK73GB1J102J | CHIP R 1.0K J 1/16W |             |         |
| R423     |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |         | R504-507 |         |           | RK73GB1J221J | CHIP R 220 J 1/16W  |             | 762     |
| R424     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         | R508     |         |           | R92-1252-05  | CHIP R 0 OHM        |             |         |
| R425     |         |           | RK73GB1J153J | CHIP R 15K J 1/16W  |             |         | R509-511 |         |           | RK73GB1J271J | CHIP R 270 J 1/16W  |             | 762     |
| R426     |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |         | R512     |         |           | R92-0670-05  | CHIP R 0 OHM        |             |         |
| R427     |         |           | RK73GB1J274J | CHIP R 270K J 1/16W |             |         | R513     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         |
| R428     |         |           | RK73GB1J333J | CHIP R 33K J 1/16W  |             |         | R514     |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |         |
| R429     |         |           | RK73GB1J224J | CHIP R 220K J 1/16W |             |         | R515     |         |           | RK73GB1J333J | CHIP R 33K J 1/16W  |             |         |
| R430,431 |         |           | RK73GB1J183J | CHIP R 18K J 1/16W  |             |         | R516     |         |           | RK73GB1J563J | CHIP R 56K J 1/16W  |             |         |
| R432     |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |         | R517     |         |           | R92-1252-05  | CHIP R 0 OHM        |             | 760     |
| R433     |         |           | RK73GB1J103J | CHIP R 10K J 1/16W  |             |         | R518     |         |           | RK73GB1J823J | CHIP R 82K J 1/16W  |             |         |
| R434     |         |           | RK73GB1J563J | CHIP R 56K J 1/16W  |             |         | R519     |         |           | RK73GB1J684J | CHIP R 680K J 1/16W |             |         |
| R435     |         |           | RK73GB1J823J | CHIP R 82K J 1/16W  |             |         | R520     |         |           | RK73GB1J223J | CHIP R 22K J 1/16W  |             |         |
| R436     |         |           | RK73GB1J183J | CHIP R 18K J 1/16W  |             |         | R521     |         |           | RK73GB1J473J | CHIP R 47K J 1/16W  |             |         |

760 : TK-760 (K,K2,HK,HK2)

762 : TK-762 (K,K2,HK,HK2)

## PARTS LIST

TX-RX UNIT (X57-4950-XX)

TX-RX UNIT (X57-5100-XX)

VCO (X58-4360-XX)

| Ref. No.  | Address | New parts | Parts No.    | Description                     | Destination | Remarks | Ref. No.                                         | Address | New parts | Parts No.      | Description                 | Destination | Remarks |
|-----------|---------|-----------|--------------|---------------------------------|-------------|---------|--------------------------------------------------|---------|-----------|----------------|-----------------------------|-------------|---------|
| R522      |         |           | RK73GB1J223J | CHIP R 22K J 1/16W              |             |         | IC407                                            |         |           | NJM78L05UA     | IC (VOLTAGE REGULATOR/ +5V) |             |         |
| R523,524  |         |           | RK73GB1J473J | CHIP R 47K J 1/16W              |             |         | IC408                                            |         | *         | RH5VL42C       | IC                          |             |         |
| R525      |         |           | RK73GB1J684J | CHIP R 680K J 1/16W             |             |         | IC409                                            |         | *         | M38267M8L156GP | IC (MPU)                    |             |         |
| R526      |         |           | RK73GB1J224J | CHIP R 220K J 1/16W             |             |         | IC411                                            |         |           | AT2408N10SI2.5 | IC (8kbit SERIAL EPROM)     |             |         |
| R527,528  |         |           | RK73GB1J473J | CHIP R 47K J 1/16W              |             |         | IC412                                            |         |           | NJM4558E       | IC (OP AMP X2)              |             |         |
| R529      |         |           | RK73GB1J683J | CHIP R 68K J 1/16W              |             |         | Q1                                               |         |           | DTA114EU       | DIGITAL TRANSISTOR          |             |         |
| R530      |         |           | RK73GB1J223J | CHIP R 22K J 1/16W              |             |         | Q2,3                                             |         |           | DTC114EU       | DIGITAL TRANSISTOR          |             |         |
| VR401     |         | *         | R32-0657-05  | SEMI FIXED VR 10K               |             |         | Q4                                               |         |           | 2SA1641 (S,T)  | TRANSISTOR                  |             |         |
| VR402     |         | *         | R32-0659-05  | SEMI FIXED VR 300K              |             |         | Q5                                               |         |           | DTA114YK       | DIGITAL TRANSISTOR          |             |         |
| D1        |         |           | 02CZ18 (X,Y) | DIODE                           |             |         | Q6                                               |         |           | 2SB1132 (Q,R)  | TRANSISTOR                  |             |         |
| D2        |         |           | 0SA3A1-FK    | DIODE                           | HK,HK2      |         | Q8                                               |         |           | 2SA1362 (Y)    | TRANSISTOR                  |             |         |
| D3        |         |           | MA110        | DIODE                           |             |         | Q10,11                                           |         |           | DTC114EU       | DIGITAL TRANSISTOR          |             |         |
| D3        |         |           | 1SS355       | DIODE                           |             |         | Q13                                              |         |           | DTC114EK       | DIGITAL TRANSISTOR          |             |         |
| D4        |         |           | 02CZ15 (X,Y) | DIODE                           |             |         | Q14                                              |         |           | DTD114EK       | DIGITAL TRANSISTOR          |             |         |
| D5        |         |           | MA110        | DIODE                           |             |         | Q15                                              |         |           | 2SC4116 (GR)   | TRANSISTOR                  |             |         |
| D5        |         |           | 1SS355       | DIODE                           |             |         | Q16                                              |         |           | 2SC2059K (P)   | TRANSISTOR                  |             |         |
| D6        |         |           | ERZ-M10DK220 | SURGE ABSORBER                  |             |         | Q18                                              |         |           | 2SC4215 (Y)    | TRANSISTOR                  |             |         |
| D9-12     |         |           | DA204K       | DIODE                           |             |         | Q20                                              |         |           | DTC363EK       | DIGITAL TRANSISTOR          |             |         |
| D13       |         |           | 02CZ20 (Y,Z) | DIODE                           |             |         | Q22                                              |         | *         | 2SA1757 (E,F)  | TRANSISTOR                  | HK,HK2      |         |
| D14       |         | *         | DSM3MA1      | DIODE                           | K,K2        |         | Q22                                              |         |           | 2SB1565 (E,F)  | TRANSISTOR                  | K,K2        |         |
| D17       |         |           | DAN235K      | DIODE                           |             |         | Q23                                              |         |           | 2SC4116 (GR)   | TRANSISTOR                  |             |         |
| D20       |         |           | MA4PH633     | DIODE                           |             |         | Q24                                              |         |           | DTC114EK       | DIGITAL TRANSISTOR          |             |         |
| D22       |         |           | MA110        | DIODE                           |             |         | Q25                                              |         |           | DTA144EU       | DIGITAL TRANSISTOR          |             |         |
| D22       |         |           | 1SS355       | DIODE                           |             |         | Q26                                              |         |           | DTC114EU       | DIGITAL TRANSISTOR          |             |         |
| D24       |         |           | M1809        | DIODE                           |             |         | Q201                                             |         |           | DTA144EK       | DIGITAL TRANSISTOR          |             |         |
| D201,202  |         |           | DAN202K      | DIODE                           |             |         | Q202                                             |         |           | DTC144EK       | DIGITAL TRANSISTOR          |             |         |
| D204      |         |           | DAN235K      | DIODE                           |             |         | Q204                                             |         |           | DTC144EK       | DIGITAL TRANSISTOR          |             |         |
| D205      |         |           | DAN202K      | DIODE                           |             |         | Q205                                             |         |           | 2SC3357        | TRANSISTOR                  |             |         |
| D206,207  |         |           | DA204K       | DIODE                           |             |         | Q206                                             |         |           | 2SC2954        | TRANSISTOR                  |             |         |
| D208-210  |         | *         | 1SV269       | DIODE                           |             |         | Q207                                             |         |           | SGM2014M       | TRANSISTOR                  |             |         |
| D211      |         |           | 1SV214       | DIODE                           |             |         | Q208                                             |         |           | 3SK241 (R)     | TRANSISTOR                  |             |         |
| D212      |         |           | MA110        | DIODE                           |             |         | Q209                                             |         |           | 2SC2059K (P)   | TRANSISTOR                  |             |         |
| D212      |         |           | 1SS355       | DIODE                           |             |         | Q210                                             |         |           | 2SC4116 (GR)   | TRANSISTOR                  | HK,HK2      |         |
| D213      |         |           | 1SV214       | DIODE                           |             |         | Q211                                             |         |           | DTC144EK       | DIGITAL TRANSISTOR          | HK,HK2      |         |
| D214      |         |           | DA204K       | DIODE                           | HK,HK2      |         | Q401                                             |         | *         | 2SC4081 (R)    | TRANSISTOR                  |             |         |
| D215      |         |           | 02CZ12 (X,Y) | DIODE                           | HK,HK2      |         | Q402                                             |         | *         | 2SJ203         | FET                         |             |         |
| D401,402  |         |           | DA204K       | DIODE                           |             |         | Q403                                             |         |           | DTC363EK       | DIGITAL TRANSISTOR          |             |         |
| D403      |         |           | DAN202U      | DIODE                           |             |         | Q404                                             |         |           | DTA114TK       | DIGITAL TRANSISTOR          |             |         |
| D404      |         |           | DA204K       | DIODE                           |             |         | Q405                                             |         |           | 2SB1132 (Q,R)  | TRANSISTOR                  |             | 760     |
| D405      |         |           | DA204K       | DIODE                           |             | 760     | Q406,407                                         |         |           | DTA114TK       | DIGITAL TRANSISTOR          |             |         |
| D406-411  |         | *         | B30-2140-05  | LED                             |             | 760     | Q408,409                                         |         |           | DTC144EK       | DIGITAL TRANSISTOR          |             |         |
| D412-415  |         | *         | B30-2151-05  | LED                             |             | 762     | Q410                                             |         |           | DTA114TK       | DIGITAL TRANSISTOR          |             |         |
| IC1       |         |           | BU4013BF     | IC (D TYPE FLIP FLOP X2)        |             |         | Q412-418                                         |         |           | DTA114EK       | DIGITAL TRANSISTOR          |             |         |
| IC2       |         |           | NJM4558M     | IC (OP AMP X2)                  |             |         | Q419                                             |         |           | DTA144EK       | DIGITAL TRANSISTOR          |             |         |
| IC3       |         |           | NJM78L05UA   | IC (VOLTAGE REGULATOR/ +5V)     |             |         | Q420                                             |         |           | DTC144EK       | DIGITAL TRANSISTOR          |             |         |
| IC4       |         |           | TA7808S      | IC (VOLTAGE REGULATOR/ +8V)     |             |         | A1                                               | 2B      | *         | X58-4360-10    | SUB UNIT (VCO)              | K,HK        |         |
| IC6       |         |           | M62363FP     | IC (8bit D/A CONVERTER)         |             |         | A1                                               | 2B      | *         | X58-4360-11    | SUB UNIT (VCO)              | K2,HK2      |         |
| IC7       |         |           | MC3372V      | IC (FM IF)                      |             |         | <b>VCO (X58-4360-XX) -10 : K,HK -11 : K2,HK2</b> |         |           |                |                             |             |         |
| IC8       |         |           | NJM2904M     | IC (OP AMP X2)                  |             |         | C1-3                                             |         |           | CK73GB1H102K   | CHIP C 1000PF               | K           |         |
| IC10      |         |           | BU4094BCF    | IC (8-STAGE SHIFT/STORE REGISTE |             |         | C4                                               |         |           | CC73GCH1H151J  | CHIP C 150PF                | J           | K,HK    |
| IC11      |         |           | LA4422       | IC (AF POWER AMP/ 5.8W)         |             |         | C4                                               |         |           | CC73GCH1H470J  | CHIP C 47PF                 | J           | K2,HK2  |
| IC13      |         |           | NJM2904M     | IC (OP AMP X2)                  |             |         | C5,6                                             |         |           | CC73GCH1H070D  | CHIP C 7.0PF                | D           | K2,HK2  |
| IC14      |         |           | TA75S01F     | IC (OP AMP)                     |             |         | C5,6                                             |         |           | CC73GCH1H120J  | CHIP C 12PF                 | J           | K,HK    |
| IC201     |         | *         | NJM78L09UA   | IC (VOLTAGE REGULATOR/ +9V)     |             |         | C7,8                                             |         |           | CK73GB1H102K   | CHIP C 1000PF               | K           |         |
| IC201     |         |           | TA78L09F     | IC (VOLTAGE REGULATOR/ +9V)     |             |         | C9                                               |         |           | CC73GCH1H060D  | CHIP C 6.0PF                | D           |         |
| IC202     |         | *         | MC145190F    | IC                              |             |         | C10                                              |         |           | CC73GCH1H040C  | CHIP C 4.0PF                | C           | K2,HK2  |
| IC401-403 |         |           | NJM4558E     | IC (OP AMP X2)                  |             |         | C10                                              |         |           | CC73GCH1H150J  | CHIP C 15PF                 | J           | K,HK    |
| IC404     |         |           | TA75S01F     | IC (OP AMP)                     |             |         |                                                  |         |           |                |                             |             |         |
| IC405,406 |         |           | NJM4558E     | IC (OP AMP X2)                  |             |         |                                                  |         |           |                |                             |             |         |

760 : TK-760 (K,K2,HK,HK2)

762 : TK-762 (K,K2,HK,HK2)

## PARTS LIST

VCO (X58-4360-XX)

| Ref. No. | Address | New parts | Parts No.     | Description                   | Destination | Remarks | Ref. No. | Address | New parts | Parts No.      | Description                | Destination | Remarks |
|----------|---------|-----------|---------------|-------------------------------|-------------|---------|----------|---------|-----------|----------------|----------------------------|-------------|---------|
| C11      |         |           | CC73GCH1H080D | CHIP C 6.0PF D                | K2,HK2      |         | R1       |         |           | RK73GB1J101J   | CHIP R 100 J 1/16W         |             |         |
| C11      |         |           | CC73GCH1H080D | CHIP C 8.0PF D                | K,HK        |         | R2       |         |           | RK73GB1J470J   | CHIP R 47 J 1/16W          |             |         |
| C12,13   |         |           | CK73GB1H102K  | CHIP C 1000P F                |             |         | R3       |         |           | RK73GB1J181J   | CHIP R 180 J 1/16W         |             |         |
| C14      |         |           | CC73GCH1H010C | CHIP C 1.0PF C                |             |         | R4       |         |           | RK73GB1J472J   | CHIP R 4.7K J 1/16W        |             |         |
| C15,16   |         |           | CK73GB1H102K  | CHIP C 1000PF K               |             |         | R5       |         |           | R92-1252-05    | CHIP R 0 OHM               |             |         |
| C17      |         |           | CK73GB1H103K  | CHIP C 0.010UF K              |             |         | R6       |         |           | RK73GB1J101J   | CHIP R 100 J 1/16W         |             |         |
| C18      |         |           | CC73GCH1H270J | CHIP C 27PF J                 | K2,HK2      |         | R7       |         |           | RK73GB1J183J   | CHIP R 18K J 1/16W         |             |         |
| C18      |         |           | CC73GCH1H560J | CHIP C 56PF J                 | K,HK        |         | R8       |         |           | RK73GB1J181J   | CHIP R 180 J 1/16W         |             |         |
| C20      |         |           | CC73GCH1H060D | CHIP C 6.0PF D                | K,HK        |         | R9       |         |           | RK73GB1J470J   | CHIP R 47 J 1/16W          |             |         |
| C20      |         |           | CC73GCH1H1R5C | CHIP C 1.5PF C                | K2,HK2      |         | R10      |         |           | RK73GB1J151J   | CHIP R 150 J 1/16W         | K,HK        |         |
| C21      |         |           | CK73GB1H103K  | CHIP C 0.010UF K              |             |         | R10      |         |           | RK73GB1J181J   | CHIP R 180 J 1/16W         | K2,HK2      |         |
| C22      |         |           | CK73GB1H102K  | CHIP C 1000PF K               |             |         | R11      |         |           | RK73GB1J473J   | CHIP R 47K J 1/16W         |             |         |
| C23      |         |           | CK73GB1H103K  | CHIP C 0.010UF K              |             |         | R12      |         |           | RK73GB1J103J   | CHIP R 10K J 1/16W         |             |         |
| C24      |         |           | CC73GCH1H020C | CHIP C 2.0PF C                |             |         | R13      |         |           | RK73GB1J101J   | CHIP R 100 J 1/16W         |             |         |
| C25      |         |           | CC73GCH1H150J | CHIP C 15PF J                 |             |         | R14      |         |           | RK73GB1J390J   | CHIP R 39 J 1/16W          |             |         |
| C27      |         |           | CK73GB1H102K  | CHIP C 1000PF K               |             |         | R15      |         |           | R92-0670-05    | CHIP R 0 OHM               |             |         |
| CN1      |         | *         | E40-5915-05   | PIN CONNECTOR FOR INSIDE (6P) |             |         | D1-4     |         | *         | 1SV269         | VARIABLE CAPACITANCE DIODE |             |         |
| -        |         | *         | F10-2204-04   | SHIELDING CASE                |             |         | Q1       |         |           | UMG1           | TRANSISTOR                 |             |         |
| L1,2     |         |           | L33-1268-05   | CHOKE COIL (10UH)             |             |         | Q2       |         |           | 2SK508NV (K52) | FET                        |             |         |
| L3       |         |           | L34-4449-05   | COIL                          | K2,HK2      |         | Q3       |         |           | 2SC4215 (Y)    | TRANSISTOR                 |             |         |
| L3       |         | *         | L34-4485-05   | COIL                          | K,HK        |         | Q4       |         |           | DTC114EU       | DIGITAL TRANSISTOR         |             |         |
| L4-8     |         |           | L33-1268-05   | CHOKE COIL (10UH)             |             |         | Q5       |         |           | 2SK508NV (K52) | FET                        |             |         |
| L9       |         | *         | L34-4429-05   | COIL                          | K,HK        |         |          |         |           |                |                            |             |         |
| L9       |         | *         | L34-4484-05   | COIL                          | K2,HK2      |         |          |         |           |                |                            |             |         |
| L10      |         |           | L40-1081-34   | SMALL FIXED INDUCTOR (100NH)  |             |         |          |         |           |                |                            |             |         |

760 : TK-760 (K,K2,HK,HK2)

762 : TK-762 (K,K2,HK,HK2)