



EXPLODED VIEW (CD MECHANISM)

- A : N09-6108-15
 B : N09-6426-15
 C : N09-6735-05
 D : N09-6737-15
 E : N09-6738-15
 F : N19-2335-14
 G : N35-2003-48
 H : N39-1720-48

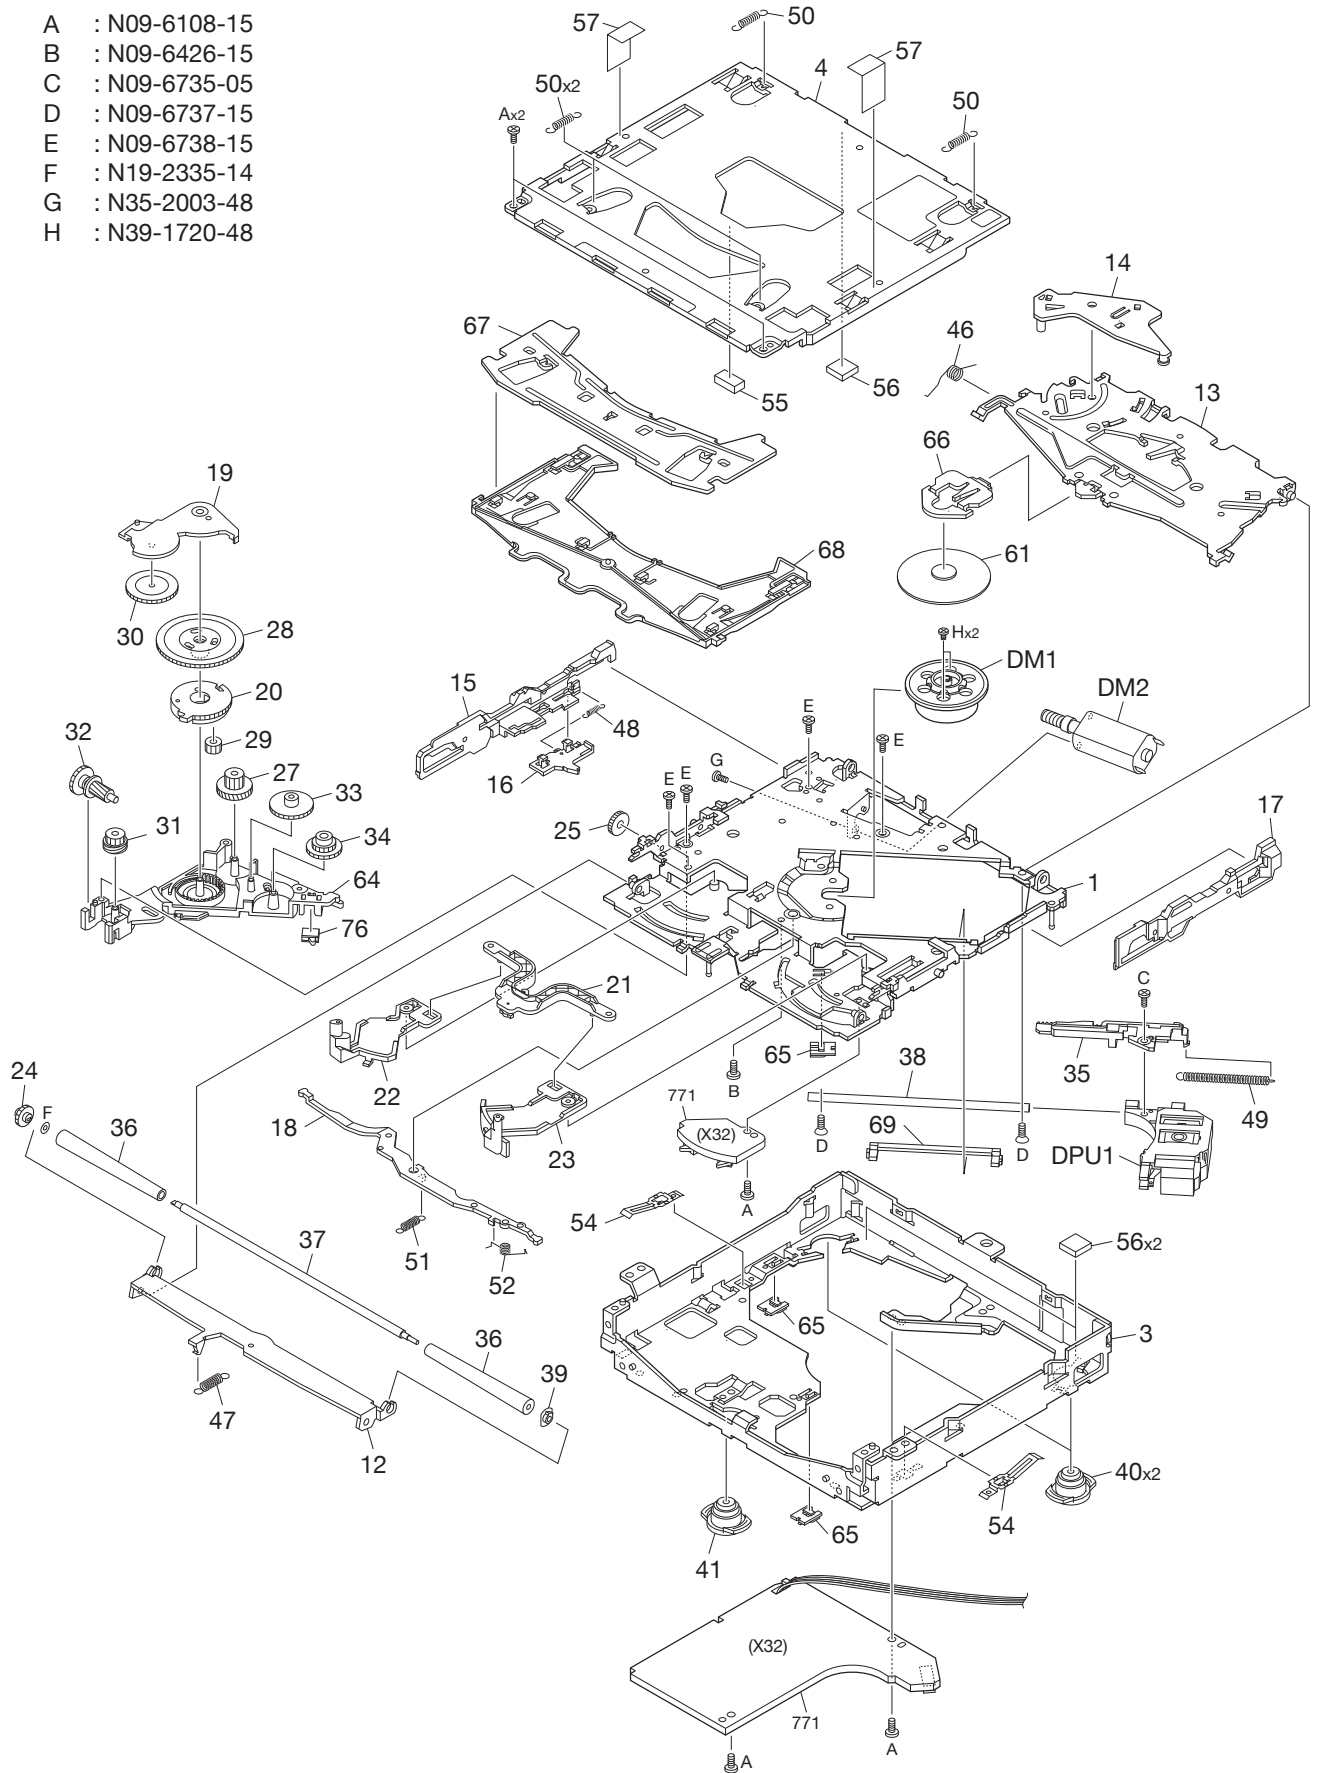

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

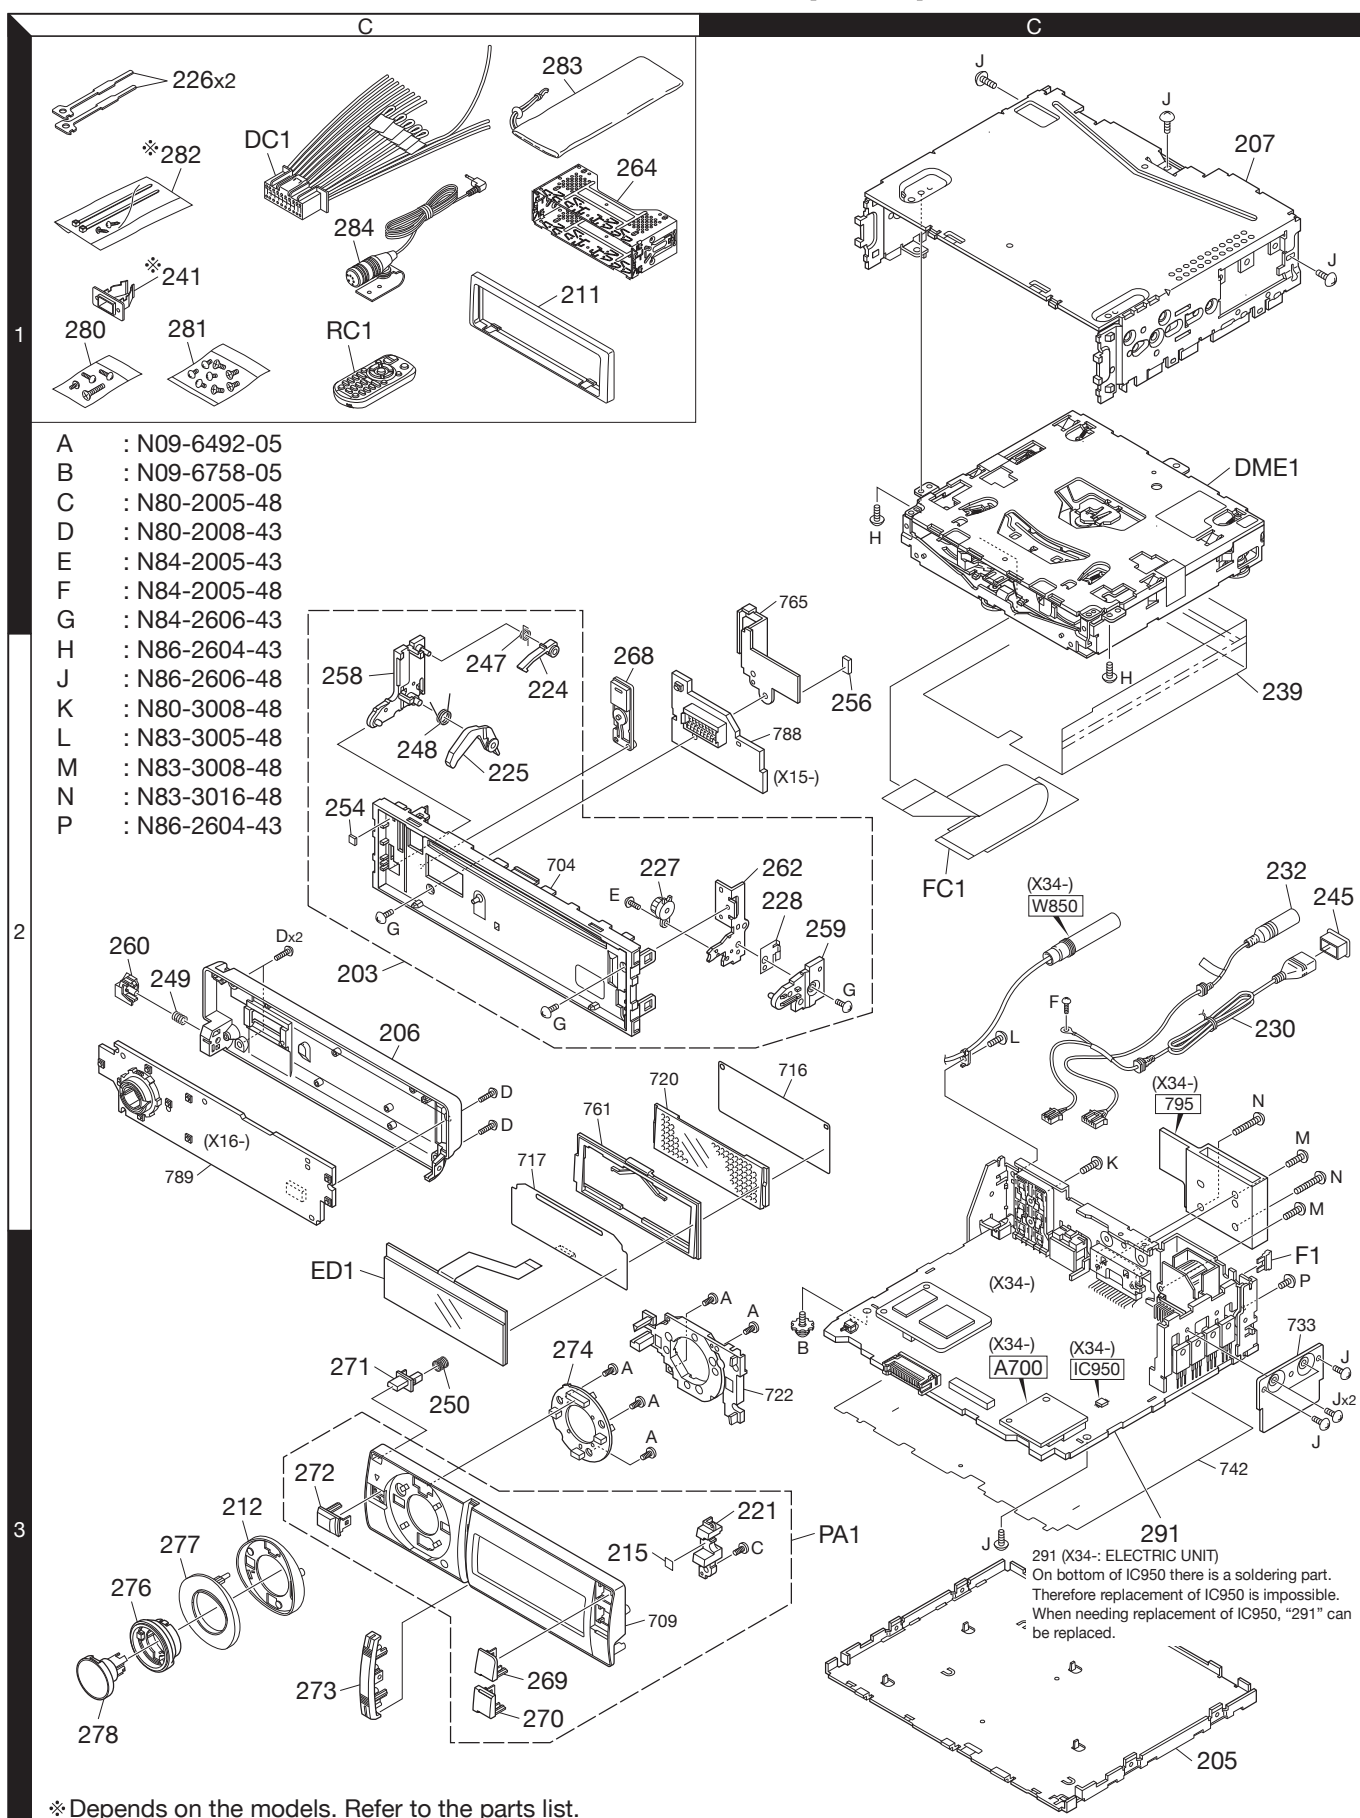

* Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-BT948HD/X995					
203	2C		A22-3218-02	SUB PANEL ASSY	
205	3D	*	A40-1414-02	BOTTOM PLATE	
206	2C		A46-1905-01	REAR COVER	
207	1D		A52-1111-01	TOP COVER	
PA1	3D	*	A64-5251-01	PANEL ASSY	K
PA1	3D	*	A64-5252-01	PANEL ASSY	K1
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-405)	
-		*	B59-2060-00	SUB-INST. MANUAL (ENG.FRE.SPA.)	
211	1C		B07-3235-03	ESCUTCHEON (ACCESSORY)	K
211	1C		B07-3304-03	ESCUTCHEON (ACCESSORY)	K1
212	3C		B07-3338-03	ESCUTCHEON (NEMU)	
215	3C		B11-2016-04	REFLECTION SHEET	
221	3D		B19-2562-03	LIGHTING BOARD (R)	
ED1	3C		B38-1224-05	LCD (240 X 64 DOTS)	
224	2C		D10-4730-03	LEVER (LOCK)	
225	2C		D10-4731-03	LEVER (PUSH)	
226	1C		D10-7106-04	LEVER (ACCESSORY)	
227	2C		D39-0255-05	DAMPER	
228	2D	*	E29-2136-04	LEAD PLATE	
230	2D	*	E30-8215-05	CORD WITH CONNECTOR (USB)	
232	2D		E30-6907-05	CORD WITH CONNECTOR (MIC)	
DC1	1C		E30-6939-05	DC CORD	
FC1	2D	*	E39-1215-05	FLAT CABLE	
239	2D		F11-1874-03	SHIELDING COVER (DUST)	
241	1C		F19-1475-04	COVER (USB KIT)	K
245	2D		F29-0637-04	INSULATING COVER (USB CAP)	
F1	3D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
247	2C		G01-3171-04	TORSION COIL SPRING (LOCK)	
248	2C		G01-3172-04	TORSION COIL SPRING (PUSH)	
249	2C		G01-3173-04	COMPRESSION SPRING (REAR COVER)	
250	3C		G01-3203-04	COMPRESSION SPRING (RELEASE)	
254	2C		G13-1267-04	CUSHION	
256	2D		G13-1309-04	CUSHION (X15)	
-		*	H54-5073-03	ITEM CARTON CASE	K
-		*	H54-5074-03	ITEM CARTON CASE	K1
258	2C		J19-5203-03	HOLDER (LEFT)	
259	2D		J19-5204-03	HOLDER (RIGHT)	
260	2C		J19-5205-03	HOLDER (REAR COVER)	
262	2D		J21-9977-03	MOUNTING HARDWARE (DUMPER BASE)	
264	1C		J22-0789-03	MOUNTING HARDWARE ASSY	
268	2C		K24-4995-03	PUSH KNOB (EJECT)	
269	3C		K24-5057-13	PUSH KNOB (SEARCH MODE)	K
269	3C		K24-5058-13	PUSH KNOB (SEARCH MODE)	K1
270	3C	*	K24-5123-03	PUSH KNOB (TEL)	K
270	3C	*	K24-5124-03	PUSH KNOB (TEL)	K1
271	3C		K24-5062-04	PUSH KNOB (RELEASE)	
272	3C		K24-5068-03	PUSH KNOB (SRC)	
273	3C		K25-1988-03	PUSH KNOB (DISP/SCRL)	
274	3C		K28-0403-13	KNOB BASE (NEMU)	
276	3C		K28-0407-14	KNOB ASSY (VOL)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
277	3C		K28-0418-03	KEY TOP (MENU)	
278	3C		K28-0422-14	KNOB ASSY (KENWOOD)	
280	1C		N99-1730-35	SCREW SET (4-SCREW)	
281	1C		N99-1757-15	SCREW SET (8-SCREW)	
282	1C		N99-1790-05	SCREW SET (2-SCREW)	K
A	3C		N09-6492-05	TAPTITE SCREW	
B	3D		N09-6758-05	TAPTITE SCREW	
C	3D		N80-2005-48	PAN HEAD TAPTITE SCREW	
D	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
F	2D		N84-2005-48	PAN HEAD TAPTITE SCREW	
G	2C		N84-2606-43	PAN HEAD TAPTITE SCREW	
H	1D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
J	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
283	1C		W01-1664-05	CARRYING CASE (EXCELON)	K
283	1C		W01-1710-05	CARRYING CASE	K1
284	1C		W01-1768-15	MICROPHONE (3m)	
291	3D	*	X34-7010-10	ELECTRIC UNIT (For IC950)	K
291	3D	*	X34-7010-11	ELECTRIC UNIT (For IC950)	K1
DME1	1D	*	X92-6370-04	MECHANISM ASSY (DXM-9B24W)	
DISPLAY UNIT (X15-1220-10)					
D1			B30-1779-05	LED (1608,SR)	
CN1			E41-2984-05	PIN ASSY	
J1			E58-1008-05	RECTANGULAR RECEPTACLE	
R1			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R2			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R3 ,4			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R5 -8			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R9 ,10			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R11			RK73FB2B331J	CHIP R 330 J 1/8W	
S1			S70-0901-05	TACT SWITCH	
S2			S70-0948-05	TACT SWITCH	
SWITCH UNIT (X16-7170-10)					
D1			B30-1566-05	LED (1608,RED)	
D21 ,22			B30-1784-05	LED (RGB SIDE)	
C31			CK73GB1A105K	CHIP C 1.0UF K	
C59			CK73GB1H103K	CHIP C 0.010UF K	
C60			CK73GB1H104K	CHIP C 0.10UF K	
C61			CK73GB0J475K	CHIP C 4.7UF K	
C63			CK73GB0J475K	CHIP C 4.7UF K	
C65 ,66			CK73GB1A105K	CHIP C 1.0UF K	
C110			CK73GB1H103K	CHIP C 0.010UF K	
C114			CK73GB1H103K	CHIP C 0.010UF K	
C160			CK73GB1H103K	CHIP C 0.010UF K	
C197			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-3094-05	FLAT CABLE CONNECTOR	
J1			E59-0850-05	RECTANGULAR PLUG	
X1			L78-1409-05	RESONATOR (8MHZ)	
CP51			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	

K: KDC-X995 K1: KDC-BT948HD

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-7170-10)

Ref. No.	Ad	New	Parts No.	Description	Destination
CP101 CP102 CP103 CP104,105 CP106			RK74HB1J101J RK74HB1J473J RK74HB1J332J RK74HB1J331J RK74HB1J332J	CHIP-COM 100 J 1/16W CHIP-COM 47K J 1/16W CHIP-COM 3.3K J 1/16W CHIP-COM 330 J 1/16W CHIP-COM 3.3K J 1/16W	
R1 R2 R3 R4 R5			RK73GB2A151J RK73EB2E391J RK73EB2E201J RK73EB2E431J RK73EB2E561J	CHIP R 150 J 1/10W CHIP R 390 J 1/4W CHIP R 200 J 1/4W CHIP R 430 J 1/4W CHIP R 560 J 1/4W	
R6 R7 R8 R9 R10			RK73EB2E361J RK73EB2E751J RK73EB2E561J RK73EB2E361J RK73EB2E751J	CHIP R 360 J 1/4W CHIP R 750 J 1/4W CHIP R 560 J 1/4W CHIP R 360 J 1/4W CHIP R 750 J 1/4W	
R11 ,12 R13 R14 ,15 R21 R22			RK73GB2A222J RK73GB2A000J RK73GB2A473J RK73EB2E181J RK73EB2E361J	CHIP R 2.2K J 1/10W CHIP R 0.0 J 1/10W CHIP R 47K J 1/10W CHIP R 180 J 1/4W CHIP R 360 J 1/4W	
R23 R31 ,32 R56 R60 R107			RK73EB2E561J RK73GB2A101J RK73GB2A102J RK73GB2A106J RK73GB2A103J	CHIP R 560 J 1/4W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 10M J 1/10W CHIP R 10K J 1/10W	
R109 R110 R111 R113 R174			RK73GB2A102J RK73GB2A473J RK73GB2A102J RK73GB2A105J RK73GB2A473J	CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0M J 1/10W CHIP R 47K J 1/10W	
S2 -11			S70-0960-05	TACT SWITCH	
S1			T99-0488-05	ROTARY ENCODER	
D3 -6 D23 IC1 IC3 IC6		*	NSSM065T-X RB521S-30 W05-1668-00 PIC95603 S-1112B32MCG	LIGHT EMITTING DIODE DIODE MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC	
Q1 Q3 ,4 Q5 -7 Q8 Q21 -23			RT1N237M-T111 2SC4081 RT1N237M-T111 RT1N436M-T111 RT1N237M-T111	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	

CD PLAYER UNIT (X32-6250-02) IN CD MECHA

C1 C3 C4 C6 C8			CK73FB0J106K CC73GCH1H680J CK73GB1A105K CK73FB1C105K CK73GB1H222K	CHIP C 10UF K CHIP C 68PF J CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 2200PF K	
C9 ,10 C11 C12 C13 C14			CK73GB1C104K CK73GB1H153K CK73GB1C104K CK73GB1H332K CK73GB1H103K	CHIP C 0.10UF K CHIP C 0.015UF K CHIP C 0.10UF K CHIP C 3300PF K CHIP C 0.010UF K	

Ref. No.	Ad	New	Parts No.	Description	Destination
C15 C16 C18 C19 C20			CK73GB1C333K CK73GB1C104K CK73GB1H153K CK73GB1H103K CK73GB1C104K	CHIP C 0.033UF K CHIP C 0.10UF K CHIP C 0.015UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C22 C23 C24 C25 C26			CK73GB1H103K CK73GB1H153K CC73GCH1H470J CK73GB1C104K CK73GB1A105K	CHIP C 0.010UF K CHIP C 0.015UF K CHIP C 47PF J CHIP C 0.10UF K CHIP C 1.0UF K	
C27 C29 ,30 C31 C36 C41 ,42			CK73GB1C104K CK73GB1C104K CK73GB1A105K CK73GB1A105K CK73GB1C104K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.10UF K	
C43 ,44 C45 C46 C47 C48			CK73GB1H102K CK73GB1H103K CK73GB1A105K CC73GCH1H560J CC73GCH1H101J	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 56PF J CHIP C 100PF J	
C49 C50 C51 C54 C57			CK73GB1A105K CK73FB1A225K CK73FB0J106K CK73FB0J106K CK73GB1C104K	CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 10UF K CHIP C 10UF K CHIP C 0.10UF K	
C59 C61 C101 C103			CK73GB1H472K CK73GB1C104K CK73GB1A105K CK73GB1C104K	CHIP C 4700PF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K	
CN1 CN2			E41-2954-05 E41-2630-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7 R1 R2 R3 R4			RK74GB1J103J RK73GB2A560J RK73GB2A472J RK73GB2A4R7J RK73GB2A104J	CHIP-COM 10K J 1/16W CHIP R 56 J 1/10W CHIP R 4.7K J 1/10W CHIP R 4.7 J 1/10W CHIP R 100K J 1/10W	
R5 R6 R7 R8 R9			RK73GB2A225J RK73GB2A102J RK73GB2A221J RK73GB2A622J RK73GB2A913J	CHIP R 2.2M J 1/10W CHIP R 1.0K J 1/10W CHIP R 220 J 1/10W CHIP R 6.2K J 1/10W CHIP R 91K J 1/10W	
R10 R11 R13 R14 R15			RK73GB2A334J RK73GB2A153J RK73GB2A104J RK73GB2A103J RK73GB2A101J	CHIP R 330K J 1/10W CHIP R 15K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W	
R17 ,18 R25 R27 R39 R40			RK73GB2A103J RK73GB2A103J RK73EB2E4R7J RK73GB2A105J RK73GB2A681J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 4.7 J 1/4W CHIP R 1.0M J 1/10W CHIP R 680 J 1/10W	
R43 ,44			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	

K: KDC-X995 K1: KDC-BT948HD

△Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6250-02) IN CD MECHA

Ref. No.	Add	New	Parts No.	Description	Destination
R49			RK73GB2A393J	CHIP R 39K J 1/10W	
R50			RK73GB2A363J	CHIP R 36K J 1/10W	
R51			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R52 -58			RK73GB2A101J	CHIP R 100 J 1/10W	
R59			RK73GB2A204J	CHIP R 200K J 1/10W	
R64			RK73GB2A223J	CHIP R 22K J 1/10W	
R65			RK73GB2A333J	CHIP R 33K J 1/10W	
R69 -73			RK73GB2A101J	CHIP R 100 J 1/10W	
R74 ,75			RK73GB2A103J	CHIP R 10K J 1/10W	
R76			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R102			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1 ,2			S68-0924-05	PUSH SWITCH	
D2			DAP202U	DIODE	
D3 ,4			DA204U	DIODE	
IC3			BD8222EFV	ANALOGUE IC	
IC4			JCV8023	MOS-IC	
IC5			XC6415S001P1	MOS-IC	
Q1		*	2SA2188-T1(E)	TRANSISTOR	
Q14			RUE003N02	FET	
ELECTRIC UNIT (X34-7010-1x)					
C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV	K1
C1			C90-6784-05	ELECTRO 3900UF 16WV	K
C10			CK73GB1H102K	CHIP C 1000PF K	
C11			CK73GB1A105K	CHIP C 1.0UF K	
C12			CC73HCH1H470J	CHIP C 47PF J	
C14			CD04AY1A221M	ELECTRO 220UF 10WV	
C20 ,21			CK73GB1A105K	CHIP C 1.0UF K	
C30			CD04AJ1C101M	ELECTRO 100UF 16WV	
C31			CK73FB0J106K	CHIP C 10UF K	
C33			C90-6851-05	ELECTRO 220UF 25WV	
C35			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C36 ,37			CK73GB1A105K	CHIP C 1.0UF K	
C38 ,39			CK73GB1H103K	CHIP C 0.010UF K	
C40		*	CD04BM1A220M	ELECTRO 22UF 10WV	
C41			CK73GB1C104K	CHIP C 0.10UF K	
C50		*	CD04BM1C220M	ELECTRO 22UF 16WV	
C52			CK73HB1C473K	CHIP C 0.047UF K	
C60			CK73FB0J226M	CHIP C 22UF M	
C62			CK73GB1C104K	CHIP C 0.10UF K	
C63			CK73EB1H475K	CHIP C 4.7UF K	
C64			CK73GB1H104K	CHIP C 0.10UF K	
C66			CC73GCH1H471J	CHIP C 470PF J	
C67			CC73HCH1H270J	CHIP C 27PF J	
C68			CK73GB1H222K	CHIP C 2200PF K	
C69			CC73GCH1H471J	CHIP C 470PF J	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73GB1A105K	CHIP C 1.0UF K	
C81 ,82			CK73HB1H102K	CHIP C 1000PF K	
C83			CD04BM1C100M	ELECTRO 10UF 16WV	
C84		*	CD04BM1C220M	ELECTRO 22UF 16WV	
C92			CK73GB1H103K	CHIP C 0.010UF K	
C110			CK73GB1H104K	CHIP C 0.10UF K	
C111			CK73GB1A105K	CHIP C 1.0UF K	
C112			CK73FB1A335K	CHIP C 3.3UF K	
C131			CK73GB1A105K	CHIP C 1.0UF K	
C132			CK73GB1H223K	CHIP C 0.022UF K	
C133			CK73GB1H104K	CHIP C 0.10UF K	
C140			CK73GB1A105K	CHIP C 1.0UF K	
C148			CK73HB1A104K	CHIP C 0.10UF K	
C149		*	CD04BR1C221M	ELECTRO 220UF 16WV	
C150			CC73GCH1H040C	CHIP C 4.0PF C	
C204			CK73GB1A105K	CHIP C 1.0UF K	
C206			CD04BA1E330M	ELECTRO 33UF 25WV	
C210-213			CK73GB1C224K	CHIP C 0.22UF K	K1
C217			CK73FB1C105K	CHIP C 1.0UF K	K1
C222			CK73GB1A105K	CHIP C 1.0UF K	
C230			C90-6765-05	ELECTRO 1UF 16WV	K
C231-234			C90-6768-05	ELECTRO 0.22UF 16WV	K
C240,241			CK73GB1A105K	CHIP C 1.0UF K	
C242-247			CK73GB1H103K	CHIP C 0.010UF K	
C250			CD04AS1V100M	ELECTRO 10UF 35WV	
C251			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C252			CK73GB0J225K	CHIP C 2.2UF K	
C253			CK73HB1E103K	CHIP C 0.010UF K	
C254-256			CK73GB1H103K	CHIP C 0.010UF K	
C257			CC73HCH1H120J	CHIP C 12PF J	
C259			CC73HCH1H120J	CHIP C 12PF J	
C270			CK73GB1A105K	CHIP C 1.0UF K	
C271			CK73GB1A474K	CHIP C 0.47UF K	
C272			CK73GB1A105K	CHIP C 1.0UF K	
C273			CK73GB1A474K	CHIP C 0.47UF K	
C274			CK73GB1A105K	CHIP C 1.0UF K	
C275,276			CK73GB1C104K	CHIP C 0.10UF K	
C279,280			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C281,282			CK73GB1A105K	CHIP C 1.0UF K	
C287			CK73GB1H103K	CHIP C 0.010UF K	
C288			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C290-295			CK73GB1A105K	CHIP C 1.0UF K	
C296			CD04AS1C470M	ELECTRO 47UF 16WV	
C400,401			CK73GB1A105K	CHIP C 1.0UF K	
C402			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C404			CK73HB1E103K	CHIP C 0.010UF K	
C440,441			CD04AS1V100M	ELECTRO 10UF 35WV	
C450,451			CD04AS1V100M	ELECTRO 10UF 35WV	
C460,461			CD04AS1V100M	ELECTRO 10UF 35WV	
C470,471			CK73GB1A105K	CHIP C 1.0UF K	
C472			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C500			CK73HB1A104K	CHIP C 0.10UF K	
C501-503			CK73HB1E103K	CHIP C 0.010UF K	
C506			CK73HB1E103K	CHIP C 0.010UF K	
C508			CK73HB1E103K	CHIP C 0.010UF K	
C509			CC73HCH1H220J	CHIP C 22PF J	
C510			CC73HCH1H180J	CHIP C 18PF J	
C511,512			CK73GB1H103K	CHIP C 0.010UF K	
C513,514			CC73HCH1H080D	CHIP C 8.0PF D	
C515			CK73HB1E103K	CHIP C 0.010UF K	
C516			CK73HB1A104K	CHIP C 0.10UF K	
C518			CK73HB1E103K	CHIP C 0.010UF K	

K: KDC-X995 K1: KDC-BT948HD

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-7010-1x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C522 C523,524 C525 C650 C704			CK73HB1H102K CC73GCH1H101J CK73GB1A105K CC73GCH1H030C CK73HB1A104K	CHIP C 1000PF K CHIP C 100PF J CHIP C 1.0UF K CHIP C 3.0PF C CHIP C 0.10UF K	
C706 C707,708 C710,711 C712 C713			CK73FB0J106K CC73HCH1H101J CK73GB1C104K CD04AS1V100M CK73GB1C104K	CHIP C 10UF K CHIP C 100PF J CHIP C 0.10UF K ELECTRO 10UF 35WV CHIP C 0.10UF K	
C716 C722 C802 C803,804 C805		*	C90-6989-05 CK73GB1C104K CC73HCH1H330J CK73HB1H102K CC73HCH1H060D	ELECTRO 330UF 6.3WV CHIP C 0.10UF K CHIP C 33PF J CHIP C 1000PF K CHIP C 6.0PF D	
C806 C808 C809 C810 C812			CC73HCH1H470J CC73HCH1H040C CK73HB1H102K CC73HCH1H120J CK73HB1E103K	CHIP C 47PF J CHIP C 4.0PF C CHIP C 1000PF K CHIP C 12PF J CHIP C 0.010UF K	
C813 C814 C817 C819,820 C821			CC73GCH1H020C CK73HB1H102K CK73HB1E103K CK73HB1A104K CK73HB1E103K	CHIP C 2.0PF C CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C822 C823,824 C825 C826 C827			CK73FB0J106K CK73HB1E103K CK73HB1A104K CK73GB1A105K CK73HB1E103K	CHIP C 10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.010UF K	
C828 C829 C830 C831 C832			CK73HB0J224K CK73FB0J106K CK73GB1H104K CC73HCH1H101J CK73HB1A104K	CHIP C 0.22UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 0.10UF K	
C833 C834 C835 C836 C837			CK73GB1A105K CK73GB1H472K CK73GB1H104K CK73GB1H472K CK73HB1E103K	CHIP C 1.0UF K CHIP C 4700PF K CHIP C 0.10UF K CHIP C 4700PF K CHIP C 0.010UF K	
C838 C839 C840 C841 C842			CK73HB0J105K CC73HCH1H820J CK73HB1A104K CC73HCH1H100D CK73GB1A474K	CHIP C 1.0UF K CHIP C 82PF J CHIP C 0.10UF K CHIP C 10PF D CHIP C 0.47UF K	
C843,844 C845 C846 C847,848 C849			CK73HB1E103K CC73HCH1H100D CK73HB1H102K CK73GB1C104K CK73GB0J225K	CHIP C 0.010UF K CHIP C 10PF D CHIP C 1000PF K CHIP C 0.10UF K CHIP C 2.2UF K	
C850 C851 C852 C853 C864			CK73GB1C104K CK73GB1A105K CK73GB0J225K CK73GB1C104K CK73GB1C104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 0.10UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C865 C866 C883 C901 C910			CD04AS1V100M CK73GB1H103K CK73HB1E103K CK73HB1E103K CK73GB1H103K	ELECTRO 10UF 35WV CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K	
C911 C912 C913 C914 C950			CD04AS1V100M CK73GB1H103K CD04AS1V100M CC73GCH1H040C CC73HCH1H471J	ELECTRO 10UF 35WV CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 4.0PF C CHIP C 470PF J	
C951 C953 C955 C956 C970,971			CK73EB1H475K CC73HCH1H151J CK73GB1C104K CK73FB0J226M CK73GB1A105K	CHIP C 4.7UF K CHIP C 150PF J CHIP C 0.10UF K CHIP C 22UF M CHIP C 1.0UF K	
C980 C981		*	CK73GB1A334K CD04BR1E220M	CHIP C 0.33UF K ELECTRO 22UF 25WV	
CN140 CN150 CN650 CN700 CN701			E41-1701-05 E41-1828-05 E40-9747-05 E41-3043-05 E41-1699-05	PIN ASSY FLAT CABLE CONNECTOR PIN ASSY PIN ASSY PIN ASSY	
△ J1 J400 J420 J470 W850		2D	E58-0991-05 E56-0855-05 E63-0972-05 E11-0625-05 E30-6803-05	RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE PIN JACK PHONE JACK CORD WITH PLUG	
F40			F53-0406-05	FUSE (UL,CSA) (2.5A)	
△ L1 L30 L60 L61 ,62 L700			L33-2365-05 L40-4791-58 L33-2462-05 L92-0639-05 L92-0662-05	CHOKE COIL ASSY SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (22UH) CHIP FERRITE CHIP FERRITE	
L801 L802 L803 L804 L805		*	L41-1005-33 L41-1585-60 L41-3385-60 L40-4781-86 L40-2281-86	SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (0.47UH) SMALL FIXED INDUCTOR (0.22UH)	
L806 L809-812 L813 L814-819 L820			L40-1891-86 L92-0331-05 L41-4705-33 L92-0331-05 L41-1095-33	SMALL FIXED INDUCTOR (1.8UH) CHIP FERRITE SMALL FIXED INDUCTOR CHIP FERRITE SMALL FIXED INDUCTOR (1UH)	
L950,951 L953 L954 L955 X240			L92-0639-05 L33-2462-05 L92-0639-05 L92-0609-05 L77-3810-05	CHIP FERRITE SMALL FIXED INDUCTOR (22UH) CHIP FERRITE CHIP FERRITE CRYSTAL RESONATOR (11.2896MHZ)	
X500 X501 X801		*	L77-2921-15 L77-3846-05 NAX1117-001X	CRYSTAL RESONATOR (32.768KHZ) CRYSTAL RESONATOR (12MHZ) CRYSTAL RESONATOR	
K L	2D 2D		N80-3008-48 N83-3005-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW	

K: KDC-X995 K1: KDC-BT948HD

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-7010-1x)

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation	Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
M	2D		N83-3008-48	PAN HEAD TAPTITE SCREW		R131			RK73GB2A123J	CHIP R 12K J 1/10W	
N	2D		N83-3016-48	PAN HEAD TAPTITE SCREW		R132			RK73GB2A683J	CHIP R 68K J 1/10W	
P	3D		N86-2604-43	BINDING HEAD TAPTITE SCREW		R133			RK73GB2A103J	CHIP R 10K J 1/10W	
CP502,503			RK74HB1J101J	CHIP-COM 100 J 1/16W		R141,142			RK73GB2A180J	CHIP R 18 J 1/10W	
CP508			RK74GA1J472J	CHIP-COM 4.7K J 1/16W		R150			RK73GB2A100J	CHIP R 10 J 1/10W	
R1			RK73EB2E102J	CHIP R 1.0K J 1/4W		R151			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R2			RK73EB2E103J	CHIP R 10K J 1/4W		R152			RK73HB1J101J	CHIP R 100 J 1/16W	
R3			RK73EB2E471J	CHIP R 470 J 1/4W		R153			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R10			RK73GB2A103J	CHIP R 10K J 1/10W		R154			RK73HB1J101J	CHIP R 100 J 1/16W	
R11			RK73FB2B152J	CHIP R 1.5K J 1/8W		R155,156			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R12			RK73FB2B201J	CHIP R 200 J 1/8W		R157			RK73HB1J223J	CHIP R 22K J 1/16W	
R13			RK73FB2B4R7J	CHIP R 4.7 J 1/8W		R158,159			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R14			RK73FB2B561J	CHIP R 560 J 1/8W		R201			RK73HB1J333J	CHIP R 33K J 1/16W	
R15			RK73GH2A362D	CHIP R 3.6K D 1/10W		R202			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R16			RK73GH2A562D	CHIP R 5.6K D 1/10W		R207			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R17			RK73FB2B432J	CHIP R 4.3K J 1/8W		R208			RK73GB2A100JH	CHIP R 10 J 1/10W	
R22			RK73GB2A1R0J	CHIP R 1.0 J 1/10W		R209			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R30			RK73GB2A822J	CHIP R 8.2K J 1/10W		R210			RK73GB2A221J	CHIP R 220 J 1/10W	
R31			RK73HB1J223J	CHIP R 22K J 1/16W		R212			RK73HB1J223J	CHIP R 22K J 1/16W	
R33			RK73FB2B123J	CHIP R 12K J 1/8W		R213			RK73GB2A433J	CHIP R 43K J 1/10W	
R41			RK73FB2B152J	CHIP R 1.5K J 1/8W		R240			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R52			RK73FB2B272J	CHIP R 2.7K J 1/8W		R242-247			RK73GB2A101JH	CHIP R 100 J 1/10W	
R61			RK73GH2A273D	CHIP R 27K D 1/10W		R248			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R62			RK73GH2A623D	CHIP R 62K D 1/10W		R249			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R63			RK73HB1J473J	CHIP R 47K J 1/16W		R254-256			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R64			RK73GH2A153D	CHIP R 15K D 1/10W		R270			RK73GB2A103J	CHIP R 10K J 1/10W	
R65			RK73GB2A152J	CHIP R 1.5K J 1/10W		R276			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R66			R92-5244-05	CHIP R 0.039		R400,401			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R67			RK73GB2A752J	CHIP R 7.5K J 1/10W		R402			RK73EB2E473J	CHIP R 47K J 1/4W	
R70			RK73EB2E330J	CHIP R 33 J 1/4W		R403			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R71,72			RK73EB2E470J	CHIP R 47 J 1/4W		R404			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R76			RK73HB1J223J	CHIP R 22K J 1/16W		R405			RK73EB2E101J	CHIP R 100 J 1/4W	
R77			RK73HB1J101J	CHIP R 100 J 1/16W		R406,407			RK73EB2E100J	CHIP R 10 J 1/4W	
R83			RK73HB1J362J	CHIP R 3.6K J 1/16W		R408			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R84			RK73HB1J432J	CHIP R 4.3K J 1/16W		R409			RK73EB2E473J	CHIP R 47K J 1/4W	
R85			RK73HB1J562J	CHIP R 5.6K J 1/16W		R410			RK73EB2E101J	CHIP R 100 J 1/4W	
R86			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		R415			RK73GB2A683J	CHIP R 68K J 1/10W	
R87			RK73FB2B102J	CHIP R 1.0K J 1/8W		R416			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R90,91			RK73GB2A103J	CHIP R 10K J 1/10W		R417			RK73HB1J683J	CHIP R 68K J 1/16W	
R96			RK73GB2A183J	CHIP R 18K J 1/10W		R424			RK73HB1J473J	CHIP R 47K J 1/16W	
R97			RK73GB2A104J	CHIP R 100K J 1/10W		R425			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R98			RK73FB2B203J	CHIP R 20K J 1/8W		R440,441			RK73GB2A331J	CHIP R 330 J 1/10W	
R99			RK73EB2E473J	CHIP R 47K J 1/4W		R442,443			RK73GB2A223J	CHIP R 22K J 1/10W	
R100			RK73FB2B683J	CHIP R 68K J 1/8W		R444,445			RK73FB2B181J	CHIP R 180 J 1/8W	
R101			RK73GB2A473J	CHIP R 47K J 1/10W		R450,451			RK73GB2A331J	CHIP R 330 J 1/10W	
R102-104			RK73EB2E102J	CHIP R 1.0K J 1/4W		R452,453			RK73GB2A223J	CHIP R 22K J 1/10W	
R110,111			RK73PB2H561J	CHIP R 560 J 1/2W		R454,455			RK73FB2B181J	CHIP R 180 J 1/8W	
R112			RK73GB2A223J	CHIP R 22K J 1/10W		R460,461			RK73GB2A331J	CHIP R 330 J 1/10W	
R113,114			RK73PB2H561J	CHIP R 560 J 1/2W		R462,463			RK73GB2A223J	CHIP R 22K J 1/10W	
R115			RK73FB2B472J	CHIP R 4.7K J 1/8W		R464,465			RK73FB2B181J	CHIP R 180 J 1/8W	
R116			RK73GB2A471J	CHIP R 470 J 1/10W		R470,471			RK73EB2E101J	CHIP R 100 J 1/4W	
R118,119			RK73PB2H221J	CHIP R 220 J 1/2W		R472,473			RK73GB2A123J	CHIP R 12K J 1/10W	
R120			RK73FB2B472J	CHIP R 4.7K J 1/8W		R474			RK73EB2E470J	CHIP R 47 J 1/4W	
R130			RK73GB2A104J	CHIP R 100K J 1/10W		R475			RK73GB2A102J	CHIP R 1.0K J 1/10W	
						R500			RK73HB1J473J	CHIP R 47K J 1/16W	

K: KDC-X995 K1: KDC-BT948HD

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-7010-1x)

Ref. No.	Ad	New	Parts No.	Description	Destination
R501			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R502			RK73HB1J473J	CHIP R 47K J 1/16W	
R503			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R504,505			RK73HB1J473J	CHIP R 47K J 1/16W	
R506-508			RK73HB1J101J	CHIP R 100 J 1/16W	
R509			RK73HB1J104J	CHIP R 100K J 1/16W	
R510,511			RK73HB1J101J	CHIP R 100 J 1/16W	
R512			RK73HB1J104J	CHIP R 100K J 1/16W	
R513-519			RK73HB1J101J	CHIP R 100 J 1/16W	
R520			RK73HB1J104J	CHIP R 100K J 1/16W	
R521			RK73HB1J101J	CHIP R 100 J 1/16W	
R522			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R524			RK73HB1J101J	CHIP R 100 J 1/16W	
R525			RK73HB1J223J	CHIP R 22K J 1/16W	
R526,527			RK73HB1J101J	CHIP R 100 J 1/16W	
R528			RK73HB1J223J	CHIP R 22K J 1/16W	
R529,530			RK73HB1J101J	CHIP R 100 J 1/16W	
R531			RK73HB1J223J	CHIP R 22K J 1/16W	
R532			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R533			RK73HB1J101J	CHIP R 100 J 1/16W	
R534			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R538			RK73GB2A473J	CHIP R 47K J 1/10W	
R542			RK73HB1J103J	CHIP R 10K J 1/16W	
R544			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R545			RK73GB2A473J	CHIP R 47K J 1/10W	
R546			RK73HB1J104J	CHIP R 100K J 1/16W	
R548			RK73GB2A223J	CHIP R 22K J 1/10W	
R549			RK73HB1J473J	CHIP R 47K J 1/16W	
R552			RK73GB2A473J	CHIP R 47K J 1/10W	
R553			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R561			RK73GB2A473J	CHIP R 47K J 1/10W	
R562			RK73HB1J101J	CHIP R 100 J 1/16W	
R570,571			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R573			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R574			RK73HB1J473J	CHIP R 47K J 1/16W	
R575			RK73HB1J104J	CHIP R 100K J 1/16W	
R576			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R577			RK73GB2A100J	CHIP R 10 J 1/10W	
R578			RK73GB2A153J	CHIP R 15K J 1/10W	
R579			RK73GB2A100J	CHIP R 10 J 1/10W	
R580			RK73GB2A153J	CHIP R 15K J 1/10W	
R583			RK73HB1J104J	CHIP R 100K J 1/16W	
R584,585			RK73HB1J223J	CHIP R 22K J 1/16W	
R586			RK73HB1J333J	CHIP R 33K J 1/16W	
R587			RK73HB1J101J	CHIP R 100 J 1/16W	
R588			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R589			RK73HB1J101J	CHIP R 100 J 1/16W	
R590			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R592,593			RK73HB1J101J	CHIP R 100 J 1/16W	
R595			RK73GB2A223J	CHIP R 22K J 1/10W	K
R596			RK73GB2A223J	CHIP R 22K J 1/10W	K1
R650-653			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R655			RK73EB2E471J	CHIP R 470 J 1/4W	
R662			RK73GB2A100J	CHIP R 10 J 1/10W	
R663			RK73FB2B472J	CHIP R 4.7K J 1/8W	

Ref. No.	Ad	New	Parts No.	Description	Destination
R664			RK73GB2A223J	CHIP R 22K J 1/10W	
R665			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R666			RK73HB1J473J	CHIP R 47K J 1/16W	
R703			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R705,706			RK73HB1J103J	CHIP R 10K J 1/16W	
R710,711			RK73HB1J473J	CHIP R 47K J 1/16W	
R712,713			RK73HB1J223J	CHIP R 22K J 1/16W	
R715,716			RK73GB2A101J	CHIP R 100 J 1/10W	
R720			RK73GB2A220J	CHIP R 22 J 1/10W	
R740,741			RK73EB2E101J	CHIP R 100 J 1/4W	
R802			RK73HB1J474J	CHIP R 470K J 1/16W	
R803			RK73HB1J221J	CHIP R 220 J 1/16W	
R804			RK73HB1J474J	CHIP R 470K J 1/16W	
R805			RK73HB1J751J	CHIP R 750 J 1/16W	
R810			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R812			RK73HB1J223J	CHIP R 22K J 1/16W	
R813			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R814			RK73GB2A330J	CHIP R 33 J 1/10W	
R815			RK73HB1J471J	CHIP R 470 J 1/16W	
R816,817			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R818			RK73HB1J681J	CHIP R 680 J 1/16W	
R819			RK73EB2E270J	CHIP R 27 J 1/4W	
R821,822			RK73HB1J101J	CHIP R 100 J 1/16W	
R824			RK73GB2A330J	CHIP R 33 J 1/10W	
R825			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R831-833			RK73GB2A511J	CHIP R 510 J 1/10W	
R904			RK73GB2A100J	CHIP R 10 J 1/10W	
R951			RK73GH2A334D	CHIP R 330K D 1/10W	
R953			RK73GH2A154D	CHIP R 150K D 1/10W	
R954			RK73GH2A913D	CHIP R 91K D 1/10W	
R955			RK73GH2A243D	CHIP R 24K D 1/10W	
R956			RK73GH2A753D	CHIP R 75K D 1/10W	
R957			RK73HB1J164J	CHIP R 160K J 1/16W	
R981			RK73GB2A102J	CHIP R 1.0K J 1/10W	
W900			R92-2053-05	CHIP R 0 OHM J 1/8W	
S650			S74-0809-05	MICRO SWITCH	
D1			S2V60-5009F46	DIODE	
D10			UDZW5.1(B)	ZENER DIODE	
D11			1SS355	DIODE	
D30			UDZW5.6(B)	ZENER DIODE	
D31			D1FJ4	DIODE	
D40			UDZW8.2(B)	ZENER DIODE	
D51			1SS355	DIODE	
D52			UDZW10(B)	ZENER DIODE	
D70			CMS14	DIODE	
D80			1SR154-400	DIODE	
D82			UDZW5.6(B)	ZENER DIODE	
D90			UDZW6.2(B)	ZENER DIODE	
D92 ,93			UDZW6.8(B)	ZENER DIODE	
D110			1SS355	DIODE	
D111-114			1SR154-400	DIODE	
D130			MC2846-T111	DIODE	
D140,141			LVS10C270S030	VARISTOR	
D200			MC2846-T111	DIODE	

K: KDC-X995 K1: KDC-BT948HD

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-7010-1x)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D201 D273-275 D403 D406 D408,409			1SS355 MC2846-T111 UDZW6.2(B) UDZW6.2(B) UDZW6.8(B)	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
D410 D440 D450 D470,471 D472			UDZW6.2(B) MC2846-T111 MC2846-T111 UDZW6.8(B) UDZW6.2(B)	ZENER DIODE DIODE DIODE ZENER DIODE ZENER DIODE	
D500 D650 D658 D660-662 D663			RB521S-30 MC2850-T111 UDZW6.2(B) UDZW5.6(B) UDZW6.2(B)	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
D664 D801,802 D950 D951 IC20			UDZW12(B) KP2311ETR-G CMS14 1SS355 XC6201P502PR	ZENER DIODE DIODE DIODE DIODE ANALOGUE IC	
IC35 IC60 IC150 IC201 IC202		*	R1114N331B-TR AN33013UA-VB TC7SET125FU-F E-TDA7850A 74HCT2G08DP	ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC MOS-IC	
IC240 IC270 IC400 IC500 IC501		*	AK7600VF E-TDA7716N TC74VHCT08AFT W05-1667-00 XC6119N28AN-G	MOS-IC ANALOGUE IC MOS-IC MCU MOS-IC	
IC502 IC504 IC700 IC801 IC802		*	MFI341S2162 74HC2G02DP NJM4565V-ZB TDA7706 EX24256BTAS0A	MICROPROCESSOR IC MOS-IC ANALOGUE IC MOS-IC ROM IC	
IC950 IC970 IC980 Q11 Q12	3D	*	Impossible to replace BD12KA5FP BA50BCOWFP RT1N436M-T111 KTA1046-P	ANALOGUE IC (See exploded view) ANALOGUE IC ANALOGUE IC TRANSISTOR TRANSISTOR	
Q13 Q14 -16 Q30 Q31 Q32			2SC4081 2SA1576A 2SA1576A RT1N436M-T111 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q33 Q35 Q40 Q41 Q42			KTA1046-P RT1P144M-T111 2SC4081 KTA1046-P RT1P241M-T111	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q43 Q50 Q51 Q52 Q53			RT1N436M-T111 2SC4081 KTA1046-P RT1P241M-T111 RT1N436M-T111	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q80 Q81 Q82 Q83 Q90			2SC4081 2SC5053 RT1P241M-T111 RT1N436M-T111 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q92 ,93 Q110 Q111 Q112 Q113,114			2SC4081 RT1N144M-T111 RT1P141M-T111 2SA1576A 2SB1188(Q,R)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q115 Q130 Q400 Q401 Q440,441			RT1N144M-T111 RT1N441M-T111 RT1N144M-T111 2SC4081 RT1N430M-T111	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q442 Q450,451 Q452 Q460,461 Q650			RT1P144M-T111 RT1N430M-T111 RT1P144M-T111 RT1N430M-T111 2SA1577	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q652 Q653 Q950,951 TH200			RT1P144M-T111 RT1N436M-T111 RT1N436M-T111 PRF18BE471QS2	TRANSISTOR TRANSISTOR TRANSISTOR POSITIVE RESISTOR	
A700	3D		W02-5374-15	ELECTRIC CIRCUIT MODULE	
HD PROCESSOR UNIT (IN X34-7010-0x UNIT)					
C101 C102 C103-116 C117,118 C119-122			CK73GB1C105K CK73GB1H471K CK73GB1C104K CK73FB0J106K CK73GB1C104K	CHIP C 1.0UF K CHIP C 470PF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K	
C124-135 C136 C137 C138 C144-146			CK73GB1C104K CC73GCH1H030C CC73GCH1H040C CK73FB0J106K CC73GCH1H680J	CHIP C 0.10UF K CHIP C 3.0PF C CHIP C 4.0PF C CHIP C 10UF K CHIP C 68PF J	
C147 C150-156			CK73GB1C104K CK73GB1C104K	CHIP C 0.10UF K CHIP C 0.10UF K	
CN101 CN102			E41-3220-08 E41-3221-08	FLAT CABLE CONNECTOR PIN ASSY	
L101,102 X101			L40-1891-86 NAX1116-001X	SMALL FIXED INDUCTOR CRYSTAL RESONATOR	
R104,105 R106 R108,109 R110-112 R113			RK73GB2A470J RK73GB2A471J RK73GB2A470J RK73GB2A103J RK73GB2A750J	CHIP R 47 J 1/10W CHIP R 470 J 1/10W CHIP R 47 J 1/10W CHIP R 10K J 1/10W CHIP R 75 J 1/10W	
R114 R115 R116 R117,118 R122			RK73GB2A102J RK73GB2A270J RK73GB2A470J RK73GB2A103J RK73GB2A000J	CHIP R 1.0K J 1/10W CHIP R 27 J 1/10W CHIP R 47 J 1/10W CHIP R 10K J 1/10W CHIP R 0.0 J 1/10W	

K: KDC-X995 K1: KDC-BT948HD

△ Indicates safety critical components.

PARTS LIST

HD PROCESSOR UNIT (IN X34-7010-0x UNIT)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
RA101-109 RA111-113			RK74HB1J470J RK74HB1J470J	CHIP-COM 47 J 1/16W CHIP-COM 47 J 1/16W	
IC101 IC151 IC191			STA680Q GEU03533-01A M12L1281687TG2	MOS-IC SV-ROM IC SV-DRAM IC	
MECHANISM ASSY (X92-6370-04) DXM-9B24W					
1	2B		A10-5450-63	CHASSIS ASSY	
3	3B		A10-5452-41	CHASSIS	
4	1B		A10-5453-32	CHASSIS	
12	3A		D10-4993-52	LEVER	
13	1B		D10-4991-22	ARM	
14	1B		D10-4992-13	ARM	
15	2A		D10-4994-02	SLIDER	
16	2A		D10-4995-03	SLIDER	
17	2B		D10-4996-02	SLIDER	
18	2A		D10-4997-03	LEVER	
19	1A		D10-4998-03	ARM	
20	2A		D10-4999-03	ARM	
21	2A		D10-7001-03	ARM	
22	2A		D10-7002-03	ARM	
23	2A		D10-7003-03	ARM	
24	2A		D13-2445-04	GEAR	
25	2A		D13-2446-04	GEAR	
27	2A		D13-2448-04	GEAR	
28	2A		D13-2449-04	GEAR	
29	2A		D13-2450-04	GEAR	
30	2A		D13-2451-04	GEAR	
31	2A		D13-2452-04	GEAR	
32	2A		D13-2453-04	GEAR	
33	2A		D13-2454-04	GEAR	
34	2A		D13-2455-04	GEAR	
35	2B		D13-2456-03	RACK (GEAR)	
36	2A		D14-1028-04	ROLLER	
37	3A		D21-2507-04	SHAFT	
38	2B		D21-2508-04	SHAFT	
39	3A		D23-0963-04	RETAINER	
40	3B		D39-0277-15	DAMPER	
41	3B		D39-0278-15	DAMPER	
46	1B		G01-4682-34	TORSION COIL SPRING	
47	3A		G01-4756-04	EXTENSION SPRING	
48	2A		G01-4684-04	EXTENSION SPRING	
49	2B		G01-4685-04	EXTENSION SPRING	
50	1B		G01-4686-14	EXTENSION SPRING	
51	3A		G01-4688-14	EXTENSION SPRING	
52	3A		G01-4692-24	TORSION COIL SPRING	
54	3A		G02-1588-04	FLAT SPRING	
55	1B		G13-1297-04	CUSHION	
56	1B		G13-1299-14	CUSHION	
57	1A		G16-1715-04	SHEET	
61	1B		J11-0675-03	CLAMPER	
64	2A		J19-7210-21	HOLDER	
65	2B		J19-7225-04	HOLDER	
66	1B		J22-0706-03	MOUNTING HARDWARE	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
67	1A		J22-0707-12	MOUNTING HARDWARE	
68	1B		J90-1166-11	GUIDE	
69	2B		J90-1168-03	RAIL	
A	1A		N09-6108-15	TAPTITE SCREW (M2X3.5)	
B	2B		N09-6426-15	MACHINE SCREW	
C	2B		N09-6735-05	TAPTITE SCREW	
D	2B		N09-6737-15	MACHINE SCREW	
E	2B		N09-6738-15	TAPTITE SCREW	
F	2A		N19-2335-14	FLAT WASHER	
G	2B		N35-2003-48	BINDING HEAD MACHINE SCREW	
H	2B		N39-1720-48	PAN HEAD MACHINE SCREW	
76	2A		S68-0921-05	PUSH SWITCH	
DM1	2B		X94-2090-00	SPINDLE MOTOR ASSY	
DM2	2B		X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)	
DPU1	2B		X93-2280-00	OPTICAL PICKUP ASSY	

K: KDC-X995 K1: KDC-BT948HD

△ Indicates safety critical components.