


EXPLODED VIEW (UNIT)

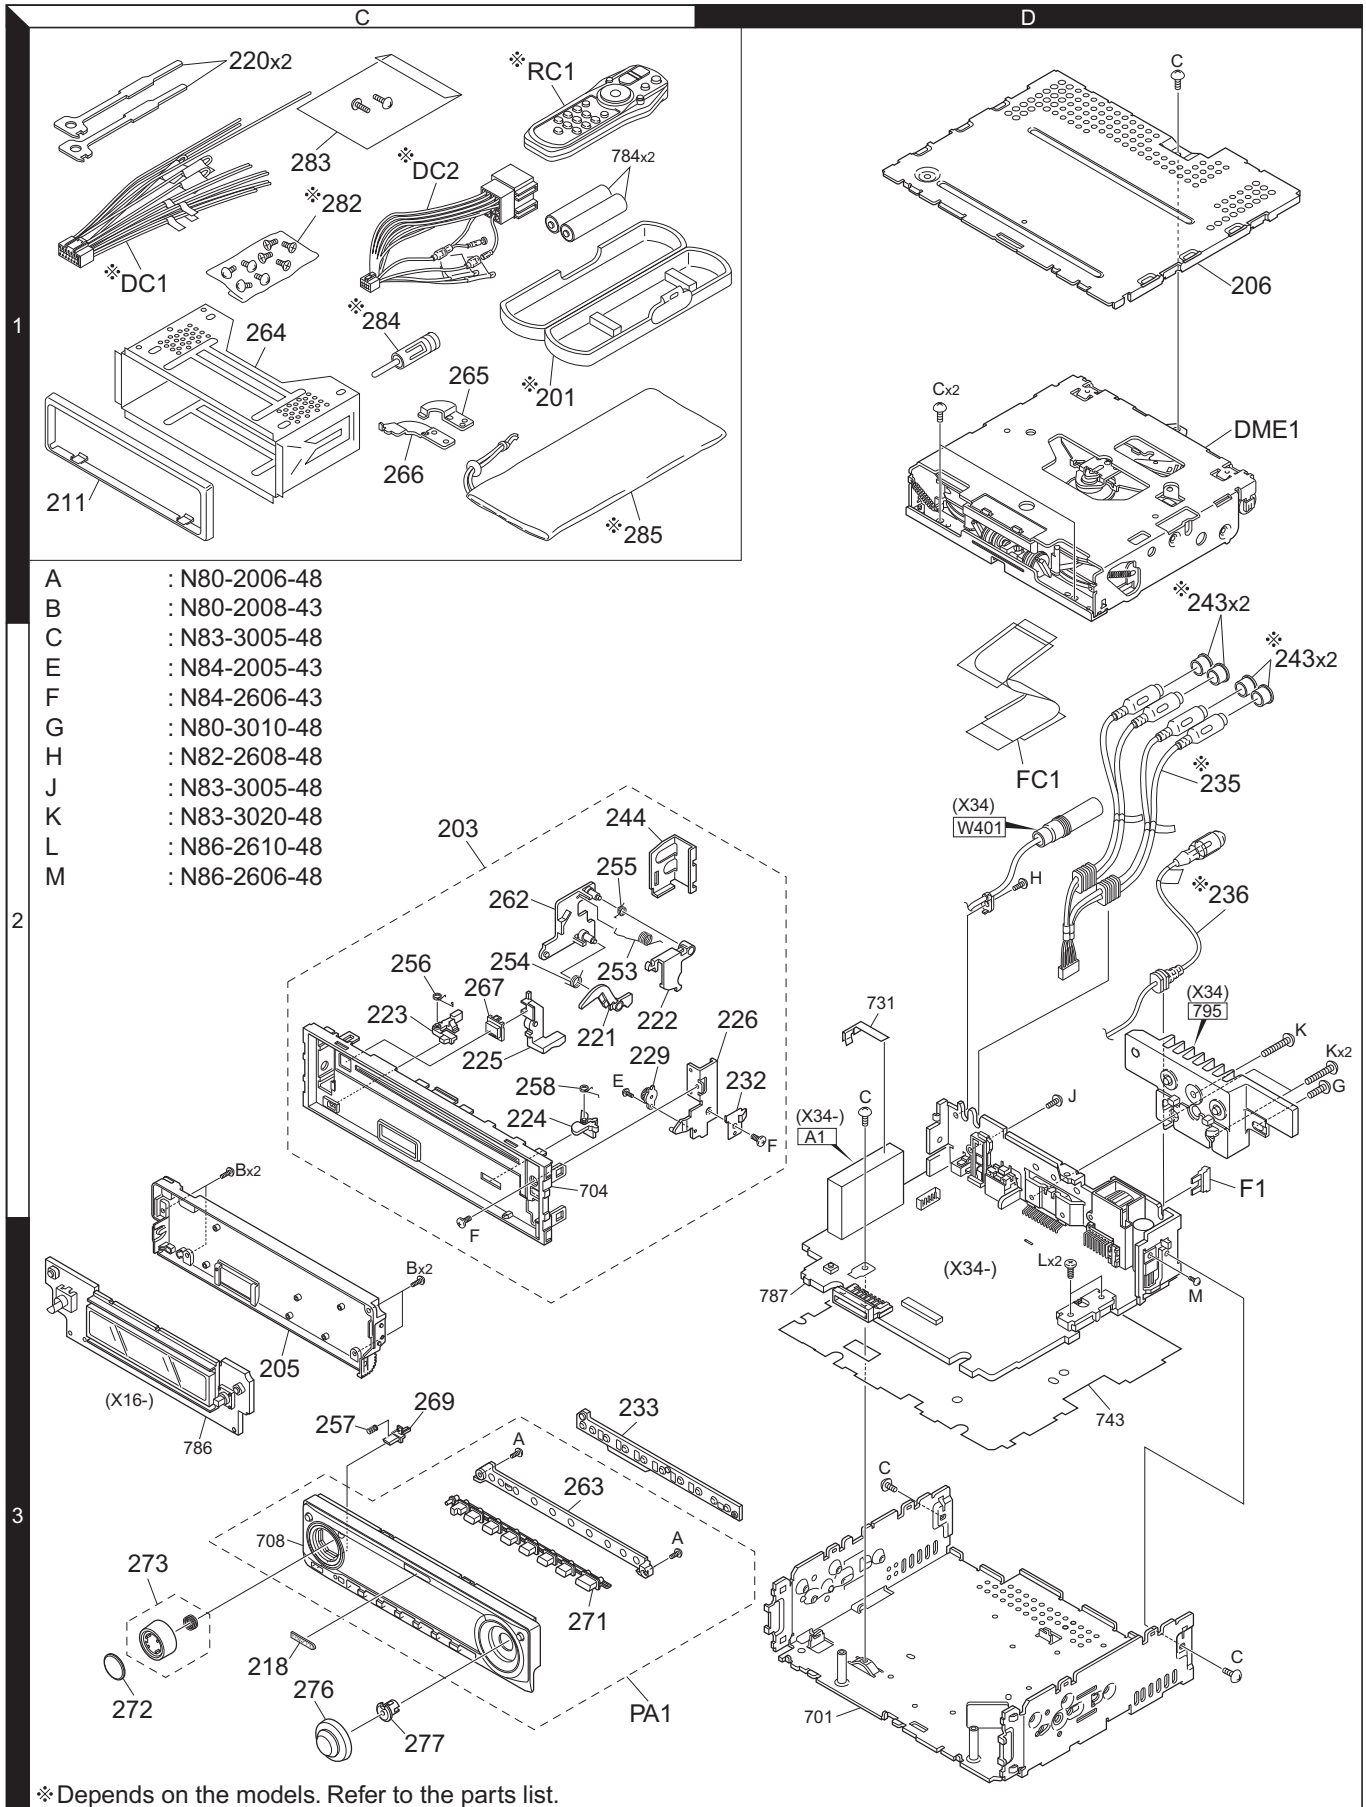

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP3035/MP335/MP6036/W5137/W5137Y					
201	1C		A02-2736-03	PLASTIC CABINET ASSY	M1
203	2C		A22-3059-12	SUB PANEL ASSY	
205	3C	*	A46-1845-01	REAR COVER	
206	1D		A52-0804-12	TOP PLATE	
PA1	3C	*	A64-3996-01	PANEL ASSY	K
PA1	3C	*	A64-3997-01	PANEL ASSY	K1
PA1	3C	*	A64-4000-01	PANEL ASSY	M1
PA1	3C	*	A64-4257-01	PANEL ASSY	E1E2
RC1	1C		A70-2087-05	REMOTE CONTROLLER ASSY (RC-557)	KK1E2
RC1	1C		A70-2087-05	REMOTE CONTROLLER ASSY (RC-557)	M1
-			B46-0612-14	ID CARD	E1E2M1
-			B46-0681-04	ID CARD	KK1
-		*	B64-3534-00	INST. MANUAL (ENG.FRE.SPA.)	KK1
-		*	B64-3535-00	INST. MANUAL (ENG.T-CHI.)	M1
-		*	B64-3536-00	INST. MANUAL (ARABIC)	M1
-		*	B64-3756-00	INST. MANUAL (ENGLISH)	E1E2
-		*	B64-3757-00	INST. MANUAL (FRE.GER.DUT.)	E1
-		*	B64-3758-00	INST. MANUAL (ITA.SPA.POR.)	E1
-		*	B64-3759-00	INST. MANUAL (RUSSIAN)	E2
211	1C		B07-3125-01	ESCUTCHEON	M1
211	1C		B07-3126-01	ESCUTCHEON	K1
211	1C	*	B07-3211-01	ESCUTCHEON	KE1E2
218	3C		B43-1518-04	BADGE	
220	1C		D10-4589-04	LEVER	
221	2C		D10-4865-03	LEVER (PUSH)	
222	2C		D10-4866-03	LEVER (HOOK)	
223	2C		D10-4867-04	LEVER (LOCK)	
224	2C		D10-4868-04	LEVER (DETECT)	
225	2C		D10-4869-03	LEVER (EJECT)	
226	2D		D10-4870-04	ARM ASSY	
229	2C		D39-0255-05	DAMPER	
232	2D		E29-2028-04	LEAD PLATE	
233	3C	*	E29-2090-03	CONDUCTIVE RUBBER	
235	2D	*	E30-6641-05	CORD WITH PINPLUG (3-PREOUT)	KM1
235	2D	*	E30-6642-05	CORD WITH PINPLUG (2-PREOUT)	K1
236	2D		E30-6509-05	CORD WITH CONNECTOR (OEM)	E1M1
△ DC1	1C		E30-6415-15	DC CORD	KK1M1
△ DC2	1C		E30-6413-05	DC CORD	E1E2
FC1	2D		E39-0736-05	FLAT CABLE	
243	2D		F29-0626-04	INSULATING COVER	KK1M1
244	2C		F31-0716-04	REINFORCING HARDWARE	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
253	2C		G01-3246-04	TORSION COIL SPRING	
254	2C		G01-3247-04	TORSION COIL SPRING	
255	2C		G01-3248-04	TORSION COIL SPRING	
256	2C		G01-3249-04	TORSION COIL SPRING	
257	3C		G01-4611-04	COMPRESSION SPRING (REL)	
258	2C		G01-3270-04	TORSION COIL SPRING	
-		*	H54-3840-03	ITEM CARTON CASE	K
-		*	H54-3841-03	ITEM CARTON CASE	K1
-		*	H54-3844-03	ITEM CARTON CASE	M1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-		*	H54-4094-03	ITEM CARTON CASE	E1
-		*	H54-4095-03	ITEM CARTON CASE	E2
262	2C		J19-7049-03	HOLDER	
263	3C	*	J19-7157-02	HOLDER	
264	1C		J22-0011-03	MOUNTING HARDWARE ASSY	
265	1C		J22-0258-04	MOUNTING HARDWARE (L)	
266	1C		J22-0259-04	MOUNTING HARDWARE (R)	
267	2C		K24-4282-04	PUSH KNOB (EJECT)	
269	3C	*	K24-4651-03	PUSH KNOB (RELEASE)	
271	3C	*	K25-1858-03	PUSH KNOB (PRESET)	
272	3C	*	K28-0188-04	KEY TOP (VOL)	
273	3C	*	K28-0182-04	KNOB ASSY (VOL)	
276	3C	*	K28-0172-03	KEY TOP (FM/AM)	
277	3C	*	K28-0236-03	KNOB BASE (FM/AM)	
282	1C		N99-1757-05	SCREW SET	KK1M1
283	1C		N99-1780-05	SCREW SET	
A	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
B	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
C	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
F	2D		N84-2606-43	PAN HEAD TAPTITE SCREW	
L	3D		N86-2610-48	BINDING HEAD TAPTITE SCREW	
284	1C		T90-0523-05	ANTENNA ADAPTOR	E1E2
285	1C		W01-1661-05	CARRYING CASE	KK1E1
285	1C		W01-1661-05	CARRYING CASE	E2
DME1	1D		X92-5880-00	MECHANISM ASSY (DXM-6E00W)	
SWITCH UNIT (X16-385x-xx)					
D1-9			B30-1566-05	LED (1608,RED)	KK1E1
D1-9			B30-1566-05	LED (1608,RED)	E2
D11-19			B30-1565-05	LED (1608,PG)	E1E2M1
D21			B30-1566-05	LED (1608,RED)	
D23-27			B30-1767-05	LED	
C8			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73GB1H104K	CHIP C 0.10UF K	
C16			CK73GB1H103K	CHIP C 0.010UF K	
C18			CK73GB1H103K	CHIP C 0.010UF K	
C19,20			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73GB1H104K	CHIP C 0.10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
CP10,11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13			RK73GB2A101J	CHIP R 100 J 1/10W	

K : KDC-MP3035 K1 : KDC-MP335 M1 : KDC-MP6036 E1 : KDC-W5137 E2 : KDC-W5137Y
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-385x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R15			RK73GB2A101J	CHIP R 100 J 1/10W	
R20			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RK73GB2A473J	CHIP R 47K J 1/10W	
R26			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A473J	CHIP R 47K J 1/10W	
R51,52			RK73FB2B471J	CHIP R 470 J 1/8W	
R53,54			RK73EB2E681J	CHIP R 680 J 1/4W	
R55			RK73EB2E821J	CHIP R 820 J 1/4W	
R56			RK73EB2E561J	CHIP R 560 J 1/4W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2
R60			RK73EB2E561J	CHIP R 560 J 1/4W	
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2
R66,67			RK73GB2A682J	CHIP R 6.8K J 1/10W	E1E2
R73			RK73PB2H270J	CHIP R 27 J 1/2W	
R74,75			RK73PB2H330J	CHIP R 33 J 1/2W	
R112			RK73GB2A104J	CHIP R 100K J 1/10W	
W6			R92-1252-05	CHIP R 0 OHM J 1/16W	M1
W7			R92-1252-05	CHIP R 0 OHM J 1/16W	KK1
S2			S70-0106-05	TACT SWITCH	
S10			S70-0939-05	TACT SWITCH	
S27			S70-0901-05	TACT SWITCH	
S1			T99-0474-05	ROTARY ENCODER	
ED1		*	3-BT-249INK	FLUORESCENT INDICATOR TUBE	KK1E1
ED1		*	3-BT-249INK	FLUORESCENT INDICATOR TUBE	E2
ED1		*	3-BT-251INK	FLUORESCENT INDICATOR TUBE	M1
IC2			PNA4S22M02KW	ANALOGUE IC	
Q10			2SC4617	TRANSISTOR	E1E2
Q12-14			2SA1774	TRANSISTOR	
Q15			2SC4617	TRANSISTOR	E1E2
Q20			RT1N441U	TRANSISTOR	
CD PLAYER UNIT (X32-5970-00) IN CD MECHA					
C20			CC73GCH1H680J	CHIP C 68PF J	
C21			CK73GB1H472K	CHIP C 4700PF K	
C22			CK73GB1H222K	CHIP C 2200PF K	
C23			CC73GCH1H220J	CHIP C 22PF J	
C24			CK73EB1A475K	CHIP C 4.7UF K	
C25			CK73FB0J106K	CHIP C 10UF K	
C26			CK73GB1H153K	CHIP C 0.015UF K	
C27			CC73GCH1H470J	CHIP C 47PF J	
C29			CK73GB1H104K	CHIP C 0.10UF K	
C30-33			CK73GB1H103K	CHIP C 0.010UF K	
C34			CK73GB1H104K	CHIP C 0.10UF K	
C35			CK73GB1H153K	CHIP C 0.015UF K	
C36			CK73GB1H104K	CHIP C 0.10UF K	
C38			CC73GCH1H680J	CHIP C 68PF J	
C39,40			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73GB1A105K	CHIP C 1.0UF K	
C44			CK73GB1H104K	CHIP C 0.10UF K	
C45,46			CK73GB1H222K	CHIP C 2200PF K	
C47,48			CK73GB1H333K	CHIP C 0.033UF K	
C49,50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H222K	CHIP C 2200PF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C52,53			CK73GB1H104K	CHIP C 0.10UF K	
C54			CK73GB1A105K	CHIP C 1.0UF K	
C58			CK73EB1E105K	CHIP C 1.0UF K	
C60			CK73EB0J226K	CHIP C 22UF K	
C61-64			CK73GB1H104K	CHIP C 0.10UF K	
C66			CK73FB1C105K	CHIP C 1.0UF K	
C68,69			CK73GB1H104K	CHIP C 0.10UF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73EB1A106K	CHIP C 10UF K	
C73			CK73GB1A105K	CHIP C 1.0UF K	
C74			CK73GB1C224K	CHIP C 0.22UF K	
C76			CK73GB1H103K	CHIP C 0.010UF K	
C77			CK73FB1A225K	CHIP C 2.2UF K	
C87,88			CK73GB1H222K	CHIP C 2200PF K	
C89-91			CK73GB1H104K	CHIP C 0.10UF K	
C94,95			CK73GB1A105K	CHIP C 1.0UF K	
C96			CK73GB1H103K	CHIP C 0.010UF K	
C97			CK73GB1H104K	CHIP C 0.10UF K	
C100,101			CK73GB1A105K	CHIP C 1.0UF K	
C102			CK73FB1A225K	CHIP C 2.2UF K	
C103			CK73GB1H153K	CHIP C 0.015UF K	
CN1			E41-2612-05	FLAT CABLE CONNECTOR	
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X1			L78-1221-05	RESONATOR (16.93MHZ)	
CP7			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R20			RK73GB2A393J	CHIP R 39K J 1/10W	
R21			RK73GB2A163J	CHIP R 16K J 1/10W	
R22			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R23			RK73GB2A273J	CHIP R 27K J 1/10W	
R25			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R26			RK73GB2A683J	CHIP R 68K J 1/10W	
R27			RK73GB2A333J	CHIP R 33K J 1/10W	
R28			RK73GB2A563J	CHIP R 56K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A133J	CHIP R 13K J 1/10W	
R32			RK73GB2A181J	CHIP R 180 J 1/10W	
R33			RK73GB2A153J	CHIP R 15K J 1/10W	
R34			RK73GB2A473J	CHIP R 47K J 1/10W	
R35			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R36			RK73GB2A154J	CHIP R 150K J 1/10W	
R37			RK73GB2A334J	CHIP R 330K J 1/10W	
R38			RK73GB2A223J	CHIP R 22K J 1/10W	
R40			RK73GB2A273J	CHIP R 27K J 1/10W	
R41			RK73GB2A393J	CHIP R 39K J 1/10W	
R45			RK73GB2A221J	CHIP R 220 J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R48,49			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R50			RK73GB2A560J	CHIP R 56 J 1/10W	
R51			RK73EB2E220J	CHIP R 22 J 1/4W	
R52			RK73EB2E100J	CHIP R 10 J 1/4W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R59			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	

K : KDC-MP3035 K1 : KDC-MP335 M1 : KDC-MP6036 E1 : KDC-W5137 E2 : KDC-W5137Y
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5970-00) IN CD MECHA

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R60,61			RK73GB2A103J	CHIP R 10K J 1/10W		C205			CK73GB1H102K	CHIP C 1000PF K	
R82,83			RK73GB2A102J	CHIP R 1.0K J 1/10W		C301,302			CD04AB1HR47M	ELECTRO 0.47UF 50WV	
R216,217			RK73GB2A103J	CHIP R 10K J 1/10W		C303,304			CK73GB1H103K	CHIP C 0.010UF K	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W		C401			CD04AB1C470M	ELECTRO 47UF 16WV	
R219,220			RK73GB2A472J	CHIP R 4.7K J 1/10W		C403			CD04AB1H010M	ELECTRO 1.0UF 50WV	
R221,222			RK73GB2A101J	CHIP R 100 J 1/10W		C404			CK73GB1H103K	CHIP C 0.010UF K	
R223			RK73GB2A103J	CHIP R 10K J 1/10W		C405			CK73GB1H104K	CHIP C 0.10UF K	
R226-230			RK73GB2A101J	CHIP R 100 J 1/10W		C509,510			CK73GB1A474K	CHIP C 0.47UF K	
R231			RK73GB2A473J	CHIP R 47K J 1/10W		C511			CD04AB1V100M	ELECTRO 10UF 35WV	E1E2
R232			RK73GB2A104J	CHIP R 100K J 1/10W		C512			CK73GB1H103K	CHIP C 0.010UF K	E1E2
R233			RK73GB2A331J	CHIP R 330 J 1/10W		C513			CD04AB1V100M	ELECTRO 10UF 35WV	E1E2
R239			RK73GB2A472J	CHIP R 4.7K J 1/10W		C514			CC73GCH1H331J	CHIP C 330PF J	E1E2
R240			RK73EB2E470J	CHIP R 47 J 1/4W		C515,516			CC73GCH1H100D	CHIP C 10PF D	E1E2
R241			RK73GB2A104J	CHIP R 100K J 1/10W		C517			CC73GCH1H561J	CHIP C 560PF J	E1E2
R243			RK73GB2A472J	CHIP R 4.7K J 1/10W		C601,602			CK73FB1E474K	CHIP C 0.47UF K	
R244			RK73GB2A225J	CHIP R 2.2M J 1/10W		C603			CD04AB0J470M	ELECTRO 47UF 6.3WV	
R245			RK73GB2A000J	CHIP R 0.0 J 1/10W		C604			CK73GB1H103K	CHIP C 0.010UF K	
R246			RK73GB2A333J	CHIP R 33K J 1/10W		C701,702			CD04AB1V100M	ELECTRO 10UF 35WV	
R247			RK73GB2A183J	CHIP R 18K J 1/10W		C703,704			CC73GCH1H681J	CHIP C 680PF J	
R248			RK73GB2A472J	CHIP R 4.7K J 1/10W		C705,706			CD04AB1V100M	ELECTRO 10UF 35WV	KK1M1
R251			RK73GB2A473J	CHIP R 47K J 1/10W		C707,708			CC73GCH1H681J	CHIP C 680PF J	KK1M1
R252			RK73GB2A000J	CHIP R 0.0 J 1/10W		C709,710			CK73FB1E474K	CHIP C 0.47UF K	
S1,2			S68-0863-05	PUSH SWITCH		C711			CD04AB0J470M	ELECTRO 47UF 6.3WV	
S3			S68-0862-05	PUSH SWITCH		C712			CK73GB1H103K	CHIP C 0.010UF K	
D1			DA204U	DIODE		C713,714			CD04AB1V100M	ELECTRO 10UF 35WV	KM1
D2			DAP202U	DIODE		C715,716			CC73GCH1H681J	CHIP C 680PF J	KM1
D3,4			DA204U	DIODE		C801-804			C90-5684-05	NP-ELECT 0.22UF 50WV	
IC3			BA5824FP	ANALOGUE IC		C805			CD04AB1V100M	ELECTRO 10UF 35WV	
IC4			TC94A70FG-007	MOS-IC		C807			CD04AB1H010M	ELECTRO 1.0UF 50WV	
IC5			S-1132B15U5T1G	ANALOGUE IC		C808			C90-6802-05	ELECTRO 1UF 50WV	
IC6			S-1132B33U5T1G	ANALOGUE IC		C809			CK73GB1A105K	CHIP C 1.0UF K	
IC7			TAR5S33-F	ANALOGUE IC		C901,902			CD04AB1C101M	ELECTRO 100UF 16WV	
IC11			XC6206P152MR	ANALOGUE IC		C990			CK73GB1H223K	CHIP C 0.022UF K	
Q1			2SB0970	TRANSISTOR		CN2			E41-2581-05	FLAT CABLE CONNECTOR	
Q10-12			UM6K1N	DUAL FET		CN3			E41-1699-05	PIN ASSY	E1M1
Q13			DTC114YUA	DIGITAL TRANSISTOR		CN4			E40-6526-05	PIN ASSY	K1
ELECTRIC UNIT (X34-462x-xx)									E40-6529-05	PIN ASSY	KM1
ELECTRIC UNIT (X34-462x-xx)									E58-0991-05	RECTANGULAR RECEPTACLE	
D302			B30-1710-05	LED (RED)		J1					
C1			CD04AZ1C332M2	ELECTRO 3300UF 16WV		J3			E58-0992-05	RECTANGULAR RECEPTACLE	
C2			CD04AB1C220M	ELECTRO 22UF 16WV		J4			E56-0855-05	CYLINDRICAL RECEPTACLE	
C3			CK73GB1H104K	CHIP C 0.10UF K	E1E2	J5			E63-0937-05	PIN JACK	
C3,4			CK73GB1H104K	CHIP C 0.10UF K	KK1M1	J6			E11-0625-05	PHONE JACK (LGY6502-0900)	
C5,6			CD04AT1E101M	ELECTRO 100UF 25WV		W401	2D		E30-6438-05	CORD WITH PLUG	
C7			CD04AB0J101M	ELECTRO 100UF 6.3WV		L1			L33-2319-05	CHOKE COIL ASSY	
C9			CK73GB1H104K	CHIP C 0.10UF K		L401			L41-4795-33	SMALL FIXED INDUCTOR (4.7UH)	
C11			CK73FB1A225K	CHIP C 2.2UF K		X1			L78-1218-05	RESONATOR	
C12			CK73GB1H104K	CHIP C 0.10UF K		X2			L77-2920-05	CRYSTAL RESONATOR	E1E2
C14			CK73GB1H104K	CHIP C 0.10UF K		X3			L77-2002-05	CRYSTAL RESONATOR (4.3320MHZ)	
C15			CD04AB1C220M	ELECTRO 22UF 16WV		G	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
C101,102			CK73GB1H103K	CHIP C 0.010UF K		H	2D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
C202			CC73GCH1H180J	CHIP C 18PF J		J	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
C203			CC73GCH1H220J	CHIP C 22PF J		K	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
C204			CK73GB1H104K	CHIP C 0.10UF K		M	3D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
						R1			RD14BB2C102J	RD 1.0K J 1/6W	

K : KDC-MP3035 K1 : KDC-MP335 M1 : KDC-MP6036 E1 : KDC-W5137 E2 : KDC-W5137Y
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-462x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R2-5			RD14BB2C103J	RD 10K J 1/6W		R325,326			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1M1
R10			RK73EB2E1R0J	CHIP R 1.0 J 1/4W		R327			RK73GB2A223J	CHIP R 22K J 1/10W	
R11-15		*	RK73PB2H3R9J	CHIP R 3.9 J 1/2W		R329			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R16			RK73FB2B681J	CHIP R 680 J 1/8W		R330			RK73EB2E101J	CHIP R 100 J 1/4W	
R17			RK73GB2A272J	CHIP R 2.7K J 1/10W		R331			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R18-20		*	RK73PB2H3R3J	CHIP R 3.3 J 1/2W		R332			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R101,102			RD14BB2C472J	RD 4.7K J 1/6W		R333,334			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R103			RD14BB2C103J	RD 10K J 1/6W		R335			RK73GB2A104J	CHIP R 100K J 1/10W	
R104			RK73GB2A473J	CHIP R 47K J 1/10W		R336-338			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R105			RK73GB2A104J	CHIP R 100K J 1/10W		R339			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R106			RD14DB2H332J	SMALL-RD 3.3K J 1/2W		R340			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R107			RD14BB2C333J	RD 33K J 1/6W		R341			RK73EB2E101J	CHIP R 100 J 1/4W	
R108			RK73GB2A103J	CHIP R 10K J 1/10W		R342			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R109			RD14BB2C223J	RD 22K J 1/6W		R343			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R110			RK73FB2B683J	CHIP R 68K J 1/8W		R344			RK73GB2A473J	CHIP R 47K J 1/10W	
R111			RK73GB2A393J	CHIP R 39K J 1/10W		R402,403			RK73GB2A471J	CHIP R 470 J 1/10W	
R112			RD14BB2C203J	RD 20K J 1/6W		R404			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R113			RK73GB2A104J	CHIP R 100K J 1/10W		R405			RK73GB2A473J	CHIP R 47K J 1/10W	
R114,115			RK73GB2A103J	CHIP R 10K J 1/10W		R406			RK73GB2A223J	CHIP R 22K J 1/10W	
R116,117			RD14BB2C103J	RD 10K J 1/6W		R407			RK73GB2A103J	CHIP R 10K J 1/10W	
R201			RK73GB2A473J	CHIP R 47K J 1/10W		R408			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R202			RK73GB2A104J	CHIP R 100K J 1/10W		R409			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R203,204			RK73GB2A103J	CHIP R 10K J 1/10W		R501			RK73GB2A471J	CHIP R 470 J 1/10W	
R205-208			RK73GB2A473J	CHIP R 47K J 1/10W		R502			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R209,210			RK73GB2A471J	CHIP R 470 J 1/10W		R503			RK73GB2A471J	CHIP R 470 J 1/10W	
R212			RK73GB2A473J	CHIP R 47K J 1/10W		R504			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R214			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2	R506-508			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R218			RK73GB2A223J	CHIP R 22K J 1/10W		R509			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R219,220			RD14BB2C104J	RD 100K J 1/6W		R598			RK73GB2A223J	CHIP R 22K J 1/10W	
R221			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2	R599			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R223			RK73GB2A222J	CHIP R 2.2K J 1/10W		R601,602			RK73EB2E100J	CHIP R 10 J 1/4W	
R225			RK73GB2A473J	CHIP R 47K J 1/10W	K1	R603			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R226			RK73GB2A223J	CHIP R 22K J 1/10W	K1	R604			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R226			RK73GB2A473J	CHIP R 47K J 1/10W	KE2	R605			RK73EB2E101J	CHIP R 100 J 1/4W	
R226-228			RK73GB2A473J	CHIP R 47K J 1/10W	E1	R606,607			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R226,227			RK73GB2A473J	CHIP R 47K J 1/10W	M1	R608,609			RK73EB2E101J	CHIP R 100 J 1/4W	
R227			RK73GB2A223J	CHIP R 22K J 1/10W	E2	R610			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R228			RK73GB2A223J	CHIP R 22K J 1/10W	M1	R611			RK73EB2E101J	CHIP R 100 J 1/4W	
R228			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E2	R612			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R229			RK73GB2A104J	CHIP R 100K J 1/10W		R701,702			RK73GB2A331J	CHIP R 330 J 1/10W	
R301			RK73GB2A222J	CHIP R 2.2K J 1/10W		R703,704			RD14BB2C223J	RD 22K J 1/6W	
R302			RK73GB2A101J	CHIP R 100 J 1/10W		R705,706			RD14BB2C181J	RD 180 J 1/6W	
R303-305			RK73GB2A102J	CHIP R 1.0K J 1/10W		R707,708			RK73GB2A331J	CHIP R 330 J 1/10W	
R306			RK73GB2A472J	CHIP R 4.7K J 1/10W		R709,710			RD14BB2C223J	RD 22K J 1/6W	
R307			RK73GB2A222J	CHIP R 2.2K J 1/10W		R711,712			RD14BB2C181J	RD 180 J 1/6W	
R310-313			RK73GB2A102J	CHIP R 1.0K J 1/10W		R713,714			RK73EB2E100J	CHIP R 10 J 1/4W	
R314			RK73GB2A104J	CHIP R 100K J 1/10W		R715			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R315			RK73GB2A472J	CHIP R 4.7K J 1/10W		R716			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R316,317			RK73GB2A222J	CHIP R 2.2K J 1/10W		R717,718			RK73GB2A331J	CHIP R 330 J 1/10W	
R318			RK73GB2A472J	CHIP R 4.7K J 1/10W		R719,720			RD14BB2C223J	RD 22K J 1/6W	
R319			RK73GB2A222J	CHIP R 2.2K J 1/10W		R721,722			RD14BB2C181J	RD 180 J 1/6W	
R320			RK73GB2A472J	CHIP R 4.7K J 1/10W		R802			RK73GB2A154J	CHIP R 150K J 1/10W	
R321			RK73GB2A104J	CHIP R 100K J 1/10W		R804			RK73GB2A331J	CHIP R 330 J 1/10W	
R323			RK73GB2A241J	CHIP R 240 J 1/10W		R805			RK73GB2A154J	CHIP R 150K J 1/10W	
R324			RK73GB2A474J	CHIP R 470K J 1/10W		R806			RK73GB2A822J	CHIP R 8.2K J 1/10W	

K : KDC-MP3035 K1 : KDC-MP335 M1 : KDC-MP6036 E1 : KDC-W5137 E2 : KDC-W5137Y
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-462x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R807			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R808			RK73GB2A100J	CHIP R 10 J 1/10W	
R892			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R901,902			RK73GB2A334J	CHIP R 330K J 1/10W	
R903			RK73GB2A153J	CHIP R 15K J 1/10W	
R904			RK73GB2A223J	CHIP R 22K J 1/10W	
R905,906			RK73GB2A104J	CHIP R 100K J 1/10W	
R907-914			RD14BB2C104J	RD 100K J 1/6W	
R915			RK73GB2A104J	CHIP R 100K J 1/10W	
R954			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2
R967			RK73GB2A471J	CHIP R 470 J 1/10W	
R969			RK73GB2A000J	CHIP R 0.0 J 1/10W	KK1M1
S1			S70-0931-05	TACT SWITCH	
S2			S74-0822-05	MICRO SWITCH	
D1			S2V60*A	DIODE	
D2			MTZJ8.2(B)	ZENER DIODE	
D3			D1F60-5063	DIODE	
D4			1SS133	DIODE	E1E2
D4,5			1SS133	DIODE	KK1M1
D7			MTZJ12(B)	ZENER DIODE	
D101,102			D1F60-5063	DIODE	
D103			AM01ZNF	DIODE	
D104			D1F60-5063	DIODE	
D105			MTZJ4.7(B)	ZENER DIODE	
D106-108			MTZJ6.8(B)	ZENER DIODE	
D109			1SS133	DIODE	
D110			MC2848	DIODE	
D303			MTZJ6.2(B)	ZENER DIODE	E1M1
D401			1SS133	DIODE	
D404			1SS133	DIODE	
D601-606			MTZJ6.8(B)	ZENER DIODE	
D701-703			MTZJ6.8(B)	ZENER DIODE	
D801			MC2848	DIODE	
D803			1SS133	DIODE	
D901			MTZJ4.7(B)	ZENER DIODE	
IC1		*	30622MGPB24FP	MICROCONTROLLER IC	
IC2			E-TDA7419	ANALOGUE IC	
IC4			BD4913-V4	ANALOGUE IC	
IC6			KKZ09Z	ANALOGUE IC	
IC7			LC72725KV	ANALOGUE IC	E1E2
IC8			S-80836CNNB-J	MOS-IC	
IC9			HEF4053BT	MOS-IC	
Q1			UMC2N	TRANSISTOR	
Q2			2SB1565	TRANSISTOR	
Q3			2SC4081	TRANSISTOR	
Q4			UMC2N	TRANSISTOR	KK1M1
Q7			UMC2N	TRANSISTOR	
Q8			2SB1565	TRANSISTOR	
Q9			2SC4081	TRANSISTOR	
Q101-103			2SC4081	TRANSISTOR	
Q104,105			RT1N441M	TRANSISTOR	
Q301			RT1P144M	TRANSISTOR	
Q302			RT1N144M	TRANSISTOR	
Q401			RT1N441M	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q402			2SC4081	TRANSISTOR	
Q701-704			RT1N430M	TRANSISTOR	KK1M1
Q701,702			RT1N430M	TRANSISTOR	E1E2
Q705			RT1P241M	TRANSISTOR	
Q707,708			RT1N430M	TRANSISTOR	KK1M1
Q901			2SC4081	TRANSISTOR	
Q902,903			2SA1576A	TRANSISTOR	
TH1			PRF18BE471QS2	POSITIVE RESISTOR	
A1	2D		X86-4030-11	FRONT-END UNIT	KK1M1
A1	2D		X86-4032-70	FRONT-END UNIT	E1E2
MECHANISM ASSY (X92-5880-00) DXM-6E00W					
1	2B		A10-5328-11	CHASSIS	
2	1B		A10-5329-01	CHASSIS	
5	2B		D10-4910-13	ARM ASSY	
8	2A		D10-4911-03	LEVER ASSY	
10	2A		D10-4906-33	ARM	
11	2A		D10-4907-33	ARM	
12	3A		D10-4908-03	ARM	
13	3A		D10-4909-03	ARM	
14	3B		D10-4915-03	ARM	
15	2A		D10-4916-23	SLIDER	
16	3B		D10-4914-12	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4917-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2400-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-4615-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1547-04	FLAT SPRING	
51	1A		J22-0473-21	MOUNTING HARDWARE	
52	3B		J22-0474-12	MOUNTING HARDWARE	
53	1B		J22-0519-03	MOUNTING HARDWARE	
55	1A		J90-1138-31	GUIDE	
56	1B		J90-1023-03	GUIDE	

K : KDC-MP3035 K1 : KDC-MP335 M1 : KDC-MP6036 E1 : KDC-W5137 E2 : KDC-W5137Y
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-5880-00) DXM-6E00W

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DFPC1	3A		J86-0027-05	FPC (LEAD FREE)	
A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
B	1B		N09-6317-05	TAPTITE SCREW (1.6X6.0)	
C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-15	MACHINE SCREW (M2X2)	
F	1A		N09-6051-15	TAPTITE SCREW (PT2X5)	
G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
H	1B		N39-2020-48	PAN HEAD MACHINE SCREW (M2X2)	
J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING/SLED)	
DPU1	2B		X93-2130-01	OPTICAL PICKUP ASSY (LF)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation