


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ▽ mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
- (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

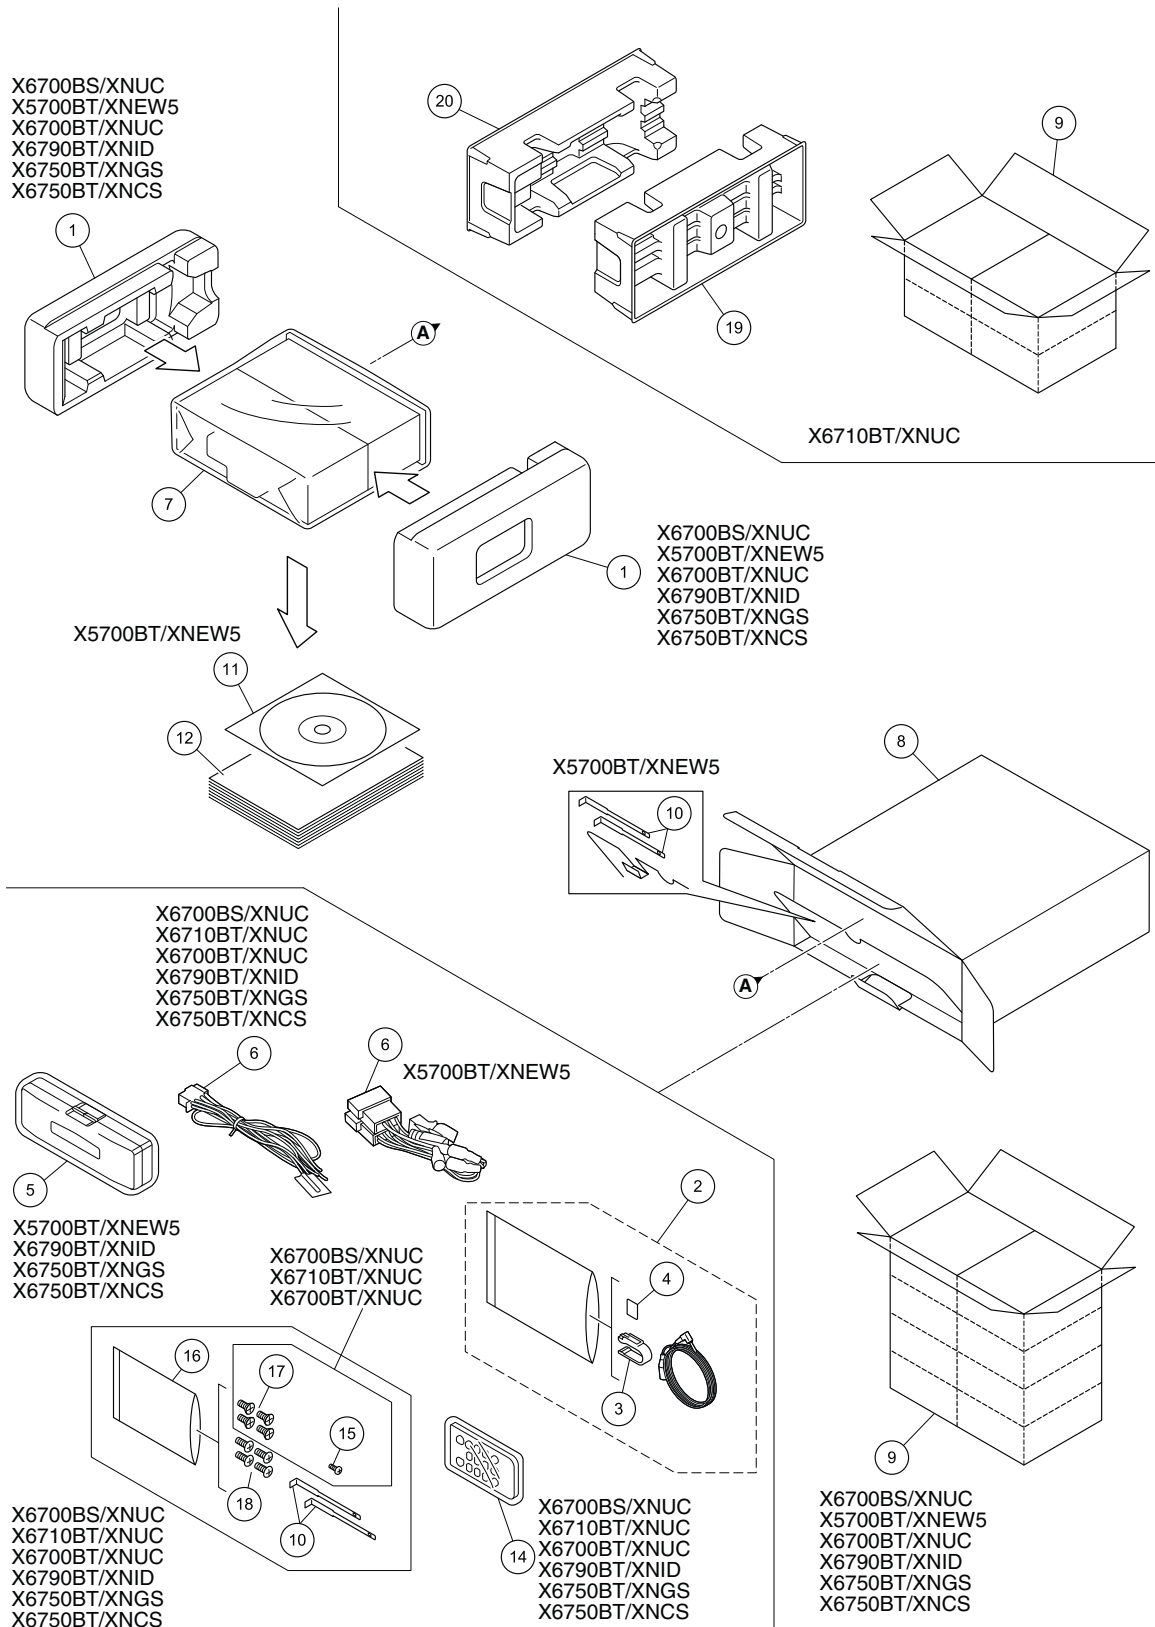

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Protector	See Contrast table (2)	* 12-4	Caution Card	See Contrast table (2)
2	Microphone Assy	CPM1083			
3	Holder	CZN7192	* 12-5	Caution Card	See Contrast table (2)
4	Cushion	CZN7193	* 12-6	Warranty Card	See Contrast table (2)
5	Case Assy	See Contrast table (2)	* 12-7	Service Network	See Contrast table (2)
			13		
6	Cord Assy	See Contrast table (2)	14	Card Remote Control Unit	See Contrast table (2)
7	Polyethylene Bag	See Contrast table (2)			
8	Unit Box	See Contrast table (2)	15	Screw	See Contrast table (2)
9	Contain Box	See Contrast table (2)	16	Polyethylene Bag	See Contrast table (2)
10	Handle	QNC3021	17	Screw	See Contrast table (2)
			18	Screw	See Contrast table (2)
11	IM CD ROM	See Contrast table (2)	19	Protector	See Contrast table (2)
12-1	Owner's Manual	See Contrast table (2)			
12-2	Quick Start Guide	See Contrast table (2)	20	Protector	See Contrast table (2)
12-3	Installation Manual	See Contrast table (2)			

(2) CONTRAST TABLE

DEH-X6700BS/XNUC, DEH-X5700BT/XNEW5, DEH-X6710BT/XNUC, DEH-X6700BT/XNUC, DEH-X6790BT/XNID, DEH-X6750BT/XNGS and DEH-X6750BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X6700BS/ XNUC	DEH-X5700BT/ XNEW5	DEH-X6710BT/ XNUC	DEH-X6700BT/ XNUC	DEH-X6790BT/ XNID
	1	Protector	CHP4594	CHP4594	Not used	CHP4594	CHP4594
	5	Case Assy	Not used	QXA3129	Not used	Not used	QXA3129
	6	Cord Assy	CDP1484	QDP3072	CDP1484	CDP1484	CDP1484
	7	Polyethylene Bag	CEG1173	QEG3001	CEG1173	CEG1173	QEG3001
	8	Unit Box	QHG3642	QHG3641	QHG3644	QHG3643	QHG3647
	9	Contain Box	QHL3642	QHL3641	QHL3644	QHL3643	QHL3647
	11	IM CD ROM	Not used	QPJ3029	Not used	Not used	Not used
	12-1	Owner's Manual	QRD3265	QRB3457	QRD3265	QRD3265	QRB3466
	12-2	Quick Start Guide	Not used	QRD3263	Not used	Not used	Not used
	12-3	Installation Manual	Not used	QRD3264	Not used	Not used	Not used
*	12-4	Caution Card	Not used	CRP1438	Not used	Not used	Not used
*	12-5	Caution Card	Not used	CRP1441	Not used	Not used	Not used
*	12-6	Warranty Card	QRY3001	CRY1376	QRY3001	QRY3001	CRY1304
*	12-7	Service Network	Not used	Not used	Not used	Not used	CRY1305
	14	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044	QXE1044
	15	Screw	BPZ20P060FTC	Not used	BPZ20P060FTC	BPZ20P060FTC	Not used
	16	Polyethylene Bag	CEG1160	Not used	CEG1160	CEG1160	CEG1160
	17	Screw	CRZ50P090FTC	Not used	CRZ50P090FTC	CRZ50P090FTC	Not used
	18	Screw	TRZ50P080FTC	Not used	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
	19	Protector	Not used	Not used	CHP4103	Not used	Not used
	20	Protector	Not used	Not used	CHP4104	Not used	Not used

Mark	No.	Description	DEH-X6750BT/ XNGS	DEH-X6750BT/ XNCS
	1	Protector	CHP4594	CHP4594
	5	Case Assy	QXA3129	QXA3129
	6	Cord Assy	CDP1484	CDP1484
	7	Polyethylene Bag	QEG3001	QEG3001
	8	Unit Box	QHG3646	QHG3645
	9	Contain Box	QHL3646	QHL3645
	11	IM CD ROM	Not used	Not used
	12-1	Owner's Manual	QRD3267	QRD3266
	12-2	Quick Start Guide	Not used	Not used
	12-3	Installation Manual	Not used	Not used

Mark	No.	Description	DEH-X6750BT/ XNGS	DEH-X6750BT/ XNCS
*	12-4	Caution Card	Not used	Not used
*	12-5	Caution Card	Not used	Not used
*	12-6	Warranty Card	Not used	Not used
*	12-7	Service Network	Not used	Not used
	14	Card Remote Control Unit	QXE1044	QXE1044
	15	Screw	Not used	Not used
	16	Polyethylene Bag	CEG1160	CEG1160
	17	Screw	Not used	Not used
	18	Screw	TRZ50P080FTC	TRZ50P080FTC
	19	Protector	Not used	Not used
	20	Protector	Not used	Not used

Owner's Manual, Installation Manual

Part No.	Language
QRD3263	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3264	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3265	English, French, Spanish(Espanol)
QRD3266	English, Spanish(Espanol), Portuguese(B)
QRD3267	English, Traditional Chinese, Arabic, Persian
QRB3457	Russian
QRB3466	English


CONTENTS OF CD-ROM (Operation Manual), QPJ3029

Part No.	Language
* QRB3451	English
* QRB3452	French
* QRB3453	Italian
* QRB3454	Spanish(Espanol)
* QRB3455	German
* QRB3456	Dutch
* QRB3457	Russian
* QRB3458	Swedish
* QRB3459	Norwegian
* QRB3460	Finnish
* QRB3461	Danish
* QRB3462	Portuguese
* QRB3463	Greek
* QRB3464	Turkish

All operation manuals are supplied in PDF files by the CD-ROM.

Regarding the availability of paper manual, contact Pioneer Service representative in your region.

9.2 EXTERIOR

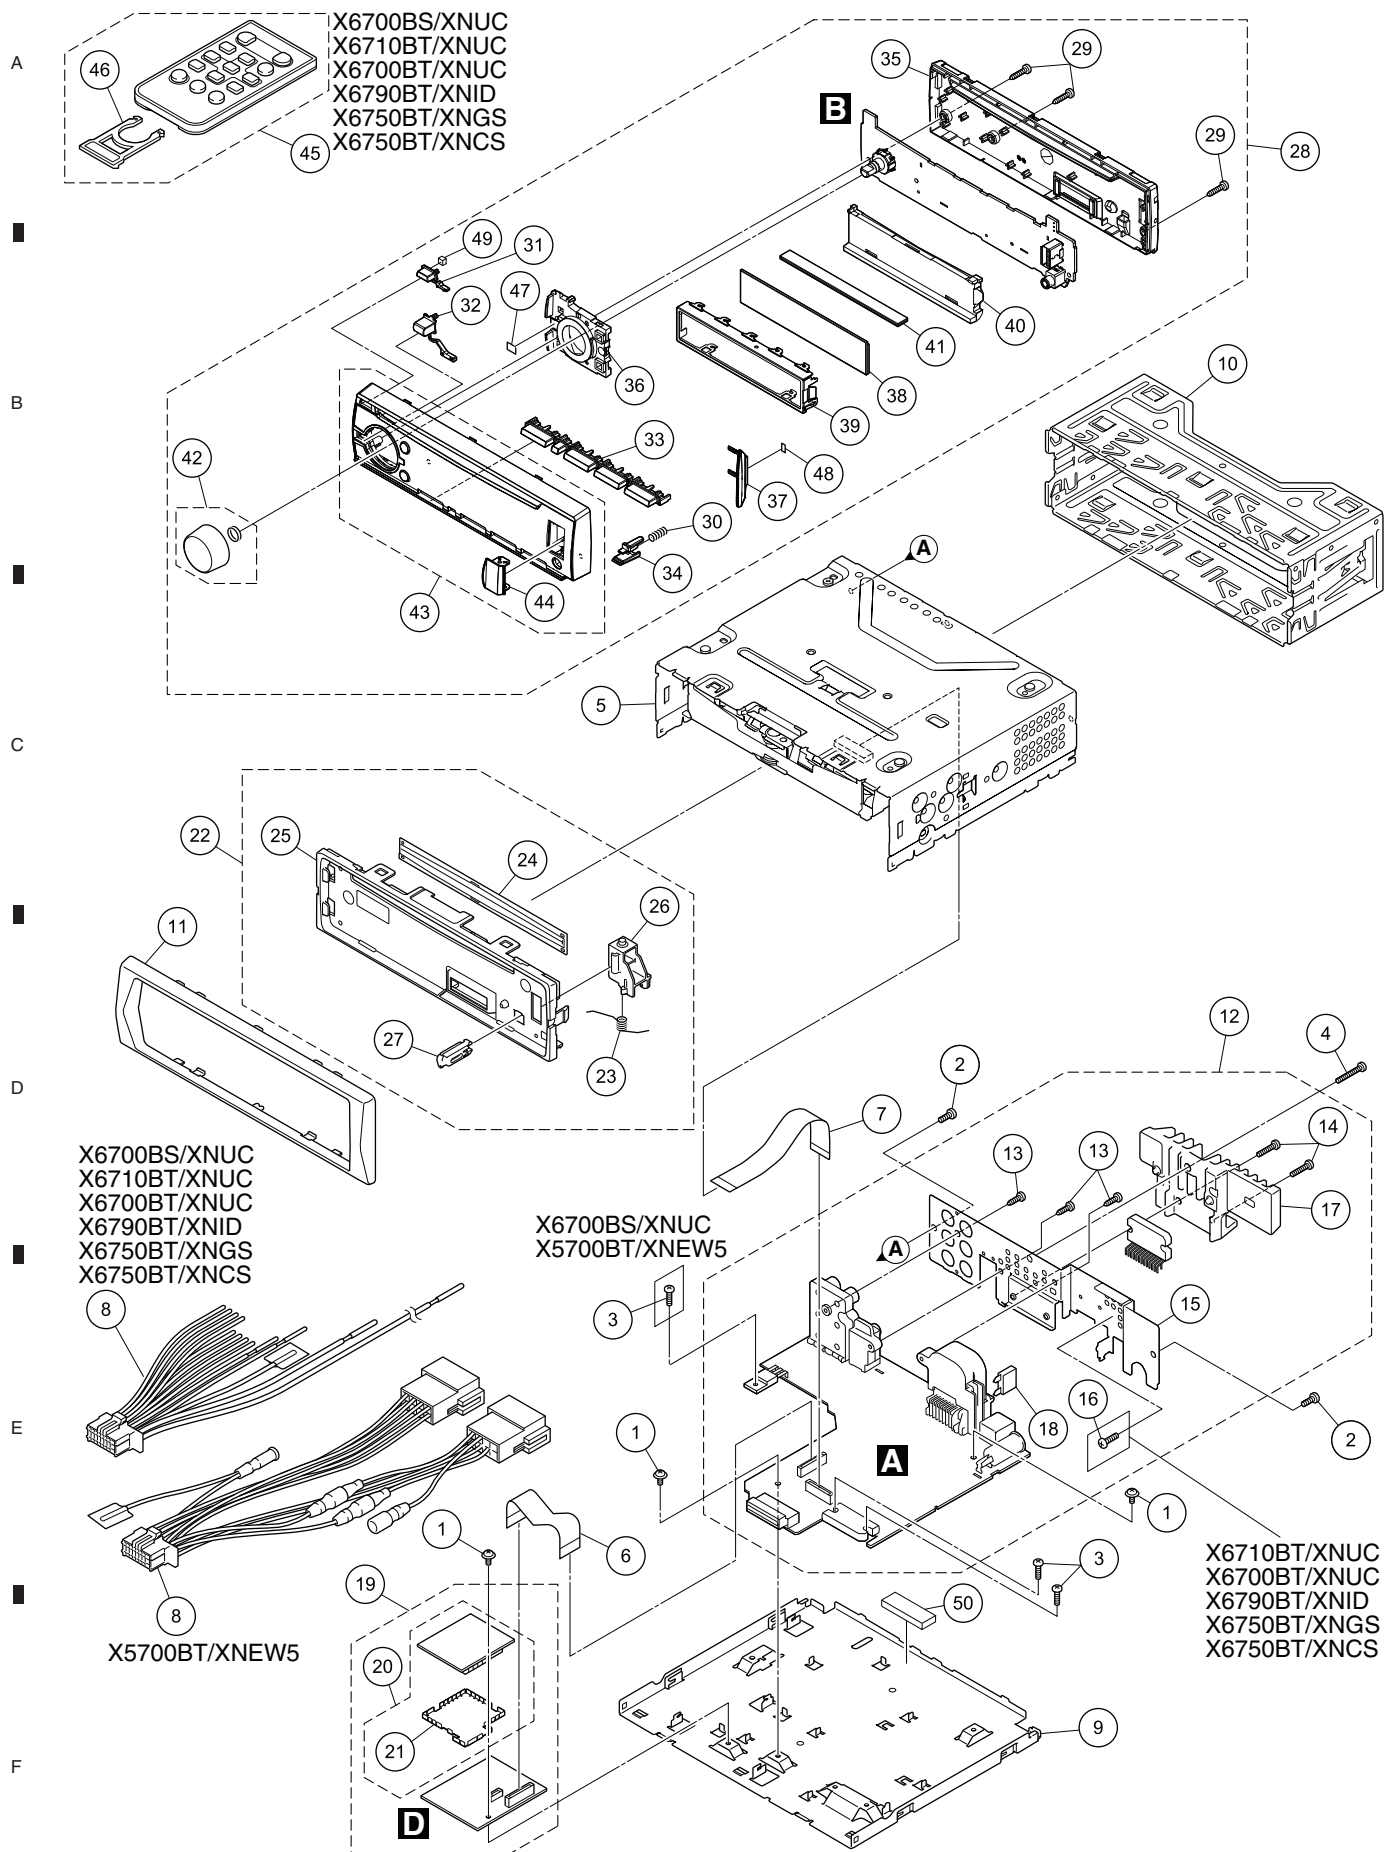

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	ASZ26P050FTC	26	Arm	QNV3025
2	Screw	BSZ26P060FTC	27	Button	QNV3026
3	Screw	BSZ26P080FTC	28	Detachable Grille Assy	See Contrast table (2)
4	Screw	BSZ26P120FTC	29	Screw	BPZ20P100FTC
5	CD Mechanism Module (S11.6VA)	CXK5805	30	Spring	CBH2210
6	FFC	QDE3028	31	Button (EJECT)	QAC3166
7	FFC	QDE3029	32	Button (PHONE)	QAC3167
8	Cord Assy	See Contrast table (2)	33	Button (1-6)	QAC3170
9	Case	See Contrast table (2)	34	Button (DETACH)	QAC3171
10	Holder	QNC3020	35	Cover	QNS3701
11	Panel	QNS3576	36	Lighting Conductor	QNV3094
12	Tuner Amp Unit	See Contrast table (2)	37	Lighting Conductor	QNV3095
13	Screw	BPZ26P080FTC	38	Segment LCD (V1801)	CAW2041
14	Screw	BSZ26P120FTC	39	Holder	QNC3088
15	Holder	See Contrast table (2)	40	Lighting Conductor	QNV3093
16	Screw	See Contrast table (2)	41	Rubber Connector	QNV3079
17	Heat Sink	See Contrast table (2)	42	Knob Unit	See Contrast table (2)
⚠ 18	Fuse (10 A)	YEK5001	43	Grille Unit	See Contrast table (2)
19	BT Unit	QWM3995	44	Door	QAT3013
20	BT Module	YWX5052	45	Card Remote Control Unit	See Contrast table (2)
21	Shield Case	YNC5123	46	Cover	See Contrast table (2)
22	Panel Assy	QXA3261	47	Sheet	QNM3123
23	Spring	QBH3001	48	Sheet	QNM3124
24	Cover	QNM3029	49	Cushion	QNM3131
25	Panel	QNS3126	50	Sheet	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X6700BS/XNUC, DEH-X5700BT/XNEW5, DEH-X6710BT/XNUC, DEH-X6700BT/XNUC, DEH-X6790BT/XNID, DEH-X6750BT/XNGS and DEH-X6750BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X6700BS/ XNUC	DEH-X5700BT/ XNEW5	DEH-X6710BT/ XNUC	DEH-X6700BT/ XNUC	DEH-X6790BT/ XNID
	8	Cord Assy	CDP1484	QDP3072	CDP1484	CDP1484	CDP1484
	9	Case	QNB3019	QNB3019	QNB3022	QNB3022	QNB3022
	12	Tuner Amp Unit	QWM3861	QWM3860	QWM3863	QWM3862	QWM3866
	15	Holder	QNC3075	QNC3074	QNC3053	QNC3053	QNC3053
	16	Screw	Not used	Not used	BSZ26P060FTC	BSZ26P060FTC	BSZ26P060FTC
	17	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002
	28	Detachable Grille Assy	QXA4153	QXA4152	QXA4155	QXA4154	QXA4158
	42	Knob Unit	CXE3692	QXA3694	CXE3692	CXE3692	QXA3694
	43	Grille Unit	QXA4126	QXA4127	QXA4128	QXA4125	QXA4131
	45	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044	QXE1044
	46	Cover	CNS7068	Not used	CNS7068	CNS7068	CNS7068
	50	Sheet	QNM3130	QNM3130	QNM3130	QNM3130	Not used

Mark	No.	Description	DEH-X6750BT/ XNGS	DEH-X6750BT/ XNCS
	8	Cord Assy	CDP1484	CDP1484
	9	Case	QNB3022	QNB3022
	12	Tuner Amp Unit	QWM3865	QWM3864
	15	Holder	QNC3053	QNC3053
	16	Screw	BSZ26P060FTC	BSZ26P060FTC

A

Mark	No.	Description	DEH-X6750BT/ XNGS	DEH-X6750BT/ XNCS
	17	Heat Sink	QNR3002	QNR3010
	28	Detachable Grille Assy	QXA4157	QXA4156
	42	Knob Unit	QXA3694	CXE3692
	43	Grille Unit	QXA4130	QXA4129
	45	Card Remote Control Unit	QXE1044	QXE1044
■	46	Cover	CNS7068	CNS7068
	50	Sheet	Not used	Not used

B

■

C

■

D


■

E

■

F

9.3 CD MECHANISM MODULE

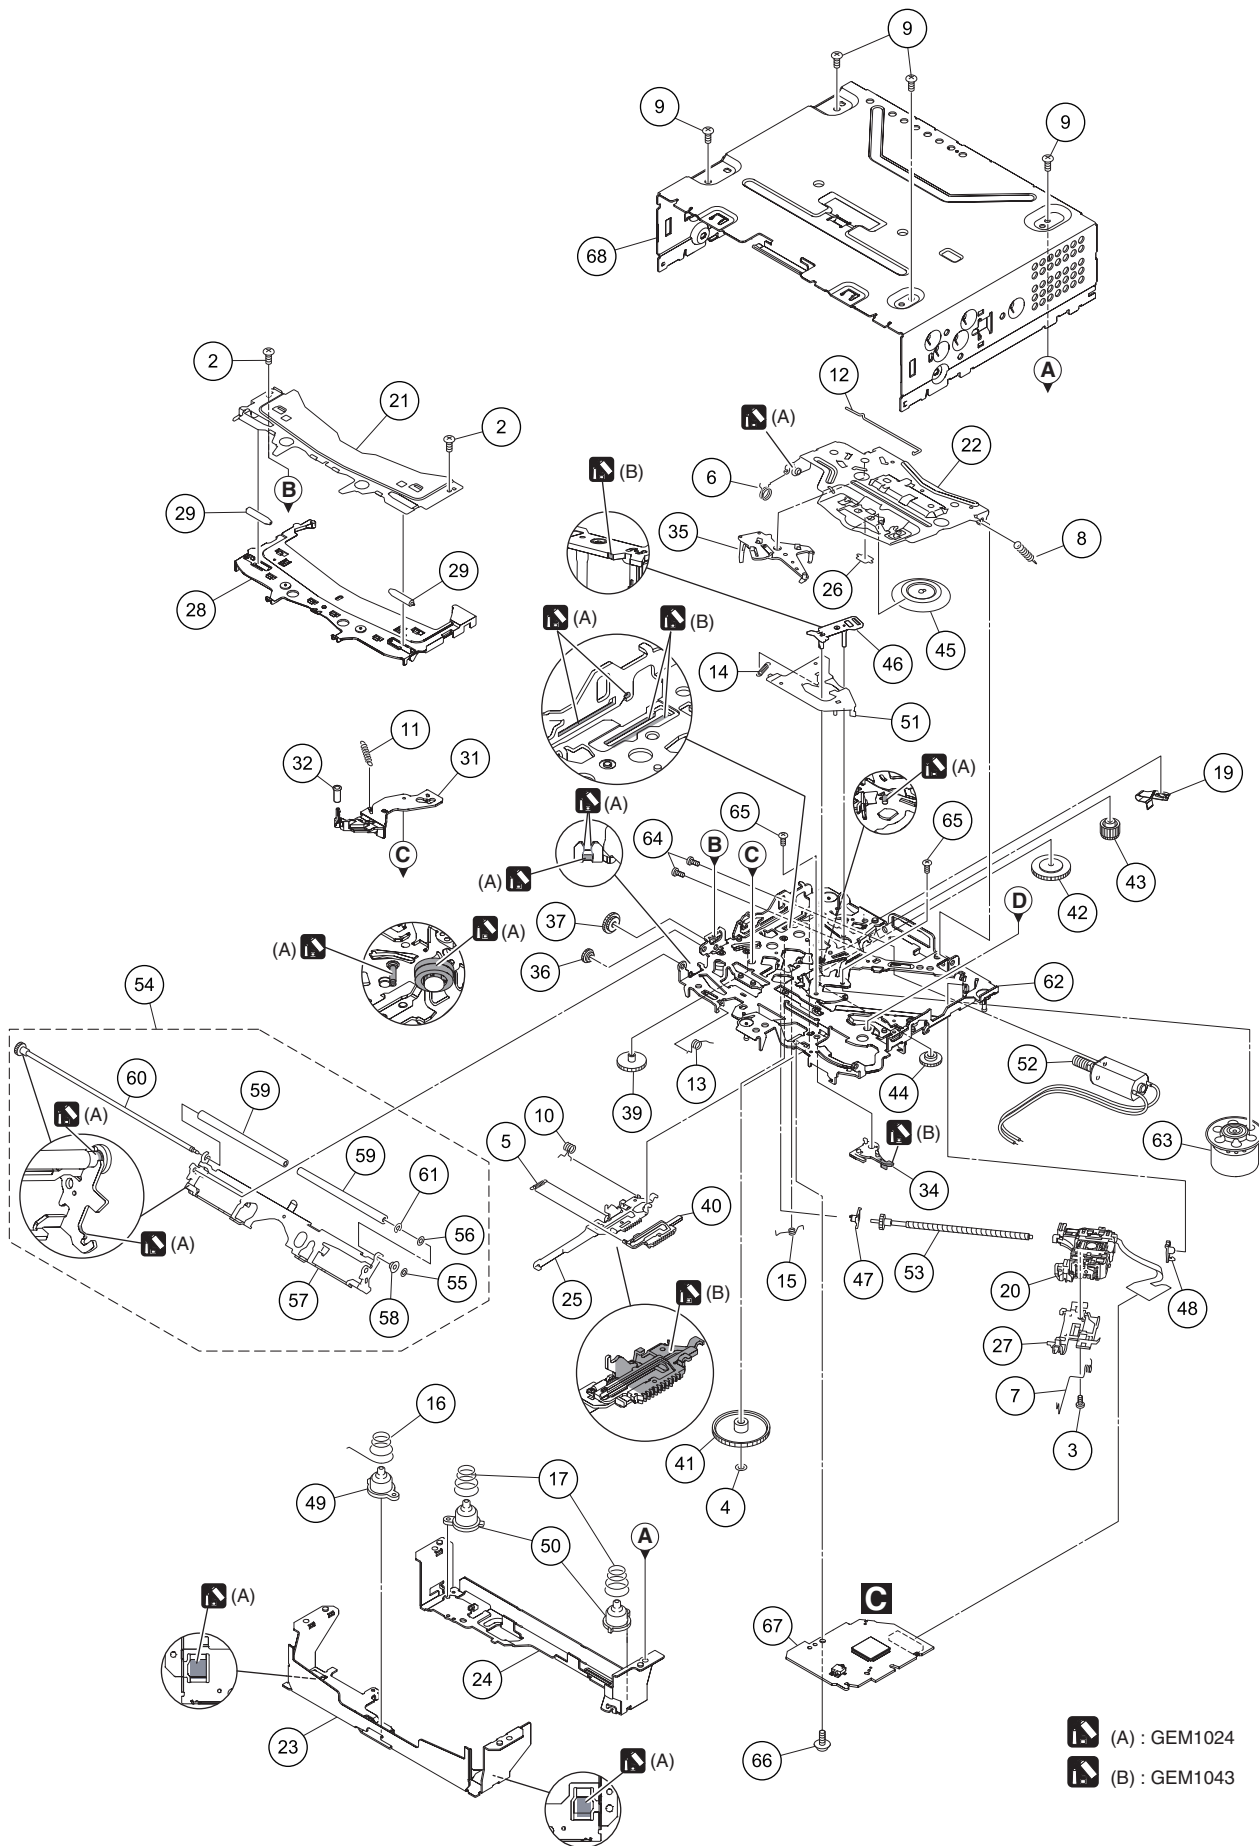

DEH-X6700BS/XNUC

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE6232	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNW2444	
11	Coil Spring	CBH3095	59	Roller	CNW2500	
12	Spring	CBH3014	60	Gear Unit	CXE6225	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6VA)	CWX4269	
20	PU Unit(P11)(Service)	CXX4754	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND6406				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30						
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by μ instead of μ . Please do not make a mistake.

Circuit Symbol and No.	Part No.
A:DEH-X6700BS/XNUC	
B:DEH-X5700BT/XNEW5	
C:DEH-X6710BT/XNUC	
D:DEH-X6700BT/XNUC	
E:DEH-X6790BT/XNID	
F:DEH-X6750BT/XNGS	
G:DEH-X6750BT/XNCS	
Unit Number : QWM3861(A)	
Unit Number : QWM3860(B)	
Unit Number : QWM3863(C)	
Unit Number : QWM3862(D)	
Unit Number : QWM3866(E)	
Unit Number : QWM3865(F)	
Unit Number : QWM3864(G)	
Unit Name : Tuner Amp Unit	
Unit Number : (A,C,D,E,F,G)	
Unit Number : (B)	
Unit Name : Keyboard Unit	
Unit Number : CWX4269	
Unit Name : CD Core Unit(S11.6VA)	
Unit Number : QWM3995	
Unit Name : BT Unit	

A

Unit Number : QWM3861(A)
Unit Number : QWM3860(B)
Unit Name : Tuner Amp Unit

Circuit Symbol and No.	Part No.
MISCELLANEOUS	
IC 201 (A,99,106) E-VOL SYS LSI	PM9013A
IC 301 (A,79,141) IC	PAL013A
IC 401 (A,149,87) IC	TEF6686HN
IC 451 (A,164,75) IC	MM3571A33P
IC 531 (A,93,86) IC	337S3959
IC 551 (A,42,112) IC	KBD9876EFJ
IC 552 (A,107,24) IC	BD2232G-G
IC 601 (A,112,74) FLASH BLANK UC IC	R5S726B0D216FP
IC 602 (A,131,68) IC	TC7SH126FU
IC 603 (A,137,66) L-MOS And Gate	TC7SET08FUS1
IC 671 (A,133,74) IC	S-80827CNMC-B8M
IC 681 (A,115,94) FLASHROM IC(A)	* PEB143A8
(A,115,94) FLASHROM IC(B)	* PEB142A8
IC 801 (A,105,18) L-MOS And Gate	TC7SET08FUS1
IC 911 (A,145,28) IC	BA49183-V12
Q 251 (A,20,129) Transistor	EMH53
Q 252 (A,28,129) Transistor(A)	EMH53
Q 253 (A,13,129) Transistor	EMH53
Q 301 (A,60,124) Transistor	EMD52
Q 531 (A,89,94) Transistor	LSAR523UB
Q 751 (A,14,102) Transistor	KTD2092
Q 752 (A,10,107) Transistor	EMD52
Q 871 (A,151,62) Transistor	2SAR502UB
Q 872 (A,150,54) Transistor	LTC143EUB
Q 941 (A,128,108) Transistor	LSCR523UB
Q 1011 (A,98,120) Transistor	LTC014EEB
D 301 (A,92,125) Diode	CRG03
D 302 (A,92,128) Diode	CRG03
D 551 (A,24,118) Diode	CMS30I30A
D 552 (A,44,105) Diode	RB056L-40
D 601 (A,136,79) Diode	RB751SM-40
D 602 (A,126,63) Diode	RB751SM-40
D 751 (A,16,107) Diode	DZ2J082M0
D 801 (A,108,12) Diode	DZ2S068C
D 802 (A,93,16) Diode	DZ2S068C
D 803 (A,125,15) Diode	DZ2S068C
D 804 (A,119,13) Diode	DZ2S068C

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 805 (A,121,13) Diode DZ2S068C
 D 806 (A,117,13) Diode DZ2S068C
 D 807 (A,114,13) Diode DZ2S068C
 A D 901 (A,138,127) Diode D1F60-5053
 D 902 (A,135,127) Diode D1F60-5053

R 402 (A,150,94)
 R 403 (A,140,94)
 R 404 (A,151,109)
 R 405 (A,154,109)

RS1/16SS0R0J
 RS1/16SS391J
 RS1/16SS105J
 RS1/16SS105J

D 911 (A,159,66) Diode CRG03
 D 912 (A,162,66) Diode CRG03
 D 941 (A,129,112) Diode(A) DZ2J068M0
 (A,129,112) Diode(B) DZ2J075M0
 D 1011 (A,101,124) Diode CRG03
 L 202 (A,91,101) Inductor CTF1793

R 406 (A,152,81)
 R 407 (A,153,81)
 R 408 (A,156,81)
 R 410 (A,155,81)
 R 437 (A,153,79)

RS1/16SS101J
 RS1/16SS101J
 RS1/16SS103J
 RS1/16SS103J
 RS1/16SS472J

L 402 (A,142,93) Inductor LCTAW150J2520
 L 404 (A,145,108) Inductor CTF1389
 L 408 (A,154,104) Inductor LCMAR27J1608
 B L 551 (A,52,107) Inductor CTH1584
 L 801 (A,115,16) Inductor CTF1713

R 438 (A,151,79)
 R 452 (A,165,89)
 R 454 (A,147,74)
 R 455 (A,166,88)
 R 531 (A,90,90)

RS1/16SS472J
 RS1/16SS0R0J
 RS1/16SS0R0J
 RS1/16SS0R0J
 RS1/16SS473J

L 901 (A,112,141) Choke Coil 600 uH CTH1432
 T 401 (A,151,99) Variable Coil CTC1215
 X 401 (A,159,85) Resonator 9.216 MHz CSS1864
 X 601 (A,128,74) Resonator 12.0 MHz CSS1847
 X 603 (A,125,91) Resonator 16.93 MHz CSS1794

R 532 (A,90,84)
 R 533 (A,91,84)
 R 534 (A,94,90)
 R 535 (A,95,89)
 R 536 (A,97,89)

RS1/16SS222J
 RS1/16SS222J
 RS1/16SS272J
 RS1/16SS472J
 RS1/16SS472J

⚠ P251 (A,6,130) Fuse 3.0 A CEK1386
 P 402 (A,159,110) Absorber HSPC16701B02
 ⚠ P1001 (A,153,72) Fuse 1.25 A(B) CEK1281
 P 1002 (A,158,73) Poly Switch(A) FSMD110-24R
 C VA801 (A,107,14) Varistor MLV0402ES012V0010N

R 537 (A,95,85)
 R 538 (A,95,83)
 R 551 (A,48,112)
 R 552 (A,53,113)
 R 553 (A,49,113)

RS1/16SS101J
 RS1/16SS101J
 RS1/16SS682J
 RS1/16SS0R0J
 RS1/16SS1803D

VA802 (A,102,13) Varistor MLV0402ES012V0010N
 CN701 (A,114,32) Connector VKN1192
 CN801 (A,109,3) Connector CKS6452
 CN971 (A,93,49) Connector VKN1192
 JA251 (A,19,141) Pin Jack(A) XKB7001
 (A,19,141) Jack(B) CKB1109

R 554 (A,49,111)
 R 555 (A,64,103)
 R 601 (A,101,63)
 R 603 (A,111,46)
 R 609 (A,125,65)

RS1/16SS4302D
 RS1/10SR471J
 RS1/16SS473J
 RS1/16SS473J
 RS1/16SS473J

JA401 (A,162,128) Plug YKS5041
 JA892 (A,43,141) Jack CKN1103
 JA901 (A,114,141) Plug CKM1624
 JA961 (A,142,143) Connector CKS3806
 D ⚠ Fuse (10 A) YEK5001

R 610 (A,125,67)
 R 611 (A,129,69)
 R 613 (A,125,74)
 R 614 (A,132,78)
 R 615 (A,135,77)

RS1/16SS473J
 RS1/16SS473J
 RS1/16SS152J
 RS1/16SS473J
 RS1/16SS473J

RESISTORS

R 251 (A,22,127) RS1/16SS821J
 R 252 (A,20,124) RS1/16SS821J
 R 253 (A,22,129) RS1/16SS223J
 R 254 (A,18,125) RS1/16SS223J
 R 255 (A,31,128) (A) RS1/16SS821J

R 624 (A,124,89)
 R 625 (A,116,89)
 R 626 (A,115,89)
 R 627 (A,114,89)
 R 628 (A,113,89)

RS1/16SS222J
 RS1/16SS221J
 RS1/16SS221J
 RS1/16SS221J
 RS1/16SS221J

R 256 (A,25,127) (A) RS1/16SS821J
 R 257 (A,30,130) (A) RS1/16SS223J
 R 258 (A,25,129) (A) RS1/16SS223J
 E R 260 (A,14,125) RS1/16SS821J
 R 261 (A,11,128) RS1/16SS821J

R 629 (A,110,91)
 R 630 (A,109,91)
 R 631 (A,107,92)
 R 632 (A,108,87)
 R 633 (A,106,92)

RS1/16SS221J
 RS1/16SS221J
 RS1/16SS473J
 RS1/16SS473J
 RS1/16SS101J

R 262 (A,15,126) RS1/16SS223J
 R 263 (A,11,129) RS1/16SS223J
 R 264 (A,16,129) (A) RS1/16SS0R0J
 R 265 (A,17,127) (B) RS1/16SS0R0J
 R 266 (A,17,128) (A) RS1/16SS0R0J

R 634 (A,103,90)
 R 636 (A,100,91)
 R 637 (A,101,89)
 R 638 (A,104,92)
 R 643 (A,98,81)

RS1/16SS102J
 RS1/16SS473J
 RS1/16SS473J
 RS1/16SS473J
 RS1/16SS104J

R 267 (A,15,129) (B) RS1/16SS0R0J
 R 305 (A,59,121) RS1/16SS103J
 R 306 (A,61,121) RS1/16SS221J
 F R 307 (A,61,122) RS1/16SS223J
 R 309 (A,84,120) RS1/16SS103J

R 644 (A,97,78)
 R 645 (A,94,79)
 R 646 (A,124,62)
 R 647 (A,98,74)
 R 648 (A,94,76)

RS1/16SS101J
 RS1/16SS101J
 RS1/16SS103J
 RS1/16SS101J
 RS1/16SS102J

R 401 (A,151,94) RS1/16SS0R0J

R 649 (A,94,75)

RS1/16SS102J

1

2

3

4

5	6	7	8
<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 650 (A,94,74)	RS1/16SS102J	R 913 (A,154,42)	RS1/16SS223J
R 651 (A,91,72)	RS1/16SS473J	R 914 (A,133,41)	RS1/16SS223J
R 652 (A,95,68)	RS1/16SS222J	R 930 (A,138,122)	RS1/10SR0R0J
R 653 (A,97,65)	RS1/16SS103J	R 941 (A,126,110)	RS1/16SS223J
		R 942 (A,126,111)	RS1/16SS473J
R 655 (A,116,60)	RS1/16SS0R0J		
R 656 (A,117,52)	RS1/16SS0R0J	R 943 (A,131,112) (A)	RS1/16SS682J
R 659 (A,125,61)	RS1/16SS153J	(A,131,112) (B)	RS1/16SS333J
R 660 (A,124,60)	RS1/16SS153J	R 944 (A,126,114) (A)	RS1/4SA102J
R 662 (A,129,66)	RS1/16SS473J	(A,126,114) (B)	RS1/4SA122J
		R 961 (A,148,133) (A)	RS1/16SS181J
R 663 (A,141,76)	RS1/16SS0R0J	R 962 (A,145,132) (A)	RS1/16SS223J
R 664 (A,92,68)	RS1/16SS103J	R 963 (A,145,130) (A)	RS1/16SS181J
R 665 (A,124,85)	RS1/16SS473J		
R 667 (A,129,64)	RS1/16SS473J	R 964 (A,145,131) (A)	RS1/16SS223J
R 669 (A,108,61)	RS1/16SS473J	R 965 (A,143,131)	RAB4CQ102J
		R 973 (A,90,62)	RS1/16SS222J
R 671 (A,131,70)	RS1/16SS104J	R 974 (A,98,54)	RS1/16SS101J
R 681 (A,110,96)	RS1/16SS473J	R 975 (A,98,53)	RS1/16SS101J
R 682 (A,111,90)	RS1/16SS473J		
R 683 (A,121,92)	RS1/16SS473J	R 976 (A,98,51)	RS1/16SS101J
R 684 (A,110,94)	RS1/16SS473J	R 1003 (A,140,59)	RS1/16SS473J
		R 1008 (A,147,66)	RS1/10SR0R0J
R 685 (A,121,96)	RS1/16SS473J	R 1009 (A,137,58)	RS1/16SS473J
R 701 (A,109,37)	RS1/16SS473J	R 1011 (A,101,120)	RS1/16SS103J
R 702 (A,115,37)	RS1/16SS104J		
R 703 (A,118,27)	RAB4CQ472J	R 1013 (A,101,126)	RS1/4SA102J
R 704 (A,110,40)	RS1/16SS104J		
		CAPACITORS	
R 706 (A,108,36)	RS1/16SS221J	C 201 (A,94,115)	CKSRYB105K10
R 707 (A,108,37)	RS1/16SS221J	C 202 (A,101,115)	CKSRYB105K10
R 708 (A,110,37)	RS1/16SS101J	C 203 (A,89,115)	CKSRYB105K10
R 709 (A,111,37)	RS1/16SS221J	C 204 (A,105,114)	CKSRYB105K10
R 710 (A,112,37)	RS1/16SS101J	C 205 (A,92,115)	CKSRYB105K10
R 711 (A,114,38)	RS1/16SS102J		
R 715 (A,117,36)	RAB4CQ151J	C 206 (A,104,112)	CKSRYB105K10
R 718 (A,122,36)	RS1/16SS221J	C 207 (A,89,108)	CKSSYB104K10
R 719 (A,121,36)	RS1/16SS104J	C 208 (A,91,106)	CKSSYB104K10
R 752 (A,14,108)	RS1/4SA391J	C 209 (A,90,104) 10 uF	CCG1192
		C 210 (A,93,106)	CCSSCH151J50
R 753 (A,106,40)	RS1/16SS473J		
R 754 (A,105,41)	RS1/16SS103J	C 211 (A,107,106)	CCSSCH151J50
R 801 (A,124,20)	RS1/10SR222J	C 212 (A,105,108) 10 uF	CCG1192
R 803 (A,121,17)	RS1/16SS223J	C 213 (A,106,105)	CKSSYB104K10
R 804 (A,119,17)	RS1/16SS223J	C 214 (A,106,104)	CKSSYB104K10
		C 215 (A,105,102)	CKSSYB104K10
R 805 (A,121,19)	RS1/10SR101J		
R 806 (A,118,19)	RS1/10SR101J	C 216 (A,88,100) 10 uF	CCG1192
R 807 (A,120,19)	RS1/10SR101J	C 217 (A,92,100)	CKSSYB104K10
R 808 (A,124,19)	RS1/10SR222J	C 218 (A,112,109)	XCEVW470M16
R 809 (A,116,20)	RS1/10SR220J	C 219 (A,110,102) 10 uF	CCG1192
		C 220 (A,103,98) 10 uF	CCG1192
R 810 (A,114,20)	RS1/10SR220J		
R 813 (A,107,15)	RS1/10SR222J	C 223 (A,87,101)	CKSSYB102K50
R 814 (A,101,18)	RS1/10SR222J	C 224 (A,112,103)	CKSSYB104K10
R 815 (A,100,18)	RS1/16SS822J	C 229 (A,108,111)	CKSSYB102K50
R 816 (A,96,19)	RS1/10SR222J	C 236 (A,107,103)	CKSRYB105K10
		C 237 (A,92,114) (A)	CKSRYB105K10
R 817 (A,95,19)	RS1/10SR222J		
R 819 (A,90,19)	RS1/10SR0R0J	C 238 (A,107,113) (A)	CKSRYB105K10
R 851 (A,93,19)	RS1/16SS472J	C 239 (A,105,116) (A)	CKSRYB105K10
R 871 (A,157,66)	RS1/10SR332J	C 240 (A,93,111) (A)	CKSRYB105K10
R 872 (A,157,68)	RS1/16SS103J	C 241 (A,86,100)	CKSSYB102K50
		C 251 (A,26,125) 10 uF	DCH1201
R 878 (A,124,26)	RS1/10SR473J		
R 891 (A,58,137)	RS1/16SS102J	C 252 (A,22,125) 10 uF	DCH1201
R 892 (A,58,136)	RS1/16SS102J	C 253 (A,22,128)	CCSSCH101J50
R 911 (A,145,40)	RS1/10SR1R0J	C 254 (A,17,126)	CCSSCH101J50
R 912 (A,141,41)	RS1/10SR1R0J	C 255 (A,34,126) 10 uF(A)	DCH1201
		C 256 (A,30,125) 10 uF(A)	DCH1201

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	C 257 (A,30,129) (A)	CCSSCH101J50	C 612 (A,125,81)	CKSSYB104K10
	C 258 (A,25,130) (A)	CCSSCH101J50	C 613 (A,124,84)	CKSSYB104K10
	C 260 (A,34,131)	CKSSYB103K16	C 618 (A,126,89)	CCSSCH120J50
	C 261 (A,6,132)	CKSSYB104K10	C 619 (A,126,94)	CCSSCH120J50
	C 262 (A,16,123) 10 uF	DCH1201	C 620 (A,116,87)	CKSSYB104K10
	C 263 (A,12,123) 10 uF	DCH1201	C 621 (A,112,87)	CKSSYB104K10
	C 264 (A,15,127)	CCSSCH101J50	C 622 (A,105,93)	CCSSCH220J50
	C 265 (A,11,130)	CCSSCH101J50	C 623 (A,109,88)	CKSSYB104K10
	C 301 (A,69,128)	CKSRYB474K10	C 624 (A,106,87)	CKSSYB104K10
	C 303 (A,80,128)	CKSRYB474K10	C 625 (A,104,90)	CKSSYB104K10
B	C 305 (A,73,128)	CKSRYB474K10	C 626 (A,99,78)	CKSSYB104K10
	C 307 (A,77,128)	CKSRYB474K10	C 627 (A,96,81)	CCSSCH220J50
	C 313 (A,82,129) 2.2 uF	CCG1205	C 628 (A,95,81)	CCSSCH220J50
	C 314 (A,132,125)	CKSRYB104K16	C 629 (A,99,72)	CKSSYB104K10
	C 318 (A,64,130) 10 uF/16 V	DCH1263	C 630 (A,98,69)	CKSSYB104K10
	C 327 (A,63,123)	CKSRYB105K10	C 631 (A,96,74)	CCSSCH220J50
	C 328 (A,52,130) 2.2 uF	CCG1205	C 634 (A,108,60)	CKSSYB104K10
	C 336 (A,87,125)	CKSRYB104K16	C 635 (A,104,87)	CKSSYB104K10
	C 407 (A,155,92)	CKSSYB103K16	C 636 (A,99,75)	CKSSYB104K10
	C 409 (A,152,92)	CKSSYB224K6R3	C 637 (A,134,69)	CKSSYB104K10
C	C 410 (A,152,105)	CCSSCH220J50	C 638 (A,136,68)	CKSSYB104K10
	C 411 (A,150,105)	CCSSCH331J50	C 639 (A,113,56) 4.7 uF(B)	CCG1212
	C 414 (A,144,89)	CKSSYB102K50	C 641 (A,105,88)	CKSSYB104K10
	C 420 (A,152,109)	CCSSCH471J50	C 672 (A,127,71) 1 uF	DCH1246
	C 422 (A,144,86)	CKSSYB152K50	C 681 (A,122,96)	CKSSYB104K10
	C 425 (A,155,91)	CCSSCH390J50	C 683 (A,121,93)	CCSSCJ3R0C50
	C 428 (A,147,92)	CKSSYB104K10	C 684 (A,130,98)	CKSSYB104K10
	C 430 (A,152,93)	CKSSYB102K50	C 701 (A,111,40)	CKSSYB103K16
	C 434 (A,158,104)	CCSSCH100D50	C 704 (A,120,38)	CCSSCH100D50
	C 442 (A,148,80) 10 uF	DCH1201	C 705 (A,118,38)	CCSSCH100D50
D	C 452 (A,160,78)	CKSRYB104K16	C 706 (A,117,38)	CCSSCH100D50
	C 453 (A,167,71)	CKSRYB105K10	C 752 (A,18,106)	CKSSYB104K10
	C 458 (A,144,81)	CCSSCH102J50	C 753 (A,23,100) 10 uF	DCH1201
	C 459 (A,154,107)	CKSRYB104K16	C 801 (A,124,5)	CCSRCH102J50
	C 461 (A,154,81)	CCSSCH330J50	C 806 (A,125,7)	CKSRYB104K16
	C 531 (A,90,89)	CKSSYB104K10	C 807 (A,122,14)	CKSRYB105K10
	C 532 (A,92,89)	CKSSYB104K10	C 808 (A,108,18)	CKSRYB104K16
	C 551 (A,27,111)	XCEVW221M16	C 809 (A,97,15)	CCSRCH221J50
	C 552 (A,35,108)	CKSRYB105K16	C 810 (A,97,13)	CCSRCH221J50
	C 553 (A,37,111)	CKSSYB103K16	C 811 (A,104,19)	CKSSYB104K10
	C 555 (A,47,113)	CKSSYB682K25	C 812 (A,120,25)	CKSSYB104K10
	C 556 (A,65,111)	CEVQW221M6R3	C 872 (A,124,27)	CKSRYB105K16
	C 557 (A,60,112)	CKSRYB105K10	C 873 (A,124,24)	CKSRYB105K16
	C 560 (A,109,21)	CKSRYB105K10	C 891 (A,53,136)	CKSRYB104K16
	C 561 (A,103,23)	CKSRYB105K10	C 892 (A,36,132)	CKSRYB104K16
E	C 564 (A,58,112) 4.7 uF	CCG1201	C 893 (A,39,129)	CKSRYB102K50
	C 565 (A,37,107) 4.7 uF	CCG1222	C 894 (A,53,133)	CKSRYB102K50
	C 568 (A,64,101) 10 uF	CCG1192	C 901 (A,130,123) 2 200 uF/16 V	CCH2040
	C 572 (A,69,121)	CKSRYB104K16	C 911 (A,133,119)	CKSRYB104K16
	C 601 (A,102,61)	CKSSYB104K10	C 912 (A,152,40)	CKSSYB102K50
	C 602 (A,110,62)	CKSSYB104K10	C 913 (A,135,41)	CKSSYB102K50
	C 603 (A,113,60)	CKSSYB104K10	C 914 (A,156,56)	XCEAT102M16
	C 604 (A,116,59)	CKSSYB104K10	C 915 (A,136,41)	CKSRYB104K16
	C 605 (A,118,60)	CKSSYB104K10	C 916 (A,146,43) 10 uF	DCH1201
	C 606 (A,125,68)	CKSSYB104K10	C 917 (A,145,45)	CKSSYB102K50
F	C 607 (A,127,72)	CCSSCH120J50	C 919 (A,151,41) 10 uF	DCH1201
	C 608 (A,128,76)	CCSSCH120J50	C 921 (A,130,40) 10 uF	DCH1201
	C 609 (A,125,69)	CKSSYB104K10	C 923 (A,159,40) 10 uF	DCH1201
	C 610 (A,125,72)	CKSSYB104K10	C 926 (A,140,43) 10 uF	DCH1201
	C 611 (A,124,77)	CKSSYB104K10	C 927 (A,140,41)	CKSSYB102K50

Part No.

D 941	(A,92,124)	Diode	DZ2J068M0
D 1011	(A,126,107)	Diode	CRG03
L 202	(A,93,101)	Inductor	CTF1793
L 402	(A,137,91)	Inductor(C,D,G)	LCTAW150J2520
	(A,137,91)	Chip Coil(E,F)	LCTAW3R3J2520
L 403	(A,137,95)	Chip Coil(E,F)	LCTAWR27J2520

Unit Name : Tuner Amp Unit

IC 201	(A,100,105)	E-VOL SYS LSI	PM9013A
IC 301	(A,77,141)	IC(C,D)	PAL013A
	(A,77,141)	IC(E,F,G)	PA2032A
IC 401	(A,144,85)	IC	TEF6686HN
IC 451	(A,158,75)	IC	MM3571A33P
IC 531	(A,92,83)	IC	337S3959
IC 551	(A,18,110)	IC	KBD9876EFJ
IC 552	(A,105,23)	IC	BD2232G-G
IC 601	(A,109,76)	FLASH BLANK UC IC	R5S726A0D216FP
IC 671	(A,130,74)	IC	S-80827CNMC-B8M
IC 681	(A,113,93)	FLASHROM IC(C,D)	* PEB146A8
	(A,113,93)	FLASHROM IC(E,F,G)	* PEB144A8

D 807	(A,112,12) Diode	DZ2S068C
D 901	(A,139,126) Diode	D1F60-5053
D 902	(A,136,126) Diode	D1F60-5053
D 911	(A,156,66) Diode	CRG03
D 912	(A,159,66) Diode	CRG03

L 801	(A,113,16)	Inductor	CTF1713
L 901	(A,111,140)	Choke Coil 600 uH	CTH1432
T 401	(A,145,96)	Variable Coil	CTC1215
X 401	(A,153,85)	Resonator 9.216 MHz	CSS1864
X 601	(A,125,74)	Resonator 12.0 MHz	CSS1847

X 603	(A,122,91) Resonator 16.93 MHz	CSS1794
⚠ P251	(A,4,129) Fuse 3.0 A	CEK1386
P 402	(A,154,108) Absorber	HSPC16701B02
VA801	(A,106,12) Varistor	MLV0402ES012V0010N
VA802	(A,100,12) Varistor	MLV0402ES012V0010N

CN701	(A,112,31)	Connector	VKN1192
CN801	(A,108,3)	Connector	CKS6452
CN971	(A,92,48)	Connector	VKN1191
JA251	(A,17,137)	Jack	CKB1109
JA401	(A,156,128)	Plug	YKS5041

JA892	(A,41,140) Jack	CKN1103
JA901	(A,112,140) Plug	CKM1624
	Fuse (10 A)	YEK5001

R 251	(A,16,130)	RS1/16SS821J
R 252	(A,11,127)	RS1/16SS821J
R 253	(A,14,130)	RS1/16SS223J
R 254	(A,11,129)	RS1/16SS223J
R 255	(A,28,131)	RS1/16SS821J

R 256	(A,18,130)	RS1/16SS821J
R 257	(A,26,130)	RS1/16SS223J
R 258	(A,20,130)	RS1/16SS223J
R 305	(A,88,126)	RS1/16SS103J
R 306	(A,88,128)	RS1/16SS221J

R 307	(A,87,127)	RS1/16SS223J
R 309	(A,88,124)	RS1/16SS103J
R 401	(A,145,91)	RS1/16SS0R0J
R 402	(A,143,91)	RS1/16SS0R0J
R 403	(A,135,91) (C,D,G)	RS1/16SS391J
	(A,135,91) (E,F)	RS1/16SS101J

R 404	(A,142,108)	RS1/16SS105J
R 405	(A,147,108)	RS1/16SS105J
R 406	(A,146,80)	RS1/16SS101J
R 407	(A,147,80)	RS1/16SS101J
R 408	(A,149,81)	RS1/16SS103J

R 410	(A,148,81)	RS1/16SS103J
R 422	(A,144,77) (E,F)	RS1/16SS0R0J
R 437	(A,147,77)	RS1/16SS472J
R 438	(A,146,77)	RS1/16SS472J
R 452	(A,159,85)	RS1/16SS0R0J

R 453	(A,143,73) (C,D)	RS1/10SR0R0J
R 455	(A,161,88)	RS1/16SS0R0J
R 531	(A,90,89)	RS1/16SS473J

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 532 (A,90,86)
R 533 (A,91,86)

RS1/16SS222J
RS1/16SS222J

R 668 (A,101,58)
R 671 (A,128,68)
R 681 (A,107,96)
R 682 (A,109,90)

RS1/16SS473J
RS1/16SS104J
RS1/16SS473J
RS1/16SS473J

A

R 534 (A,93,86)
R 535 (A,94,86)
R 536 (A,96,87)
R 537 (A,94,83)
R 538 (A,94,82)

RS1/16SS272J
RS1/16SS472J
RS1/16SS472J
RS1/16SS101J
RS1/16SS101J

R 683 (A,118,91)
R 684 (A,107,92)
R 685 (A,118,95)
R 687 (A,126,95) (E,F)
R 701 (A,107,37)

RS1/16SS473J
RS1/16SS473J
RS1/16SS473J
RS1/10SR0R0J
RS1/16SS473J

R 551 (A,24,110)
R 552 (A,29,111)
R 553 (A,26,111)
R 554 (A,26,109)
R 555 (A,38,123)

RS1/16SS682J
RS1/16SS0R0J
RS1/16SS1803D
RS1/16SS4302D
RS1/10SR471J

R 702 (A,112,37)
R 703 (A,116,27)
R 704 (A,109,39)
R 706 (A,106,35)
R 707 (A,108,37)

RS1/16SS104J
RAB4CQ472J
RS1/16SS104J
RS1/16SS221J
RS1/16SS221J

B

R 601 (A,93,68)
R 602 (A,120,68)
R 603 (A,108,61)
R 609 (A,121,63)
R 610 (A,121,65)

RS1/16SS473J
RS1/16SS102J
RS1/16SS473J
RS1/16SS473J
RS1/16SS473J

R 708 (A,109,37)
R 709 (A,110,37)
R 710 (A,111,37)
R 711 (A,112,38)
R 715 (A,115,35)

RS1/16SS101J
RS1/16SS221J
RS1/16SS101J
RS1/16SS102J
RS1/16SS151J

R 611 (A,122,68)
R 613 (A,120,75)
R 614 (A,121,77)
R 615 (A,129,77)
R 616 (A,125,67)

RS1/16SS473J
RS1/16SS152J
RS1/16SS473J
RS1/16SS473J
RS1/16SS473J

R 716 (A,116,35)
R 717 (A,117,35)
R 718 (A,121,35)
R 719 (A,120,35)
R 752 (A,142,133)

RS1/16SS151J
RS1/16SS151J
RS1/16SS221J
RS1/16SS104J
RS1/4SA391J

C

R 617 (A,130,80)
R 618 (A,124,81) (D,G)
(A,124,81) (E)
R 619 (A,125,81) (C,E,F)
R 622 (A,124,86)
R 623 (A,128,84)

RS1/16SS103J
RS1/16SS473J
RS1/16SS103J
RS1/16SS473J
RS1/16SS473J
RAB4CQ473J

R 753 (A,126,90)
R 754 (A,126,91)
R 801 (A,123,20)
R 803 (A,119,17)
R 804 (A,117,17)

RS1/16SS473J
RS1/16SS103J
RS1/10SR222J
RS1/16SS223J
RS1/16SS223J

R 624 (A,118,88)
R 625 (A,112,89)
R 626 (A,111,88)
R 627 (A,110,87)
R 628 (A,110,89)

RS1/16SS222J
RS1/16SS221J
RS1/16SS221J
RS1/16SS221J
RS1/16SS221J

R 805 (A,119,18)
R 806 (A,117,19)
R 807 (A,118,19)
R 808 (A,122,19)
R 809 (A,114,20)

RS1/10SR101J
RS1/10SR101J
RS1/10SR101J
RS1/10SR222J
RS1/10SR220J

D

R 629 (A,107,90)
R 630 (A,108,88)
R 631 (A,106,91)
R 632 (A,104,90)
R 633 (A,105,89)

RS1/16SS221J
RS1/16SS221J
RS1/16SS473J
RS1/16SS473J
RS1/16SS101J

R 810 (A,112,20)
R 813 (A,106,15)
R 814 (A,100,18)
R 815 (A,98,18)
R 816 (A,95,18)

RS1/10SR220J
RS1/10SR222J
RS1/10SR222J
RS1/16SS822J
RS1/10SR222J

R 634 (A,101,87)
R 636 (A,98,90)
R 637 (A,99,89)
R 638 (A,102,91)
R 643 (A,98,81)

RS1/16SS102J
RS1/16SS473J
RS1/16SS473J
RS1/16SS473J
RS1/16SS104J

R 817 (A,93,18)
R 851 (A,91,19)
R 871 (A,141,64)
R 872 (A,141,61)
R 878 (A,122,25)

RS1/10SR222J
RS1/16SS472J
RS1/10SR332J
RS1/16SS103J
RS1/10SR473J

E

R 644 (A,97,78)
R 645 (A,94,78)
R 646 (A,132,72) (C,D,G)
(A,132,72) (E,F)
R 647 (A,97,76)
R 648 (A,94,75)

RS1/16SS101J
RS1/16SS101J
RS1/16SS103J
RS1/16SS1002F
RS1/16SS101J
RS1/16SS102J

R 891 (A,56,136) (C,D,G)
(A,56,136) (E,F)
R 892 (A,56,135)
R 900 (A,53,135) (E,F)
R 911 (A,144,39)
R 912 (A,139,40)

RS1/16SS102J
RS1/16SS1001F
RS1/16SS102J
RS1/16SS471J
RS1/10SR1R0J
RS1/10SR1R0J

R 649 (A,94,74)
R 650 (A,94,73)
R 651 (A,96,70)
R 652 (A,96,68)
R 653 (A,98,65)

RS1/16SS102J
RS1/16SS102J
RS1/16SS473J
RS1/16SS222J
RS1/16SS103J

R 913 (A,152,40)
R 914 (A,129,39)
R 915 (A,138,120)
R 941 (A,92,121)
R 942 (A,93,121)

RS1/16SS223J
RS1/16SS223J
RS1/10SR0R0J
RS1/16SS223J
RS1/16SS473J

F

R 655 (A,111,61)
R 656 (A,113,63)
R 659 (A,122,60)
R 660 (A,122,59)
R 664 (A,132,61)

RS1/16SS0R0J
RS1/16SS0R0J
RS1/16SS153J
RS1/16SS153J
RS1/16SS103J

R 943 (A,93,124)
R 944 (A,97,123)
R 973 (A,88,61)
R 974 (A,96,54)
R 975 (A,96,53)

RS1/16SS682J
RS1/4SA102J
RS1/16SS222J
RS1/16SS101J
RS1/16SS101J

R 667 (A,101,59)

RS1/16SS473J

1

2

3

4

5		6		7		8	
Circuit Symbol and No.		Part No.		Circuit Symbol and No.		Part No.	
R 976	(A,96,51)	RS1/16SS101J		C 418	(A,139,102) (E,F)	CCSSCK2R0C50	
R 977	(A,90,73)	RS1/16SS0R0J		C 419	(A,139,103) (E,F)	CCSSCK1R0C50	
R 978	(A,88,69)	RS1/16SS0R0J					
R 1011	(A,130,107)	RS1/16SS103J		C 420	(A,145,107)	CCSSCH471J50	
R 1013	(A,126,114)	RS1/4SA102J		C 422	(A,139,85)	CKSSSYB152K50	
				C 425	(A,148,88)	CCSSCH390J50	
				C 428	(A,141,89)	CKSSSYB104K10	
				C 430	(A,147,91)	CKSSSYB102K50	
C 201	(A,99,116)	CKSRYB105K10		C 434	(A,152,103)	CCSSCH100D50	
C 202	(A,103,115)	CKSRYB105K10		C 442	(A,143,79) 10 uF	DCH1201	
C 203	(A,91,115)	CKSRYB105K10		C 452	(A,154,78)	CKSRYB104K16	
C 204	(A,106,114)	CKSRYB105K10		C 453	(A,158,71)	CKSRYB105K10	
C 205	(A,92,115)	CKSRYB105K10		C 455	(A,143,74) (C,D)	CKSSSYB102K50	
C 206	(A,106,111)	CKSRYB105K10		C 456	(A,143,75) 1 uF	DCH1246	
C 207	(A,93,107)	CKSSSYB104K10		C 458	(A,138,80)	CKSSSYB102K50	
C 208	(A,93,105)	CKSSSYB104K10		C 459	(A,149,105)	CKSRYB104K16	
C 209	(A,92,103) 10 uF	CCG1192		C 463	(A,140,74) (E,F)	CKSSSYB104K10	
C 210	(A,94,105)	CCSSCH151J50		C 531	(A,90,88)	CKSSSYB104K10	
C 211	(A,108,106)	CCSSCH151J50		C 532	(A,92,87)	CKSSSYB104K10	
C 212	(A,106,108) 10 uF	CCG1192		C 551	(A,11,120)	XCEVW221M16	
C 213	(A,107,105)	CKSSSYB104K10		C 552	(A,11,106)	CKSRYB105K16	
C 214	(A,107,103)	CKSSSYB104K10		C 553	(A,13,109)	CKSSSYB103K16	
C 215	(A,107,101)	CKSSSYB104K10		C 555	(A,23,111)	CKSSSYB682K25	
C 216	(A,91,100) 10 uF	CCG1192		C 556	(A,30,119)	CEVQW221M6R3	
C 217	(A,93,99)	CKSSSYB104K10		C 557	(A,31,115)	CKSRYB105K10	
C 218	(A,113,108)	XCEVW470M16		C 560	(A,107,20)	CKSRYB105K10	
C 219	(A,111,102) 10 uF	CCG1192		C 561	(A,101,23)	CKSRYB105K10	
C 220	(A,104,97) 10 uF	CCG1192		C 564	(A,31,113) 4.7 uF	CCG1201	
C 221	(A,94,103)	CKSSSYB102K50		C 565	(A,13,105) 4.7 uF	CCG1222	
C 223	(A,90,100) 1 uF	DCH1246		C 601	(A,103,64)	CKSSSYB104K10	
C 224	(A,113,102)	CKSSSYB104K10		C 602	(A,107,64)	CKSSSYB104K10	
C 227	(A,90,108) (G)	CKSSSYB102K50		C 603	(A,110,64)	CKSSSYB104K10	
C 229	(A,109,111) 1 uF	DCH1246		C 604	(A,111,64)	CKSSSYB104K10	
C 236	(A,108,103)	CKSRYB105K10		C 605	(A,115,64)	CKSSSYB104K10	
C 251	(A,33,127) 10 uF	DCH1201		C 606	(A,120,70)	CKSSSYB104K10	
C 252	(A,15,126) 10 uF	DCH1201		C 607	(A,125,72)	CCSSCH120J50	
C 253	(A,15,129)	CCSSCH101J50		C 608	(A,125,77)	CCSSCH120J50	
C 254	(A,10,129)	CCSSCH101J50		C 609	(A,120,72) (C,D,G)	CKSSSYB104K10	
					(A,120,72) (E,F)	CCSSCH101J50	
C 255	(A,33,131) 10 uF	DCH1201					
C 256	(A,29,129) 10 uF	DCH1201		C 610	(A,120,74) (C,D,G)	CKSSSYB104K10	
C 257	(A,25,130)	CCSSCH101J50			(A,120,74) (E,F)	CKSSSYB102K50	
C 258	(A,19,130)	CCSSCH101J50		C 611	(A,120,76)	CKSSSYB102K50	
C 260	(A,32,136)	CKSSSYB104K10		C 612	(A,121,81)	CKSSSYB104K10	
				C 613	(A,122,81)	CKSSSYB104K10	
C 261	(A,4,132)	CKSSSYB103K16		C 618	(A,122,88)	CCSSCH120J50	
C 301	(A,68,128)	CKSRYB474K10					
C 303	(A,78,128)	CKSRYB474K10		C 619	(A,121,93)	CCSSCH120J50	
C 305	(A,72,129)	CKSRYB474K10		C 620	(A,112,87)	CKSSSYB104K10	
C 307	(A,76,128)	CKSRYB474K10		C 621	(A,107,87)	CKSSSYB104K10	
				C 622	(A,104,92)	CCSSCH220J50	
C 313	(A,82,129) 2.2 uF	CCG1205		C 623	(A,105,87)	CKSSSYB104K10	
C 314	(A,134,125)	CKSRYB104K16					
C 318	(A,63,129) 10 uF/16 V	DCH1263		C 624	(A,104,87)	CKSSSYB104K10	
C 322	(A,104,125)	CKSRYB104K16		C 625	(A,102,89)	CKSSSYB104K10	
C 327	(A,86,128)	CKSRYB105K10		C 626	(A,98,79)	CKSSSYB104K10	
				C 627	(A,95,80)	CCSSCH220J50	
C 328	(A,51,129) 2.2 uF	CCG1205		C 628	(A,94,79)	CCSSCH220J50	
C 407	(A,151,91)	CKSSSYB104K10					
C 409	(A,147,90)	CKSSSYB224K6R3		C 629	(A,98,74)	CKSSSYB104K10	
C 410	(A,146,103)	CCSSCH220J50		C 630	(A,97,72)	CKSSSYB103K16	
C 411	(A,144,103)	CCSSCH331J50		C 631	(A,95,76)	CCSSCH220J50	
				C 635	(A,111,98) (E,F,G)	CKSSSYB104K10	
C 414	(A,138,88)	CKSSSYB102K50		C 641	(A,95,88)	CCSRCH330J50	
C 416	(A,139,97) (E,F)	CCSSCH120J50					
C 417	(A,138,97) (E,F)	CCSSCK1R0C50					
				C 672	(A,122,72) 1 uF	DCH1246	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 683 (A,119,93) CCSSCJ3R0C50
 C 685 (A,118,98) (E,F) CKSRYB105K10
 C 687 (A,121,96) CKSRYB105K10
 C 701 (A,110,39) CKSSYB103K16

D 1843 (A,160,23) LED SMLVN6RGB2UK(B)
 D 1844 (A,145,20) LED SMLVN6RGB2UK(B)
 D 1845 (A,45,20) LED SMLVN6RGB2UK(B)
 X 1801 (B,66,20) Ceramic Resonator 5.00 MHz CSS1547
 S 1821 (A,50,3) Push Switch CSG1155

C 704 (A,118,38) CCSSCH100D50
 C 705 (A,117,38) CCSSCH100D50
 C 706 (A,115,37) CCSSCH100D50
 C 710 (A,122,47) CKSRYB104K16
 C 752 (A,138,135) CKSSYB104K10

S 1822 (A,9,39) Push Switch CSG1155
 S 1823 (A,64,3) Push Switch CSG1155
 S 1824 (A,6,6) Push Switch CSG1155
 S 1825 (A,5,22) Push Switch CSG1155
 S 1826 (A,38,27) Push Switch CSG1155

C 753 (A,146,129) 10 uF DCH1201
 C 754 (A,136,112) (E,F,G) CKSSYB102K50
 C 801 (A,122,5) CCSRCH102J50
 C 806 (A,123,7) CKSRYB104K16
 C 807 (A,120,13) CKSRYB105K10

S 1827 (A,38,8) Push Switch CSG1155
 S 1828 (A,73,3) Push Switch CSG1155
 S 1829 (A,143,3) Push Switch CSG1155
 S 1830 (A,120,3) Push Switch CSG1155
 S 1831 (A,129,3) Push Switch CSG1155

C 808 (A,107,18) CKSRYB104K16
 C 809 (A,95,15) CCSRCH221J50
 C 810 (A,95,12) CCSRCH221J50
 C 811 (A,102,20) CKSSYB104K10
 C 872 (A,122,26) CKSRYB105K16

S 1832 (A,97,3) Push Switch CSG1155
 S 1833 (A,105,3) Push Switch CSG1155
 V 1801 (A,51,30) LCD CAW2041
 S 1834 (A,82,3) Push Switch CSG1155
 S 1835 (A,7,29) Push Switch CSG1155

C 873 (A,122,23) CKSRYB105K16
 C 891 (A,51,137) CKSRYB104K16
 C 892 (A,32,138) CKSRYB104K16
 C 893 (A,32,134) CKSRYB102K50
 C 894 (A,51,133) CKSRYB102K50

S 1836 (A,21,17) Encoder(MULTI-CONTROL) CSD1193
 CN1941 (B,107,7) Connector CKS6451
 JA1901 (A,153,23) Connector CKS6443
 JA1921 (A,154,8) Jack(A,C,D,E,F,G) KKN1108
 (A,154,8) Jack(B) KKN1090

C 901 (A,131,123) 2 200 uF/16 V CCH2040
 C 911 (A,137,116) CKSRYB104K16
 C 912 (A,150,39) CKSSYB102K50
 C 913 (A,129,42) CKSSYB102K50
 C 914 (A,155,55) XCEAT102M16

RESISTORS

R 1801 (B,61,20) RS1/16SS103J
 R 1821 (B,33,25) RS1/16SS273J
 R 1841 (B,32,7) RS1/16SS222J
 R 1842 (B,32,5) RS1/16SS102J
 R 1843 (B,23,7) RS1/16SS222J

C 915 (A,131,41) CKSRYB104K16
 C 916 (A,146,42) 10 uF DCH1201
 C 917 (A,144,45) CKSSYB102K50
 C 919 (A,149,40) 10 uF DCH1201
 C 921 (A,133,41) 10 uF DCH1201

R 1844 (B,23,5) RS1/16SS102J
 R 1845 (B,14,7) RS1/16SS222J
 R 1846 (B,12,7) RS1/16SS102J
 R 1847 (B,24,7) RS1/16SS470J
 R 1849 (B,14,6) RS1/16SS470J

C 923 (A,158,40) 10 uF DCH1201
 C 926 (A,138,43) 10 uF DCH1201
 C 927 (A,138,41) CKSSYB102K50
 C 941 (A,95,124) CKSRYB104K16

R 1851 (B,10,7) RS1/16SS470J
 R 1865 (B,102,23) RS1/16SS222J
 R 1866 (B,111,26) RS1/16SS102J
 R 1867 (B,114,23) RS1/16SS222J
 R 1868 (B,114,25) RS1/16SS102J

C 973 (A,96,52) CCSSCH470J50
 C 1011 (A,132,108) CKSRYB105K16
 C 1013 (A,136,76) CKSRYB104K16

R 1869 (B,123,26) RS1/16SS222J
 R 1870 (B,123,28) RS1/16SS102J
 R 1871 (B,112,23) RS1/16SS470J
 R 1873 (B,122,26) RS1/16SS470J
 R 1875 (B,132,25) RS1/16SS470J

B
Unit Number: (A,C,D,E,F,G)
Unit Number: (B)

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801 (B,81,19) IC PDC205A
 IC 1951 (A,154,37)IR RC REC MODULE(A,C,D,E,F,G) PNJ4833M
 Q 1841 (B,27,8) Transistor LSCR523UB
 Q 1842 (B,19,8) Transistor LSCR523UB
 Q 1843 (B,8,16) Transistor LSCR523UB

R 1884 (B,46,23) RS1/10SR221J
 R 1887 (B,47,22) RS1/16SS101J
 R 1888 (B,38,22) RS1/16SS101J
 R 1921 (B,133,8) RS1/10SR0R0J
 R 1922 (B,130,5) RS1/10SR0R0J

Q 1847 (B,107,22) Transistor LSCR523UB
 Q 1848 (B,117,24) Transistor LSCR523UB
 Q 1849 (B,127,26) Transistor LSCR523UB
 D 1841 (A,3,17) LED SMLVN6RGB2UK(B)
 D 1842 (A,38,17) LED SMLVN6RGB2UK(B)

R 1923 (B,138,5) RS1/10SR0R0J
 R 1941 (B,77,4) RS1/10SR222J
 R 1942 (B,74,5) RS1/10SR222J
 R 1952 (B,142,30) (B) RS1/16SS473J
 R 1953 (B,141,24) (A,C,D,E,F,G) RS1/10SR101J

CAPACITORS

C 1801 (B,70,19) 4.7 uF CCG1212

5		6	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 1802	(B,70,21)	CKSSYB104K10	
C 1803	(B,75,9)	CKSSYB104K10	
C 1804	(B,76,9)	CKSSYB104K10	
C 1805	(B,77,9)	CKSSYB104K10	
C 1856	(B,48,25)	CKSRYB105K16	
C 1901	(B,160,31)	CKSRYB104K16	
C 1902	(B,138,13)	CKSRYB102K50	
C 1904	(B,137,26)	CKSRYB105K10	
C 1905	(B,46,20)	CKSRYB105K10	
C 1923	(B,136,8)	CCSRCH221J50	
C 1951	(B,142,27) 10 uF(A,C,D,E,F,G)	CCG1192	



Unit Number : CWX4269

Unit Name : CD Core Unit(S11.6VA)

MISCELLANEOUS

IC 201	(B,24,38) IC	PEQ094A	
IC 301	(A,37,12) IC	BD8223EFV	
Q 101	(B,12,54) Transistor	2SA1577	
Q 102	(B,16,55) Chip Digital Transistor	LTA123JUB	
X 201	(B,25,50) Ceramic Resonator 16.934 MHz	CSS1603	
S 901	(A,43,54) Spring Switch(HOME)	CSN1080	
S 903	(B,22,13) Spring Switch(DSCSNS)	CSN1081	
CN101	(A,17,58) Connector	CKS4808	
CN701	(A,26,30) Connector	CKS6146	

RESISTORS

R 101	(B,7,59)	RS1/10SR2R4J	
R 102	(B,8,59)	RS1/10SR2R4J	
R 103	(B,10,59)	RS1/10SR2R7J	
R 108	(B,14,58)	RS1/16SS105J	
R 109	(B,15,50)	RS1/16SS152J	
R 214	(B,18,28)	RS1/16SS103J	
R 215	(B,17,28)	RS1/16SS393J	
R 216	(B,13,36)	RS1/16SS102J	
R 217	(B,10,33)	RS1/16SS562J	
R 218	(B,10,36)	RS1/16SS472J	
R 229	(B,13,35)	RS1/16SS471J	
R 232	(A,31,55)	RS1/16SS0R0J	
R 237	(B,34,45)	RS1/16SS221J	
R 240	(B,35,40)	RS1/16SS473J	
R 245	(A,34,46)	RS1/16SS104J	
R 254	(A,37,56)	RS1/16SS104J	
R 260	(B,30,27)	RS1/16SS103J	
R 264	(A,22,9)	RS1/16SS102J	
R 281	(B,34,38)	RS1/16SS560J	
R 282	(B,34,39)	RS1/16SS560J	
R 291	(B,34,35)	RS1/16SS560J	
R 294	(B,28,49)	RS1/16SS471J	
R 303	(A,28,12)	RS1/16SS123J	
R 304	(A,29,11)	RS1/16SS123J	
R 305	(A,27,9)	RS1/16SS102J	
R 306	(A,27,12)	RS1/16SS472J	
R 307	(A,26,9)	RS1/16SS102J	
R 308	(A,26,12)	RS1/16SS472J	
R 309	(A,35,7)	RS1/16SS473J	
R 310	(B,31,9)	RS1/16SS472J	

7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 311	(B,31,10)	RS1/16SS472J	
R 312	(B,31,11)	RS1/16SS472J	
R 313	(B,31,12)	RS1/16SS472J	
R 701	(A,22,38)	RS1/16SS101J	
R 702	(A,24,38)	RS1/16SS101J	
R 706	(A,33,42)	RS1/16SS221J	

CAPACITORS

C 104	(B,15,52)	CKSQYB475K6R3	
C 110	(B,11,44)	CKSSYB104K10	
C 111	(B,12,44)	CKSSYB103K16	
C 203	(B,22,47)	CKSSYB104K10	
C 205	(A,17,41)	CKSRYB105K10	
C 209	(B,29,48)	CKSRYB104K16	
C 210	(B,33,44)	CKSSYB104K10	
C 211	(B,34,42)	CKSSYB104K10	
C 212	(B,23,29)	CKSSYB104K10	
C 213	(B,18,26)	CKSSYB332K50	
C 214	(B,17,26)	CKSSYB473K16	
C 215	(B,19,29)	CKSSYB104K10	
C 216	(B,13,33)	CKSSYB152K50	
C 217	(B,10,35)	CCSSCH390J50	
C 218	(B,10,37)	CCSSCH5R0C50	
C 219	(B,14,35)	CKSSYB104K10	
C 220	(A,18,39)	CKSSYB104K10	
C 221	(B,14,32)	CKSSYB104K10	
C 222	(B,14,37)	CKSSYB104K10	
C 223	(B,13,42)	CCSSCH680J50	
C 224	(B,14,45)	CCSSCH470J50	
C 225	(B,14,47)	CKSSYB103K16	
C 228	(B,10,34)	CCSSCH180J50	
C 229	(B,9,41)	CKSSYB104K10	
C 233	(B,33,46)	CKSSYB103K16	
C 236	(B,8,41)	CKSSYB104K10	
C 238	(A,26,45)	CKSRYB104K16	
C 299	(A,26,43)	CKSSYB104K10	
C 302	(B,29,12)	CKSSYB102K50	
C 303	(B,30,12)	CKSSYB102K50	
C 304	(B,28,12)	CKSSYB223K16	
C 305	(B,27,12)	CKSSYB104K10	
C 306	(A,32,7)	CKSSYB104K10	
C 307	(A,42,19)	CKSRYB105K10	
C 308	(A,32,16)	CKSRYB105K10	
C 710	(A,34,43)	CKSSYB102K50	



Unit Number : QWM3995

Unit Name : BT Unit

MISCELLANEOUS

IC 21	(A,8,47) IC	MM3479A18P	
IC 22	(A,20,46) IC	MM3411A33N	
CN21	(A,34,26) Connector	CKS6346	
CN23	(A,41,43) Connector	CKS3857	
	BT Module	YWX5052	

RESISTORS

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>		
A	R 28 (A,42,30)	RS1/16SS222J		
	R 29 (A,29,40)	RS1/16SS102J		
	R 30 (A,29,37)	RS1/16SS102J		
	R 38 (A,42,16)	RS1/16SS0R0J		
	R 39 (A,41,22)	RS1/16SS221J		
	R 40 (A,39,22)	RS1/16SS221J		
	R 41 (A,38,22)	RS1/16SS221J		

CAPACITORS

	C 23 (A,24,39)	XCEVW221M4
	C 24 (A,6,43)	CKSRYB105K10
	C 26 (A,27,47) 4.7 uF	CCG1212
	C 29 (A,17,45)	CKSRYB105K10
	C 33 (A,9,53) 4.7 uF	CCG1212
B	C 34 (A,42,29)	CKSRYB105K10
	C 36 (A,31,40)	CKSRYB104K16
	C 38 (A,15,45) 4.7 uF	CCG1212
	C 39 (A,6,41) 4.7 uF	CCG1212
	C 40 (A,12,50)	CKSRYB104K16

C

D

E

F