



EXPLODED VIEW (CD MECHANISM)

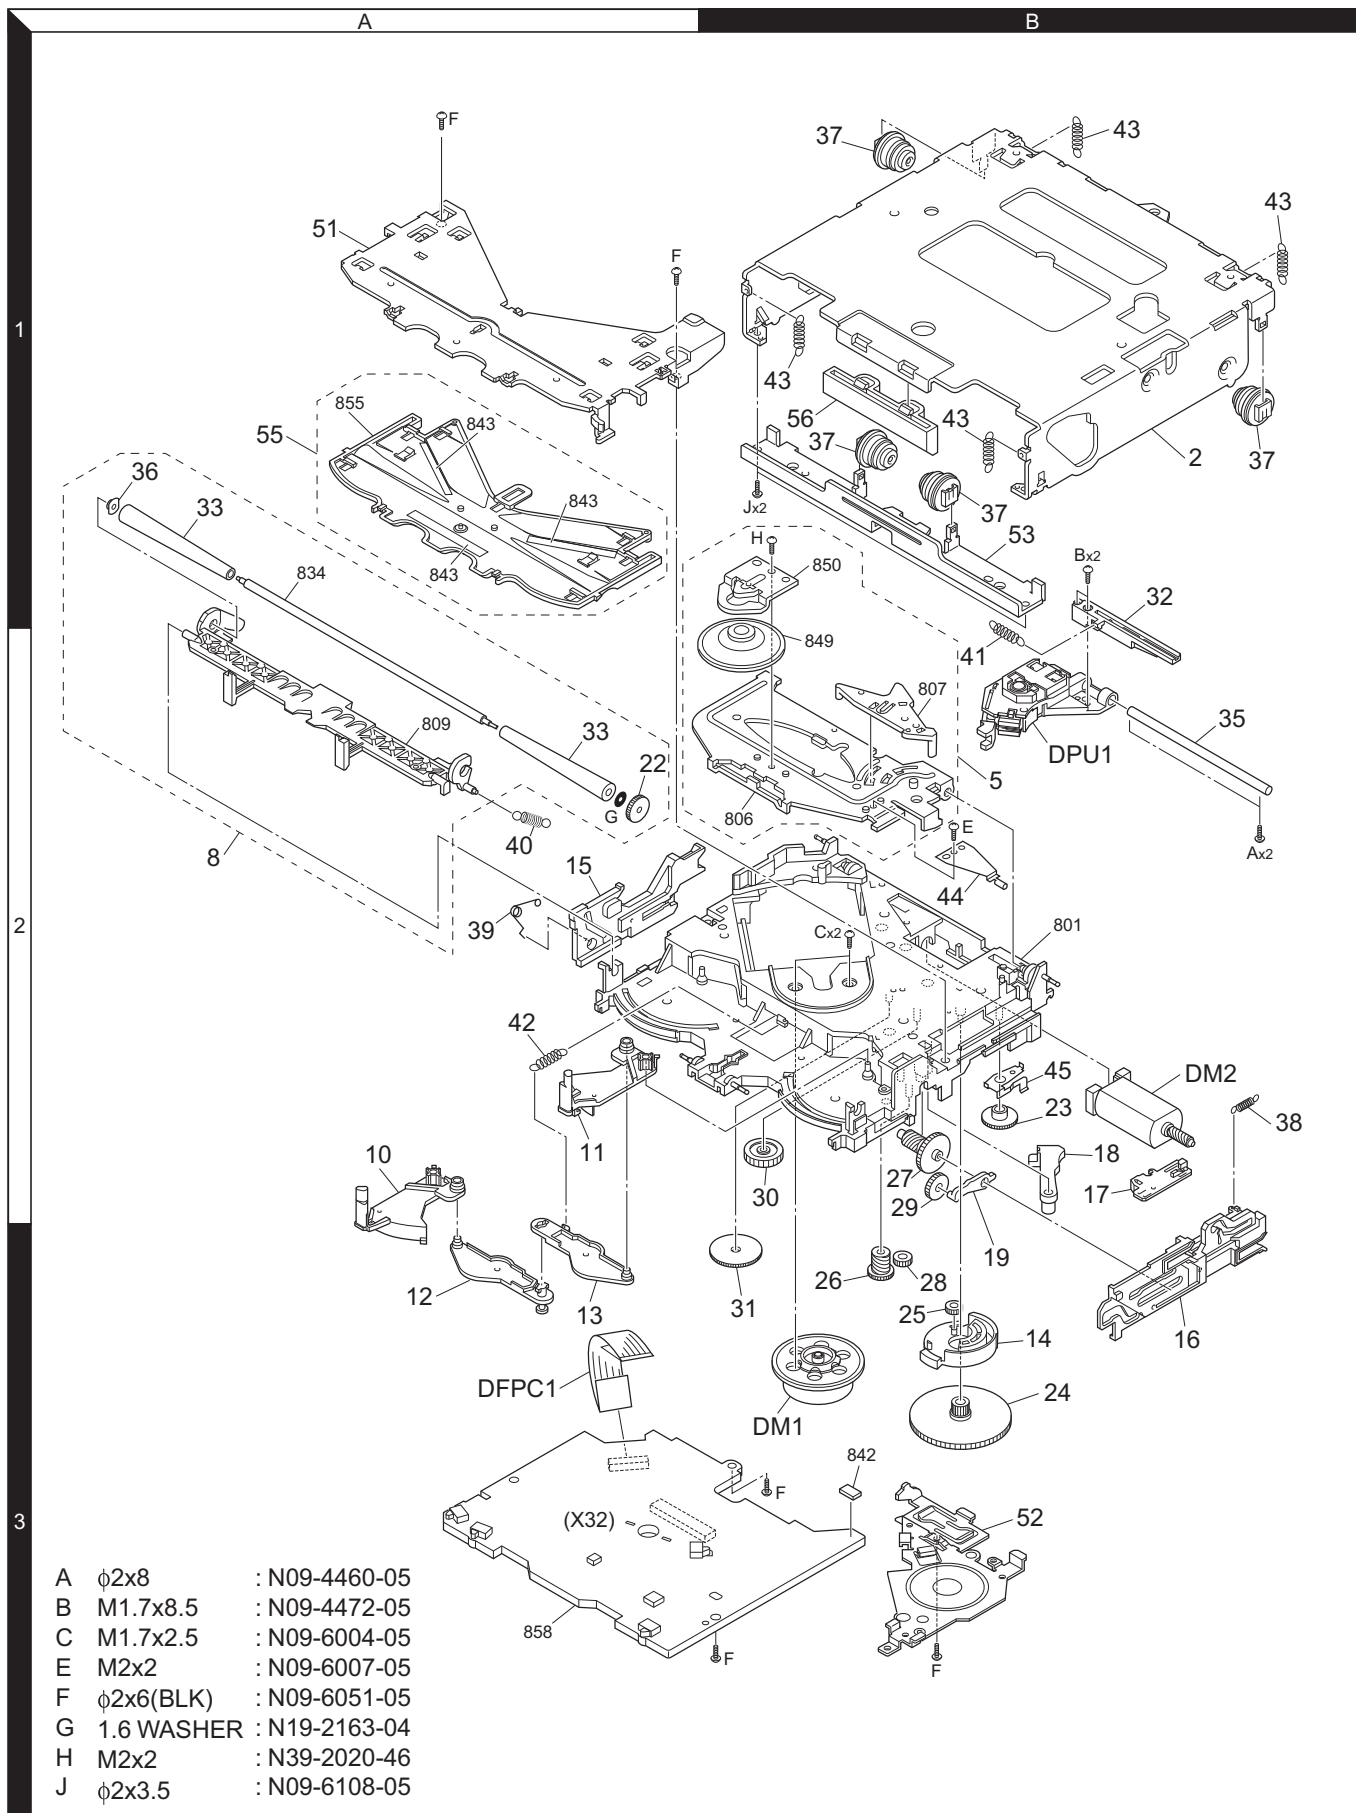

EXPLODED VIEW (UNIT)

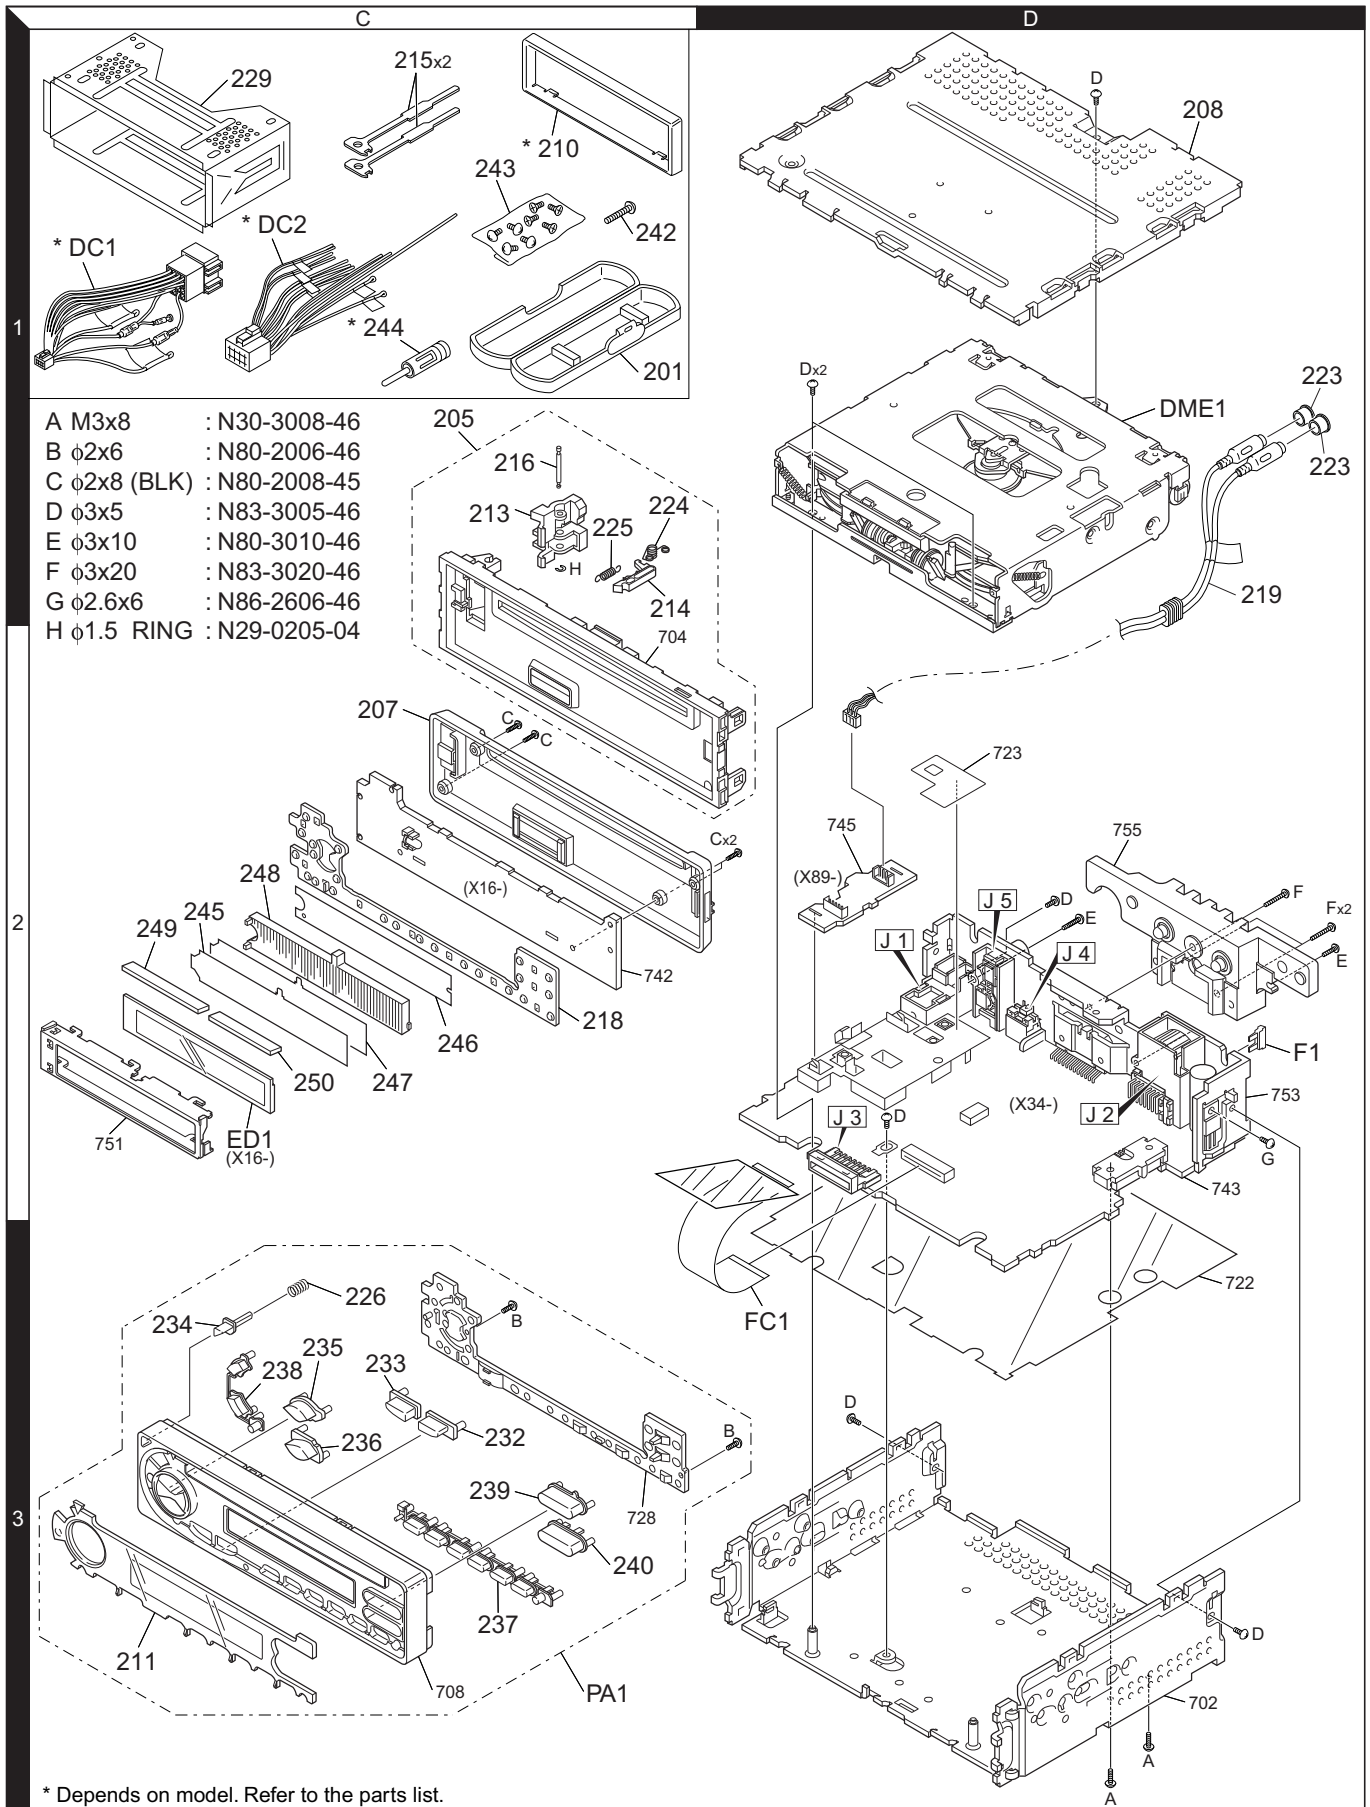

* Depends on model. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-205/CR, KDC-226, KDC-2026, KDC-3026/R					
201	1C		A02-1486-13	PLASTIC CABINET ASSY	
205	2C		A22-2863-03	SUB PANEL ASSY	
207	2C	*	A46-1796-01	REAR COVER	
208	1D		A52-0804-02	TOP PLATE	
PA1	3C	*	A64-3149-02	PANEL ASSY	K2
PA1	3C	*	A64-3161-02	PANEL ASSY	M3
PA1	3C	*	A64-3162-02	PANEL ASSY	M
PA1	3C	*	A64-3163-02	PANEL ASSY	M1
PA1	3C	*	A64-3164-02	PANEL ASSY	M2
PA1	3C	*	A64-3304-02	PANEL ASSY	K4
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-			B58-1365-04	CAUTION CARD	
-		*	B64-2670-00	INST. MANUAL (ENG,FRA,SPA,POR)	K2
-		*	B64-2671-00	INST. MANUAL (ENG,T-CHI)	MM1M2
-		*	B64-2672-00	INST. MANUAL (ARABIC)	MM1M2
-		*	B64-2729-00	INST. MANUAL (ENG,T-CHI)	M3
-		*	B64-2730-00	INST. MANUAL (ARABIC)	M3
-		*	B64-2738-00	INST. MANUAL (ENG,SPA,POR)	K4
210	1C		B07-3001-02	ESCUTCHEON	K4M2
210	1C	*	B07-3097-02	ESCUTCHEON	K2
210	1C	*	B07-3098-02	ESCUTCHEON	M
210	1C	*	B07-3098-02	ESCUTCHEON	M1M3
211	3C	*	B10-4443-01	FRONT GLASS	K2
211	3C	*	B10-4455-01	FRONT GLASS	M3
211	3C	*	B10-4456-01	FRONT GLASS	M
211	3C	*	B10-4457-01	FRONT GLASS	M1
211	3C	*	B10-4458-01	FRONT GLASS	M2
211	3C	*	B10-4547-01	FRONT GLASS	K4
213	1C		D10-4446-03	LEVER	
214	1C		D10-4447-03	LEVER	
215	1C		D10-4589-04	LEVER	
216	1C		D21-2329-04	SHAFT	
218	1C	*	E29-1964-02	CONDUCTIVE RUBBER	
219	1D		E30-6229-05	CORD WITH PINPLUG	M
△ DC1	1C	*	E30-6132-15	DC CORD	M3
△ DC1	1C	*	E30-6286-05	DC CORD	M3
△ DC2	1C	*	E30-6322-05	DC CORD	K2
△ DC2	1C	*	E30-6322-05	DC CORD	K4M
△ DC2	1C	*	E30-6322-05	DC CORD	M1M2
△ DC2	1C	*	E30-6323-05	DC CORD	K2
△ DC2	1C	*	E30-6323-05	DC CORD	K4M
△ DC2	1C	*	E30-6323-05	DC CORD	M1M2
FC1	2D		E39-0476-05	FLAT CABLE (22PIN)	
223	1D		F29-0626-04	INSULATING COVER	M
△ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE 10A)	
△ F1	2D	*	F52-0023-05	FUSE (MINI BLADE TYPE 10A)	
224	1C		G01-2987-04	TORSION COIL SPRING	
225	1C		G01-3096-04	EXTENSION SPRING	
226	3C		G01-3149-04	COMPRESSION SPRING	
-			H10-4856-12	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	

K2 : KDC-205
M1 : KDC-2026
K4 : KDC-205CR
M2 : KDC-226
M : KDC-3026
M3 : KDC-3026R

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-2966-03	ITEM CARTON CASE	K2
-		*	H54-2967-03	ITEM CARTON CASE	M3
-		*	H54-2968-03	ITEM CARTON CASE	M
-		*	H54-2969-03	ITEM CARTON CASE	M1
-		*	H54-2970-03	ITEM CARTON CASE	M2
-		*	H54-3121-03	ITEM CARTON CASE	K4
229	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
232	3C	*	K24-4098-04	KNOB (SRC)	
233	3C	*	K24-4099-04	KNOB (Q-AUDIO)	
234	3C	*	K24-4101-04	KNOB (RELEASE)	
235	3C	*	K24-4096-04	KNOB (VOL.UP)	
236	3C	*	K24-4097-04	KNOB (VOL.DOWN)	
237	3C	*	K25-1589-03	KNOB (PRESET1-6)	
238	3C	*	K25-1590-03	KNOB (EJECT/ATT)	
239	3C	*	K25-1613-03	KNOB (FM/AM)	
240	3C	*	K25-1614-03	KNOB (SEEK)	
242	1C		N84-4016-46	PAN HEAD TAPTITE SCREW	
243	1C		N99-1719-05	SCREW SET	
A	2D		N30-3008-46	PAN HEAD MACHINE SCREW	
B	2D		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	2D		N80-2008-45	PAN HEAD TAPTITE SCREW	
D	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
H	2D		N29-0205-04	RETAINING RING	
244	1C		T90-0523-05	ANTENNA ADAPTOR	M3
DME1	1D	*	X92-4840-00	MECHANISM ASSY (DXM-6200W)	
SWITCH UNIT (X16-2460-21)					
245	2C	*	B11-1436-04	OPTICAL DIFFUSER	M3
246	2C	*	B11-1437-04	REFLECTION SHEET	M3
248	2C	*	B19-2242-03	LIGHTING BOARD	M3
D1			B30-1633-05	LED (WHITE)	M3
D2			B30-1567-05	LED (1608,RED)	M3
D3,4			B30-1564-05	LED (1608,BLUE)	M3
D11-19			B30-1567-05	LED (1608,RED)	M3
D21-29			B30-1533-05	LED (1608,PG)	M3
ED1	2C	*	B38-1145-05	LIQUID CRYSTAL	M3
C1			CK73GB1H102K	CHIP C 1000PF K	M3
C2			CK73GB1H103K	CHIP C 0.010UF K	M3
C3,4			CK73GB1E473K	CHIP C 0.047UF K	M3
C5			CK73FB1A225K	CHIP C 2.2UF K	M3
C11-13			CK73GB1H103K	CHIP C 0.010UF K	M3
249	2C	*	E29-1965-04	CONDUCTIVE RUBBER	M3
250	2C	*	E29-1966-04	CONDUCTIVE RUBBER	M3
J1			E59-0828-05	RECTANGULAR PLUG (15PIN)	M3
R1			RK73GB2A563J	CHIP R 56K J 1/10W	M3
R2			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	M3
R3			RK73GB2A472J	CHIP R 4.7K J 1/10W	M3
R4			RK73GB2A473J	CHIP R 47K J 1/10W	M3
R5			RK73GB2A102J	CHIP R 1.0K J 1/10W	M3
R6-8			RK73GB2A471J	CHIP R 470 J 1/10W	M3

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-2460-21)

Ref. No.	Add	New	Parts No.	Description	Destination
R9			RK73GB2A102J	CHIP R 1.0K J 1/10W	M3
R10			RK73GB2A470J	CHIP R 47 J 1/10W	M3
R11			RK73GB2A102J	CHIP R 1.0K J 1/10W	M3
R12,13			RK73GB2A222J	CHIP R 2.2K J 1/10W	M3
R21,22			RK73FB2B221J	CHIP R 220 J 1/8W	M3
R23			RK73FB2B431J	CHIP R 430 J 1/8W	M3
R24			RK73FB2B271J	CHIP R 270 J 1/8W	M3
R25			RK73FB2B301J	CHIP R 300 J 1/8W	M3
R31-33			RK73FB2B331J	CHIP R 330 J 1/8W	M3
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	M3
D31-35			RD5.6S	ZENER DIODE	M3
D31-35			UDZS5.6B	ZENER DIODE	M3
IC1			LC75883E	MOS-IC	M3
IC2			RS-171	ANALOGUE IC	M3
Q1			DTA114EE	DIGITAL TRANSISTOR	M3
Q2,3		*	2SC4617	TRANSISTOR	M3
SWITCH UNIT (X16-2470-xx)					
245	2C	*	B11-1435-04	OPTICAL DIFFUSER	M1M2
245	2C	*	B11-1436-04	OPTICAL DIFFUSER	K2
245	2C	*	B11-1436-04	OPTICAL DIFFUSER	K4M
246	2C	*	B11-1437-04	REFLECTION SHEET	K2
246	2C	*	B11-1437-04	REFLECTION SHEET	K4M
246	2C	*	B11-1437-04	REFLECTION SHEET	M1M2
248	2C	*	B19-2242-03	LIGHTING BOARD	K2
248	2C	*	B19-2242-03	LIGHTING BOARD	K4M
248	2C	*	B19-2242-03	LIGHTING BOARD	M1M2
D1			B30-1633-05	LED (WHITE)	K2
D1			B30-1633-05	LED (WHITE)	M2
D1			B30-1641-05	LED	K4
D2			B30-1567-05	LED (1608,RED)	K2
D2			B30-1567-05	LED (1608,RED)	K4M1
D2			B30-1567-05	LED (1608,RED)	M2
D2-6			B30-1567-05	LED (1608,RED)	M
D3-6		*	B30-1687-05	LED (1608, GRN)	M1M2
D3,4			B30-1564-05	LED (1608,BLUE)	K2
D3,4			B30-1564-05	LED (1608,BLUE)	K4
D11-19			B30-1533-05	LED (1608,PG)	M1M2
D11-19			B30-1567-05	LED (1608,RED)	K2
D11-19			B30-1567-05	LED (1608,RED)	K4M
ED1	2C	*	B38-1138-05	LIQUID CRYSTAL	K2M
ED1	2C	*	B38-1139-05	LIQUID CRYSTAL	K2
ED1	2C	*	B38-1140-05	LIQUID CRYSTAL	M1M2
C1			CK73GB1H102K	CHIP C 1000PF K	K2
C1			CK73GB1H102K	CHIP C 1000PF K	K4M
C1			CK73GB1H102K	CHIP C 1000PF K	M1M2
C2			CK73GB1H103K	CHIP C 0.010UF K	K2
C2			CK73GB1H103K	CHIP C 0.010UF K	K4M
C2			CK73GB1H103K	CHIP C 0.010UF K	M1M2
C3,4			CK73GB1E473K	CHIP C 0.047UF K	K2
C3,4			CK73GB1E473K	CHIP C 0.047UF K	K4M
C3,4			CK73GB1E473K	CHIP C 0.047UF K	M1M2
C5			CK73FB1A225K	CHIP C 2.2UF K	K4M
C5			CK73FB1A225K	CHIP C 2.2UF K	K2
C11			CK73GB1H103K	CHIP C 0.010UF K	MM1
C11			CK73GB1H103K	CHIP C 0.010UF K	M2
C11-13			CK73GB1H103K	CHIP C 0.010UF K	K2
C11-13			CK73GB1H103K	CHIP C 0.010UF K	K4
249	2C	*	E29-1965-04	CONDUCTIVE RUBBER	K2
249	2C	*	E29-1965-04	CONDUCTIVE RUBBER	K4M
249	2C	*	E29-1965-04	CONDUCTIVE RUBBER	M1M2
249	2C	*	E29-1966-04	CONDUCTIVE RUBBER	K2
249	2C	*	E29-1966-04	CONDUCTIVE RUBBER	K4M
249	2C	*	E29-1966-04	CONDUCTIVE RUBBER	M1M2
J1			E59-0828-05	RECTANGULAR PLUG (15PIN)	K2
J1			E59-0828-05	RECTANGULAR PLUG (15PIN)	K4M
J1			E59-0828-05	RECTANGULAR PLUG (15PIN)	M1M2
R1			RK73GB2A563J	CHIP R 56K J 1/10W	K2
R1			RK73GB2A563J	CHIP R 56K J 1/10W	K4M
R1			RK73GB2A563J	CHIP R 56K J 1/10W	M1M2
R2			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	K2
R2			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	K4M
R2			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	M1M2
R3			RK73GB2A472J	CHIP R 4.7K J 1/10W	K2
R3			RK73GB2A472J	CHIP R 4.7K J 1/10W	K4M
R3			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1M2
R6-8			RK73GB2A471J	CHIP R 470 J 1/10W	K2
R6-8			RK73GB2A471J	CHIP R 470 J 1/10W	K4M
R6-8			RK73GB2A471J	CHIP R 470 J 1/10W	M1M2
R9			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2
R9			RK73GB2A102J	CHIP R 1.0K J 1/10W	K4M
R9			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2
R10			RK73GB2A470J	CHIP R 47 J 1/10W	K4M
R10			RK73GB2A470J	CHIP R 47 J 1/10W	M1
R11			RK73GB2A102J	CHIP R 1.0K J 1/10W	K4M
R11			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1
R21,22			RK73FB2B221J	CHIP R 220 J 1/8W	K2
R21,22			RK73FB2B221J	CHIP R 220 J 1/8W	K4M
R21,22			RK73FB2B221J	CHIP R 220 J 1/8W	M1M2
R23			RK73FB2B431J	CHIP R 430 J 1/8W	K2
R23			RK73FB2B431J	CHIP R 430 J 1/8W	K4
R24			RK73FB2B271J	CHIP R 270 J 1/8W	K2
R24			RK73FB2B271J	CHIP R 270 J 1/8W	K4
R25			RK73FB2B301J	CHIP R 300 J 1/8W	K2
R25			RK73FB2B301J	CHIP R 300 J 1/8W	K4
R26			RK73FB2B361J	CHIP R 360 J 1/8W	M1M2
R26			RK73FB2B391J	CHIP R 390 J 1/8W	M
R27,28			RK73FB2B271J	CHIP R 270 J 1/8W	MM1
R27,28			RK73FB2B271J	CHIP R 270 J 1/8W	M2
R31-33			RK73FB2B331J	CHIP R 330 J 1/8W	M1M2
R31-33			RK73FB2B391J	CHIP R 390 J 1/8W	K2
R31-33			RK73FB2B391J	CHIP R 390 J 1/8W	K4M
D32-35			RD5.6S	ZENER DIODE	K2
D32-35			RD5.6S	ZENER DIODE	K4M
D32-35			RD5.6S	ZENER DIODE	M1M2
D32-35			UDZS5.6B	ZENER DIODE	K2
D32-35			UDZS5.6B	ZENER DIODE	K4M

K2 : KDC-205
M1 : KDC-2026K4 : KDC-205CR
M2 : KDC-226M : KDC-3026
M3 : KDC-3026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-2470-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D32-35 IC1 IC1 IC1 IC2			UDZS5.6B LC75853NE LC75853NE LC75853NE RS-171	ZENER DIODE MOS-IC MOS-IC MOS-IC ANALOGUE IC	M1M2 K2 K4M M1M2 K4M
IC2 Q1 Q1 Q1			RS-171 DTA114EE DTA114EE DTA114EE	ANALOGUE IC DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M1 K2 K4M M1M2
CD PLAYER UNIT (X32-5490-00)					
C1,2 C3 C4 C6-9 C10			CK73GB1H222K CK73FB1A225K CK73GB1C104K CK73GB1C104K CK73GB1H103K	CHIP C 2200PF K CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C11 C12 C13 C14 C15			CK73GB0J105K CK73GB1C104K CK73FB0J106M CK73GB1H152K CK73GB1H102K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 1500PF K CHIP C 1000PF K	
C16,17 C18,19 C20 C21 C22			CK73GB0J105K CK73GB1C104K CK73FB0J106M CK73GB1C104K CK73GB1H682K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 0.10UF K CHIP C 6800PF K	
C23 C24 C25-27 C28 C29			CC73GCH1H470J CC73GCH1H560J CK73GB1C104K CK73FB1A225K CK73GB1H682K	CHIP C 47PF J CHIP C 56PF J CHIP C 0.10UF K CHIP C 2.2UF K CHIP C 6800PF K	
C30 C31 C32 C33 C34			CK73GB1C104K CK73GB0J105K CC73GCH1H040C CK73GB1H332K CK73GB1C104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 4.0PF C CHIP C 3300PF K CHIP C 0.10UF K	
C35 C36 C37 C38 C39			CK73GB1H331K CK73GB1H472K CK73GB1H331K CK73GB1H152K CC73GCH1H330J	CHIP C 330PF K CHIP C 4700PF K CHIP C 330PF K CHIP C 1500PF K CHIP C 33PF J	
C40 C41,42 C43-46			CK73GB1C104K CK73GB1H103K CK73GB1H152K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1500PF K	
CN1 CN1 CN2		*	E41-2068-05 E41-2085-05 E41-2082-05	FLAT CABLE CONNECTOR (16PIN) FLAT CABLE CONNECTOR (22PIN) FLAT CABLE CONNECTOR	
L1 X1 X2			L92-0329-05 L78-0867-05 L78-0851-05	CHIP FERRITE RESONATOR (4.19MHZ) RESONATOR (16.934MHZ)	
CP1 CP3 CP4 CP5 CP6		*	RK74GA1J101J RK74GA1J101J RK74GA1J104J RK74GB1J102J RK74GA1J102J	CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100K J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 1.0K J 1/16W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CP7 CP8 R1,2 R3 R6			RK74GB1J103J RK74GB1J472J RK73FB2B331J RK73GB2A102J RK73GB2A104J	CHIP-COM 10K J 1/16W CHIP-COM 4.7K J 1/16W CHIP R 330 J 1/8W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W	
R7,8 R9 R10 R11 R12			RK73GB2A103J RK73GB2A104J R92-3494-05 RK73GB2A102J RK73GB2A104J	CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 5.6 J 1/2W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W	
R13-15 R16 R17,18 R19 R20			RK73GB2A101J RK73GB2A102J RK73GB2A4R7J RK73GB2A101J RK73GB2A472J	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7 J 1/10W CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W	
R22 R23 R24 R25 R26			RK73GB2A104J RK73FB2B4R7J RK73GB2A104J RK73GB2A393J RK73GB2A274J	CHIP R 100K J 1/10W CHIP R 4.7 J 1/8W CHIP R 100K J 1/10W CHIP R 39K J 1/10W CHIP R 270K J 1/10W	
R27,28 R29,30 R31 R32 R33			RK73GB2A302J RK73GB2A101J RK73GB2A133J RK73GB2A102J RK73GB2A392J	CHIP R 3.0K J 1/10W CHIP R 100 J 1/10W CHIP R 13K J 1/10W CHIP R 1.0K J 1/10W CHIP R 3.9K J 1/10W	
R34 R35 R36,37 R38 R39			RK73GB2A123J RK73GB2A133J RK73GB2A123J RK73GB2A432J RK73GB2A163J	CHIP R 12K J 1/10W CHIP R 13K J 1/10W CHIP R 12K J 1/10W CHIP R 4.3K J 1/10W CHIP R 16K J 1/10W	
R40 R41 R42 R43 R44			RK73GB2A133J RK73GB2A472J RK73GB2A183J RK73GB2A333J RK73GB2A103J	CHIP R 13K J 1/10W CHIP R 4.7K J 1/10W CHIP R 18K J 1/10W CHIP R 33K J 1/10W CHIP R 10K J 1/10W	
R45 R46,47			RK73GB2A241J RK73GB2A562J	CHIP R 240 J 1/10W CHIP R 5.6K J 1/10W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D2 IC1 IC2 IC3 IC4		*	DAN202UF 789166YGB-A513 NJM2880U133 UPD63712GC BA5824FP-F	DIODE MICROCONTROLLER IC ANALOGUE IC MOS-IC ANALOGUE IC	
Q2 Q3 Q4		*	DTA114YUAF 2SB0970 DTC114YUAF	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-3100-21/X34-3110-xx)					
C1 C21 C30 C40 C50		*	C94-0216-05 CK73GB1H103K CK73GB1H103K CK73GB1H103K CD04AS1E100M	ELECTRO 3300UF 16WV CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K ELECTRO 10UF 25WV	M3 K2

K2 : KDC-205
M1 : KDC-2026

K4 : KDC-205CR
M2 : KDC-226

M : KDC-3026
M3 : KDC-3026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3100-21/X34-3110-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C50		*	CD04AS1E100M	ELECTRO 10UF 25WV	K4M3	C523			CC73GCH1H270J	CHIP C 27PF J	
C50,51		*	CD04AS1E100M	ELECTRO 10UF 25WV	MM1M2	C524			CC73GCH1H101J	CHIP C 100PF J	
C52-54		*	CD04AS1C100M	ELECTRO 10UF 16WV		C525			CK73GB1H103K	CHIP C 0.010UF K	
C55			CD04AS1E100M	ELECTRO 10UF 25WV		C526			CC73GCH1H050C	CHIP C 5.0PF C	
C56			CD04AT1H100M	ELECTRO 10UF 50WV		C528			CC73GCH1H060D	CHIP C 6.0PF D	
C57			C90-2980-05	ELECTRO 220UF 16WV		C530			CC73GCH1H040C	CHIP C 4.0PF C	
C58			C90-2962-05	ELECTRO 100UF 16WV		C531			CK73FB1C105K	CHIP C 1.0UF K	
C63		*	CD04AS1C220M	ELECTRO 22UF 16WV		C533,534			CK73GB1H103K	CHIP C 0.010UF K	
C101		*	CD04AS0J101M	ELECTRO 100UF 6.3WV		C535			CC73GCH1H020C	CHIP C 2.0PF C	
C102			CK73GB1H103K	CHIP C 0.010UF K		C536			CC73GCH1H040C	CHIP C 4.0PF C	
C103			CK73GB1C104K	CHIP C 0.10UF K		C537,538			CC73GCH1H080D	CHIP C 8.0PF D	
C104,105			CC73GCH1H150J	CHIP C 15PF J		C541			CC73GCH1H040C	CHIP C 4.0PF C	
C106			CK73GB1H102K	CHIP C 1000PF K	M3	C542			CC73GCH1H220J	CHIP C 22PF J	
C106			CK73GB1H152K	CHIP C 1500PF K	K2	C543			CC73GCH1H680J	CHIP C 68PF J	
C106			CK73GB1H152K	CHIP C 1500PF K	K4M	C544			CC73GCH1H150J	CHIP C 15PF J	
C106			CK73GB1H152K	CHIP C 1500PF K	M1M2	C545			CK73GB1H682K	CHIP C 6800PF K	
C142			CK73GB1C104K	CHIP C 0.10UF K		C546			CK73GB1H103K	CHIP C 0.010UF K	
C204,205		*	CD04AS1H2R2M	ELECTRO 2.2UF 50WV		C547			CD04AT1A100M	ELECTRO 10UF 10WV	
C223,224		*	CD04AS1C100M	ELECTRO 10UF 16WV		C548			CK73GB1E223K	CHIP C 0.022UF K	
C226,227			CC73GCH1H681J	CHIP C 680PF J	M3	C549			CK73GB1H222K	CHIP C 2200PF K	
C251-254			C94-0179-05	ELECTRO 0.22UF 50WV		C550			CK73GB1E333K	CHIP C 0.033UF K	
C255		*	CD04AS1H010M	ELECTRO 1UF 50WV		C551,552			CK73GB1H103K	CHIP C 0.010UF K	
C256		*	CD04AS1A101M	ELECTRO 100UF 10WV	K4M2	C553			CK73GB1E473K	CHIP C 0.047UF K	M3
C256		*	CD04AS1A330M	ELECTRO 33UF 10WV	K2	C553,554			CK73GB1C104K	CHIP C 0.10UF K	K2
C256		*	CD04AS1A330M	ELECTRO 33UF 10WV	MM1	C553,554			CK73GB1C104K	CHIP C 0.10UF K	K4M
C256		*	CD04AS1A330M	ELECTRO 33UF 10WV	M3	C553,554			CK73GB1C104K	CHIP C 0.10UF K	M1M2
C257		*	CD04AS1H010M	ELECTRO 1UF 50WV		C554			CK73GB1C104K	CHIP C 0.10UF K	M3
C258			C90-5663-05	ELECTRO 1UF 50WV		C555,556			CK73GB1H102K	CHIP C 1000PF K	
C351			CD04AT0J100M	ELECTRO 10UF 6.3WV	M3	C560			CC73GCH1H101J	CHIP C 100PF J	
C352			CC73GCH1H331J	CHIP C 330PF J	M3	C561			CD04AT1H010M	ELECTRO 1UF 50WV	
C353			CD04AT0J100M	ELECTRO 10UF 6.3WV	M3	C562			CD04AT1A100M	ELECTRO 10UF 10WV	
C354			CK73GB1H103K	CHIP C 0.010UF K	M3	C563			CD04AT1HR47M	ELECTRO 0.47UF 50WV	
C355,356			CC73GCH1H100D	CHIP C 10PF D	M3	C564			CK73GB1A474K	CHIP C 0.47UF K	
C401,402			CD04AT1H010M	ELECTRO 1UF 50WV	MM1	C565		*	CD04AS1A470M	ELECTRO 47UF 10WV	
C401,402			CD04AT1H010M	ELECTRO 1UF 50WV	M3	C568			CC73GCH1H221J	CHIP C 220PF J	M3
C403			CD04AT1A101M	ELECTRO 100UF 10WV	MM1	C568			CC73GCH1H821J	CHIP C 820PF J	K2
C403			CD04AT1A101M	ELECTRO 100UF 10WV	M3	C568			CC73GCH1H821J	CHIP C 820PF J	K4M
C404			CK73GB1H103K	CHIP C 0.010UF K	MM1	C568			CC73GCH1H821J	CHIP C 820PF J	M1M2
C404			CK73GB1H103K	CHIP C 0.010UF K	M3	C580			CK73GB1H103K	CHIP C 0.010UF K	
C502			CK73GB1H152K	CHIP C 1500PF K		C581			CC73GCH1H020C	CHIP C 2.0PF C	
C503			CK73GB1C104K	CHIP C 0.10UF K		C582,583			CK73GB1C104K	CHIP C 0.10UF K	
C504			CK73GB1H103K	CHIP C 0.010UF K		C584		*	CD04AT1C4R7M	ELECTRO 4.7UF 16WV	
C505		*	CD04AT1C4R7M	ELECTRO 4.7UF 16WV		C585			CK73GB1H103K	CHIP C 0.010UF K	
C506			CK73GB1C104K	CHIP C 0.10UF K		C586			CK73GB1C104K	CHIP C 0.10UF K	
C507			CD04AT1A330M	ELECTRO 33UF 10WV		C587			CK73GB1H103K	CHIP C 0.010UF K	K2
C508			CD04AT1A220M	ELECTRO 22UF 10WV		C587			CK73GB1H103K	CHIP C 0.010UF K	K4M
C509			CC73GCH1H680J	CHIP C 68PF J		C587			CK73GB1H103K	CHIP C 0.010UF K	M1M2
C510			CC73GCH1H101J	CHIP C 100PF J		C587			CK73GB1H821K	CHIP C 820PF K	M3
C511			CK73GB1H103K	CHIP C 0.010UF K		C588			CK73GB1A474K	CHIP C 0.47UF K	
C512		*	CD04AT1C4R7M	ELECTRO 4.7UF 16WV		C589			CK73GB1C104K	CHIP C 0.10UF K	K2
C513,514			CK73GB1H103K	CHIP C 0.010UF K		C589			CK73GB1C104K	CHIP C 0.10UF K	K4M
C515			CK73FB1C105K	CHIP C 1.0UF K		C589			CK73GB1C104K	CHIP C 0.10UF K	M1M2
C516			CC73GCH1H100D	CHIP C 10PF D		C590			CK73GB1C104K	CHIP C 0.10UF K	M3
C521			CK73GB1C104K	CHIP C 0.10UF K		C591			CD04AT1A330M	ELECTRO 33UF 10WV	
C522			CC73GCH1H330J	CHIP C 33PF J		C592			CK73GB1H103K	CHIP C 0.010UF K	M3

K2 : KDC-205
M1 : KDC-2026K4 : KDC-205CR
M2 : KDC-226M : KDC-3026
M3 : KDC-3026R

△ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3100-21/X34-3110-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C593 C600			CK73FB1C105K CD04AT1A101M	CHIP C 1.0UF K ELECTRO 100UF 10WV	
CN1 J1 J2 J3 J4			E40-9550-05 E04-0312-05 E58-0863-15 E58-0879-05 E56-0834-05	FLAT CABLE CONNECTOR (22PIN) RF COAXIAL CABLE RECEPTACLE RECTANGULAR RECEPTACLE RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE	MM1
J4 J5 P1 WH1		*	E56-0834-05 E63-0852-05 E23-0745-05 E39-0532-05	CYLINDRICAL RECEPTACLE PIN JACK TERMINAL WIRING HARNESS	M3 M
CF51 CF51-53 CF51-53 CF51-53 CF52,53			L72-0781-05 L72-0781-05 L72-0781-05 L72-0781-05 L72-0716-05	CERAMIC FILTER CERAMIC FILTER CERAMIC FILTER CERAMIC FILTER CERAMIC FILTER	M3 K2 K4M M1M2 M3
CF54 L1 L2 L4 L101			L72-0743-05 L33-1170-05 L33-1807-05 L33-1123-05 L40-4795-91	CERAMIC FILTER CHOKO COIL ASSY CHOKO COIL LINE FILTER COIL SMALL FIXED INDUCTOR (4.7UH,J)	
L501 L502 L503 L504 L505			L40-6891-58 L40-3301-58 L40-1021-56 L40-1011-58 L31-0967-05	SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (33U) SMALL FIXED INDUCTOR (1MH) SMALL FIXED INDUCTOR FM-RF COIL	
L506 L507 L508 L509 L510			L31-0970-05 L32-0936-05 L30-0770-05 L30-0773-05 L40-4795-91	FM-RF COIL FM OSCILLATING COIL FM IFT AM IFT SMALL FIXED INDUCTOR (4.7UH,J)	
L512-514 L516,517 X1 X2 X501			L40-4795-91 L40-4795-91 L77-1167-05 L77-2002-05 L77-2077-05	SMALL FIXED INDUCTOR (4.7UH,J) SMALL FIXED INDUCTOR (4.7UH,J) CRYSTAL RESONATOR (4.19M) CRYSTAL RESONATOR (4.332MHz) CRYSTAL RESONATOR (10.25MHz)	M3
D E F G			N83-3005-46 N80-3010-46 N83-3020-46 N86-2606-46	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
CP1 CP2 CP3 R10 R11			R90-1049-05 R90-1047-05 R90-1046-05 RK73FB2B303J RK73GB2A103J	MULTI-COMP 10K X2 MULTI-COMP 2.2K X2 MULTI-COMP 1K X2 CHIP R 30K J 1/8W CHIP R 10K J 1/10W	
R12 R20 R21 R22 R23			RK73GB2A104J RD14DB2H332J RD14BB2C333J RK73GB2A103J RK73GB2A104J	CHIP R 100K J 1/10W SMALL-RD 3.3K J 1/2W RD 33K J 1/6W CHIP R 10K J 1/10W CHIP R 100K J 1/10W	
R25 R25 R28 R30			RD14BB2C472J RD14BB2C472J RD14BB2C472J RD14BB2C103J	RD 4.7K J 1/6W RD 4.7K J 1/6W RD 4.7K J 1/6W RD 10K J 1/6W	MM1M2 M3 M3

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R31 R32 R50 R51 R57			RK73GB2A473J RK73GB2A223J RD14BB2C562J RK73GB2A473J RK73FB2B152J	CHIP R 47K J 1/10W CHIP R 22K J 1/10W RD 5.6K J 1/6W CHIP R 47K J 1/10W CHIP R 1.5K J 1/8W	M3 M3
R58 R67-69 R68,69 R68,69 R71			RD14BB2C471J RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73GB2A823J	RD 470 J 1/6W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 82K J 1/10W	 MM1M2 K2 K4M3
R72 R73 R101 R102-104 R103,104			RK73GB2A363J RK73GB2A104J RD14BB2C241J RK73GB2A102J RK73GB2A102J	CHIP R 36K J 1/10W CHIP R 100K J 1/10W RD 240 J 1/6W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W	 M3 K2
R103,104 R103,104 R105 R106 R107,108			RK73GB2A102J RK73GB2A102J RK73GB2A471J RK73GB2A104J RK73GB2A222J	CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W CHIP R 470 J 1/10W CHIP R 100K J 1/10W CHIP R 2.2K J 1/10W	K4M M1M2
R110 R113,114 R115 R116 R117			RK73GB2A472J RK73GB2A473J RK73GB2A102J RK73GB2A103J RK73GB2A102J	CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W	
R118 R119 R121 R122 R123			RK73GB2A103J RK73GB2A473J RK73GB2A222J RK73GB2A101J RK73GB2A102J	CHIP R 10K J 1/10W CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W	
R125 R126 R127 R128 R129,130			RK73GB2A102J RK73GB2A104J RK73GB2A222J RK73GB2A225J RK73GB2A222J	CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2M J 1/10W CHIP R 2.2K J 1/10W	
R131 R132 R133 R134 R135			RK73GB2A682J RK73GB2A222J RK73GB2A123J RD14BB2C222J RK73GB2A473J	CHIP R 6.8K J 1/10W CHIP R 2.2K J 1/10W CHIP R 12K J 1/10W RD 2.2K J 1/6W CHIP R 47K J 1/10W	M3 K2K4
R135 R136,137 R137 R138,139 R138,139			RK73GB2A473J RK73GB2A473J RK73GB2A473J RK73GB2A473J RK73GB2A473J	CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W	M2 MM1M3 M2 K2 K4
R139 R139 R141 R143 R144			RK73GB2A473J RK73GB2A473J RD14BB2C472J RD14BB2C472J RK73GB2A104J	CHIP R 47K J 1/10W CHIP R 47K J 1/10W RD 4.7K J 1/6W RD 4.7K J 1/6W CHIP R 100K J 1/10W	MM1M2 M3
R145 R163 R164,165 R166 R167			RD14BB2C222J RD14BB2C100J RD14BB2C471J RD14BB2C102J RD14BB2C101J	RD 2.2K J 1/6W RD 10 J 1/6W RD 470 J 1/6W RD 1.0K J 1/6W RD 100 J 1/6W	

K2 : KDC-205
M1 : KDC-2026
K4 : KDC-205CR
M2 : KDC-226
M : KDC-3026
M3 : KDC-3026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3100-21/X34-3110-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R168-170			RD14BB2C102J	RD 1.0K J 1/6W	M3	R506			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R169			RD14BB2C102J	RD 1.0K J 1/6W	K2M2	R507			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R169,170			RD14BB2C102J	RD 1.0K J 1/6W	K4M	R521-524			RK73GB2A104J	CHIP R 100K J 1/10W	
R169,170			RD14BB2C102J	RD 1.0K J 1/6W	M1	R525			RK73GB2A331J	CHIP R 330 J 1/10W	M3
R171			RD14BB2C470J	RD 47 J 1/6W	K4M	R525			RK73GB2A821J	CHIP R 820 J 1/10W	K2
R171			RD14BB2C470J	RD 47 J 1/6W	M1M3	R525			RK73GB2A821J	CHIP R 820 J 1/10W	K4M
R172			RD14BB2C102J	RD 1.0K J 1/6W		R525			RK73GB2A821J	CHIP R 820 J 1/10W	M1M2
R174			RK73GB2A473J	CHIP R 47K J 1/10W		R526			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R201			RK73GB2A473J	CHIP R 47K J 1/10W		R527			RK73GB2A104J	CHIP R 100K J 1/10W	
R204			RK73GB2A102J	CHIP R 1.0K J 1/10W	M3	R528			RD14BB2C104J	RD 100K J 1/6W	
R205			RK73GB2A472J	CHIP R 4.7K J 1/10W	M3	R541			RK73GB2A102J	CHIP R 1.0K J 1/10W	M3
R223,224			RK73FB2B271J	CHIP R 270 J 1/8W		R542			RK73GB2A472J	CHIP R 4.7K J 1/10W	M3
R227,228			RD14BB2C303J	RD 30K J 1/6W		R543			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R231,232			RD14BB2C101J	RD 100 J 1/6W		R544			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R251			RK73GB2A472J	CHIP R 4.7K J 1/10W	K4M2	R545			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R252,253			RD14BB2C472J	RD 4.7K J 1/6W	K4M2	R546			RK73GB2A333J	CHIP R 33K J 1/10W	
R254			RK73GB2A472J	CHIP R 4.7K J 1/10W	K4M2	R547			RK73GB2A220J	CHIP R 22 J 1/10W	
R255			RK73GB2A333J	CHIP R 33K J 1/10W		R561			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R256			RK73FB2B102J	CHIP R 1.0K J 1/8W	K4M2	R563,564			RK73GB2A103J	CHIP R 10K J 1/10W	
R257			RK73GB2A622J	CHIP R 6.2K J 1/10W		R565			RK73GB2A104J	CHIP R 100K J 1/10W	
R258			RK73GB2A101J	CHIP R 100 J 1/10W	K4M2	R566,567			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R258			RK73GB2A221J	CHIP R 220 J 1/10W	K2	R581			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R258			RK73GB2A221J	CHIP R 220 J 1/10W	MM1	R585	*		RD14BB2C1R0J	RD 1.0 J 1/6W	
R258			RK73GB2A221J	CHIP R 220 J 1/10W	M3	W156,157			R92-2053-05	CHIP R 0 J 1/8W	
R259			RD14BB2C223J	RD 22K J 1/6W		W158			R92-1252-05	CHIP R 0 OHM J 1/16W	
R260			RK73GB2A751J	CHIP R 750 J 1/10W	K4M2	W160			R92-2052-05	CHIP R 0 OHM J 1/10W	K2
R261			RK73GB2A100J	CHIP R 10 J 1/10W	K2	W160			R92-2052-05	CHIP R 0 OHM J 1/10W	K4
R261			RK73GB2A100J	CHIP R 10 J 1/10W	MM1	W161,162			R92-2053-05	CHIP R 0 J 1/8W	
R261			RK73GB2A100J	CHIP R 10 J 1/10W	M3	W165			R92-2053-05	CHIP R 0 J 1/8W	
R261			RK73GB2A431J	CHIP R 430 J 1/10W	K4M2	W405,406			R92-1252-05	CHIP R 0 OHM J 1/16W	K2
R263			RK73GB2A184J	CHIP R 180K J 1/10W	K4M2	W405,406			R92-1252-05	CHIP R 0 OHM J 1/16W	MM1
R263			RK73GB2A432J	CHIP R 4.3K J 1/10W	K2	W405,406			R92-1252-05	CHIP R 0 OHM J 1/16W	M3
R263			RK73GB2A432J	CHIP R 4.3K J 1/10W	MM1	W409			R92-1252-05	CHIP R 0 OHM J 1/16W	K2
R263			RK73GB2A432J	CHIP R 4.3K J 1/10W	M3	W409			R92-1252-05	CHIP R 0 OHM J 1/16W	MM1
R264			RK73GB2A473J	CHIP R 47K J 1/10W		W409,410			R92-1252-05	CHIP R 0 OHM J 1/16W	M3
R351,352			RD14BB2C222J	RD 2.2K J 1/6W	M3	W415			R92-2053-05	CHIP R 0 J 1/8W	
R353			RK73EB2E222J	CHIP R 2.2K J 1/4W	M3	W500,501			R92-1252-05	CHIP R 0 OHM J 1/16W	
R401,402			RD14BB2C100J	RD 10 J 1/6W	MM1	W504,505			R92-1252-05	CHIP R 0 OHM J 1/16W	
R401,402			RD14BB2C100J	RD 10 J 1/6W	M3	W506			R92-2053-05	CHIP R 0 J 1/8W	
R403			RD14BB2C4R7J	RD 4.7 J 1/6W	MM1	W507			R92-1252-05	CHIP R 0 OHM J 1/16W	
R403		*	RD14BB2C4R7J	RD 4.7 J 1/6W	M3	W508			R92-2053-05	CHIP R 0 J 1/8W	
R404			RD14BB2C101J	RD 100 J 1/6W	MM1	W509			R92-1252-05	CHIP R 0 OHM J 1/16W	
R404			RD14BB2C101J	RD 100 J 1/6W	M3	W510			R92-2053-05	CHIP R 0 J 1/8W	
R405-409			RD14BB2C472J	RD 4.7K J 1/6W	MM1	W511			R92-1252-05	CHIP R 0 OHM J 1/16W	K2
R405-409			RD14BB2C472J	RD 4.7K J 1/6W	M3	W511			R92-1252-05	CHIP R 0 OHM J 1/16W	K4M
R410,411			RD14BB2C101J	RD 100 J 1/6W	MM1	W511			R92-1252-05	CHIP R 0 OHM J 1/16W	M1M2
R410,411			RD14BB2C101J	RD 100 J 1/6W	M3	W511,512			R92-1252-05	CHIP R 0 OHM J 1/16W	M3
R412-415			RK73GB2A104J	CHIP R 100K J 1/10W	MM1	W516			R92-1252-05	CHIP R 0 OHM J 1/16W	
R412-415			RK73GB2A104J	CHIP R 100K J 1/10W	M3	W517			R92-2053-05	CHIP R 0 J 1/8W	
R415			RK73GB2A104J	CHIP R 100K J 1/10W	K2K4	W519			R92-2053-05	CHIP R 0 J 1/8W	
R415			RK73GB2A104J	CHIP R 100K J 1/10W	M2	W521			R92-1252-05	CHIP R 0 OHM J 1/16W	
R501			RK73GB2A682J	CHIP R 6.8K J 1/10W		W523,524			R92-1252-05	CHIP R 0 OHM J 1/16W	
R502			RK73GB2A222J	CHIP R 2.2K J 1/10W		W530			R92-2053-05	CHIP R 0 J 1/8W	
R503			RK73EB2E222J	CHIP R 2.2K J 1/4W		W531,532			R92-1252-05	CHIP R 0 OHM J 1/16W	
R505			RK73GB2A102J	CHIP R 1.0K J 1/10W		W533			R92-2053-05	CHIP R 0 J 1/8W	

K2 : KDC-205
M1 : KDC-2026K4 : KDC-205CR
M2 : KDC-226M : KDC-3026
M3 : KDC-3026R

△ Indicates safety critical components.

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3100-21/X34-3110-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W534 W578 W601			R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	M3
D1 D3 D10 D11 D11			1N5393G-M6 IMSA-6801 MA4068(N)-M D1F60 D1F60	DIODE SURGE ABSORBER ZENER DIODE DIODE DIODE	K4MM1 M2M3
D12 D12 D13 D14 D20			AM01ZNF AM01ZNF D1F60 AM01ZNF MA4068(N)-M	DIODE DIODE DIODE DIODE ZENER DIODE	K4MM1 M2M3
D30 D40 D50 D51 D70			MA4047-M 1SS133 DAN202U MA4082(N)-L MA4068(N)-M	ZENER DIODE DIODE DIODE ZENER DIODE ZENER DIODE	M3
D101 D102 D103 D106 D108			1SS133 B30-1567-05 DA204U MA4062-L MA4062-L	DIODE LED (1608,RED) DIODE ZENER DIODE ZENER DIODE	K2
D108 D108 D108,109 D110 D201,202			MA4062-L MA4062-L MA4062-L UDZS12B MA4068(N)-M	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K4M M1M2 M3
D251-253 D261-263 D261-263 D261-263 D264			1SS133 AM01ZNF AM01ZNF AM01ZNF D1F60	DIODE DIODE DIODE DIODE DIODE	K2 MM1 M3 K2
D264 D264 D264 D264 D264			D1F60 D1F60 S1J S1J S1J	DIODE DIODE DIODE DIODE DIODE	MM1 M3 K2 MM1 M3
D265,266 D265,266 D265,266 D267,268 D267,268			AM01ZNF AM01ZNF AM01ZNF D1F60 D1F60	DIODE DIODE DIODE DIODE DIODE	K2 MM1 M3 K2 MM1
D267,268 D267,268 D267,268 D267,268 D401,402			D1F60 S1J S1J S1J MA4068(N)-M	DIODE DIODE DIODE DIODE ZENER DIODE	M3 K2 MM1 M3 MM1
D401,402 D403-405 D403-405 D407-410 D407-410			MA4068(N)-M MA4062-L MA4062-L MA4062-L MA4062-L	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	M3 MM1 M3 MM1 M3
D411			MA3062WA	ZENER DIODE	MM1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D411 D501 D503 D504-506 IC1			MA3062WA RN739F RN739F KV1720S UPD780058GC554	ZENER DIODE DIODE DIODE VARIABLE CAPACITANCE DIODE MICROCONTROLLER IC	M3 M3
IC1 IC1 IC1 IC4 IC4		*	UPD780058GC555 UPD780058GC555 UPD780058GC555 TDA7386 TDA7560	MICROCONTROLLER IC MICROCONTROLLER IC MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC	K2 K4M M1M2 K4M2 K2
IC4 IC4 IC6 IC7 IC8			TDA7560 TDA7560 TDA7479AD BA4911-V4 HD74HC27FP-E	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	MM1 M3 M3
IC10 IC11 IC12 IC12 IC12		*	TDA7513T PST3435UL BR24C01AF-W M24C01-WMN6T S-24CS02AFJ-TB	ANALOGUE IC MOS-IC ROM IC ROM IC MEMORY IC	
Q10 Q20 Q40 Q50 Q51			2SC4081 2SC4081 DTA124EUA 2SA1036K UMC2N	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
Q53 Q55 Q70 Q101 Q102			UMC2N 2SD2375 2SC4081 2SC4081 DTA114YUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	MM1M2
Q201 Q223,224 Q251 Q252 Q253			2SC4081 DTC143TUA DTC114YUA UMG4N UMA1N	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	M3 K4M2 M3 M3
Q501 Q502 Q503 TH1		*	CPH5905 3SK126 2SC4081 PRF21BE471QB2	TRANSISTOR DUAL FET TRANSISTOR POSITIVE RESISTOR	M3
DAUGHTER UNIT (X89-2590-10)					
C221,222			C90-5574-05	ELECTRO 10UF 16WV	M
CN90 CN91 W101,102			E40-3238-05 E40-3249-05 E31-0001-00	PIN ASSY PIN ASSY JUMPER WIRE	M M M
R221,222 R225,226 R229,230			RK73GB2A271J RK73GB2A303J RD14BB2C101J	CHIP R 270 J 1/10W CHIP R 30K J 1/10W RD 100 J 1/6W	M M M
Q221,222 Q225			DTC143TUA DTA124EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M M
MECHANISM ASSY (X92-4840-00)					
2	1B		A10-4827-22	CHASSIS	
5	1B	*	D10-4576-63	ARM ASS'Y	

K2 : KDC-205
M1 : KDC-2026
K4 : KDC-205CR
M2 : KDC-226
M : KDC-3026
M3 : KDC-3026R

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

MECHANISM ASSY (X92-4840-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
8	2A		D10-4579-13	LEVER ASS'Y							
10	3A		D10-4581-13	ARM							
11	2A		D10-4582-13	ARM							
12	3A		D10-4583-03	ARM							
13	3A		D10-4584-03	ARM							
14	3B		D10-4585-03	ARM							
15	2A		D10-4586-13	SLIDER							
16	3B		D10-4587-32	SLIDER							
17	3B		D10-4588-13	SLIDER							
18	3B		D10-4595-04	ARM							
19	3B		D10-4596-14	ARM							
22	2A		D13-2151-04	GEAR							
23	2B		D13-2152-04	GEAR							
24	3B		D13-2153-04	GEAR							
25	3B		D13-2154-04	GEAR							
26	3B		D13-2155-04	WORM							
27	3B		D13-2156-14	GEAR							
28	3B		D13-2157-04	GEAR							
29	3B		D13-2158-04	GEAR							
30	3B		D13-2168-04	GEAR							
31	3B		D13-2171-04	GEAR							
32	2B		D13-2172-03	RACK (GEAR)							
33	2A		D14-0759-04	ROLLER							
35	2B		D21-2382-04	SHAFT							
36	1A		D23-0954-04	RETAINER							
37	1B		D39-0246-05	DAMPER							
38	2B		G01-3072-04	EXTENSION SPRING							
39	2A		G01-3073-04	TORSION COIL SPRING							
40	2A		G01-3074-04	EXTENSION SPRING							
41	1B		G01-3075-14	EXTENSION SPRING							
42	2A		G01-3076-04	EXTENSION SPRING							
43	1B		G01-3077-14	EXTENSION SPRING							
44	2B		G02-1399-04	FLAT SPRING							
45	2B		G02-1408-04	FLAT SPRING							
51	1A		J21-9676-22	MOUNTING HARDWARE							
52	3B		J21-9677-12	MOUNTING HARDWARE							
53	1B		J21-9678-13	MOUNTING HARDWARE							
55	1A		J90-1001-11	GUIDE							
56	1B		J90-1023-03	GUIDE							
DFPC1	3A		J84-0141-05	FLAT CABLE (16PIN)							
A	2B		N09-4460-05	TAPTITE SCREW							
B	1B		N09-4472-15	MACHINE SCREW							
C	2B		N09-6004-05	MACHINE SCREW							
E	2B		N09-6007-05	MACHINE SCREW							
F	1A		N09-6051-05	TAPTITE SCREW							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW							
J	1B		N09-6108-05	MACHINE SCREW							
DM1	3B		T42-1066-04	DC MOTOR ASSY (SPINDLE)							
DM2	3B		T42-1067-04	DC MOTOR ASSY (LOADING)							
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASS'Y							

K2 : KDC-205
M1 : KDC-2026K4 : KDC-205CR
M2 : KDC-226M : KDC-3026
M3 : KDC-3026R

△ Indicates safety critical components.