




Exploded View (Cabinet) (1/4)

NOTE : The place of the connection of (A) as shown in (),
is mentioned in the "Exploded View (Cabinet) (2/4)".

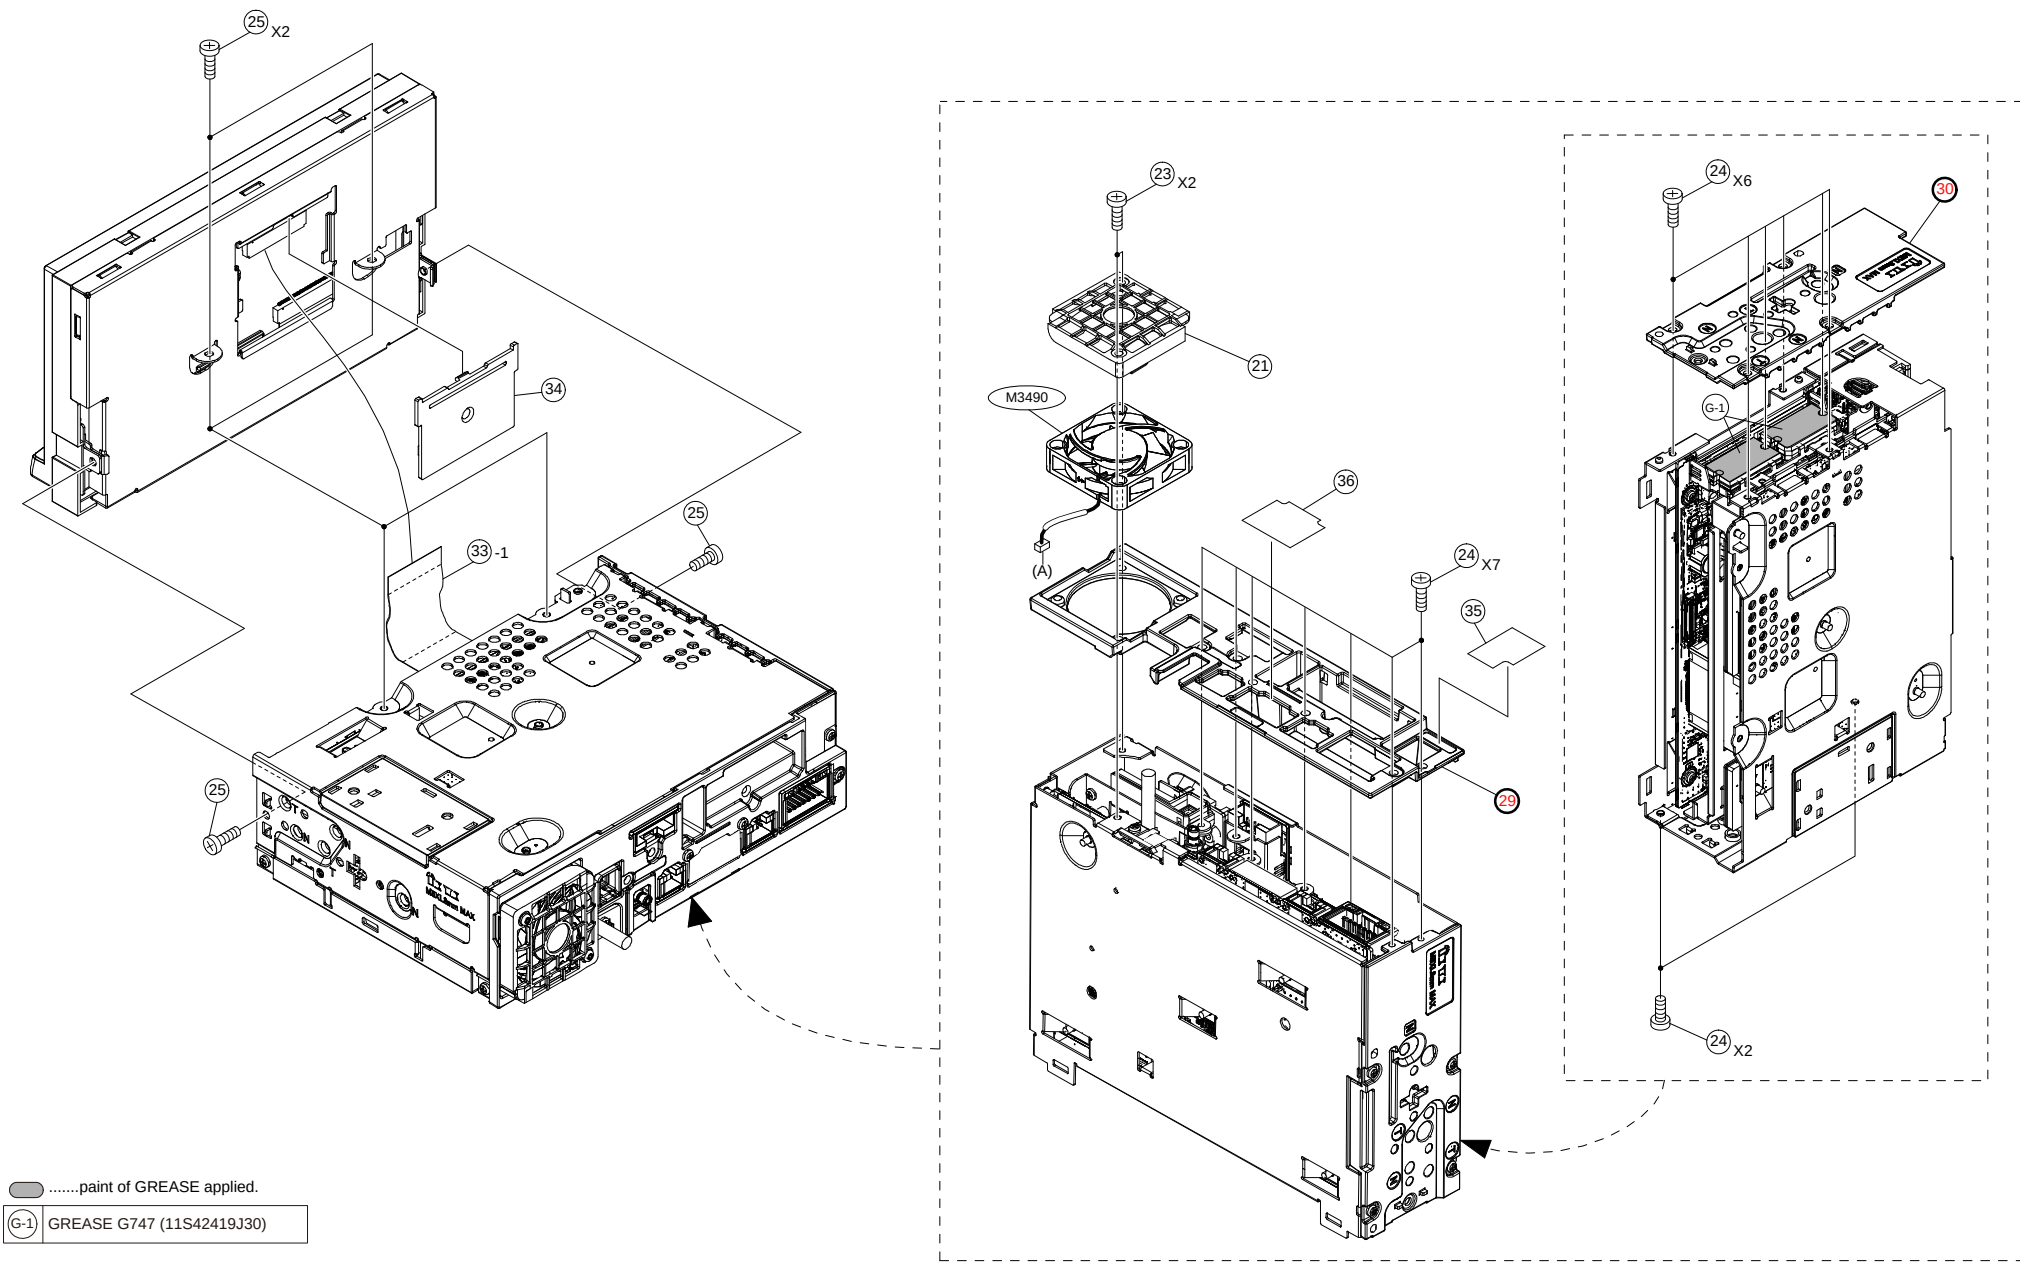


Exploded View (Cabinet) (2/4)





NOTE : The place of the connection of (A) as shown in (),
is mentioned in the "Exploded View (Cabinet) (1/4)".

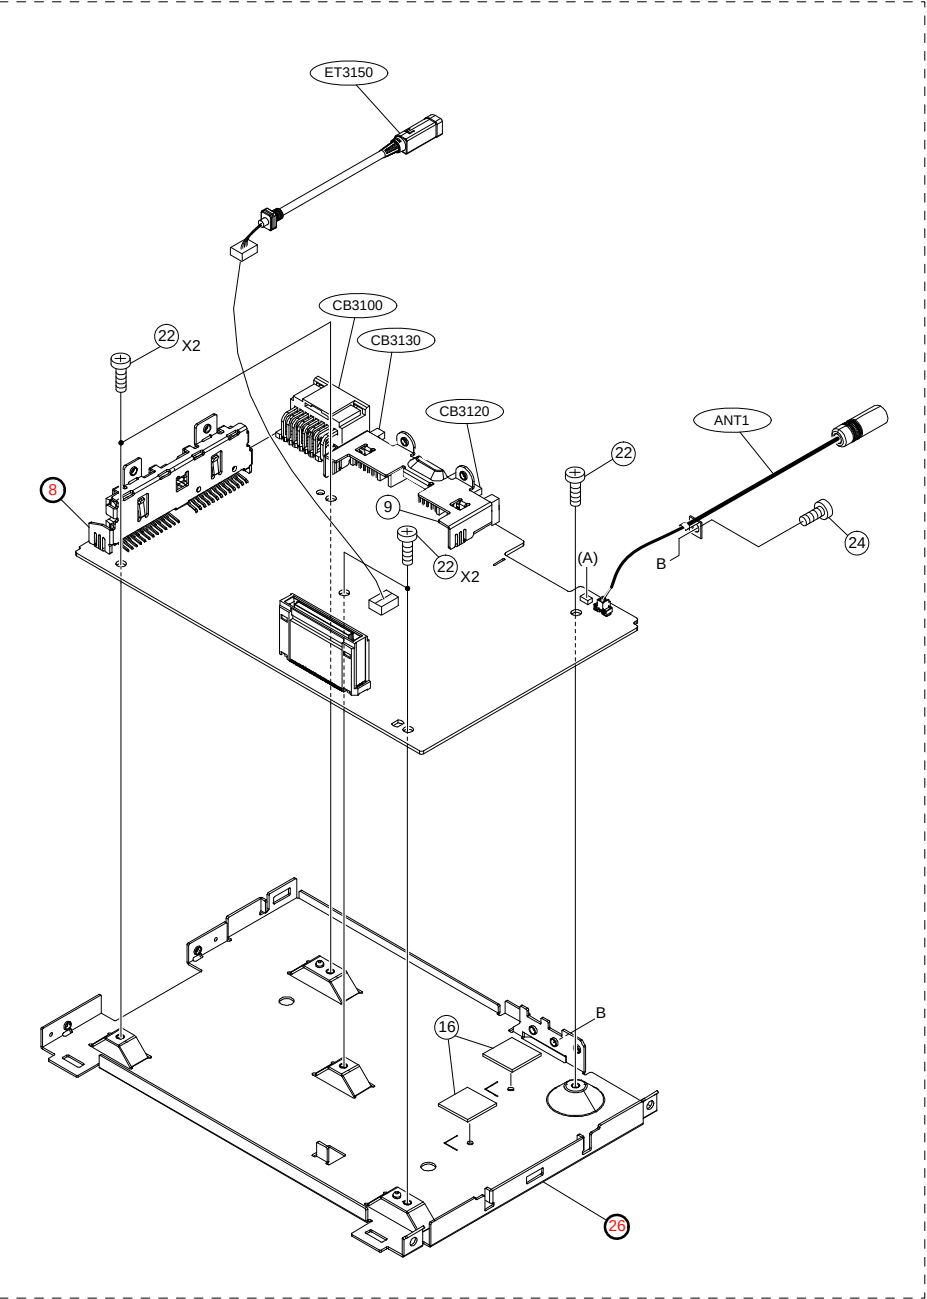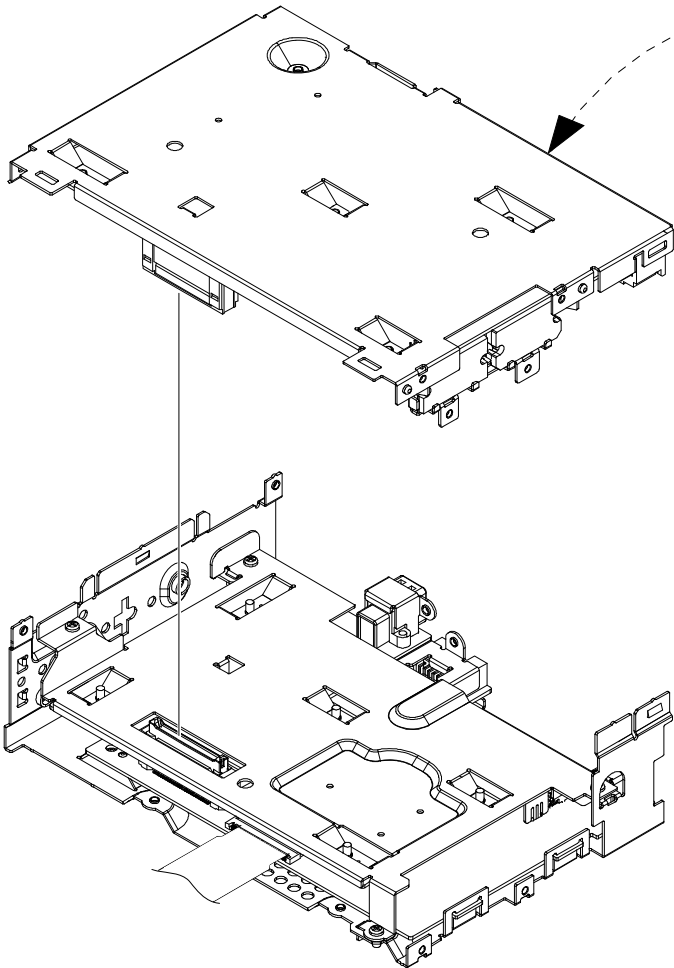

Exploded View (Cabinet) (3/4)

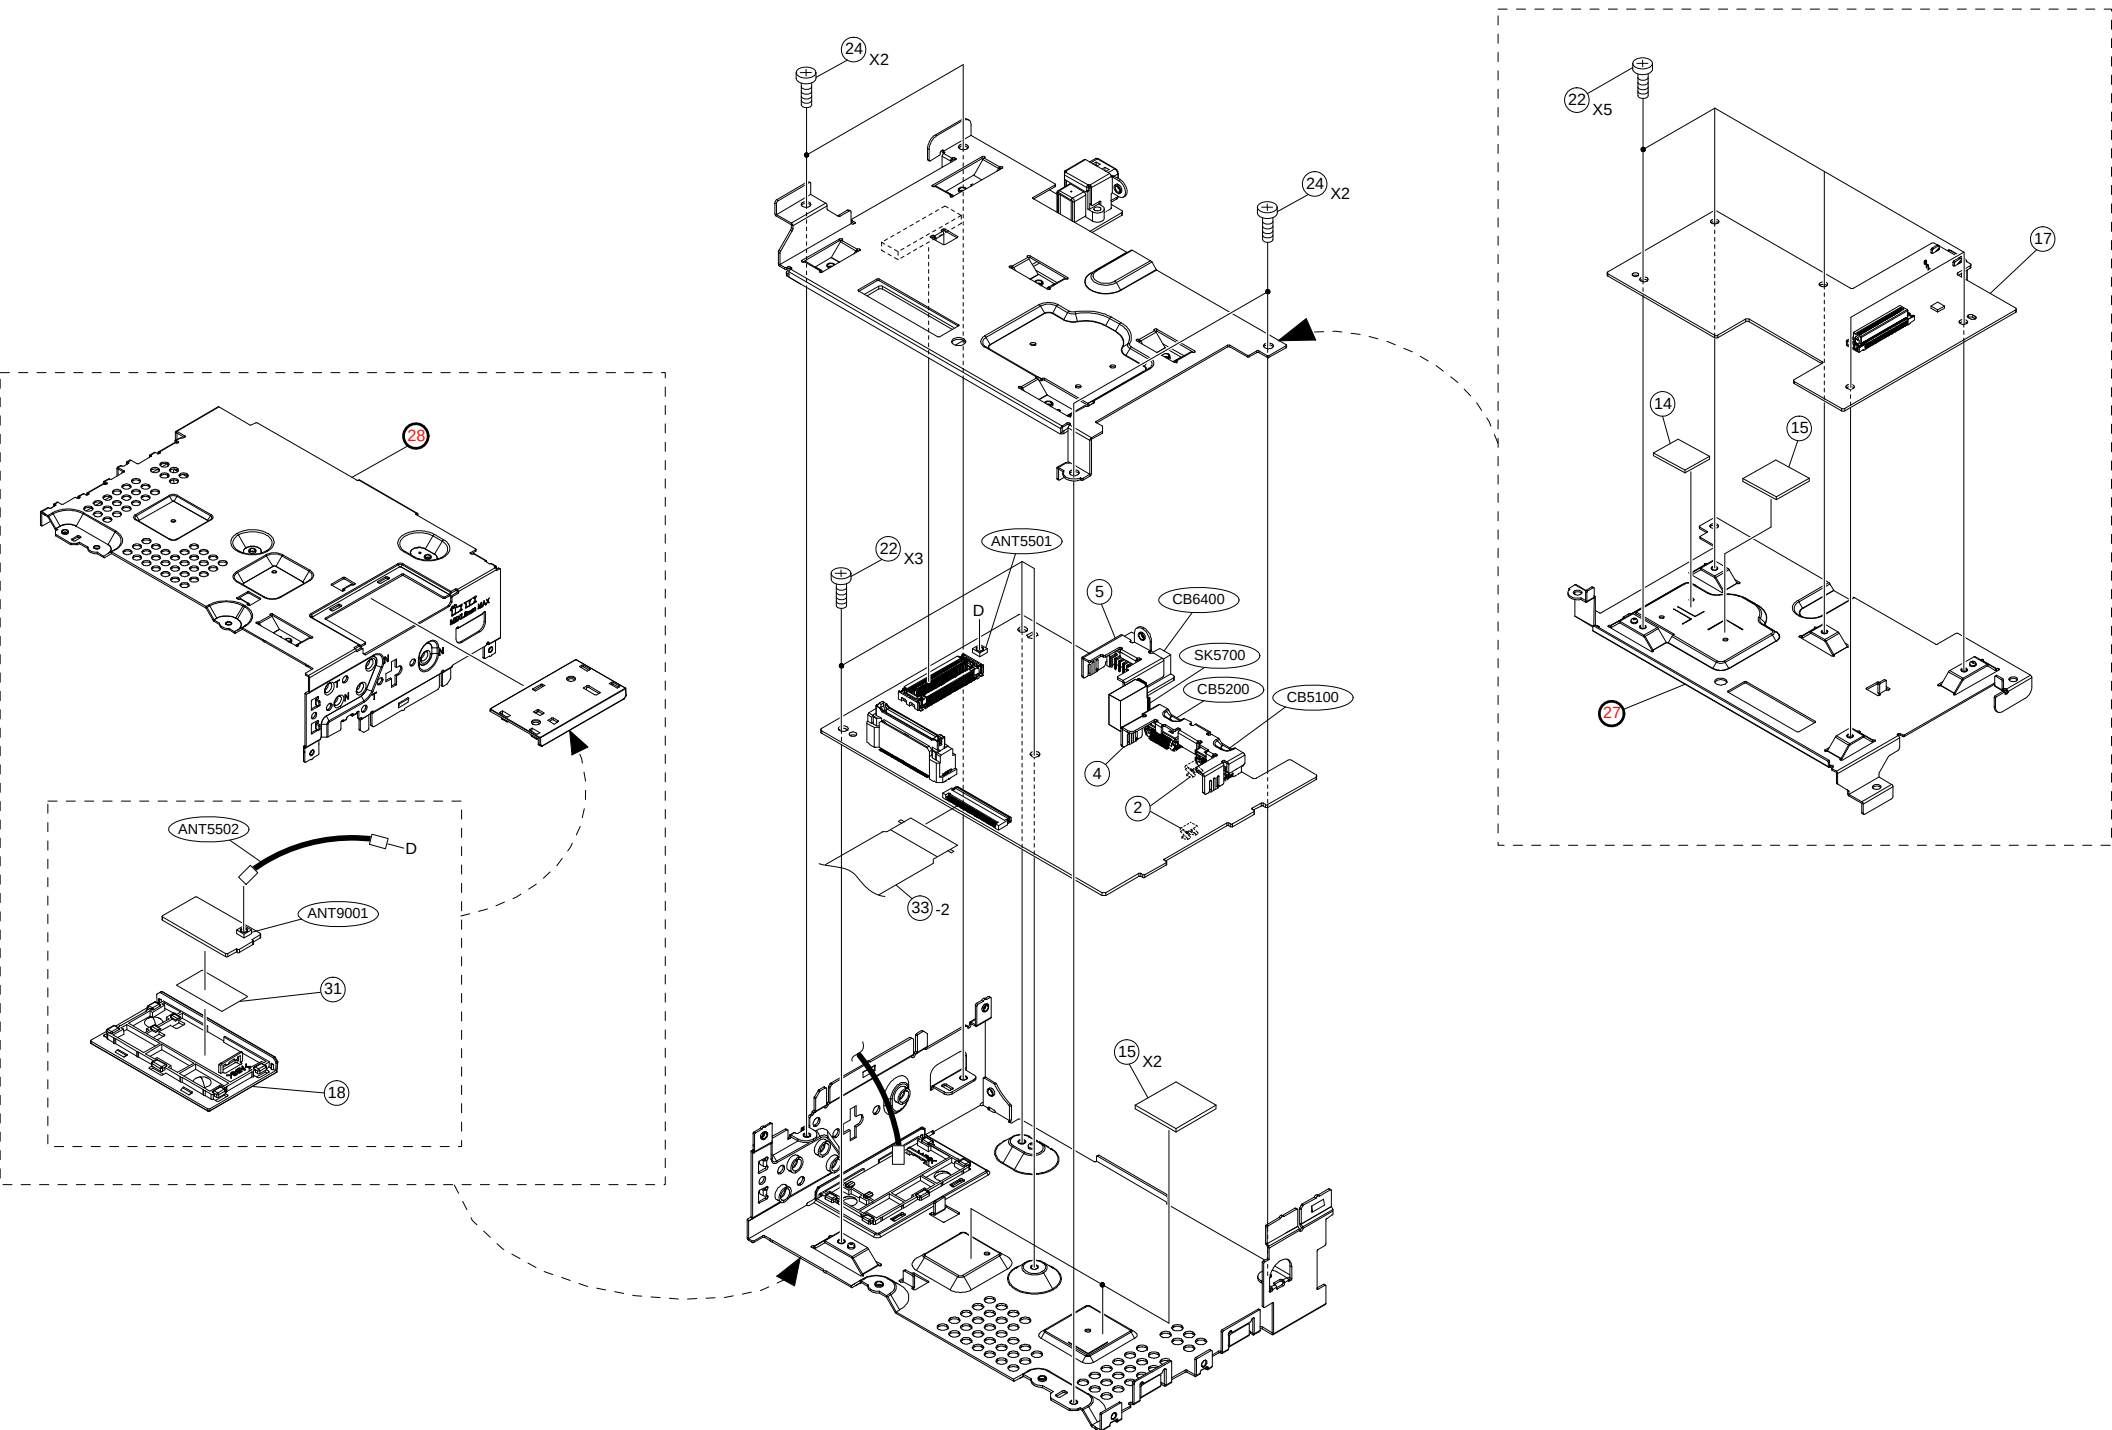

Exploded View (Cabinet) (4/4)

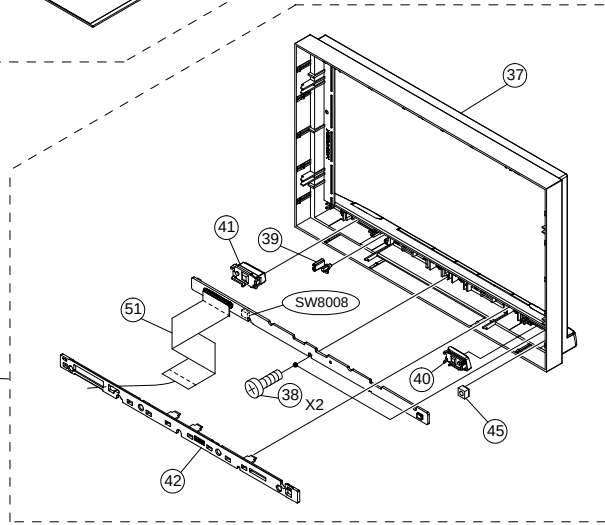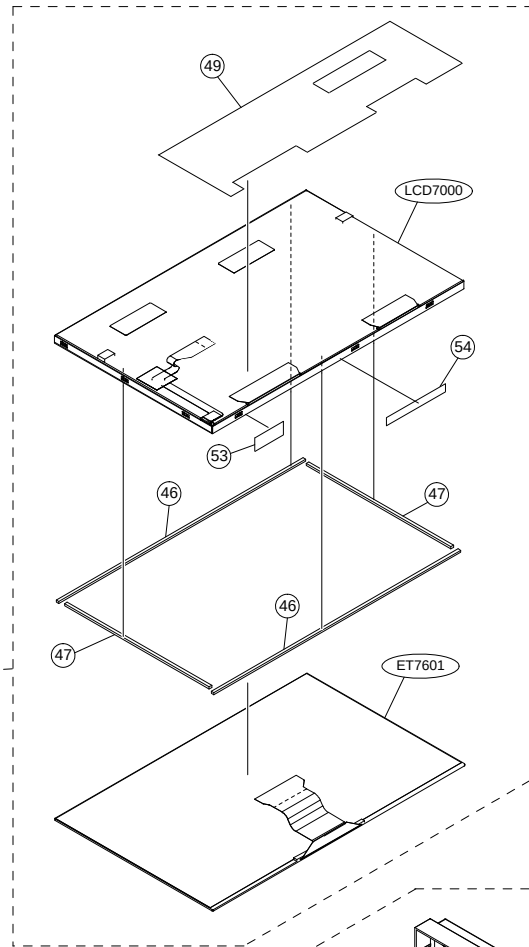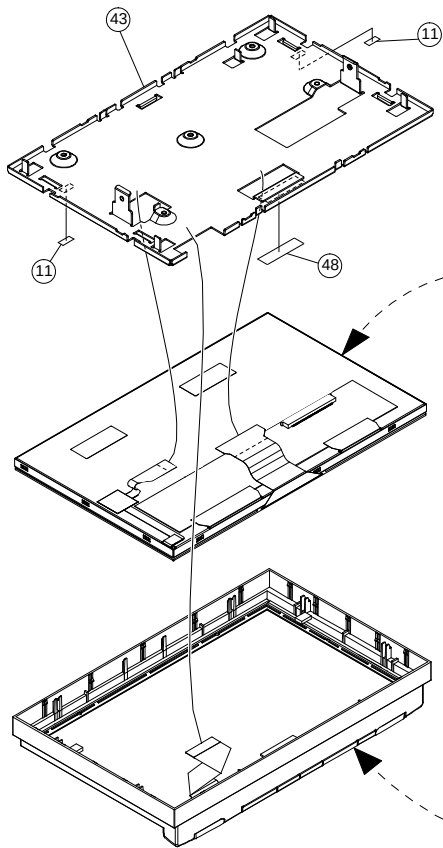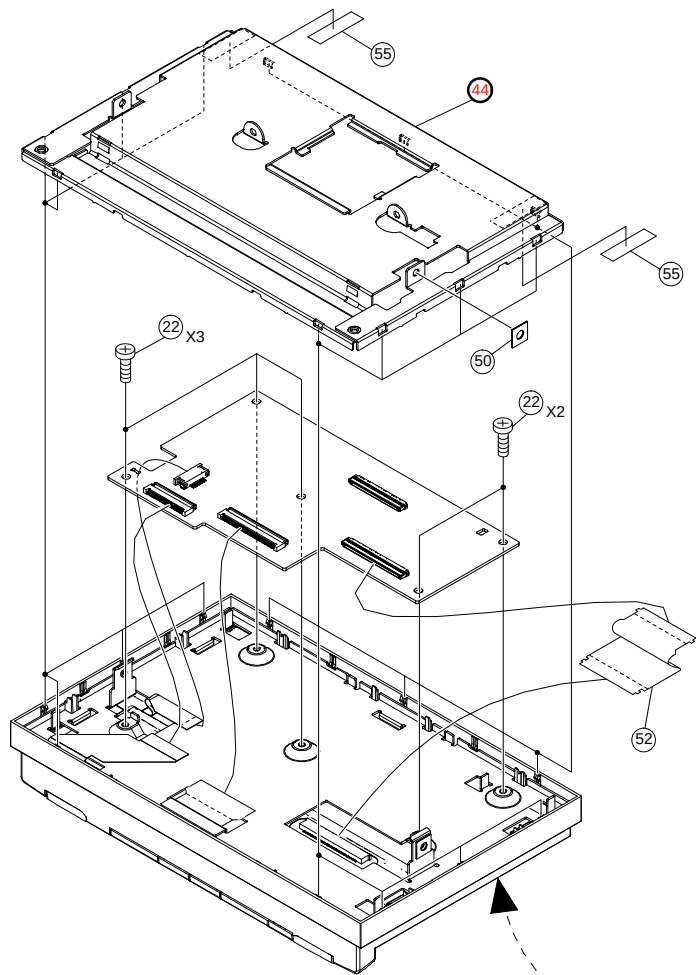



MODEL	Symbol No.	Parts No.	Description
2	29-22483Z02	OG-453065 -E5	
4		07-30182Z01	BKT,CONN HDMI
5		07-30183Z01	BKT,CONN CAN
8		-----	BKT,IC
9		07-30184Z01	BKT,CONN PREOUT
11		32-21958Z01	GASKET,65TSV5-2-7.5
14		75-31381Z01	5580H-1.5-19-15
15		75-31381Z02	5580H-1.5-20-20
16		75-31381Z03	5580H-5.5-12-12
17		84-30004Z01	ASSY,NAVI,LIMO_US
18		15-29982Z01	COVER,PLATE TOP
21		15-12877Z01	COVER,FAN
22		03-12686Z01	SCR,S-T 2.6X6 ZN ATP
23		03S60822Y31	SCR,S-T 2.6X18 ZN A
24		03S60822Y10	SCR,S-T 2.6X5 ZN A
25		03-00340Z01	SCR,S-T 2.6X6 ZB A
26		-----	CHAS,BASE
27		-----	SHIELD,MIDDLE
28		-----	COVER,TOP
29		-----	BKT,REAR
30		-----	HEAT,SINK
31		14-28478Z77	INS,CVR 24X14XT0.15
33		84-31247Z01	FPC,LIMO IMX-DISP
34		15-29983Z01	COVER,FPC
35		14-30499Z01	INS,REAR LVDS

MODEL	Symbol No.	Parts No.	Description
	36	14-30500Z01	INS,REAR KEY
	37	EN-30009Z01	NOSE,MONITOR ASSY
	38	03S60823Y01	SCR,P-T 1.7X6 ZN A
	39	36-29976Z01	KNOB,RESET
	40	36-31161Z01	KNOB,AUDIO ASSY
	41	36-31161Z02	KNOB,NAVI ASSY
	42	15-29996Z01	COVER,PWB KEY
	43	07-29960Z01	BKT,LCD
	44	-----	BKT,MONITOR
	45	75-26016Z01	CUS,RUB MIC
	46	14-28478Z75	INS,CVR 182X2XT1
	47	14-28478Z76	INS,CVR 105X2XT1
	48	75-26715Z45	CUS,RUB 25X4XT2
	49	14-30508Z01	INS,LCD
	50	14-30498Z01	INS,NOSE SIDE
	51	30-15488Z24	SML2CD-40X70.5-BDX6
	52	30-31216Z01	SML2CD-60X32.0-BDX6
	53	14-31264Z01	INS,FFC
	54	75-26715Z47	CUS,RUB 45X5.2XT0.5
	55	14-31238Z23	INS,CVR 20X7XT0.5
	ANT1	09-17241Z06	ASSY,ANID-0116-06A
	ANT5501	09-07494Z01	U.FL-R-SMT-1(80)-E2
	ANT5502	09-24492Z04	ASSY,U.FL-2LP-066N1
	ANT9001	09-07494Z01	U.FL-R-SMT-1(80)-E2
	CB3100	09T35473Y16	WTB,F169B001-16 -DB

MODEL	Symbol No.	Parts No.	Description
-------	------------	-----------	-------------

	CB3120	09-25106Z01	WTB,S10B-PUDSS-1 -DB
	CB3130	09-25106Z02	WTB,S12B-PUDSS-1 -DB
	CB5100	09-25213Z01	WTB,TCX3400-011187-T
	CB5200	09-25213Z01	WTB,TCX3400-011187-T
	CB6400	09-25106Z05	WTB,S18B-PUDSS-1 -DB
	ET3150	09-19615Z02	ASSY,ANID-0139-02A
	ET7601	40-29928Z01	ASSY,HCDSS0A003A
	LCD7000	65-30873Z01	ASSY,C080VTN03.1
	M3490	59-14185Z03	MOTOR,ASB0412MA-9D11
	SK5700	09-31283Z01	SKT,UBAL-4R-D14-4SDB
	SW8008	40T65353Y01	SW,TACT SKRSPACE010E2


Packing Method View

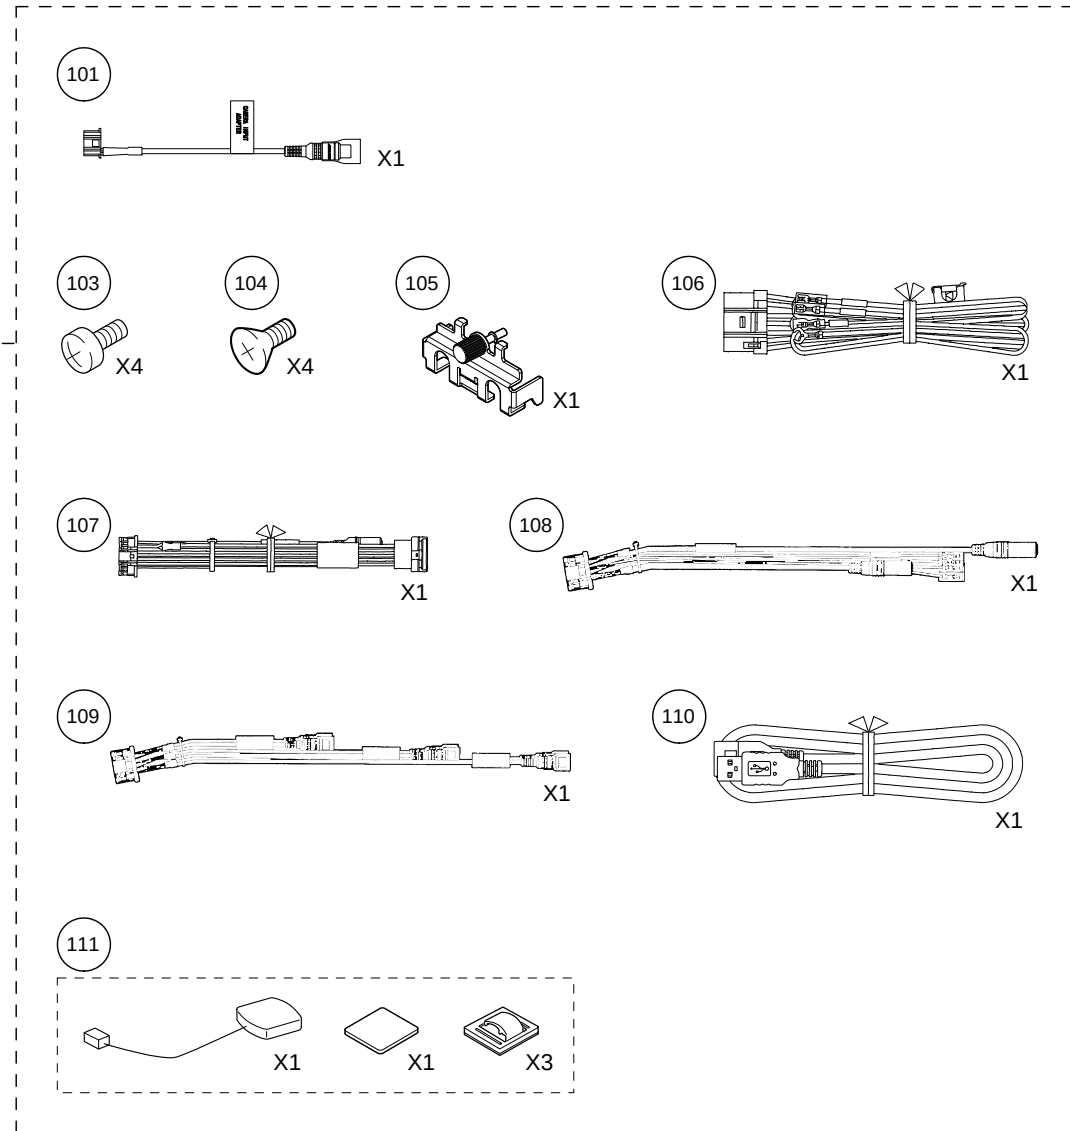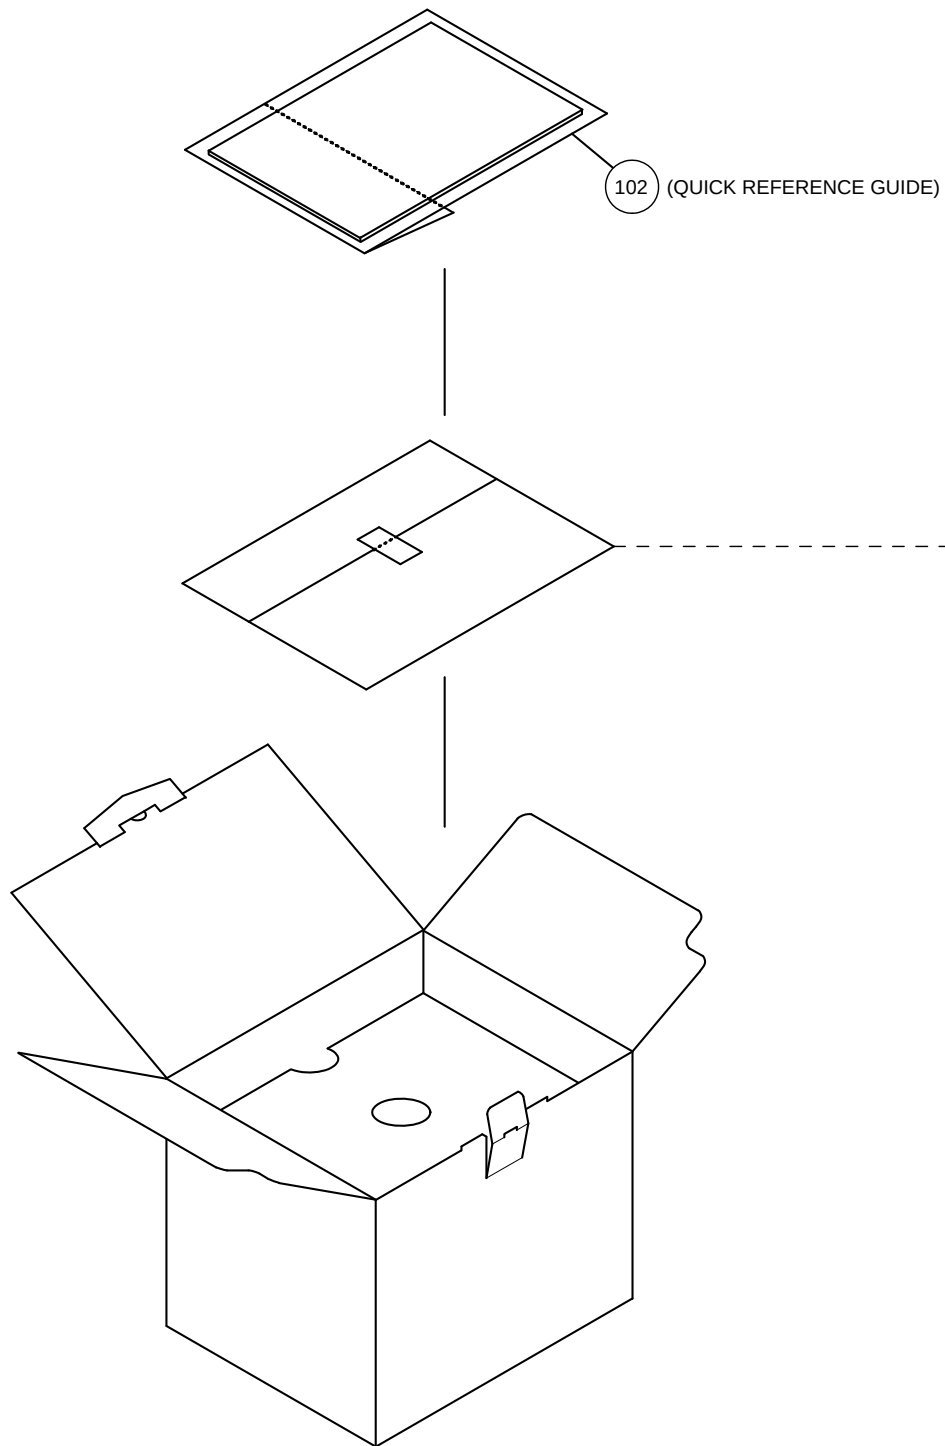


MODEL	Symbol No.	Parts No.	Description
-------	------------	-----------	-------------

<u>101</u>	09-18014Z01	ASSY,ANID-0125-01A	
<u>102</u>	68-29530Z13		QRG,X110_LIMO-10 US
<u>103</u>	03S60820Y17		SCR,MCH 5X8 ZN A
<u>104</u>	03S60820Y16		SCR,MCH 5X8 ZN A
<u>105</u>	07-30181Z01		BKT,HDMI ASSY
<u>106</u>	09-17244Z09		ASSY,ANIC-0050-09A
<u>107</u>	09-31132Z01		ASSY,ANID-0204-01A
<u>108</u>	09-31131Z01		ASSY,ANID-0203-01A
<u>109</u>	09-31130Z01		ASSY,ANID-0202-01A
<u>110</u>	09-22649Z02		ASSY,ANID-0179-02A
<u>111</u>	85-11368Z04		ASSY,YOP-5245AL06

Parts Identification

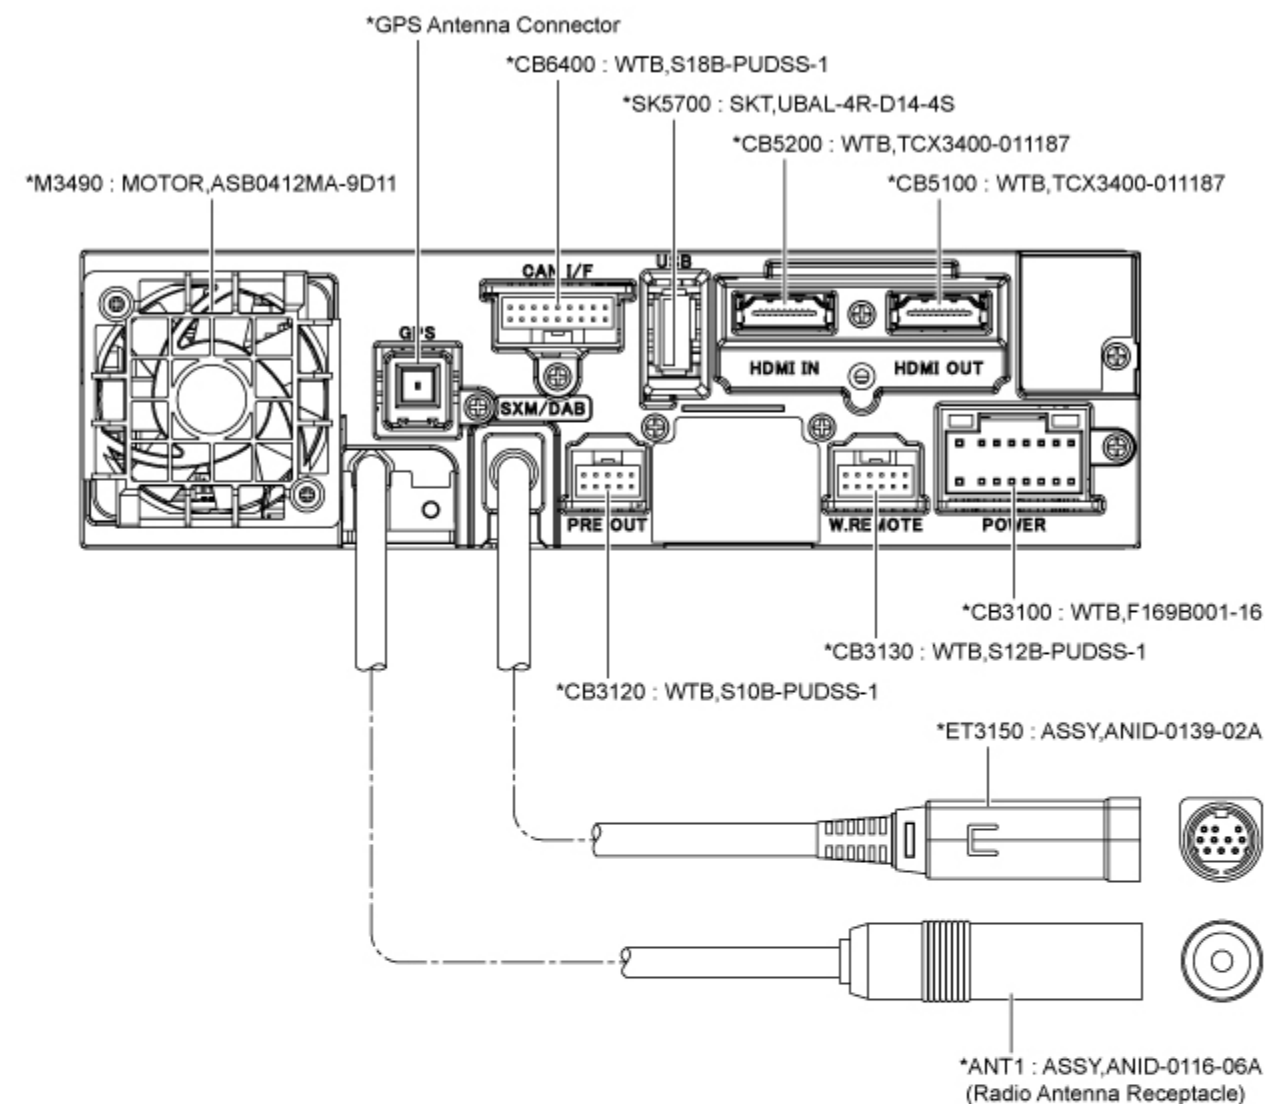


*ET3150 : ASSY,ANID-0139-02A

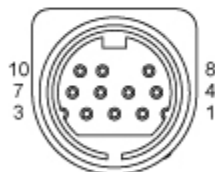

① AUDIO_L	⑥ SXM_RX
② SXM_TX	⑦ NC
③ NC	⑧ GND_D
④ AUDIO_R	⑨ POWER
⑤ GND_A	⑩ PWR_EN

*CB3100 : WTB,F169B001-16

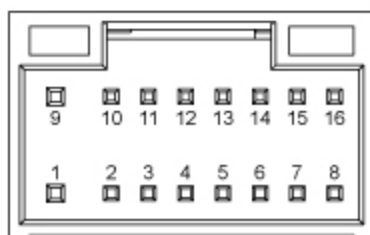

① GND	⑨ BATT
② FL-	⑩ RL-
③ FL+	⑪ RL+
④ FR-	⑫ RR-
⑤ FR+	⑬ RR+
⑥ NC (F_PARKING)	⑭ PARKING
⑦ REVERSE	⑮ O-REM
⑧ ACC	⑯ P-ANT


*CB6400 : WTB,S18B-PUDSS-1



①	NC	⑩	CAMERA_GND
②	NC	⑪	CAMERA_VGND
③	DBG_RX	⑫	CAMERA_6V
④	DBG_TX	⑬	CAMERA-V
⑤	Speed Pulse	⑭	CAMERA_UART
⑥	AUX_R	⑮	CAN_GND
⑦	AUX_GND	⑯	CAN_RX_IN

System Connection

Connections

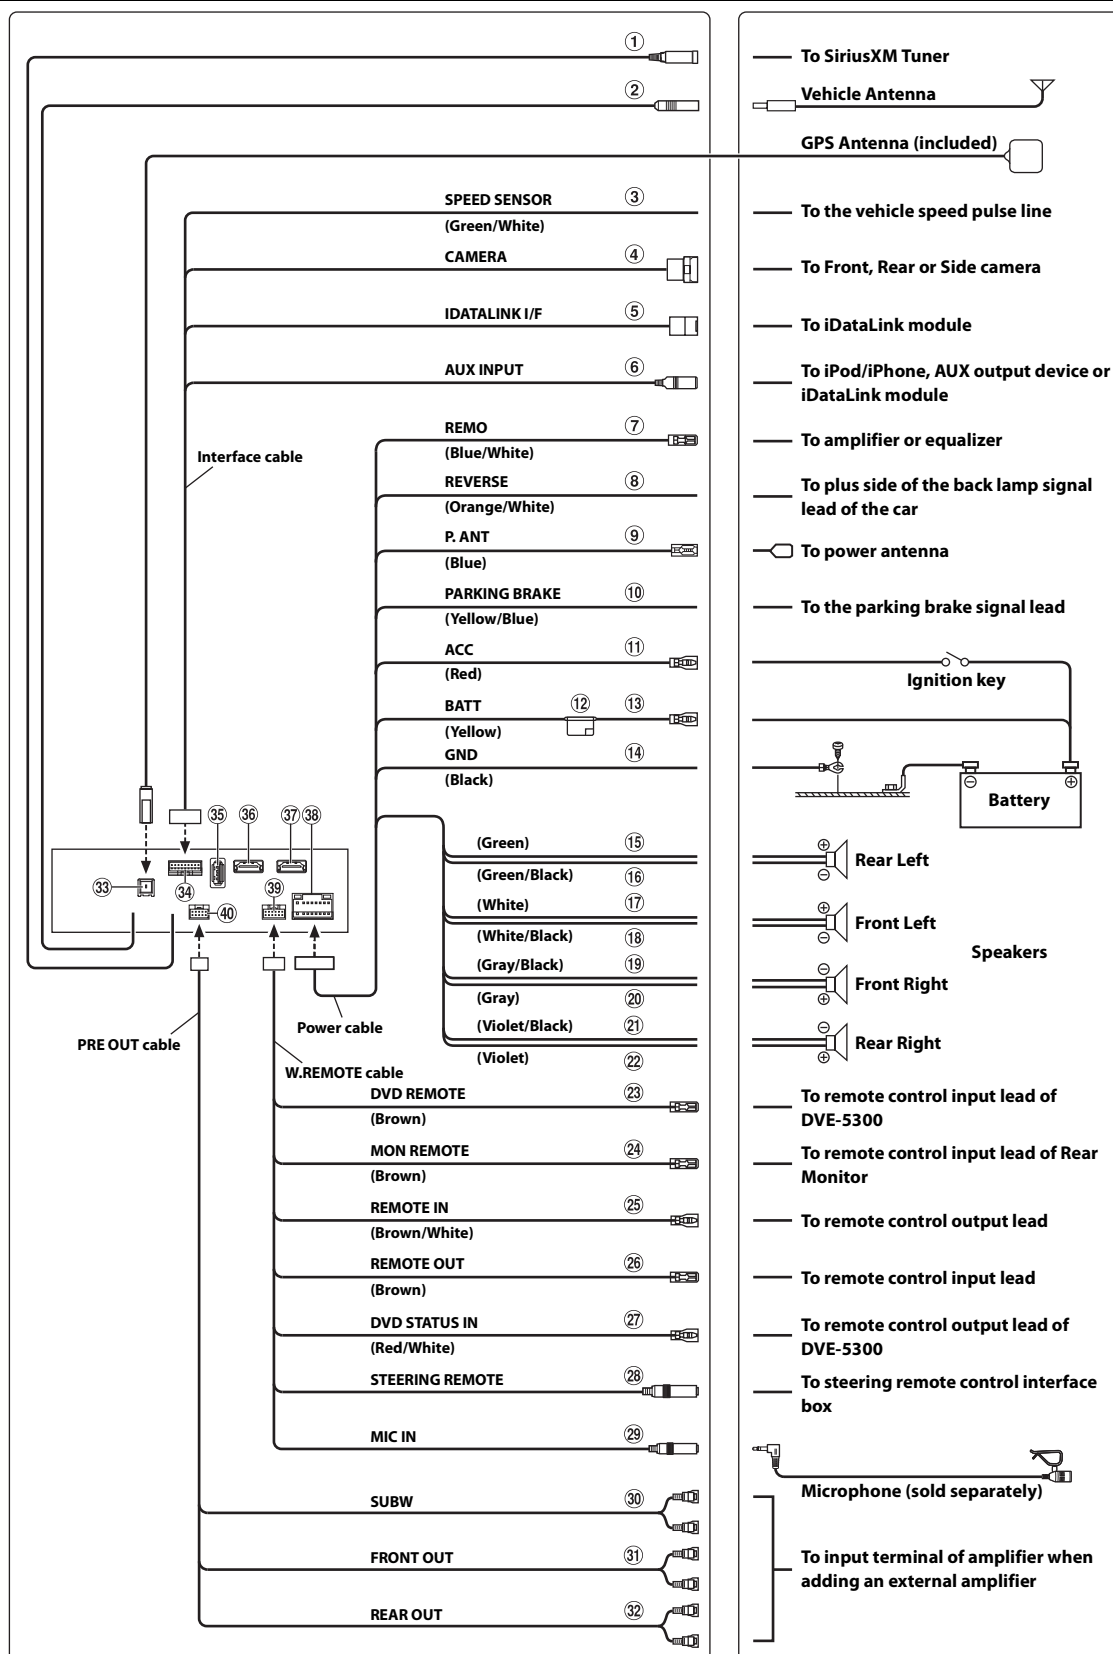

① SiriusXM Tuner Input Connector

To SiriusXM Tuner.

② Radio Antenna Receptacle

③ Speed Sensor Lead (Green/White)

Improper connection of the speed pulse line may cause important safety features of the vehicle to fail (such as the brakes or air bags). Such failures may result in an accident and loss of life. We strongly recommend that the installation be performed by a trained, authorized Alpine dealer.

④ Direct CAMERA Input Connector

Use when the optional direct camera is connected.

- *When using the optional Multi Camera Interface module, you can connect up to 3 cameras: Front camera, Rear camera, and Side camera.*

⑤ iDataLink Interface Connector

To iDataLink module.

⑥ AUX Input Connector

Input lead for an iPod/iPhone video signal, AUX video/audio signal or iDataLink audio signal.

- *Either a separately sold AV/RCA interface cable (4-pole mini AV plug to 3-RCA) or the iPod VIDEO AV extension cable supplied with connection kit KCU-461iV is required. For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)" (page 7).*

⑦ Remote Turn-On Lead (Blue/White)

Connect this lead to the remote turn-on lead of your amplifier or signal processor.

⑧ Reverse Lead (Orange/White)

Connect to the plus side of the car's reverse lights. These lights illuminate when the transmission is shifted into reverse (R). With this lead properly wired, the video picture automatically switches to the rear camera whenever the car is put into reverse (R).

⑨ Power Antenna Lead (Blue)

Connect this lead to the +B terminal of your power antenna, if applicable.

- *This lead should be used only for controlling the vehicle's power antenna. Do not use this lead to turn on an amplifier or a signal processor, etc.*

⑩ Parking Brake Lead (Yellow/Blue)

Connect this lead to the power supply side of parking brake switch to transmit the parking brake status signals to the unit.

⑪ Switched Power Lead (Ignition) (Red)

Connect this lead to an open terminal on the vehicle's fuse box or another unused power source that provides (+) 12V only when the ignition is turned on or in the accessory position.

⑫ Fuse Holder (15A)

⑬ Battery Lead (Yellow)

Connect this lead to the positive (+) post of the vehicle's battery.

⑭ Ground Lead (Black)

Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.

⑮ Left Rear (+) Speaker Output Lead (Green)

⑯ Left Rear (-) Speaker Output Lead (Green/Black)

⑰ Left Front (+) Speaker Output Lead (White)

⑱ Left Front (-) Speaker Output Lead (White/Black)

⑲ Right Front (-) Speaker Output Lead (Gray/Black)

⑳ Right Front (+) Speaker Output Lead (Gray)

㉑ Right Rear (-) Speaker Output Lead (Violet/Black)

㉒ Right Rear (+) Speaker Output Lead (Violet)

㉓ Remote Control Output Lead (Brown) (For DVD Player DVE-5300)

Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.

㉔ Remote Control Output Lead (Brown) (For Rear Monitor)

Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.

㉕ Remote Control Input Lead (Brown/White)

Connect the external Alpine product to the remote control output lead.

②⑥ **Remote Control Output Lead (Brown)**

Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.

②⑦ **DVD Control Input Lead (Red/White) (For DVD Player DVE-5300)**

Connect the DVD Player DVE-5300 to the remote control output lead.

②⑧ **Steering Remote Control Interface Connector**

To steering remote control interface box.

For details about connections, consult your nearest Alpine dealer.

②⑨ **MIC Input Connector**

To microphone (sold separately)

- When using an optional microphone, set *Microphone Select* to "External." For details, refer to "Setting the Microphone Select" in the OWNER'S MANUAL.

③⑩ **Subwoofer RCA Connectors**

RED is right and WHITE is left.

③① **Front Output RCA Connectors**

Can be used as Front Output RCA Connectors. RED is right and WHITE is left.

③② **Rear Output RCA Connectors**

Can be used as Rear Output RCA Connectors. RED is right and WHITE is left.

③③ **GPS Antenna Receptacle**

Connect to GPS antenna (included).

③④ **CAN I/F Connector**

③⑤ **USB Connector**

To USB flash drive or iPod/iPhone.

③⑥ **HDMI Input Connector**

③⑦ **HDMI Output Connector**


③⑧ **Power Supply Connector**

③⑨ **W.REMOTE Connector**

④① **PRE OUT Connector**

Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)


Wiring convention of this system is as follows;

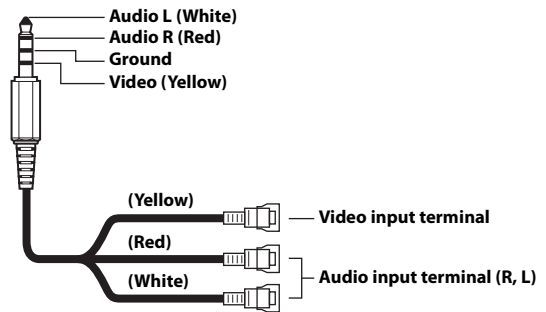

- Configuration commercially available 4-pole mini AV plugs is not standardized.

If an ACC power supply is not available

Connection Diagram of SPST Switch (sold separately)

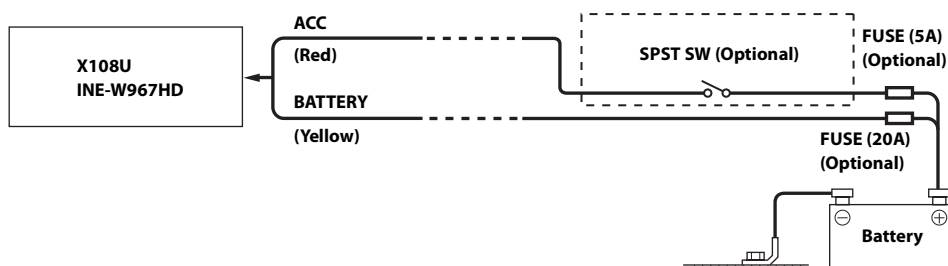

- If your vehicle has no ACC power supply, add an SPST (single-pole, single-throw) switch (sold separately) and fuse (sold separately).
- The diagram and the fuse amperage shown above are in the case when the unit is used individually.
- If the switched power (ignition) lead of the unit is connected directly to the positive (+) post of the vehicle's battery, the unit draws some current (several hundred milliamperes) even when its switch is placed in the OFF position, and the battery may be discharged.


To prevent external noise from entering the audio system.

- Locate the unit and route the leads at least 10 cm away from the car harness.
- Keep the battery power leads as far away from other leads as possible.
- Connect the ground lead securely to a bare metal spot (remove any paint, dirt or grease if necessary) of the car chassis.
- If you add an optional noise suppressor, connect it as far away from the unit as possible. Your Alpine dealer carries various noise suppressors, contact them for further information.
- Your Alpine dealer knows best about noise prevention measures so consult your dealer for further information.


System Example

Connection of an iPod/iPhone

■ When connecting to an iPod/iPhone with a Lightning connector

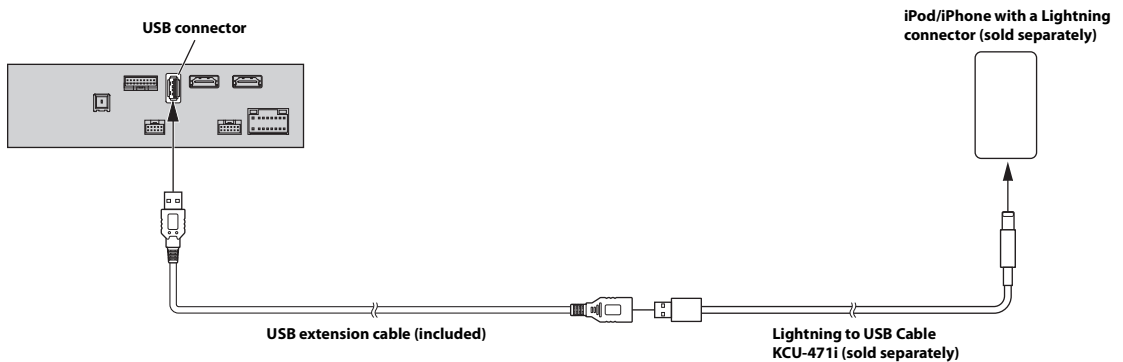

■ When connecting to an iPod/iPhone with a 30-pin connector

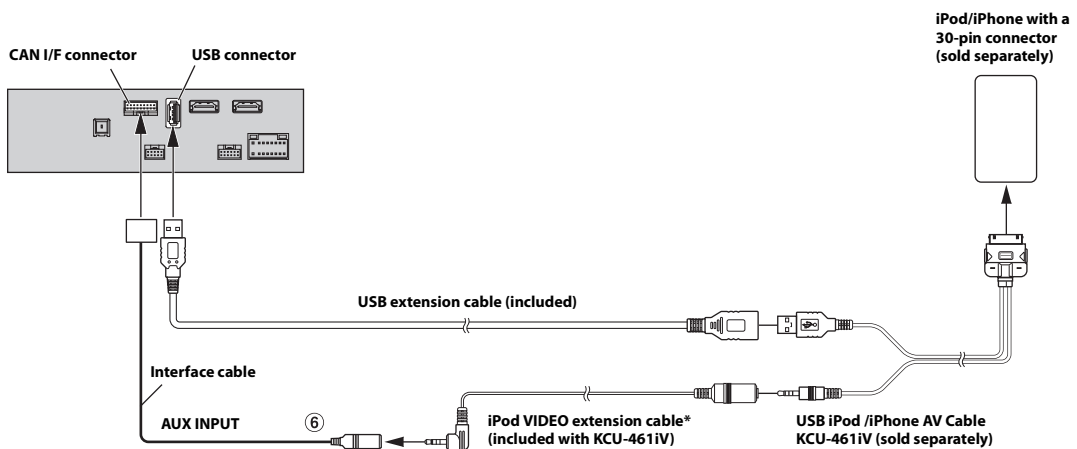


* If iPod VIDEO is supported, use the iPod VIDEO extension cable. When using the iPod VIDEO, set AUX Source Select to "iPod Video." For details, refer to "Setting the AUX Mode" in the OWNER'S MANUAL.

⑥ AUX Input Connector


- To connect an iPod/iPhone, a separately sold Lightning to USB cable (KCU-471i) or USB iPod/iPhone AV Cable (KCU-461iV) is required.
- Connect by HDMI to see videos and pictures from an iPhone with a Lightning connector (page 10).
- Do not leave an iPod/iPhone in a vehicle for a long time. Heat and humidity may damage the iPod/iPhone, and you may not be able to play it again.

Connection of a Flash Drive

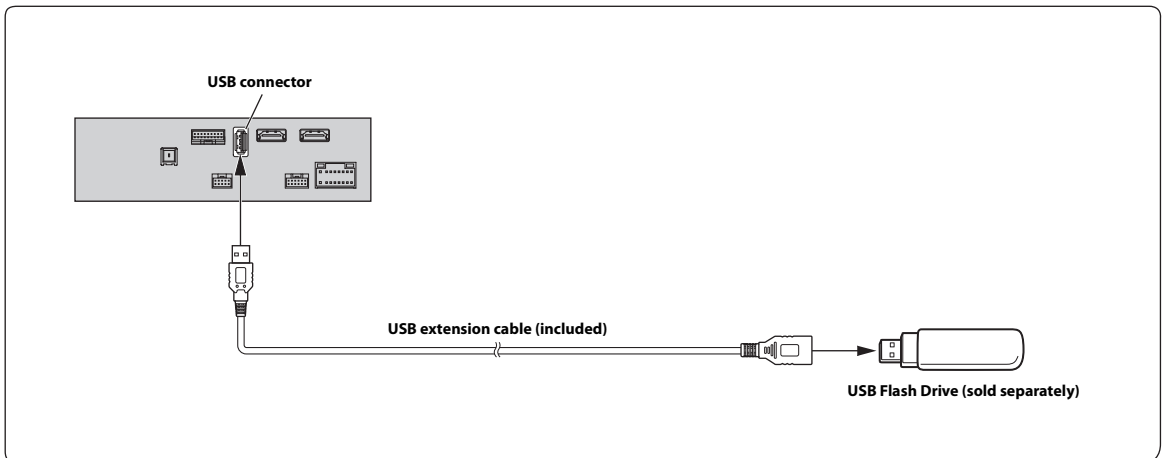

- Do not leave a flash drive in a vehicle for a long time. Heat and humidity may damage the flash drive.


Connection of an HDMI Device (iPhone with a Lightning connector)

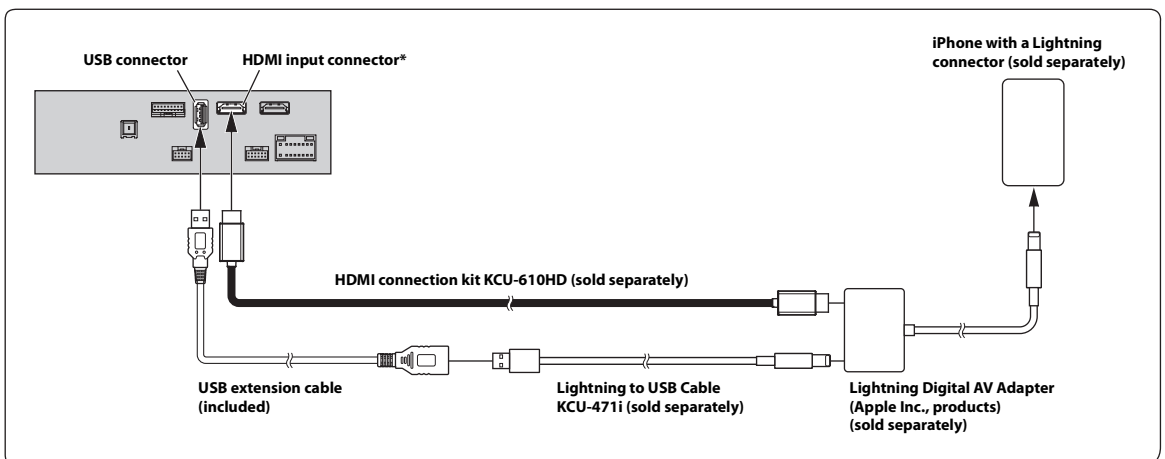

* When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Fixation Bracket. For details on how to secure it, see "Note on using HDMI Connection Cables" (page 4).

- Set the HDMI Setup to "HDMI." For details, refer to "HDMI Setup" in the OWNER'S MANUAL.


Connection of an HDMI Device (Android device)

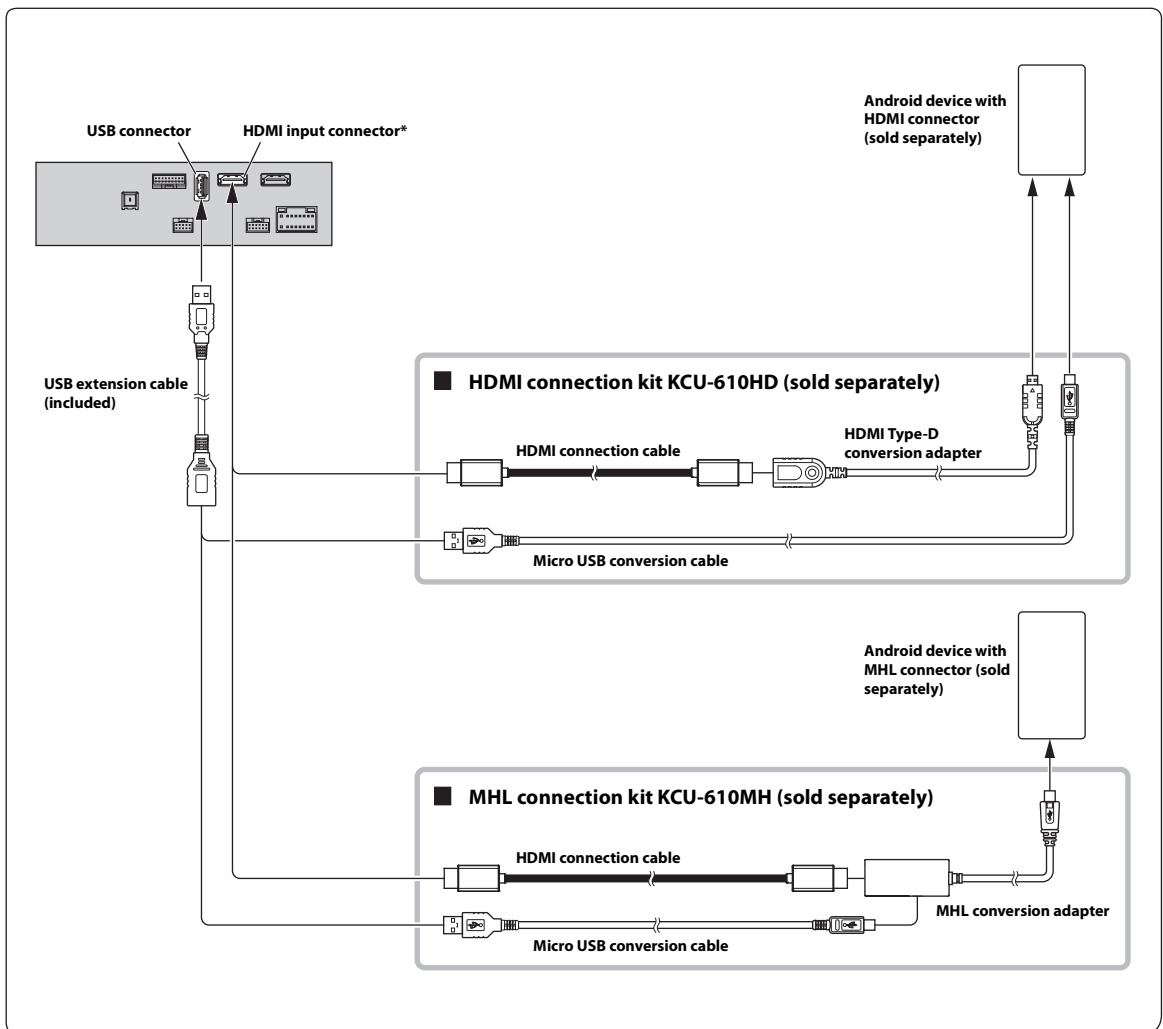

- A connection kit or adapter kit suitable for the type of terminal on the connecting device is required.
- Set the HDMI Setup to "HDMI." For details, refer to "HDMI Setup" in the OWNER'S MANUAL.
- If you connect an optional HDMI selector module, you can connect two HDMI devices. When you use the HDMI selector module, set the HDMI Selector to "On." For details, refer to "Setting the HDMI Selector On/Off" in the OWNER'S MANUAL. For details on how to connect, also refer to the OWNER'S MANUAL of the HDMI selector module.

* When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Fixation Bracket. For details on how to secure it, see "Note on using HDMI Connection Cables" (page 4).

Connection of a DVE-5300 and a Rear Monitor with HDMI support

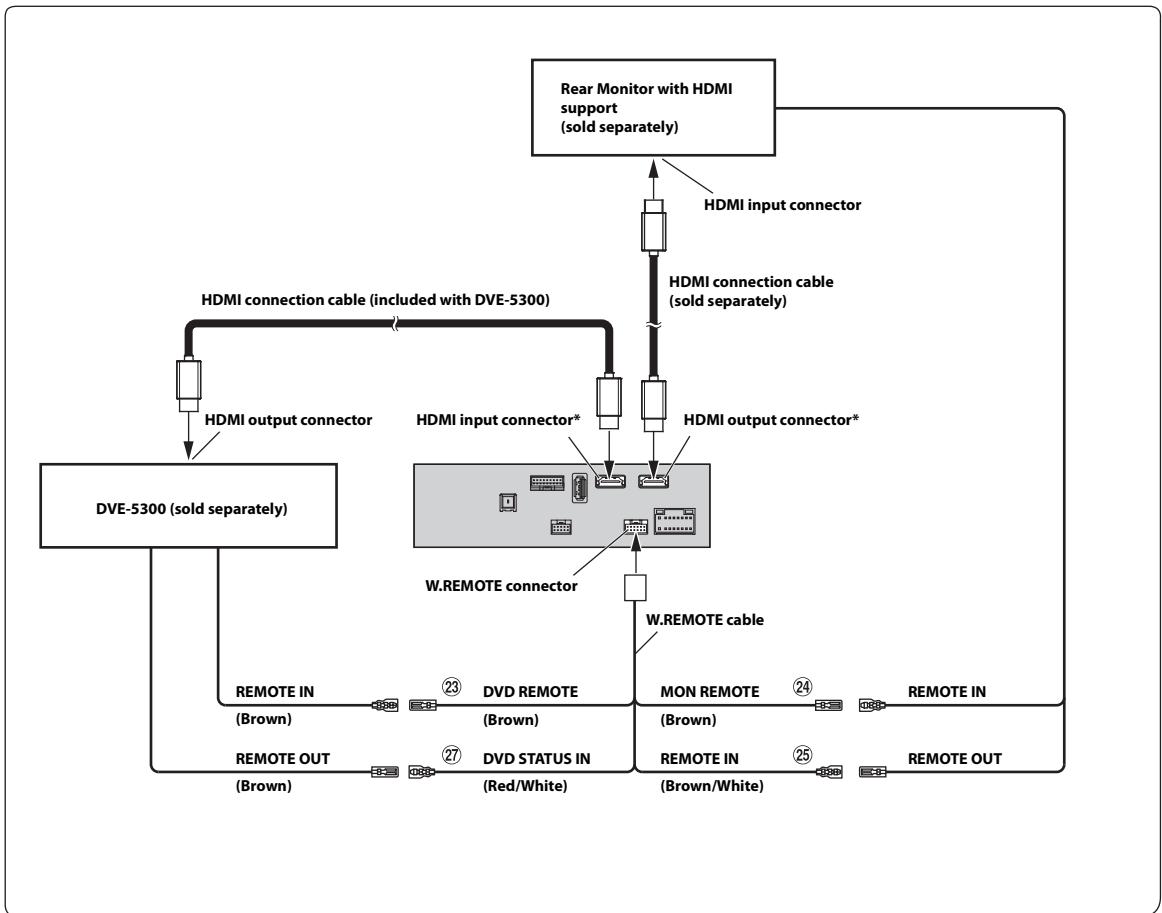

②③ Remote Control Output Lead (Brown) (For DVD Player DVE-5300)

②⑤ Remote Control Input Lead (Brown/White) (For Rear Monitor)


②④ Remote Control Output Lead (Brown) (For Rear Monitor)

②⑦ DVD Control Input Lead (Red/White) (For DVD Player DVE-5300)

- Set the HDMI Setup to "DVD." For details, refer to "HDMI Setup" in the OWNER'S MANUAL.
- If you connect an optional HDMI selector module, you can connect two HDMI devices. When you use the HDMI selector module, set the HDMI Selector to "On." For details, refer to "Setting the HDMI Selector On/Off" in the OWNER'S MANUAL. For details on how to connect, also refer to the OWNER'S MANUAL of the HDMI selector module.

* When connecting an HDMI connection cable, be sure to secure it using the supplied HDMI Fixation Bracket. For details on how to secure it, see "Note on using HDMI Connection Cables" (page 4).

Connection of a Mobile Digital TV Receiver or USB Player

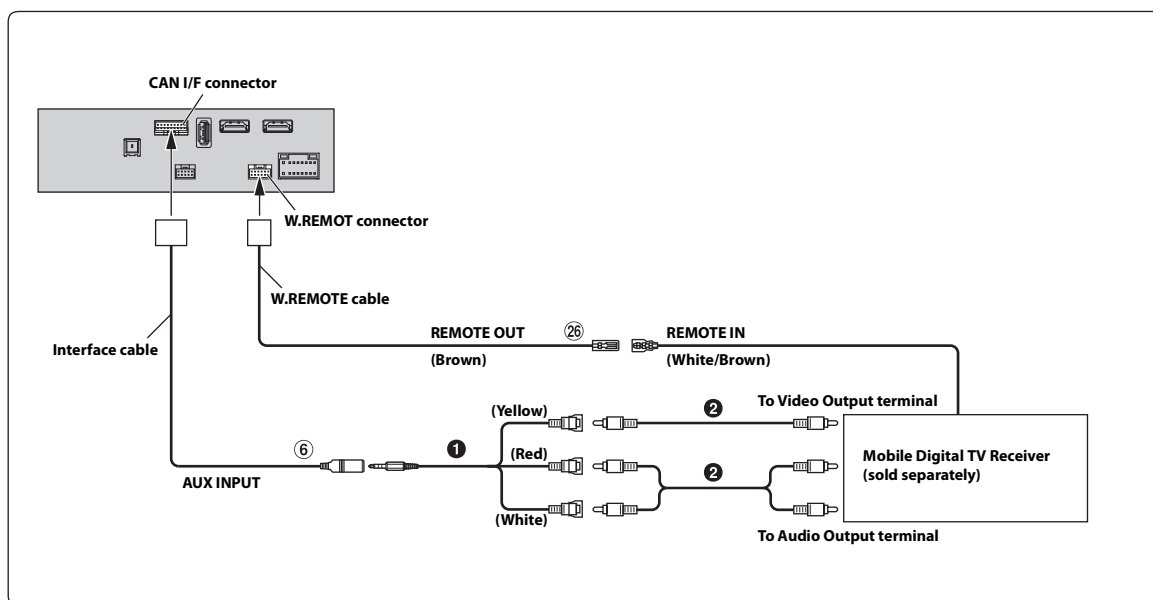

⑥ AUX Input Connector


②⑥ Remote Control Output Lead (Brown)

① AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)
(sold separately)

② RCA Extension Cable (sold separately)

- For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)" (page 7).
- Set the AUX Name to "DVB-T" or "USB Player." For details, refer to "Setting the Auxiliary (AUX) Name" in the OWNER'S MANUAL.

Connection of an External Device

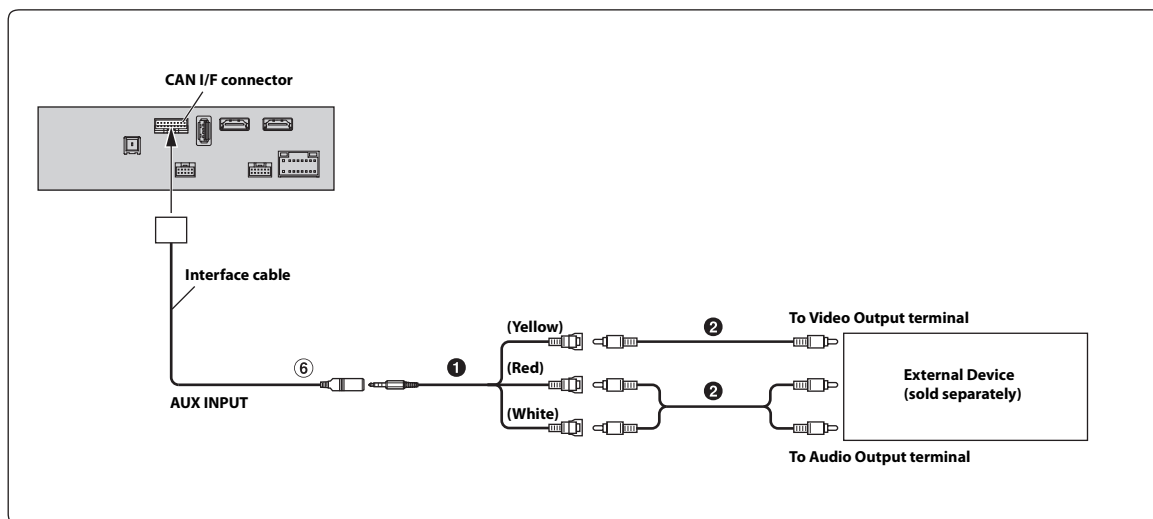


⑥ AUX Input Connector

① AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)
(sold separately)

② RCA Extension Cable (sold separately)

- You can change the name of an external device. For details, refer to "Setting the Auxiliary (AUX) Name" in the OWNER'S MANUAL.
- For details on using an AV/RCA interface cable (4-pole mini AV plug to 3-RCA), see "Usable AV/RCA Interface Cable (4-pole mini AV plug to 3-RCA)" (page 7).

Connection of an External Amplifier

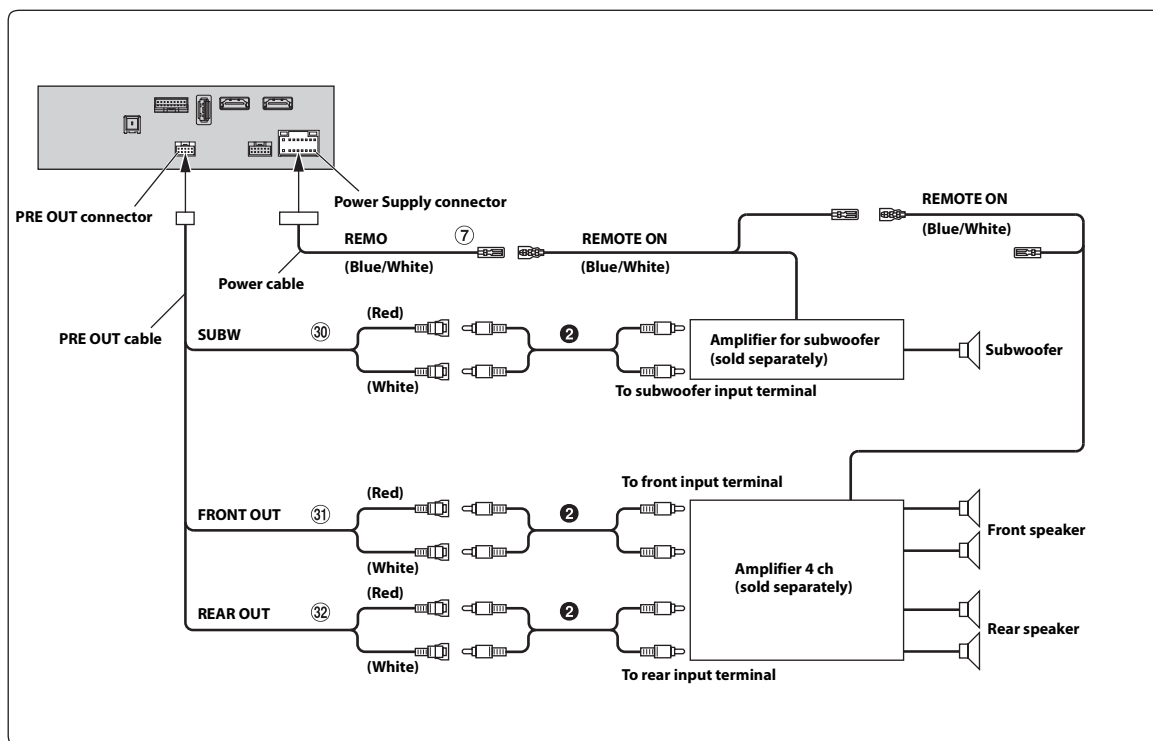

⑦ Remote Turn-On Lead (Blue/White)


② RCA Extension Cable (sold separately)

③① Subwoofer RCA Connectors

③① Front Output RCA Connectors

③② Rear Output RCA Connectors

Connection of a Rearview camera

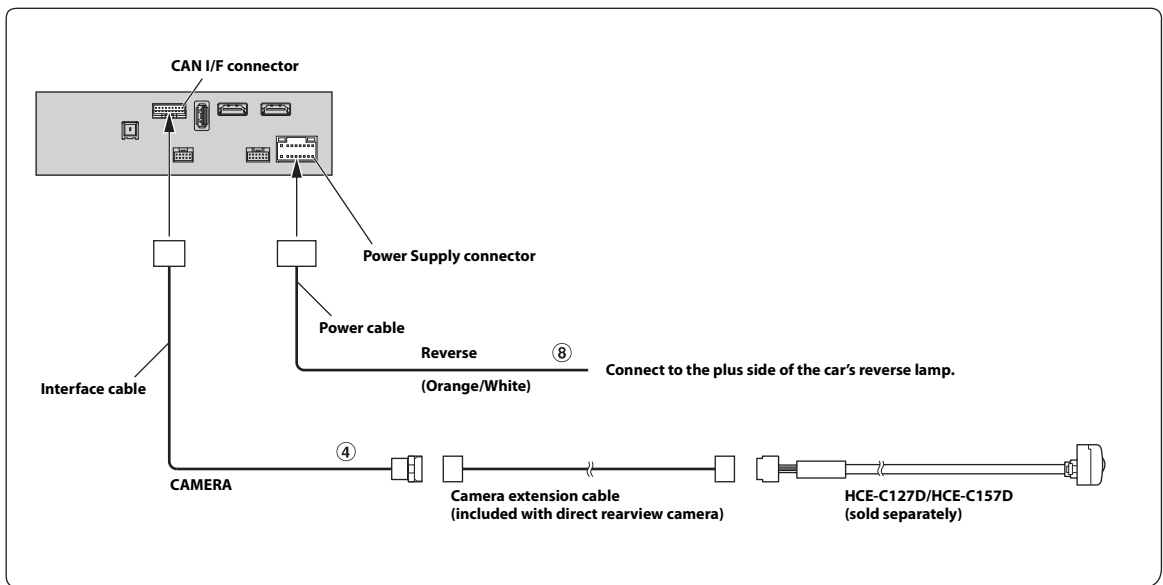


④ Direct CAMERA Input Connector

⑧ Reverse Lead (Orange/White)

- Set the Camera Select to "Rear." For details, refer to "Setting the Camera Input" in the OWNER'S MANUAL.
- When using the optional Multi Camera Interface module, you can connect up to 3 cameras: Front camera, Rear camera, and Side camera. For details on how to connect, refer to the OWNER'S MANUAL of the Multi Camera Interface module.

Connection of a Frontview or Sideview camera

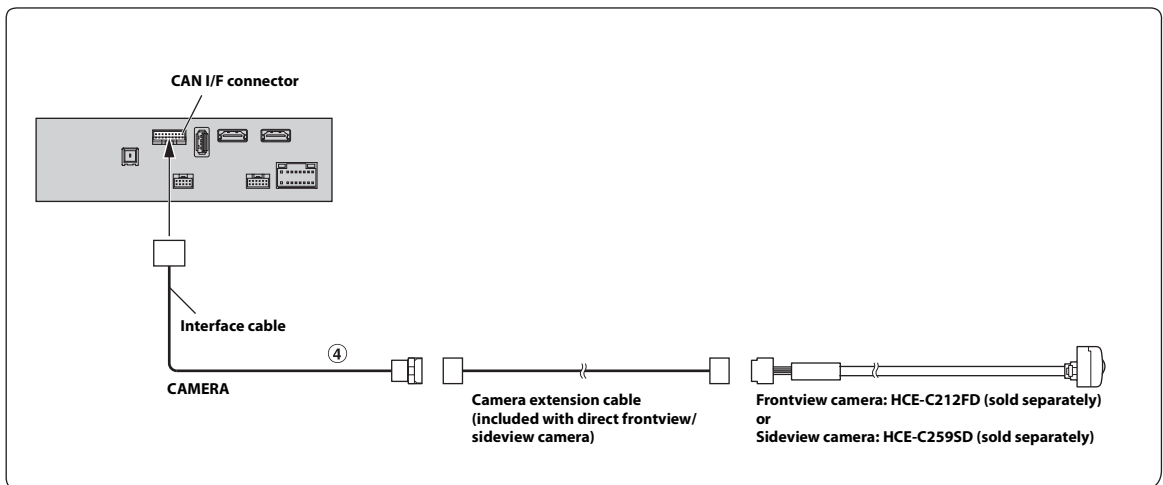

④ Direct CAMERA Input Connector

- Set the Camera Select to "Front" or "Side." For details, refer to "Setting the Camera Input" in the OWNER'S MANUAL.
- When using the optional Multi Camera Interface module, you can connect up to 3 cameras: Front camera, Rear camera, and Side camera. For details on how to connect, refer to the OWNER'S MANUAL of the Multi Camera Interface module.

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			ANT1	09-17241Z06	ASSY,ANID-0116-06A
AUDIO-P.W.Board			C2000	08S45231Y17	CAP,CER 22RJ-CH1H-CP
AUDIO-P.W.Board			C2001	08S45231Y17	CAP,CER 22RJ-CH1H-CP
AUDIO-P.W.Board			C2004	08S45232Y05	CAP,CER 102K-B1H -CP
AUDIO-P.W.Board			C2005	08S45232Y05	CAP,CER 102K-B1H -CP
AUDIO-P.W.Board			C2006	08S45232Y05	CAP,CER 102K-B1H -CP
AUDIO-P.W.Board			C2008	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2009	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2010	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board			C2011	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board			C2012	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board			C2013	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board			C2014	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board			C2015	08-15113Z03	CAP,CER 475KX7R1C-CP
AUDIO-P.W.Board			C2016	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2017	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2018	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2019	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2020	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2021	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2023	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2050	08S45231Y31	CAP,CER 331J-CH1H-CP
AUDIO-P.W.Board			C2180	08-23325Z19	CAP,CER 224KX7R1C-CP
AUDIO-P.W.Board			C2190	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2192	08S45232Y21	CAP,CER 104K-B1A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C2200	08S65668Y05	CAP,CER 224KX5R1A-CP
AUDIO-P.W.Board			C2201	08S65668Y05	CAP,CER 224KX5R1A-CP
AUDIO-P.W.Board			C2206	08-23326Z06	CAP,CER 225KX7R0J-CP
AUDIO-P.W.Board			C2207	08-23326Z06	CAP,CER 225KX7R0J-CP
AUDIO-P.W.Board			C2208	08-15113Z01	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C2209	08-15113Z01	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C2210	08-15113Z01	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C2211	08-15113Z01	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C2212	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C2213	08-23326Z03	CAP,CER 224KX7R1A-CP
AUDIO-P.W.Board			C2214	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C2215	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2216	08S65669Y05	CAP,CER 106KX7R0J-CP
AUDIO-P.W.Board			C2217	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2218	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2219	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2220	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2221	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C2222	08-23325Z07	CAP,CER 103KX7R1C-CP
AUDIO-P.W.Board			C2223	08S45677W69	CAP,CER 222J-CH1H-CP
AUDIO-P.W.Board			C2224	08-23325Z07	CAP,CER 103KX7R1C-CP
AUDIO-P.W.Board			C2225	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2226	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2227	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C2228	08S45232Y21	CAP,CER 104K-B1A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C2229	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2230	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2231	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2232	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C2234	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2235	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2236	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2237	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2238	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2239	08S65676Y05	CAP,CER 105KX7R1E-CP
AUDIO-P.W.Board			C2240	08S65676Y02	CAP,CER 475KX7R1A-CP
AUDIO-P.W.Board			C2241	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C2242	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C2243	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2244	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C2245	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C2246	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2247	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2248	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2249	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2250	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2251	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2252	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2253	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2254	08-23325Z04	CAP,CER 332KX7R1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C2255	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C2256	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2257	08S45231Y31	CAP,CER 331J-CH1H-CP
AUDIO-P.W.Board			C2258	08S45231Y31	CAP,CER 331J-CH1H-CP
AUDIO-P.W.Board			C2259	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2400	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2401	08-30898Z01	CAP,TF 155K-1C -CP
AUDIO-P.W.Board			C2402	08-30898Z01	CAP,TF 155K-1C -CP
AUDIO-P.W.Board			C2403	08-30898Z01	CAP,TF 155K-1C -CP
AUDIO-P.W.Board			C2404	08-30898Z01	CAP,TF 155K-1C -CP
AUDIO-P.W.Board			C2405	08-15113Z02	CAP,CER 335KX7R1C-CP
AUDIO-P.W.Board			C2406	08-15113Z02	CAP,CER 335KX7R1C-CP
AUDIO-P.W.Board			C2407	08S65667Y07	CAP,CER 225KX5R1A-CP
AUDIO-P.W.Board			C2408	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2409	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2410	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2411	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2412	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2413	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2414	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2416	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2417	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2418	08S45232Y08	CAP,CER 332K-B1H -CP
AUDIO-P.W.Board			C2419	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2420	08-30898Z01	CAP,TF 155K-1C -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C2421	08-30898Z01	CAP,TF 155K-1C -CP
AUDIO-P.W.Board			C2422	08-30898Z01	CAP,TF 155K-1C -CP
AUDIO-P.W.Board			C2423	08-30898Z01	CAP,TF 155K-1C -CP
AUDIO-P.W.Board			C2424	08-15113Z03	CAP,CER 475KX7R1C-CP
AUDIO-P.W.Board			C2425	08-15113Z03	CAP,CER 475KX7R1C-CP
AUDIO-P.W.Board			C2426	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2427	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2428	08S65670Y03	CAP,CER 335KX5R1E-CP
AUDIO-P.W.Board			C2429	08S65670Y03	CAP,CER 335KX5R1E-CP
AUDIO-P.W.Board			C2430	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2431	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2432	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2433	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2434	08S65670Y03	CAP,CER 335KX5R1E-CP
AUDIO-P.W.Board			C2435	08S65670Y03	CAP,CER 335KX5R1E-CP
AUDIO-P.W.Board			C2440	08S65677Y06	CAP,CER 226MX7R1C-CP
AUDIO-P.W.Board			C2441	08S65677Y06	CAP,CER 226MX7R1C-CP
AUDIO-P.W.Board			C2442	08S65676Y05	CAP,CER 105KX7R1E-CP
AUDIO-P.W.Board			C2443	08S65676Y05	CAP,CER 105KX7R1E-CP
AUDIO-P.W.Board			C2444	08S65677Y06	CAP,CER 226MX7R1C-CP
AUDIO-P.W.Board			C2445	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2446	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2447	08S65676Y10	CAP,CER 106KX7R1C-CP
AUDIO-P.W.Board			C2451	08S45676W85	CAP,CER 104K-B1C -CP
AUDIO-P.W.Board			C2460	08S65670Y03	CAP,CER 335KX5R1E-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C2461	08S65670Y03	CAP,CER 335KX5R1E-CP
AUDIO-P.W.Board			C2462	08S65670Y03	CAP,CER 335KX5R1E-CP
AUDIO-P.W.Board			C2463	08S65670Y03	CAP,CER 335KX5R1E-CP
AUDIO-P.W.Board			C2470	08S65676Y10	CAP,CER 106KX7R1C-CP
AUDIO-P.W.Board			C2500	08-23325Z19	CAP,CER 224KX7R1C-CP
AUDIO-P.W.Board			C2501	08S45231Y10	CAP,CER 7R0D-CH1H-CP
AUDIO-P.W.Board			C2502	08S45231Y11	CAP,CER 8R0D-CH1H-CP
AUDIO-P.W.Board			C2503	08S65669Y05	CAP,CER 106KX7R0J-CP
AUDIO-P.W.Board			C2504	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2505	08-23325Z07	CAP,CER 103KX7R1C-CP
AUDIO-P.W.Board			C2506	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2507	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2508	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2509	08-23326Z05	CAP,CER 105KX7R1A-CP
AUDIO-P.W.Board			C2510	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2600	08-30898Z02	CAP,TF 105K-1E -CP
AUDIO-P.W.Board			C2601	08-30898Z02	CAP,TF 105K-1E -CP
AUDIO-P.W.Board			C2602	08-30898Z02	CAP,TF 105K-1E -CP
AUDIO-P.W.Board			C2603	08-30898Z02	CAP,TF 105K-1E -CP
AUDIO-P.W.Board			C2604	08-30898Z02	CAP,TF 105K-1E -CP
AUDIO-P.W.Board			C2605	08-30898Z02	CAP,TF 105K-1E -CP
AUDIO-P.W.Board			C2606	08-30898Z02	CAP,TF 105K-1E -CP
AUDIO-P.W.Board			C2607	08S65676Y03	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C2611	08-30898Z02	CAP,TF 105K-1E -CP
AUDIO-P.W.Board			C2612	08-23326Z05	CAP,CER 105KX7R1A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C2613	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C2650	08-23326Z05	CAP,CER 105KX7R1A-CP
AUDIO-P.W.Board			C2800	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2850	08S45231Y17	CAP,CER 22RJ-CH1H-CP
AUDIO-P.W.Board			C2851	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C2852	08S45231Y17	CAP,CER 22RJ-CH1H-CP
AUDIO-P.W.Board			C2853	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board			C2854	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C2855	08S65677Y06	CAP,CER 226MX7R1C-CP
AUDIO-P.W.Board			C2901	08S65669Y06	CAP,CER 103KX7R1H-CP
AUDIO-P.W.Board			C2903	08S45677W16	CAP,CER.15RJ-CH1H-CP
AUDIO-P.W.Board			C2905	08S45677W60	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C2906	08S45231Y06	CAP,CER 3R0C-CJ1H-CP
AUDIO-P.W.Board			C2907	08S45231Y15	CAP,CER 15RJ-CH1H-CP
AUDIO-P.W.Board			C2908	08S45231Y21	CAP,CER 47RJ-CH1H-CP
AUDIO-P.W.Board			C2912	08S45231Y04	CAP,CER 1R5C-CK1H-CP
AUDIO-P.W.Board			C2913	08S45231Y16	CAP,CER 18RJ-CH1H-CP
AUDIO-P.W.Board			C2914	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C2918	08S45231Y24	CAP,CER 82RJ-CH1H-CP
AUDIO-P.W.Board			C2950	08S45677W60	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C2955	08-19311Z01	CAP,CER 104KX7R1H-CP
AUDIO-P.W.Board			C2960	08S45231Y13	CAP,CER 10RD-CH1H-CP
AUDIO-P.W.Board			C2962	08S45231Y21	CAP,CER 47RJ-CH1H-CP
AUDIO-P.W.Board			C2963	08S35350Y04	CAP,CER 105K-B1C -CP
AUDIO-P.W.Board			C2964	08-19311Z01	CAP,CER 104KX7R1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C2965	08S45677W60	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C2966	08S65676Y08	CAP,CER 106K-X7R1ACP
AUDIO-P.W.Board			C3002	08S45231Y14	CAP,CER 12RJ-CH1H-CP
AUDIO-P.W.Board			C3017	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3018	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3019	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3020	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3021	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3022	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3026	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3029	08-23325Z19	CAP,CER 224KX7R1C-CP
AUDIO-P.W.Board			C3030	08S65676Y08	CAP,CER 106K-X7R1ACP
AUDIO-P.W.Board			C3031	08S65676Y08	CAP,CER 106K-X7R1ACP
AUDIO-P.W.Board			C3032	08S65676Y08	CAP,CER 106K-X7R1ACP
AUDIO-P.W.Board			C3047	08S45231Y14	CAP,CER 12RJ-CH1H-CP
AUDIO-P.W.Board			C3101	08S45539Y01	CAP,CER 102KX7R2J-CP
AUDIO-P.W.Board			C3103	08-26091Z01	CAP,CER 102KX7R2J-CP
AUDIO-P.W.Board			C3104	08-26091Z05	CAP,CER 103KX7R2J-CP
AUDIO-P.W.Board			C3130	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C3131	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C3132	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C3133	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C3134	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C3135	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C3136	08S45231Y38	CAP,CER 102J-CH1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C3150	08S45677W44	CAP,CER.221J-CH1H-CP
AUDIO-P.W.Board			C3151	08S45677W44	CAP,CER.221J-CH1H-CP
AUDIO-P.W.Board			C3152	08S45677W44	CAP,CER.221J-CH1H-CP
AUDIO-P.W.Board			C3153	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3203	08S45231Y25	CAP,CER 101J-CH1H-CP
AUDIO-P.W.Board			C3204	08S45231Y38	CAP,CER 102J-CH1H-CP
AUDIO-P.W.Board			C3205	08-19311Z01	CAP,CER 104KX7R1H-CP
AUDIO-P.W.Board			C3206	08-19311Z01	CAP,CER 104KX7R1H-CP
AUDIO-P.W.Board			C3210	08S65676Y10	CAP,CER 106KX7R1C-CP
AUDIO-P.W.Board			C3221	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3222	08-19311Z03	CAP,CER 103KX7R1H-CP
AUDIO-P.W.Board			C3223	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3224	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3225	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3226	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3227	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3230	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3231	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3232	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3233	08-15113Z01	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C3234	08-23325Z03	CAP,CER 222KX7R1H-CP
AUDIO-P.W.Board			C3235	08-23325Z03	CAP,CER 222KX7R1H-CP
AUDIO-P.W.Board			C3236	08S45231Y31	CAP,CER 331J-CH1H-CP
AUDIO-P.W.Board			C3237	08-15113Z01	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C3238	08S65669Y03	CAP,CER 224KX7R1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C3239	08-23326Z08	CAP,CER 473KX7R1H-CP
AUDIO-P.W.Board			C3240	08S45231Y31	CAP,CER 331J-CH1H-CP
AUDIO-P.W.Board			C3350	08-19311Z01	CAP,CER 104KX7R1H-CP
AUDIO-P.W.Board			C3351	08-19311Z01	CAP,CER 104KX7R1H-CP
AUDIO-P.W.Board			C3352	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3353	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3354	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3400	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3401	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3402	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3403	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3404	08-19311Z03	CAP,CER 103KX7R1H-CP
AUDIO-P.W.Board			C3405	08-19311Z01	CAP,CER 104KX7R1H-CP
AUDIO-P.W.Board			C3406	08-19311Z01	CAP,CER 104KX7R1H-CP
AUDIO-P.W.Board			C3407	08-23326Z05	CAP,CER 105KX7R1A-CP
AUDIO-P.W.Board			C3408	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3410	08S65677Y06	CAP,CER 226MX7R1C-CP
AUDIO-P.W.Board			C3411	08S65677Y06	CAP,CER 226MX7R1C-CP
AUDIO-P.W.Board			C3412	08S65677Y06	CAP,CER 226MX7R1C-CP
AUDIO-P.W.Board			C3430	08S65670Y08	CAP,CER 225KX5R1H-CP
AUDIO-P.W.Board			C3431	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3432	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3440	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3441	08S65676Y08	CAP,CER 106K-X7R1ACP
AUDIO-P.W.Board			C3442	08S65669Y03	CAP,CER 224KX7R1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C3460	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3461	08-15113Z01	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C3462	08S65669Y05	CAP,CER 106KX7R0J-CP
AUDIO-P.W.Board			C3464	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3470	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3471	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3480	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3481	08S65676Y08	CAP,CER 106K-X7R1ACP
AUDIO-P.W.Board			C3482	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3490	08S65676Y02	CAP,CER 475KX7R1A-CP
AUDIO-P.W.Board			C3492	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3493	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3494	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3495	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3496	08-15113Z03	CAP,CER 475KX7R1C-CP
AUDIO-P.W.Board			C3499	08-23326Z05	CAP,CER 105KX7R1A-CP
AUDIO-P.W.Board			C3502	08-15113Z01	CAP,CER 225KX7R1C-CP
AUDIO-P.W.Board			C3510	08-23325Z07	CAP,CER 103KX7R1C-CP
AUDIO-P.W.Board			C3512	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3550	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3551	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3552	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board			C3602	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C3603	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3604	08S65677Y06	CAP,CER 226MX7R1C-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			C3605	08S65676Y10	CAP,CER 106KX7R1C-CP
AUDIO-P.W.Board			C3607	08S45231Y25	CAP,CER 101J-CH1H-CP
AUDIO-P.W.Board			C3608	08S65676Y09	CAP,CER 475KX7R1H-CP
AUDIO-P.W.Board			C3610	08-23325Z04	CAP,CER 332KX7R1H-CP
AUDIO-P.W.Board			C3611	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3612	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			C3613	08S65677Y06	CAP,CER 226MX7R1C-CP
AUDIO-P.W.Board			C3615	08S45231Y25	CAP,CER 101J-CH1H-CP
AUDIO-P.W.Board			C3616	08S65676Y09	CAP,CER 475KX7R1H-CP
AUDIO-P.W.Board			C3617	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board			CB2000	09-14451Z06	FFC,502790-3091 -ED
AUDIO-P.W.Board			CB3100	09T35473Y16	WTB,F169B001-16 -DB
AUDIO-P.W.Board			CB3120	09-25106Z01	WTB,S10B-PUDSS-1 -DB
AUDIO-P.W.Board			CB3130	09-25106Z02	WTB,S12B-PUDSS-1 -DB
AUDIO-P.W.Board			CB3150	09-16961Z09	WTB,A1257WV0-10PS-ED
AUDIO-P.W.Board			CB3490	09T85454W03	WTB,53398-0371 -E6
AUDIO-P.W.Board			CH3300	09-29653Z01	BTB,FX23-100S-0.5S-T
AUDIO-P.W.Board			D2460	48-17624Z01	DIO,DA3J102D0L -CP
AUDIO-P.W.Board			D2461	48-17624Z01	DIO,DA3J102D0L -CP
AUDIO-P.W.Board			D2462	48-17624Z01	DIO,DA3J102D0L -CP
AUDIO-P.W.Board			D2650	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board			D2901	48-17547Z01	DIO,DA3J101F0L -CP
AUDIO-P.W.Board			D3200	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board			D3201	48-05164Z01	DIO,1SS352-TPH3 -CP
AUDIO-P.W.Board			D3202	48-05965Z01	DIO,1SS361-L -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			D3204	48-05965Z01	DIO,1SS361-L -CP
AUDIO-P.W.Board			D3205	48-05164Z01	DIO,1SS352-TPH3 -CP
AUDIO-P.W.Board			D3400	48T75527Y01	DIO,1SR154-400 -E1
AUDIO-P.W.Board			E2404	23-31100Z12	CAP,MAK 101-1C -E6
AUDIO-P.W.Board			E2405	23-31100Z07	CAP,MAK 101-1A -E6
AUDIO-P.W.Board			E2420	23-31100Z10	CAP,MAK 22R-1C -E3
AUDIO-P.W.Board			E2421	23-31100Z10	CAP,MAK 22R-1C -E3
AUDIO-P.W.Board			E2440	23S75244Y19	CAP,ELY 101-1C -E6
AUDIO-P.W.Board			E2441	23S75244Y17	CAP,ELY 22R-1C -E2
AUDIO-P.W.Board			E2442	23S75244Y17	CAP,ELY 22R-1C -E2
AUDIO-P.W.Board			E2460	23-31100Z26	CAP,MAK 3R3-1H -E2
AUDIO-P.W.Board			E2461	23-31100Z26	CAP,MAK 3R3-1H -E2
AUDIO-P.W.Board			E2600	23-31100Z17	CAP,MAK 10R-1E -E3
AUDIO-P.W.Board			E2601	23-31100Z17	CAP,MAK 10R-1E -E3
AUDIO-P.W.Board			E2650	23S75244Y19	CAP,ELY 101-1C -E6
AUDIO-P.W.Board			E3100	23-19876Z04	CAP,CST 472-1E +
AUDIO-P.W.Board			E3200	23-31100Z17	CAP,MAK 10R-1E -E3
AUDIO-P.W.Board			E3300	23S75244Y31	CAP,ELY 471-1E -EA
AUDIO-P.W.Board			E3301	23S75244Y22	CAP,ELY 471-1C -EA
AUDIO-P.W.Board			E3400	23S75244Y19	CAP,ELY 101-1C -E6
AUDIO-P.W.Board			E3404	23S75244Y24	CAP,ELY 10R-1E -E2
AUDIO-P.W.Board			E3405	23S75244Y25	CAP,ELY 22R-1E -E3
AUDIO-P.W.Board			E3406	23S75244Y14	CAP,ELY 681-1A -EA
AUDIO-P.W.Board			E3430	23S75244Y25	CAP,ELY 22R-1E -E3
AUDIO-P.W.Board			E3440	23S75244Y01	CAP,ELY 22R-0J -E2

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			E3470	23S75244Y01	CAP,ELY 22R-0J -E2
AUDIO-P.W.Board			E3471	23-31100Z11	CAP,MAK 47R-1C -E6
AUDIO-P.W.Board			E3480	23S75244Y01	CAP,ELY 22R-0J -E2
AUDIO-P.W.Board			E3510	23S75244Y01	CAP,ELY 22R-0J -E2
AUDIO-P.W.Board			E3511	23-31100Z06	CAP,MAK 33R-1A -E3
AUDIO-P.W.Board			E3600	23S75244Y05	CAP,ELY 331-0J -E6
AUDIO-P.W.Board			E3601	23S75244Y24	CAP,ELY 10R-1E -E2
AUDIO-P.W.Board			E3602	23S75244Y24	CAP,ELY 10R-1E -E2
AUDIO-P.W.Board			IC2000	83-31628Z25	V0.960_LIMO8US_BU
AUDIO-P.W.Board			IC2000	51-23912Z01	MTP,D70F3479AGJAQ-QT
AUDIO-P.W.Board			IC2001	51T15185Y03	TC7SH08FU,LJ -CP
AUDIO-P.W.Board			IC2180	51-24805Z01	BR24T16F-WGE2 -SE2
AUDIO-P.W.Board			IC2190	51-04315Z22	BU4229G-TR -CP
AUDIO-P.W.Board			IC2200	51-30382Z02	SAF7754HV/N205 -QT
AUDIO-P.W.Board			IC2201	51-29083Z01	SN74AHCU04QPWRG4-SE2
AUDIO-P.W.Board			IC2202	83-31628Z34	V1.100_LIMO_DiRaNA3
AUDIO-P.W.Board			IC2202	51-18520Z01	MX25L8035EM21-10G-ST
AUDIO-P.W.Board			IC2203	51-29083Z01	SN74AHCU04QPWRG4-SE2
AUDIO-P.W.Board			IC2400	51-16740Z01	BD3461FS-E2 -SE6
AUDIO-P.W.Board			IC2420	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board			IC2421	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board			IC2422	51T25576W07	NJM4580V-TE2 -SE2
AUDIO-P.W.Board			IC2440	51-20907Z01	TPS60402QDBVRQ1 -CP
AUDIO-P.W.Board			IC2441	51-16845Z04	TAR5S50U-TE85L -CP
AUDIO-P.W.Board			IC2501	51-27602Z01	AK7736AVQ -QE6

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			IC2600	51-30375Z01	STPA003OD-4WX -ZS
AUDIO-P.W.Board			IC2850	51T25141Y03	TC7SHU04FU,LJ -CP
AUDIO-P.W.Board			IC2851	51-27637Z01	SI4749-C10-AMR -LE2
AUDIO-P.W.Board			IC3000	51-29945Z01	SAF3600EL/V1040A-BEA
AUDIO-P.W.Board			IC3001	83-31628Z35	VC0004.004R1_LIMOUS_Saturn
AUDIO-P.W.Board			IC3001	51-30259Z02	S25FL116K0XMFA040-ST
AUDIO-P.W.Board			IC3150	51T15194Y03	74VHCT08AFT-EL -SE2
AUDIO-P.W.Board			IC3200	51T65016Y26	S-80937CNMC-T2 -CP
AUDIO-P.W.Board			IC3206	51-02032Z02	TC7SET02FU,LJ -CP
AUDIO-P.W.Board			IC3207	51T15614Y01	TC74HC4051AFT-EL-SE5
AUDIO-P.W.Board			IC3208	51T15614Y01	TC74HC4051AFT-EL-SE5
AUDIO-P.W.Board			IC3209	51T35360Y01	TC7WH08FU-L -SE1
AUDIO-P.W.Board			IC3210	51T15194Y03	74VHCT08AFT-EL -SE2
AUDIO-P.W.Board			IC3211	51T15647Y01	NJM4558V-TE2 -SE2
AUDIO-P.W.Board			IC3212	51-20560Z01	TC74VHC4051AFK-ELSE2
AUDIO-P.W.Board			IC3400	51-13711Z02	TB2920AHQ -ZS
AUDIO-P.W.Board			IC3430	51-28614Z01	BD00FC0EEFJ-ME2 -SE2
AUDIO-P.W.Board			IC3440	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board			IC3460	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board			IC3470	51-23593Z05	BD00IA5EEFJ-ME2 -SE2
AUDIO-P.W.Board			IC3480	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
AUDIO-P.W.Board			IC3510	51-07902Z02	NJM2871BF33-TE1 -CP
AUDIO-P.W.Board			IC3601	51-28779Z02	BD90640EFJ-CE2 -SE2
AUDIO-P.W.Board			IC3602	51-28779Z01	BD90620EFJ-CE2 -SE2
AUDIO-P.W.Board			L2200	24-24463Z01	FBI,BLM15HD601SH1-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			L2201	24-24463Z01	FBI,BLM15HD601SH1-CP
AUDIO-P.W.Board			L2202	24-24463Z01	FBI,BLM15HD601SH1-CP
AUDIO-P.W.Board			L2203	24-17733Z06	IND,NLCV32T 47RK -CP
AUDIO-P.W.Board			L2204	24-17733Z06	IND,NLCV32T 47RK -CP
AUDIO-P.W.Board			L2205	24-24463Z01	FBI,BLM15HD601SH1-CP
AUDIO-P.W.Board			L2206	24-24463Z01	FBI,BLM15HD601SH1-CP
AUDIO-P.W.Board			L2210	24-24463Z01	FBI,BLM15HD601SH1-CP
AUDIO-P.W.Board			L2440	24T95202W25	IND,CDRH64B 102M -E6
AUDIO-P.W.Board			L2441	24T95202W25	IND,CDRH64B 102M -E6
AUDIO-P.W.Board			L2501	24-06212Z05	FBI,BLM15BB121SH1-CP
AUDIO-P.W.Board			L2502	24-06212Z05	FBI,BLM15BB121SH1-CP
AUDIO-P.W.Board			L2503	24-06212Z05	FBI,BLM15BB121SH1-CP
AUDIO-P.W.Board			L2850	24-06212Z01	FBI,BLM15AG601SH1-CP
AUDIO-P.W.Board			L2851	24-09036Z10	IND,LQW18AN R18J -CP
AUDIO-P.W.Board			L2852	24-06212Z01	FBI,BLM15AG601SH1-CP
AUDIO-P.W.Board			L2902	24-30185Z23	IND,LQW2BAS R22J -CP
AUDIO-P.W.Board			L2904	24T25164Y12	IND,FSLM2520 R82J-CP
AUDIO-P.W.Board			L2905	24-09036Z11	IND,LQW18AN R27J -CP
AUDIO-P.W.Board			L2906	24T25164Y19	IND,FSLM2520 3R3J-CP
AUDIO-P.W.Board			L2950	24T25164Y21	IND,FSLM2520 4R7J-CP
AUDIO-P.W.Board			L2951	24T25164Y05	IND,FSLM2520 R22J-CP
AUDIO-P.W.Board			L2952	24T15278Y03	IND,BM-7A -DB
AUDIO-P.W.Board			L2953	24T95456W27	FBI,BLM18PG181SH1-CP
AUDIO-P.W.Board			L3150	24-06212Z08	FBI,BLM15BD102SH1-CP
AUDIO-P.W.Board			L3490	24T95456W27	FBI,BLM18PG181SH1-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			L3492	24T95456W27	FBI,BLM18PG181SH1-CP
AUDIO-P.W.Board			L3493	24T95456W27	FBI,BLM18PG181SH1-CP
AUDIO-P.W.Board			L3494	24T95456W27	FBI,BLM18PG181SH1-CP
AUDIO-P.W.Board			L3495	24-28869Z04	FBI,BKP1608HS121 -CP
AUDIO-P.W.Board			L3601	24-17581Z02	IND,NRS5020T 1R5N-E2
AUDIO-P.W.Board			L3602	24-08610Z03	IND,DS106C2 10RM -EA
AUDIO-P.W.Board			L3603	24-22371Z01	IND,NRS4018T 2R2M-E2
AUDIO-P.W.Board			L3604	24-08610Z05	IND,DS106C2 33RM -EA
AUDIO-P.W.Board			PS3101	48-16589Z01	POLY,SW SMD C075F -E2
AUDIO-P.W.Board			PS3150	48-16589Z03	POLY,SW SMD C150F -E2
AUDIO-P.W.Board			Q2460	48T75180Y04	TR,IMH23-T110 -CP
AUDIO-P.W.Board			Q2461	48T75180Y04	TR,IMH23-T110 -CP
AUDIO-P.W.Board			Q2462	48T75180Y04	TR,IMH23-T110 -CP
AUDIO-P.W.Board			Q2650	48T25737Y02	TR,UMD3N-TR -CP
AUDIO-P.W.Board			Q2651	48-20093Z01	TR,DMC561010R -CP
AUDIO-P.W.Board			Q2652	48T25737Y01	TR,UMD2N-TR -CP
AUDIO-P.W.Board			Q2950	48-29875Z01	TR,2SC5084-O -CP
AUDIO-P.W.Board			Q3200	48-12999Z01	TR,LTA114EUBFS8-TLCP
AUDIO-P.W.Board			Q3202	48-13000Z05	TR,LTC124EUBFS8-TLCP
AUDIO-P.W.Board			Q3203	48T25737Y01	TR,UMD2N-TR -CP
AUDIO-P.W.Board			Q3204	48-13000Z01	TR,LTC114EUBFS8-TLCP
AUDIO-P.W.Board			Q3205	48T25737Y01	TR,UMD2N-TR -CP
AUDIO-P.W.Board			Q3207	48-13000Z01	TR,LTC114EUBFS8-TLCP
AUDIO-P.W.Board			Q3208	48-17548Z01	TR,DSA500100L -CP
AUDIO-P.W.Board			Q3209	48T25737Y02	TR,UMD3N-TR -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

AUDIO-P.W.Board			R2001	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2005	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2006	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2007	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2010	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2011	06S65415Y29	RES,RK 222F 1/16 -CP
AUDIO-P.W.Board			R2012	06S65415Y29	RES,RK 222F 1/16 -CP
AUDIO-P.W.Board			R2014	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2015	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2016	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2017	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2019	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2023	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2024	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2025	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2026	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2027	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2028	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2030	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2031	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2032	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2033	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2034	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2036	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2039	06S65415Y41	RES,RK 223F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R2040	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2042	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2043	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2044	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2045	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2046	06S65415Y29	RES,RK 222F 1/16 -CP
AUDIO-P.W.Board			R2047	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2048	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2060	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2061	06S15615Y49	RES,RK 102J 1/16 -CP
AUDIO-P.W.Board			R2062	06S45674W33	RES,RK 101J 1/10 -CP
AUDIO-P.W.Board			R2063	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2064	06S15615Y41	RES,RK 471J 1/16 -CP
AUDIO-P.W.Board			R2070	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2071	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2072	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2073	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2074	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2076	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2077	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2078	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2083	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2089	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2092	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2093	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R2103	06S15615Y49	RES,RK 102J 1/16 -CP
AUDIO-P.W.Board			R2104	06S15615Y49	RES,RK 102J 1/16 -CP
AUDIO-P.W.Board			R2105	06S15615Y49	RES,RK 102J 1/16 -CP
AUDIO-P.W.Board			R2108	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2109	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2110	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2111	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2180	06S65415Y33	RES,RK 472F 1/16 -CP
AUDIO-P.W.Board			R2181	06S65415Y33	RES,RK 472F 1/16 -CP
AUDIO-P.W.Board			R2190	06S45674W81	RES,RK 103J 1/10 -CP
AUDIO-P.W.Board			R2191	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R2192	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2204	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2207	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2211	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2212	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2213	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2214	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2215	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2216	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2217	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2218	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2219	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2220	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2221	06S15616Y23	RES,RK JUMPER1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R2222	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2224	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2225	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2226	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2227	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2228	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2229	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2230	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2231	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2232	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2233	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2249	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2250	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2251	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2253	06S15615Y09	RES,RK 22RJ 1/16 -CP
AUDIO-P.W.Board			R2254	06S15615Y09	RES,RK 22RJ 1/16 -CP
AUDIO-P.W.Board			R2255	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2256	06S15615Y09	RES,RK 22RJ 1/16 -CP
AUDIO-P.W.Board			R2258	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2260	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2262	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2263	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2265	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2268	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2270	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R2273	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2274	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2400	06S65415Y34	RES,RK 562F 1/16 -CP
AUDIO-P.W.Board			R2401	06-25919Z12	RES,RK 623F 1/16 -CP
AUDIO-P.W.Board			R2402	06S15615Y57	RES,RK 222J 1/16 -CP
AUDIO-P.W.Board			R2404	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2405	06S65415Y48	RES,RK 823F 1/16 -CP
AUDIO-P.W.Board			R2406	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2407	06S65415Y48	RES,RK 823F 1/16 -CP
AUDIO-P.W.Board			R2408	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2409	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2420	06S65415Y49	RES,RK 104F 1/16 -CP
AUDIO-P.W.Board			R2421	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2422	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2423	06S65415Y49	RES,RK 104F 1/16 -CP
AUDIO-P.W.Board			R2424	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2425	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2426	06S65415Y49	RES,RK 104F 1/16 -CP
AUDIO-P.W.Board			R2427	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2428	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2429	06S65415Y49	RES,RK 104F 1/16 -CP
AUDIO-P.W.Board			R2430	06S65415Y49	RES,RK 104F 1/16 -CP
AUDIO-P.W.Board			R2431	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2432	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2433	06S15593Y81	RES,RK 223F 1/10 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R2434	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2435	06S65415Y49	RES,RK 104F 1/16 -CP
AUDIO-P.W.Board			R2436	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2437	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R2460	06S15615Y94	RES,RK 753J 1/16 -CP
AUDIO-P.W.Board			R2461	06S15615Y94	RES,RK 753J 1/16 -CP
AUDIO-P.W.Board			R2462	06S15615Y94	RES,RK 753J 1/16 -CP
AUDIO-P.W.Board			R2463	06S15615Y94	RES,RK 753J 1/16 -CP
AUDIO-P.W.Board			R2464	06S15615Y94	RES,RK 753J 1/16 -CP
AUDIO-P.W.Board			R2465	06S15615Y94	RES,RK 753J 1/16 -CP
AUDIO-P.W.Board			R2466	06S70072F29	RES,CP .101-J-1/4-CP
AUDIO-P.W.Board			R2467	06S70072F29	RES,CP .101-J-1/4-CP
AUDIO-P.W.Board			R2468	06S70072F29	RES,CP .101-J-1/4-CP
AUDIO-P.W.Board			R2469	06S70072F29	RES,CP .101-J-1/4-CP
AUDIO-P.W.Board			R2470	06S70072F29	RES,CP .101-J-1/4-CP
AUDIO-P.W.Board			R2471	06S70072F29	RES,CP .101-J-1/4-CP
AUDIO-P.W.Board			R2472	06S70072F37	RES,CP .221-J-1/4-CP
AUDIO-P.W.Board			R2473	06S70072F37	RES,CP .221-J-1/4-CP
AUDIO-P.W.Board			R2474	06S70072F37	RES,CP .221-J-1/4-CP
AUDIO-P.W.Board			R2475	06S70072F37	RES,CP .221-J-1/4-CP
AUDIO-P.W.Board			R2476	06S70072F37	RES,CP .221-J-1/4-CP
AUDIO-P.W.Board			R2477	06S70072F37	RES,CP .221-J-1/4-CP
AUDIO-P.W.Board			R2501	06S15615Y41	RES,RK 471J 1/16 -CP
AUDIO-P.W.Board			R2502	06S15615Y41	RES,RK 471J 1/16 -CP
AUDIO-P.W.Board			R2503	06S15615Y41	RES,RK 471J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R2504	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2505	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2507	06S45675W43	RES,RK JUMPER1/10-CP
AUDIO-P.W.Board			R2508	06S15615Y61	RES,RK 332J 1/16 -CP
AUDIO-P.W.Board			R2510	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2517	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2518	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2521	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2527	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2604	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R2605	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2650	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2651	06S15615Y49	RES,RK 102J 1/16 -CP
AUDIO-P.W.Board			R2652	06S15615Y47	RES,RK 821J 1/16 -CP
AUDIO-P.W.Board			R2653	06S15615Y89	RES,RK 473J 1/16 -CP
AUDIO-P.W.Board			R2654	06S45674W41	RES,RK 221J 1/10 -CP
AUDIO-P.W.Board			R2655	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2850	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2851	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2852	06S15615Y89	RES,RK 473J 1/16 -CP
AUDIO-P.W.Board			R2853	06S15615Y89	RES,RK 473J 1/16 -CP
AUDIO-P.W.Board			R2854	06S65415Y59	RES,RK 684F 1/16 -CP
AUDIO-P.W.Board			R2855	06S15616Y43	RES,RK 106J 1/16 -CP
AUDIO-P.W.Board			R2856	06S65415Y33	RES,RK 472F 1/16 -CP
AUDIO-P.W.Board			R2857	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R2858	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2859	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R2860	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R2864	06S45675W43	RES,RK JUMPER1/10-CP
AUDIO-P.W.Board			R2866	06S65415Y29	RES,RK 222F 1/16 -CP
AUDIO-P.W.Board			R2902	06S15594Y14	RES,RK 474F 1/10 -CP
AUDIO-P.W.Board			R2903	06S15594Y14	RES,RK 474F 1/10 -CP
AUDIO-P.W.Board			R2904	06S65415Y11	RES,RK 68RF 1/16 -CP
AUDIO-P.W.Board			R2905	06S45675W43	RES,RK JUMPER1/10-CP
AUDIO-P.W.Board			R2906	06S45675W43	RES,RK JUMPER1/10-CP
AUDIO-P.W.Board			R2950	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R2963	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R2965	06S65415Y05	RES,RK 22RF 1/16 -CP
AUDIO-P.W.Board			R2966	06S65415Y10	RES,RK 56RF 1/16 -CP
AUDIO-P.W.Board			R2967	06S35083Y19	RES,RK 331F 1/4 -CP
AUDIO-P.W.Board			R3000	06S15616Y14	RES,RK 474J 1/16 -CP
AUDIO-P.W.Board			R3007	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3008	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3009	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3010	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3011	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3012	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3014	06S15615Y19	RES,RK 56RJ 1/16 -CP
AUDIO-P.W.Board			R3015	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3016	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R3019	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3023	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3025	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3100	06S45674W81	RES,RK 103J 1/10 -CP
AUDIO-P.W.Board			R3102	06S45674W81	RES,RK 103J 1/10 -CP
AUDIO-P.W.Board			R3105	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3106	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3130	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R3131	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R3132	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R3133	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R3134	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R3135	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R3150	06S45675W43	RES,RK JUMPER1/10-CP
AUDIO-P.W.Board			R3151	06S45675W43	RES,RK JUMPER1/10-CP
AUDIO-P.W.Board			R3152	06S45675W43	RES,RK JUMPER1/10-CP
AUDIO-P.W.Board			R3153	06S70072F51	RES,CP .821-J-1/4-CP
AUDIO-P.W.Board			R3154	06S70072F53	RES,CP .102-J-1/4-CP
AUDIO-P.W.Board			R3155	06S70072F53	RES,CP .102-J-1/4-CP
AUDIO-P.W.Board			R3156	06S70072F98	RES,RK 223J 1/4 -CP
AUDIO-P.W.Board			R3158	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R3159	06S15615Y41	RES,RK 471J 1/16 -CP
AUDIO-P.W.Board			R3200	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R3202	06S15616Y14	RES,RK 474J 1/16 -CP
AUDIO-P.W.Board			R3203	06S35083Y39	RES,RK 153F 1/4 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R3204	06S15593Y86	RES,RK 363F 1/10 -CP
AUDIO-P.W.Board			R3205	06S65415Y30	RES,RK 272F 1/16 -CP
AUDIO-P.W.Board			R3206	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R3207	06S35083Y43	RES,RK 333F 1/4 -CP
AUDIO-P.W.Board			R3208	06S35083Y40	RES,RK 183F 1/4 -CP
AUDIO-P.W.Board			R3209	06S70072F69	RES,CP .472-J-1/4-CP
AUDIO-P.W.Board			R3210	06S70072F69	RES,CP .472-J-1/4-CP
AUDIO-P.W.Board			R3211	06S15615Y89	RES,RK 473J 1/16 -CP
AUDIO-P.W.Board			R3213	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3215	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3218	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R3219	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R3220	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3221	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3222	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3234	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R3235	06S15593Y61	RES,RK 332F 1/10 -CP
AUDIO-P.W.Board			R3236	06S45674W65	RES,RK 222J 1/10 -CP
AUDIO-P.W.Board			R3237	06S15593Y81	RES,RK 223F 1/10 -CP
AUDIO-P.W.Board			R3239	06S15615Y33	RES,RK 221J 1/16 -CP
AUDIO-P.W.Board			R3240	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3241	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3242	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3245	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R3246	06S65415Y29	RES,RK 222F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R3249	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R3250	06S65415Y50	RES,RK 124F 1/16 -CP
AUDIO-P.W.Board			R3251	06S65415Y29	RES,RK 222F 1/16 -CP
AUDIO-P.W.Board			R3252	06S45674W57	RES,RK 102J 1/10 -CP
AUDIO-P.W.Board			R3254	06S65415Y50	RES,RK 124F 1/16 -CP
AUDIO-P.W.Board			R3300	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3301	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3302	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3303	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3304	06S15616Y23	RES,RK JUMPER1/16-CP
AUDIO-P.W.Board			R3305	06S15615Y09	RES,RK 22RJ 1/16 -CP
AUDIO-P.W.Board			R3306	06S15615Y09	RES,RK 22RJ 1/16 -CP
AUDIO-P.W.Board			R3400	06S15594Y01	RES,RK 134F 1/10 -CP
AUDIO-P.W.Board			R3401	06S15594Y09	RES,RK 304F 1/10 -CP
AUDIO-P.W.Board			R3402	06S15593Y91	RES,RK 563F 1/10 -CP
AUDIO-P.W.Board			R3403	06S15593Y92	RES,RK 623F 1/10 -CP
AUDIO-P.W.Board			R3404	06S15593Y67	RES,RK 562F 1/10 -CP
AUDIO-P.W.Board			R3405	06S15594Y20	RES,RK 824F 1/10 -CP
AUDIO-P.W.Board			R3406	06S15593Y93	RES,RK 683F 1/10 -CP
AUDIO-P.W.Board			R3407	06S70072F63	RES,CP .272-J-1/4-CP
AUDIO-P.W.Board			R3408	06S65415Y32	RES,RK 392F 1/16 -CP
AUDIO-P.W.Board			R3409	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R3410	06S70072F77	RES,CP .103-J-1/4-CP
AUDIO-P.W.Board			R3411	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R3412	06S65415Y35	RES,RK 682F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R3413	06S65415Y43	RES,RK 333F 1/16 -CP
AUDIO-P.W.Board			R3414	06S65415Y41	RES,RK 223F 1/16 -CP
AUDIO-P.W.Board			R3415	06S15593Y66	RES,RK 512F 1/10 -CP
AUDIO-P.W.Board			R3430	06S65415Y47	RES,RK 683F 1/16 -CP
AUDIO-P.W.Board			R3431	06S65415Y30	RES,RK 272F 1/16 -CP
AUDIO-P.W.Board			R3432	06S65415Y35	RES,RK 682F 1/16 -CP
AUDIO-P.W.Board			R3433	06S15594Y19	RES,RK 754F 1/10 -CP
AUDIO-P.W.Board			R3440	06S15594Y03	RES,RK 164F 1/10 -CP
AUDIO-P.W.Board			R3442	06S65415Y38	RES,RK 123F 1/16 -CP
AUDIO-P.W.Board			R3443	06S65415Y30	RES,RK 272F 1/16 -CP
AUDIO-P.W.Board			R3444	06S65415Y33	RES,RK 472F 1/16 -CP
AUDIO-P.W.Board			R3445	06S15593Y66	RES,RK 512F 1/10 -CP
AUDIO-P.W.Board			R3461	06S65415Y29	RES,RK 222F 1/16 -CP
AUDIO-P.W.Board			R3462	06S65415Y18	RES,RK 271F 1/16 -CP
AUDIO-P.W.Board			R3463	06S65415Y33	RES,RK 472F 1/16 -CP
AUDIO-P.W.Board			R3464	06S15593Y67	RES,RK 562F 1/10 -CP
AUDIO-P.W.Board			R3465	06S15593Y93	RES,RK 683F 1/10 -CP
AUDIO-P.W.Board			R3471	06S65415Y29	RES,RK 222F 1/16 -CP
AUDIO-P.W.Board			R3472	06S65415Y21	RES,RK 471F 1/16 -CP
AUDIO-P.W.Board			R3473	06S65415Y33	RES,RK 472F 1/16 -CP
AUDIO-P.W.Board			R3474	06S15593Y71	RES,RK 822F 1/10 -CP
AUDIO-P.W.Board			R3475	06S15594Y19	RES,RK 754F 1/10 -CP
AUDIO-P.W.Board			R3480	06S15593Y67	RES,RK 562F 1/10 -CP
AUDIO-P.W.Board			R3482	06S65415Y38	RES,RK 123F 1/16 -CP
AUDIO-P.W.Board			R3483	06S65415Y30	RES,RK 272F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			R3484	06S65415Y33	RES,RK 472F 1/16 -CP
AUDIO-P.W.Board			R3485	06S15593Y93	RES,RK 683F 1/10 -CP
AUDIO-P.W.Board			R3492	06S35083Y64	RES,RK 3R3F 1/4 -CP
AUDIO-P.W.Board			R3493	06S45675W43	RES,RK JUMPER1/10-CP
AUDIO-P.W.Board			R3510	06S65415Y37	RES,RK 103F 1/16 -CP
AUDIO-P.W.Board			R3511	06S15593Y66	RES,RK 512F 1/10 -CP
AUDIO-P.W.Board			R3512	06S15594Y01	RES,RK 134F 1/10 -CP
AUDIO-P.W.Board			R3601	06S65415Y38	RES,RK 123F 1/16 -CP
AUDIO-P.W.Board			R3603	06S65415Y31	RES,RK 332F 1/16 -CP
AUDIO-P.W.Board			R3604	06S65415Y42	RES,RK 273F 1/16 -CP
AUDIO-P.W.Board			R3606	06S65415Y27	RES,RK 152F 1/16 -CP
AUDIO-P.W.Board			R3609	06S15615Y69	RES,RK 682J 1/16 -CP
AUDIO-P.W.Board			R3610	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R3611	06S65415Y38	RES,RK 123F 1/16 -CP
AUDIO-P.W.Board			R3613	06S65415Y31	RES,RK 332F 1/16 -CP
AUDIO-P.W.Board			R3614	06S65415Y42	RES,RK 273F 1/16 -CP
AUDIO-P.W.Board			R3616	06S65415Y29	RES,RK 222F 1/16 -CP
AUDIO-P.W.Board			R3619	06S15615Y79	RES,RK 183J 1/16 -CP
AUDIO-P.W.Board			R3620	06S15615Y25	RES,RK 101J 1/16 -CP
AUDIO-P.W.Board			R3630	06S70072F31	RES,CP .121-J-1/4-CP
AUDIO-P.W.Board			R3631	06S45674W45	RES,RK 331J 1/10 -CP
AUDIO-P.W.Board			SA2901	08-19391Z01	VST,IMSA-6803-01Y-CP
AUDIO-P.W.Board			SD2440	48-22179Z01	DIO,SHT DB3X313F0LCP
AUDIO-P.W.Board			SD2441	48T35138Y01	DIO,SHT RB160L-40-E1
AUDIO-P.W.Board			SD3601	48-19296Z01	DIO,SHT RB056L-40-E1

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board			SD3602	48-19296Z01	DIO,SHT RB056L-40-E1
AUDIO-P.W.Board			T3100	25-12466Z01	CHOKE,GLI-UB3442 -DB
AUDIO-P.W.Board			TH2000	48T75219Y02	TMT,NCP18WB473F1S-CP
AUDIO-P.W.Board			VT2901	24-29820Z01	COIL,RF FM M5-N/R-E5
AUDIO-P.W.Board			XL2000	91-16024Z01	XTL,AT-41CD2 3.98-E9
AUDIO-P.W.Board			XL2200	91-26661Z31	XTL,NX3225SAAG55.4CP
AUDIO-P.W.Board			XL2501	91-26661Z02	XTL,NX3225SAAG12.2CP
AUDIO-P.W.Board			XL2850	91-26198Z03	XTL,NX3215 32.7NS-E1
AUDIO-P.W.Board			XL3001	91-26661Z31	XTL,NX3225SAAG55.4CP
AUDIO-P.W.Board			ZD3100	48-23921Z01	DIO,ZEN ZSH5MAZ27-ED
AUDIO-P.W.Board			ZD3130	48-21149Z23	DIO,ZEN DZ2J056M0LCP
AUDIO-P.W.Board			ZD3150	48-21149Z23	DIO,ZEN DZ2J056M0LCP
AUDIO-P.W.Board			ZD3151	48-21149Z23	DIO,ZEN DZ2J056M0LCP
AUDIO-P.W.Board			ZD3152	48-21149Z23	DIO,ZEN DZ2J056M0LCP
AUDIO-P.W.Board			ZD3200	48-16145Z36	DIO,ZEN PZU9.1B1 -CP
AUDIO-P.W.Board			ZD3201	48-21149Z23	DIO,ZEN DZ2J056M0LCP
AUDIO-P.W.Board			ZD3202	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
I.MX-P.W.Board			ANT5501	09-07494Z01	U.FL-R-SMT-1(80)-E2
I.MX-P.W.Board			C4000	08S45231Y05	CAP,CER 2R0C-CK1H-CP
I.MX-P.W.Board			C4001	08S45231Y05	CAP,CER 2R0C-CK1H-CP
I.MX-P.W.Board			C4002	08S45231Y10	CAP,CER 7R0D-CH1H-CP
I.MX-P.W.Board			C4003	08S45231Y10	CAP,CER 7R0D-CH1H-CP
I.MX-P.W.Board			C4007	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4008	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4009	08S45232Y05	CAP,CER 102K-B1H -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C4010	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4014	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4015	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4016	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4017	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4018	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4024	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4025	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4026	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4027	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4028	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4029	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C4030	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C4031	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C4032	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C4033	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4034	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4035	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4036	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4037	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4038	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4039	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4040	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4041	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C4042	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C4043	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4044	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4045	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4046	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4047	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4048	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4049	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C4050	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4051	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board			C4052	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4053	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C4054	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4055	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4056	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4057	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4058	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4061	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C4063	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4064	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4065	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4066	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4067	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C4068	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4069	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4070	08-12461Z01	CAP,CER 104M-C80J-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C4071	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4072	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4073	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4074	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4075	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4076	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board			C4077	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C4078	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4079	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C4080	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4081	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C4082	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C4083	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C4200	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4201	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4202	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4203	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4204	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4205	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4206	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4207	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4208	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4209	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4210	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4211	08S45232Y05	CAP,CER 102K-B1H -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C4212	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4213	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4214	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4215	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4216	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4217	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4218	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4219	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4220	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4221	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4222	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4223	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4224	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4225	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4226	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4227	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4228	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4229	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4230	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4231	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4232	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4233	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4234	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4235	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4236	08-12461Z01	CAP,CER 104M-C80J-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C4237	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4238	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4239	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4240	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4241	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4242	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4243	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4244	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4245	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4246	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4247	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4248	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4249	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4250	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4251	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4252	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4253	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4254	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4255	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4256	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4257	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4258	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4259	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4260	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4261	08-12461Z01	CAP,CER 104M-C80J-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C4262	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4263	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4264	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4265	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board			C4266	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4267	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C4268	08-13830Z01	CAP,CER 476MX6S0G-CP
I.MX-P.W.Board			C4269	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4270	08-13830Z01	CAP,CER 476MX6S0G-CP
I.MX-P.W.Board			C4271	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4300	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C4301	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4302	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4400	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C4401	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C4402	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C4403	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4404	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board			C4500	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C4600	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C4601	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4602	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C4603	08S65668Y07	CAP,CER 103KX5R1H-CP
I.MX-P.W.Board			C4700	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5000	08S35374W12	CAP,CER 106K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			C5001	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5002	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5003	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5004	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5005	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5006	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5007	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5008	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5009	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5010	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5011	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5012	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5100	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5101	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5102	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5103	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5104	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5105	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5106	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5107	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5108	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5109	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5110	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5111	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5112	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C5113	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5114	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5115	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C5200	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5201	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5202	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5203	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5204	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5205	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5206	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5207	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5208	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5209	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5210	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5211	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5212	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5213	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5214	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5215	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5216	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5217	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5218	08S35374W10	CAP,CER 225K-B1A -CP
I.MX-P.W.Board			C5219	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5220	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5221	08S45232Y11	CAP,CER 103K-B1C -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			C5222	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5223	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5224	08-26091Z01	CAP,CER 102KX7R2J-CP
I.MX-P.W.Board			C5225	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C5226	08-26091Z01	CAP,CER 102KX7R2J-CP
I.MX-P.W.Board			C5227	08S45231Y15	CAP,CER 15RJ-CH1H-CP
I.MX-P.W.Board			C5228	08S45231Y15	CAP,CER 15RJ-CH1H-CP
I.MX-P.W.Board			C5300	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5301	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5302	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5303	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5304	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5305	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5306	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5307	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5308	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C5309	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5310	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C5311	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5312	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5313	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5314	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5315	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5316	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5317	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C5318	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5319	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5320	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5321	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5322	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5323	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5324	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5325	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5326	08S45231Y09	CAP,CER 6R0D-CH1H-CP
I.MX-P.W.Board			C5327	08S45231Y09	CAP,CER 6R0D-CH1H-CP
I.MX-P.W.Board			C5500	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5501	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5502	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5503	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5504	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5505	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5506	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5509	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5510	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5511	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5512	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board			C5513	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board			C5514	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5515	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5516	08S35374W12	CAP,CER 106K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			C5517	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5518	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board			C5519	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board			C5600	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board			C5601	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5602	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5603	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5604	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5605	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5606	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5607	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C5608	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5609	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5610	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board			C5611	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C5612	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5613	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5614	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board			C5615	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C5616	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5617	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5618	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board			C5619	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C5620	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5621	08S65670Y06	CAP,CER 226KX5R1A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C5622	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board			C5623	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5624	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board			C5625	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5626	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5627	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board			C5628	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5629	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5630	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board			C5631	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5632	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5633	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board			C5650	08S65671Y04	CAP,CER 106KX5R1H-CP
I.MX-P.W.Board			C5651	08S45232Y08	CAP,CER 332K-B1H -CP
I.MX-P.W.Board			C5652	08S45231Y33	CAP,CER 471J-CH1H-CP
I.MX-P.W.Board			C5653	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C5655	08-14627Z01	CAP,CER 107MX5R0J-CP
I.MX-P.W.Board			C5657	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C5659	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C5680	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C5700	08S45231Y05	CAP,CER 2R0C-CK1H-CP
I.MX-P.W.Board			C5701	08S45231Y05	CAP,CER 2R0C-CK1H-CP
I.MX-P.W.Board			C5702	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5703	08S65671Y04	CAP,CER 106KX5R1H-CP
I.MX-P.W.Board			C5704	08S65671Y04	CAP,CER 106KX5R1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C5705	08S65676Y09	CAP,CER 475KX7R1H-CP
I.MX-P.W.Board			C5706	08S35349Y21	CAP,CER 104K-B1H -CP
I.MX-P.W.Board			C5707	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board			C5708	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C5709	08S65676Y09	CAP,CER 475KX7R1H-CP
I.MX-P.W.Board			C5710	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board			C5711	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C5712	08S45231Y13	CAP,CER 10RD-CH1H-CP
I.MX-P.W.Board			C5713	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board			C5714	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C5715	08S45231Y11	CAP,CER 8R0D-CH1H-CP
I.MX-P.W.Board			C5716	08S45231Y11	CAP,CER 8R0D-CH1H-CP
I.MX-P.W.Board			C5800	08S65676Y09	CAP,CER 475KX7R1H-CP
I.MX-P.W.Board			C5801	08S35374W10	CAP,CER 225K-B1A -CP
I.MX-P.W.Board			C5802	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C5803	08S45676W73	CAP,CER.103K-B1H -CP
I.MX-P.W.Board			C5804	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board			C5806	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board			C5807	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C5808	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6000	08S65676Y10	CAP,CER 106KX7R1C-CP
I.MX-P.W.Board			C6001	08S45232Y08	CAP,CER 332K-B1H -CP
I.MX-P.W.Board			C6002	08S45232Y08	CAP,CER 332K-B1H -CP
I.MX-P.W.Board			C6003	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C6005	08-14627Z01	CAP,CER 107MX5R0J-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C6006	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6007	08-15113Z03	CAP,CER 475KX7R1C-CP
I.MX-P.W.Board			C6008	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6009	08S35374W10	CAP,CER 225K-B1A -CP
I.MX-P.W.Board			C6010	08-15113Z03	CAP,CER 475KX7R1C-CP
I.MX-P.W.Board			C6011	08S35374W10	CAP,CER 225K-B1A -CP
I.MX-P.W.Board			C6012	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6013	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6014	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C6015	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C6300	08S65668Y07	CAP,CER 103KX5R1H-CP
I.MX-P.W.Board			C6301	08S65668Y07	CAP,CER 103KX5R1H-CP
I.MX-P.W.Board			C6302	08S65668Y07	CAP,CER 103KX5R1H-CP
I.MX-P.W.Board			C6310	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6311	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6312	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6313	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6314	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6315	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6320	08S45231Y38	CAP,CER 102J-CH1H-CP
I.MX-P.W.Board			C6400	08S45676W83	CAP,CER 473K-B1C -CP
I.MX-P.W.Board			C6401	08S65670Y04	CAP,CER 475KX5R1E-CP
I.MX-P.W.Board			C6402	08S65670Y04	CAP,CER 475KX5R1E-CP
I.MX-P.W.Board			C6403	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C6404	08S45676W83	CAP,CER 473K-B1C -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C6405	08S65670Y04	CAP,CER 475KX5R1E-CP
I.MX-P.W.Board			C6406	08S65670Y04	CAP,CER 475KX5R1E-CP
I.MX-P.W.Board			C6407	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C6408	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board			C6409	08S45231Y31	CAP,CER 331J-CH1H-CP
I.MX-P.W.Board			C6410	08S45231Y31	CAP,CER 331J-CH1H-CP
I.MX-P.W.Board			C6411	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C6412	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C6413	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C6414	08S65676Y08	CAP,CER 106K-X7R1ACP
I.MX-P.W.Board			C6415	08S65676Y08	CAP,CER 106K-X7R1ACP
I.MX-P.W.Board			C6416	08S45676W73	CAP,CER.103K-B1H -CP
I.MX-P.W.Board			C6417	08S65676Y08	CAP,CER 106K-X7R1ACP
I.MX-P.W.Board			C6418	08S45231Y31	CAP,CER 331J-CH1H-CP
I.MX-P.W.Board			C6419	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C6420	08S65676Y08	CAP,CER 106K-X7R1ACP
I.MX-P.W.Board			C6421	08S65676Y08	CAP,CER 106K-X7R1ACP
I.MX-P.W.Board			C6422	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C6423	08-26091Z01	CAP,CER 102KX7R2J-CP
I.MX-P.W.Board			C6424	08S65669Y05	CAP,CER 106KX7R0J-CP
I.MX-P.W.Board			C6425	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C6426	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board			C6427	08S45231Y17	CAP,CER 22RJ-CH1H-CP
I.MX-P.W.Board			C6428	08S35350Y03	CAP,CER 224K-B1C -CP
I.MX-P.W.Board			C6429	08S45231Y17	CAP,CER 22RJ-CH1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			C6430	08S65669Y05	CAP,CER 106KX7R0J-CP
I.MX-P.W.Board			C6431	08S65676Y08	CAP,CER 106K-X7R1ACP
I.MX-P.W.Board			C6432	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			C6433	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board			CB4001	09-14451Z06	FFC,502790-3091 -ED
I.MX-P.W.Board			CB5100	09-25213Z01	WTB,TCX3400-011187-T
I.MX-P.W.Board			CB5200	09-25213Z01	WTB,TCX3400-011187-T
I.MX-P.W.Board			CB6100	09-19907Z03	BTB,IMSA9984B-100YEZ
I.MX-P.W.Board			CB6200	09-29915Z04	FFC,50FHH-SM1-GAN-EQ
I.MX-P.W.Board			CB6300	09-29652Z01	BTB,FX23-100P-0.5S-T
I.MX-P.W.Board			CB6400	09-25106Z05	WTB,S18B-PUDSS-1 -DB
I.MX-P.W.Board			D5101	48-08988Z01	VST,EZJZ0V800AA -CP
I.MX-P.W.Board			D5102	48-08988Z01	VST,EZJZ0V800AA -CP
I.MX-P.W.Board			D5104	48-08988Z01	VST,EZJZ0V800AA -CP
I.MX-P.W.Board			D5204	48-05164Z01	DIO,1SS352-TPH3 -CP
I.MX-P.W.Board			D5701	48-08988Z01	VST,EZJZ0V800AA -CP
I.MX-P.W.Board			D5702	48-08988Z01	VST,EZJZ0V800AA -CP
I.MX-P.W.Board			D6400	48-19711Z01	DIO,BAV99W -CP
I.MX-P.W.Board			D6401	48T75527Y01	DIO,1SR154-400 -E1
I.MX-P.W.Board			E4000	23-22657Z06	CAP,CX 221-0G -E2
I.MX-P.W.Board			E4001	23-22657Z06	CAP,CX 221-0G -E2
I.MX-P.W.Board			E5700	23S75244Y19	CAP,ELY 101-1C -E6
I.MX-P.W.Board			E5701	23-31100Z19	CAP,MAK 33R-1E -E6
I.MX-P.W.Board			E6310	23-31100Z19	CAP,MAK 33R-1E -E6
I.MX-P.W.Board			F6200	65-10745Z09	FUSE,TF16AT 2.00A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			IC4000	51-29541Z01	MCIMX6D6AVT08AD -BT
I.MX-P.W.Board			IC4200	51-27163Z02	H5TQ4G63CFR-RDC -BT
I.MX-P.W.Board			IC4201	51-27163Z02	H5TQ4G63CFR-RDC -BT
I.MX-P.W.Board			IC4202	51-27163Z02	H5TQ4G63CFR-RDC -BT
I.MX-P.W.Board			IC4203	51-27163Z02	H5TQ4G63CFR-RDC -BT
I.MX-P.W.Board			IC4300	83-31628Z07	V0.960_LIMO8US_nor
I.MX-P.W.Board			IC4300	51-27465Z01	S29GL256S90TFI010-ST
I.MX-P.W.Board			IC4400	83-31628Z16	V0.960_LIMO8US_eMMC
I.MX-P.W.Board			IC4400	51-29432Z01	H26M41103HPR -BT
I.MX-P.W.Board			IC4500	51-26850Z01	MFI337S3959 -CP
I.MX-P.W.Board			IC4600	51T15185Y03	TC7SH08FU,LJ -CP
I.MX-P.W.Board			IC4601	51T65003Y03	TC7SZ05FU,LJ -CP
I.MX-P.W.Board			IC4602	51T65003Y03	TC7SZ05FU,LJ -CP
I.MX-P.W.Board			IC4700	51T35220Y01	TC7WH126FU-TE12L-SE1
I.MX-P.W.Board			IC5000	51-19098Z01	BU16002KVT-E2 -QEA
I.MX-P.W.Board			IC5100	51-27798Z01	ADV7511WBSWZ-RL -QEA
I.MX-P.W.Board			IC5200	51-29819Z01	ADV7480WBBCZ -BT
I.MX-P.W.Board			IC5300	51-29818Z01	ML86V8201 -QT
I.MX-P.W.Board			IC5500	51-29718Z01	UGKZ4D6009A -NE9
I.MX-P.W.Board			IC5501	51-13971Z01	TC74VCX08FT-EL -SE5
I.MX-P.W.Board			IC5502	51-15608Z01	TC7WPN3125FK-TE85LCP
I.MX-P.W.Board			IC5503	51-15608Z01	TC7WPN3125FK-TE85LCP
I.MX-P.W.Board			IC5504	51-15608Z01	TC7WPN3125FK-TE85LCP
I.MX-P.W.Board			IC5600	51-29896Z01	LTC3676HUI#TRA1 -LE6
I.MX-P.W.Board			IC5650	51-28779Z02	BD90640EFJ-CE2 -SE2

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			IC5700	51-28538Z02	MAX16984RATI/V+ -LE2
I.MX-P.W.Board			IC5701	51-21632Z01	BD11600NUX-E2 -CE1
I.MX-P.W.Board			IC5800	51-28614Z01	BD00FC0EEFJ-ME2 -SE2
I.MX-P.W.Board			IC5801	51-28341Z01	S-1323B52-N4BB30 -CP
I.MX-P.W.Board			IC6000	51-28779Z01	BD90620EFJ-CE2 -SE2
I.MX-P.W.Board			IC6001	51-23593Z02	BD00IC0WEFJ-ME2 -SE2
I.MX-P.W.Board			IC6002	51-23593Z05	BD00IA5EEFJ-ME2 -SE2
I.MX-P.W.Board			IC6400	51-12745Z01	BH7073G-TR -CP
I.MX-P.W.Board			IC6401	51-12745Z01	BH7073G-TR -CP
I.MX-P.W.Board			IC6402	51T15192Y02	TC74VHC14FT,K-EL-SE5
I.MX-P.W.Board			IC6403	51T25183Y04	TC7SET08FU,LJ -CP
I.MX-P.W.Board			IC6404	51T15185Y03	TC7SH08FU,LJ -CP
I.MX-P.W.Board			IC6405	51-31236Z01	ML22331 -ST
I.MX-P.W.Board			L5100	24-22766Z02	IND,LBC3225 10RM -CP
I.MX-P.W.Board			L5101	24-22766Z02	IND,LBC3225 10RM -CP
I.MX-P.W.Board			L5102	24-22766Z02	IND,LBC3225 10RM -CP
I.MX-P.W.Board			L5103	24-22766Z02	IND,LBC3225 10RM -CP
I.MX-P.W.Board			L5502	24-22766Z01	IND,LBC3225 2R2M -CP
I.MX-P.W.Board			L5503	24-22766Z03	IND,LBC3225 1R0M -CP
I.MX-P.W.Board			L5504	24T25164Y09	IND,FSLM2520 R47J-CP
I.MX-P.W.Board			L5600	24-22372Z05	IND,NRS6045T 2R3N-E2
I.MX-P.W.Board			L5601	24-22372Z05	IND,NRS6045T 2R3N-E2
I.MX-P.W.Board			L5602	24-22372Z05	IND,NRS6045T 2R3N-E2
I.MX-P.W.Board			L5603	24-22372Z05	IND,NRS6045T 2R3N-E2
I.MX-P.W.Board			L5650	24-22372Z05	IND,NRS6045T 2R3N-E2

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			L5651	24-08610Z03	IND,DS106C2 10RM -EA
I.MX-P.W.Board			L5700	24-23871Z01	IND,NRS8040T 10RM-E6
I.MX-P.W.Board			L5701	24T95458W06	FBI,BLM31PG121SH1-CP
I.MX-P.W.Board			L5704	24T75143Y17	IND,HK1005 R022J -CP
I.MX-P.W.Board			L5705	24T75143Y17	IND,HK1005 R022J -CP
I.MX-P.W.Board			L6000	24-13301Z07	IND,DS75LC 10RM -E6
I.MX-P.W.Board			L6030	24-22766Z03	IND,LBC3225 1R0M -CP
I.MX-P.W.Board			L6400	24T65067Y02	FBI,MMZ1005S601AT-CP
I.MX-P.W.Board			L6401	24T65067Y02	FBI,MMZ1005S601AT-CP
I.MX-P.W.Board			PS6400	48-27319Z01	POLY,SW1812L150/24E2
I.MX-P.W.Board			Q4000	48-17548Z01	TR,DSA500100L -CP
I.MX-P.W.Board			Q4001	48-13000Z05	TR,LTC124EUBFS8-TLCP
I.MX-P.W.Board			Q5200	48T25737Y02	TR,UMD3N-TR -CP
I.MX-P.W.Board			Q5800	48T25737Y02	TR,UMD3N-TR -CP
I.MX-P.W.Board			Q6400	48T63417F03	TR,C2412K-BR-96 -CP
I.MX-P.W.Board			R4000	06S15616Y36	RES,RK 225J 1/16 -CP
I.MX-P.W.Board			R4001	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4003	06S15616Y22	RES,RK 105J 1/16 -CP
I.MX-P.W.Board			R4005	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R4006	06S15615Y49	RES,RK 102J 1/16 -CP
I.MX-P.W.Board			R4007	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R4008	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R4009	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R4010	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R4011	06S15616Y23	RES,RK JUMPER1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R4012	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4013	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4014	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4015	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4016	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4017	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R4018	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R4020	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4021	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4022	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4023	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4024	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4025	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4026	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4027	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4028	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4029	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4030	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4031	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4033	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R4034	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4035	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4036	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4037	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4038	06S15616Y23	RES,RK JUMPER1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			R4044	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4045	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4046	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4047	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4048	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4049	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4050	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R4051	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R4052	06S15615Y21	RES,RK 68RJ 1/16 -CP
I.MX-P.W.Board			R4053	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4054	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4055	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4056	06S65415Y85	RES,RK 241F 1/16 -CP
I.MX-P.W.Board			R4058	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4059	06-02713Z04	RES,RK 102D 1/16 -CP
I.MX-P.W.Board			R4060	06-02713Z04	RES,RK 102D 1/16 -CP
I.MX-P.W.Board			R4061	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4062	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4064	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R4068	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4069	06-25919Z07	RES,RK 243F 1/16 -CP
I.MX-P.W.Board			R4070	06S65415Y55	RES,RK 334F 1/16 -CP
I.MX-P.W.Board			R4071	06S65415Y34	RES,RK 562F 1/16 -CP
I.MX-P.W.Board			R4073	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R4074	06S65415Y63	RES,RK 6041F 1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R4076	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4077	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4079	06S65415Y48	RES,RK 823F 1/16 -CP
I.MX-P.W.Board			R4080	06S65415Y99	RES,RK 512F 1/16 -CP
I.MX-P.W.Board			R4200	06S65415Y84	RES,RK 201F 1/16 -CP
I.MX-P.W.Board			R4201	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4202	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4203	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4204	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4205	06S65415Y85	RES,RK 241F 1/16 -CP
I.MX-P.W.Board			R4206	06S65415Y84	RES,RK 201F 1/16 -CP
I.MX-P.W.Board			R4207	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4208	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4209	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4210	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4211	06S65415Y85	RES,RK 241F 1/16 -CP
I.MX-P.W.Board			R4212	06S65415Y84	RES,RK 201F 1/16 -CP
I.MX-P.W.Board			R4213	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4214	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4215	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4216	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4217	06S65415Y85	RES,RK 241F 1/16 -CP
I.MX-P.W.Board			R4218	06S65415Y84	RES,RK 201F 1/16 -CP
I.MX-P.W.Board			R4219	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4220	06S65415Y25	RES,RK 102F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R4221	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4222	06S65415Y25	RES,RK 102F 1/16 -CP
I.MX-P.W.Board			R4223	06S65415Y85	RES,RK 241F 1/16 -CP
I.MX-P.W.Board			R4300	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4303	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4304	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4305	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4306	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4307	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4308	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4309	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4310	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4311	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4312	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4314	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4315	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4316	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4317	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4318	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4319	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4320	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4321	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4322	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4323	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4324	06S15615Y73	RES,RK 103J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			R4325	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4326	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4327	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4328	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4332	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4336	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4337	06S45674W81	RES,RK 103J 1/10 -CP
I.MX-P.W.Board			R4338	06S45674W81	RES,RK 103J 1/10 -CP
I.MX-P.W.Board			R4339	06S45674W81	RES,RK 103J 1/10 -CP
I.MX-P.W.Board			R4340	06S45674W81	RES,RK 103J 1/10 -CP
I.MX-P.W.Board			R4341	06S45674W81	RES,RK 103J 1/10 -CP
I.MX-P.W.Board			R4400	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4401	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4402	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4403	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4404	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4405	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4406	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4407	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4408	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4409	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4410	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4411	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R4500	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R4501	06S15615Y73	RES,RK 103J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			R4601	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R4602	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4603	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4604	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R4700	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R4701	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5000	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5001	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5002	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5003	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5004	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5005	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5006	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5007	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5008	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5009	06S15615Y21	RES,RK 68RJ 1/16 -CP
I.MX-P.W.Board			R5100	06S15615Y81	RES,RK 223J 1/16 -CP
I.MX-P.W.Board			R5101	06S15615Y81	RES,RK 223J 1/16 -CP
I.MX-P.W.Board			R5102	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5103	06S15615Y81	RES,RK 223J 1/16 -CP
I.MX-P.W.Board			R5104	06S65415Y87	RES,RK 431F 1/16 -CP
I.MX-P.W.Board			R5105	06S65415Y87	RES,RK 431F 1/16 -CP
I.MX-P.W.Board			R5106	06S65415Y06	RES,RK 27RF 1/16 -CP
I.MX-P.W.Board			R5107	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5108	06S70072F59	RES,CP .182-J-1/4-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R5109	06S70072F59	RES,CP .182-J-1/4-CP
I.MX-P.W.Board			R5110	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5111	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5112	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R5115	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5116	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board			R5117	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board			R5119	06S70072F77	RES,CP .103-J-1/4-CP
I.MX-P.W.Board			R5120	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board			R5122	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5200	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5201	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5202	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5203	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5204	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5205	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5206	06S70072F53	RES,CP .102-J-1/4-CP
I.MX-P.W.Board			R5207	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board			R5208	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board			R5209	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board			R5210	06S15615Y89	RES,RK 473J 1/16 -CP
I.MX-P.W.Board			R5212	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5213	06S65415Y41	RES,RK 223F 1/16 -CP
I.MX-P.W.Board			R5214	06S15615Y83	RES,RK 273J 1/16 -CP
I.MX-P.W.Board			R5216	06S15615Y41	RES,RK 471J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			R5217	06S15615Y97	RES,RK 104J 1/16 -CP
I.MX-P.W.Board			R5218	06S15615Y89	RES,RK 473J 1/16 -CP
I.MX-P.W.Board			R5219	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5220	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5221	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5222	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5223	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5224	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5225	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5226	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5227	06S65415Y33	RES,RK 472F 1/16 -CP
I.MX-P.W.Board			R5228	06S65415Y33	RES,RK 472F 1/16 -CP
I.MX-P.W.Board			R5230	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5232	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5233	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5234	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5235	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5236	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5300	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5301	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5302	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5303	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5304	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5305	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5306	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R5308	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5309	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5312	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5313	06S15616Y22	RES,RK 105J 1/16 -CP
I.MX-P.W.Board			R5314	06S15615Y53	RES,RK 152J 1/16 -CP
I.MX-P.W.Board			R5315	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board			R5500	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5501	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5502	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5503	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5504	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5505	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5506	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5507	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5508	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5509	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5510	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5511	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5512	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5513	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5514	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5520	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5521	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board			R5522	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5523	06S15615Y09	RES,RK 22RJ 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R5524	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5525	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5526	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R5527	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5528	06S15615Y65	RES,RK 472J 1/16 -CP
I.MX-P.W.Board			R5600	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5601	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5602	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5603	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5604	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5605	06S65415Y47	RES,RK 683F 1/16 -CP
I.MX-P.W.Board			R5606	06S65415Y29	RES,RK 222F 1/16 -CP
I.MX-P.W.Board			R5607	06S65415Y47	RES,RK 683F 1/16 -CP
I.MX-P.W.Board			R5608	06S65415Y33	RES,RK 472F 1/16 -CP
I.MX-P.W.Board			R5609	06S65415Y99	RES,RK 512F 1/16 -CP
I.MX-P.W.Board			R5610	06-25919Z16	RES,RK 134F 1/16 -CP
I.MX-P.W.Board			R5611	06S65415Y47	RES,RK 683F 1/16 -CP
I.MX-P.W.Board			R5612	06S65415Y37	RES,RK 103F 1/16 -CP
I.MX-P.W.Board			R5613	06S65415Y41	RES,RK 223F 1/16 -CP
I.MX-P.W.Board			R5614	06S15615Y41	RES,RK 471J 1/16 -CP
I.MX-P.W.Board			R5615	06S65415Y52	RES,RK 184F 1/16 -CP
I.MX-P.W.Board			R5616	06S65415Y34	RES,RK 562F 1/16 -CP
I.MX-P.W.Board			R5617	06S65415Y47	RES,RK 683F 1/16 -CP
I.MX-P.W.Board			R5618	06S65415Y29	RES,RK 222F 1/16 -CP
I.MX-P.W.Board			R5619	06S65415Y47	RES,RK 683F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R5620	06S65415Y33	RES,RK 472F 1/16 -CP
I.MX-P.W.Board			R5621	06-25919Z22	RES,RK 434F 1/16 -CP
I.MX-P.W.Board			R5622	06-25919Z13	RES,RK 753F 1/16 -CP
I.MX-P.W.Board			R5623	06S65415Y47	RES,RK 683F 1/16 -CP
I.MX-P.W.Board			R5624	06S65415Y33	RES,RK 472F 1/16 -CP
I.MX-P.W.Board			R5625	06S65415Y47	RES,RK 683F 1/16 -CP
I.MX-P.W.Board			R5627	06-25919Z17	RES,RK 164F 1/16 -CP
I.MX-P.W.Board			R5628	06S65415Y99	RES,RK 512F 1/16 -CP
I.MX-P.W.Board			R5629	06S65415Y41	RES,RK 223F 1/16 -CP
I.MX-P.W.Board			R5630	06S65415Y37	RES,RK 103F 1/16 -CP
I.MX-P.W.Board			R5631	06S65415Y37	RES,RK 103F 1/16 -CP
I.MX-P.W.Board			R5632	06S15615Y41	RES,RK 471J 1/16 -CP
I.MX-P.W.Board			R5633	06S65415Y47	RES,RK 683F 1/16 -CP
I.MX-P.W.Board			R5634	06S65415Y30	RES,RK 272F 1/16 -CP
I.MX-P.W.Board			R5635	06S65415Y41	RES,RK 223F 1/16 -CP
I.MX-P.W.Board			R5636	06S15615Y41	RES,RK 471J 1/16 -CP
I.MX-P.W.Board			R5637	06-25919Z12	RES,RK 623F 1/16 -CP
I.MX-P.W.Board			R5638	06S65415Y66	RES,RK 622F 1/16 -CP
I.MX-P.W.Board			R5639	06S65415Y47	RES,RK 683F 1/16 -CP
I.MX-P.W.Board			R5640	06S15615Y41	RES,RK 471J 1/16 -CP
I.MX-P.W.Board			R5641	06S65415Y35	RES,RK 682F 1/16 -CP
I.MX-P.W.Board			R5642	06S65415Y44	RES,RK 393F 1/16 -CP
I.MX-P.W.Board			R5643	06-25919Z18	RES,RK 204F 1/16 -CP
I.MX-P.W.Board			R5644	06-25919Z13	RES,RK 753F 1/16 -CP
I.MX-P.W.Board			R5645	06S15615Y41	RES,RK 471J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R5646	06S15615Y41	RES,RK 471J 1/16 -CP
I.MX-P.W.Board			R5647	06S15615Y41	RES,RK 471J 1/16 -CP
I.MX-P.W.Board			R5648	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5650	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R5651	06S15615Y67	RES,RK 562J 1/16 -CP
I.MX-P.W.Board			R5652	06S65415Y31	RES,RK 332F 1/16 -CP
I.MX-P.W.Board			R5653	06S65415Y26	RES,RK 122F 1/16 -CP
I.MX-P.W.Board			R5654	06S65415Y38	RES,RK 123F 1/16 -CP
I.MX-P.W.Board			R5655	06S65415Y42	RES,RK 273F 1/16 -CP
I.MX-P.W.Board			R5657	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5658	06S65415Y56	RES,RK 394F 1/16 -CP
I.MX-P.W.Board			R5659	06S65415Y34	RES,RK 562F 1/16 -CP
I.MX-P.W.Board			R5700	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5704	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5706	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5707	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5708	06S65415Y46	RES,RK 563F 1/16 -CP
I.MX-P.W.Board			R5710	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R5713	06-12176Z01	RES,RK R10F 1/5 -CP
I.MX-P.W.Board			R5714	06-12176Z01	RES,RK R10F 1/5 -CP
I.MX-P.W.Board			R5715	06S65415Y30	RES,RK 272F 1/16 -CP
I.MX-P.W.Board			R5716	06S65415Y17	RES,RK 221F 1/16 -CP
I.MX-P.W.Board			R5717	06S65415Y32	RES,RK 392F 1/16 -CP
I.MX-P.W.Board			R5718	06S65415Y17	RES,RK 221F 1/16 -CP
I.MX-P.W.Board			R5724	06S15615Y73	RES,RK 103J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R5800	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R5801	06S65415Y43	RES,RK 333F 1/16 -CP
I.MX-P.W.Board			R5802	06S65415Y39	RES,RK 153F 1/16 -CP
I.MX-P.W.Board			R5803	06S65415Y35	RES,RK 682F 1/16 -CP
I.MX-P.W.Board			R5804	06S15594Y12	RES,RK 394F 1/10 -CP
I.MX-P.W.Board			R5805	06S15593Y92	RES,RK 623F 1/10 -CP
I.MX-P.W.Board			R5807	06S45674W81	RES,RK 103J 1/10 -CP
I.MX-P.W.Board			R5808	06S70072F77	RES,CP .103-J-1/4-CP
I.MX-P.W.Board			R5810	06S15593Y67	RES,RK 562F 1/10 -CP
I.MX-P.W.Board			R5811	06S15593Y94	RES,RK 753F 1/10 -CP
I.MX-P.W.Board			R6001	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R6002	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R6003	06S65415Y32	RES,RK 392F 1/16 -CP
I.MX-P.W.Board			R6004	06S65415Y20	RES,RK 391F 1/16 -CP
I.MX-P.W.Board			R6005	06S65415Y29	RES,RK 222F 1/16 -CP
I.MX-P.W.Board			R6006	06S65415Y42	RES,RK 273F 1/16 -CP
I.MX-P.W.Board			R6009	06-25919Z13	RES,RK 753F 1/16 -CP
I.MX-P.W.Board			R6010	06S65415Y58	RES,RK 564F 1/16 -CP
I.MX-P.W.Board			R6012	06S65415Y38	RES,RK 123F 1/16 -CP
I.MX-P.W.Board			R6013	06S65415Y30	RES,RK 272F 1/16 -CP
I.MX-P.W.Board			R6014	06S65415Y33	RES,RK 472F 1/16 -CP
I.MX-P.W.Board			R6015	06S15593Y93	RES,RK 683F 1/10 -CP
I.MX-P.W.Board			R6016	06S15594Y07	RES,RK 244F 1/10 -CP
I.MX-P.W.Board			R6019	06S65415Y30	RES,RK 272F 1/16 -CP
I.MX-P.W.Board			R6020	06S65415Y29	RES,RK 222F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			R6021	06S65415Y32	RES,RK 392F 1/16 -CP
I.MX-P.W.Board			R6022	06S15593Y92	RES,RK 623F 1/10 -CP
I.MX-P.W.Board			R6023	06S15593Y67	RES,RK 562F 1/10 -CP
I.MX-P.W.Board			R6030	06S45674W45	RES,RK 331J 1/10 -CP
I.MX-P.W.Board			R6102	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R6103	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R6104	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R6106	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board			R6107	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board			R6108	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board			R6109	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board			R6110	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board			R6113	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6114	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6115	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R6119	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6120	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6121	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6122	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6123	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board			R6124	06S15615Y65	RES,RK 472J 1/16 -CP
I.MX-P.W.Board			R6200	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6201	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6202	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6203	06S15616Y23	RES,RK JUMPER1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			R6204	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6205	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6206	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6207	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6208	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6209	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6222	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R6223	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R6303	06S15615Y65	RES,RK 472J 1/16 -CP
I.MX-P.W.Board			R6304	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R6305	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R6307	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6309	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R6401	06S70072F41	RES,CP .331-J-1/4-CP
I.MX-P.W.Board			R6402	06S35083Y86	RES,RK 75RF 1/4 -CP
I.MX-P.W.Board			R6403	06S45674W57	RES,RK 102J 1/10 -CP
I.MX-P.W.Board			R6404	06S45674W57	RES,RK 102J 1/10 -CP
I.MX-P.W.Board			R6406	06S70072F41	RES,CP .331-J-1/4-CP
I.MX-P.W.Board			R6407	06S35083Y86	RES,RK 75RF 1/4 -CP
I.MX-P.W.Board			R6408	06S45674W57	RES,RK 102J 1/10 -CP
I.MX-P.W.Board			R6409	06S45674W57	RES,RK 102J 1/10 -CP
I.MX-P.W.Board			R6410	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R6411	06S45674W81	RES,RK 103J 1/10 -CP
I.MX-P.W.Board			R6412	06S45674W73	RES,RK 472J 1/10 -CP
I.MX-P.W.Board			R6413	06S45674W93	RES,RK 333J 1/10 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			R6414	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board			R6415	06S15615Y81	RES,RK 223J 1/16 -CP
I.MX-P.W.Board			R6416	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R6418	06S45674W33	RES,RK 101J 1/10 -CP
I.MX-P.W.Board			R6419	06S70072F69	RES,CP .472-J-1/4-CP
I.MX-P.W.Board			R6420	06S45674W57	RES,RK 102J 1/10 -CP
I.MX-P.W.Board			R6421	06S70072F53	RES,CP .102-J-1/4-CP
I.MX-P.W.Board			R6422	06S70072F53	RES,CP .102-J-1/4-CP
I.MX-P.W.Board			R6423	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board			R6424	06S70072F53	RES,CP .102-J-1/4-CP
I.MX-P.W.Board			R6425	06S70072F53	RES,CP .102-J-1/4-CP
I.MX-P.W.Board			R6426	06S70072F53	RES,CP .102-J-1/4-CP
I.MX-P.W.Board			R6427	06S70072F53	RES,CP .102-J-1/4-CP
I.MX-P.W.Board			R6428	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board			R6431	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board			R6432	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R6433	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board			R6434	06S15615Y77	RES,RK 153J 1/16 -CP
I.MX-P.W.Board			R6439	06S15615Y61	RES,RK 332J 1/16 -CP
I.MX-P.W.Board			RA4000	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA4001	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA4002	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA4003	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA4004	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA4005	06S15771Y13	RES,ARYEXB28V101J-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board			RA4006	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA4007	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA4008	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA4009	06S15771Y13	RES,ARYEXB28V101J-CP
I.MX-P.W.Board			RA5300	06S15771Y07	RES,ARYEXB28V33RJ-CP
I.MX-P.W.Board			RA5301	06S15771Y07	RES,ARYEXB28V33RJ-CP
I.MX-P.W.Board			RA6100	06S15771Y07	RES,ARYEXB28V33RJ-CP
I.MX-P.W.Board			RA6101	06S15771Y07	RES,ARYEXB28V33RJ-CP
I.MX-P.W.Board			RA6102	06S15771Y07	RES,ARYEXB28V33RJ-CP
I.MX-P.W.Board			RA6103	06S15771Y07	RES,ARYEXB28V33RJ-CP
I.MX-P.W.Board			SD5650	48-19296Z01	DIO,SHT RB056L-40-E1
I.MX-P.W.Board			SD5700	48-19296Z01	DIO,SHT RB056L-40-E1
I.MX-P.W.Board			SD5801	48-06526Z01	DIO,SHT RSX051VA30CP
I.MX-P.W.Board			SD6000	48-19296Z01	DIO,SHT RB056L-40-E1
I.MX-P.W.Board			SK5700	09-31283Z01	SKT,UBAL-4R-D14-4SDB
I.MX-P.W.Board			TML5400	29-22483Z02	OG-453065 -E5
I.MX-P.W.Board			TML6300	29-22483Z02	OG-453065 -E5
I.MX-P.W.Board			XL4000	91-26661Z36	XTL,NX3225SAAG24.0CP
I.MX-P.W.Board			XL4001	91-26198Z03	XTL,NX3215 32.7NS-E1
I.MX-P.W.Board			XL5200	91-26661Z32	XTL,NX3225SAAG28.6CP
I.MX-P.W.Board			XL5300	91-26661Z24	XTL,NX3225SAAG25.0CP
I.MX-P.W.Board			XL6401	91-16024Z01	XTL,AT-41CD2 3.98-E9
I.MX-P.W.Board			ZD5100	48-28494Z01	DIO,ZEN ECMF04-4H-CP
I.MX-P.W.Board			ZD5101	48-28494Z01	DIO,ZEN ECMF04-4H-CP
I.MX-P.W.Board			ZD5200	48-28494Z01	DIO,ZEN ECMF04-4H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

I.MX-P.W.Board			ZD5201	48-28494Z01	DIO,ZEN ECMF04-4H-CP
I.MX-P.W.Board			ZD5202	48-16145Z20	DIO,ZEN PZU5.1B3 -CP
I.MX-P.W.Board			ZD5203	48-25907Z01	DIO,ZEN PESD5V0F1-CP
I.MX-P.W.Board			ZD5204	48-25907Z01	DIO,ZEN PESD5V0F1-CP
I.MX-P.W.Board			ZD5205	48-25907Z01	DIO,ZEN PESD5V0F1-CP
I.MX-P.W.Board			ZD5206	48-25907Z01	DIO,ZEN PESD5V0F1-CP
I.MX-P.W.Board			ZD6402	48-16145Z22	DIO,ZEN PZU5.6B2 -CP
I.MX-P.W.Board			ZD6403	48-16145Z22	DIO,ZEN PZU5.6B2 -CP
DISPLAY-P.W.Board			C7000	08S45232Y02	CAP,CER 331K-B1H -CP
DISPLAY-P.W.Board			C7001	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7003	08S35350Y04	CAP,CER 105K-B1C -CP
DISPLAY-P.W.Board			C7004	08S45232Y05	CAP,CER 102K-B1H -CP
DISPLAY-P.W.Board			C7005	08S65670Y08	CAP,CER 225KX5R1H-CP
DISPLAY-P.W.Board			C7006	08S65670Y07	CAP,CER 105KX5R1H-CP
DISPLAY-P.W.Board			C7009	08S45232Y07	CAP,CER 222K-B1H -CP
DISPLAY-P.W.Board			C7010	08S45232Y07	CAP,CER 222K-B1H -CP
DISPLAY-P.W.Board			C7011	08S45232Y07	CAP,CER 222K-B1H -CP
DISPLAY-P.W.Board			C7012	08S45231Y38	CAP,CER 102J-CH1H-CP
DISPLAY-P.W.Board			C7013	08S65676Y09	CAP,CER 475KX7R1H-CP
DISPLAY-P.W.Board			C7014	08S65670Y07	CAP,CER 105KX5R1H-CP
DISPLAY-P.W.Board			C7015	08S65670Y07	CAP,CER 105KX5R1H-CP
DISPLAY-P.W.Board			C7016	08S45232Y07	CAP,CER 222K-B1H -CP
DISPLAY-P.W.Board			C7017	08S45232Y13	CAP,CER 223K-B1C -CP
DISPLAY-P.W.Board			C7018	08S65670Y08	CAP,CER 225KX5R1H-CP
DISPLAY-P.W.Board			C7019	08S65669Y03	CAP,CER 224KX7R1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			C7020	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7021	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7022	08S65670Y01	CAP,CER 106KX5R1C-CP
DISPLAY-P.W.Board			C7023	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7024	08S45676W73	CAP,CER.103K-B1H -CP
DISPLAY-P.W.Board			C7025	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7026	08S65677Y06	CAP,CER 226MX7R1C-CP
DISPLAY-P.W.Board			C7027	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7028	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7029	08S65670Y01	CAP,CER 106KX5R1C-CP
DISPLAY-P.W.Board			C7030	08S65676Y09	CAP,CER 475KX7R1H-CP
DISPLAY-P.W.Board			C7031	08S45231Y24	CAP,CER 82RJ-CH1H-CP
DISPLAY-P.W.Board			C7032	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7033	08S45231Y32	CAP,CER 391J-CH1H-CP
DISPLAY-P.W.Board			C7034	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7035	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7036	08S35349Y21	CAP,CER 104K-B1H -CP
DISPLAY-P.W.Board			C7037	08S45676W83	CAP,CER 473K-B1C -CP
DISPLAY-P.W.Board			C7038	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7040	08S65670Y07	CAP,CER 105KX5R1H-CP
DISPLAY-P.W.Board			C7041	08S65670Y07	CAP,CER 105KX5R1H-CP
DISPLAY-P.W.Board			C7042	08S65670Y07	CAP,CER 105KX5R1H-CP
DISPLAY-P.W.Board			C7043	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7044	08S65670Y01	CAP,CER 106KX5R1C-CP
DISPLAY-P.W.Board			C7046	08S65669Y03	CAP,CER 224KX7R1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			C7047	08S65670Y07	CAP,CER 105KX5R1H-CP
DISPLAY-P.W.Board			C7048	08S65670Y07	CAP,CER 105KX5R1H-CP
DISPLAY-P.W.Board			C7049	08S65670Y06	CAP,CER 226KX5R1A-CP
DISPLAY-P.W.Board			C7050	08S45232Y08	CAP,CER 332K-B1H -CP
DISPLAY-P.W.Board			C7051	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7052	08S45232Y18	CAP,CER 392K-B1H -CP
DISPLAY-P.W.Board			C7053	08S45231Y25	CAP,CER 101J-CH1H-CP
DISPLAY-P.W.Board			C7055	08S65676Y09	CAP,CER 475KX7R1H-CP
DISPLAY-P.W.Board			C7056	08S65670Y06	CAP,CER 226KX5R1A-CP
DISPLAY-P.W.Board			C7057	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7058	08-15113Z03	CAP,CER 475KX7R1C-CP
DISPLAY-P.W.Board			C7060	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7061	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7062	08-15113Z03	CAP,CER 475KX7R1C-CP
DISPLAY-P.W.Board			C7064	08S35374W10	CAP,CER 225K-B1A -CP
DISPLAY-P.W.Board			C7065	08S35374W10	CAP,CER 225K-B1A -CP
DISPLAY-P.W.Board			C7066	08S65676Y03	CAP,CER 225KX7R1C-CP
DISPLAY-P.W.Board			C7069	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7070	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7071	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7072	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7073	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7074	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7075	08S65670Y01	CAP,CER 106KX5R1C-CP
DISPLAY-P.W.Board			C7076	08S45232Y07	CAP,CER 222K-B1H -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			C7077	08S65670Y01	CAP,CER 106KX5R1C-CP
DISPLAY-P.W.Board			C7078	08S65676Y09	CAP,CER 475KX7R1H-CP
DISPLAY-P.W.Board			C7079	08S65671Y04	CAP,CER 106KX5R1H-CP
DISPLAY-P.W.Board			C7201	08-15113Z01	CAP,CER 225KX7R1C-CP
DISPLAY-P.W.Board			C7203	08S45232Y13	CAP,CER 223K-B1C -CP
DISPLAY-P.W.Board			C7204	08S45231Y13	CAP,CER 10RD-CH1H-CP
DISPLAY-P.W.Board			C7205	08S45231Y25	CAP,CER 101J-CH1H-CP
DISPLAY-P.W.Board			C7206	08S45232Y21	CAP,CER 104K-B1A-CP
DISPLAY-P.W.Board			C7207	08S35350Y04	CAP,CER 105K-B1C -CP
DISPLAY-P.W.Board			C7208	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7212	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7213	08S35350Y04	CAP,CER 105K-B1C -CP
DISPLAY-P.W.Board			C7215	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7221	08S65671Y04	CAP,CER 106KX5R1H-CP
DISPLAY-P.W.Board			C7222	08S65671Y04	CAP,CER 106KX5R1H-CP
DISPLAY-P.W.Board			C7403	08S65668Y05	CAP,CER 224KX5R1A-CP
DISPLAY-P.W.Board			C7404	08S35374W12	CAP,CER 106K-B0J -CP
DISPLAY-P.W.Board			C7405	08S65668Y05	CAP,CER 224KX5R1A-CP
DISPLAY-P.W.Board			C7406	08S35374W12	CAP,CER 106K-B0J -CP
DISPLAY-P.W.Board			C7407	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7408	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7409	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7410	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7411	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7412	08S65668Y05	CAP,CER 224KX5R1A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			C7413	08S65668Y05	CAP,CER 224KX5R1A-CP
DISPLAY-P.W.Board			C7418	08S45231Y11	CAP,CER 8R0D-CH1H-CP
DISPLAY-P.W.Board			C7419	08S45231Y11	CAP,CER 8R0D-CH1H-CP
DISPLAY-P.W.Board			C7420	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7421	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7422	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7423	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7424	08S45232Y17	CAP,CER 104K-B0J -CP
DISPLAY-P.W.Board			C7427	08S45231Y25	CAP,CER 101J-CH1H-CP
DISPLAY-P.W.Board			C7434	08S35374W12	CAP,CER 106K-B0J -CP
DISPLAY-P.W.Board			C7435	08S35374W12	CAP,CER 106K-B0J -CP
DISPLAY-P.W.Board			C7490	08S65668Y05	CAP,CER 224KX5R1A-CP
DISPLAY-P.W.Board			C7500	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7501	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7502	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7503	08S65669Y03	CAP,CER 224KX7R1H-CP
DISPLAY-P.W.Board			C7505	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7506	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7507	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7508	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7509	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7510	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7511	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7512	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7513	08S45676W85	CAP,CER 104K-B1C -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			C7514	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7515	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7516	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7517	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7518	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7519	08S45231Y38	CAP,CER 102J-CH1H-CP
DISPLAY-P.W.Board			C7520	08S45231Y38	CAP,CER 102J-CH1H-CP
DISPLAY-P.W.Board			C7521	08S45232Y05	CAP,CER 102K-B1H -CP
DISPLAY-P.W.Board			C7522	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7523	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7524	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7525	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7526	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7527	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7528	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7529	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7530	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7531	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7532	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7533	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7534	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7535	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7536	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7537	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7538	08S45231Y21	CAP,CER 47RJ-CH1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			C7539	08S45231Y21	CAP,CER 47RJ-CH1H-CP
DISPLAY-P.W.Board			C7601	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7602	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7603	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7604	08S35374W12	CAP,CER 106K-B0J -CP
DISPLAY-P.W.Board			C7605	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7606	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7607	08S65667Y05	CAP,CER 105KX5R1A-CP
DISPLAY-P.W.Board			C7608	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7609	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7610	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7611	08S45676W85	CAP,CER 104K-B1C -CP
DISPLAY-P.W.Board			C7612	08S45231Y20	CAP,CER 39RJ-CH1H-CP
DISPLAY-P.W.Board			C7613	08S45231Y20	CAP,CER 39RJ-CH1H-CP
DISPLAY-P.W.Board			C7614	08S45231Y20	CAP,CER 39RJ-CH1H-CP
DISPLAY-P.W.Board			C7615	08S45231Y20	CAP,CER 39RJ-CH1H-CP
DISPLAY-P.W.Board			C7616	08S45232Y11	CAP,CER 103K-B1C -CP
DISPLAY-P.W.Board			C7617	08S65667Y05	CAP,CER 105KX5R1A-CP
DISPLAY-P.W.Board			C7618	08S65667Y05	CAP,CER 105KX5R1A-CP
DISPLAY-P.W.Board			CB7000	09-05352Z05	FFC,52271-0869 -E9
DISPLAY-P.W.Board			CB7200	09-29915Z03	FFC,40FHH-SM1-GAN-EQ
DISPLAY-P.W.Board			CB7201	09-23546Z02	FFC,FH52-50S-0.5SHEQ
DISPLAY-P.W.Board			CB7500	09-23546Z07	FFC,FH52-60S-0.5SHEZ
DISPLAY-P.W.Board			CB7601	09-29915Z05	FFC,60FHH-SM1-GAN-EZ
DISPLAY-P.W.Board			CB7602	09-05384Z06	FFC,52745-1097 -E9

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			D7000	48-19711Z01	DIO,BAV99W -CP
DISPLAY-P.W.Board			E7000	23-31100Z18	CAP,MAK 22R-1E -E6
DISPLAY-P.W.Board			E7001	23-31100Z19	CAP,MAK 33R-1E -E6
DISPLAY-P.W.Board			E7002	23-31100Z19	CAP,MAK 33R-1E -E6
DISPLAY-P.W.Board			E7003	23T75543Y07	CAP,MVA 47R-1CE55-E3
DISPLAY-P.W.Board			E7004	23-31100Z19	CAP,MAK 33R-1E -E6
DISPLAY-P.W.Board			E7006	23T75543Y13	CAP,MVA 22R-1EE55-E3
DISPLAY-P.W.Board			E7009	23-31100Z19	CAP,MAK 33R-1E -E6
DISPLAY-P.W.Board			E7011	23T75543Y08	CAP,MVA 101-1CF55-E6
DISPLAY-P.W.Board			E7013	23-31100Z19	CAP,MAK 33R-1E -E6
DISPLAY-P.W.Board			E7200	23-02558Z03	CAP,ZT 47R-OJ -E3
DISPLAY-P.W.Board			IC7000	51-25969Z01	MAX16813ATP/V+T -LE2
DISPLAY-P.W.Board			IC7001	51T65666Y03	NJM2880U1-05-TE1-NE2
DISPLAY-P.W.Board			IC7002	51-20182Z01	BU25TD3WG-TR -CP
DISPLAY-P.W.Board			IC7003	51-14365Z01	LT1946AEMS8E -SE2
DISPLAY-P.W.Board			IC7004	51-05314Z01	BA4560RFVM-TR -SE1
DISPLAY-P.W.Board			IC7005	51-28614Z01	BD00FC0EEFJ-ME2 -SE2
DISPLAY-P.W.Board			IC7006	51-28779Z01	BD90620EFJ-CE2 -SE2
DISPLAY-P.W.Board			IC7007	51-23593Z01	BD00HC5WEFJ-ME2 -SE2
DISPLAY-P.W.Board			IC7008	51T95150W01	NJM78M05DLA-TE1 -NE5
DISPLAY-P.W.Board			IC7009	51-23593Z01	BD00HC5WEFJ-ME2 -SE2
DISPLAY-P.W.Board			IC7200	51T15647Y01	NJM4558V-TE2 -SE2
DISPLAY-P.W.Board			IC7201	51-19188Z01	NJU6062V-TE1 -SE2
DISPLAY-P.W.Board			IC7400	51-29348Z01	TW8834AT-TA2-GR -QT
DISPLAY-P.W.Board			IC7401	51T85276W02	TC7WH74FK-TE85L -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			IC7402	51T55336Y02	TC7SH04FU,JF-L -CP
DISPLAY-P.W.Board			IC7410	51-01932Z02	TC7SZ08FU-TE85LJF-CP
DISPLAY-P.W.Board			IC7601	83-30860Z20	15MY_Limo_Universal_8inch TP_SOFTWARE
DISPLAY-P.W.Board			IC7601	51-25191Z01	CY8CTMA616AA-12 -QT
DISPLAY-P.W.Board			L7000	24-22372Z06	IND,NRS6045T 47RM-E2
DISPLAY-P.W.Board			L7001	24-22372Z06	IND,NRS6045T 47RM-E2
DISPLAY-P.W.Board			L7003	24T95456W27	FBI,BLM18PG181SH1-CP
DISPLAY-P.W.Board			L7004	24T45379Y07	IND,D53LC 15RM -E2
DISPLAY-P.W.Board			L7005	24-22371Z01	IND,NRS4018T 2R2M-E2
DISPLAY-P.W.Board			L7006	24-22372Z06	IND,NRS6045T 47RM-E2
DISPLAY-P.W.Board			L7402	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7410	24T95456W31	FBI,BLM18PG471SH1-CP
DISPLAY-P.W.Board			L7411	24T95456W31	FBI,BLM18PG471SH1-CP
DISPLAY-P.W.Board			L7420	24T95456W27	FBI,BLM18PG181SH1-CP
DISPLAY-P.W.Board			L7421	24T95456W27	FBI,BLM18PG181SH1-CP
DISPLAY-P.W.Board			L7444	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7445	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7446	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7447	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7448	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7449	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7455	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7456	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7457	24-06212Z08	FBI,BLM15BD102SH1-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			L7458	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7459	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7468	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7469	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7470	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7471	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7472	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7473	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			L7474	24-06212Z08	FBI,BLM15BD102SH1-CP
DISPLAY-P.W.Board			Q7000	48-21840Z01	FET,RHP020N06-T100E2
DISPLAY-P.W.Board			Q7001	48-13000Z05	TR,LTC124EUBFS8-TLCP
DISPLAY-P.W.Board			Q7002	48-17548Z01	TR,DSA500100L -CP
DISPLAY-P.W.Board			Q7003	48-21758Z01	TR,DSC2001S0L -CP
DISPLAY-P.W.Board			Q7004	48-20092Z02	TR,DMG563020R -CP
DISPLAY-P.W.Board			Q7005	48-17872Z01	TR,2PA1576Q -CP
DISPLAY-P.W.Board			Q7200	48T94875F06	DTB,113ZK-96 -CP
DISPLAY-P.W.Board			Q7202	48-17874Z01	TR,2PC4081Q -CP
DISPLAY-P.W.Board			Q7203	48-20092Z02	TR,DMG563020R -CP
DISPLAY-P.W.Board			R7000	06S35095Y08	RES,RK JUMPER 1/4-CP
DISPLAY-P.W.Board			R7001	06S15615Y73	RES,RK 103J 1/16 -CP
DISPLAY-P.W.Board			R7002	06S65415Y52	RES,RK 184F 1/16 -CP
DISPLAY-P.W.Board			R7004	06S15593Y56	RES,RK 202F 1/10 -CP
DISPLAY-P.W.Board			R7005	06S15593Y91	RES,RK 563F 1/10 -CP
DISPLAY-P.W.Board			R7006	06-12176Z08	RES,RK R39F 1/5 -CP
DISPLAY-P.W.Board			R7007	06S65415Y32	RES,RK 392F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7009	06S45674W51	RES,RK 561J 1/10 -CP
DISPLAY-P.W.Board			R7010	06S65415Y45	RES,RK 473F 1/16 -CP
DISPLAY-P.W.Board			R7011	06S65415Y41	RES,RK 223F 1/16 -CP
DISPLAY-P.W.Board			R7012	06S65415Y38	RES,RK 123F 1/16 -CP
DISPLAY-P.W.Board			R7013	06S65415Y23	RES,RK 681F 1/16 -CP
DISPLAY-P.W.Board			R7014	06S65415Y40	RES,RK 183F 1/16 -CP
DISPLAY-P.W.Board			R7015	06S15594Y17	RES,RK 624F 1/10 -CP
DISPLAY-P.W.Board			R7016	06S15615Y81	RES,RK 223J 1/16 -CP
DISPLAY-P.W.Board			R7019	06S45675W43	RES,RK JUMPER1/10-CP
DISPLAY-P.W.Board			R7020	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7022	06S15615Y73	RES,RK 103J 1/16 -CP
DISPLAY-P.W.Board			R7024	06S15593Y92	RES,RK 623F 1/10 -CP
DISPLAY-P.W.Board			R7025	06S15594Y15	RES,RK 514F 1/10 -CP
DISPLAY-P.W.Board			R7026	06S15615Y25	RES,RK 101J 1/16 -CP
DISPLAY-P.W.Board			R7027	06S15593Y67	RES,RK 562F 1/10 -CP
DISPLAY-P.W.Board			R7028	06S15593Y93	RES,RK 683F 1/10 -CP
DISPLAY-P.W.Board			R7030	06-02713Z15	RES,RK 822D 1/16 -CP
DISPLAY-P.W.Board			R7031	06-25919Z07	RES,RK 243F 1/16 -CP
DISPLAY-P.W.Board			R7032	06S15593Y52	RES,RK 132F 1/10 -CP
DISPLAY-P.W.Board			R7033	06S15593Y82	RES,RK 243F 1/10 -CP
DISPLAY-P.W.Board			R7034	06S65415Y38	RES,RK 123F 1/16 -CP
DISPLAY-P.W.Board			R7035	06S65415Y39	RES,RK 153F 1/16 -CP
DISPLAY-P.W.Board			R7036	06S65415Y32	RES,RK 392F 1/16 -CP
DISPLAY-P.W.Board			R7037	06-02713Z24	RES,RK 563D 1/16 -CP
DISPLAY-P.W.Board			R7038	06S35083Y29	RES,RK 222F 1/4 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7039	06S35083Y29	RES,RK 222F 1/4 -CP
DISPLAY-P.W.Board			R7040	06S65415Y46	RES,RK 563F 1/16 -CP
DISPLAY-P.W.Board			R7041	06S65415Y37	RES,RK 103F 1/16 -CP
DISPLAY-P.W.Board			R7042	06-02713Z24	RES,RK 563D 1/16 -CP
DISPLAY-P.W.Board			R7043	06S15593Y91	RES,RK 563F 1/10 -CP
DISPLAY-P.W.Board			R7044	06S15615Y99	RES,RK 124J 1/16 -CP
DISPLAY-P.W.Board			R7045	06S15594Y14	RES,RK 474F 1/10 -CP
DISPLAY-P.W.Board			R7046	06S15593Y94	RES,RK 753F 1/10 -CP
DISPLAY-P.W.Board			R7047	06S15615Y81	RES,RK 223J 1/16 -CP
DISPLAY-P.W.Board			R7048	06S65415Y49	RES,RK 104F 1/16 -CP
DISPLAY-P.W.Board			R7049	06S15594Y15	RES,RK 514F 1/10 -CP
DISPLAY-P.W.Board			R7050	06S15593Y93	RES,RK 683F 1/10 -CP
DISPLAY-P.W.Board			R7051	06S15593Y91	RES,RK 563F 1/10 -CP
DISPLAY-P.W.Board			R7052	06S15594Y14	RES,RK 474F 1/10 -CP
DISPLAY-P.W.Board			R7053	06S15594Y16	RES,RK 564F 1/10 -CP
DISPLAY-P.W.Board			R7057	06S15593Y78	RES,RK 163F 1/10 -CP
DISPLAY-P.W.Board			R7060	06S65415Y48	RES,RK 823F 1/16 -CP
DISPLAY-P.W.Board			R7061	06S65415Y47	RES,RK 683F 1/16 -CP
DISPLAY-P.W.Board			R7063	06S70072F29	RES,CP .101-J-1/4-CP
DISPLAY-P.W.Board			R7064	06S15615Y99	RES,RK 124J 1/16 -CP
DISPLAY-P.W.Board			R7065	06-25919Z07	RES,RK 243F 1/16 -CP
DISPLAY-P.W.Board			R7066	06S15615Y85	RES,RK 333J 1/16 -CP
DISPLAY-P.W.Board			R7067	06S65415Y32	RES,RK 392F 1/16 -CP
DISPLAY-P.W.Board			R7068	06S65415Y41	RES,RK 223F 1/16 -CP
DISPLAY-P.W.Board			R7069	06S15615Y83	RES,RK 273J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7070	06S15616Y27	RES,RK 2R2J 1/16 -CP
DISPLAY-P.W.Board			R7071	06S65415Y31	RES,RK 332F 1/16 -CP
DISPLAY-P.W.Board			R7072	06S35084Y21	RES,RK 471F 1/8 -CP
DISPLAY-P.W.Board			R7075	06S15594Y02	RES,RK 154F 1/10 -CP
DISPLAY-P.W.Board			R7077	06S65415Y38	RES,RK 123F 1/16 -CP
DISPLAY-P.W.Board			R7078	06S65415Y30	RES,RK 272F 1/16 -CP
DISPLAY-P.W.Board			R7079	06S65415Y33	RES,RK 472F 1/16 -CP
DISPLAY-P.W.Board			R7080	06S15593Y66	RES,RK 512F 1/10 -CP
DISPLAY-P.W.Board			R7081	06S15593Y91	RES,RK 563F 1/10 -CP
DISPLAY-P.W.Board			R7082	06S15594Y15	RES,RK 514F 1/10 -CP
DISPLAY-P.W.Board			R7087	06S15594Y09	RES,RK 304F 1/10 -CP
DISPLAY-P.W.Board			R7089	06S65415Y30	RES,RK 272F 1/16 -CP
DISPLAY-P.W.Board			R7090	06S65415Y29	RES,RK 222F 1/16 -CP
DISPLAY-P.W.Board			R7091	06S65415Y32	RES,RK 392F 1/16 -CP
DISPLAY-P.W.Board			R7092	06S15593Y93	RES,RK 683F 1/10 -CP
DISPLAY-P.W.Board			R7093	06S65415Y17	RES,RK 221F 1/16 -CP
DISPLAY-P.W.Board			R7094	06-12176Z09	RES,RK R47F 1/5 -CP
DISPLAY-P.W.Board			R7097	06S35095Y08	RES,RK JUMPER 1/4-CP
DISPLAY-P.W.Board			R7098	06S45675W43	RES,RK JUMPER1/10-CP
DISPLAY-P.W.Board			R7210	06S65415Y30	RES,RK 272F 1/16 -CP
DISPLAY-P.W.Board			R7211	06S65415Y17	RES,RK 221F 1/16 -CP
DISPLAY-P.W.Board			R7212	06S65415Y17	RES,RK 221F 1/16 -CP
DISPLAY-P.W.Board			R7213	06S65415Y37	RES,RK 103F 1/16 -CP
DISPLAY-P.W.Board			R7214	06S65415Y42	RES,RK 273F 1/16 -CP
DISPLAY-P.W.Board			R7215	06S65415Y37	RES,RK 103F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7216	06S65415Y41	RES,RK 223F 1/16 -CP
DISPLAY-P.W.Board			R7217	06S65415Y41	RES,RK 223F 1/16 -CP
DISPLAY-P.W.Board			R7218	06S65415Y41	RES,RK 223F 1/16 -CP
DISPLAY-P.W.Board			R7219	06S65415Y41	RES,RK 223F 1/16 -CP
DISPLAY-P.W.Board			R7222	06S15593Y29	RES,RK 151F 1/10 -CP
DISPLAY-P.W.Board			R7223	06S15593Y33	RES,RK 221F 1/10 -CP
DISPLAY-P.W.Board			R7224	06S15593Y35	RES,RK 271F 1/10 -CP
DISPLAY-P.W.Board			R7228	06S15593Y29	RES,RK 151F 1/10 -CP
DISPLAY-P.W.Board			R7229	06S15593Y33	RES,RK 221F 1/10 -CP
DISPLAY-P.W.Board			R7230	06S15593Y35	RES,RK 271F 1/10 -CP
DISPLAY-P.W.Board			R7234	06S15593Y41	RES,RK 471F 1/10 -CP
DISPLAY-P.W.Board			R7235	06S15593Y41	RES,RK 471F 1/10 -CP
DISPLAY-P.W.Board			R7236	06S15593Y41	RES,RK 471F 1/10 -CP
DISPLAY-P.W.Board			R7237	06S15593Y41	RES,RK 471F 1/10 -CP
DISPLAY-P.W.Board			R7238	06S15593Y41	RES,RK 471F 1/10 -CP
DISPLAY-P.W.Board			R7239	06S15593Y41	RES,RK 471F 1/10 -CP
DISPLAY-P.W.Board			R7240	06S15593Y41	RES,RK 471F 1/10 -CP
DISPLAY-P.W.Board			R7241	06S45675W43	RES,RK JUMPER1/10-CP
DISPLAY-P.W.Board			R7247	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7248	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7249	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7250	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7251	06S15615Y09	RES,RK 22RJ 1/16 -CP
DISPLAY-P.W.Board			R7252	06S15615Y09	RES,RK 22RJ 1/16 -CP
DISPLAY-P.W.Board			R7253	06S15615Y09	RES,RK 22RJ 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7256	06S15615Y49	RES,RK 102J 1/16 -CP
DISPLAY-P.W.Board			R7257	06S15615Y81	RES,RK 223J 1/16 -CP
DISPLAY-P.W.Board			R7400	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7401	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7403	06S15615Y73	RES,RK 103J 1/16 -CP
DISPLAY-P.W.Board			R7404	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7405	06S15615Y25	RES,RK 101J 1/16 -CP
DISPLAY-P.W.Board			R7406	06S15615Y73	RES,RK 103J 1/16 -CP
DISPLAY-P.W.Board			R7407	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7411	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7412	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7413	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7414	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7415	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7416	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7417	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7418	06S15615Y13	RES,RK 33RJ 1/16 -CP
DISPLAY-P.W.Board			R7420	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7421	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7422	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7429	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7434	06S15615Y53	RES,RK 152J 1/16 -CP
DISPLAY-P.W.Board			R7435	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7436	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7440	06S15616Y23	RES,RK JUMPER1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7441	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7443	06S15615Y73	RES,RK 103J 1/16 -CP
DISPLAY-P.W.Board			R7460	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7461	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7462	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7463	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7464	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7465	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7466	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7467	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7475	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7476	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7477	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7478	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7479	06S15615Y73	RES,RK 103J 1/16 -CP
DISPLAY-P.W.Board			R7480	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7481	06S65415Y13	RES,RK 101F 1/16 -CP
DISPLAY-P.W.Board			R7482	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7483	06S15615Y25	RES,RK 101J 1/16 -CP
DISPLAY-P.W.Board			R7484	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7485	06S15616Y22	RES,RK 105J 1/16 -CP
DISPLAY-P.W.Board			R7490	06S15615Y49	RES,RK 102J 1/16 -CP
DISPLAY-P.W.Board			R7491	06S15615Y33	RES,RK 221J 1/16 -CP
DISPLAY-P.W.Board			R7492	06S15615Y73	RES,RK 103J 1/16 -CP
DISPLAY-P.W.Board			R7501	06S15616Y23	RES,RK JUMPER1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7502	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7503	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7510	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7515	06S15615Y73	RES,RK 103J 1/16 -CP
DISPLAY-P.W.Board			R7516	06S65415Y05	RES,RK 22RF 1/16 -CP
DISPLAY-P.W.Board			R7517	06S65415Y11	RES,RK 68RF 1/16 -CP
DISPLAY-P.W.Board			R7518	06S65415Y08	RES,RK 39RF 1/16 -CP
DISPLAY-P.W.Board			R7519	06S65415Y18	RES,RK 271F 1/16 -CP
DISPLAY-P.W.Board			R7520	06-25919Z39	RES,RK 3R3F 1/16 -CP
DISPLAY-P.W.Board			R7521	06S65415Y01	RES,RK 10RF 1/16 -CP
DISPLAY-P.W.Board			R7522	06-25919Z41	RES,RK 3R9F 1/16 -CP
DISPLAY-P.W.Board			R7523	06S65415Y05	RES,RK 22RF 1/16 -CP
DISPLAY-P.W.Board			R7524	06S65415Y10	RES,RK 56RF 1/16 -CP
DISPLAY-P.W.Board			R7525	06S65415Y10	RES,RK 56RF 1/16 -CP
DISPLAY-P.W.Board			R7526	06S65415Y02	RES,RK 12RF 1/16 -CP
DISPLAY-P.W.Board			R7527	06S65415Y11	RES,RK 68RF 1/16 -CP
DISPLAY-P.W.Board			R7528	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7529	06S65415Y10	RES,RK 56RF 1/16 -CP
DISPLAY-P.W.Board			R7530	06-25919Z39	RES,RK 3R3F 1/16 -CP
DISPLAY-P.W.Board			R7531	06S65415Y01	RES,RK 10RF 1/16 -CP
DISPLAY-P.W.Board			R7532	06S65415Y05	RES,RK 22RF 1/16 -CP
DISPLAY-P.W.Board			R7533	06S65415Y18	RES,RK 271F 1/16 -CP
DISPLAY-P.W.Board			R7534	06S65415Y01	RES,RK 10RF 1/16 -CP
DISPLAY-P.W.Board			R7535	06S65415Y11	RES,RK 68RF 1/16 -CP
DISPLAY-P.W.Board			R7536	06S65415Y05	RES,RK 22RF 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7537	06S65415Y06	RES,RK 27RF 1/16 -CP
DISPLAY-P.W.Board			R7538	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY-P.W.Board			R7539	06S65415Y13	RES,RK 101F 1/16 -CP
DISPLAY-P.W.Board			R7540	06S65415Y11	RES,RK 68RF 1/16 -CP
DISPLAY-P.W.Board			R7541	06S65415Y14	RES,RK 121F 1/16 -CP
DISPLAY-P.W.Board			R7542	06S65415Y01	RES,RK 10RF 1/16 -CP
DISPLAY-P.W.Board			R7543	06S65415Y09	RES,RK 47RF 1/16 -CP
DISPLAY-P.W.Board			R7544	06S65415Y09	RES,RK 47RF 1/16 -CP
DISPLAY-P.W.Board			R7545	06S65415Y15	RES,RK 151F 1/16 -CP
DISPLAY-P.W.Board			R7604	06S15615Y65	RES,RK 472J 1/16 -CP
DISPLAY-P.W.Board			R7606	06S15615Y09	RES,RK 22RJ 1/16 -CP
DISPLAY-P.W.Board			R7607	06S15615Y09	RES,RK 22RJ 1/16 -CP
DISPLAY-P.W.Board			R7608	06S15615Y25	RES,RK 101J 1/16 -CP
DISPLAY-P.W.Board			R7609	06S15615Y25	RES,RK 101J 1/16 -CP
DISPLAY-P.W.Board			R7610	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7611	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7612	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7613	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7614	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7615	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7616	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7617	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7618	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7619	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7620	06S15615Y43	RES,RK 561J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY-P.W.Board			R7621	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7622	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7623	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7624	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7625	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7626	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7627	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			R7628	06S15615Y43	RES,RK 561J 1/16 -CP
DISPLAY-P.W.Board			SD7001	48-17988Z01	DIO,SHT RB060M-60-CP
DISPLAY-P.W.Board			SD7002	48-19296Z01	DIO,SHT RB056L-40-E1
DISPLAY-P.W.Board			SD7003	48-19296Z01	DIO,SHT RB056L-40-E1
DISPLAY-P.W.Board			XL7400	91-26661Z12	XTL,NX3225SAAG27.0CP
DISPLAY-P.W.Board			ZD7000	48-16145Z36	DIO,ZEN PZU9.1B1 -CP
KEY-P.W.Board			C8000	08S45231Y28	CAP,CER 181J-CH1H-CP
KEY-P.W.Board			C8001	08S45231Y28	CAP,CER 181J-CH1H-CP
KEY-P.W.Board			C8002	08S45231Y28	CAP,CER 181J-CH1H-CP
KEY-P.W.Board			C8003	08S45231Y28	CAP,CER 181J-CH1H-CP
KEY-P.W.Board			C8004	08S45231Y28	CAP,CER 181J-CH1H-CP
KEY-P.W.Board			C8005	08S45231Y28	CAP,CER 181J-CH1H-CP
KEY-P.W.Board			C8006	08S45231Y28	CAP,CER 181J-CH1H-CP
KEY-P.W.Board			C8007	08S65668Y05	CAP,CER 224KX5R1A-CP
KEY-P.W.Board			C8008	08S65668Y05	CAP,CER 224KX5R1A-CP
KEY-P.W.Board			C8009	08S35349Y17	CAP,CER 225K-B0J -CP
KEY-P.W.Board			C8010	08-26717Z01	CAP,CER105KX5R/B1ACP
KEY-P.W.Board			C8011	08-26717Z01	CAP,CER105KX5R/B1ACP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
KEY-P.W.Board			CB8000	09-25711Z04	FFC,FH33-40S-0.5SHER
KEY-P.W.Board			IC8000	51-11988Z01	RPMS1381-H19-E4A-NE5
KEY-P.W.Board			IC8001	51-20270Z01	PNJ4K01F -CP
KEY-P.W.Board			LD8000	48-30329Z03	LED,R/G/B CRGB1314CP
KEY-P.W.Board			LD8001	48-30329Z03	LED,R/G/B CRGB1314CP
KEY-P.W.Board			LD8002	48-11867Z01	LED,WHT SMLE12WBC7CP
KEY-P.W.Board			LD8003	48-11867Z01	LED,WHT SMLE12WBC7CP
KEY-P.W.Board			LD8004	48-11867Z01	LED,WHT SMLE12WBC7CP
KEY-P.W.Board			LD8005	48-11867Z01	LED,WHT SMLE12WBC7CP
KEY-P.W.Board			LD8006	48-11867Z01	LED,WHT SMLE12WBC7CP
KEY-P.W.Board			LD8007	48-11867Z01	LED,WHT SMLE12WBC7CP
KEY-P.W.Board			LD8008	48-11867Z01	LED,WHT SMLE12WBC7CP
KEY-P.W.Board			MC8000	50-25137Z02	MIC,KRM5200-010240E2
KEY-P.W.Board			R8000	06S65415Y30	RES,RK 272F 1/16 -CP
KEY-P.W.Board			R8001	06S65415Y32	RES,RK 392F 1/16 -CP
KEY-P.W.Board			R8002	06S65415Y36	RES,RK 822F 1/16 -CP
KEY-P.W.Board			R8003	06S65415Y30	RES,RK 272F 1/16 -CP
KEY-P.W.Board			R8004	06S65415Y32	RES,RK 392F 1/16 -CP
KEY-P.W.Board			R8005	06S65415Y36	RES,RK 822F 1/16 -CP
KEY-P.W.Board			R8006	06S65415Y42	RES,RK 273F 1/16 -CP
KEY-P.W.Board			R8007	06S15616Y23	RES,RK JUMPER1/16-CP
KEY-P.W.Board			R8008	06S45674W25	RES,RK 47RJ 1/10 -CP
KEY-P.W.Board			R8009	06S15615Y81	RES,RK 223J 1/16 -CP
KEY-P.W.Board			R8010	06S15615Y49	RES,RK 102J 1/16 -CP
KEY-P.W.Board			R8011	06S15616Y39	RES,RK 475J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
KEY-P.W.Board			SW8000	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8001	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8002	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8003	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8004	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8005	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8006	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8007	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8008	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			SW8009	40T65353Y01	SW,TACT SKRSPACE010E2
KEY-P.W.Board			ZD8000	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8001	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8002	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8003	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8004	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8005	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8006	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8007	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8008	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8009	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8010	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8011	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
KEY-P.W.Board			ZD8012	48-01607Z08	DIO,ZEN LUDZ3.9B -CP
WIFI.ANT-P.W.Board			ANT9001	09-07494Z01	U.FL-R-SMT-1(80)-E2
WIFI.ANT-P.W.Board			C9003	08S45231Y40	CAP,CER 3R9C-CH1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

Miscellaneous			ANT5502	09-24492Z04	ASSY,U.FL-2LP-066N1
Miscellaneous			ET3150	09-19615Z02	ASSY,ANID-0139-02A
Miscellaneous			ET7601	40-29928Z01	ASSY,HCDSS0A003A
Miscellaneous			LCD7000	65-30873Z01	ASSY,C080VTN03.1
Miscellaneous			M3490	59-14185Z03	MOTOR,ASB0412MA-9D11

IC2000(*) :51-23912Z01(MTP,D70F3479AGJ AQ-QT)

IC2202(*) :51-18520Z01(MX25L8035EM21-10G-ST)

IC3001(*) :51-30259Z02(S25FL116K0XMFA040-ST)

IC4300(*) :51-27465Z01(S29GL256S90TFI010-ST)

IC4400(*) :51-29432Z01(H26M41103HPR -BT)

IC7601(*) :51-25191Z01(CY8CTMA616AA-12 -QT)

Software is not written in to the part indicated with (*).