


## EXPLODED VIEW

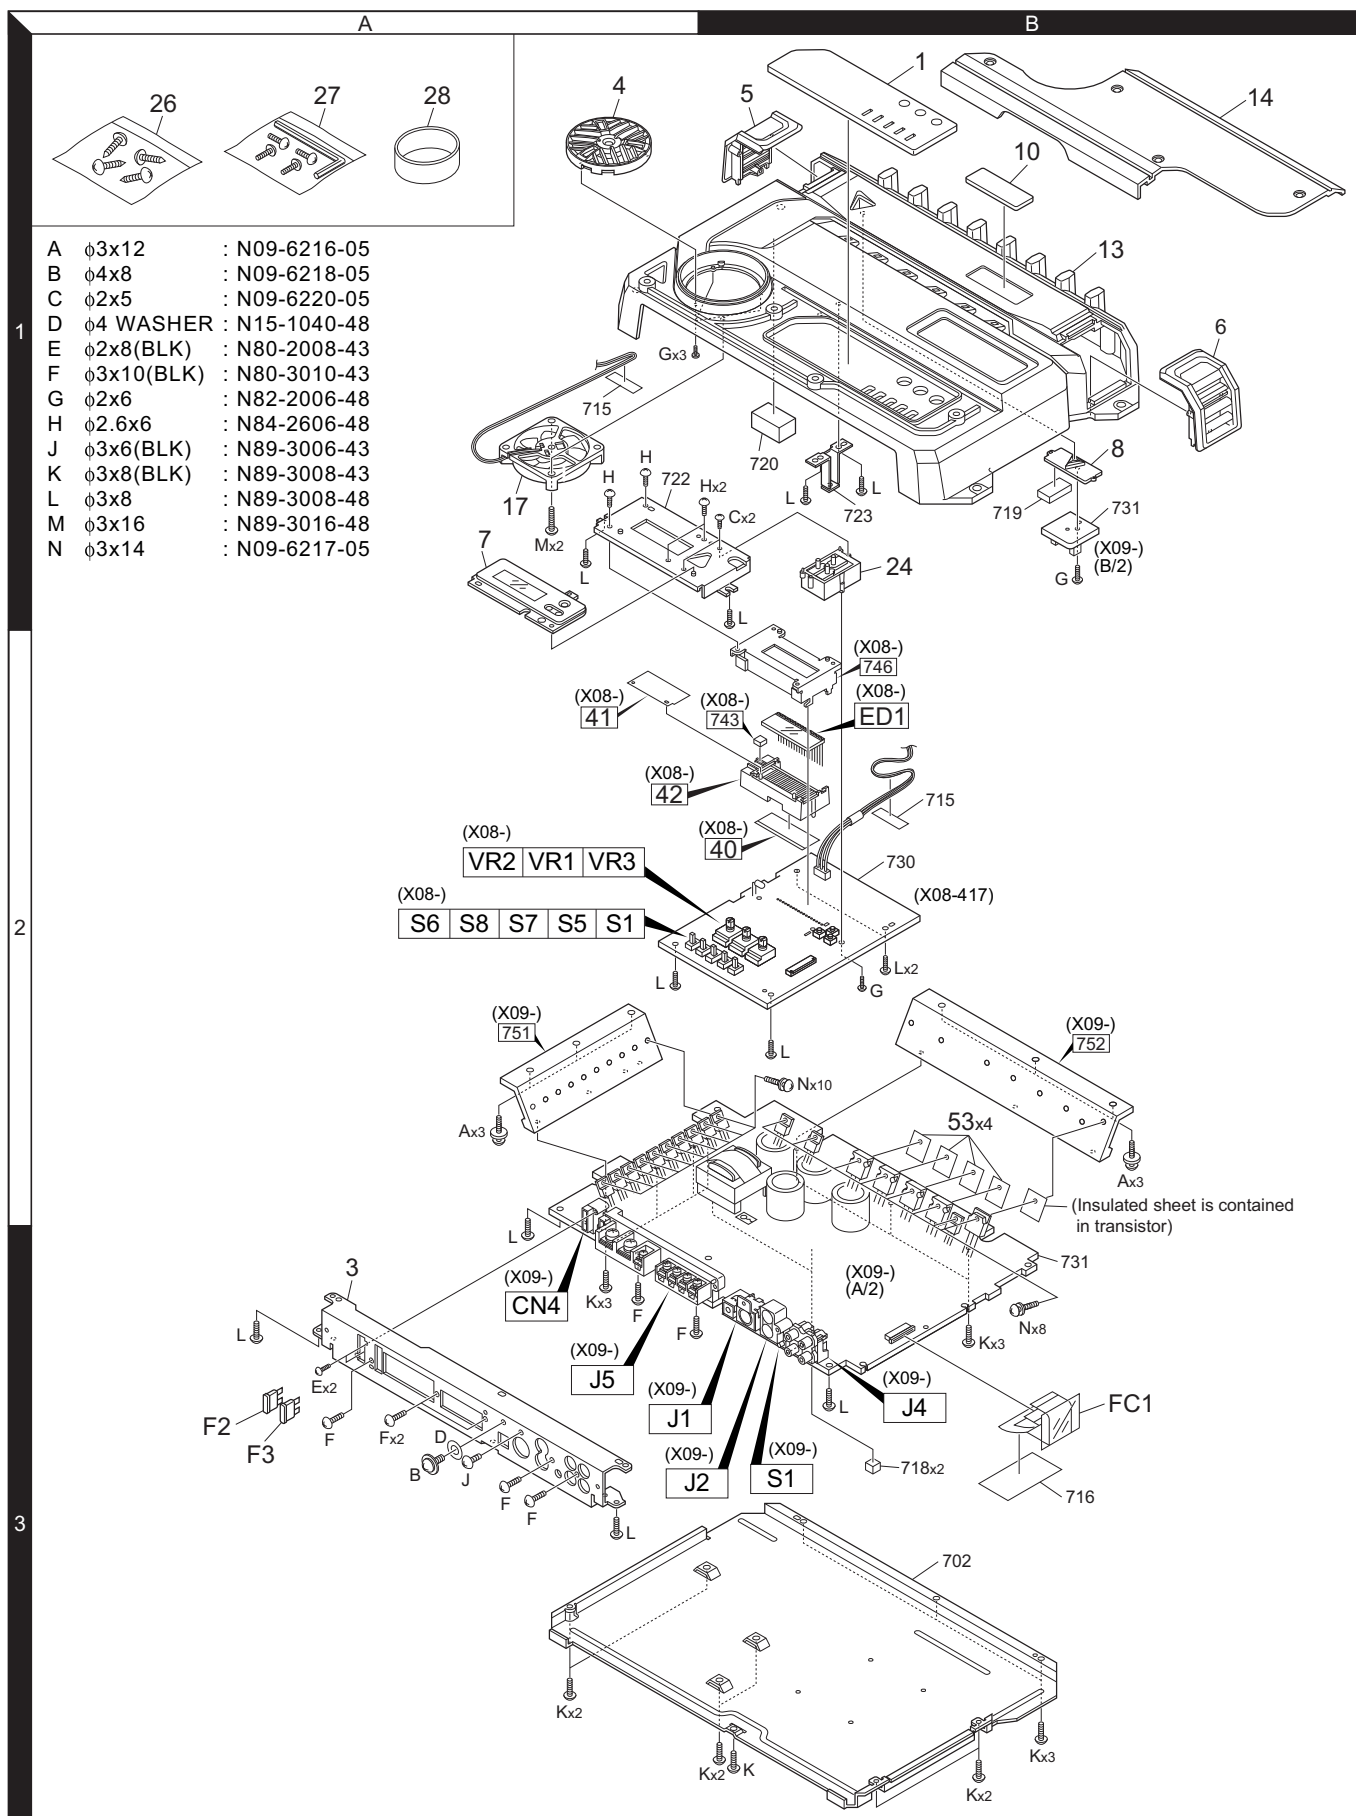

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.                               | Add | New | Parts No.    | Description                   | Destination |
|----------------------------------------|-----|-----|--------------|-------------------------------|-------------|
| <b>KAC-X812D</b>                       |     |     |              |                               |             |
| 1                                      | 1B  | *   | A21-6504-02  | DRESSING PANEL                |             |
| 3                                      | 3A  | *   | A64-3923-02  | PANEL                         |             |
| 4                                      | 1A  | *   | B07-3176-03  | ESCUTCHEON                    |             |
| 5                                      | 1B  | *   | B07-3177-02  | ESCUTCHEON                    |             |
| 6                                      | 1B  | *   | B07-3178-02  | ESCUTCHEON                    |             |
| 7                                      | 1A  |     | B10-4717-03  | FRONT GLASS                   |             |
| 8                                      | 1B  |     | B19-2257-03  | LIGHTING BOARD                |             |
| 10                                     | 1B  | *   | B43-1537-04  | BADGE                         |             |
| -                                      |     |     | B46-0682-00  | WARRANTY CARD                 |             |
| -                                      |     | *   | B64-3393-00  | INST. MANUAL (ENG.FRE.SPA)    |             |
| FC1                                    | 3B  |     | E39-0642-05  | FLAT CABLE                    |             |
| 13                                     | 1B  | *   | F01-3533-01  | HEAT SINK                     |             |
| 14                                     | 1B  | *   | F07-1176-02  | COVER (TERMINAL COVER)        |             |
| 17                                     | 1A  |     | F09-1885-15  | FAN (60X60X11.5)              |             |
| △ F2,3                                 | 3A  |     | F52-0015-05  | FUSE (BLADE TYPE) (30A)       |             |
| -                                      |     |     | H10-4894-13  | POLYSTYRENE FOAMED FIXTURE    |             |
| -                                      |     |     | H13-2055-04  | CARTON BOARD                  |             |
| -                                      |     |     | H25-1199-04  | PROTECTION BAG                |             |
| -                                      |     |     | H25-1200-04  | PROTECTION BAG (250X350X0.03) |             |
| -                                      |     | *   | H54-3781-03  | ITEM CARTON CASE              |             |
| 24                                     | 1B  |     | K24-4146-03  | PUSH KNOB (VR CAP)            |             |
| 26                                     | 1A  |     | N99-1577-15  | SCREW SET                     |             |
| 27                                     | 1A  |     | N99-1770-15  | SCREW & WRENCH KEY SET        |             |
| A                                      | 2A  |     | N09-6216-05  | TAPTITE SCREW (3X12)          |             |
| B                                      | 3A  |     | N09-6218-05  | TAPTITE SCREW (4X8)           |             |
| C                                      | 1B  |     | N09-6220-05  | MACHINE SCREW (2X5)           |             |
| D                                      | 3A  |     | N15-1040-48  | FLAT WASHER                   |             |
| E                                      | 3A  |     | N80-2008-43  | PAN HEAD TAPTITE SCREW        |             |
| F                                      | 3A  |     | N80-3010-43  | PAN HEAD TAPTITE SCREW        |             |
| G                                      | 1A  |     | N82-2006-48  | BINDING HEAD TAPTITE SCREW    |             |
| H                                      | 1A  |     | N84-2606-48  | PAN HEAD TAPTITE SCREW        |             |
| J                                      | 3A  |     | N89-3006-43  | BINDING HEAD TAPTITE SCREW    |             |
| K                                      | 3A  |     | N89-3008-43  | BINDING HEAD TAPTITE SCREW    |             |
| L                                      | 3A  |     | N89-3008-48  | BINDING HEAD TAPTITE SCREW    |             |
| M                                      | 1A  |     | N89-3016-48  | BINDING HEAD TAPTITE SCREW    |             |
| 28                                     | 1A  |     | W01-1606-05  | ACCESSORY                     |             |
| <b>PREAMPLIFIER UNIT (X08-4170-11)</b> |     |     |              |                               |             |
| 40                                     | 2B  |     | B11-1446-04  | REFLECTION SHEET              |             |
| 41                                     | 2A  |     | B11-1447-04  | OPTICAL DIFFUSER              |             |
| 42                                     | 2A  |     | B19-2258-12  | LIGHTING BOARD                |             |
| D2                                     |     |     | B30-1641-05  | LED                           |             |
| ED1                                    | 2B  |     | B38-1150-05  | LCD ASSY                      |             |
| C1,2                                   |     |     | CK73FB1H224K | CHIP C 0.22UF K               |             |
| C3                                     |     |     | CD04AS1V100M | ELECTRO 10UF 35WV             |             |
| C4                                     |     |     | CK73GB1H103K | CHIP C 0.010UF K              |             |
| C5                                     |     |     | CK73GB1H821K | CHIP C 820PF K                |             |
| C6,7                                   |     |     | CK73GB1H473K | CHIP C 0.047UF K              |             |
| C8                                     |     |     | CK73FB1H224K | CHIP C 0.22UF K               |             |
| C9                                     |     |     | CK73GB1H103K | CHIP C 0.010UF K              |             |
| C10                                    |     |     | CK73FB1H224K | CHIP C 0.22UF K               |             |

| Ref. No. | Add | New | Parts No.     | Description          | Destination |
|----------|-----|-----|---------------|----------------------|-------------|
| C11-13   |     |     | CK73GB1H103K  | CHIP C 0.010UF K     |             |
| C14      |     |     | CD04AS1H010M  | ELECTRO 1UF 50WV     |             |
| C15      |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| C16      |     |     | CK73GB1H103K  | CHIP C 0.010UF K     |             |
| C17      |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| C18,19   |     |     | CC73GCH1H221J | CHIP C 220PF J       |             |
| C20      |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| C21      |     |     | CC73GCH1H221J | CHIP C 220PF J       |             |
| C22,23   |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| C24      |     |     | CK73GB1H103K  | CHIP C 0.010UF K     |             |
| C25      |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| C26      |     |     | CK73GB1H683K  | CHIP C 0.068UF K     |             |
| C27      |     |     | CC73GCH1H220J | CHIP C 22PF J        |             |
| C28      |     |     | CK73FB1E154K  | CHIP C 0.15UF K      |             |
| C29,30   |     |     | CK73GB1H103K  | CHIP C 0.010UF K     |             |
| C31      |     |     | CK73GB1H223K  | CHIP C 0.022UF K     |             |
| C32      |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| C33      |     |     | CK73GB1H103K  | CHIP C 0.010UF K     |             |
| C34      |     |     | CK73GB1H683K  | CHIP C 0.068UF K     |             |
| C35      |     |     | CK73FB1E154K  | CHIP C 0.15UF K      |             |
| C36      |     |     | CK73GB1H103K  | CHIP C 0.010UF K     |             |
| C37      |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| C38      |     |     | CK73GB1H333K  | CHIP C 0.033UF K     |             |
| C39      |     |     | CD04AS1C470M  | ELECTRO 47UF 16WV    |             |
| C40      |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| C41-47   |     |     | CK73GB1H103K  | CHIP C 0.010UF K     |             |
| C48,49   |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV    |             |
| CN1      |     |     | E41-2178-05   | FLAT CABLE CONNECTOR |             |
| WH1      |     |     | E39-0655-05   | WIRING HARNESS       |             |
| R1       |     |     | RK73GB2A472J  | CHIP R 4.7K J 1/10W  |             |
| R2       |     |     | RK73GB2A223J  | CHIP R 22K J 1/10W   |             |
| R3       |     |     | RK73GB2A134J  | CHIP R 130K J 1/10W  |             |
| R4       |     |     | RK73GB2A623J  | CHIP R 62K J 1/10W   |             |
| R5-8     |     |     | RK73GB2A471J  | CHIP R 470 J 1/10W   |             |
| R10      |     |     | RK73GB2A683J  | CHIP R 68K J 1/10W   |             |
| R11,12   |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W  |             |
| R13,14   |     |     | RK73GB2A393J  | CHIP R 39K J 1/10W   |             |
| R16      |     |     | RK73GB2A563J  | CHIP R 56K J 1/10W   |             |
| R17      |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W  |             |
| R18      |     |     | RD14BB2C391J  | RD 390 J 1/6W        |             |
| R19      |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W  |             |
| R20,21   |     |     | RK73GB2A473J  | CHIP R 47K J 1/10W   |             |
| R22-24   |     |     | RK73GB2A101J  | CHIP R 100 J 1/10W   |             |
| R25      |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W   |             |
| R26      |     |     | RK73GB2A222J  | CHIP R 2.2K J 1/10W  |             |
| R27      |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W  |             |
| R28      |     |     | RK73GB2A512J  | CHIP R 5.1K J 1/10W  |             |
| R29      |     |     | RK73GB2A471J  | CHIP R 470 J 1/10W   |             |
| R32      |     |     | RK73GB2A123J  | CHIP R 12K J 1/10W   |             |
| R33      |     |     | RK73GB2A472J  | CHIP R 4.7K J 1/10W  |             |
| R34      |     |     | RK73GB2A222J  | CHIP R 2.2K J 1/10W  |             |
| R36      |     |     | RK73GB2A332J  | CHIP R 3.3K J 1/10W  |             |
| R37      |     |     | RK73GB2A682J  | CHIP R 6.8K J 1/10W  |             |
| R38      |     |     | RK73GB2A153J  | CHIP R 15K J 1/10W   |             |

E : Europe K : North America M : Other Areas E : Without Europe

△ Indicates safety critical components.

## PARTS LIST

## PREAMPLIFIER UNIT (X08-4170-11)

| Ref. No.                              | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                      | Description                                                                                                        | Desti-<br>nation |
|---------------------------------------|-------------|-------------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|------------------|
| R39,40<br>R41<br>R42<br>R43,44<br>R45 |             |             | RK73GB2A332J<br>RK73GB2A153J<br>RK73GB2A100J<br>RK73GB2A222J<br>RK73GB2A103J   | CHIP R 3.3K J 1/10W<br>CHIP R 15K J 1/10W<br>CHIP R 10 J 1/10W<br>CHIP R 2.2K J 1/10W<br>CHIP R 10K J 1/10W        |                  |
| R46<br>R47<br>R48<br>R49<br>R50       |             |             | RK73GB2A473J<br>RK73GB2A153J<br>RK73GB2A123J<br>RK73GB2A153J<br>RK73GB2A222J   | CHIP R 47K J 1/10W<br>CHIP R 15K J 1/10W<br>CHIP R 12K J 1/10W<br>CHIP R 15K J 1/10W<br>CHIP R 2.2K J 1/10W        |                  |
| R51<br>R52,53<br>R54<br>R55<br>R56    |             |             | RK73GB2A473J<br>RK73GB2A103J<br>RK73GB2A473J<br>RK73GB2A103J<br>RK73GB2A431J   | CHIP R 47K J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 47K J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 430 J 1/10W         |                  |
| R57<br>R58-60<br>R61<br>R62<br>R63    |             |             | RD14BB2C391J<br>RK73GB2A103J<br>RK73GB2A102J<br>RK73GB2A512J<br>RK73GB2A562J   | RD 390 J 1/6W<br>CHIP R 10K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 5.1K J 1/10W<br>CHIP R 5.6K J 1/10W           |                  |
| R64<br>R65<br>R66<br>R67<br>VR1       | 2A          |             | RK73GB2A473J<br>RK73GB2A104J<br>RK73GB2A103J<br>RK73GB2A473J<br>R31-0241-05    | CHIP R 47K J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 47K J 1/10W<br>VARIABLE RESISTOR 50K (C) |                  |
| VR2<br>VR3                            | 2A<br>2A    |             | R31-0238-05<br>R31-0241-05                                                     | VARIABLE RESISTOR 10K (A)<br>VARIABLE RESISTOR 50K (C)                                                             |                  |
| S1<br>S2-4<br>S5,6<br>S7<br>S8        |             |             | S62-0873-05<br>S70-0922-05<br>S62-0873-05<br>S62-0874-05<br>S62-0873-05        | SLIDE SWITCH<br>TACT SWITCH<br>SLIDE SWITCH<br>SLIDE SWITCH<br>SLIDE SWITCH                                        |                  |
| D1<br>IC1<br>IC2<br>IC3<br>IC4        |             | *           | 02CZ8.2-F(Y)<br>NJM4565MD-ZB<br>NJM2058M-ZB<br>NJM4565MD-ZB<br>E-TDA7409DTR    | ZENER DIODE<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC                                            |                  |
| IC5<br>IC6                            |             |             | NJM4565MD-ZB<br>LC75853NE-E                                                    | ANALOGUE IC<br>MOS-IC                                                                                              |                  |
| <b>AUDIO UNIT (X09-5790-11)</b>       |             |             |                                                                                |                                                                                                                    |                  |
| D9                                    |             | *           | B30-1743-05                                                                    | LED (RED LED)                                                                                                      |                  |
| C1<br>C2,3<br>C5<br>C7<br>C10         |             |             | CD04AU1H100M<br>CK73GB1H103K<br>CK73GB1H103K<br>CC73GCH1H100D<br>CC73GCH1H330J | NP ELEC 10UF 50WV<br>CHIP C 0.010UF K<br>CHIP C 0.010UF K<br>CHIP C 10PF D<br>CHIP C 33PF J                        |                  |
| C11<br>C12,13<br>C14<br>C15,16<br>C17 |             |             | CK73GB1H103K<br>CQ93FMG1H102J<br>CC73GCH1H100D<br>CD04BJ1H100M<br>CK73GB1H103K | CHIP C 0.010UF K<br>MYLAR 1000PF J<br>CHIP C 10PF D<br>ELECTRO 10UF 50WV<br>CHIP C 0.010UF K                       |                  |
| C19<br>C21                            |             |             | CK73GB1H103K<br>CC73GCH1H470J                                                  | CHIP C 0.010UF K<br>CHIP C 47PF J                                                                                  |                  |

| Ref. No.                                 | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                       | Description                                                                                                | Desti-<br>nation |
|------------------------------------------|-------------|-------------|---------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|------------------|
| C22<br>C23<br>C24<br>C25,26<br>C27       |             |             | CC73GCH1H330J<br>CC73GCH1H101J<br>CD04BJ1H100M<br>CC73GCH1H101J<br>CD04BJ1H100M | CHIP C 33PF J<br>CHIP C 100PF J<br>ELECTRO 10UF 50WV<br>CHIP C 100PF J<br>ELECTRO 10UF 50WV                |                  |
| C28<br>C30<br>C31<br>C32<br>C34          |             |             | CD04BJ1H010M<br>CK73GB1H103K<br>CD04BJ1H2R2M<br>CQ93FMG1H182J<br>CK73GB1H102K   | ELECTRO 1.0UF 50WV<br>CHIP C 0.010UF K<br>ELECTRO 2.2UF 50WV<br>MYLAR 1800PF J<br>CHIP C 1000PF K          |                  |
| C35<br>C36<br>C37<br>C38<br>C39          |             |             | CD04BJ1E470M<br>CK73GB1H104K<br>CD04BJ1E470M<br>CK73GB1H103K<br>CC73GCH1H470J   | ELECTRO 47UF 25WV<br>CHIP C 0.10UF K<br>ELECTRO 47UF 25WV<br>CHIP C 0.010UF K<br>CHIP C 47PF J             |                  |
| C40<br>C41<br>C42<br>C43<br>C44          |             |             | CQ93FMG1H392J<br>CC45FCH1H390J<br>CK73GB1H103K<br>CD04BJ1H2R2M<br>CD04BJ1A101M  | MYLAR 3900PF J<br>CERAMIC 39PF J<br>CHIP C 0.010UF K<br>ELECTRO 2.2UF 50WV<br>ELECTRO 100UF 10WV           |                  |
| C45<br>C46-50<br>C52<br>C53<br>C54       |             |             | CC45FCH1H390J<br>CK73GB1H103K<br>CK73GB1H104K<br>CK73GB1H103K<br>CD04BJ1H100M   | CERAMIC 39PF J<br>CHIP C 0.010UF K<br>CHIP C 0.10UF K<br>CHIP C 0.010UF K<br>ELECTRO 10UF 50WV             |                  |
| C55,56<br>C57<br>C59<br>C60<br>C61       |             |             | CD04BJ1E470M<br>CD04BJ1H100M<br>CD04BJ1E470M<br>CD04BJ1H010M<br>CK73GB1H103K    | ELECTRO 47UF 25WV<br>ELECTRO 10UF 50WV<br>ELECTRO 47UF 25WV<br>ELECTRO 1.0UF 50WV<br>CHIP C 0.010UF K      |                  |
| C62,63<br>C64<br>C65,66<br>C67<br>C68    |             |             | C90-5688-05<br>CD04BJ1E470M<br>C90-5688-05<br>CD04BJ1H470M<br>CK73GB1H103K      | ELECTRO 1500UF 100WV<br>ELECTRO 47UF 25WV<br>ELECTRO 1500UF 100WV<br>ELECTRO 47UF 50WV<br>CHIP C 0.010UF K |                  |
| C69-72<br>C73,74<br>C75<br>C77<br>C78,79 |             |             | CK45FB1H102K<br>CF92FV2A104J<br>CK73GB1H103K<br>CD04BJ1H100M<br>CK73GB1H473K    | CERAMIC 1000PF K<br>MF-C 0.10UF J<br>CHIP C 0.010UF K<br>ELECTRO 10UF 50WV<br>CHIP C 0.047UF K             |                  |
| C80,81<br>C82<br>C83<br>C84<br>C85       |             |             | CQ93FMG1H392J<br>CD04BJ1E470M<br>CK73GB1H682K<br>CK73GB1H103K<br>C91-2267-05    | MYLAR 3900PF J<br>ELECTRO 47UF 25WV<br>CHIP C 6800PF K<br>CHIP C 0.010UF K<br>MP-F 10UF J                  |                  |
| C87<br>C88<br>C89,90<br>C92<br>C93       |             |             | C91-2267-05<br>CK73FB1C684K<br>CD04BC1C392M<br>CD04BC1C392M<br>CK73GB1H103K     | MP-F 10UF J<br>CHIP C 0.68UF K<br>ELECTRO 3900UF 16WV<br>ELECTRO 3900UF 16WV<br>CHIP C 0.010UF K           |                  |
| C94<br>C95<br>C96<br>C97<br>C98          |             |             | CD04BJ1H100M<br>CK73GB1H103K<br>CD04BJ1A101M<br>CQ93FMG1H102J<br>CK73GB1H103K   | ELECTRO 10UF 50WV<br>CHIP C 0.010UF K<br>ELECTRO 100UF 10WV<br>MYLAR 1000PF J<br>CHIP C 0.010UF K          |                  |

E : Europe K : North America M : Other Areas E : Without Europe

△ Indicates safety critical components.

## PARTS LIST

## AUDIO UNIT (X09-5790-11)

| Ref. No. | Add | New | Parts No.     | Description                   | Destination | Ref. No. | Add | New | Parts No.    | Description         | Destination |
|----------|-----|-----|---------------|-------------------------------|-------------|----------|-----|-----|--------------|---------------------|-------------|
| C99      |     |     | CD04BJ1H100M  | ELECTRO 10UF 50WV             |             | R16,17   |     |     | RD14BB2C102J | RD 1.0K J 1/6W      |             |
| C100     |     |     | CD04BJ1E470M  | ELECTRO 47UF 25WV             |             | R18      |     |     | RK73GH2A103D | CHIP R 10K D 1/10W  |             |
| C101     |     |     | CD04AU1H100M  | NP ELEC 10UF 50WV             |             | R19      |     |     | RK73GB2A392J | CHIP R 3.9K J 1/10W |             |
| C102     |     |     | CD04BJ1H100M  | ELECTRO 10UF 50WV             |             | R20      |     |     | RK73GH2A103D | CHIP R 10K D 1/10W  |             |
| C103     |     |     | CD04BJ1E470M  | ELECTRO 47UF 25WV             |             | R21      |     |     | RK73GB2A123J | CHIP R 12K J 1/10W  |             |
| C106     |     |     | CD04BJ1H100M  | ELECTRO 10UF 50WV             |             | R22      |     |     | RK73GB2A203J | CHIP R 20K J 1/10W  |             |
| C107     |     |     | CK73GB1H102K  | CHIP C 1000PF K               |             | R23      |     |     | RK73GB2A123J | CHIP R 12K J 1/10W  |             |
| C108     |     |     | CK73GB1H103K  | CHIP C 0.010UF K              |             | R24      |     |     | RK73GB2A203J | CHIP R 20K J 1/10W  |             |
| C109     |     |     | CD04BJ1H100M  | ELECTRO 10UF 50WV             |             | R25      |     |     | RK73GH2A103D | CHIP R 10K D 1/10W  |             |
| C110     |     |     | CD04BJ1E470M  | ELECTRO 47UF 25WV             |             | R26      |     |     | RD14BB2C562J | RD 5.6K J 1/6W      |             |
| C111     |     |     | CK73GB1H103K  | CHIP C 0.010UF K              |             | R27,28   |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             |
| C113     |     |     | CD04BJ1H100M  | ELECTRO 10UF 50WV             |             | R29,30   |     |     | RK73GB2A273J | CHIP R 27K J 1/10W  |             |
| C116     |     |     | CK73GB1H104K  | CHIP C 0.10UF K               |             | R31-34   |     |     | RK73GB2A152J | CHIP R 1.5K J 1/10W |             |
| C117,118 |     |     | CC73GCH1H120J | CHIP C 12PF J                 |             | R35      |     |     | RK73GB2A333J | CHIP R 33K J 1/10W  |             |
| C120     |     |     | CD04BJ1E221M  | ELECTRO 220UF 25WV            |             | R36      |     |     | RK73GB2A272J | CHIP R 2.7K J 1/10W |             |
| C122     |     |     | CD04BJ1H100M  | ELECTRO 10UF 50WV             |             | R37      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             |
| C123     |     |     | CK73GB1H103K  | CHIP C 0.010UF K              |             | R38      |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             |
| C124     |     |     | CK73FB1C105K  | CHIP C 1.0UF K                |             | R39      |     |     | RK73GB2A153J | CHIP R 15K J 1/10W  |             |
| C125,126 |     |     | CK73FB1H104K  | CHIP C 0.10UF K               |             | R40-43   |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             |
| C127,128 |     |     | CC73GCH1H101J | CHIP C 100PF J                |             | R46-48   |     |     | RK73GB2A101J | CHIP R 100 J 1/10W  |             |
| C130     |     |     | CC73GCH1H101J | CHIP C 100PF J                |             | R50      |     |     | RK73GB2A272J | CHIP R 2.7K J 1/10W |             |
| C131     |     |     | CK73FB1H104K  | CHIP C 0.10UF K               |             | R51      |     |     | RD14BB2E151J | RD 150 J 1/4W       |             |
| C132,133 |     |     | CK73GB1H103K  | CHIP C 0.010UF K              |             | R52      |     |     | RK73GB2A272J | CHIP R 2.7K J 1/10W |             |
| C134     |     |     | CK73FB1H104K  | CHIP C 0.10UF K               |             | R59      |     |     | RD14BB2E151J | RD 150 J 1/4W       |             |
| CN1      |     |     | E41-0927-05   | PIN ASSY (2P)                 |             | R65      |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             |
| CN2      |     |     | E41-0928-05   | PIN ASSY (3P)                 |             | R66      |     |     | RK73GB2A272J | CHIP R 2.7K J 1/10W |             |
| CN3      |     |     | E41-2202-05   | FLAT CABLE CONNECTOR (22P)    |             | R68      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W  |             |
| J1       | 3B  |     | E56-0856-05   | CYLINDRICAL RECEPTACLE (13P)  |             | R70      |     |     | RK73GB2A152J | CHIP R 1.5K J 1/10W |             |
| J2       | 3B  |     | E56-0853-05   | CYLINDRICAL RECEPTACLE (4PX2) |             | R71      |     |     | RK73GB2A821J | CHIP R 820 J 1/10W  |             |
| J4       | 3B  |     | E63-0921-05   | PIN JACK (4P)                 |             | R72      |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             |
| J5       | 3A  |     | E70-0838-05   | SCREW TERMINAL BOARD (7P)     |             | R73      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             |
| 53       | 2B  |     | F20-2205-14   | INSULATING SHEET              |             | R76      |     |     | RD14BB2C751J | RD 750 J 1/6W       |             |
| △ CN4    | 3A  |     | J13-0602-05   | FUSE HOLDER                   |             | R77      |     |     | RK73GB2A153J | CHIP R 15K J 1/10W  |             |
| L1       |     |     | L41-4795-33   | SMALL FIXED INDUCTOR (4.7UH)  |             | R78      |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             |
| L2       |     |     | L19-0756-05   | TRANSFORMER FOR CONVERTER     |             | R79      |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             |
| L3       |     |     | L33-1973-05   | CHOKE COIL (50UH)             |             | R80      |     |     | RK73GB2A224J | CHIP R 220K J 1/10W |             |
| L5       |     |     | L19-0758-05   | TRANSFORMER FOR CONVERTER     |             | R82      |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             |
| L16      |     | *   | L33-2256-15   | CHOKE COIL (10.9UH)           |             | R83      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             |
| X1       |     |     | L77-2844-05   | CRYSTAL RESONATOR (12.288MHZ) |             | R84      |     |     | RK73GB2A511J | CHIP R 510 J 1/10W  |             |
| F        | 3A  |     | N80-3010-43   | PAN HEAD TAPTITE SCREW        |             | R86      |     |     | RK73GB2A471J | CHIP R 470 J 1/10W  |             |
| K        | 3A  |     | N89-3008-43   | BINDING HEAD TAPTITE SCREW    |             | R87      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             |
| N        | 2B  |     | N09-6217-05   | TAPTITE SCREW (3X14)          |             | R88      |     |     | RK73GB2A302J | CHIP R 3.0K J 1/10W |             |
| R1,2     |     |     | RK73EB2E271J  | CHIP R 270 J 1/4W             |             | R89      |     |     | RK73GB2A684J | CHIP R 680K J 1/10W |             |
| R3       |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W            |             | R90      |     |     | RK73GB2A683J | CHIP R 68K J 1/10W  |             |
| R4       |     |     | RD14BB2C470J  | RD 47 J 1/6W                  |             | R91      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             |
| R5       |     |     | RK73GB2A101J  | CHIP R 100 J 1/10W            |             | R92,93   |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             |
| R6       |     |     | RD14BB2C470J  | RD 47 J 1/6W                  |             | R94,95   |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             |
| R7       |     |     | RK73GB2A432J  | CHIP R 4.3K J 1/10W           |             | R96      |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W |             |
| R10,11   |     |     | RD14BB2C102J  | RD 1.0K J 1/6W                |             | R97      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W |             |
| R13      |     |     | RK73GB2A103J  | CHIP R 10K J 1/10W            |             | R98      |     |     | RD14BB2E243J | RD 24K J 1/4W       |             |
| R14      |     |     | RK73GB2A432J  | CHIP R 4.3K J 1/10W           |             | R99      |     |     | RK73GB2A103J | CHIP R 10K J 1/10W  |             |
| R15      |     |     | RK73GH2A103D  | CHIP R 10K D 1/10W            |             | R100     |     |     | RK73GB2A152J | CHIP R 1.5K J 1/10W |             |
|          |     |     |               |                               |             | R102     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             |
|          |     |     |               |                               |             | R103,104 |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W |             |
|          |     |     |               |                               |             | R105,106 |     |     | RK73GB2A473J | CHIP R 47K J 1/10W  |             |

E : Europe K : North America M : Other Areas E : Without Europe

△ Indicates safety critical components.

## PARTS LIST

## AUDIO UNIT (X09-5790-11)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description           | Desti-<br>nation |
|----------|-------------|-------------|---------------|-----------------------|------------------|
| R107     |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W    |                  |
| R108     |             |             | RK73GB2A222J  | CHIP R 2.2K J 1/10W   |                  |
| R109,110 |             |             | RK73GB2A102J  | CHIP R 1.0K J 1/10W   |                  |
| R111     |             |             | RK73GB2A111J  | CHIP R 110 J 1/10W    |                  |
| R112     |             |             | RK73GB2A181J  | CHIP R 180 J 1/10W    |                  |
| R113     |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W    |                  |
| R114     |             |             | RK73GB2A153J  | CHIP R 15K J 1/10W    |                  |
| R115     |             |             | RD14NB2E471J  | RD 470 J 1/4W         |                  |
| R116     |             |             | RD14DB2H751J  | SMALL-RD 750 J 1/2W   |                  |
| R117     |             |             | RD14NB2E471J  | RD 470 J 1/4W         |                  |
| R118     |             |             | RD14DB2H751J  | SMALL-RD 750 J 1/2W   |                  |
| R119     |             |             | RK73GB2A821J  | CHIP R 820 J 1/10W    |                  |
| R120     |             |             | RK73GB2A472J  | CHIP R 4.7K J 1/10W   |                  |
| R121     |             |             | RD14NB2E470J  | RD 47 J 1/4W          |                  |
| R122     |             |             | RK73GB2A472J  | CHIP R 4.7K J 1/10W   |                  |
| R123     |             |             | RK73GB2A100J  | CHIP R 10 J 1/10W     |                  |
| R124     |             |             | RD14NB2E271J  | RD 270 J 1/4W         |                  |
| R125     |             |             | RK73GB2A473J  | CHIP R 47K J 1/10W    |                  |
| R126,127 |             |             | RK73EB2E100J  | CHIP R 10 J 1/4W      |                  |
| R128     |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W    |                  |
| R129     |             |             | RK73GB2A152J  | CHIP R 1.5K J 1/10W   |                  |
| R130     |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W    |                  |
| R131     |             |             | RK73EB2E100J  | CHIP R 10 J 1/4W      |                  |
| R132     |             |             | RD14NB2E331J  | RD 330 J 1/4W         |                  |
| R133     |             |             | RK73EB2E100J  | CHIP R 10 J 1/4W      |                  |
| R134     |             |             | RD14NB2E122J  | RD 1.2K J 1/4W        |                  |
| R135     |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W    |                  |
| R136     |             |             | RD14DB2H152J  | SMALL-RD 1.5K J 1/2W  |                  |
| R137     |             |             | RD14DB2H102J  | SMALL-RD 1.0K J 1/2W  |                  |
| R138,139 |             |             | RD14NB2E470J  | RD 47 J 1/4W          |                  |
| R142,143 |             |             | RD14NB2E470J  | RD 47 J 1/4W          |                  |
| R144     |             |             | RK73GB2A473J  | CHIP R 47K J 1/10W    |                  |
| R147     |             |             | RK73GB2A332J  | CHIP R 3.3K J 1/10W   |                  |
| R148-151 |             |             | RD14NB2E101J  | RD 100 J 1/4W         |                  |
| R152,153 |             |             | RK73EB2E473J  | CHIP R 47K J 1/4W     |                  |
| R154,155 |             |             | RK73GB2A473J  | CHIP R 47K J 1/10W    |                  |
| R156     |             |             | RD14BB2C563J  | RD 56K J 1/6W         |                  |
| R157-160 |             |             | RK73EB2E100J  | CHIP R 10 J 1/4W      |                  |
| R161,162 |             |             | R92-5086-05   | METAL-PLATE 0.05 J 2W |                  |
| R163     |             |             | RK73GB2A562J  | CHIP R 5.6K J 1/10W   |                  |
| R164,165 |             |             | R92-5086-05   | METAL-PLATE 0.05 J 2W |                  |
| R170,171 |             |             | RD14DB2H220J  | SMALL-RD 22 J 1/2W    |                  |
| R174     |             |             | RK73GB2A102J  | CHIP R 1.0K J 1/10W   |                  |
| R176,177 |             |             | RK73GB2A332J  | CHIP R 3.3K J 1/10W   |                  |
| R178     |             |             | RS14KB3D4R7JP | FL-PROOF RS 4.7 J 2W  |                  |
| R179     |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W    |                  |
| R180     |             |             | RS14KB3D4R7JP | FL-PROOF RS 4.7 J 2W  |                  |
| R181     |             |             | RK73GB2A514J  | CHIP R 510K J 1/10W   |                  |
| R183     |             |             | RK73GB2A472J  | CHIP R 4.7K J 1/10W   |                  |
| R184     |             |             | RK73GB2A332J  | CHIP R 3.3K J 1/10W   |                  |
| R185     |             |             | RK73GB2A302J  | CHIP R 3.0K J 1/10W   |                  |
| R186,187 |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W    |                  |
| R188     |             |             | RK73GB2A820J  | CHIP R 82 J 1/10W     |                  |
| R189     |             |             | RK73GB2A103J  | CHIP R 10K J 1/10W    |                  |
| R190     |             |             | RK73GB2A222J  | CHIP R 2.2K J 1/10W   |                  |

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description         | Desti-<br>nation |
|----------|-------------|-------------|--------------|---------------------|------------------|
| R191     |             |             | RK73GB2A332J | CHIP R 3.3K J 1/10W |                  |
| R192     |             |             | RK73GB2A243J | CHIP R 24K J 1/10W  |                  |
| R193     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                  |
| R194     |             |             | RK73GB2A152J | CHIP R 1.5K J 1/10W |                  |
| R195,196 |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W |                  |
| R197     |             |             | RK73GB2A224J | CHIP R 220K J 1/10W |                  |
| R198     |             |             | RD14BB2C392J | RD 3.9K J 1/6W      |                  |
| R199,200 |             |             | RK73GB2A100J | CHIP R 10 J 1/10W   |                  |
| R201     |             |             | RK73GB2A392J | CHIP R 3.9K J 1/10W |                  |
| R202     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R203,204 |             |             | RK73GB2A560J | CHIP R 56 J 1/10W   |                  |
| R205     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                  |
| R206     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R207,208 |             |             | RK73GB2A152J | CHIP R 1.5K J 1/10W |                  |
| R209     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R210     |             |             | RK73GB2A203J | CHIP R 20K J 1/10W  |                  |
| R211     |             |             | RK73GB2A823J | CHIP R 82K J 1/10W  |                  |
| R212     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W |                  |
| R213     |             |             | RK73GB2A123J | CHIP R 12K J 1/10W  |                  |
| R214,215 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R216     |             |             | RK73GB2A682J | CHIP R 6.8K J 1/10W |                  |
| R217     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R218     |             |             | RK73GB2A183J | CHIP R 18K J 1/10W  |                  |
| R219     |             |             | RK73GB2A132J | CHIP R 1.3K J 1/10W |                  |
| R220,221 |             |             | RK73GB2A203J | CHIP R 20K J 1/10W  |                  |
| R222     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                  |
| R223     |             |             | RK73GB2A203J | CHIP R 20K J 1/10W  |                  |
| R224     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R225     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R226,227 |             |             | RK73GB2A100J | CHIP R 10 J 1/10W   |                  |
| R228     |             |             | RK73GB2A153J | CHIP R 15K J 1/10W  |                  |
| R229     |             |             | RK73GB2A271J | CHIP R 270 J 1/10W  |                  |
| R230     |             |             | RK73GB2A133J | CHIP R 13K J 1/10W  |                  |
| R231     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W  |                  |
| R232     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                  |
| R234,235 |             |             | RK73GB2A470J | CHIP R 47 J 1/10W   |                  |
| R236,237 |             |             | RK73GB2A101J | CHIP R 100 J 1/10W  |                  |
| R238     |             |             | RK73GB2A122J | CHIP R 1.2K J 1/10W |                  |
| R240     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                  |
| R241     |             |             | RK73GB2A512J | CHIP R 5.1K J 1/10W |                  |
| R242     |             |             | RD14BB2C473J | RD 47K J 1/6W       |                  |
| R243     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R244     |             |             | RD14BB2C153J | RD 15K J 1/6W       |                  |
| R254,255 |             |             | RK73GB2A182J | CHIP R 1.8K J 1/10W |                  |
| R256     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R257     |             |             | RD14BB2C104J | RD 100K J 1/6W      |                  |
| R258     |             |             | RD14BB2C153J | RD 15K J 1/6W       |                  |
| R260,261 |             |             | RK73GB2A272J | CHIP R 2.7K J 1/10W |                  |
| R262,263 |             |             | RK73GB2A101J | CHIP R 100 J 1/10W  |                  |
| R267,268 |             |             | RK73GB2A105J | CHIP R 1.0M J 1/10W |                  |
| R269     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                  |
| R270-272 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R275,276 |             |             | RD14BB2C153J | RD 15K J 1/6W       |                  |
| R282     |             |             | RK73GB2A163J | CHIP R 16K J 1/10W  |                  |
| R283-286 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |

E : Europe K : North America M : Other Areas E : Without Europe

△ Indicates safety critical components.

## PARTS LIST

## AUDIO UNIT (X09-5790-11)

| Ref. No. | Add | New | Parts No.    | Description          | Destination | Ref. No. | Add | New | Parts No.      | Description          | Destination |
|----------|-----|-----|--------------|----------------------|-------------|----------|-----|-----|----------------|----------------------|-------------|
| R287     |     |     | RK73GB2A182J | CHIP R 1.8K J 1/10W  |             | W388     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R288,289 |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             | W389,390 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| R291     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             | W391     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R292     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             | W392-398 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| R293     |     |     | RK73GB2A333J | CHIP R 33K J 1/10W   |             | W399     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R294     |     |     | RK73GB2A511J | CHIP R 510 J 1/10W   |             | W400-402 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| R295     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             | W403     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R301     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             | W404     |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| R303     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W  |             | W405     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R304     |     |     | RK73GB2A101J | CHIP R 100 J 1/10W   |             | W407-409 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| R305     |     |     | RK73GB2A113J | CHIP R 11K J 1/10W   |             | W410,411 |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R306     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             | W412-415 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| R307     |     |     | RK73GB2A474J | CHIP R 470K J 1/10W  |             | W416     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R308-311 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             | W417-419 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| R312,313 |     |     | RK73GB2A101J | CHIP R 100 J 1/10W   |             | W420     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R319,320 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             | W421-424 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| R321     |     |     | RK73EB2E102J | CHIP R 1.0K J 1/4W   |             | W425     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| R322     |     |     | RK73GB2A100J | CHIP R 10 J 1/10W    |             | W426,427 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W301-310 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | W428,429 |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| W311     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W430-433 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W312     |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | W434     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| W313     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W435-439 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W314-316 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | W440     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| W317-320 |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W441     |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W322-328 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | W442-445 |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| W329     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W446     |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W330     |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | W448     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| W331     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W450     |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W332,333 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | W451     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| W334     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W452,453 |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W338,339 |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W457     |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W340-342 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | W458-463 |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| W343     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W464     |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W344-346 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | W468     |     |     | R92-1252-05    | CHIP R 0 OHM J 1/16W |             |
| W347,348 |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | W469     |     |     | RK73EB2E000J   | CHIP R 0.0 J 1/4W    |             |
| W350-352 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | S1       | 3B  |     | S68-0806-05    | PUSH SWITCH          |             |
| W353     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | S6       |     | *   | S79-0853-05    | DIP SWITCHES         |             |
| W354     |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D1       |     |     | 1SS133         | DIODE                |             |
| W356,357 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D3       |     |     | UMZ6.8N        | ZENER DIODE          |             |
| W358     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | D4       |     |     | RD6.2JS-AZ(B2) | ZENER DIODE          |             |
| W359     |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D5       |     |     | UMZ6.8N        | ZENER DIODE          |             |
| W361     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | D8       |     |     | RD6.2JS-AZ(B2) | ZENER DIODE          |             |
| W362-365 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D10,11   |     |     | 1SS355         | DIODE                |             |
| W366,367 |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | D12-15   |     |     | 1SS133         | DIODE                |             |
| W368     |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D17      |     |     | UDZS10B        | ZENER DIODE          |             |
| W369-371 |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | D18,19   |     |     | 1SS355         | DIODE                |             |
| W372-374 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D20      |     |     | UDZS10B        | ZENER DIODE          |             |
| W375,376 |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | D21,22   |     |     | 1SS133         | DIODE                |             |
| W377     |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D23      |     |     | RD5.1JS-AZ(B2) | ZENER DIODE          |             |
| W378     |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | D24,25   |     |     | 1SS133         | DIODE                |             |
| W379,380 |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D26      |     |     | UDZS5.1B       | ZENER DIODE          |             |
| W381,382 |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | D27,28   |     |     | 1SS133         | DIODE                |             |
| W383     |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             | D30,31   |     |     | 1SS133         | DIODE                |             |
| W384-386 |     |     | RK73EB2E000J | CHIP R 0.0 J 1/4W    |             | D32      |     |     | UDZS10B        | ZENER DIODE          |             |
| W387     |     |     | R92-1252-05  | CHIP R 0 OHM J 1/16W |             |          |     |     |                |                      |             |

E : Europe K : North America M : Other Areas E : Without Europe

△ Indicates safety critical components.

## PARTS LIST

## AUDIO UNIT (X09-5790-11)

| Ref. No.                                 | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                 | Description                                                                        | Desti-<br>nation |
|------------------------------------------|-------------|-------------|---------------------------------------------------------------------------|------------------------------------------------------------------------------------|------------------|
| D33<br>D34<br>D37<br>D38<br>D39          |             |             | UDZS2.7B<br>UDZS16B<br>RD15JS-AZ(B)<br>FCH20A20<br>FRH20A20               | ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE<br>DIODE<br>DIODE                        |                  |
| D40-43<br>D44<br>D46<br>D48<br>D49       |             |             | 1SS133<br>UDZS5.1B<br>UDZS5.1B<br>1SS355<br>UDZS5.1B                      | DIODE<br>ZENER DIODE<br>ZENER DIODE<br>DIODE<br>ZENER DIODE                        |                  |
| D50<br>D51<br>D52,53<br>D54<br>D55       |             |             | UDZS6.8B<br>RD15JS-AZ(B)<br>1SS355<br>RM4ZLF-J1NF<br>1SS355               | ZENER DIODE<br>ZENER DIODE<br>DIODE<br>DIODE<br>DIODE                              |                  |
| D56,57<br>D58<br>D59<br>D60-62<br>D64,65 |             |             | RM4ZLF-J1NF<br>1SS355<br>DA204U<br>UMZ6.8N<br>1SS355                      | DIODE<br>DIODE<br>DIODE<br>ZENER DIODE<br>DIODE                                    |                  |
| D69<br>D70,71<br>D76<br>D77<br>D80       |             |             | UDZS16B<br>1SS355<br>LM1MA142WA-G<br>LM1MA142WK-G<br>LM1MA142WK-G         | ZENER DIODE<br>DIODE<br>DIODE<br>DIODE<br>DIODE                                    |                  |
| D81<br>D82<br>D86<br>D89<br>D90          |             |             | 1SS355<br>UDZS5.1B<br>UDZS4.7B<br>S5566B-Q<br>1SS355                      | DIODE<br>ZENER DIODE<br>ZENER DIODE<br>DIODE<br>DIODE                              |                  |
| D91<br>D92,93<br>D94<br>IC1,2<br>IC3     |             |             | DA204U<br>RD24ES-AZ(B)<br>UMZ6.8N<br>BA4560F<br>NJM319D-ZB                | DIODE<br>ZENER DIODE<br>ZENER DIODE<br>ANALOGUE IC<br>ANALOGUE IC                  |                  |
| IC4,5<br>IC6<br>IC7<br>IC10<br>IC11      |             | *           | TC74HC00AF-F<br>BA10393F<br>BA4560F<br>784224YGC117A<br>PST3436UL-E       | MOS-IC<br>ANALOGUE IC<br>ANALOGUE IC<br>MICROCONTROLLER IC<br>MOS-IC               |                  |
| IC13<br>IC14<br>IC15<br>IC16<br>Q1       |             | *           | UPC494GS-A<br>BA4560F<br>P82B96PN<br>BA10393F<br>2SC4081                  | ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>TRANSISTOR             |                  |
| Q2<br>Q3<br>Q4-6<br>Q7,8<br>Q9           |             |             | 2SA1576A<br>2SC4081<br>2SA1576A<br>DTC114EUA<br>DTA114EUA                 | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR |                  |
| Q10<br>Q15<br>Q16,17<br>Q18<br>Q19       |             | *           | 2SC4081<br>2SC3478AA(L,K)<br>2SA1576A<br>2SC3478AA(L,K)<br>2SA1352E/F-KEN | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                 |                  |

| Ref. No.                                       | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                         | Description                                                                         | Desti-<br>nation |
|------------------------------------------------|-------------|-------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|------------------|
| Q20<br>Q21,22<br>Q23<br>Q24<br>Q25             |             | *           | 2SA1576A<br>2SA1352E/F-KEN<br>2SD1863<br>2SC4081<br>2SC4467NF                     | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                  |                  |
| Q26<br>Q27,28<br>Q29<br>Q30<br>Q31             |             | *           | 2SA1859ANF<br>2SA1352E/F-KEN<br>2SC1845-A(F,E)<br>2SA992-A(F,E)<br>2SA1376AA(L,K) | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                  |                  |
| Q33<br>Q35<br>Q36<br>Q37<br>Q39                |             |             | 2SC3478AA(L,K)<br>DTC114EUA<br>DTA114EUA<br>2SC3478AA(L,K)<br>2SC3902             | TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR  |                  |
| Q40<br>Q41<br>Q42<br>Q43<br>Q44                |             | *           | 2SA1286-T111G<br>DTC114EUA<br>2SC3478AA(L,K)<br>2SA1286-T111G<br>2SC3902          | TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR          |                  |
| Q46<br>Q47<br>Q48-51<br>Q52<br>Q53,54          |             |             | DTC114EUA<br>2SD1863<br>STW34NB20<br>2SC3478AA(L,K)<br>2SA1376AA(L,K)             | DIGITAL TRANSISTOR<br>TRANSISTOR<br>FET<br>TRANSISTOR<br>TRANSISTOR                 |                  |
| Q55<br>Q57,58<br>Q59<br>Q60,61<br>Q62          |             |             | 2SC3478AA(L,K)<br>2SK3662-F<br>DTC114EUA<br>2SK3662-F<br>2SC4081                  | TRANSISTOR<br>FET<br>DIGITAL TRANSISTOR<br>FET<br>TRANSISTOR                        |                  |
| Q63<br>Q64,65<br>Q66<br>Q67,68<br>Q71          |             |             | DTA114EUA<br>2SK3662-F<br>2SC4081<br>2SK3662-F<br>2SC4081                         | DIGITAL TRANSISTOR<br>FET<br>TRANSISTOR<br>FET<br>TRANSISTOR                        |                  |
| Q72<br>Q73<br>Q74<br>Q75,76<br>Q77             |             |             | 2SA1576A<br>2SC4081<br>2SC4097<br>2SA1577<br>2SC4097                              | TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR                  |                  |
| Q78<br>Q79<br>Q80<br>Q81,82<br>Q83             |             |             | 2SC4081<br>DTC114EUA<br>2SB1241<br>DTA114EUA<br>2SD1863                           | TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR  |                  |
| Q84<br>Q86<br>Q88,89<br>Q95<br>Q96             |             |             | 2SK246(BL)-F<br>DTC114EUA<br>2SC4081<br>DTA114EUA<br>DTC114EUA                    | FET<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR |                  |
| Q97-99<br>Q102<br>Q103,104<br>Q106<br>Q107,108 |             |             | 2SC4081<br>DTA114EUA<br>2SC945AA(Q,P)<br>2SB1238<br>2SC4081                       | TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR<br>TRANSISTOR          |                  |

E : Europe K : North America M : Other Areas E : Without Europe

△ Indicates safety critical components.

