


2.2 EXTERIOR

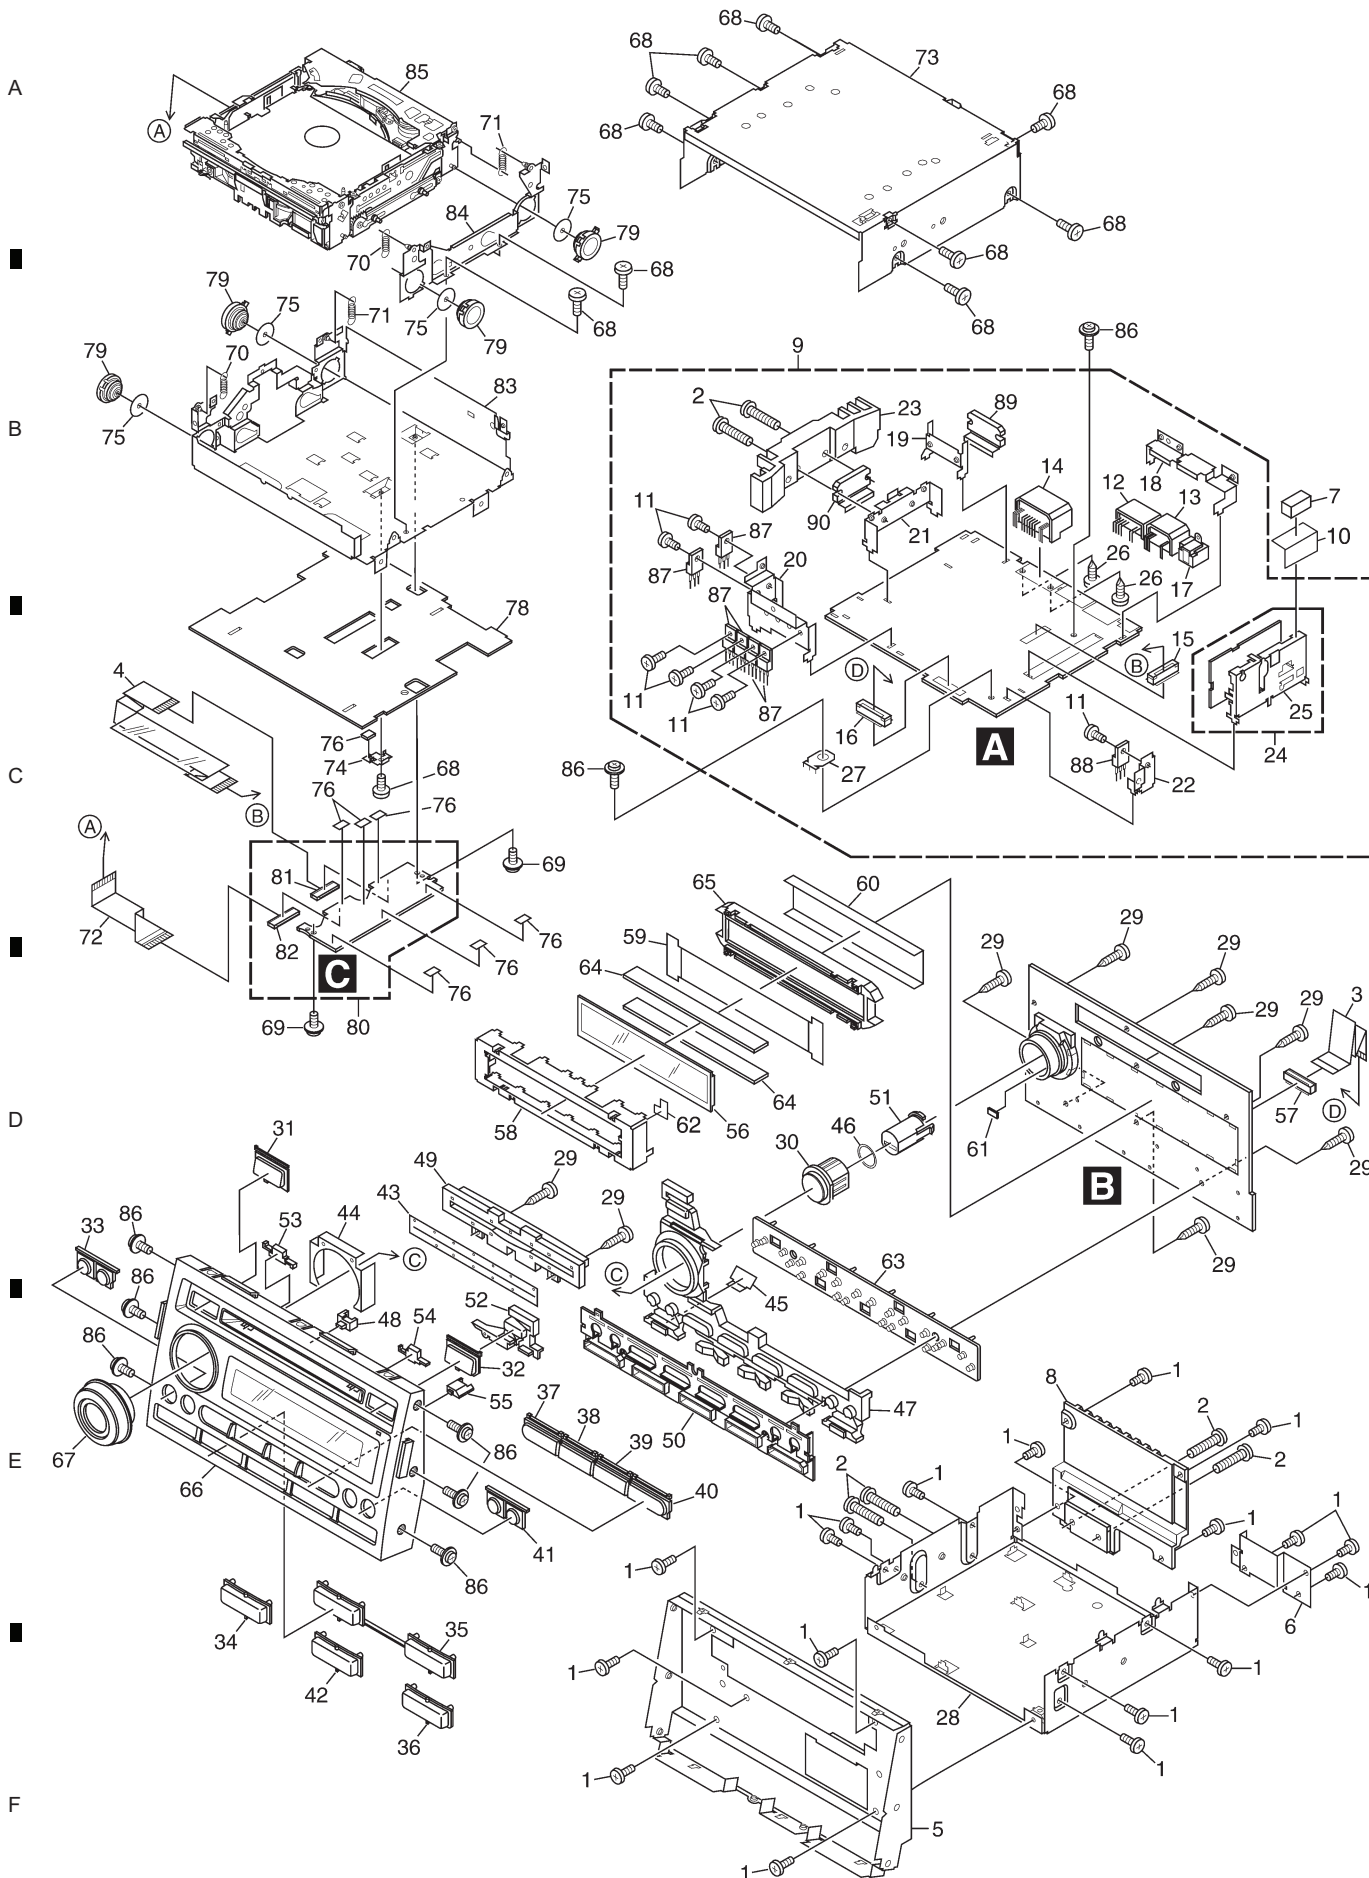

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ26P060FTC	50	Holder	CNV7992	
2	Screw	BMZ26P200FTC				
3	Flat Cable	CDE7472	51	Lighting Conductor	CNV7996	A
4	Flat Cable	CDE7753	52	Lighting Conductor	CNV8161	
5	Holder	CND2065	53	Lighting Conductor	CNV8162	
			54	Lighting Conductor	CNV8163	
6	Holder	CND2395	55	Lighting Conductor	CNV8341	
7	Cushion	CNM9416				
8	Heat Sink	CNR1737	56	LCD(LCD901)	CAW1830	
9	Tuner Amp Unit	See Contrast table(2)	57	Connector(CN901)	CKS2769	
10	Insulator	CNM9614	58	Holder	CND2055	
			59	Plate	CNM8680	
11	Screw	BMZ30P060FTC	60	Sheet	CNM8691	B
12	Connector(CN932)	CKM1208				
13	Connector(CN933)	CKM1215	61	Spacer	CNM9534	
14	Plug(CN931)	CKM1283	62	Cushion	CNM9607	
15	Connector(CN101)	CKS2767	63	Rubber	CNV7999	
			64	Connector	CNV8002	
16	Connector(CN601)	CKS2769	65	Lighting Conductor Unit	CXC4125	
17	Connector(ANT401)	CKX1072				
18	Holder	CND2057	66	Grille Unit	See Contrast table(2)	
19	Holder	CND2058	67	Knob Unit	CXC3860	
20	Holder	CND2059	68	Screw	BMZ26P040FTC	
			69	Screw(M2x2.5)	CBA1624	C
21	Holder	CND2060	70	Spring(Silver)	CBH2481	
22	Holder	CND2193				
23	Heat Sink	CNR1738	71	Spring(Black)	CBH2482	
24	FM/AM Tuner Unit	CWE1811	72	Flat Cable	CDE7473	
25	Holder	CND2144	73	Case	CNB2962	
			74	Holder	CND2376	
26	Screw	PRZ30P060FSN	75	Sheet	CNM5981	
27	Terminal(CN402)	VNF1084				
28	Chassis Unit	CXC2718	76	Cushion	CNM8525	
29	Screw	BPZ26P100FTC	77			
30	Button(PWR)	CAC8475	78	Spacer	CNM9117	D
			79	Damper	CNV6608	
31	Button(LOAD)	See Contrast table(2)	80	Control Unit	CWX2971	
32	Button(CD EJECT)	See Contrast table(2)				
33	Button(SOUND, SCAN)	See Contrast table(2)	81	Connector(CN601)	CKS2417	
34	Button(SEEK/SKIP)	See Contrast table(2)	82	Connector(CN101)	CKS4512	
35	Button(1/2, 5/6)	See Contrast table(2)	83	Chassis Unit	CXC2722	
			84	Bracket Unit	CXC2723	
36	Button(TUNE)	See Contrast table(2)	85	Service Mechanism Assy(G2H)	CXX1898	
37	Button(CD/AUX)	See Contrast table(2)				
38	Button(AM/FM)	See Contrast table(2)	86	Screw	IMS26P055FTC	E
39	Button(XM)	See Contrast table(2)	87	Transistor(Q103, 802, 813-816)	2SB1185	
40	Button(DISP/MODE)	See Contrast table(2)	88	IC(IC401)	BA033T	
			89	IC(IC501)	PAL006A	
41	Button(RPT, A.SEL/RDM)	See Contrast table(2)	90	IC(IC511)	TDA7384	
42	Button(3/4)	See Contrast table(2)				
43	Cover	CNM8679				
44	Sheet	CNM9408				
45	Sheet	CNM9533				
46	Spacer	CNM9535				
47	Lighting Conductor	CNV7989				F
48	Lighting Conductor	CNV7990				
49	Guide	CNV7991				

(2) CONTRAST TABLE

DEH-MG6347ZH/XU/UC, DEH-MG6447ZH/XU/UC, DEH-MG6547ZH/XU/UC, DEH-MG6647ZH/XU/UC, DEH-MG6747ZH/XU/UC and DEH-MG6847ZH/XU/UC are constructed the same except for the following:

A

Mark	No.	Description	MG6347ZH	MG6447ZH	MG6547ZH	MG6647ZH	MG6747ZH	MG6847ZH
	9	Tuner Amp Unit	CWM9469	CWM9470	CWM9469	CWM9470	CWM9471	CWM9471
	31	Button(LOAD)	CAC8476	CAC8476	CAC8999	CAC8999	CAC8476	CAC8999
	32	Button(CD EJECT)	CAC8477	CAC8477	CAC9001	CAC9001	CAC8477	CAC9001
	33	Button(SOUND, SCAN)	CAC8478	CAC8478	CAC8492	CAC8492	CAC8478	CAC8492
	34	Button(SEEK/SKIP)	CAC8479	CAC8479	CAC8496	CAC8496	CAC8479	CAC8496
	35	Button(1/2, 5/6)	CAC8480	CAC8480	CAC9002	CAC9002	CAC8480	CAC9002
	36	Button(TUNE)	CAC8481	CAC8481	CAC8497	CAC8497	CAC8481	CAC8497
	37	Button(CD/AUX)	CAC8808	CAC8493(FM)	CAC8813	CAC8494(FM)	CAC9093(CD)	CAC9094(CD)
	38	Button(AM/FM)	CAC8809	CAC8818(AM)	CAC8814	CAC8821(AM)	CAC8809	CAC8814
	39	Button(XM)	CAC8810	CAC8819(CD)	CAC8815	CAC8822(CD)	CAC9034(XM/AUX)	CAC9035(XM/AUX)
B	40	Button(DISP/MODE)	CAC8811	CAC8820(AUX)	CAC8816	CAC8823(AUX)	CAC8811	CAC8816
	41	Button(RPT, A.SEL/RDM)	CAC8812	CAC8812	CAC8817	CAC8817	CAC8812	CAC8817
	42	Button(3/4)	CAC9020	CAC9020	CAC9021	CAC9021	CAC9020	CAC9021
	66	Grille Unit	CXC2721	CXC2776	CXC2775	CXC2777	CXC3856	CXC3857


C

D

E

F

2.3 SERVICE MECHANISM ASSY(G2H) (1)

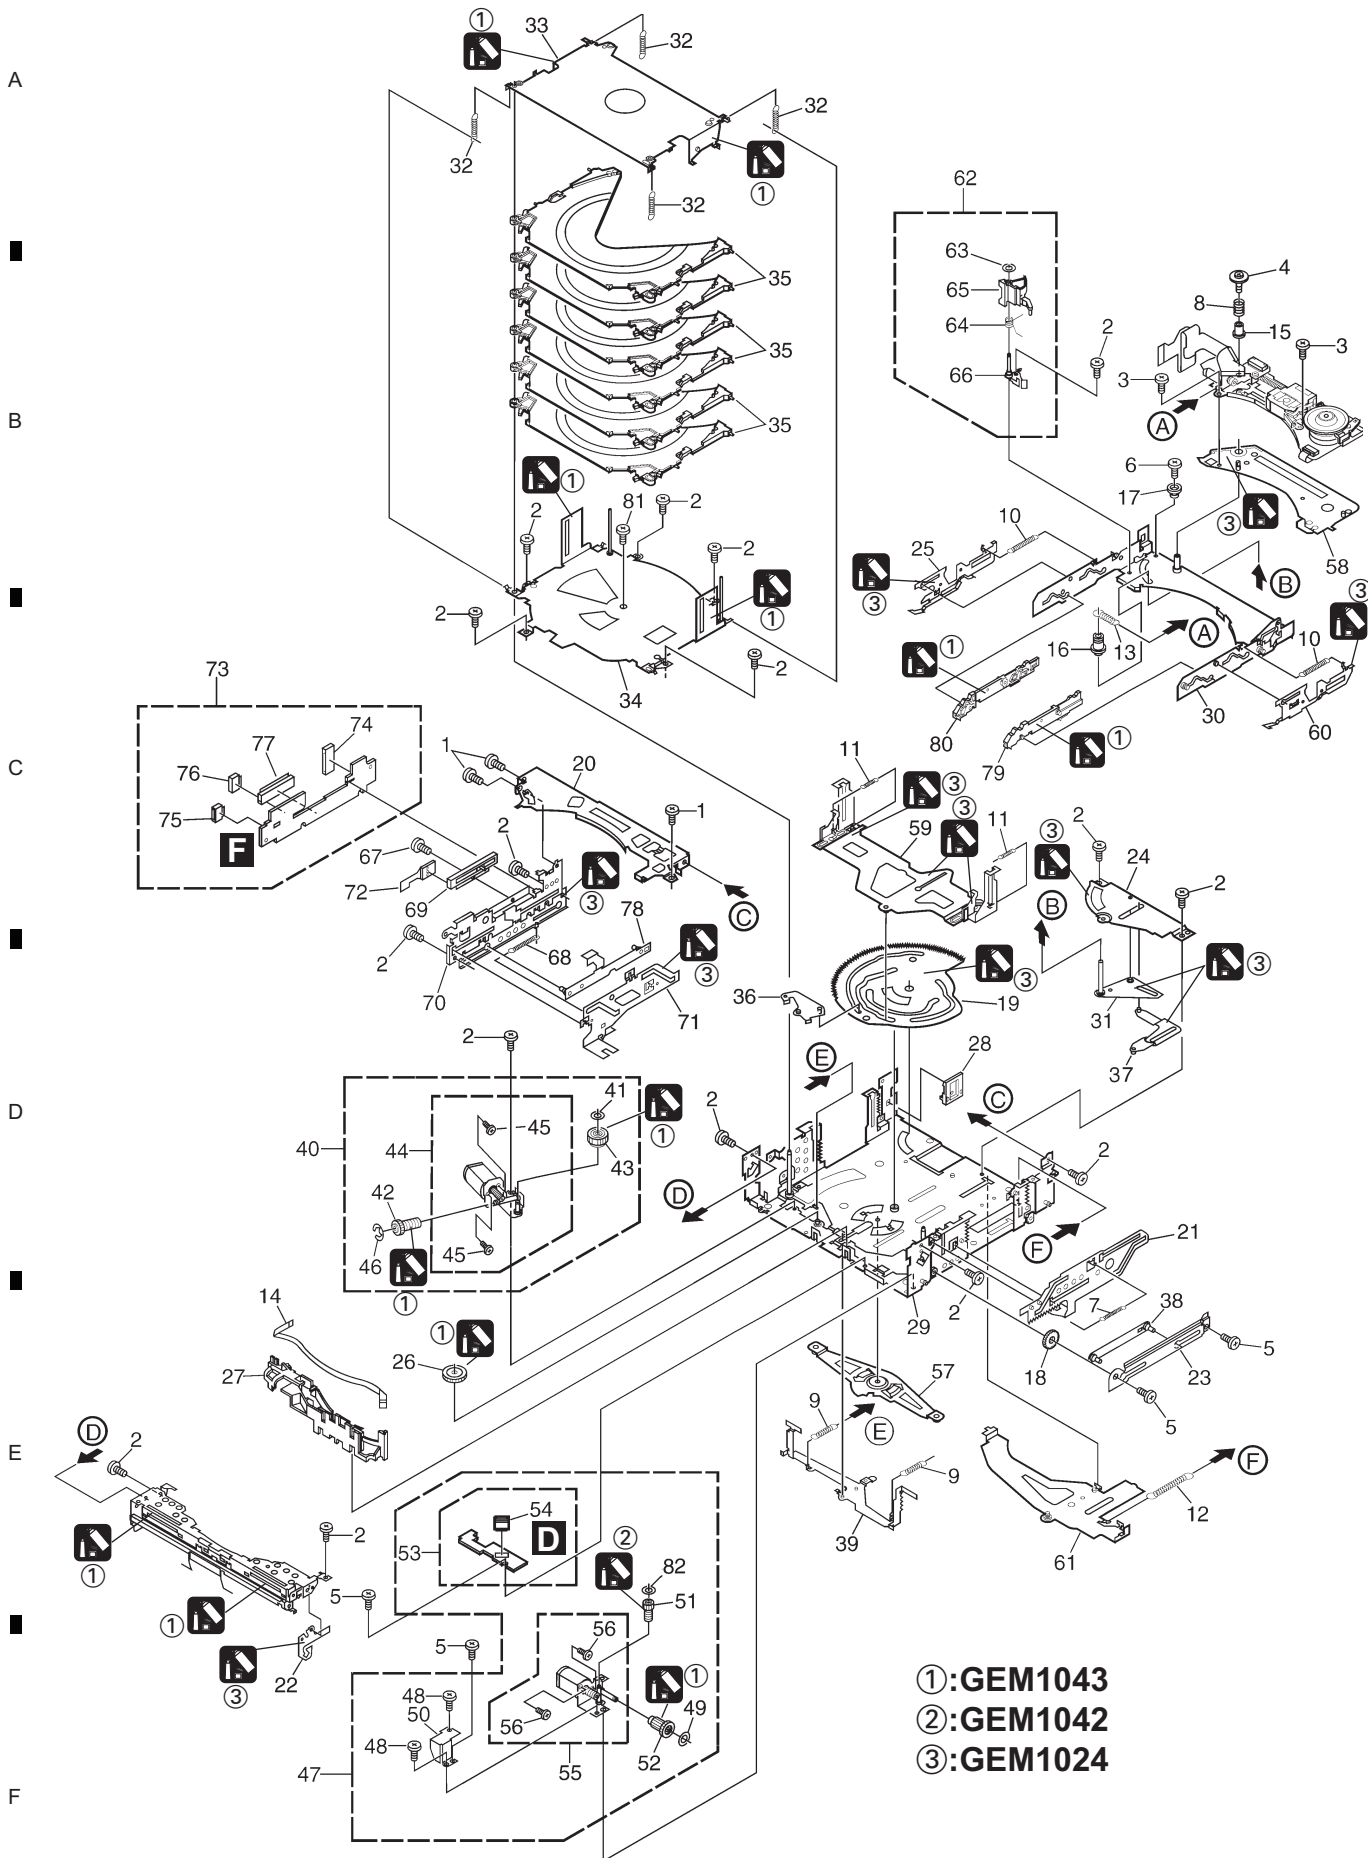


SERVICE MECHANISM ASSY(G2H) (1) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ20P020FZB	50	Holder	CND1668	
2	Screw	BMZ20P025FTC				
3	Screw(M2x2)	CBA1556	51	Gear	CNV6634	A
4	Screw(M2x2.5)	CBA1626	52	Gear	CNV6635	
5	Screw(M2x2.5)	CBA1609	53	PCB Unit(LED)	CWX2614	
			*	54 Connector(CN31)	CKS4523	
6	Screw(M2x4.5)	CBA1629	55	Motor Unit(-A)(M2)	CXC1145	
7	Spring	CBH2460				
8	Spring	CBH2461	56	Screw	JFZ20P020FTC	
9	Spring	CBH2484	*	57 Arm Unit	CXC1653	
10	Spring	CBH2694		58 Bracket Unit	CXC1654	
			*	59 Lever Unit	CXC1658	
11	Spring	CBH2486	*	60 Lever Unit	CXC1659	B
12	Spring	CBH2487				
13	Spring	CBH2500	*	61 Lever Unit	CXC1661	
14	Connector	CDE6698	62	Arm Assy	CXB8822	
15	Collar	CLA4329	63	Washer	CBF1038	
			64	Spring	CBH2489	
16	Collar	CLA4330	65	Arm	CNV6735	
17	Collar	CLA4331				
18	Gear	CND1649	66	Bracket Unit	CXC1652	
19	Cam Gear	CND1650	67	Screw	BMZ20P025FTC	
20	Frame	CND1651	68	Spring	CBH2459	
			69	Variable Resistor(VR1)	CCW1023	C
21	Steer	CND1655	70	Bracket	CND1652	
22	Arm	CND2353				
23	Bracket	CND1658	71	Steer	CND1656	
24	Bracket	CND1660	72	Flexible PCB	CNP6368	
* 25	Lever	CNC9953	73	PCB Unit(SIDE)	CWX2613	
			74	Connector(CN12)	CKS3991	
26	Gear	CNV6612	* 75	Connector(CN14)	CKS4404	
27	Holder	CNV8194				
28	Holder	CNV6738	76	Connector(CN13)	CKS4525	
* 29	Chassis Unit	CXC1642	77	Connector(CN11)	CKS4572	
* 30	Frame Unit	CXC1643	78	Lever Unit	CXC1779	D
			* 79	Lever Unit	CXB9121	
* 31	Arm Unit	CXC1647	* 80	Lever Unit	CXB9122	
32	Spring	CBH2488				
33	Holder Unit	CXC1644	81	Screw	JFZ20P020FTC	
34	Holder Unit	CXC1646	82	Washer	CBF1037	
35	Tray Unit	CXB6930				
36	Lever Unit	CXC1648				
* 37	Lever Unit	CXC1649				
38	Lever Unit	CXC1650				E
* 39	Lever Unit	CXC1651				
40	Cam Motor Assy	CXB7522				
41	Washer	CBF1064				
42	Gear	CNV6610				
43	Gear	CNV6611				
44	Motor Unit(-A)(M1)	CXC1144				
45	Screw	JFZ20P020FTC				
46	Washer	YE20FTC				
47	ELV Motor Assy	CXB7523				F
48	Screw	BMZ20P025FTC				
49	Washer	CBF1064				

1 2 3 4

2.4 SERVICE MECHANISM ASSY(G2H) (2)

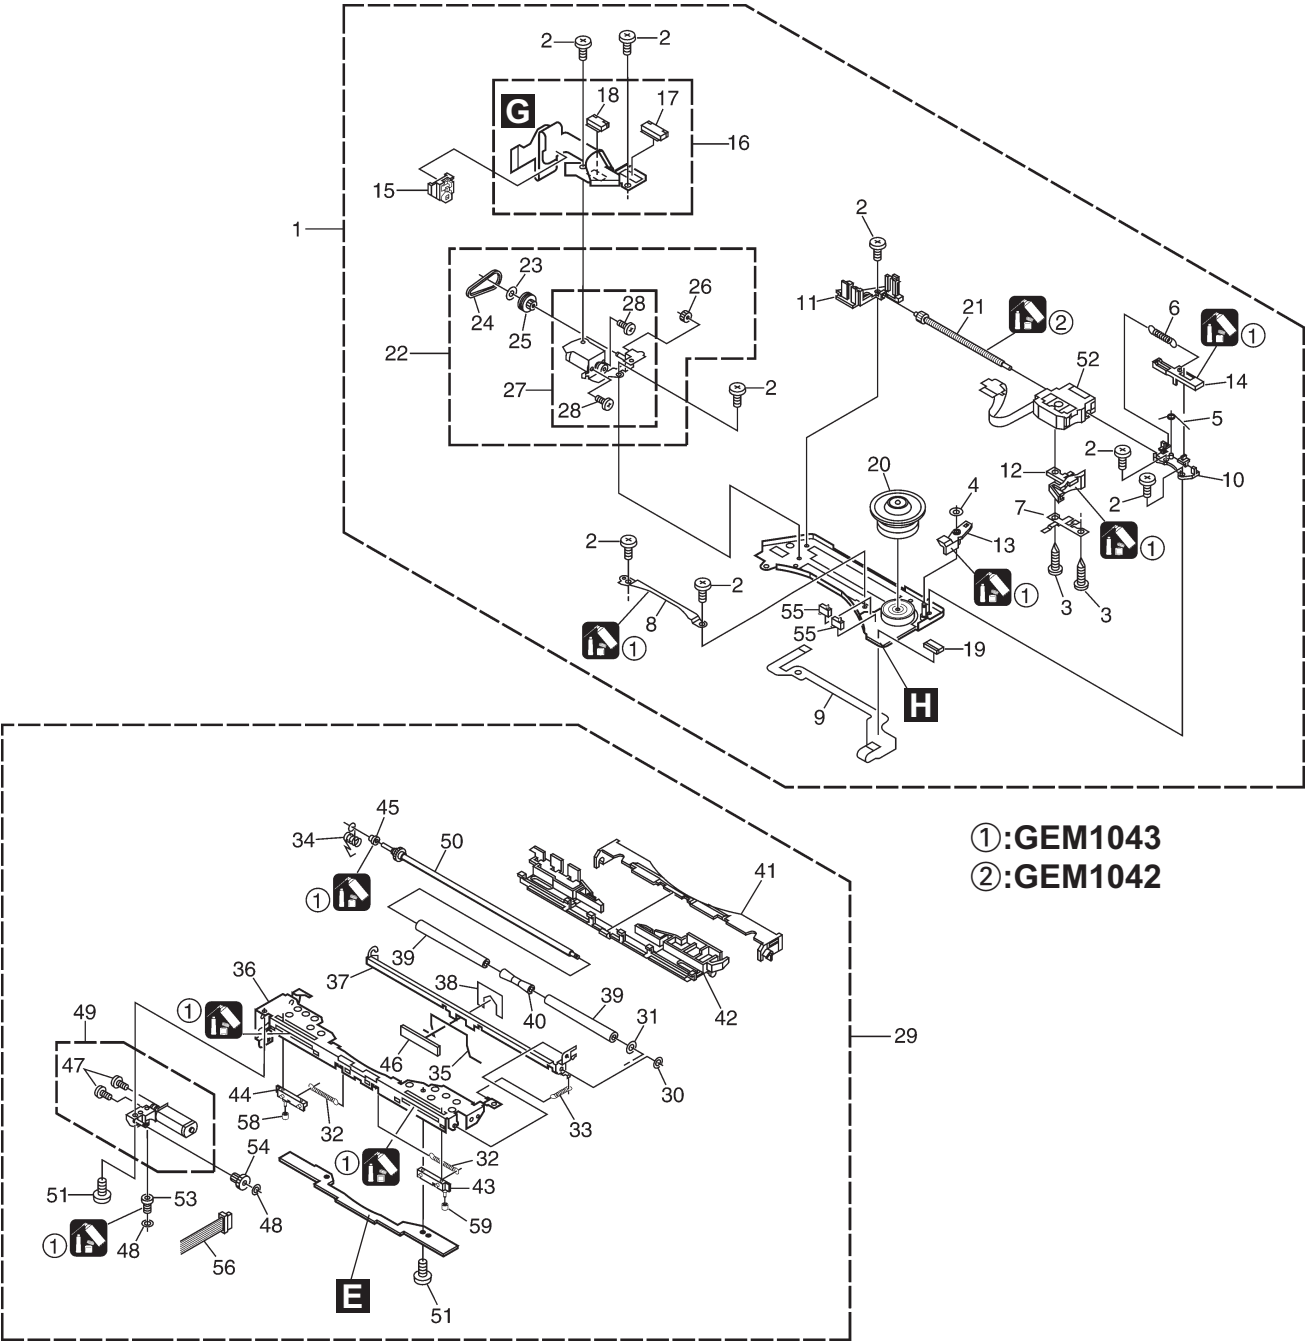

SERVICE MECHANISM ASSY(G2H) (2) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
* 1	Service CRG Mechanism Assy(G2)	CXX1767	50	Shaft Unit	CXB7528	
2	Screw(M2x2)	CBA1556				A
3	Screw(M2x6)	CBA1628	51	Screw	JFZ20P020FTC	
4	Washer	CBF1038	52	PU Unit(Service)(PX1)	CXX1568	
5	Spring	CBH2453	* 53	Gear	CNV6620	
			* 54	Gear	CNV6621	
6	Spring	CBH2480	55	Switch(S7,8)	CSN1057	
7	Spring	CBL1521				
* 8	Guide	CNC9402	* 56	Connector	CDE6674	
9	Flexible PCB	CNP6217	57	Roller	CNV7985	
10	Holder	CNV6624	58	Roller	CNV7982	
11	Holder	CNV6625				B
12	Rack	CNV6642				
13	Arm	CNV6731				
14	Lever	CNV6736				
15	Holder	CNV6737				
16	PCB Unit	CWX2611				
17	Connector(CN41)	CKS3785				
18	Connector(CN42)	CKS4508				
19	Connector(CN1)	CKS4508				
20	Support Wheel Unit	CXC3778				
						C
21	Screw Unit(-B)	CXB7518				
22	Carriage Motor Assy	CXB7521				
23	Washer	CBF1038				
24	Belt	CNT1088				
25	Pulley	CNV6627				
26	Gear	CNV6629				
27	Motor Unit(-A)(M3)	CXC4658				
28	Screw	JFZ14P020FTC				
29	Loading Mech. Assy	CXC4753				
30	Washer	CBF1037				D
* 31	Washer	CBF1075				
* 32	Spring	CBH2450				
33	Spring	CBH2452				
* 34	Spring	CBH2457				
* 35	Spring	CBH2580				
* 36	Frame	CND1653				
* 37	Arm	CND1654				
* 38	Sheet	CNM7295				
39	Roller	CNV6616				E
40	Collar	CNV6617				
* 41	Guide	CNV6622				
* 42	Holder	CNV6636				
43	Lever Unit	CXC2711				
44	Lever Unit	CXC2710				
45	Collar	CNV6734				
* 46	Holder	CNV7144				
47	Screw	JFZ12P018FTC				F
48	Washer	CBF1037				
* 49	Motor Unit	CXC4220				

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Circuit Symbol and No.

Part No.

Circuit Symbol and No.

Part No.

A

Unit Number:CWM9469(MG6347, MG6547)

Unit Number:CWM9470(MG6447, MG6647)

Unit Number:CWM9471(MG6747, MG6847)

Unit Name:Tuner Amp Unit

MISCELLANEOUS

IC 151	(A,120,79) IC	BA4560F
IC 201	(A,82,69) IC	PM2011A
IC 371	(A,54,87) IC	BA4560F
IC 401	(A,170,37) IC	BA033T
IC 501	(A,20,144) IC	PAL006A
IC 511	(A,22,74) IC	TDA7384
IC 601	(A,112,44) IC	PD5959A
IC 641	(A,105,121) IC	PML001A
IC 661	(A,134,77) IC	S-93C66BD0I-J8
IC 681	(A,122,122) IC	HA12240FP
IC 691	(A,135,66) IC	S-80835CNNB-B8U
IC 771	(A,145,128) IC	PML001A
Q 101	(A,25,26) Transistor	2SA1037K
Q 102	(A,25,29) Transistor	DTC124EU
Q 103	(A,24,12) Transistor	2SB1185
Q 104	(A,26,20) Transistor	IMX1
Q 401	(A,163,47) Transistor	2SA1037K
Q 402	(A,163,52) Transistor	2SA1037K
Q 503	(B,20,102) Transistor	DTC114EU
Q 504	(B,16,114) Transistor	2SC4081
Q 505	(B,16,106) Transistor	DTC114EU
Q 591	(A,88,121) Transistor	2SA1576
Q 592	(A,75,109) Transistor	DTA124EU
Q 601	(A,117,69) Transistor	DTA143EU
Q 602	(A,121,69) Transistor	DTA114EU
Q 603	(A,129,26) Transistor	DTA114EU
Q 604	(A,122,21) Transistor	DTA123EU
Q 605	(A,124,26) Transistor	DTC124EU
Q 681	(A,119,130) Transistor	2SC4081
Q 691	(A,103,106) Transistor	2SC4081
Q 692	(A,106,108) Transistor	2SC4081
Q 731	(A,93,115) Transistor	2SA1576
Q 781	(A,71,111) Transistor	2SC4081
Q 801	(B,23,37) Transistor	2SC2712
Q 802	(A,6,32) Transistor	2SB1185

Q 803	(B,15,36) Transistor	2SC2713
Q 804	(A,40,47) Transistor	2SC2713
Q 805	(A,35,61) Transistor	2SB1236
Q 806	(A,136,121) Transistor	2SD2318F5
Q 807	(A,63,25) Transistor	2SB1242
Q 808	(B,71,28) Transistor	2SC4081
Q 809	(A,66,34) Transistor	2SB1184F5
Q 810	(B,70,33) Transistor	2SC4081
Q 811	(A,52,27) Transistor	2SD1626
Q 812	(A,39,27) Transistor	2SD1626
Q 813	(A,6,21) Transistor	2SB1185
Q 814	(A,36,12) Transistor	2SB1185
Q 815	(A,47,12) Transistor	2SB1185
Q 816	(A,59,12) Transistor	2SB1185
Q 820	(A,52,59) Transistor	2SD1760F5
D 180	(A,118,99) Diode	UDZS4R7(B)
D 401	(A,139,38) Diode	MPG06G-6415G50
D 541	(B,14,119) Diode	HZU9R1(B1)
D 591	(A,84,115) Diode	1SS355
D 592	(A,85,119) Diode	MPG06G-6415G50
D 593	(A,82,119) Diode	MPG06G-6415G50
D 661	(A,132,83) Diode	1SS355
D 662	(A,128,74) Diode	1SS355
D 663	(A,132,70) Diode	1SS355
D 681	(A,110,123) Diode	UDZS18(B)
D 682	(A,116,123) Diode	UDZS18(B)
D 691	(A,101,116) Diode	UDZS7R5(B)
D 692	(A,103,113) Diode	UDZS7R5(B)
D 693	(A,135,61) Diode	1SS355
D 695	(A,105,129) Diode	MPG06G-6415G50
D 696	(A,105,132) Diode	MPG06G-6415G50
D 731	(A,95,119) Diode	MPG06G-6415G50
D 732	(A,93,119) Diode	MPG06G-6415G50
D 733	(A,92,110) Diode	1SS355
D 753	(A,89,112) Diode	UDZS5R6(B)
D 771	(A,163,140) Diode	MPG06G-6415G50
D 772	(A,161,140) Diode	MPG06G-6415G50
D 781	(A,67,113) Diode	UDZS7R5(B)
D 801	(B,28,38) Diode	HZU8R2(B1)
D 802	(A,46,48) Diode	DAN202U
D 803	(B,132,120) Diode	UDZS5R6(B)
D 804	(A,137,135) Diode	MPG06G-6415G50
D 805	(A,128,115) Diode	DAN202U
D 811	(A,49,121) Diode	5KP24A
D 812	(A,101,137) Diode	MPG06G-6415G50
D 813	(A,85,134) Diode	MPG06G-6415G50

5				6				7				8			
<u>Circuit Symbol and No.</u>				<u>Part No.</u>				<u>Circuit Symbol and No.</u>				<u>Part No.</u>			
D 820	(A,56,52)	Diode		HZU3R9(B2)				R 153	(B,102,107)			RS1/10S682J			
L 101	(A,121,94)	Inductor		CTF1295				R 154	(B,116,125)			RS1/10S682J			A
L 201	(A,85,82)	Inductor		CTF1379				R 155	(B,105,102)			RS1/16S333J			
L 202	(A,97,86)	Inductor		CTF1379				R 156	(A,110,103)			RS1/16S333J			
L 203	(A,93,94)	Inductor		CTF1379				R 161	(A,115,82)			RS1/16S223J			
L 204	(A,83,81)	Inductor		CTF1379				R 162	(A,115,86)			RS1/16S223J			
L 205	(A,81,81)	Inductor		CTF1379				R 163	(A,114,82)			RS1/16S223J			
L 206	(A,79,94)	Inductor		CTF1379				R 164	(A,117,86)			RS1/16S223J			
L 207	(A,78,81)	Inductor		CTF1379				R 165	(A,114,79)			RS1/16S223J			
L 208	(A,75,84)	Inductor		CTF1379				R 166	(A,127,80)			RS1/16S223J			
L 209	(A,62,61)	Inductor		LCTAW2R2J2520				R 167	(A,126,77)			RS1/16S0R0J			
L 210	(A,62,73)	Inductor		LCTAW2R2J2520				R 168	(A,127,77)			RS1/16S0R0J			
L 211	(A,62,69)	Inductor		LCTAW2R2J2520				R 169	(A,118,84)			RS1/16S223J			
L 212	(A,62,65)	Inductor		LCTAW2R2J2520				R 170	(A,120,84)			RS1/16S223J			B
L 213	(B,66,70)	Inductor		CTF1379				R 171	(A,106,101)			RS1/16S682J			
L 214	(B,63,61)	Inductor		CTF1379				R 172	(B,112,101)			RS1/16S682J			
L 215	(B,81,51)	Inductor		CTF1379				R 173	(A,106,103)			RS1/16S682J			
L 216	(A,77,57)	Inductor		CTF1379				R 174	(A,110,100)			RS1/16S682J			
L 217	(A,78,57)	Inductor		CTF1379				R 180	(B,111,97)			RS1/16S821J			
L 218	(A,80,57)	Inductor		CTF1379				R 191	(A,30,25)			RS1/16S0R0J			
L 220	(A,81,56)	Inductor		CTF1379				R 201	(A,93,90)			RS1/16S105J			
L 221	(A,83,56)	Inductor		CTF1379				R 202	(A,79,52)			RAB4C471J			
L 222	(A,84,56)	Inductor		CTF1379				R 203	(A,84,52)			RAB4C471J			
L 223	(A,89,57)	Inductor		CTF1379				R 205	(B,104,90)			RS1/16S0R0J			
L 224	(B,87,54)	Inductor		CTF1379				R 206	(B,102,88)			RS1/16S0R0J			C
L 225	(A,96,59)	Inductor		CTF1379				R 207	(A,85,85)			RS1/16S271J			
L 226	(A,97,67)	Inductor		CTF1379				R 208	(A,83,84)			RS1/16S271J			
L 227	(A,96,61)	Inductor		CTF1379				R 209	(A,81,84)			RS1/16S271J			
L 228	(A,97,68)	Inductor		CTF1379				R 210	(A,78,84)			RS1/16S271J			
L 229	(A,96,63)	Inductor		CTF1379				R 211	(A,71,83)			RS1/16S271J			
L 230	(A,97,70)	Inductor		CTF1379				R 215	(A,93,51)			RS1/16S0R0J			
L 233	(A,97,65)	Inductor		CTF1379				R 216	(A,98,52)			RS1/16S0R0J			
L 234	(A,97,72)	Inductor		CTF1379				R 217	(B,96,57)			RS1/16S562J			
L 235	(A,106,70)	Inductor		CTF1379				R 218	(B,100,65)			RS1/16S562J			
L 237	(A,71,81)	Inductor		CTF1379				R 219	(B,110,78)			RS1/16S222J			
L 401	(A,150,108)	Inductor		LCKAW1R0J2520				R 220	(B,108,80)			RS1/16S222J			D
L 402	(A,155,74)	Inductor		LCKBW1R0M2520				R 311	(A,59,91)			RS1/16S473J			
L 403	(A,154,126)	Inductor		LCTAW330J2520				R 313	(A,62,86)			RS1/16S473J			
L 405	(A,154,88)	Inductor		LCKAW1R0J2520				R 319	(A,59,81)			RS1/16S473J			
L 601	(A,117,57)	Inductor		LCTAW100J2520				R 333	(A,57,94)			RS1/16S223J			
L 801	(A,68,122)	Toroidal Coil		CTH1327				R 349	(A,50,91)			RS1/16S393J			
TC601	(A,111,19)	Trimmer		CCL1046				R 350	(A,49,74)			RS1/16S473J			
CF501	(A,42,137)	Terminal		CKF1062				R 351	(A,52,74)			RS1/16S473J			
CF502	(A,42,133)	Terminal		CKF1062				R 353	(A,64,94)			RS1/16S0R0J			
X 201	(A,91,84)	Radiator 33.8688MHz	CSS1600					R 403	(A,155,101)			RS1/16S681J			
X 601	(A,114,24)	Radiator 10.00MHz	CSS1599					R 405	(A,155,108)			RS1/16S331J			
EF101	(A,123,105)	EMI Filter	CCG1163					R 406	(A,155,105)			RS1/16S331J			E
AR401	(A,167,144)	Surge Protector	DSP-201M-S00B					R 407	(A,155,104)			RS1/16S331J			
	FM/AM Tuner Unit		CWE1811					R 408	(A,155,102)			RS1/16S331J			
								R 409	(B,147,65)			RS1/16S471J			
								R 410	(A,155,84)			RS1/16S331J			
RESISTORS															
R 101	(B,31,18)			RS1/16S101J				R 411	(A,158,51)			RS1/16S0R0J			
R 102	(B,33,22)			RS1/16S473J				R 412	(A,158,49)			RS1/16S0R0J			
R 103	(A,16,22)			RS1/16S223J				R 415	(B,147,47)			RS1/16S0R0J			
R 104	(A,13,19)			RS1/8S151J				R 416	(B,152,52)			RS1/16S0R0J			
R 105	(B,25,29)			RS1/4S221J				R 425	(A,150,46)			RS1/16S0R0J			
R 106	(B,18,25)			RS1/8S681J				R 426	(A,152,46)			RS1/16S0R0J			F
R 107	(B,18,29)			RS1/8S821J				R 437	(A,159,45)			RS1/16S0R0J			
R 151	(B,104,108)			RS1/10S682J				R 438	(A,159,46)			RS1/16S0R0J			
R 152	(B,113,125)			RS1/10S682J				R 439	(A,156,45)			RS1/16S272J			

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

	R 440	(A,156,46)	RS1/16S272J	R 655	(A,128,46)	RS1/16S102J
A	R 457	(A,143,39)	RS1/16S0R0J	R 656	(A,129,56)	RS1/16S104J
	R 458	(A,142,28)	RS1/16S0R0J	R 657	(A,128,49)	RS1/16S102J
	R 501	(B,35,101)	RS1/16S222J	R 658	(A,131,58)	RS1/16S473J
	R 502	(B,37,101)	RS1/16S222J	R 659	(A,136,47) (MG6347,MG6547)	RS1/16S473J
	R 503	(A,30,113)	RS1/16S393J		(A,136,47) (MG6747,MG6847)	RS1/16S473J
	R 504	(A,37,104)	RS1/16S393J	R 660	(B,123,53)	RS1/16S473J
	R 505	(B,16,99)	RS1/16S103J	R 661	(B,133,80)	RS1/16S473J
	R 506	(B,16,110)	RS1/10S472J	R 662	(B,130,79)	RS1/16S473J
	R 507	(B,17,121)	RS1/10S561J	R 663	(A,136,69)	RS1/16S473J
	R 508	(B,15,126)	RS1/10S681J	R 664	(A,135,70)	RS1/16S473J
B	R 509	(B,23,105)	RS1/16S153J	R 665	(A,126,61)	RS1/16S102J
	R 510	(B,26,102)	RS1/10S221J	R 671	(A,128,38)	RS1/16S331J
	R 511	(B,22,109)	RS1/10S222J	R 672	(A,128,39)	RS1/16S331J
	R 512	(B,19,128)	RS1/16S103J	R 673	(A,128,41)	RS1/16S331J
	R 513	(B,24,125)	RS1/16S222J	R 674	(A,128,42)	RS1/16S331J
	R 521	(A,28,114)	RS1/16S393J	R 675	(A,128,47)	RS1/16S331J
	R 551	(A,36,76)	RS1/16S222J	R 676	(B,126,58)	RS1/16S473J
	R 552	(A,36,82)	RS1/16S222J	R 677	(A,107,31)	RS1/16S0R0J
	R 553	(B,33,78)	RS1/16S393J	R 678	(A,109,31)	RS1/16S102J
	R 554	(B,35,82)	RS1/16S393J	R 679	(A,135,63)	RS1/16S473J
C	R 566	(B,38,69)	RS1/16S103J	R 681	(A,119,127)	RS1/16S682J
	R 575	(B,37,87)	RS1/16S222J	R 682	(B,121,136)	RS1/8S121J
	R 592	(B,80,110)	RS1/16S103J	R 683	(A,112,128)	RS1/4S101J
	R 593	(A,79,114)	RS1/16S103J	R 684	(A,115,128)	RS1/4S101J
	R 594	(B,88,117)	RS1/16S222J	R 685	(B,116,138)	RS1/4S680J
	R 595	(A,88,124)	RS1/16S103J	R 687	(A,119,118)	RS1/16S473J
	R 596	(A,88,125)	RS1/16S103J	R 688	(A,122,58)	RAB4C102J
	R 597	(A,83,127)	RS1/10S103J	R 689	(B,123,51)	RS1/16S473J
	R 601	(A,98,32)	RAB4C471J	R 690	(A,122,116)	RS1/16S472J
	R 602	(A,103,30)	RAB4C471J	R 691	(A,103,109)	RS1/16S473J
D	R 605	(A,115,31)	RS1/16S104J	R 692	(A,102,109)	RS1/16S473J
	R 606	(A,117,31)	RS1/16S473J	R 693	(A,106,113)	RS1/16S473J
	R 607	(A,130,77)	RS1/16S473J	R 694	(A,105,112)	RS1/16S104J
	R 608	(B,123,58)	RS1/16S473J	R 695	(A,106,116)	RS1/16S222J
	R 610	(A,123,31)	RS1/16S471J	R 696	(A,101,121)	RS1/16S473J
	R 611	(A,131,34)	RAB4C102J	R 697	(A,105,56)	RS1/16S102J
	R 612	(A,134,32)	RS1/16S473J	R 698	(A,131,53) (MG6347,MG6547)	RS1/16S473J
	R 613	(A,135,36)	RS1/16S473J		(A,131,53) (MG6447,MG6647)	RS1/16S473J
	R 614	(A,134,39)	RS1/16S473J	R 699	(A,104,56)	RS1/16S102J
	R 615	(A,131,38)	RS1/16S561J	R 701	(A,71,44)	RS1/16S272J
E	R 616	(B,126,38)	RS1/16S473J	R 702	(A,68,45)	RS1/16S183J
	R 618	(A,133,48) (MG6447,MG6647)	RS1/16S473J	R 704	(A,56,44)	RS1/16S683J
	R 619	(A,136,49) (MG6747,MG6847)	RS1/16S473J	R 705	(A,57,44)	RS1/16S683J
	R 620	(B,118,47)	RS1/16S102J	R 708	(A,108,111)	RS1/16S473J
	R 621	(B,116,47)	RS1/16S102J	R 710	(A,115,111)	RS1/16S473J
	R 622	(B,128,43)	RS1/16S473J	R 731	(B,95,116)	RS1/16S472J
	R 624	(B,129,47)	RS1/16S473J	R 732	(A,94,111)	RS1/16S472J
	R 629	(A,126,57)	RAB4C471J	R 733	(A,91,116)	RS1/16S102J
	R 630	(A,114,31)	RS1/16S473J	R 734	(A,98,120)	RS1/16S102J
	R 632	(A,117,60)	RS1/16S473J	R 735	(B,100,120)	RS1/16S473J
	R 634	(A,108,56)	RS1/16S473J	R 736	(A,98,109)	RS1/16S102J
	R 635	(B,101,39)	RS1/16S102J	R 737	(B,92,128)	RS1/10S820J
	R 636	(B,102,36)	RS1/16S473J	R 756	(A,90,109)	RS1/16S103J
	R 641	(B,93,37)	RS1/16S473J	R 759	(A,89,115)	RS1/10S103J
	R 642	(A,124,31)	RS1/16S472J	R 772	(A,142,129)	RS1/16S473J
F	R 644	(A,105,31)	RS1/16S103J	R 773	(B,140,128)	RS1/16S222J
	R 645	(A,126,31)	RS1/16S681J	R 781	(B,73,111)	RS1/16S473J
	R 649	(A,120,31)	RS1/16S681J	R 782	(B,70,113)	RS1/16S473J
	R 654	(A,128,44)	RS1/16S561J	R 801	(B,25,40)	RS1/16S471J

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 802	(B,26,43)	RS1/16S181J		C 113	(A,82,32)	CKSYB475K16	
				C 114	(A,77,32)	CKSYB475K16	
R 803	(B,20,41)	RS1/16S221J					
R 804	(A,12,29)	RS1/16S223J		C 151	(A,112,85)	CEJQ100M16	A
R 805	(B,18,41)	RS1/16S332J		C 152	(A,108,93)	CEJQ100M16	
R 806	(A,39,63)	RS1/16S332J		C 153	(A,107,87)	CEJQ100M16	
R 807	(A,36,45)	RS1/8S181J		C 154	(A,112,92)	CEJQ100M16	
				C 155	(A,115,79)	CCSRCH101J50	
R 808	(A,40,41)	RS1/8S181J					
R 809	(A,46,41)	RS1/8S181J		C 156	(A,126,80)	CCSRCH101J50	
R 810	(A,46,44)	RS1/8S181J		C 180	(A,114,99)	CEJQ470M10	
R 811	(A,43,47)	RS1/16S103J		C 201	(A,94,88)	CCSRCH100D50	
R 812	(A,49,47)	RS1/16S332J		C 202	(A,90,88)	CCSRCH100D50	
				C 203	(A,95,79)	CKSRYB103K50	
R 813	(A,46,52)	RS1/16S332J					
R 814	(B,127,121)	RS1/16S223J		C 204	(A,100,84)	CEJQ220M10	
R 815	(B,127,125)	RS1/4S100J		C 205	(B,98,84)	CCSRCH101J50	B
R 816	(A,127,123)	RS1/16S222J		C 206	(B,86,83)	CKSRYB104K50	
R 817	(A,128,123)	RS1/16S332J		C 207	(B,88,93)	CKSRYB104K50	
				C 208	(A,90,94)	CEJQ220M10	
R 818	(B,19,37)	RS1/16S221J					
R 821	(A,52,54)	RS1/16S821J		C 209	(B,87,78)	CKSQYB335K6R3	
R 831	(A,91,134)	RS1/8S331J		C 210	(B,83,79)	CKSQYB335K6R3	
R 832	(A,91,131)	RS1/8S331J		C 211	(B,93,93)	CKSRYB104K50	
R 833	(A,95,132)	RS1/8S331J		C 213	(B,81,92)	CKSRYB104K50	
				C 214	(B,81,80)	CKSQYB335K6R3	
R 834	(A,70,134)	RS1/8S331J					
R 835	(A,74,131)	RS1/8S331J		C 215	(B,78,80)	CKSQYB335K6R3	
R 836	(A,75,134)	RS1/8S331J		C 216	(B,80,75)	CKSRYB104K50	
R 841	(A,21,43)	RS1/4S2R2J		C 217	(B,78,90)	CKSRYB104K50	C
R 842	(A,21,39)	RS1/4S2R2J		C 218	(A,76,92)	CEJQ220M10	
				C 219	(A,75,83)	CKSRYB104K50	
R 843	(A,18,30)	RS1/4S2R2J					
R 844	(A,18,26)	RS1/4S2R2J		C 220	(B,70,87)	CKSRYB104K50	
R 851	(A,66,28)	RS1/16S223J		C 221	(A,72,88)	CEJQ220M10	
R 852	(A,68,20)	RS1/4S471J		C 222	(A,75,81)	CKSRYB104K50	
R 853	(B,74,24)	RS1/16S102J		C 223	(B,75,79)	CKSQYB335K6R3	
				C 224	(B,68,74)	CKSRYB104K50	
R 854	(B,67,28)	RS1/16S104J					
R 855	(A,58,35)	RS1/16S223J		C 225	(A,67,81)	CEJQ220M10	
R 856	(B,60,38)	RS1/4S470J		C 226	(A,66,58)	CEJQ220M10	
R 857	(B,65,31)	RS1/16S102J		C 227	(B,67,61)	CKSRYB104K50	
R 858	(B,61,30)	RS1/16S104J		C 228	(A,86,57)	CKSRYB102K50	D
				C 229	(B,86,58)	CKSRYB104K50	
R 859	(A,53,31)	RS1/10S4700F					
R 860	(A,54,37)	RS1/10S1001F		C 231	(A,92,58)	CKSRYB222K50	
R 861	(A,54,35)	RS1/10S1801F		C 232	(B,91,58)	CKSRYB104K50	
R 862	(A,44,26)	RS1/4S330J		C 233	(A,96,56)	CKSYB475K16	
R 863	(A,48,26)	RS1/4S330J		C 234	(A,99,56)	CKSYB475K16	
				C 235	(B,97,59)	CKSYB475K16	
R 864	(A,40,31)	RS1/16S471J					
R 865	(A,34,25)	RS1/16S185J		C 236	(B,96,69)	CKSYB475K16	
R 866	(A,53,21)	RS1/4S2R2J		C 237	(B,95,63)	CKSYB475K16	
R 867	(A,56,21)	RS1/4S2R2J		C 238	(B,95,72)	CKSYB475K16	
R 868	(A,46,21)	RS1/4S2R2J		C 241	(B,95,66)	CKSYB475K16	
				C 242	(B,96,76)	CKSYB475K16	E
R 869	(A,49,21)	RS1/4S2R2J					
R 870	(A,39,21)	RS1/4S2R2J		C 243	(A,98,76)	CKSRYB222K50	
R 871	(A,42,21)	RS1/4S2R2J		C 244	(A,103,69)	CEJQ330M10	
R 872	(B,54,34)	RS1/4S470J		C 245	(B,86,71)	CKSRYB223K50	
R 873	(B,60,34)	RS1/4S390J		C 246	(A,104,80)	CEJQ330M10	
				C 247	(A,96,76)	CKSRYB222K50	
R 874	(A,35,18)	RS1/16S223J					
R 881	(A,118,138)	RS1/4S361J		C 248	(B,88,71)	CCSRCH101J50	
R 882	(A,114,138)	RS1/4S361J		C 249	(A,104,72)	CEJQ220M10	
				C 251	(A,83,92)	CEJQ101M10	
				C 252	(A,75,51)	CEJQ220M10	
				C 253	(A,90,54)	CEJQ220M10	
<u>CAPACITORS</u>							
C 101	(B,33,20)	CKSRYB473K50					
C 102	(B,30,30)	CKSRYB103K50		C 257	(A,86,97)	CKSRYB682K50	
C 103	(A,32,29)	CEHAR220M16		C 258	(A,86,95)	CKSRYB682K50	
				C 259	(B,83,85)	CKSRYB682K50	

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 260 (B,77,85)
C 261 (B,68,87)

CKSRYB682K50
CKSRYB682K50

C 558 (B,81,145)
C 559 (B,79,145)

CKSRYB102K50
CKSRYB102K50

A C 307 (A,59,87)
C 309 (A,59,84)
C 311 (A,54,82)
C 325 (A,53,78)
C 355 (A,45,87)

CKSQYB683K25
CKSQYB184K16
CKSQYB103K50
CEJQ2R2M50
CEJQ3R3M50

C 560 (B,83,145)
C 561 (B,85,145)
C 578 (A,31,102)
C 580 (A,36,92)
C 591 (A,81,107)

CKSRYB102K50
CKSRYB102K50
CEHAR100M16
CEHAT102M16(P35)
CEJQ1R0M50

C 356 (A,45,94)
C 357 (A,52,95)
C 361 (A,61,93)
C 363 (A,57,97)
C 365 (A,44,67)

CEJQ3R3M50
CEJQ470M10
CKSQYB104K16
CKSQYB104K16
CEJQ3R3M50

C 592 (A,81,112)
C 593 (B,81,121)
C 601 (A,118,61)
C 602 (A,114,58)
C 603 (B,110,27)

CEJQ4R7M35
CKSRYB102K50
CKSRYB104K50
CKSRYB104K50
CCSRCH330J50

B C 366 (A,44,73)
C 377 (A,45,79)
C 401 (B,159,66)
C 402 (B,157,66)
C 403 (B,165,84)

CEJQ3R3M50
CEJQ3R3M50
CKSRYB562K50
CKSRYB562K50
CKSRYB103K50

C 604 (B,113,27)
C 607 (A,112,58)
C 661 (A,137,72)
C 681 (A,113,124)
C 682 (A,114,124)

CCSRCH8R0D50
CKSRYB105K10
CKSRYB473K50
CKSRYB102K50
CKSRYB102K50

C 404 (B,165,79)
C 405 (B,147,55)
C 406 (A,146,57)
C 407 (B,156,29)
C 409 (A,158,38)

CKSRYB103K50
CKSRYB103K50
CEJQ101M10
CCSRCH101J50
CEJQ1R0M50

C 683 (A,116,119)
C 691 (A,130,65)
C 692 (A,126,63)
C 695 (A,101,125)
C 696 (A,110,133)

CKSRYB104K50
CEJQ2R2M50
CKSRYB102K50
CKSQYB104K50
CKSQYB473K50

C C 410 (A,136,19)
C 414 (A,145,99)
C 415 (B,159,98)
C 427 (B,159,116)
C 428 (A,155,32)

CEAT102M16(P35)
CKSRYB102K50
CCSRCH470J50
CKSRYB103K50
CEJQ220M10

C 703 (A,63,44)
C 731 (A,98,112)
C 732 (B,95,113)
C 753 (A,90,110)
C 771 (A,143,133)

CKSRYB104K50
CEJQ2R2M50
CKSRYB102K50
CKSRYB102K50
CKSQYB102K50

C 429 (A,145,102)
C 431 (A,153,91)
C 432 (A,153,79)
C 501 (B,22,131)
C 502 (B,21,127)

CEJQ101M10
CEJQ470M6R3
CEJQ470M6R3
CKSRYB474K10
CKSRYB474K10

C 772 (A,147,133)
C 773 (A,151,134)
C 791 (A,94,37)
C 801 (A,33,36)
C 802 (B,30,38)

CKSQYB473K50
CEJQ100M25
CKSRYB103K50
CEHAR101M10
CKSRYB102K50

D C 504 (A,48,139)
C 505 (A,48,136)
C 506 (A,43,141)
C 507 (B,73,145)
C 508 (B,71,145)

CKSQYB104K50
CKSQYB225K10
CKSQYB225K10
CKSRYB102K50
CKSRYB102K50

C 803 (B,16,42)
C 805 (A,139,112)
C 806 (B,133,117)
C 807 (A,127,130) 4700μF/16V
C 809 (A,58,27)

CKSRYB223K50
CEJQ220M10
CKSRYB473K50
CCH1362
CEJQ220M16

C 509 (B,77,145)
C 510 (B,75,145)
C 511 (B,151,146)
C 512 (B,145,146)
C 521 (B,22,136)

CKSRYB102K50
CKSRYB102K50
CKSRYB102K50
CKSRYB102K50
CKSQYB474K25

C 810 (A,35,25)
C 811 (A,54,137) 4700μF/16V
C 812 (B,58,132)
C 820 (B,62,51)
C 821 (A,60,49)

CKSRYB472K50
CCH1328(P45)
CKSQYB104K50
CKSRYB103K50
CEJQ100M16

E C 522 (B,25,136)
C 525 (B,29,125)
C 526 (B,26,130)
C 527 (B,30,128)
C 528 (B,30,130)

CKSQYB474K25
CKSRYB474K10
CKSRYB474K10
CKSQYB474K25
CKSQYB474K25

C 822 (B,56,53)

CKSRYB103K50

B**Unit Number:CWM9308****Unit Name:Keyboard Unit****MISCELLANEOUS**

IC 901 (B,63,158) IC
IC 902 (B,65,107) IC
Q 901 (B,93,58) Transistor
Q 902 (B,93,51) Transistor
Q 903 (B,89,58) Transistor

LC75804W
LC75823WHS
DTC124EU
DTC124EU
DTA123EU

C 531 (A,32,139)
C 532 (A,29,133)
C 533 (B,28,94)
C 541 (B,30,77)
C 542 (B,35,84)

CEHAR1R0M50
CEHAR100M16
CKSQYB104K50
CKSRYB474K10
CKSRYB474K10

Q 904 (B,89,50) Transistor
Q 905 (B,78,58) Transistor
Q 906 (B,78,51) Transistor
D 901 (A,12,121) LED
D 902 (A,14,120) LED

DTA123EU
DTA123EU
2SA1576
DG1112H
CL200DCTU

F C 543 (B,27,79)
C 544 (B,30,83)
C 545 (B,27,88)
C 546 (B,27,86)
C 554 (B,30,87)

CKSQYB474K25
CKSQYB474K25
CKSRYB103K50
CKSRYB103K50
CKSQYB225K10

C 555 (B,32,87)
C 556 (A,31,70)
C 557 (A,36,71)

CKSQYB225K10
CEHAR1R0M50
CEHAR100M16

5			6			7			8		
Circuit Symbol and No.			Part No.			Circuit Symbol and No.			Part No.		
D 905	(A,42,219)	Chip LED	CL200HRC	TU		R 949	(B,102,40)		RS1/10S100J		
D 910	(B,89,54)	Diode	DAN202U			R 950	(B,54,47)		RS1/10S8R2J		
L 901	(B,65,82)	Inductor	LCTAW100J	2520		R 951	(B,58,47)		RS1/10S100J		A
S 903	(A,69,39)	Switch(PWR)	CSG1178			R 952	(B,39,47)		RS1/10S4R7J		
S 908	(A,33,32)	Switch(LOAD)	CSG1181			R 953	(B,36,47)		RS1/10S5R6J		
S 921	(A,33,210)	Switch(EJECT)	CSG1181			R 954	(B,72,212)		RS1/10S8R2J		
S 922	(A,65,39)	Rotary Switch(VOLUME)	CSD1101			R 955	(B,68,212)		RS1/10S8R2J		
IL 901	(A,39,199)	Lamp 60mA,8V	CEL1768			R 958	(B,76,71)		RS1/10S8R2J		
IL 902	(A,108,211)	Lamp 60mA,8V	CEL1768			R 959	(B,73,71)		RS1/10S8R2J		
IL 904	(A,121,166)	Lamp 60mA,8V	CEL1768			R 960	(B,98,44)		RS1/10S4R7J		
IL 905	(A,103,155)	Lamp 60mA,8V	CEL1768			R 961	(B,98,40)		RS1/10S5R6J		
IL 906	(A,121,121)	Lamp 60mA,8V	CEL1768			R 980	(B,92,69)		RS1/16S103J		
IL 907	(A,103,87)	Lamp 60mA,8V	CEL1768			R 981	(B,94,69)		RS1/16S103J		
IL 908	(A,121,75)	Lamp 60mA,8V	CEL1768			CAPACITORS					
IL 910	(A,108,31)	Lamp 60mA,8V	CEL1768			C 901	(B,54,54)		CKSRYB103K50		B
IL 911	(A,63,39)	Lamp 60mA,8V	CEL1768			C 902	(B,54,57)		CKSRYB103K50		
IL 912	(A,39,43)	Lamp 60mA,8V	CEL1768			C 905	(B,58,172)		CKSRYB102K50		
IL 913	(A,65,218)	Lamp 60mA,8V	CEL1769			C 906	(B,58,174)		CKSRYB473K50		
IL 915	(A,65,68)	Lamp 60mA,8V	CEL1769			C 907	(B,60,176)		CKSRYB473K50		
IL 916	(A,92,35)	Lamp 60mA,8V	CEL1768			C 908	(B,57,168)		CKSRYB103K50		
LCD901	(A,65,143)	LCD	CAW1830			C 909	(B,63,85)		CSZS4R7M16		
RESISTORS						C 910	(B,55,112)		CKSRYB102K50		
R 901	(B,38,220)		RS1/16S561J			C 911	(B,52,109)		CKSRYB103K50		
R 902	(B,58,182)		RS1/16S103J			C Unit Number:CWX2971 Unit Name:Control Unit					
R 903	(B,58,170)		RS1/16S393J								
R 904	(B,61,174)		RS1/16S471J								
R 905	(B,93,129)		RS1/16S471J			MISCELLANEOUS					
R 906	(B,90,129)		RS1/16S471J			IC 201	IC		UPD63711GC		
R 907	(B,88,129)		RS1/16S471J			IC 301	IC		BD7962FM		
R 908	(B,50,179)		RS1/16S102J			IC 302	IC		S-L2980A33MC-C6S		
R 909	(B,56,176)		RS1/16S473J			IC 303	IC		BA05SFP		
R 910	(B,58,180)		RS1/16S473J			IC 501	IC		BU9423AKS		D
R 911	(B,55,111)		RS1/16S473J			IC 502	IC		HY57V161610ETP-8		
R 912	(B,53,179)		RAB4C102J			IC 504	IC		TC74VHCT08AFT		
R 913	(B,60,178)		RS1/16S473J			IC 505	IC		TC74VHC541FT		
R 920	(B,58,184)		RS1/16S472J			IC 702	IC		PD5972A		
R 921	(B,83,58)		RS1/16S181J			Q 101	Transistor		2SB1132		
R 922	(B,84,49)		RS1/10S151J			Q 601	Transistor		DTC114EU		
R 923	(B,78,48)		RS1/16S181J			Q 602	Transistor		DTA123JU		
R 924	(B,78,55)		RS1/16S331J			Q 603	Transistor		DTC314TU		
R 925	(B,84,52)		RS1/16S102J			Q 604	Transistor		DTC314TU		
R 926	(B,81,51)		RS1/16S223J			Q 702	Transistor		UMD3N		
R 930	(B,60,211)		RS1/10S8R2J			D 101	Diode		1SS355		E
R 931	(B,56,211)		RS1/10S100J			D 301	Diode		S1G-6904G2P		
R 932	(B,102,204)		RS1/10S8R2J			D 303	Diode		S1G-6904G2P		
R 933	(B,102,209)		RS1/10S100J			D 601	Diode		MA152WA		
R 936	(B,115,181)		RS1/10S8R2J			L 201	Inductor		CTF1306		
R 937	(B,115,176)		RS1/10S100J			L 601	Inductor		CTF1295		
R 938	(B,104,128)		RS1/10S120J			TH701	Thermistor		CCX1058		
R 939	(B,104,133)		RS1/10S120J			X 201	Radiator 16.93MHz		CSS1581		
R 940	(B,113,133)		RS1/10S8R2J			X 701	Radiator 10.00MHz		CSS1428		
R 941	(B,113,128)		RS1/10S100J			RESISTORS					
R 942	(B,107,97)		RS1/10S120J			R 101			RS1/8S120J		F
R 943	(B,107,92)		RS1/10S120J			R 102			RS1/8S100J		
R 944	(B,111,59)		RS1/10S8R2J			R 103			RS1/16S222J		
R 945	(B,116,59)		RS1/10S100J								
R 948	(B,102,44)		RS1/10S8R2J								

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**R 104
R 105RS1/16S102J
RS1/16S0R0JR 607
R 608RS1/16S681J
RS1/16S102JA R 201
R 202
R 203
R 204
R 205RS1/16S104J
RAB4CQ681J
RS1/16S0R0J
RS1/16S0R0J
RS1/16S103JR 609
R 701
R 702
R 703
R 704RAB4CQ681J
RAB4CQ103J
RS1/16S222J
RS1/16S681J
RAB4CQ222JR 206
R 207
R 209
R 210
R 211RS1/16S393J
RS1/16S0R0J
RS1/16S0R0J
RS1/16S0R0J
RS1/16S0R0JR 705
R 706
R 707
R 708
R 709RAB4CQ681J
RS1/16S473J
RS1/16S473J
RS1/16S222J
RS1/16S222JB R 212
R 213
R 214
R 216
R 220RS1/16S562J
RS1/16S153J
RS1/16S123J
RS1/16S0R0J
RS1/16S471JR 711
R 712
R 713
R 714
R 715RAB4CQ103J
RS1/16S473J
RS1/16S681J
RS1/16S473J
RAB4CQ222JR 221
R 297
R 298
R 299
R 301RS1/16S681J
RS1/16S181J
RS1/16S681J
RS1/16S470J
RS1/16S103JR 716
R 718
R 720
R 724
R 727RS1/16S103J
RS1/16S473J
RS1/16S103J
RS1/16S104J
RS1/16S0R0JC R 302
R 303
R 304
R 305
R 306RS1/16S153J
RS1/16S103J
RS1/16S103J
RS1/16S272J
RS1/16S272JR 734
R 736
R 739
R 741
R 742RS1/16S104J
RS1/16S681J
RS1/16S473J
RS1/16S103J
RS1/16S222JR 307
R 308
R 309
R 310
R 311RS1/16S182J
RS1/16S272J
RS1/16S682J
RS1/16S822J
RS1/16S103JR 743
R 758
R 759
R 760
R 767RS1/16S681J
RS1/16S133J
RS1/16S103J
RS1/16S433J
RS1/16S154JD R 312
R 313
R 314
R 315
R 316RS1/16S681J
RS1/16S103J
RS1/16S153J
RS1/16S153J
RS1/16S153J

R 775

RAB4CQ681J

CAPACITORSR 317
R 318
R 319
R 320
R 322RS1/16S103J
RS1/16S103J
RS1/16S102J
RS1/16S392J
RS1/16S103JC 101
C 102
C 103
C 104
C 105CKSRYB103K25
CKSRYB104K25
CEVW101M10
CEVW470M6R3
CKSRYB224K16E R 323
R 324
R 325
R 501
R 504RS1/16S103J
RS1/16S103J
RS1/16S103J
RS1/16S0R0J
RS1/16S331JC 106
C 107
C 201
C 202
C 203CKSRYB224K16
CKSRYB224K16
CKSRYB104K25
CEVW220M6R3
CKSRYB473K25R 508
R 511
R 512
R 513
R 514RS1/16S0R0J
RS1/16S0R0J
RS1/16S562J
RS1/16S822J
RS1/16S0R0JC 204
C 205
C 206
C 207
C 208CKSRYB182K50
CKSRYB104K25
CKSRYB152K50
CKSRYB224K16
CCSRCH180J50F R 515
R 516
R 601
R 602
R 603RS1/16S0R0J
RS1/16S331J
RS1/16S102J
RS1/16S102J
RS1/16S223JC 209
C 210
C 211
C 212
C 213CCSRCJ2R0D50
CCSRCH181J50
CCSRCH510J50
CKSRYB682K50
CKSRYB104K25R 604
R 605
R 606RS1/16S223J
RS1/16S102J
RS1/16S681JC 214
C 215
C 216
C 217CKSRYB104K25
CKSRYB103K25
CKSRYB104K25
CKSRYB104K25

5

6

7

8

Circuit Symbol and No.			Part No.
C 218			CKSRYB104K25
C 219			CKSRYB104K25
C 220			CKSRYB104K25
C 221			CEVW470M6R3
C 222			CKSRYB104K25
C 223			CKSRYB102K50
C 224			CKSRYB104K25
C 225			CKSRYB103K25
C 226			CCSRCH470J50
C 227			CCSRCH470J50
C 228			CKSRYB104K25
C 301			CEVW101M10
C 302			CKSRYB224K16
C 303			CKSRYB224K16
C 305			CKSRYB105K10
C 306	10μF/10V		CCH1349
C 307			CKSRYB224K16
C 309			CKSYB475K16
C 502			CKSRYB104K25
C 505			CKSRYB104K25
C 508			CKSRYB104K25
C 509			CKSRYB104K25
C 512			CKSRYB104K25
C 601			CEVW220M6R3
C 602			CEVW220M6R3
C 701			CKSRYB104K25
C 702			CKSRYB104K25
C 703			CKSRYB103K25
C 704			CKSRYB103K25
C 705			CKSRYB104K25
C 706			CKSRYB104K25
C 707			CKSRYB103K25
C 708			CKSRYB473K25

F

Unit Number:CWX2613

Unit Name:PCB Unit(Side)

MISCELLANEOUS		
S 11	Spring Switch(CAMCLMP)	CSN1052
VR11	Semi-fixed 1kΩ(B)	CCP1338

RESISTORS

R 11	RS1/16S562J
R 12	RS1/16S562J
R 13	RS1/10S391J
R 14	RS1/10S391J
R 15	RS1/16S0R0J
R 16	RS1/16S0R0J

CAPACITORS

C 12	CKSRYB104K25
------	--------------

H

Unit Number:

Unit Name:PCB Unit(M2 Unit)

MISCELLANEOUS		
IC 1	IC	BA6849FS
S 7	Switch(HOME)	CSN1057
S 8	Switch(CLAMP)	CSN1057

RESISTORS

R 1	RS1/16S221J
R 2	RS1/16S221J
R 3	RS1/16S4R7J
R 4	RS1/16S1R0J

CAPACITORS

C 1	CKSRYB104K16
-----	--------------

Miscellaneous Parts List

M 1	Motor Unit(-A)(CAMGEAR)	CXC1144
M 2	Motor Unit(-B)(ELEVATION)	CXC1145
M 3	Motor Unit(-A)(CRG)	CXC1143
VR1	Variable Resistor 10kΩ	CCW1023
	PU Unit(Service)(PX1)	CXX1568

Q 21	Photo-transistor	CPT231SCTU
Q 22	Photo-transistor	CPT231SCTU
L 21	Inductor	LCYBR15J1608
L 22	Inductor	LCYBR15J1608
S 21	Spring Switch(LOAD1)	CSN1051
S 22	Spring Switch(LOAD2)	CSN1052

D

Unit Number:CWX2614

Unit Name:PCB Unit(LED)

D 31	Chip LED	CL205IRXTU
D 32	Chip LED	CL205IRXTU
S 31	Spring Switch(CAMLOAD)	CSN1052
S 32	Spring Switch(CAMEOK)	CSN1052
R 31		RS1/16S0R0J

G

Unit Number:CWX2611

Unit Name:PCB Unit