

SAFETY INFORMATION

WARNING

This product may contain a chemical known to the State of California to cause cancer, or birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65


EXPLODED VIEWS AND PARTS LIST

PACKING(Page 30)

PACKING SECTION PARTS LIST

*:Non spare part

Mark	No.	Description	FH-X555UI/XNES	FH-X500UI/XNUC
	1	Cord Assy	QDP3033	CDP1480
	4	Cover	CEG1356	CEG1359
	5	Unit Box	QHG3419	QHG3613
	6	Contain Box	QHL3419	QHL3613
	7	Protector	QHP3032	QHP3033
	9	Handle	CND6289	Not used
	10-1	Owner's Manual	QRD3137	QRD3222 (English, French, Spanish(Espanol))
*	10-2	Warranty Card	Not used	QRY3001
	11	Screw	Not used	CRZ50P090FTC

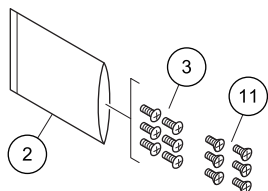

EXTERIOR(1)(Page 32)

EXTERIOR(1) SECTION PARTS LIST

Mark	No.	Description	FH-X555UI/XNES	FH-X500UI/XNUC
	4	Grille Assy	QXA3820	QXA4076
	21	Grille Unit	QXA3812	QXA4080
	23	Holder	CND6288	Not used
	24	Panel	CNS9952	Not used

EXTERIOR(2)(Page 34)

EXTERIOR(2) SECTION PARTS LIST

Mark	No.	Description	FH-X555UI/XNES	FH-X500UI/XNUC
	5	Cord Assy	QDP3033	CDP1480
	10	Tuner Amp Unit	QWM3540	QWM3801
	15	Heat Sink	QNR3002	QNR3010

ELECTRICAL PARTS LIST(Page 58)

TUNER AMP UNIT

Circuit Symbol and No.	Part Name	FH-X555UI/XNES	FH-X500UI/XNUC
IC681	Flash ROM Unit	PEB043B8	PEB135A8
Q951	Transistor	LSAR523UB	Not used
D601	Diode	Not used	RB751SM-40
D602	Diode	Not used	RB551VM-30
D751	Diode	RKZ8.2KG(B2)	DZ2J082M0
D941	Diode	HZU7L(A1)	DZ2J068M0
D951	Diode	1SS301	Not used
L405	Inductor	Not used	LCYB68NJ1608
L406	Inductor	Not used	CTF1389
L407	Chip Coil	LCTAWR27J2520	Not used
L408	Chip Coil	LCTAW1R5J2520	LCTAW4R7J2520
L409	Chip Coil	LCTAWR39J2520	Not used
L410	Inductor	LCTAW2R2J2520	LCTAW470J2520
L951	Chip Coil	BTH1101	Not used
R403		RS1/16SS331J	RS1/16SS391J
R408		RS1/16SS361J	RS1/16SS471J
R409		RS1/16SS0R0J	Not used
R411		RS1/16SS391J	RS1/16SS681J
R604		RS1/16SS473J	Not used
R619		RS1/16SS223J	Not used
R943		RS1/16SS472J	RS1/16SS682J
R951		RS1/16SS102J	Not used
R952		RS1/16SS223J	Not used
R953		RS1/16SS153J	Not used
C419		CCSSCH150J50	Not used
C420		CKSSYB103K16	Not used
C421		Not used	CCSSCJ3R0C50
C423		CCSSCH8R0D50	Not used
C428		CCSSCH220J50	CCSSCH101J50
C430	1 uF	Not used	DCH1246
C432		CCSSCK2R0C50	CCSSCH820J50
C433	1 uF	Not used	DCH1246
C436		CKSSYB104K10	Not used
C439		CKSRYB104K16	Not used
C441		Not used	CCSSCH100D50
C447	2.2 uF	CCG1218	Not used
C448		Not used	CKSSYB104K10
C459		Not used	CCSSCH101J50

The mounting positions of the additional parts are described in the circuit diagram and PCB diagram of the parent manual.