
2. EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lobricants or glue, follow the instructions in this manual.
(In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

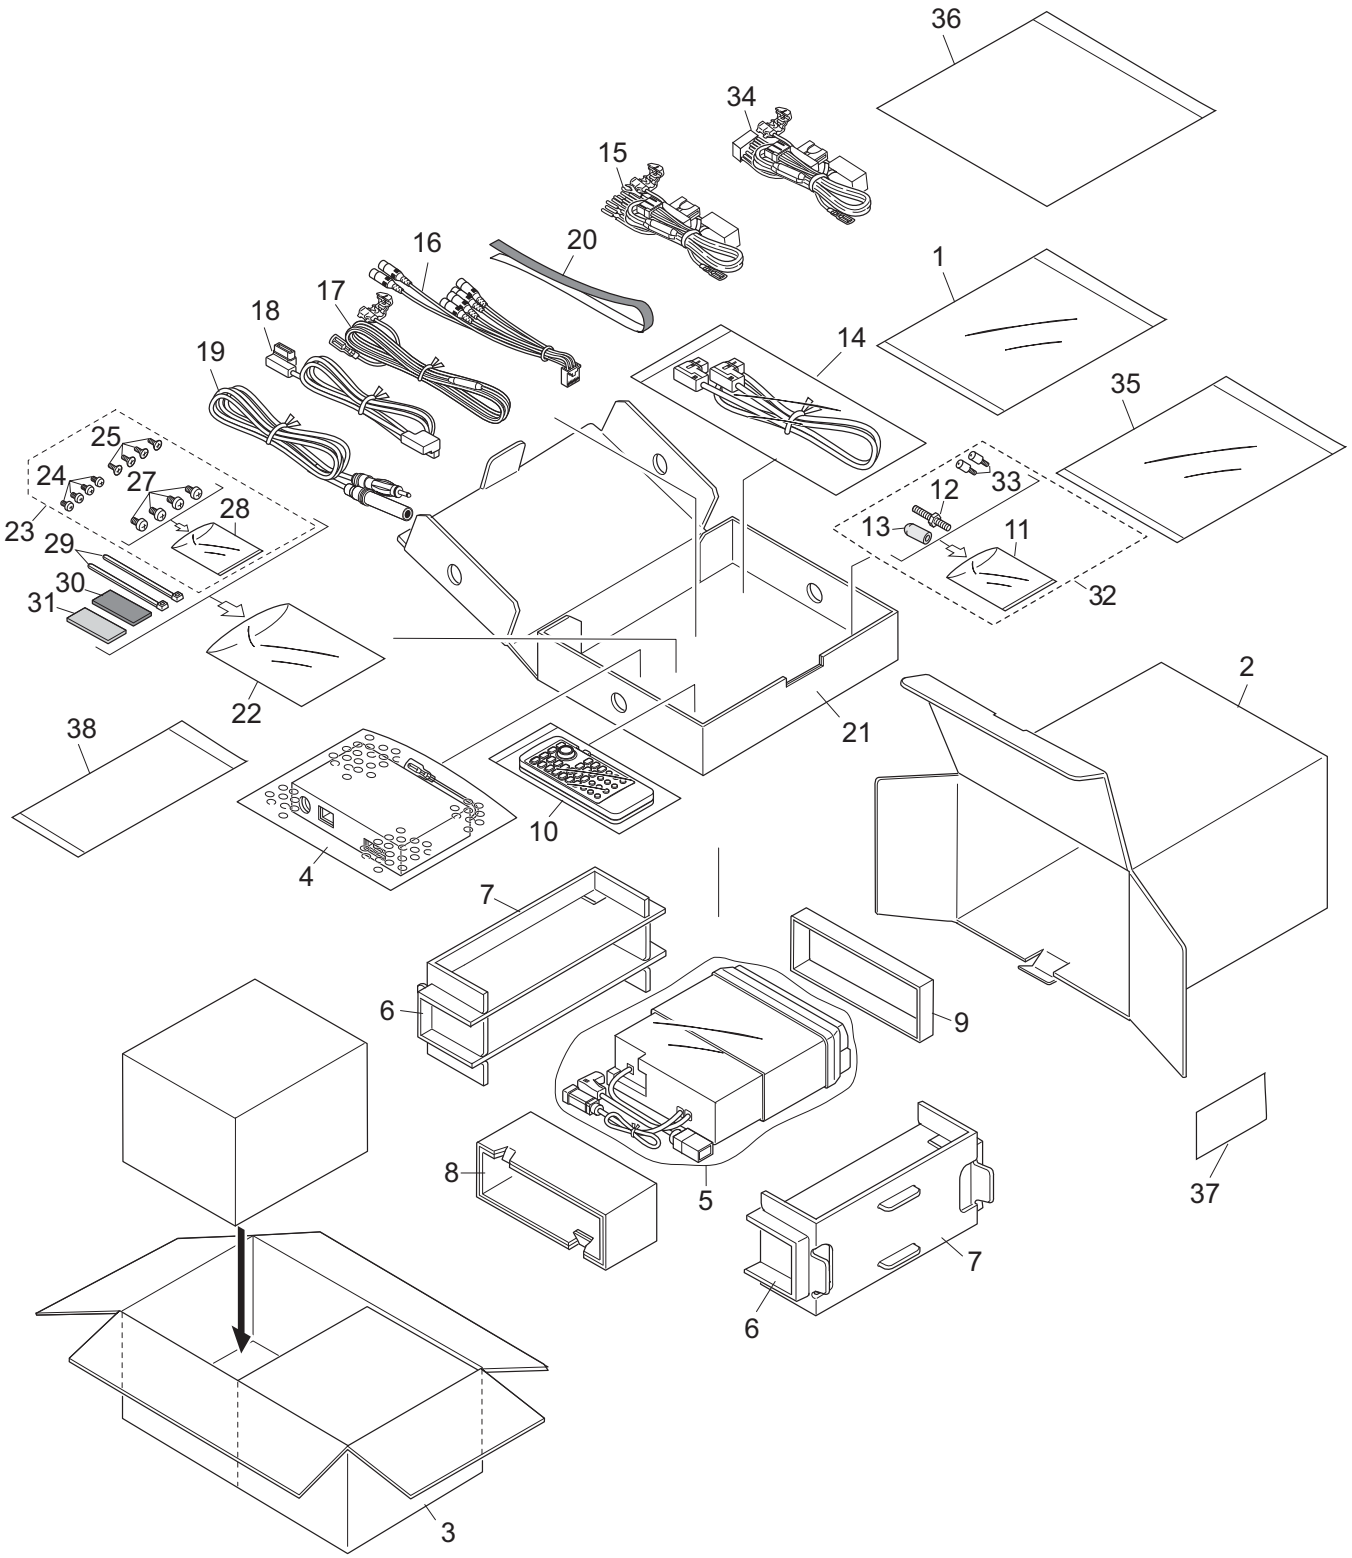


PACKING SECTION PARTS LIST

Mark	NO	Description	P6600DVD/UC	P6600DVD/EW	P6650DVD/RC	P6650DVD/RD
	1-1	Polyethylene Bag	CEG1116	CEG1116	CEG1116	CEG1116
	1-2	Owner's Manual	CRB1927	CRB1921	CRB1929	CRB1929
	1-3	Owner's Manual	CRB1928	CRB1922	CRB1930	CRB1931
	1-4	Owner's Manual	Not used	Not used	Not used	CRB1932
	1-5	Installation Manual	CRD3858	CRD3897	CRD3859	CRD3860
*	1-6	Card	ARY1048	Not used	Not used	Not used
	1-7	Caution Card	CRP1310	Not used	CRP1310	CRP1310
	2	Carton	CHG5221	CHG5220	CHG5222	CHG5222
	3	Contain Box	CHL5221	CHL5220	CHL5222	CHL5223
	4	Air Cushioned Bag	CEG1089	CEG1089	CEG1089	CEG1089
	5	Polyethylene Bag	CEG1185	CEG1088	CEG1088	CEG1088
	6	Protector	CHP2707	CHP2707	CHP2707	CHP2707
	7	Protector	CHP2706	CHP2706	CHP2706	CHP2706
	8	Protector	CHP2708	CHP2708	CHP2708	CHP2708
	9	Protector	CHP2387	CHP2387	CHP2387	CHP2387
	10	Remote Control Unit	CXC3074	CXC3075	CXC3075	CXC3075
*	11	Polyethylene Bag	E36-615	E36-615	E36-615	E36-615
	12	Screw	CBA1650	CBA1650	CBA1650	CBA1650
	13	Bush	CNV1917	CNV1917	CNV1917	CNV1917
	14	Cord Assy	CDE7445	CDE7445	CDE7445	CDE7445
	15	Cord Assy	CDE7609	Not used	CDE7609	CDE7609
	16	Cord Assy	CDE7194	CDE7194	CDE7194	CDE7194
	17	Cord Assy	CDE7321	CDE7321	CDE7321	CDE7321
	18	Cord Assy	CDE7187	CDE7187	CDE7187	CDE7187
	19	Antenna Cable	CDH1281	CDH1281	CDH1281	CDH1281
	20	Sheet	CNM8603	CNM8603	CNM8603	CNM8603
	21	Sub Craton	CHG5080	CHG5080	CHG5080	CHG5080
*	22	Polyethylene Bag	CEG-158	CEG-158	CEG-158	CEG-158
	23	Screw Assy	CEA3686	CEA3686	CEA3686	CEA3686
	24	Screw(M4x3)	CBA1468	CBA1468	CBA1468	CBA1468
	25	Screw	CMZ50P060FTC	CMZ50P060FTC	CMZ50P060FTC	CMZ50P060FTC
	26	•••••				
	27	Screw	BMZ50P060FTC	BMZ50P060FTC	BMZ50P060FTC	BMZ50P060FTC
*	28	Polyethylene Sheet	CNM4338	CNM4338	CNM4338	CNM4338
*	29	Lock Tie	Not used	CNV-754	CNV-754	CNV-754
*	30	Fastener	CNM6544	CNM6544	CNM6544	CNM6544
*	31	Fastener	CNM6545	CNM6545	CNM6545	CNM6545
	32	Accessory Assy	CEA3685	CEA3685	CEA3743	CEA3743
	33	Fixing Screw	JGZ20P070FTC	JGZ20P070FTC	Not used	Not used
	34	Cord Assy	Not used	CDE7608	Not used	Not used
	35-1	Polyethylene Bag	Not used	CEG1116	Not used	Not used
	35-2	Owner's Manual	Not used	CRB1923	Not used	Not used
	35-3	Owner's Manual	Not used	CRB1924	Not used	Not used
	35-4	Owner's Manual	Not used	CRB1925	Not used	Not used
	35-5	Owner's Manual	Not used	CRB1926	Not used	Not used
*	35-6	Passport	Not used	CRY1013	Not used	Not used
*	35-7	Warranty Card	Not used	CRY1157	Not used	Not used
	36	Cleaning Cloth Assy	CEA3952	CEA3952	CEA3952	CEA3952
	37	Seal	Not used	Not used	Not used	CAN4722
	38	Opt Terminal Change	Not used	Not used	CXC3584	CXC3584

Owner's Manual,Installation Manual

Part No.	Language
CRB1921	English
CRB1922	Spanish
CRB1923	German
CRB1924	French
CRB1925	Italian
CRB1926	Dutch
CRD3897	English,Spanish,German,French,Italian,Dutch
CRB1927	English
CRB1928	French
CRD3858	English,French
CRB1929	English
CRB1930	Traditional Chinese
CRD3859	English,Traditional Chinese
CRB1931	Spanish
CRB1932	Portuguese(B)
CRD3860	English,Spanish,Portuguese(B)

2.2 EXTERIOR(1)

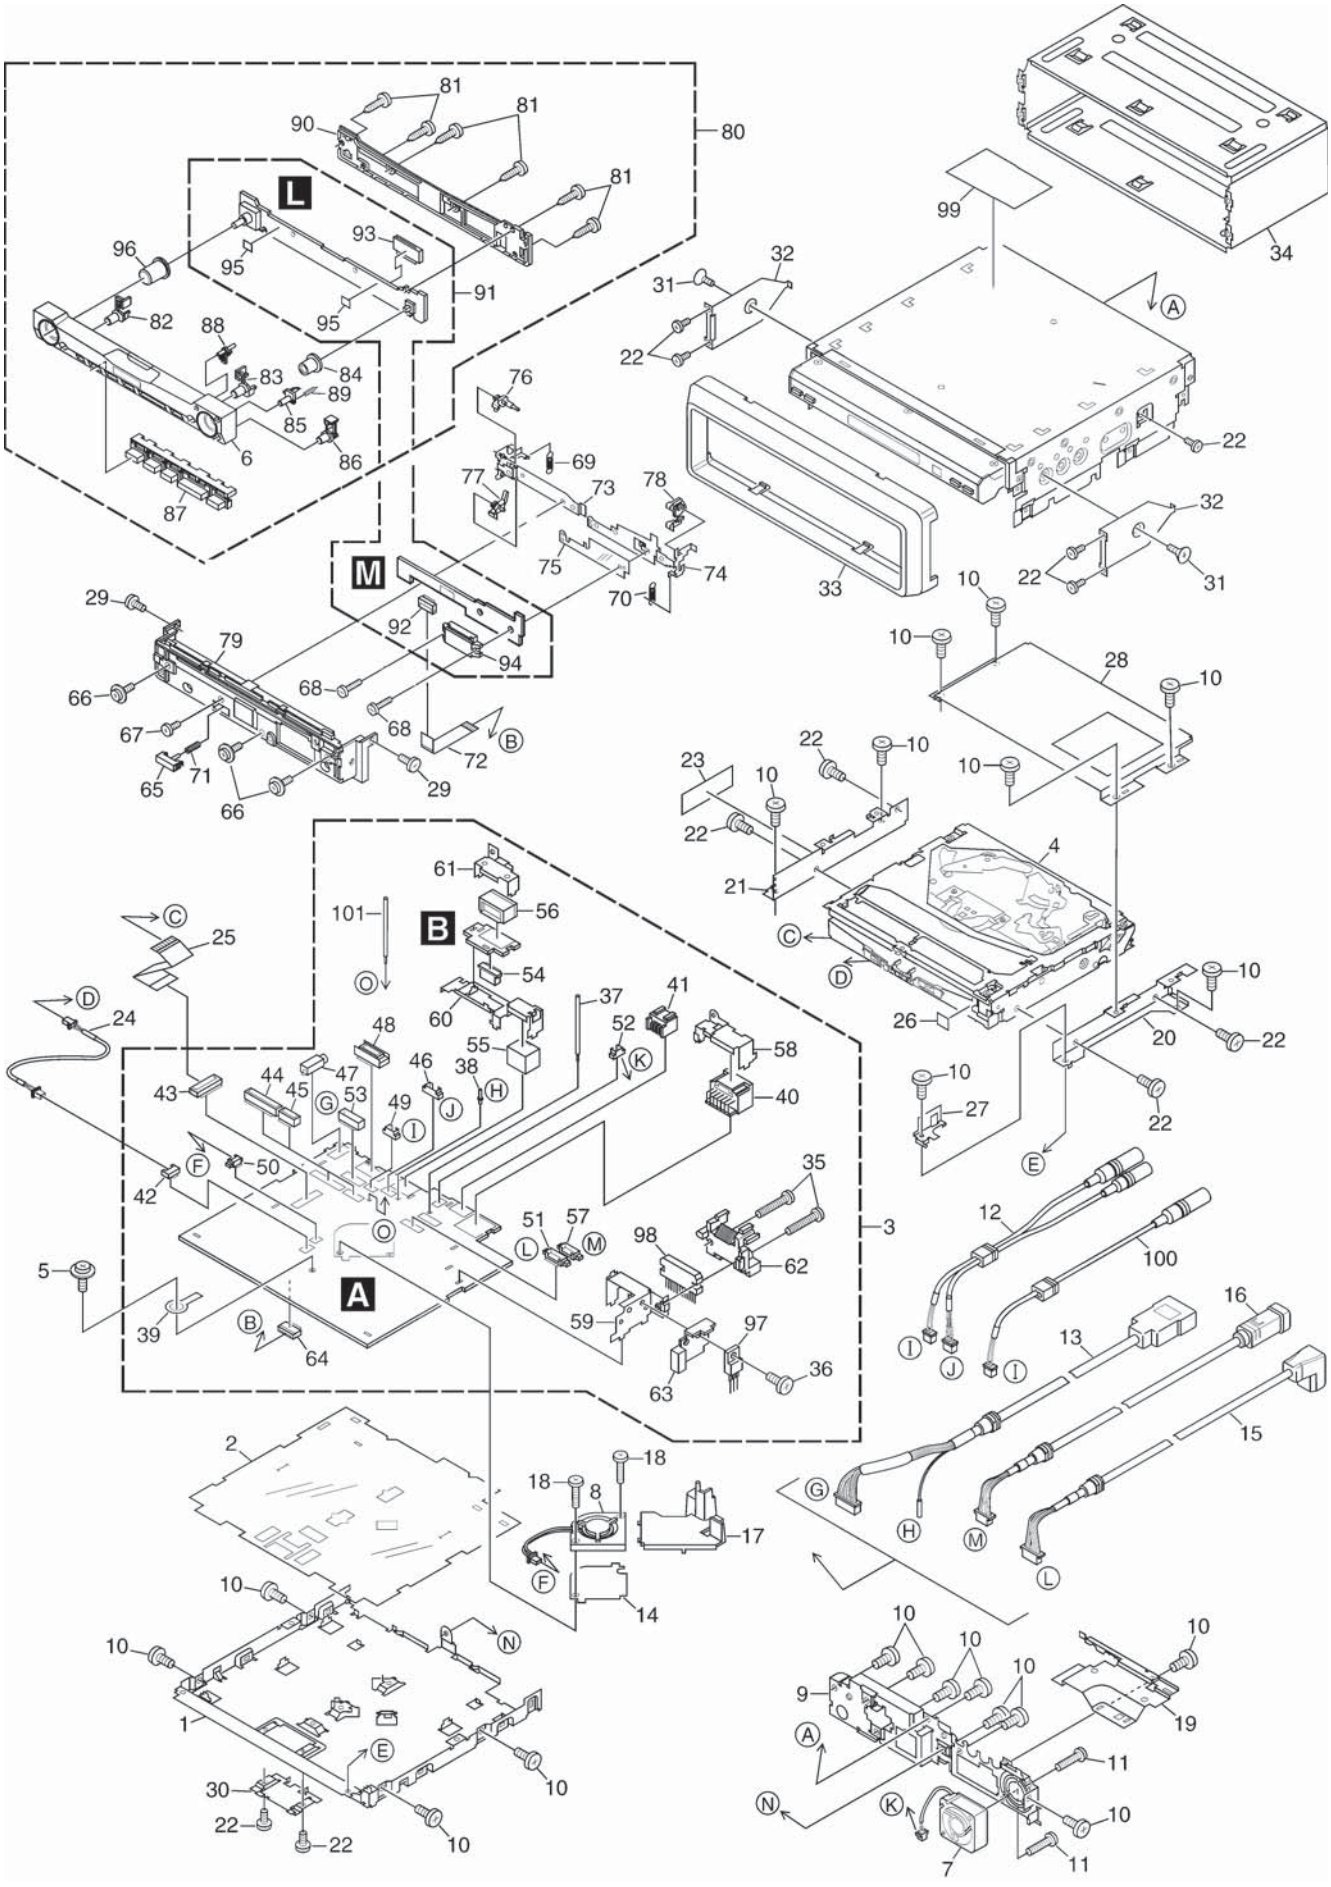

(1)EXTERIOR(1) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Case	CNB2948
	2	Insulator	CNM8646
	3	Mother Unit	See Contrast table(2)
	4	DVD Mechanism Mdule(MS-3V1)	CXK6410
	5	Screw	IMS26P040FTC
	6	Grille Unit(Service)	See Contrast table(2)
	7	Fan Motor(M1001)	CXM1262
	8	Fan Motor(M1002)	CXM1276
	9	Panel	See Contrast table(2)
	10	Screw	BMZ26P030FTC
	11	Screw	BMZ20P160FTC
	12	Cord Assy	See Contrast table(2)
	13	Cord Assy	See Contrast table(2)
	14	Insulator	CNM8864
	15	Cord Assy	CDE7450
	16	Cord Assy	CDE7449
	17	Guide	CNV7973
	18	Screw(M2x8)	CBA1752
	19	Holder	CND2034
	20	Bracket	CND1438
	21	Bracket	CND1439
	22	Screw	BMZ20P030FZK
	23	Insulator	CNM8495
	24	Cord	CDE7715
	25	Cable	CDE7452
	26	Spacer	CNM9272
	27	Earth	CBL1660
	28	Bracket	CND1603
	29	Screw(M2x2)	CBA1753
	30	Holder	CND1441
	31	Screw	CMZ50P060FTC
	32	Bracket	CND1482
	33	Panel	See Contrast table(2)
	34	Holder	CNC9510
	35	Screw	BMZ26P160FTC
	36	Screw	BSZ26P100FTC
	37	Clamper	CEF1036
	38	Terminal(CN102)	See Contrast table(2)
	39	Terminal(CN901)	CKF1064
	40	Connector(CN701)	CKM1332
	41	Connector(CN201)	CKM1389
	42	Connector(CN107)	CKS4282
	43	Connector(CN151)	CKS4052
	44	Connector(CN501)	CKS3930
	45	Connector(CN502)	VKN1533
	46	Connector(CN109)	See Contrast table(2)
	47	Jack(CN108)	CKN1022
	48	Connector(CN104)	CKS4800
	49	Connector(CN110)	CKS3125
	50	Connector(CN802)	CKS2191
	51	Connector(CN106)	CKS3132
	52	Connector(CN801)	CKS3124
	53	Connector(CN101)	See Contrast table(2)
	54	Connector(CN1500)	CKS4799
	55	Connector(CN103)	CKS4663
	56	Connector(CN1502)	CKS4467
	57	Connector(CN105)	CKS3130
	58	Holder	CND1433
	59	Holder	CND1434
	60	Holder	CND2035
	61	Holder	CND2036
	62	Heat Sink	CNR1684
	63	Heat Sink	CNR1703
	64	Connector(CN601)	CKS3986
	65	Button	CAC7953
	66	Screw(M2x4)	CBA1734
	67	Screw(M2.6x2.5)	CBA1777
	68	Screw(M2x4)	CBA1778
	69	Spring	CBH2681
	70	Spring	CBH2682
	71	Spring	CBH2683
	72	Flat Cable	CDE7179
	73	Holder	CND1840
	74	Holder	CND1841
	75	Insulator	CNM8510
	76	Arm	CNV7567
	77	Arm	CNV7568
	78	Arm	CNV7569
	79	Panel Unit	See Contrast table(2)
	80	Grille Assy	See Contrast table(2)
	81	Screw	BPZ20P080FZK
	82	Button(SRC)	CAC7946
	83	Button(EQ)	CAC7947
	84	Button	CAC8149
	85	Button(Detach Eject)	See Contrast table(2)
	86	Button(Disc Eject)	See Contrast table(2)
	87	Button	See Contrast table(2)
	88	Button(Reset)	See Contrast table(2)
	89	Spring	CBH2680
	90	Cover	CNS7441
	91	Keyboard Unit	See Contrast table(2)
	92	Connector(CN5901)	CKS3986
	93	Connector(CN5501)	CKS4657
	94	Connector(CN5902)	CKS4658
	95	Insulator	CNM8521
	96	Knob Unit	CXC2034
	97	Transistor(Q836)	2SD1275
	98	IC(IC202)	PAL007A
	99	Label	See Contrast table(2)
	100	Cord Assy	See Contrast table(2)
	101	Clamper	See Contrast table(2)

(2) CONTRAST TABLE

AVH-P6600DVD/UC , AVH-P6600DVD/EW , AVH-P6650DVD/RC and AVH-P6650DVD/RD are constructed the same except for the following:

Mark	NO	Description	P6600DVD/UC	P6600DVD/EW	P6650DVD/RC	P6650DVD/RD
	3	Mother Unit	CWM9143	CWM9142	CWM9144	CWM9145
	6	Grille Unit(Service)	CXX1801	CXX1800	CXX1802	CXX1802
	9	Panel	CNB2946	CNB2946	CNB2947	CNB2947
	12	Cord Assy	CDE7456	CDE7456	Not used	Not used
	13	Cord Assy	CDE7451	CDE7451	Not used	Not used
	33	Panel	CNS7785	CNS7785	CNS7481	CNS7481
	38	Terminal(CN102)	CKF-047	CKF-047	Not used	Not used
	46	Connector(CN109)	CKS3126	CKS3126	Not used	Not used
	53	Connector(CN101)	CKS4454	CKS4454	Not used	Not used
	79	Panel Unit	CXC2662	CXC2662	CXC3277	CXC3277
	80	Grille Assy	GXC1007	GXC1009	GXC1008	GXC1008
	85	Button(Detach Eject)	CAC8452	CAC8452	CAC7951	CAC7951
	86	Button(Disc Eject)	CAC8453	CAC8453	CAC7950	CAC7950
	87	Button	CAC8454	CAC8454	CAC8922	CAC8922
	88	Button(Reset)	CAC8456	CAC8456	CAC8054	CAC8054
	91	Keyboard Unit	CWM8766	CWM8765	CWM8766	CWM8766
	99	Label	Not used	VRW1860	Not used	Not used
	100	Cord Assy	Not used	Not used	CDE7457	CDE7457
	101	Clamper	CEF1036	CEF1036	Not used	Not used


2.3 EXTERIOR(2)

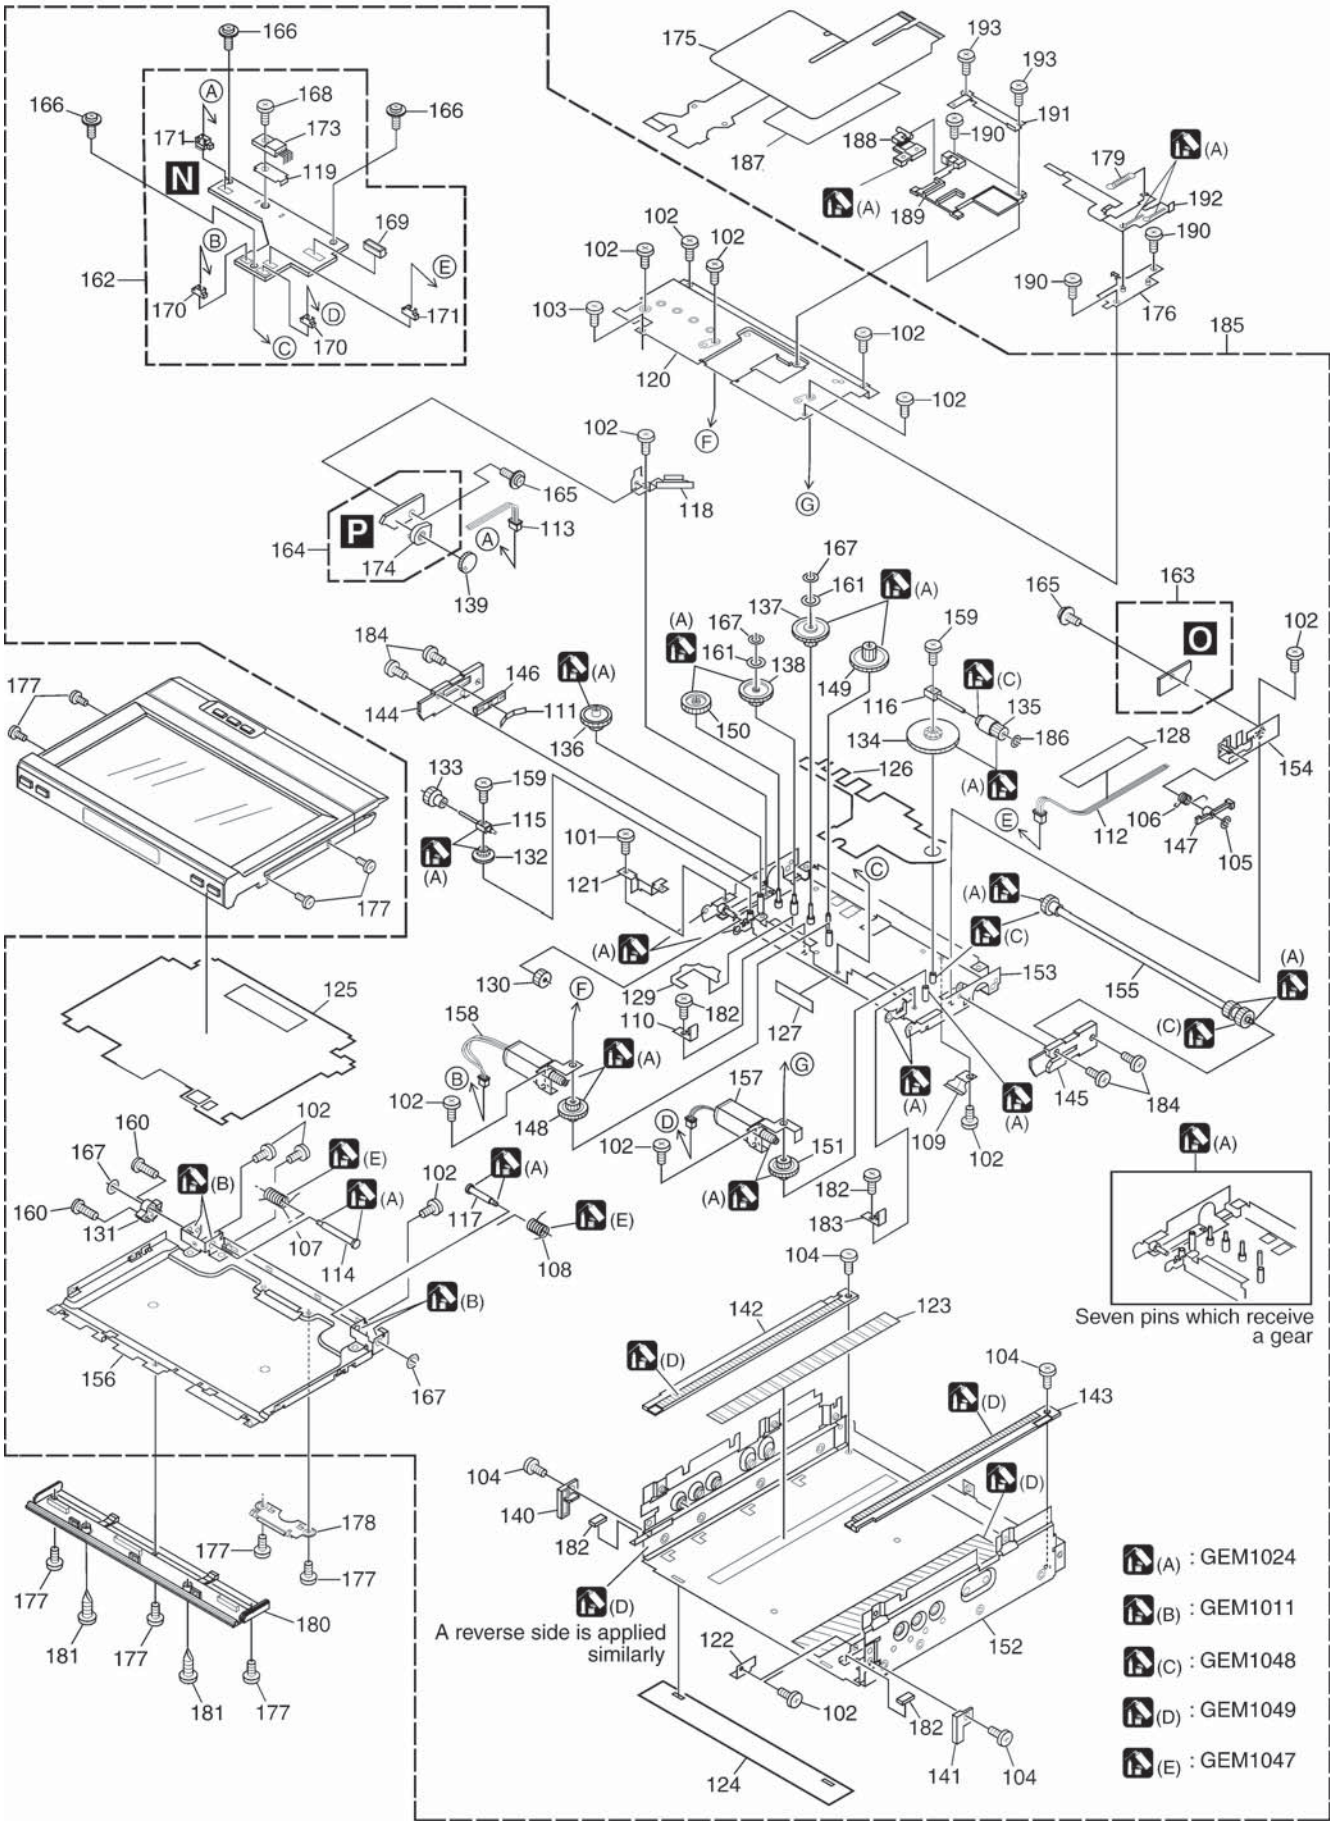


EXTERIOR(2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	101	Screw(M2x3)	CBA1082
	102	Screw(M2x2.5)	CBA1250
	103	Screw(M2x4)	CBA1277
	104	Screw(M2x1.5)	CBA1615
	105	Washer	CBF1038
	106	Spring	CBH2645
	107	Spring	CBH2646
	108	Spring	CBH2647
	109	Spring	CBL1585
	110	Spring	CBL1586
	111	Spring	CBL1587
	112	Cord Assy	CDE7047
	113	Cord Assy	CDE7213
	114	Shaft	CLA4270
	115	Shaft	CLA4305
	116	Shaft	CLA4306
	117	Shaft	CLA4309
	118	Bracket	CND1221
	119	Heat Sink	CND1228
	120	Case	CND1229
	121	Holder	CND1318
	122	Holder	CND1449
	123	Sheet	CNM8522
	124	Sheet	CNM8037
	125	Insulator	CNM8048
	126	Insulator	CNM8158
	127	Sheet	CNM8159
	128	Tape	CNM8160
	129	Insulator	CNM8294
	130	Gear	CNR1664
	131	Gear	CNR1665
	132	Gear	CNR1677
	133	Gear	CNR1678
	134	Gear	CNR1679
	135	Gear	CNR1680
	136	Gear	CNR1688
	137	Gear	CNR1708
	138	Gear	CNR1709
	139	Gear	CNV7383
	140	Holder	CNV7384
	141	Holder	CNV7385
	142	Rack	CNV7386
	143	Rack	CNV7387
	144	Slider	CNV7388
	145	Slider	CNV7389
	146	Holder	CNV7390
	147	Arm	CNV7391
	148	Gear	CNV7522
	149	Gear	CNV7523
	150	Gear	CNV7524
	151	Gear	CNV7529
	152	Chassis Unit	CXB9509
	153	Frame Unit	CXB9511
	154	Holder Unit	CXB9512
	155	Shaft Unit	CXB9513
	156	Holder Unit	CXB9514
	157	Motor Unit(M3001)(Position)	CXB9515
	158	Motor Unit(M3002)(Angle)	CXB9516
	159	Screw	CZB3082
	160	Screw	CZB3083
	161	Washer	CZB3084
	162	Main Unit	CZW3087
	163	SW Unit	CZW3088
	164	Volume Unit	CZW3089
	165	Screw	IMS20P020FTC
	166	Screw	IMS20P030FZK
	167	Washer	YE15S
	168	Screw	BMZ26P050FTC
	169	Connector(CN3801)	CKS4068
	170	Connector(CN3802,CN3803)	CKS3124
	171	Connector(CN3807,3809)	CKS3125
	172	•••••	
	173	IC(IC3801)	BA00AST
	174	Volume(VR3841)	CCW1025
	175	Flexible PCB	CNP7682
	176	Bracket Unit	CXC3048
	177	Screw(M2x2)	CBA1753
	178	Holder	CND2243
	179	Spring	CBH2750
	180	Cover	CNS7438
	181	Screw	BPZ20P080FZK
	182	Screw(M2x1.8)	CZB3085
	183	Spring	CBL1642
	184	Screw(M2x4)	CZB3088
	185	Drive Unit	CXB9508
	186	Washer	CZB3089
	187	Sheet	CNM8952
	188	Arm	CNV8065
	189	Holder	CNV8066
	190	Screw(M2x3)	CBA1780
	191	Spring	CBL1679
	192	Lever	CND2202
	193	Screw(M2x3)	CBA1797

2.4 EXTERIOR(3)

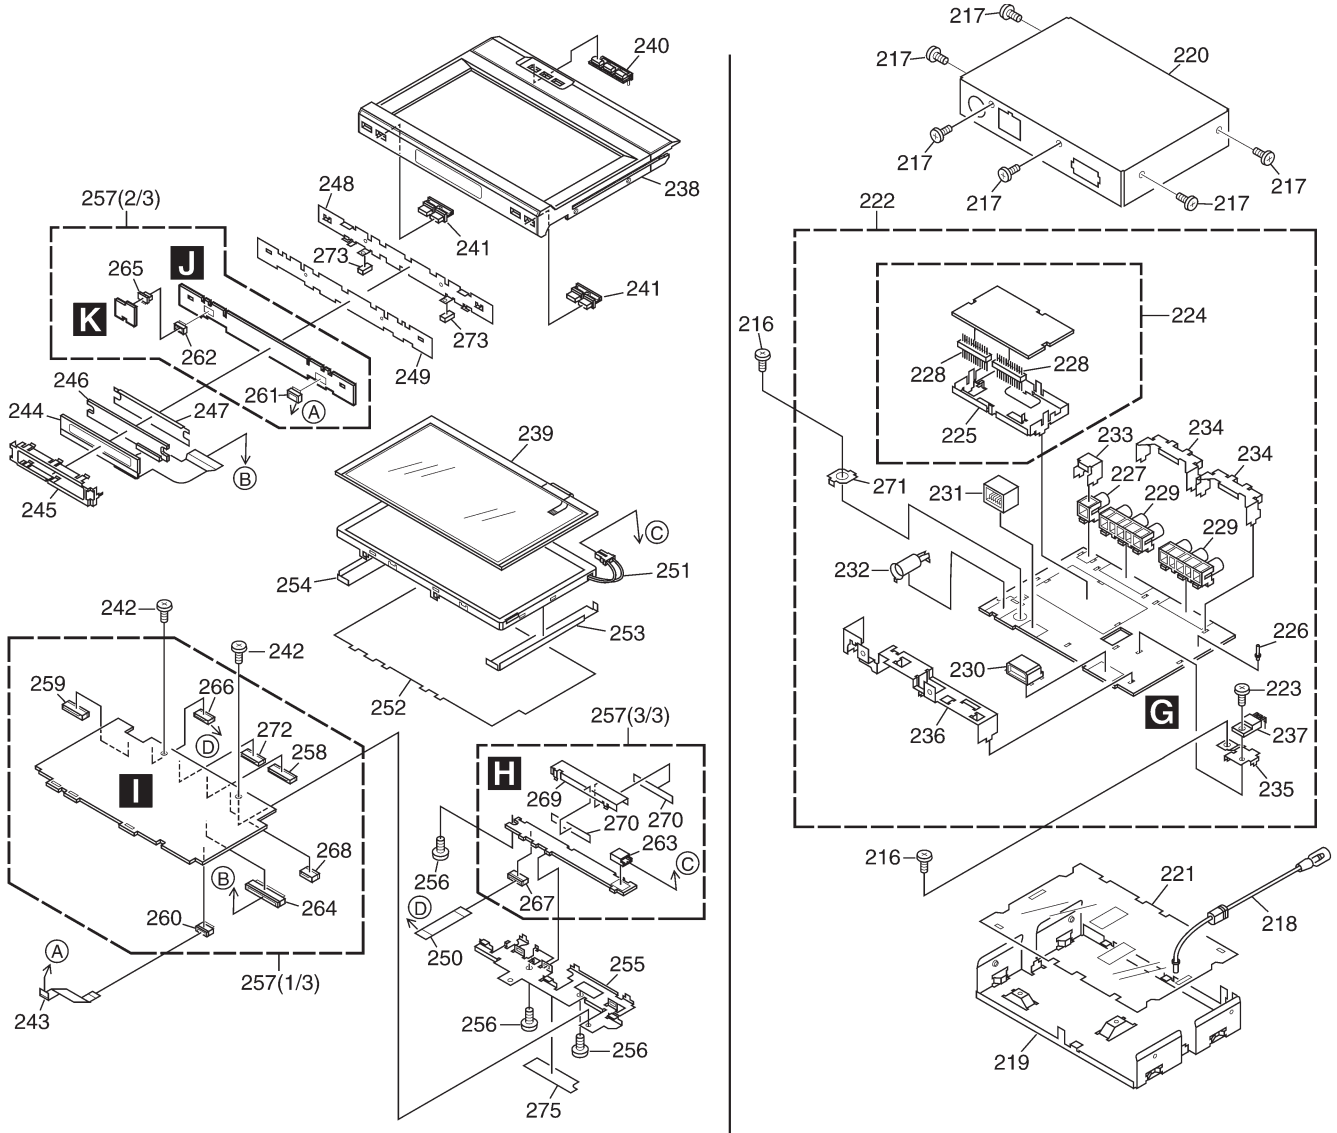

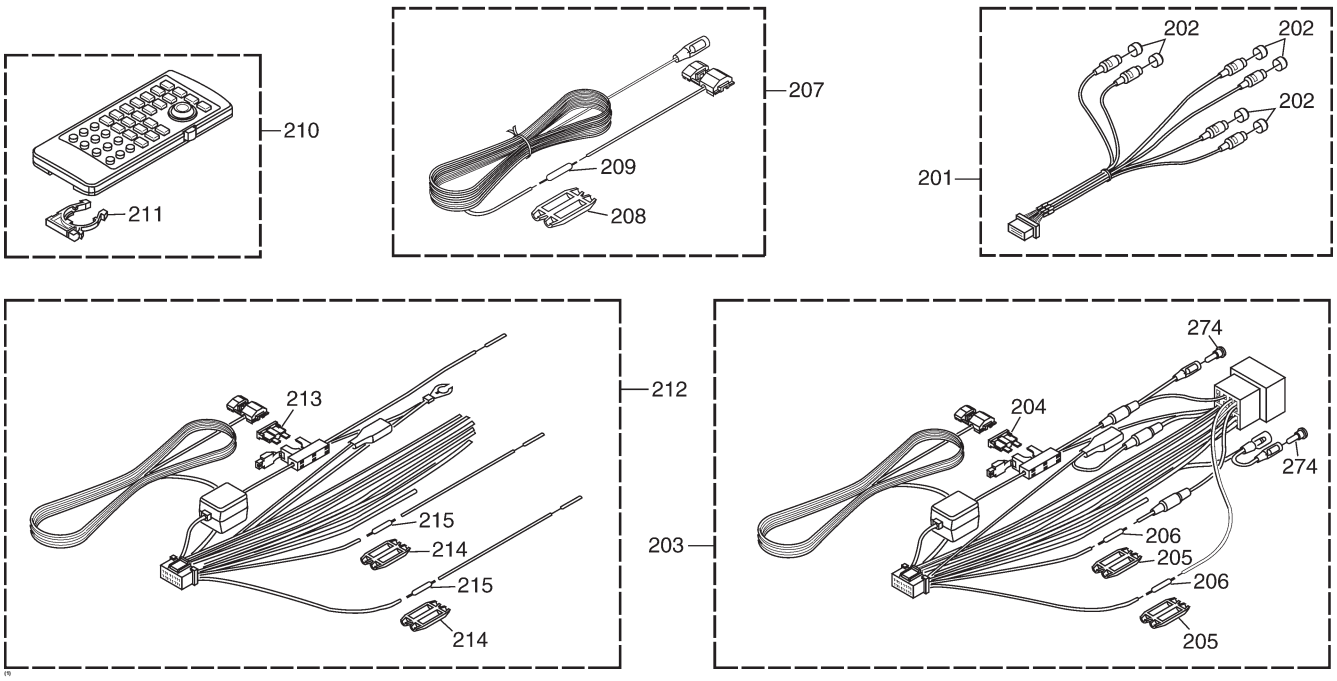

(1)EXTERIOR(3) SECTION PARTS LIST


Mark	No.	Description	Part No.
	201	Cord Assy	CDE7194
	202	Cap	CNV6727
	203	Cord Assy	See Contrast table(2)
	204	Fuse(10A)	See Contrast table(2)
	205	Cap	See Contrast table(2)
	206	Resistor	See Contrast table(2)
	207	Cord Assy	CDE7321
	208	Cap	CNS1472
	209	Resistor	RS1/2PMF102J
	210	Remote Control Unit	See Contrast table(2)
	211	Cover	CZN5357
	212	Cord Assy	See Contrast table(2)
	213	Fuse(10A)	See Contrast table(2)
	214	Cap	See Contrast table(2)
	215	Resistor	See Contrast table(2)
	216	Screw	ISS26P055FTC
	217	Screw	BSZ30P060FZK
	218	Cord Assy	CDE7280
	219	Chassis	CNA2774
	220	Case	See Contrast table(2)
	221	Insulator	CNM9193
	222	Tuner Unit	See Contrast table(2)
	223	Screw	BMZ30P050FTC
	224	FM/AM Tuner Unit	See Contrast table(2)
	225	Holder	CND1432
	226	Terminal(CN1412)	CKF-047
	227	Pin Jack(CN1403)	CKS1065
	228	Connector(CN101,CN102)	CKS4653
	229	Pin Jack(CN1401,CN1402)	CKS2918
	230	Connector(CN1404)	CKS4467
	231	Connector(CN1405)	CKS4663
	232	Antenna Jack(CN1406)	CKX1056
	233	Holder	CNC6746
	234	Holder	CNC7205
	235	Holder	CNC9888
	236	Holder	CND1451
	237	Transistor(Q1404)	2SD2375
	238	Grille Unit	See Contrast table(2)
	239	Touch Panel	CSX1064
	240	Button(ENT,WIDE,MENU)	See Contrast table(2)
	241	Button	CAC7936
	242	Screw(M2x2.2)	CBA1753
	243	FFC	CDE7195
	244	LCD	CAW1805
	245	Holder	CND1468
	246	Lighting Conductor	CNV7564
	247	Sheet	CNM8488
	248	Holder	CND1469
	249	Insulator	CNM8131
	250	FFC	CDE7196
	251	LCD Panel	CWX3056
	252	Insulator	CNM8930
	253	Sheet	CNM8265
	254	Sheet	CNM7784
	255	Holder	CND2037
	256	Screw	BPZ20P060FTC
	257	Monitor Unit	See Contrast table(2)
	258	Connector(CN4461)	CKS3968
	259	Connector(CN4801)	CKS3991
	260	Connector(CN4201)	CKS4054
	261	Connector(CN4301)	CKS4054
	262	Connector(CN4311)	CKS4374
	263	Connector(CN5002)	CKS4428
	264	Connector(CN4701)	CKS4495
	265	Connector(CN4312)	CKS4496
	266	Connector(CN4451)	CKS4595
	267	Connector(CN5001)	CKS4595
	268	Connector(CN4401)	CKS4675
	269	Holder	CND1677
	270	Insulator	CNM9251
	271	Holder(CN1407)	CNC5399
	272	Connector(CN4481)	CKS4319
	273	Cushion	CNM8440
	274	Cap See Contrast table(2)	
	275	Insulator	CNM9216

(2) CONTRAST TABLE

AVH-P6600DVD/UC , AVH-P6600DVD/EW , AVH-P6650DVD/RC and AVH-P6650DVD/RD are constructed the same except for the following:

Mark	NO	Description	P6600DVD/UC	P6600DVD/EW	P6650DVD/RC	P6650DVD/RD
	203	Cord Assy	Not used	CDE7608	Not used	Not used
	204	Fuse(10A)	Not used	CEK1136	Not used	Not used
	205	Cap	Not used	CNS1472	Not used	Not used
	206	Resistor	Not used	RS1/2PMF102J	Not used	Not used
	210	Remote Control Unit	CXC3074	CXC3075	CXC3075	CXC3075
	212	Cord Assy	CDE7609	Not used	CDE7609	CDE7609
	213	Fuse(10A)	CEK1136	Not used	CEK1136	CEK1136
	214	Cap	CNS1472	Not used	CNS1472	CNS1472
	215	Resistor	RS1/2PMF102J	Not used	RS1/2PMF102J	RS1/2PMF102J
	220	Case	CNB2963	CNB2963	CNB2964	CNB2964
	222	Tuner Unit	CWM9203	CWM9202	CWM9203	CWM9203
	224	FM/AM Tuner Unit	CWE1651	CWE1650	CWE1651	CWE1651
	238	Grille Unit	CXC2660	CXC2659	CXC2661	CXC2661
	240	Button (ENT,WIDE,MENU)	CAC8451	CAC8451	CAC8688	CAC8688
	257	Monitor Unit	CWM9148	CWM9147	CWM9149	CWM9149
	274	Cap	Not used	CKX-003	Not used	Not used

2.5 DVD MECHANISM MODULE

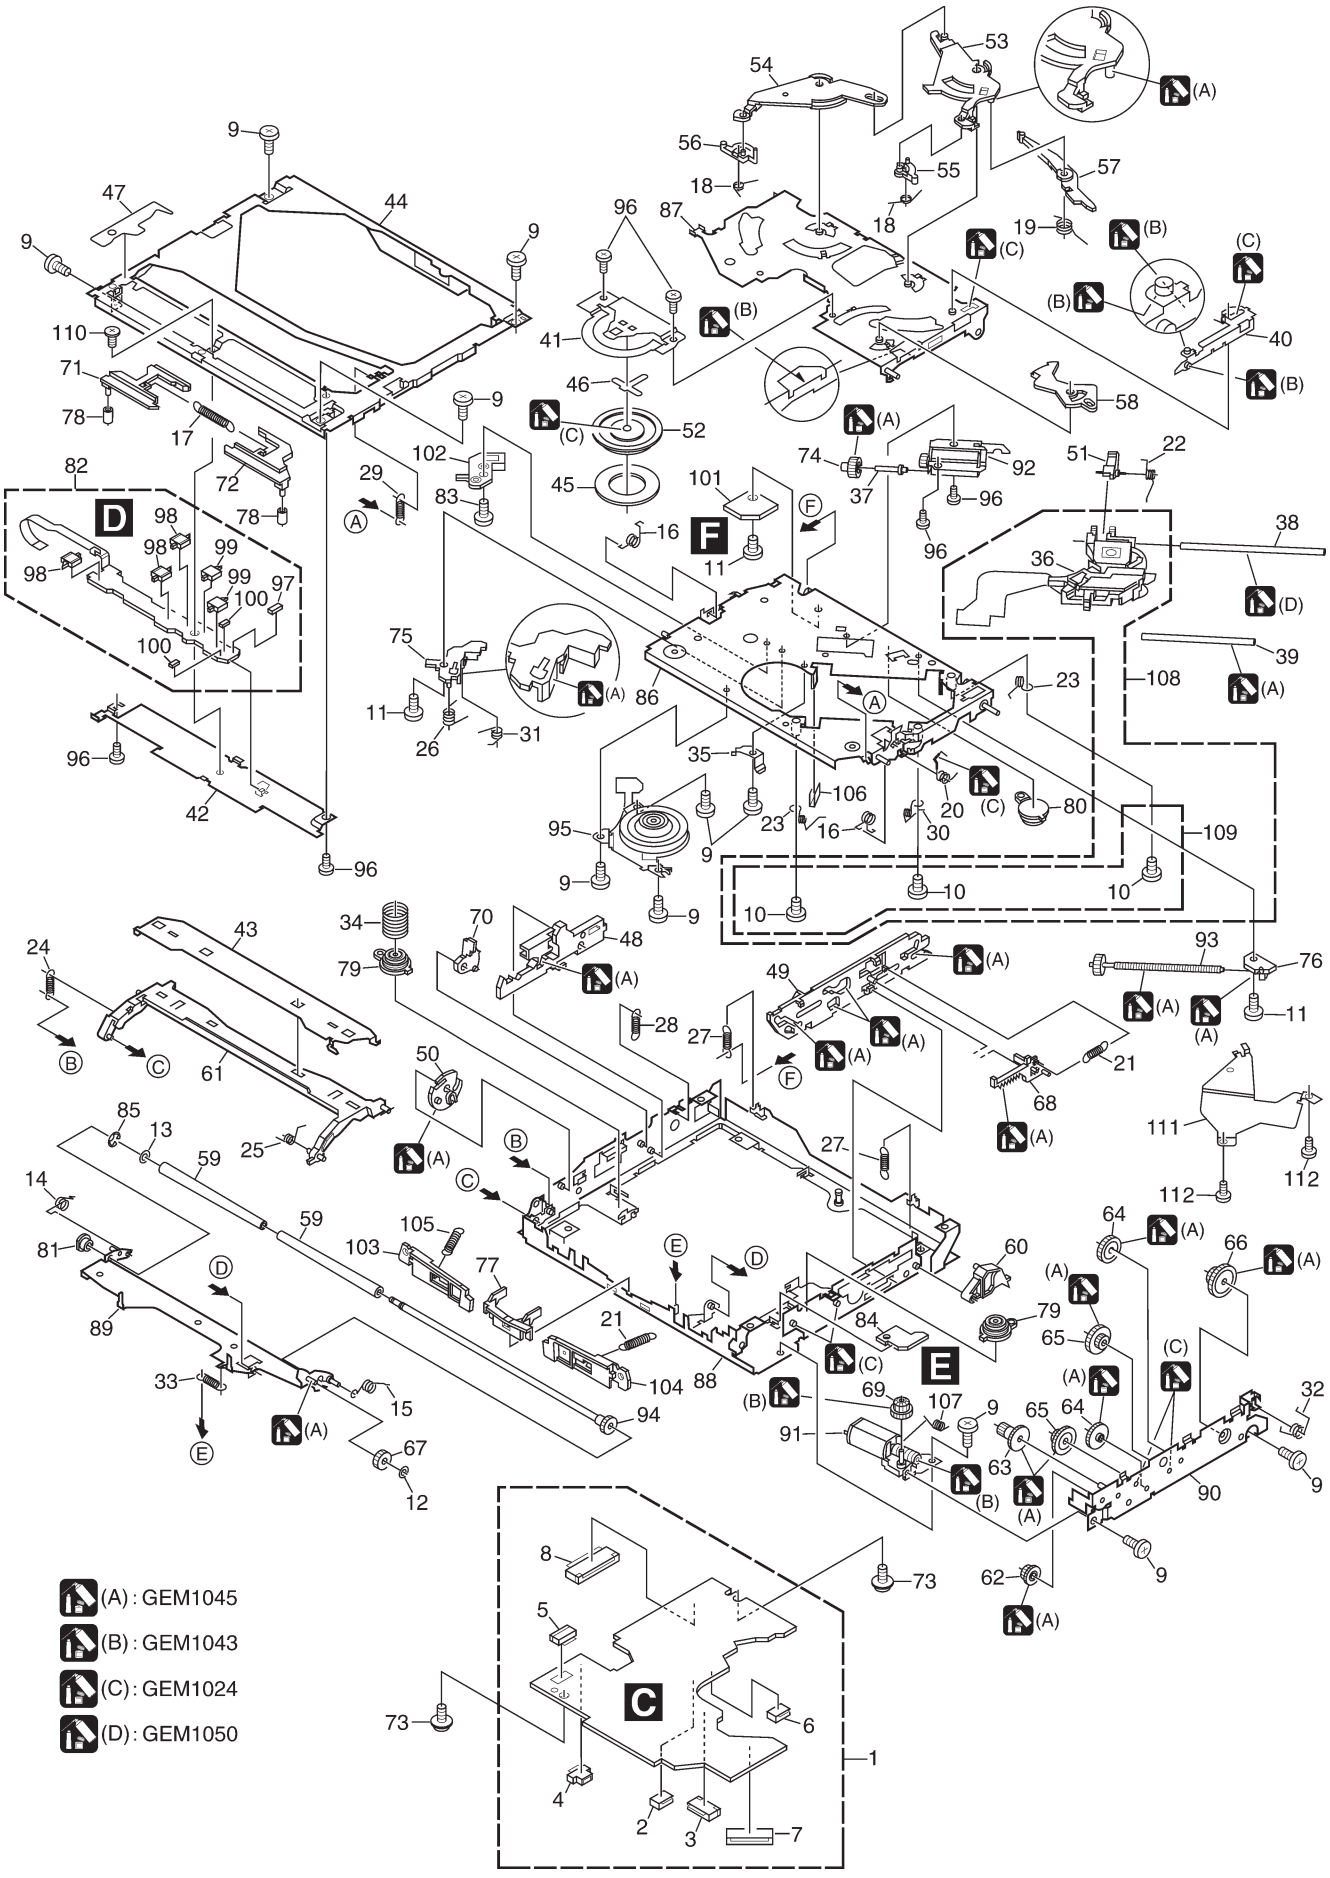

DVD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	DVD Core Unit(MS-3V1)	CWX2883
	2	Connector(CN1902)	CKS4374
	3	Connector(CN1201)	CKS4067
	4	Connector(CN1551)	CKS4817
	5	Connector(CN1231)	CKS4624
	6	Connector(CN1903)	CKS4374
	7	Connector(CN1101)	CKS4625
	8	Connector(CN1901)	CKS3971
	9	Screw	BMZ20P020FTC
	10	Screw(M2 x 3.5)	CBA1571
	11	Screw(M2 x 2.5)	CBA1623
	12	Washer	CBF1038
	13	Washer	CBF1064
	14	Spring	CBH2586
	15	Spring	CBH2587
	16	Spring	CBH2588
	17	Spring	CBH2589
	18	Spring	CBH2590
	19	Spring	CBH2591
	20	Spring	CBH2592
	21	Spring	CBH2593
	22	Spring	CBH2594
	23	Spring	CBH2595
	24	Spring	CBH2596
	25	Spring	CBH2597
	26	Spring	CBH2598
	27	Spring	CBH2599
	28	Spring	CBH2600
	29	Spring	CBH2601
	30	Spring	CBH2602
	31	Spring	CBH2603
	32	Spring	CBH2604
	33	Spring	CBH2605
	34	Spring	CBH2711
	35	Spring	CBL1564
	36	Pickup Unit(Service)	CXX1770
	37	Shaft	CLA3881
	38	Shaft	CLA4206
	39	Shaft	CLA4207
	40	Lever	CNC9933
	41	Holder	CNC9939
	42	Holder	CND2251
	43	Holder	CNC9941
	44	Frame	CND2250
	45	Sheet	CNM6883
	46	Sheet	CNM8283
	47	Sheet	CNM8643
	48	Lever	CNV8076
	49	Lever	CNV7155
	50	Cam	CNV7156
	51	Rack	CNV7157
	52	Clamper	CNV7158
	53	Arm	CNV7159
	54	Arm	CNV7160
	55	Arm	CNV7161
	56	Arm	CNV7162
*	57	Arm	CNV7163
	58	Arm	CNV7164
	59	Roller	CNV7165
	60	Arm	CNV7166
	61	Guide	CNV8093
	62	Gear	CNV7169
	63	Gear	CNV7170
	64	Gear	CNV7171
	65	Gear(Black)	CNV7172
	66	Gear	CNV7173
	67	Gear	CNV7174
	68	Rack	CNV7175
	69	Gear	CNV7176
	70	Arm	CNV8077
	71	Lever	CNV7178
	72	Lever	CNV7179
	73	Screw	IMS20P030FTC
	74	Gear	CNV7181
	75	Holder	CNV7183
	76	Holder	CNV7184
	77	Guide	CNV7745
	78	Roller	CNV7344
	79	Damper	CNV7470
	80	Damper	CNV7471
	81	Collar	CNV7645
	82	Compound(A)	CWX3024
	83	Screw(M2x2)	CBA1802
	84	Compound(B)	CWX2753
	85	Washer	YE20FTC
	86	Chassis Unit	CXC3629
	87	Arm Unit	CXB8681
	88	Frame Unit	CXB8683
	89	Arm Unit	CXC2988
	90	Bracket Unit	CXB8685
	91	Motor Unit(LOADING)(M1)	CXB8687
	92	Motor Unit(CARRIAGE)(M2)	CXB8688
	93	Screw Unit	CXB8689
	94	Roller Unit	CXB8690
	95	Motor(SPINDLE)(M3)	CXM1272
	96	Screw	JFZ20P018FTC
	97	Photo-transistor(Q1299)	CPT231SCTD
	98	Switch(S1201,S1202,S1203)	CSN1051
	99	Spring Switch(S1204,S1205)	CSN1052
	100	Resistor(R1298,R1299)	RS1/16S0R0J
	101	Gathering PCB	CNX4320
	102	Holder	CNV8186
	103	Arm	CNV7742
	104	Arm	CNV7743
	105	Spring	CBH2710
	106	Spring	CBL1643
	107	Spring	CBH2712
	108	Pickup Unit(Service)(Screw)	GXX1242
	109	Screw Assy	CXX1750
	110	Screw(M1.4xM1.4)	CBA1787
	111	Cover	CNC9943
	112	Screw	JFZ20P018FTC

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

Mother Unit
Consists of
Mother PCB
Relay PCB

A B

Unit Number:CWM9143(UC model)
Unit Number:CWM9142(EW model)
Unit Name:Mother Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 101	IC	TC4S81F
IC 102	IC	HA12240FP
IC 103	IC	TC7SET08FU
IC 151	IC	SM5304AV
IC 152	IC	TC74VHC08FT
IC 153	IC	TC7SET08FU
IC 201	IC	PML009A
IC 202	IC	PAL007A
IC 203	IC	PA2028A
IC 301	IC	NJM4558V
IC 351	IC	NJM4558V
IC 352	IC	NJM4558V
IC 353	IC	NJM4580V
IC 401	IC	TA2050F
IC 402	IC	TA2050F
IC 403	IC	TA2050F
IC 404	IC	NJM2136V
IC 405	IC	NJM2136V
IC 406	IC	NJM2136V
IC 407	IC	NJM2136V
IC 408	IC	CXA2089Q
IC 409	IC	BA7623F
IC 410	IC	NJM2136V
IC 411	IC	NJM2138V
IC 601	IC(UC model)	PE5416A
IC 601	IC(EW model)	PE5415A
IC 602	IC	PDH089A
IC 603	IC	S-80841CNUA-B82
IC 801	IC	S-812C33AUA-C2N
IC 802	IC	LTC3728EG
IC 803	IC	LTC3728EG
IC 804	IC	BA00BC0WFP
IC 805	IC	S-812C50AUA-C3E
IC 806	IC	S-814A33AMC-BCX
IC 1401	IC	PE5417A
IC 1403	IC	TC7WHU04FU
IC 1404	IC	S-80827CNUA-B8M
IC 1405	IC	TC7SET08FU
IC 1407	IC	TC74VCX02FT
IC 1408	IC	BA3834F
IC 1410	IC	PD8125A
IC 1411	IC	PD8126A
IC 1414	IC	TC7SZ04FU
IC 1451	IC	HD64413ASFI
IC 1452	IC	K4S641632H-TC75
Q 101	Transistor	2SC4081
Q 102	Transistor	2SC4081
Q 103	Transistor	UMF23N
Q 151	Transistor	IMD2A
Q 152	Transistor	IMX9
Q 201	Transistor	2SC4081
Q 202	Transistor	IMD2A
Q 203	Transistor	DTC124EU
Q 204	Transistor	DTC144EU
Q 205	Transistor	2SC4081
Q 206	Transistor	IMX9
Q 207	Transistor	IMX9
Q 208	Transistor	IMX9
Q 209	Transistor	IMD2A
Q 301	Transistor	IMX9
Q 302	Transistor	IMD2A
Q 303	Transistor	2SC4081
Q 351	Transistor	IMD2A
Q 352	Transistor	DTC323TU
Q 353	Transistor	DTC124EU
Q 401	Transistor	2SC4081
Q 402	Transistor	2SC4081
Q 403	Transistor	2SC4081
Q 404	Transistor	2SC4081
Q 405	Transistor	2SC4081
Q 406	Transistor	2SC4081
Q 551	Transistor	2SC4081
Q 552	Transistor	2SA1577
Q 601	Transistor	UMF23N
Q 602	Transistor	DTC114EU
Q 603	Transistor	DTA114EU
Q 604	Transistor	DTC144EU
Q 605	Transistor	2SC4081
Q 606	Transistor	2SC4081
Q 607	Transistor	2SC4081
Q 608	Transistor	2SC4081
Q 609	Transistor	2SA1577

Circuit Symbol and No.		Part No.
Q 610	Transistor	DTC144EU
Q 611	Transistor	2SA1577
Q 612	Transistor	DTC144EU
Q 613	Transistor	2SA1577
Q 614	Transistor	DTC144EU
Q 615	Transistor(EW model)	2SA1577
Q 616	Transistor(EW model)	DTC144EU
Q 617	Transistor	DTC124EU
Q 701	Transistor	IMX1
Q 702	Transistor	DTC114EU
Q 703	Transistor	2SA1576
Q 704	Transistor	2SA1576
Q 705	Transistor	2SC4081
Q 801	Transistor	DTC124EU
Q 802	Transistor	DTC124EU
Q 803	Transistor	2SB1708
Q 805	Transistor	2SB1708
Q 806	Transistor	2SC4081
Q 807	Transistor	2SB1708
Q 808	Transistor	DTC124EU
Q 809	Transistor	DTC124EU
Q 810	Transistor	DTC124EU
Q 811	Transistor	DTC124EU
Q 812	Transistor	UMF5N
Q 813	Transistor	DTC124EU
Q 814	Transistor	DTC124EU
Q 815	Transistor	2SB1184F5
Q 816	Transistor	2SD1767
Q 817	Transistor	IMD2A
Q 818	Transistor	2SD1767
Q 819	Transistor	DTC114EU
Q 821	FET	SP8K4
Q 822	FET	SP8K4
Q 823	FET	SP8K4
Q 824	Transistor	DTC124EU
Q 825	Transistor	2SA1797
Q 827	Transistor	DTC144EU
Q 828	Transistor	2SD1767
Q 829	Transistor	DTC124EU
Q 830	Transistor	2SB1708
Q 831	Transistor	DTC124EU
Q 832	Transistor	2SB1708
Q 833	Transistor	2SD1760F5
Q 834	Transistor	UMF5N
Q 835	Transistor	UMF5N
Q 836	Transistor	2SD2375
Q 837	Transistor	UMF5N
Q 838	Transistor	2SB1184F5
Q 839	Transistor	IMD2A
Q 840	Transistor	UMF5N
Q 841	Transistor	2SD1767
Q 842	Transistor	UMF5N
Q 843	Transistor	UMF5N
Q 844	Transistor	2SD1767
Q 845	Transistor	UMF5N
Q 901	Transistor	DTC114EU
Q 902	Transistor	2SA1615-Z
Q 1401	Transistor	FMG12
Q 1402	Transistor	UMF5N
Q 1403	Transistor	UMF5N

Circuit Symbol and No.		Part No.
Q 1405	Transistor	2SA1774
Q 1406	Transistor	2SA1774
Q 1407	Transistor	2SA1774
D 101	Diode	HZU2R7(B1)
D 102	Diode	HZU2R7(B1)
D 103	Diode	HZU2R7(B1)
D 104	Diode	HZU2R7(B1)
D 105	Diode	UDZS5R6(B)
D 106	Diode	UDZS5R6(B)
D 107	Diode	UDZS5R6(B)
D 108	Diode	UDZS5R6(B)
D 109	Diode	HZU2R7(B1)
D 110	Diode	HZU2R7(B1)
D 111	Diode	HZU2R7(B1)
D 112	Diode	HZU2R7(B1)
D 113	Diode Network	DA204U
D 114	Diode Network	DA204U
D 115	Diode	HZU2R7(B1)
D 116	Diode	HZU2R7(B1)
D 117	Diode	UDZS5R6(B)
D 118	Diode	UDZS5R6(B)
D 119	Diode	UDZS5R6(B)
D 120	Diode	UDZS8R2(B)
D 121	Diode	UDZS8R2(B)
D 201	Diode	DAN202U
D 202	Diode	DAN202U
D 203	Diode	DAN202U
D 204	Diode	UDZS8R2(B)
D 205	Diode	DAN202U
D 206	Diode	1SS355
D 301	Diode	RSX201L-30
D 601	Diode	UDZS5R6(B)
D 602	Diode Network	DA204U
D 603	Diode Network	DA204U
D 604	Diode Network	DA204U
D 605	Diode Network	DA204U
D 606	Diode Network	DA204U
D 607	Diode Network	DA204U
D 608	Diode Network	DA204U
D 609	Diode	1SS355
D 610	Diode	1SS355
D 611	Diode	DAN202U
D 612	Diode	1SS355
D 701	Diode	1SS355
D 702	Diode	HZU6R8(B2)
D 703	Diode	UDZS7R5(B)
D 704	Diode	DAN202U
D 705	Diode	DAN202U
D 706	Diode	S1G-6904G2P
D 707	Diode	S1G-6904G2P
D 708	Diode	5KP24A
D 801	Diode	S1G-6904G2P
D 802	Diode	UDZS18(B)
D 803	Diode	RSX201L-30
D 804	Diode	HZU8R2(B1)
D 805	Diode	DAN202U
D 806	Diode	HZU5R6(B2)
D 807	Diode	RB500V-40
D 808	Diode	RB500V-40
D 809	Diode	RB500V-40

Circuit Symbol and No.		Part No.
D 811	Diode	RB160L-40
D 812	Diode	RB160L-40
D 813	Diode	RB160L-40
D 814	Diode	S1G-6904G2P
D 815	Diode	S2G-6600
D 816	Diode	RSX201L-30
D 817	Diode	S2G-6600
D 819	Diode	UDZS5R6(B)
D 820	Diode	S2G-6600
D 821	Diode	DAN202U
D 822	Diode	HZU6R8(B3)
D 823	Diode	HZU10(B1)
D 825	Diode	UDZS20(B)
D 826	Diode	HZU6R8(B3)
D 827	Diode	DAN202U
D 828	Diode	1SS355
D 829	Diode	1SS355
D 830	Diode	1SS355
D 831	Diode	RSX201L-30
D 1401	Diode	1SS355
D 1402	Diode	1SS355
L 101	Inductor	CTF1379
L 102	Inductor	LCTC2R2K1608
L 103	Inductor	CTF1379
L 104	Inductor	CTF1558
L 105	Inductor	CTF1558
L 110	Inductor	CTF1389
L 151	Coil	CTH1295
L 152	Inductor	CTF1399
L 153	Inductor	CTF1399
L 154	Inductor	CTF1305
L 155	Inductor	CTF1305
L 157	Inductor	CTF1473
L 158	Inductor	CTF1473
L 201	Inductor	LCTA2R2J2520
L 202	Inductor	LCTA101J2520
L 301	Inductor	CTF1379
L 302	Inductor	CTF1379
L 303	Inductor	CTF1399
L 351	Inductor	CTF1399
L 352	Inductor	CTF1399
L 353	Inductor	CTF1399
L 401	Inductor	CTF1383
L 403	Inductor	CTF1399
L 404	Inductor	LCTA150J2520
L 405	Inductor	CTF1399
L 406	Inductor	CTF1399
L 407	Inductor	CTF1399
L 408	Inductor	LCTA100J2520
L 409	Inductor	CTF1383
L 410	Inductor	CTF1399
L 411	Inductor	CTF1399
L 412	Inductor	CTF1399
L 413	Inductor	CTF1399
L 415	Inductor	CTF1399
L 551	Inductor	CTF1399
L 601	Inductor	CTF1399
L 602	Inductor	CTF1306
L 603	Inductor	CTF1306
L 604	Inductor	LCTA2R2J2520

Circuit Symbol and No.		Part No.
L 701	Inductor	LCTC2R2K1608
L 702	Inductor	LCTC2R2K1608
L 801	Coil	CTH1308
L 802	Coil	CTH1308
L 803	Coil	CTH1308
L 805	Coil	CTH1308
L 806	Inductor	LCTA1R0J3225
L 807	Coil	CTH1308
L 809	Inductor	CTF1383
L 901	Coil	CTH1267
L 902	Choke Coil 270µH	CTH1263
L 1401	Inductor	CTF1379
L 1402	Inductor	CTF1399
L 1403	Inductor	CTF1399
L 1404	Inductor	CTF1379
L 1406	Inductor	CTF1399
L 1407	Inductor	CTF1379
L 1408	Inductor	CTF1379
L 1409	Inductor	CTF1379
L 1410	Inductor	CTF1399
L 1411	Inductor	CTF1396
L 1414	Inductor	CTF1379
L 1415	Inductor	LCTC2R2K1608
L 1416	Inductor	LCTC2R2K1608
L 1417	Inductor	LCTC2R2K1608
L 1418	Inductor	CTF1379
L 1419	Inductor	CTF1379
L 1420	Inductor	CTF1379
L 1421	Inductor	CTF1379
L 1422	Inductor	CTF1379
L 1423	Inductor	CTF1379
L 1424	Inductor	CTF1379
L 1425	Inductor	CTF1379
L 1426	Inductor	CTF1379
L 1427	Inductor	CTF1379
L 1428	Inductor	CTF1389
L 1429	Inductor	CTF1389
L 1430	Inductor	CTF1389
X 601	Resonator 18.874368MHz	CSS1622
X 1401	Ceramic Resonator 4.97MHz	CSS1575
X 1452	Resonator 33.0MHz	CSS1656
VR401	Semi-fixed 1.5kΩ(OB)	CCP1391
FU101	Fuse 5A	CEK1289
FU102	Fuse 1A	CEK1280
FU103	Fuse 1A	CEK1280
FU104	Fuse 5A	CEK1289
FU107	Fuse 5A	CEK1289
FU151	Fuse 2.5A	CEK1285
FU152	Fuse 1A	CEK1280
FU153	Fuse 2A	CEK1284
FU154	Fuse 250mA	CEK1276
FU155	Fuse 250mA	CEK1276
FU201	Fuse 3A	CEK1286
FU501	Fuse 250mA	CEK1276
FU502	Fuse 1.75A	CEK1283
FU701	Fuse 5A	CEK1289
FU802	Fuse 1.25A	CEK1281
FU804	Fuse 1A	CEK1280
FU805	Fuse 1A	CEK1280
FU901	Fuse 1.25A	CEK1281

Circuit Symbol and No.		Part No.
FU902	Fuse 1.75A	CEK1283
EF801	EMI Filter	CCG1142
BZ601	Buzzer	CPV1063

RESISTORS

R 101	RS1/16S750J
R 103	RS1/16S681J
R 104	RS1/16S681J
R 105	RS1/16S0R0J
R 106	RS1/16S750J
R 107	RS1/16S473J
R 108	RS1/16S681J
R 109	RS1/16S750J
R 110	RS1/16S473J
R 111	RS1/16S473J
R 112	RS1/16S681J
R 113	RS1/16S750J
R 114	RS1/16S473J
R 115	RS1/16S473J
R 116	RS1/16S473J
R 117	RS1/16S473J
R 118	RS1/16S472J
R 119	RS1/16S102J
R 120	RS1/16S101J
R 121	RS1/16S150J
R 122	RS1/16S470J
R 123	RS1/16S101J
R 124	RS1/16S222J
R 125	RS1/16S332J
R 126	RS1/16S562J
R 127	RS1/16S221J
R 128	RS1/16S621J
R 129	RS1/16S473J
R 130	RS1/16S121J
R 131	RS1/16S0R0J
R 132	RS1/16S101J
R 133	RS1/16S102J
R 134	RS1/16S102J
R 151	RAB4C102J
R 153	RAB4C102J
R 157	RS1/16S0R0J
R 158	RS1/16S0R0J
R 159	RS1/16S472J
R 162	RS1/16S101J
R 163	RS1/16S102J
R 164	RS1/16S103J
R 165	RS1/16S103J
R 201	RS1/16S181J
R 202	RS1/16S181J
R 203	RS1/16S0R0J
R 204	RS1/16S0R0J
R 205	RS1/16S223J
R 206	RS1/16S223J
R 207	RS1/16S102J
R 208	RS1/16S102J
R 209	RS1/16S0R0J
R 210	RS1/16S0R0J
R 211	RS1/16S0R0J
R 212	RS1/16S0R0J
R 213	RS1/16S0R0J

Circuit Symbol and No.	Part No.
R 214	RS1/16S0R0J
R 215	RS1/16S0R0J
R 216	RS1/16S0R0J
R 217	RS1/16S224J
R 218	RS1/16S224J
R 219	RS1/16S104J
R 220	RS1/16S102J
R 221	RS1/16S103J
R 222	RS1/16S682J
R 223	RS1/16S103J
R 224	RS1/16S103J
R 225	RS1/16S103J
R 226	RS1/16S223J
R 227	RS1/16S221J
R 228	RS1/16S101J
R 229	RS1/16S103J
R 230	RS1/16S104J
R 231	RS1/16S820J
R 232	RS1/16S820J
R 233	RS1/16S820J
R 234	RS1/16S820J
R 235	RS1/16S820J
R 236	RS1/16S820J
R 237	RS1/16S473J
R 238	RS1/16S102J
R 239	RS1/16S223J
R 240	RS1/16S223J
R 241	RS1/16S223J
R 242	RS1/16S223J
R 243	RS1/16S223J
R 244	RS1/16S223J
R 245	RS1/16S471J
R 246	RS1/16S471J
R 247	RS1/16S471J
R 248	RS1/16S471J
R 249	RS1/16S471J
R 250	RS1/16S471J
R 251	RS1/16S103J
R 252	RS1/16S103J
R 253	RS1/16S103J
R 254	RS1/16S103J
R 255	RS1/16S103J
R 256	RS1/16S103J
R 257	RS1/16S473J
R 261	RS1/16S101J
R 301	RS1/16S0R0J
R 302	RS1/16S0R0J
R 303	RS1/16S223J
R 304	RS1/16S223J
R 305	RS1/16S821J
R 306	RS1/16S821J
R 307	RS1/16S222J
R 308	RS1/16S472J
R 309	RS1/16S472J
R 312	RS1/16S473J
R 313	RS1/16S473J
R 314	RS1/16S102J
R 315	RS1/16S272J
R 316	RS1/16S472J
R 317	RS1/16S222J

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
R 318	RS1/16S222J	R 435	RS1/16S152J
R 319	RS1/16S103J	R 436	RS1/16S750J
R 320	RS1/16S103J	R 437	RS1/16S101J
R 351	RS1/16S473J	R 438	RS1/16S472J
R 352	RS1/16S101J	R 439	RS1/16S472J
R 353	RS1/16S473J	R 440	RS1/16S270J
R 354	RS1/16S103J	R 441	RS1/16S472J
R 355	RS1/16S473J	R 442	RS1/16S102J
R 356	RS1/16S472J	R 443	RS1/16S272J
R 357	RS1/16S472J	R 444	RS1/16S392J
R 358	RS1/16S103J	R 445	RS1/16S472J
R 359	RS1/16S473J	R 446	RS1/16S102J
R 360	RS1/16S473J	R 447	RS1/16S0R0J
R 361	RS1/16S104J	R 448	RS1/16S562J
R 362	RS1/16S821J	R 449	RS1/16S562J
R 363	RS1/16S473J	R 450	RS1/16S562J
R 364	RS1/16S473J	R 451	RS1/16S562J
R 365	RS1/16S103J	R 452	RS1/16S272J
R 366	RS1/16S102J	R 453	RS1/16S472J
R 367	RS1/16S103J	R 454	RS1/16S0R0J
R 368	RS1/16S103J	R 455	RS1/16S472J
R 369	RS1/16S103J	R 456	RS1/16S101J
R 370	RS1/16S103J	R 457	RS1/16S472J
R 371	RS1/16S103J	R 458	RS1/16S750J
R 372	RS1/16S103J	R 459	RS1/16S472J
R 375	RS1/16S103J	R 460	RS1/16S473J
R 401	RS1/16S123J	R 461	RS1/16S333J
R 402	RS1/16S123J	R 462	RS1/16S0R0J
R 403	RS1/16S123J	R 463	RS1/16S472J
R 404	RS1/16S223J	R 464	RS1/16S101J
R 405	RS1/16S123J	R 465	RS1/16S0R0J
R 406	RS1/16S223J	R 467	RS1/16S472J
R 407	RS1/16S223J	R 468	RS1/16S102J
R 408	RS1/16S102J	R 469	RS1/16S472J
R 409	RS1/16S181J	R 470	RS1/16S472J
R 410	RS1/16S181J	R 471	RS1/16S0R0J
R 411	RS1/16S223J	R 472	RS1/16S222J
R 412	RS1/16S102J	R 473	RS1/16S222J
R 413	RS1/16S102J	R 474	RS1/16S101J
R 414	RS1/16S223J	R 475	RS1/16S101J
R 415	RS1/16S223J	R 476	RS1/16S152J
R 416	RS1/16S223J	R 477	RS1/16S152J
R 417	RS1/16S102J	R 478	RS1/16S152J
R 418	RS1/16S750J	R 479	RS1/16S101J
R 419	RS1/16S223J	R 480	RS1/16S101J
R 420	RS1/16S181J	R 481	RS1/16S152J
R 421	RS1/16S181J	R 482	RS1/16S152J
R 422	RS1/16S472J	R 483	RS1/16S152J
R 423	RS1/16S472J	R 484	RS1/16S152J
R 424	RS1/16S750J	R 485	RS1/16S152J
R 425	RS1/16S472J	R 486	RS1/16S152J
R 426	RS1/16S472J	R 487	RS1/16S152J
R 427	RS1/16S101J	R 488	RS1/16S152J
R 428	RS1/16S472J	R 489	RS1/16S152J
R 429	RS1/16S472J	R 490	RS1/16S152J
R 430	RS1/16S152J	R 491	RS1/16S272J
R 431	RS1/16S101J	R 492	RS1/16S472J
R 432	RS1/16S472J	R 493	RS1/16S272J
R 433	RS1/16S472J	R 494	RS1/16S472J
R 434	RS1/16S472J	R 495	RS1/16S272J

Circuit Symbol and No.		Part No.
R 496		RS1/16S472J
R 497		RS1/16S272J
R 498		RS1/16S472J
R 499		RS1/16S152J
R 500		RS1/16S102J
R 501		RS1/16S471J
R 502		RS1/16S102J
R 503		RS1/16S471J
R 504		RS1/16S0R0J
R 505		RS1/16S0R0J
R 507		RS1/16S102J
R 508		RS1/16S102J
R 509		RS1/16S0R0J
R 510		RS1/16S0R0J
R 511		RS1/16S0R0J
R 512		RS1/16S0R0J
R 513		RS1/16S102J
R 514		RS1/16S0R0J
R 515		RS1/16S0R0J
R 516		RS1/16S471J
R 517		RS1/16S0R0J
R 518		RS1/16S102J
R 519		RS1/16S102J
R 520		RS1/16S0R0J
R 521		RS1/16S0R0J
R 522		RS1/16S0R0J
R 523		RS1/16S0R0J
R 524		RS1/16S0R0J
R 525		RS1/16S221J
R 526		RS1/16S221J
R 527		RS1/16S221J
R 528		RS1/16S221J
R 529		RS1/16S102J
R 530		RS1/16S102J
R 531		RS1/16S0R0J
R 532		RS1/16S0R0J
R 551		RS1/16S681J
R 552		RS1/16S331J
R 553		RS1/16S272J
R 554		RS1/16S681J
R 555		RS1/16S101J
R 601		RS1/16S102J
R 602		RS1/16S102J
R 603		RS1/16S102J
R 604		RS1/16S822J
R 605		RS1/16S222J
R 606		RS1/16S472J
R 607		RS1/16S472J
R 608		RAB4C222J
R 609		RS1/16S332J
R 610		RS1/16S332J
R 611		RS1/16S102J
R 612		RS1/16S102J
R 613		RS1/16S103J
R 614		RS1/16S223J
R 615		RS1/16S473J
R 616		RS1/16S472J
R 617		RS1/16S473J
R 618		RS1/16S472J
R 619		RS1/16S103J
R 620		RS1/16S104J
R 621		RS1/16S473J
R 622		RS1/16S473J
R 623		RS1/16S473J
R 624		RS1/16S473J
R 625	(EW model)	RAB4C101J
R 626		RS1/16S473J
R 627		RS1/16S102J
R 629		RS1/16S472J
R 630		RS1/16S102J
R 631		RS1/16S473J
R 633		RAB4C102J
R 634		RAB4C102J
R 635		RS1/16S473J
R 636		RS1/16S102J
R 638		RS1/16S102J
R 639		RAB4C102J
R 640		RS1/16S473J
R 641		RS1/16S102J
R 642		RS1/16S102J
R 643		RS1/16S472J
R 644		RS1/16S103J
R 648		RS1/16S101J
R 650	(EW model)	RS1/16S102J
R 652		RS1/16S221J
R 653		RS1/16S681J
R 654		RS1/16S473J
R 655		RS1/16S102J
R 656		RS1/16S473J
R 657		RS1/16S102J
R 658		RS1/16S473J
R 659		RS1/16S473J
R 660		RS1/16S104J
R 661		RS1/16S104J
R 662		RS1/16S473J
R 663		RS1/16S473J
R 665		RAB4C102J
R 666		RS1/16S473J
R 667		RS1/16S0R0J
R 668		RS1/16S473J
R 669		RS1/16S473J
R 670	(EW model)	RS1/16S473J
R 671		RS1/16S473J
R 673		RS1/16S472J
R 674		RS1/16S681J
R 675		RS1/16S681J
R 676		RS1/16S104J
R 678		RS1/16S104J
R 679		RAB4C681J
R 680		RS1/16S102J
R 681		RAB4C102J
R 682		RS1/16S102J
R 683		RS1/16S0R0J
R 684		RS1/16S102J
R 685		RS1/16S681J
R 686		RS1/16S681J
R 689		RS1/16S104J
R 690		RS1/16S104J
R 692		RS1/16S473J
R 693		RS1/16S223J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 694		RS1/16S472J	R 836		RS1/16S3901D
R 695		RS1/16S223J	R 837		RS1/16S102J
R 696		RS1/16S472J	R 838	2.7kΩ	CCN1143
R 697		RS1/16S223J	R 839		RS1/16S331J
R 698	(EW model)	RS1/16S472J	R 840		RS1/16S331J
R 699	(EW model)	RS1/16S223J	R 841	2.7kΩ	CCN1143
R 700		RS1/16S473J	R 842	2.7kΩ	CCN1143
R 701		RS1/16S102J	R 843	2.7kΩ	CCN1143
R 702		RS1/16S473J	R 844		RS1/16S100J
R 703		RS1/16S103J	R 845		RS1/16S100J
R 704		RS1/16S103J	R 846	10Ω	CCN1148
R 705		RS1/16S104J	R 847	10Ω	CCN1148
R 706		RS1/16S102J	R 848		RS1/16S472J
R 707		RS1/16S223J	R 849	10Ω	CCN1148
R 708		RS1/16S473J	R 850		RS1/16S181J
R 709		RS1/16S473J	R 851		RS1/16S181J
R 710		RS1/16S102J	R 852		RS1/16S332J
R 711		RS1/16S473J	R 853		RS1/16S181J
R 712		RS1/16S472J	R 854		RS1/16S181J
R 713		RS1/16S472J	R 855		RS1/16S181J
R 714		RS1/16S472J	R 856		RS1/16S181J
R 715		RS1/16S103J	R 857		RS1/16S472J
R 716		RS1/16S153J	R 858		RS1/16S102J
R 717		RS1/16S473J	R 859		RS1/16S1202D
R 718		RS1/16S222J	R 860		RS1/16S2701D
R 719		RS1/16S104J	R 861		RS1/16S8201D
R 801		RS1/16S103J	R 862		RS1/16S5600D
R 802		RS1/16S221J	R 863		RS1/16S104J
R 803		RS1/16S221J	R 864		RS1/16S391J
R 804		RS1/16S103J	R 865		RS1/16S222J
R 805		RS1/16S102J	R 866		RS1/16S472J
R 806		RS1/16S473J	R 867		RS1/16S222J
R 807		RS1/16S221J	R 868		RS1/16S472J
R 808		RS1/16S103J	R 869		RS1/16S271J
R 809		RS1/16S473J	R 870		RS1/16S103J
R 810		RS1/16S221J	R 871		RS1/16S332J
R 811		RS1/16S103J	R 872		RS1/16S271J
R 812		RS1/16S473J	R 873		RS1/16S121J
R 813		RS1/16S223J	R 874		RS1/16S103J
R 814		RS1/16S1201D	R 875		RS1/16S332J
R 815		RS1/16S4701D	R 876		RS1/16S121J
R 816		RS1/16S8201D	R 877		RS1/16S271J
R 817		RS1/16S1001D	R 878		RS1/16S103J
R 819		RS1/16S220J	R 879		RS1/16S103J
R 820		RS1/16S1001D	R 880		RS1/16S471J
R 821		RS1/16S822J	R 881		RS1/16S121J
R 822		RS1/16S822J	R 882		RS1/16S103J
R 823		RS1/16S4701D	R 883		RS1/16S332J
R 824		RS1/16S2R2J	R 884		RS1/16S820J
R 825		RS1/16S2R2J	R 885		RS1/16S820J
R 826		RS1/16S0R0J	R 886		RS1/16S103J
R 827		RS1/16S2R2J	R 887		RS1/16S332J
R 828		RS1/16S2R2J	R 888		RS1/16S103J
R 829		RS1/16S223J	R 889		RS1/16S332J
R 830		RS1/16S223J	R 890		RS1/16S330J
R 831		RS1/16S4301D	R 891		RS1/16S330J
R 832		RS1/16S6801D	R 892		RS1/16S330J
R 833		RS1/16S0R0J	R 893		RS1/16S103J
R 834		RS1/16S3301D	R 894		RS1/16S103J
R 835		RS1/16S1500D	R 895		RS1/16S104J

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
R 896	RS1/16S104J	R 1451	RS1/16S124J
R 897	RS1/16S331J	R 1452	RS1/16S473J
R 898	RS1/16S473J	R 1453	RS1/16S0R0J
R 899	RS1/16S0R0J	R 1454	RS1/16S101J
R 901	RS1/10S301J	R 1455	RS1/16S473J
R 902	RS1/10S301J	R 1456	RAB4CQ102J
R 903	RS1/16S153J	R 1460	RS1/16S102J
R 905	RS1/16S102J	R 1461	RS1/16S102J
R 906	RS1/16S102J	R 1462	RS1/16S471J
R 907	RS1/16S102J	R 1463	RS1/16S102J
R 911	RS1/16S0R0J	R 1464	RAB4CQ221J
R 912	RS1/16S0R0J	R 1465	RS1/16S102J
R 913	RS1/16S0R0J	R 1467	RS1/16S473J
R 914	RS1/16SS4R7J	R 1469	RS1/16S473J
R 915	RS1/16SS4R7J	R 1470	RS1/16S470J
R 916	RS1/16S4R7J	R 1471	RS1/16S470J
R 1401	RAB4CQ101J	R 1473	RS1/16S470J
R 1402	RAB4CQ101J	R 1474	RS1/16S470J
R 1403	RAB4CQ470J	R 1475	RS1/16S821J
R 1404	RAB4CQ470J	R 1476	RS1/16S470J
R 1405	RAB4CQ101J	R 1477	RS1/16S821J
R 1406	RS1/16S101J	R 1479	RS1/16S473J
R 1407	RS1/16S101J	R 1480	RS1/16S470J
R 1408	RS1/16S102J	R 1481	RS1/16S470J
R 1409	RS1/16S102J	R 1482	RS1/16S102J
R 1410	RS1/16S105J	R 1483	RS1/16S102J
R 1411	RS1/16S105J	R 1484	RS1/16S470J
R 1412	RS1/16S103J	R 1485	RS1/16S473J
R 1413	RS1/16S102J	R 1486	RS1/16S473J
R 1414	RS1/16S821J	R 1487	RAB4CQ102J
R 1415	RS1/16S102J	R 1488	RS1/16S222J
R 1416	RAB4CQ101J	R 1497	RS1/16S0R0J
R 1417	RAB4CQ101J	R 1501	RS1/16S473J
R 1418	RAB4CQ470J	R 1502	RS1/16S473J
R 1419	RAB4CQ470J	R 1503	RS1/16S473J
R 1420	RS1/16S0R0J	R 1504	RS1/16S104J
R 1423	RS1/16S473J	R 1505	RS1/16S273J
R 1424	RS1/16S473J	R 1506	RS1/16S563J
R 1425	RAB4CQ101J	R 1507	RS1/16S151J
R 1426	RAB4CQ101J	R 1508	RS1/16S151J
R 1427	RAB4CQ470J	R 1510	RAB4CQ470J
R 1428	RAB4CQ470J	R 1511	RAB4CQ470J
R 1429	RAB4CQ101J	R 1512	RAB4CQ470J
R 1430	RS1/16S101J	R 1513	RAB4CQ101J
R 1431	RS1/16S101J	R 1514	RAB4CQ101J
R 1432	RS1/16S471J	R 1515	RAB4CQ101J
R 1433	RS1/16S471J	R 1516	RAB4CQ101J
R 1434	RS1/16S473J	R 1517	RAB4CQ101J
R 1435	RS1/16S471J	R 1518	RS1/16S0R0J
R 1436	RS1/16S473J	R 1519	RS1/16S101J
R 1439	RS1/16S102J	R 1520	RS1/16S0R0J
R 1440	RS1/16S821J	R 1521	RS1/16S680J
R 1441	RAB4CQ101J	R 1522	RS1/16S105J
R 1442	RAB4CQ101J	R 1524	RS1/16S101J
R 1443	RAB4CQ470J	R 1526	RS1/16S220J
R 1444	RAB4CQ470J	R 1527	RS1/16S473J
R 1445	RS1/16S821J	R 1528	RAB4CQ470J
R 1446	RS1/16S471J	R 1530	RS1/16S473J
R 1449	RS1/16S821J	R 1531	RS1/16S470J
R 1450	RS1/16S102J	R 1534	RS1/16S471J

Circuit Symbol and No.	Part No.
R 1535	RS1/16S330J
R 1536	RS1/16S102J
R 1537	RS1/16S102J
R 1538	RS1/16S102J
R 1539	RS1/16S102J
R 1540	RS1/16S473J
R 1543	RAB4CQ470J
R 1544	RS1/16S101J
R 1545	RS1/16S151J
R 1546	RS1/16S151J
R 1547	RAB4CQ470J
R 1549	RS1/16S473J
R 1550	RAB4CQ470J
R 1551	RS1/16S101J
R 1552	RS1/16S302J
R 1553	RAB4CQ470J
R 1554	RS1/16S101J
R 1555	RS1/16S470J
R 1556	RS1/16S470J
R 1557	RS1/16S471J
R 1558	RS1/16S470J
R 1559	RS1/16S470J
R 1560	RS1/16S471J
R 1561	RS1/16S470J
R 1562	RS1/16S470J
R 1563	RS1/16S473J
R 1564	RS1/16S470J
R 1565	RS1/16S473J
R 1566	RS1/16S473J
R 1567	RAB4CQ680J
R 1568	RS1/16S473J
R 1569	RS1/16S331J
R 1570	RS1/16S331J
R 1571	RS1/16S331J
R 1572	RS1/16S333J
R 1573	RS1/16S153J
R 1574	RS1/16S333J
R 1575	RS1/16S153J
R 1576	RS1/16S333J
R 1577	RS1/16S153J
R 1578	RAB4CQ680J
R 1579	RAB4CQ680J
R 1580	RS1/16S102J
R 1581	RS1/16S102J
R 1582	RS1/16S102J
R 1583	RS1/16S470J
R 1584	RS1/16S470J
R 1585	RS1/16S0R0J
R 1586	RS1/16S0R0J
R 1587	RS1/16S0R0J
R 1588	RS1/16S103J
R 1589	RS1/16S103J
R 1590	RS1/16S103J
R 1591	RS1/16S103J

CAPACITORS

Circuit Symbol and No.		Part No.
C 101		CCSRCH471J50
C 102		CKSRYB104K16
C 103		CKSRYB104K16
C 104		CKSRYB104K16
C 105		CKSRYB102K50
C 106		CCSRCH150J50
C 107		CKSRYB104K16
C 108		CKSYB106K6R3
C 109		CKSRYB222K50
C 110		CKSRYB104K16
C 111		CKSRYB102K50
C 112		CKSRYB102K50
C 153		CKSYB106K6R3
C 155		CKSRYB102K50
C 156		CKSYB475K10
C 157		CKSRYB103K50
C 158		CEVLW220M6R3
C 159		CEVLW101M10
C 160		CKSRYB102K50
C 201		CKSRYB105K6R3
C 202		CKSRYB105K6R3
C 203		CKSRYB105K6R3
C 204		CKSRYB105K6R3
C 205		CKSRYB224K10
C 206		CKSRYB224K10
C 207		CKSRYB105K6R3
C 208		CKSRYB105K6R3
C 209		CKSRYB105K6R3
C 210		CKSRYB105K6R3
C 213		CKSRYB102K50
C 214		CEVLW470M16
C 215		CKSRYB104K16
C 216		CKSYB475K10
C 217		CKSYB475K10
C 218		CKSYB475K10
C 219		CKSYB475K10
C 222		CKSYB475K10
C 223		CKSYB475K10
C 224		CKSYB475K10
C 225		CKSYB475K10
C 226		CCSRCH100D50
C 227		CCSRCH100D50
C 228		CKSRYB104K16
C 229		CCSRCH100D50
C 230		CCSRCH100D50
C 231		CCSRCH100D50
C 232		CCSRCH100D50
C 233		CKSRYB104K16
C 234		CKSRYB104K16
C 235		CKSRYB104K16
C 236		CEVLW100M16
C 237		CKSRYB224K10
C 238		CKSRYB105K10
C 239		CKSRYB105K10
C 240		CEVLW100M16
C 241		CKSRYB105K10
C 242		CKSRYB105K10
C 243		CKSRYB105K10
C 244		CKSRYB105K10
C 245	10µF	CCG1182
C 246		CEVLW101M10
C 247		CKSRYB105K10
C 248		CKSRYB105K10

Circuit Symbol and No.		Part No.
C 249		CKSYB475K10
C 250		CEVLW330M25
C 251		CKSQYB225K10
C 252		CKSQYB225K10
C 253		CKSQYB225K10
C 254		CKSQYB225K10
C 255		CKSQYB225K10
C 256		CKSQYB225K10
C 257		CEVLW100M16
C 259		CKSRYB105K10
C 260		CEVLW330M25
C 261	10µF	CCG1182
C 262	10µF	CCG1182
C 263	10µF	CCG1182
C 264	10µF	CCG1182
C 265	10µF	CCG1182
C 266	10µF	CCG1182
C 267		CKSYB684K16
C 268		CEVLW330M25
C 269	10µF	CCG1138
C 270	1000µF/16V	CCH1428
C 272	10µF	CCG1182
C 273		CKSYB475K16
C 274		CKSYB475K16
C 275		CKSRYB222K50
C 276		CKSRYB222K50
C 277		CKSRYB222K50
C 278		CKSRYB222K50
C 279		CKSRYB222K50
C 280		CKSRYB222K50
C 281		CKSRYB473K50
C 282	10µF	CCG1182
C 285		CKSRYB104K16
C 303		CEVW101M16
C 304		CKSYB475K10
C 305		CKSYB475K16
C 306		CKSYB475K16
C 307		CCSRCH220J50
C 308		CCSRCH220J50
C 309		CEVLW100M16
C 310		CEVLW100M16
C 311		CKSRYB102K50
C 312		CKSRYB105K10
C 313		CEVLW470M16
C 351		CKSQYB105K16
C 352		CKSQYB105K16
C 355		CEVLW100M16
C 356		CKSRYB104K16
C 357		CKSYB106K6R3
C 358		CKSRYB104K16
C 359		CKSRYB104K16
C 360		CKSRYB104K16
C 362		CKSRYB104K16
C 401		CEVLW100M16
C 402		CKSRYB105K6R3
C 403		CKSRYB105K6R3
C 404		CKSRYB104K16
C 405		CKSRYB105K6R3
C 406		CKSRYB105K6R3
C 407		CKSRYB104K16

Circuit Symbol and No.		Part No.
C 408		CKSRYB105K6R3
C 409		CKSRYB105K6R3
C 410		CKSYB475K16
C 411		CKSRYB104K16
C 412		CKSRYB104K16
C 413		CKSRYB105K6R3
C 414		CKSRYB104K16
C 415		CKSRYB105K6R3
C 416		CKSYB106K6R3
C 417		CKSYB106K6R3
C 418		CKSYB475K16
C 419		CEVLW100M16
C 420		CKSYB475K16
C 421		CKSYB106K6R3
C 422		CEVLW100M16
C 424		CKSRYB104K16
C 425		CKSYB106K6R3
C 426		CKSRYB104K16
C 428		CCSRCH6R0D50
C 429		CKSRYB104K16
C 430		CKSYB106K6R3
C 431		CCSRCH6R0D50
C 433		CKSYB106K6R3
C 434		CKSRYB104K16
C 435		CCSRCH6R0D50
C 436		CKSYB106K6R3
C 437		CKSRYB105K6R3
C 438		CKSRYB104K16
C 439		CKSRYB105K6R3
C 440		CKSRYB105K6R3
C 441		CEVLW221M4
C 442		CEVLW221M4
C 443		CEVLW221M4
C 444		CKSRYB104K16
C 445		CKSRYB105K6R3
C 446		CKSRYB105K6R3
C 447		CKSRYB102K50
C 448		CKSRYB102K50
C 449		CKSRYB104K16
C 450		CKSQYB225K10
C 451		CKSYB106K6R3
C 452		CKSRYB104K16
C 453		CKSRYB105K6R3
C 454		CKSRYB102K50
C 455		CKSRYB104K16
C 456		CKSYB106K6R3
C 458		CCSRCH6R0D50
C 459		CKSYB106K6R3
C 460		CKSRYB105K6R3
C 461		CKSRYB105K6R3
C 462		CCSRCH6R0D50
C 464	47µF	CCG1181
C 465	47µF	CCG1181
C 466		CEVLW101M10
C 467		CKSRYB105K6R3
C 468		CKSYB106K6R3
C 469		CEVLW100M16
C 470		CKSRYB104K16
C 471		CKSRYB104K16
C 472		CKSYB106K6R3

Circuit Symbol and No.		Part No.
C 473		CKSYB106K6R3
C 474		CKSYB106K6R3
C 475		CKSYB106K6R3
C 476		CKSYB106K6R3
C 477		CCSRCH6R0D50
C 478		CCSRCH6R0D50
C 479		CCSRCH6R0D50
C 480		CKSYB106K6R3
C 481		CKSYB106K6R3
C 482		CKSYB106K6R3
C 483		CKSRYB102K50
C 484		CKSRYB104K16
C 485		CKSRYB104K16
C 486		CKSRYB102K50
C 487		CKSRYB104K16
C 488		CCSRCH6R0D50
C 489		CKSRYB104K16
C 490		CEVLW101M10
C 551		CKSRYB105K6R3
C 555		CEVLW101M10
C 604		CKSRYB103K50
C 605		CKSRYB103K50
C 606		CEVLW2R2M50
C 607		CKSRYB105K6R3
C 608		CKSRYB105K6R3
C 609		CKSRYB104K16
C 610		CCSRCH101J50
C 612		CCSRCH7R0D50
C 613		CCSRCH7R0D50
C 614		CKSRYB105K6R3
C 615		CKSRYB104K25
C 616		CKSRYB104K25
C 617		CKSRYB104K25
C 618	(EW model)	CKSRYB104K25
C 619		CCSRCH100D50
C 620		CCSRCH100D50
C 621		CCSRCH680J50
C 701		CKSRYB105K10
C 702		CKSRYB104K16
C 703		CKSRYB104K16
C 704		CKSRYB103K50
C 705		CKSQYB104K16
C 706		CKSRYB104K16
C 708		CKSRYB104K16
C 801	0.22µF	CCL1058
C 802		CKSYB106K6R3
C 803		CKSRYB103K50
C 804		CCSRCH102J50
C 805		CCSRCH102J50
C 806		CKSRYB103K50
C 807		CCSRCH102J50
C 808		CKSRYB103K50
C 809		CKSRYB104K16
C 811		CCSRCH470J50
C 817		CCSRCH471J50
C 818		CCSRCH390J50
C 819		CKSRYB222K50
C 821		CKSRYB472K50
C 822	2200µF/16V	CCH1405
C 823		CCSRCH181J50

Circuit Symbol and No.		Part No.
C 824		CCSRCH681J50
C 825		CKSRYB103K50
C 826		CKSRYB182K50
C 827		CKSRYB103K50
C 829		CKSRYB104K16
C 830		CCSRCH100D50
C 831		CCSRCH470J50
C 832		CCSRCH102J50
C 833		CCSRCH102J50
C 835		CKSSYB104K10
C 836		CKSRYB104K16
C 837		CKSSYB104K10
C 838		CKSQYB105K16
C 839		CKSQYB105K16
C 840		CSZS4R7M16
C 841		CSZS4R7M16
C 842		CKSRYB104K16
C 843		CKSRYB104K16
C 844		CKSRYB102K50
C 845	10µF	CCG1138
C 846		CEHAZL471M16
C 847	22µF	CCG1183
C 848	22µF	CCG1183
C 849	47µF	CCG1181
C 850	10µF	CCG1138
C 851	47µF	CCG1181
C 853		CKSRYB105K10
C 854		CKSRYB105K10
C 855	2200µF/16V	CCH1405
C 856		CKSRYB105K10
C 858		CKSYB225K16
C 861		CKSRYB474K10
C 862		CEVLW470M16
C 863		CKSRYB104K16
C 864		CCSRCH102J50
C 865		CEVLW470M16
C 866		CKSRYB103K50
C 867		CKSRYB103K50
C 868		CEVLW100M16
C 869	10µF	CCG1182
C 870		CEVLW101M10
C 871		CKSRYB104K16
C 872		CKSRYB103K50
C 873	0.1µF	CCL1059
C 874		CKSRYB103K50
C 875		CKSRYB103K50
C 876		CEVW101M16
C 877		CEVW101M16
C 878		CKSRYB104K16
C 881		CKSRYB103K50
C 882		CKSRYB103K50
C 883		CKSRYB103K50
C 884		CEVLW100M16
C 885		CKSRYB103K50
C 886	1000µF/16V	CCH1428
C 887	10µF	CCG1138
C 890		CCSRCH151J50
C 891		CCSRCH151J50
C 892		CCSRCH151J50
C 893		CKSRYB105K6R3

Circuit Symbol and No.		Part No.
C 894		CKSRYB103K50
C 895		CKSRYB105K6R3
C 901		CKSRYB104K16
C 902	100µF/16V	CCH1228
C 903	100µF/16V	CCH1228
C 904	1000µF/16V	CCH1428
C 1401		CKSRYB102K50
C 1402		CKSRYB102K50
C 1403		CKSRYB102K50
C 1404		CKSRYB102K50
C 1405		CKSRYB104K16
C 1406		CKSRYB104K16
C 1407		CSZSC101M10
C 1408		CKSRYB104K16
C 1409		CKSRYB104K16
C 1410		CKSRYB104K16
C 1411		CKSRYB104K16
C 1412		CKSRYB104K16
C 1413		CKSRYB104K16
C 1414		CSZSC101M10
C 1415		CKSRYB104K16
C 1416		CKSRYB105K6R3
C 1417		CKSRYB104K16
C 1418		CKSRYB104K16
C 1419		CKSRYB104K16
C 1420		CKSRYB104K16
C 1421		CKSRYB104K16
C 1422		CKSRYB103K50
C 1424		CKSRYB104K16
C 1425		CSZSC101M10
C 1426		CKSRYB103K50
C 1427		CKSRYB104K16
C 1428		CKSRYB104K16
C 1429		CKSRYB104K16
C 1430		CKSRYB104K16
C 1431		CKSRYB104K16
C 1432		CKSRYB104K16
C 1433		CKSRYB105K6R3
C 1434		CKSRYB104K16
C 1436		CSZSC101M10
C 1437		CKSRYB105K6R3
C 1438		CKSRYB105K6R3
C 1439		CKSRYB105K6R3
C 1440		CKSRYB105K6R3
C 1441		CKSRYB105K6R3
C 1442		CSZSC101M10
C 1443		CKSRYB104K16
C 1446		CKSRYB105K6R3
C 1447		CKSRYB105K6R3
C 1448		CKSRYB105K6R3
C 1449		CKSRYB105K6R3
C 1450		CKSRYB105K6R3
C 1451		CKSRYB105K6R3
C 1452		CKSRYB105K6R3
C 1453		CCSRCH221J50
C 1454		CCSRCH220J50
C 1455		CCSRCH471J50
C 1456		CKSRYB105K6R3
C 1457		CKSRYB105K6R3
C 1459		CCSRCH471J50

Circuit Symbol and No.	Part No.
C 1460	CKSRYB105K6R3
C 1463	CKSRYB105K6R3
C 1464	CKSRYB105K6R3
C 1467	CKSYB475K10
C 1468	CKSRYB104K16
C 1469	CKSRYB104K16
C 1470	CKSRYB105K6R3
C 1471	CKSYB475K10
C 1472	CKSRYB104K16
C 1473	CKSYB475K10
C 1474	CKSRYB105K6R3
C 1475	CKSRYB105K6R3
C 1477	CKSRYB105K6R3
C 1478	CKSRYB105K6R3
C 1479	CKSRYB105K6R3
C 1480	CKSRYB105K6R3
C 1481	CKSYB106K6R3
C 1482	CKSYB106K6R3
C 1483	CKSYB106K6R3
C 1484	CKSYB106K6R3
C 1485	CKSYB106K6R3
C 1486	CKSYB106K6R3

Mother Unit
Consists of
Mother PCB
Relay PCB

A B

Unit Number:CWM9144(RC model)
Unit Number:CWM9145(RD model)
Unit Name:Mother Unit

MISCELLANEOUS

IC 102	IC	HA12240FP
IC 103	IC	TC7SET08FU
IC 151	IC	SM5304AV
IC 152	IC	TC74VHC08FT
IC 153	IC	TC7SET08FU
IC 201	IC	PML009A
IC 202	IC	PAL007A
IC 203	IC	PA2028A
IC 301	IC	NJM4558V
IC 402	IC	TA2050F
IC 403	IC	TA2050F
IC 404	IC	NJM2136V
IC 406	IC	NJM2136V
IC 407	IC	NJM2136V
IC 408	IC	CXA2089Q
IC 409	IC	BA7623F
IC 410	IC	NJM2136V
IC 601	IC	PE5416A
IC 602	IC	PDH089A
IC 603	IC	S-80841CNUA-B82
IC 801	IC	S-812C33AUA-C2N
IC 802	IC	LTC3728EG
IC 803	IC	LTC3728EG
IC 804	IC	BA00BC0WFP

Circuit Symbol and No.		Part No.
IC 805	IC	S-812C50AUA-C3E
IC 806	IC	S-814A33AMC-BCX
IC 1401	IC	PE5417A
IC 1403	IC	TC7WHU04FU
IC 1404	IC	S-80827CNUA-B8M
IC 1405	IC	TC7SET08FU
IC 1407	IC	TC74VCX02FT
IC 1408	IC	BA3834F
IC 1410	IC	PD8125A
IC 1411	IC	PD8126A
IC 1414	IC	TC7SZ04FU
IC 1451	IC	HD64413ASFI
IC 1452	IC	K4S641632H-TC75
Q 102	Transistor	2SC4081
Q 103	Transistor	UMF23N
Q 151	Transistor	IMD2A
Q 152	Transistor	IMX9
Q 201	Transistor	2SC4081
Q 202	Transistor	IMD2A
Q 203	Transistor	DTC124EU
Q 204	Transistor	DTC144EU
Q 205	Transistor	2SC4081
Q 206	Transistor	IMX9
Q 207	Transistor	IMX9
Q 208	Transistor	IMX9
Q 209	Transistor	IMD2A
Q 301	Transistor	IMX9
Q 302	Transistor	IMD2A
Q 303	Transistor	2SC4081
Q 401	Transistor	2SC4081
Q 402	Transistor	2SC4081
Q 404	Transistor	2SC4081
Q 406	Transistor	2SC4081
Q 551	Transistor	2SC4081
Q 552	Transistor	2SA1577
Q 601	Transistor	UMF23N
Q 603	Transistor	DTA114EU
Q 604	Transistor	DTC144EU
Q 605	Transistor	2SC4081
Q 606	Transistor	2SC4081
Q 608	Transistor	2SC4081
Q 609	Transistor	2SA1577
Q 610	Transistor	DTC144EU
Q 611	Transistor	2SA1577
Q 612	Transistor	DTC144EU
Q 613	Transistor	2SA1577
Q 614	Transistor	DTC144EU
Q 617	Transistor	DTC124EU
Q 701	Transistor	IMX1
Q 702	Transistor	DTC114EU
Q 703	Transistor	2SA1576
Q 704	Transistor	2SA1576
Q 705	Transistor	2SC4081
Q 801	Transistor	DTC124EU
Q 802	Transistor	DTC124EU
Q 803	Transistor	2SB1708
Q 805	Transistor	2SB1708
Q 806	Transistor	2SC4081
Q 807	Transistor	2SB1708
Q 808	Transistor	DTC124EU

Circuit Symbol and No.		Part No.
Q 809	Transistor	DTC124EU
Q 810	Transistor	DTC124EU
Q 811	Transistor	DTC124EU
Q 812	Transistor	UMF5N
Q 813	Transistor	DTC124EU
Q 814	Transistor	DTC124EU
Q 815	Transistor	2SB1184F5
Q 816	Transistor	2SD1767
Q 817	Transistor	IMD2A
Q 818	Transistor	2SD1767
Q 819	Transistor	DTC114EU
Q 821	FET	SP8K4
Q 822	FET	SP8K4
Q 823	FET	SP8K4
Q 824	Transistor	DTC124EU
Q 825	Transistor	2SA1797
Q 827	Transistor	DTC144EU
Q 828	Transistor	2SD1767
Q 829	Transistor	DTC124EU
Q 830	Transistor	2SB1708
Q 831	Transistor	DTC124EU
Q 832	Transistor	2SB1708
Q 833	Transistor	2SD1760F5
Q 834	Transistor	UMF5N
Q 835	Transistor	UMF5N
Q 836	Transistor	2SD2375
Q 837	Transistor	UMF5N
Q 838	Transistor	2SB1184F5
Q 839	Transistor	IMD2A
Q 840	Transistor	UMF5N
Q 841	Transistor	2SD1767
Q 842	Transistor	UMF5N
Q 843	Transistor	UMF5N
Q 844	Transistor	2SD1767
Q 845	Transistor	UMF5N
Q 901	Transistor	DTC114EU
Q 902	Transistor	2SA1615-Z
Q 1401	Transistor	FMG12
Q 1402	Transistor	UMF5N
Q 1403	Transistor	UMF5N
Q 1405	Transistor	2SA1774
Q 1406	Transistor	2SA1774
Q 1407	Transistor	2SA1774
D 118	Diode	UDZS5R6(B)
D 119	Diode	UDZS5R6(B)
D 201	Diode	DAN202U
D 202	Diode	DAN202U
D 203	Diode	DAN202U
D 204	Diode	UDZS8R2(B)
D 205	Diode	DAN202U
D 206	Diode	1SS355
D 301	Diode	RSX201L-30
D 601	Diode	UDZS5R6(B)
D 602	Diode Network	DA204U
D 603	Diode Network	DA204U
D 604	Diode Network	DA204U
D 605	Diode Network	DA204U
D 606	Diode Network	DA204U
D 607	Diode Network	DA204U
D 608	Diode Network	DA204U

Circuit Symbol and No.		Part No.
D 609	Diode	1SS355
D 610	Diode	1SS355
D 611	Diode	DAN202U
D 612	Diode	1SS355
D 701	Diode	1SS355
D 702	Diode	HZU6R8(B2)
D 703	Diode	UDZS7R5(B)
D 704	Diode	DAN202U
D 705	Diode	DAN202U
D 706	Diode	S1G-6904G2P
D 707	Diode	S1G-6904G2P
D 708	Diode	5KP24A
D 801	Diode	S1G-6904G2P
D 802	Diode	UDZS18(B)
D 803	Diode	RSX201L-30
D 804	Diode	HZU8R2(B1)
D 805	Diode	DAN202U
D 806	Diode	HZU5R6(B2)
D 807	Diode	RB500V-40
D 808	Diode	RB500V-40
D 809	Diode	RB500V-40
D 811	Diode	RB160L-40
D 812	Diode	RB160L-40
D 813	Diode	RB160L-40
D 814	Diode	S1G-6904G2P
D 815	Diode	S2G-6600
D 816	Diode	RSX201L-30
D 817	Diode	S2G-6600
D 819	Diode	UDZS5R6(B)
D 820	Diode	S2G-6600
D 821	Diode	DAN202U
D 822	Diode	HZU6R8(B3)
D 823	Diode	HZU10(B1)
D 825	Diode	UDZS20(B)
D 826	Diode	HZU6R8(B3)
D 827	Diode	DAN202U
D 828	Diode	1SS355
D 829	Diode	1SS355
D 830	Diode	1SS355
D 831	Diode	RSX201L-30
D 1401	Diode	1SS355
D 1402	Diode	1SS355
L 101	Inductor	CTF1379
L 102	Inductor	LCTC2R2K1608
L 103	Inductor	CTF1379
L 110	Inductor	CTF1389
L 151	Coil	CTH1295
L 152	Inductor	CTF1399
L 153	Inductor	CTF1399
L 154	Inductor	CTF1305
L 155	Inductor	CTF1305
L 157	Inductor	CTF1473
L 158	Inductor	CTF1473
L 201	Inductor	LCTA2R2J2520
L 202	Inductor	LCTA101J2520
L 301	Inductor	CTF1379
L 302	Inductor	CTF1379
L 303	Inductor	CTF1399
L 401	Inductor	CTF1383
L 403	Inductor	CTF1399

Circuit Symbol and No.		Part No.
L 404	Inductor	LCTA150J2520
L 406	Inductor	CTF1399
L 407	Inductor	CTF1399
L 408	Inductor	LCTA100J2520
L 409	Inductor	CTF1383
L 412	Inductor	CTF1399
L 413	Inductor	CTF1399
L 415	Inductor	CTF1399
L 551	Inductor	CTF1399
L 601	Inductor	CTF1399
L 602	Inductor	CTF1306
L 603	Inductor	CTF1306
L 604	Inductor	LCTA2R2J2520
L 701	Inductor	LCTC2R2K1608
L 702	Inductor	LCTC2R2K1608
L 801	Coil	CTH1308
L 802	Coil	CTH1308
L 803	Coil	CTH1308
L 805	Coil	CTH1308
L 806	Inductor	LCTA1R0J3225
L 807	Coil	CTH1308
L 809	Inductor	CTF1383
L 901	Coil	CTH1267
L 902	Choke Coill 270µH	CTH1263
L 1401	Inductor	CTF1379
L 1402	Inductor	CTF1399
L 1403	Inductor	CTF1399
L 1404	Inductor	CTF1379
L 1406	Inductor	CTF1399
L 1407	Inductor	CTF1379
L 1408	Inductor	CTF1379
L 1409	Inductor	CTF1379
L 1410	Inductor	CTF1399
L 1411	Inductor	CTF1396
L 1414	Inductor	CTF1379
L 1415	Inductor	LCTC2R2K1608
L 1416	Inductor	LCTC2R2K1608
L 1417	Inductor	LCTC2R2K1608
L 1418	Inductor	CTF1379
L 1419	Inductor	CTF1379
L 1420	Inductor	CTF1379
L 1421	Inductor	CTF1379
L 1422	Inductor	CTF1379
L 1423	Inductor	CTF1379
L 1424	Inductor	CTF1379
L 1425	Inductor	CTF1379
L 1426	Inductor	CTF1379
L 1427	Inductor	CTF1379
L 1428	Inductor	CTF1389
L 1429	Inductor	CTF1389
L 1430	Inductor	CTF1389
X 601	Resonator 18.874368MHz	CSS1622
X 1401	Ceramic Resonator 4.97MHz	CSS1575
X 1452	Resonator 33.0MHz	CSS1656
VR401	Semi-fixed 1.5kΩ(OB)	CCP1391
FU102	Fuse 1A	CEK1280
FU103	Fuse 1A	CEK1280
FU107	Fuse 5A	CEK1289
FU151	Fuse 2.5A	CEK1285
FU152	Fuse 1A	CEK1280

Circuit Symbol and No.		Part No.
FU153	Fuse 2A	CEK1284
FU154	Fuse 250mA	CEK1276
FU155	Fuse 250mA	CEK1276
FU201	Fuse 3A	CEK1286
FU501	Fuse 250mA	CEK1276
FU502	Fuse 1.75A	CEK1283
FU701	Fuse 5A	CEK1289
FU802	Fuse 1.25A	CEK1281
FU804	Fuse 1A	CEK1280
FU805	Fuse 1A	CEK1280
FU901	Fuse 1.25A	CEK1281
FU902	Fuse 1.75A	CEK1283
EF801	EMI Filter	CCG1142
BZ601	Buzzer	CPV1063

RESISTORS

R 103		RS1/16S681J
R 104		RS1/16S681J
R 105		RS1/16S0R0J
R 115		RS1/16S473J
R 116		RS1/16S473J
R 117		RS1/16S473J
R 118		RS1/16S472J
R 119		RS1/16S102J
R 120		RS1/16S101J
R 121		RS1/16S150J
R 122		RS1/16S470J
R 123		RS1/16S101J
R 124		RS1/16S222J
R 125		RS1/16S332J
R 126		RS1/16S562J
R 127		RS1/16S221J
R 128		RS1/16S621J
R 129		RS1/16S473J
R 130		RS1/16S121J
R 131		RS1/16S0R0J
R 133		RS1/16S102J
R 134		RS1/16S102J
R 151		RAB4C102J
R 153		RAB4C102J
R 157		RS1/16S0R0J
R 158		RS1/16S0R0J
R 159		RS1/16S472J
R 162		RS1/16S101J
R 163		RS1/16S102J
R 164		RS1/16S103J
R 165		RS1/16S103J
R 201		RS1/16S181J
R 202		RS1/16S181J
R 203		RS1/16S0R0J
R 204		RS1/16S0R0J
R 205		RS1/16S223J
R 206		RS1/16S223J
R 207		RS1/16S102J
R 208		RS1/16S102J
R 209		RS1/16S0R0J
R 210		RS1/16S0R0J
R 211		RS1/16S0R0J
R 212		RS1/16S0R0J

Circuit Symbol and No.	Part No.
R 213	RS1/16S0R0J
R 214	RS1/16S0R0J
R 215	RS1/16S0R0J
R 216	RS1/16S0R0J
R 217	RS1/16S224J
R 218	RS1/16S224J
R 219	RS1/16S104J
R 220	RS1/16S102J
R 221	RS1/16S103J
R 222	RS1/16S682J
R 223	RS1/16S103J
R 224	RS1/16S103J
R 225	RS1/16S103J
R 226	RS1/16S223J
R 227	RS1/16S221J
R 228	RS1/16S101J
R 229	RS1/16S103J
R 230	RS1/16S104J
R 231	RS1/16S820J
R 232	RS1/16S820J
R 233	RS1/16S820J
R 234	RS1/16S820J
R 235	RS1/16S820J
R 236	RS1/16S820J
R 237	RS1/16S473J
R 238	RS1/16S102J
R 239	RS1/16S223J
R 240	RS1/16S223J
R 241	RS1/16S223J
R 242	RS1/16S223J
R 243	RS1/16S223J
R 244	RS1/16S223J
R 245	RS1/16S471J
R 246	RS1/16S471J
R 247	RS1/16S471J
R 248	RS1/16S471J
R 249	RS1/16S471J
R 250	RS1/16S471J
R 251	RS1/16S103J
R 252	RS1/16S103J
R 253	RS1/16S103J
R 254	RS1/16S103J
R 255	RS1/16S103J
R 256	RS1/16S103J
R 257	RS1/16S473J
R 261	RS1/16S101J
R 301	RS1/16S0R0J
R 302	RS1/16S0R0J
R 303	RS1/16S223J
R 304	RS1/16S223J
R 305	RS1/16S821J
R 306	RS1/16S821J
R 307	RS1/16S222J
R 308	RS1/16S472J
R 309	RS1/16S472J
R 312	RS1/16S473J
R 313	RS1/16S473J
R 314	RS1/16S102J
R 315	RS1/16S272J
R 316	RS1/16S472J

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
R 317	RS1/16S222J	R 473	RS1/16S222J
R 318	RS1/16S222J	R 493	RS1/16S272J
R 319	RS1/16S103J	R 494	RS1/16S472J
R 320	RS1/16S103J	R 497	RS1/16S272J
R 373	RS1/16S0R0J	R 498	RS1/16S472J
R 374	RS1/16S0R0J	R 501	RS1/16S471J
R 401	RS1/16S123J	R 502	RS1/16S102J
R 402	RS1/16S123J	R 503	RS1/16S471J
R 403	RS1/16S123J	R 504	RS1/16S0R0J
R 404	RS1/16S223J	R 505	RS1/16S0R0J
R 405	RS1/16S123J	R 507	RS1/16S102J
R 406	RS1/16S223J	R 508	RS1/16S102J
R 407	RS1/16S223J	R 509	RS1/16S0R0J
R 408	RS1/16S102J	R 510	RS1/16S0R0J
R 409	RS1/16S181J	R 511	RS1/16S0R0J
R 410	RS1/16S181J	R 512	RS1/16S0R0J
R 411	RS1/16S223J	R 513	RS1/16S102J
R 413	RS1/16S102J	R 514	RS1/16S0R0J
R 414	RS1/16S223J	R 515	RS1/16S0R0J
R 415	RS1/16S223J	R 516	RS1/16S471J
R 418	RS1/16S750J	R 517	RS1/16S0R0J
R 422	RS1/16S472J	R 518	RS1/16S102J
R 425	RS1/16S472J	R 519	RS1/16S102J
R 427	RS1/16S101J	R 520	RS1/16S0R0J
R 428	RS1/16S472J	R 521	RS1/16S0R0J
R 433	RS1/16S472J	R 522	RS1/16S0R0J
R 434	RS1/16S472J	R 523	RS1/16S0R0J
R 436	RS1/16S750J	R 524	RS1/16S0R0J
R 437	RS1/16S101J	R 525	RS1/16S221J
R 438	RS1/16S472J	R 526	RS1/16S221J
R 439	RS1/16S472J	R 527	RS1/16S221J
R 440	RS1/16S270J	R 528	RS1/16S221J
R 441	RS1/16S472J	R 530	RS1/16S102J
R 442	RS1/16S102J	R 531	RS1/16S0R0J
R 443	RS1/16S272J	R 532	RS1/16S0R0J
R 444	RS1/16S392J	R 551	RS1/16S681J
R 445	RS1/16S472J	R 552	RS1/16S331J
R 446	RS1/16S102J	R 553	RS1/16S272J
R 447	RS1/16S0R0J	R 554	RS1/16S681J
R 450	RS1/16S562J	R 555	RS1/16S101J
R 451	RS1/16S562J	R 601	RS1/16S102J
R 452	RS1/16S272J	R 602	RS1/16S102J
R 453	RS1/16S472J	R 603	RS1/16S102J
R 454	RS1/16S0R0J	R 604	RS1/16S822J
R 455	RS1/16S472J	R 605	RS1/16S222J
R 456	RS1/16S101J	R 606	RS1/16S472J
R 457	RS1/16S472J	R 607	RS1/16S472J
R 458	RS1/16S750J	R 608	RAB4C222J
R 459	RS1/16S472J	R 609	RS1/16S332J
R 460	RS1/16S473J	R 610	RS1/16S332J
R 461	RS1/16S333J	R 611	RS1/16S102J
R 462	RS1/16S0R0J	R 612	RS1/16S102J
R 463	RS1/16S472J	R 613	RS1/16S103J
R 464	RS1/16S101J	R 614	RS1/16S223J
R 467	RS1/16S472J	R 615	RS1/16S473J
R 468	RS1/16S102J	R 616	RS1/16S472J
R 469	RS1/16S472J	R 617	RS1/16S473J
R 470	RS1/16S472J	R 618	RS1/16S472J
R 471	RS1/16S0R0J	R 619	RS1/16S103J
R 472	RS1/16S222J	R 620	RS1/16S104J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 623		RS1/16S473J	R 697		RS1/16S223J
R 624		RS1/16S473J	R 700		RS1/16S473J
R 626		RS1/16S473J	R 701		RS1/16S102J
R 627		RS1/16S102J	R 702		RS1/16S473J
R 629		RS1/16S472J	R 703		RS1/16S103J
R 630		RS1/16S102J	R 704		RS1/16S103J
R 631	(RC model)	RS1/16S473J	R 705		RS1/16S104J
R 632		RS1/16S473J	R 706		RS1/16S102J
R 633		RAB4C102J	R 707		RS1/16S223J
R 634		RAB4C102J	R 708		RS1/16S473J
R 635		RS1/16S473J	R 709		RS1/16S473J
R 636		RS1/16S102J	R 710		RS1/16S102J
R 638		RS1/16S102J	R 711		RS1/16S473J
R 639		RAB4C102J	R 712		RS1/16S472J
R 640		RS1/16S473J	R 713		RS1/16S472J
R 641		RS1/16S102J	R 714		RS1/16S472J
R 642		RS1/16S102J	R 715		RS1/16S103J
R 643		RS1/16S472J	R 716		RS1/16S153J
R 644		RS1/16S103J	R 717		RS1/16S473J
R 648		RS1/16S101J	R 718		RS1/16S222J
R 652		RS1/16S221J	R 719		RS1/16S104J
R 653		RS1/16S681J	R 801		RS1/16S103J
R 654		RS1/16S473J	R 802		RS1/16S221J
R 655		RS1/16S102J	R 803		RS1/16S221J
R 656		RS1/16S473J	R 804		RS1/16S103J
R 657		RS1/16S102J	R 805		RS1/16S102J
R 658		RS1/16S473J	R 806		RS1/16S473J
R 659		RS1/16S473J	R 807		RS1/16S221J
R 660		RS1/16S104J	R 808		RS1/16S103J
R 661		RS1/16S104J	R 809		RS1/16S473J
R 662		RS1/16S473J	R 810		RS1/16S221J
R 663		RS1/16S473J	R 811		RS1/16S103J
R 665		RAB4C102J	R 812		RS1/16S473J
R 666		RS1/16S473J	R 813		RS1/16S223J
R 667		RS1/16S0R0J	R 814		RS1/16S1201D
R 668		RS1/16S473J	R 815		RS1/16S4701D
R 669		RS1/16S473J	R 816		RS1/16S8201D
R 671		RS1/16S473J	R 817		RS1/16S1001D
R 672		RS1/16S473J	R 819		RS1/16S220J
R 673		RS1/16S472J	R 820		RS1/16S1001D
R 674		RS1/16S681J	R 821		RS1/16S822J
R 675		RS1/16S681J	R 822		RS1/16S822J
R 676		RS1/16S104J	R 823		RS1/16S4701D
R 677		RS1/16S473J	R 824		RS1/16S2R2J
R 678		RS1/16S104J	R 825		RS1/16S2R2J
R 679		RAB4C681J	R 826		RS1/16S0R0J
R 680		RS1/16S102J	R 827		RS1/16S2R2J
R 681		RAB4C102J	R 828		RS1/16S2R2J
R 682		RS1/16S102J	R 829		RS1/16S223J
R 683		RS1/16S0R0J	R 830		RS1/16S223J
R 684		RS1/16S102J	R 831		RS1/16S4301D
R 685		RS1/16S681J	R 832		RS1/16S6801D
R 686		RS1/16S681J	R 833		RS1/16S0R0J
R 689		RS1/16S104J	R 834		RS1/16S3301D
R 690		RS1/16S104J	R 835		RS1/16S1500D
R 692		RS1/16S473J	R 836		RS1/16S3901D
R 693		RS1/16S223J	R 837		RS1/16S102J
R 694		RS1/16S472J	R 838	2.7kΩ	CCN1143
R 695		RS1/16S223J	R 839		RS1/16S331J
R 696		RS1/16S472J	R 840		RS1/16S331J

Circuit Symbol and No.		Part No.
R 841	2.7kΩ	CCN1143
R 842	2.7kΩ	CCN1143
R 843	2.7kΩ	CCN1143
R 844		RS1/16S100J
R 845		RS1/16S100J
R 846	10Ω	CCN1148
R 847	10Ω	CCN1148
R 848		RS1/16S472J
R 849	10Ω	CCN1148
R 850		RS1/16S181J
R 851		RS1/16S181J
R 852		RS1/16S332J
R 853		RS1/16S181J
R 854		RS1/16S181J
R 855		RS1/16S181J
R 856		RS1/16S181J
R 857		RS1/16S472J
R 858		RS1/16S102J
R 859		RS1/16S1202D
R 860		RS1/16S2701D
R 861		RS1/16S8201D
R 862		RS1/16S5600D
R 863		RS1/16S104J
R 864		RS1/16S391J
R 865		RS1/16S222J
R 866		RS1/16S472J
R 867		RS1/16S222J
R 868		RS1/16S472J
R 869		RS1/16S271J
R 870		RS1/16S103J
R 871		RS1/16S332J
R 872		RS1/16S271J
R 873		RS1/16S121J
R 874		RS1/16S103J
R 875		RS1/16S332J
R 876		RS1/16S121J
R 877		RS1/16S271J
R 878		RS1/16S103J
R 879		RS1/16S103J
R 880		RS1/16S471J
R 881		RS1/16S121J
R 882		RS1/16S103J
R 883		RS1/16S332J
R 884		RS1/16S820J
R 885		RS1/16S820J
R 886		RS1/16S103J
R 887		RS1/16S332J
R 888		RS1/16S103J
R 889		RS1/16S332J
R 890		RS1/16S330J
R 891		RS1/16S330J
R 892		RS1/16S330J
R 893		RS1/16S103J
R 894		RS1/16S103J
R 895		RS1/16S104J
R 896		RS1/16S104J
R 897		RS1/16S331J
R 898		RS1/16S473J
R 899		RS1/16S0R0J
R 901		RS1/10S301J

Circuit Symbol and No.	Part No.
R 902	RS1/10S301J
R 903	RS1/16S153J
R 905	RS1/16S102J
R 906	RS1/16S102J
R 907	RS1/16S102J
R 911	RS1/16S0R0J
R 912	RS1/16S0R0J
R 913	RS1/16S0R0J
R 914	RS1/16SS4R7J
R 915	RS1/16SS4R7J
R 916	RS1/16S4R7J
R 1401	RAB4CQ101J
R 1402	RAB4CQ101J
R 1403	RAB4CQ470J
R 1404	RAB4CQ470J
R 1405	RAB4CQ101J
R 1406	RS1/16S101J
R 1407	RS1/16S101J
R 1408	RS1/16S102J
R 1409	RS1/16S102J
R 1410	RS1/16S105J
R 1411	RS1/16S105J
R 1412	RS1/16S103J
R 1413	RS1/16S102J
R 1414	RS1/16S821J
R 1415	RS1/16S102J
R 1416	RAB4CQ101J
R 1417	RAB4CQ101J
R 1418	RAB4CQ470J
R 1419	RAB4CQ470J
R 1420	RS1/16S0R0J
R 1423	RS1/16S473J
R 1424	RS1/16S473J
R 1425	RAB4CQ101J
R 1426	RAB4CQ101J
R 1427	RAB4CQ470J
R 1428	RAB4CQ470J
R 1429	RAB4CQ101J
R 1430	RS1/16S101J
R 1431	RS1/16S101J
R 1432	RS1/16S471J
R 1433	RS1/16S471J
R 1434	RS1/16S473J
R 1435	RS1/16S471J
R 1436	RS1/16S473J
R 1439	RS1/16S102J
R 1440	RS1/16S821J
R 1441	RAB4CQ101J
R 1442	RAB4CQ101J
R 1443	RAB4CQ470J
R 1444	RAB4CQ470J
R 1445	RS1/16S821J
R 1446	RS1/16S471J
R 1449	RS1/16S821J
R 1450	RS1/16S102J
R 1451	RS1/16S124J
R 1452	RS1/16S473J
R 1453	RS1/16S0R0J
R 1454	RS1/16S101J
R 1455	RS1/16S473J

Circuit Symbol and No.	Part No.
R 1456	RAB4CQ102J
R 1460	RS1/16S102J
R 1461	RS1/16S102J
R 1462	RS1/16S471J
R 1463	RS1/16S102J
R 1464	RAB4CQ221J
R 1465	RS1/16S102J
R 1467	RS1/16S473J
R 1469	RS1/16S473J
R 1470	RS1/16S470J
R 1471	RS1/16S470J
R 1473	RS1/16S470J
R 1474	RS1/16S470J
R 1475	RS1/16S821J
R 1476	RS1/16S470J
R 1477	RS1/16S821J
R 1479	RS1/16S473J
R 1480	RS1/16S470J
R 1481	RS1/16S470J
R 1482	RS1/16S102J
R 1483	RS1/16S102J
R 1484	RS1/16S470J
R 1485	RS1/16S473J
R 1486	RS1/16S473J
R 1487	RAB4CQ102J
R 1488	RS1/16S222J
R 1497	RS1/16S0R0J
R 1501	RS1/16S473J
R 1502	RS1/16S473J
R 1503	RS1/16S473J
R 1504	RS1/16S104J
R 1505	RS1/16S273J
R 1506	RS1/16S563J
R 1507	RS1/16S151J
R 1508	RS1/16S151J
R 1510	RAB4CQ470J
R 1511	RAB4CQ470J
R 1512	RAB4CQ470J
R 1513	RAB4CQ101J
R 1514	RAB4CQ101J
R 1515	RAB4CQ101J
R 1516	RAB4CQ101J
R 1517	RAB4CQ101J
R 1518	RS1/16S0R0J
R 1519	RS1/16S101J
R 1520	RS1/16S0R0J
R 1521	RS1/16S680J
R 1522	RS1/16S105J
R 1524	RS1/16S101J
R 1526	RS1/16S220J
R 1527	RS1/16S473J
R 1528	RAB4CQ470J
R 1530	RS1/16S473J
R 1531	RS1/16S470J
R 1534	RS1/16S471J
R 1535	RS1/16S330J
R 1536	RS1/16S102J
R 1537	RS1/16S102J
R 1538	RS1/16S102J
R 1539	RS1/16S102J
R 1540	RS1/16S473J
R 1543	RAB4CQ470J
R 1544	RS1/16S101J
R 1545	RS1/16S151J
R 1546	RS1/16S151J
R 1547	RAB4CQ470J
R 1549	RS1/16S473J
R 1550	RAB4CQ470J
R 1551	RS1/16S101J
R 1552	RS1/16S302J
R 1553	RAB4CQ470J
R 1554	RS1/16S101J
R 1555	RS1/16S470J
R 1556	RS1/16S470J
R 1557	RS1/16S471J
R 1558	RS1/16S470J
R 1559	RS1/16S470J
R 1560	RS1/16S471J
R 1561	RS1/16S470J
R 1562	RS1/16S470J
R 1563	RS1/16S473J
R 1564	RS1/16S470J
R 1565	RS1/16S473J
R 1566	RS1/16S473J
R 1567	RAB4CQ680J
R 1568	RS1/16S473J
R 1569	RS1/16S331J
R 1570	RS1/16S331J
R 1571	RS1/16S331J
R 1572	RS1/16S333J
R 1573	RS1/16S153J
R 1574	RS1/16S333J
R 1575	RS1/16S153J
R 1576	RS1/16S333J
R 1577	RS1/16S153J
R 1578	RAB4CQ680J
R 1579	RAB4CQ680J
R 1580	RS1/16S102J
R 1581	RS1/16S102J
R 1582	RS1/16S102J
R 1583	RS1/16S470J
R 1584	RS1/16S470J
R 1585	RS1/16S0R0J
R 1586	RS1/16S0R0J
R 1587	RS1/16S0R0J
R 1588	RS1/16S103J
R 1589	RS1/16S103J
R 1590	RS1/16S103J
R 1591	RS1/16S103J

CAPACITORS

C 103	CKSRYB104K16
C 104	CKSRYB104K16
C 106	CCSRCH150J50
C 107	CKSRYB104K16
C 108	CKSYB106K6R3
C 111	CKSRYB102K50
C 112	CKSRYB102K50
C 153	CKSYB106K6R3

Circuit Symbol and No.		Part No.
C 155		CKSRYB102K50
C 156		CKSYB475K10
C 157		CKSRYB103K50
C 158		CEVLW220M6R3
C 159		CEVLW101M10
C 160		CKSRYB102K50
C 201		CKSRYB105K6R3
C 202		CKSRYB105K6R3
C 203		CKSRYB105K6R3
C 204		CKSRYB105K6R3
C 205		CKSRYB224K10
C 206		CKSRYB224K10
C 207		CKSRYB105K6R3
C 208		CKSRYB105K6R3
C 209		CKSRYB105K6R3
C 210		CKSRYB105K6R3
C 213		CKSRYB102K50
C 214		CEVLW470M16
C 215		CKSRYB104K16
C 216		CKSYB475K10
C 217		CKSYB475K10
C 218		CKSYB475K10
C 219		CKSYB475K10
C 222		CKSYB475K10
C 223		CKSYB475K10
C 224		CKSYB475K10
C 225		CKSYB475K10
C 226		CCSRCH100D50
C 227		CCSRCH100D50
C 228		CKSRYB104K16
C 229		CCSRCH100D50
C 230		CCSRCH100D50
C 231		CCSRCH100D50
C 232		CCSRCH100D50
C 233		CKSRYB104K16
C 234		CKSRYB104K16
C 235		CKSRYB104K16
C 236		CEVLW100M16
C 237		CKSRYB224K10
C 238		CKSRYB105K10
C 239		CKSRYB105K10
C 240		CEVLW100M16
C 241		CKSRYB105K10
C 242		CKSRYB105K10
C 243		CKSRYB105K10
C 244		CKSRYB105K10
C 245	10µF	CCG1182
C 246		CEVLW101M10
C 247		CKSRYB105K10
C 248		CKSRYB105K10
C 249		CKSYB475K10
C 250		CEVLW330M25
C 251		CKSQYB225K10
C 252		CKSQYB225K10
C 253		CKSQYB225K10
C 254		CKSQYB225K10
C 255		CKSQYB225K10
C 256		CKSQYB225K10
C 257		CEVLW100M16
C 259		CKSRYB105K10

Circuit Symbol and No.		Part No.
C 260		CEVLW330M25
C 261	10µF	CCG1182
C 262	10µF	CCG1182
C 263	10µF	CCG1182
C 264	10µF	CCG1182
C 265	10µF	CCG1182
C 266	10µF	CCG1182
C 267		CKSYB684K16
C 268		CEVLW330M25
C 269	10µF	CCG1138
C 270	1000µF/16V	CCH1428
C 272	10µF	CCG1182
C 273		CKSYB475K16
C 274		CKSYB475K16
C 275		CKSRYB222K50
C 276		CKSRYB222K50
C 277		CKSRYB222K50
C 278		CKSRYB222K50
C 279		CKSRYB222K50
C 280		CKSRYB222K50
C 281		CKSRYB473K50
C 282	10µF	CCG1182
C 285		CKSRYB104K16
C 303		CEVW101M16
C 304		CKSYB475K10
C 305		CKSYB475K16
C 306		CKSYB475K16
C 307		CCSRCH220J50
C 308		CCSRCH220J50
C 309		CEVLW100M16
C 310		CEVLW100M16
C 311		CKSRYB102K50
C 312		CKSRYB105K10
C 313		CEVLW470M16
C 403		CKSRYB105K6R3
C 405		CKSRYB105K6R3
C 407		CKSRYB104K16
C 408		CKSRYB105K6R3
C 409		CKSRYB105K6R3
C 411		CKSRYB104K16
C 412		CKSRYB104K16
C 414		CKSRYB104K16
C 416		CKSYB106K6R3
C 417		CKSYB106K6R3
C 418		CKSYB475K16
C 419		CEVLW100M16
C 420		CKSYB475K16
C 422		CEVLW100M16
C 424		CKSRYB104K16
C 426		CKSRYB104K16
C 428		CCSRCH6R0D50
C 430		CKSYB106K6R3
C 433		CKSYB106K6R3
C 434		CKSRYB104K16
C 435		CCSRCH6R0D50
C 436		CKSYB106K6R3
C 437		CKSRYB105K6R3
C 438		CKSRYB104K16
C 439		CKSRYB105K6R3
C 440		CKSRYB105K6R3

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
C 441		CEVLW221M4	C 808		CKSRYB103K50
C 442		CEVLW221M4	C 809		CKSRYB104K16
C 443		CEVLW221M4	C 811		CCSRCH470J50
C 444		CKSRYB104K16	C 817		CCSRCH471J50
C 447		CKSRYB102K50	C 818		CCSRCH390J50
C 449		CKSRYB104K16	C 819		CKSRYB222K50
C 450		CKSQYB225K10	C 821		CKSRYB472K50
C 451		CKSYB106K6R3	C 822	2200µF/16V	CCH1405
C 452		CKSRYB104K16	C 823		CCSRCH181J50
C 453		CKSRYB105K6R3	C 824		CCSRCH681J50
C 454		CKSRYB102K50	C 825		CKSRYB103K50
C 455		CKSRYB104K16	C 826		CKSRYB182K50
C 456		CKSYB106K6R3	C 827		CKSRYB103K50
C 458		CCSRCH6R0D50	C 829		CKSRYB104K16
C 459		CKSYB106K6R3	C 830		CCSRCH100D50
C 460		CKSRYB105K6R3	C 831		CCSRCH470J50
C 462		CCSRCH6R0D50	C 832		CCSRCH102J50
C 464	47µF	CCG1181	C 833		CCSRCH102J50
C 465	47µF	CCG1181	C 835		CKSSYB104K10
C 466		CEVLW101M10	C 836		CKSRYB104K16
C 467		CKSRYB105K6R3	C 837		CKSSYB104K10
C 468		CKSYB106K6R3	C 838		CKSQYB105K16
C 469		CEVLW100M16	C 839		CKSQYB105K16
C 470		CKSRYB104K16	C 840		CSZS4R7M16
C 471		CKSRYB104K16	C 841		CSZS4R7M16
C 486		CKSRYB102K50	C 842		CKSRYB104K16
C 487		CKSRYB104K16	C 843		CKSRYB104K16
C 490		CEVLW101M10	C 844		CKSRYB102K50
C 551		CKSRYB105K6R3	C 845	10µF	CCG1138
C 555		CEVLW101M10	C 846		CEHAZL471M16
C 604		CKSRYB103K50	C 847	10µF	CCG1183
C 605		CKSRYB103K50	C 848	10µF	CCG1183
C 606		CEVLW2R2M50	C 849	47µF	CCG1181
C 607		CKSRYB105K6R3	C 850	10µF	CCG1138
C 608		CKSRYB105K6R3	C 851	47µF	CCG1181
C 609		CKSRYB104K16	C 853		CKSRYB105K10
C 610		CCSRCH101J50	C 854		CKSRYB105K10
C 612		CCSRCH7R0D50	C 855	2200µF/16V	CCH1405
C 613		CCSRCH7R0D50	C 856		CKSRYB105K10
C 614		CKSRYB105K6R3	C 858		CKSYB225K16
C 615		CKSRYB104K25	C 861		CKSRYB474K10
C 616		CKSRYB104K25	C 862		CEVLW470M16
C 617		CKSRYB104K25	C 863		CKSRYB104K16
C 619		CCSRCH100D50	C 864		CCSRCH102J50
C 620		CCSRCH100D50	C 865		CEVLW470M16
C 621		CCSRCH680J50	C 866		CKSRYB103K50
C 701		CKSRYB105K10	C 867		CKSRYB103K50
C 702		CKSRYB104K16	C 868		CEVLW100M16
C 703		CKSRYB104K16	C 869	10µF	CCG1182
C 704		CKSRYB103K50	C 870		CEVLW101M10
C 705		CKSQYB104K16	C 871		CKSRYB104K16
C 706		CKSRYB104K16	C 872		CKSRYB103K50
C 708		CKSRYB104K16	C 873	0.1µF	CCL1059
C 801	0.22µF	CCL1058	C 874		CKSRYB103K50
C 802		CKSYB106K6R3	C 875		CKSRYB103K50
C 803		CKSRYB103K50	C 876		CEVW101M16
C 804		CCSRCH102J50	C 877		CEVW101M16
C 805		CCSRCH102J50	C 878		CKSRYB104K16
C 806		CKSRYB103K50	C 881		CKSRYB103K50
C 807		CCSRCH102J50	C 882		CKSRYB103K50

Circuit Symbol and No.		Part No.
C 883		CKSRYB103K50
C 884		CEVLW100M16
C 885		CKSRYB103K50
C 886	1000µF/16V	CCH1428
C 887	10µF	CCG1138
C 890		CCSRCH151J50
C 891		CCSRCH151J50
C 892		CCSRCH151J50
C 893		CKSRYB105K6R3
C 894		CKSRYB103K50
C 895		CKSRYB105K6R3
C 901		CKSRYB104K16
C 902	100µF/16V	CCH1228
C 903	100µF/16V	CCH1228
C 904	1000µF/16V	CCH1428
C 1401		CKSRYB102K50
C 1402		CKSRYB102K50
C 1403		CKSRYB102K50
C 1404		CKSRYB102K50
C 1405		CKSRYB104K16
C 1406		CKSRYB104K16
C 1407		CSZSC101M10
C 1408		CKSRYB104K16
C 1409		CKSRYB104K16
C 1410		CKSRYB104K16
C 1411		CKSRYB104K16
C 1412		CKSRYB104K16
C 1413		CKSRYB104K16
C 1414		CSZSC101M10
C 1415		CKSRYB104K16
C 1416		CKSRYB105K6R3
C 1417		CKSRYB104K16
C 1418		CKSRYB104K16
C 1419		CKSRYB104K16
C 1420		CKSRYB104K16
C 1421		CKSRYB104K16
C 1422		CKSRYB103K50
C 1424		CKSRYB104K16
C 1425		CSZSC101M10
C 1426		CKSRYB103K50
C 1427		CKSRYB104K16
C 1428		CKSRYB104K16
C 1429		CKSRYB104K16
C 1430		CKSRYB104K16
C 1431		CKSRYB104K16
C 1432		CKSRYB104K16
C 1433		CKSRYB105K6R3
C 1434		CKSRYB104K16
C 1436		CSZSC101M10
C 1437		CKSRYB105K6R3
C 1438		CKSRYB105K6R3
C 1439		CKSRYB105K6R3
C 1440		CKSRYB105K6R3
C 1441		CKSRYB105K6R3
C 1442		CSZSC101M10
C 1443		CKSRYB104K16
C 1446		CKSRYB105K6R3
C 1447		CKSRYB105K6R3
C 1448		CKSRYB105K6R3
C 1449		CKSRYB105K6R3

Circuit Symbol and No.		Part No.
C 1450		CKSRYB105K6R3
C 1451		CKSRYB105K6R3
C 1452		CKSRYB105K6R3
C 1453		CCSRCH221J50
C 1454		CCSRCH220J50
C 1455		CCSRCH471J50
C 1456		CKSRYB105K6R3
C 1457		CKSRYB105K6R3
C 1459		CCSRCH471J50
C 1460		CKSRYB105K6R3
C 1463		CKSRYB105K6R3
C 1464		CKSRYB105K6R3
C 1467		CKSYB475K10
C 1468		CKSRYB104K16
C 1469		CKSRYB104K16
C 1470		CKSRYB105K6R3
C 1471		CKSYB475K10
C 1472		CKSRYB104K16
C 1473		CKSYB475K10
C 1474		CKSRYB105K6R3
C 1475		CKSRYB105K6R3
C 1477		CKSRYB105K6R3
C 1478		CKSRYB105K6R3
C 1479		CKSRYB105K6R3
C 1480		CKSRYB105K6R3
C 1481		CKSYB106K6R3
C 1482		CKSYB106K6R3
C 1483		CKSYB106K6R3
C 1484		CKSYB106K6R3
C 1485		CKSYB106K6R3
C 1486		CKSYB106K6R3

C

Unit Number:CWX2883
Unit Name:DVD Core Unit(MS-3V1)

MISCELLANEOUS

IC 1001	IC	S-L2980A50MC-C7J
IC 1002	IC	R1130H501B
IC 1003	IC	LTC3411EMS
IC 1051	IC	PE5401A
IC 1201	IC	AN8471SAT1
IC 1231	IC	TC7SZ125FU
IC 1251	IC	BA5985FM
IC 1501	IC	MN35104UB
IC 1570	IC	K4S283232E-TC75
IC 1601	IC	PD6480B
IC 1602	IC	TC7SH86FU
IC 1651	IC	M5M5V216ATP-70HI
IC 1652	IC	TC7SZ126FU
IC 1671	IC	TC74LCX16373AFT
IC 1672	IC	TC7SZ08FU
IC 1801	IC	SM8707LV
IC 1802	IC	TC7WH157FU
IC 1851	IC	PCM1742KE
IC 1852	IC	NJM2140R
IC 1853	IC	NJM2100V
Q 1002	Transistor	DTC114EU
Q 1101	Transistor	2SB1260

Circuit Symbol and No.		Part No.
Q 1102	Transistor	2SB1260
Q 1103	Transistor	DTC114EU
Q 1104	Transistor	2SA1576A
Q 1105	Transistor	2SC4081
Q 1106	Transistor	2SC4081
Q 1107	Transistor	2SC4081
Q 1551	Transistor	2SA1576
D 1001	Diode	1SR154-400
D 1101	Diode	1SS355
D 1102	Diode	1SS355
D 1241	Chip LED	CL205IRXTU
L 1001	Inductor	CTF1623
L 1002	Inductor	CTF1624
L 1003	Inductor	CTF1558
L 1004	Inductor	CTF1558
L 1051	Inductor	CTF1473
L 1101	Inductor	CTF1305
L 1501	Inductor	CTF1378
L 1502	Inductor	CTF1487
L 1503	Inductor	CTF1488
L 1554	Inductor	CTF1473
L 1555	Inductor	CTF1473
L 1556	Inductor	CTF1400
L 1557	Inductor	CTF1395
L 1558	Inductor	CTF1473
L 1561	Inductor	CTF1473
L 1601	Inductor	CTF1464
L 1651	Inductor	CTF1464
L 1671	Inductor	CTF1473
L 1801	Inductor	CTF1558
L 1802	Inductor	CTF1558
L 1803	Inductor	CTF1464
L 1804	Inductor	CTF1468
L 1851	Inductor	CTF1464
L 1852	Inductor	CTF1473
L 1901	Inductor	CTF1487
L 1902	Inductor	CTF1558
L 1903	Inductor	CTF1558
L 1904	Inductor	CTF1468
L 1905	Inductor	CTF1468
X 1051	Resonator 4.91MHz	CSS1668
X 1801	Resonator 27.0000MHz	CSS1661
VR1551	Semi-fixed 10kΩ(B)	CCP1448
EF1801		DTL1106
EF1802		DTL1106
EF1803		DTL1106
EF1901		DTL1106
EF1902		DTL1106
EF1903		DTL1106
EF1904		DTL1106
EF1905		DTF1106

RESISTORS

Circuit Symbol and No.	Part No.
R 1001	RS1/10S0R0J
R 1003	RS1/16SS1003D
R 1004	RS1/10S0R0J
R 1005	RS1/16SS1501D
R 1006	RS1/16SS8202D
R 1007	RS1/16SS1502D
R 1008	RS1/16SS101J
R 1010	RS1/16SS105J
R 1011	RS1/16SS105J
R 1013	RS1/16SS103J
R 1014	RS1/16SS1203D
R 1015	RS1/16SS2402D
R 1016	RS1/16SS0R0J
R 1017	RS1/16SS0R0J
R 1018	RS1/16SS105J
R 1021	RS1/16SS122J
R 1051	RS1/16SS104J
R 1052	RS1/16SS104J
R 1053	RS1/16SS104J
R 1054	RS1/16SS104J
R 1055	RS1/16SS222J
R 1057	RS1/16SS104J
R 1058	RS1/16SS0R0J
R 1059	RS1/16SS104J
R 1060	RS1/16SS104J
R 1061	RS1/16SS221J
R 1062	RS1/16SS104J
R 1063	RS1/16SS104J
R 1064	RS1/16SS104J
R 1065	RS1/16SS104J
R 1066	RS1/16SS104J
R 1067	RS1/16SS104J
R 1068	RS1/16SS221J
R 1069	RS1/16SS221J
R 1070	RS1/16SS221J
R 1071	RS1/16SS221J
R 1072	RS1/16SS104J
R 1073	RS1/16SS104J
R 1074	RS1/16SS104J
R 1075	RS1/16SS472J
R 1076	RS1/16SS104J
R 1080	RS1/16SS0R0J
R 1081	RS1/16SS221J
R 1082	RS1/16SS473J
R 1083	RS1/16S153J
R 1084	RS1/16SS104J
R 1085	RS1/16S823J
R 1087	RS1/16S104J
R 1088	RS1/16SS104J
R 1089	RS1/16SS104J
R 1090	RAB4CQ104J
R 1101	RS1/16S6R8J
R 1102	RS1/16SS3R9J
R 1103	RS1/16SS3R9J
R 1104	RS1/16SS3R9J
R 1105	RS1/16SS3R9J
R 1106	RS1/16S6R8J
R 1107	RS1/16SS3R9J
R 1108	RS1/16SS3R9J
R 1109	RS1/16SS3R9J
R 1110	RS1/16SS3R9J
R 1111	RS1/16SS272J
R 1112	RS1/16SS472J
R 1113	RS1/16SS102J
R 1114	RS1/16SS221J
R 1115	RS1/16SS221J

Circuit Symbol and No.	Part No.
R 1116	RS1/16SS331J
R 1117	RS1/16SS221J
R 1118	RS1/16SS0R0J
R 1119	RS1/16SS0R0J
R 1120	RS1/16SS0R0J
R 1121	RS1/16SS0R0J
R 1128	RS1/16S0R0J
R 1129	RS1/16S0R0J
R 1130	RS1/16S0R0J
R 1131	RS1/16S0R0J
R 1201	RS1/16SS181J
R 1202	RS1/16SS181J
R 1203	RS1/16SS513J
R 1204	RS1/16SS221J
R 1206	RS1/16SS513J
R 1207	RS1/16S0R0J
R 1208	RS1/16S0R0J
R 1211	RS1/16SS1R0J
R 1212	RS1/16SS1R0J
R 1213	RS1/16SS1R0J
R 1214	RS1/16SS1R0J
R 1215	RS1/16SS1R0J
R 1216	RS1/16SS1R0J
R 1231	RS1/16SS822J
R 1232	RS1/16SS822J
R 1233	RS1/16SS822J
R 1234	RS1/16SS822J
R 1235	RS1/16SS563J
R 1236	RS1/16SS243J
R 1237	RS1/16SS683J
R 1238	RS1/16SS243J
R 1240	RS1/16S471J
R 1241	RS1/16S391J
R 1246	RS1/16SS104J
R 1248	RS1/16SS0R0J
R 1251	RS1/16SS221J
R 1252	RS1/16SS221J
R 1253	RS1/16SS393J
R 1254	RS1/16SS223J
R 1256	RS1/16SS102J
R 1257	RS1/16SS0R0J
R 1258	RS1/16SS393J
R 1259	RS1/16SS393J
R 1260	RS1/16SS393J
R 1261	RS1/16SS393J
R 1262	RS1/16SS221J
R 1263	RS1/16S0R0J
R 1269	RS1/16SS102J
R 1270	RS1/16SS102J
R 1501	RS1/16SS0R0J
R 1502	RS1/16SS0R0J
R 1503	RAB4CQ101J
R 1504	RS1/16SS0R0J
R 1505	RS1/16SS0R0J
R 1506	RAB4CQ101J
R 1507	RS1/16SS0R0J
R 1508	RAB4CQ101J
R 1509	RS1/16SS0R0J
R 1511	RAB4CQ101J
R 1512	RS1/16SS0R0J

Circuit Symbol and No.		Part No.
R 1513		RS1/16SS473J
R 1514		RS1/16SS104J
R 1515		RS1/16SS222J
R 1518		RS1/16SS104J
R 1519		RS1/16SS104J
R 1522		RS1/16SS103J
R 1523		RS1/16SS104J
R 1525		RS1/16SS102J
R 1530		RS1/16SS104J
R 1531		RS1/16S221J
R 1532		RS1/16SS104J
R 1536		RS1/16SS104J
R 1537		RS1/16SS104J
R 1540		RS1/16SS221J
R 1541		RS1/16SS473J
R 1543		RS1/16SS104J
R 1544		RS1/16SS102J
R 1545		RS1/16SS102J
R 1546		RS1/16SS104J
R 1547		RS1/16SS330J
R 1548		RS1/16SS104J
R 1551	Inductor	CTF1387
R 1552		RS1/16S101J
R 1555		RS1/16S101J
R 1556		RS1/16S101J
R 1558		RS1/16SS750J
R 1561		RS1/16SS153J
R 1562		RS1/16SS471J
R 1563		RS1/16SS471J
R 1565		RS1/16S68R0D
R 1566		RS1/16S4R7J
R 1567		RS1/16SS273J
R 1568		RS1/16SS183J
R 1569		RS1/16SS153J
R 1571		RAB4CQ101J
R 1572		RAB4CQ101J
R 1573		RAB4CQ101J
R 1574		RAB4CQ101J
R 1575		RS1/16SS560J
R 1576		RS1/16SS560J
R 1577		RAB4CQ560J
R 1578		RAB4CQ560J
R 1579		RS1/16SS220J
R 1580		RAB4CQ560J
R 1581		RS1/16SS560J
R 1582		RS1/16SS560J
R 1583		RS1/16SS560J
R 1584		RAB4CQ560J
R 1585		RS1/16SS560J
R 1586		RS1/16SS560J
R 1587		RAB4CQ101J
R 1588		RAB4CQ101J
R 1589		RAB4CQ101J
R 1590		RAB4CQ101J
R 1593		RS1/16SS104J
R 1594		RS1/16S0R0J
R 1599		RS1/16S221J
R 1604		RS1/16SS0R0J
R 1608		RS1/16SS104J
R 1613		RS1/16SS0R0J

Circuit Symbol and No.	Part No.
R 1652	RS1/16SS104J
R 1653	RS1/16SS510J
R 1671	RAB4CQ101J
R 1672	RAB4CQ101J
R 1673	RAB4CQ101J
R 1674	RAB4CQ101J
R 1675	RS1/16SS331J
R 1701	RS1/16SS103J
R 1702	RS1/16SS103J
R 1703	RS1/16SS0R0J
R 1704	RS1/16SS105J
R 1705	RN1/16SE1002D
R 1706	RS1/16SS222J
R 1708	RS1/16SS223J
R 1709	RS1/16S1502D
R 1710	RS1/16SS102J
R 1711	RS1/16SS683J
R 1712	RS1/16SS103J
R 1713	RS1/16SS103J
R 1714	RS1/16SS0R0J
R 1715	RS1/16SS0R0J
R 1716	RS1/16SS0R0J
R 1717	RS1/16SS0R0J
R 1718	RS1/16SS103J
R 1719	RS1/16SS103J
R 1720	RS1/16SS103J
R 1721	RS1/16SS103J
R 1723	RN1/16SE3901D
R 1724	RS1/16SS0R0J
R 1729	RAB4CQ220J
R 1730	RAB4CQ220J
R 1801	RS1/16S0R0J
R 1802	RS1/16S151J
R 1803	RS1/16S151J
R 1804	RS1/16S221J
R 1805	RS1/16S271J
R 1806	RS1/16SS104J
R 1807	RS1/16S560J
R 1809	RS1/16SS0R0J
R 1821	RS1/16SS222J
R 1823	RS1/16SS101J
R 1851	RS1/16SS0R0J
R 1856	RS1/16SS102J
R 1857	RS1/16SS102J
R 1858	RS1/16SS222J
R 1859	RS1/16SS222J
R 1860	RS1/16SS472J
R 1861	RS1/16SS472J
R 1862	RS1/16SS472J
R 1863	RS1/16SS472J
R 1864	RS1/16SS103J
R 1865	RS1/16SS103J
R 1866	RS1/16SS472J
R 1867	RS1/16SS472J
R 1868	RS1/16SS821J
R 1869	RS1/16SS821J
R 1870	RS1/16SS104J
R 1871	RS1/16SS104J
R 1872	RS1/16SS0R0J
R 1873	RS1/16SS0R0J

Circuit Symbol and No.	Part No.
R 1874	RS1/16SS0R0J
R 1876	RS1/16SS0R0J
R 1877	RS1/16SS0R0J
R 1885	RS1/16SS0R0J
R 1897	RS1/16SS0R0J
R 1899	RS1/16SS0R0J
R 1901	RS1/16SS221J
R 1903	RS1/16SS221J
R 1908	RS1/16SS102J
R 1913	RS1/16S0R0J
R 1922	RS1/16SS0R0J
R 1923	RS1/16SS221J
R 1925	RS1/16S0R0J
R 1927	RS1/16SS0R0J
R 1928	RS1/16SS221J
R 1954	RS1/16SS221J
R 1955	RS1/16SS221J
R 1961	RS1/16S0R0J

CAPACITORS

C 1001		CKSRYB474K16
C 1002		CKSRYB104K25
C 1003		CKSRYB104K25
C 1004		CKSRYB104K25
C 1005		CKSRYB105K10
C 1006		CKSRYB104K25
C 1007	22µF	CCG1178
C 1008	22µF	CCG1178
C 1009		CCSSCH220J50
C 1010		CKSSYB102K16
C 1012	22µF	CCG1178
C 1013	22µF	CCG1178
C 1016		CKSRYB104K25
C 1051		CKSYB106K6R3
C 1052		CKSSYB104K10
C 1053		CKSSYB104K10
C 1054		CKSSYB103K16
C 1055		CKSSYB103K16
C 1058		CKSSYB471K50
C 1059		CKSSYB104K10
C 1060		CKSRYB105K10
C 1101		CSZSR220M16
C 1102		CSZSR101M6R3
C 1103		CKSSYB104K10
C 1104		CKSSYB103K16
C 1105		CSZSR101M6R3
C 1106		CKSSYB104K10
C 1107		CKSSYB103K16
C 1108		CKSRYB104K25
C 1109		CKSSYB473K10
C 1110		CKSSYB473K10
C 1111		CKSSYB103K16
C 1112		CKSRYB105K10
C 1113		CKSRYB105K10
C 1114		CKSSYB103K16
C 1115		CSZSR220M16
C 1201		CEV101M16
C 1202		CKSRYB104K25
C 1203		CSZSR220M16
C 1204		CKSRYB104K25

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
C 1205	CKSRYB104K25	C 1576	CKSSYB104K10
C 1206	CKSRYB104K25	C 1577	CKSSYB104K10
C 1207	CSZSR220M16	C 1578	CKSSYB104K10
C 1231	CKSRYB104K25	C 1579	CKSSYB104K10
C 1232	CKSSYB104K10	C 1580	CKSSYB104K10
C 1251	CKSRYB104K25	C 1581	CKSSYB104K10
C 1254	CKSRYB103K50	C 1582	CKSSYB104K10
C 1255	CKSRYB103K50	C 1583	CSZSR470M10
C 1256	CEV101M16	C 1601	CSZSR470M10
C 1257	CKSRYB104K25	C 1603	CKSSYB104K10
C 1258	CCSSCH470J50	C 1651	CSZSR470M10
C 1259	CCSSCH5R0C50	C 1653	CKSSYB104K10
C 1501	CSZSR470M10	C 1654	CKSRYB104K25
C 1502	CSZSR101M6R3	C 1655	CKSSYB104K10
C 1503	CSZSR101M6R3	C 1671	CKSSYB104K10
C 1504	CKSSYB104K10	C 1672	CKSSYB104K10
C 1505	CKSSYB104K10	C 1673	CKSSYB104K10
C 1506	CKSSYB104K10	C 1674	CKSSYB104K10
C 1507	CKSSYB104K10	C 1675	CKSRYB104K25
C 1508	CKSSYB104K10	C 1676	CKSYB106K6R3
C 1509	CKSSYB104K10	C 1701	CKSRYB104K25
C 1510	CKSSYB104K10	C 1702	CKSRYB104K25
C 1511	CKSSYB104K10	C 1703	CKSSYB104K10
C 1512	CKSSYB104K10	C 1704	CKSSYB103K16
C 1513	CKSSYB104K10	C 1705	CKSSYB103K16
C 1514	CKSSYB104K10	C 1706	CKSSYB104K10
C 1515	CKSSYB104K10	C 1707	CKSSYB104K10
C 1516	CKSSYB104K10	C 1708	CKSSYB103K16
C 1517	CKSSYB104K10	C 1709	CCSRCH221J50
C 1518	CKSSYB104K10	C 1710	CKSSYB152K50
C 1519	CKSSYB104K10	C 1711	CKSRYB105K10
C 1520	CKSSYB104K10	C 1712	CKSRYB105K10
C 1521	CKSSYB104K10	C 1713	CKSRYB105K10
C 1522	CKSSYB104K10	C 1715	CKSSYB104K10
C 1523	CKSSYB104K10	C 1716	CKSSYB104K10
C 1524	CKSSYB104K10	C 1717	CKSSYB104K10
C 1525	CKSSYB104K10	C 1718	CKSSYB104K10
C 1526	CKSSYB104K10	C 1719	CKSSYB562K25
C 1527	CKSSYB104K10	C 1720	CCSSCH101J50
C 1528	CKSSYB104K10	C 1721	CCSSCH470J50
C 1529	CKSSYB104K10	C 1722	CKSSYB103K16
C 1530	CKSSYB104K10	C 1723	CKSSYB104K10
C 1531	CKSSYB471K50	C 1724	CKSSYB104K10
C 1532	CKSSYB103K16	C 1725	CKSSYB104K10
C 1533	CKSSYB103K16	C 1726	CCSSCH330J50
C 1552	CKSSYB104K10	C 1727	CKSSYB333K16
C 1553	CKSRYB104K25	C 1728	CKSSYB104K10
C 1554	CKSSYB104K10	C 1733	CKSSYB103K16
C 1555	CKSRYB105K10	C 1801	CKSSYB104K10
C 1556	CSZSR470M10	C 1802	CKSSYB104K10
C 1557	CKSSYB104K10	C 1804	CKSSYB104K10
C 1558	CSZS4R7M16	C 1805	CCSSCH100D50
C 1559	CKSRYB105K10	C 1809	CCSSCJ3R0C50
C 1561	CKSSYB102K50	C 1810	CCSSCK2R0C50
C 1570	CSZSR470M10	C 1811	CKSSYB104K10
C 1571	CKSSYB104K10	C 1851	CKSSYB104K10
C 1572	CKSSYB104K10	C 1852	CKSSYB104K10
C 1573	CKSSYB104K10	C 1853	CKSYB106K6R3
C 1574	CKSSYB104K10	C 1854	CKSYB106K6R3
C 1575	CKSSYB104K10	C 1855	CKSRYB104K25

Circuit Symbol and No.		Part No.
C 1856		CKSRYB104K25
C 1857		CCSRCH471J50
C 1858		CCSRCH471J50
C 1859		CCSRCH471J50
C 1860		CCSRCH471J50
C 1861		CKSQYB225K10
C 1862		CKSSYB471K50
C 1863		CKSSYB471K50
C 1864		CKSYB475K10
C 1865		CKSYB475K10
C 1870		CKSSYB104K10
C 1903		CKSRYB102K50

D

Unit Number:CWX3024
Unit Name:Compound Unit(A)

Q 1299	Photo-taransistor	CPT231SCTD
S 1201	Spring Switch(12cm)	CSN1069
S 1202	Spring Switch(8cm)	CSN1069
S 1203	Spring Switch(DISC SENS)	CSN1069
S 1204	Spring Switch(DISC SENS)	CSN1070
S 1205	Spring Switch(8cm)	CSN1070
R 1298		RS1/16S0R0J
R 1299		RS1/16S0R0J

E

Unit Number:CWX2753
Unit Name:Compound Unit(B)

S 1206	Switch(CLAMP)	CSN1051

G

Unit Number:CWM9203(UC,RC,RD model)
Unit Number:CWM9202(EW model)
Unit Name:Tuner Unit

MISCELLANEOUS

IC 1402	IC	BA00ASFP
Q 1401	Transistor(EW model)	IMH2A
Q 1402	Transistor(EW model)	IMH2A
Q 1403	Transistor	2SC4081
Q 1404	Transistor	2SD2375
D 1401	Diode	UDZ6R8(B)
D 1402	Diode	UDZS3R9(B)
ZNR1401	Surge Protector	RCCA-201Q31UA-PI
L 1401	Inductor	LCTA4R7J2520
L 1404	Inductor	CTF1295
L 1406	Inductor	LCTA1R0J2520
L 1407	Inductor	LCTA1R0J3225
L 1408	Inductor	LCTA680J4532
FU1401	Fuse 5A	CEK1289
FU1402	Fuse 5A	CEK1289

RESISTORS

Circuit Symbol and No.		Part No.
R 1401	(EW model)	RAB4C223J
R 1402		RAB4C471J
R 1403		RAB4C471J
R 1404		RS1/16S0R0J
R 1405		RS1/16S103J
R 1406		RS1/16S103J
R 1407		RS1/16S103J
R 1412		RS1/16S1001D
R 1413		RS1/16S2201D
R 1414		RS1/16S1202D
R 1415		RS1/16S102J
R 1416		RS1/16S102J
R 1417		RS1/16S101J
R 1418		RS1/16S820J
R 1419		RS1/16S820J

CAPACITORS

C 1403	100µF/6.3V	CCH1496
C 1404		CKSYB475K10
C 1405		CKSRYB103K50
C 1406	56µF/10V	CCH1497
C 1408		CKSRYB103K50
C 1414		CCSRCH221J50
C 1415		CCSRCH221J50
C 1416		CCSRCH221J50
C 1417		CCSRCH221J50
C 1418		CCSRCH221J50
C 1419		CKSRYB104K16
C 1421		CKSRYB474K10
C 1422		CKSRYB474K10
C 1425		CEVW220M10
C 1426		CEVW101M16
C 1427		CEVW100M10
C 1428		CEVW101M10
C 1429		CKSYB474K16

Monitor Unit
Consists of
Inverter PCB
Monitor PCB
Upper PCB
Sense PCB

H I J K

Unit Number:CWM9148(UC model)
Unit Number:CWM9147(EW model)
Unit Number:CWM9149(RC,RD model)
Unit Name:Monitor Unit

MISCELLANEOUS

IC 4001	IC	TC90A64AF-P
IC 4061	L-MOS(NOR)	TC7SZ02FU
IC 4063	IC	TC7SZ32FU
IC 4064	IC	TC7SZ08FU
IC 4065	IC	TC7SZ08FU
IC 4141	IC(UC,EW model)	TC7SH08FU
IC 4142	IC(UC,EW model)	TK15404AMI
IC 4151	IC	NJM2138V

Circuit Symbol and No.		Part No.
IC 4181	IC	NJM082BV
IC 4311	IC	NJM062V
IC 4451	IC	TC7SET08FU
IC 4691	IC	S-93C46BR0I-J8T1
IC 4701	IC(UC model)	PD6340A
IC 4701	IC(EW,RC,RD model)	PD6347A
IC 4731	IC	TC7SET08FU
IC 4732	IC	TC7SH08FU
IC 4841	IC	R1130H251B
IC 4851	IC	LT1376CS8
IC 4861	IC	MAX1748EUE
IC 5001	IC	TA78L05F
IC 5002	IC	TC7SET08FU
IC 5003	IC	OZ961IS
IC 5004	FET	SI6544DQ
IC 5005	FET	SI6544DQ
Q 4002	Transistor	2SC4617
Q 4061	Transistor	2SC4617
Q 4062	Transistor	2SC4617
Q 4063	Transistor	2SC4617
Q 4101	Transistor	2SC4617
Q 4102	Transistor	2SA1774
Q 4103	Transistor	2SC4617
Q 4111	Transistor(UC,EW model)	2SC4617
Q 4112	Transistor(UC,EW model)	2SA1774
Q 4113	Transistor(UC,EW model)	2SC4617
Q 4121	Transistor(UC,EW model)	2SC4617
Q 4122	Transistor(UC,EW model)	2SA1774
Q 4123	Transistor(UC,EW model)	2SC4617
Q 4131	Transistor(UC,EW model)	2SC4617
Q 4132	Transistor(UC,EW model)	2SA1774
Q 4133	Transistor(UC,EW model)	2SC4617
Q 4151	Transistor	UMZ1N
Q 4152	Transistor	UMZ1N
Q 4153	Transistor	UMZ1N
Q 4154	Transistor	UMZ1N
Q 4155	Transistor	UMZ1N
Q 4156	Transistor	UMZ1N
Q 4182	Transistor	UMX2N
Q 4183	Transistor	UMT2N
Q 4831	Transistor	2SB1260
Q 4832	Transistor	DTC114EK
Q 4835	Transistor	2SD1664
Q 5001	Transistor	2SC4617
Q 5002	Transistor	2SC4617
Q 5003	Transistor	2SA1774
D 4061	Diode	UDZS5R6(B)
D 4062	Diode	UDZS5R6(B)
D 4063	Diode	UDZS5R6(B)
D 4311		AM-30-21
D 4321	LED	NSSW440-9159
D 4322	LED	NSSW440-9159
D 4331	LED(EW model)	CL-195SR-CD
D 4332	LED(EW model)	CL-195SR-CD
D 4333	LED(EW model)	CL-195SR-CD
D 4334	LED(EW model)	CL-195SR-CD
D 4335	LED(EW model)	CL-195SR-CD
D 4336	LED(EW model)	CL-195SR-CD
D 4337	LED(EW model)	CL-195SR-CD
D 4338	LED(EW model)	CL-195SR-CD

Circuit Symbol and No.		Part No.
D 4351	LED	CL-195PG-CD
D 4352	LED	CL-195PG-CD
D 4353	LED	CL-195PG-CD
D 4354	LED	CL-195PG-CD
D 4355	LED	CL-195PG-CD
D 4356	LED	CL-195PG-CD
D 4357	LED	CL-195PG-CD
D 4358	LED	CL-195PG-CD
D 4401	Diode	UDZS5R6(B)
D 4402	Diode	UDZS5R6(B)
D 4403	Diode	UDZS5R6(B)
D 4404	Diode	UDZS5R6(B)
D 4481	Diode	UDZS3R9(B)
D 4482	Diode	UDZS3R9(B)
D 4701	Diode	HZU5R6(B2)
D 4702	Diode	HZU5R6(B2)
D 4703	Diode	HZU5R6(B2)
D 4704	Diode	HZU5R6(B2)
D 4705	Diode	HZU5R6(B2)
D 4706	Diode	HZU5R6(B2)
D 4835	Diode	HZU5R6(B2)
D 4851	Diode	RB500V-40
D 4852	Diode	U2FWJ44N
D 4861	Diode	RB160M-30
D 4862	Diode	RB500V-40
D 4863	Diode	RB500V-40
D 4864	Diode	RB500V-40
D 4865	Diode	RB500V-40
D 4866	Diode	RB500V-40
D 4867	Diode	RB500V-40
D 4868	Diode	RB500V-40
D 4869	Diode	RB500V-40
D 5001	Diode	UDZS6R2(B)
D 5002	Diode	1SS355
D 5003	LED	CL-195PG-CD
D 5004	LED(EW model)	CL-195SR-CD
D 5005	LED	CL-195PG-CD
D 5006	LED(EW model)	CL-195SR-CD
D 5007	LED	CL-195PG-CD
D 5008	LED(EW model)	CL-195SR-CD
D 5009	Diode	RB751V40
D 5010	Diode	HZU6R2(B3)
D 5011	Diode	HZU6R2(B3)
D 5012	Diode	HZU6R2(B3)
D 5013	Diode	MA143
D 5014	Diode	MA143
L 4001	Inductor	CTF1306
L 4002	Inductor	CTF1306
L 4003	Inductor	CTF1306
L 4004	Inductor	CTF1306
L 4005	Inductor	CTF1306
L 4006	Inductor-Array	CTF1421
L 4007	Ferrite Bead	CTF1528
L 4008	Inductor	CTF1306
L 4011	Inductor	CTF1306
L 4012	Ferrite Bead	CTF1528
L 4013	Ferrite Bead	CTF1528
L 4014	Ferrite Bead	CTF1528
L 4015	Inductor	CTF1306
L 4016	Ferrite Bead	CTF1528

Circuit Symbol and No.		Part No.
L 4061	Inductor	LCKAW101J2520
L 4071	Inductor	LCKBW100K2520
L 4074	Inductor	LCKBW100K2520
L 4075	Inductor	LCKBW100K2520
L 4078	Inductor	LCKBW100K2520
L 4079	Inductor	CTF1306
L 4092	Inductor	CTF1306
L 4094	Inductor	CTF1306
L 4101	Inductor	LCKBW100K2520
L 4141	Inductor	LCKBW100K2520
L 4151	Inductor	LCKBW100K2520
L 4152	Inductor	LCKBW100K2520
L 4181	Inductor	LCKAW101J2520
L 4182	Inductor	LCKAW101J2520
L 4311	Inductor	LCKBW100K2520
L 4451	Inductor	CTF1306
L 4691	Inductor	CTF1306
L 4701	Inductor	LCKBW100K2520
L 4732	Inductor	CTF1306
L 4801	Inductor	LCKBW100K2520
L 4802	Inductor	LCKBW100K2520
L 4803	Inductor	LCKBW100K2520
L 4804	Inductor	LCKBW100K2520
L 4841	Choke Coil 10µH	CTH1249
L 4851	Choke Coil 10µH	CTH1259
L 4852	Choke Coil 18µH	CTH1250
L 4861	Choke Coil 10µH	CTH1249
L 4862	Choke Coil 6.8µH	CTH1248
L 4863	Inductor	LCKBW100K2520
L 4864	Inductor	LCKBW100K2520
L 4865	Inductor	LCKBW100K2520
T 5001	Transformer	CTT1103
X 4001	Crystal Resonator 42MHz	CSS1541
X 4701	Ceramic Resonator 4.97MHz	CSS1573
S 4351	Push Switch	CSG1111
S 4352	Push Switch	CSG1111
S 4353	Push Switch	CSG1111
S 4354	Push Switch	CSG1111
S 5001	Push Switch	CSG1111
S 5002	Push Switch	CSG1111
S 5003	Push Switch	CSG1111
VR5001	Semi-fixed 15kΩ(B)	CCP1397
FU4831	Fuse 630mA	CEK1252

RESISTORS

R 3		RS1/16S0R0J
R 8		RS1/16S0R0J
R 9		RS1/16S0R0J
R 4001		RS1/16S101J
R 4002		RS1/16S470J
R 4003		RS1/16S101J
R 4004		RS1/16S101J
R 4005		RS1/16S473J
R 4006		RS1/16S392J
R 4009		RS1/16S152J
R 4010		RS1/16S331J
R 4012		RS1/16SS105J
R 4013		RS1/16S391J
R 4015		RS1/16S473J
R 4018		RS1/16S101J
R 4022		RS1/16S0R0J
R 4024		RS1/16S333J
R 4025		RS1/16S101J
R 4026	(UC,EW model)	RS1/16S101J
R 4027		RS1/16S101J
R 4030		RS1/16S101J
R 4061		RS1/16S473J
R 4062		RS1/16S473J
R 4065		RS1/16S1002D
R 4066		RS1/16S1002D
R 4067		RS1/16S1002D
R 4068		RS1/16S5602F
R 4069		RS1/16S5602F
R 4070		RS1/16S5602F
R 4071		RS1/16S5602F
R 4072		RS1/16S5602F
R 4073		RS1/16S5602F
R 4074		RS1/16S102J
R 4075		RS1/16S102J
R 4076		RS1/16S102J
R 4077		RS1/16S0R0J
R 4078		RS1/16S0R0J
R 4079		RS1/16S0R0J
R 4080		RS1/16S0R0J
R 4083		RS1/16SS470J
R 4084		RS1/16S470J
R 4085		RS1/16SS471J
R 4086		RS1/16SS101J
R 4093		RS1/16S471J
R 4095		RS1/16S471J
R 4096		RS1/16SS222J
R 4097		RS1/16SS152J
R 4101		RS1/16S1502F
R 4102		RS1/16S1003F
R 4103		RS1/16S681J
R 4104		RS1/16S331J
R 4107		RS1/16S1002F
R 4108		RS1/16S331J
R 4109		RS1/16S391J
R 4110		RS1/16S391J
R 4111	(UC,EW model)	RS1/16S153J
R 4112	(UC,EW model)	RS1/16S104J
R 4113	(UC,EW model)	RS1/16S681J
R 4114	(UC,EW model)	RS1/16S331J
R 4118	(UC,EW model)	RS1/16S331J
R 4119	(UC,EW model)	RS1/16S391J
R 4120		RS1/16S391J
R 4121	(UC,EW model)	RS1/16S153J
R 4122	(UC,EW model)	RS1/16S104J
R 4123	(UC,EW model)	RS1/16S681J
R 4124	(UC,EW model)	RS1/16S331J
R 4128	(UC,EW model)	RS1/16S331J
R 4129	(UC,EW model)	RS1/16S391J
R 4130		RS1/16S391J
R 4131	(UC,EW model)	RS1/16S153J
R 4132	(UC,EW model)	RS1/16S104J
R 4133	(UC,EW model)	RS1/16S681J
R 4134	(UC,EW model)	RS1/16S331J
R 4138	(UC,EW model)	RS1/16S331J

Circuit Symbol and No.		Part No.
R 4139	(UC,EW model)	RS1/16S391J
R 4140		RS1/16S391J
R 4141	(UC,EW model)	RS1/16S105J
R 4142	(UC,EW model)	RS1/16S224J
R 4145	(UC,EW model)	RS1/16S1501F
R 4146	(UC,EW model)	RS1/16S5602F
R 4147	(UC,EW model)	RS1/16S3302F
R 4148	(UC,EW model)	RS1/16S1002F
R 4150		RS1/16S183J
R 4152		RS1/16S3901F
R 4153		RS1/16S1501F
R 4154		RS1/16S102J
R 4155		RS1/16S102J
R 4156		RS1/16S1501F
R 4157		RS1/16S3901F
R 4160		RS1/16S1002F
R 4161		RS1/16S1802F
R 4162		RS1/16S102J
R 4163		RS1/16S3901F
R 4164		RS1/16S1501F
R 4165		RS1/16S102J
R 4166		RS1/16S272J
R 4167		RS1/16S102J
R 4168		RS1/16S272J
R 4169		RS1/16S102J
R 4170		RS1/16S272J
R 4171		RS1/16S331J
R 4172		RS1/16S103J
R 4174		RS1/16S331J
R 4175		RS1/16S103J
R 4177		RS1/16S331J
R 4178		RS1/16S103J
R 4180		RS1/16S243J
R 4181		RS1/16S3002F
R 4182		RS1/16S223J
R 4183		RS1/16S1203F
R 4184		RS1/16S1602F
R 4185		RS1/16S1502F
R 4186		RS1/16S1002F
R 4187		RS1/16S1002F
R 4188		RS1/16SS101J
R 4189		RS1/16S153J
R 4190		RS1/16S100J
R 4191		RS1/16S153J
R 4192		RS1/16SS100J
R 4193		RS1/16S0R0J
R 4194		RS1/16S0R0J
R 4208		RS1/16SS101J
R 4209		RS1/16SS101J
R 4311		RS1/16S395J
R 4312		RS1/16S105J
R 4313		RS1/16SS393J
R 4314		RS1/16SS103J
R 4315		RS1/16SS203J
R 4316		RS1/16SS393J
R 4321		RS1/16SS121J
R 4322		RS1/16SS181J
R 4323		RS1/16SS121J
R 4324		RS1/16SS181J
R 4331	(EW model)	RS1/16SS151J

Circuit Symbol and No.		Part No.
R 4332	(EW model)	RS1/16SS151J
R 4333	(EW model)	RS1/16SS181J
R 4334	(EW model)	RS1/16SS181J
R 4335	(EW model)	RS1/16SS151J
R 4336	(EW model)	RS1/16SS151J
R 4337	(EW model)	RS1/16SS181J
R 4338	(EW model)	RS1/16SS181J
R 4339	(EW model)	RS1/16SS151J
R 4340	(EW model)	RS1/16SS151J
R 4341	(EW model)	RS1/16SS181J
R 4342	(EW model)	RS1/16SS181J
R 4343	(EW model)	RS1/16SS151J
R 4344	(EW model)	RS1/16SS151J
R 4345	(EW model)	RS1/16SS181J
R 4346	(EW model)	RS1/16SS181J
R 4351		RS1/16SS151J
R 4352		RS1/16SS151J
R 4353		RS1/16SS121J
R 4354		RS1/16SS121J
R 4355		RS1/16SS151J
R 4356		RS1/16SS151J
R 4357		RS1/16SS121J
R 4358		RS1/16SS121J
R 4359		RS1/16SS151J
R 4360		RS1/16SS151J
R 4361		RS1/16SS181J
R 4362		RS1/16SS181J
R 4363		RS1/16SS151J
R 4364		RS1/16SS151J
R 4365		RS1/16SS181J
R 4366		RS1/16SS181J
R 4451		RS1/16S101J
R 4452		RS1/16SS101J
R 4453		RS1/16SS101J
R 4454		RS1/16SS101J
R 4455		RS1/16S101J
R 4456		RS1/16SS103J
R 4483		RS1/16SS0R0J
R 4484		RS1/16SS0R0J
R 4485		RS1/16SS0R0J
R 4487		RS1/16SS0R0J
R 4488		RS1/16SS0R0J
R 4489		RS1/16SS0R0J
R 4490		RS1/16SS0R0J
R 4491		RS1/16SS0R0J
R 4492		RS1/16SS0R0J
R 4493		RS1/16SS0R0J
R 4495		RS1/16SS0R0J
R 4496		RS1/16SS471J
R 4497		RS1/16SS101J
R 4498		RS1/16S0R0J
R 4507		RS1/16SS0R0J
R 4692		RS1/16SS103J
R 4698		RS1/16SS102J
R 4699		RAB4CQ102J
R 4701		RS1/16SS101J
R 4702		RS1/16SS101J
R 4703		RS1/16SS101J
R 4704		RS1/16SS101J
R 4705		RS1/16SS471J

Circuit Symbol and No.		Part No.
R 4706		RS1/16SS471J
R 4707		RS1/16SS0R0J
R 4709		RS1/16SS102J
R 4710		RS1/16SS472J
R 4731		RS1/16S0R0J
R 4802		RS1/16S0R0J
R 4803		RS1/16S333J
R 4804		RS1/16S0R0J
R 4805		RS1/16S0R0J
R 4806		RS1/16S0R0J
R 4831		RS1/16S153J
R 4832		RS1/16S472J
R 4833		RS1/16S472J
R 4835		RS1/16S121J
R 4851		RS1/16S182J
R 4852		RS1/16S512J
R 4861		RS1/16S104J
R 4862		RS1/16S102J
R 4863		RS1/16S1102F
R 4864		RS1/16S2001F
R 4865		RS1/16S3302F
R 4866		RS1/16S2401F
R 4867		RS1/16S5602F
R 4868		RS1/16S2703F
R 4869		RS1/16S5602F
R 5001	(EW model)	RAB4CQ181J
R 5002		RAB4CQ151J
R 5003		RS1/16S473J
R 5004		RAB4CQ181J
R 5005		RS1/16S104J
R 5006		RS1/16S472J
R 5007		RS1/16S473J
R 5008		RS1/16S473J
R 5009		RS1/16S105J
R 5010		RS1/16S333J
R 5011		RS1/16S513J
R 5014		RS1/16S102J
R 5015		RS1/16S105J
R 5016		RS1/16S563J
R 5017		RS1/16S103J
R 5018		RS1/16S103J
R 5019		RS1/16S561J
R 5022		RS1/16SS181J
R 5023		RS1/16SS221J

CAPACITORS

Circuit Symbol and No.		Part No.
C 4001		CKSRYB105K6R3
C 4002		CKSSYB104K10
C 4003		CKSSYB104K10
C 4004		CKSSYB104K10
C 4005		CKSSYB104K10
C 4006		CKSSYB104K10
C 4007		CKSSYB104K10
C 4008		CKSSYB104K10
C 4009		CKSSYB104K10
C 4010		CKSSYB104K10
C 4011		CKSSYB104K10
C 4012		CKSSYB104K10
C 4013		CKSRYB392K50
C 4015		CKSRYB105K6R3
C 4016		CKSSYB104K10
C 4017		CKSSYB104K10
C 4018		CKSRYB104K16
C 4019		CKSRYB104K16
C 4020		CKSRYB104K16
C 4021		CKSSYB104K10
C 4022		CKSRYB104K16
C 4023		CKSRYB104K16
C 4024		CKSRYB104K16
C 4025		CKSSYB104K10
C 4026		CKSSYB104K10
C 4027		CKSSYB104K10
C 4028		CKSSYB104K10
C 4029		CKSSYB104K10
C 4030		CKSRYB104K16
C 4031		CKSSYB104K10
C 4032		CKSSYB104K10
C 4033		CKSSYB104K10
C 4034		CKSSYB104K10
C 4035		CKSRYB103K50
C 4036		CCSRCH4R0C50
C 4037		CKSSYB104K10
C 4040		CKSSYB104K10
C 4042		CCSRCH181J50
C 4045		CCSRCH8R0D50
C 4046		CCSRCH8R0D50
C 4047		CKSSYB104K10
C 4048		CKSSYB104K10
C 4049		CKSSYB104K10
C 4050		CKSRYB105K6R3
C 4051		CKSSYB104K10
C 4052		CKSSYB104K10
C 4053		CCSRCH101J50
C 4054		CCSRCH101J50
C 4055		CKSRYB104K16
C 4061		CKSRYB104K16
C 4062		CKSRYB104K16
C 4063		CKSRYB104K16
C 4064		CSZS100M10
C 4068		CKSQYB225K10
C 4069		CKSQYB225K10
C 4070		CKSQYB225K10
C 4071		CSZS100M10
C 4073	(UC,EW model)	CCSSCH151J50
C 4074		CKSRYB105K6R3
C 4075		CKSRYB105K6R3
C 4101		CKSYB106K6R3
C 4102		CCSRCH470J50
C 4103		CCSRCH470J50
C 4104		CKSRYB104K16
C 4105		CSZS100M10
C 4111	(UC,EW model)	CKSYB106K6R3
C 4112	(UC,EW model)	CCSRCH470J50
C 4113	(UC,EW model)	CCSRCH470J50
C 4114	(UC,EW model)	CKSRYB104K16
C 4121	(UC,EW model)	CKSYB106K6R3
C 4122	(UC,EW model)	CCSRCH470J50
C 4123	(UC,EW model)	CCSRCH470J50
C 4124	(UC,EW model)	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 4131	(UC,EW model)	CKSYB106K6R3
C 4132	(UC,EW model)	CCSRCH470J50
C 4133	(UC,EW model)	CCSRCH470J50
C 4134	(UC,EW model)	CKSRYB104K16
C 4140	(UC,EW model)	CKSQYB225K10
C 4141	(UC,EW model)	CKSRYB105K6R3
C 4142	(UC,EW model)	CKSRYB104K16
C 4143	(UC,EW model)	CSZS100M10
C 4144	(UC,EW model)	CKSRYB104K16
C 4145	(UC,EW model)	CKSRYB104K16
C 4151		CSZSR220M16
C 4152		CKSRYB103K50
C 4153		CCSRCH4R0C50
C 4154		CCSRCH4R0C50
C 4155		CCSRCH4R0C50
C 4156		CKSRYB104K16
C 4160		CKSRYB104K16
C 4161		CKSRYB104K16
C 4162		CKSRYB104K16
C 4163		CKSQYB225K10
C 4164		CKSQYB225K10
C 4165		CKSQYB225K10
C 4166		CKSRYB104K16
C 4167		CKSRYB104K16
C 4168		CKSRYB104K16
C 4169		CKSRYB103K50
C 4170		CSZSR220M16
C 4171		CSZSR220M16
C 4181		CSZSR220M16
C 4182		CKSRYB104K16
C 4183		CSZSR4R7M16
C 4184		CKSRYB104K16
C 4186		CKSRYB104K16
C 4188		CKSRYB104K16
C 4311		CKSRYB224K10
C 4312		CKSRYB104K16
C 4313		CKSRYB104K16
C 4314		CKSRYB104K16
C 4315		CKSRYB104K16
C 4321		CKSRYB104K16
C 4322		CKSRYB104K16
C 4401		CKSSYB102K50
C 4402		CKSSYB102K50
C 4403		CKSSYB102K50
C 4404		CKSSYB102K50
C 4451	10µF	CCG1138
C 4452	10µF	CCG1138
C 4454		CKSRYB104K16
C 4691		CKSRYB104K16
C 4701		CSZSR330M10
C 4702		CKSRYB104K16
C 4731		CKSRYB104K16
C 4732		CKSRYB104K16
C 4801		CSZSR4R7M16
C 4802		CKSRYB104K16
C 4803		CSZS100M10
C 4804		CKSRYB104K16
C 4805		CSZSR330M10
C 4806		CKSRYB104K16
C 4807		CSZSR33M25

Circuit Symbol and No.		Part No.
C 4808		CKSRYB104K25
C 4809		CKSSYB104K10
C 4810		CKSSYB104K10
C 4831		CKSSYB104K10
C 4832		CKSRYB104K25
C 4835		CKSRYB104K16
C 4836		CKSRYB104K16
C 4841		CKSRYB105K6R3
C 4843		CSZS100M10
C 4844		CKSRYB104K16
C 4851		CKSRYB104K16
C 4852	68µF/6.3V	CCH1440
C 4853		CKSRYB104K16
C 4854		CKSRYB104K16
C 4855	10µF	CCG1138
C 4856		CKSRYB332K50
C 4858	10µF	CCG1138
C 4859		CKSRYB104K16
C 4860		CKSYB106K6R3
C 4861		CKSYB106K6R3
C 4862		CCSRCH100D50
C 4863		CKSRYB683K16
C 4864		CKSRYB104K16
C 4865		CKSRYB471K50
C 4866		CKSRYB224K16
C 4867		CKSRYB104K16
C 4868		CKSRYB104K16
C 4869		CKSRYB104K16
C 4870		CKSRYB224K16
C 4871		CKSRYB224K16
C 4872		CKSRYB104K16
C 4873		CKSQYB105K16
C 4874		CKSQYB474K25
C 4875		CKSRYB104K16
C 4876		CKSQYB474K25
C 4877		CKSQYB105K16
C 4878		CKSRYB104K16
C 4879	22µF/12V	CCH1359
C 4881		CKSRYB104K25
C 4882		CKSRYB104K16
C 4883		CKSRYB104K16
C 4884		CKSRYB104K16
C 4885	68µF/6.3V	CCH1440
C 4886		CKSRYB104K16
C 4887		CKSRYB104K16
C 5001		CKSRYB104K16
C 5002		CKSRYB105K6R3
C 5005		CKSRYB105K6R3
C 5006		CKSRYB104K16
C 5007		CKSRYB105K6R3
C 5008		CKSQYB335K6R3
C 5011		CKSRYB332K50
C 5012		CKSRYB105K6R3
C 5013		CKSRYB152K50
C 5014		CKSRYB104K16
C 5015		CKSRYB473K50
C 5016		CKSRYB103K50
C 5017		CFHSQ221J50
C 5018		CKSRYB473K50
C 5019	10µF	CCG1138

Circuit Symbol and No.		Part No.
C 5020	10µF	CCG1138
C 5021		CKSQYB105K16
C 5022		CKSQYB105K16
C 5023	22pF	CCG1140
C 5024		CKSRYB223K50

Keyboard Unit
Consists of
Grille PCB
Panel PCB

L M

Unit Number:CWM8766

(UC,RC,RD model)

Unit Number:CWM8765(EW model)

Unit Name:Keyboard Unit

MISCELLANEOUS

IC 5501	HIC	RS-140
D 5501	Diode(EW model)	DAN202U
D 5502	LED	CL190UBX
D 5503	LED	CL190UBX
D 5504	LED	CL-195PG-CD
D 5505	LED	CL-195PG-CD
D 5506	LED(EW model)	CL-195SR-CD
D 5507	LED(EW model)	CL-195SR-CD
D 5508	LED(EW model)	CL-195SR-CD
D 5509	LED	CL-195PG-CD
D 5510	LED	CL-195PG-CD
D 5512	LED(EW model)	CL-195SR-CD
D 5513	LED	CL-195PG-CD
D 5514	LED(EW model)	CL-195SR-CD
D 5515	LED	CL-195PG-CD
D 5516	LED	CL-195PG-CD
D 5517	LED(EW model)	CL-195SR-CD
D 5518	LED	CL-195PG-CD
D 5519	LED(EW model)	CL-195SR-CD
D 5520	LED(EW model)	CL-195SR-CD
D 5521	LED	CL-195PG-CD
D 5522	LED	CL-195PG-CD
D 5523	LED(EW model)	CL-195SR-CD
D 5524	LED	CL-195PG-CD
D 5525	LED(EW model)	CL-195SR-CD
D 5526	LED	CL-195PG-CD
D 5527	Diode	UDZS6R8(B)
D 5528	LED(EW model)	CL-195SR-CD
D 5529	LED	CL-195PG-CD
D 5530	LED	CL-195PG-CD
D 5531	LED	CL-195SR-CD
D 5532	LED(EW model)	CL-195SR-CD
D 5534	LED	CL-195PG-CD
D 5535	LED(EW model)	CL-195SR-CD
D 5901	LED	SML-010VT
S 5501	Push Switch	CSG1111
S 5502	Push Switch	CSG1111
S 5503	Push Switch	CSG1111
S 5504	Push Switch	CSG1111
S 5505	Push Switch	CSG1111
S 5506	Push Switch	CSG1111
S 5507	Push Switch	CSG1111
S 5508	Push Switch	CSG1111
S 5509	Push Switch	CSG1111
S 5510	Encoder(Volume)	CSD1094
S 5511	Switch(Joystick)	CSX1047
S 5901	Push Switch	CSG1111

RESISTORS

R 5501	(UC,RC,RD model)	RS1/16S470J
R 5503		RS1/16S122J
R 5504		RS1/16S202J
R 5505		RS1/16S392J
R 5506		RS1/16S123J
R 5508		RS1/16S181J
R 5509		RS1/16S181J
R 5510		RS1/16S151J
R 5511		RS1/16S151J
R 5512	(EW model)	RS1/16S181J
R 5514		RS1/16S122J
R 5515		RS1/16S202J
R 5516		RS1/16S392J
R 5517	(EW model)	RS1/16S181J
R 5519	(EW model)	RS1/16S181J
R 5520		RS1/16S181J
R 5521		RS1/16S181J
R 5522		RS1/16S151J
R 5524		RS1/16S151J
R 5525		RS1/16S472J
R 5527	(EW model)	RS1/16S181J
R 5528	(EW model)	RS1/16S181J
R 5530		RS1/16S181J
R 5531		RS1/16S181J
R 5532		RS1/16S181J
R 5533		RS1/16S151J
R 5534		RS1/16S151J
R 5535		RS1/16S121J
R 5536		RS1/16S181J
R 5537	(EW model)	RS1/16S181J
R 5538		RS1/16S181J
R 5539	(EW model)	RS1/16S181J
R 5540		RS1/16SS474J
R 5541		RS1/16S151J
R 5542	(EW model)	RS1/16S181J
R 5543		RS1/16S151J
R 5544		RS1/16S0R0J
R 5546		RS1/16S181J
R 5547		RS1/16SS472J
R 5548		RS1/16SS562J
R 5549		RS1/16SS471J
R 5550		RS1/16SS472J
R 5551		RS1/16SS102J
R 5552		RS1/16SS472J
R 5553		RS1/16SS472J
R 5554		RS1/16SS472J
R 5555		RS1/16SS153J
R 5556		RS1/16S181J
R 5557		RS1/16SS472J
R 5558		RS1/16S221J

Circuit Symbol and No.		Part No.
R 5559		RS1/16S151J
R 5560	(EW model)	RS1/16S181J
R 5561		RS1/16S221J
R 5562		RS1/16S151J
R 5563		RS1/16S101J
R 5564	(EW model)	RS1/16S181J
R 5565		RS1/16S181J
R 5566		RS1/16S181J
R 5567	(EW model)	RS1/16S181J
R 5568		RS1/16S181J
R 5569		RS1/16S151J
R 5570		RS1/16S151J
R 5571		RS1/16S271J
R 5572		RS1/16S271J
R 5573		RS1/16S181J
R 5574	(EW model)	RS1/16S181J
R 5575		RS1/16S181J
R 5576		RS1/16S151J
R 5577		RS1/16S151J
R 5578	(EW model)	RS1/16S221J
R 5579	(EW model)	RS1/16S221J
R 5580	(EW model)	RS1/16S181J
R 5581	(EW model)	RS1/16S221J
R 5584		RS1/16SS0R0J
R 5585		RS1/16S390J
R 5904		RS1/16S151J

CAPACITORS

C 5509		CSZSQ100M6R3
C 5514		CKSRYB104K16
C 5515		CKSRYB104K16
C 5516		CKSRYB104K16

N
Unit Number:CZW3087
Unit Name:Main Unit

MISCELLANEOUS

IC 3801	IC	BA00AST
IC 3802	IC	BA6247FP
IC 3803	IC	TA78L05F
IC 3804	IC	TC7S14FU
IC 3805	Photo-interrupter	GP2L24B
Q 3801	Transistor	DTC124EU
Q 3802	Transistor	2SA1037K
Q 3803	Transistor	DTC124EU
Q 3804	Transistor	UMD2N
D 3801	Diode	UDZS5R6(B)
D 3802	Diode	1SS355
L 3801	Inductor	LCTA150J2520
L 3802	Inductor	LCTA150J2520

RESISTORS

R 3801		RS1/16S103J
R 3802		RS1/16S222J
R 3803		RS1/16S471J
R 3804		RS1/16S102J
R 3805		RS1/16S102J

Circuit Symbol and No.	Part No.
R 3806	RS1/16S102J
R 3807	RS1/16S102J
R 3808	RS1/16S103J
R 3809	RS1/16S222J
R 3810	RS1/16S222J
R 3811	RS1/16S102J
R 3812	RS1/16S102J
R 3813	RS1/16S472J
R 3814	RS1/16S102J
R 3815	RS1/16S0R0J
R 3816	RS1/16S0R0J
R 3817	RS1/16S0R0J
R 3818	RS1/16S473J
R 3819	RS1/16S0R0J
R 3821	RS1/16S473J
R 3822	RS1/16S512J
R 3823	RS1/16S0R0J

CAPACITORS

C 3801	CKSQYB105K16
C 3802	CKSQYB105K16
C 3803	CKSRYB104K16
C 3804	CKSRYB104K16
C 3805	CKSRYB104K16
C 3806	CKSRYB223K50
C 3807	CKSRYB223K50
C 3808	CEVW101M16
C 3809	CEVW101M16
C 3810	CKSRYB104K16
C 3811	CEVW100M16
C 3812	CKSRYB104K16
C 3813	CKSRYB102K50
C 3815	CKSQYB104K50
C 3819	CEVW101M16

O
Unit Number:CZW3088
Unit Name:SW Unit

S 3831	Spring Switch(ANGLE)	CSN1052
S 3832	Spring Switch(LIFT)	CSN1052

P
Unit Number:CZW3089
Unit Name:Volume Unit


VR3841	Volume(Angle sense)	CCW1025

Miscellaneous Parts List

	Pickup Unit(Service)	CXX1770
M 1	Motor Unit(LOADING)	CXB8687
M 2	Motor Unit(CARRIAGE)	CXB8688
M 3	Motor(SPINDLE)	CXM1272
M 1001	Fan Motor(REAR)	CXM1262
M 1002	Fan Motor(CENTER)	CXM1276
M 3001	Motor Unit(Position)	CXB9515
M 3002	Motor Unit(Angle)	CXB9516


6. ADJUSTMENT


6.1 JIG CONNECTION DIAGRAM

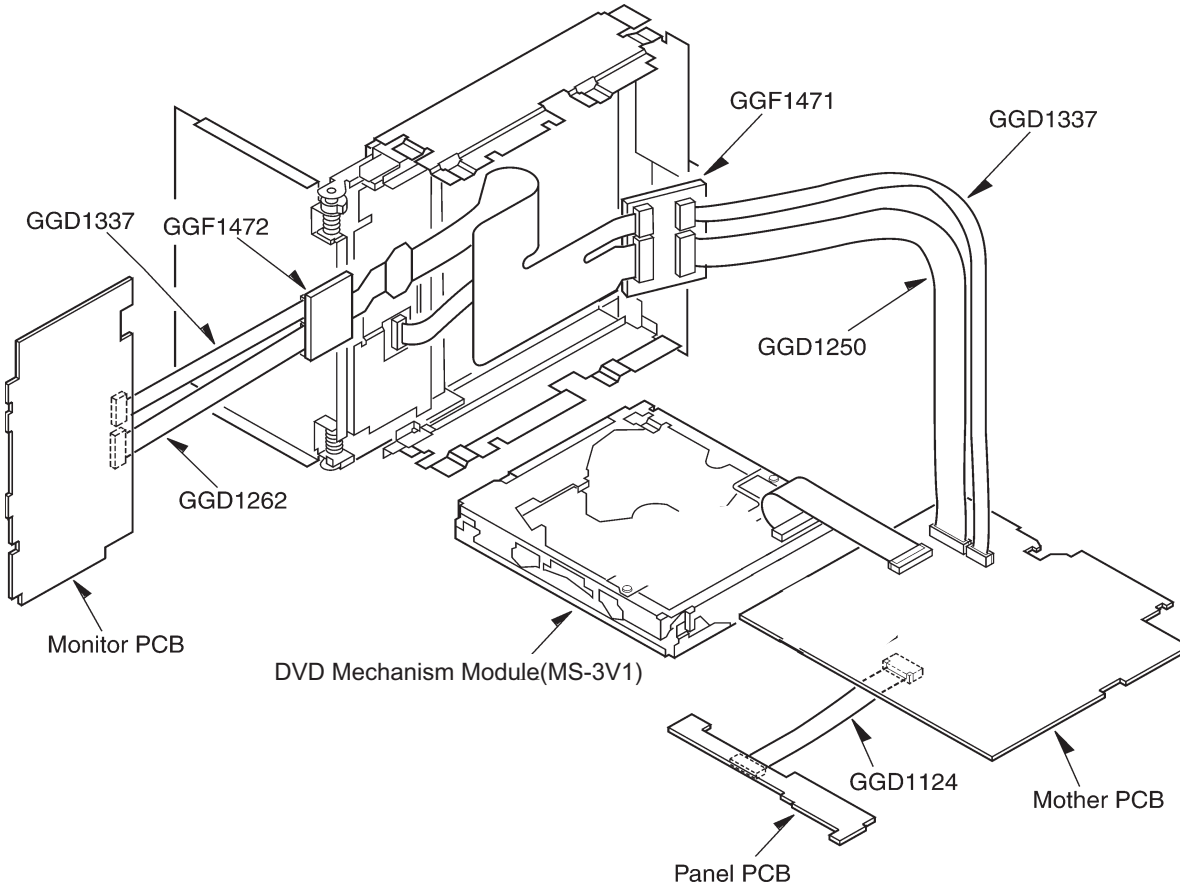


Function Name		Jig No.
Mother PCB(CN501) <-> Main Unit(CN3801)	PCB	GGF1471
Mother PCB(CN501) <-> GGF1471	50P FFC	GGD1250
Mother PCB(CN502) <-> GGF1471	24P FFC	GGD1337
Mother PCB(CN501,CN502) <-> Monitor PCB(CN4461,CN4481)	PCB	GGF1472
Monitor PCB(CN4461) <-> GGF1472	33P FFC	GGD1262
Monitor PCB(CN4481) <-> GGF1472	24P FFC	GGD1337
Mother PCB(CN601) <-> Panel PCB(CN5901)	17PFFC	GGD1124

7.1.2 PCB LOCATIONS

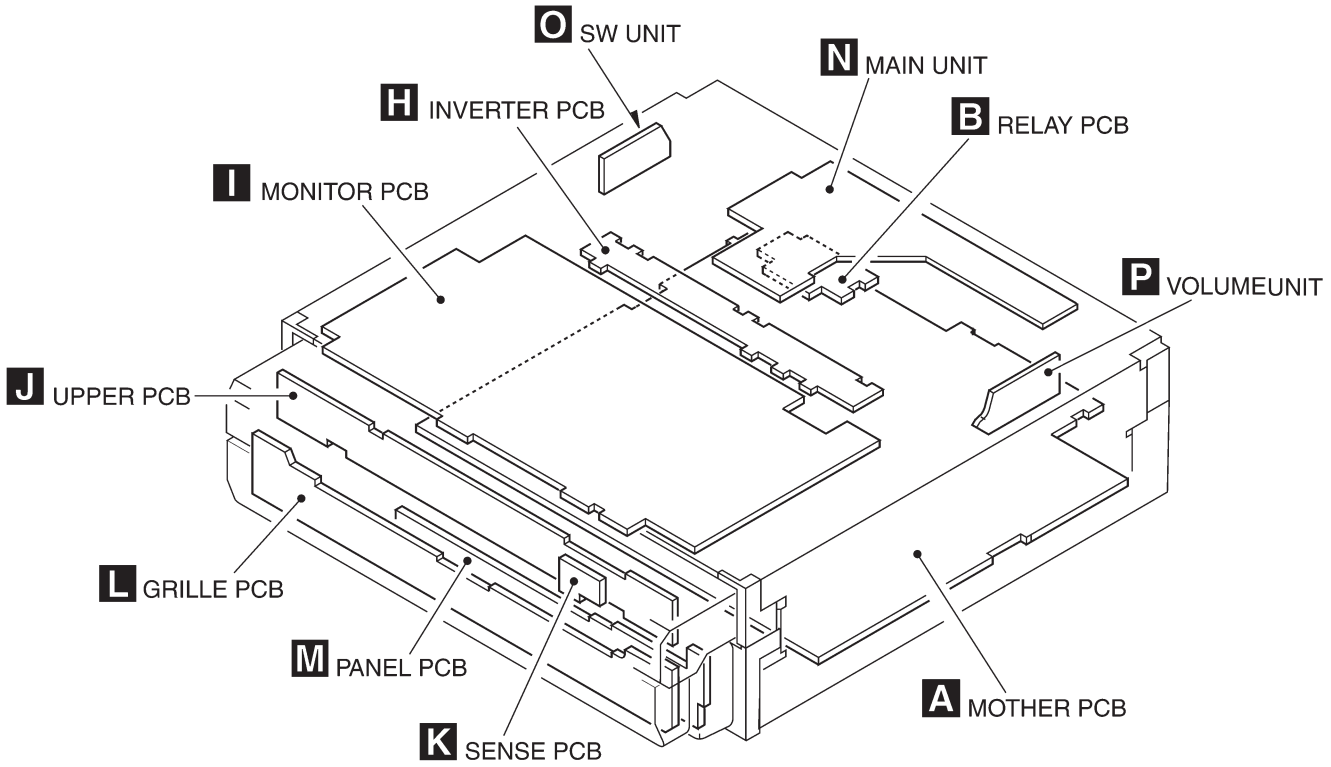


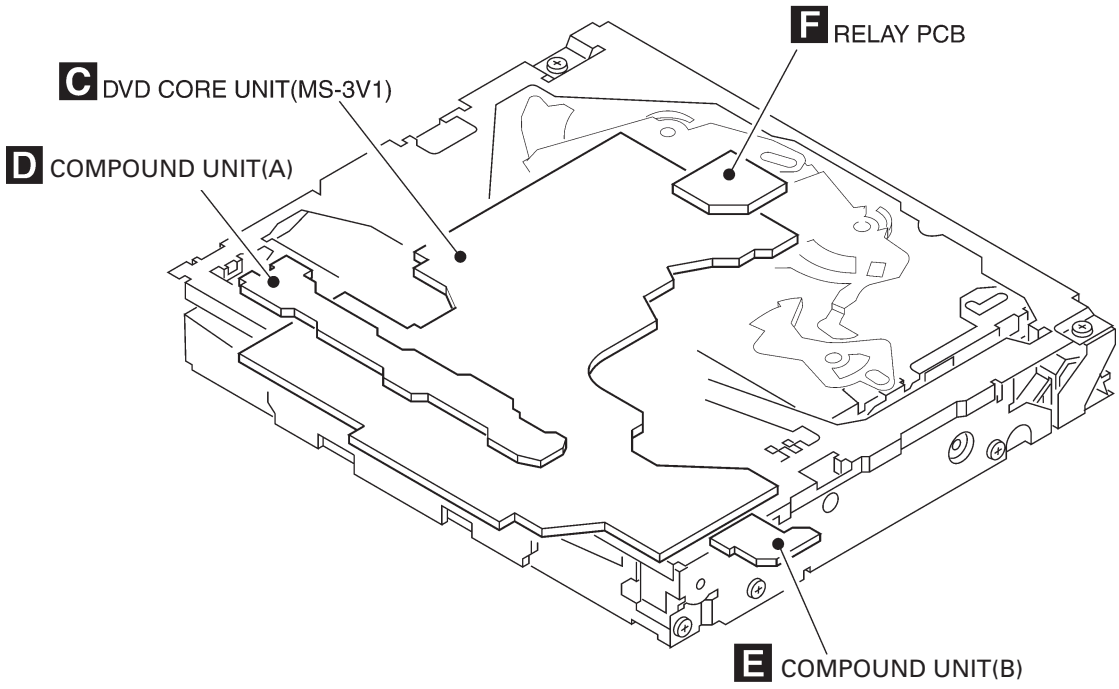

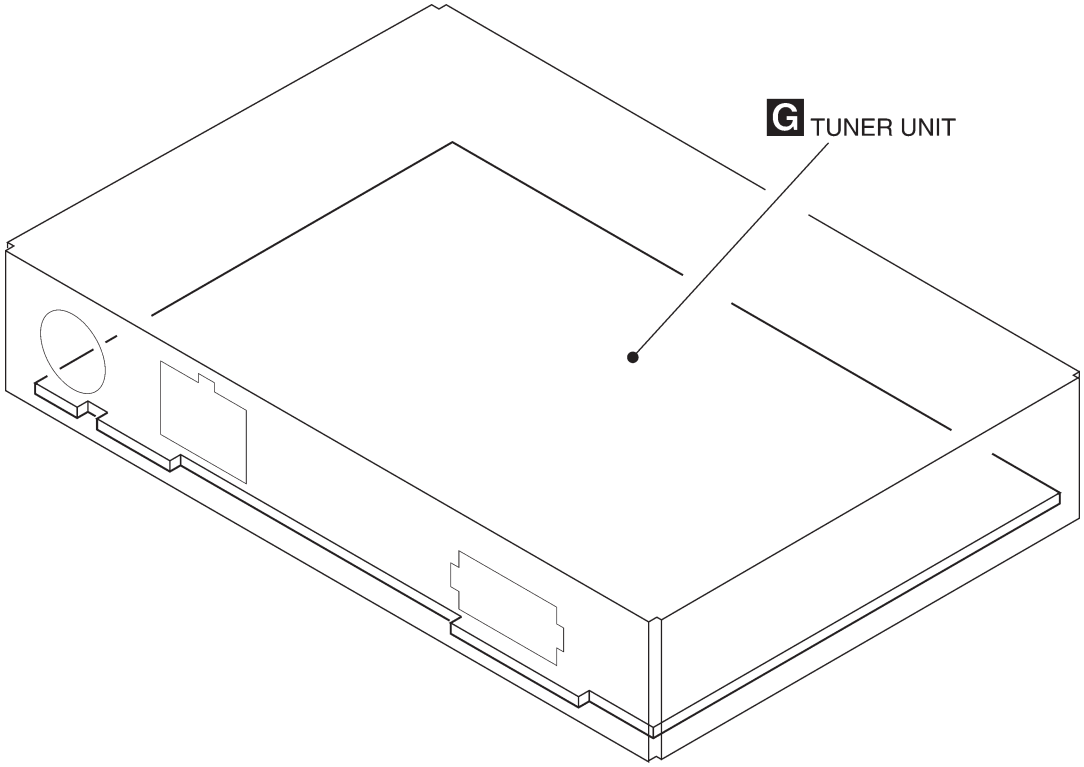
G TUNER UNIT


7.1.3 CONNECTOR FUNCTION DESCRIPTION


AVH-P6600DVD/UC
AVH-P6600DVD/EW

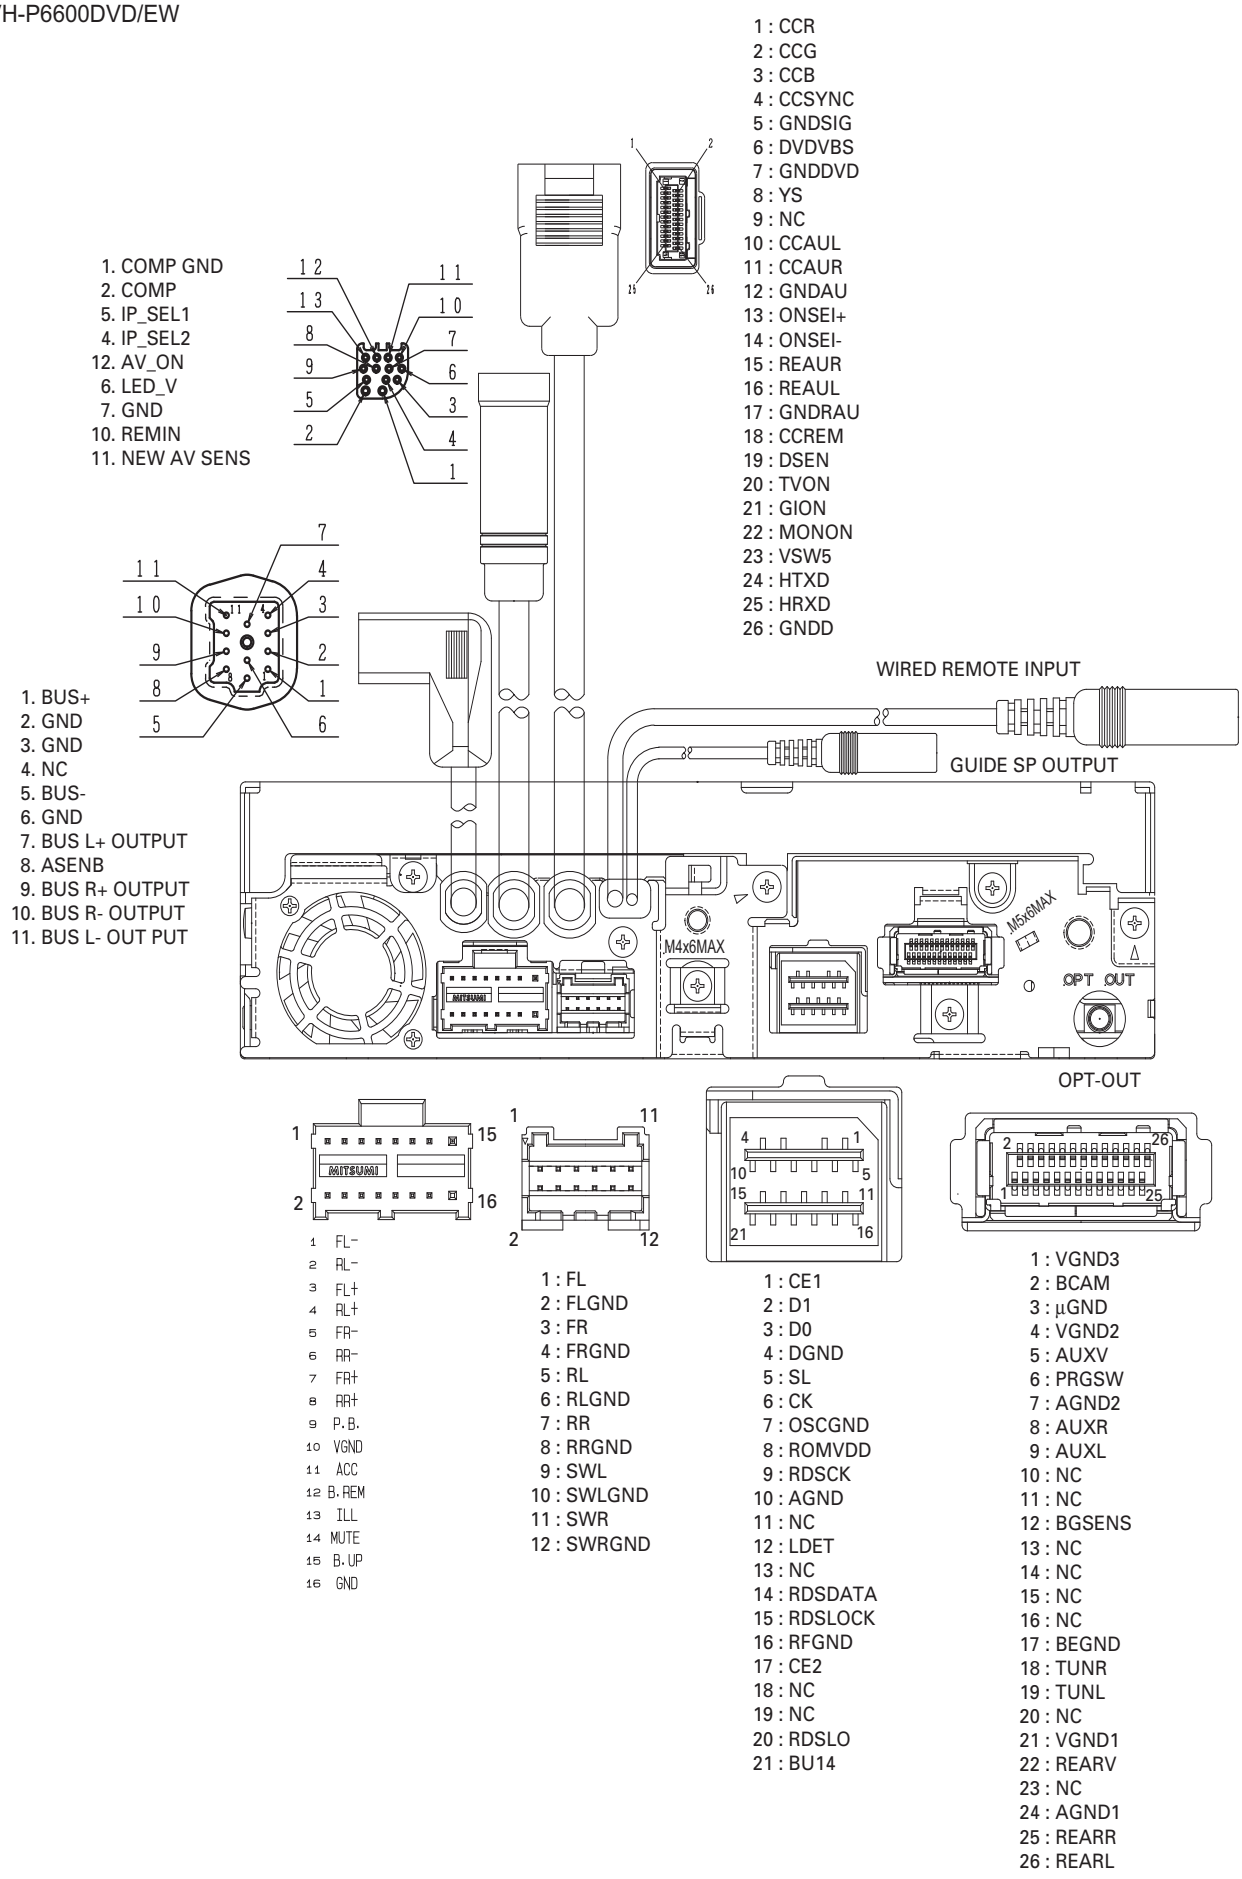

AVH-P6650DVD/RC
AVH-P6650DVD/RD


1. COMP GND
2. COMP
5. IP_SEL1
4. IP_SEL2
12. AV_ON
6. LED_V
7. GND
10. REMIN
11. NEW AV SENS

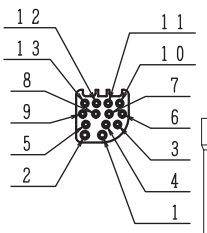

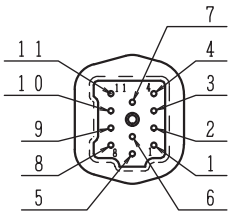


1. BUS+
2. GND
3. GND
4. NC
5. BUS-
6. GND
7. BUS L+ OUTPUT
8. ASENB
9. BUS R+ OUTPUT
10. BUS R- OUTPUT
11. BUS L- OUT PUT


WIRED REMOTE INPUT

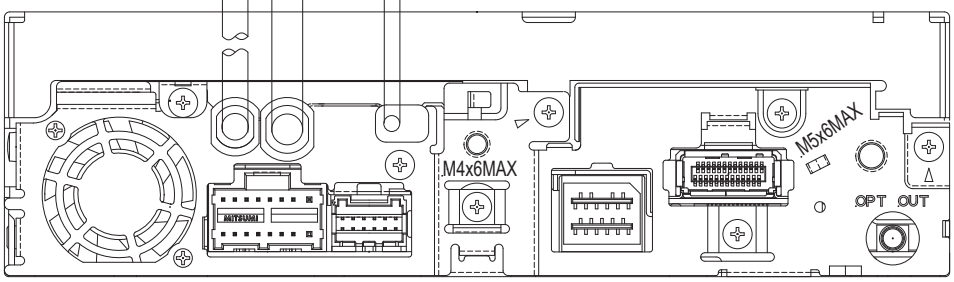


OPT-OUT

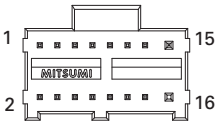


1 FL-
2 RL-
3 FL+
4 RL+
5 FR-
6 RR-
7 FR+
8 RR+
9 P.B.
10 VGND
11 ACC
12 B.REM
13 ILL
14 MUTE
15 B.UP
16 GND

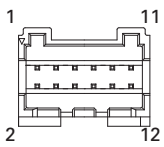

1 : FL
2 : FLGND
3 : FR
4 : FRGND
5 : RL
6 : RLGND
7 : RR
8 : RRGND
9 : SWL
10 : SWLGND
11 : SWR
12 : SWRGND

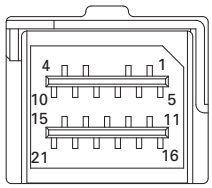

1 : CE1
2 : D1
3 : D0
4 : DGND
5 : SL
6 : CK
7 : OSCGND
8 : ROMVDD
9 : RDSCK
10 : AGND
11 : NC
12 : LDET
13 : NC
14 : RDSDATA
15 : RDSLOCK
16 : RFGND
17 : CE2
18 : NC
19 : NC
20 : RDSLO
21 : BU14

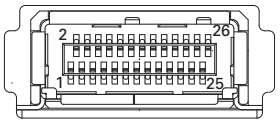

1 : VGND3
2 : BCAM
3 : μGND
4 : VGND2
5 : AUXV
6 : PRGSW
7 : AGND2
8 : AUXR
9 : AUXL
10 : NC
11 : NC
12 : BGSENS
13 : NC
14 : NC
15 : NC
16 : NC
17 : BEGND
18 : TUNR
19 : TUNL
20 : NC
21 : VGND1
22 : REARV
23 : NC
24 : AGND1
25 : REARR
26 : REARL


7.4 CLEANING

Before shipping out the product, be sure to clean the following portions by using the prescribed cleaning tools:

Portions to be cleaned	Cleaning tools
DVD pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

Portions to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

8. OPERATIONS

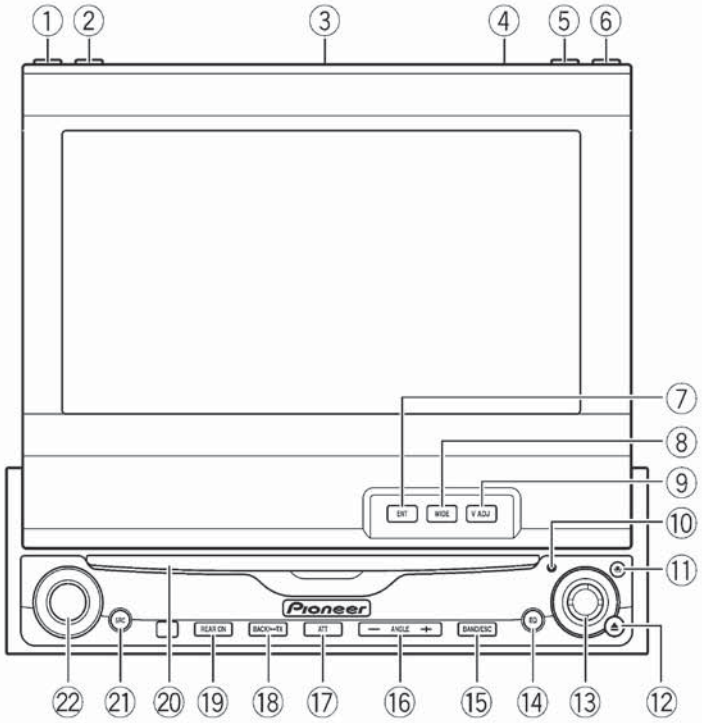

Head unit

① **DISPLAY button**
Press to select different displays.

② **PGM button**
Press to operate the preprogrammed functions for each source.

③ **Sub display**
Displays the basic information for the each source and the other settings when the LCD panel is closed.

④ **Ambient light sensor**
Senses ambient light. This system automatically adjusts the brightness of the display to compensate for ambient light.

⑤ **FLIP DOWN/CLOCK button**
Press to turn the LCD panel horizontal temporarily from upright position.

Press to turn the clock display on or off when the LCD panel is closed.

⑥ **OPEN/CLOSE button**
Press to open or close the LCD panel.

⑦ **ENTERTAINMENT button**
Press to switch between the background displays.

⑧ **WIDE button**
Press to select a desired mode for enlarging a 4:3 picture to a 16:9 one.

⑨ **V.ADJ button**
Press and hold to display the picture adjustment menu.

⑩ **RESET button**
Press to return to the factory settings (initial settings).

⑪ **DETACH button**
Press to remove the front panel from the head unit.

⑫ **EJECT button**
Press to eject a disc from this unit.

⑬ **Joystick**
Move to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

⑭ **EQ button**
Press to select various equalizer curves.

⑮ **BAND/ESC button**
Press to select among three FM bands and one AM band and to cancel the control mode of functions.

⑯ **ANGLE (+/–) button**
Press to change the LCD panel angle.

⑰ **ATT button**
Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.


⑱ **BACK/TEXT button**
Press to return to the previous display.

⑲ **REAR ON button**
Press to watch a DVD/Video CD on a rear display if **DVD** (built-in DVD player) is not selected as the source.

⑳ **Disc loading slot**
Insert a disc to play.

㉑ **SOURCE button**
This unit is turned on by selecting a source. Press to cycle through all the available sources.

㉒ **VOLUME**
Rotate it to increase or decrease the volume.

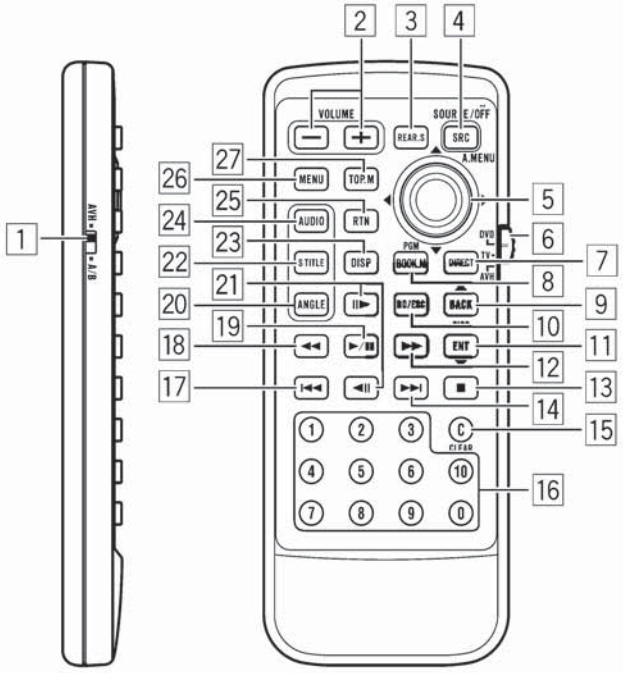

Remote control

1 Remote control selection switch
Switch to change the setting of the remote control.

2 VOLUME buttons
Press to increase or decrease the volume.

3 REAR.S button
Press to watch a DVD/Video CD on a rear display if **DVD** (built-in DVD player) is not selected as the source.

4 SOURCE button
This unit is turned on by selecting a source. Press to cycle through all the available sources.

5 Joystick
Move to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

6 Remote control operation mode switch
Switch the operation mode between **AVH**, **DVD** and **TV** modes. Normally, set to **AVH**.
- **AVH** – For common operation of this unit
- **DVD** – Only for DVD player operation
- **TV** – Only for TV tuner operation

7 DIRECT button
Press to do direct channel select when using an XM tuner.

8 BOOKMARK (BOOK.M) button
AVH mode
Press to operate the preprogrammed functions for each source.
DVD mode
Press to turn the bookmark function on or off.

9 **BACK button**
Press to return to the previous display.

10 **BAND/ESC button**
Press to select among three FM bands and one AM band and to cancel the control mode of functions.

11 **ENTERTAINMENT button**
Press to switch between the background displays.

12 **FORWARD (►►) button**
Press to perform fast forward.

13 **STOP (■) button**
Press to stop playback.

14 **NEXT (►►I) button**
Press to go to the next track (chapter).

15 **CLEAR button**
Press to cancel the input number when **0–10** are used.

16 **0–10 buttons**
Press to directly select the desired track, preset tuning or disc. Buttons **1–6** can operate the preset tuning for the tuner or disc number search for the multi-CD player.

17 **PREVIOUS (I◄◄) button**
Press to return to the previous track (chapter).

18 **REVERSE (◄◄) button**
Press to perform fast reverse.

19 **PLAY/PAUSE (►/II) button**
Press to switch sequentially between playback and pause.

20 **ANGLE button**
Press to change the viewing angle during DVD playback.

21 **STEP (II►/◄II) button**
Press to move ahead one frame at a time during DVD/VideoCD playback. Press and hold for one second to activate slow playback.

22 **SUBTITLE (S.TITLE) button**
Press to change the subtitle language during DVD playback.

23 **DISPLAY button**
Press to select different displays.

24 **AUDIO button**
Press to change the audio language during DVD playback.

25 **RETURN button**
Press to display the PBC (playback control) menu during PBC playback.

26 **MENU button**
Press to display the DVD menu during DVD playback.

27 **TOP MENU (TOP.M) button**
Press to return to the top menu during DVD playback.

Using the remote control operation mode switch


There are three remote control operation modes on the remote control.

AVH mode operation


When operating this unit by remote control, the mode is normally switched to **AVH**.

- The joystick on the remote control can perform the same operations as the one on the head unit. Furthermore, the joystick can perform the same operations as the touch panel keys ▲, ▼, ◄ and ►.

● CONNECTION DIAGRAM

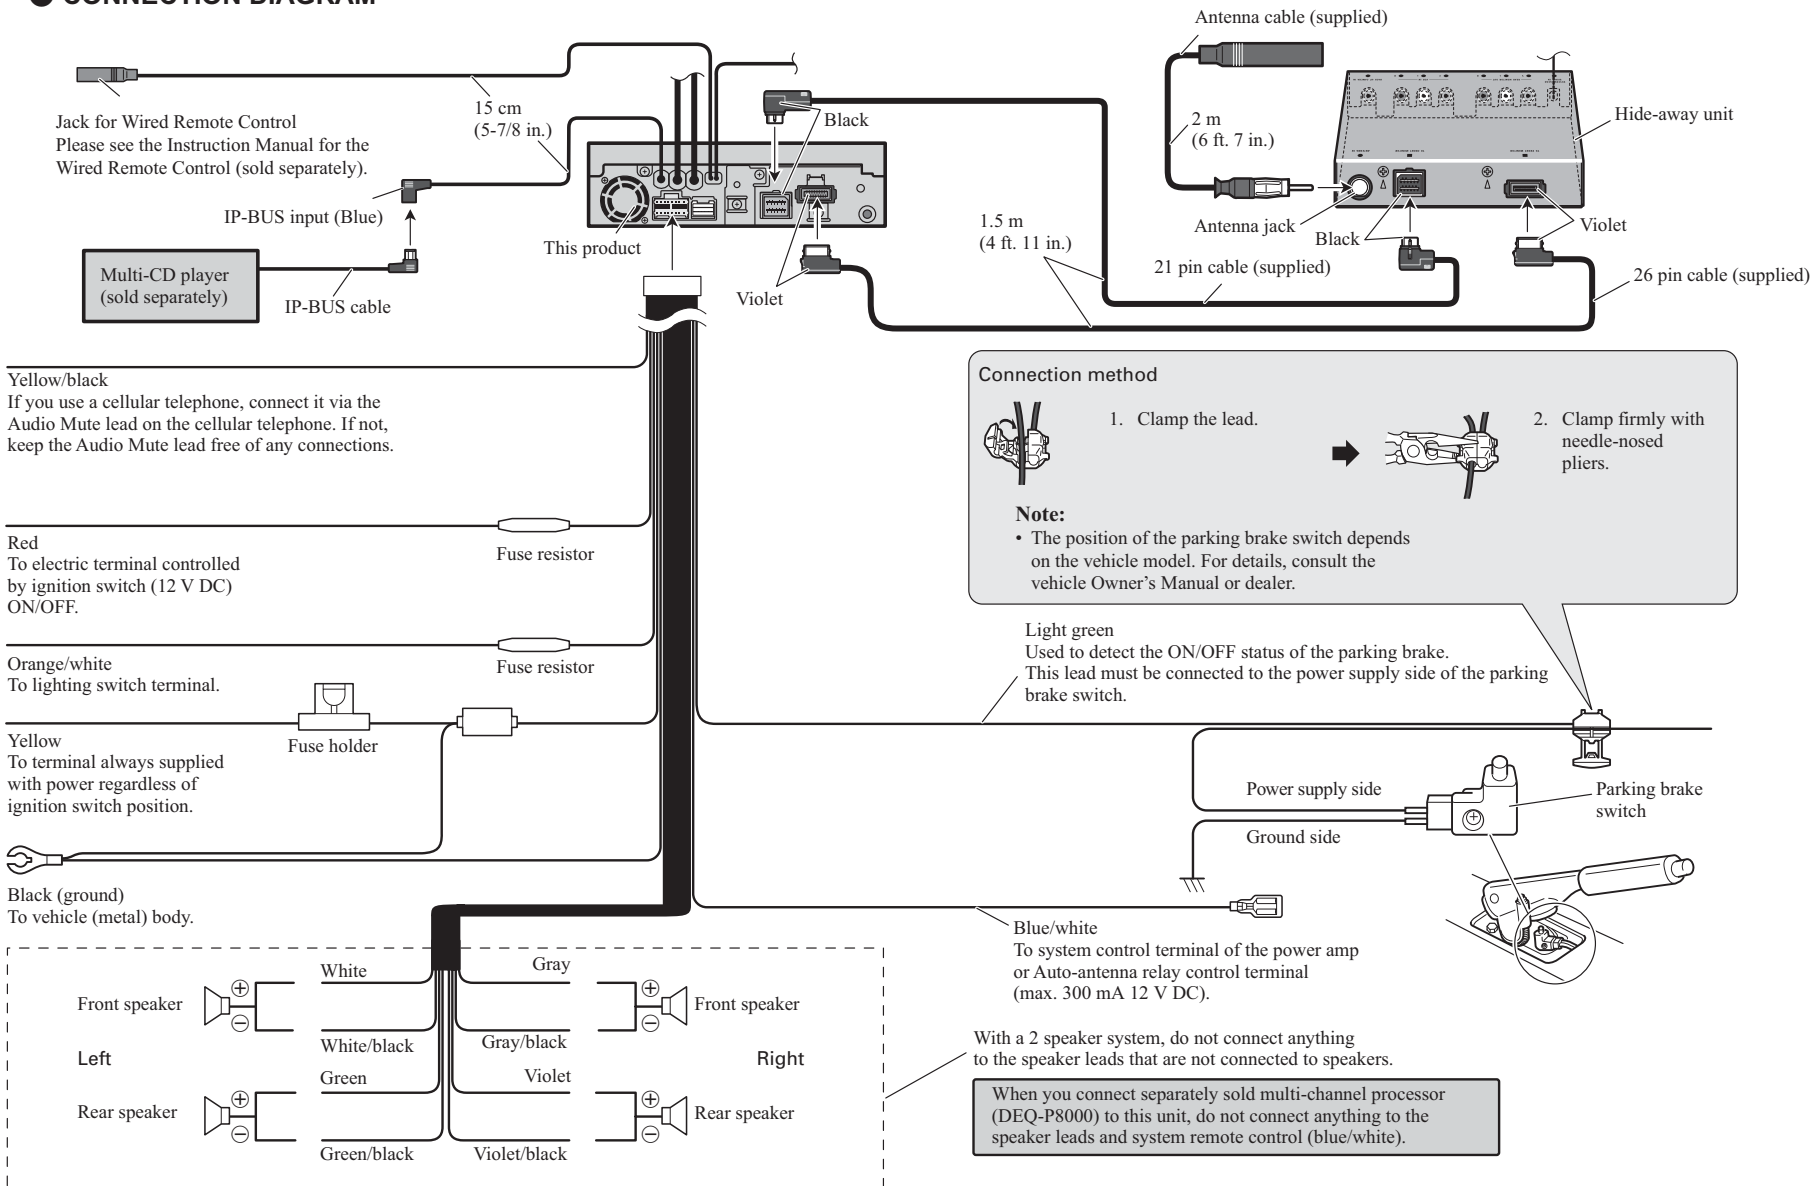

● CONNECTION DIAGRAM

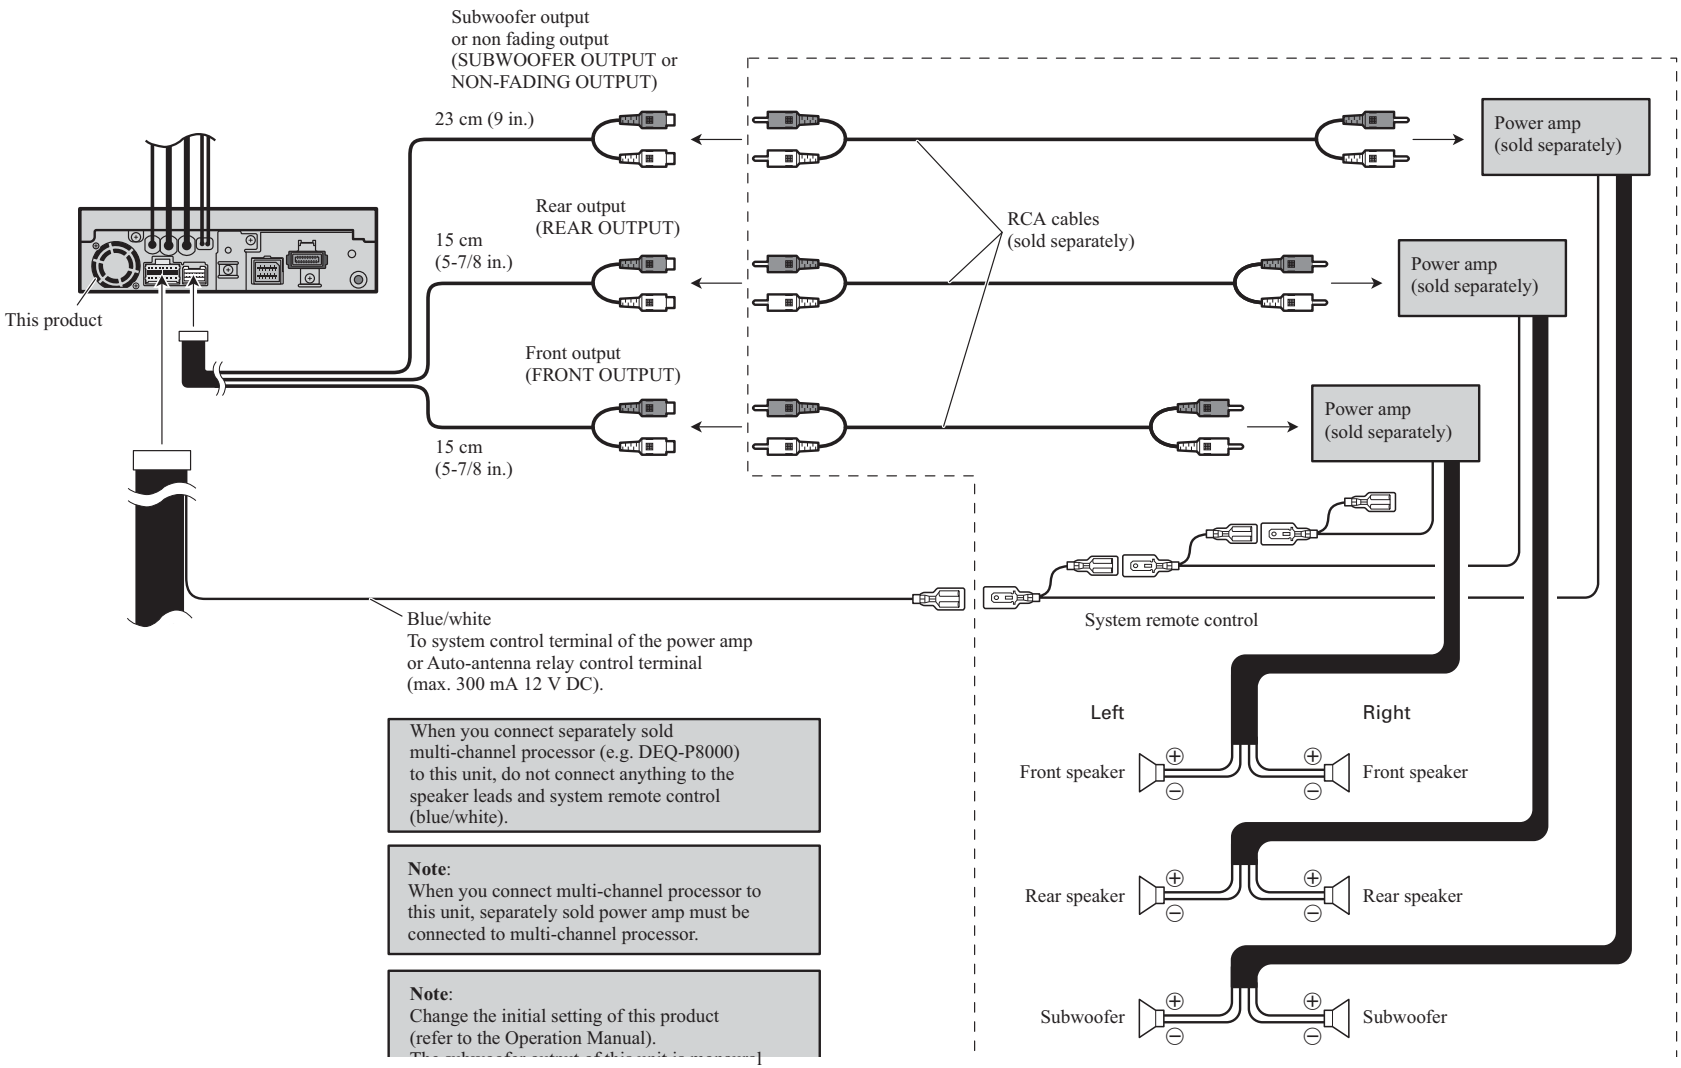

When you connect separately sold multi-channel processor (e.g. DEQ-P8000) to this unit, do not connect anything to the speaker leads and system remote control (blue/white).

Note:
When you connect multi-channel processor to this unit, separately sold power amp must be connected to multi-channel processor.

Note:
Change the initial setting of this product (refer to the Operation Manual).
The subwoofer output of this unit is monaural.

● Jigs list

Disc : GGV1018
Cleaning liquid : GEM1004
Cleaning paper : GED-008

Function Name		Jig No.
Mother PCB(CN501) <-> Main Unit(CN3801)	PCB	GGF1471
Mother PCB(CN501) <-> GGF1471	50P FFC	GGD1250
Mother PCB(CN502) <-> GGF1471	24P FFC	GGD1337
Mother PCB(CN501,CN502) <-> Monitor PCB(CN4461,CN4481)	PCB	GGF1472
Monitor PCB(CN4461) <-> GGF1472	33P FFC	GGD1262
Monitor PCB(CN4481) <-> GGF1472	24P FFC	GGD1337
Mother PCB(CN601) <-> Panel PCB(CN5901)	17PFFC	GGD1124