

NOTES :

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

X8700DAB/XNEW5
X8700BT/XNEW5



(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Unit Box	See Contrast table (2)	* 9-7	Caution Card	See Contrast table (2)
2	Contain Box	See Contrast table (2)			
3	Protector	CHP4594	* 9-8	Caution Card	See Contrast table (2)
4	Polyethylene Bag	See Contrast table (2)	* 10	Accessory Assy	See Contrast table (2)
5	Microphone Assy	CPM1083	11	Screw	See Contrast table (2)
			12	Polyethylene Bag	See Contrast table (2)
6	Holder	CZN7192	13	Handle	QNC3021
7	Cushion	CZN7193			
8	USB Extended Cable	CDP1587	14	Screw	See Contrast table (2)
* 9-1	Warranty Card	See Contrast table (2)	15	Screw	See Contrast table (2)
9-2	Owner's Manual	See Contrast table (2)	16	Cord Assy	See Contrast table (2)
			17	Card Remote Control Unit	See Contrast table (2)
9-3	IM CD-ROM	See Contrast table (2)	18	Case Assy	See Contrast table (2)
9-4	Installation Manual	See Contrast table (2)			
9-5	Quick Start Guide	See Contrast table (2)	19	Cord Assy	See Contrast table (2)
* 9-6	Caution Card	See Contrast table (2)			

(2) CONTRAST TABLE


DEH-X8700BH/XNUC, DEH-X8700BS/XNUC, DEH-X8700DAB/XNEW5, DEH-X8700BT/XNEW5, DEH-X8750BT/XNGS and DEH-X8750BT/XNCS are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>DEH-X8700BH /XNUC</u>	<u>DEH-X8700BS /XNUC</u>	<u>DEH-X8700DAB /XNEW5</u>	<u>DEH-X8700BT /XNEW5</u>	<u>DEH-X8750BT /XNGS</u>	<u>DEH-X8750BT /XNCS</u>
*	1	Unit Box	QHG3729	QHG3731	QHG3728	QHG3730	QHG3733	QHG3732
	2	Contain Box	QHL3729	QHL3731	QHL3728	QHL3730	QHL3733	QHL3732
	4	Polyethylene Bag	CEG1173	CEG1173	QEG3001	QEG3001	QEG3001	QEG3001
	9-1	Warranty Card	QRY3001	QRY3001	CRY1376	CRY1376	Not used	Not used
	9-2	Owner's Manual	QRD3260	QRD3260	QRB3441	QRB3441	QRD3262	QRD3261
*	9-3	IM CD-ROM	Not used	Not used	QPJ3028	QPJ3028	Not used	Not used
	9-4	Installation Manual	Not used	Not used	QRD3259	QRD3259	Not used	Not used
	9-5	Quick Start Guide	Not used	Not used	QRD3258	QRD3258	Not used	Not used
	9-6	Caution Card	Not used	Not used	CRP1438	CRP1438	Not used	Not used
	9-7	Caution Card	Not used	Not used	CRP1441	CRP1441	Not used	Not used
*	9-8	Caution Card	Not used	Not used	CRP1481	Not used	Not used	Not used
	10	Accessory Assy	QEA3008	QEA3008	Not used	Not used	QEA3009	QEA3009
	11	Screw	BPZ20P060FTC	BPZ20P060FTC	Not used	Not used	Not used	Not used
	12	Polyethylene Bag	CEG1160	CEG1160	Not used	Not used	CEG1160	CEG1160
	14	Screw	CRZ50P090FTC	CRZ50P090FTC	Not used	Not used	Not used	Not used
*	15	Screw	TRZ50P080FTC	TRZ50P080FTC	Not used	Not used	TRZ50P080FTC	TRZ50P080FTC
	16	Cord Assy	CDP1484	CDP1484	Not used	Not used	CDP1484	CDP1484
	17	Card Remote Control Unit	QXE1044	QXE1044	Not used	Not used	QXE1044	QXE1044
	18	Case Assy	Not used	Not used	YXA5856	YXA5856	YXA5856	YXA5856
	19	Cord Assy	Not used	Not used	QDP3072	QDP3072	Not used	Not used

Owner's Manual,Installation Manual

<u>Part No.</u>	<u>Language</u>
QRD3260	English, French, Spanish(Espanol)
QRB3441	Russian
QRD3258	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3259	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3261	English, Spanish(Espanol), Portuguese(B)
QRD3262	English, Traditional Chinese, Arabic, Persian

9.2 EXTERIOR

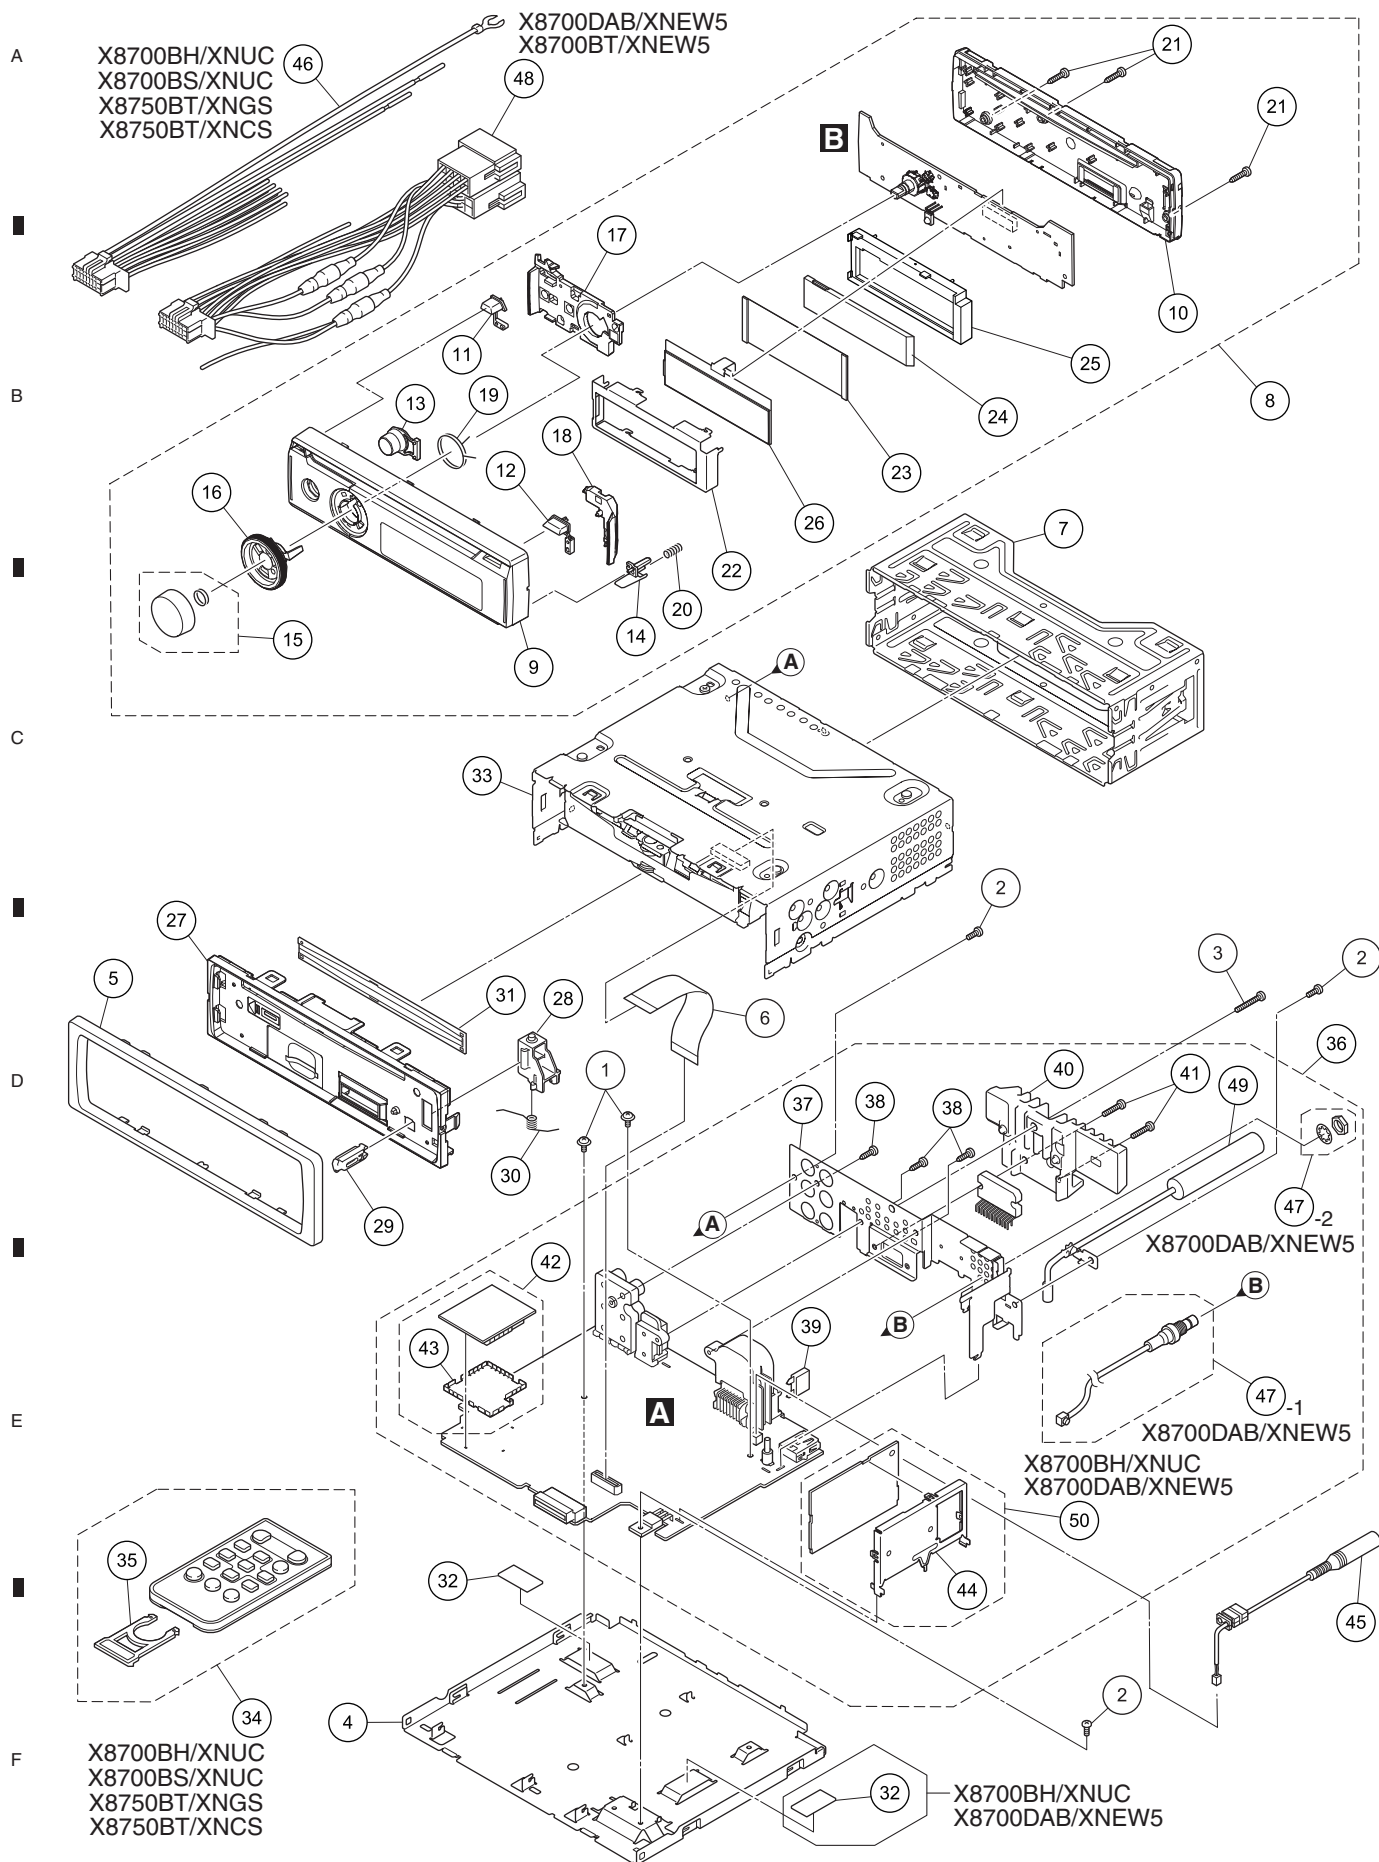

5

6

7

8

(1) EXTERIOR SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	ASZ26P050FTC	26	STN LCD	CAW2053
2	Screw	BSZ26P060FTC	27	Panel	QNS3669
3	Screw	BSZ26P120FTC	28	Arm	QNV3025
4	Case	See Contrast table (2)	29	Button	QNV3026
5	Panel	QNS3820	30	Spring	QBH3001
6	Cable	QDE3029	31	Cover	QNM3029
7	Holder	QNC3020	32	Sheet	QNM3105
8	Detachable Grille Assy	See Contrast table (2)	33	CD Mechanism Module (S11.6)	CXK5804
9	Grille Unit	See Contrast table (2)	34	Card Remote Control Unit	See Contrast table (2)
10	Cover	QNS3817	35	Cover	See Contrast table (2)
11	Button (MIX)	QAC3192	36	Tuner Amp Unit	See Contrast table (2)
12	Button (EJECT)	QAC3193	37	Holder	See Contrast table (2)
13	Button (PHONE)	QAC3194	38	Screw	BPZ26P080FTC
14	Button (DETACH)	QAC3195	39	Fuse (10 A)	YEK5001
15	Knob Unit	QXA4283	40	Heat Sink	See Contrast table (2)
16	Lever	QAA3044	41	Screw	BSZ26P120FTC
17	Lighting Conductor	QNV3106	42	BT Module	YWX5052
18	Lighting Conductor	QNV3107	43	Shield Case	YNC5123
19	Spring	QBH3008	44	Holder	See Contrast table (2)
20	Spring	CBH2210	45	Cord Assy	QDE3032
21	Screw	BPZ20P100FTC	46	Cord Assy	See Contrast table (2)
22	Holder	QNC3095	47	Antenna Cable Assy	See Contrast table (2)
23	Sheet	QNM3122	48	Cord Assy	See Contrast table (2)
24	Lighting Conductor	QNV3105	49	Antenna Cable (JA401)	YDH5001
25	Holder	QNV3111	50	BE Core Unit (U501)	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X8700BH/XNUC, DEH-X8700BS/XNUC, DEH-X8700DAB/XNEW5, DEH-X8700BT/XNEW5, DEH-X8750BT/XNGS and DEH-X8750BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X8700BH /XNUC	DEH-X8700BS /XNUC	DEH-X8700DAB /XNEW5	DEH-X8700BT /XNEW5	DEH-X8750BT /XNGS	DEH-X8750BT /XNCS
	4	Case	QNB3028	QNB3029	QNB3028	QNB3029	QNB3029	QNB3029
	8	Detachable Grille Assy	QXA4329	QXA4331	QXA4328	QXA4330	QXA4332	QXA4332
	9	Grille Unit	QXA4307	QXA4309	QXA4281	QXA4308	QXA4310	QXA4310
	34	Card Remote Control Unit	QXE1044	QXE1044	Not used	Not used	QXE1044	QXE1044
	35	Cover	CNS7068	CNS7068	Not used	Not used	CNS7068	CNS7068
	36	Tuner Amp Unit	QWM3829	QWM3847	QWM3828	QWM3830	QWM3831	QWM3832
	37	Holder	QNC3098	QNC3096	QNC3097	QNC3098	QNC3098	QNC3098
	40	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002	QNR3010
	44	Holder	CND7288	Not used	CND7288	Not used	Not used	Not used
	46	Cord Assy	CDP1484	CDP1484	Not used	Not used	CDP1484	CDP1484
	47	Antenna Cable Assy	Not used	Not used	QXA4122	Not used	Not used	Not used
	48	Cord Assy	Not used	Not used	QDP3072	QDP3072	Not used	Not used
	50	BE Core Unit (U501)	CWE2518	Not used	CWE2517 (Tuner Unit)	Not used	Not used	Not used

9.3 CD MECHANISM MODULE

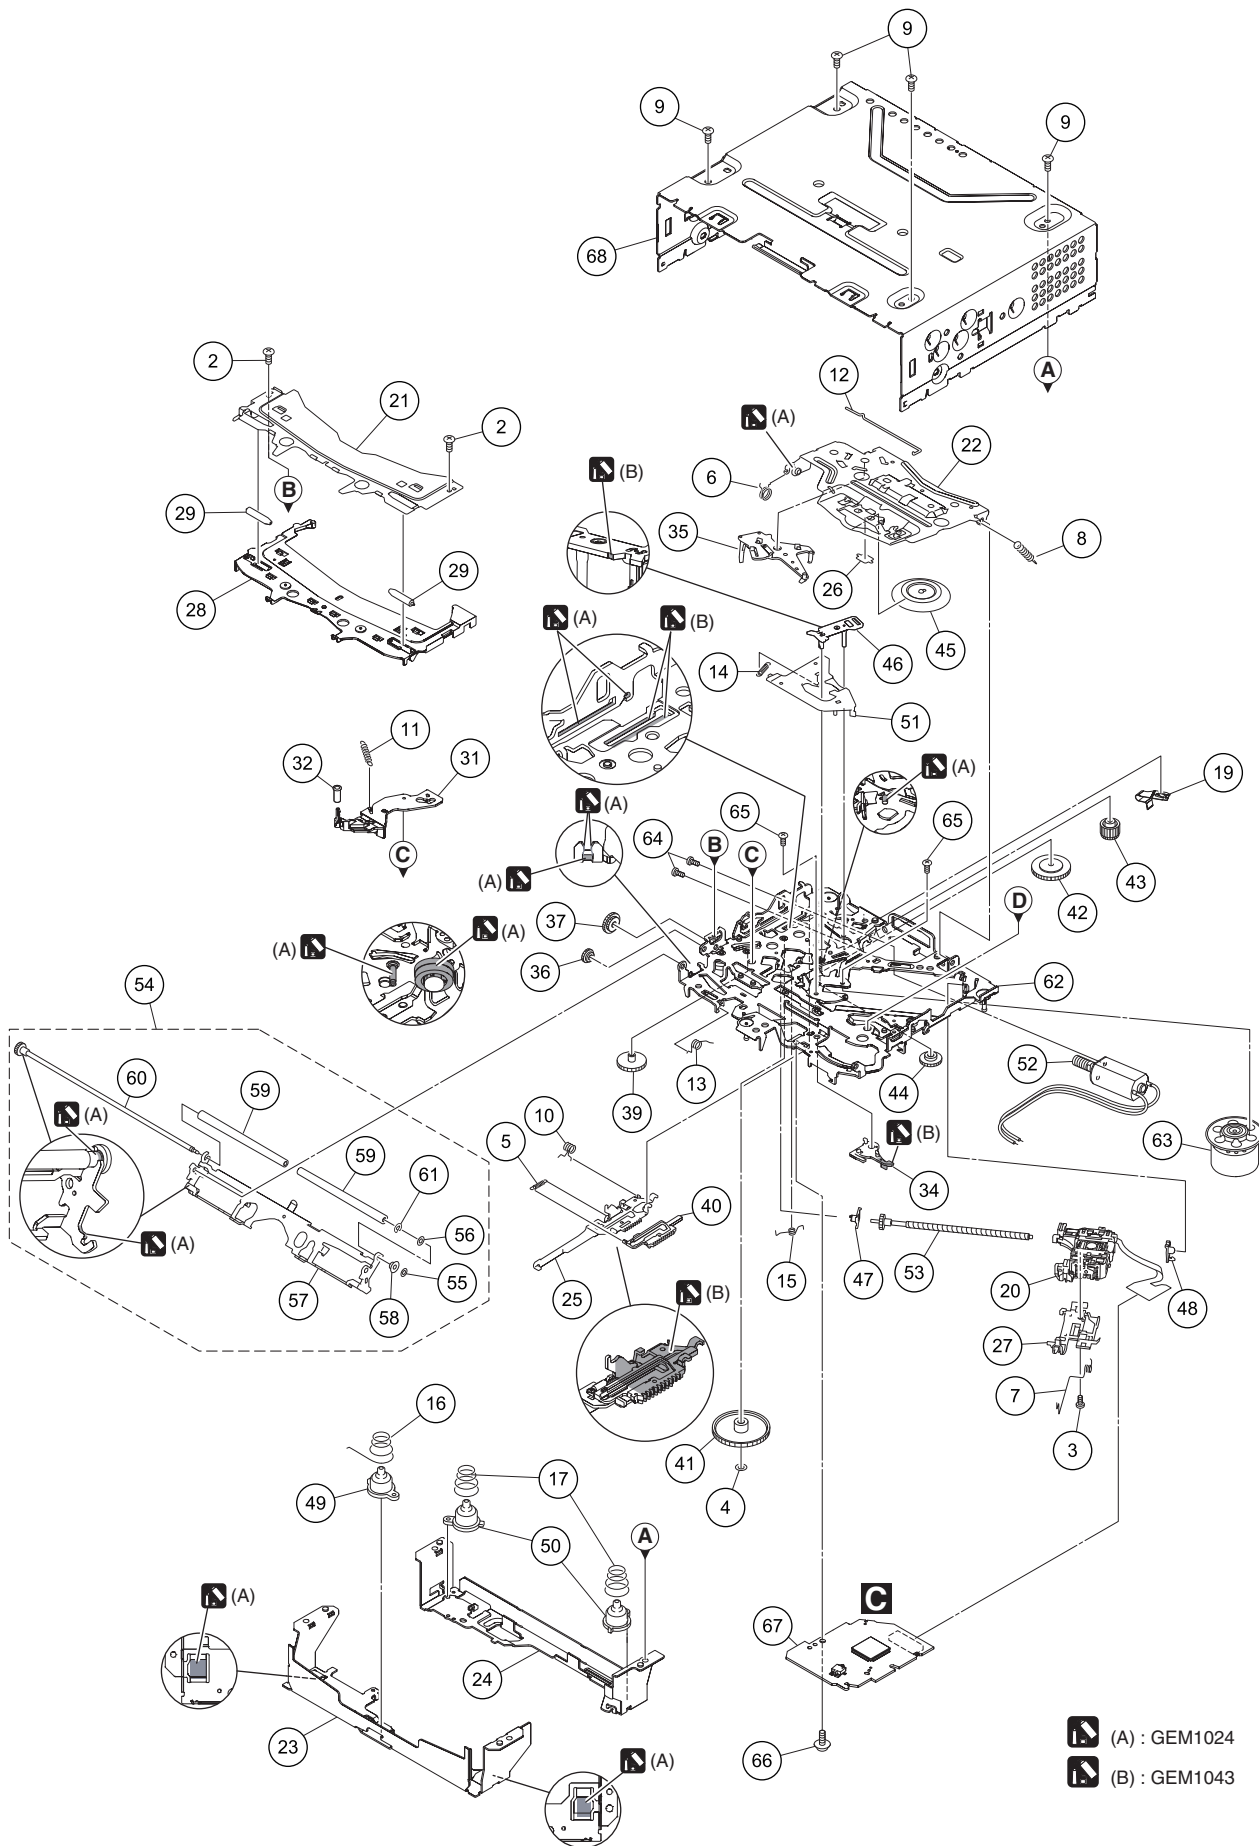

DEH-X8700BH/XNUC

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE4840	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNV6906	
11	Coil Spring	CBH3095	59	Roller	CNW1196	
12	Spring	CBH3014	60	Gear Unit	CXE6655	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6STD)	CWX4023	
20	Pickup Unit(P10.6)(Service)	CXX3556	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND6406				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30						
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

Circuit Symbol and No.

Part No.

Circuit Symbol and No.

Part No.

A:DEH-X8700BH/XNUC

B:DEH-X8700BS/XNUC

C:DEH-X8700DAB/XNEW5

D:DEH-X8700BT/XNEW5

E:DEH-X8750BT/XNGS

F:DEH-X8750BT/XNCS

Unit Number: QWM3829(A)

Unit Number: QWM3847(B)

Unit Number: QWM3828(C)

Unit Number: QWM3830(D)

Unit Number: QWM3831(E)

Unit Number: QWM3832(F)

Unit Name : Tuner Amp Unit

Unit Number: QWM3845

Unit Name : Keyboard Unit

Unit Number: CWX4023

Unit Name : CD Core Unit (S11.6STD)

A

Unit Number: QWM3829(A)

Unit Number: QWM3847(B)

Unit Number: QWM3828(C)

Unit Number: QWM3830(D)

Unit Number: QWM3831(E)

Unit Number: QWM3832(F)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 151	(A,82,114) IC	PM9012A
IC 181	(A,108,107) DC/DC Conv IC	NJW4132U2
IC 201	(A,16,109) DC/DC Conv IC	AN33014UA
IC 271	(A,29,48) Regulator IC	MM3479A18P
IC 281	(A,21,46) Regulator IC	MM3411A33N
IC 321	(A,82,141) Power AMP IC	PA2032A
IC 371	(A,64,87) Conv IC	WM8761BGED
IC 391	(A,139,60) Regulator IC	NJM2878F3-05
IC 401	(A,145,86) Tuner IC(A,C)	TEF6688HN
	(A,145,86) Tuner IC(B,D,E,F)	TEF6686HN
IC 451	(A,134,77) Regulator IC	MM3571A33P
IC 531	(A,150,50) IC(A,C)	S-1200B33-M5
IC 541	(A,152,56) Regulator IC(A,C)	S-1172B12-E6
IC 551	(A,149,64) Regulator IC(C)	S-1172B33-E6
IC 561	(A,15,83) DC/DC Conv IC(C)	KBD9876EFJ
IC 601	(A,108,64) IC(A,B,C,E)	PEQ403A8 (* NSP)
	(A,108,64) IC(D,F)	PEQ406A8 (* NSP)
IC 603	(A,128,45) IC	S-80827CNMC-B8M
IC 604	(A,102,81) IC(B)	TC7SH126FU
IC 605	(A,99,81) L-MOS AND Gate(B)	TC7SET08FUS1
IC 651	(A,71,67) Flash Blank UC IC	R5S726B0D216FP
IC 701	(A,44,69) RAM IC	M12L64164A-5TG2Y
IC 721	(A,35,91) Regulator IC	S-1155B12-U5
IC 731	(A,74,88) IC	PEB162A8 (* NSP)
IC 741	(A,86,52) Flash Memory(A,B,C,D)	MX25L4006EM2I-12G
IC 831	(A,120,22) Regulator IC	BD00IA5WEFJ
IC 881	(A,56,92) IC	337S3959
IC 901	(A,15,62) DC/DC Conv IC	KBD9876EFJ
IC 931	(A,28,56) Regulator IC	S-1172B33-E6
IC 941	(A,141,43) Regulator IC	BD00FC0EEFJ
Q 121	(A,49,108) Chip Transistor(E)	RN4982
Q 191	(A,116,106) Transistor(A,C)	LSAR523UB
Q 192	(A,118,104) Resistor Built-IN TR(A,C)	LTC014EEB
Q 301	(A,13,129) Transistor	IMH23
Q 302	(A,21,129) Transistor	IMH23
Q 303	(A,29,129) Transistor	IMH23
Q 351	(A,59,131) Bipolar TR	LSCR523UB
Q 352	(A,65,128) Transistor	EMD52
Q 353	(A,69,127) Resistor Built-IN TR	LTC014EEB
Q 401	(A,129,86) Bipolar TR(A)	MMBT2369L

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
Q 402	(A,129,89)	Bipolar TR(A)	MMBT2369L			L 408	(A,151,101)	Inductor	LCMAR27J1608		
Q 403	(A,138,83)	Bipolar TR(A)	MMBT2369L			L 561	(A,14,94)	SMD SPL Inductor(C)	CTH1521		
Q 404	(A,132,85)	Bipolar TR(A)	MMBT2369L			L 651	(A,85,60)	Chip Beads	VTL1127		A
Q 471	(A,121,86)	Bipolar TR(C)	2SB1132			L 653	(A,48,51)	Chip Ferrite Bead	DTL1107		
Q 473	(A,119,79)	Resistor Built-IN TR(C)	LTC014EEB			L 701	(A,33,77)	Chip Ferrite Bead	DTL1107		
Q 701	(A,35,83)	Bipolar TR	LSAR523UB			L 731	(B,77,87)	Inductor	CTF1389		
Q 771	(A,157,40)	Bipolar TR	KTD2092			L 901	(A,12,74)	SMD SPL Inductor	CTH1521		
Q 772	(A,153,46)	Transistor	EMD52			L 981	(A,116,140)	Choke Coil 600 uH	CTH1432		
Q 841	(A,108,29)	Bipolar TR	LSAR523UB			T 401	(A,146,98)	Variable Coil	CTC1215		
Q 842	(A,111,30)	Resistor Built-IN TR	LTC014EEB			X 401	(A,153,92)	Crystal Resonator 9.216 MHz	CSS1867		
Q 881	(A,51,86)	Bipolar TR	LSAR523UB			X 601	(A,94,65)	Resonator 20.000 MHz	CSS1795		
Q 921	(A,22,53)	Transistor	2SD2153			X 651	(A,87,65)	Resonator 12.0 MHz	YSS5005		
Q 922	(A,21,58)	Transistor	EMD52			X 652	(A,78,83)	Resonator 16.93 MHz	CSS1794		
Q 951	(A,145,129)	Chip Transistor	HN1C01FU			P 301	(A,38,127)	Poly Switch	FSMD075-24R		B
Q 961	(A,95,120)	Resistor Built-IN TR	LTC014EEB			P 402	(A,152,111)	Surge Absorber	HSPC16701B02		
D 121	(B,51,131)	Diode	DZ2S068C			P 472	(A,127,97)	Poly Switch(B)	FSMD110-24R		
D 122	(B,43,131)	Diode	DZ2S068C				(A,127,97)	Poly Switch(C)	FSMD020-R		
D 123	(B,52,129)	Diode	DZ2S068C			BZ601	(A,88,28)	Buzzer	CPV1062		
D 182	(A,104,103)	Schottky Diode	RB551VM-30			VA801	(B,108,16)	SMD Varistor	MLV0603ES012V0010N		
D 201	(A,21,108)	Diode	RB060M-30			VA802	(B,109,16)	SMD Varistor	MLV0603ES012V0010N		
D 202	(B,51,116)	Diode	RB056L-40			VA803	(B,114,16)	SMD Varistor	MLV0603ES012V0010N		
D 351	(A,58,128)	Rectifier Diod	DA2J101			VA804	(B,113,16)	SMD Varistor	MLV0603ES012V0010N		
D 352	(A,59,128)	Diode	DZ2J082M0			VA805	(B,111,16)	SMD Varistor	MLV0603ES012V0010N		
D 353	(A,64,131)	Rectifier Diode	DAN202UM			VA806	(B,116,16)	SMD Varistor	MLV0603ES012V0010N		
D 451	(A,134,70)	Rectifier Diode	DAN202UM			VA807	(B,117,16)	SMD Varistor	MLV0603ES012V0010N		C
D 452	(A,126,78)	Rectifier Diode(A,C)	DAN202UM			VA808	(B,122,12)	SMD Varistor	MLV0603ES012V0010N		
D 541	(B,151,50)	Rectifier Diode(A,C)	DAN202UM			U 501	(A,164,76)	Be Core Unit(A)	CWE2518		
D 542	(B,144,50)	Rectifier Diode(A,C)	DAN202UM				(A,164,76)	Tuner Unit(C)	CWE2517		
D 561	(A,14,88)	Diode(C)	RB056L-40			CN121	(A,154,124)	Connector	B2B-EH		
D 562	(B,12,89)	Diode(C)	CRG03			CN251	(A,49,33)	Connector	CKS6346		
D 564	(A,7,87)	Diode(A)	CRG03			CN751	(A,118,37)	Connector	VKN1192		
D 601	(A,110,75)	Schottky Diode(A,B,C,D)	RB751SM-40			CN802	(A,113,3)	Connector	CKS6452		
D 602	(A,114,76)	Schottky Diode(A,B,C,D)	RB751SM-40			JA101	(A,146,142)	Connector(B)	CKS3806		
D 771	(A,157,46)	Diode	DZ2J082M0			JA121	(A,46,140)	Jack	YKS5001		
D 832	(A,121,28)	Rectifier Diode	DAN202UM			JA201	(A,165,135)	USB Jack	CKN1105		
D 901	(A,14,67)	Diode	RB056L-40			JA301	(A,23,137)	Pin Jack	XKB7001		D
D 902	(B,9,73)	Diode	CRG03			JA401	(A,159,115)	ANT Pigtail Cable	YDH5001		
D 903	(B,26,53)	Diode	CRG03			JA981	(A,117,140)	Connector	CKM1613		
D 904	(B,28,53)	Diode	CRG03				BT Module		YWX5052		
D 922	(B,22,55)	Diode	DZ2J056M0								
D 923	(B,14,43)	Rectifier Diode	DA2J101								
D 924	(B,16,49)	Schottky Diode(B)	DB2J31400								
D 951	(A,135,123)	Diode	DZ2J075M0								
D 952	(A,135,125)	Diode	DZ2J068M0								
D 961	(B,105,124)	Diode	CRG03								
D 981	(A,136,131)	Diode	D1F60-5053								
D 982	(A,136,127)	Diode	D1F60-5053								
D 991	(B,95,126)	Diode	CRG03								
L 121	(A,58,104)	Inductor	CTF1389								
L 122	(A,52,104)	Inductor	CTF1389								
L 151	(A,93,114)	Inductor	LCTAW6R8J2520								
L 181	(A,101,109)	Choke Coil	CTH1561								
L 201	(A,164,126)	Inductor	CTF1713								
L 202	(A,26,105)	SMD SPL Inductor	CTH1524								
L 251	(A,16,34)	Inductor	CTF1786								
L 252	(A,16,32)	Inductor	CTF1786								
L 371	(A,60,95)	Chip Ferrite Bead	DTL1107								
L 402	(A,139,99)	Inductor	LCTAW150J2520								
L 404	(A,137,101)	Inductor	CTF1389								
L 406	(A,151,77)	Inductor	CTF1786								
						RESISTORS					
						R 102	(B,146,131) (B)		RS1/10SR473J		
						R 103	(A,150,133) (B)		RS1/16SS102J		
						R 104	(A,149,131) (B)		RS1/16SS102J		
						R 105	(A,148,131) (B)		RS1/16SS102J		E
						R 106	(A,147,131) (B)		RS1/16SS102J		
						R 107	(A,151,133) (B)		RS1/16SS181J		
						R 108	(B,150,133) (B)		RS1/10SR223J		
						R 109	(B,150,135) (B)		RS1/10SR223J		
						R 110	(A,152,133) (B)		RS1/16SS181J		
						R 123	(A,53,104)		RS1/10SR0R0J		
						R 124	(A,58,111)		RS1/10SR102J		
						R 125	(A,58,109)		RS1/10SR102J		
						R 126	(A,59,104)		RS1/10SR0R0J		
						R 127	(A,54,102)		RS1/10SR0R0J		
						R 128	(A,55,109) (E)		RS1/10SR471J		F
						R 131	(A,53,110) (E)		RS1/10SR0R0J		
						R 151	(A,75,105)		RS1/16SS223J		

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 152 (A,81,105)
R 153 (A,76,105)
R 154 (A,75,124)

RS1/16SS223J
RS1/16SS331J
RS1/16SS102J

R 354 (A,59,133)
R 355 (A,71,128)
R 356 (A,62,126)

RS1/16SS104J
RS1/16SS103J
RS1/16SS102J

A

R 155 (A,73,123)
R 156 (A,75,122)
R 182 (A,113,104)
R 183 (A,111,103)
R 184 (A,109,103)

RS1/16SS102J
RS1/16SS102J
RS1/16SS0R0J
RS1/16SS4703D
RS1/16SS1802D

R 357 (A,70,129)
R 358 (A,70,130)
R 371 (A,79,93)
R 372 (A,79,92)
R 401 (A,145,92)

RS1/16SS103J
RS1/16SS681J
RS1/16SS821J
RS1/16SS821J
RS1/16SS0R0J

R 187 (A,96,113)
R 189 (A,107,103)
R 190 (A,111,105)
R 192 (A,117,111) (B,D,E,F)
R 194 (A,119,105) (A,C)

RS1/16SS0R0J
RS1/16SS1802D
RS1/16SS330J
RS1/10SR0R0J
RS1/16SS102J

R 402 (A,144,92)
R 403 (A,141,100)
R 404 (A,140,103)
R 405 (A,141,103)
R 406 (A,147,81)

RS1/16SS0R0J
RS1/16SS391J
RS1/16SS105J
RS1/16SS105J
RS1/16SS101J

B

R 195 (A,119,107) (A,C)
R 196 (A,115,104)
R 202 (A,31,103)
R 203 (A,31,102)
R 204 (A,23,112) 0.056 ohm

RS1/16SS103J
RS1/10SR0R0J
RS1/10SR681J
RS1/10SR681J
ACN7160

R 407 (A,148,81)
R 408 (A,150,84)
R 410 (A,150,83)
R 412 (A,153,81)
R 417 (A,131,90) (A)

RS1/16SS101J
RS1/16SS103J
RS1/16SS103J
RS1/10SR0R0J
RS1/16SS121J

R 206 (A,15,103)
R 207 (A,12,103)
R 208 (A,9,117)
R 210 (A,10,115)
R 211 (A,10,113)

RS1/16SS4702D
RS1/16SS224J
RS1/16SS152J
RS1/16SS3302D
RS1/16SS8201D

R 418 (A,131,92) (A)
R 419 (A,128,83) (A)
R 420 (A,151,91)
R 421 (A,130,83) (A)
R 422 (A,140,83) (A)

RS1/16SS182J
RS1/16SS102J
RS1/16SS0R0J
RS1/16SS332J
RS1/16SS0R0J

C

R 212 (A,11,115)
R 251 (B,56,28)
R 252 (B,56,32)
R 253 (B,56,30)
R 254 (A,51,40)

RS1/16SS223J
RS1/10SR221J
RS1/10SR221J
RS1/10SR221J
RS1/16SS102J

R 423 (A,135,84) (A)
R 424 (A,132,87) (A)
R 425 (A,141,81) (A)
R 426 (A,142,81) (A)
R 427 (A,143,92)

RS1/16SS121J
RS1/16SS182J
RS1/16SS102J
RS1/16SS332J
RS1/16SS0R0J

R 255 (A,50,40)
R 256 (A,18,35)
R 257 (B,49,42)
R 258 (B,48,42)
R 259 (B,46,42)

RS1/16SS102J
RS1/16SS222J
RS1/10SR101J
RS1/10SR101J
RS1/10SR102J

R 431 (A,132,92) (A)
R 432 (A,148,79)
R 433 (A,147,79)
R 435 (A,168,87) (B,C,D,E,F)
R 436 (A,170,87) (B,C,D,E,F)

RS1/16SS0R0J
RS1/16SS472J
RS1/16SS472J
RS1/10SR0R0J
RS1/10SR0R0J

D

R 260 (A,18,31)
R 301 (A,10,128)
R 302 (A,15,128)
R 303 (A,18,128)
R 304 (A,24,128)

RS1/16SS222J
RS1/16SS820J
RS1/16SS820J
RS1/16SS820J
RS1/16SS820J

R 450 (B,134,93) (A)
R 451 (A,126,81) (B,D,E,F)
R 452 (A,146,76) (B,D,E,F)
R 453 (A,138,105)
R 457 (B,146,104)

RS1/10SR0R0J
RS1/16SS0R0J
RS1/16SS0R0J
RS1/10SR0R0J
RS1/10SR0R0J

R 305 (A,27,128)
R 306 (A,33,128)
R 307 (A,9,129)
R 308 (A,16,129)
R 309 (A,18,129)

RS1/16SS820J
RS1/16SS820J
RS1/16SS223J
RS1/16SS223J
RS1/16SS223J

R 458 (B,133,96) (A)
R 472 (A,120,92) (C)
R 473 (A,119,82) (C)
R 474 (A,118,81) (B)
(A,118,81) (C)
R 475 (A,123,81) (C)

RS1/10SR0R0J
RS1/10SR0R0J
RS1/16SS1003F
RS1/16SS183J
RS1/16SS1802D
RS1/4SA471J

E

R 310 (A,24,129)
R 311 (A,26,129)
R 312 (A,33,129)
R 316 (B,9,127)
R 317 (B,9,125)

RS1/16SS223J
RS1/16SS223J
RS1/16SS223J
RS1/10SR0R0J
RS1/10SR0R0J

R 476 (A,121,81) (C)
R 477 (A,107,78) (B)
R 478 (A,124,85) (C)
R 479 (A,123,96) (B)
R 501 (A,148,72) (A)

RS1/4SA471J
RS1/16SS183J
RS1/10SR103J
RS1/10SR0R0J
RS1/16SS101J

R 321 (A,79,123)
R 322 (A,80,123)
R 323 (A,84,123)
R 324 (A,85,123)
R 325 (A,79,124)

RS1/16SS362J
RS1/16SS362J
RS1/16SS362J
RS1/16SS362J
RS1/16SS562J

R 502 (A,146,73) (A)
R 503 (A,148,71) (A)
R 504 (A,149,72) (A)
R 505 (A,136,106) (C)
R 506 (A,159,92) (A,C)

RS1/16SS101J
RS1/16SS101J
RS1/16SS101J
RS1/10SR0R0J
RS1/16SS101J

F

R 326 (A,81,124)
R 327 (A,83,124)
R 328 (A,85,124)
R 331 (B,74,131)
R 351 (A,65,126)

RS1/16SS562J
RS1/16SS562J
RS1/16SS562J
RS1/10SR103J
RS1/16SS473J

R 507 (A,159,90) (A,C)
R 508 (A,159,88) (A,C)
R 509 (A,159,86) (A,C)
R 512 (A,158,68) (A,C)
R 513 (A,158,67) (A,C)

RS1/16SS101J
RS1/16SS101J
RS1/16SS101J
RS1/16SS101J
RS1/16SS101J

R 352 (A,61,133)
R 353 (B,57,130)

RS1/16SS473J
RS1/10SR473J

R 514 (A,158,66) (A,C)

RS1/16SS101J

1

2

3

4

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 516	(A,148,75) (A,C)	RS1/16SS0R0J		R 676	(A,67,81)	RS1/16SS221J	
R 531	(A,153,50) (C)	RS1/10SR102J		R 677	(A,68,80)	RS1/16SS221J	
R 561	(B,22,92) (C)	RS1/10SR102J		R 678	(B,71,81)	RS1/10SR221J	
R 563	(A,10,81) (C)	RS1/16SS333J		R 679	(A,78,81)	RS1/16SS332J	A
R 564	(A,9,81) (C)	RS1/16SS103J		R 680	(A,39,88)	RS1/16SS0R0J	
R 565	(A,9,83) (C)	RS1/16SS103J		R 681	(A,85,80)	RAB4CQ473J	
R 566	(A,25,78) (C)	RS1/16SS0R0J		R 682	(A,84,68)	RS1/16SS153J	
R 567	(A,27,78) (C)	RS1/16SS0R0J		R 683	(A,84,69)	RS1/16SS153J	
R 601	(A,93,34)	RS1/16SS102J		R 684	(A,90,70)	RS1/16SS153J	
R 602	(B,104,70)	RS1/10SR154J		R 685	(A,89,71)	RS1/16SS153J	
R 603	(A,99,56)	RS1/16SS222J		R 686	(A,85,71)	RS1/16SS473J	
R 604	(A,97,65)	RS1/16SS105J		R 687	(A,85,72)	RS1/16SS473J	
R 606	(B,96,61)	RS1/10SR104J		R 688	(A,88,76)	RS1/16SS473J	
R 607	(A,99,55)	RS1/16SS104J		R 689	(A,86,76)	RS1/16SS473J	
R 608	(A,101,53)	RS1/16SS104J		R 690	(B,59,71)	RS1/10SR473J	B
R 609	(A,94,70)	RS1/16SS104J		R 691	(B,86,62)	RS1/10SR0R0J	
R 610	(A,101,75)	RS1/16SS104J		R 692	(B,68,79)	RS1/10SR473J	
R 611	(A,95,59)	RS1/16SS104J		R 695	(B,78,67)	RS1/10SR473J	
R 612	(A,95,57)	RS1/16SS104J		R 697	(A,86,72)	RS1/16SS102J	
R 613	(A,109,76)	RS1/16SS103J		R 699	(B,83,87)	RS1/10SR0R0J	
R 614	(A,98,63)	RS1/16SS104J		R 701	(B,44,75)	RS1/10SR473J	
R 615	(A,98,65)	RS1/16SS101J		R 702	(A,44,78)	RS1/16SS472J	
R 616	(A,103,75) (F)	RS1/16SS104J		R 703	(A,42,78)	RAB4CQ220J	
R 617	(A,105,75) (D,F)	RS1/16SS104J		R 704	(A,39,78)	RAB4CQ220J	
R 618	(B,107,51)	RS1/10SR472J		R 705	(A,36,78)	RAB4CQ220J	C
R 619	(A,115,75)	RS1/16SS103J		R 707	(A,38,82)	RS1/16SS472J	
R 620	(B,107,63)	RS1/10SR104J		R 708	(A,44,61)	RS1/16SS220J	
R 621	(A,106,53)	RS1/16SS104J		R 710	(A,39,61)	RAB4CQ220J	
R 622	(B,95,49)	RS1/10SR104J		R 711	(A,36,61)	RAB4CQ220J	
R 623	(B,97,49)	RS1/10SR104J		R 731	(A,74,91)	RS1/16SS473J	
R 624	(B,109,75)	RS1/10SR104J		R 732	(B,72,91)	RS1/10SR473J	
R 628	(A,118,67)	RS1/16SS104J		R 733	(A,71,91)	RS1/16SS473J	
R 631	(A,117,63)	RS1/16SS104J		R 734	(A,79,89)	RS1/16SS473J	
R 636	(A,126,44)	RS1/16SS104J		R 735	(A,79,87)	RS1/16SS473J	
R 638	(A,125,44)	RS1/16SS152J		R 741	(A,83,55) (A,B,C,D)	RS1/16SS101J	
R 640	(B,103,51)	RS1/10SR102J		R 742	(A,76,49) (A,B,C,D)	RS1/16SS101J	D
R 641	(B,104,56)	RS1/10SR102J		R 743	(A,80,52) (A,B,C,D)	RS1/16SS101J	
R 642	(B,96,63)	RS1/10SR104J		R 744	(A,80,53) (A,B,C,D)	RS1/16SS101J	
R 643	(B,99,70)	RS1/10SR104J		R 745	(A,86,57) (A,B,C,D)	RS1/16SS473J	
R 646	(A,120,67) (B,D,E,F)	RS1/16SS104J		R 751	(B,112,32)	RS1/10SR472J	
R 647	(A,106,81)	RS1/16SS103J		R 752	(B,108,34)	RS1/10SR473J	
R 648	(B,103,81) (B)	RS1/10SR473J		R 753	(B,114,32)	RS1/10SR472J	
R 650	(A,93,72) (B)	RS1/16SS0R0J		R 754	(A,118,40)	RS1/16SS104J	
R 652	(A,81,55) (E,F)	RS1/16SS473J		R 755	(B,116,32)	RS1/10SR472J	
R 653	(A,77,49) (E,F)	RS1/16SS473J		R 756	(A,105,38)	RS1/16SS221J	
R 657	(A,89,61)	RS1/16SS101J		R 757	(A,105,39)	RS1/16SS221J	
R 660	(B,86,69)	RS1/10SR221J		R 758	(A,105,37)	RS1/16SS101J	E
R 661	(B,59,85)	RS1/10SR221J		R 759	(A,112,40)	RS1/16SS221J	
R 662	(A,87,60)	RS1/16SS181J		R 760	(A,105,36)	RS1/16SS101J	
R 663	(A,84,66)	RS1/16SS332J		R 761	(A,116,40)	RS1/16SS102J	
R 664	(B,78,70)	RS1/10SR473J		R 762	(A,119,33)	RS1/16SS151J	
R 666	(B,78,74)	RS1/10SR473J		R 763	(A,120,40)	RS1/16SS151J	
R 668	(A,90,61)	RS1/16SS221J		R 764	(A,120,33)	RS1/16SS151J	
R 669	(A,71,80)	RS1/16SS101J		R 765	(A,125,40)	RS1/16SS221J	
R 670	(A,71,82)	RS1/16SS101J		R 766	(A,124,40)	RS1/16SS104J	
R 671	(A,72,82)	RS1/16SS101J		R 767	(B,106,36)	RS1/10SR104J	
R 672	(A,73,82)	RS1/16SS101J		R 771	(B,146,39)	RS1/10SR473J	F
R 673	(A,75,80)	RS1/16SS101J		R 772	(B,146,41)	RS1/10SR103J	
R 674	(A,76,80)	RS1/16SS101J		R 773	(B,157,44)	RS1/4SA391J	
R 675	(A,67,80)	RS1/16SS221J		R 805	(A,107,15)	RS1/10SR222J	

1

Circuit Symbol and No.

2

Part No.

3

Circuit Symbol and No.

4

Part No.

R 806 (A,108,15)
R 807 (A,114,15)
R 808 (A,113,15)
R 809 (A,111,15)

A

R 810 (A,116,15)
R 811 (A,117,15)
R 812 (B,96,19)
R 813 (B,96,21)
R 832 (A,116,24)

R 833 (A,116,23)
R 834 (A,116,21)
R 841 (A,106,28)
R 842 (B,108,29)
R 843 (B,106,29)

B

R 860 (A,73,37)
R 863 (B,67,43)
R 864 (B,62,44)
R 865 (B,72,43)
R 866 (B,61,35)

R 867 (B,64,35)
R 869 (B,63,44)
R 881 (A,49,86)
R 882 (A,57,95)
R 883 (A,56,95)

C

R 884 (A,54,89)
R 885 (A,56,88)
R 886 (A,54,84)
R 887 (A,55,95)
R 888 (A,54,88)

R 889 (A,57,88)
R 901 (B,27,71)
R 903 (A,10,61)
R 904 (A,9,61)
R 905 (A,9,63)

D

R 906 (A,7,62)
R 907 (A,7,61)
R 908 (A,8,59)
R 921 (B,21,57)
R 922 (B,22,59)

R 931 (A,32,51)
R 941 (B,135,40)
R 942 (A,136,46)
R 943 (A,136,45)
R 944 (A,136,44)

E

R 951 (A,144,132)
R 952 (A,143,129)
R 953 (A,144,133)
R 954 (A,143,130)
R 955 (B,121,127)

R 956 (A,120,129)
R 961 (B,101,125)
R 962 (A,115,129)
R 1001 (A,90,76)
R 1003 (A,91,76)

CAPACITORS

C 101 (B,147,141) (B)
C 121 (B,49,132)
C 122 (B,45,132)
C 123 (B,52,127)

F

RS1/10SR222J
RS1/10SR222J
RS1/10SR222J
RS1/10SR222J
RS1/10SR222J
RS1/10SR222J
RS1/10SR102J
RS1/10SR104J
RS1/16SS1002D

RS1/16SS2202D
RS1/16SS6801D
RS1/10SR472J
RS1/10SR102J
RS1/10SR103J

RS1/16SS473J
RS1/10SR473J
RS1/10SR0R0J
RS1/10SR473J
RS1/10SR473J

RS1/10SR473J
RS1/10SR473J
RS1/10SR103J
RS1/16SS473J
RS1/16SS222J

RS1/16SS222J
RS1/16SS272J
RS1/16SS472J
RS1/16SS101J
RS1/16SS101J

RS1/16SS472J
RS1/10SR102J
RS1/16SS5102D
RS1/16SS1002D
RS1/16SS103J

RS1/16SS183J
RS1/16SS0R0J
RS1/16SS473J
RS1/10SR223J
RS1/10SR332J

RS1/16SS473J
RS1/10SR473J
RS1/16SS182J
RS1/16SS6802D
RS1/16SS6801D

RS1/16SS103J
RS1/16SS104J
RS1/16SS473J
RS1/16SS473J
RS1/10SR682J

RS1/4SA102J
RS1/10SR103J
RS1/4SA102J
RS1/16SS220J
RS1/16SS220J

CKSRYB105K16
CKSRYB472K50
CKSRYB472K50
CKSRYB104K16

C 124 (B,38,128)
C 125 (B,38,127)
C 126 (B,44,129)
C 127 (B,56,147)
C 128 (A,157,126)
C 129 (A,157,124)

C 151 (A,75,112)
C 152 (A,89,111)
C 153 (A,75,111)
C 154 (B,93,104)
C 155 (B,104,114) (B)

C 156 (B,104,112) (B)
C 157 (B,99,114) (B)
C 158 (B,99,112) (B)
C 159 (A,75,110)
C 160 (A,89,108)

C 161 (A,75,108) 2.2 uF
C 163 (A,77,114)
C 164 (A,88,113)
C 165 (A,88,116) 10 uF
C 166 (A,90,114) 10 uF

C 168 (A,87,124)
C 170 (A,89,121)
C 181 (A,93,108)
C 184 (A,112,105)
C 186 (B,102,104) 10 uF

C 188 (A,113,108) 10 uF/16 V
C 190 (B,102,107) 10 uF
C 201 (A,22,117)
C 202 (A,27,111) 22 uF
C 204 (A,13,103)

C 205 (A,18,103)
C 206 (A,11,103)
C 207 (A,16,103)
C 208 (A,9,115)
C 209 (A,15,115) 1 uF

C 210 (A,13,115)
C 211 (A,36,110) 10 uF
C 212 (A,11,114)
C 213 (A,42,110)
C 214 (A,16,116)

C 215 (A,29,116)
C 216 (A,23,117)
C 217 (A,19,116) 22 uF
C 222 (A,36,115) (A,B,E)
C 251 (A,37,47)

C 253 (A,18,34)
C 255 (B,42,31) 4.7 uF
C 256 (B,42,33) 4.7 uF
C 262 (B,50,33)
C 264 (B,56,33)

C 265 (B,15,30)
C 266 (B,52,15)
C 272 (B,28,44) 4.7 uF
C 273 (B,28,49) 4.7 uF
C 275 (A,32,48)

C 281 (B,23,44) 4.7 uF
C 284 (B,20,44) 4.7 uF
C 301 (A,11,126) 10 uF
C 302 (A,15,126) 10 uF

CKSRYB102K50
CKSRYB102K50
CKSRYB471K50
CKSRYB102K50
CKSSYB102K50
CKSSYB102K50
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

CCG1205
CKSRYB105K10
CKSRYB105K10
DCH1201
DCH1201

CKSQYB225K16
CKSQYB225K16
CKSSYB104K16
CCSSCH150J50
CCG1236

DCH1263
CCG1236
CKSSYB104K10
CCG1254
CKSSYB102K50

CKSSYB104K16
CKSSYB472K25
CKSSYB104K16
CCSSCH151J50
DCH1246

CKSSYB472K25
DCH1165
CCSSCH270J50
XCEVW221M16
CKSSYB104K16

XCEVW101M16
CKSSYB102K50
CCG1254
CKSRYB102K50
XCEVW221M4

CKSRYB105K10
CCG1212
CCG1212
CCSRCH270J50
CKSRYB104K16

CKSRYB104K16
CKSRYB104K16
CCG1212
CCG1212
CKSSYB104K10

CCG1212
CCG1212
DCH1201
DCH1201

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 303	(A,19,126)	10 uF	DCH1201			C 451	(A,130,78)		CKSQYB474K16		
C 304	(A,24,126)	10 uF	DCH1201			C 453	(A,138,76) 4.7 uF		CCG1212		
C 305	(A,28,126)	10 uF	DCH1201			C 455	(B,168,89) (A)		CKSRYB102K50		
C 306	(A,32,126)	10 uF	DCH1201			C 472	(A,132,105) (C)		CKSRYB104K16		A
C 307	(A,9,130)		CKSSYB103K16			C 507	(A,155,105) (C)		CKSSYB104K16		
C 308	(A,16,130)		CKSSYB103K16			C 508	(A,154,105) (C)		CCSSCH101J50		
C 309	(A,18,130)		CKSSYB103K16			C 511	(B,155,71) (A)		CCSRCH220J50		
C 310	(A,24,130)		CKSSYB103K16			C 512	(B,158,74) (A)		CCSRCH220J50		
C 311	(A,26,130)		CKSSYB103K16			C 513	(A,159,69) (A)		CCSSCH220J50		
C 312	(A,33,130)		CKSSYB103K16			C 531	(A,147,49) 4.7 uF(C)		CCG1212		
C 315	(B,35,141)		CKSRYB102K50			C 532	(A,146,49) 4.7 uF(C)		CKSRYB102K50		
C 321	(B,69,131)	4.7 uF	CCG1212			C 533	(A,153,51) 4.7 uF(A,C)		CCG1212		
C 322	(B,55,134)	4.7 uF	CCG1212			C 534	(B,122,80) 10 uF(A,C)		DCH1201		
C 325	(B,78,131)		CKSRYB474K10			C 535	(A,144,51) (A)		CKSRYB102K50		
C 326	(B,80,131)		CKSRYB474K10			C 537	(A,144,53) 10 uF(A)		DCH1201		B
C 327	(B,83,131)		CKSRYB474K10			C 541	(A,147,55) 4.7 uF(A,C)		CCG1212		
C 328	(B,85,131)		CKSRYB474K10			C 542	(B,154,63) 4.7 uF(A)		CCG1212		
C 333	(A,63,135) 2.2 uF		CCG1205			C 543	(A,158,62) 4.7 uF(C)		CCG1212		
C 335	(B,62,136)		CKSRYB102K50			C 551	(A,145,63) 4.7 uF(C)		CCG1212		
C 337	(B,65,140)		CKSRYB103K50			C 552	(B,154,67) 4.7 uF(C)		CCG1212		
C 339	(B,89,142)		CKSRYB104K16			C 562	(A,19,98) (C)		CKSRYB105K16		
C 340	(A,129,122) 3300 uF/16 V		CCH2027			C 563	(A,24,94) (C)		CEVQW221M6R3		
C 341	(A,65,138) 10 uF/16 V		DCH1263			C 564	(A,9,84) (C)		CKSSYB102K50		
C 344	(B,66,136)		CKSRYB103K50			C 565	(A,10,82) (C)		CKSSYB682K25		
C 351	(A,52,130)		XCEVW220M16			C 566	(A,20,83) (C)		CKSSYB103K16		C
C 352	(B,64,131) 2.2 uF		CCG1205			C 568	(A,20,85) (C)		CKSRYB105K16		
C 375	(A,68,89) 4.7 uF		CCG1212			C 569	(A,24,86) 47 uF(C)		CCG1256		
C 376	(A,60,92)		CKSSYB103K16			C 571	(A,28,99) 10 uF(C)		DCH1201		
C 377	(A,60,94) 4.7 uF		CCG1212			C 572	(B,32,92) (C)		CKSRYB104K16		
C 378	(B,66,95)		CKSRYB104K16			C 601	(A,94,67)		CCSSCH100D50		
C 379	(A,81,93)		CKSSYB182K50			C 602	(A,94,63)		CCSSCH120J50		
C 380	(A,81,92)		CKSSYB182K50			C 604	(A,94,69)		CKSSYB104K10		
C 381	(B,61,89)		CKSRYB104K16			C 605	(B,100,65)		CKSRYB105K10		
C 391	(A,135,56) 4.7 uF		CCG1212			C 608	(B,114,63)		CKSRYB105K10		
C 393	(A,141,56)		CKSQYB474K16			C 610	(A,104,49)		CKSRYB104K50		
C 402	(A,156,83)		CKSSYB472K25			C 612	(B,121,46)		CKSRYB105K10		D
C 406	(A,153,85)		CKSSYB472K25			C 615	(B,98,64) 10 uF		DCH1201		
C 407	(A,149,91)		CKSSYB103K16			C 616	(A,104,81) (B)		CKSSYB104K10		
C 409	(A,148,92)		CKSSYB224K6R3			C 617	(A,98,79) (B)		CKSSYB104K10		
C 410	(A,148,102)		CCSSCH220J50			C 621	(A,98,54)		CCSSCH150J50		
C 411	(A,145,102)		CCSSCH331J50			C 622	(A,100,53)		CCSSCH150J50		
C 414	(A,139,96)		CKSSYB102K50			C 651	(B,70,57)		CKSRYB104K16		
C 420	(A,141,102)		CCSSCH471J50			C 652	(B,77,60)		CKSRYB104K16		
C 422	(A,138,91)		CKSSYB152K50			C 653	(B,87,56)		CKSRYB104K16		
C 423	(A,146,80)		CKSSYB104K10			C 654	(B,63,57)		CKSRYB104K16		
C 428	(A,142,92)		CKSSYB103K16			C 655	(B,68,61)		CKSRYB104K16		
C 430	(A,147,92)		CKSSYB102K50			C 656	(B,73,61)		CKSRYB104K16		E
C 431	(A,153,79) 4.7 uF		CCG1212			C 657	(B,79,56)		CKSRYB104K16		
C 434	(A,149,103)		CCSSCH100D50			C 659	(B,82,62)		CKSRYB104K16		
C 435	(A,154,111)		CCSSCJ3R0C50			C 660	(B,86,60)		CCSRCK2R0C50		
C 437	(A,154,112) (A,B,C,F)		CCSSCK2R0C50			C 661	(B,61,61)		CKSRYB104K16		
C 439	(B,139,87) (B,C,D,E,F)		CKSRYB103K50			C 662	(A,87,63)		CCSSCH120J50		
C 440	(B,151,87) (A)		CKSRYB103K50			C 663	(B,82,66)		CKSRYB104K16		
C 441	(A,128,92)		CKSSYB104K10			C 665	(B,60,65)		CKSRYB104K16		
C 442	(A,117,76)		CKSSYB105K6R3			C 666	(B,82,64)		CKSRYB104K16		
C 443	(A,150,89)		CCSSCH390J50			C 668	(B,60,68)		CKSRYB104K16		
C 445	(B,159,106) (A)		CKSRYB103K50			C 669	(A,87,68)		CCSSCH120J50		F
C 447	(A,159,106) (C)		CKSRYB102K50			C 670	(B,82,69)		CKSRYB104K16		
C 448	(A,158,96) 4.7 uF(A,C)		CCG1212			C 671	(B,61,71)		CKSRYB104K16		
	(A,158,96) (B,D,E,F)		CKSRYB102K50			C 672	(B,83,75)		CKSRYB104K16		

1

Circuit Symbol and No.

C 673 (B,83,77)
C 674 (B,66,79)
C 675 (B,72,74)
C 676 (B,77,78)
C 677 (B,64,79)

2

Part No.

CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16

3

Circuit Symbol and No.

C 908 (A,20,65)
C 909 (A,13,54)
C 910 (A,21,66) 10 uF/16 V
C 911 (A,20,78) 10 uF
C 913 (B,11,83) 4.7 uF

4

Part No.

CKSRYB105K16
XCEAT102M16
DCH1263
DCH1201
CCG1222

C 678 (B,71,78)
C 681 (B,86,74)
C 682 (A,39,85) 4.7 uF
C 683 (B,51,51)
C 685 (A,76,82)

CKSRYB104K16
CKSRYB102K50
CCG1212
CKSRYB224K16
CCSSCH120J50

C 921 (B,18,54)
C 922 (B,22,52)
C 931 (A,31,62) 10 uF
C 932 (A,33,54) 10 uF
C 941 (A,136,49)

CKSRYB104K16
CKSRYB103K50
DCH1201
DCH1201
CKSRYB104K16

C 686 (A,81,83)
C 688 (B,45,51) 4.7 uF
C 694 (A,89,56)
C 695 (B,85,71)
C 696 (A,65,80)

CCSSCH120J50
CCG1212
CKSRYB104K16
CKSRYB104K16
CCSSCH220J50

C 946 (A,147,45)
C 961 (B,105,127)
C 991 (B,118,139)

CKSRYB104K16
CKSRYB105K10
CKSRYB104K16

C 701 (B,54,70)
C 702 (B,53,70)
C 703 (B,48,70)
C 704 (B,44,71)
C 705 (B,35,72)

CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16

C 706 (B,50,64)
C 707 (B,46,64)
C 708 (B,33,81) 2.2 uF
C 711 (B,52,36)
C 712 (B,56,46)

CKSRYB104K16
CKSRYB104K16
CCG1205
CKSRYB104K16
CKSRYB104K16

C 721 (A,36,86) 10 uF
C 722 (A,33,86) 10 uF
C 731 (B,76,91)
C 741 (A,79,50)
C 752 (A,121,33)

DCH1201
DCH1201
CKSRYB104K16
CKSSYB104K10
CCSSCH220J50

C 753 (A,122,40)
C 754 (A,118,33)
C 755 (B,108,36)
C 758 (A,94,37)
C 760 (A,114,40)

CCSSCH100D50
CCSSCH220J50
CKSRYB103K50
CKSSYB102K50
CKSSYB221K50

C 770 (B,125,41)
C 771 (B,152,40) 10 uF
C 773 (A,155,44)
C 803 (A,104,20)
C 805 (B,101,13)

CKSRYB104K16
DCH1201
CKSSYB473K16
CKSRYB104K16
CKSRYB104K16

C 807 (B,99,10)
C 809 (B,118,47)
C 810 (B,83,35)
C 811 (B,101,18)
C 812 (A,96,20)

CKSRYB104K16
CKSRYB104K16
CKSRYB104K16
CKSRYB105K16
CKSRYB105K10

C 832 (A,115,30) 10 uF
C 833 (A,116,28)
C 834 (B,108,25) 4.7 uF
C 835 (A,111,23)
C 841 (A,105,28)

DCH1201
CKSRYB105K10
CCG1212
XCEVW101M16
CKSRYB104K16

C 881 (A,59,89)
C 882 (A,57,89)
C 891 (A,39,91)
C 892 (A,51,91)
C 901 (A,17,78)

CKSSYB104K10
CKSSYB104K10
CKSRYB104K16
CKSRYB104K16
CKSSYB102K50

C 902 (A,18,78)
C 903 (A,23,73)
C 904 (A,9,64)
C 905 (A,10,62)
C 906 (A,20,63)

CKSRYB105K16
CEVQW221M6R3
CKSSYB102K50
CKSSYB682K25
CKSSYB103K16

B**Unit Number : QWM3845****Unit Name : Keyboard Unit****MISCELLANEOUS**

IC 1621 (B,75,7) IC	PEB163A8 (* NSP)
IC 1701 (B,84,20) IC	PEQ410A8 (* NSP)
IC 1731 (A,63,6) IR RC Rec Module	PNJ4833M
IC 1742 (B,146,21) Driver IC	AN32182UA
D 1631 (A,152,18) LED	SMLVN6RGB2UK(B)
D 1632 (A,152,10) LED	SMLVN6RGB2UK(B)
D 1633 (A,8,18) LED	SMLVN6RGB2UK(B)
D 1634 (A,27,18) LED	SMLVN6RGB2UK(B)
D 1635 (A,161,20) LED	SMLVN6RGB2UK(B)
D 1701 (B,59,21) Rectifier Diode	DA2J101
D 1737 (A,63,24) LED	SMLVN6RGB2UK(B)
X 1701 (B,72,19) Ceramic Resonator 16.000 MHz	CSS1616
S 1611 (A,46,18) Encoder(MULTI-CONTROL)	CSD1193
S 1731 (A,154,40) Push Switch	CSG1155
S 1732 (A,15,19) Push Switch	CSG1155
S 1733 (A,7,6) Push Switch	CSG1155
S 1734 (A,31,8) Push Switch	CSG1155
S 1735 (A,6,40) Push Switch	CSG1155
S 1736 (A,59,18) Lever Switch	CSN1086
S 1737 (A,31,29) Push Switch	CSG1155
S 1738 (A,7,33) Push Switch	CSG1155
S 1739 (A,56,26) Lever Switch	CSN1085
CN1601 (B,108,8) Connector	CKS6451
CN1681 (B,110,28) Connector	CKS6647

RESISTORS

R 1601 (B,91,8)	RS1/10SR222J
R 1602 (B,91,10)	RS1/10SR0R0J
R 1611 (B,28,21)	RS1/16SS103J
R 1622 (B,70,5)	RS1/16SS473J
R 1623 (B,82,8)	RS1/16SS473J
R 1624 (B,88,8)	RS1/16SS473J
R 1681 (B,101,25)	RAB4CQ101J
R 1701 (B,67,18)	RS1/16SS154J
R 1702 (B,69,20)	RS1/16SS102J
R 1703 (B,59,22)	RS1/16SS154J
R 1704 (B,59,23)	RS1/16SS473J
R 1705 (B,72,22)	RS1/16SS103J
R 1706 (B,72,25)	RAB4CQ102J
R 1707 (B,98,19)	RS1/16SS103J

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 1708	(B,72,27)	RAB4CQ103J		R 216	(B,12,35)	RS1/16SS122J	
R 1709	(B,87,9)	RS1/16SS103J		R 217	(B,10,32)	RS1/16SS562J	
R 1710	(B,97,25)	RAB4CQ473J		R 218	(B,10,35)	RS1/16SS472J	A
R 1711	(B,99,21)	RS1/16SS103J		R 229	(B,12,34)	RS1/16SS471J	
R 1712	(B,98,21)	RS1/16SS103J		R 232	(A,31,54)	RS1/16SS0R0J	
R 1713	(A,82,12)	RAB4CQ102J		R 237	(B,33,45)	RS1/16SS221J	
R 1714	(A,78,12)	RAB4CQ0R0J		R 240	(B,34,40)	RS1/16SS473J	
R 1717	(A,76,24)	RS1/10SR222J		R 245	(A,34,46)	RS1/16SS104J	
R 1731	(B,58,5)	RS1/16SS470J		R 254	(A,37,56)	RS1/16SS104J	
R 1751	(A,143,27)	RS1/10SR3902D		R 260	(B,30,27)	RS1/16SS103J	
R 1752	(A,138,15)	RS1/10SR473J		R 264	(A,22,9)	RS1/16SS102J	
R 1755	(B,134,9)	RS1/10SR222J		R 281	(B,33,38)	RS1/16SS560J	
R 1756	(B,134,10)	RS1/10SR222J		R 282	(B,33,39)	RS1/16SS560J	
R 1758	(A,128,10)	RS1/10SR103J		R 291	(B,33,34)	RS1/16SS560J	B
R 1759	(A,128,11)	RS1/10SR103J		R 294	(B,27,48)	RS1/16SS471J	
R 1760	(B,140,28)	RS1/10SR0R0J		R 303	(A,27,11)	RS1/16SS123J	
CAPACITORS				R 304	(A,28,11)	RS1/16SS123J	
C 1601	(B,124,6) 4.7 uF	CCG1212		R 305	(A,26,9)	RS1/16SS102J	
C 1602	(B,119,17) 10 uF	DCH1201		R 306	(A,26,11)	RS1/16SS472J	
C 1621	(B,68,5)	CKSRYB104K16		R 307	(A,25,9)	RS1/16SS102J	
C 1681	(B,107,18) 2.2 uF	CCG1205		R 308	(A,25,11)	RS1/16SS472J	
C 1684	(B,117,23)	CKSQYB334K50		R 309	(A,35,6)	RS1/16SS473J	
C 1686	(B,114,21) 4.7 uF	CCG1212		R 310	(B,30,9)	RS1/16SS472J	
C 1687	(B,113,21) 4.7 uF	CCG1212		R 311	(B,30,10)	RS1/16SS472J	
C 1703	(B,67,19)	CKSSYB104K10		R 312	(B,30,11)	RS1/16SS472J	C
C 1704	(B,70,22)	CKSSYB103K16		R 313	(B,30,12)	RS1/16SS472J	
C 1705	(B,96,20)	CKSSYB103K16		R 701	(A,21,38)	RS1/16SS101J	
C 1731	(B,64,19) 10 uF	DCH1201		R 702	(A,23,38)	RS1/16SS101J	
C 1751	(B,159,25) 10 uF	DCH1201		R 706	(A,32,42)	RS1/16SS221J	
C 1752	(A,136,15)	CKSRYB105K16		CAPACITORS			
C 1758	(B,141,15) 10 uF	DCH1201		C 104	(B,12,57)	CKSQYB475K6R3	
C 1760	(B,140,25)	CKSRYB104K16		C 203	(B,22,47)	CKSSYB104K10	
C				C 209	(B,28,47)	CKSRYB104K16	
Unit Number : CWX4023				C 210	(B,33,43)	CKSSYB104K10	
Unit Name : CD Core Unit (S11.6STD)				C 211	(B,33,41)	CKSSYB104K10	D
MISCELLANEOUS				C 212	(B,22,28)	CKSSYB104K10	
IC 201	(B,23,37) IC	PE5791A		C 213	(B,18,26)	CKSSYB332K50	
IC 301	(A,37,11) IC	BD8223EFV		C 214	(B,17,26)	CKSSYB473K16	
Q 101	(B,11,53) Transistor	2SA1577		C 215	(B,19,28)	CKSSYB104K10	
Q 102	(B,15,54) Transistor	LTA123JUB		C 216	(B,12,33)	CKSSYB182K50	
X 201	(B,25,49) Ceramic Resonator 16.934 MHz	CSS1603		C 217	(B,10,34)	CCSSCH560J50	
S 901	(A,42,53) Spring Switch(HOME)	CSN1080		C 218	(B,10,36)	CCSSCH4R0C50	
S 903	(B,21,12) Spring Switch(DSCSNS)	CSN1081		C 219	(B,14,34)	CKSSYB104K10	
CN101	(A,16,58) Connector	CKS4808		C 220	(A,18,38)	CKSSYB104K10	
CN701	(A,25,29) Connector	CKS6146		C 221	(B,14,32)	CKSSYB104K10	E
RESISTORS				C 222	(B,13,37)	CKSSYB104K10	
R 101	(B,6,57)	RS1/10SR2R4J		C 223	(B,12,42)	CCSSCH680J50	
R 102	(B,8,57)	RS1/10SR2R4J		C 224	(B,13,45)	CCSSCH470J50	
R 103	(B,9,57)	RS1/10SR2R7J		C 225	(B,13,46)	CKSSYB103K16	
R 108	(B,18,55)	RS1/16SS105J		C 228	(B,10,33)	CCSSCH270J50	
R 109	(B,12,50)	RS1/16SS222J		C 229	(B,9,40)	CKSSYB104K10	
R 214	(B,18,28)	RS1/16SS103J		C 233	(B,32,46)	CKSSYB103K16	
R 215	(B,17,28)	RS1/16SS393J		C 236	(B,8,40)	CKSSYB104K10	
				C 238	(A,25,44)	CKSRYB104K16	
				C 299	(A,26,41)	CKSSYB104K10	
				C 302	(B,28,12)	CKSSYB102K50	F
				C 303	(B,29,12)	CKSSYB102K50	
				C 304	(B,27,12)	CKSSYB223K16	

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>		
	C 305 (B,26,12)	CKSSYB104K10		
	C 306 (A,31,7)	CKSSYB104K10		
A	C 307 (A,41,19)	CKSRYB105K10		
	C 308 (A,31,15)	CKSRYB105K10		
	C 710 (A,34,42)	CKSSYB102K50		

■

B

■

C

■

D

■

E

■

F