


9. EXPLODED VIEWS AND PARTS LIST

NOTES :

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

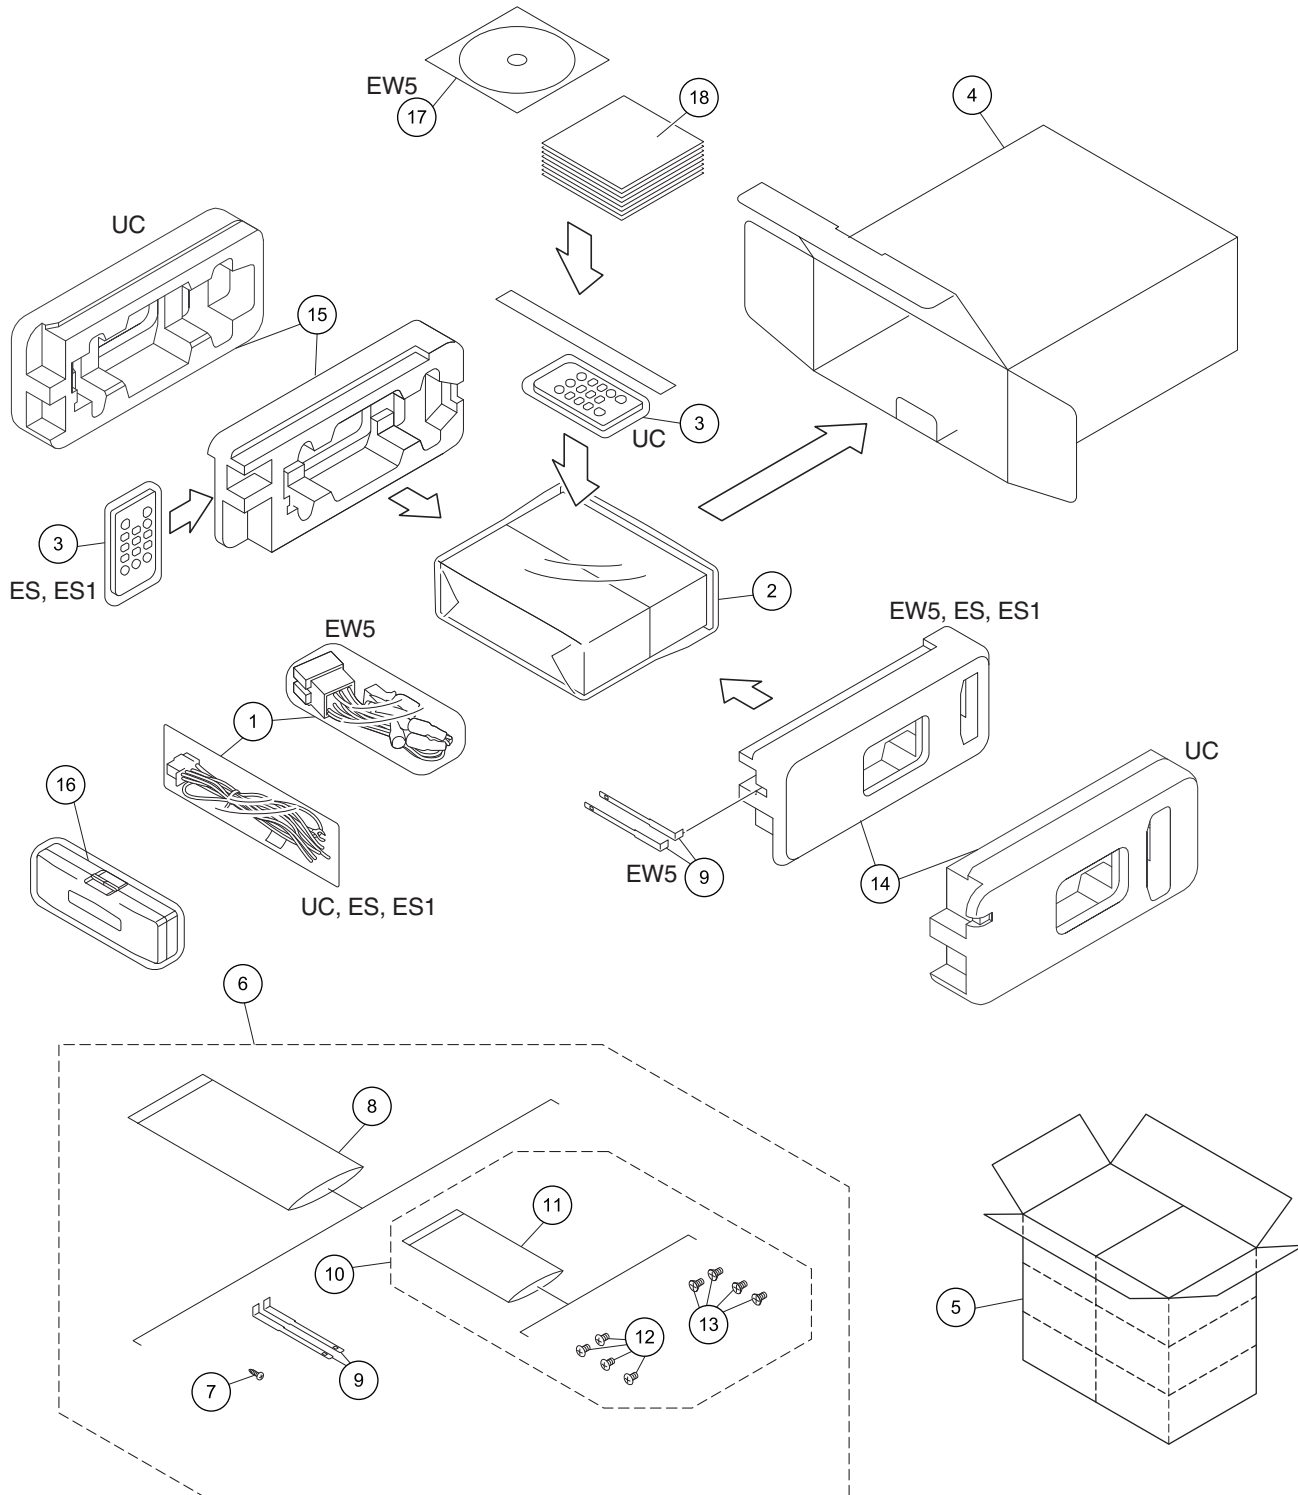

PACKING SECTION PARTS LIST

DEH-8300SD/XNEW5, DEH-P8300UB/XNUC, DEH-8350SD/XNES and DEH-8350SD/XNES1 are constructed the same except for the following:

Mark	No.	Description	DEH-8300SD /XNEW5	DEH-P8300UB /XNUC	DEH-8350SD /XNES	DEH-8350SD /XNES1
	1	Cord Assy	CDP1268	CDP1269	CDP1269	CDP1269
	2	Polyethylene Bag	QEG3001	CEG1173	QEG3001	QEG3001
	3	Remote Control Unit	Not used	CXE3669	CXE3669	CXE3669
	4	Unit Box	QHG3088	QHG3094	QHG3089	QHG3090
	5	Contain Box	QHL3088	QHL3094	QHL3089	QHL3090
	6	Accessory Assy	Not used	*YEA5071	YEA5084	YEA5084
	7	Screw	Not used	BPZ20P060FTC	Not used	Not used
	8	Polyethylene Bag	Not used	CEG1160	CEG1160	CEG1160
	9	Handle	CND3707	CND3707	CND3707	CND3707
	10	Screw Assy	Not used	YEA5072	YEA5082	YEA5082
*	11	Polyethylene Bag	Not used	CEG-127	CEG-127	CEG-127
	12	Screw	Not used	CRZ50P090FTC	Not used	Not used
	13	Screw	Not used	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
	14	Protector	YHP5069	YHP5071	YHP5069	YHP5069
	15	Protector	YHP5070	YHP5072	YHP5070	YHP5070
	16	Case Assy	YXB5009	Not used	YXB5009	YXB5009
	17	IM CD-ROM	QPJ3005	Not used	Not used	Not used
	18-1	Owner's Manual	Not used	QRD3075	QRD3074	QRD3074
	18-2	Installation Manual	QRD3068	Not used	Not used	Not used
	18-3	Quick Start Guide	QRD3078	Not used	Not used	Not used
*	18-4	Warranty Card	CRY1316	CRY1276	Not used	CRY1250
*	18-5	Caution Card	CRP1438	Not used	Not used	Not used
*	18-6	Caution Card	CRP1441	Not used	Not used	Not used
*	18-7	Passport	CRY1268	Not used	Not used	Not used
*	18-8	Service Network	Not used	Not used	Not used	CRY1251

Owner's Manual, Installation Manual

Part No.	Language
QRD3068	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3078	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3075	English, French, Spanish(Espanol)
QRD3074	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian


CONTENTS OF CD-ROM (Operation Manual), QPJ3005

Part No.	Language
* QRB3081	English
* QRB3082	French
* QRB3083	Italian
* QRB3084	Spanish(Espanol)
* QRB3085	German
* QRB3086	Dutch
* QRB3087	Russian
* QRB3088	Swedish
* QRB3089	Norwegian
* QRB3090	Finnish
* QRB3091	Danish
* QRB3092	Portuguese
* QRB3093	Greek
* QRB3094	Turkish

All operation manuals are supplied in PDF files by the CD-ROM.

Regarding the availability of paper manual, contact Pioneer Service representative in your region.

9.2 EXTERIOR (1)

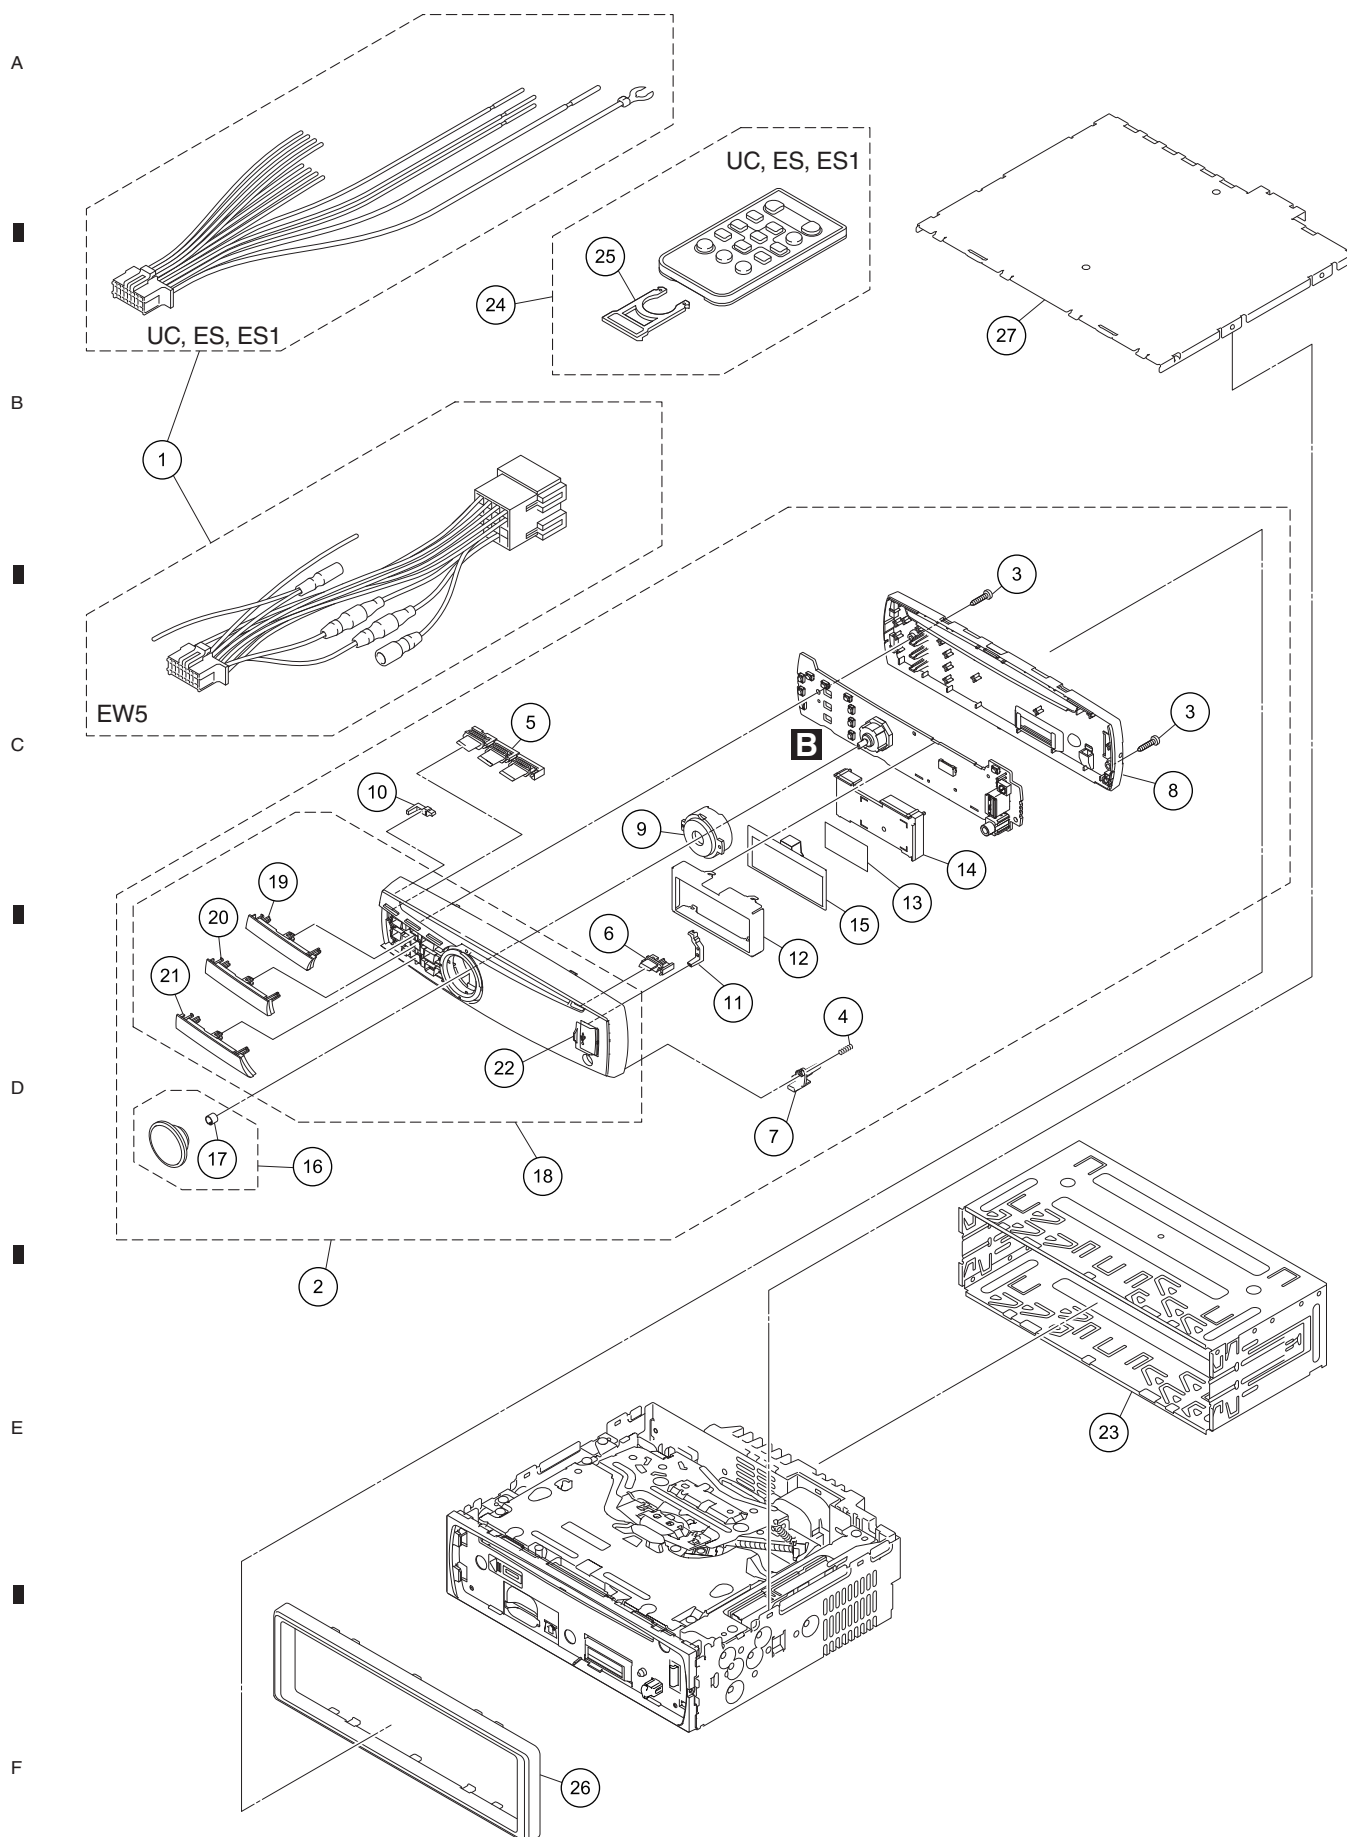

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	See Contrast table (2)	15	OEL Module	MXS4011
2	Detachable Assy	See Contrast table (2)			
3	Screw	BPZ20P100FTC	16	Knob Unit	QXA3289
4	Spring	CBH2210	17	Spring	XBL7005
5	Button	QAC3057	18	Grille Unit	See Contrast table (2)
			19	Button(SRC, BAND)	QAC3059
6	Button(EJECT)	QAC3058	20	Button(RPT, LIST)	QAC3060
7	Button(DETACH)	QAC3063			
8	Cover	QNS3168	21	Button(RDM, iPod)	QAC3061
9	Lighting Conductor	QNV3029	22	Door	QAT3003
10	Lighting Conductor	QNV3031	23	Holder	CND3598
			24	Remote Control Unit	See Contrast table (2)
11	Lighting Conductor	QNV3032	25	Cover	See Contrast table (2)
12	Holder	CND5436			
13	Double Side Tape	CNM8673	26	Panel	QNS3169
14	Holder	CNW1758	27	Case	YNB5063

(2) CONTRAST TABLE

DEH-8300SD/XNEW5, DEH-P8300UB/XNUC, DEH-8350SD/XNES and DEH-8350SD/XNES1 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>DEH-8300SD /XNEW5</u>	<u>DEH-P8300UB /XNUC</u>	<u>DEH-8350SD /XNES</u>	<u>DEH-8350SD /XNES1</u>
	1	Cord Assy	CDP1268	CDP1269	CDP1269	CDP1269
	2	Detachable Assy	QXA3317	QXA3323	QXA3319	QXA3319
	18	Grille Unit	QXA3309	QXA3313	QXA3310	QXA3310
	24	Remote Control Unit	Not used	CXE3669	CXE3669	CXE3669
	25	Cover	Not used	CNS7068	CNS7068	CNS7068

9.3 EXTERIOR (2)

A


B

C

D

E

F

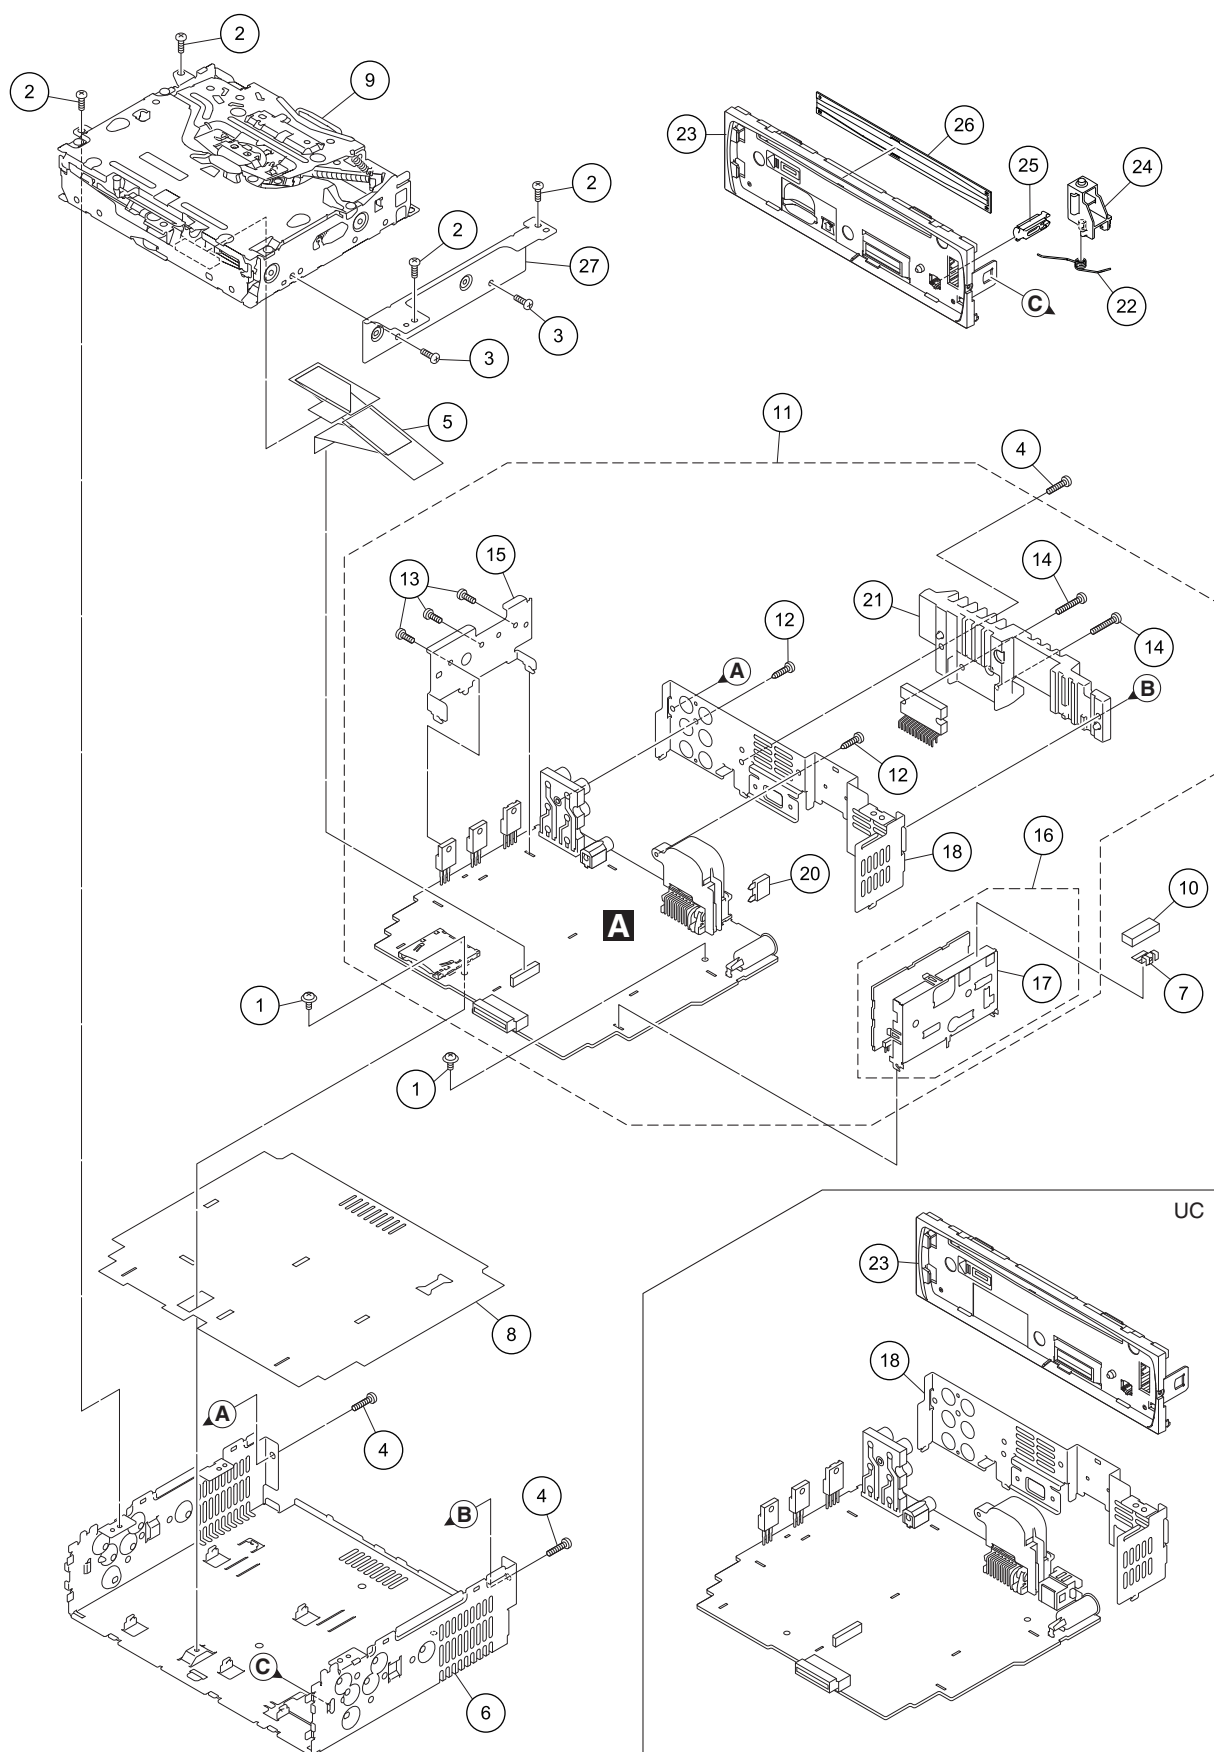


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	ASZ26P050FTC	15	Holder	CND5423
2	Screw	BSZ26P060FTC	16	FM/AM Tuner Unit(U401)	CWE2097
3	Screw	BSZ26P060FTC	17	Holder	CND4324
4	Screw	BSZ26P100FTC	18	Holder	See Contrast table (2)
5	Cable	CDE9106	19		
6	Chassis	See Contrast table (2)	 20	Fuse(10 A)	YEK5001
7	Earth Plate	CNC8915	21	Heat Sink	YNR5139
8	Insulator	CNN3145	22	Spring	QBH3001
9	CD Mechanism Module(S11)	CXK5800	23	Panel	See Contrast table (2)
10	Cushion	QNM3035	24	Arm	QNV3025
11	Tuner Amp Assy	See Contrast table (2)	25	Button	QNV3026
12	Screw	BPZ26P080FTC	26	Cover	YNN5030
13	Screw	BSZ26P060FTC	27	Holder	YND5048
14	Screw	See Contrast table (2)			

(2) CONTRAST TABLE

DEH-8300SD/XNEW5, DEH-P8300UB/XNUC, DEH-8350SD/XNES and DEH-8350SD/XNES1 are constructed the same except for the following:

Mark	No.	Description	DEH-8300SD /XNEW5	DEH-P8300UB /XNUC	DEH-8350SD /XNES	DEH-8350SD /XNES1
	6	Chassis	QNA3018	CNA3152	QNA3018	QNA3018
	11	Tuner Amp Assy	QWM3185	QWM3187	QWM3186	QWM3186
	14	Screw	BMZ26P160FCC	BSZ26P160FTC	BMZ26P160FCC	BMZ26P160FCC
	18	Holder	QNC3029	QNC3016	QNC3029	QNC3029
	23	Panel	QNS3166	QNS3167	QNS3166	QNS3166

9.4 CD MECHANISM MODULE

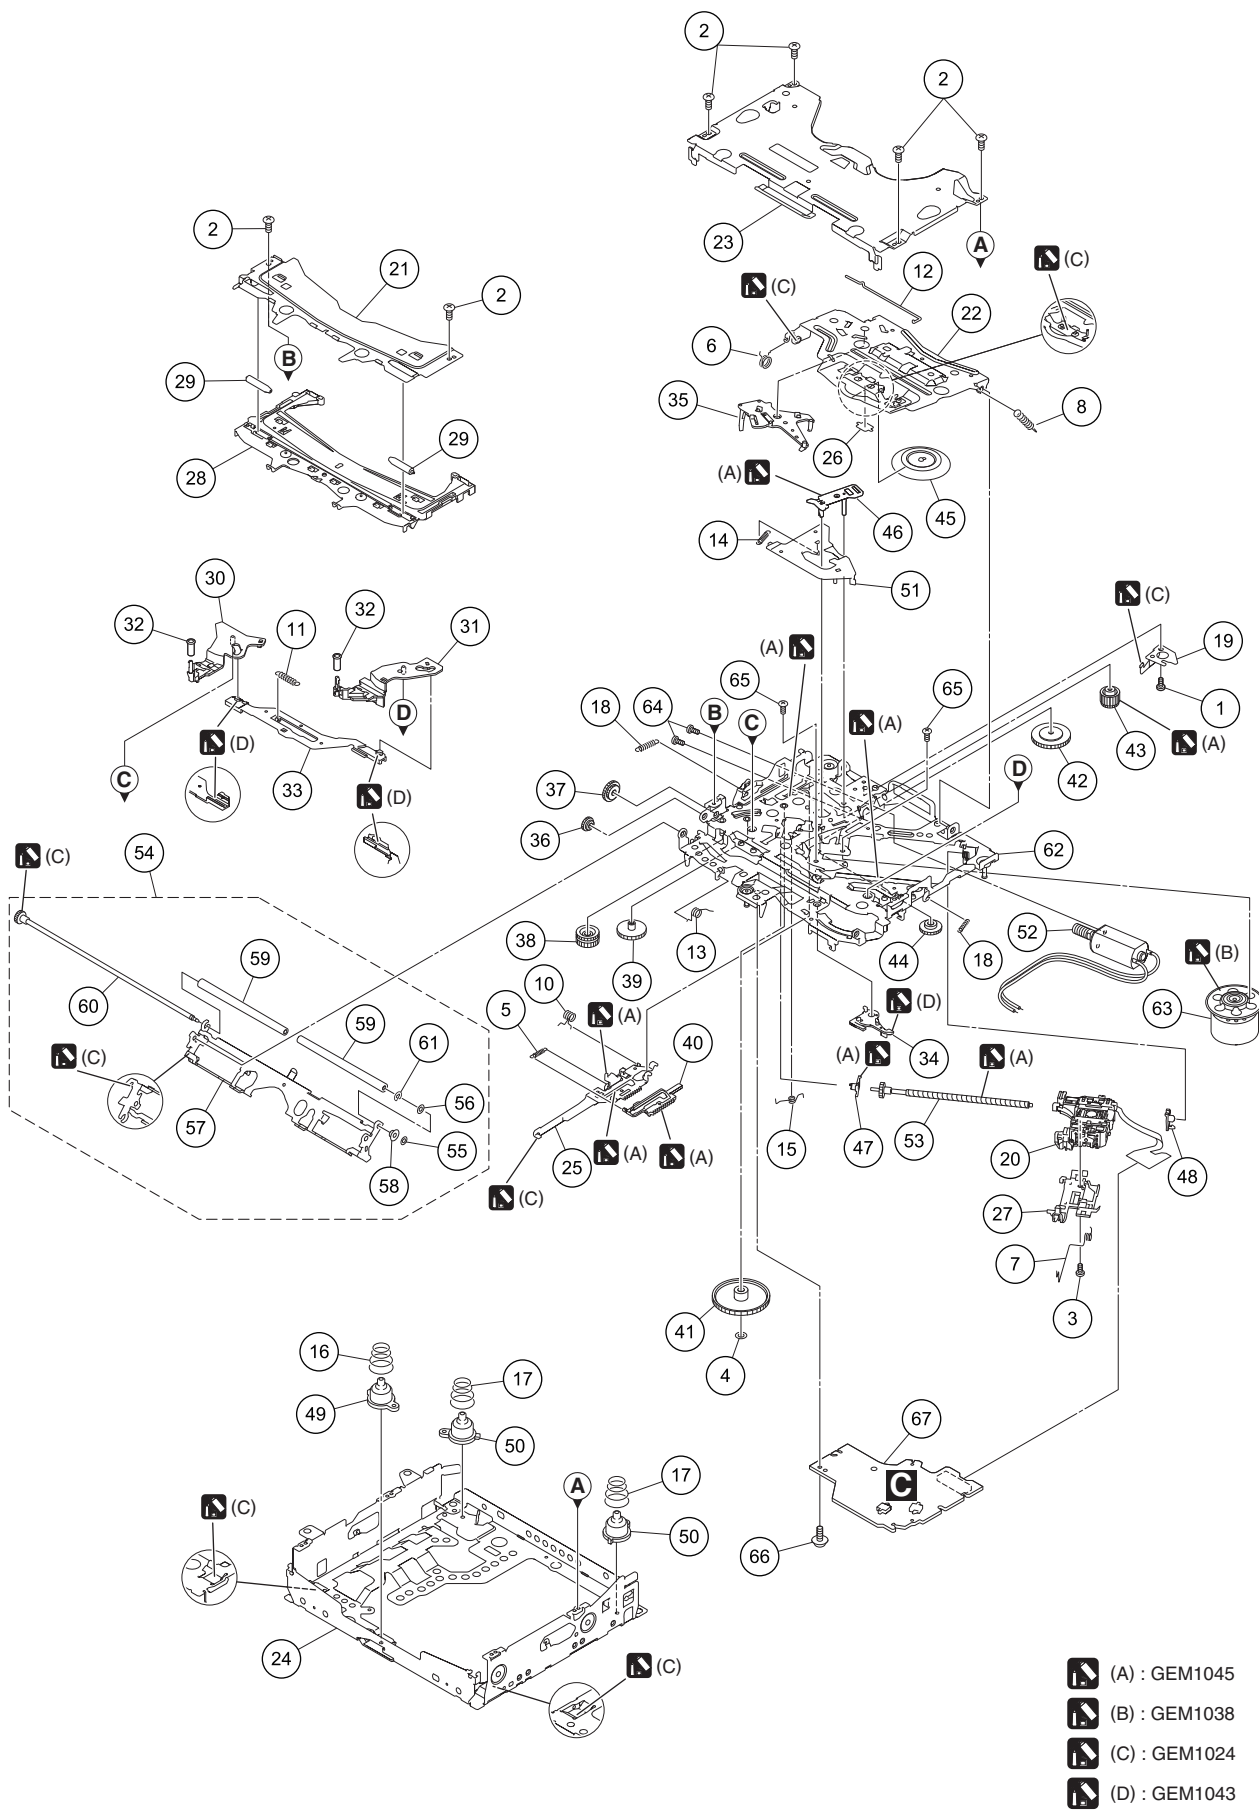

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	BMZ20P020FTC	50	Damper	CNW1198	
2	Screw	BSZ20P040FTC				
3	Screw(M2 x 4)	CBA1835	51	Arm	CNW1726	A
4	Washer	CBF1038	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
5	Spring	CBH3010	53	Screw Unit	CXC8894	
			54	Arm Assy	CXC8896	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9			57	Arm	CND4554	
10	Spring	CBH3011	58	Collar	CNV6906	
			59	Roller	CNW1196	
11	Spring	CBH3012	60	Gear Unit	CXC8893	B
12	Spring	CBH3014				
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE1946	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
			64	Screw	JFZ20P025FTC	
16	Spring	CBH3018	65	Screw	JGZ17P022FTC	
17	Spring	CBH3019				
18	Spring	CBH3020	66	Screw	IMS20P030FTC	
19	Spring	CBL1797	67	CD Core Unit (S11STD-DOUT)	CWX3774	
20	Pickup Unit(S10.5)(Service)	CXX1942				C
21	Bracket	CND4553				
22	Arm	CND4555				
23	Frame	CND4557				
24	Frame	CND5217				
25	Lever	CND5398				
26	Sheet	CNN2280				
27	Rack	CNV8342				
28	Guide	CNW1171				
29	Roller	CNW1172				
30	Arm	CNW1173				D
31	Arm	CNW1174				
32	Roller	CNW1175				
33	Lever	CNW1176				
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38	Gear	CNW1182				E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW1188				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J,RS1/○○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
A:DEH-8300SD/XNEW5			IC 591	(A,44,72) Regulator IC	S-1172B33-E6
B:DEH-P8300UB/XNUC			IC 592	(A,56,68) IC	BH12PB3WHFV
C:DEH-8350SD/XNES			IC 601	(A,127,93) IC(A)	PEG735A8
D:DEH-8350SD/XNES1				(A,127,93) IC(B)	PEG734A8
Unit Number : QWM3185(A)				(A,127,93) IC(C,D)	PEG736A8
: QWM3187(B)			IC 651	(A,116,105) IC	S-80827CNMC-B8M
: QWM3186(C,D)					
Unit Name : Tuner Amp Assy			IC 851	(A,27,34) IC	NJM2360AM
Unit Number :			IC 901	(A,24,79) IC	NJM2885DL1-33
Unit Name : Keyboard Unit			IC 911	(A,6,121) IC	NJM2388F84
Unit Number : CWX3774			Q 101	(A,134,114) Transistor(B)	LSA1576UB
Unit Name : CD Core Unit(\$11STD-DOUT)			Q 102	(A,138,114) Transistor(B)	LTC114EUB
			Q 241	(A,48,56) Chip Transistor	RN4983
			Q 242	(A,55,50) Transistor	LSC4081UB
			Q 301	(A,19,127) Transistor	RT3C99M
			Q 302	(A,29,128) Transistor	RT3C99M
			Q 303	(A,12,128) Transistor	RT3C99M
			Q 351	(A,69,126) Chip Transistor	RN4983
			Q 361	(A,53,133) Transistor	LTC114EUB
			Q 381	(A,60,130) Transistor	LSC4081UB
			Q 382	(A,47,128) Chip Transistor	RN4983
			Q 401	(A,154,81) Chip Transistor	RN1903
			Q 402	(A,154,86) Chip Transistor	RN1903
			Q 491	(A,75,38) Transistor	LSA1576UB
			Q 751	(A,6,93) Transistor	2SD2396
			Q 752	(A,13,99) Chip Transistor	RN4983
			Q 781	(A,65,58) Chip Transistor(A,C,D)	2SB1689
			Q 782	(A,65,55) Transistor(A,C,D)	LTC114EUB
			Q 783	(A,66,52) Transistor(A,C,D)	DTA123EU
			Q 821	(A,37,54) Transistor	2SD1767
			Q 822	(A,41,48) Chip Transistor	RN4983
			Q 823	(A,42,56) Transistor	LTC114EUB
			Q 841	(A,78,43) Transistor	LSA1576UB
			Q 842	(A,77,38) Transistor	LTC114EUB
			Q 851	(A,14,48) Transistor	2SD1760F5
			Q 852	(A,27,45) Chip Transistor	RN4983
			Q 901	(A,6,70) Transistor	2SD2396
			Q 902	(A,15,77) Chip Transistor	RN4983
			Q 921	(A,128,114) Transistor	RT3CLLM
			Q 931	(A,103,128) Transistor	LTC114EUB
			Q 951	(A,92,124) Transistor(A)	LSA1576UB
			D 161	(A,36,104) Diode	CRG03
			D 162	(A,38,104) Diode	CRG03

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
D 163	(A,37,93)	Diode	CMS02				Fuse(10 A)		YEK5001		
D 241	(A,50,51)	Diode	UDZS15(B)			RESISTORS					
D 381	(A,58,126)	Diode	RKZ8.2KG(B2)			R 101	(A,154,126) (B)		RS1/16SS620J		A
D 382	(A,64,133)	Diode	MC2848-11			R 103	(A,156,124) (B)		RS1/16SS101J		
D 383	(A,56,126)	Diode	1SS352			R 104	(A,152,124) (B)		RS1/16SS101J		
D 591	(A,32,73)	Diode	1SS352			R 105	(A,144,111) (B)		RS1/16SS102J		
D 592	(A,34,73)	Diode	CRG03			R 106	(A,141,118) (B)		RS1/16SS222J		
D 601	(A,120,80)	Diode	RB551V-30								
D 602	(A,122,104)	Diode	RB751S-40			R 107	(A,139,117) (B)		RS1/16SS223J		
D 751	(A,13,101)	Diode	RKZ8.2KG(B2)			R 108	(A,136,116) (B)		RS1/16SS472J		
D 801	(A,109,22)	Diode	DZ2S068C			R 109	(A,140,113) (B)		RS1/16SS181J		
D 802	(A,113,23)	Diode	DZ2S068C			R 110	(A,157,124) (B)		RS1/16SS181J		
D 803	(A,100,21)	Diode	DZ2S068C			R 111	(A,141,114) (B)		RS1/16SS223J		
D 821	(A,43,52)	Diode	RKZ11KG(B2)			R 112	(A,156,121) (B)		RS1/16SS223J		B
D 822	(A,43,53)	Diode	RKZ8.2KG(B2)			R 113	(A,142,114) (B)		RS1/16SS102J		
D 851	(A,23,29)	Diode	RB551V-30			R 114	(A,154,121) (B)		RS1/16SS102J		
D 852	(A,23,47)	Diode	RKZ10KG(B2)			R 151	(A,31,76)		RS1/16SS104J		
D 901	(A,18,78)	Diode	CRG03			R 161	(A,44,95)		RS1/16SS1003F		
D 902	(A,12,77)	Diode	UDZS5R6(B)			R 163	(A,47,93)		RS1/16SS303J		
D 921	(A,139,122)	Diode	HZU7L(C2)			R 165	(A,51,94)		RS1/16SS1003D		
D 922	(A,130,128)	Diode	HZU7L(A1)			R 166	(A,49,95)		RS1/16SS2402D		
D 931	(A,110,128)	Diode	CRG03			R 167	(A,50,94)		RS1/16SS102J		
D 941	(A,98,127)	Diode	CRG03			R 168	(A,54,93)		RS1/10SR471J		
D 942	(A,102,126)	Diode	CRG03			R 169	(A,49,93)		RS1/16SS121J		
D 951	(A,91,127)	Diode(A)	MC2848-11			R 181	(A,79,88)		RS1/10SR0R0J		C
D 981	(A,138,131)	Diode	CRG03			R 191	(A,81,90) (A,C,D)		RN1/16SSE8200D		
D 982	(A,138,128)	Diode	CRG03				(A,81,90) (B)		RS1/16SS821J		
L 161	(A,46,86)	Inductor	CTH1253			R 192	(A,81,94) (A,C,D)		RN1/16SSE8200D		
L 181	(A,93,87)	Inductor	CTF1735				(A,81,94) (B)		RS1/16SS821J		
L 401	(A,151,102)	Chip Coil	BTH1100			R 201	(A,69,121)		RAB4CQ102J		
L 402	(A,156,61)	Chip Coil	BTH1101			R 242	(A,47,52)		RS1/16SS182J		
L 403	(A,157,105)	Inductor	LCTAW220J2520			R 301	(A,9,128) (A,C,D)		RN1/16SSK82R0D		
L 501	(A,92,63)	Chip Ferrite Bead	DTL1107				(A,9,128) (B)		RS1/16SS820J		
L 502	(A,92,67)	Inductor	CTF1410			R 302	(A,15,126) (A,C,D)		RN1/16SSK82R0D		
L 581	(A,139,54)	Inductor	CTF1735				(A,15,126) (B)		RS1/16SS820J		D
L 601	(A,100,96)	Chip Coil	BTH1103			R 303	(A,26,126) (A,C,D)		RN1/16SSK82R0D		
L 801	(A,111,28)	Inductor	CTF1713				(A,26,126) (B)		RS1/16SS820J		
L 852	(A,18,36)	Inductor	CTF1660			R 304	(A,33,127) (A,C,D)		RN1/16SSK82R0D		
L 951	(A,96,128)	Chip Coil(A)	BTH1101				(A,33,127) (B)		RS1/16SS820J		
L 982	(A,115,140)	Choke Coil 600 uH	CTH1445			R 305	(A,17,127) (A,C,D)		RN1/16SSK82R0D		
X 501	(A,120,77)	Oscillator 48.000 MHz	CSS1760				(A,17,127) (B)		RS1/16SS820J		
X 502	(A,100,51)	Oscillator 16.93 MHz	CSS1794			R 306	(A,23,127) (A,C,D)		RN1/16SSK82R0D		
X 601	(A,111,94)	Oscillator 20.0 MHz	CSS1797				(A,23,127) (B)		RS1/16SS820J		
P 301	(A,41,114)	Poly Switch	MINISMDC075F/24			R 307	(A,9,129) (A,C,D)		RN1/16SSE2202D		
P 401	(A,162,116)	Surge Protector	IMSA-6802-01Y900				(A,9,129) (B)		RS1/16SS223J		
BZ601	(A,68,78)	Buzzer	CPV1062			R 308	(A,15,129) (A,C,D)		RN1/16SSE2202D		E
VA804	(A,131,20)	Varistor	VR105C5R0AAA				(A,15,129) (B)		RS1/16SS223J		
VA805	(A,103,28)	Varistor	VR105C5R0AAA			R 309	(A,26,130) (A,C,D)		RN1/16SSE2202D		
VA806	(A,133,20)	Varistor	VR105C5R0AAA				(A,26,130) (B)		RS1/16SS223J		
VA807	(A,134,20)	Varistor	VR105C5R0AAA			R 310	(A,33,129) (A,C,D)		RN1/16SSE2202D		
VA808	(A,129,20)	Varistor	VR105C5R0AAA				(A,33,129) (B)		RS1/16SS223J		
U 401	(A,163,105)	FM/AM Tuner Unit	CWE2097			R 311	(A,17,129) (A,C,D)		RN1/16SSE2202D		
CN701	(A,95,38)	Connector	VKN1192				(A,17,129) (B)		RS1/16SS223J		
CN781	(A,50,22)	Connector(A,C,D)	CKS6180			R 312	(A,22,129) (A,C,D)		RN1/16SSE2202D		
CN801	(A,113,3)	Connector	CKS6288				(A,22,129) (B)		RS1/16SS223J		
JA101	(A,150,136)	Connector(B)	CKS5271			R 317	(A,20,126)		RS1/16SS472J		F
JA301	(A,24,137)	Pin Jack	XKB7001			R 318	(A,19,126)		RS1/16SS472J		
JA401	(A,168,128)	Antenna Jack	YKS5041			R 319	(A,29,127)		RS1/16SS472J		
JA661	(A,47,138)	Connector	CKS4124			R 320	(A,28,127)		RS1/16SS472J		
JA981	(A,118,140)	Plug	CKM1586								

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 321	(A, 12, 126)	RS1/16SS472J	R 511	(A, 127, 75)	RS1/16SS473J
R 322	(A, 11, 126)	RS1/16SS472J	R 512	(A, 126, 75)	RS1/16SS473J
R 353	(A, 86, 126) (A, C, D)	RN1/16SSE3601D	R 515	(A, 119, 75)	RS1/16SS681J
R 354	(A, 86, 126) (B)	RS1/16SS362J	R 520	(A, 110, 79)	RS1/16SS473J
	(A, 87, 126) (A, C, D)	RN1/16SSE5601D	R 521	(A, 109, 77)	RS1/16SS101J
	(A, 87, 126) (B)	RS1/16SS562J	R 522	(A, 115, 75)	RS1/16SS5601F
R 355	(A, 85, 126) (A, C, D)	RN1/16SSE3601D	R 524	(A, 110, 74)	RS1/16SS473J
	(A, 85, 126) (B)	RS1/16SS362J	R 531	(A, 102, 67)	RS1/16SS473J
R 356	(A, 84, 126) (A, C, D)	RN1/16SSE5601D	R 532	(A, 102, 69)	RS1/16SS473J
	(A, 84, 126) (B)	RS1/16SS562J	R 533	(A, 103, 56) (A, C, D)	RS1/16SS221J
			R 536	(A, 99, 73)	RS1/16SS221J
R 357	(A, 80, 126) (A, C, D)	RN1/16SSE3601D	R 539	(A, 103, 54)	RS1/16SS332J
	(A, 80, 126) (B)	RS1/16SS362J	R 541	(A, 94, 50) (C, D)	RS1/16SS473J
R 358	(A, 81, 126) (A, C, D)	RN1/16SSE5601D	R 542	(A, 108, 45)	RS1/16SS221J
	(A, 81, 126) (B)	RS1/16SS562J	R 543	(A, 109, 44)	RS1/16SS101J
R 359	(A, 79, 126) (A, C, D)	RN1/16SSE3601D	R 544	(A, 110, 44)	RS1/16SS101J
	(A, 79, 126) (B)	RS1/16SS362J	R 545	(A, 111, 45)	RS1/16SS101J
R 360	(A, 78, 129) (A, C, D)	RN1/16SSE5601D			
	(A, 78, 129) (B)	RS1/16SS562J	R 550	(A, 130, 45)	RS1/16SS101J
R 361	(A, 47, 125)	RS1/16SS103J	R 551	(A, 133, 46)	RS1/16SS101J
			R 557	(A, 139, 47)	RS1/16SS0R0J
R 362	(A, 55, 133)	RS1/16SS103J	R 559	(A, 139, 48)	RS1/16SS472J
R 363	(A, 57, 134)	RS1/16SS331J	R 581	(A, 146, 62)	RS1/16SS101J
R 365	(A, 68, 130)	RS1/16SS103J			
R 366	(A, 69, 129)	RS1/16SS103J	R 582	(A, 139, 44)	RS1/16SS472J
R 381	(A, 55, 130)	RS1/16SS473J	R 583	(A, 139, 42)	RS1/16SS472J
			R 585	(A, 151, 37)	RAB4CQ221J
R 382	(A, 56, 130)	RS1/16SS104J	R 586	(A, 148, 37)	RAB4CQ221J
R 383	(A, 133, 82)	RS1/16SS473J	R 587	(A, 146, 37)	RAB4CQ221J
R 384	(A, 52, 131)	RS1/16SS473J			
R 385	(A, 49, 130)	RS1/16SS102J	R 588	(A, 143, 37)	RAB4CQ221J
R 401	(A, 156, 90)	RS1/16SS681J	R 601	(A, 77, 77)	RS1/16SS102J
			R 602	(A, 118, 101)	RS1/16SS472J
R 402	(A, 156, 91) (A, C, D)	RS1/16SS681J	R 603	(A, 116, 96)	RS1/16SS105J
R 403	(A, 156, 92)	RS1/16SS681J	R 604	(A, 117, 96)	RS1/16SS101J
R 404	(A, 156, 93)	RS1/16SS681J			
R 405	(A, 156, 94)	RS1/16SS681J	R 605	(A, 117, 93)	RS1/16SS104J
R 406	(A, 156, 95)	RS1/16SS681J	R 606	(A, 116, 85)	RS1/16SS222J
			R 607	(A, 116, 89)	RS1/16SS104J
R 407	(A, 156, 96)	RS1/16SS681J	R 609	(A, 116, 92)	RS1/16SS104J
R 408	(A, 156, 97)	RS1/16SS152J	R 610	(A, 116, 91)	RS1/16SS104J
R 409	(A, 150, 93)	RAB4CQ223J	R 611	(A, 116, 84) (B)	RS1/16SS472J
R 410	(A, 101, 106) (B, C, D)	RS1/16SS823J	R 612	(A, 119, 83) (B)	RS1/16SS472J
R 411	(A, 98, 105) (B, C, D)	RS1/16SS823J			
R 412	(A, 132, 103) (A, C, D)	RS1/16SS0R0J	R 613	(A, 123, 81)	RS1/16SS104J
R 451	(A, 83, 49) (A, B)	RS1/16SS0R0J	R 614	(A, 124, 81)	RS1/16SS104J
			R 615	(A, 119, 82)	RS1/16SS104J
R 454	(A, 80, 53) (A, B)	RS1/16SS101J	R 616	(A, 127, 82)	RS1/16SS104J
R 455	(A, 80, 54) (A, B)	RS1/16SS101J	R 617	(A, 128, 81)	RS1/16SS104J
R 456	(A, 103, 52) (A, B)	RS1/16SS101J			
R 457	(A, 94, 52) (A, B)	RS1/16SS101J	R 618	(A, 130, 82)	RS1/16SS104J
R 458	(A, 83, 47) (A, B)	RS1/16SS473J	R 619	(A, 126, 81)	RS1/16SS472J
			R 620	(A, 130, 81)	RS1/16SS104J
R 491	(A, 80, 38)	RS1/16SS473J	R 621	(A, 128, 82) (A)	RS1/16SS104J
R 492	(A, 75, 42)	RS1/16SS472J	R 623	(A, 138, 92)	RS1/16SS104J
R 493	(A, 88, 32)	RS1/16SS101J			
R 494	(A, 88, 33)	RS1/16SS101J	R 624	(A, 138, 97)	RS1/16SS104J
R 495	(A, 88, 31)	RS1/16SS103J	R 626	(A, 126, 103)	RS1/16SS103J
			R 629	(A, 108, 103)	RS1/16SS104J
R 496	(A, 88, 34)	RS1/16SS103J	R 643	(A, 141, 86)	RS1/16SS104J
R 499	(A, 76, 32)	RS1/16SS272J	R 651	(A, 111, 103)	RS1/16SS104J
R 500	(A, 77, 30)	RS1/16SS472J			
R 501	(A, 133, 75)	RS1/16SS473J	R 652	(A, 117, 103)	RS1/16SS152J
R 502	(A, 136, 74)	RS1/16SS101J	R 661	(A, 56, 136)	RS1/10SR102J
			R 662	(A, 56, 135)	RS1/10SR102J
R 503	(A, 134, 52)	RS1/16SS473J	R 701	(A, 91, 46)	RS1/16SS472J
R 504	(A, 135, 56)	RAB4CQ101J	R 702	(A, 91, 44)	RS1/16SS473J
R 506	(A, 131, 75)	RS1/16SS473J			
R 508	(A, 132, 75)	RS1/16SS473J	R 703	(A, 91, 42)	RS1/16SS472J

1

2

3

4

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 704	(A,91,41)	RS1/16SS472J		R 903	(A,12,73)	RS1/16SS223J	
R 705	(A,100,44)	RS1/16SS221J		R 911	(A,12,111)	RS1/16SS473J	
R 706	(A,100,43)	RS1/16SS221J		R 912	(A,14,110)	RS1/16SS102J	
R 707	(A,100,42)	RS1/16SS101J		R 921	(A,131,113)	RS1/16SS104J	A
				R 922	(A,131,115)	RS1/16SS103J	
R 708	(A,100,41)	RS1/16SS221J					
R 709	(A,100,40)	RS1/16SS101J		R 923	(A,132,114)	RS1/16SS473J	
R 710	(A,100,39)	RS1/16SS102J		R 924	(A,132,115)	RS1/16SS473J	
R 711	(A,100,35)	RS1/16SS151J		R 925	(A,127,127)	RS1/16SS472J	
R 712	(A,100,34)	RS1/16SS101J		R 926	(A,123,128)	RS1/4SA102J	
				R 931	(A,109,126)	RS1/16SS103J	
R 713	(A,100,33)	RS1/16SS151J					
R 714	(A,100,30)	RS1/16SS221J		R 932	(A,117,128)	RS1/4SA102J	
R 715	(A,102,36)	RS1/16SS104J		R 951	(A,93,115) (A)	RS1/16SS102J	
R 716	(A,100,31)	RS1/16SS104J		R 952	(A,89,124) (A)	RS1/16SS223J	
R 717	(A,100,37)	RS1/16SS104J		R 954	(A,91,129) (A)	RS1/16SS153J	
R 751	(A,14,95)	RS1/10SR471J		CAPACITORS			B
R 752	(A,12,95)	RS1/10SR471J					
R 753	(A,26,90)	RS1/16SS473J		C 101	(A,159,124) (B)	CKSSYB104K16	
R 754	(A,26,92)	RS1/16SS103J		C 151	(A,39,78)	CKSSYB104K10	
R 781	(A,59,39) (A,C,D)	RS1/16SS221J		C 152	(A,38,79)	CKSSYB104K10	
				C 161	(A,30,99) Capacitor	CEVW221M16	
R 782	(A,43,39) (A,C,D)	RS1/16SS221J		C 162	(A,37,96)	CKSRYB105K16	
R 783	(A,45,39) (A,C,D)	RS1/16SS221J		C 163	(A,45,95)	CKSSYB104K16	
R 785	(A,55,39) (A,C,D)	RS1/16SS221J					
R 786	(A,57,39) (A,C,D)	RS1/16SS221J		C 164	(A,48,95)	CKSSYB471K50	
R 787	(A,41,42) (A,C,D)	RS1/16SS221J		C 165	(A,47,95)	CKSSYB103K16	
				C 166	(A,57,87) 150 uF/6.3 V	CCH1804(P25)	
R 789	(A,67,58) (A,C,D)	RS1/16SS103J		C 167	(A,51,93)	CKSSYB471K50	C
R 790	(A,67,56) (A,C,D)	RS1/16SS681J		C 182	(A,101,89) 10 uF	CCG1192	
R 791	(A,62,51) (B)	RS1/16SS0R0J					
R 792	(A,60,49)	RAB4CQ103J		C 184	(A,95,87) 10 uF	CCG1192	
R 793	(A,63,49)	RAB4CQ103J		C 186	(A,92,88)	CKSSYB105K6R3	
R 794	(A,61,56) (A,C,D)	RS1/16SS102J		C 187	(A,76,87)	CKSSYB104K10	
				C 188	(A,70,87)	CKSSYB104K10	
R 801	(A,108,28)	RS1/10SR222J		C 191	(A,80,91)	CCSRCH182J50	
R 802	(A,129,15)	RS1/10SR222J					
R 803	(A,131,15)	RS1/10SR222J		C 192	(A,80,95)	CCSRCH182J50	
R 804	(A,138,20)	RS1/10SR222J		C 195	(A,77,88)	CKSSYB105K6R3	
R 805	(A,134,15)	RS1/10SR222J		C 201	(A,63,96)	CKSRYB105K10	
				C 202	(A,64,96)	CKSRYB105K10	
R 807	(A,103,24)	RS1/10SR101J		C 203	(A,66,96)	CKSRYB105K10	D
R 808	(A,96,26)	RS1/10SR101J					
R 809	(A,100,26)	RS1/10SR101J		C 204	(A,99,108) (B)	CKSRYB105K10	
R 811	(A,110,31)	RS1/10SR1R0J		C 205	(A,94,108) (B)	CKSRYB105K10	
R 812	(A,112,31)	RS1/10SR1R0J		C 206	(A,99,109) (B)	CKSRYB105K10	
				C 207	(A,94,110) (B)	CKSRYB105K10	
R 813	(A,138,87)	RS1/16SS104J					
R 814	(A,106,29)	RS1/16SS223J		C 208	(A,95,104)	CKSRYB224K16	
R 815	(A,138,21)	RS1/16SS104J		C 209	(A,95,106)	CKSRYB224K16	
R 816	(A,102,22)	RS1/16SS223J		C 210	(A,70,109)	CKSRYB105K10	
R 817	(A,99,25)	RS1/16SS223J		C 211	(A,68,109)	CKSRYB105K10	
				C 212	(A,86,115) 10 uF	CCG1192	
R 821	(A,40,58)	RS1/16SS222J					
R 822	(A,37,58)	RS1/16SS1R0J		C 213	(A,86,116) 10 uF	CCG1192	E
R 823	(A,34,51)	RS1/16SS182J		C 214	(A,86,118)	CKSSYB104K10	
R 842	(A,84,41)	RS1/16SS472J		C 215	(A,86,120) 10 uF	CCG1192	
R 843	(A,77,41)	RS1/16SS473J		C 216	(A,86,122)	CKSQYB225K16	
				C 217	(A,83,122)	CKSSYB104K16	
R 844	(A,79,41)	RS1/16SS102J					
R 852	(A,31,37)	RS1/16SS1502F		C 219	(A,70,114)	CKSRYB105K10	
R 854	(A,29,39)	RS1/16SS1301F		C 221	(A,84,110)	CKSRYB105K10	
R 855	(A,25,40)	RS1/10SR102J		C 225	(A,83,116)	CKSSYB104K10	
R 856	(A,26,41)	RS1/16SS1R0J		C 226	(A,88,95)	CEVW101M16	
				C 241	(A,55,55) Capacitor	CEVW470M25	
R 858	(A,22,44)	RS1/4SA181J					
R 862	(A,29,47)	RS1/16SS0R0J		C 243	(A,52,50)	CKSRYB224K16	F
R 863	(A,31,20)	RS1/10SR0R0J		C 301	(A,28,120) 10 uF	CCG1192	
R 901	(A,13,72)	RS1/16SS681J		C 302	(A,27,122) 10 uF	CCG1192	
R 902	(A,14,73)	RS1/16SS681J		C 303	(A,38,126) 10 uF	CCG1192	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 304	(A,39,123) 10 uF	CCG1192
C 305	(A,33,122) 10 uF	CCG1192
C 306	(A,33,124) 10 uF	CCG1192
C 313	(A,12,122)	CKSRYB102K50
C 351	(A,81,129)	CKSRYB105K10
C 352	(A,79,129)	CKSRYB105K10
C 353	(A,84,129)	CKSRYB105K10
C 354	(A,86,129)	CKSRYB105K10
C 355	(A,81,131)	CKSRYB105K10
C 356	(A,79,131)	CKSRYB105K10
C 357	(A,84,131)	CKSRYB105K10
C 358	(A,86,131)	CKSRYB105K10
C 361	(A,135,122) 3 300 uF/16 V(A,C,D) CCH2012	
	(A,135,122) 3 300 uF/16 V(B) CCH1732	
C 362	(A,63,139)	CKSSYB104K16
C 363	(A,75,132) 4.7 uF	CCG1201
C 364	(A,71,132) 4.7 uF	CCG1201
C 365	(A,74,130) 10 uF	CCG1236
C 367	(A,60,134) 10 uF	CCG1192
C 381	(A,52,126) Capacitor	CEVW220M16
C 401	(A,156,100)	CKSSYB103K16
C 402	(A,154,101) 10 uF	CCG1192
C 405	(A,155,67)	CKSSYB103K16
C 406	(A,153,66) 10 uF	CCG1192
C 407	(A,154,72)	CKSSYB103K16
C 409	(A,100,106) (B,C,D)	CKSSYB152K50
C 410	(A,97,105) (B,C,D)	CKSSYB152K50
C 431	(A,145,19)	CKSQYB475K6R3
C 432	(A,147,19)	CKSSYB103K16
C 433	(A,157,21) 4.7 uF	CCG1201
C 451	(A,78,48) (A,B)	CKSSYB104K10
C 491	(A,80,37)	CKSSYB104K10
C 492	(A,77,32)	CKSSYB104K10
C 501	(A,90,64) 10 uF	CCG1192
C 503	(A,95,64) 10 uF	CCG1192
C 504	(A,90,68) 10 uF	CCG1192
C 506	(A,95,68) 10 uF	CCG1192
C 507	(A,136,51)	CKSSYB104K10
C 508	(A,134,53)	CKSSYB104K10
C 509	(A,137,60)	CKSSYB104K10
C 510	(A,135,60)	CKSSYB104K10
C 511	(A,134,65)	CKSSYB104K10
C 512	(A,137,68)	CKSSYB104K10
C 513	(A,135,71)	CKSSYB104K10
C 514	(A,135,73)	CKSSYB104K10
C 515	(A,134,75)	CKSSYB103K16
C 516	(A,129,75)	CKSSYB104K10
C 517	(A,100,48)	CCSSCH120J50
C 518	(A,99,54)	CCSSCH120J50
C 519	(A,125,75)	CKSSYB104K10
C 520	(A,123,75)	CKSSYB104K10
C 521	(A,121,75)	CKSSYB104K10
C 522	(A,115,78)	CKSSYB104K10
C 523	(A,117,78)	CCSSCH120J50
C 524	(A,122,77)	CCSSCH100D50
C 525	(A,115,77)	CKSSYB104K10
C 526	(A,114,75)	CKSSYB104K10
C 527	(A,112,74)	CKSSYB104K10
C 528	(A,112,75)	CKSSYB104K10
C 529	(A,106,73)	CKSSYB104K10

C 530	(A,106,74)	CKSSYB104K10
C 531	(A,103,69)	CKSSYB104K10
C 532	(A,103,67)	CKSSYB104K10
C 533	(A,102,63)	CKSSYB104K10
C 534	(A,103,61)	CKSSYB104K10
C 535	(A,102,57)	CKSSYB104K10
C 536	(A,98,56)	CKSSYB104K10
C 537	(A,103,49)	CKSSYB104K10
C 538	(A,106,47)	CKSSYB104K10
C 539	(A,112,44)	CKSSYB104K10
C 540	(A,114,44)	CKSSYB104K10
C 541	(A,118,44)	CKSSYB104K10
C 542	(A,122,44)	CKSSYB104K10
C 543	(A,127,44)	CKSSYB104K10
C 544	(A,128,44)	CKSSYB104K10
C 545	(A,110,78)	CKSSYB105K6R3
C 546	(A,127,77)	CKSSYB102K50
C 547	(A,105,44)	CCSSCH220J50
C 548	(A,106,43)	CCSSCH220J50
C 549	(A,105,42)	CCSSCH220J50
C 550	(A,105,41)	CCSSCH220J50
C 581	(A,138,53) 10 uF	CCG1192
C 582	(A,139,52)	CKSSYB104K10
C 584	(A,147,62)	CKSSYB103K16
C 591	(A,36,72) 10 uF	CCG1192
C 593	(A,48,67) 10 uF	CCG1192
C 595	(A,52,67) 10 uF	CCG1192
C 598	(A,61,68) 10 uF	CCG1192
C 601	(A,100,98) 10 uF	CCG1192
C 603	(A,103,97)	CKSQYB475K6R3
C 604	(A,108,95)	CCSSCH120J50
C 605	(A,108,92)	CCSSCH100D50
C 606	(A,115,94)	CKSSYB104K10
C 608	(A,138,91)	CKSSYB104K10
C 610	(A,117,97)	CKSSYB104K10
C 641	(A,150,84) (A,C,D)	CKSRYB105K10
	(A,150,84) 2.2 uF(B)	CCG1205
C 651	(A,117,108)	CKSRYB105K10
C 689	(A,99,57) (A,C,D)	CCSSCH8R0D50
C 703	(A,100,32)	CCSSCH470J50
C 704	(A,101,32)	CCSSCH100D50
C 705	(A,101,36)	CCSSCH470J50
C 706	(A,103,36)	CKSSYB103K16
C 751	(A,24,91) 10 uF	CCG1192
C 754	(A,12,102)	CKSSYB473K16
C 802	(A,81,19)	CKSRYB103K50
C 803	(A,105,23)	CKSRYB221K50
C 804	(A,98,21)	CKSRYB221K50
C 821	(A,40,51)	CKSSYB104K16
C 822	(A,43,59)	CKSRYB105K16
C 852	(A,18,24) Capacitor	CEVW470M25
C 853	(A,31,36)	CKSSYB103K25
C 854	(A,28,29)	CCSRCH331J50
C 855	(A,27,39)	CKSSYB104K16
C 856	(A,33,43)	CEVW101M16
C 858	(A,23,49)	CKSSYB104K16
C 901	(A,17,64) 1 500 uF/16 V	CCH1201
C 902	(A,15,80)	CKSSYB103K16
C 904	(A,18,71) 10 uF	CCG1192
C 905	(A,23,71)	CKSQYB475K6R3

1

2

3

4

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 907	(A,27,71)	CKSQYB475K6R3		R 1844	(B,32,29)	RS1/10SR821J	
C 911	(A,30,109) Capacitor	CEVW221M10		R 1846	(B,32,24)	RS1/10SR681J	
C 913	(A,20,113)	CEVW101M16		R 1848	(B,32,16)	RS1/10SR102J	A
C 921	(A,127,128)	CKSSYB104K16		R 1850	(B,32,12)	RS1/10SR821J	
C 931	(A,106,128)	CKSRYB105K16		R 1852	(B,41,12)	RS1/10SR391J	
C 941	(A,100,130)	CKSSYB473K16		R 1854	(B,36,29)	RS1/10SR391J	
C 951	(A,94,128) (A)	CKSSYB104K16		R 1856	(B,144,34)	RS1/10SR122J	
				R 1861	(B,142,29)	RS1/10SR121J	
				R 1863	(B,125,29)	RS1/10SR2R2J	
				R 1871	(A,102,9)	RS1/10SR104J	
				R 1872	(A,107,16)	RS1/10SR472J	
				R 1873	(A,107,19)	RS1/10SR473J	
				R 1874	(A,105,21)	RS1/10SR103J	
				R 1875	(B,127,27)	RS1/10SR102J	B
				R 1876	(B,128,28)	RS1/10SR102J	
				R 1877	(B,122,29)	RS1/10SR102J	
				R 1879	(A,132,9)	RS1/10SR154J	
				R 1880	(B,132,26)	RAB4C473J	
				R 1881	(B,111,26)	RS1/10SR103J	
				R 1882	(A,103,28)	RS1/10SR222J	
				R 1883	(A,105,29)	RS1/10SR222J	
				R 1884	(B,111,28)	RS1/10SR473J	
				R 1885	(B,111,27)	RS1/10SR473J	
				R 1886	(A,130,19)	RS1/10SR473J	
				R 1887	(A,135,25)	RAB4C473J	C
				R 1888	(A,74,30)	RS1/10SR473J	
				R 1889	(B,89,12)	RS1/10SR101J	
				R 1891	(B,73,29)	RS1/10SR101J	
				R 1892	(A,84,29)	RS1/10SR101J	
				R 1893	(B,93,13)	RS1/10SR101J	
				R 1894	(A,76,29)	RS1/10SR101J	
				R 1895	(A,78,26)	RAB4C101J	
				R 1896	(A,82,23)	RAB4C101J	
				R 1897	(A,79,17)	RAB4C101J	
				R 1898	(A,79,13)	RAB4C101J	
				R 1899	(B,91,13)	RS1/10SR101J	D
				R 1900	(A,79,10)	RAB4C101J	
				R 1908	(B,90,25)	RAB4C101J	
				R 1909	(B,89,19)	RAB4C101J	
				R 1910	(A,47,14)	RS1/10SR221J	
				R 1911	(A,48,10)	RS1/10SR102J	
				R 1912	(A,48,8)	RS1/10SR102J	
				R 1913	(A,48,6)	RS1/10SR102J	
				R 1914	(A,136,10)	RS1/10SR102J	
				R 1915	(A,120,29)	RS1/10SR101J	
				R 1916	(A,84,10)	RAB4C101J	E
				R 1929	(A,118,16)	RAB4C101J	
				R 1930	(A,122,17)	RS1/10SR101J	

B

Unit Number :

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1861	(A,160,37) Remote IC	GP1UXC14RK	
IC 1871	(A,94,19) IC	PEG738A8	
IC 1872	(B,81,19) IC	PD8194A9	
D 1841	(A,11,33) LED	CL-197HB1-D(CDE)	
D 1842	(A,28,32) LED	CL-197HB1-D(CDE)	
D 1843	(A,12,25) LED	CL-197HB1-D(CDE)	
D 1844	(A,36,24) LED	CL-197HB1-D(CDE)	
D 1845	(A,13,18) LED	CL-197HB1-D(CDE)	
D 1846	(A,37,17) LED	CL-197HB1-D(CDE)	
D 1847	(A,13,9) LED	CL-197HB1-D(CDE)	
D 1848	(A,38,9) LED	CL-197HB1-D(CDE)	
D 1849	(A,66,31) LED	CL-197HB1-D(CDE)	
D 1850	(A,61,8) LED	CL-197HB1-D(CDE)	
D 1851	(A,45,32) LED	CL-197HB1-D(CDE)	
D 1852	(A,145,40) LED	CL-197HB1-D(CDE)	
D 1853	(A,158,25) LED	CL-197HB1-D(CDE)	
D 1871	(A,132,11) Diode	1SS355	
L 1821	(B,117,27) Inductor	CTF1617	
X 1871	(A,105,18) Ceramic Resonator 16.000 MHz	CSS1616	
S 1821	(A,64,20) Switch(MULTI-CONTROL)	CSX1120	
S 1841	(A,7,18) Push Switch	CSG1155	
S 1842	(A,8,10) Push Switch	CSG1155	
S 1843	(A,7,27) Push Switch	CSG1155	
S 1844	(A,43,17) Push Switch	CSG1155	
S 1845	(A,43,9) Push Switch	CSG1155	
S 1846	(A,43,25) Push Switch	CSG1155	
S 1847	(A,24,31) Push Switch	CSG1155	
S 1848	(A,40,31) Push Switch	CSG1155	
S 1849	(A,13,31) Push Switch	CSG1155	
S 1850	(A,149,40) Push Switch	CSG1155	
CN1801	(B,108,9) Connector	CKS6287	
CN1811	(A,155,25) Connector	YKS5039	
CN1921	(A,113,23) Connector	CKS6320	
JA1806	(A,154,10) Jack	YKN5006	
	OEL Module	MXS4011	

RESISTORS

R 1821	(B,37,19)	RS1/10SR102J	
R 1822	(B,39,19)	RS1/10SR103J	
R 1823	(B,40,21)	RS1/10SR333J	
R 1824	(B,45,21)	RS1/10SR103J	
R 1825	(B,49,23)	RS1/10SR332J	
R 1826	(B,53,12)	RS1/10SR102J	
R 1828	(B,58,8)	RS1/10SR103J	
R 1829	(B,49,24)	RS1/10SR222J	
R 1842	(A,162,27)	RS1/10SR222J	

CAPACITORS

C 1806	(B,139,15)	CKSRYB472K50	
C 1807	(B,138,12)	CKSRYB472K50	
C 1808	(B,139,7)	CKSRYB104K50	
C 1861	(B,148,33) 10 uF	CCG1192	
C 1872	(A,108,19)	CKSRYB105K16	
C 1873	(A,132,12)	CKSRYB104K16	F
C 1874	(A,83,20)	CKSRYB105K16	
C 1875	(B,79,6)	CKSRYB103K50	
C 1924	(A,111,16)	CKSQYB105K25	

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
	C 1925 (A,111,14)	CKSQYB105K25	R 701 (B,37,21)	RS1/16SS101J
	C 1926 (A,114,14)	CKSRYB105K16	R 702 (B,38,20)	RS1/16SS101J
A	C 1927 (A,115,11)	CKSRYB104K16	R 706 (B,43,11)	RS1/16SS221J
			R 708 (A,40,22)	RS1/16SS0R0J
			R 709 (A,40,21)	RS1/16SS0R0J
			R 722 (B,37,22)	RS1/16SS0R0J

C

Unit Number : CWX3774

Unit Name : CD Core Unit(S11STD-DOUT)

MISCELLANEOUS

	IC 201 (A,28,33)	IC	PE5706A
	IC 301 (A,64,27)	IC	BA5839FP
B	Q 101 (B,8,56)	Transistor	2SA1577
	Q 102 (B,21,51)	Digital TR(PNP)	UNR511MG
	X 201 (A,15,27)	Ceramic Resonator	16.934 MHz CSS1603
	S 901 (A,42,53)	Switch(HOME)	CSN1067
	S 903 (B,21,12)	Switch(DSCSNS)	CSN1068
	S 905 (B,11,25)	Switch(8EJ)	CSN1068
	CN101 (A,16,58)	Connector	CKS4808
	CN701 (A,37,10)	Connector	CKS6146

RESISTORS

C	R 101 (B,6,59)	RS1/10SR2R4J
	R 102 (B,7,59)	RS1/10SR2R4J
	R 103 (B,8,59)	RS1/10SR2R7J
	R 108 (B,19,53)	RS1/16SS105J
	R 109 (B,11,52)	RS1/16SS222J
	R 214 (A,38,41)	RS1/16SS103J
	R 215 (A,38,40)	RS1/16SS393J
	R 216 (A,30,44)	RS1/16SS122J
	R 217 (A,33,46)	RS1/16SS562J
	R 218 (A,30,46)	RS1/16SS472J
	R 225 (A,33,23)	RS1/16SS0R0J
	R 229 (A,31,44)	RS1/16SS471J
D	R 232 (A,19,21)	RS1/16SS0R0J
	R 235 (A,45,32)	RS1/16SS103J
	R 236 (A,46,32)	RS1/16SS103J
	R 237 (B,24,25)	RS1/16SS221J
	R 240 (B,26,30)	RS1/16SS473J
	R 245 (B,28,30)	RS1/16SS104J
	R 253 (B,27,30)	RS1/16SS104J
	R 254 (B,29,30)	RS1/16SS104J
	R 260 (B,41,21)	RS1/16SS103J
	R 262 (A,44,32)	RS1/16SS472J
	R 263 (A,47,32)	RS1/16SS472J
E	R 264 (A,44,25)	RS1/16SS102J
	R 281 (A,31,22)	RS1/16SS560J
	R 282 (A,30,22)	RS1/16SS560J
	R 283 (B,32,18)	RS1/16SS0R0J
	R 291 (B,31,17)	RS1/16SS560J
	R 292 (B,32,16)	RS1/16SS0R0J
	R 293 (B,32,11)	RS1/16SS0R0J
	R 294 (A,18,28)	RS1/16SS471J
	R 296 (B,32,30)	RS1/16SS0R0J
	R 299 (B,31,13)	RS1/16SS0R0J
F	R 305 (A,60,34)	RS1/16SS183J
	R 306 (A,61,37)	RS1/16SS183J
	R 307 (A,58,34)	RS1/16SS183J
	R 308 (A,58,36)	RS1/16SS183J

CAPACITORS

	C 104 (B,11,55)	CKSQYB475K6R3
	C 203 (A,18,35)	CKSSYB104K10
	C 209 (A,17,28)	CKSRYB104K16
	C 210 (A,21,21)	CKSSYB104K10
	C 211 (A,24,23)	CKSSYB104K10
	C 212 (A,38,33)	CKSSYB104K10
	C 213 (A,40,41)	CKSSYB332K50
	C 214 (A,40,40)	CKSSYB473K10
	C 215 (A,38,37)	CKSSYB104K10
	C 216 (A,36,46)	CKSSYB182K50
	C 217 (A,31,46)	CCSSCH560J50
	C 218 (A,29,46)	CCSSCH4R0C50
	C 219 (A,32,43)	CKSSYB104K10
	C 220 (B,32,41)	CKSSYB104K10
	C 221 (A,35,43)	CKSSYB104K10
	C 222 (A,29,43)	CKSSYB104K10
	C 223 (A,25,44)	CCSSCH680J50
	C 224 (A,23,44)	CCSSCH470J50
	C 225 (A,20,43)	CKSSYB103K16
	C 228 (A,32,46)	CCSSCH270J50
	C 229 (B,28,40)	CKSSYB104K10
	C 231 (B,44,28)	CKSSYB102K50
	C 232 (B,45,28)	CKSSYB102K50
	C 233 (B,25,25)	CKSSYB103K16
	C 236 (B,26,41)	CKSSYB104K10
	C 238 (A,15,35)	CKSRYB104K16
	C 299 (A,17,33)	CKSSYB104K10
	C 304 (A,60,35)	CKSSYB472K25
	C 305 (A,58,35)	CKSSYB223K16
	C 306 (A,68,20)	CKSRYB105K10
	C 710 (B,43,10)	CKSSYB102K50

Miscellaneous Parts List

M 1	Motor Unit(SPDL)	CXE2273
M 2	Motor Unit(LOAD/CRG)	CXC4026
	Pickup Unit(S10.5)(Service)	CXX1942