


2. EXPLODED VIEWS AND PARTS LIST

NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

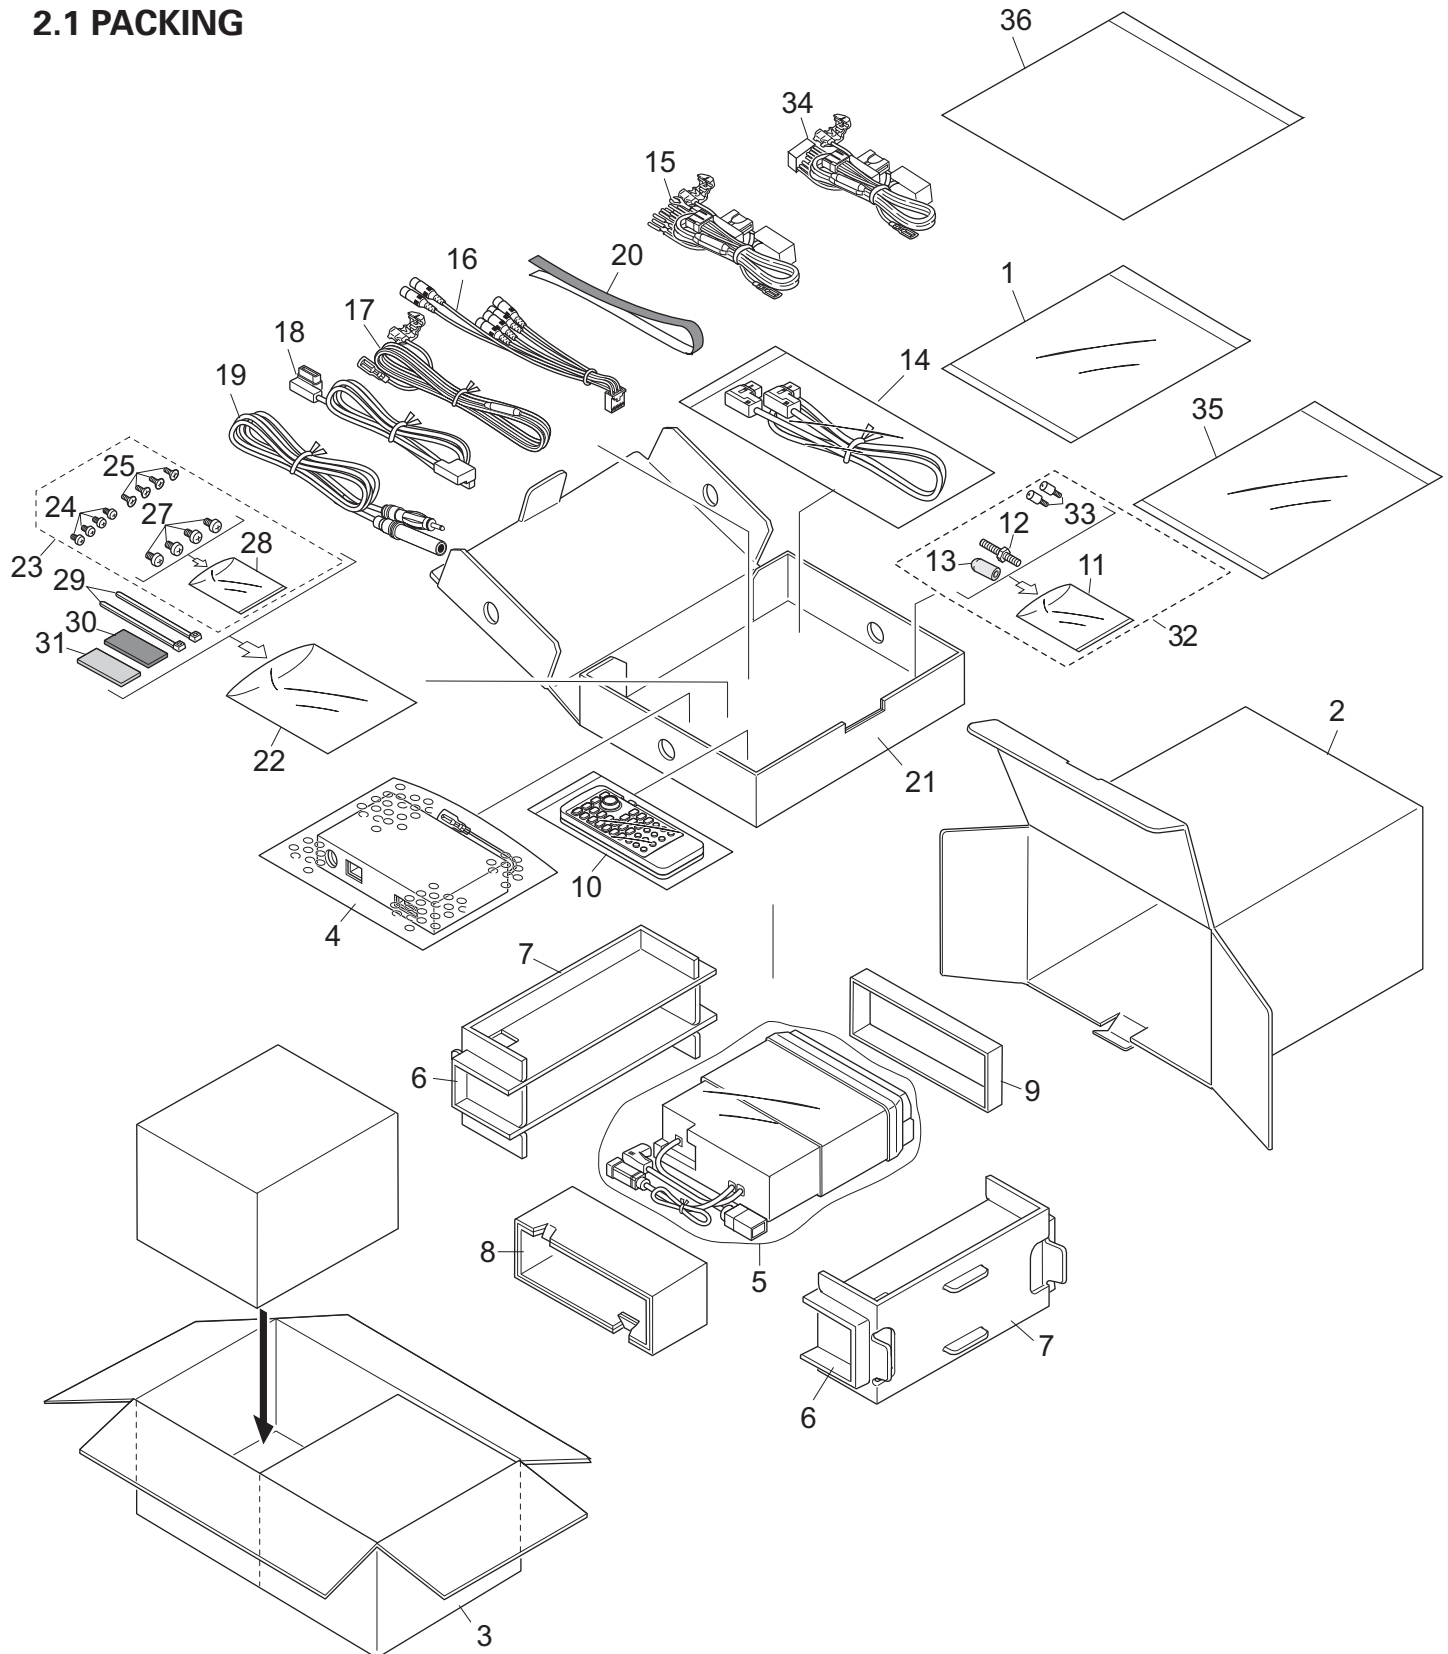

● PACKING SECTION PARTS LIST

MarkNo.	Description	Part No.			
		P6500DVD/UC	P6500DVD/EW	P6550DVD/RC	P6550DVD/RD
*	1-1 Polyethylene Bag	CEG1116	CEG1116	CEG1116	CEG1116
	1-2 Owner's Manual	CRB1836	CRB1830	CRB1838	CRB1838
*	1-3 Owner's Manual	CRB1837	CRB1831	CRB1839	CRB1840
	1-4 Installation Manual	CRD3782	CRD3781	CRD3783	CRD3784
*	1-5 Card	ARY1048	Not used	Not used	Not used
	2 Carton	CHG5077	CHG5076	CHG5078	CHG5079
	3 Contain Box	CHL5077	CHL5076	CHL5078	CHL5079
	4 Air Cushioned Bag	CEG1089	CEG1089	CEG1089	CEG1089
	5 Polyethylene Bag	CEG1173	CEG-162	CEG-162	CEG-162
	6 Protector	CHP2707	CHP2707	CHP2707	CHP2707
	7 Protector	CHP2706	CHP2706	CHP2706	CHP2706
	8 Protector	CHP2387	CHP2387	CHP2387	CHP2387
	9 Protector	CHP2708	CHP2708	CHP2708	CHP2708
	10 Remote Control Unit	CXC1224	CXC1226	CXC1226	CXC1226
*	11 Polyethylene Bag	E36-615	E36-615	E36-615	E36-615
	12 Screw	CBA1650	CBA1650	CBA1650	CBA1650
	13 Bush	CNV1917	CNV1917	CNV1917	CNV1917
	14 Cord Assy	CDE7168	CDE7168	CDE7168	CDE7168
	15 Cord Assy	CDE7193	Not used	CDE7193	CDE7193
	16 Cord Assy	CDE7194	CDE7194	CDE7194	CDE7194
	17 Cord Assy	CDE7321	CDE7321	CDE7321	CDE7321
	18 Cord Assy	CDE7187	CDE7187	CDE7187	CDE7187
	19 Antenna Cable	CDH1281	CDH1281	CDH1281	CDH1281
	20 Sheet	CNM7244	CNM7244	CNM7244	CNM7244
	21 Sub Craton	CHG5080	CHG5080	CHG5080	CHG5080
*	22 Polyethylene Bag	CEG-158	CEG-158	CEG-158	CEG-158
	23 Screw Assy	CEA3686	CEA3686	CEA3686	CEA3686
	24 Screw	CBA1468	CBA1468	CBA1468	CBA1468
	25 Screw	CMZ50P060FTC	CMZ50P060FTC	CMZ50P060FTC	CMZ50P060FTC
*	27 Screw	BMZ50P060FTC	BMZ50P060FTC	BMZ50P060FTC	BMZ50P060FTC
	28 Polyethylene Sheet	CNM4338	CNM4338	CNM4338	CNM4338
*	29 Lock Tie	Not used	CNV-754	CNV-754	CNV-754
	30 Fastener	CNM6544	CNM6544	CNM6544	CNM6544
*	31 Fastener	CNM6545	CNM6545	CNM6545	CNM6545
	32 Accessory Assy	CEA3685	CEA3685	CEA3743	CEA3743
	33 Fixing Screw	JGZ20P070FMC	JGZ20P070FMC	Not used	Not used
	34 Cord Assy	Not used	CDE7192	Not used	Not used
*	35-1 Polyethylene Bag	Not used	CEG1116	Not used	Not used
	35-2 Owner's Manual	Not used	CRB1832	Not used	Not used
	35-3 Owner's Manual	Not used	CRB1833	Not used	Not used
	35-4 Owner's Manual	Not used	CRB1834	Not used	Not used
	35-5 Owner's Manual	Not used	CRB1835	Not used	Not used
	35-6 Passport	Not used	CRY1013	Not used	Not used
*	35-7 Warranty Card	Not used	CRY1157	Not used	Not used
	35-8 Caution Card	CRP1298	CRP1298	Not used	Not used
*	36 Cleaning Cloth Assy	CEA3952	CEA3952	CEA3952	CEA3952

● Owner's Manual, Installation Manual

Part No.	Language
CRB1836	English
CRB1837	French
CRD3782	English,French
CRB1830	English
CRB1831	Spanish
CRB1832	German
CRB1833	French
CRB1834	Italian

Part No.	Language
CRB1835	Dutch
CRD3781	English,Spanish,German, French,Italian,Dutch
CRB1838	English
CRB1839	Traditional chinese
CRB1840	Spanish
CRD3783	English,Traditional chinese
CRD3784	English,Spanish

2.2 EXTERIOR(1)

A


B

C

D

E

F

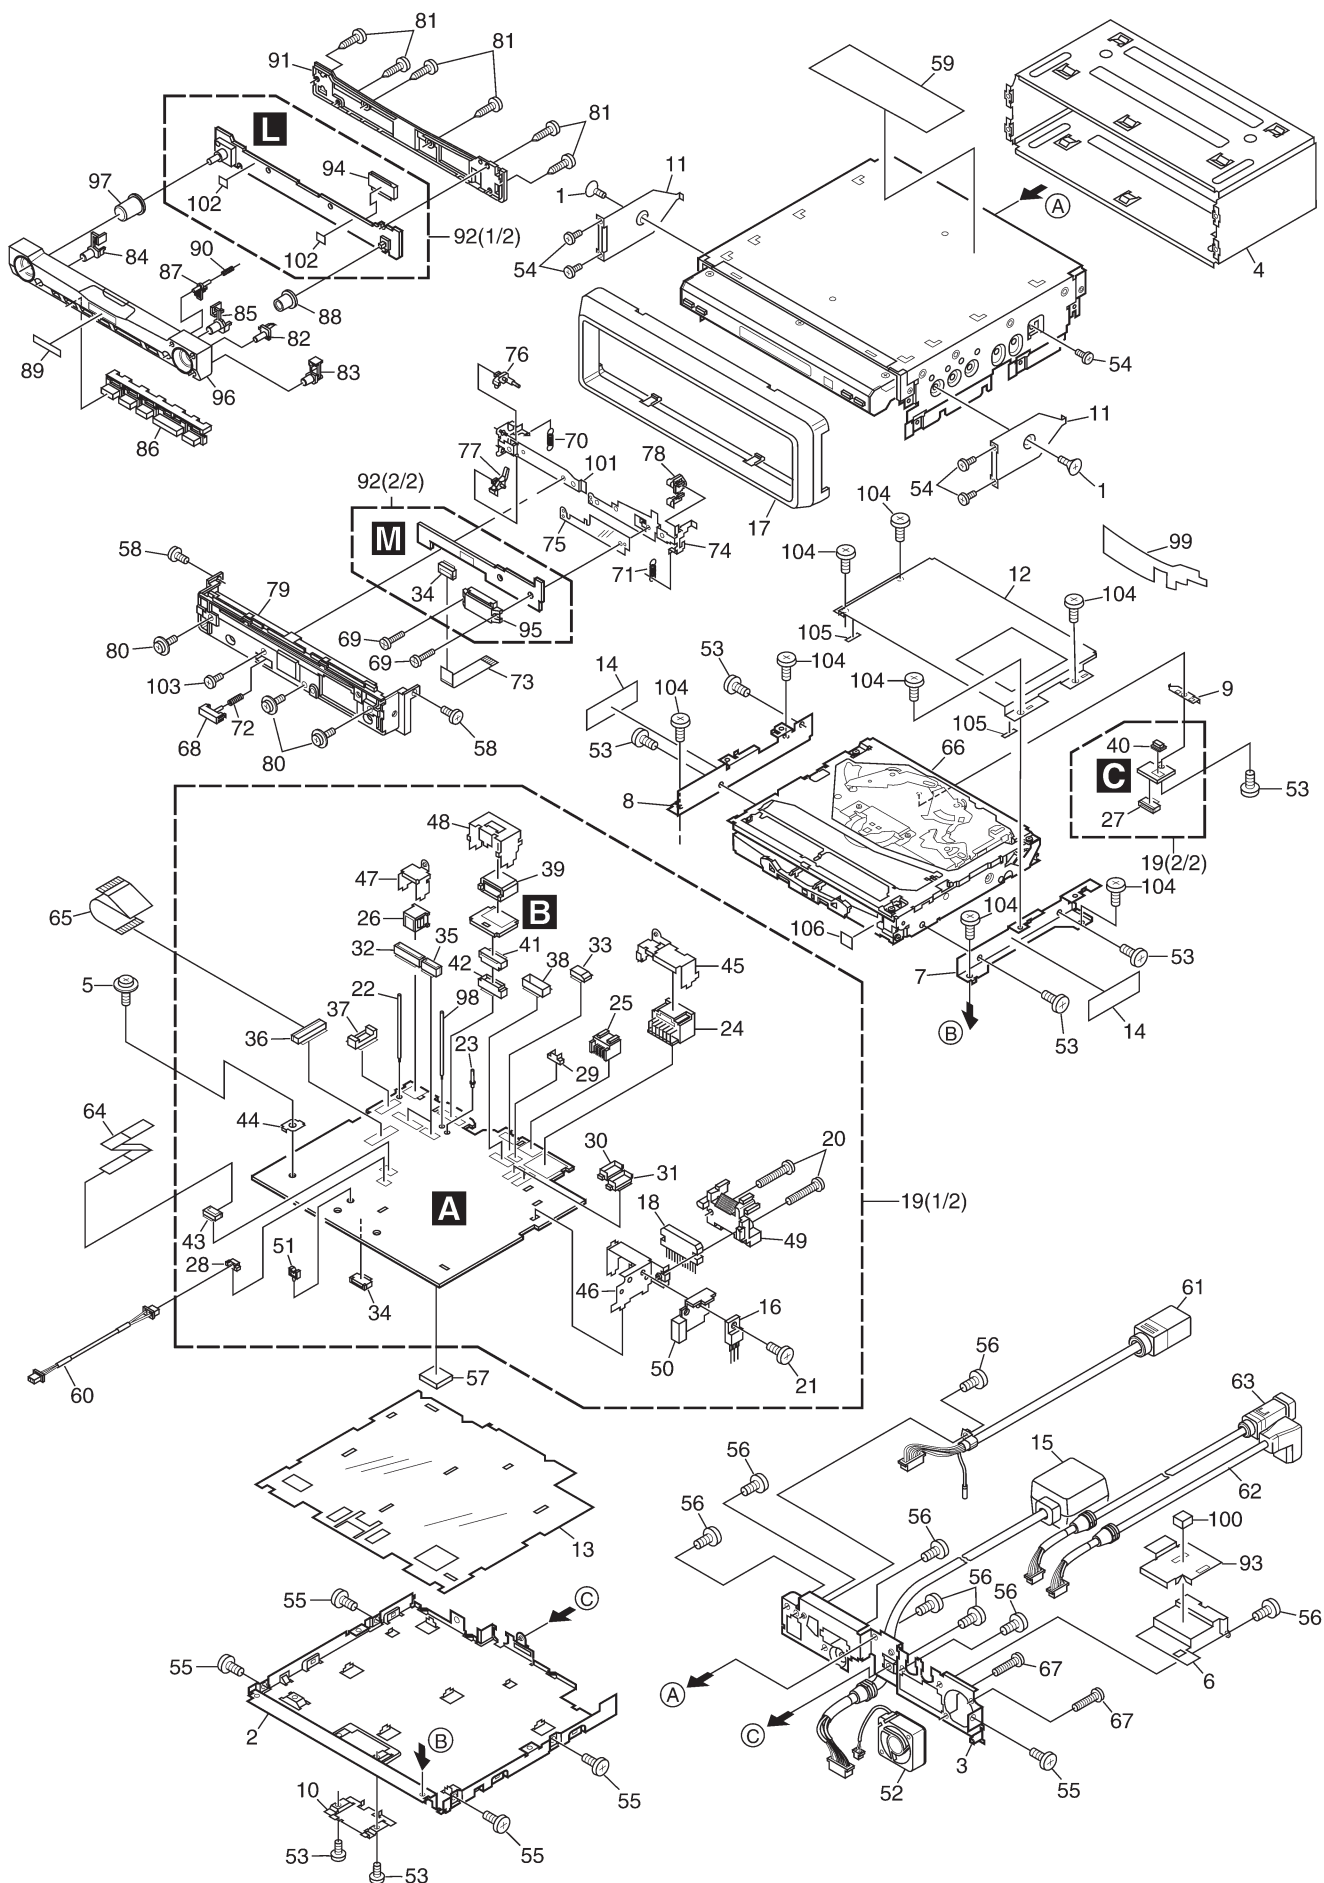

(1) EXTERIOR(1) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	CMZ50P060FTC	56	Screw	BMZ26P040FTC	A
2	Case	See Contrast table(2)	57	Sheet	CNM8526	
3	Panel	CNB2828	58	Screw(M2x2)	CBA1551	
4	Holder	CNC9510	59	Label	See Contrast table(2)	
5	Screw	IMS26P050FTC	60	Cord	CDE6574	
6	Holder	CND1435	61	Cord Assy	CDE7167	
7	Bracket	CND1438	62	Cord Assy	CDE7175	
8	Bracket	CND1439	63	Cord Assy	CDE7176	
9	Holder	CND1440	64	Cable	CDE7178	
10	Holder	CND1441	65	Cable	CDE7282	
11	Bracket	CND1482	66	DVD Mechanism Module(MS3)	CXK6310	B
12	Bracket	CND1603	67	Screw	PMZ20P160FTC	
13	Insulator	CNM8110	68	Button	CAC7953	
14	Insulator	CNM8495	69	Screw	CBA1111	
15	Cord Assy	See Contrast table(2)	70	Spring	CBH2681	
16	Transistor(Q851)	2SD2375	71	Spring	CBH2682	
17	Panel	See Contrast table(2)	72	Spring	CBH2683	
18	IC(IC308)	PAL007A	73	Cable	CDE7179	
19	Mother Unit	See Contrast table(2)	74	Holder	CND1841	
20	Screw	BMZ26P160FTC	75	Insulator	CNM8510	
21	Screw	BSZ26P080FTC	76	Arm	CNV7567	
22	Clamper	CEF1009	77	Arm	CNV7568	C
23	Terminal(CN155)	See Contrast table(2)	78	Arm	CNV7569	
24	Connector(CN701)	CKM1332	79	Panel Unit	See Contrast table(2)	
25	Connector(CN301)	CKM1389	80	Screw(M2 x 4)	CBA1734	
26	Connector(CN972)	CKS1940	81	Screw	BPZ20P080FZK	
27	Connector(CN1702)	CKS1944	82	Button(Detach)	See Contrast table(2)	
28	Connector(CN971)	CKS2191	83	Button(Eject)	See Contrast table(2)	
29	Connector(CN801)	CKS3124	84	Button(SRC)	CAC7946	
30	Connector(CN156)	CKS3131	85	Button(EQ)	CAC7947	
31	Connector(CN154)	CKS3132	86	Button	See Contrast table(2)	
32	Connector(CN803)	CKS3751	87	Button(Reset)	See Contrast table(2)	
33	Connector(CN202)	CKS3902	88	Button	CAC8149	D
34	Connector(CN101,CN5901)	CKS3986	* 89	Badge	See Contrast table(2)	
35	Connector(CN805)	CKS4068	90	Spring	CBH2680	
36	Connector(CN203)	CKS4132	91	Cover	CNS7441	
37	Connector(CN152)	CKS4249	92	Keyboard Unit	See Contrast table(2)	
38	Connector(CN151)	See Contrast table(2)	93	Sheet	CNM8514	
39	Connector(CN1502)	CKS4467	94	Connector(CN5501)	CKS4657	
40	Connector(CN1701)	CKS4496	95	Connector(CN5902)	CKS4658	
41	Connector(CN1500)	CKS4680	96	Grille Unit	See Contrast table(2)	
42	Connector(CN153)	CKS4681	97	Knob Unit	CXC2034	
43	Connector(CN201)	CKS4691	98	Clamper	See Contrast table(2)	
44	Holder	CNC5399	99	Sheet	CNM8515	E
45	Holder	CND1433	100	Cusion	CNM8516	
46	Holder	CND1434	101	Holder	CND1840	
47	Holder	CND1436	102	Insulator	CNM8521	
48	Holder	CND1437	103	Screw(M2.6 x 2.5)	CBA1482	
49	Heat Sink	CNR1684	104	Screw(M2.6 x 4)	CBA1738	
50	Heat Sink	CNR1703	105	Spacer	CNM8552	
51	Clamper	CNV1251	106	Spacer	CNM8575	
52	Fan Motor	CXM1262				
53	Screw	BMZ20P025FTC				
54	Screw	BMZ20P030FZK				F
55	Screw	BMZ26P030FZK				

(2) CONTRAST TABLE

AVX-P6500DVD/UC , AVX-P6500DVD/EW , AVX-P6550DVD/RC and AVX-P6550DVD/RD are constructed the same except for the following:

Mark	No.	Description	Part No.			
			P6500DVD/UC	P6500DVD/EW	P6550DVD/RC	P6550DVD/RD
	2	Case	CNB2910	CNB2910	CNB2911	CNB2911
	15	Cord Assy	CDE7177	CDE7177	Not used	Not used
	17	Panel	CNS7480	CNS7480	CNS7481	CNS7481
	19	Mother Unit	CWM8760	CWM8759	CWM8761	CWM8762
	23	Terminal(CN155)	CKF-047	CKF-047	Not used	Not used
	38	Connector(CN151)	CKS4454	CKS4454	Not used	Not used
	59	Label	Not used	VRW1860	Not used	Not used
	79	Panel Unit	CXC1895	CXC1895	CXC1896	CXC1896
	82	Button(Detach)	CAC7944	CAC7944	CXC7951	CXC7951
	83	Button(Eject)	CAC7945	CAC7945	CXC7950	CXC7950
	86	Button	CAC7948	CAC7948	CXC7949	CXC7949
	87	Button(Reset)	CAC8053	CAC8053	CXC8054	CXC8054
*	89	Badge	CAH1754	CAH1754	CAH1792	CAH1792
	92	Keyboard Unit	CWM8766	CWM8765	CWM8766	CWM8766
	96	Grille Unit	CXC2181	CXC2180	CXC2182	CXC2182
	98	Clamper	CEF1009	CEF1009	Not used	Not used

2.3 EXTERIOR(2)

A


B

C

D

E

F

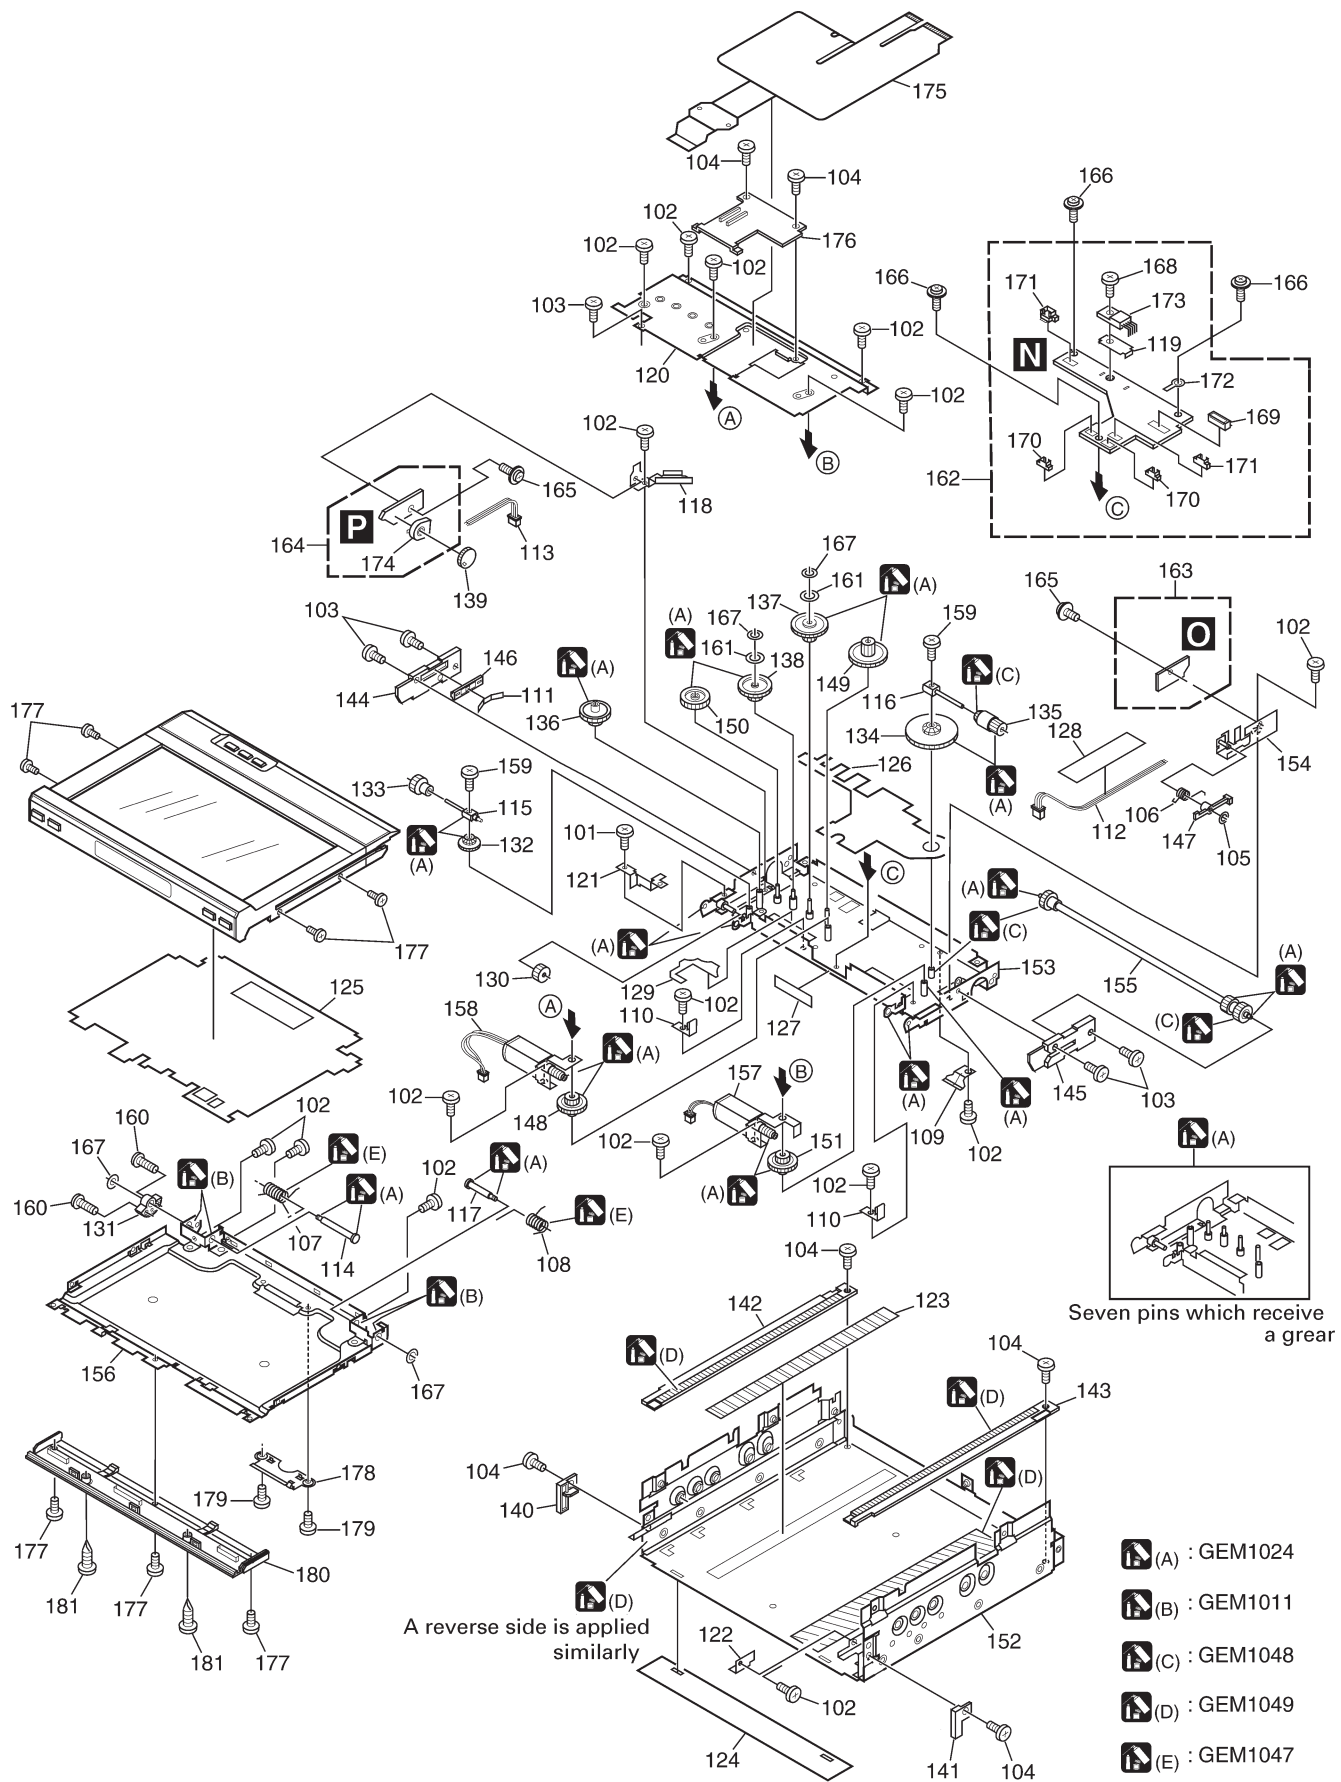

● EXTERIOR(2) SECTION PARTS LIST

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	
	101	Screw(M2x3)	CBA1082	*	146	Holder	CNV7390	A
	102	Screw(M2x2)	CBA1250		147	Arm	CNV7391	
	103	Screw(M2x4)	CBA1277		148	Gear	CNV7522	
	104	Screw(M2x1.5)	CBA1615		149	Gear	CNV7523	
	105	Washer	CBF1038		150	Gear	CNV7524	
	106	Spring	CBH2645		151	Gear	CNV7529	
	107	Spring	CBH2646		152	Chassis Unit	CXB9509	
	108	Spring	CBH2647		153	Frame Unit	CXB9511	
	109	Spring	CBL1585		154	Holder Unit	CXB9512	
	110	Spring	CBL1586		155	Shaft Unit	CXB9513	B
	111	Spring	CBL1587		156	Holder Unit	CXB9514	
	112	Cord Assy	CDE7047		157	Motor Unit(M3001)(Position)	CXB9515	
	113	Cord Assy	CDE7213		158	Motor Unit(M3002)(Angle)	CXB9516	
	114	Shaft	CLA4270		159	Screw	CZB3082	
	115	Shaft	CLA4305		160	Screw	CZB3083	
	116	Shaft	CLA4306		161	Washer	CZB3084	
	117	Shaft	CLA4309		162	Main Unit	CZW3087	
	118	Bracket	CND1221		163	SW Unit	CZW3088	
	119	Heat Sink	CND1228		164	Volume Unit	CZW3089	
	120	Case	CND1229		165	Screw	IMS20P020FTC	C
	121	Holder	CND1318		166	Screw	IMS20P030FZK	
	122	Holder	CND1449		167	Washer	YE15FUC	
	123	Sheet	CNM7939		168	Screw	BMZ26P050FTC	
	124	Sheet	CNM8037		169	Connector(CN3801)	CKS4068	
	125	Insulator	CNM8048		170	Connector(CN3802,CN3803)	CKS3124	
	126	Insulator	CNM8158		171	Connector(CN3807,3809)	CKS3125	
	127	Sheet	CNM8159		172	Connector(CN3808)	CKF1064	
	128	Tape	CNM8160		173	IC(IC3801)	BA00AST	
	129	Insulator	CNM8294		174	Volume(VR3841)	CCW1025	
	130	Gear	CNR1664		175	Flexible PCB	CNP7118	D
*	131	Gear	CNR1665		176	Holder	CNV7446	
	132	Gear	CNR1677		177	Screw	CBA1484	
	133	Gear	CNR1678		178	Holder	CND1314	
	134	Gear	CNR1679		179	Screw	JFZ20P022FNI	
	135	Gear	CNR1680		180	Cover	CNS7438	
	136	Gear	CNR1688		181	Screw	BPZ20P060FZK	
	137	Gear	CNR1708					
	138	Gear	CNR1709					
	139	Gear	CNV7383					
	140	Holder	CNV7384					
	141	Holder	CNV7385					E
	142	Rack	CNV7386					
	143	Rack	CNV7387					
*	144	Slider	CNV7388					
	145	Slider	CNV7389					F



2.4 EXTERIOR(3)

A

B






C

D

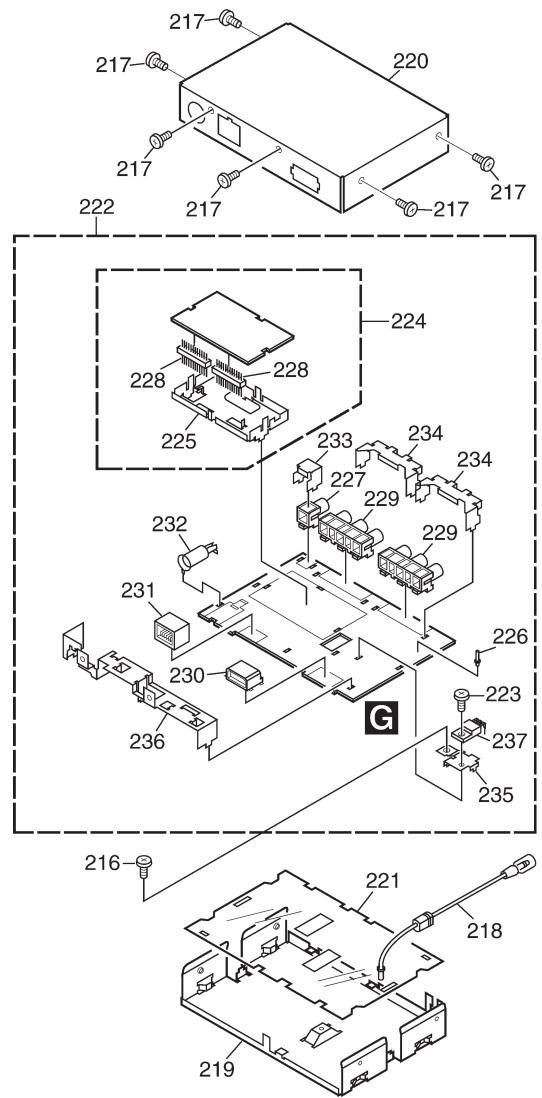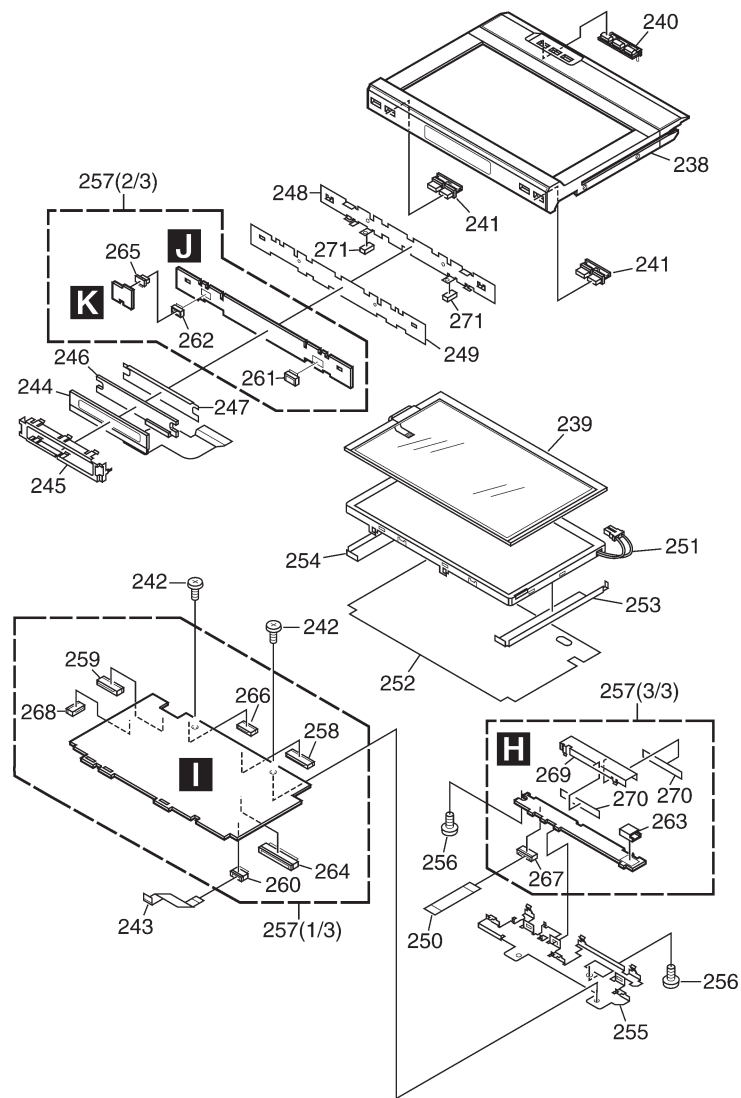

E

F

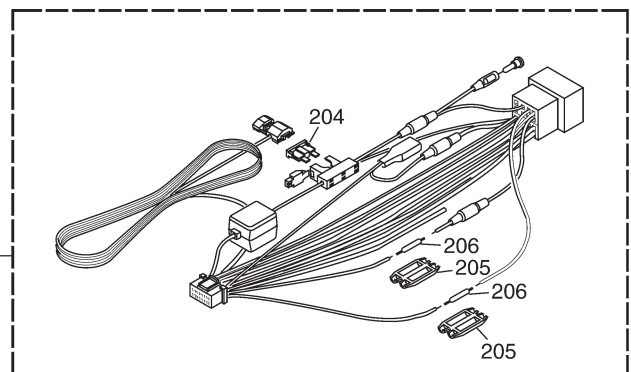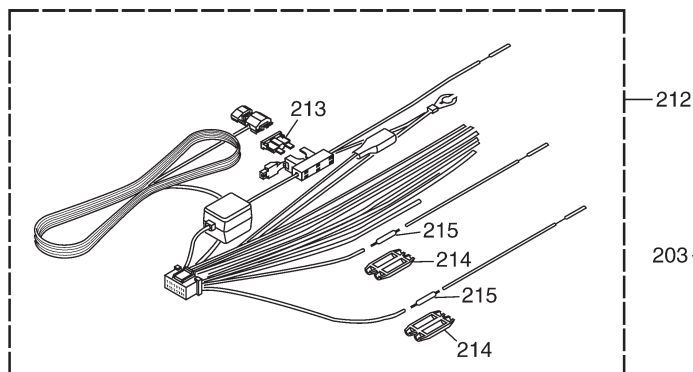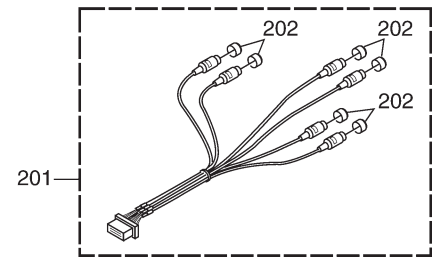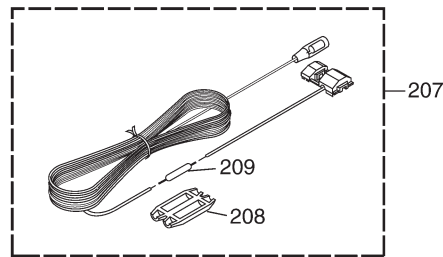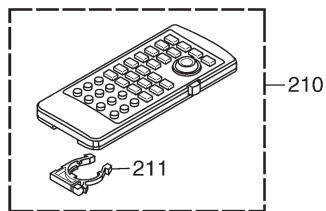

(1) EXTERIOR(3) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
201	Cord Assy	CDE7194	237	Transistor(Q1404)	2SD2375	A
202	Cap	CNV6727	238	Grille Unit	See Contrast table(2)	
203	Cord Assy	See Contrast table(2)	239	Touch Panel	CSX1057	
204	Fuse(10A)	See Contrast table(2)	240	Button(ENT,WIDE,MENU)	See Contrast table(2)	
205	Cap	See Contrast table(2)				
206	Resistor	See Contrast table(2)	241	Button	CAC7936	
207	Cord Assy	CDE7321	242	Screw	JFZ20P022FNI	
208	Cap	CNS1472	243	FFC	CDE7195	
209	Resistor	RS1/2PMF102J	244	LCD	CAW1805	
210	Remote Control Unit	See Contrast table(2)	245	Holder	CND1468	
211	Cover	CZN5357	246	Lighting Conductor	CNV7564	
212	Cord Assy	See Contrast table(2)	247	Sheet	CNM8488	
213	Fuse(10A)	See Contrast table(2)	248	Holder	CND1469	B
214	Cap	See Contrast table(2)	249	Insulator	CNM8131	
215	Resistor	See Contrast table(2)	250	FFC	CDE7196	
216	Screw	BSZ26P060FTC	251	LCD Panel	CWX2671	
217	Screw	BSZ30P060FZK	252	Insulator	CNM8132	
218	Cord Assy	CDE7280	253	Sheet	CNM7783	
219	Chassis	CNA2615	254	Sheet	CNM7784	
220	Case	See Contrast table(2)	255	Holder	CND1467	
221	Insulator	CNM8124	256	Screw	BPZ20P060FTC	
222	Tuner Unit	See Contrast table(2)	257	Monitor Unit	See Contrast table(2)	
223	Screw	BMZ30P050FTC	258	Connector(CN4461)	CKS3968	
224	FM/AM Tuner Unit	See Contrast table(2)	259	Connector(CN4801)	CKS3991	C
225	Holder	CND1432	260	Connector(CN4201)	CKS4054	
226	Terminal(CN1412)	CKF-047	261	Connector(CN4301)	CKS4054	
227	Pin Jack(CN1403)	CKS1825	262	Connector(CN4311)	CKS4374	
228	Connector(CN101,CN102)	CKS4653	263	Connector(CN5002)	CKS4428	
229	Pin Jack(CN1401,CN1402)	CKS2918	264	Connector(CN4701)	CKS4495	
230	Connector(CN1404)	CKS4467	265	Connector(CN4312)	CKS4496	
231	Connector(CN1405)	CKS4663	266	Connector(CN4451)	CKS4595	
232	Antenna Jack(CN1406)	CKX1056	267	Connector(CN5001)	CKS4595	
233	Holder	CNC6746	268	Connector(CN4421)	CKS4675	
234	Holder	CNC7205	269	Holder	CND1677	D
235	Holder	CNC9888	270	Insulator	CNM7351	
236	Holder	CND1451	271	Cushion	CNM8440	

(2) CONTRAST TABLE

AVX-P6500DVD/UC , AVX-P6500DVD/EW , AVX-P6550DVD/RC and AVX-P6550DVD/RD are constructed the same except for the following:

Mark No.	Description	Part No.			
		P6500DVD/UC	P6500DVD/EW	P6550DVD/RC	P6550DVD/RD
203	Cord Assy	Not used	CDE7192	Not used	Not used
204	Fuse(10A)	Not used	CEK1136	Not used	Not used
205	Cap	Not used	CNS1472	Not used	Not used
206	Resistor	Not used	RS1/2PMF102J	Not used	Not used
210	Remote Control Unit	CXC1224	CXC1226	CXC1226	CXC1226
212	Cord Assy	CDE7193	Not used	CDE7193	CDE7193
213	Fuse(10A)	CEK1136	Not used	CEK1136	CEK1136
214	Cap	CNS1472	Not used	CNS1472	CNS1472
215	Resistor	RS1/2PMF102J	Not used	RS1/2PMF102J	RS1/2PMF102J
220	Case	CNB2834	CNB2834	CNB2878	CNB2878
222	Tuner Unit	CWM8774	CWM8773	CWM8774	CWM8774
224	FM/AM Tuner Unit	CWE1651	CWE1650	CWE1651	CWE1651
238	Grille Unit	CXC1095	CXC1094	CXC1101	CXC1101
240	Button(ENT,WIDE,MENU)	CAC7935	CAC7935	CAC7952	CAC7952
257	Monitor Unit	CWM8764	CWM8763	CWM8764	CWM8764

2.5 DVD MECHANISM MODULE

A


B

C

D

E


F

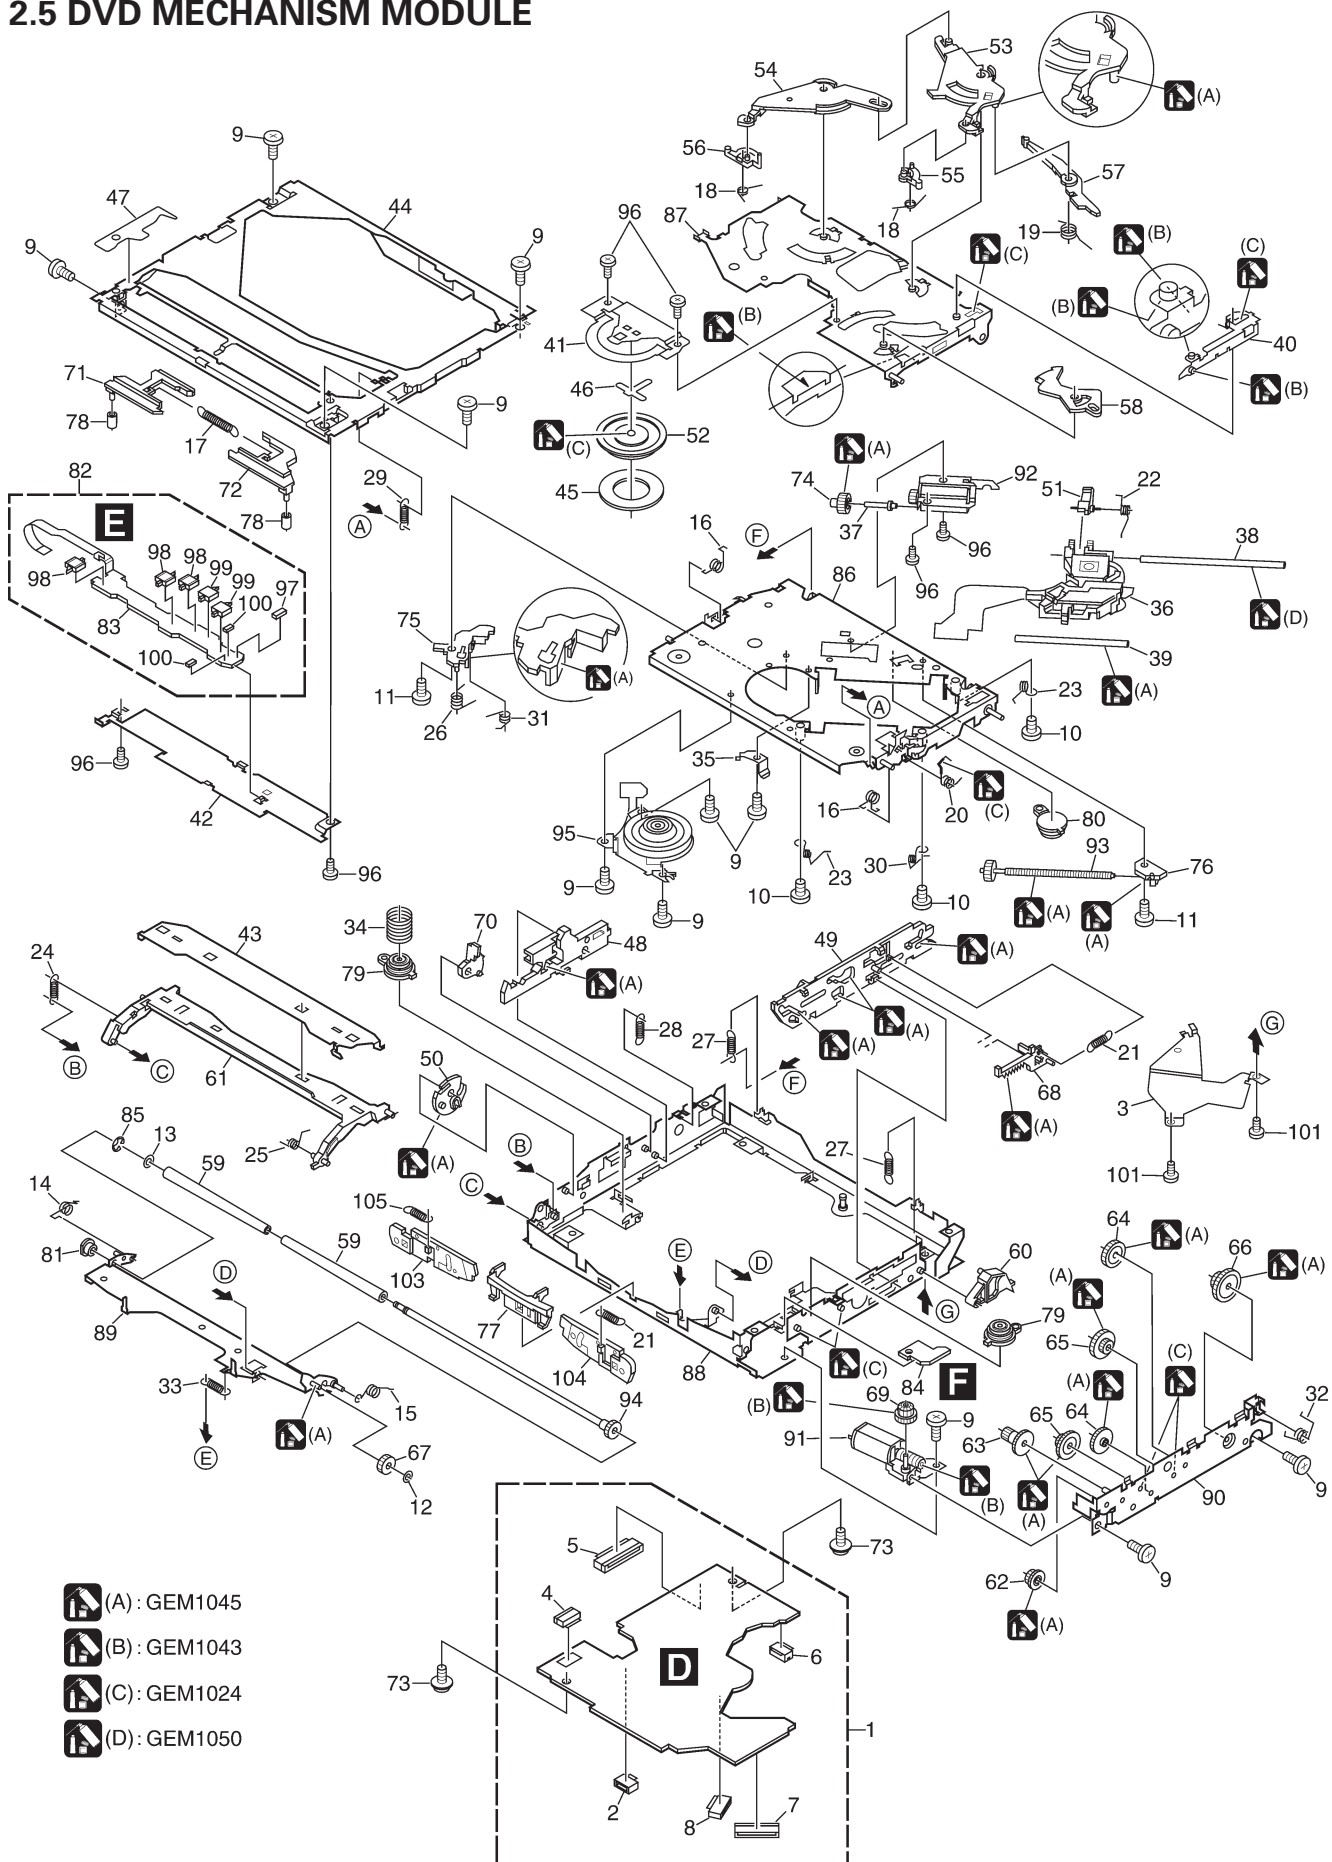


● DVD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	A
1	DVD Core Unit(MS3)	CWX2709	56	Arm	CNV7162	
2	Connector(CN1501)	CKS4282	57	Arm	CNV7163	
3	Cover	CNC9943	58	Arm	CNV7164	
4	Connector(CN1202)	CKS4624	59	Roller	CNV7165	
5	Connector(CN1611)	CKS4052	60	Arm	CNV7166	
6	Connector(CN1603)	CKS4374	61	Guide	CNV7167	
7	Connector(CN1101)	CKS4625	62	Gear	CNV7169	
8	Connector(CN1201)	CKS4067	63	Gear	CNV7170	
9	Screw	BMZ20P020FTC	64	Gear	CNV7171	
10	Screw(M2 x 3.5)	CBA1571	65	Gear(Brack)	CNV7172	
11	Screw(M2 x 2.5)	CBA1623	66	Gear	CNV7173	B
12	Washer	CBF1038	67	Gear	CNV7174	
13	Washer	CBF1064	68	Rack	CNV7175	
14	Spring	CBH2586	69	Gear	CNV7176	
15	Spring	CBH2587	70	Arm	CNV7177	
16	Spring	CBH2588	71	Lever	CNV7178	
17	Spring	CBH2589	72	Lever	CNV7179	
18	Spring	CBH2590	73	Screw	IMS20P030FTC	
19	Spring	CBH2591	74	Gear	CNV7181	
20	Spring	CBH2592	75	Holder	CNV7183	
21	Spring	CBH2593	76	Holder	CNV7184	C
22	Spring	CBH2594	77	Guide	CNV7745	
23	Spring	CBH2595	78	Roller	CNV7344	
24	Spring	CBH2596	79	Damper	CNV7470	
25	Spring	CBH2597	80	Damper	CNV7471	
26	Spring	CBH2598	81	Coller	CNV7645	
27	Spring	CBH2599	82	Compound Unit (A)	CWX2752	
28	Spring	CBH2600	83	Gathering PCB	CNX3835	
29	Spring	CBH2601	84	Compound Unit (B)	CWX2753	
30	Spring	CBH2602	85	Washer	YE20FTC	
31	Spring	CBH2603	86	Chassis Unit	CXB8680	
32	Spring	CBH2604	87	Arm Unit	CXB8681	D
33	Spring	CBH2605	88	Frame Unit	CXB8683	
34	Spring	CBH2711	89	Arm Unit	CXB8684	
35	Spring	CBL1564	90	Bracket Unit	CXB8685	
36	Pickup Unit(Service)(DP5)	CXX1639	91	Motor Unit(LOADING)(M1)	CXB8687	
37	Shaft	CLA3881	92	Motor Unit(CARRIAGE)(M2)	CXB8688	
38	Shaft	CLA4206	93	Screw Unit	CXB8689	
39	Shaft	CLA4207	94	Roller Unit	CXB8690	
40	Lever	CNC9933	95	Motor(SPINDLE)(M3)	CXM1211	
41	Holder	CNC9939	96	Screw	JFZ20P018FTC	
42	Holder	CNC9940	97	Photo-transistor(Q1299)	CPT231SCTD	
43	Holder	CNC9941	98	Switch(S1201,S1202,S1203)	CSN1051	E
44	Frame	CNC9944	99	Spring Switch(S1204,S1205)	CSN1052	
45	Sheet	CNM6883	100	Resistor(R1298,R1299)	RS1/16S0R0J	
46	Sheet	CNM8283	101	Screw	JFZ20P018FTC	
47	Sheet	CNM8287	102			
48	Lever	CNV7154	103	Arm	CNV7742	
49	Lever	CNV7155	104	Arm	CNV7743	
50	Cam	CNV7156	105	Spring	CBH2710	
51	Rack	CNV7157				
52	Clamper	CNV7158				
53	Arm	CNV7159				
54	Arm	CNV7160				F
55	Arm	CNV7161				

3.2 OVERALL CONNECTION DIAGRAM

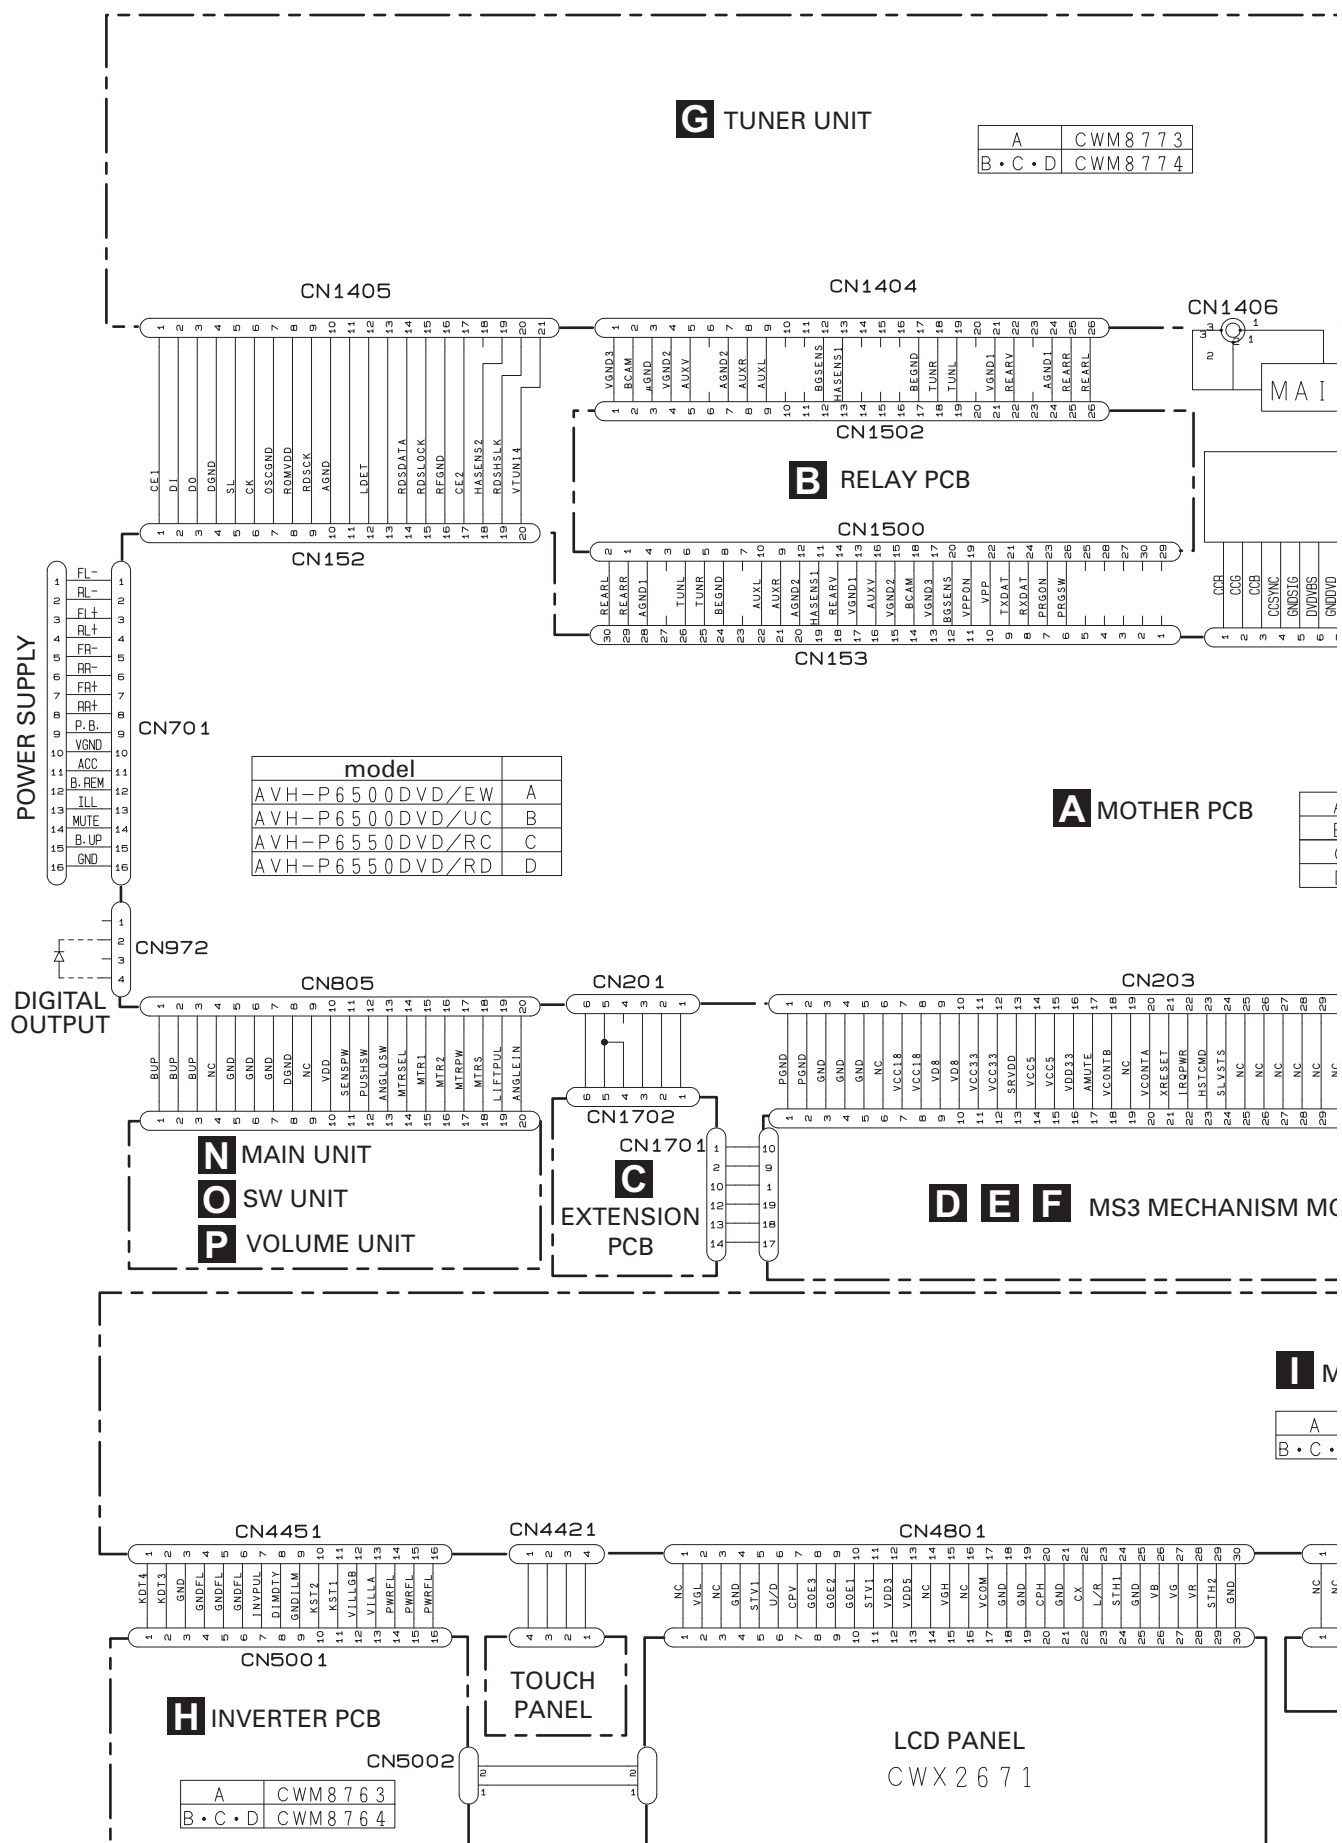

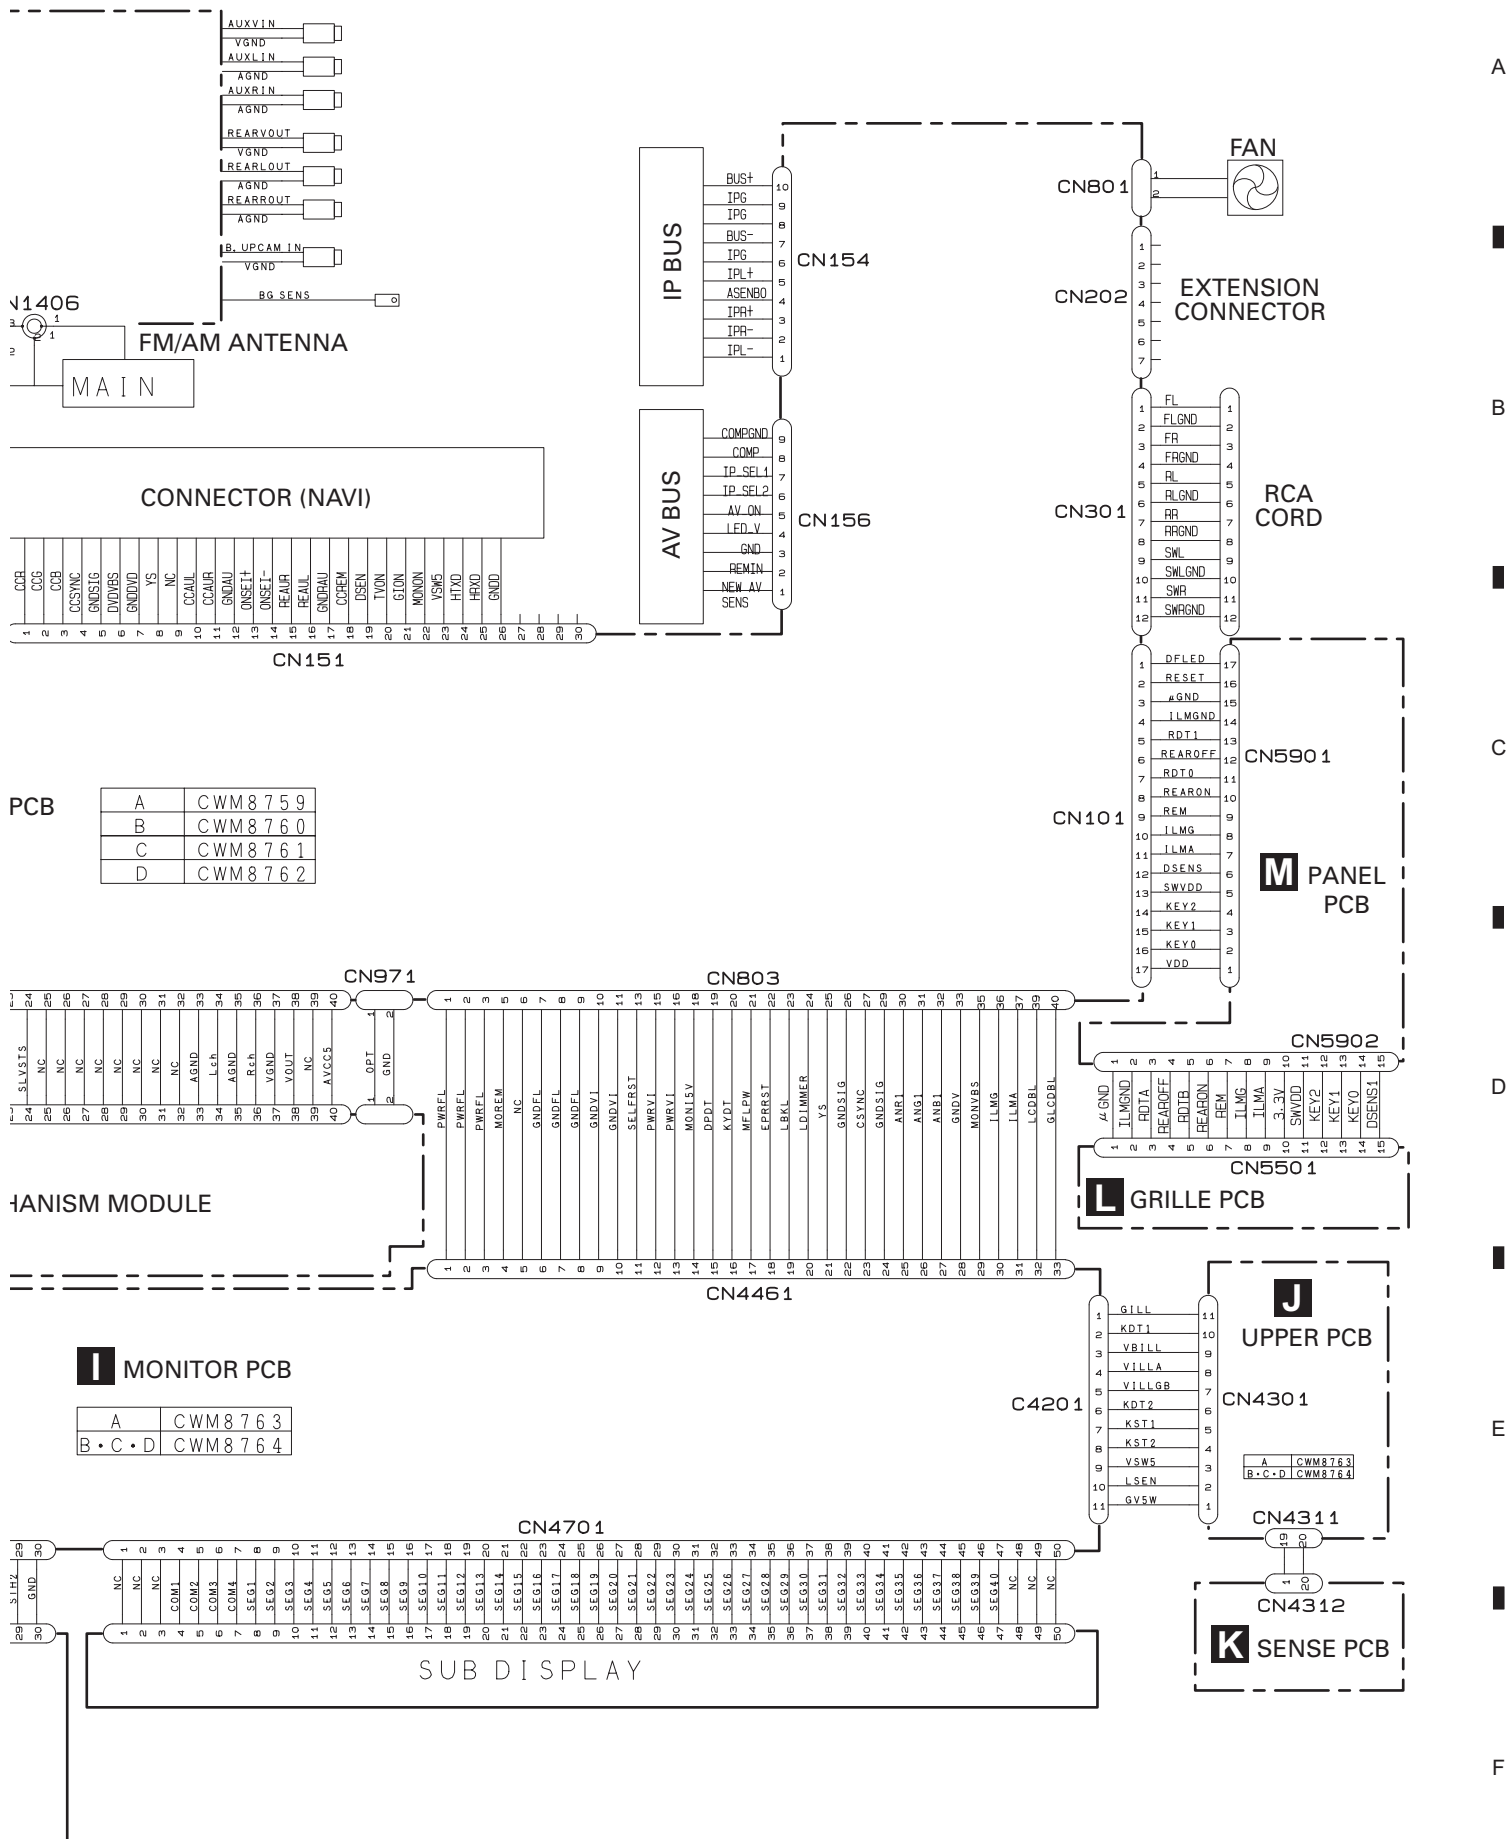

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
Mother Unit Consists of Mother PCB Relay PCB Extension PCB		Q 108 Transistor	2SC4081
		Q 109 Transistor	DTC144EU
		Q 110 Transistor	2SA1577
		Q 111 Transistor	UMH1N
A B C		Q 112 Transistor	2SC4081
		Q 113 Transistor	DTC124EU
		Q 115 Transistor	2SA1577
		Q 116 Transistor	DTC144EU
		Q 117 Transistor	2SA1577
		Q 118 Transistor	DTC124EU
		Q 119 Transistor	2SA1576
		Q 120 Transistor	DTC124EU
		Q 126 Transistor	2SC2412K
		Q 151 Transistor	2SC4081
		Q 152 Transistor	2SA1576
IC 151 IC	TA2050F	Q 153 Transistor	DTC124EU
IC 152 IC	TA2050F	Q 201 Transistor	DTC323TU
IC 153 IC	TA2050F	Q 203 Transistor	DTC323TU
IC 154 IC	HA12187FP	Q 205 Transistor	2SA1576
IC 155 IC	TC4S81F	Q 206 Transistor	DTC124EU
		Q 207 Transistor	IMD2A
		Q 301 Transistor	2SC2412K
		Q 302 Transistor	DTC323TU
IC 201 IC	TC74VHCT08AFT	Q 303 Transistor	DTC323TU
IC 202 IC	SM5304AV	Q 304 Transistor	DTC323TU
IC 203 IC	TC74VHC08FT		
IC 301 IC	NJM4558V	Q 305 Transistor	IMD2A
IC 302 IC	NJM4558V	Q 306 Transistor	2SA1576
		Q 307 Transistor	DTC124EU
		Q 308 Transistor	2SA1576
		Q 309 Transistor	DTC124EU
IC 303 IC	NJM4558V	Q 310 Transistor	2SC4081
IC 304 IC	NJM2068V	Q 311 Transistor	DTC323TU
IC 305 IC	PML009A	Q 312 Transistor	DTC323TU
IC 306 IC	NJM4558V	Q 313 Transistor	DTC323TU
IC 307 IC	NJM4558V	Q 314 Transistor	DTC323TU
		Q 315 Transistor	DTC323TU
		Q 316 Transistor	DTC323TU
		Q 317 Transistor	DTC144EU
IC 308 IC	PAL007A	Q 318 Transistor	IMD2A
IC 309 IC	PA2028A	Q 319 Transistor	IMD2A
IC 501 IC	NJM2137V		
IC 502 IC	NJM2137V	Q 501 Transistor	2SC4081
IC 503 IC	NJM2137V	Q 502 Transistor	2SC4081
		Q 503 Transistor	2SC4081
		Q 504 Transistor	2SC4081
		Q 505 Transistor	2SC4081
IC 504 IC	NJM2137V	Q 601 Transistor	DTC124EU
IC 505 IC	NJM2137V	Q 602 Transistor	2SC4081
IC 506 IC	CXA2089Q	Q 701 Transistor	2SA1576
IC 507 IC	BA7623F	Q 702 Transistor	IMX1
IC 601 IC	PE5348A	Q 703 Transistor	DTC114EU
		Q 704 Transistor	2SA1576
		Q 801 Transistor	2SD1767
		Q 802 Transistor	IMD2A
IC 602 IC	S-80841CNUA-B82	Q 803 Transistor	2SA1797
IC 801 IC	BA00BC0WFP	Q 804 Transistor	DTC124EU
IC 803 IC	BP5451		
IC 804 IC	S-818A33AUC-BGN		
IC 805 IC	AN8011S		
IC 806 IC	BA00BC0WFP		
IC 807 IC	S-812C50AUA-C3E		
IC 971 IC	TC7WT125FU		
Q 101 Transistor	DTC124EU		
Q 102 Transistor	2SA1576		
Q 103 Transistor	IMD2A		
Q 104 Transistor	DTC114EU		
Q 105 Transistor	DTA114EU		
Q 106 Transistor	DTC144EU		
Q 107 Transistor	2SC4081		

A	====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
	---				---			
	Q	805	Transistor	DTC124EU	D	304	Diode	DAN202U
	Q	806	Transistor	2SD1767	D	305	Diode	DAN202U
	Q	807	Transistor	DTC124EU	D	306	Diode	UDZS8R2(B)
	Q	808	Transistor	IMD2A	D	307	Diode	DAN202U
	Q	811	Transistor	2SA1797	D	500	Diode	UDZ12(B)
	Q	815	Transistor	2SD1767	D	601	Diode	MA111
	Q	816	Transistor	2SA1577	D	602	Diode	DAN202U
	Q	817	Transistor	DTC124EU	D	701	Diode	DAN202U
	Q	818	Transistor	DTC124EU	D	702	Diode	HZU6R8(B3)
	Q	819	Transistor	2SA1797	D	703	Diode	S1G-6904G2P
B	Q	820	Transistor	2SA1797	D	704	Diode	S1G-6904G2P
	Q	821	Transistor	DTC114EU	D	705	Diode	S1G-6904G2P
	Q	822	Transistor	2SJ529S	D	706	Diode	UDZS7R5(B)
	Q	824	Transistor	2SC4081	D	707	Diode	DAN202U
	Q	826	Transistor	2SJ529S	D	708	Diode	S1G-6904G2P
	Q	827	Transistor	2SJ529S	D	709	Diode	S1G-6904G2P
	Q	828	Transistor	2SA1797	D	801	Diode	UDZS5R6(B)
	Q	829	Transistor	DTC124EU	D	802	Diode	HZU8R2(B1)
	Q	830	Transistor	DTC124EU	D	803	Diode	HZU5R6(B2)
	Q	832	Transistor	2SA1576	D	805	Diode	UDZS5R6(B)
	Q	833	Transistor	2SD1767	D	806	Diode	S2G-6600
	Q	834	Transistor	2SA1576	D	807	Diode	S1G-6904G2P
	Q	835	Transistor	DTC124EU	D	808	Diode	RB063L-30
	Q	838	Transistor	DTC124EU	D	809	Diode	MA111
	Q	839	Transistor	2SA1576	D	812	Diode	RB063L-30
C	Q	840	Transistor	DTC124EU	D	813	Diode	SC802-06
	Q	841	Transistor	2SB1184F5	D	814	Diode	RB063L-30
	Q	842	Transistor	2SD1767	D	815	Diode	S2G-6600
	Q	843	Transistor	DTC114EU	D	816	Diode	RB063L-30
	Q	844	Transistor	2SA1615-Z	D	817	Diode	HZU9R1(B1)
	Q	851	Transistor	2SD2375	D	819	Diode	DAN202U
	Q	852	Transistor	IMD2A	D	820	Diode	UDZS20(B)
	Q	854	Transistor	2SA1577	D	851	Diode	HZU10(B1)
	Q	855	Transistor	DTC124EU	D	852	Diode	DAN202U
	Q	903	Transistor	2SA1797	D	853	Diode	S2G-6600
D	Q	904	Transistor	DTC124EU	L	101	Inductor	CTF1399
	D	101	Diode	UDZS5R6(B)	L	151	Inductor	LCTC2R2K1608
	D	102	Diode Network	DA204U	L	201	Coil	CTH1295
	D	103	Diode Network	DA204U	L	202	Inductor	CTF1399
	D	104	Diode Network	DA204U	L	203	Inductor	CTF1305
	D	105	Diode Network	DA204U	L	204	Inductor	CTF1305
	D	106	Diode Network	DA204U	L	205	Inductor	CTF1399
	D	107	Diode Network	DA204U	L	206	Inductor	CTF1399
	D	108	Diode	1SS355	L	207	Inductor	CTF1379
	D	109	Diode	1SS355	L	301	Inductor	CTF1399
	D	110	Diode Network	DA204U	L	302	Inductor	CTF1399
	D	151	Diode	HZU2R7(B1)	L	303	Inductor	CTF1399
	D	152	Diode	HZU2R7(B1)	L	304	Inductor	LCTA2R2J2520
	D	153	Diode	HZU2R7(B1)	L	305	Inductor	CTF1399
	D	154	Diode	HZU2R7(B1)	L	307	Inductor	CTF1379
E	D	155	Diode	HZU2R7(B1)	L	308	Inductor	CTF1379
	D	156	Diode	HZU2R7(B1)	L	310	Inductor	CTF1399
	D	157	Diode	UDZS5R6(B)	L	311	Inductor	CTF1399
	D	158	Diode	UDZS5R6(B)	L	312	Inductor	LCTA101J2520
	D	159	Diode	UDZS5R6(B)	L	501	Inductor	CTF1399
	D	160	Diode	UDZS5R6(B)	L	502	Inductor	CTF1399
	D	161	Diode	HZU2R7(B1)	L	503	Inductor	CTF1399
	D	162	Diode	HZU2R7(B1)	L	504	Inductor	CTF1399
	D	163	Diode	HZU2R7(B1)	L	505	Inductor	CTF1399
	D	164	Diode	HZU2R7(B1)	L	506	Inductor	LCTA100J2520
	D	165	Diode	UDZS5R6(B)	L	507	Inductor	CTF1383
	D	166	Diode Network	DA204U	L	508	Inductor	CTF1383
	D	167	Diode Network	DA204U	L	509	Inductor	LCTA150J2520
	D	302	Diode	MA111	L	601	Inductor	LCTA2R2J2520
	D	303	Diode	DAN202U	L	602	Inductor	CTF1306

F

A

B

C

D

E

F

A	====Circuit Symbol and No.==Part Name		Part No.	====Circuit Symbol and No.==Part Name		Part No.
	R	199	RS1/16S102J	R	355	RS1/16S103J
	R	201	RAB4C102J	R	356	RS1/16S0R0J
	R	202	RAB4C102J	R	359	RS1/16S0R0J
	R	203	RS1/16S473J	R	360	RS1/16S0R0J
	R	204	RS1/16S0R0J	R	361	RS1/16S0R0J
	R	207	RS1/16S750J	R	362	RS1/16S0R0J
	R	209	RS1/16S0R0J	R	363	RS1/16S0R0J
	R	212	RS1/16S332J	R	364	RS1/16S223J
	R	213	RS1/16S332J	R	365	RS1/16S103J
	R	214	RS1/16S512J	R	366	RS1/16S471J
B	R	216	RS1/16S0R0J	R	367	RS1/16S471J
	R	217	RS1/16S101J	R	368	RS1/16S223J
	R	219	RS1/16S681J	R	369	RS1/16S103J
	R	220	RS1/16S0R0J	R	370	RS1/16S223J
	R	301	RS1/16S101J	R	371	RS1/16S103J
	R	302	RS1/16S222J	R	372	RS1/16S221J
	R	304	RS1/16S392J	R	373	RS1/16S103J
	R	305	RS1/16S472J	R	374	RS1/16S820J
	R	306	RS1/16S0R0J	R	375	RS1/16S820J
	R	307	RS1/16S473J	R	376	RS1/16S101J
	R	308	RS1/16S103J	R	377	RS1/16S473J
	R	309	RS1/16S473J	R	378	RS1/16S103J
	R	310	RS1/16S473J	R	379	RS1/16S820J
	R	311	RS1/16S472J	R	380	RS1/16S223J
	R	312	RS1/16S472J	R	381	RS1/16S820J
C	R	313	RS1/16S103J	R	382	RS1/16S820J
	R	314	RS1/16S102J	R	383	RS1/16S223J
	R	315	RS1/16S222J	R	384	RS1/16S471J
	R	316	RS1/16S472J	R	385	RS1/16S223J
	R	317	RS1/16S473J	R	386	RS1/16S223J
	R	318	RS1/16S473J	R	387	RS1/16S471J
	R	319	RS1/16S223J	R	388	RS1/16S471J
	R	321	RS1/16S472J	R	389	RS1/16S471J
	R	322	RS1/16S103J	R	390	RS1/16S820J
	R	323	RS1/16S473J	R	391	RS1/16S223J
D	R	324	RS1/16S223J	R	392	RS1/16S223J
	R	325	RS1/16S821J	R	393	RS1/16S471J
	R	326	RS1/16S473J	R	394	RS1/16S471J
	R	327	RS1/16S473J	R	395	RS1/16S0R0J
	R	328	RS1/16S223J	R	396	RS1/16S0R0J
	R	329	RS1/16S223J	R	397	RS1/16S0R0J
	R	330	RS1/16S181J	R	503	RS1/16S472J
	R	331	RS1/16S181J	R	504	RS1/16S750J
	R	332	RS1/16S102J	R	506	RS1/16S472J
	R	333	RS1/16S102J	R	507	RS1/16S472J
	R	335	RS1/16S103J	R	508	RS1/16S750J
	R	336	RS1/16S102J	R	509	RS1/16S750J
	R	337	RS1/16S391J	R	512	RS1/16S750J
	R	338	RS1/16S391J	R	514	RS1/16S472J
	R	339	RS1/16S821J	R	515	RS1/16S472J
E	R	340	RS1/16S821J	R	516	RS1/16S0R0J
	R	341	RS1/16S103J	R	517	RS1/16S472J
	R	342	RS1/16S472J	R	518	RS1/16S102J
	R	343	RS1/16S104J	R	519	RS1/16S101J
	R	344	RS1/16S104J	R	520	RS1/16S472J
	R	345	RS1/16S103J	R	521	RS1/16S472J
	R	346	RS1/16S103J	R	522	RS1/16S102J
	R	347	RS1/16S223J	R	523	RS1/16S472J
	R	348	RS1/16S223J	R	524	RS1/16S472J
	R	349	RS1/16S103J	R	525	RS1/16S472J
	R	350	RS1/16S103J	R	526	RS1/16S102J
	R	351	RS1/16S104J	R	527	RS1/16S101J
	R	352	RS1/16S103J	R	528	RS1/16S472J
	R	353	RS1/16S103J	R	529	RS1/16S472J
	R	354	RS1/16S103J	R	530	RS1/16S472J
F						

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
R 531	RS1/16S392J	R 638	RS1/16S473J	A
R 532	RS1/16S472J	R 640	RS1/16S681J	
R 533	RS1/16S392J	R 642	RS1/16S681J	
R 534	RS1/16S472J	R 643	RS1/16S473J	
R 535	RS1/16S472J	R 644	RS1/16S102J	
R 536	RS1/16S472J	R 645	RS1/16S102J	B
R 537	RS1/16S392J	R 646	RS1/16S102J	
R 538	RS1/16S472J	R 647	RS1/16S102J	
R 539	RS1/16S101J	R 648	RS1/16S473J	
R 540	RS1/16S472J	R 649	RS1/16S473J	
R 541	RS1/16S472J	R 650	RS1/16S473J	B
R 542	RS1/16S102J	R 651	RS1/16S103J	
R 543	RS1/16S392J	R 652	RS1/16S473J	
R 544	RS1/16S472J	R 653	RAB4C102J	
R 545	RS1/16S472J	R 654	RS1/16S473J	
R 546	RS1/16S472J	R 655	RAB4C681J	C
R 547	RS1/16S101J	R 656	RS1/16S102J	
R 548	RS1/16S102J	R 657	RS1/16S102J	
R 549	RS1/16S0R0J	R 658	RS1/16S681J	
R 550	RS1/16S0R0J	R 659	RS1/16S681J	
R 551	RS1/16S392J	R 660	RS1/16S472J	C
R 552	RS1/16S472J	R 661	RS1/16S472J	
R 553	RS1/16S0R0J	R 662	RS1/16S473J	
R 554	RS1/16S562J	R 663	RS1/16S0R0J	
R 555	RS1/16S562J	R 664	RS1/16S473J	
R 556	RS1/16S562J	R 666	RS1/16S473J	C
R 557	RS1/16S562J	R 668	RS1/16S473J	
R 558	RS1/16S0R0J	R 669	RS1/16S473J	
R 559	RS1/16S0R0J	R 670	RS1/16S101J	
R 561	RS1/16S0R0J	R 671	RS1/16S102J	
R 562	RS1/16S270J	R 672	RS1/16S473J	D
R 564	RS1/16S102J	R 701	RS1/16S102J	
R 565	RS1/16S393J	R 702	RS1/16S473J	
R 566	RS1/16S152J	R 703	RS1/16S0R0J	
R 567	RS1/16S393J	R 704	RS1/16S473J	
R 568	RS1/16S473J	R 705	RS1/16S473J	D
R 569	RS1/16S473J	R 706	RS1/16S103J	
R 601	RS1/16S104J	R 707	RS1/16S103J	
R 602	RS1/16S102J	R 708	RS1/16S473J	
R 603	RS1/16S473J	R 709	RS1/16S103J	
R 604	RS1/16S0R0J	R 710	RS1/16S104J	E
R 605	RS1/16S0R0J	R 711	RS1/16S102J	
R 606	RS1/16S473J	R 712	RS1/16S472J	
R 607	RS1/16S473J	R 713	RS1/16S472J	
R 608	RS1/16S473J	R 714	RS1/16S473J	
R 609	RS1/16S473J	R 715	RS1/16S472J	E
R 610	RS1/16S473J	R 716	RS1/16S153J	
R 611	RS1/16S473J	R 801	RS1/16S561J	
R 613	RS1/16S473J	R 802	RS1/16S332J	
R 614	RS1/16S473J	R 803	RS1/16S181J	
R 615	RAB4C102J	R 805	RS1/16S102J	E
R 616	RAB4C102J	R 806	RS1/16S471J	
R 617	RAB4C102J	R 807	RS1/16S471J	
R 621	RAB4C102J	R 809	RS1/16S332J	
R 622	RS1/16S473J	R 812	RS1/16S391J	
R 623	RS1/16S473J	R 813	RS1/16S391J	F
R 624	RS1/16S473J	R 821	RS1/16S391J	
R 625	RS1/16S473J	R 822	RS1/16S472J	
R 626	RS1/16S102J	R 823	RS1/16S222J	
R 627	RS1/16S221J	R 824	RS1/16S1203D	
R 633	RS1/16S472J	R 825	RS1/16S1502D	F
R 634	RS1/16S473J	R 826	RS1/16S6802D	
R 635	RS1/16S473J	R 827	RS1/16S2201D	
R 636	RS1/16S473J	R 828	RS1/16S470J	
R 637	RS1/16S473J	R 829	RS1/16S470J	

A	====Circuit Symbol and No.==Part Name		Part No.	====Circuit Symbol and No.==Part Name		Part No.
	---	-----	-----	---	-----	-----
	R	830	RS1/16S101J	CAPACITORS		
	R	831	RS1/16S101J			
	R	832	RS1/16S472J			
	R	833	RS1/16S560J			
	R	834	RS1/16S102J			
	R	835	RS1/16S473J	C	101	CKSRYB103K50
	R	836	RS1/16S6200D	C	102	CKSRYB104K16
	R	837	RS1/16S3602D	C	103	CKSRYB104K16
	R	838	RS1/16S3901D	C	104	CKSRYB103K50
	R	839	RS1/16S100J	C	105	CKSRYB104K16
B	R	840	RS1/16S0R0J	C	106	CKSRYB104K16
	R	847	RS1/16S2203D	C	151	CKSRYB104K16
	R	848	RS1/16S102J	C	152	CKSRYB471K50
	R	850	RS1/16S103J	C	153	CKSRYB104K16
	R	851	RS1/16S221J	C	154	CKSRYB104K16
	R	852	RS1/16S272J	C	155	CKSRYB104K16
	R	853	RS1/16S0R0J	C	156	CKSRYB104K16
	R	855	RS1/16S6801D	C	157	CKSRYB105K6R3
	R	856	RS1/16S1502D	C	158	CKSRYB105K6R3
	R	857	RS1/16S272J	C	159	CKSRYB105K6R3
	R	858	RS1/16S473J	C	160	CKSRYB105K6R3
	R	860	RS1/16S6801D	C	161	CKSRYB105K6R3
	R	861	RS1/16S102J	C	162	CKSRYB105K6R3
	R	864	RS1/16S5602D	C	163	CKSRYB105K6R3
	R	865	RS1/16S1002D	C	164	CKSRYB105K6R3
C	R	868	RS1/16S102J	C	165	CKSYB475K10
	R	870	RS1/16S102J	C	166	CKSRYB104K16
	R	871	RS1/16S1503D	C	167	10μF/16V
	R	872	RS1/16S0R0J	C	168	10μF/16V
	R	873	RS1/16S8202D	C	169	10μF/16V
	R	874	RS1/16S3301D	C	170	10μF/16V
	R	875	RS1/16S473J	C	171	10μF/16V
	R	876	RS1/16S0R0J	C	172	10μF/16V
	R	877	RS1/16S472J	C	173	10μF/16V
	R	878	RS1/16S103J	C	174	10μF/16V
	R	879	RS1/16S472J	C	175	10μF/16V
	R	880	RS1/16S103J	C	201	CCH1442
	R	882	RS1/16S151J	C	202	CEV221M4
	R	883	RS1/16S103J	C	203	CEV221M4
	R	884	RS1/16S103J	C	205	CKSYB106K6R3
D	R	885	RS1/16S820J	C	206	CKSRYB102K50
	R	886	RS1/16S471J	C	207	CKSYB475K10
	R	887	RS1/16S820J	C	209	CEV220M6R3
	R	888	RS1/10S301J	C	210	CEV101M16
	R	889	RS1/10S301J	C	220	CKSRYB103K50
	R	890	RS1/16S153J	C	221	CKSRYB103K50
	R	891	RS1/16S121J	C	301	10μF/16V
	R	892	RS1/16S151J	C	302	10μF/16V
	R	893	RS1/16S0R0J	C	303	10μF/16V
	R	894	RS1/16S222J	C	304	10μF/16V
	R	895	RS1/16S472J	C	305	10μF/16V
	R	896	RS1/16S392J	C	306	10μF/16V
	R	897	RS1/10S0R0J	C	307	10μF/16V
	R	898	RS1/10S0R0J	C	308	10μF/16V
	R	900	RS1/16S102J	C	309	10μF/16V
E	R	913	RS1/16S332J	C	310	4.7μF/35V
	R	914	RS1/16S221J	C	311	4.7μF/35V
	R	915	RS1/16S221J	C	312	4.7μF/35V
	R	916	RS1/16S271J	C	313	4.7μF/35V
	R	917	RS1/16S271J	C	314	4.7μF/35V
	R	971	RS1/16S221J	C	315	10μF/16V
	R	972	RS1/16S621J	C	316	10μF/16V
	R	973	RS1/16S473J	C	317	10μF/16V
	R	974	RS1/16S361J	C	318	10μF/16V
	R	975	RS1/16S0R0J	C	319	10μF/16V
F				C	320	CKSRYB224K10
				C	321	CKSRYB105K6R3
				C	322	CKSRYB105K6R3
				C	323	CKSRYB102K50
				C	324	CKSRYB105K6R3

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
C 325 C 326 C 327 C 328 C 329	47μF/16V CKSRYB105K6R3 CCH1413 CKSRYB224K10 CKSRYB104K16 CKSRYB105K6R3	C 393 C 394 C 395 C 396 C 397	10μF/16V CCH1442 CKSYB475K10 CKSYB475K10 CKSRYB473K50 CKSRYB104K16	A
C 330 C 331 C 332 C 333 C 334	47μF/16V CKSRYB105K6R3 CKSRYB105K6R3 CKSRYB105K6R3 CCH1413 CKSYB475K10	C 398 C 399 C 404 C 501 C 502	10μF/16V CKSRYB104K16 CKSRYB104K16 CCG1138 CKSYB106K6R3 CKSYB106K6R3	
C 335 C 336 C 337 C 338 C 339	CKSYB475K10 CKSYB475K10 CKSYB475K10 CKSYB475K10 CKSYB475K10	C 503 C 504 C 505 C 506 C 507	CKSYB106K6R3 CKSYB106K6R3 CKSYB106K6R3 CKSYB106K6R3 CKSYB106K6R3	B
C 340 C 341 C 345 C 346 C 347	10μF/16V CKSYB475K10 CKSYB475K10 CCSRCH100D50 CCSRCH100D50 CCH1442	C 508 C 509 C 511 C 512 C 514	CKSYB106K6R3 CKSYB106K6R3 CCSRCH6R0D50 CKSRYB105K6R3 CCSRCH6R0D50	
C 348 C 349 C 350 C 351 C 352	CKSRYB104K16 CKSRYB104K16 CCSRCH100D50 CCSRCH100D50 CCSRCH100D50	C 515 C 517 C 518 C 519 C 520	CKSRYB105K6R3 CKSRYB105K6R3 CCSRCH6R0D50 CKSRYB102K50 CKSYB106K6R3	
C 353 C 354 C 355 C 356 C 357	10μF/16V CCSRCH100D50 CCH1442 CKSYB475K10 CEVL101M10 CCH1483	C 521 C 522 C 523 C 524 C 525	CKSRYB104K16 CKSYB106K6R3 CKSRYB102K50 CKSYB106K6R3 CKSRYB104K16	C
C 358 C 359 C 360 C 361 C 362	CKSQYB225K10 CKSQYB225K10 CKSQYB225K10 CKSQYB225K10 CKSQYB225K10	C 526 C 527 C 528 C 529 C 530	CCSRCH6R0D50 CKSRYB102K50 CKSYB106K6R3 CKSRYB104K16 CKSRYB105K6R3	
C 363 C 364 C 365 C 366 C 367	CKSQYB225K10 CKSRYB105K10 CKSRYB105K10 CKSRYB105K10 CKSRYB105K10	C 531 C 533 C 534 C 535 C 536	CKSRYB105K6R3 CCSRCH6R0D50 CKSRYB105K6R3 CKSRYB102K50 CKSRYB104K16	D
C 368 C 369 C 370 C 371 C 372	10μF/16V CKSRYB105K10 CKSRYB105K10 CKSRYB105K10 CCH1442	C 537 C 539 C 540 C 541 C 542	CKSRYB105K6R3 CKSRYB105K6R3 CKSRYB102K50 CKSYB106K6R3 CKSRYB104K16	
C 373 C 374 C 375 C 376 C 377	33μF/25V CKSRYB105K10 CCH1444 CKSYB684K16 CCH1442 CCH1442	C 543 C 544 C 545 C 546 C 547	CKSRYB105K6R3 CKSRYB105K6R3 CKSRYB105K6R3 CKSRYB105K6R3 CKSRYB105K6R3	
C 378 C 379 C 380 C 381 C 382	10μF/16V 33μF/25V 33μF/25V 3300μF/16V CCH1442 CCH1444 CCH1444 CKSRYB105K6R3 CCH1486	C 548 C 549 C 550 C 551 C 552	10μF/16V CCH1442 CKSRYB104K16 CKSRYB105K6R3 CEV221M4 CEV221M4	E
C 383 C 384 C 385 C 386 C 387	10μF/16V 10μF/16V 10μF/16V CKSRYB222K50 CKSRYB222K50	C 553 C 554 C 555 C 556 C 557	CEV221M4 CEV221M4 CEV101M16 CKSYB106K6R3 CKSYB106K6R3	
C 388 C 389 C 390 C 391 C 392	CKSRYB222K50 CKSRYB222K50 CKSRYB222K50 CKSRYB222K50 CKSRYB104K16	C 558 C 559 C 560 C 601 C 602	10μF/16V CCH1442 CKSYB106K6R3 CKSRYB223K50 CKSRYB105K6R3 CEV2R2M50	F

A	====Circuit Symbol and No.===Part Name		Part No.	====Circuit Symbol and No.===Part Name		Part No.
C	C	603	CCSRCH101J50	C	971	CCSRCH150J50
	C	604	CKSRYB105K6R3	C	972	CKSRYB104K16
	C	605	CKSRYB105K6R3	C	973	CKSYB106K6R3
	C	606	CCSRCH7R0D50			
	C	607	CCSRCH7R0D50			
C	C	608	CCSRCH100D50	Mother Unit Consists of Mother PCB Relay PCB Extension PCB		
	C	609	CCSRCH100D50			
	C	672	CKSRYB104K16			
	C	701	CKSRYB103K50			
	C	702	CKSRYB104K16			
C	C	703	CKSRYB105K10	A B C Unit Number : CWM8759(EW model) Unit Name : Mother Unit		
	C	704	CKSRYB104K16			
	C	705	CKSQYB104K25			
	C	706	CKSRYB104K16			
	C	707	CKSRYB104K16			
C	C	801	CKSRYB104K16	MISCELLANEOUS		
	C	802	CCH1413			
	C	803	CKSRYB103K50			
	C	806	CCH1413			
	C	810	CKSRYB104K16			
C	C	811	CCH1413	IC	151	IC
	C	812	CKSRYB103K50	IC	152	IC
	C	813	CKSRYB474K10	IC	153	IC
	C	814	CCH1437	IC	154	IC
	C	815	CCL1058	IC	155	IC
C	C	816	CKSRYB102K50	IC	201	IC
	C	817	CKSRYB105K6R3	IC	202	IC
	C	818	CCH1409	IC	203	IC
	C	819	CKSRYB102K50	IC	301	IC
	C	820	CKSYB475K10	IC	302	IC
C	C	824	CEHAZL471M16	IC	303	IC
	C	826	CKSYB225K16	IC	304	IC
	C	827	CKSYB225K16	IC	305	IC
	C	828	CEV1R0M50	IC	306	IC
	C	829	CKSRYB102K50	IC	307	IC
C	C	830	CKSYB475K10	IC	308	IC
	C	831	CKSRYB103K50	IC	309	IC
	C	832	CCSRCH121J50	IC	501	IC
	C	835	CKSYB475K16	IC	502	IC
	C	836	CCH1405	IC	503	IC
C	C	838	CCH1437	IC	504	IC
	C	839	CCH1413	IC	505	IC
	C	840	CKSRYB474K10	IC	506	IC
	C	841	CKSRYB104K16	IC	507	IC
	C	842	CKSRYB104K16	IC	601	IC
C	C	843	CKSYB475K16	IC	602	IC
	C	844	CEHAZL471M16	IC	801	IC
	C	846	CCH1442	IC	803	IC
	C	847	CKSRYB103K50	IC	804	IC
	C	848	CKSRYB103K50	IC	805	IC
C	C	849	CEV101M16	IC	806	IC
	C	850	CCL1059	IC	807	IC
	C	851	CKSRYB103K50	IC	971	IC
	C	852	CKSRYB103K50	Q	101	Transistor
	C	853	CEV101M16	Q	102	Transistor
C	C	854	CKSRYB104K16	Q	103	Transistor
	C	855	CKSRYB104K16	Q	104	Transistor
	C	856	CCH1442	Q	105	Transistor
	C	857	CKSRYB102K50	Q	106	Transistor
	C	858	CEV101M16	Q	107	Transistor
C	C	870	CKSYB225K16	Q	108	Transistor
	C	874	CKSRYB104K16	Q	109	Transistor
	C	878	CCH1228	Q	110	Transistor
	C	882	CCH1428	Q	111	Transistor
	C	883	CCH1228	Q	112	Transistor
C	C	878	CCH1228	Q	113	Transistor
	C	882	CCH1428	Q	115	Transistor
	C	882	CCH1428	Q	116	Transistor
	C	883	CCH1228	Q	117	Transistor
	C	883	CCH1228	Q	118	Transistor

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.	A
Q 119 Transistor	2SA1576	Q 828 Transistor	2SA1797	
Q 120 Transistor	DTC124EU	Q 829 Transistor	DTC124EU	
Q 121 Transistor	DTC144EU	Q 830 Transistor	DTC124EU	
Q 122 Transistor	2SA1577	Q 832 Transistor	2SA1576	
Q 124 Transistor	2SA1577	Q 833 Transistor	2SD1767	
Q 125 Transistor	UMH1N	Q 834 Transistor	2SA1576	
Q 126 Transistor	2SC2412K	Q 835 Transistor	DTC124EU	
Q 151 Transistor	2SC4081	Q 838 Transistor	DTC124EU	
Q 152 Transistor	2SA1576	Q 839 Transistor	2SA1576	
Q 153 Transistor	DTC124EU	Q 840 Transistor	DTC124EU	
Q 201 Transistor	DTC323TU	Q 841 Transistor	2SB1184F5	
Q 203 Transistor	DTC323TU	Q 842 Transistor	2SD1767	
Q 205 Transistor	2SA1576	Q 843 Transistor	DTC114EU	B
Q 206 Transistor	DTC124EU	Q 844 Transistor	2SA1615-Z	
Q 207 Transistor	IMD2A	Q 851 Transistor	2SD2375	
Q 301 Transistor	2SC2412K	Q 852 Transistor	IMD2A	
Q 302 Transistor	DTC323TU	Q 854 Transistor	2SA1577	
Q 303 Transistor	DTC323TU	Q 855 Transistor	DTC124EU	
Q 304 Transistor	DTC323TU	Q 903 Transistor	2SA1797	
Q 305 Transistor	IMD2A	Q 904 Transistor	DTC124EU	
Q 306 Transistor	2SA1576	D 101 Diode	UDZS5R6(B)	
Q 307 Transistor	DTC124EU	D 102 Diode Network	DA204U	
Q 308 Transistor	2SA1576	D 103 Diode Network	DA204U	
Q 309 Transistor	DTC124EU	D 104 Diode Network	DA204U	
Q 310 Transistor	2SC4081	D 105 Diode Network	DA204U	
Q 311 Transistor	DTC323TU	D 106 Diode Network	DA204U	C
Q 312 Transistor	DTC323TU	D 107 Diode Network	DA204U	
Q 313 Transistor	DTC323TU	D 108 Diode	1SS355	
Q 314 Transistor	DTC323TU	D 109 Diode	1SS355	
Q 315 Transistor	DTC323TU	D 110 Diode Network	DA204U	
Q 316 Transistor	DTC323TU	D 151 Diode	HZU2R7(B1)	
Q 317 Transistor	DTC144EU	D 152 Diode	HZU2R7(B1)	
Q 318 Transistor	IMD2A	D 153 Diode	HZU2R7(B1)	
Q 319 Transistor	IMD2A	D 154 Diode	HZU2R7(B1)	
Q 501 Transistor	2SC4081	D 155 Diode	HZU2R7(B1)	
Q 502 Transistor	2SC4081	D 156 Diode	HZU2R7(B1)	
Q 503 Transistor	2SC4081	D 157 Diode	UDZS5R6(B)	
Q 504 Transistor	2SC4081	D 158 Diode	UDZS5R6(B)	
Q 505 Transistor	2SC4081	D 159 Diode	UDZS5R6(B)	
Q 601 Transistor	DTC124EU	D 160 Diode	UDZS5R6(B)	D
Q 602 Transistor	2SC4081	D 161 Diode	HZU2R7(B1)	
Q 701 Transistor	2SA1576	D 162 Diode	HZU2R7(B1)	
Q 702 Transistor	IMX1	D 163 Diode	HZU2R7(B1)	
Q 703 Transistor	DTC114EU	D 164 Diode	HZU2R7(B1)	
Q 704 Transistor	2SA1576	D 165 Diode	UDZS5R6(B)	
Q 801 Transistor	2SD1767	D 166 Diode Network	DA204U	
Q 802 Transistor	IMD2A	D 167 Diode Network	DA204U	
Q 803 Transistor	2SA1797	D 302 Diode	MA111	
Q 804 Transistor	DTC124EU	D 303 Diode	DAN202U	
Q 805 Transistor	DTC124EU	D 304 Diode	DAN202U	
Q 806 Transistor	2SD1767	D 305 Diode	DAN202U	
Q 807 Transistor	DTC124EU	D 306 Diode	UDZS8R2(B)	
Q 808 Transistor	IMD2A	D 307 Diode	DAN202U	E
Q 811 Transistor	2SA1797	D 500 Diode	UDZ12(B)	
Q 815 Transistor	2SD1767	D 601 Diode	MA111	
Q 816 Transistor	2SA1577	D 602 Diode	DAN202U	
Q 817 Transistor	DTC124EU	D 701 Diode	DAN202U	
Q 818 Transistor	DTC124EU	D 702 Diode	HZU6R8(B3)	
Q 819 Transistor	2SA1797	D 703 Diode	S1G-6904G2P	
Q 820 Transistor	2SA1797	D 704 Diode	S1G-6904G2P	
Q 821 Transistor	DTC114EU	D 705 Diode	S1G-6904G2P	
Q 822 Transistor	2SJ529S	D 706 Diode	UDZS7R5(B)	
Q 824 Transistor	2SC4081	D 707 Diode	DAN202U	
Q 826 Transistor	2SJ529S	D 708 Diode	S1G-6904G2P	
Q 827 Transistor	2SJ529S	D 709 Diode	S1G-6904G2P	

	====Circuit Symbol and No.==Part Name			Part No.		====Circuit Symbol and No.==Part Name			Part No.
A	D	801	Diode	UDZS5R6(B)	VR	501	Semi-fixed 3.3kΩ(B)	CCP1393	
	D	802	Diode	HZU8R2(B1)	VR	801	Semi-fixed10kΩ(B)	CCP1396	
	D	803	Diode	HZU5R6(B2)	FU	151	Fuse 1A	CEK1280	
	D	805	Diode	UDZS5R6(B)	FU	154	Fuse 5A	CEK1289	
	D	806	Diode	S2G-6600	FU	155	Fuse 5A	CEK1289	
	D	807	Diode	S1G-6904G2P	FU	156	Fuse 5A	CEK1289	
	D	808	Diode	RB063L-30	FU	157	Fuse 5A	CEK1289	
	D	809	Diode	MA111	FU	158	Fuse 5A	CEK1289	
	D	812	Diode	RB063L-30	FU	201	Fuse 1A	CEK1280	
	D	813	Diode	SC802-06	FU	202	Fuse 1A	CEK1280	
B	D	814	Diode	RB063L-30	FU	203	Fuse 1A	CEK1280	
	D	815	Diode	S2G-6600	FU	204	Fuse 1A	CEK1280	
	D	816	Diode	RB063L-30	FU	205	Fuse 1A	CEK1280	
	D	817	Diode	HZU9R1(B1)	FU	206	Fuse 1A	CEK1280	
	D	819	Diode	DAN202U	FU	207	Fuse 1A	CEK1280	
	D	820	Diode	UDZS20(B)	FU	301	Fuse 5A	CEK1289	
	D	851	Diode	HZU10(B1)	FU	302	Fuse 4A	CEK1288	
	D	852	Diode	DAN202U	FU	701	Fuse 5A	CEK1289	
	D	853	Diode	S2G-6600	FU	801	Fuse 250mA	CEK1276	
	L	101	Inductor	CTF1399	FU	802	Fuse 3A	CEK1286	
	L	151	Inductor	LCTC2R2K1608	FU	803	Fuse 1.25A	CEK1281	
	L	201	Coil	CTH1295	FU	804	Fuse 1.75A	CEK1283	
	L	202	Inductor	CTF1399	FU	805	Fuse 1.75A	CEK1283	
	L	203	Inductor	CTF1305	FU	806	Fuse 3A	CEK1286	
	L	204	Inductor	CTF1305	FU	807	Fuse 2.3A	ICPS2R3	
C	L	205	Inductor	CTF1399	FU	808	Fuse 1A	CEK1280	
	L	206	Inductor	CTF1399	FU	901	Fuse 1A	CEK1280	
	L	207	Inductor	CTF1379	EF	801	EMI Filter	CCG1142	
	L	301	Inductor	CTF1399	BZ	101	Buzzer	CPV1063	
	L	302	Inductor	CTF1399	RESISTORS				
	L	303	Inductor	CTF1399					
	L	304	Inductor	LCTA2R2J2520	R	101		RS1/16S332J	
	L	305	Inductor	CTF1399	R	102		RS1/16S332J	
	L	307	Inductor	CTF1379	R	103		RS1/16S223J	
	L	308	Inductor	CTF1379	R	104		RAB4C222J	
D					R	105		RS1/16S102J	
	L	310	Inductor	CTF1399					
	L	311	Inductor	CTF1399	R	106		RS1/16S102J	
	L	312	Inductor	LCTA101J2520	R	107		RS1/16S222J	
	L	501	Inductor	CTF1399	R	109		RS1/16S104J	
	L	502	Inductor	CTF1399	R	110		RS1/16S103J	
					R	111		RS1/16S102J	
	L	503	Inductor	CTF1399					
	L	504	Inductor	CTF1399	R	112		RS1/16S102J	
	L	505	Inductor	CTF1399	R	113		RS1/16S223J	
	L	506	Inductor	LCTA100J2520	R	114		RS1/16S473J	
	L	507	Inductor	CTF1383	R	115		RS1/16S472J	
					R	116		RS1/16S472J	
	L	508	Inductor	CTF1383					
	L	509	Inductor	LCTA150J2520	R	117		RS1/16S223J	
E	L	601	Inductor	LCTA2R2J2520	R	118		RS1/16S472J	
	L	602	Inductor	CTF1306	R	119		RS1/16S473J	
	L	603	Inductor	CTF1306	R	120		RS1/16S473J	
					R	123		RS1/16S102J	
	L	604	Inductor	CTF1306					
	L	701	Inductor	LCTC2R2K1608	R	124		RS1/16S103J	
	L	702	Inductor	LCTC2R2K1608	R	125		RS1/16S223J	
	L	801	Coil	CTH1295	R	126		RS1/16S472J	
	L	803	Coil	CTH1295	R	127		RS1/16S223J	
					R	128		RS1/16S472J	
	L	804	Inductor	CTF1379					
	L	805	Coil	CTH1295	R	129		RS1/16S473J	
	L	806	Coil	CTH1295	R	130		RS1/16S332J	
	L	807	Coil	CTH1267	R	131		RS1/16S332J	
	L	812	Coil	CTH1295	R	132		RS1/16S223J	
					R	133		RS1/16S472J	
	L	813	Choke Coil 270μH	CTH1263					
	L	901	Inductor	CTF1395	R	134		RS1/16S103J	
	L	902	Inductor	CTF1379	R	135		RS1/16S223J	
	L	971	Inductor	CTF1379	R	137		RS1/16S472J	
X	601	Resonator18.874MHz	CSS1622	R	138		RS1/16S102J		
				R	139		RS1/16S472J		

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.	
R 140	RS1/16S472J	R 217	RS1/16S101J	A
R 141	RS1/16S822J	R 219	RS1/16S681J	
R 142	RS1/16S102J	R 220	RS1/16S0R0J	
R 144	RS1/16S223J	R 301	RS1/16S101J	
R 148	RS1/16S223J	R 302	RS1/16S222J	
R 149	RS1/16S223J	R 304	RS1/16S392J	
R 150	RS1/16S103J	R 305	RS1/16S472J	
R 151	RS1/16S223J	R 306	RS1/16S0R0J	
R 152	RS1/16S181J	R 307	RS1/16S473J	
R 153	RS1/16S181J	R 308	RS1/16S103J	
R 154	RS1/16S223J	R 309	RS1/16S473J	
R 155	RS1/16S681J	R 310	RS1/16S473J	
R 156	RS1/16S681J	R 311	RS1/16S472J	B
R 157	RS1/16S150J	R 312	RS1/16S472J	
R 158	RS1/16S470J	R 313	RS1/16S103J	
R 159	RS1/16S222J	R 314	RS1/16S102J	
R 160	RS1/16S101J	R 315	RS1/16S222J	
R 161	RS1/16S151J	R 316	RS1/16S472J	
R 162	RS1/16S151J	R 317	RS1/16S473J	
R 163	RS1/16S151J	R 318	RS1/16S473J	
R 164	RS1/16S151J	R 319	RS1/16S223J	
R 165	RS1/16S151J	R 321	RS1/16S472J	
R 166	RS1/16S101J	R 322	RS1/16S103J	
R 167	RS1/16S151J	R 323	RS1/16S473J	
R 168	RS1/16S473J	R 324	RS1/16S223J	
R 169	RS1/16S473J	R 325	RS1/16S821J	C
R 170	RS1/16S681J	R 326	RS1/16S473J	
R 171	RS1/16S681J	R 327	RS1/16S473J	
R 172	RS1/16S473J	R 328	RS1/16S223J	
R 173	RS1/16S102J	R 329	RS1/16S223J	
R 174	RS1/16S102J	R 330	RS1/16S181J	
R 175	RS1/16S123J	R 331	RS1/16S181J	
R 176	RS1/16S223J	R 332	RS1/16S102J	
R 177	RS1/16S123J	R 333	RS1/16S102J	
R 178	RS1/16S123J	R 335	RS1/16S103J	
R 179	RS1/16S223J	R 336	RS1/16S102J	
R 180	RS1/16S123J	R 337	RS1/16S391J	
R 181	RS1/16S223J	R 338	RS1/16S391J	
R 182	RS1/16S223J	R 339	RS1/16S821J	D
R 183	RS1/16S181J	R 340	RS1/16S821J	
R 184	RS1/16S181J	R 341	RS1/16S103J	
R 185	RS1/16S102J	R 342	RS1/16S472J	
R 186	RS1/16S102J	R 343	RS1/16S104J	
R 187	RS1/16S332J	R 344	RS1/16S104J	
R 188	RS1/16S562J	R 345	RS1/16S103J	
R 189	RS1/16S102J	R 346	RS1/16S103J	
R 190	RS1/16S473J	R 347	RS1/16S223J	
R 192	RS1/16S151J	R 348	RS1/16S223J	
R 193	RS1/16S103J	R 349	RS1/16S103J	
R 194	RS1/16S151J	R 350	RS1/16S103J	
R 195	RS1/16S102J	R 351	RS1/16S104J	
R 196	RS1/16S473J	R 352	RS1/16S103J	E
R 197	RS1/16S473J	R 353	RS1/16S103J	
R 198	RS1/16S102J	R 354	RS1/16S103J	
R 199	RS1/16S102J	R 355	RS1/16S103J	
R 201	RAB4C102J	R 356	RS1/16S0R0J	
R 202	RAB4C102J	R 359	RS1/16S0R0J	
R 203	RS1/16S473J	R 360	RS1/16S0R0J	
R 204	RS1/16S0R0J	R 361	RS1/16S0R0J	
R 207	RS1/16S750J	R 362	RS1/16S0R0J	
R 209	RS1/16S0R0J	R 363	RS1/16S0R0J	
R 212	RS1/16S332J	R 364	RS1/16S223J	
R 213	RS1/16S332J	R 365	RS1/16S103J	
R 214	RS1/16S512J	R 366	RS1/16S471J	
R 216	RS1/16S0R0J	R 367	RS1/16S471J	

F

A	====Circuit Symbol and No.==Part Name		Part No.	====Circuit Symbol and No.==Part Name		Part No.
	---	-----		---	-----	
	R	368	RS1/16S223J	R	542	RS1/16S102J
	R	369	RS1/16S103J	R	543	RS1/16S392J
	R	370	RS1/16S223J	R	544	RS1/16S472J
	R	371	RS1/16S103J	R	545	RS1/16S472J
	R	372	RS1/16S221J	R	546	RS1/16S472J
	R	373	RS1/16S103J	R	547	RS1/16S101J
	R	374	RS1/16S820J	R	548	RS1/16S102J
	R	375	RS1/16S820J	R	549	RS1/16S0R0J
	R	376	RS1/16S101J	R	550	RS1/16S0R0J
	R	377	RS1/16S473J	R	551	RS1/16S392J
B	R	378	RS1/16S103J	R	552	RS1/16S472J
	R	379	RS1/16S820J	R	553	RS1/16S0R0J
	R	380	RS1/16S223J	R	554	RS1/16S562J
	R	381	RS1/16S820J	R	555	RS1/16S562J
	R	382	RS1/16S820J	R	556	RS1/16S562J
	R	383	RS1/16S223J	R	557	RS1/16S562J
	R	384	RS1/16S471J	R	558	RS1/16S0R0J
	R	385	RS1/16S223J	R	559	RS1/16S0R0J
	R	386	RS1/16S223J	R	561	RS1/16S0R0J
	R	387	RS1/16S471J	R	562	RS1/16S270J
	R	388	RS1/16S471J	R	564	RS1/16S102J
	R	389	RS1/16S471J	R	565	RS1/16S393J
	R	390	RS1/16S820J	R	566	RS1/16S152J
	R	391	RS1/16S223J	R	567	RS1/16S393J
	R	392	RS1/16S223J	R	568	RS1/16S473J
C	R	393	RS1/16S471J	R	569	RS1/16S473J
	R	394	RS1/16S471J	R	601	RS1/16S104J
	R	395	RS1/16S0R0J	R	602	RS1/16S102J
	R	396	RS1/16S0R0J	R	603	RS1/16S473J
	R	397	RS1/16S0R0J	R	604	RS1/16S0R0J
	R	503	RS1/16S472J	R	605	RS1/16S0R0J
	R	504	RS1/16S750J	R	606	RS1/16S473J
	R	506	RS1/16S472J	R	607	RS1/16S473J
	R	507	RS1/16S472J	R	608	RS1/16S473J
	R	508	RS1/16S750J	R	609	RS1/16S473J
	R	509	RS1/16S750J	R	610	RS1/16S473J
	R	512	RS1/16S750J	R	611	RS1/16S473J
	R	514	RS1/16S472J	R	613	RS1/16S473J
	R	515	RS1/16S472J	R	614	RS1/16S473J
	R	516	RS1/16S0R0J	R	615	RAB4C102J
D	R	517	RS1/16S472J	R	616	RAB4C102J
	R	518	RS1/16S102J	R	617	RAB4C102J
	R	519	RS1/16S101J	R	618	RS1/16S101J
	R	520	RS1/16S472J	R	619	RS1/16S101J
	R	521	RS1/16S472J	R	620	RS1/16S101J
	R	522	RS1/16S102J	R	621	RAB4C102J
	R	523	RS1/16S472J	R	622	RS1/16S473J
	R	524	RS1/16S472J	R	623	RS1/16S473J
	R	525	RS1/16S472J	R	624	RS1/16S473J
	R	526	RS1/16S102J	R	625	RS1/16S473J
	R	527	RS1/16S101J	R	626	RS1/16S102J
	R	528	RS1/16S472J	R	627	RS1/16S221J
	R	529	RS1/16S472J	R	633	RS1/16S472J
	R	530	RS1/16S472J	R	634	RS1/16S473J
	R	531	RS1/16S392J	R	635	RS1/16S473J
E	R	532	RS1/16S472J	R	636	RS1/16S473J
	R	533	RS1/16S392J	R	637	RS1/16S473J
	R	534	RS1/16S472J	R	638	RS1/16S473J
	R	535	RS1/16S472J	R	640	RS1/16S681J
	R	536	RS1/16S472J	R	642	RS1/16S681J
	R	537	RS1/16S392J	R	643	RS1/16S473J
	R	538	RS1/16S472J	R	644	RS1/16S102J
	R	539	RS1/16S101J	R	645	RS1/16S102J
	R	540	RS1/16S472J	R	646	RS1/16S102J
	R	541	RS1/16S472J	R	647	RS1/16S102J
F						

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
R 648	RS1/16S473J	R 838	RS1/16S3901D	A
R 649	RS1/16S473J	R 839	RS1/16S100J	
R 650	RS1/16S473J	R 840	RS1/16S0R0J	
R 651	RS1/16S103J	R 847	RS1/16S2203D	
R 652	RS1/16S473J	R 848	RS1/16S102J	
R 653	RAB4C102J	R 850	RS1/16S103J	B
R 654	RS1/16S473J	R 851	RS1/16S221J	
R 655	RAB4C681J	R 852	RS1/16S272J	
R 656	RS1/16S102J	R 853	RS1/16S0R0J	
R 657	RS1/16S102J	R 855	RS1/16S6801D	
R 658	RS1/16S681J	R 856	RS1/16S1502D	C
R 659	RS1/16S681J	R 857	RS1/16S272J	
R 660	RS1/16S472J	R 858	RS1/16S473J	
R 661	RS1/16S472J	R 860	RS1/16S6801D	
R 662	RS1/16S473J	R 861	RS1/16S102J	
R 663	RS1/16S0R0J	R 864	RS1/16S5602D	D
R 664	RS1/16S473J	R 865	RS1/16S1002D	
R 666	RS1/16S473J	R 868	RS1/16S102J	
R 668	RS1/16S473J	R 870	RS1/16S102J	
R 669	RS1/16S473J	R 871	RS1/16S1503D	
R 670	RS1/16S101J	R 872	RS1/16S0R0J	E
R 671	RS1/16S102J	R 873	RS1/16S8202D	
R 672	RS1/16S473J	R 874	RS1/16S3301D	
R 701	RS1/16S102J	R 875	RS1/16S473J	
R 702	RS1/16S473J	R 876	RS1/16S0R0J	
R 703	RS1/16S0R0J	R 877	RS1/16S472J	F
R 704	RS1/16S473J	R 878	RS1/16S103J	
R 705	RS1/16S473J	R 879	RS1/16S472J	
R 706	RS1/16S103J	R 880	RS1/16S103J	
R 707	RS1/16S103J	R 882	RS1/16S151J	
R 708	RS1/16S473J	R 883	RS1/16S103J	G
R 709	RS1/16S103J	R 884	RS1/16S103J	
R 710	RS1/16S104J	R 885	RS1/16S820J	
R 711	RS1/16S102J	R 886	RS1/16S471J	
R 712	RS1/16S472J	R 887	RS1/16S820J	
R 713	RS1/16S472J	R 888	RS1/10S301J	H
R 714	RS1/16S473J	R 889	RS1/10S301J	
R 715	RS1/16S472J	R 890	RS1/16S153J	
R 716	RS1/16S153J	R 891	RS1/16S121J	
R 801	RS1/16S561J	R 892	RS1/16S151J	
R 802	RS1/16S332J	R 893	RS1/16S0R0J	I
R 803	RS1/16S181J	R 894	RS1/16S222J	
R 805	RS1/16S102J	R 895	RS1/16S472J	
R 806	RS1/16S471J	R 896	RS1/16S392J	
R 807	RS1/16S471J	R 897	RS1/10S0R0J	
R 809	RS1/16S332J	R 898	RS1/10S0R0J	J
R 812	RS1/16S391J	R 900	RS1/16S102J	
R 813	RS1/16S391J	R 913	RS1/16S332J	
R 821	RS1/16S391J	R 914	RS1/16S221J	
R 822	RS1/16S472J	R 915	RS1/16S221J	
R 823	RS1/16S222J	R 916	RS1/16S271J	K
R 824	RS1/16S1203D	R 917	RS1/16S271J	
R 825	RS1/16S1502D	R 971	RS1/16S221J	
R 826	RS1/16S6802D	R 972	RS1/16S621J	
R 827	RS1/16S2201D	R 973	RS1/16S473J	
R 828	RS1/16S470J	R 974	RS1/16S361J	L
R 829	RS1/16S470J	R 975	RS1/16S0R0J	
R 830	RS1/16S101J	CAPACITORS		
R 831	RS1/16S101J	C 101	CKSRYB103K50	
R 832	RS1/16S472J	C 102	CKSRYB104K16	
R 833	RS1/16S560J	C 103	CKSRYB104K16	M
R 834	RS1/16S102J	C 103	CKSRYB104K16	
R 835	RS1/16S473J	C 104	CKSRYB103K50	
R 836	RS1/16S6200D	C 105	CKSRYB104K16	
R 837	RS1/16S3602D			

A	====Circuit Symbol and No.==Part Name		Part No.	====Circuit Symbol and No.==Part Name		Part No.
	C	106	CKSRYB104K16	C	328	CKSRYB104K16
	C	107	CKSRYB104K16	C	329	CKSRYB105K6R3
	C	108	CKSRYB104K16	C	330	CKSRYB105K6R3
	C	151	CKSRYB104K16	C	331	CKSRYB105K6R3
	C	152	CKSRYB471K50	C	332	CKSRYB105K6R3
	C	153	CKSRYB104K16	C	333	47μF/16V
	C	154	CKSRYB104K16	C	334	CCH1413
	C	155	CKSRYB104K16	C	335	CKSYB475K10
	C	156	CKSRYB104K16	C	336	CKSYB475K10
	C	157	CKSRYB105K6R3	C	337	CKSYB475K10
B	C	158	CKSRYB105K6R3	C	338	CKSYB475K10
	C	159	CKSRYB105K6R3	C	339	CKSYB475K10
	C	160	CKSRYB105K6R3	C	340	CKSYB475K10
	C	161	CKSRYB105K6R3	C	341	CKSYB475K10
	C	162	CKSRYB105K6R3	C	345	CCSRCH100D50
	C	163	CKSRYB105K6R3	C	346	CCSRCH100D50
	C	164	CKSRYB105K6R3	C	347	10μF/16V
	C	165	CKSYB475K10	C	348	CCH1442
	C	166	CKSRYB104K16	C	349	CKSRYB104K16
	C	167	CCH1442	C	350	CCSRCH100D50
	C	168	10μF/16V	C	351	CCSRCH100D50
	C	169	10μF/16V	C	352	CCSRCH100D50
	C	170	10μF/16V	C	353	CCSRCH100D50
	C	171	10μF/16V	C	354	10μF/16V
	C	172	10μF/16V	C	355	CCH1442
C	C	173	CKSRYB104K16	C	356	4.7μF/35V
	C	174	CKSRYB104K16	C	357	CEVL101M10
	C	175	10μF/16V	C	358	CCH1483
	C	201	CEV221M4	C	359	CKSQYB225K10
	C	202	CEV221M4	C	360	CKSQYB225K10
	C	203	CKSYB106K6R3	C	361	CKSQYB225K10
	C	205	CKSRYB102K50	C	362	CKSQYB225K10
	C	206	CKSRYB102K50	C	363	CKSQYB225K10
	C	207	CKSYB475K10	C	364	CKSRYB105K10
	C	209	CEV220M6R3	C	365	CKSRYB105K10
	C	210	CEV101M16	C	366	CKSRYB105K10
	C	220	CKSRYB103K50	C	367	CKSRYB105K10
	C	221	CKSRYB103K50	C	368	CKSRYB105K10
	C	301	10μF/16V	C	369	CKSRYB105K10
	C	302	CKSYB106K6R3	C	370	CKSRYB105K10
D	C	303	CKSQYB105K16	C	371	CKSRYB105K10
	C	304	CKSQYB105K16	C	372	10μF/16V
	C	305	10μF/16V	C	373	CCH1442
	C	306	10μF/16V	C	374	33μF/25V
	C	307	CCSRCH220J50	C	375	CCH1444
	C	308	CKSYB475K10	C	376	10μF/16V
	C	309	CKSRYB102K50	C	377	10μF/16V
	C	310	CCSRCH220J50	C	378	10μF/16V
	C	311	4.7μF/35V	C	379	33μF/25V
	C	312	4.7μF/35V	C	380	33μF/25V
	C	313	CKSRYB104K16	C	381	CKSRYB105K6R3
	C	314	CKSRYB104K16	C	382	3300μF/16V
	C	315	CKSRYB104K16	C	383	10μF/16V
	C	316	CCSRCH101J50	C	384	10μF/16V
	C	317	10μF/16V	C	385	10μF/16V
E	C	318	CKSRYB104K16	C	386	CKSRYB222K50
	C	319	CKSRYB104K16	C	387	CKSRYB222K50
	C	320	CKSRYB224K10	C	388	CKSRYB222K50
	C	321	CKSRYB105K6R3	C	389	CKSRYB222K50
	C	322	CKSRYB105K6R3	C	390	CKSRYB222K50
	C	323	CKSRYB102K50	C	391	CKSRYB222K50
	C	324	CKSRYB105K6R3	C	392	CKSRYB104K16
	C	325	CKSRYB105K6R3	C	393	10μF/16V
	C	326	47μF/16V	C	394	CCH1442
	C	327	CKSRYB224K10	C	395	CKSYB475K10

F

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
C 396	CKSRYB473K50	C 606	CCSRCH7R0D50	A
C 397	CKSRYB104K16	C 607	CCSRCH7R0D50	
C 398	CKSRYB104K16	C 608	CCSRCH100D50	
C 399	CKSRYB104K16	C 609	CCSRCH100D50	
C 404 10μF/16V	CCG1138	C 672	CKSRYB104K16	
C 501	CKSYB106K6R3	C 701	CKSRYB103K50	
C 502	CKSYB106K6R3	C 702	CKSRYB104K16	
C 503	CKSYB106K6R3	C 703	CKSRYB105K10	
C 504	CKSYB106K6R3	C 704	CKSRYB104K16	
C 505	CKSYB106K6R3	C 705	CKSQYB104K25	
C 506	CKSYB106K6R3	C 706	CKSRYB104K16	
C 507	CKSYB106K6R3	C 707	CKSRYB104K16	
C 508	CKSYB106K6R3	C 801	CKSRYB104K16	
C 509	CKSYB106K6R3	C 802 47μF/16V	CCH1413	B
C 511	CCSRCH6R0D50	C 803	CKSRYB103K50	
C 512	CKSRYB105K6R3	C 806 47μF/16V	CCH1413	
C 514	CCSRCH6R0D50	C 810	CKSRYB104K16	
C 515	CKSRYB105K6R3	C 811 47μF/16V	CCH1413	
C 517	CKSRYB105K6R3	C 812	CKSRYB103K50	
C 518	CCSRCH6R0D50	C 813	CKSRYB474K10	
C 519	CKSRYB102K50	C 814 470μF/6.3V	CCH1437	
C 520	CKSYB106K6R3	C 815 0.22μF/3.5V	CCL1058	
C 521	CKSRYB104K16	C 816	CKSRYB102K50	
C 522	CKSYB106K6R3	C 817	CKSRYB105K6R3	
C 523	CKSRYB102K50	C 818 220μF/10V	CCH1409	
C 524	CKSYB106K6R3	C 819	CKSRYB102K50	C
C 525	CKSRYB104K16	C 820	CKSYB475K10	
C 526	CCSRCH6R0D50	C 824	CEHAZL471M16	
C 527	CKSRYB102K50	C 826	CKSYB225K16	
C 528	CKSYB106K6R3	C 827	CKSYB225K16	
C 529	CKSRYB104K16	C 828	CEV1R0M50	
C 530	CKSRYB105K6R3	C 829	CKSRYB102K50	
C 531	CKSRYB105K6R3	C 830	CKSYB475K10	
C 533	CCSRCH6R0D50	C 831	CKSRYB103K50	
C 534	CKSRYB105K6R3	C 832	CCSRCH121J50	
C 535	CKSRYB102K50	C 835	CKSYB475K16	
C 536	CKSRYB104K16	C 836 2200μF/16V	CCH1405	
C 537	CKSRYB105K6R3	C 838 470μF/6.3V	CCH1437	
C 539	CKSRYB105K6R3	C 839 47μF/16V	CCH1413	
C 540	CKSRYB102K50	C 840	CKSRYB474K10	D
C 541	CKSYB106K6R3	C 841	CKSRYB104K16	
C 542	CKSRYB104K16	C 842	CKSRYB104K16	
C 543	CKSRYB105K6R3	C 843	CKSYB475K16	
C 544	CKSRYB105K6R3	C 844	CEHAZL471M16	
C 545	CKSRYB105K6R3	C 846 10μF/16V	CCH1442	
C 546	CKSRYB105K6R3	C 847	CKSRYB103K50	
C 547	CKSRYB105K6R3	C 848	CKSRYB103K50	
C 548 10μF/16V	CCH1442	C 849	CEV101M16	
C 549	CKSRYB104K16	C 850 0.1μF/5.5V	CCL1059	
C 550	CKSRYB105K6R3	C 851	CKSRYB103K50	
C 551	CEV221M4	C 852	CKSRYB103K50	
C 552	CEV221M4	C 853	CEV101M16	
C 553	CEV221M4	C 854	CKSRYB104K16	E
C 554	CEV221M4	C 855	CKSRYB104K16	
C 555	CEV101M16	C 856 10μF/16V	CCH1442	
C 556	CKSYB106K6R3	C 857	CKSRYB102K50	
C 557	CKSYB106K6R3	C 858	CEV101M16	
C 558 10μF/16V	CCH1442	C 870	CKSYB225K16	
C 559	CKSYB106K6R3	C 874	CKSRYB104K16	
C 560	CKSRYB223K50	C 878 100μF/16V	CCH1228	
C 601	CKSRYB105K6R3	C 882 1000μF/16V	CCH1428	
C 602	CEV2R2M50	C 883 100μF/16V	CCH1228	
C 603	CCSRCH101J50	C 971	CCSRCH150J50	
C 604	CKSRYB105K6R3	C 972	CKSRYB104K16	
C 605	CKSRYB105K6R3	C 973	CKSYB106K6R3	

F

====Circuit Symbol and No.===Part Name

Part No.

====Circuit Symbol and No.===Part Name

Part No.

Mother Unit

Consists of
Mother PCB
Relay PCB
Extension PCB

A B C

Unit Number : CWM8761(RC model)

Unit Number : CWM8762(RD model)

Unit Name : Mother Unit

MISCELLANEOUS

IC	151	IC	TA2050F
IC	152	IC	TA2050F
IC	154	IC	HA12187FP
IC	201	IC	TC74VHCT08AFT
IC	202	IC	SM5304AV

IC	203	IC	TC74VHC08FT
IC	303	IC	NJM4558V
IC	305	IC	PML009A
IC	308	IC	PAL007A
IC	309	IC	PA2028A

IC	501	IC	NJM2137V
IC	502	IC	NJM2137V
IC	504	IC	NJM2137V
IC	505	IC	NJM2137V
IC	506	IC	CXA2089Q

IC	507	IC	BA7623F
IC	601	IC	PE5348A
IC	602	IC	S-80841CNUA-B82
IC	801	IC	BA00BC0WFP
IC	803	IC	BP5451

IC	804	IC	S-818A33AUC-BGN
IC	805	IC	AN8011S
IC	806	IC	BA00BC0WFP
IC	807	IC	S-812C50AUA-C3E
IC	971	IC	TC7WT125FU

Q	101	Transistor	DTC124EU
Q	102	Transistor	2SA1576
Q	103	Transistor	IMD2A
Q	105	Transistor	DTA114EU
Q	106	Transistor	DTC144EU

Q	107	Transistor	2SC4081
Q	108	Transistor	2SC4081
Q	109	Transistor	DTC144EU
Q	110	Transistor	2SA1577
Q	111	Transistor	UMH1N

Q	113	Transistor	DTC124EU
Q	115	Transistor	2SA1577
Q	116	Transistor	DTC144EU
Q	117	Transistor	2SA1577
Q	118	Transistor	DTC124EU

Q	119	Transistor	2SA1576
Q	120	Transistor	DTC124EU
Q	126	Transistor	2SC2412K
Q	152	Transistor	2SA1576
Q	153	Transistor	DTC124EU

Q	201	Transistor	DTC323TU
Q	203	Transistor	DTC323TU
Q	205	Transistor	2SA1576
Q	206	Transistor	DTC124EU
Q	207	Transistor	IMD2A

Q	301	Transistor	2SC2412K
Q	303	Transistor	DTC323TU
Q	304	Transistor	DTC323TU
Q	305	Transistor	IMD2A
Q	307	Transistor	DTC124EU

Q	308	Transistor	2SA1576
Q	309	Transistor	DTC124EU
Q	310	Transistor	2SC4081
Q	311	Transistor	DTC323TU
Q	312	Transistor	DTC323TU

Q	313	Transistor	DTC323TU
Q	314	Transistor	DTC323TU
Q	315	Transistor	DTC323TU
Q	316	Transistor	DTC323TU
Q	317	Transistor	DTC144EU

Q	318	Transistor	IMD2A
Q	319	Transistor	IMD2A
Q	501	Transistor	2SC4081
Q	502	Transistor	2SC4081
Q	504	Transistor	2SC4081

Q	505	Transistor	2SC4081
Q	601	Transistor	DTC124EU
Q	602	Transistor	2SC4081
Q	701	Transistor	2SA1576
Q	702	Transistor	IMX1

Q	703	Transistor	DTC114EU
Q	704	Transistor	2SA1576
Q	801	Transistor	2SD1767
Q	802	Transistor	IMD2A
Q	803	Transistor	2SA1797

Q	804	Transistor	DTC124EU
Q	805	Transistor	DTC124EU
Q	806	Transistor	2SD1767
Q	807	Transistor	DTC124EU
Q	808	Transistor	IMD2A

Q	811	Transistor	2SA1797
Q	815	Transistor	2SD1767
Q	816	Transistor	2SA1577
Q	817	Transistor	DTC124EU
Q	818	Transistor	DTC124EU

Q	819	Transistor	2SA1797
Q	820	Transistor	2SA1797
Q	821	Transistor	DTC114EU
Q	822	Transistor	2SJ529S
Q	824	Transistor	2SC4081

Q	826	Transistor	2SJ529S
Q	827	Transistor	2SJ529S
Q	828	Transistor	2SA1797
Q	829	Transistor	DTC124EU
Q	830	Transistor	DTC124EU

Q	832	Transistor	2SA1576
Q	833	Transistor	2SD1767
Q	834	Transistor	2SA1576
Q	835	Transistor	DTC124EU
Q	838	Transistor	DTC124EU

Q	839	Transistor	2SA1576
Q	840	Transistor	DTC124EU
Q	841	Transistor	2SB1184F5
Q	842	Transistor	2SD1767
Q	843	Transistor	DTC114EU

Q	844	Transistor	2SA1615-Z
Q	851	Transistor	2SD2375
Q	852	Transistor	IMD2A
Q	854	Transistor	2SA1577
Q	855	Transistor	DTC124EU

====Circuit Symbol and No.===Part Name			Part No.	====Circuit Symbol and No.===Part Name			Part No.	
Q	903	Transistor	2SA1797	L	503	Inductor	CTF1399	A
Q	904	Transistor	DTC124EU	L	505	Inductor	CTF1399	
D	101	Diode	UDZS5R6(B)	L	506	Inductor	LCTA100J2520	
D	102	Diode Network	DA204U	L	507	Inductor	CTF1383	
D	103	Diode Network	DA204U	L	508	Inductor	CTF1383	
D	104	Diode Network	DA204U	L	509	Inductor	LCTA150J2520	
D	105	Diode Network	DA204U	L	601	Inductor	LCTA2R2J2520	B
D	106	Diode Network	DA204U	L	602	Inductor	CTF1306	
D	107	Diode Network	DA204U	L	603	Inductor	CTF1306	
D	108	Diode	1SS355	L	604	Inductor	CTF1306	
D	109	Diode	1SS355	L	701	Inductor	LCTC2R2K1608	
D	110	Diode Network	DA204U	L	702	Inductor	LCTC2R2K1608	
D	302	Diode	MA111	L	801	Coil	CTH1295	
D	303	Diode	DAN202U	L	803	Coil	CTH1295	
D	304	Diode	DAN202U	L	804	Inductor	CTF1379	
D	305	Diode	DAN202U	L	805	Coil	CTH1295	
D	306	Diode	UDZS8R2(B)	L	806	Coil	CTH1295	
D	307	Diode	DAN202U	L	807	Coil	CTH1267	
D	500	Diode	UDZ12(B)	L	812	Coil	CTH1295	
D	601	Diode	MA111	L	813	Choke Coil 270μH	CTH1263	
D	602	Diode	DAN202U	L	901	Inductor	CTF1395	
D	701	Diode	DAN202U	L	902	Inductor	CTF1379	
D	702	Diode	HZU6R8(B3)	L	971	Inductor	CTF1379	
D	703	Diode	S1G-6904G2P	X	601	Resonator 18.874MHz	CSS1622	
D	704	Diode	S1G-6904G2P	VR	501	Semi-fixed 3.3kΩ(B)	CCP1393	
D	705	Diode	S1G-6904G2P	VR	801	Semi-fixed 10kΩ(B)	CCP1396	C
D	706	Diode	UDZS7R5(B)	FU	151	Fuse 1A	CEK1280	
D	707	Diode	DAN202U	FU	158	Fuse 5A	CEK1289	
D	708	Diode	S1G-6904G2P	FU	201	Fuse 1A	CEK1280	
D	709	Diode	S1G-6904G2P	FU	202	Fuse 1A	CEK1280	
D	801	Diode	UDZS5R6(B)	FU	203	Fuse 1A	CEK1280	
D	802	Diode	HZU8R2(B1)	FU	204	Fuse 1A	CEK1280	
D	803	Diode	HZU5R6(B2)	FU	205	Fuse 1A	CEK1280	
D	805	Diode	UDZS5R6(B)	FU	206	Fuse 1A	CEK1280	
D	806	Diode	S2G-6600	FU	207	Fuse 1A	CEK1280	
D	807	Diode	S1G-6904G2P	FU	301	Fuse 5A	CEK1289	
D	808	Diode	RB063L-30	FU	302	Fuse 4A	CEK1288	
D	809	Diode	MA111	FU	701	Fuse 5A	CEK1289	
D	812	Diode	RB063L-30	FU	801	Fuse 250mA	CEK1276	D
D	813	Diode	SC802-06	FU	802	Fuse 3A	CEK1286	
D	814	Diode	RB063L-30	FU	803	Fuse 1.25A	CEK1281	
D	815	Diode	S2G-6600	FU	804	Fuse 1.75A	CEK1283	
D	816	Diode	RB063L-30	FU	805	Fuse 1.75A	CEK1283	
D	817	Diode	UDZS10(B)	FU	806	Fuse 3A	CEK1286	
D	819	Diode	DAN202U	FU	807	Fuse 2.3A	ICPS2R3	
D	820	Diode	UDZS20(B)	FU	808	Fuse 1A	CEK1280	
D	851	Diode	HZU10(B1)	FU	901	Fuse 1A	CEK1280	
D	852	Diode	DAN202U	EF	801	EMI Filter	CCG1142	
D	853	Diode	S2G-6600	BZ	101	Buzzer	CPV1063	
L	101	Inductor	CTF1399	TP	1	Test Pin	CKF1031	
L	151	Inductor	LCTC2R2K1608	TP	2	Test Pin	CKF1031	E
L	201	Coil	CTH1295	RESISTORS				
L	202	Inductor	CTF1399	R	101		RS1/16S332J	
L	203	Inductor	CTF1305	R	102		RS1/16S332J	
L	204	Inductor	CTF1305	R	103		RS1/16S223J	
L	205	Inductor	CTF1399	R	104		RAB4C222J	
L	206	Inductor	CTF1399	R	105		RS1/16S102J	
L	207	Inductor	CTF1379					
L	301	Inductor	CTF1399					
L	304	Inductor	LCTA2R2J2520	R	106		RS1/16S102J	
L	307	Inductor	CTF1379	R	107		RS1/16S222J	
L	308	Inductor	CTF1379	R	109		RS1/16S104J	
L	312	Inductor	LCTA101J2520	R	110		RS1/16S103J	
L	501	Inductor	CTF1399	R	111		RS1/16S102J	
L	502	Inductor	CTF1399					

A	====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
	R 112	RS1/16S102J	R 220	RS1/16S0R0J
	R 113	RS1/16S223J	R 302	RS1/16S222J
	R 114	RS1/16S473J	R 304	RS1/16S392J
	R 115	RS1/16S472J	R 305	RS1/16S472J
	R 116	RS1/16S472J	R 314	RS1/16S102J
	R 117	RS1/16S223J	R 315	RS1/16S222J
	R 118	RS1/16S472J	R 316	RS1/16S472J
	R 124	RS1/16S103J	R 317	RS1/16S473J
	R 125	RS1/16S223J	R 318	RS1/16S473J
	R 126	RS1/16S472J	R 321	RS1/16S472J
	R 127	RS1/16S223J	R 328	RS1/16S223J
B	R 128	RS1/16S472J	R 329	RS1/16S223J
	R 129	RS1/16S473J	R 330	RS1/16S181J
	R 130	RS1/16S332J	R 331	RS1/16S181J
	R 131	RS1/16S332J	R 332	RS1/16S102J
	R 136	RS1/16S0R0J	R 333	RS1/16S102J
	R 138	RS1/16S102J	R 336	RS1/16S102J
	R 139	RS1/16S472J	R 337	RS1/16S391J
	R 140	RS1/16S472J	R 338	RS1/16S391J
	R 141	RS1/16S822J	R 339	RS1/16S821J
	R 142	RS1/16S102J	R 340	RS1/16S821J
	R 144	RS1/16S223J	R 347	RS1/16S223J
	R 148	RS1/16S223J	R 348	RS1/16S223J
	R 149	RS1/16S223J	R 356	RS1/16S0R0J
	R 150	RS1/16S103J	R 357	RS1/16S0R0J
C	R 151	RS1/16S223J	R 358	RS1/16S0R0J
	R 152	RS1/16S181J	R 359	RS1/16S0R0J
	R 153	RS1/16S181J	R 360	RS1/16S0R0J
	R 154	RS1/16S223J	R 361	RS1/16S0R0J
	R 155	RS1/16S681J	R 362	RS1/16S0R0J
	R 156	RS1/16S681J	R 363	RS1/16S0R0J
	R 157	RS1/16S150J	R 364	RS1/16S223J
	R 158	RS1/16S470J	R 365	RS1/16S103J
	R 159	RS1/16S222J	R 366	RS1/16S471J
	R 160	RS1/16S101J	R 367	RS1/16S471J
	R 166	RS1/16S101J	R 368	RS1/16S223J
	R 173	RS1/16S102J	R 369	RS1/16S103J
	R 174	RS1/16S102J	R 370	RS1/16S223J
D	R 175	RS1/16S123J	R 371	RS1/16S103J
	R 176	RS1/16S223J	R 372	RS1/16S221J
	R 177	RS1/16S123J	R 373	RS1/16S103J
	R 178	RS1/16S123J	R 374	RS1/16S820J
	R 179	RS1/16S223J	R 375	RS1/16S820J
	R 180	RS1/16S123J	R 376	RS1/16S101J
	R 187	RS1/16S332J	R 377	RS1/16S473J
	R 188	RS1/16S562J	R 378	RS1/16S103J
	R 189	RS1/16S102J	R 379	RS1/16S820J
	R 190	RS1/16S473J	R 380	RS1/16S223J
	R 193	RS1/16S103J	R 381	RS1/16S820J
	R 195	RS1/16S102J	R 382	RS1/16S820J
	R 196	RS1/16S473J	R 383	RS1/16S223J
E	R 198	RS1/16S102J	R 384	RS1/16S471J
	R 199	RS1/16S102J	R 385	RS1/16S223J
	R 201	RAB4C102J	R 386	RS1/16S223J
	R 202	RAB4C102J	R 387	RS1/16S471J
	R 203	RS1/16S473J	R 388	RS1/16S471J
	R 204	RS1/16S0R0J	R 389	RS1/16S471J
	R 207	RS1/16S750J	R 390	RS1/16S820J
	R 209	RS1/16S0R0J	R 391	RS1/16S223J
	R 212	RS1/16S332J	R 392	RS1/16S223J
	R 213	RS1/16S332J	R 393	RS1/16S471J
	R 214	RS1/16S512J	R 394	RS1/16S471J
	R 216	RS1/16S0R0J	R 395	RS1/16S0R0J
	R 217	RS1/16S101J	R 396	RS1/16S0R0J
	R 219	RS1/16S681J	R 397	RS1/16S0R0J
F				

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.	
R 503	RS1/16S472J	R 617	RAB4C102J	A
R 504	RS1/16S750J	R 621	RAB4C102J	
R 506	RS1/16S472J	R 622	RS1/16S473J	
R 507	RS1/16S472J	R 623	RS1/16S473J	
R 508	RS1/16S750J	R 624	RS1/16S473J	
R 512	RS1/16S750J	R 625	RS1/16S473J	
R 514	RS1/16S472J	R 626	RS1/16S102J	
R 515	RS1/16S472J	R 627	RS1/16S221J	
R 516	RS1/16S0R0J	R 633	RS1/16S472J	
R 517	RS1/16S472J	R 634	RS1/16S473J	
R 518	RS1/16S102J	R 635	RS1/16S473J	B
R 519	RS1/16S101J	R 636	RS1/16S473J	
R 520	RS1/16S472J	R 637	RS1/16S473J	
R 521	RS1/16S472J	R 638	RS1/16S473J	
R 522	RS1/16S102J	R 639	RS1/16S473J	
R 529	RS1/16S472J	R 640	RS1/16S681J	
R 530	RS1/16S472J	R 641	RS1/16S473J	
R 531	RS1/16S392J	R 642	RS1/16S681J	
R 532	RS1/16S472J	R 643	RS1/16S473J	
R 533	RS1/16S392J	R 644	RS1/16S102J	
R 534	RS1/16S472J	R 645	RS1/16S102J	
R 535	RS1/16S472J	R 646	RS1/16S102J	
R 536	RS1/16S472J	R 647	RS1/16S102J	
R 539	RS1/16S101J	R 648	RS1/16S473J	
R 540	RS1/16S472J	R 649	RS1/16S473J	
R 541	RS1/16S472J	R 650	RS1/16S473J	C
R 542	RS1/16S102J	R 651	RS1/16S103J	
R 543	RS1/16S392J	R 652	RS1/16S473J	
R 544	RS1/16S472J	R 653	RAB4C102J	
R 545	RS1/16S472J	R 654	RS1/16S473J	
R 546	RS1/16S472J	R 655	RAB4C681J	
R 547	RS1/16S101J	R 656	RS1/16S102J	
R 548	RS1/16S102J	R 657	RS1/16S102J	
R 550	RS1/16S0R0J	R 658	RS1/16S681J	
R 551	RS1/16S392J	R 659	RS1/16S681J	
R 552	RS1/16S472J	R 660	RS1/16S472J	
R 553	RS1/16S0R0J	R 661	RS1/16S472J	
R 556	RS1/16S562J	R 662	RS1/16S473J	
R 557	RS1/16S562J	R 663	RS1/16S0R0J	
R 558	RS1/16S0R0J	R 664	RS1/16S473J	
R 559	RS1/16S0R0J	R 666	RS1/16S473J	D
R 561	RS1/16S0R0J	R 668	RS1/16S473J	
R 562	RS1/16S270J	R 669	RS1/16S473J	
R 564	RS1/16S102J	R 670	RS1/16S101J	
R 565	RS1/16S393J	R 671	RS1/16S102J	
R 566	RS1/16S152J	R 672	RS1/16S473J	
R 567	RS1/16S393J	R 701	RS1/16S102J	
R 568	RS1/16S473J	R 702	RS1/16S473J	
R 569	RS1/16S473J	R 703	RS1/16S0R0J	
R 601	RS1/16S104J	R 704	RS1/16S473J	
R 602	RS1/16S102J	R 705	RS1/16S473J	E
R 603	RS1/16S473J	R 706	RS1/16S103J	
R 604	RS1/16S0R0J	R 707	RS1/16S103J	
R 605	RS1/16S0R0J	R 708	RS1/16S473J	
R 606	RS1/16S473J	R 709	RS1/16S103J	
R 607	RS1/16S473J	R 710	RS1/16S104J	
R 608	RS1/16S473J	R 711	RS1/16S102J	
R 609	RS1/16S473J	R 712	RS1/16S472J	
R 610	RS1/16S473J	R 713	RS1/16S472J	
R 611	RS1/16S473J	R 714	RS1/16S473J	
R 612	RS1/16S473J	R 715	RS1/16S472J	
R 613 (RC model)	RS1/16S473J	R 716	RS1/16S153J	
R 614	RS1/16S473J	R 801	RS1/16S561J	
R 615	RAB4C102J	R 802	RS1/16S332J	
R 616	RAB4C102J	R 803	RS1/16S181J	

A	====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
	R 805	RS1/16S102J	R 895	RS1/16S472J
	R 806	RS1/16S471J	R 896	RS1/16S392J
	R 807	RS1/16S471J	R 897	RS1/10S0R0J
	R 809	RS1/16S332J	R 898	RS1/10S0R0J
	R 812	RS1/16S391J	R 900	RS1/16S121J
	R 813	RS1/16S391J	R 913	RS1/16S332J
	R 821	RS1/16S391J	R 914	RS1/16S221J
	R 822	RS1/16S472J	R 915	RS1/16S221J
	R 823	RS1/16S222J	R 916	RS1/16S271J
	R 824	RS1/16S1203D	R 917	RS1/16S271J
	R 825	RS1/16S1502D	R 971	RS1/16S221J
	R 826	RS1/16S6802D	R 972	RS1/16S621J
B	R 827	RS1/16S2201D	R 973	RS1/16S473J
	R 828	RS1/16S470J	R 974	RS1/16S361J
	R 829	RS1/16S470J	R 975	RS1/16S0R0J
	R 830	RS1/16S101J	CAPACITORS	
	R 831	RS1/16S101J	C 101	CKSRYB103K50
	R 832	RS1/16S472J	C 102	CKSRYB104K16
	R 833	RS1/16S560J	C 103	CKSRYB104K16
	R 834	RS1/16S102J	C 104	CKSRYB103K50
	R 835	RS1/16S473J	C 105	CKSRYB104K16
	R 836	RS1/16S6200D		
	R 837	RS1/16S3602D	C 106	CKSRYB104K16
	R 838	RS1/16S3901D	C 151	CKSRYB104K16
	R 839	RS1/16S100J	C 153	CKSRYB104K16
	R 840	RS1/16S0R0J	C 154	CKSRYB104K16
C	R 847	RS1/16S2203D	C 155	CKSRYB104K16
	R 848	RS1/16S102J	C 156	CKSRYB104K16
	R 850	RS1/16S103J	C 157	CKSRYB105K6R3
	R 851	RS1/16S221J	C 158	CKSRYB105K6R3
	R 852	RS1/16S272J	C 159	CKSRYB105K6R3
	R 853	RS1/16S0R0J	C 160	CKSRYB105K6R3
	R 855	RS1/16S6801D	C 165	CKSYB475K10
	R 856	RS1/16S1502D	C 167	CCH1442
	R 857	RS1/16S272J	C 168	CCH1442
	R 858	RS1/16S473J	C 169	CKSRYB104K16
	R 860	RS1/16S6801D	C 170	CCH1442
	R 861	RS1/16S102J		
	R 864	RS1/16S5602D	C 171	CCH1442
D	R 865	RS1/16S1002D	C 173	CKSRYB104K16
	R 868	RS1/16S102J	C 201	CEV221M4
	R 870	RS1/16S102J	C 202	CEV221M4
	R 871	RS1/16S1503D	C 203	CKSYB106K6R3
	R 872	RS1/16S0R0J	C 205	CKSRYB102K50
	R 873	RS1/16S8202D	C 206	CKSRYB102K50
	R 874	RS1/16S3301D	C 207	CKSYB475K10
	R 875	RS1/16S473J	C 209	CEV220M6R3
	R 876	RS1/16S0R0J	C 210	CEV101M16
	R 877	RS1/16S472J	C 220	CKSRYB103K50
	R 878	RS1/16S103J	C 221	CKSRYB103K50
	R 879	RS1/16S472J	C 301	CCH1442
	R 880	RS1/16S103J	C 302	CKSYB106K6R3
	R 882	RS1/16S151J	C 306	CCH1442
	R 883	RS1/16S103J		
	R 884	RS1/16S103J	C 307	CCSRCH220J50
	R 885	RS1/16S820J	C 308	CKSYB475K10
	R 886	RS1/16S471J	C 309	CKSRYB102K50
	R 887	RS1/16S820J	C 310	CCSRCH220J50
	R 888	RS1/10S301J	C 311	CCH1483
	R 889	RS1/10S301J	C 312	CCH1483
	R 890	RS1/16S153J	C 320	CKSRYB224K10
	R 891	RS1/16S121J	C 321	CKSRYB105K6R3
	R 892	RS1/16S151J	C 322	CKSRYB105K6R3
	R 893	RS1/16S0R0J	C 323	CKSRYB102K50
	R 894	RS1/16S222J	C 324	CKSRYB105K6R3
			C 325	CKSRYB105K6R3
			C 326	CCH1413
			C 327	CKSRYB224K10
			C 328	CKSRYB104K16

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.	A
C 329	CKSRYB105K6R3	C 404 10μF/16V	CCG1138	
C 330	CKSRYB105K6R3	C 501	CKSYB106K6R3	
C 331	CKSRYB105K6R3	C 502	CKSYB106K6R3	
C 332	CKSRYB105K6R3	C 503	CKSYB106K6R3	
C 333 47μF/16V	CCH1413	C 504	CKSYB106K6R3	
C 334	CKSYB475K10	C 505	CKSYB106K6R3	
C 335	CKSYB475K10	C 508	CKSYB106K6R3	
C 336	CKSYB475K10	C 509	CKSYB106K6R3	
C 337	CKSYB475K10	C 511	CCSRCH6R0D50	
C 338	CKSYB475K10	C 512	CKSRYB105K6R3	
C 339	CKSYB475K10	C 514	CCSRCH6R0D50	
C 340	CKSYB475K10	C 515	CKSRYB105K6R3	
C 341	CKSYB475K10	C 519	CKSRYB102K50	B
C 345	CCSRCH100D50	C 520	CKSYB106K6R3	
C 346	CCSRCH100D50	C 521	CKSRYB104K16	
C 347 10μF/16V	CCH1442	C 522	CKSYB106K6R3	
C 348	CKSRYB104K16	C 523	CKSRYB102K50	
C 349	CKSRYB104K16	C 524	CKSYB106K6R3	
C 350	CCSRCH100D50	C 525	CKSRYB104K16	
C 351	CCSRCH100D50	C 526	CCSRCH6R0D50	
C 352	CCSRCH100D50	C 531	CKSRYB105K6R3	
C 353	CCSRCH100D50	C 533	CCSRCH6R0D50	
C 354 10μF/16V	CCH1442	C 534	CKSRYB105K6R3	
C 355	CKSYB475K10	C 535	CKSRYB102K50	
C 356	CEVL101M10	C 536	CKSRYB104K16	
C 357 4.7μF/35V	CCH1483	C 537	CKSRYB105K6R3	C
C 358	CKSQYB225K10	C 539	CKSRYB105K6R3	
C 359	CKSQYB225K10	C 540	CKSRYB102K50	
C 360	CKSQYB225K10	C 541	CKSYB106K6R3	
C 361	CKSQYB225K10	C 542	CKSRYB104K16	
C 362	CKSQYB225K10	C 545	CKSRYB105K6R3	
C 363	CKSQYB225K10	C 546	CKSRYB105K6R3	
C 364	CKSRYB105K10	C 547	CKSRYB105K6R3	
C 365	CKSRYB105K10	C 548 10μF/16V	CCH1442	
C 366	CKSRYB105K10	C 549	CKSRYB104K16	
C 367	CKSRYB105K10	C 550	CKSRYB105K6R3	
C 368	CKSRYB105K10	C 551	CEV221M4	
C 369	CKSRYB105K10	C 552	CEV221M4	
C 370	CKSRYB105K10	C 553	CEV221M4	
C 371	CKSRYB105K10	C 554	CEV221M4	D
C 372 10μF/16V	CCH1442	C 555	CEV101M16	
C 373	CKSRYB105K10	C 556	CKSYB106K6R3	
C 374	CCH1444	C 557	CKSYB106K6R3	
C 375	CKSYB684K16	C 558 10μF/16V	CCH1442	
C 376 10μF/16V	CCH1442	C 559	CKSYB106K6R3	
C 377 10μF/16V	CCH1442	C 560	CKSRYB223K50	
C 378 10μF/16V	CCH1442	C 601	CKSRYB105K6R3	
C 379	CCH1444	C 602	CEV2R2M50	
C 380	CCH1444	C 603	CCSRCH101J50	
C 381	CKSRYB105K6R3	C 604	CKSRYB105K6R3	
C 382 3300μF/16V	CCH1486	C 605	CKSRYB105K6R3	
C 383 10μF/16V	CCH1442	C 606	CCSRCH7R0D50	
C 384 10μF/16V	CCH1442	C 607	CCSRCH7R0D50	E
C 385 10μF/16V	CCH1442	C 608	CCSRCH100D50	
C 386	CKSRYB222K50	C 609	CCSRCH100D50	
C 387	CKSRYB222K50	C 672	CKSRYB104K16	
C 388	CKSRYB222K50	C 701	CKSRYB103K50	
C 389	CKSRYB222K50	C 702	CKSRYB104K16	
C 390	CKSRYB222K50	C 703	CKSRYB105K10	
C 391	CKSRYB222K50	C 704	CKSRYB104K16	
C 392	CKSRYB104K16	C 705	CKSQYB104K25	
C 393 10μF/16V	CCH1442	C 706	CKSRYB104K16	
C 394	CKSYB475K10	C 707	CKSRYB104K16	
C 395	CKSYB475K10	C 801	CKSRYB104K16	
C 396	CKSRYB473K50	C 802 47μF/16V	CCH1413	

A

====Circuit Symbol and No.==Part Name

Part No.

====Circuit Symbol and No.==Part Name

Part No.

C 803
C 806 47μF/16V
C 810
C 811 47μF/16V
C 812

CKSRYB103K50
CCH1413
CKSRYB104K16
CCH1413
CKSRYB103K50

L 1406 Inductor
L 1407 Inductor
L 1408 Inductor
FU 1401 Fuse 5A
FU 1402 Fuse 5A

LCTA1R0J2520
LCTA1R0J3225
LCTA680J4532
CEK1289
CEK1289

C 813
C 814 470μF/6.3V
C 815 0.22μF/3.5V
C 816
C 817

CKSRYB474K10
CCH1437
CCL1058
CKSRYB102K50
CKSRYB105K6R3

RESISTORS

R 1401 (EW model)
R 1402
R 1403
R 1404
R 1405

RAB4C223J
RAB4C471J
RAB4C471J
RS1/16S0R0J
RS1/16S103J

C 818 220μF/10V
C 819
B C 820
C 824
C 826

CCH1409
CKSRYB102K50
CKSYB475K10
CEHAZL471M16
CKSYB225K16

R 1406
R 1407
R 1412
R 1413
R 1414

RS1/16S103J
RS1/16S103J
RS1/16S1001D
RS1/16S2201D
RS1/16S1202D

C 827
C 828
C 829
C 830
C 831

CKSYB225K16
CEV1R0M50
CKSRYB102K50
CKSYB475K10
CKSRYB103K50

R 1415
R 1416
R 1417
R 1418

RS1/16S102J
RS1/16S102J
RS1/16S101J
RS1/16S470J

C 832
C 835
C 836 2200μF/16V
C 838 470μF/6.3V
C 839 47μF/16V

CCSRCH121J50
CKSYB475K16
CCH1405
CCH1437
CCH1413

CAPACITORS

C 1403 100μF/6.3V
C 1404
C 1405
C 1406 56μF/16V
C 1408

CCH1496
CKSYB475K10
CKSRYB103K50
CCH1497
CKSRYB103K50

C

C 840
C 841
C 842
C 843
C 844

CKSRYB474K10
CKSRYB104K16
CKSRYB104K16
CKSYB475K16
CEHAZL471M16

C 1414
C 1415
C 1416
C 1417
C 1418

CCSRCH221J50
CKSRYB105K6R3
CCSRCH221J50
CCSRCH221J50
CCSRCH221J50

C 846 10μF/16V
C 847
C 848
C 849
C 850 0.1μF/5.5V

CCH1442
CKSRYB103K50
CKSRYB103K50
CEV101M16
CCL1059

C 1419
C 1421
C 1422
C 1425
C 1426

CKSRYB104K16
CKSRYB474K10
CKSRYB474K10
CEV220M10
CEV101M16

C 851
C 852
C 853
C 854
D C 855

CKSRYB103K50
CKSRYB103K50
CEV101M16
CKSRYB104K16
CKSRYB104K16

C 1427
C 1428
C 1429

CKSRYB104K16
CEV101M10
CKSYB474K16

C 856 10μF/16V
C 857
C 858
C 870
C 874

CCH1442
CKSRYB102K50
CEV101M16
CKSYB225K16
CKSRYB104K16

Monitor Unit

Consists of
Monitor PCB
Inverter PCB
Upper PCB
Sense PCB

C 878 100μF/16V
C 882 1000μF/16V
C 883 100μF/16V
C 971
C 972

CCH1228
CCH1428
CCH1228
CCSRCH150J50
CKSRYB104K16

C 973

CKSYB106K6R3

E

G Unit Number : CWM8774(UC,RC,RD model)
Unit Number : CWM8773(EW model)
Unit Name : Tuner Unit

MISCELLANEOUS

IC 1402 IC
Q 1401 Transistor
Q 1402 Transistor
Q 1403 Transistor
Q 1404 Transistor

BA00ASFP
IMH2A
IMH2A
2SC4081
2SD2375

IC 4001 IC
IC 4061 IC
IC 4063 IC
IC 4064 IC
IC 4065 IC

TC90A64AF-P
TC7SZ02FU
TC7SZ32FU
TC7SZ08FU
TC7SZ08FU

D 1401 Diode(EW model)
D 1402 Diode(EW model)
ZNR1401 Surge Protector
L 1401 Inductor
L 1404 Inductor

UDZ6R8(B)
UDZS3R9(B)
RCCA-201Q31UA-PI
LCTA4R7J2520
CTF1295

IC 4092 IC
IC 4093 IC
IC 4141 IC
IC 4142 IC
IC 4151 IC

TC7SH08FU
TC7SH08FU
TC7SH08FU
TK15404MI
NJM2138V

F

====Circuit Symbol and No.===Part Name			Part No.	====Circuit Symbol and No.===Part Name			Part No.	A
IC 4181	IC		NJM082BV	D 4338	LED(EW model)		CL-195SR-CD	
IC 4311	IC		NJM062V	D 4351	LED		CL-195PG-CD	
IC 4451	IC		TC7SET08FU	D 4352	LED		CL-195PG-CD	
IC 4601	IC		PD5842A	D 4353	LED		CL-195PG-CD	
IC 4602	IC		S-80827CNNB-B8M	D 4354	LED		CL-195PG-CD	
IC 4604	IC		TC7SET08FU	D 4355	LED		CL-195PG-CD	
IC 4605	IC		TC7SH08FU	D 4356	LED		CL-195PG-CD	
IC 4691	IC		S-93C46BR0I-J8T1	D 4357	LED		CL-195PG-CD	
IC 4701	IC		PD6340A	D 4358	LED		CL-195PG-CD	
IC 4841	IC		R1130H251B	D 4421	Diode		MA111	
IC 4851	IC		LT1376CS8	D 4422	Diode		MA111	
IC 4861	IC		MAX1748EUE	D 4423	Diode		UDZS5R1(B)	
IC 5001	IC		TA78L05F	D 4424	Diode		HZU5R6(B2)	
IC 5002	IC		TC7SET08FU	D 4425	Diode		HZU5R6(B2)	
IC 5003	IC		OZ961IS	D 4426	Diode		HZU5R6(B2)	
IC 5004	FET		SI6544DQ	D 4427	Diode		1SS355	
IC 5005	FET		SI6544DQ	D 4601	Diode		UDZS5R1(B)	
Q 4002	Transistor		2SC4617	D 4602	Diode		UDZS3R9(B)	
Q 4061	Transistor		2SC4617	D 4603	Diode		1SS355	
Q 4062	Transistor		2SC4617	D 4701	Diode		HZU5R6(B2)	
Q 4063	Transistor		2SC4617	D 4702	Diode		HZU5R6(B2)	
Q 4101	Transistor		2SC4617	D 4703	Diode		HZU5R6(B2)	
Q 4102	Transistor		2SA1774	D 4704	Diode		HZU5R6(B2)	
Q 4103	Transistor		2SC4617	D 4705	Diode		HZU5R6(B2)	
Q 4111	Transistor		2SC4617	D 4706	Diode		HZU5R6(B2)	
Q 4112	Transistor		2SA1774	D 4835	Diode		HZU5R6(B2)	
Q 4113	Transistor		2SC4617	D 4851	Diode		RB500V-40	
Q 4121	Transistor		2SC4617	D 4852	Diode		U2FWJ44N	
Q 4122	Transistor		2SA1774	D 4861	Diode		RB160M-30	
Q 4123	Transistor		2SC4617	D 4862	Diode		RB500V-40	
Q 4131	Transistor		2SC4617	D 4863	Diode		RB500V-40	
Q 4132	Transistor		2SA1774	D 4864	Diode		RB500V-40	
Q 4133	Transistor		2SC4617	D 4865	Diode		RB500V-40	
Q 4151	Transistor		UMZ1N	D 4866	Diode		RB500V-40	
Q 4152	Transistor		UMZ1N	D 4867	Diode		RB500V-40	
Q 4153	Transistor		UMZ1N	D 4868	Diode		RB500V-40	
Q 4154	Transistor		UMZ1N	D 4869	Diode		RB500V-40	
Q 4155	Transistor		UMZ1N	D 5001	Diode		HZU6R2(B3)	
Q 4156	Transistor		UMZ1N	D 5002	Diode		1SS355	
Q 4182	Transistor		UMX2N	D 5003	LED		CL-195PG-CD	
Q 4183	Transistor		UMT2N	D 5004	LED(EW model)		CL-195SR-CD	
Q 4421	Transistor		IMD3A	D 5005	LED		CL-195PG-CD	
Q 4422	Transistor		IMD2A	D 5006	LED(EW model)		CL-195SR-CD	
Q 4423	Transistor		FMG12	D 5007	LED		CL-195PG-CD	
Q 4601	Transistor		2SD1664	D 5008	LED(EW model)		CL-195SR-CD	
Q 4602	Transistor		2SC4617	D 5009	Diode		RB751V40	
Q 4603	Transistor		DTC114EE	D 5010	Diode		HZU6R2(B3)	
Q 4741	Transistor		DTA123JK	D 5011	Diode		HZU6R2(B3)	
Q 4742	Transistor		DTC124EK	D 5012	Diode		HZU6R2(B3)	
Q 4831	Transistor		2SB1260	D 5013	Diode		MA143	
Q 4832	Transistor		DTC114EK	D 5014	Diode		MA143	
Q 4835	Transistor		2SD1664	L 4001	Inductor		CTF1306	
Q 5001	Transistor		2SC4617	L 4002	Inductor		CTF1306	
Q 5002	Transistor		2SC4617	L 4003	Inductor		CTF1306	
Q 5003	Transistor		2SA1774	L 4004	Inductor		CTF1306	
D 4311	Photo Diode		AM-30-21	L 4005	Inductor		CTF1306	
D 4321	LED		NSSW440-9159	L 4006	Inductor-Array		CTF1421	
D 4322	LED		NSSW440-9159	L 4007	Ferrite Beed		CTF1528	
D 4331	LED(EW model)		CL-195SR-CD	L 4008	Inductor		CTF1306	
D 4332	LED(EW model)		CL-195SR-CD	L 4011	Inductor		CTF1306	
D 4333	LED(EW model)		CL-195SR-CD	L 4012	Ferrite Beed		CTF1528	
D 4334	LED(EW model)		CL-195SR-CD	L 4013	Ferrite Beed		CTF1528	
D 4335	LED(EW model)		CL-195SR-CD	L 4014	Ferrite Beed		CTF1528	
D 4336	LED(EW model)		CL-195SR-CD	L 4015	Inductor		CTF1306	
D 4337	LED(EW model)		CL-195SR-CD	L 4016	Ferrite Beed		CTF1528	

A	====Circuit Symbol and No.===Part Name		Part No.	====Circuit Symbol and No.===Part Name		Part No.
	L 4061	Inductor	LCKA101J2520	R 4012		RS1/16SS105J
	L 4071	Inductor	LCKB100K2520	R 4013		RS1/16S391J
	L 4074	Inductor	LCKB100K2520	R 4015		RS1/16S473J
	L 4075	Inductor	LCKB100K2520	R 4018		RS1/16S101J
	L 4078	Inductor	LCKB100K2520	R 4023		RS1/16S102J
	L 4079	Inductor	CTF1306	R 4024		RS1/16S333J
	L 4091	Inductor	CTF1306	R 4025		RS1/16S101J
	L 4092	Inductor	CTF1306	R 4026		RS1/16S101J
	L 4094	Inductor	CTF1306	R 4027		RS1/16S101J
	L 4101	Inductor	LCKB100K2520	R 4028		RS1/16SS0R0J
B	L 4141	Inductor	LCKB100K2520	R 4030		RS1/16S101J
	L 4151	Inductor	LCKB100K2520	R 4061		RS1/16S473J
	L 4152	Inductor	LCKB100K2520	R 4062		RS1/16S473J
	L 4181	Inductor	LCKA101J2520	R 4065		RS1/16S1002D
	L 4182	Inductor	LCKA101J2520	R 4066		RS1/16S1002D
	L 4311	Inductor	LCKB100K2520	R 4067		RS1/16S1002D
	L 4451	Inductor	CTF1306	R 4068		RS1/16S5602F
	L 4601	Inductor	LCKB100K2520	R 4069		RS1/16S5602F
	L 4602	Inductor	LCKB100K2520	R 4070		RS1/16S5602F
	L 4603	Inductor	LCKA101J2520	R 4071		RS1/16S5602F
	L 4701	Inductor	LCKB100K2520	R 4072		RS1/16S5602F
	L 4801	Inductor	LCKB100K2520	R 4073		RS1/16S5602F
	L 4802	Inductor	LCKB100K2520	R 4074		RS1/16S102J
	L 4803	Inductor	LCKB100K2520	R 4075		RS1/16S102J
	L 4804	Inductor	LCKB100K2520	R 4076		RS1/16S102J
C	L 4841	Choke Coil 10μH	CTH1249	R 4077		RS1/16S101J
	L 4851	Choke Coil 10μH	CTH1259	R 4078		RS1/16S101J
	L 4852	Choke Coil 18μH	CTH1250	R 4079		RS1/16S101J
	L 4861	Choke Coil 10μH	CTH1249	R 4080		RS1/16S101J
	L 4862	Choke Coil 6.8μH	CTH1248	R 4083		RS1/16SS470J
	L 4863	Inductor	LCKB100K2520	R 4084		RS1/16S470J
	L 4864	Inductor	LCKB100K2520	R 4085		RS1/16SS471J
	L 4865	Inductor	LCKB100K2520	R 4086		RS1/16SS101J
	T 5001	Transformer	CTT1103	R 4091		RS1/16S101J
	X 4001	Crystal Resonator 42MHz	CSS1541	R 4093		RS1/16S471J
D	X 4601	Radiator 10.0MHz	CSS1577	R 4094		RS1/16S471J
	X 4701	Ceramic Resonator 4.97MHz	CSS1573	R 4095		RS1/16S471J
	S 4351	Push Switch	CSG1111	R 4101		RS1/16S1502F
	S 4352	Push Switch	CSG1111	R 4102		RS1/16S1003F
	S 4353	Push Switch	CSG1111	R 4103		RS1/16S681J
	S 4354	Push Switch	CSG1111	R 4104		RS1/16S331J
	S 5001	Push Switch	CSG1111	R 4107		RS1/16S1302F
	S 5002	Push Switch	CSG1111	R 4108		RS1/16S331J
	S 5003	Push Switch	CSG1111	R 4109		RS1/16S391J
	VR 5001	Semi-fixed 15kΩ(B)	CCP1397	R 4110		RS1/16S391J
	FU 4831	Fuse 630mA	CEK1252	R 4111		RS1/16S153J
	RESISTORS			R 4112		RS1/16S104J
	R 3		RS1/16S0R0J	R 4113		RS1/16S681J
	R 4		RS1/16S0R0J	R 4114		RS1/16S331J
	R 5		RS1/16S0R0J	R 4118		RS1/16S331J
	R 6		RS1/16S0R0J	R 4119		RS1/16S391J
	R 7		RS1/16S0R0J	R 4120		RS1/16S391J
	R 8		RS1/16S0R0J	R 4121		RS1/16S153J
	R 9		RS1/16S0R0J	R 4122		RS1/16S104J
	R 4001		RS1/16S101J	R 4123		RS1/16S681J
E	R 4002		RS1/16S101J	R 4124		RS1/16S331J
	R 4003		RS1/16S470J	R 4128		RS1/16S331J
	R 4004		RS1/16S101J	R 4129		RS1/16S391J
	R 4005		RS1/16S473J	R 4130		RS1/16S391J
	R 4006		RS1/16S392J	R 4131		RS1/16S153J
	R 4009		RS1/16S152J	R 4132		RS1/16S104J
	R 4010		RS1/16S331J	R 4133		RS1/16S681J
				R 4134		RS1/16S331J
				R 4138		RS1/16S331J
				R 4139		RS1/16S391J
F						

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.	A
R 4140	RS1/16S391J	R 4338 (EW model)	RS1/16SS181J	
R 4141	RS1/16S105J	R 4339 (EW model)	RS1/16SS151J	
R 4142	RS1/16S224J	R 4340 (EW model)	RS1/16SS151J	
R 4145	RS1/16S1501F	R 4341 (EW model)	RS1/16SS181J	
R 4146	RS1/16S5602F	R 4342 (EW model)	RS1/16SS181J	
R 4147	RS1/16S3302F	R 4343 (EW model)	RS1/16SS151J	
R 4148	RS1/16S1002F	R 4344 (EW model)	RS1/16SS151J	
R 4150	RS1/16S183J	R 4345 (EW model)	RS1/16SS181J	
R 4152	RS1/16S3901F	R 4346 (EW model)	RS1/16SS181J	
R 4153	RS1/16S1501F	R 4351	RS1/16SS151J	
R 4154	RS1/16S102J	R 4352	RS1/16SS151J	
R 4155	RS1/16S102J	R 4353	RS1/16SS121J	
R 4156	RS1/16S1501F	R 4354	RS1/16SS121J	B
R 4157	RS1/16S3901F	R 4355	RS1/16SS151J	
R 4160	RS1/16S1002F	R 4356	RS1/16SS151J	
R 4161	RS1/16S1802F	R 4357	RS1/16SS121J	
R 4162	RS1/16S102J	R 4358	RS1/16SS121J	
R 4163	RS1/16S3901F	R 4359	RS1/16SS151J	
R 4164	RS1/16S1501F	R 4360	RS1/16SS151J	
R 4165	RS1/16S102J	R 4361	RS1/16SS181J	
R 4166	RS1/16S272J	R 4362	RS1/16SS181J	
R 4167	RS1/16S102J	R 4363	RS1/16SS151J	
R 4168	RS1/16S272J	R 4364	RS1/16SS151J	
R 4169	RS1/16S102J	R 4365	RS1/16SS181J	
R 4170	RS1/16S272J	R 4366	RS1/16SS181J	
R 4171	RS1/16S331J	R 4421	RS1/16S104J	C
R 4172	RS1/16S103J	R 4422	RS1/16SS104J	
R 4174	RS1/16S331J	R 4423	RS1/16SS471J	
R 4175	RS1/16S103J	R 4424	RS1/16SS471J	
R 4177	RS1/16S331J	R 4451	RS1/16S101J	
R 4178	RS1/16S103J	R 4452	RS1/16SS101J	
R 4180	RS1/16S243J	R 4453	RS1/16SS101J	
R 4181	RS1/16S3002F	R 4454	RS1/16SS101J	
R 4182	RS1/16S223J	R 4455	RS1/16S101J	
R 4183	RS1/16S1203F	R 4456	RS1/16SS103J	
R 4184	RS1/16S1602F	R 4461	RS1/16SS101J	
R 4185	RS1/16S1502F	R 4462	RS1/16SS101J	
R 4186	RS1/16S1002F	R 4463	RS1/16S101J	
R 4187	RS1/16S1002F	R 4464	RS1/16SS101J	
R 4188	RS1/16SS101J	R 4465	RS1/16SS101J	D
R 4189	RS1/16S153J	R 4466	RS1/16SS101J	
R 4190	RS1/16S100J	R 4494	RS1/16SS0R0J	
R 4191	RS1/16S153J	R 4507	RS1/16SS0R0J	
R 4192	RS1/16SS100J	R 4601	RS1/16S180J	
R 4193	RS1/16S0R0J	R 4602	RS1/16SS473J	
R 4194	RS1/16S0R0J	R 4603	RS1/16SS102J	
R 4208	RS1/16SS101J	R 4604	RS1/16SS473J	
R 4209	RS1/16SS101J	R 4605	RS1/16SS223J	
R 4311	RS1/16S185J	R 4606	RS1/16SS473J	
R 4312	RS1/16S105J	R 4607	RS1/16SS101J	
R 4313	RS1/16SS393J	R 4608	RS1/16SS103J	
R 4314	RS1/16SS103J	R 4609	RS1/16SS102J	
R 4315	RS1/16SS203J	R 4611	RS1/16SS272J	E
R 4316	RS1/16SS393J	R 4612	RS1/16SS272J	
R 4321	RS1/16SS121J	R 4613	RS1/16SS471J	
R 4322	RS1/16SS181J	R 4614	RS1/16SS471J	
R 4323	RS1/16SS121J	R 4615	RS1/16SS102J	
R 4324	RS1/16SS181J	R 4616	RAB4CQ102J	
R 4331 (EW model)	RS1/16SS151J	R 4617	RS1/16SS473J	
R 4332 (EW model)	RS1/16SS151J	R 4619	RS1/16SS0R0J	
R 4333 (EW model)	RS1/16SS181J	R 4620	RS1/16SS0R0J	
R 4334 (EW model)	RS1/16SS181J	R 4621	RS1/16SS473J	
R 4335 (EW model)	RS1/16SS151J	R 4622	RS1/16SS471J	
R 4336 (EW model)	RS1/16SS151J	R 4623	RS1/16SS103J	
R 4337 (EW model)	RS1/16SS181J	R 4624	RS1/16SS103J	F

A	====Circuit Symbol and No.===Part Name		Part No.	====Circuit Symbol and No.===Part Name		Part No.
	R	4625	RS1/16SS473J	C	4006	CKSSYB104K10
	R	4626	RAB4CQ473J	C	4007	CKSSYB104K10
	R	4627	RS1/16SS472J	C	4008	CKSSYB104K10
	R	4628	RS1/16SS472J	C	4009	CKSSYB104K10
	R	4629	RS1/16SS473J	C	4010	CKSSYB104K10
	R	4692	RS1/16SS103J	C	4011	CKSSYB104K10
	R	4701	RS1/16SS101J	C	4012	CKSSYB104K10
	R	4702	RS1/16SS101J	C	4013	CKSRYB392K50
	R	4703	RS1/16SS101J	C	4015	CKSRYB105K6R3
	R	4704	RS1/16SS101J	C	4016	CKSSYB104K10
B	R	4705	RS1/16SS471J	C	4017	CKSSYB104K10
	R	4706	RS1/16SS471J	C	4018	CKSRYB104K16
	R	4707	RS1/16SS0R0J	C	4019	CKSRYB104K16
	R	4709	RS1/16SS472J	C	4020	CKSRYB104K16
	R	4710	RS1/16SS472J	C	4021	CKSSYB104K10
	R	4741	RS1/16SS0R0J	C	4022	CKSRYB104K16
	R	4742	RS1/16SS0R0J	C	4023	CKSRYB104K16
	R	4802	RS1/16S0R0J	C	4024	CKSRYB104K16
	R	4803	RS1/16S333J	C	4025	CKSSYB104K10
	R	4804	RS1/16S0R0J	C	4026	CKSSYB104K10
	R	4805	RS1/16S0R0J	C	4027	CKSSYB104K10
	R	4806	RS1/16S0R0J	C	4028	CKSSYB104K10
	R	4831	RS1/16S153J	C	4029	CKSSYB104K10
	R	4832	RS1/16S472J	C	4030	CKSRYB104K16
	R	4833	RS1/16S472J	C	4031	CKSSYB104K10
C	R	4835	RS1/16S121J	C	4032	CKSSYB104K10
	R	4851	RS1/16S182J	C	4033	CKSSYB104K10
	R	4852	RS1/16S512J	C	4034	CKSSYB104K10
	R	4861	RS1/16S104J	C	4035	CKSRYB103K50
	R	4862	RS1/16S102J	C	4036	CCSRCH4R0C50
	R	4863	RS1/16S1102F	C	4037	CKSSYB104K10
	R	4864	RS1/16S2001F	C	4040	CKSSYB104K10
	R	4865	RS1/16S3302F	C	4042	CCSRCH181J50
	R	4866	RS1/16S2401F	C	4045	CCSRCH8R0D50
	R	4867	RS1/16S5602F	C	4046	CCSRCH8R0D50
	R	4868	RS1/16S2703F	C	4047	CKSSYB104K10
	R	4869	RS1/16S5602F	C	4048	CKSSYB104K10
	R	5001 (EW model)	RAB4CQ181J	C	4049	CKSSYB104K10
	R	5002	RAB4CQ151J	C	4050	CKSRYB105K6R3
	R	5003	RS1/16S473J	C	4051	CKSSYB104K10
D	R	5004	RAB4CQ181J	C	4052	CKSSYB104K10
	R	5005	RS1/16S104J	C	4054	CCSRCH101J50
	R	5006	RS1/16S472J	C	4055	CKSRYB104K16
	R	5007	RS1/16S473J	C	4061	CKSRYB104K16
	R	5008	RS1/16S473J	C	4062	CKSRYB104K16
	R	5009	RS1/16S105J	C	4063	CKSRYB104K16
	R	5010	RS1/16S333J	C	4064	CSZS100M10
	R	5011	RS1/16S513J	C	4068	CKSQYB225K10
	R	5014	RS1/16S102J	C	4069	CKSQYB225K10
	R	5015	RS1/16S105J	C	4070	CKSQYB225K10
E	R	5016	RS1/16S563J	C	4071	CSZS100M10
	R	5017	RS1/16S103J	C	4074	CKSRYB105K6R3
	R	5018	RS1/16S103J	C	4075	CKSRYB105K6R3
	R	5019	RS1/16S561J	C	4094	CKSRYB104K16
	R	5022	RS1/16SS181J	C	4096	CCSRCH471J50
	R	5023	RS1/16SS221J	C	4101	CKSYB106K6R3
	CAPACITORS			C	4102	CCSRCH470J50
				C	4103	CCSRCH470J50
				C	4104	CKSRYB104K16
				C	4105	CSZS100M10
	C	4001	CKSRYB105K6R3			
	C	4002	CKSSYB104K10			
	C	4003	CKSSYB104K10	C	4111	CKSYB106K6R3
	C	4004	CKSSYB104K10	C	4112	CCSRCH470J50
	C	4005	CKSSYB104K10	C	4113	CCSRCH470J50
F				C	4114	CKSRYB104K16
				C	4121	CKSYB106K6R3

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.		A
C 4122	CCSRCH470J50	C 4801	CSZSR4R7M16		
C 4123	CCSRCH470J50	C 4802	CKSRYB104K16		
C 4124	CKSRYB104K16	C 4803	CSZS100M10		
C 4131	CKSYB106K6R3	C 4804	CKSRYB104K16		
C 4132	CCSRCH470J50	C 4805	CSZSR330M10		
C 4133	CCSRCH470J50	C 4806	CKSRYB104K16		
C 4134	CKSRYB104K16	C 4807	CSZSR33M25		
C 4140	CKSQYB225K10	C 4808	CKSRYB104K25		
C 4141	CKSRYB105K6R3	C 4809	CKSSYB104K10		
C 4142	CKSRYB104K16	C 4810	CKSSYB104K10		
C 4143	CSZS100M10	C 4831	CKSSYB104K10		
C 4144	CKSRYB104K16	C 4832	CKSRYB104K25		
C 4145	CKSRYB104K16	C 4835	CKSRYB104K16		
C 4151	CSZSR220M16	C 4836	CKSRYB104K16		
C 4152	CKSRYB103K50	C 4841	CKSRYB105K6R3		
C 4153	CCSRCH4R0C50	C 4843	CSZS100M10		
C 4154	CCSRCH4R0C50	C 4844	CKSRYB104K16		
C 4155	CCSRCH4R0C50	C 4851	CKSRYB104K16		
C 4156	CKSRYB104K16	C 4852	CCH1440		
C 4160	CKSRYB104K16	C 4853	CKSRYB104K16		
C 4161	CKSRYB104K16	C 4854	CKSRYB104K16		
C 4162	CKSRYB104K16	C 4855	CCG1138		
C 4163	CKSQYB225K10	C 4856	CKSRYB332K50		
C 4164	CKSQYB225K10	C 4858	CCG1138		
C 4165	CKSQYB225K10	C 4859	CKSRYB104K16		
C 4166	CKSRYB104K16	C 4860	CKSYB106K6R3		
C 4167	CKSRYB104K16	C 4861	CKSYB106K6R3		
C 4168	CKSRYB104K16	C 4862	CCSRCH100D50		
C 4169	CKSRYB103K50	C 4863	CKSRYB683K16		
C 4170	CSZSR220M16	C 4864	CKSRYB104K16		
C 4171	CSZSR220M16	C 4865	CKSRYB471K50		
C 4181	CSZSR220M16	C 4866	CKSRYB224K16		
C 4182	CKSRYB104K16	C 4867	CKSRYB104K16		
C 4183	CSZSR4R7M16	C 4868	CKSRYB104K16		
C 4184	CKSRYB104K16	C 4869	CKSRYB104K16		
C 4186	CKSRYB104K16	C 4870	CKSRYB224K16		
C 4188	CKSRYB104K16	C 4871	CKSRYB224K16		
C 4311	CKSRYB474K10	C 4872	CKSRYB104K16		
C 4312	CKSRYB104K16	C 4873	CKSQYB105K16		
C 4313	CKSRYB104K16	C 4874	CKSQYB474K25		
C 4314	CKSRYB104K16	C 4875	CKSRYB104K16		
C 4315	CKSRYB104K16	C 4876	CKSQYB474K25		
C 4321	CKSRYB104K16	C 4877	CKSQYB105K16		
C 4322	CKSRYB104K16	C 4878	CKSRYB104K16		
C 4421	CKSSYB102K50	C 4879	CCH1359		
C 4422	CKSSYB102K50	C 4881	CKSRYB104K25		
C 4423	CKSSYB102K50	C 4882	CKSRYB104K16		
C 4424	CKSRYB102K50	C 4883	CKSRYB104K16		
C 4425	CKSRYB105K6R3	C 4884	CKSRYB104K16		
C 4426	CKSSYB102K50	C 4885	CCH1440		
C 4427	CKSSYB102K50	C 4886	CKSRYB104K16		
C 4451	CCG1138	C 4887	CKSRYB104K16		
C 4452	CCG1138	C 5001	CKSRYB104K16		
C 4454	CKSRYB104K16	C 5002	CKSRYB105K6R3		
C 4601	CSZSR330M10	C 5005	CKSRYB105K6R3		
C 4602	CKSRYB104K16	C 5006	CKSRYB104K16		
C 4604	CSZS330M6R3	C 5007	CKSRYB105K6R3		
C 4608	CKSRYB104K16	C 5008	CKSQYB335K6R3		
C 4609	CKSRYB104K16	C 5011	CKSRYB332K50		
C 4610	CKSSYB104K10	C 5012	CKSRYB105K6R3		
C 4611	CKSRYB104K16	C 5013	CKSRYB152K50		
C 4612	CKSSYB104K10	C 5014	CKSRYB104K16		
C 4691	CKSRYB104K16	C 5015	CKSRYB473K50		
C 4701	CSZSR330M10	C 5016	CKSRYB103K50		
C 4702	CKSRYB104K16	C 5017	CFHSQ221J50		

A

====Circuit Symbol and No.===Part Name

Part No.

====Circuit Symbol and No.===Part Name

Part No.

C 5018
C 5019 10μF
C 5020 10μF
C 5021
C 5022

CKSRYB473K50
CCG1138
CCG1138
CKSQYB105K16
CKSQYB105K16

R 5515
R 5516
R 5520
R 5521
R 5522

RS1/16S202J
RS1/16S392J
RS1/16S181J
RS1/16S181J
RS1/16S151J

C 5023 22pF
C 5024

CCG1140
CKSRYB223K50

R 5524
R 5525
R 5530
R 5531
R 5532

RS1/16S151J
RS1/16S472J
RS1/16S181J
RS1/16S181J
RS1/16S181J

Keyboard Unit

Consists of
Grille PCB
Panel PCB

R 5533
R 5534
R 5535
R 5536
R 5538

RS1/16S151J
RS1/16S151J
RS1/16S121J
RS1/16S181J
RS1/16S181J

B

L M

Unit Number : CWM8766(UC,RC,RD model)

Unit Name : Keyboard Unit

R 5540
R 5541
R 5543
R 5544
R 5546

RS1/16SS474J
RS1/16S151J
RS1/16S151J
RS1/16S0R0J
RS1/16S181J

MISCELLANEOUS

IC 5501 IC
D 5502 LED
D 5503 LED
D 5504 LED
D 5505 LED

RS-140
CL190UBX
CL190UBX
CL-195PG-CD
CL-195PG-CD

R 5547
R 5548
R 5549
R 5550
R 5551

RS1/16SS472J
RS1/16SS562J
RS1/16SS471J
RS1/16SS472J
RS1/16SS102J

C

D 5509 LED
D 5510 LED
D 5513 LED
D 5515 LED
D 5516 LED

CL-195PG-CD
CL-195PG-CD
CL-195PG-CD
CL-195PG-CD
CL-195PG-CD

R 5552
R 5553
R 5554
R 5555
R 5556

RS1/16SS472J
RS1/16SS472J
RS1/16SS472J
RS1/16SS153J
RS1/16S181J

D 5518 LED
D 5521 LED
D 5522 LED
D 5524 LED
D 5526 LED

CL-195PG-CD
CL-195PG-CD
CL-195PG-CD
CL-195PG-CD
CL-195PG-CD

R 5557
R 5558
R 5559
R 5561
R 5562

RS1/16SS472J
RS1/16S221J
RS1/16S151J
RS1/16S221J
RS1/16S151J

D 5527 Diode
D 5529 LED
D 5530 LED
D 5531 LED
D 5534 LED

UDZS6R8(B)
CL-195PG-CD
CL-195PG-CD
CL-195SR-CD
CL-195PG-CD

R 5563
R 5565
R 5566
R 5568
R 5569

RS1/16S101J
RS1/16S181J
RS1/16S181J
RS1/16S181J
RS1/16S151J

D

D 5901 LED
S 5501 Push Switch
S 5502 Push Switch
S 5503 Push Switch
S 5504 Push Switch

SML-010VT
CSG1111
CSG1111
CSG1111
CSG1111

R 5570
R 5571
R 5572
R 5573
R 5575

RS1/16S151J
RS1/16S271J
RS1/16S271J
RS1/16S181J
RS1/16S181J

S 5505 Push Switch
S 5506 Push Switch
S 5507 Push Switch
S 5508 Push Switch
S 5509 Push Switch

CSG1111
CSG1111
CSG1111
CSG1111
CSG1111

R 5576
R 5577
R 5584
R 5585
R 5904

RS1/16S151J
RS1/16S151J
RS1/16SS0R0J
RS1/16S390J
RS1/16S151J

S 5510 Encoder
S 5511 Switch
S 5901 Push Switch

CSD1094
CSX1047
CSG1111

CAPACITORS

C 5509
C 5514
C 5515
C 5516

CSZSQ100M6R3
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16

E

RESISTORS

R 5501
R 5503
R 5504
R 5505
R 5506

RS1/16S470J
RS1/16S122J
RS1/16S202J
RS1/16S392J
RS1/16S123J

R 5508
R 5509
R 5510
R 5511
R 5514

RS1/16S181J
RS1/16S181J
RS1/16S151J
RS1/16S151J
RS1/16S122J

F

====Circuit Symbol and No.==Part Name

Part No.

====Circuit Symbol and No.==Part Name

Part No.

A

Keyboard Unit

Consists of
Grille PCB
Panel PCB**L M**

Unit Number : CWM8765(EW model)

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 5501	IC	RS-140
D 5501	Diode	DAN202U
D 5502	LED	CL190UBX
D 5503	LED	CL190UBX
D 5504	LED	CL-195PG-CD
D 5505	LED	CL-195PG-CD
D 5506	LED	CL-195SR-CD
D 5507	LED	CL-195SR-CD
D 5508	LED	CL-195SR-CD
D 5509	LED	CL-195PG-CD
D 5510	LED	CL-195PG-CD
D 5512	LED	CL-195SR-CD
D 5513	LED	CL-195PG-CD
D 5514	LED	CL-195SR-CD
D 5515	LED	CL-195PG-CD
D 5516	LED	CL-195PG-CD
D 5517	LED	CL-195SR-CD
D 5518	LED	CL-195PG-CD
D 5519	LED	CL-195SR-CD
D 5520	LED	CL-195SR-CD
D 5521	LED	CL-195PG-CD
D 5522	LED	CL-195PG-CD
D 5523	LED	CL-195SR-CD
D 5524	LED	CL-195PG-CD
D 5525	LED	CL-195SR-CD
D 5526	LED	CL-195PG-CD
D 5527	Diode	UDZS6R8(B)
D 5528	LED	CL-195SR-CD
D 5529	LED	CL-195PG-CD
D 5530	LED	CL-195PG-CD
D 5531	LED	CL-195SR-CD
D 5532	LED	CL-195SR-CD
D 5534	LED	CL-195PG-CD
D 5535	LED	CL-195SR-CD
D 5901	LED	SML-010VT
S 5501	Push Switch	CSG1111
S 5502	Push Switch	CSG1111
S 5503	Push Switch	CSG1111
S 5504	Push Switch	CSG1111
S 5505	Push Switch	CSG1111
S 5506	Push Switch	CSG1111
S 5507	Push Switch	CSG1111
S 5508	Push Switch	CSG1111
S 5509	Push Switch	CSG1111
S 5510	Encoder	CSD1094
S 5511	Switch	CSX1047
S 5901	Push Switch	CSG1111

RESISTORS

R 5503	RS1/16S122J
R 5504	RS1/16S202J
R 5505	RS1/16S392J
R 5506	RS1/16S123J
R 5508	RS1/16S181J

R 5509	RS1/16S181J
R 5510	RS1/16S151J
R 5511	RS1/16S151J
R 5512	RS1/16S181J
R 5514	RS1/16S122J
R 5515	RS1/16S202J
R 5516	RS1/16S392J
R 5517	RS1/16S181J
R 5519	RS1/16S181J
R 5520	RS1/16S181J
R 5521	RS1/16S181J
R 5522	RS1/16S151J
R 5524	RS1/16S151J
R 5525	RS1/16S472J
R 5527	RS1/16S181J
R 5528	RS1/16S181J
R 5530	RS1/16S181J
R 5531	RS1/16S181J
R 5532	RS1/16S181J
R 5533	RS1/16S151J
R 5534	RS1/16S151J
R 5535	RS1/16S121J
R 5536	RS1/16S181J
R 5537	RS1/16S181J
R 5538	RS1/16S181J
R 5539	RS1/16S181J
R 5540	RS1/16SS474J
R 5541	RS1/16S151J
R 5542	RS1/16S181J
R 5543	RS1/16S151J
R 5544	RS1/16S0R0J
R 5546	RS1/16S181J
R 5547	RS1/16SS472J
R 5548	RS1/16SS562J
R 5549	RS1/16SS471J
R 5550	RS1/16SS472J
R 5551	RS1/16SS102J
R 5552	RS1/16SS472J
R 5553	RS1/16SS472J
R 5554	RS1/16SS472J
R 5555	RS1/16SS153J
R 5556	RS1/16S181J
R 5557	RS1/16SS472J
R 5558	RS1/16S221J
R 5559	RS1/16S151J
R 5560	RS1/16S181J
R 5561	RS1/16S221J
R 5562	RS1/16S151J
R 5563	RS1/16S101J
R 5564	RS1/16S181J
R 5565	RS1/16S181J
R 5566	RS1/16S181J
R 5567	RS1/16S181J
R 5568	RS1/16S181J
R 5569	RS1/16S151J
R 5570	RS1/16S151J
R 5571	RS1/16S271J
R 5572	RS1/16S271J
R 5573	RS1/16S181J
R 5574	RS1/16S181J
R 5575	RS1/16S181J
R 5576	RS1/16S151J
R 5577	RS1/16S151J
R 5578	RS1/16S221J
R 5579	RS1/16S221J

B

C

D

E

F

A	====Circuit Symbol and No.===Part Name		Part No.	====Circuit Symbol and No.===Part Name		Part No.
	R 5580		RS1/16S181J			
	R 5581		RS1/16S221J			
	R 5584		RS1/16SS0R0J			
	R 5585		RS1/16S390J			
	R 5904		RS1/16S151J			
	CAPACITORS			RESISTORS		
	C 5509		CSZSQ100M6R3	R 1101		RS1/16SS101J
	C 5514		CKSRYB104K16	R 1102		RS1/16SS3R9J
	C 5515		CKSRYB104K16	R 1103		RS1/16SS3R9J
	C 5516		CKSRYB104K16	R 1104		RS1/16SS3R9J
				R 1105		RS1/16SS3R9J
				R 1106		RS1/16SS330J
				R 1107		RS1/16SS3R9J
				R 1108		RS1/16SS3R9J
				R 1109		RS1/16SS3R9J
				R 1110		RS1/16SS3R9J
				R 1111		RS1/16SS272J
				R 1112		RS1/16SS472J
				R 1113		RS1/16SS102J
				R 1124		RS1/16SS273J
				R 1125		RS1/16SS273J
	IC 1101 IC		AN8703FH			
	IC 1201 IC		BA5985FM			
	IC 1202 IC		AN8471SAT1			
	IC 1301 IC		MNZS26EDCUB	R 1126		RS1/16SS224J
	IC 1501 IC		M2V64S40DTP-6L	R 1130		RS1/16SS0R0J
				R 1131		RS1/16SS0R0J
				R 1132		RS1/16SS0R0J
				R 1133		RS1/16S2402D
	IC 1502 IC		TC74VCX74FT			
	IC 1503 IC		MN677531KAUB			
	IC 1504 IC		TC74VCX74FT			
	IC 1505 IC		TC7PA04FU	R 1134		RS1/16S1002D
	IC 1507 IC		SM8707FV	R 1135		RS1/16S2702D
				R 1140		RS1/16SS105J
				R 1141		RS1/16SS105J
				R 1142		RS1/16SS105J
	IC 1602 IC		NJM2100M			
	IC 1604 IC		NJM2100V			
	IC 1605 IC		PCM1742KE			
	IC 1701 IC		PE5395A	R 1151		RS1/16SS103J
	IC 1702 IC		M5M5V216ATP-70HI	R 1152		RS1/16SS103J
				R 1201		RS1/16SS221J
				R 1202		RS1/16SS393J
				R 1203		RS1/16SS303J
	IC 1705 IC		PD6447A			
	IC 1706 IC		TC7SH08FU			
	Q 1101 Transistor		2SB1260			
	Q 1102 Transistor		2SB1260	R 1205		RS1/16SS0R0J
	Q 1103 Transistor		UN2211	R 1206		RS1/16SS102J
				R 1209		RS1/16SS221J
				R 1210		RS1/16SS393J
				R 1211		RS1/16SS393J
	Q 1104 Transistor		2SB709A			
	Q 1105 Transistor		2SD601A			
	Q 1201 Transistor		DTC124EU			
	Q 1501 Transistor		2SA1037K	R 1212		RS1/16SS393J
	D 1101 Diode		1SS355	R 1213		RS1/16SS393J
				R 1214		RS1/16SS221J
				R 1215		RS1/16SS1R0J
				R 1216		RS1/16SS1R0J
	D 1102 Diode		1SS355			
	D 1301 Diode		UDZ2R7(B)			
	D 1302 Chip LED		CL205IRXTU			
	L 1301 Inductor		CTF1409	R 1218		RS1/16SS221J
	L 1302 Inductor		CTF1394	R 1219		RS1/16SS221J
				R 1220		RS1/16SS221J
				R 1221		RS1/16SS822J
				R 1222		RS1/16SS822J
	L 1303 Inductor		CTF1395			
	L 1305 Inductor		CTF1409			
	L 1504 Inductor		CTF1394			
	L 1505 Inductor		CTF1409	R 1223		RS1/16SS822J
	L 1506 Inductor		CTF1473	R 1224		RS1/16SS563J
				R 1225		RS1/16SS243J
				R 1226		RS1/16SS473J
				R 1227		RS1/16SS473J
	L 1507 Inductor		CTF1473			
	L 1508 Inductor		CTF1473			
	L 1509 Inductor		CTF1399			
	L 1510 Inductor		CTF1409	R 1228		RS1/16SS1R0J
	L 1518 Inductor		CTF1385	R 1229		RS1/16SS1R0J
				R 1230		RS1/16SS1R0J
				R 1232		RS1/16SS822J
				R 1233		RS1/16SS243J
	L 1520 Inductor		CTF1399			
	L 1522 Inductor		CTF1395			
	L 1605 Inductor		CTF1379			
	L 1701 Inductor		CTF1395	R 1234		RS1/16S391J
	L 1702 Inductor		CTF1409	R 1235		RS1/16S471J
				R 1236		RS1/16SS513J
				R 1237		RS1/16SS513J
				R 1301		RS1/16SS222J
	L 1703 Inductor		CTF1473			
	L 1704 Inductor		CTF1473			
	X 1501 Radiator 27MHz		CSS1609			
	X 1701 Ceramic Resonator 4.97MHz		CSS1575			
	VR 1502 Semi-fixed 2.2kΩ(B)		CCP1444			

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.	A
R 1321	RS1/16SS104J	R 1552	RS1/16SS471J	
R 1322	RS1/16SS0R0J	R 1553	RS1/16S68R0D	
R 1323	RS1/16SS221J	R 1554	RS1/16SS471J	
R 1324	RS1/16SS221J	R 1555	RS1/16SS0R0J	
R 1334	RS1/16SS221J	R 1556	RS1/16SS750J	
R 1336	RS1/16SS103J	R 1557	RS1/16SS0R0J	
R 1337	RS1/16SS103J	R 1558	RS1/16SS622J	
R 1338	RS1/16SS472J	R 1559	RAB4CQ0R0J	
R 1339	RS1/16SS273J	R 1560	RS1/16SS122J	
R 1340	RS1/16SS472J	R 1561	RS1/16SS162J	
R 1341	RS1/16SS273J	R 1562	RS1/16SS0R0J	
R 1342	RS1/16SS273J	R 1563	RS1/16SS4R7J	
R 1344	RS1/16SS273J	R 1564	RAB4CQ0R0J	B
R 1349	RS1/16SS562J	R 1565	RS1/16S101J	
R 1350	RS1/16SS242J	R 1566	RS1/16S101J	
R 1352	RS1/16S2702D	R 1567	RAB4CQ0R0J	
R 1353	RS1/16SS102J	R 1568	RS1/16S101J	
R 1360	RS1/16SS153J	R 1569	RS1/16S101J	
R 1361	RS1/16SS105J	R 1570	RS1/16S101J	
R 1362	RS1/16SS473J	R 1571	RS1/16S220J	
R 1363	RS1/16SS101J	R 1572	RAB4CQ0R0J	
R 1364	RS1/16SS123J	R 1573	RS1/16SS473J	
R 1365	RS1/16SS101J	R 1574	RAB4CQ0R0J	
R 1367	RS1/16SS473J	R 1575	RAB4CQ0R0J	
R 1369	RS1/16SS473J	R 1576	RAB4CQ0R0J	
R 1375	RS1/16SS103J	R 1577	RAB4CQ0R0J	C
R 1376	RS1/16SS103J	R 1578	RS1/16SS472J	
R 1377	RS1/16SS103J	R 1579	RS1/16SS101J	
R 1378	RS1/16SS103J	R 1587	RS1/16SS101J	
R 1379	RS1/16SS103J	R 1595	RS1/16SS472J	
R 1380	RS1/16SS103J	R 1596	RS1/16SS472J	
R 1383	RS1/16SS103J	R 1597	RS1/16SS104J	
R 1391	RS1/16SS103J	R 1598	RS1/16SS270J	
R 1392	RS1/16SS103J	R 1601	RS1/16SS821J	
R 1393	RS1/16SS103J	R 1602	RS1/16SS821J	
R 1394	RS1/16SS471J	R 1603	RS1/16SS0R0J	
R 1395	RS1/16SS0R0J	R 1604	RS1/16SS0R0J	
R 1396	RS1/16SS0R0J	R 1605	RS1/16SS102J	
R 1400	RS1/16SS221J	R 1606	RS1/16SS102J	
R 1419	RS1/16SS221J	R 1607	RS1/16SS222J	D
R 1420	RS1/16SS221J	R 1608	RS1/16SS222J	
R 1425	RAB4CQ221J	R 1609	RS1/16SS472J	
R 1426	RAB4CQ221J	R 1610	RS1/16SS472J	
R 1501	RS1/16SS220J	R 1611	RS1/16SS472J	
R 1502	RAB4CQ220J	R 1612	RS1/16SS472J	
R 1503	RS1/16S101J	R 1613	RS1/16SS103J	
R 1504	RAB4CQ220J	R 1614	RS1/16SS103J	
R 1505	RS1/16S101J	R 1615	RS1/16SS472J	
R 1508	RAB4CQ220J	R 1616	RS1/16SS472J	
R 1512	RAB4CQ220J	R 1626	RS1/16SS0R0J	
R 1518	RAB4CQ220J	R 1627	RS1/16SS0R0J	
R 1522	RAB4CQ220J	R 1628	RS1/16SS0R0J	
R 1523	RS1/16S0R0J	R 1637	RS1/16SS104J	E
R 1527	RAB4CQ220J	R 1638	RS1/16SS104J	
R 1533	RS1/16SS201J	R 1642	RS1/16SS221J	
R 1534	RAB4CQ220J	R 1643	RS1/16SS221J	
R 1538	RAB4CQ220J	R 1647	RS1/16SS221J	
R 1539	RS1/16SS221J	R 1648	RS1/16SS221J	
R 1542	RS1/16SS103J	R 1653	RS1/16SS473J	
R 1543	RS1/16SS680J	R 1656	RS1/16SS102J	
R 1544	RS1/16SS0R0J	R 1701	RS1/16SS473J	
R 1545	RS1/16SS0R0J	R 1704	RS1/16SS473J	
R 1549	RS1/16SS0R0J	R 1706	RS1/16SS104J	
R 1550	RS1/16SS0R0J	R 1707	RS1/16SS221J	
R 1551	RS1/16SS0R0J	R 1708	RS1/16SS221J	F

CAPACITORS

BCDEF

====Circuit Symbol and No.==Part Name	Part No.	====Circuit Symbol and No.==Part Name	Part No.	
C 1330	CKSRYB183K25	C 1554	CKSSYB104K10	
C 1331	CCSSCH470J50	C 1555	CKSSYB104K10	
C 1332	CKSRYB224K10	C 1556	CKSSYB104K10	
C 1333	CKSRYB224K10	C 1557	CKSSYB104K10	
C 1334	CKSRYB102K50	C 1558	CKSSYB104K10	
C 1335	CKSSYB562K25	C 1559	CKSSYB104K10	
C 1336	CKSSYB104K10	C 1560	CKSSYB104K10	
C 1337	CKSRYB102K50	C 1562	CKSSYB104K10	
C 1338	CKSRYB102K50	C 1563	CKSSYB104K10	
C 1339	CKSRYB102K50	C 1564	CKSSYB104K10	
C 1340	CKSSYB104K10	C 1566	CCSSCH7R0D50	
C 1341	CCSSCH101J50	C 1567	CCSSCH7R0D50	
C 1342	CKSRYB391K50	C 1605	CKSSYB471K50	
C 1343	CKSRYB471K50	C 1606	CKSSYB471K50	
C 1344	CKSRYB331K50	C 1609	CKSRYB104K16	
C 1346	CKSRYB224K10	C 1610	CKSRYB224K10	
C 1347	CKSSYB104K10	C 1611	CSZSR100M16	
C 1348	CKSSYB104K10	C 1612	CKSQYB225K10	
C 1349	CKSSYB104K10	C 1615	CCSRCH471J50	
C 1350	CKSSYB104K10	C 1616	CCSRCH471J50	
C 1351	CKSSYB104K10	C 1617	CCSRCH471J50	
C 1352	CKSSYB104K10	C 1618	CCSRCH471J50	
C 1501	CKSRYB224K10	C 1619	CKSRYB104K16	
C 1502	CKSRYB224K10	C 1641	CKSRYB104K16	
C 1503	CKSRYB224K10	C 1650	CKSYB475K16	
C 1504	CKSRYB224K10	C 1651	CKSYB475K16	
C 1505	CKSRYB224K10	C 1676	CSZSR100M10	
C 1507	CKSRYB224K10	C 1701	CKSRYB224K10	
C 1508	CKSRYB224K10	C 1702	CKSRYB224K10	
C 1510	CSZSC101M10	C 1703	CKSRYB224K10	
C 1513	CKSRYB224K10	C 1706	CKSRYB224K10	
C 1514	CKSRYB224K10	C 1707	CKSRYB224K10	
C 1515	CKSRYB224K10	C 1708	CKSSYB471K50	
C 1516	CKSRYB224K10	C 1710	CKSRYB224K10	
C 1517	CKSRYB224K10	C 1711	CKSSYB103K16	
C 1518	CKSRYB224K10	C 1712	CKSSYB103K16	
C 1519	CKSRYB224K10	C 1713	CKSRYB224K10	
C 1520	CKSRYB224K10	C 1716	CKSRYB224K10	
C 1521	CKSRYB224K10	C 1717	CKSSYB104K10	
C 1522	CKSRYB224K10	C 1718	CKSRYB224K10	
C 1523	CKSRYB224K10	C 1719	CKSSYB104K10	
C 1524	CKSRYB224K10	C 1720	CKSRYB224K10	
C 1525	CKSSYB104K10	C 1721	CKSSYB104K10	
C 1526	CKSRYB224K10	C 1722	CKSRYB224K10	
C 1527	CKSRYB224K10	C 1723	CKSRYB224K10	
C 1528	CKSSYB104K10	C 1724	CKSSYB103K16	
C 1529	CKSRYB224K10	C 1727	CKSSYB224K6R3	
C 1530	CKSRYB224K10	E Unit Number : CWX2752 Unit Name : Compoud Unit(A)		
C 1531	CKSSYB471K50			
C 1532	CKSSYB104K10			
C 1533	CKSSYB104K10			
C 1534	CKSRYB224K10			
C 1535	CKSSYB104K10	Q 1299	Photo-transistor	CPT231SCTD
C 1538	CKSSYB104K10	S 1201	Switch(12cm)	CSN1051
C 1539	CKSRYB105K10	S 1202	Switch(8cm)	CSN1051
		S 1203	Switch(DISC SENS)	CSN1051
		S 1204	Spring Switch(DISC SENS)	CSN1052
C 1540	CKSRYB105K10	S 1205	Spring Switch(8cm)	CSN1052
C 1542	CKSSYB104K10	R 1298		RS1/16S0R0J
C 1543	CSZS4R7M16	R 1299		RS1/16S0R0J
C 1544	CKSSYB104K10	F Unit Number : CWX2753 Unit Name : Compoud Unit(B)		
C 1547	CSZSR330M10			
C 1548	CKSSYB104K10			
C 1549	CKSSYB104K10			
C 1550	CKSSYB104K10			
C 1551	CKSSYB104K10	S 1206	Switch(CLAMP)	CSN1051
C 1552	CKSSYB104K10			

====Circuit Symbol and No.==Part Name

Part No.

====Circuit Symbol and No.==Part Name

Part No.

N Unit Number : CZW3087
Unit Name : Main Unit

MISCELLANEOUS

IC 3801 IC
IC 3802 IC
IC 3803 IC
IC 3804 IC
IC 3805 Photo-interrupter

Q 3801 Transistor
Q 3802 Transistor
Q 3803 Transistor
D 3801 Diode
D 3802 Diode

L 3801 Inductor
L 3802 Inductor

RESISTORS

R 3801
R 3802
R 3803
R 3804
R 3805

R 3806
R 3807
R 3808
R 3809
R 3810

R 3811
R 3812
R 3813
R 3814
R 3815

R 3816
R 3817
R 3818
R 3819
R 3821

R 3822
R 3823

CAPACITORS

C 3801
C 3802
C 3803
C 3804
C 3805

C 3806
C 3807
C 3808
C 3809
C 3810

C 3811
C 3812
C 3813
C 3815
C 3819

O Unit Number : CZW3088
Unit Name : SW Unit

S 3831 Switch (ANGLE)
S 3832 Switch (LIFT)

BA00AST
BA6247FP
TA78L05F
TC7S14FU
GP2L24B

DTC124EU
2SA1037K
DTC124EU
UDZS5R6(B)
1SS355

LCTA150J2520
LCTA150J2520

RS1/16S103J
RS1/16S222J
RS1/16S471J
RS1/16S102J
RS1/16S102J

RS1/16S102J
RS1/16S102J
RS1/16S103J
RS1/16S222J
RS1/16S222J

RS1/16S102J
RS1/16S102J
RS1/16S472J
RS1/16S102J
RS1/16S0R0J

RS1/16S0R0J
RS1/16S0R0J
RS1/16S473J
RS1/16S0R0J
RS1/16S473J

RS1/16S512J
RS1/16S0R0J

CKSQYB105K16
CKSQYB105K16
CKSRYB104K16
CKSRYB104K16
CKSRYB104K16

CKSRYB223K50
CKSRYB223K50
CEVW101M16
CEVW101M16
CKSRYB104K16

CEV100M16
CKSRYB104K16
CKSRYB102K50
CKSQYB104K50
CEVW101M16

CSN1052
CSN1052

P Unit Number : CZW3089
Unit Name : Volume Unit

VR 3841 Rotary (Angle sense)

CCW1025

Miscellaneous Parts List

M 1 Pickup Unit(Service)(DP5)
M 2 Motor Unit(LOADING)
M 3 Motor Unit(CARRIAGE)
M 3001 Motor(SPINdle)
M 3001 Motor Unit(Position)


M 3002 Motor Unit(Angle)
Fan Motor
LCD Panel
LCD

CXX1639
CXB8687
CXB8688
CXM1211
CXB9515

CXB9516
CXM1262
CWX2671
CAW1805

6. ADJUSTMENT



6.1 JIG CONNECTION DIAGRAM

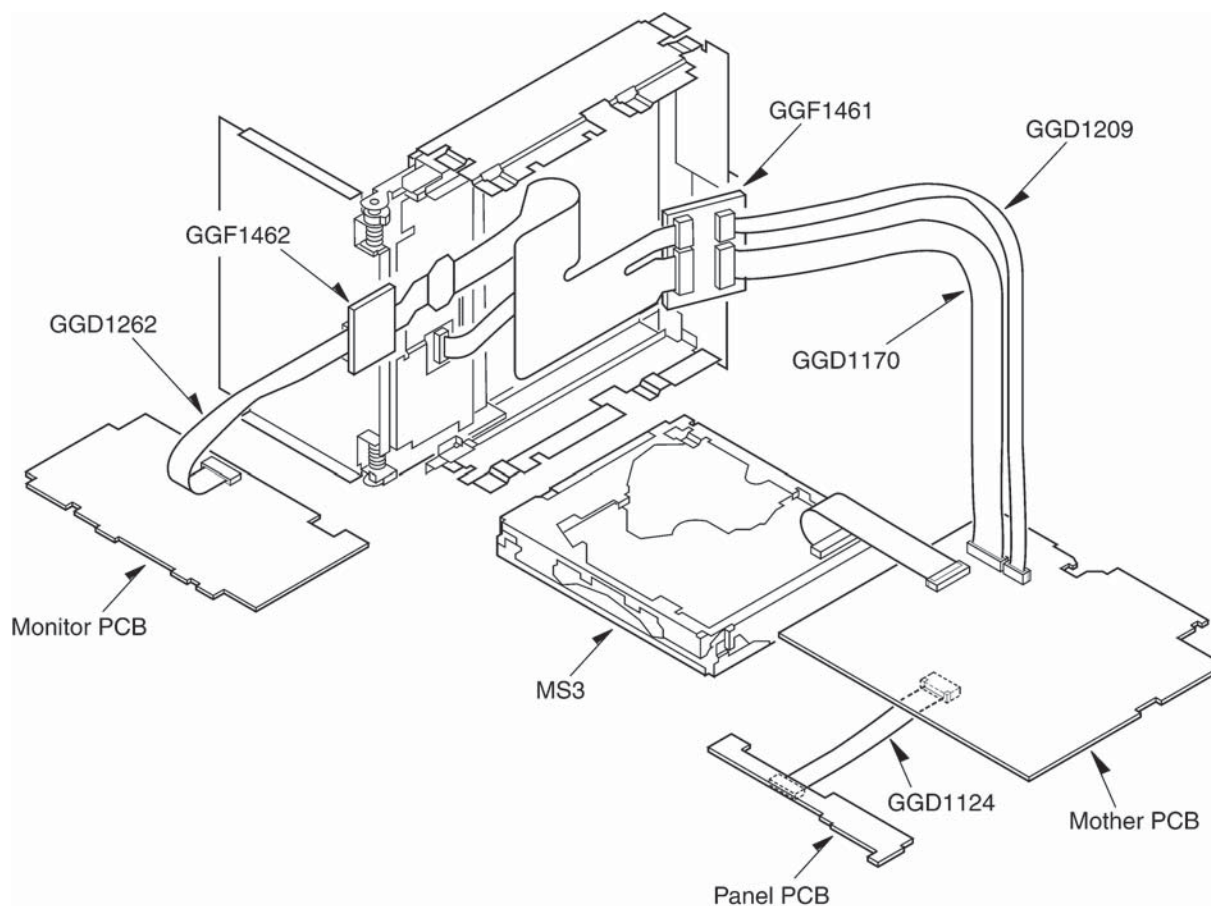

After connecting a tuner unit , please perform adjustment.


Function	Name	Jig No.
Mother PCB(CN805) <-> Main Unit(CN3801)	PCB	GGF1461
Mother PCB(CN805) <-> GGF1461	40P FFC	GGD1170
Mother PCB(CN805) <-> GGF1461	20P FFC	GGD1209
Mother PCB(CN803) <-> Monitor PCB(CN4461)	PCB	GGF1462
Monitor PCB(CN4461) <-> GGF1462	33P FFC	GGD1262
Mother PCB(CN101) <-> Panel PCB(CN5901)	17PFFC	GGD1124

7.1.2 PCB LOCATIONS

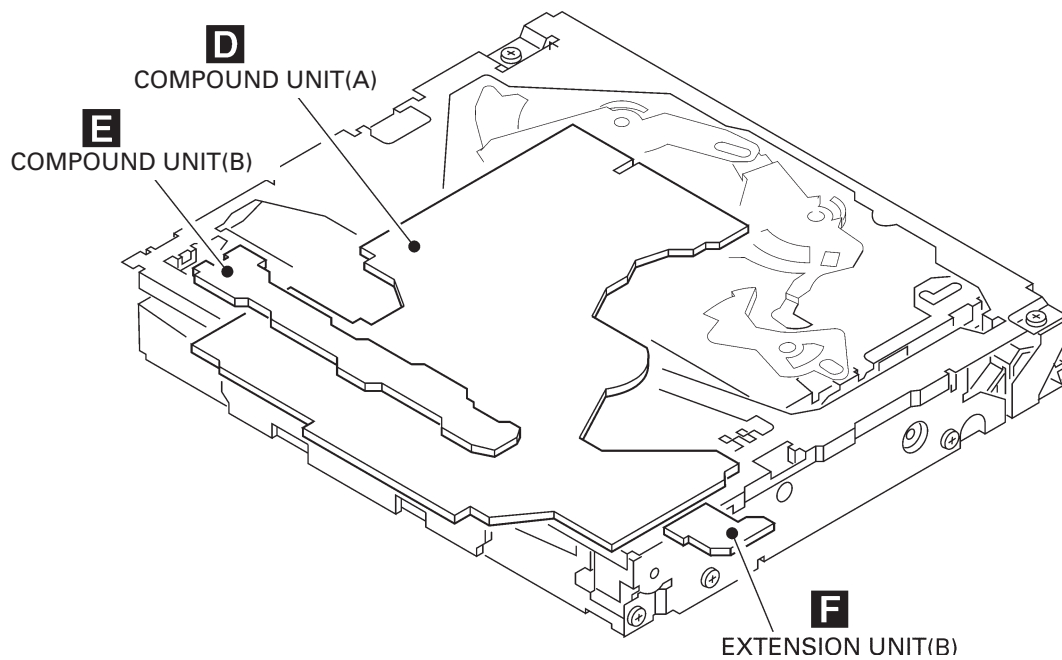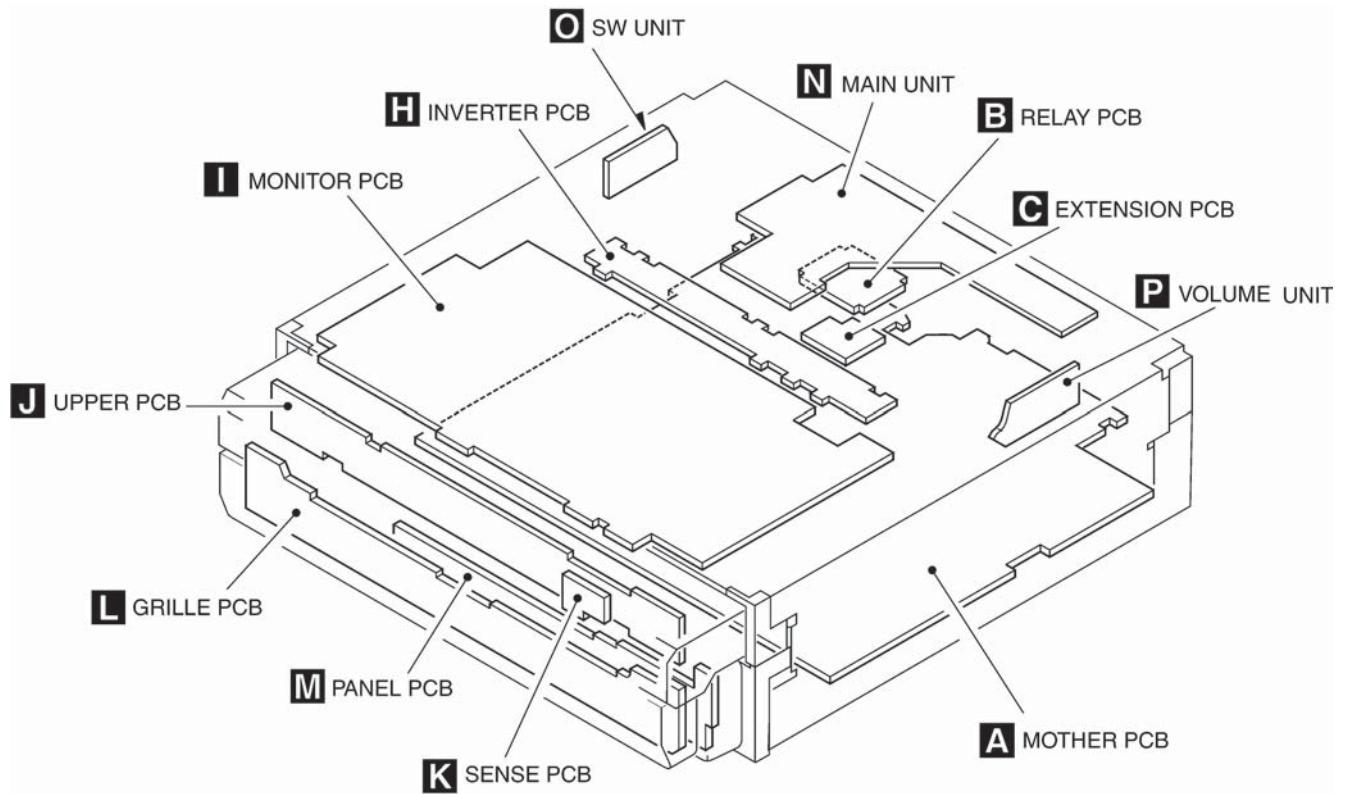


7.1.3 CONNECTOR FUNCTION DESCRIPTION

AVH-P6500DVD/EW
AVH-P6500DVD/UC

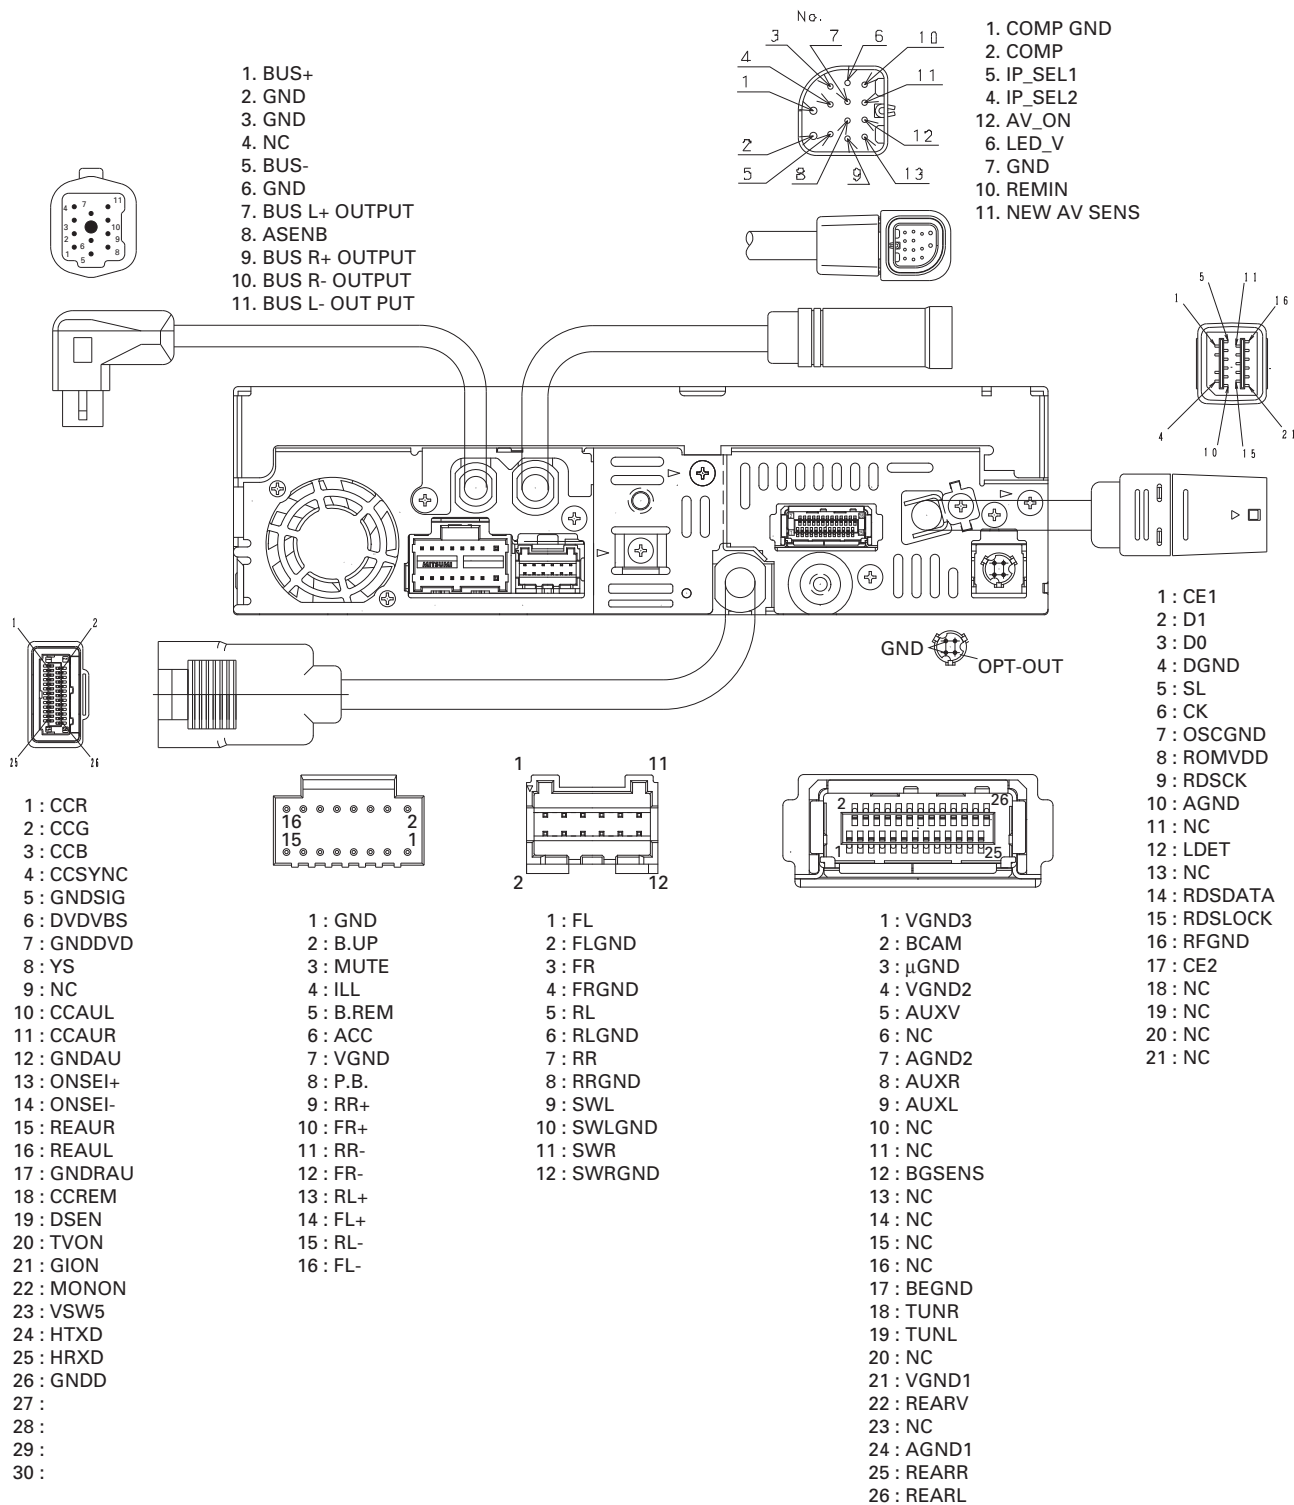


AVH-P6550DVD/RC
AVH-P6550DVD/RD

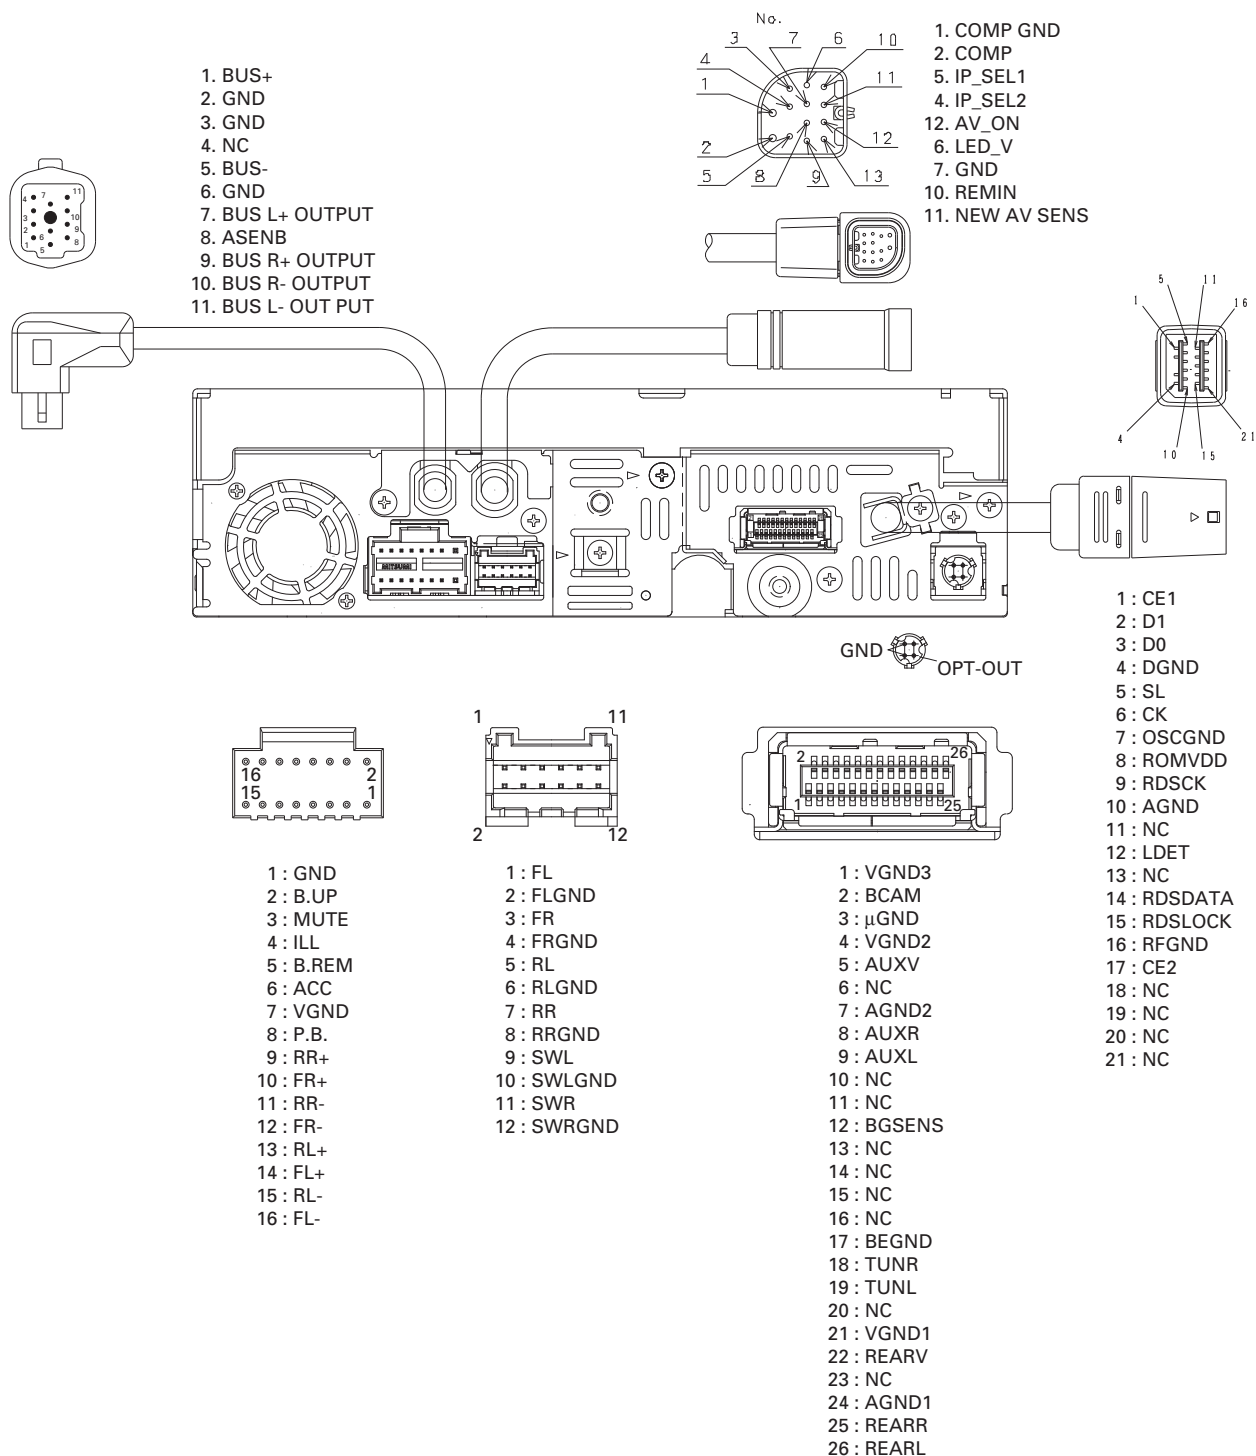

8. OPERATIONS

● UC model

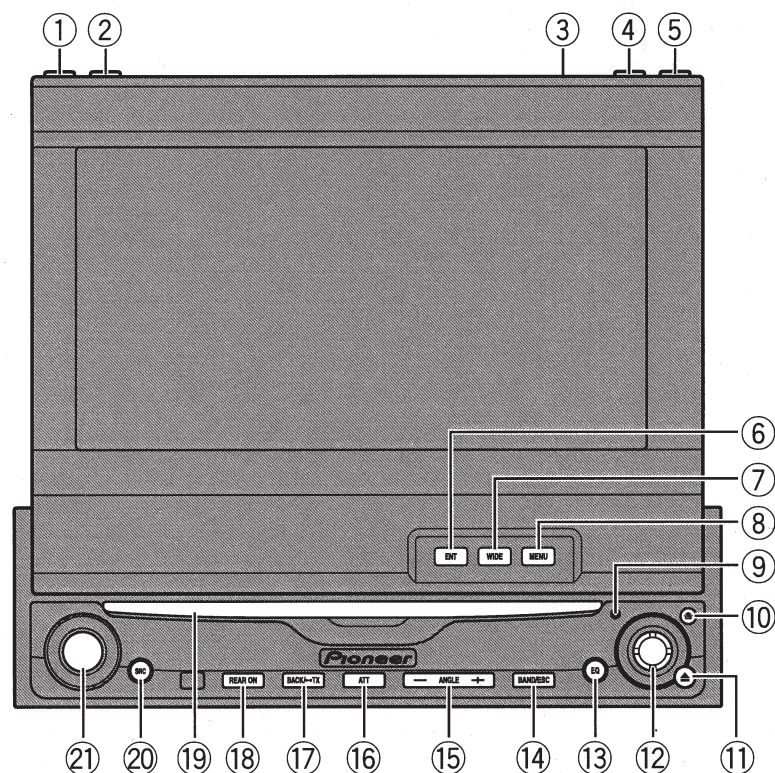

Head unit

① **DISPLAY button**

Press to select different displays.

② **PGM button**

Press to operate the preprogrammed functions for each source.

③ **Ambient light sensor**

Senses ambient light. This system automatically adjusts the brightness of the display to compensate for ambient light.

④ **FLIP DOWN/CLOCK button**

Press to turn the LCD panel horizontal temporarily when the LCD panel is upright. Press to turn the clock display on or off when the LCD panel is closed.

⑤ **OPEN/CLOSE button**

Press to open or close the LCD panel.

⑥ **ENTERTAINMENT button**

Press to switch between the background displays.

⑦ **WIDE button**

Press to select a desired mode for enlarging a 4:3 picture to a 16:9 one.

⑧ **MENU button**

Press and hold to display the picture adjustment menu.

⑨ **RESET button**

Press to return to the factory settings (initial settings).

⑩ **DETACH button**

Press to remove the front panel from the head unit.

⑪ **EJECT button**

Press to eject a disc from this unit.

⑫ Joystick

Move to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

⑬ EQ button

Press to select various equalizer curves.

⑭ BAND/ESC button

Press to select among three FM and one AM bands and cancel the control mode of functions.

⑮ ANGLE (+/-) button

Press to change the LCD panel angle.

⑯ ATT button

Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.

⑰ BACK button

Press to return to the previous display.

⑱ REAR ON button

Press to watch a DVD/Video CD on a rear display if **DVD** (built-in DVD player) is not selected as the source.

⑲ Disc loading slot


Insert a disc to play.

⑳ SOURCE button

This unit is turned on by selecting a source. Press to cycle through all of the available sources.

㉑ VOLUME

Rotate to increase or decrease the volume. 

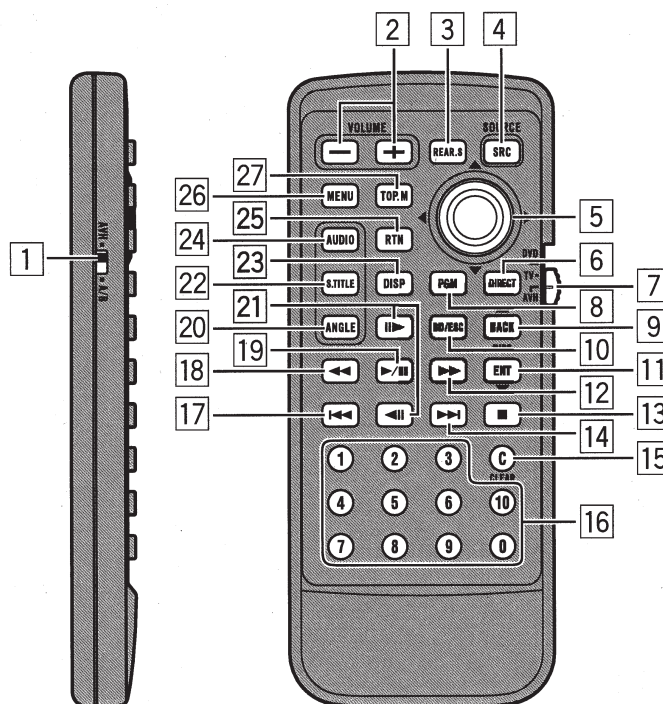

Remote control

1 Remote control selection switch

Switch to change the setting of the remote control.

2 VOLUME button

Press to increase or decrease the volume.

3 REAR.S button

Press to watch a DVD/Video CD on a rear display if **DVD** (built-in DVD player) is not selected as the source.

4 SOURCE button

This unit is turned on by selecting a source. Press to cycle through all of the available sources.

5 Joystick

Move to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

6 DIRECT button

Press to do direct channel select when using an XM tuner.

7 Remote control operation mode switch

Switch the operation mode between **AVH**, **DVD** and **TV** modes. Normally, set to **AVH**.

- **AVH** – For common operation of this unit
- **DVD** – Only for DVD player operation
- **TV** – Only for TV tuner operation

8 PGM button

Press to operate the preprogrammed functions for each source.

9 BACK button

Press to return to the previous display.

10 BAND/ESC button

Press to select among three FM and one AM bands and cancel the control mode of functions.

11 ENTERTAINMENT button

Press to switch between the background displays.

12 FORWARD (▶▶) button

Press to perform fast forward playback.

13 STOP (■) button

Press to stop playback.

14 NEXT (▶▶|) button

Press to go to the next track (chapter).

15 CLEAR button

Press to cancel the input number while **0–10** are used.

16 0–10 buttons

Press to directly select the desired track, preset tuning and disc. **1–6** buttons can operate the preset tuning for the tuner or disc number search for the multi-CD player.

17 PREVIOUS (◀◀|) button

Press to return to the previous track (chapter).

18 REVERSE (◀◀) button

Press to perform fast reverse playback.

19 PLAY/PAUSE (▶/||) button

Press to switch sequentially between playback and pause play.

20 ANGLE button

Press to change the viewing angle during DVD playback.

21 STEP (||▶/◀||) button

Press to move ahead one frame at a time during DVD/VideoCD playback. Press and hold for one second to activate slow playback.

22 SUBTITLE (SUB.T) button

Press to change the subtitle language during DVD playback.

23 DISPLAY button

Press to select different displays.

24 AUDIO button

Press to change the audio language during DVD playback.

25 RETURN button

Press to display the PBC (playback control) menu during PBC playback.

26 MENU button

Press to display the DVD menu during DVD playback.

27 TOP MENU (TOP.M) button

Press to return to the top menu during DVD playback.

Switching the remote control operation mode switch

There are three remote control operation modes on the remote control.

AVH mode operation

When operating this unit by remote control, normally switch the mode to **AVH**.

- The joystick on the remote control can perform the same operations as it on the head unit. Furthermore, the joystick can perform the same operations as the touch panel keys ▲, ▼, ◀ and ▶.

Fixing the front panel

If you do not operate the removing and attaching the front panel function, use the supplied fixing screws to fix the front panel to this unit.

- **Fix the front panel to the unit using fixing screws after removing the front panel.**

