


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 EXTERIOR(1)

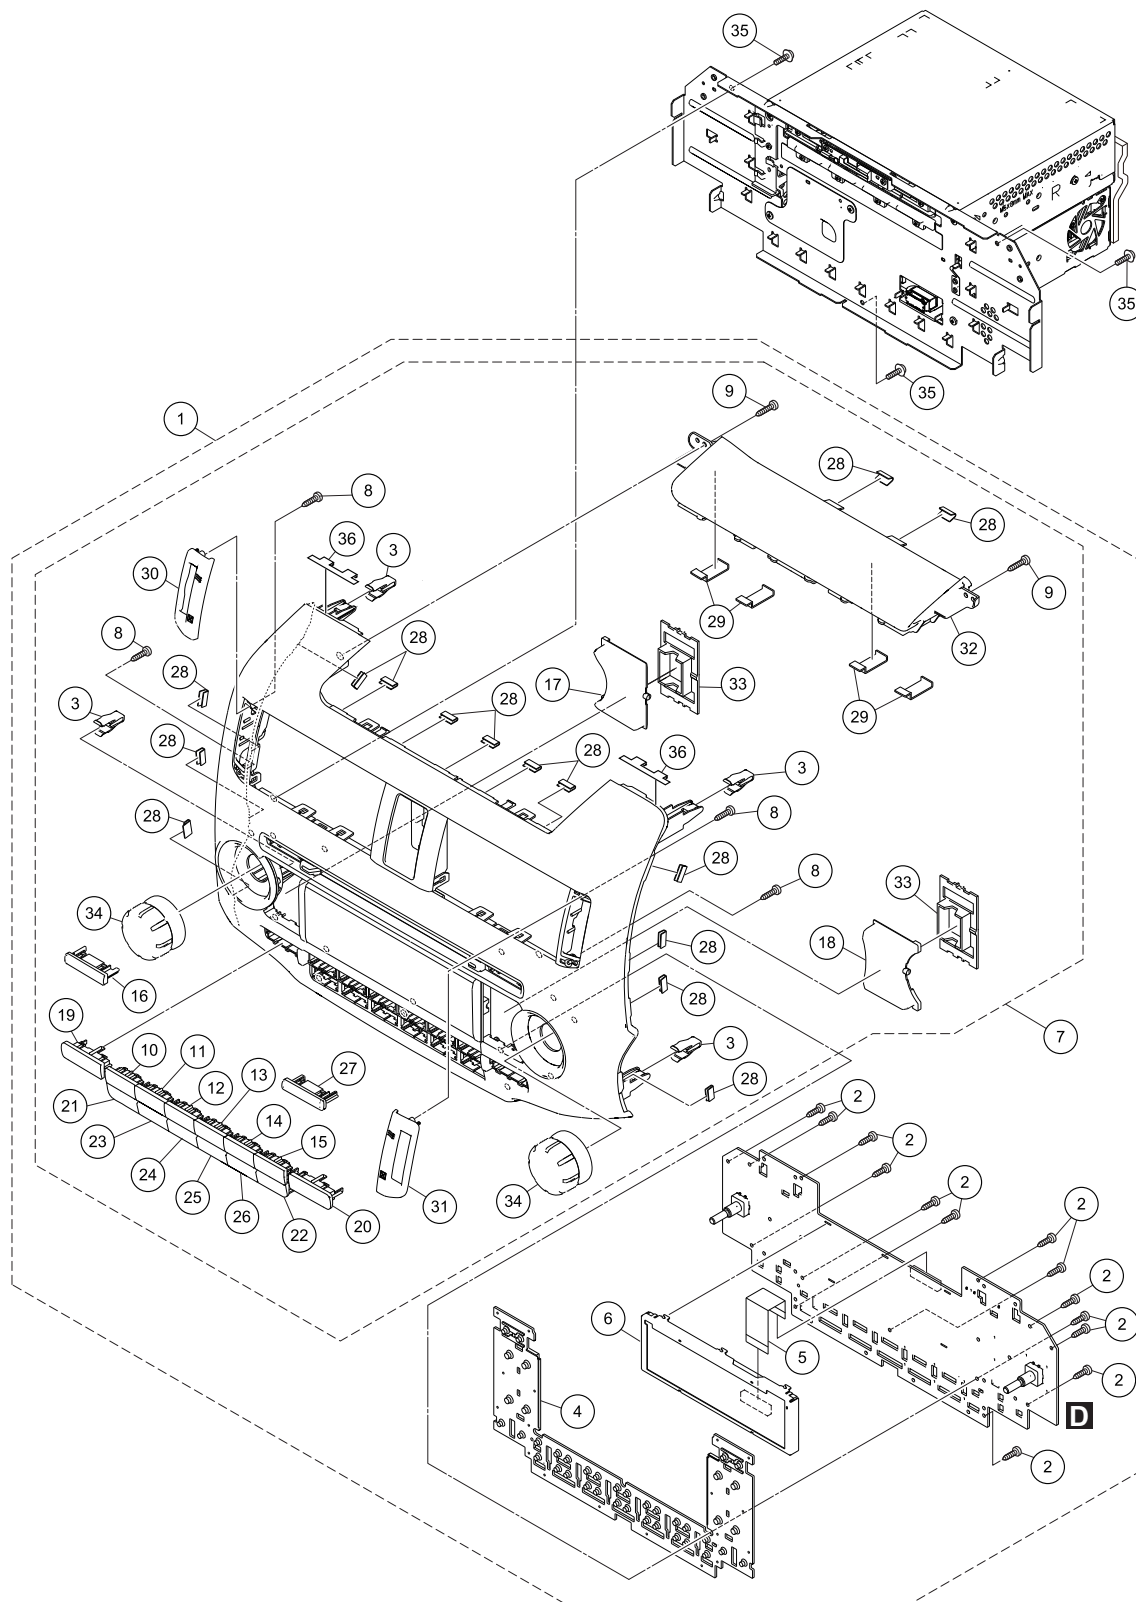


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Grille Assy	See Contrast table(2)	20	Button(TEXT)	CAI2110
2	Screw	BPZ20P080FTC			
3	90467-10203	CNV5641	21	Button(PRESETS)	CAI2111
4	Rubber	CNW1393	22	Button(SETUP)	CAI2112
5	Connector	CDE8728	23	Button(RADIO)	CAI2113
			24	Button(CD)	CAI2114
6	OLED Module(V1800)	MXK8283	25	Button(AUX)	CAI2115
7	Grille Unit	See Contrast table(2)			
8	Screw	BPZ20P060FTC	26	Button(PLAY STOP)	CAI2116
9	Screw	BPZ26P100FTC	27	Button	CAI2252
10	Button(1)	CAI2099	28	Sheet	CNN2695
			29	Sheet	CNN2990
11	Button(2)	CAI2100	30	Plate	CNS9707
12	Button(3)	CAI2101			
13	Button(4)	CAI2102	31	Plate	CNS9708
14	Button(5)	CAI2103	32	Plate	CNS9709
15	Button(6)	CAI2104	33	Holder	CNW1390
			34	Knob Unit	See Contrast table(2)
16	Button(EJECT)	CAI2105	35	Screw	APZ26P100FTC
17	Button(SEEK TRACK)	CAI2107			
18	Button(TYPE FOLDER)	CAI2108	* 36	Sheet	CNN3298
19	Button(SCAN)	CAI2109			

(2) CONTRAST TABLE

DEH-M8597ZT/US, DEH-M9597ZT/US and DEH-M8597ZT/CS are constructed the same except for the following:

Mark	No.	Description	DEH-M8597ZT/US	DEH-M9597ZT/US	DEH-M8597ZT/CS
	1	Grille Assy	CXC9969	CXE1927	CXE2578
	7	Grille Unit	CXE1019	CXE1071	CXE2587
	34	Knob Unit	CXE1020	CXE1376	CXE1020

9.2 EXTERIOR(2)

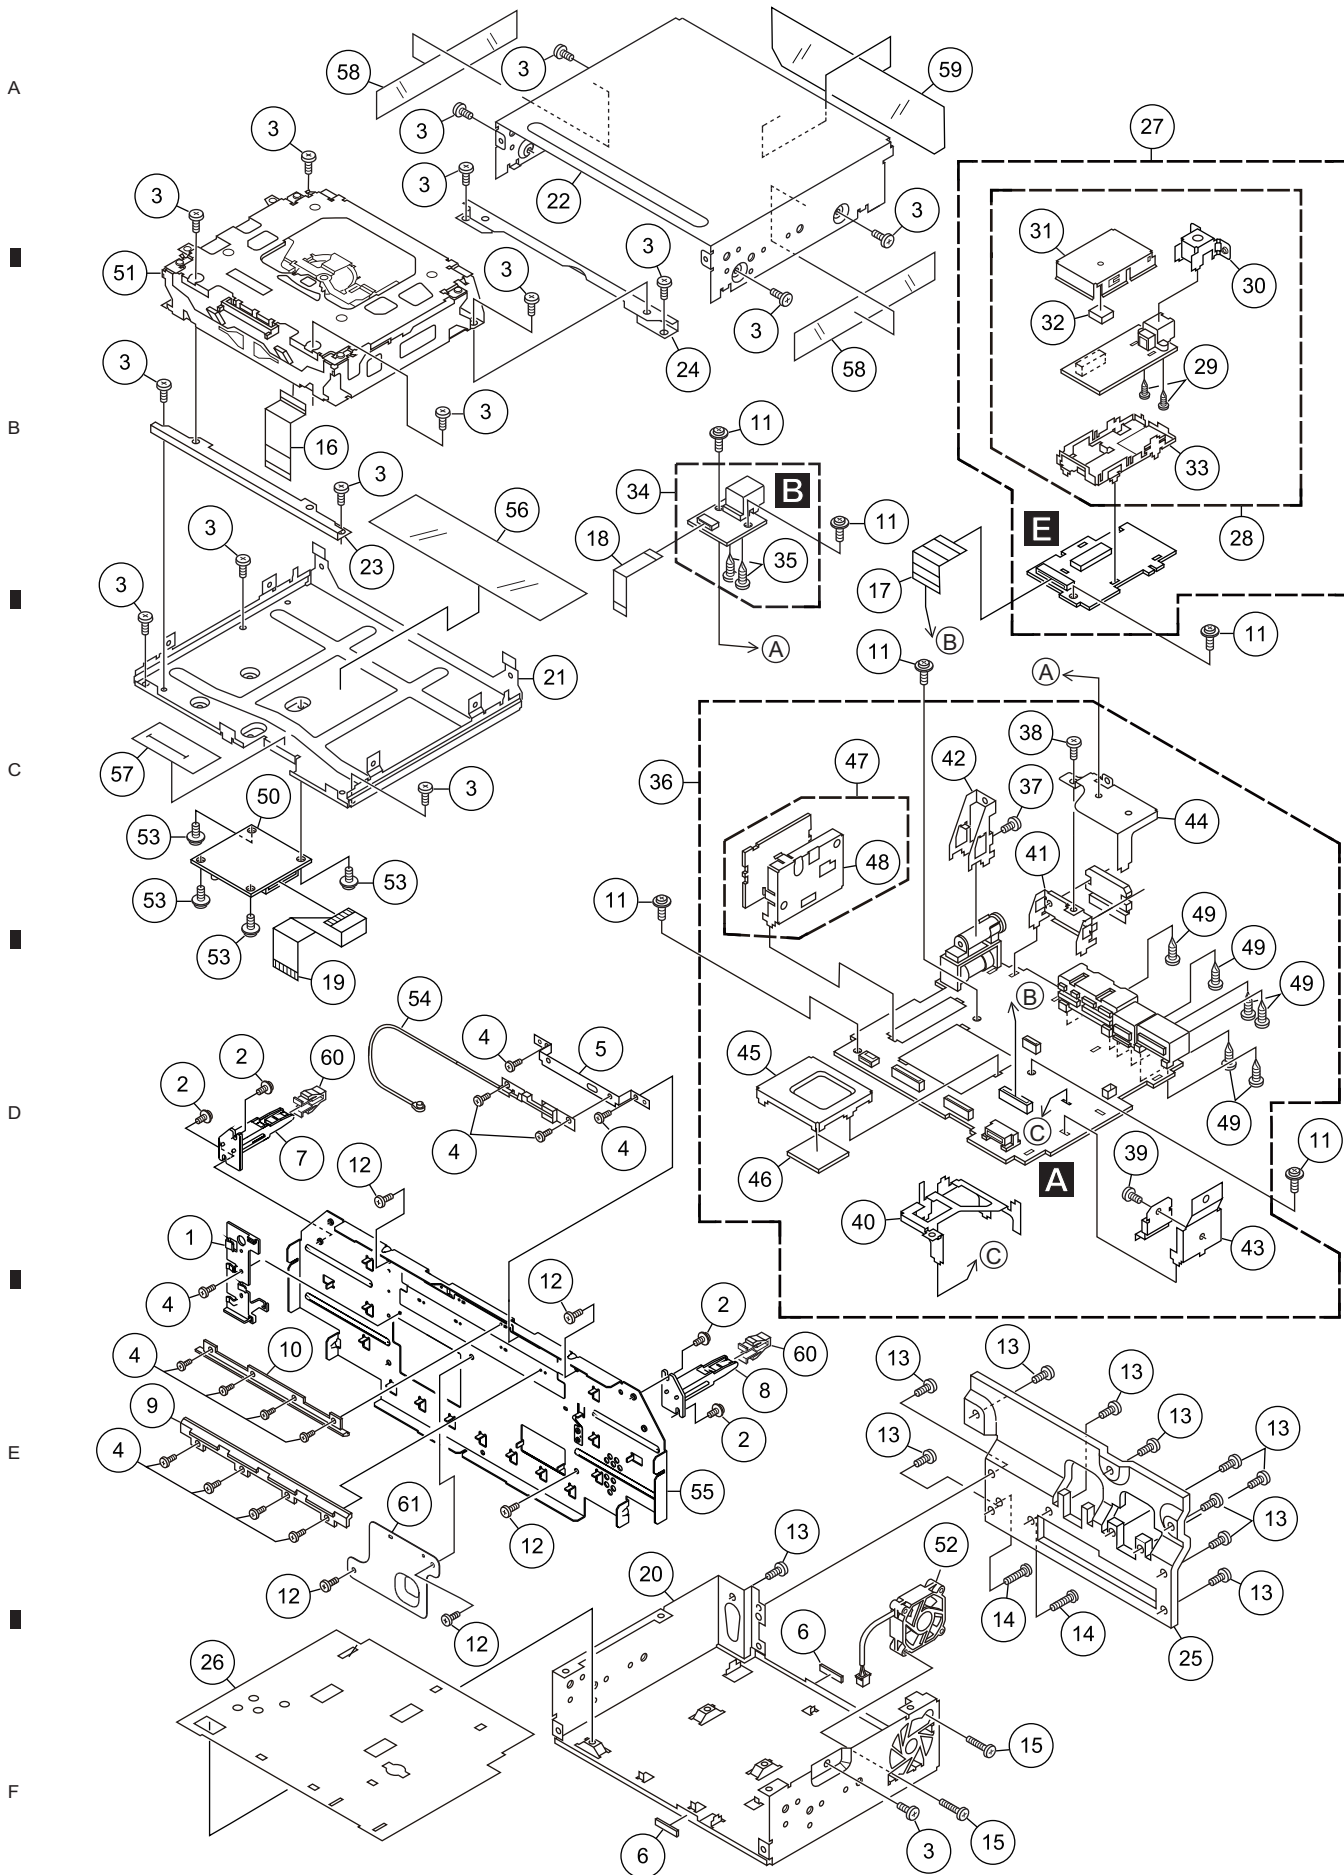


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Holder	CNW1262	32	Sheet	CNN2084	
2	Screw	ASZ26P060FTC	33	Shield Unit	CXE2373	A
3	Screw	BSZ26P050FTC	34	Connector Unit	CWN3480	
4	Screw(M2 x 3)	CBA1677	35	Screw	PPZ30P060FSN	
5	Holder	CND4774				
			36	Mother Unit	See Contrast table(2)	
6	Gasket	CNN3136	37	Screw	BMZ30P040FTC	
7	86222-35010	CNW1478	38	Screw	BSZ26P050FTC	
8	86222-35020	CNW1479	39	Screw	BSZ26P050FTC	
9	Guide	CNW1513	40	Holder	CND4352	
10	Guide	CNW1514				
			41	Holder	CND4353	
11	Screw	ASZ26P050FCC	42	Holder	CND4354	B
12	Screw	BSZ26P050FTC	43	Holder	CND4355	
13	Screw	BSZ26P080FTC	44	Holder	CND4409	
14	Screw	BSZ26P140FCC	45	Shield	CND5450	
15	Screw(M2.6 x 14)	CBA2152				
			46	Sheet	CNM9256	
16	Connector	CDE8584	47	FM/AM Tuner Unit(U101)	CWE2178	
17	Connector	CDE8585	48	Holder	CND5364	
18	Connector	CDE8586	49	Screw	PPZ30P060FSN	
19	Connector	CDE8587	50	BT Module	CWW1561	
20	Chassis	CNA3047				
			51	CD Mechanism Module(S10.5)	CXK5784	C
21	Chassis	CNA3049	52	Fan Motor	CXM1384	
22	Case	CNB3622	53	Screw	PMH26P050FTC	
23	Holder	CND4361	54	BT Antenna	CXC9414	
24	Holder	CND4362	55	Frame Unit	CXE1104	
25	Heat Sink	CND4582				
			56	Sheet	See Contrast table(2)	
26	Insulator	CNN3042	57	Cover	See Contrast table(2)	
27	XM Sub Unit	CWN3320	58	Sheet	See Contrast table(2)	
28	XM Tuner Unit	CWE2125	59	Sheet	See Contrast table(2)	
29	Screw	BBZ30P060FTC	60	90467-13082	CNV9101	D
30	Holder	CND4876				
			61	Shield	CND5403	
31	Shield	CND5368				

(2) CONTRAST TABLE
DEH-M8597ZT/US, DEH-M9597ZT/US and DEH-M8597ZT/CS are constructed the same except for the following:

Mark	No.	Description	DEH-M8597ZT/US	DEH-M9597ZT/US	DEH-M8597ZT/CS
	36	Mother Unit	CWN3725	CWN3725	CWN4935
	56	Sheet	Not used	Not used	CNN2682
	57	Cover	Not used	Not used	CNN2683
	58	Sheet	Not used	Not used	CNN2685
	59	Sheet	Not used	Not used	CNN3181

9.3 CD MECHANISM MODULE

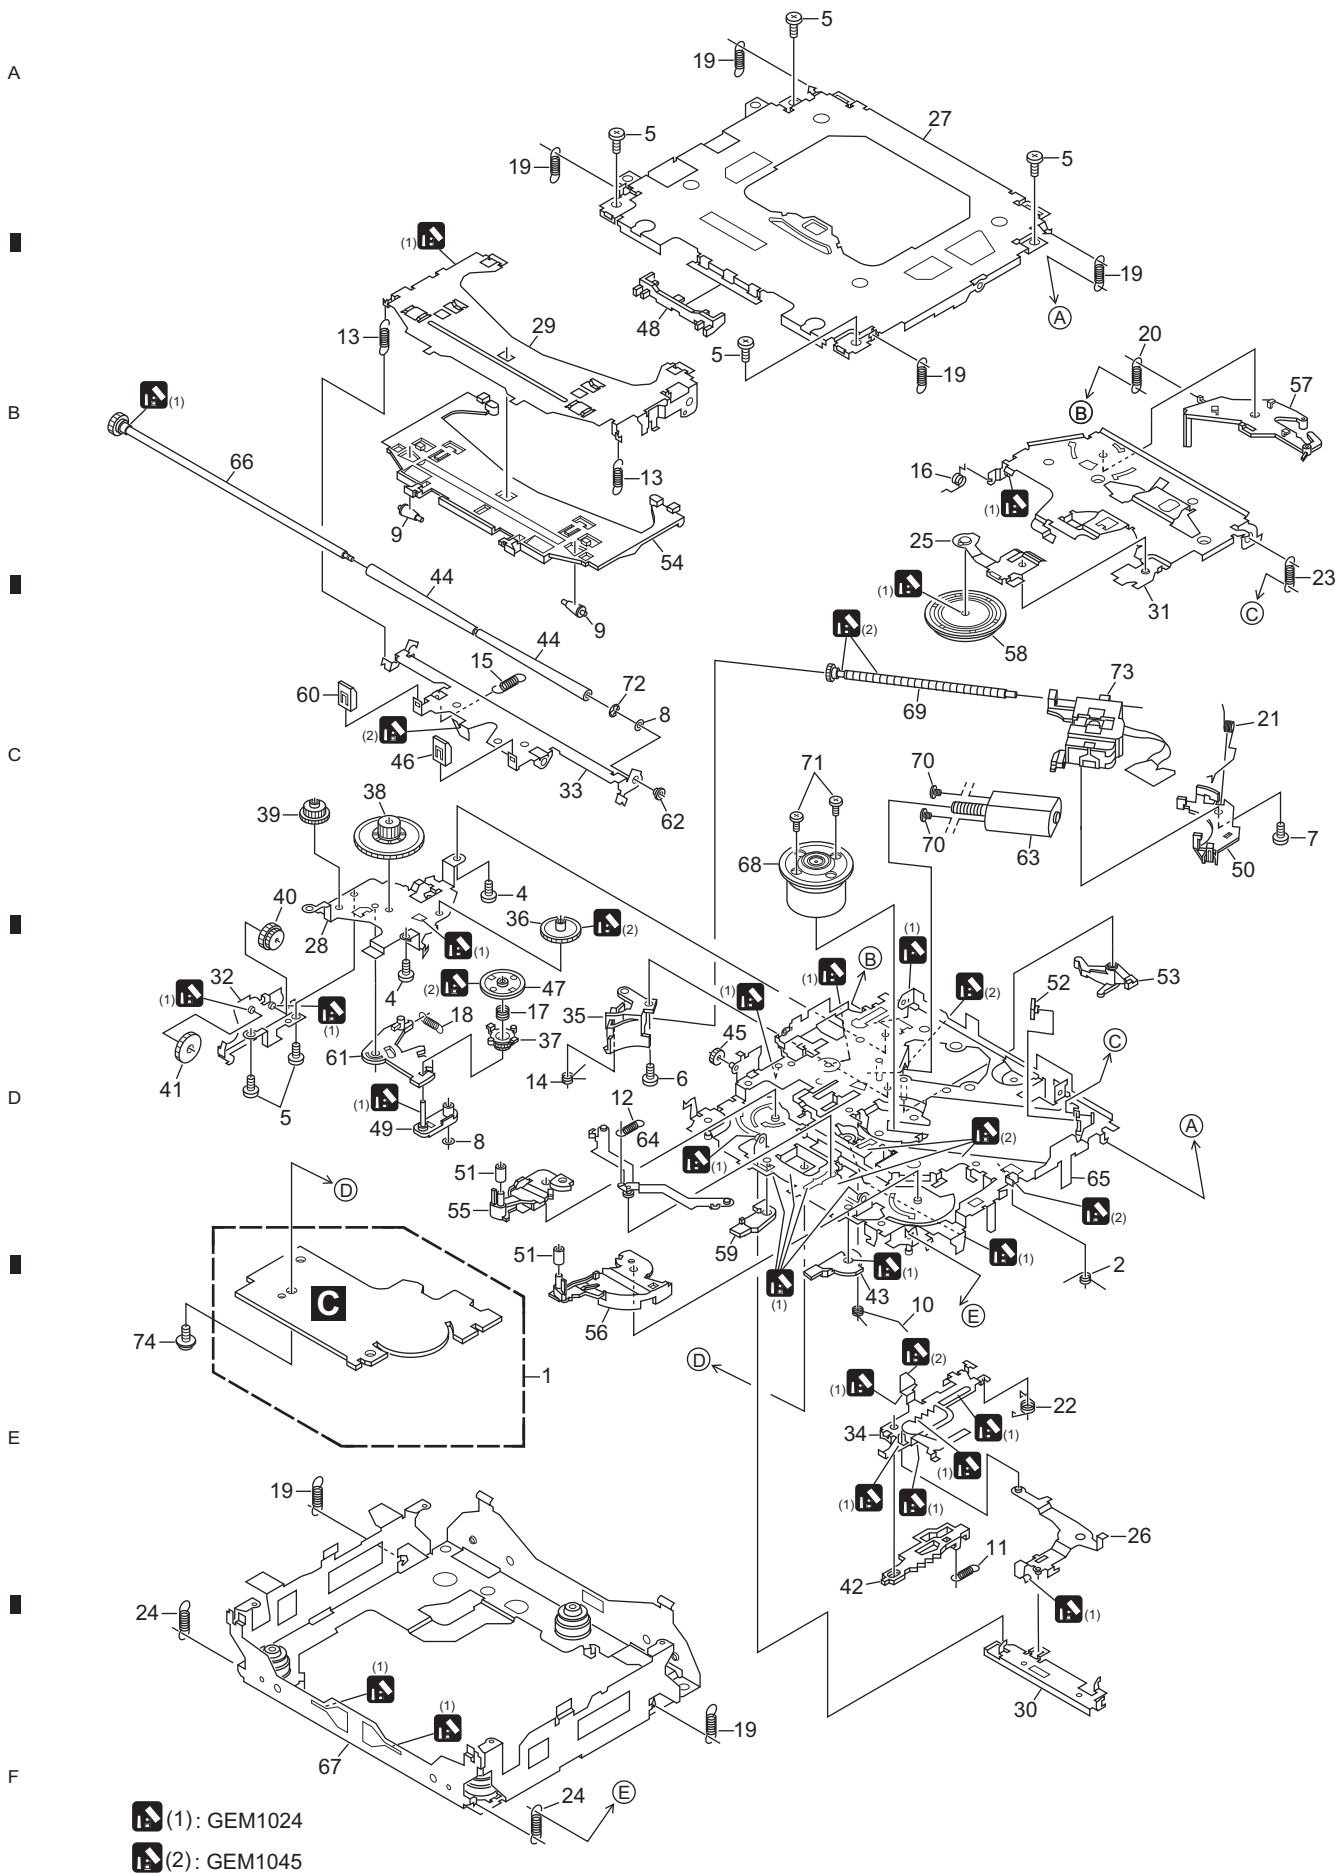

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10.5 09T)	CWX3897	50	Rack	CNV8342	
2	Spring	CBH2951				
3			51	Roller	CNV8343	A
4	Screw	BMZ20P025FTC	52	Holder	CNV8344	
5	Screw	BSZ20P040FTC	53	Arm	CNV8345	
			54	Guide	CNV9498	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9	Roller	CNV9499	57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
			59	Arm	CNV8386	
11	Spring	CBH2612	60	Guide	CNV8396	B
12	Spring	CBH2614				
13	Spring	CBH2616	61	Arm	CNV8413	
14	Spring	CBH2617	62	Collar	CNV8938	
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026	
			64	Arm Unit	CXC4027	
16	Spring	CBH2855	65	Chassis Unit	CXC4028	
17	Spring	CBH2937				
18	Spring	CBH2735	66	Gear Unit	CXC4029	
19	Spring	CBH2854	67	Frame Unit	CXE1930	
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134	
			69	Screw Unit	CXC6359	C
21	Spring	CBH2856	70	Screw	JFZ20P025FTC	
22	Spring	CBH2857				
23	Spring	CBH2860	71	Screw	JGZ17P022FTC	
24	Spring	CBH2861	72	Washer	YE20FTC	
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942	
			74	Screw	IMS26P030FTC	
26	Arm	CND1909				
27	Frame	CND2582				
28	Bracket	CND2583				
29	Arm	CND4321				
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND5397				
34	Lever	CND2589				
35	Holder	CNV7201				
36	Gear	CNV7207				
37	Gear	CNV7208				
38	Gear	CNV7209				E
39	Gear	CNV7210				
40	Gear	CNV7211				
41	Gear	CNV7212				
42	Rack	CNV7214				
43	Arm	CNV7216				
44	Roller	CNV7218				
45	Gear	CNV7219				
46	Guide	CNV7361				
47	Gear	CNV7595				F
48	Guide	CNV7799				
49	Arm	CNV7805				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No.

Part No.

Unit Number: CWN3725(US)

Unit Number: CWN4935(CS)

Unit Name : Mother Unit

Unit Number: CWN3480

Unit Name : Connector Unit

Unit Number:

Unit Name : Keyboard Unit

Unit Number: CWN3320

Unit Name : XM Sub Unit

Unit Number: CWX3897

Unit Name : CD Core Unit(S10.5 09T)

A

Unit Number: CWN3725(US)

Unit Number: CWN4935(CS)

Unit Name : Mother Unit

MISCELLANEOUS

IC 201	(B,115,17) IC	TC7SH08FUS1
IC 202	(A,87,20) IC	TC7SH08FUS1
IC 301	(A,145,106) IC	S-812C56AUA-C3K
IC 302	(A,168,59) IC	R2A25407DS
IC 303	(B,144,107) IC	S-1132B34-U5
IC 304	(A,48,22) IC	S-80930CNNB-G80
IC 305	(B,123,53) IC	NJM2846DL3-33
IC 306	(B,122,37) IC	NJM2886DL3-15
IC 401	(A,103,86) IC	NJM4558MD
IC 402	(B,122,93) IC	HA12241FP
IC 501	(A,146,47) IC	LT3684EDD
IC 502	(A,148,32) IC	LT3505EDD
IC 602	(B,49,40) IC	S-93C76ADFJ
IC 603	(A,72,57) IC	PN5023A8
IC 801	(A,47,146) IC	TDA7388A

Circuit Symbol and No.

Part No.

IC 902	(B,82,100) IC	NJM4558MD
IC 903	(B,73,21) IC	AK4647VQ
IC 904	(A,108,56) IC	TC74HC4066AFT
IC 905	(B,97,84) IC	NJM4558MD
Q 101	(B,27,115) Transistor	2SC4154-11
Q 102	(B,16,66) Transistor	2SC4154-11
Q 103	(B,13,67) Transistor	2SC4154-11
Q 104	(A,12,59) Transistor	UMH4N
Q 301	(B,128,29) Transistor	2SD1767
Q 302	(A,126,34) Transistor	2SA2126
Q 304	(B,138,96) Transistor	2SA2126
Q 307	(B,149,99) Transistor	2SA1602A
Q 308	(B,151,99) Transistor	2SC4154-11
Q 310	(B,148,102) Transistor	2SC4154-11
Q 311	(A,147,93) Transistor	2SD1767
Q 312	(A,134,106) Transistor	UMD9N
Q 313	(A,129,69) Chip Transistor	2SB1689
Q 314	(B,96,97) Transistor	2SA2070
Q 315	(B,92,98) Transistor	UMX1N
Q 316	(A,128,101) Digital Transistor	DTC144EUA
Q 318	(A,103,96) Transistor	2SA1602A
Q 401	(B,132,76) Transistor	2SA1602A
Q 405	(A,129,84) Transistor	2SC4154-11
Q 406	(B,136,87) Transistor	2SC4154-11
Q 407	(A,139,94) Transistor	2SC4154-11
Q 408	(A,135,94) Transistor	2SC4154-11
Q 409	(A,125,99) Transistor	2SA1602A
Q 410	(B,130,73) Transistor	2SC4154-11
Q 461	(A,89,82) Transistor	UMH3N
Q 462	(A,86,82) Transistor	UMD9N
Q 481	(A,125,92) Transistor	2SC4154-11
Q 601	(B,50,54) Transistor	2SD2453
Q 603	(B,63,32) Transistor	2SA1602A
Q 604	(B,70,44) Transistor	2SA1602A
Q 605	(A,98,59) Transistor	2SA1602A
Q 606	(B,105,52) Transistor	2SA1602A
Q 607	(B,59,32) Transistor	2SC4154-11
Q 801	(B,36,113) Digital Transistor	DTC143EUA
Q 802	(B,32,116) Transistor	2SD1781K
Q 803	(B,39,117) Transistor	2SC4154-11
Q 806	(B,43,109) Transistor	2SA1602A

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
Q 807	(B,41,112) Digital Transistor	DTC144EUA		L 505	(A,152,61) Inductor	CTF1745	
Q 901	(A,125,56) Transistor	2SC4154-11		L 601	(B,80,75) Inductor	CTF1379	
Q 902	(A,124,61) Transistor	2SA1602A		L 606	(A,63,75) Inductor	CTF1389	
Q 903	(A,119,59) Transistor	2SC4154-11		L 607	(B,71,74) Inductor	CTF1379	A
Q 904	(A,100,52) Chip Transistor	DTC114EUA		L 615	(A,54,67) Inductor	CTF1744	
Q 905	(A,100,56) Digital Transistor	DTC144EUA		L 617	(A,52,64) Inductor	LCTAW1R2J2520	
D 101	(B,14,71) Diode	CPH5512		L 619	(B,50,64) Inductor	LCTAWR12J2520	
D 102	(B,16,77) Diode	CPH5512		L 621	(A,89,58) Inductor	CTF1379	
D 301	(B,97,107) Diode	1SR154-400		L 625	(A,91,45) Inductor	CTF1473	
D 302	(A,151,111) Diode	UDZS16(B)		L 627	(B,100,26) Inductor	CTF1389	
D 303	(B,128,33) Diode	1SS352		L 628	(B,87,29) Inductor	CTF1389	
D 306	(A,130,100) Diode	UDZS9R1(B)		L 629	(A,91,42) Inductor	CTF1389	
D 307	(A,152,90) Diode	UDZS11(B)		L 901	(B,80,28) Inductor	CTF1295	
D 308	(A,131,104) Diode	1SS352		X 601	(A,47,65) Oscillator 74.1 MHz	CSS1758	
D 311	(B,159,114) Diode	1SR154-400		X 602	(A,91,64) Oscillator 16.934 MHz	CSS1770	B
D 312	(B,158,106) Diode	1SR154-400		X 603	(A,69,36) Oscillator 4.687 5 MHz	CSS1765	
D 313	(B,156,114) Diode	1SR154-400		F 302	(A,90,71) Chip EMI Filter	DTL1106	
D 314	(B,155,106) Diode	1SR154-400		F 303	(B,58,80) Chip EMI Filter	DTL1106	
D 315	(A,95,98) Diode	1SS352		F 601	(B,57,73) Chip EMI Filter	DTL1106	
D 316	(A,95,96) Diode	HZU4R3(B3)		F 602	(B,74,74) Chip EMI Filter	DTL1106	
D 401	(B,120,100) Diode	UDZS18(B)		△FU401	(A,137,121) Fuse 5 A	CEK1195	
D 402	(B,120,102) Diode	UDZS18(B)		P 101	(B,24,108) Surge Protector	IMSA-6802-01Y900	
D 403	(A,102,125) Diode	1SS352		P 102	(B,21,108) Surge Protector	IMSA-6802-01Y900	
D 407	(A,152,118) Diode	1SS352		U 101	(A,25,91) FM/AM Tuner Unit	CWE2178	
D 408	(A,143,120) Diode	1SS352		CN201	(A,106,18) Connector	CKS3859	C
D 409	(A,150,118) Diode	1SS352		CN202	(A,144,13) Connector	CKS6047	
D 410	(B,149,120) Diode	1SS352		CN301	(A,158,91) Connector	VKN1928	
D 411	(B,134,123) Diode	1SS352		CN401	(A,91,142) Connector	CKM1458	
D 414	(A,124,87) Diode	HZU8R2(B1)		CN403	(A,89,91) Connector	CKS3849	
D 416	(A,87,117) Diode	ST70-27F		CN601	(A,31,16) Connector	CKS5033	
D 417	(A,129,96) Diode	HZU8R2(B1)		CN901	(A,63,18) Connector	CKS6002	
D 418	(A,151,123) Diode	UDZS18(B)		CN902	(A,127,45) Connector	CKS3861	
D 419	(B,153,120) Diode	UDZS18(B)		JA 101	(A,11,137) Connector	CKX1064	
D 420	(A,155,120) Diode	UDZS18(B)		JA 402	(A,149,143) Connector	CKM1467	
D 421	(B,134,120) Diode	1SS352		JA 404	(A,125,144) Connector	CKM1466	D
D 481	(A,124,97) Diode	HZU20(B2)		RESISTORS			
D 501	(A,144,58) Diode	RB060L-40		R 101	(B,25,116)	RS1/16SS472J	
D 502	(A,148,26) Diode	RB160M-40		R 102	(B,15,60)	RS1/16SS223J	
D 503	(A,142,30) Diode	1SS352		R 103	(B,17,68)	RS1/16SS222J	
D 505	(A,157,26) Diode	1SR154-400		R 104	(B,15,61)	RS1/16SS104J	
D 601	(A,48,27) Diode	1SS352		R 105	(B,16,71)	RS1/16SS225J	
D 610	(B,67,34) Diode	1SS352		R 106	(B,14,63)	RS1/16SS222J	
D 801	(B,43,113) Diode	HZU8R2(B3)		R 107	(B,12,71)	RS1/16SS225J	
D 901	(A,124,59) Diode	HZU6R8(B3)		R 108	(A,15,86)	RS1/16SS225J	
L 101	(B,14,75) Inductor	LCTC6R8K1608		R 109	(A,13,86)	RS1/16SS225J	
L 102	(B,13,75) Inductor	LCTC6R8K1608		R 110	(B,11,68)	RS1/16SS104J	
L 103	(B,11,75) Inductor	LCTC6R8K1608		R 111	(B,12,60)	RS1/16SS102J	
L 105	(B,21,104) Chip Coil	LCTAW330J2520		R 113	(A,37,83)	RS1/10SR273J	
L 106	(A,13,80) Inductor	LCTAW2R2J2520		R 114	(B,39,68)	RS1/10SR104J	
L 108	(A,25,38) Inductor	LCTAW2R2J2520		R 115	(B,39,65)	RS1/10SR104J	
L 201	(A,106,23) Inductor	CTF1744		R 116	(B,39,60)	RS1/10SR104J	
L 202	(A,97,25) Inductor	CTF1745		R 118	(B,39,62)	RS1/10SR104J	
L 301	(A,133,23) Inductor	CTF1688		R 119	(A,39,48)	RS1/10SR102J	
L 304	(B,153,71) Inductor	CTF1295		R 120	(A,37,58)	RS1/10SR221J	
L 305	(A,135,34) Inductor	CTF1744		R 121	(B,38,58)	RS1/10SR681J	
L 401	(A,67,106) Choke Coil 600 uH	CTH1423		R 122	(A,37,60)	RS1/10SR681J	F
L 501	(A,153,28) Inductor	CTF1744		R 123	(A,37,62)	RS1/10SR681J	
L 502	(A,143,53) Inductor	CTF1745		R 124	(A,37,65)	RS1/10SR102J	
L 503	(A,149,55) Inductor	DTL1163					
L 504	(A,142,26) Choke Coil 3.3 uH	CTH1419					

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 125 (A,37,67)
R 126 (B,39,69)
R 127 (B,18,65)

RS1/10SR102J
RS1/10SR472J
RS1/16SS222J

R 410 (A,101,92)
R 416 (A,148,122)
R 417 (A,145,122)

RS1/10SR2202D
RS1/10SR0R0J
RS1/10SR0R0J

A

R 201 (A,88,23)
R 202 (B,97,19)
R 203 (B,98,19)
R 204 (B,100,19)
R 205 (B,101,19)

RS1/10SR473J
RS1/10SR682J
RS1/10SR472J
RS1/10SR682J
RS1/10SR472J

R 418 (B,126,76)
R 419 (A,146,122)
R 420 (B,130,76)
R 422 (B,128,77)
R 423 (B,120,108)

RS1/10SR103J
RS1/10SR0R0J
RS1/10SR473J
RS1/10SR102J
RS1/4SA101J

R 206 (B,136,19)
R 208 (B,137,21)
R 210 (B,131,18)
R 211 (A,99,24)
R 212 (A,101,24)

RS1/10SR471J
RS1/10SR471J
RS1/10SR471J
RS1/10SR221J
RS1/10SR221J

R 424 (B,120,105)
R 427 (A,98,124)
R 429 (B,129,117)
R 430 (B,127,117)
R 431 (B,126,117)

RS1/4SA101J
RS1/10SR510J
RS1/10SR103J
RS1/10SR103J
RS1/10SR103J

B

R 213 (A,102,24)
R 214 (A,103,24)
R 215 (A,105,24)
R 217 (B,137,18)
R 218 (B,111,15)

RS1/10SR101J
RS1/10SR101J
RS1/10SR101J
RS1/10SR473J
RS1/10SR0R0J

R 432 (B,125,117)
R 433 (A,142,93)
R 434 (B,133,85)
R 435 (A,139,92)
R 436 (A,126,86)

RS1/10SR103J
RS1/10SR104J
RS1/10SR0R0J
RS1/10SR104J
RS1/10SR103J

R 220 (B,118,18)
R 302 (B,131,33)
R 303 (A,133,33)
R 304 (B,148,94)
R 306 (B,128,25)

RS1/10SR471J
RS1/10SR472J
RS1/10SR223J
RS1/10SR182J
RS1/4SA101J

R 437 (B,133,86)
R 438 (A,120,119)
R 439 (A,120,123)
R 440 (A,130,121)
R 441 (A,132,121)

RS1/10SR0R0J
RS1/8SQ183J
RS1/8SQ183J
RS1/8SQ183J
RS1/8SQ183J

C

R 307 (B,123,25)
R 309 (B,131,32)
R 312 (B,145,94)
R 313 (B,147,94)
R 317 (B,146,98)

RS1/4SA101J
RS1/10SR1R0J
RS1/10SR223J
RS1/10SR224J
RS1/10SR220J

R 442 (A,126,88)
R 443 (B,131,85)
R 444 (A,155,123)
R 445 (A,157,123)
R 446 (A,131,94)

RS1/10SR473J
RS1/10SR471J
RS1/8SQ102J
RS1/8SQ0R0J
RS1/10SR473J

R 318 (A,140,106)
R 321 (B,151,102)
R 323 (B,157,84)
R 324 (A,151,92)
R 325 (B,157,86)

RS1/10SR225J
RS1/10SR472J
RS1/10SR103J
RS1/10SR471J
RS1/10SR103J

R 447 (A,131,93)
R 448 (A,111,104)
R 449 (A,143,124)
R 450 (B,105,119)
R 451 (A,108,116)

RS1/10SR473J
RS1PMF680J
RS1/10SR102J
RS1/8SQ182J
RS1/8SQ472J

D

R 327 (A,126,69)
R 328 (A,124,70)
R 332 (A,45,22)
R 333 (A,130,107)
R 336 (B,90,95)

RS1/10SR473J
RS1/10SR472J
RS1/10SR104J
RS1/10SR222J
RS1/10SR223J

R 452 (B,102,116)
R 454 (A,125,102)
R 455 (A,128,97)
R 456 (B,135,74)
R 457 (B,130,87)

RS1/8SQ472J
RS1/10SR473J
RS1/10SR473J
RS1/10SR103J
RS1/10SR0R0J

R 337 (B,93,95)
R 338 (B,96,101)
R 339 (A,91,100)
R 340 (A,91,101)
R 341 (A,91,103)

RS1/10SR102J
RS1/10SR223J
RS1/10SR121J
RS1/10SR471J
RS1/10SR331J

R 458 (B,129,121)
R 459 (B,132,73)
R 461 (A,98,78)
R 462 (A,93,87)
R 463 (A,98,76)

RS1/8SQ102J
RS1/10SR473J
RS1/10SR102J
RS1/10SR102J
RS1/10SR123J

E

R 343 (A,133,70)
R 346 (B,135,36)
R 347 (B,131,28)
R 348 (A,151,94)
R 349 (A,99,96)

RS1/10SR473J
RS1/10SR0R0J
RS1/10SR223J
RS1/10SR1R0J
RS1/10SR200J

R 464 (A,97,90)
R 481 (A,125,94)
R 482 (A,125,95)
R 483 (A,126,89)
R 503 (A,146,36)

RS1/10SR123J
RS1/10SR473J
RS1/10SR473J
RS1/10SR0R0J
RS1/16SS683J

R 350 (A,101,96)
R 351 (A,97,96)
R 352 (B,122,41)
R 401 (A,94,81)
R 402 (A,97,81)

RS1/10SR222J
RS1/10SR471J
RS1/10SR103J
RS1/10SR3002D
RS1/10SR3002D

R 504 (A,150,36)
R 505 (A,145,43)
R 506 (A,148,44)
R 507 (A,148,37)
R 508 (A,147,36)

RS1/16SS2002D
RS1/16SS333J
RS1/16SS153J
RS1/16SS0R0J
RS1/16SS5102D

F

R 403 (A,93,85)
R 404 (A,95,85)
R 405 (A,96,87)
R 406 (A,105,82)
R 407 (A,103,90)

RS1/10SR3002D
RS1/10SR3002D
RS1/10SR1502D
RS1/10SR1502D
RS1/10SR2202D

R 509 (A,149,36)
R 510 (A,146,43)
R 511 (A,144,43)
R 512 (A,144,41)
R 513 (A,146,30)

RS1/16SS9101D
RS1/16SS153J
RS1/16SS104J
RS1/16SS0R0J
RS1/16SS0R0J

R 408 (A,103,91)
R 409 (A,100,92)

RS1/10SR2202D
RS1/10SR2202D

R 514 (B,157,47)
R 515 (A,146,26)

RS1/16SS0R0J
RS1/16SS4R7J

1

2

3

4

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 516	(A,142,56)	RS1/16SS4R7J		R 671	(B,91,35)	RS1/16SS102J	
R 517	(A,154,25)	RS1/16SS0R0J		R 674	(B,88,33)	RS1/16SS101J	
R 604	(B,90,71)	RS1/10SR362J		R 675	(B,90,32)	RS1/16SS101J	
				R 676	(B,84,29)	RS1/16SS103J	A
R 605	(B,95,71)	RS1/10SR362J		R 677	(B,77,31)	RS1/16SS101J	
R 607	(B,92,71)	RS1/10SR203J					
R 608	(B,93,71)	RS1/10SR203J		R 678	(B,56,43)	RS1/16SS102J	
R 612	(B,87,73)	RS1/16SS102J		R 679	(A,90,36)	RS1/16SS102J	
R 613	(A,52,75)	RS1/16SS0R0J		R 680	(A,87,35)	RS1/16SS101J	
				R 684	(A,61,40)	RS1/16SS102J	
R 614	(A,52,74)	RS1/16SS0R0J		R 685	(A,61,38)	RS1/16SS102J	
R 615	(A,65,73)	RS1/16SS203J					
R 616	(B,64,70)	RS1/16SS103J		R 686	(A,60,40)	RS1/16SS102J	
R 617	(B,59,70)	RS1/16SS103J		R 687	(B,61,31)	RS1/16SS473J	
R 618	(A,84,70)	RS1/16SS223J		R 688	(B,70,50)	RS1/16SS102J	
				R 690	(A,88,36)	RS1/16SS473J	
R 619	(B,52,44)	RS1/10SR102J		R 691	(A,87,36)	RS1/16SS473J	B
R 620	(B,53,42)	RS1/10SR102J					
R 621	(B,53,39)	RS1/10SR103J		R 692	(A,85,36)	RS1/16SS473J	
R 622	(A,84,71)	RS1/16SS473J		R 693	(A,84,36)	RS1/16SS473J	
R 623	(A,84,72)	RS1/16SS473J		R 694	(B,69,46)	RS1/16SS473J	
				R 695	(B,66,31)	RS1/10SR472J	
R 624	(A,76,74)	RS1/16SS1002F		R 697	(B,73,49)	RS1/16SS473J	
R 625	(B,71,72)	RS1/16SS1002F					
R 626	(A,58,68)	RS1/16SS182J		R 700	(B,70,46)	RS1/16SS333J	
R 627	(B,48,44)	RS1/10SR104J		R 701	(B,76,49)	RS1/16SS472J	
R 628	(B,48,45)	RS1/10SR473J		R 702	(B,75,49)	RS1/16SS472J	
				R 703	(B,64,40)	RS1/16SS473J	
R 629	(B,86,67)	RS1/16SS223J		R 704	(B,74,49)	RS1/16SS473J	C
R 630	(B,87,67)	RS1/16SS223J					
R 631	(A,85,68)	RS1/16SS223J		R 705	(A,53,37)	RS1/16SS103J	
R 632	(A,54,64)	RS1/16SS470J		R 706	(A,54,37)	RS1/16SS122J	
R 633	(B,63,65)	RS1/16SS302J		R 707	(A,56,37)	RS1/16SS122J	
				R 708	(B,67,31)	RS1/10SR103J	
R 634	(A,47,54)	RS1/16SS472J		R 712	(A,54,63)	RS1/16SS101J	
R 635	(B,55,61)	RS1/16SS222J					
R 636	(A,49,51)	RS1/16SS101J		R 720	(A,70,40)	RS1/16SS0R0J	
R 637	(A,46,51)	RS1/16SS102J		R 721	(A,89,65)	RS1/16SS471J	
R 638	(A,49,50)	RS1/16SS102J		R 722	(B,41,36)	RS1/16SS104J	
				R 723	(B,72,44)	RS1/16SS512J	
R 639	(B,59,56)	RS1/16SS473J		R 724	(B,75,44)	RS1/16SS222J	
R 640	(B,83,54)	RS1/16SS222J					
R 641	(B,86,55)	RS1/16SS0R0J		R 725	(A,55,76)	RS1/16SS0R0J	D
R 642	(B,85,55)	RS1/16SS473J		R 726	(A,55,74)	RS1/16SS0R0J	
R 643	(A,88,55)	RS1/16SS102J		R 727	(A,87,51)	RS1/16SS101J	
				R 728	(A,101,59)	RS1/16SS472J	
R 644	(A,89,54)	RS1/16SS473J		R 729	(A,98,61)	RS1/16SS103J	
R 645	(A,87,53)	RS1/16SS102J					
R 646	(B,59,54)	RS1/16SS473J		R 730	(A,88,49)	RS1/16SS473J	
R 649	(A,46,49)	RS1/16SS102J		R 731	(A,88,48)	RS1/16SS473J	
R 650	(B,41,39)	RS1/16SS102J		R 732	(B,64,42)	RS1/16SS102J	
				R 734	(A,60,27)	RS1/16SS473J	
R 654	(B,63,35)	RS1/16SS102J		R 735	(A,90,50)	RS1/16SS473J	
R 655	(B,62,36)	RS1/16SS102J					
R 656	(B,63,44)	RS1/16SS102J		R 736	(A,90,51)	RS1/16SS473J	
R 657	(B,59,49)	RS1/16SS0R0J		R 737	(B,80,47)	RS1/16SS473J	E
R 658	(A,87,47)	RS1/16SS101J		R 738	(B,103,52)	RS1/16SS472J	
				R 739	(B,106,54)	RS1/16SS103J	
R 659	(A,51,48)	RS1/16SS473J		R 740	(A,91,54)	RS1/16SS101J	
R 660	(A,53,48)	RS1/16SS0R0J					
R 661	(A,46,45)	RS1/16SS471J		R 741	(B,56,31)	RS1/16SS473J	
R 662	(B,90,30)	RS1/16SS102J		R 742	(B,63,36)	RS1/16SS473J	
R 663	(A,48,45)	RS1/16SS471J		R 744	(A,87,52)	RS1/16SS102J	
				R 745	(B,78,35)	RS1/16SS0R0J	
R 664	(B,110,21)	RS1/16SS473J		R 746	(B,84,35)	RS1/16SS0R0J	
R 665	(A,46,44)	RS1/16SS471J					
R 666	(A,48,43)	RS1/16SS471J		R 747	(B,85,34)	RS1/16SS0R0J	
R 667	(A,46,42) (CS)	RS1/16SS103J		R 801	(A,38,101)	RS1/16SS242J	F
R 668	(A,46,41) (US)	RS1/16SS473J		R 802	(A,36,101)	RS1/16SS242J	
	(A,46,41) (CS)	RS1/16SS333J		R 803	(A,33,101)	RS1/16SS242J	
R 669	(A,51,27)	RS1/16SS102J		R 804	(A,31,101)	RS1/16SS242J	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 805 (A,39,104) RS1/16SS102J
 R 806 (A,35,104) RS1/16SS102J
 R 807 (A,34,104) RS1/16SS102J
 R 808 (A,30,104) RS1/16SS102J
 R 809 (B,33,107) RS1/10SR754J

R 951 (B,77,14)
 R 955 (B,99,79)
 R 962 (A,82,100)
 R 963 (B,79,105)
 R 964 (B,79,107)

RS1/10SR681J
 RS1/10SR203J
 RS1/10SR203J
 RS1/10SR223J
 RS1/10SR223J

R 810 (B,32,113) RS1/10SR103J
 R 811 (B,33,110) RS1/10SR103J
 R 812 (B,32,111) RS1/10SR331J
 R 813 (B,33,106) RS1/10SR754J
 R 814 (B,36,118) RS1/10SR222J

R 965 (B,82,105)
 R 966 (B,80,108)
 R 970 (A,107,50)
 R 971 (A,108,50)
 R 972 (A,107,47)

RS1/10SR223J
 RS1/10SR223J
 RS1/10SR204J
 RS1/10SR204J
 RS1/10SR204J

R 815 (B,36,116) RS1/10SR103J
 R 817 (B,43,117) RS1/10SR223J
 R 818 (B,43,116) RS1/10SR104J
 R 821 (B,41,109) RS1/10SR473J
 R 822 (A,33,132) RS1/10SR103J

R 973 (A,108,47)
 R 974 (A,107,42)
 R 975 (A,107,40)
 R 976 (A,106,42)
 R 977 (A,106,40)

RS1/10SR204J
 RS1/10SR913J
 RS1/10SR913J
 RS1/10SR913J
 RS1/10SR913J

R 823 (B,43,106) RS1/10SR223J
 R 901 (A,82,96) RS1/10SR682J
 R 902 (A,86,96) RS1/10SR682J
 R 903 (A,120,54) RS1/10SR103J
 R 904 (A,129,51) RS1/10SR0R0J

R 978 (A,57,12)
 R 1001 (A,39,16) (US)
 (A,39,16) (CS)

RS1/10SR473J
 RS1/10SR822J
 RS1/10SR821J

CAPACITORS

R 905 (A,82,98) RS1/10SR133J
 R 906 (A,86,98) RS1/10SR133J
 R 907 (A,86,100) RS1/10SR103J
 R 909 (A,120,55) RS1/10SR181J
 R 910 (B,77,100) RS1/10SR203J

C 102 (B,24,105)
 C 103 (B,15,120)
 C 104 (B,23,105)
 C 105 (B,18,120)
 C 107 (A,15,82)

CKSSYB102K16
 CCSQCH101J50
 CKSSYB102K16
 CKSQYB103K50
 CKSSYB222K50

R 911 (A,123,56) RS1/10SR103J
 R 912 (A,120,57) RS1/10SR682J
 R 913 (A,121,61) RS1/10SR473J
 R 914 (A,120,61) RS1/10SR473J
 R 915 (A,114,59) RS1/10SR104J

C 108 (B,21,102)
 C 109 (A,11,72)
 C 110 (A,15,77)
 C 111 (A,15,80)
 C 112 (B,33,79)

CKSSYB103K16
 CEVW101M16
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB102K50

R 916 (A,116,59) RS1/10SR104J
 R 917 (A,57,13) RS1/10SR473J
 R 919 (A,112,46) RS1/10SR203J
 R 920 (A,113,49) RS1/10SR203J
 R 923 (A,56,26) RS1/10SR101J

C 113 (B,39,67)
 C 114 (B,39,63)
 C 116 (A,17,34)
 C 117 (A,24,36)
 C 119 (A,11,63)

CCSRCH390J50
 CCSRCH100D50
 CEVW470M16
 CKSRYB102K50
 CKSSYB104K16

R 924 (A,57,24) RS1/10SR101J
 R 925 (A,58,26) RS1/10SR101J
 R 926 (A,59,24) RS1/10SR101J
 R 927 (A,60,24) RS1/10SR101J
 R 928 (A,61,24) RS1/10SR220J

C 122 (A,24,138)
 C 201 (A,94,25)
 C 203 (B,146,18)
 C 205 (B,145,18)
 C 206 (B,120,16)

CKSRYB102K50
 CKSRYB102K50
 CCSRCH101J50
 CCSRCH101J50
 CCSRCH101J50

R 929 (A,63,24) RS1/10SR220J
 R 930 (A,64,24) RS1/10SR220J
 R 931 (A,65,24) RS1/10SR101J
 R 932 (A,55,24) RS1/10SR102J
 R 934 (A,103,53) RS1/10SR472J

C 207 (B,117,15)
 C 208 (A,88,22)
 C 215 (A,105,29)
 C 216 (A,107,29)
 C 217 (A,93,24) 22 uF

CKSRYB104K50
 CKSRYB104K50
 CKSRYB105K16
 CKSRYB105K16
 CCG1274

R 935 (A,103,50) RS1/10SR473J
 R 936 (B,80,21) RS1/10SR103J
 R 937 (B,80,19) RS1/10SR473J
 R 938 (B,96,76) RS1/10SR153J
 R 939 (B,99,76) RS1/10SR153J

C 219 (B,143,18)
 C 220 (A,93,21) 22 uF
 C 221 (B,102,19)
 C 301 (A,103,103) 3 300 uF/16 V
 C 302 (B,100,112)

CKSRYB102K50
 CCG1274
 CCSRCH470J50
 CCH1486(P35)
 CKSRYB473K50

R 940 (B,96,79) RS1/10SR103J
 R 941 (B,100,85) RS1/10SR203J
 R 943 (B,73,30) RS1/10SR103J
 R 944 (B,73,31) RS1/10SR103J
 R 945 (B,68,15) RS1/10SR220J

C 303 (B,133,28)
 C 305 (A,155,107)
 C 306 (A,119,26)
 C 307 (A,127,23)
 C 308 (B,146,100)

CKSRYB103K50
 CEVW2R2M50
 CEVW101M25
 CKSRYB103K50
 CCSRCH221J50

R 946 (B,70,14) RS1/10SR220J
 R 947 (B,78,14) RS1/10SR681J
 R 948 (B,79,14) RS1/10SR102J
 R 949 (B,74,14) RS1/10SR220J
 R 950 (B,75,14) RS1/10SR681J

C 309 (A,156,83)
 C 310 (A,141,106)
 C 311 (B,154,84)
 C 312 (B,154,83)
 C 314 (A,134,100)

CEVW101M25
 CKSRYB104K50
 CKSRYB102K50
 CKSRYB102K50
 CEVW4R7M16

1

2

3

4

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 316	(B,157,83)	CKSRYB102K50		C 423	(B,148,139)	CKSQYB102K50	A
C 317	(A,138,98)	CKSRYB103K50		C 424	(B,83,139)	CKSQYB183K50	
C 318	(A,152,88)	CKSRYB103K50		C 425	(B,150,139)	CKSQYB221K50	
C 319	(B,154,86)	CKSRYB102K50		C 426	(B,91,139)	CKSQYB183K50	
C 320	(A,143,99)	CEVW470M16		C 427	(B,152,139)	CKSQYB102K50	
C 321	(A,157,49)	CKSRYB102K50		C 428	(B,95,139)	CKSQYB183K50	B
C 322	(A,145,85)	CEAT471M16(P35)		C 429	(B,108,120)	CKSQYB221K50	
C 323	(B,149,107)	CKSRYB104K50		C 430	(A,155,118)	CKSQYB102K50	
C 324	(A,153,99)	CEVW470M16		C 431	(B,89,139)	CKSQYB183K50	
C 325	(A,43,22)	CKSRYB102K50		C 432	(B,158,120)	CKSQYB102K50	
C 326	(B,139,106)	CKSRYB105K10		C 433	(B,108,118)	CKSQYB221K50	C
C 327	(A,91,69)	CKSRYB102K50		C 434	(B,93,139)	CKSQYB183K50	
C 328	(A,43,23)	CKSRYB472K50		C 435	(B,131,119)	CKSQYB473K50	
C 329	(B,58,77)	CKSRYB102K50		C 436	(A,140,124)	CKSQYB102K50	
C 330	(A,131,70)	CKSRYB103K50		C 437	(A,139,91)	CKSRYB103K50	
C 331	(A,144,74)	CEAT471M16(P35)		C 438	(A,150,123)	CKSQYB221K50	D
C 332	(A,51,22)	CKSRYB223K16		C 441	(B,151,120)	CKSQYB221K50	
C 333	(A,158,62)	CEVQW470M16		C 442	(A,135,124)	CKSQYB104K50	
C 334	(B,154,74)	CKSRYB103K50		C 443	(A,50,115) 3 300 uF/16 V	CCH1486(P35)	
C 335	(A,162,42)	CKSRYB104K50		C 444	(B,104,115)	CKSRYB103K50	
C 336	(A,157,58) 10 uF	CCG1236		C 445	(A,108,114)	CKSRYB103K50	E
C 337	(A,157,55) 10 uF	CCG1236		C 446	(A,97,83)	CCSRCH330J50	
C 338	(B,92,95)	CKSRYB102K50		C 447	(A,96,85)	CCSRCH330J50	
C 340	(B,96,92) 22 uF	CCG1274		C 448	(A,128,92)	CKSRYB103K50	
C 341	(B,96,91)	CKSRYB104K16		C 453	(B,141,121)	CKSQYB102K50	
C 344	(B,134,46)	CKSRYB105K10		C 461	(A,98,79)	CKSRYB105K16	F
C 345	(B,131,54)	CKSRYB474K16		C 462	(A,95,87)	CKSRYB105K16	
C 346	(B,130,37)	CKSRYB474K16		C 501	(A,151,26)	CKSSYB105K35	
C 348	(A,112,35)	CEVW100M10		C 503	(A,145,36)	CCSSCH220J50	
C 349	(B,123,48)	CKSYB475K16		C 504	(A,147,51)	CKSRYB474K16	
C 350	(A,109,35)	CKSRYB102K50		C 505	(A,142,51)	CKSYB475K25	A
C 351	(B,122,46)	CKSRYB102K50		C 506	(A,146,28)	CKSRYB104K50	
C 352	(B,118,29)	CKSRYB102K50		C 507	(A,146,41)	CKSSYB102K50	
C 353	(A,153,73)	CEVW101M16		C 508	(A,148,36)	CCSSCH330J50	
C 354	(A,164,84)	CKSRYB103K50		C 509	(A,147,43)	CKSSYB222K50	
C 355	(A,157,73)	CKSRYB103K50		C 510	(A,136,27)	CKSYB106K10	B
C 356	(A,161,67)	CKSRYB103K50		C 511	(A,148,60)	CKSYB106K10	
C 357	(B,156,58)	CKSRYB103K50		C 512	(A,148,62)	CKSYB106K10	
C 361	(A,159,67)	CKSRYB103K50		C 513	(A,146,24)	CKSSYB102K50	
C 363	(B,141,104)	CKSRYB102K50		C 514	(A,142,58)	CKSSYB102K50	
C 401	(B,102,88)	CKSSYB473K10		C 515	(A,163,35) 2 200 uF/16 V	CCH1439(P35)	C
C 402	(A,98,87)	CCSRCH330J50		C 516	(A,155,29)	CKSSYB102K50	
C 403	(A,108,86)	CCSRCH330J50		C 517	(A,156,43)	CKSRYB102K50	
C 404	(A,109,90)	CKSQYB225K16		C 518	(A,143,43)	CCSSCH221J50	
C 405	(A,109,92)	CKSQYB225K16		C 606	(B,62,70)	CKSSYB562K25	
C 406	(A,109,94)	CKSQYB225K16		C 607	(B,61,70)	CKSSYB562K25	D
C 407	(A,109,95)	CKSQYB225K16		C 609	(B,67,73)	CKSSYB105K6R3	
C 408	(B,125,98)	CKSRYB104K50		C 610	(B,79,72)	CKSSYB104K16	
C 409	(B,126,74)	CKSRYB103K50		C 614	(B,82,69)	CKSSYB102K16	
C 410	(A,100,124)	CKSRYB103K50		C 615	(B,80,73)	CKSSYB104K16	
C 411	(B,82,139)	CKSQYB103K50		C 617	(A,63,72)	CKSSYB105K6R3	E
C 413	(A,128,123)	CKSQYB102K50		C 619	(B,67,82)	CKSRYB105K16	
C 414	(B,104,139)	CKSQYB102K50		C 620	(B,81,83)	CKSRYB105K16	
C 415	(A,126,123)	CKSQYB102K50		C 621	(B,82,88)	CKSRYB105K16	
C 416	(B,102,139)	CKSQYB102K50		C 622	(B,83,83)	CKSRYB105K16	
C 417	(A,124,123)	CKSQYB102K50		C 623	(B,76,64)	CKSQYB225K10	F
C 419	(A,122,123)	CKSQYB102K50		C 624	(B,77,88)	CKSRYB105K16	
C 420	(B,78,139)	CKSQYB183K50		C 625	(B,76,88)	CKSRYB105K16	
C 421	(B,85,139)	CKSQYB183K50		C 626	(B,75,71)	CKSSYB104K16	
C 422	(B,80,139)	CKSQYB183K50		C 627	(B,74,88)	CKSRYB105K16	

	1		2	3		4
	<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
A	C 628	(B,72,88)	CKSRYB105K16	C 701	(A,92,58)	CKSSYB102K16
	C 629	(B,70,64)	CKSQYB225K10	C 801	(A,38,102)	CKSSYB102K50
	C 630	(B,82,83)	CKSRYB105K16	C 802	(A,36,102)	CKSSYB102K50
	C 631	(B,82,86)	CKSRYB105K16	C 803	(A,33,102)	CKSSYB102K50
	C 632	(B,79,83)	CKSRYB105K16	C 804	(A,31,102)	CKSSYB102K50
■	C 633	(B,67,80)	CKSRYB105K16	C 805	(A,38,104)	CKSSYB102K50
	C 634	(B,69,72)	CKSSYB104K16	C 806	(A,36,104)	CKSSYB102K50
	C 635	(B,70,82)	CKSQYB225K10	C 807	(A,33,104)	CKSSYB102K50
	C 636	(B,66,65)	CKSQYB225K10	C 808	(A,31,104)	CKSSYB102K50
	C 637	(A,60,75)	CKSSYB102K16	C 809	(B,35,107)	CKSRYB473K50
B	C 638	(A,60,72)	CKSSYB102K16	C 810	(A,30,113)	CKSRYB224K16
	C 639	(A,77,72)	CKSRYB104K16	C 811	(A,29,113)	CKSRYB224K16
	C 640	(B,75,66)	CKSYF226Z10	C 812	(A,27,113)	CKSRYB224K16
	C 641	(B,76,69)	CKSSYB104K16	C 813	(A,25,113)	CKSSYB224K16
	C 642	(B,70,66)	CKSYF226Z10	C 814	(A,30,116)	CKSQYB224K16
■	C 643	(B,66,69)	CKSSYB104K16	C 815	(A,25,116)	CKSQYB224K16
	C 646	(B,65,72)	CKSSYB105K6R3	C 816	(A,27,116)	CKSQYB224K16
	C 647	(A,65,71)	CKSSYB331K50	C 817	(A,29,116)	CKSQYB224K16
	C 649	(B,62,69)	CKSSYB331K50	C 818	(A,37,117)	CEVW330M10
	C 650	(B,61,69)	CKSSYB331K50	C 819	(B,32,123)	CKSQYB105K16
C	C 651	(B,71,69)	CKSSYB104K16	C 820	(B,36,123)	CKSQYB105K16
	C 652	(A,63,71)	CKSSYB104K16	C 821	(A,37,112)	CEVW100M16
	C 653	(A,57,68)	CKSSYB103K16	C 822	(A,35,126)	CEVW1R0M50
	C 655	(A,55,69)	CKSRYB105K16	C 823	(A,60,136)	CKSRYB104K50
	C 656	(A,56,66)	CKSRYB103K16	C 824	(A,60,133)	CKSRYB104K50
■	C 657	(A,51,66)	CCSSCK2R0C50	C 902	(A,82,97)	CKSRYB334K10
	C 659	(B,53,70)	CKSSYB103K16	C 903	(A,86,97)	CKSRYB334K10
	C 660	(B,44,39)	CKSRYB102K50	C 904	(A,82,101)	CCSRCH471J50
	C 661	(A,86,65)	CKSSYB103K16	C 906	(A,86,101)	CCSRCH471J50
	C 662	(A,50,61)	CKSSYB102K16	C 907	(B,86,100)	CKSRYB473K50
D	C 663	(A,50,63)	CCSSCH8R0D50	C 908	(A,115,56)	CKSRYB103K50
	C 665	(B,59,65)	CKSSYB103K16	C 910	(A,35,31)	CEAT102M16(P35)
	C 666	(B,48,64)	CKSQYB106K6R3	C 911	(B,78,27)	CCSRCH101J50
	C 669	(A,88,65)	CKSRYB103K16	C 912	(A,79,21)	CEVW220M10
	C 671	(A,57,63)	CKSSYB105K6R3	C 913	(B,72,28)	CKSRYB105K10
■	C 672	(A,87,62)	CKSSYB105K6R3	C 914	(A,100,50)	CKSRYB102K50
	C 673	(A,87,60)	CKSSYB224K6R3	C 915	(B,71,28)	CKSRYB105K10
	C 675	(B,59,59)	CKSSYB103K16	C 916	(B,80,23)	CKSRYB104K50
	C 676	(A,87,59)	CKSSYB224K6R3	C 917	(B,81,25)	CKSQYB225K10
	C 677	(B,59,58)	CKSSYB103K16	C 918	(B,79,25)	CKSRYB104K50
E	C 678	(A,87,58)	CKSSYB224K6R3	C 919	(B,82,107)	CCSRCH221J50
	C 679	(A,86,56)	CKSSYB104K16	C 920	(B,99,78)	CCSRCH471J50
	C 681	(A,73,33)	CCSSCH220J50	C 921	(B,82,20)	CKSRYB103K50
	C 682	(B,79,47)	CKSSYB103K16	C 922	(B,80,18)	CKSRYB102K50
	C 683	(A,67,41)	CKSSYB103K16	C 923	(B,96,78)	CCSRCH471J50
■	C 684	(B,70,42)	CKSQYB475K10	C 924	(B,93,85)	CKSRYB473K50
	C 685	(A,66,41)	CKSSYB103K16	C 925	(A,104,59)	CKSRYB104K50
	C 686	(A,65,42)	CKSSYB103K16	C 927	(B,71,14)	CCSRCH101J50
	C 688	(A,65,33)	CCSSCH220J50	C 928	(B,73,14)	CCSRCH101J50
	C 689	(A,47,38)	CKSRYB102K50	C 930	(A,113,47)	CKSRYB105K16
F	C 690	(A,45,38)	CKSRYB105K10	C 931	(A,116,49)	CKSRYB105K16
	C 691	(A,85,71)	CKSRYB102K50			
	C 692	(A,91,47)	CKSRYB102K50			
	C 693	(A,87,71)	CKSRYB105K10			
	C 694	(A,90,47)	CKSRYB105K10			
■	C 695	(A,54,81)	CKSRYB102K50			
	C 696	(A,55,81)	CKSRYB105K10			
	C 697	(B,71,48)	CKSSYB103K16			
	C 698	(B,73,44)	CKSRYB224K16			
	C 699	(B,56,32)	CKSSYB102K16			

B

Unit Number : CWN3480

Unit Name : Connector Unit

MISCELLANEOUS

D 2001 (A,17,12) Diode

1SS352

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
CN2002	(A,13,5)	Connector	CKS3876			S 1819	(A,296,72)	Rotary Switch	CSD1156		
JA2001	(A,18,31)	Connector	CKM1480			CN1800	(B,272,34)	Connector	CKS5033		
						CN1802	(B,215,37)	Connector	CKS6045		
						CN1804	(B,184,91)	Connector	CKS6069		A
CAPACITORS						V 1800	OLED Module		MXK8283		
C 2001	(A,22,12)		CKSQYB102K50			RESISTORS					
C 2002	(A,22,10)		CKSQYB102K50			R 1803	(B,191,42)		RS1/10SR473J		
C 2003	(A,9,13)		CKSQYB102K50			R 1807	(B,165,47)		RS1/10SR471J		
D						R 1808	(B,174,42)		RS1/10SR471J		
Unit Number :						R 1809	(B,172,48)		RS1/10SR101J		
Unit Name : Keyboard Unit						R 1813	(B,192,45)		RS1/10SR102J		
MISCELLANEOUS						R 1814	(B,51,61)		RS1/10SR561J		
IC 1802	(B,181,60)	IC	PE5670A8			R 1815	(B,48,61)		RS1/10SR471J		B
Q 1801	(B,234,76)	Transistor	2SB1132			R 1816	(B,144,36)		RS1/10SR471J		
Q 1802	(B,237,65)	Transistor	2SC4154-11			R 1817	(B,144,33)		RS1/10SR561J		
Q 1804	(B,217,75)	Transistor	2SA1602A			R 1818	(B,163,47)		RS1/10SR471J		
Q 1811	(B,157,78)	Transistor	2SA1602A			R 1819	(B,89,37)		RS1/10SR821J		
						R 1820	(B,89,34)		RS1/10SR561J		
Q 1812	(B,135,52)	Transistor	IMX1			R 1821	(B,174,9)		RS1/10SR681J		
Q 1813	(B,112,40)	Transistor	2SA2126			R 1822	(B,174,12)		RS1/10SR561J		
D 1821	(B,192,44)	Diode	1SS352			R 1823	(B,267,101)		RS1/10SR471J		
D 1823	(A,63,63)	LED	SML-311DT(JK)			R 1824	(B,264,101)		RS1/10SR561J		
D 1824	(A,304,79)	LED	SML-311DT(JK)			R 1826	(B,195,55)		RS1/10SR102J		
						R 1827	(B,44,74)		RS1/10SR331J		C
D 1825	(A,146,31)	LED	SML-311DT(JK)			R 1828	(B,44,77)		RS1/10SR331J		
D 1826	(A,174,31)	LED	SML-311DT(JK)			R 1829	(B,252,28)		RS1/10SR471J		
D 1827	(A,59,108)	LED	SML-311DT(JK)			R 1830	(B,256,28)		RS1/10SR561J		
D 1828	(A,91,31)	LED	SML-311DT(JK)			R 1832	(B,195,58)		RS1/10SR101J		
D 1829	(A,174,17)	LED	SML-311DT(JK)			R 1834	(B,164,58)		RS1/10SR473J		
						R 1836	(B,207,18)		RS1/10SR471J		
D 1830	(A,146,17)	LED	SML-311DT(JK)			R 1837	(B,207,20)		RS1/10SR561J		
D 1831	(A,229,31)	LED	SML-311DT(JK)			R 1838	(B,195,59)		RS1/10SR101J		
D 1833	(A,32,79)	LED	SML-311DT(JK)			R 1841	(B,164,60)		RS1/10SR473J		
D 1834	(A,32,63)	LED	SML-311DT(JK)			R 1842	(B,195,61)		RS1/10SR101J		
D 1835	(A,91,17)	LED	SML-311DT(JK)			R 1844	(B,151,52)		RS1/10SR473J		D
						R 1845	(B,164,61)		RS1/10SR473J		
D 1836	(A,57,31)	LED	SML-311DT(JK)			R 1846	(B,199,67)		RS1/10SR101J		
D 1837	(A,201,31)	LED	SML-311DT(JK)			R 1848	(B,200,10)		RS1/10SR681J		
D 1839	(A,119,17)	LED	SML-311DT(JK)			R 1849	(B,201,12)		RS1/10SR561J		
D 1840	(A,229,17)	LED	SML-311DT(JK)			R 1850	(B,157,52)		RS1/10SR473J		
D 1841	(A,201,17)	LED	SML-311DT(JK)			R 1851	(B,164,62)		RS1/10SR473J		
						R 1852	(B,198,67)		RS1/10SR101J		
D 1842	(A,263,31)	LED	SML-311DT(JK)			R 1853	(B,169,62)		RS1/10SR101J		
D 1843	(A,288,79)	LED	SML-311DT(JK)			R 1854	(B,153,52)		RS1/10SR473J		
D 1845	(A,257,63)	LED	SML-311DT(JK)			R 1855	(B,196,67)		RS1/10SR101J		
D 1846	(A,63,81)	LED	SML-311DT(JK)			R 1857	(B,155,52)		RS1/10SR473J		E
D 1847	(A,304,63)	LED	SML-311DT(JK)			R 1858	(B,229,9)		RS1/10SR561J		
						R 1859	(B,229,12)		RS1/10SR561J		
D 1848	(A,257,81)	LED	SML-311DT(JK)			R 1860	(B,195,67)		RS1/10SR101J		
D 1863	(B,224,69)	Diode	1SS352			R 1861	(B,157,67)		RS1/10SR102J		
D 1864	(B,218,69)	Diode	1SS352			R 1862	(B,213,73)		RS1/10SR473J		
D 1865	(B,211,69)	Diode	1SS352			R 1864	(B,202,73)		RS1/10SR101J		
D 1870	(A,85,108)	LED	SML-311DT(JK)			R 1865	(B,167,64)		RS1/10SR101J		
						R 1866	(B,212,73)		RS1/10SR473J		
D 1871	(A,235,108)	LED	SML-311DT(JK)			R 1867	(B,203,73)		RS1/10SR101J		
D 1892	(B,125,55)	Diode	1SS352			R 1868	(B,167,66)		RS1/10SR102J		F
D 1893	(B,127,53)	Diode	HZU7R5(B3)			R 1869	(B,259,58)		RS1/10SR331J		
D 1897	(A,16,80)	LED	SML-311DT(JK)			R 1870	(B,263,58)		RS1/10SR331J		
D 1898	(A,16,63)	LED	SML-311DT(JK)								
D 1899	(A,288,64)	LED	SML-311DT(JK)								
D 1938	(A,119,31)	LED	SML-311DT(JK)								
L 1801	(B,209,46)	Inductor	CTF1744								
L 1804	(B,169,70)	Inductor	CTF1472								
X 1800	(B,181,44)	Ceramic Resonator 4.000 MHz	CSS1652								
S 1816	(A,24,72)	Rotary Switch	CSD1155								

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 1871 (B,210,73) RS1/10SR473J
 R 1872 (B,205,73) RS1/10SR101J
 R 1873 (B,209,73) RS1/10SR473J

R 1968 (B,163,77)
 R 1969 (B,160,76)
 R 1970 (B,175,77)

RS1/10SR472J
 RS1/10SR473J
 RS1/10SR101J

A

R 1874 (B,206,73) RS1/10SR101J
 R 1876 (B,191,69) RS1/10SR102J
 R 1878 (B,240,66) RS1/10SR103J
 R 1879 (B,196,79) RS1/10SR473J
 R 1880 (B,261,79) RS1/10SR561J

R 1971 (B,134,48)
 R 1972 (B,128,55)
 R 1973 (B,130,51)
 R 1974 (B,127,51)
 R 1975 (B,122,39)

RS1/8SQ271J
 RS1/10SR330J
 RS1/10SR471J
 RS1/10SR101J
 RS1/10SR101J

R 1881 (B,261,82) RS1/10SR471J
 R 1882 (B,189,73) RS1/10SR102J
 R 1883 (B,188,73) RS1/10SR102J
 R 1884 (B,186,73) RS1/10SR102J
 R 1885 (B,185,73) RS1/10SR102J

R 1976 (B,119,40)
 R 1977 (B,131,54)
 R 1978 (B,259,56)
 R 1979 (B,263,56)
 R 1980 (B,51,56)

RS1/10SR223J
 RS1/10SR472J
 RS1/10SR331J
 RS1/10SR331J
 RS1/10SR331J

B

R 1886 (B,181,75) RS1/10SR102J
 R 1887 (B,238,70) RS1/8SQ391J
 R 1888 (B,201,78) RS1/10SR473J
 R 1889 (B,235,70) RS1/10SR473J
 R 1890 (B,191,78) RS1/10SR473J

R 1981 (B,48,56)
 R 1983 (B,123,54)
 R 1984 (B,237,67)
 R 1985 (B,221,23)
 R 1986 (B,171,46)

RS1/10SR331J
 RS1/10SR121J
 RS1/8SQ391J
 RS1/10SR471J
 RS1/10SR473J

R 1891 (B,242,65) RS1/10SR473J
 R 1893 (B,190,78) RS1/10SR473J
 R 1894 (B,174,74) RS1/10SR101J
 R 1895 (B,185,78) RS1/10SR473J
 R 1897 (B,183,78) RS1/10SR473J

R 1987 (B,265,96)
 R 1988 (B,135,60)
 R 1989 (B,261,103)

RS1/10SR0R0J
 RS1/8SQ0R0J
 RS1/10SR331J

CAPACITORS

C

R 1898 (B,180,78) RS1/10SR473J
 R 1904 (B,224,74) RS1/10SR822J
 R 1905 (B,221,77) RS1/10SR392J
 R 1906 (B,217,79) RS1/10SR222J
 R 1907 (B,226,60) RS1/10SR103J

C 1802 (B,186,43)
 C 1804 (B,191,48)
 C 1805 (B,185,45)
 C 1806 (B,174,45)
 C 1807 (B,191,51)

CKSYB475K10
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50

■

R 1910 (B,217,72) RS1/10SR103J
 R 1917 (B,195,54) RS1/10SR473J
 R 1918 (B,168,72) RS1/10SR151J
 R 1919 (B,170,69) RS1/10SR470J
 R 1926 (B,142,55) RS1/10SR473J

C 1808 (B,171,45)
 C 1810 (B,237,60) 10 uF
 C 1813 (B,171,56)
 C 1818 (B,198,78)
 C 1819 (B,244,65)

CKSRYB103K50
 CCG1236
 CKSRYB103K50
 CKSRYB102K50
 CKSRYB223K50

D

R 1933 (B,150,58) RS1/10SR101J
 R 1934 (B,151,62) RS1/10SR101J
 R 1937 (B,153,66) RS1/10SR101J
 R 1940 (B,240,63) RS1/10SR0R0J
 R 1941 (B,264,103) RS1/10SR821J

C 1821 (B,193,78)
 C 1823 (B,188,78)
 C 1824 (B,187,78)
 C 1825 (B,182,78)
 C 1826 (B,178,78)

CKSRYB102K50
 CKSRYB102K50
 CKSRYB102K50
 CKSRYB102K50
 CKSRYB102K50

■

R 1942 (B,267,103) RS1/10SR102J
 R 1943 (B,181,48) RS1/10SR0R0J
 R 1944 (B,252,60) RS1/10SR0R0J
 R 1945 (B,194,23) RS1/10SR0R0J
 R 1946 (B,182,20) RS1/10SR0R0J

C 1827 (B,236,62)
 C 1828 (B,200,37)
 C 1829 (B,203,48)
 C 1831 (B,225,77)
 C 1832 (B,223,77)

CKSQYB104K50
 CKSQYB104K50
 CKSQYB104K50
 CKSRYB105K10
 CKSRYB105K10

E

R 1947 (B,191,32) RS1/10SR0R0J
 R 1948 (B,109,32) RS1/10SR0R0J
 R 1949 (B,49,32) RS1/10SR0R0J
 R 1950 (B,87,32) RS1/10SR0R0J
 R 1951 (B,51,48) RS1/10SR0R0J

C 1839 (B,183,70)
 C 1845 (B,226,57)
 C 1846 (B,157,73)
 C 1847 (B,157,71)
 C 1848 (B,174,73)

CKSRYB103K50
 CKSRYB102K50
 CCSRCH101J50
 CCSRCH221J50
 CCSRCH221J50

■

R 1952 (B,43,81) RS1/10SR0R0J
 R 1953 (B,113,20) RS1/10SR0R0J
 R 1954 (B,66,38) RS1/10SR0R0J
 R 1955 (B,136,32) RS1/10SR0R0J
 R 1956 (B,141,22) RS1/10SR0R0J

C 1849 (B,157,65)
 C 1850 (B,157,68)
 C 1851 (B,157,70)
 C 1852 (B,157,81)
 C 1853 (B,168,78)

CCSRCH221J50
 CKSRYB103K50
 CCSRCH221J50
 CKSRYB103K50
 CKSRYB104K50

F

R 1957 (B,234,25) RS1/10SR0R0J
 R 1958 (B,221,21) RS1/10SR0R0J
 R 1959 (B,255,90) RS1/10SR0R0J
 R 1960 (B,279,74) RS1/10SR0R0J
 R 1962 (B,252,35) RS1/10SR0R0J

C 1854 (B,177,77)
 C 1855 (B,133,54)
 C 1856 (B,124,50)
 C 1857 (B,125,44)
 C 1858 (B,165,89)

CCSRCH681J50
 CKSRYB103K50
 CKSRYB103K50
 CEVW101M16
 CKSRYB104K50

R 1963 (B,159,45)
 R 1967 (B,170,67)

RS1/10SR0R0J
 RS1/10SR101J

C 1860 (B,140,65) 10 uF

CCG1236

1

2

3

4

5		6	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 1861	(B,206,69)	CKSRYB102K50	
C 1862	(B,205,69)	CKSRYB102K50	
C 1863	(B,203,69)	CKSRYB102K50	
C 1864	(B,202,69)	CKSRYB102K50	
C 1865	(B,195,72)	CKSRYB102K50	
C 1866	(B,196,72)	CKSRYB102K50	
C 1867	(B,198,72)	CKSRYB102K50	
C 1868	(B,199,72)	CKSRYB102K50	
C 1869	(B,209,66)	CKSRYB102K50	
C 1870	(B,215,66)	CKSRYB102K50	
C 1871	(B,222,66)	CKSRYB102K50	

E

Unit Number : CWN3320

Unit Name : XM Sub Unit

MISCELLANEOUS

IC 1101	(B,31,60) IC	NJM2885DL1-25
D 1101	(B,16,64) Diode	1SR154-400
L 1201	(B,14,45) Inductor	CTF1396
L 1202	(B,17,44) Inductor	CTF1558
L 1203	(B,30,42) Inductor	CTF1396
L 1204	(B,21,64) Inductor	CTF1467
CN1201	(A,19,37) Connector	CKS5709
CN1202	(A,18,8) Connector	CKS3888

RESISTORS

R 1201	(A,7,36)	RS1/10SR103J
R 1202	(A,7,34)	RS1/10SR103J

CAPACITORS

C 1002	(A,48,13)	CEVW101M16
C 1003	(B,16,9)	CKSRYB103K50
C 1101	(B,26,64)	CKSRYB334K10
C 1102	(B,25,64)	CKSRYB105K6R3
C 1103	(B,39,61)	CKSQYB475K6R3
C 1104	(B,41,61)	CKSRYB102K16
C 1201	(B,13,42) 10 uF	CCG1203
C 1202	(B,16,41) 10 uF	CCG1203
C 1203	(A,7,37)	CKSRYB102K50
C 1204	(B,29,48) 10 uF	CCG1203

C

Unit Number : CWX3897

Unit Name : CD Core Unit(S10.5 09T)

MISCELLANEOUS

IC 201	(A,35,61) IC	PE5733A
IC 203	(B,21,35) IC	NJM2886DL3-33
IC 204	(B,36,65) SDRAM(16M)	MSM56V16160J-8T3
IC 301	(A,25,14) IC	BA5839FP
Q 101	(B,58,87) Transistor	2SA1577
Q 201	(B,23,65) Transistor	UN2111
D 101	(A,51,86) Diode	1SS355
TH201	(A,53,59) Thermistor	CCX1063
X 201	(A,22,52) Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,54,53) Switch(HOME)	CSN1067

7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
S 903	(B,20,74) Switch(DSCSNS)	CSN1067	
S 904	(B,40,82) Switch(12EJ)	CSN1068	
S 905	(B,26,84) Switch(8EJ)	CSN1068	
CN101	(A,55,72) Connector	CKS4182	
CN701	(A,14,52) Connector	CKS5005	

RESISTORS

R 101	(B,61,89)	RS1/10SR2R4J
R 102	(B,60,86)	RS1/10SR2R4J
R 103	(B,62,86)	RS1/10SR2R7J
R 104	(B,53,84)	RS1/16SS222J
R 107	(B,45,76)	RS1/16SS105J
R 108	(B,46,74)	RS1/16SS0R0J
R 202	(B,31,81)	RS1/16SS473J
R 203	(A,51,59)	RS1/16S473J
R 204	(A,24,76)	RS1/16SS221J
R 206	(B,27,66)	RS1/16SS104J
R 210	(A,16,35)	RS1/16SS102J
R 214	(B,49,65)	RS1/16SS472J
R 216	(B,48,64)	RS1/16SS472J
R 218	(A,25,71)	RS1/16SS0R0J
R 220	(B,22,68)	RS1/16SS0R0J
R 221	(A,51,63)	RS1/16SS103J
R 222	(A,51,61)	RS1/16SS103J
R 225	(A,50,65)	RS1/16SS103J
R 226	(A,50,66)	RS1/16SS393J
R 227	(B,47,67)	RS1/16SS562J
R 228	(B,44,67)	RS1/16SS122J
R 229	(B,46,69)	RS1/16SS472J
R 232	(B,45,67)	RS1/16SS122J
R 233	(B,26,70)	RS1/16SS103J
R 234	(B,32,83)	RS1/16SS473J
R 235	(A,25,80)	RS1/16SS473J
R 238	(B,14,31)	RS1/16SS222J
R 239	(B,20,64)	RS1/16SS473J
R 240	(B,10,39)	RS1/16SS473J
R 241	(B,9,39)	RS1/16SS103J
R 250	(A,27,80)	RS1/16SS104J
R 252	(A,27,78)	RS1/16SS104J
R 253	(A,27,76)	RS1/16SS104J
R 261	(A,27,79)	RS1/16SS104J
R 270	(A,34,45)	RS1/16SS121J
R 307	(A,16,16)	RS1/16SS183J
R 308	(A,14,16)	RS1/16SS183J
R 309	(A,16,14)	RS1/16SS183J
R 310	(A,14,12)	RS1/16SS183J
R 601	(B,39,41)	RS1/16SS101J
R 602	(B,36,34)	RS1/16SS101J
R 603	(B,39,39)	RS1/16SS223J
R 604	(B,33,34)	RS1/16SS223J
R 606	(B,29,37)	RS1/16S0R0J
R 701	(B,18,64)	RS1/16SS221J
R 702	(A,20,70)	RS1/16SS221J
R 704	(B,15,68)	RS1/16SS221J
R 705	(B,19,66)	RS1/16SS221J
R 706	(A,18,67)	RS1/16SS221J
R 710	(B,23,68)	RS1/16SS0R0J
R 712	(B,12,36)	RS1/16SS0R0J
R 716	(B,11,58)	RS1/16S0R0J

Circuit Symbol and No.**Part No.****CAPACITORS**

A	C 106	(B,57,84)	CKSQYB475K6R3
	C 202	(A,28,73)	CKSSYB104K10
	C 203	(A,52,59)	CKSSYB103K16
	C 204	(A,24,80)	CKSSYB103K16
	C 205	(B,22,58)	CKSQYB475K6R3
	C 206	(A,22,56)	CKSSYB104K10
	C 207	(A,24,52)	CKSRYB104K16
	C 209	(B,34,49)	CEVW220M6R3
	C 210	(B,29,51)	CKSSYB104K10
	C 211	(A,28,50)	CKSSYB104K10
B	C 212	(A,27,45)	CKSRYB104K16
	C 213	(A,45,53)	CKSSYB104K10
	C 214	(A,29,48)	CKSSYB104K10
	C 216	(A,51,67)	CKSSYB332K50
	C 217	(A,48,67)	CKSSYB104K10
	C 218	(A,50,67)	CKSSYB473K10
	C 219	(A,47,69)	CKSSYB104K10
	C 220	(A,48,69)	CKSSYB182K50
	C 221	(A,46,69)	CKSSYB104K10
	C 222	(B,45,69)	CCSSCH560J50
C	C 223	(B,47,69)	CCSSCH4R0C50
	C 224	(A,44,71)	CKSSYB104K10
	C 226	(A,41,74)	CCSSCH680J50
	C 227	(A,41,76)	CCSSCH470J50
	C 228	(A,40,77)	CKSSYB103K16
	C 229	(B,50,75)	CKSSYB104K10
	C 232	(B,17,40)	CKSRYB105K10
	C 236	(A,44,77)	CKSSYB104K10
	C 239	(B,46,67)	CCSSCH220J50
	C 240	(A,37,77)	CKSSYB104K10
D	C 250	(A,52,63)	CKSSYB102K50
	C 251	(A,52,61)	CKSSYB102K50
	C 270	(B,33,53)	CKSSYB104K10
	C 271	(B,29,59)	CKSSYB104K10
	C 272	(B,29,63)	CKSSYB104K10
	C 273	(B,33,77)	CKSSYB104K10
	C 274	(B,44,64)	CKSSYB104K10
	C 275	(B,43,60)	CKSSYB104K10
	C 303	(A,15,16)	CKSSYB472K25
	C 304	(A,14,13)	CKSSYB223K16
E	C 305	(B,35,22)	CEVQW151M10
	C 307	(B,31,13)	CKSRYB104K16
	C 308	(B,11,34)	CKSRYB103K50
	C 601	(B,39,40)	CKSSYB102K50
	C 602	(B,34,34)	CKSSYB102K50
	C 603	(B,34,44)	CEVW4R7M25
	C 604	(B,34,38)	CEVW4R7M25
	C 703	(B,10,45)	CCSSCH101J50
	C 704	(B,10,55)	CKSSYB102K50

MISCELLANEOUS

M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026