


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING(DEH-P650/XN/UC)

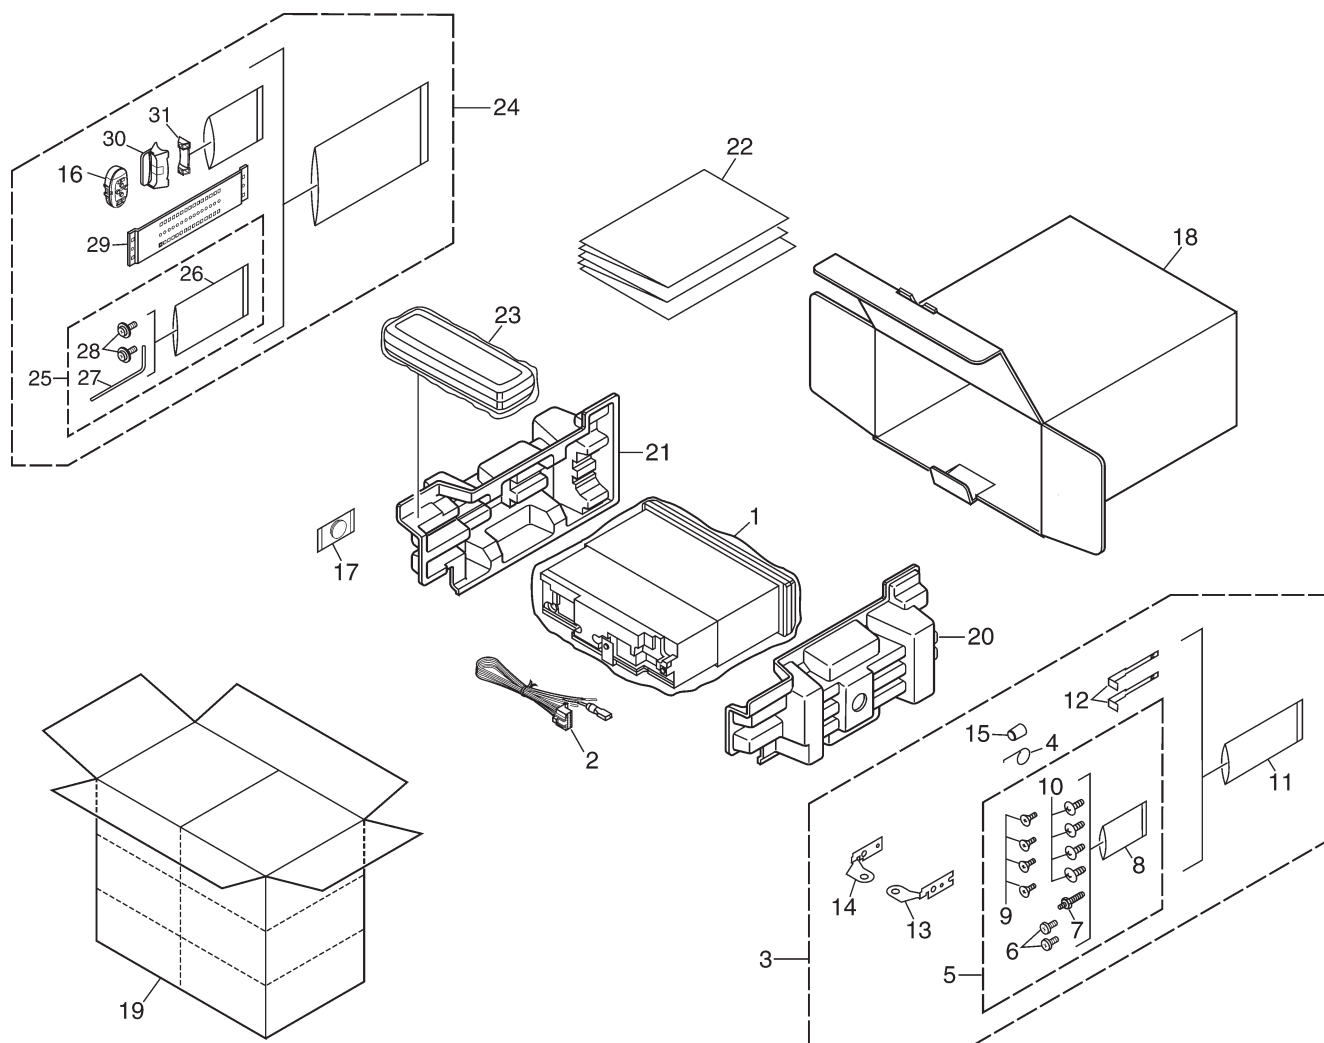


NOTE:

- Parts marked by “*” are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

● PACKING(DEH-P650/XN/UC) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	1 Polyethylene Bag	CEG1173	21	Protector	CHP2664
	2 Cord Assy	CDE7154	22-1	Owner's Manual (English, Spanish)	CRD3708
	3 Accessory Assy	CEA3376	22-2	Installation Manual (English, Spanish)	CRD3709
	4 Spring	CBH1650	* 22-3	Warranty Card	CRY1070
	5 Screw Assy	CEA3445			
	6 Fixing Screw	BPZ20P060FZK	* 22-4	Caution Card	CRP1207
	7 Screw	CBA1002	23	Case Assy	CXB3520
*	8 Polyethylene Bag	CEG-127	24	Remote Control Assy	CXB9202
	9 Screw	CRZ50P090FTC	25	Screw Assy	CZE3169
	10 Screw	TRZ50P080FTC	* 26	Polyethylene Bag	CEG-127
*	11 Polyethylene Bag	CEG-158	* 27	Hexagonal Wrench	CZE3176
	12 Handle	CNC5395	* 28	Screw	RMZ30H060FBK
	13 Holder	CND1249	29	Belt	CZN7661
	14 Holder	CND1250	30	Holder Assy	CZX3172
	15 Bush	CNV3930	31	Holder Assy	CZX3173
	16 Remote Control Assy	CZX3257			
*	17 Battery	CEX1030			
	18 Carton	CHG4947			
	19 Contain Box	CHL4947			
	20 Protector	CHP2663			

2.2 PACKING(DEH-P6500/XN/UC, P6550/XN/ES)

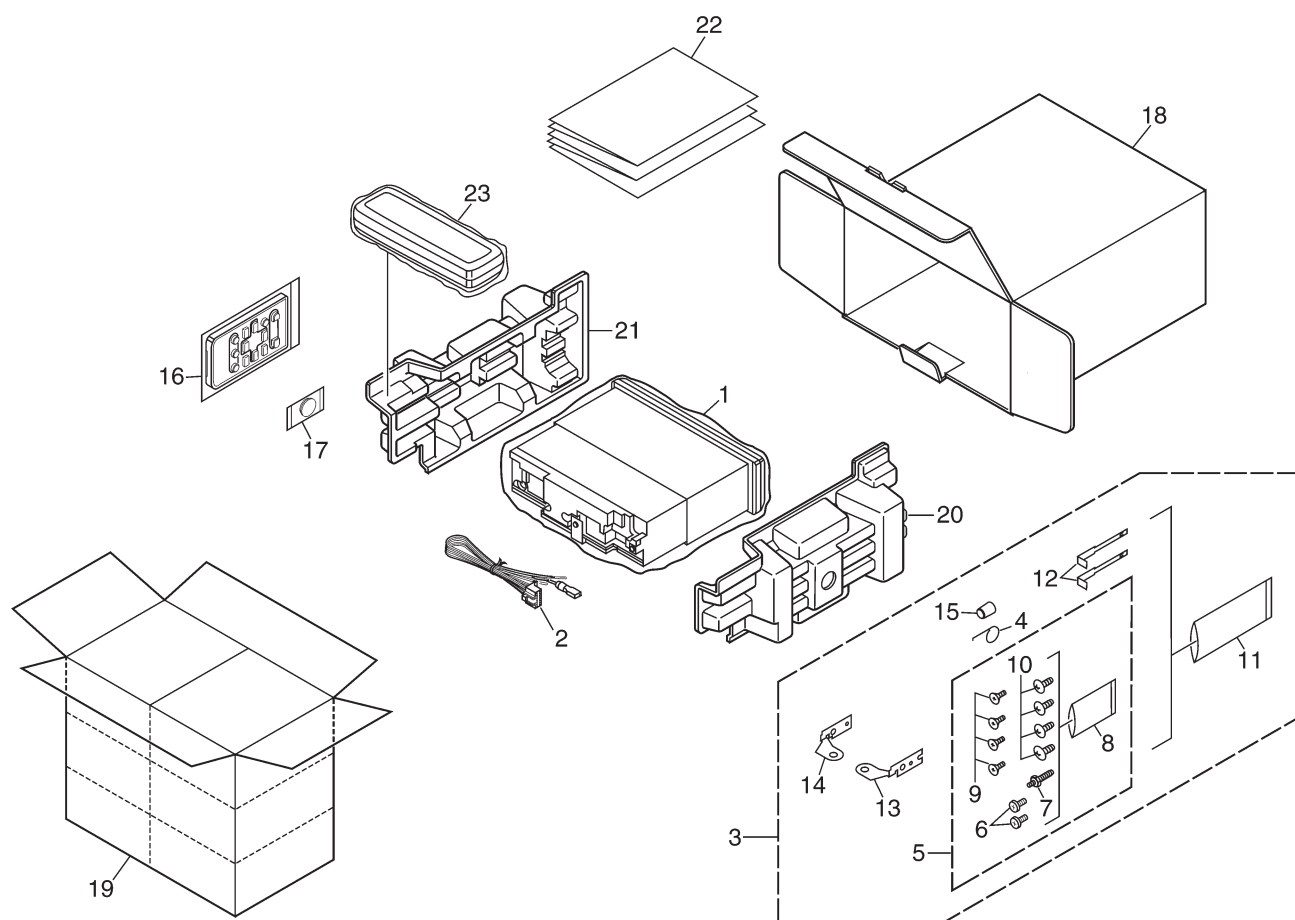

(1) PACKING(DEH-P6500/XN/UC, P6550/XN/ES) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Polyethylene Bag	See Contrast table(2)	21	Protector	CHP2664
2	Cord Assy	CDE7154	22-1	Owner's Manual	See Contrast table(2)
3	Accessory Assy	See Contrast table(2)	22-2	Installation Manual	See Contrast table(2)
4	Spring	CBH1650	* 22-3	Caution Card	See Contrast table(2)
5	Screw Assy	See Contrast table(2)	* 22-4	Card	See Contrast table(2)
6	Fixing Screw	See Contrast table(2)	22-5	Owner's Manual	See Contrast table(2)
7	Screw	CBA1002	* 22-6	Caution Card	CRP1207
* 8	Polyethylene Bag	CEG-127	23	Case Assy	CXB3520
9	Screw	CRZ50P090FTC			
10	Screw	TRZ50P080FTC			
* 11	Polyethylene Bag	CEG-158			
12	Handle	CNC5395			
13	Holder	See Contrast table(2)			
14	Holder	See Contrast table(2)			
15	Bush	CNV3930			
16	Remote Control Unit	CXC1265			
* 17	Battery	CEX1065			
18	Carton	See Contrast table(2)			
19	Contain Box	See Contrast table(2)			
20	Protector	CHP2663			

(2) CONTRAST TABLE

DEH-P6500/XN/UC and DEH-P6550/XN/ES are constructed the same except for the following:


Mark No.	Symbol and Description	Part No.	
		DEH-P6500/XN/UC	DEH-P6550/XN/ES
1	Polyethylene Bag	CEG1173	CEG-162
3	Accessory Assy	CEA3376	CEA3439
5	Screw Assy	CEA3445	CEA3437
6	Fixing Screw	BPZ20P060FZK	Not used
13	Holder	CND1249	Not used
14	Holder	CND1250	Not used
18	Carton	CHG4948	CHG4949
19	Contain Box	CHL4948	CHL4949
22-1	Owner's Manual	CRD3710	CRD3712
22-2	Installation Manual	CRD3711	CRD3714
* 22-3	Caution Card	CRP1294	CRP1216
* 22-4	Card	ARY1048	Not used
22-5	Owner's Manual	Not used	CRD3713

● Owner's Manual, Installation Manual


Model	Part No.	Language
DEH-P6500/XN/UC	CRD3710	English, Spanish
	CRD3711	English, Spanish
DEH-P6550/XN/ES	CRD3712	English, Spanish, Portuguese(B)
	CRD3713	Traditional chinese, Arabic
	CRD3714	English, Spanish, Portuguese(B), Traditional chinese, Arabic

2.3 EXTERIOR(DEH-P650/XN/UC)


A

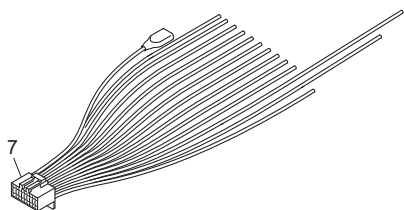


B

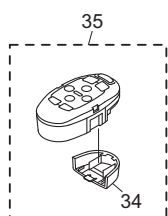


C

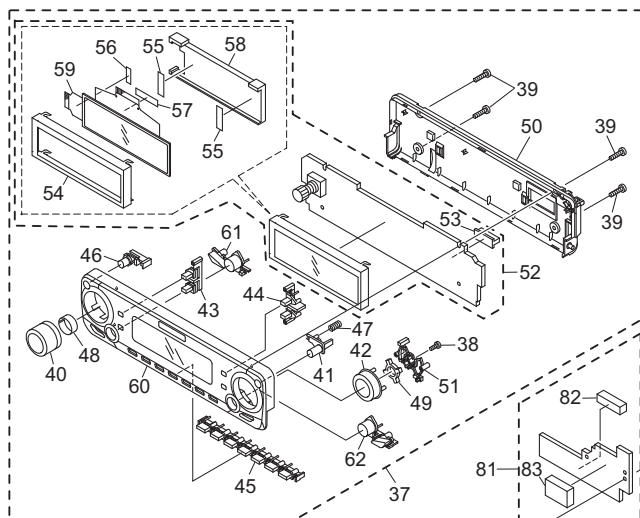


D

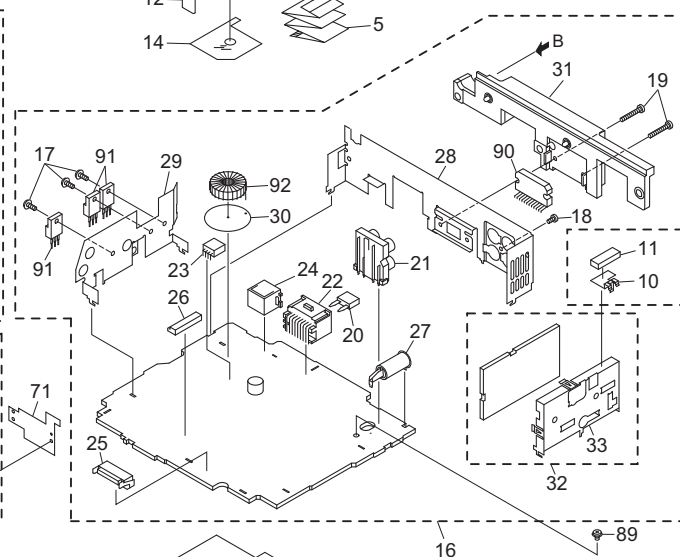

E

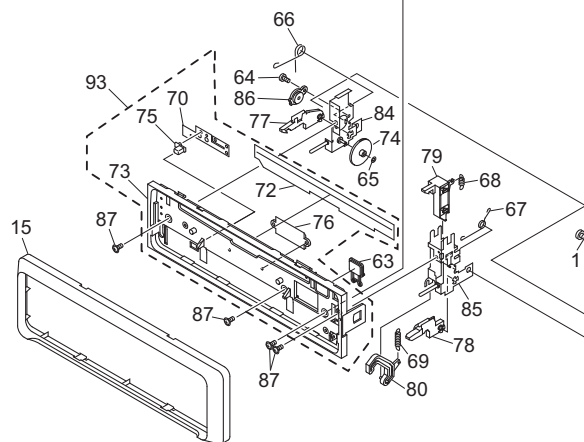

F

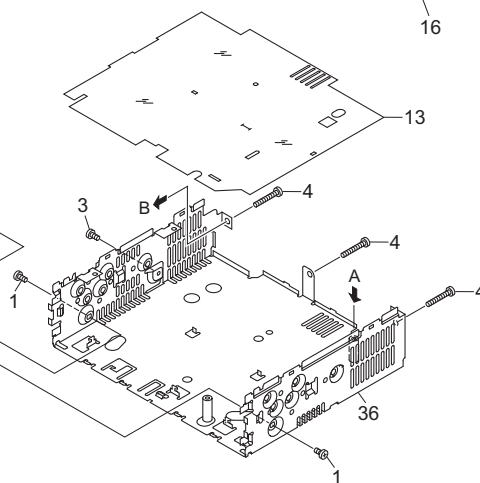

● EXTERIOR(DEH-P650/XN/UC) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FZK	51	Holder	CNV7405	A
2	Screw	BSZ26P060FTC	52	Keyboard Unit	CWM8604	
3	Screw	BSZ30P060FTC	53	Connector(CN1901)	CKS4524	
4	Screw	BSZ30P200FTC	54	Holder	CND1354	
5	Cable	CDE7128	55	Cushion	CNM6633	
6	Cord Assy	CDE7129	56	Spacer	CNM7697	
7	Cord Assy	CDE7154	57	Spacer	CNM7698	
8	Case	CNB2793	58	Holder	CNV6910	
9	Holder	CNC8659	59	OEL Unit	MXS8045	
10	Earth Plate	CNC8915	60	Grille Unit	CXB9495	B
11	Cushion	CNM4870	61	Button Unit(EQ, SRC)	CXB9924	
12	Insulator	CNM7682	62	Button Unit(EQ-EX, BAND)	CXB9925	
13	Insulator	CNM7935	63	Button	CAC7752	
14	Insulator	CNM8174	64	Screw(M2x2)	CBA1176	
15	Panel	CNS6935	65	Washer	CBF1038	
16	Tuner Amp Unit	CWM8598	66	Spring	CBH2650	
17	Screw	ASZ26P060FTC	67	Spring	CBH2651	
18	Screw	BPZ26P080FTC	68	Spring	CBH2652	
19	Screw	BSZ26P160FTC	69	Spring	CBH2653	
20	Fuse(10A)	CEK1208	70	Spring	CBL1512	
21	Pin Jack(CN352)	CKB1051	71	Holder	CND1254	C
22	Plug(CN901)	CKM1376	72	Cover	CNM6854	
23	Plug(CN351)	CKS1238	73	Panel	CNS7245	
24	Connector(CN101)	CKS3408	74	Gear	CNV5997	
25	Plug(CN801)	CKS3537	75	Pin	CNV6486	
26	Connector(CN651)	CKS3835	76	Lighting Conductor	CNV6487	
27	Antenna Jack(CN401)	CKX1056	77	Arm	CNV7400	
28	Holder	CND1239	78	Arm	CNV7401	
29	Holder	CND1352	79	Arm	CNV7402	
30	Insulator	CNM8245	80	Arm	CNV7403	
31	Heat Sink	CNR1668	81	Panel Unit	CWM8758	
32	FM/AM Tuner Unit	CWE1646	82	Socket(CN1950)	CKS3550	D
33	Holder	CND1054	83	Connector(CN1951)	CKS4462	
34	Cover	CZN7655	84	Holder Unit	CXB9501	
35	Remote Control Assy	CZX3257	85	Holder Unit	CXB9502	
36	Chassis Unit	CXB9528	86	Damper Unit	CXB9503	
37	Detach Grille Assy	CXB9682	87	Screw	IMS20P045FZK	
38	Screw	BPZ20P060FTC	88	CD Mechanism Module(S10)	CXK5600	
39	Screw	BPZ20P100FZK	89	Screw	ISS26P055FTC	
40	Knob(VOLUME)	CAA2755	90	IC(IC301)	PAL007A	
41	Button(OPEN)	CAC7728	91	Transistor(Q651,911,921)	2SD2396	
42	Button(SELECT)	CAC7733	92	Choke Coil(L301)	CTH1280	
43	Button(PAUSE)	CAC7737	93	Panel Unit(Service)	CXX1691	E
44	Button(AUDIO/FUNC)	CAC7738				
45	Button	CAC7750				
46	Button(CLOCK)	CAC7751				
47	Spring	CBH2654				
48	Spring	CBL1470				
49	Cushion	CNM8291				
50	Cover	CNS7247				

2.3 EXTERIOR(DEH-P6500/XN/UC, P6550/XN/ES)

A


B

C

D

E

F

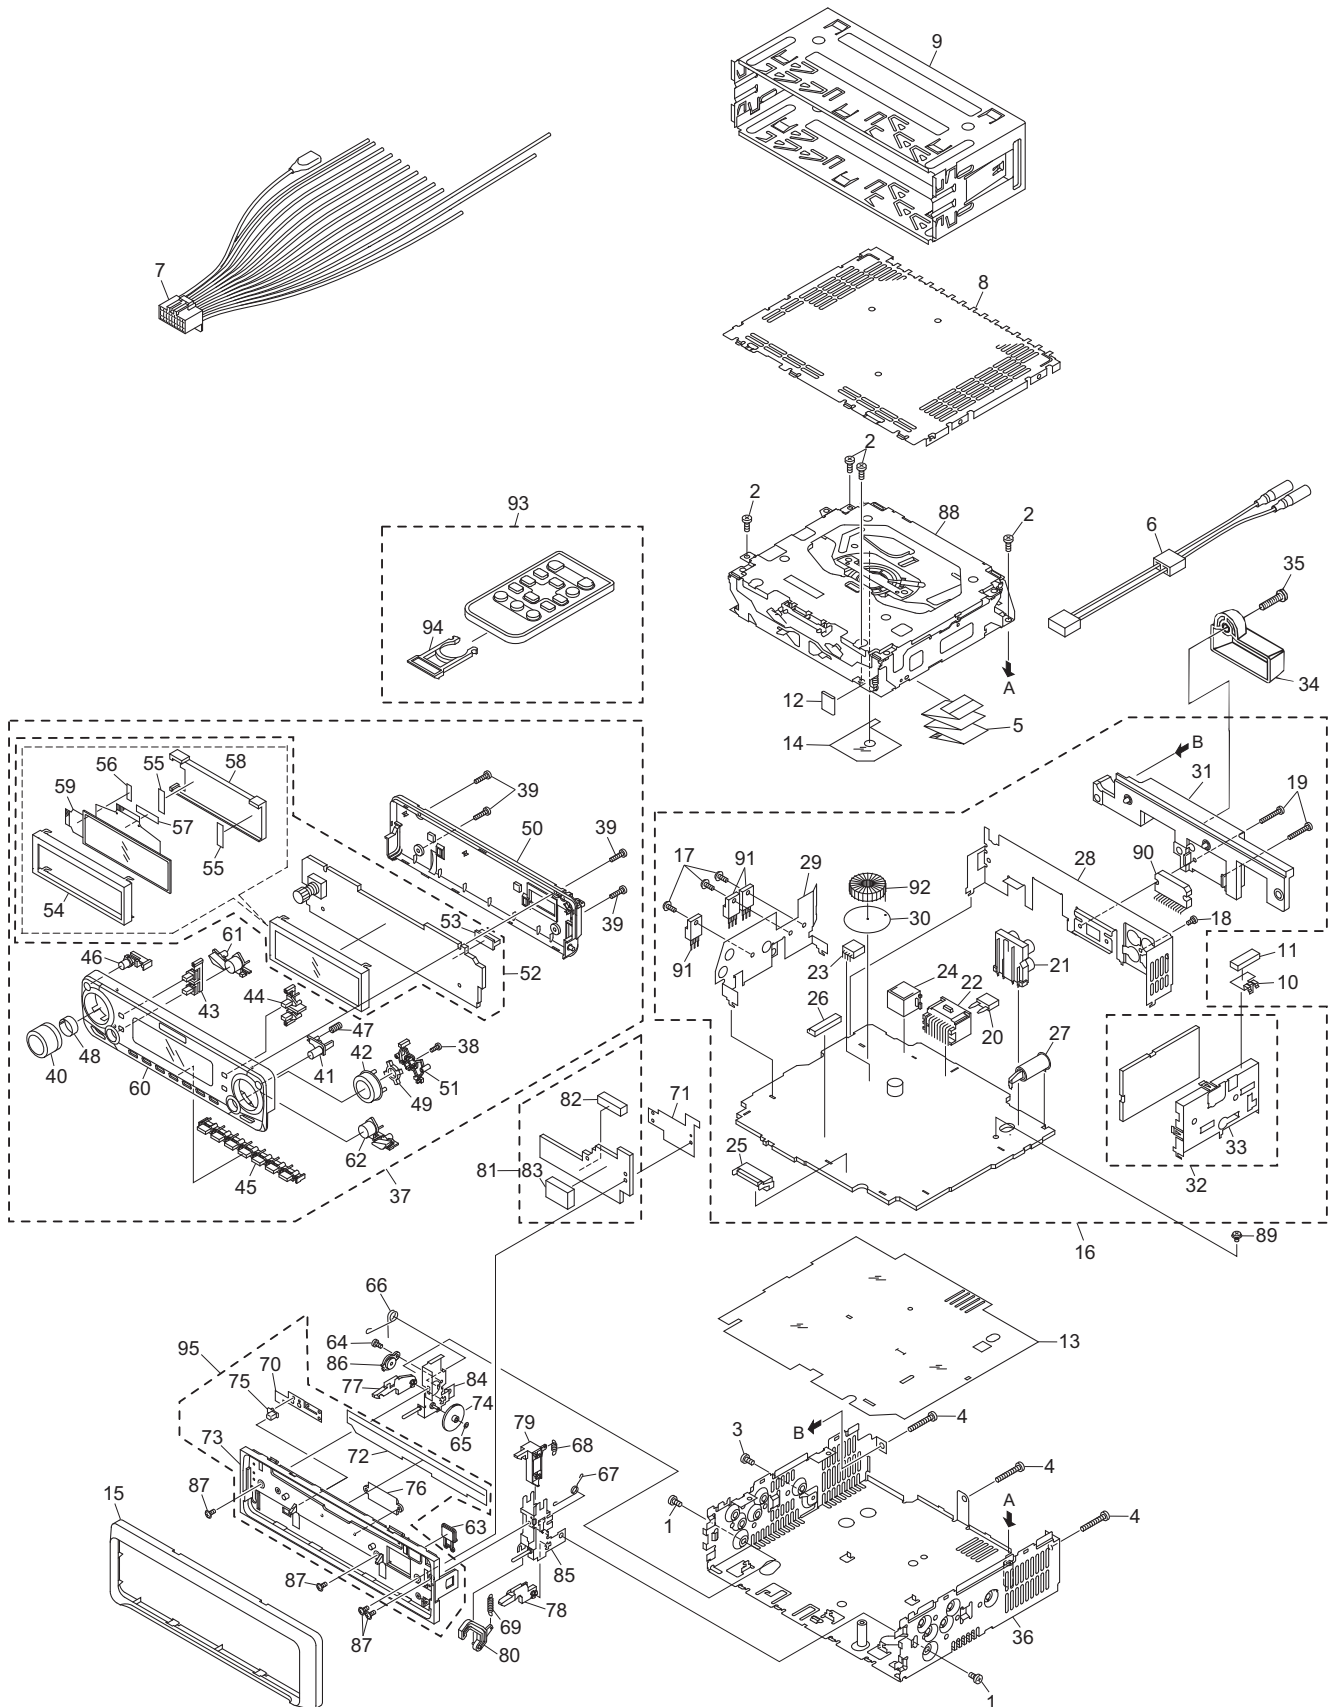

● EXTERIOR(DEH-P650/XN/UC, P6550/XN/ES) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FZK	51	Holder	CNV7405	
2	Screw	BSZ26P060FTC	52	Keyboard Unit	CWM8603	
3	Screw	BSZ30P060FTC	53	Connector(CN1901)	CKS4524	
4	Screw	BSZ30P200FTC	54	Holder	CND1354	
5	Cable	CDE7128	55	Cushion	CNM6633	
6	Cord Assy	CDE7129	56	Spacer	CNM7697	
7	Cord Assy	CDE7154	57	Spacer	CNM7698	
8	Case	CNB2793	58	Holder	CNV6910	
9	Holder	CNC8659	59	OEL Unit	MXS8045	
10	Earth Plate	CNC8915	60	Grille Unit(DEH-P6500)	CXB9496	B
				Grille Unit(DEH-P6550)	CXB9498	
11	Cushion	CNM4870	61	Button Unit(EQ, SRC)	CXB9924	
12	Insulator	CNM7682	62	Button Unit(EQ-EX, BAND)	CXB9925	
13	Insulator	CNM7935	63	Button	CAC7752	
14	Insulator	CNM8174	64	Screw(M2x2)	CBA1176	
15	Panel(DEH-P6500)	CNS6934	65	Washer	CBF1038	
	Panel(DEH-P6550)	CNS6935				
16	Tuner Amp Unit(DEH-P6500)	CWM8599	66	Spring	CBH2650	
	Tuner Amp Unit(DEH-P6550)	CWM8601	67	Spring	CBH2651	
17	Screw	ASZ26P060FTC	68	Spring	CBH2652	
18	Screw	BPZ26P080FTC	69	Spring	CBH2653	
19	Screw	BSZ26P160FTC	70	Spring	CBL1512	
20	Fuse(10A)	CEK1208				C
21	Pin Jack(CN352)	CKB1051	71	Holder	CND1254	
22	Plug(CN901)	CKM1376	72	Cover	CNM6854	
23	Plug(CN351)	CKS1238	73	Panel	CNS7245	
24	Connector(CN101)	CKS3408	74	Gear	CNV5997	
25	Plug(CN801)	CKS3537	75	Pin	CNV6486	
26	Connector(CN651)	CKS3835	76	Lighting Conductor	CNV6487	
27	Antenna Jack(CN401)	CKX1056	77	Arm	CNV7400	
28	Holder	CND1239	78	Arm	CNV7401	
29	Holder	CND1352	79	Arm	CNV7402	
30	Insulator	CNM8245	80	Arm	CNV7403	
31	Heat Sink	CNR1668	81	Panel Unit	CWM8758	D
32	FM/AM Tuner Unit	CWE1646	82	Socket(CN1950)	CKS3550	
33	Holder	CND1054	83	Connector(CN1951)	CKS4462	
34	Holder(DEH-P6500)	CNV7619	84	Holder Unit	CXB9501	
35	Screw(DEH-P6500)	BMZ40P140FTC	85	Holder Unit	CXB9502	
36	Chassis Unit	CXB9528	86	Damper Unit	CXB9503	
37	Detach Grille Assy(DEH-P6500)	CXB9683	87	Screw	IMS20P045FZK	
	Detach Grille Assy(DEH-P6550)	CXB9685	88	CD Mechanism Module(S10)	CXK5600	
38	Screw	BPZ20P060FTC	89	Screw	ISS26P055FTC	
39	Screw	BPZ20P100FZK	90	IC(IC301)	PAL007A	
40	Knob(VOLUME)(DEH-P6500)	CAA2753	91	Transistor(Q651,911,921)	2SD2396	
	Knob(VOLUME)(DEH-P6550)	CAA2755	92	Choke Coil(L301)	CTH1280	
41	Button(OPEN)	CAC7728	93	Remote Control Unit	CXC1265	E
42	Button(SELECT)(DEH-P6500)	CAC7731	94	Cover	CNS7068	
	Button(SELECT)(DEH-P6550)	CAC7733	95	Panel Unit(Service)	CXX1691	
43	Button(PAUSE)	CAC7737				
44	Button(AUDIO/FUNC)	CAC7738				
45	Button	CAC7750				
46	Button(CLOCK)	CAC7751				
47	Spring	CBH2654				
48	Spring	CBL1470				
49	Cushion	CNM8291				
50	Cover	CNS7247				F

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10)	CWX2708	51	Gear	CNV7208	A
2	Connector(CN101)	CKS4182	52	Gear	CNV7209	
3	Connector(CN701)	CKS4188	53	Gear	CNV7210	
4	Screw	BMZ20P035FTC	54	Gear	CNV7211	
5	Screw	BSZ20P040FTC	55	Gear	CNV7212	
6	Screw(M2x4)	CBA1362	56	Rack	CNV7214	
7	Screw(M2x3)	CBA1511	57	Arm	CNV7215	
8	Screw(M2x3)	CBA1527	58	Arm	CNV7216	
9	Washer	CBF1037	59	Guide	CNV7217	B
10	Washer	CBF1038	60	Roller	CNV7218	
11	Washer	CBF1060	61	Gear	CNV7219	
12	Spring	CBH2390	62	Arm	CNV7221	
13	Spring	CBH2606	63	Arm	CNV7220	
14	Spring	CBH2607	64	Arm	CNV7222	
15	Spring	CBH2608	65	Damper	CNV7313	
16	Spring	CBH2609	66	Damper	CNV7314	
17	Spring	CBH2610	67	Arm	CNV7341	
18	Spring	CBH2611	68	Arm	CNV7342	
19	Spring	CBH2612	69	Guide	CNV7360	C
20	Spring	CBH2613	70	Guide	CNV7361	
21	Spring	CBH2614	71	Holder	CNV7437	
22	Spring	CBH2615	72	Arm	CNV7444	
23	Spring	CBH2616	73	Gear	CNV7595	
24	Spring	CBH2617	74	Damper	CNV7618	
25	Spring	CBH2620	75	Motor Unit(M1)	CXB6007	
26	Spring	CBH2621	76	Chassis Unit	CXB8728	
27	Spring	CBH2641	77	Screw Unit	CXB8729	
28	Spring	CBH2642	78	Gear Unit	CXB8731	D
29	Spring	CBH2643	79	Arm Unit	CXB8732	
30	Spring	CBH2659	80	Arm Unit	CXB8735	
31	Spring	CBH2688	81	Arm Unit	CXB8852	
* 32	Spring	CBL1614	82	Motor Unit(M2)	CXB8933	
33	Shaft	CLA3845	83	Bracket	CNC9985	
34	Frame	CNC9962	84	Screw	JFZ20P020FTC	
35	Frame	CNC9963	85	Screw(M2x5)	EBA1028	
36	Bracket	CNC9966	86	Screw	JFZ20P020FTC	
37	Bracket	CNC9967	87	Screw	JGZ17P022FTC	
38	Arm	CNC9968	88	Washer	YE15FTC	E
39	Arm	CNC9973	89	Washer	YE20FTC	
40	Lever	CNC9983	90	Pickup Unit(Service)(P10)	CXX1641	
41	Lever	CNC9984	91	Screw	IMS26P030FMC	
42	Sheet	CNM8134				
43	Collar	CNV6906				
44	Guide	CNV6925				
45	Arm	CNV7198				
46	Rack	CNV7199				
47	Holder	CNV7201				
48	Holder	CNV7202				F
49	Arm	CNV7203				
50	Gear	CNV7207				

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS..... CCS..... CSZS.....

====Circuit Symbol and No.==	====Part Name	Part No.	====Circuit Symbol and No.==	====Part Name	Part No.
A	Unit Number : CWM8598(DEH-P650)		D 803	Diode Network	DA204U
	Unit Number : CWM8599(DEH-P6500)		D 804	Diode	DAN202U
	Unit Name : Tuner Amp Unit		D 805	Diode	DAP202U
MISCELLANEOUS			D 806	Diode	DAN202U
IC 101	IC	HA12187FP	D 807	Diode	DAP202U
IC 131	IC	NJM4558MD	D 808	Diode	HZS11L(A1)
IC 201	IC	PML009A	D 851	Diode	HZS11L(A1)
IC 301	IC	PAL007A	D 852	Diode	RB411D
IC 401	IC	NJM2391DL1-33	D 911	Diode	S5688G
IC 601	IC	PD5807A	D 912	Diode	HZS6L(B2)
IC 602	IC	S-80835ANUP-EDZ	D 921	Diode	HZS9L(B3)
IC 652	IC	TC7SET08FU	D 931	Diode	HZS7L(A1)
IC 653	IC	TC7SET08FU	D 932	Diode	HZS7L(C3)
IC 801	IC	TC7SET08FU	D 937	Diode	MA110
IC 851	IC	NJM2360M	D 951	Diode	DAN202U
Q 101	Transistor	2SA1037K	D 981	Diode	DAN202U
Q 102	Transistor	DTC114EU	D 982	Diode	HZS9L(A2)
Q 301	Transistor	DTC124EU	L 101	Inductor	LAU2R2K
Q 351	Transistor	IMH3A	L 201	Ferri-Inductor	LAU4R7K
Q 352	Transistor	IMH3A	L 301	Choke Coil 600μH	CTH1280
Q 353	Transistor	IMH3A	L 401	Ferri-Inductor	LAU4R7K
Q 651	Transistor	2SD2396	L 403	Inductor	LAU1R0K
Q 652	Transistor	IMD2A	L 404	Inductor	LAU1R0K
Q 803	Transistor	2SD1767	L 406	Inductor	CTF1385
Q 804	Transistor	IMD2A	L 601	Ferri-Inductor	LAU100K
Q 805	Transistor	DTC143EU	L 651	Inductor	CTF1382
Q 807	Transistor	2SA1037K	L 801	Inductor	LAU2R2K
Q 808	Transistor	DTC114EU	L 802	Inductor	CTF1382
Q 851	Transistor	2SD1760F5	L 852	Inductor	CTF1510
Q 852	Transistor	IMD2A	L 951	Inductor	LAU2R2K
Q 911	Transistor	2SD2396	X 601	Radiator	CSS1599
Q 913	Transistor	IMD2A	S 802	Switch(DSENSE)	CSN1039
Q 921	Transistor	2SD2396		FM/AM Tuner Unit	CWE1646
Q 922	Transistor	DTC114EU	BZ 641	Buzzer	CPV1062
Q 923	Transistor	2SB1243	AR 401	Surge Protector	DSP-201M
Q 931	Transistor	IMX1		Fuse 10A	CEK1208
Q 932	Transistor	DTC114EU	RESISTORS		
Q 951	Transistor	2SA1037K	R 101		RS1/16S101J
Q 981	Transistor	2SC2412K	R 102		RS1/16S620J
Q 982	Transistor	IMD2A	R 103		RS1/16S101J
D 131	Diode Network	DA204U	R 104		RS1/16S222J
D 132	Diode Network	DA204U	R 105		RS1/16S103J
D 133	Diode	DAN202U	R 106		RS1/16S472J
D 134	Diode	DAP202U	R 107		RS1/16S223J
D 301	Diode	S5688G	R 108		RS1/16S472J
D 302	Diode	S5688G	R 109		RS1/16S821J
D 303	Diode	S5688G	R 110		RS1/16S821J
D 304	Diode	S5688G	R 111		RS1/16S223J
D 401	Diode	S5688G	R 112		RS1/16S223J
D 402	Diode	S5688G	R 113		RS1/16S102J
D 403	Diode	S5688G	R 114		RS1/16S102J
D 651	Diode	HZS9L(B1)	R 133		RS1/16S563J

====Circuit Symbol and No.==Part Name		Part No.	====Circuit Symbol and No.==Part Name		Part No.	A
R 134		RS1/16S104J	R 663		RS1/16S102J	
R 139		RS1/16S563J	R 664		RS1/16S221J	
R 140		RS1/16S104J				
R 147		RS1/16S474J	R 665		RD1/4PU0R0J	
R 148		RS1/16S474J	R 667		RS1/16S221J	
			R 668		RS1/16S222J	
R 201		RAB4C102J	R 670		RS1/16S221J	
R 241		RS1/16S0R0J	R 673		RS1/16S104J	
R 242		RS1/16S0R0J				
R 247		RS1/16S101J	R 677		RS1/16S104J	
R 248		RS1/16S101J	R 682		RS1/16S221J	
			R 684		RS1/16S0R0J	
R 249		RS1/16S101J	R 689		RS1/16S0R0J	
R 250		RS1/16S101J	R 802		RS1/16S222J	
R 301		RS1/16S103J				
R 302		RS1/16S103J	R 803		RS1/16S472J	
R 303		RS1/16S153J	R 804		RS1/16S1R0J	
			R 805		RS1/16S391J	
R 304		RS1/16S331J	R 806		RS1/16S391J	
R 351		RS1/16S821J	R 807		RS1/16S473J	
R 352		RS1/16S821J				
R 353		RS1/16S821J	R 808		RS1/16S473J	
R 354		RS1/16S821J	R 809		RS1/16S102J	
			R 810		RS1/16S222J	
R 355		RS1/16S821J	R 811		RS1/16S222J	
R 356		RS1/16S821J	R 812		RS1/16S222J	
R 357		RS1/16S223J				
R 358		RS1/16S223J	R 813		RS1/16S222J	
R 359		RS1/16S223J	R 814		RS1/16S222J	
			R 815		RS1/16S473J	
R 360		RS1/16S223J	R 816		RS1/16S104J	
R 361		RS1/16S223J	R 817		RD1/4PU391J	
R 362		RS1/16S223J				
R 403		RS1/16S681J	R 818		RS1/16S104J	
R 404		RS1/16S0R0J	R 819		RS1/16S222J	
			R 820		RS1/16S222J	
R 405		RS1/16S681J	R 823		RS1/16S102J	
R 406		RS1/16S681J	R 824		RS1/16S473J	
R 407		RS1/16S681J				
R 408		RS1/16S681J	R 825		RS1/16S102J	
R 410		RS1/16S681J	R 826		RS1/16S102J	
			R 827		RS1/16S102J	
R 413		RS1/16S0R0J	R 828		RS1/16S102J	
R 416		RS1/16S681J	R 851		RS1/16S331J	
R 417		RS1/16S681J				
R 419		RS1/16S681J	R 852		RD1/4PU302J	
R 421		RS1/16S681J	R 853		RD1/4PU302J	
			R 854		RS1/16S121J	
R 423		RD1/4PU0R0J	R 855		RS1/16S391J	
R 601	(DEH-P650)	RS1/16S104J	R 856		RS1/16S1R0J	
R 602	(DEH-P6500)	RS1/16S104J				
R 603		RS1/16S104J	R 857		RS1/16S331J	
R 606		RS1/16S104J	R 859		RS1/16S0R0J	
			R 903		RS1/16S223J	
R 607		RS1/16S822J	R 912		RS1/16S222J	
R 614		RS1/16S0R0J	R 913		RS1/16S223J	
R 616		RS1/16S473J				
R 617		RS1/16S102J	R 914		RS1/16S104J	
R 618		RS1/16S104J	R 915		RS1/16S104J	
			R 916		RS1/16S104J	
R 619		RS1/16S0R0J	R 923		RS1/16S103J	
R 630		RS1/16S104J	R 924		RD1/4PU122J	
R 632		RS1/16S104J				
R 641		RS1/16S102J	R 925		RS1/16S182J	
R 648		RS1/16S221J	R 931		RS1/16S472J	
			R 932		RS1/16S473J	
R 649		RS1/16S221J	R 933		RS1/16S103J	
R 651		RD1/4PU221J	R 934		RS1/16S473J	
R 652		RD1/4PU221J				
R 653		RS1/16S472J	R 935		RS1/16S104J	
R 654		RS1/16S222J	R 936		RS1/16S103J	
			R 938		RD1/4PU102J	
R 655		RS1/16S102J	R 939		RD1/4PU102J	
R 656		RS1/16S0R0J	R 951		RD1/4PU153J	
R 657		RS1/16S0R0J				
R 658		RS1/16S102J	R 952		RS1/16S472J	
R 659		RS1/16S221J	R 953		RS1/16S472J	
			R 954		RS1/16S102J	
R 660		RS1/16S221J	R 983		RS1/16S223J	
R 661		RS1/16S221J	R 984		RS1/16S473J	
R 662		RS1/16S221J				

A	====Circuit Symbol and No.==Part Name		Part No.	====Circuit Symbol and No.==Part Name		Part No.
	R	985	RS1/16S102J	C	602	CKSQYB105K16
				C	603	CEJQ2R2M50
				C	604	CCSRCH200J50
				C	605	CCSRCH200J50
		CAPACITORS				
	C	101	CKSRYB104K16			
	C	102	CKSRYB473K25	C	609	CCSRCH101J50
	C	131	CKSRYB104K16	C	651	CEJQ101M10
	C	132	CKSRYB104K16	C	652	CKSRYB473K25
	C	141	CKSRYB104K16	C	653	CKSRYB473K25
				C	656	CKSRYB473K25
	C	142	CKSRYB103K50			
	C	143	CKSRYB474K10	C	657	CCSRCH470J50
	C	144	CKSRYB474K10	C	755	CKSRYB104K16
	C	145	CCSRCH101J50	C	805	CKSRYB473K25
B	C	146	CCSRCH101J50	C	806	CKSRYB473K25
				C	807	CKSRYB473K25
	C	147	CKSRYB104K16			
	C	201	CEJQ1R0M50	C	811	CKSQYB105K16
	C	202	CEJQ1R0M50	C	812	CKSRYB474K10
	C	203	CKSRYB104K16	C	851	CEJQ470M16
	C	204	CKSRYB104K16	C	853	CCG1111
				C	855	CEJQ100M25
	C	205	CKSRYB104K16			
	C	206	CEJQ470M16	C	856	CCSRCH331J50
	C	207	CEJQ1R0M50	C	857	CEJQ330M25
	C	208	CEJQ1R0M50	C	858	CKSRYB104K16
	C	209	CEJQ1R0M50	C	859	CEJQ101M10
				C	860	CKSRYB104K16
	C	210	CEJQ1R0M50			
	C	211	CEJQ4R7M35	C	861	CKSRYB223K50
C	C	212	CEJQ4R7M35	C	911	CCH1331
	C	213	CEJQ4R7M35	C	912	CKSRYB223K50
	C	214	CEJQ4R7M35	C	913	CKSRYB103K50
				C	914	CEJQ470M10
	C	215	CEJQ4R7M35			
	C	216	CEJQ4R7M35	C	921	CEJQ221M10
	C	217	CEJQ4R7M35	C	922	CKSRYB103K50
	C	218	CEJQ4R7M35	C	923	CEJQ101M16
	C	219	CCSRCH120J50	C	931	CEJQ1R0M50
	C	220	CCSRCH120J50			
	C	221	CCSRCH120J50			
	C	222	CCSRCH120J50			
	C	225	CEJQ100M16			
	C	301	CKSRYB104K16			
D	C	306	CEJQ330M10	IC	101	IC
	C	307	CCH1486	IC	131	IC
	C	309	CKSRYB104K16	IC	201	IC
	C	310	CEJQ100M16	IC	301	IC
	C	311	CKSYB475K16	IC	401	IC
	C	312	CKSYB475K16	IC	601	IC
	C	317	CKSRYB474K10	IC	602	IC
	C	318	CKSRYB474K10	IC	652	IC
	C	319	CKSRYB474K10	IC	653	IC
	C	320	CKSRYB474K10	IC	801	IC
	C	321	CKSRYB474K10	IC	851	IC
	C	322	CKSRYB474K10	Q	101	Transistor
	C	323	CKSRYB474K10	Q	102	Transistor
	C	324	CKSRYB474K10	Q	301	Transistor
E	C	325	CKSQYB225K10	Q	351	Transistor
	C	326	CKSQYB225K10	Q	352	Transistor
	C	351	CEJQ4R7M35	Q	353	Transistor
	C	352	CEJQ4R7M35	Q	651	Transistor
	C	353	CEJQ4R7M35	Q	652	Transistor
	C	354	CEJQ4R7M35	Q	803	Transistor
	C	355	CEJQ4R7M35	Q	804	Transistor
	C	356	CEJQ4R7M35	Q	805	Transistor
	C	401	CKSRYB103K50	Q	807	Transistor
	C	402	CEJQ101M10	Q	808	Transistor
	C	404	CKSYB475K10	Q	851	Transistor
	C	406	CEJQ470M10	Q	852	Transistor
	C	408	CKSYB475K10	Q	911	Transistor
F	C	409	CEJQ1R0M50	Q	913	Transistor
	C	411	CCSRCH101J50	Q	921	Transistor
	C	412	CCSRCH470J50	Q	922	Transistor
	C	601	CEJQ4R7M35			



Unit Number : CWM8601(DEH-P6550)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

HA12187FP
NJM4558MD
PML009A
PAL007A
NJM2391DL1-33

PD5807A
S-80835ANUP-EDZ
TC7SET08FU
TC7SET08FU
TC7SET08FU

NJM2360M
2SA1037K
DTC114EU
DTC124EU
IMH3A

IMH3A
IMH3A
2SD2396
IMD2A
2SD1767

IMD2A
DTC143EU
2SA1037K
DTC114EU
2SD1760F5

IMD2A
2SD2396
IMD2A
2SD2396
DTC114EU

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.	A
Q	923	Transistor	2SB1243	R	111		RS1/16S223J	
Q	931	Transistor	IMX1	R	112		RS1/16S223J	
Q	932	Transistor	DTC114EU	R	113		RS1/16S102J	
Q	951	Transistor	2SA1037K	R	114		RS1/16S102J	
Q	981	Transistor	2SC2412K	R	133		RS1/16S563J	
Q	982	Transistor	IMD2A	R	134		RS1/16S104J	
D	131	Diode Network	DA204U	R	139		RS1/16S563J	
D	132	Diode Network	DA204U	R	140		RS1/16S104J	
D	133	Diode	DAN202U	R	147		RS1/16S474J	
D	134	Diode	DAP202U	R	148		RS1/16S474J	
D	301	Diode	S5688G	R	201		RAB4C102J	
D	302	Diode	S5688G	R	241		RS1/16S0R0J	
D	303	Diode	S5688G	R	242		RS1/16S0R0J	
D	304	Diode	S5688G	R	247		RS1/16S101J	B
D	401	Diode	S5688G	R	248		RS1/16S101J	
D	402	Diode	S5688G	R	249		RS1/16S101J	
D	403	Diode	S5688G	R	250		RS1/16S101J	
D	651	Diode	HZS9L(B1)	R	301		RS1/16S103J	
D	751	Diode	RB706F-40	R	302		RS1/16S103J	
D	803	Diode Network	DA204U	R	303		RS1/16S153J	
D	804	Diode	DAN202U	R	304		RS1/16S331J	
D	805	Diode	DAP202U	R	351		RS1/16S821J	
D	806	Diode	DAN202U	R	352		RS1/16S821J	
D	807	Diode	DAP202U	R	353		RS1/16S821J	
D	808	Diode	HZS11L(A1)	R	354		RS1/16S821J	
D	851	Diode	HZS11L(A1)	R	355		RS1/16S821J	
D	852	Diode	RB411D	R	356		RS1/16S821J	C
D	911	Diode	S5688G	R	357		RS1/16S223J	
D	912	Diode	HZS6L(B2)	R	358		RS1/16S223J	
D	921	Diode	HZS9L(B3)	R	359		RS1/16S223J	
D	931	Diode	HZS7L(A1)	R	360		RS1/16S223J	
D	932	Diode	HZS7L(C3)	R	361		RS1/16S223J	
D	937	Diode	MA110	R	362		RS1/16S223J	
D	951	Diode	DAN202U	R	403		RS1/16S681J	
D	981	Diode	DAN202U	R	404		RS1/16S0R0J	
D	982	Diode	HZS9L(A2)	R	405		RS1/16S681J	
L	101	Inductor	LAU2R2K	R	406		RS1/16S681J	
L	201	Ferri-Inductor	LAU4R7K	R	407		RS1/16S681J	
L	301	Choke Coil 600μH	CTH1280	R	408		RS1/16S681J	
L	401	Ferri-Inductor	LAU4R7K	R	410		RS1/16S681J	D
L	403	Inductor	LAU1R0K	R	413		RS1/16S0R0J	
L	404	Inductor	LAU1R0K	R	416		RS1/16S681J	
L	406	Inductor	CTF1385	R	417		RS1/16S681J	
L	601	Ferri-Inductor	LAU100K	R	419		RS1/16S681J	
L	651	Inductor	CTF1382	R	421		RS1/16S681J	
L	801	Inductor	LAU2R2K	R	423		RD1/4PU0R0J	
L	802	Inductor	CTF1382	R	601		RS1/16S104J	
L	852	Inductor	CTF1510	R	604		RS1/16S104J	
L	951	Inductor	LAU2R2K	R	606		RS1/16S104J	
X	601	Radiator	CSS1599	R	607		RS1/16S822J	
S	802	Switch(DSENSE)	CSN1039	R	614		RS1/16S0R0J	
VR	751	Semi-fixed 10kΩ(B)	CCP1229	R	616		RS1/16S473J	
		FM/AM Tuner Unit	CWE1646	R	617		RS1/16S102J	
BZ	641	Buzzer	CPV1062	R	618		RS1/16S104J	E
AR	401	Surge Protector	DSP-201M	R	630		RS1/16S104J	
CN	751	Microphone	CPM1011					
		Fuse 10A	CEK1208	R	632		RS1/16S104J	
RESISTORS				R	641		RS1/16S102J	
R	101		RS1/16S101J	R	648		RS1/16S221J	
R	102		RS1/16S620J	R	649		RS1/16S221J	
R	103		RS1/16S101J	R	651		RD1/4PU221J	
R	104		RS1/16S222J	R	652		RD1/4PU221J	
R	105		RS1/16S103J	R	653		RS1/16S472J	
				R	654		RS1/16S222J	
				R	655		RS1/16S102J	
R	106		RS1/16S472J	R	656		RS1/16S0R0J	
R	107		RS1/16S223J					
R	108		RS1/16S472J	R	657		RS1/16S0R0J	F
R	109		RS1/16S821J	R	658		RS1/16S102J	
R	110		RS1/16S821J	R	659		RS1/16S221J	
				R	660		RS1/16S221J	

A	====Circuit Symbol and No.====Part Name		Part No.	====Circuit Symbol and No.====Part Name		Part No.
A	R	661	RS1/16S221J	R	951	RD1/4PU153J
	R	662	RS1/16S221J	R	952	RS1/16S472J
	R	663	RS1/16S102J	R	953	RS1/16S472J
	R	664	RS1/16S221J	R	954	RS1/16S102J
	R	665	RD1/4PU0R0J	R	983	RS1/16S223J
	R	667	RS1/16S221J	R	984	RS1/16S473J
				R	985	RS1/16S102J
	R	668	RS1/16S222J	CAPACITORS		
	R	670	RS1/16S221J			
	R	673	RS1/16S104J			
B	R	677	RS1/16S104J	C	101	CKSRYB104K16
	R	682	RS1/16S221J	C	102	CKSRYB473K25
	R	684	RS1/16S0R0J	C	131	CKSRYB104K16
	R	689	RS1/16S0R0J	C	132	CKSRYB104K16
	R	751	RS1/16S104J	C	141	CKSRYB104K16
	R	752	RS1/16S222J	C	142	CKSRYB103K50
	R	753	RS1/16S561J	C	143	CKSRYB474K10
				C	144	CKSRYB474K10
	R	754	RS1/16S104J	C	145	CCSRCH101J50
	R	802	RS1/16S222J	C	146	CCSRCH101J50
C	R	803	RS1/16S472J	C	147	CKSRYB104K16
	R	804	RS1/16S1R0J	C	201	CEJQ1R0M50
	R	805	RS1/16S391J	C	202	CEJQ1R0M50
	R	806	RS1/16S391J	C	203	CKSRYB104K16
	R	807	RS1/16S473J	C	204	CKSRYB104K16
	R	808	RS1/16S473J	C	205	CKSRYB104K16
	R	809	RS1/16S102J	C	206	CEJQ470M16
	R	810	RS1/16S222J	C	207	CEJQ1R0M50
	R	811	RS1/16S222J	C	208	CEJQ1R0M50
	R	812	RS1/16S222J	C	209	CEJQ1R0M50
D	R	813	RS1/16S222J	C	210	CEJQ1R0M50
	R	814	RS1/16S222J	C	211	CEJQ4R7M35
	R	815	RS1/16S473J	C	212	CEJQ4R7M35
	R	816	RS1/16S104J	C	213	CEJQ4R7M35
	R	817	RD1/4PU391J	C	214	CEJQ4R7M35
	R	818	RS1/16S104J	C	215	CEJQ4R7M35
	R	819	RS1/16S222J	C	216	CEJQ4R7M35
	R	820	RS1/16S222J	C	217	CEJQ4R7M35
	R	823	RS1/16S102J	C	218	CEJQ4R7M35
	R	824	RS1/16S473J	C	219	CCSRCH120J50
E	R	825	RS1/16S102J	C	220	CCSRCH120J50
	R	826	RS1/16S102J	C	221	CCSRCH120J50
	R	827	RS1/16S102J	C	222	CCSRCH120J50
	R	828	RS1/16S102J	C	225	CEJQ100M16
	R	851	RS1/16S331J	C	301	CKSRYB104K16
	R	852	RD1/4PU302J	C	306	CEJQ330M10
	R	853	RD1/4PU302J	C	307	CCH1486
	R	854	RS1/16S121J	C	309	CKSRYB104K16
	R	855	RS1/16S391J	C	310	CEJQ100M16
	R	856	RS1/16S1R0J	C	311	CKSYB475K16
F	R	857	RS1/16S331J	C	312	CKSYB475K16
	R	859	RS1/16S0R0J	C	317	CKSRYB474K10
	R	903	RS1/16S223J	C	318	CKSRYB474K10
	R	912	RS1/16S222J	C	319	CKSRYB474K10
	R	913	RS1/16S223J	C	320	CKSRYB474K10
	R	914	RS1/16S104J	C	321	CKSRYB474K10
	R	915	RS1/16S104J	C	322	CKSRYB474K10
	R	916	RS1/16S104J	C	323	CKSRYB474K10
	R	923	RS1/16S103J	C	324	CKSRYB474K10
	R	924	RD1/4PU122J	C	325	CKSQYB225K10
F	R	925	RS1/16S182J	C	326	CKSQYB225K10
	R	931	RS1/16S472J	C	351	CEJQ4R7M35
	R	932	RS1/16S473J	C	352	CEJQ4R7M35
	R	933	RS1/16S103J	C	353	CEJQ4R7M35
	R	934	RS1/16S473J	C	354	CEJQ4R7M35
	R	935	RS1/16S104J	C	355	CEJQ4R7M35
	R	936	RS1/16S103J	C	356	CEJQ4R7M35
	R	938	RD1/4PU102J	C	401	CKSRYB103K50
	R	939	RD1/4PU102J	C	402	CEJQ101M10

3300μF/16V

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.	A
C	404		CKSYB475K10	R	201		RS1/16S102J	
C	406		CEJQ470M10	R	202		RS1/16S1002D	
C	408		CKSYB475K10	R	203		RS1/16S1002D	
C	409		CEJQ1R0M50	R	204		RS1/16S1002D	
C	411		CCSRCH101J50	R	205		RS1/16S1002D	
C	412		CCSRCH470J50	R	206		RS1/16S1002D	
C	601		CEJQ4R7M35	R	207		RS1/16S1002D	
C	602		CKSQYB105K16	R	208		RS1/16S1002D	
C	603		CEJQ2R2M50	R	209		RS1/16S1002D	
C	604		CCSRCH200J50	R	214		RS1/16S103J	
C	605		CCSRCH200J50	R	215		RS1/16S393J	
C	609		CCSRCH101J50	R	216		RS1/16S122J	
C	651		CEJQ101M10	R	217		RS1/16S562J	
C	652		CKSRYB473K25	R	218		RS1/16S472J	
C	653		CKSRYB473K25	R	234		RS1/16S0R0J	
C	656		CKSRYB473K25	R	235		RS1/16S103J	
C	657		CCSRCH470J50	R	236		RS1/16S103J	
C	751		CEJQ100M16	R	301		RS1/16S183J	
C	752		CEJQ100M16	R	302		RS1/16S822J	
C	753		CEJQ220M10	R	303		RS1/16S183J	
C	754		CKSRYB474K10	R	304		RS1/16S822J	
C	756		CKSRYB474K10	R	305		RS1/16S183J	
C	805		CKSRYB473K25	R	306		RS1/16S183J	
C	806		CKSRYB473K25	R	307		RS1/16S183J	
C	807		CKSRYB473K25	R	308		RS1/16S183J	
C	811		CKSQYB105K16	R	501		RS1/16S102J	
C	812		CKSRYB474K10	R	503		RS1/16S102J	
C	851		CEJQ470M16	R	505		RS1/16S102J	
C	853	4.7μF	CCG1111	R	506		RS1/16S221J	
C	855		CEJQ100M25	R	507		RS1/16S221J	
C	856		CCSRCH331J50	R	508		RS1/16S221J	
C	857		CEJQ330M25	R	509		RS1/16S221J	
C	858		CKSRYB104K16	R	601		RS1/16S101J	
C	859		CEJQ101M10	R	602		RS1/16S101J	
C	860		CKSRYB104K16	R	603		RS1/16S0R0J	
C	861		CKSRYB223K50	R	901		RS1/16S104J	
C	911	470μF/16V	CCH1331	R	902		RS1/16S473J	
C	912		CKSRYB472K50	R	903		RS1/16S273J	
C	913		CKSRYB103K50	CAPACITORS				
C	914		CEJQ470M10	C	101		CKSRYB104K16	
C	921		CEJQ221M10	C	102		CKSRYB104K16	
C	922		CKSRYB103K50	C	103	100μF/16V	CCH1504	
C	923		CEJQ101M16	C	104	47μF/6.3V	CCH1506	
C	931		CEJQ1R0M50	C	106		CCSRCH101J50	
D Unit Number : CWX2708 Unit Name : CD Core Unit(S10)				C	108		CKSRYB224K16	
				C	109		CKSRYB224K16	
				C	201		CKSRYB104K16	
				C	202		CKSRYB471K50	
				C	203		CKSRYB104K16	
MISCELLANEOUS				C	205	22μF/6.3V	CCH1507	
IC	201	IC	UPD63712GC	C	206		CKSRYB103K25	
IC	301	IC	BA5996FP	C	207		CKSRYB104K16	
IC	701	IC	NJM2391DL1-33	C	208	100μF/6.3V	CCH1505	
Q	101	Transistor	2SB1132	C	209		CKSRYB104K16	
D	101	Diode	1S3355	C	210		CKSRYB104K16	
D	701	Diode	1SR154-400	C	211		CKSRYB104K16	
X	201	Ceramic Resonator 16.934MHz	CSS1603	C	212		CKSRYB104K16	
S	901	Spring Switch(HOME)	CSN1051	C	213		CKSRYB332K50	
S	902	Spring Switch(CLAMP)	CSN1051	C	214		CKSRYB473K25	
S	903	Spring Switch(DSCSNS)	CSN1052	C	215		CKSRYB104K16	
S	904	Spring Switch(12EJ)	CSN1051	C	216		CKSRYB103K25	
S	905	Spring Switch(8EJ)	CSN1051	C	217		CCSRCH560J50	
RESISTORS				C	218		CCSRCH5R0C50	
R	101		RS1/10S1R5J	C	219		CKSRYB104K16	
R	102		RS1/10S1R5J	C	220		CKSRYB104K16	
R	103		RS1/10S1R5J	C	221		CKSRYB103K25	
R	104		RS1/10S1R5J	C	222		CCSRCH680J50	
R	105		RS1/10S1R5J	C	223			

B

====Circuit Symbol and No.====Part Name	Part No.
C 1973	CKSRYB104K25
C 1974	CKSRYB104K25
C 1975	CKSRYB104K25
C 1976	CKSRYB104K25
C 1990	CKSRYB103K50
C 1991	CKSRYB104K25
C 1992	CKSRYB104K16

C Unit Number : CWM8758
Unit Name : Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch(EJECT)	CSG1112

RESISTORS

R 1970	RS1/16S101J
R 1971	RS1/16S101J
R 1972	RS1/16S0R0J

CAPACITORS

C 1970	CKSRYB104K16
--------	--------------

Miscellaneous Parts List

M	1	Pickup Unit(Service)(P10)	CXX1641
M	2	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB8933