


9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

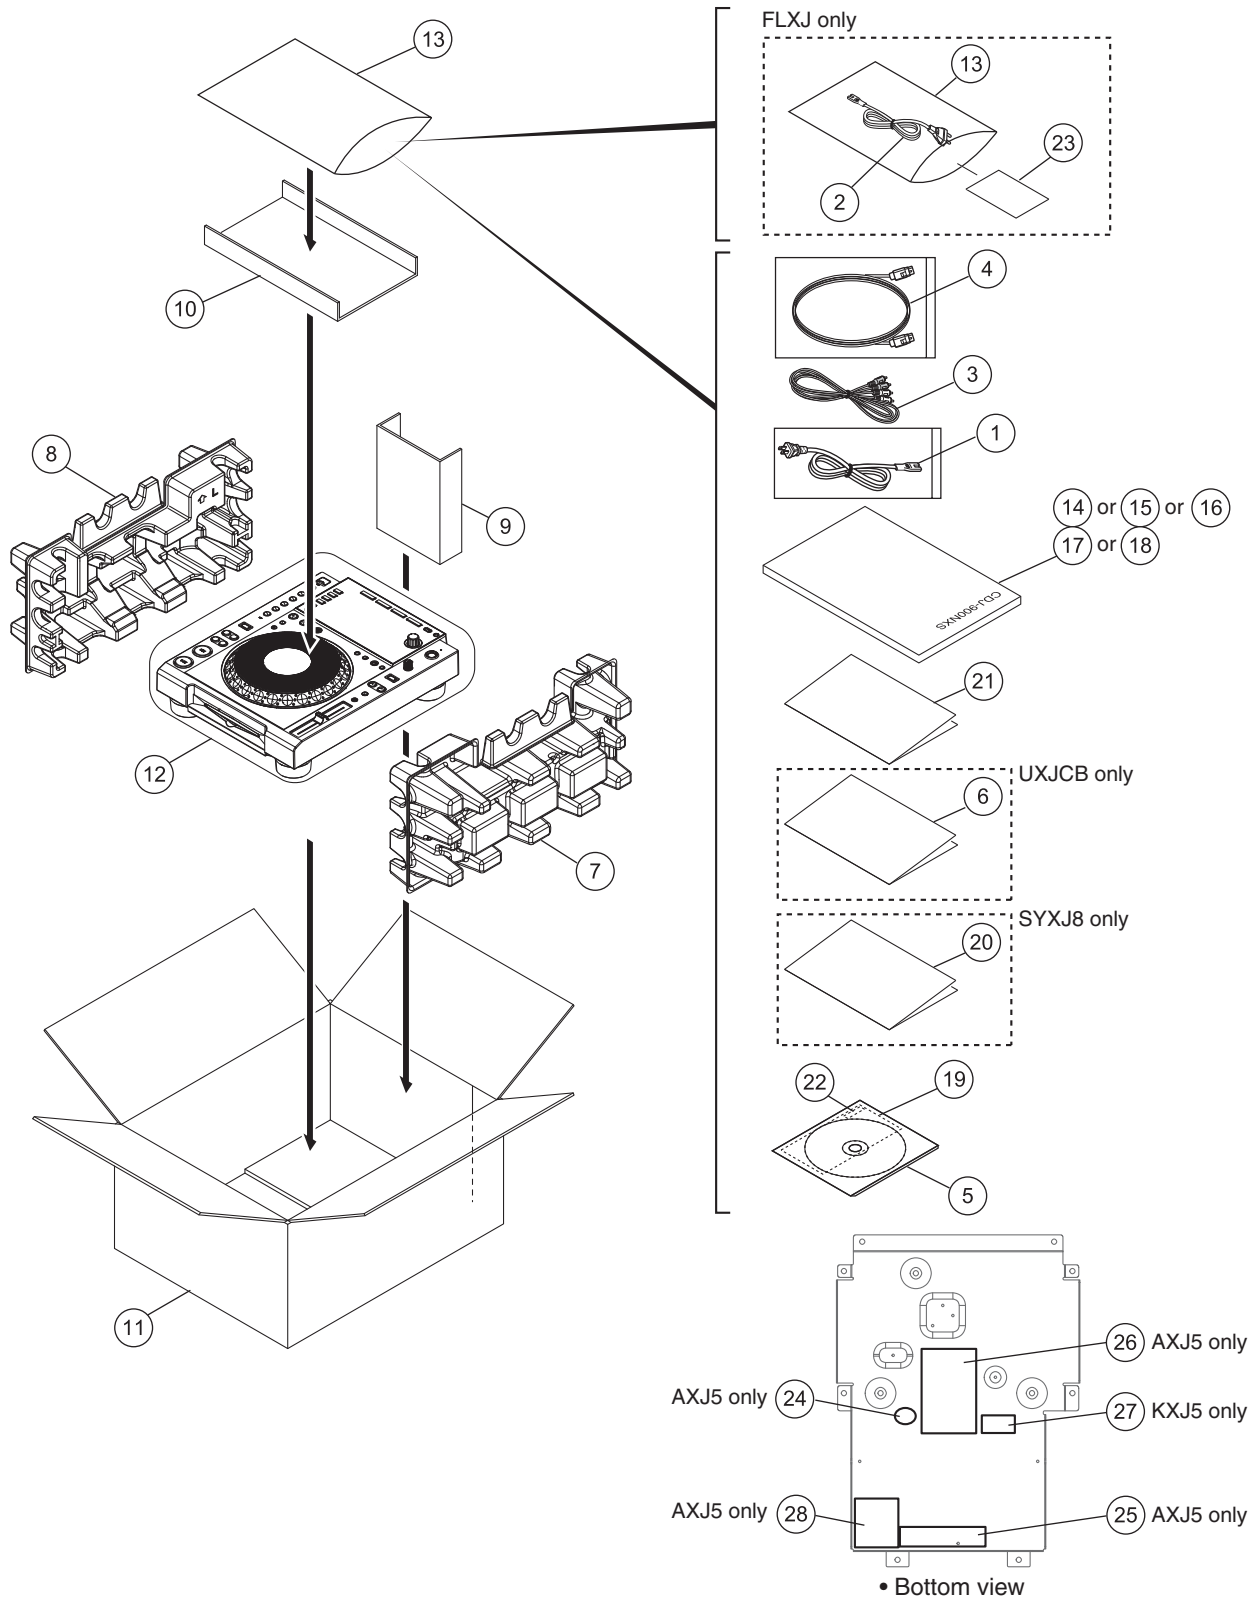

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)	15	Read Before Use (Important)/	See Contrast table (2)	
⚠	2	Power Cord	See Contrast table (2)		Quick Start Guide		
	3	Audio Cable (L = 1.5 m)	XDE3045	16	Read Before Use (Important)/	See Contrast table (2)	
	4	LAN Cable	DDE1141		Quick Start Guide		
	5	CD-ROM	DXX2739	17	Read Before Use (Important)/	See Contrast table (2)	
					Quick Start Guide		
NSP	6	Sub Manual/FR2	See Contrast table (2)	18	Read Before Use (Important)/	See Contrast table (2)	
	7	Pad (R)	DHA1788		Quick Start Guide		
	8	Pad (L)	DHA1789	NSP	19	License Key Label Assy	DXA2190
	9	Spacer	DHA1802	NSP	20	Warranty	See Contrast table (2)
	10	Spacer	DHA1892	NSP	21	Leaflet	See Contrast table (2)
	11	Packing Case	See Contrast table (2)				
	12	Packing Sheet	RHC1023	NSP	22	Label/L K	DRW2484
NSP	13	Polyethylene Bag	AHG7117		23	Caution Card SB	See Contrast table (2)
	14	Read Before Use (Important)/	See Contrast table (2)	NSP	24	CCC S&E Label	See Contrast table (2)
		Quick Start Guide			25	Caut Label/CN	See Contrast table (2)
				NSP	26	Name Label/CN	See Contrast table (2)
				27	Label/KC	See Contrast table (2)	
				28	Label/CN	See Contrast table (2)	

(2) CONTRAST TABLE

CDJ-900NXS/UXJCB, SYXJ8, FLXJ, AXJ5 and KXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-900NXS /UXJCB	CDJ-900NXS /SYXJ8	CDJ-900NXS /FLXJ	CDJ-900NXS /AXJ5	CDJ-900NXS /KXJ5
⚠	1	Power Cord	ADG7022	ADG1154	ADG1154	ADG7079	ADG7113
⚠	2	Power Cord	Not used	Not used	ADG7097	Not used	Not used
NSP	6	Sub Manual/FR2	DRM1390	Not used	Not used	Not used	Not used
	11	Packing Case	DHG3286	DHG3295	DHG3296	DHG3297	DHG3298
	14	Read Before Use (Important)/Quick Start Guide (En)	DRH1228	Not used	Not used	Not used	Not used
	15	Read Before Use (Important)/Quick Start Guide (En, Fr, De, It, NI, Es, Po, Ru)	Not used	DRH1229	Not used	Not used	Not used
	16	Read Before Use (Important)/Quick Start Guide (En, Es, Zhtw)	Not used	Not used	DRH1230	Not used	Not used
	17	Read Before Use (Important)/Quick Start Guide (Zhcn)	Not used	Not used	Not used	DRH1231	Not used
	18	Read Before Use (Important)/Quick Start Guide (Ko)	Not used	Not used	Not used	Not used	DRH1232
NSP	20	Warranty	Not used	ARY7158	Not used	Not used	Not used
NSP	21	Leaflet	DRH1245	DRH1245	DRH1245	Not used	DRH1244
	23	Caution Card SB	Not used	Not used	ARM7064	Not used	Not used
NSP	24	CCC S&E Label	Not used	Not used	Not used	DRW2310	Not used
	25	Caut Label/CN	Not used	Not used	Not used	DRW2596	Not used
NSP	26	Name Label/CN	Not used	Not used	Not used	DAL1268	Not used
	27	Label/KC	Not used	Not used	Not used	Not used	DRW2601
	28	Label/CN	Not used	Not used	Not used	DRW2606	Not used

9.2 EXTERIOR SECTION

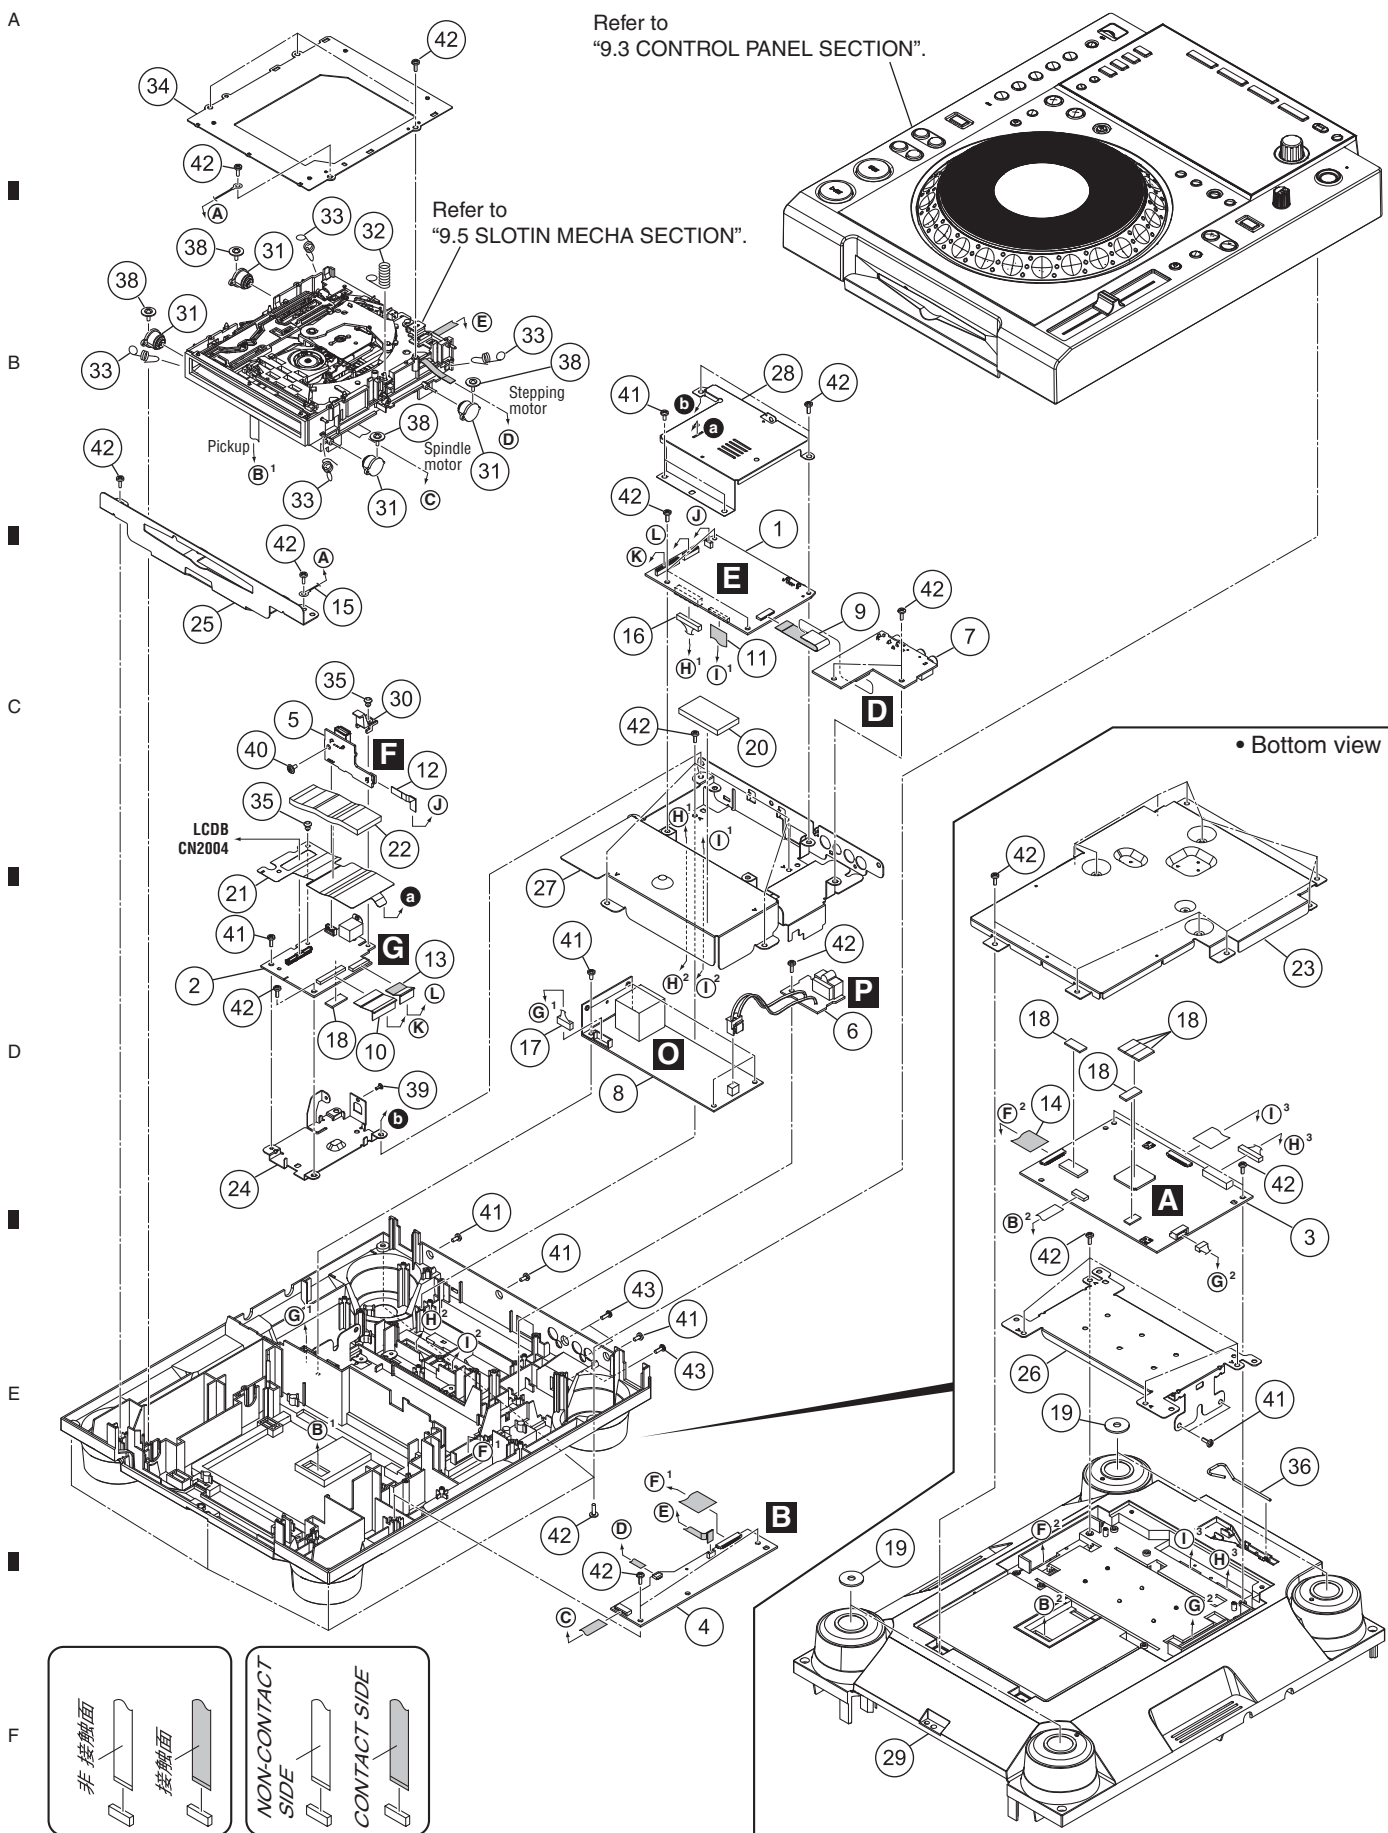

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	
	1 MAIN Assy	DWX3500	
	2 DDCB Assy	DWX3517	A
	3 SRVB Assy	DWX3519	
	4 JINT Assy	DWX3520	
	5 USBB Assy	DWX3518	
	6 ACIN Assy	DWX3529	■
	7 JACB Assy	DWX3532	
⚠	8 POWER SUPPLY Assy	DWR1463	
	9 13P FFC	DDD1484	
	10 FFC/50P	DDD1644	
	11 FFC/40P	DDD1646	B
	12 FFC/5P	DDD1648	
	13 FFC/15P	DDD1649	
	14 FFC/21P	DDD1655	
	15 Cord With Plug	DE007VE0	■
	16 Crimp Connector/12P	DKP3946	
	17 Crimp Connector/6P	DKP3947	
	18 Silicon Rubber D5 L	DEB1456	
	19 Cushion	DEC3177	
	20 Cushion/FFC	DEC3430	C
	21 Sheet/FFC	DEC3510	
	22 Cushion/FFC	DEC3531	
	23 Plate	DNH3118	
	24 Stay/USB	DNH3119	
	25 Plate/FR	DNH3120	■
	26 Stay/PSA	DNH3121	
	27 Stay/PCB	DNH3122	
	28 Shield Case/MIN	DNH3124	
⚠	29 Chassis	DNK6263	D
	30 Holder/PCB	DNK6284	
	31 Damper	CNV7618	
	32 Earth Spring	DBH1398	
	33 Float Spring (G5)	DBH1494	■
	34 Mecha Plate	DNH2642	
	35 Rivet	RBM-003	
	36 Disc Force Eject Pin	DEX1023	
	37 ●●●●●		
	38 DM Screw (FTC)	DBA1260	E
	39 Screw (M3*5)	DBA1340	
	40 Screw	ABZ30P060FTC	
	41 Screw	BBZ30P060FTB	
	42 Screw	BPZ30P080FNI	■
	43 Screw	PPZ30P080FTB	

9.3 CONTROL PANEL SECTION

A

• Bottom view




B

C

D

E

F

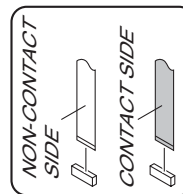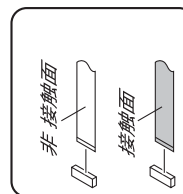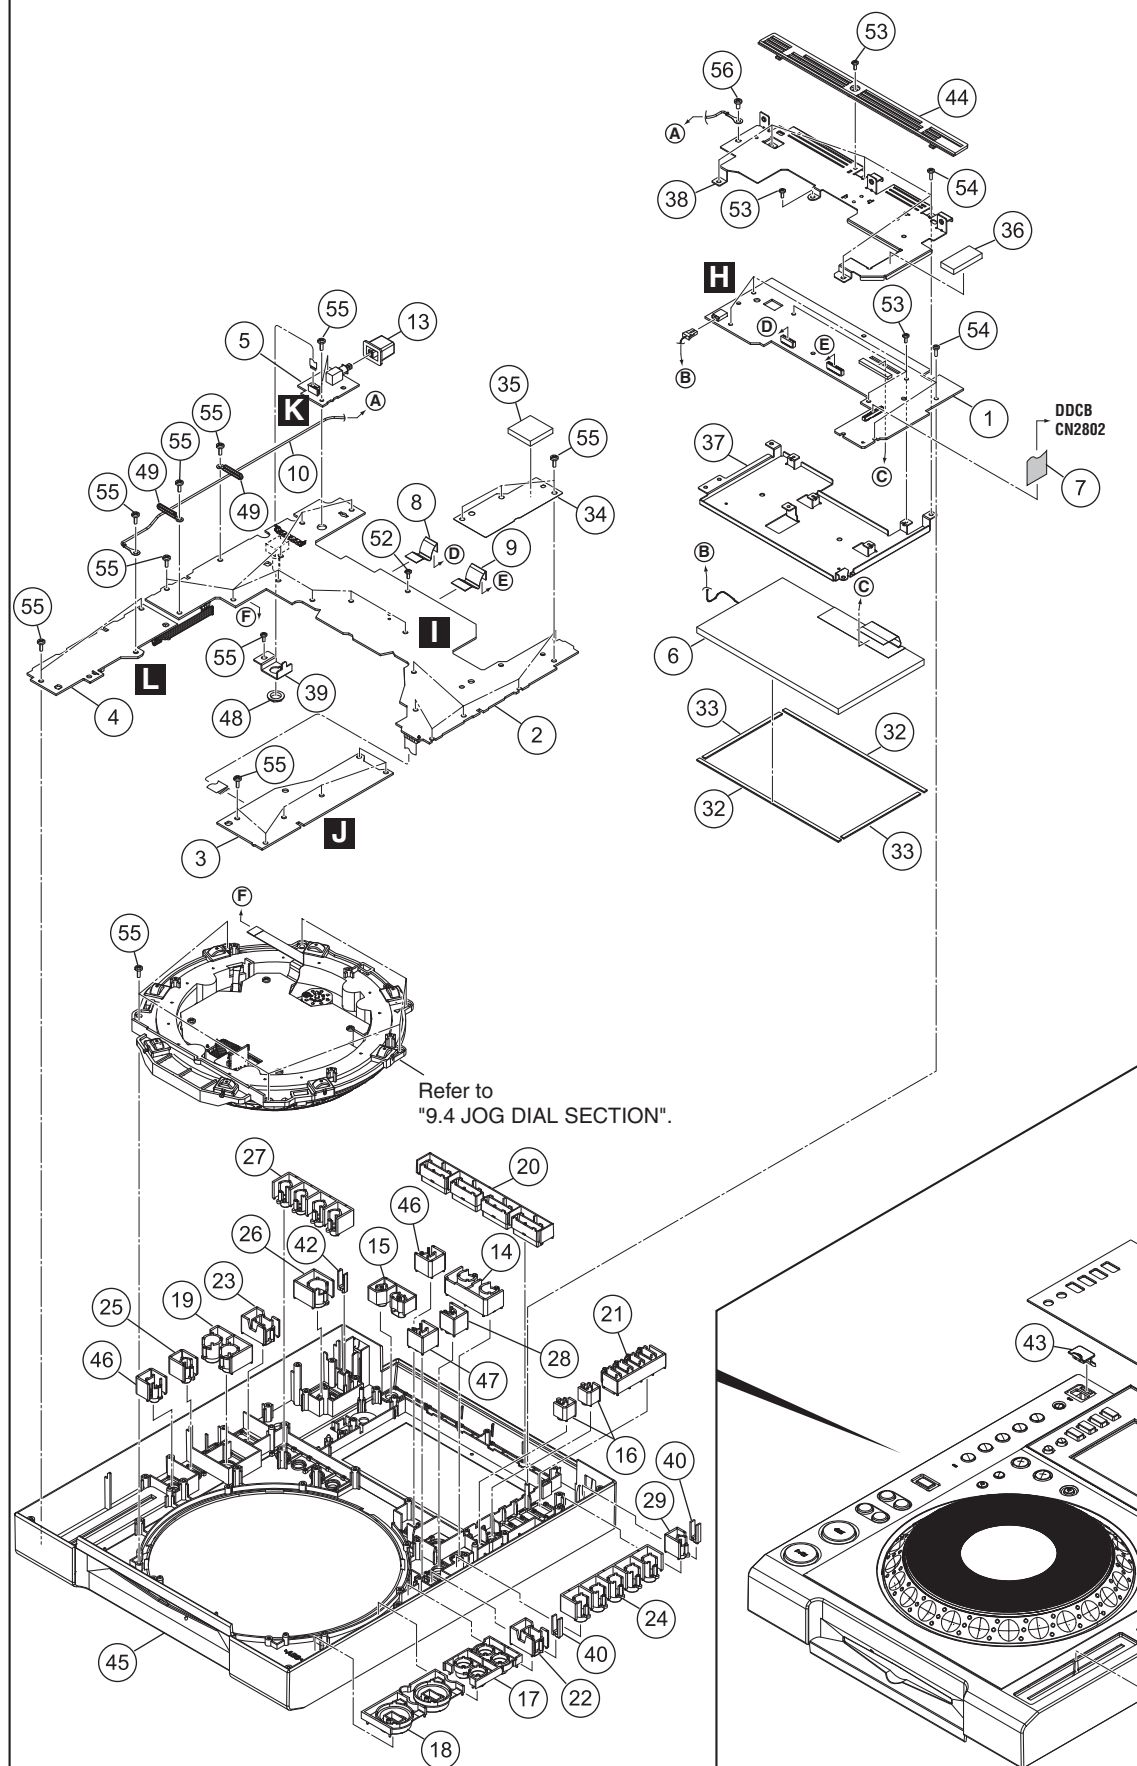


CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	LCDB Assy	DWX3516	46	Button Assy/RLP	DXB2142	
2	PNLB Assy	DWX3522	47	Button Assy/SLP	DXB2143	A
3	KSWB Assy	DWX3523	48	Flange Nut M9	DBN1008	
4	SLDB Assy	DWX3526	49	Cord Clamper	RNH-184	
5	PSWB Assy	DWX3527	50	•••••		
6	TFT LCD	CWX4352	51	•••••		■
7	FFC/50P	DDD1645	52	Screw	ABZ30P060FTC	
8	FFC/12P	DDD1650	53	Screw	BBZ26P060FTB	
9	FFC/15P	DDD1651	54	Screw	BPZ26P080FTC	
10	Earth Lead Wire	DDX1286	55	Screw	BPZ30P080FNI	
11	Dial Knob	DAA1259	56	Screw	BSZ30P060FTC	B
12	Knob	DAA1303				
13	Power Knob	DAC2306				
14	Button (LOOP)	DAC2470				
15	Button (MENU)	DAC2480				
16	Button (TIME)	DAC2483				■
17	Set Button (SEARCH)	DAC2495				
18	Play Knob	DAC2596				
19	Button/BSY	DAC2934				
20	Button/MOD	DAC2936				C
21	Button/DEV	DAC2937				
22	Button/REV	DAC2938				
23	Button/VNL	DAC2939				
24	Button/BD	DAC2940				
25	Button/TMP	DAC2942				■
26	Button/EJT	DAC2943				
27	Button/CAL	DAC2945				
28	Button/4BL	DAC2946				
29	Button/USB	DAC2947				D
30	Slide Sheet 1C	DAH2404				
31	Panel/DIS	DAH2978				
32	Packing/FR	DEC3493				
33	Packing/LR	DEC3494				■
34	Cover/PNL	DEC3509				
35	Cushion/PNL	DEC3535				
36	Cushion/LCD	DEC3538				
37	Stay/LCD	DND1277				
38	Bracket/LCD	DND1278				E
39	Stay/VR	DNF1928				
40	Device Lens	DNK5318				
41	Knob/SLD	DNK5981				
42	Lens/EUP	DNK6040				■
43	Cover/USB	DNK6041				
44	Cover/R	DNK6264				
⚠	Control Panel	DNK6266				

JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	
1	JFLB Assy	DWX3530	
2	JOGB Assy	DWX3531	A
3	Sheet SW	DSX1078	
4	FFC/10P	DDD1652	
5	Jog Panel	DAH2609	
6	Jog Plate	DAH2839	
7	Load Spring	DBH1680	
8	SW Spring	DBH1681	
9	Encoder Spring	DBH1710	
10	SW Cushion HH48/2	DEC2538	
11	Encorder Plate	DEC2889	B
12	Ring Cushion L24/2.0	DEC2958	
13	Washer	DEC3137	
14	Jog B	DNK4068	
15	SW Ring	DNK5233	
16	Load Gear	DNK5236	
17	Smoother	DNK5237	
18	Gear A	DNK5241	
19	Gear B	DNK5242	
20	Adjust Plate	DNK5300	C
21	Holder/JOG	DNK6265	
22	Jog Dial A	DNK5357	
23	Roller Assy/A	DXB2118	
24	Stay Assy/JOG	DXB2133	
25			
26			
27	Screw (FE)	DBA1265	
28	Screw	BPZ20P100FTC	
29	Screw	BPZ30P080FNI	D
30	Screw	IPZ20P060FTC	

9.5 SLOT IN MECHA SECTION

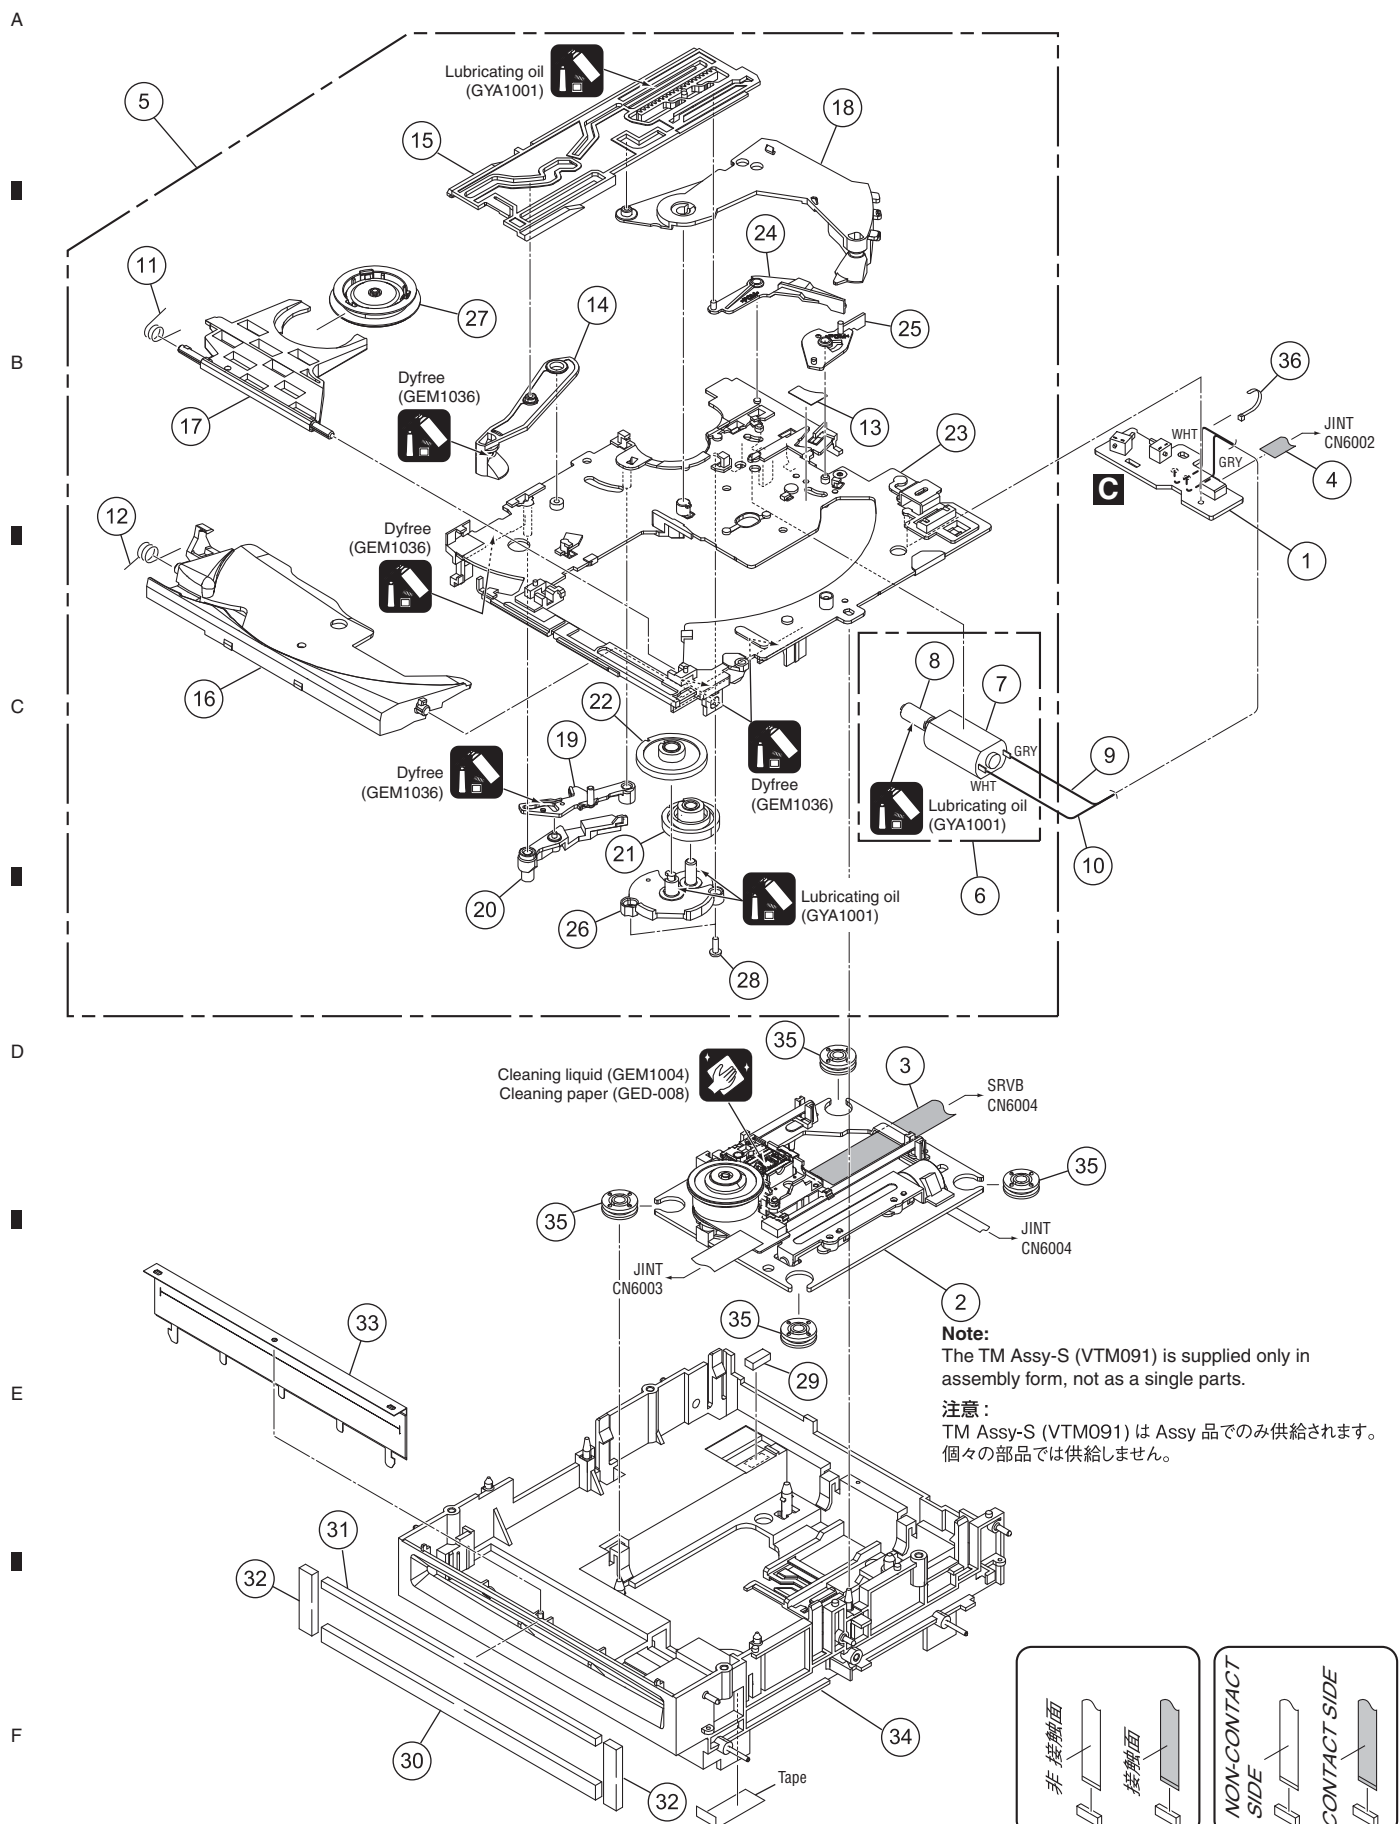

SLOT IN MECHA SECTION PARTS LIST

Mark No.	Description	Part No.	
	1 SLMB Assy	DWX3528	
	2 TM Assy-S (VTM-091)	DXX2616	A
	3 FFC/24P	DDD1654	
	4 FFC/5P	DDD1653	
NSP	5 SLOTIN MECHA Assy	DXA2206	
	6 DC Motor Assy-S	DXX2615	
NSP	7 DC Motor	DXM1384	
NSP	8 Worm Gear	DNK3910	
	9 Lead Wire	ZWNN1007G28-8-06A	
	10 Lead Wire	ZWNN1007G28-9-06A	
	11 Clamp Spring	DBH1374	B
	12 Guide Spring	DBH1375	
	13 SW Lever Spacer SV	DEC2831	
	14 Loading Lever	DNK3406	
	15 Main Cam	DNK3407	
	16 Disc Guide	DNK3478	
	17 Clamp Arm	DNK3576	
	18 Eject Lever	DNK3684	
	19 Lever AP	DNK3835	
	20 Lever BP	DNK3836	C
	21 Loading Gear	DNK3911	
	22 Drive Gear	DNK3912	
	23 Loading Base SV	DNK4369	
	24 SW Lever SV1	DNK4370	
	25 SW Lever SV2	DNK4371	
	26 Gear Holder SV	DNK4372	
	27 Clamper Assy-S	DXX2661	
	28 Screw	BPZ20P060FTC	
	29 Spacer POR (T3)	DEB1566	D
	30 Vessel Cushion A	DEC2852	
	31 Vessel Cushion B	DEC2853	
	32 Vessel Cushion C	DEC2854	
	33 Front Sheet	DED1132	
	34 Float Base 05 Assy	DXB2068	
	35 Floating Rubber (SI)	VEB1351	
	36 Binder	ZCA-SKB90BK	E

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56 $\times 10^1$ $\rightarrow$ 561 RD1/4PU $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 1 \\ 7 \end{bmatrix} J$

47 k Ω $\rightarrow$ 47 $\times 10^3$ $\rightarrow$ 473 RD1/4PU $\begin{bmatrix} 4 \\ 7 \end{bmatrix} \begin{bmatrix} 3 \\ 3 \end{bmatrix} J$

0.5 Ω $\rightarrow$ R50 RN2H $\begin{bmatrix} R \\ 5 \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$

1 Ω $\rightarrow$ 1R0 RS1P $\begin{bmatrix} 1 \\ 7 \end{bmatrix} \begin{bmatrix} R \\ 0 \end{bmatrix} K$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562 $\times 10^1$ $\rightarrow$ 5621 RN1/4PC $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 2 \\ 2 \end{bmatrix} \begin{bmatrix} 1 \\ 7 \end{bmatrix} F$

Mark No. Description Part No.

LIST OF ASSEMBLIES

1..MAIN ASSY DWX3500

NSP 1..LCDA ASSY DWM2515
2..LCDB ASSY DWX3516
2..DDCB ASSY DWX3517

NSP 1..SRVA ASSY DWM2516
2..SRVB ASSY DWX3519
2..JINT ASSY DWX3520

NSP 1..PNLA ASSY DWM2517
2..USBB ASSY DWX3518
2..PNLB ASSY DWX3522
2..KSWB ASSY DWX3523
2..SLDB ASSY DWX3526

2..PSWB ASSY DWX3527

NSP 1..JFLA ASSY DWM2518
2..SLMB ASSY DWX3528
2..ACIN ASSY DWX3529
2..JFLB ASSY DWX3530
2..JOGB ASSY DWX3531

2..JACB ASSY DWX3532

$\triangle$ 1..POWER SUPPLY ASSY DWR1463

Mark No. Description Part No.

A SRVB ASSY

SEMICONDUCTORS

IC 7001 BD7956FS
IC 7002 AN22022A
 $\triangle$ IC 7003 NJM2846DL3-33
IC 7004 DYW1839
 $\triangle$ IC 7005 S-1155B15-U5

IC 7006 MN103S71F
IC 7009 S-80942CNMC-G9C
 $\triangle$ IC 7302,7303 BD9328EFJ
 $\triangle$ IC 7304 NJM2845DL1-05
Q 7002 2SA1036K

Q 7003,7004 LTC014YEB
Q 7301 RTQ040P02
Q 7302 LTC024EEB

Mark No. Description Part No.

MISCELLANEOUS

L 7027,7028,7031 INDUCTOR CTF1379
L 7035-7038 INDUCTOR CTF1379
L 7302 SMD SPL INDUCTOR CTH1527
L 7304 INDUCTOR CTH1254
KN 7003,7301 WRAPPING TERMINAL CKF1089

X 7001 CERAMIC RESONATOR (16.934 MHz) DSS1157
CN 7001 24P FFC CONNECTOR DKN1445
CN 7005 40P CONNECTOR VKN1818
CN 7009 21P CONNECTOR RKN1062
CN 7301 CONNECTOR AKM1298

$\triangle$ CN 7302 XH CONNECTOR (6P) DKN1599
 $\triangle$ P 7301 PROTECTOR (2.000 A) DEK1126
 $\triangle$ P 7302 PROTECTOR (1.250 A) DEK1123
 $\triangle$ P 7303 PROTECTOR (0.750 A) DEK1121

RESISTORS

R 7001,7110,7326 RS1/10SR4701F
R 7002,7003,7006,7009 RS1/4SA1R0J
R 7008 RS1/4SA220J
R 7014,7015 RS1/4SA3R3J
R 7017,7109 RS1/10SR2702F

R 7018,7099 RS1/10SR1502F
R 7020 RS1/10SR1202F
R 7021,7341 RS1/10SR3302F
R 7024,7025 RS1/10SR4702F
R 7042,7043,7063-7066 RAB4CQ101J

R 7112 RS1/10SR1002F
R 7302,7331,7337 RS1/4SA0R0J
R 7310 RS1/10SR2702D
R 7311 RS1/10SR3300D
R 7312 RS1/10SR1002D

R 7342 RS1/10SR2201F
Other Resistors RS1/10SR###J

CAPACITORS

C 7001,7002,7081 CKSRYB472K50
C 7008,7014,7016,7023 CKSRYB104K16
C 7010,7024,7070,7098 CKSRYB103K50
C 7011,7012,7034,7061 CCSRCH101J50
C 7013 CKSRYB224K16

C 7017 CCSRCH470J50
C 7019 CKSRYB474K10
C 7022,7059 CEHVAW470M6R3
C 7025-7030,7040 CKSRYB104K16
C 7036,7037,7076,7078 CKSRYB182K50

C 7038,7053,7079,7087 CKSRYB102K50

Mark	No.	Description	Part No.
	C	7039,7056	CCSRCH151J50
	C	7041	CKSRYB561K50
	C	7042,7090	CKSRYB273K25
	C	7043,7104	CKSRYB473K50
	C	7044,7055	CEHVAW470M16
	C	7045-7048,7051,7052	CKSRYB104K16
	C	7049,7316	CKSRYB183K50
	C	7050,7121,7301,7324	CCH1565
	C	7054,7057,7058,7060	CKSRYB104K16
	C	7062,7089,7108	CCSRCH101J50
	C	7063-7068,7071,7072	CKSRYB104K16
	C	7069,7075,7085,7096	CKSRYB105K10
	C	7073,7074	CKSRYB471K50
	C	7077	CKSRYB222K50
	C	7080,7082,7084,7086	CKSRYB104K16
	C	7083	CKSRYB122K50
	C	7088,7092,7097	CKSRYB102K50
	C	7091,7094,7095	CKSRYB104K16
	C	7099-7102,7109,7114	CKSRYB104K16
	C	7103	CKSRYB333K50
	C	7110	CEHVAW470M16
	C	7111-7113,7115	CKSRYB102K50
	C	7116-7120,7122-7125	CCSRCH101J50
	C	7129-7131,7134-7137	CCSRCH101J50
	C	7133,7142,7143,7328	CKSRYB104K16
	C	7302,7304,7318	CCG1221
	C	7306,7313,7315	CCSRCH102J50
	C	7309,7352	CKSRYB104K50
	C	7310-7312	CKSRYB103K50
	C	7317,7348	CCSRCH101J50
	C	7331,7350	DCH1201
	C	7336,7339,7351	CCH1565
	C	7337,7338,7349,7355	CKSRYB104K16
	C	7354	CCSRCH272J50
	C	7356	CKSRYB104K16
	C	7357	CCSRCH152J50
	C	7358	CFHXSQ472J16
	C	7359	CFHXSP104J16

B JINT ASSY

MISCELLANEOUS

CN6001	21P CONNECTOR	RKN1062
CN6002	5P CONNECTOR	VKN1374
CN6003	12P FFC CONNECTOR	DKN1450
CN6004	4P CONNECTOR	DKN1288

CAPACITORS

C 6005

CKSRYB104K16

C SLMB ASSY

MISCELLANEOUS

S 9001,9002	PUSH SWITCH	DSG1017
CN9001	5P CONNECTOR	VKN1265

D JACB ASSY

SEMICONDUCTORS

⚠	IC 9401	NJM2374AM
⚠	IC 9403	NJM2872BF05

Mark	No.	Description	Part No.
	Q	9401-9404	INC2002AC1
	Q	9405	2SA1577
	D	9401,9402	RB160M-60
	D	9405-9407	DZ2J062M0
	D	9409,9411	DA2J101
	D	9410	DB2J41100

MISCELLANEOUS

L	9401	POWER INDUCTOR	DTL1187
JA	9401	JACK	VKB1243
JA	9402	RCA JACK/2P	DKB1114
JA	9403	1P JACK	DKB1089
KN	4001	EARTH TERMINAL	AKF7002
CN	9401	13P CONNECTOR	VKN1273
P	9401,9402	PROTECTOR (0.750 A)	DEK1121

RESISTORS

R	9401	RS1/4SA332J
R	9402	RS1/4SAR82J
R	9403	RN1/16SE9100D
R	9404	RN1/16SE1802D
R	9405	RN1/16SE2201D
Other Resistors		RS1/10SR###J

CAPACITORS

C	9401,9404	CEHAZL101M25
C	9403	CCSRCH331J50
C	9405,9406	CCH1357
C	9407,9409,9415	CKSRYB103K50
C	9408,9412-9414,9416	CKSRYB104K50
C	9410,9411	DCE1017
C	9421	CEAT101M16
C	9422	CKSRYB105K16
C	9424	CCSRCH102J50

E MAIN ASSY

SEMICONDUCTORS

NSP	IC 1,2	K4T1G164QF-BCE7
	IC 3	DYW1838
	IC 4,9,506	TC7WHU04FK
	IC 5	TC7SZ08FU
	IC 6	TC7SH04FUS1
	IC 8	TC74VHC08FK
	IC 10	R8A77240D500BG2
	IC 11	S-80930CNMC-G80
	IC 14	H337S3959
	IC 301	D810K013DZKB400
	IC 302	M12L2561616A-5TG2A
	IC 501	TC7SG08FU
⚠	IC 701	MM3529A18P
⚠	IC 704	LAN8720A-CP
	IC 705	BD9328EFJ

IC	901	WM8728SEDS
IC	902	NJM4580MD
Q	1	RTQ045N03
Q	2,701,703,902	LTC024EEB
Q	702,704,907	LTA024EEB

Q	901,904-906	LSCR523UB
Q	903,908	LTC024EEB
Q	909,910	INC2002AC1
D	1,701,901,903	DA2J101

Mark	No.	Description	Part No.
	D 704		DZ2J062M0
MISCELLANEOUS			
A	L 1,2	INDUCTOR	CTF1394
	L 6	CHIP BEEDS FILTER	BTX1047
	L 301,302,305,750	CHIP BEADS	VTL1128
	L 709	CHOKE COIL	CTH1487
	L 710-726,732	FERRITE BEAD	CTF1528
	L 752-754	FERRITE BEAD	CTF1528
	L 901,902	CHIP SOLID INDUCTOR	XTL3010
	F 2,3,6,702	EMI FILTER	CCG1352
	F 701	EMI FILTER	DTL1106
	JA 702	RJ45 CONNECTOR	VKN2023
B	T 701	10/100BASE-T TRANS	BTX1044
	X 1	RESONATOR (48 MHz)	CSS1760
	X 2	CRYSTAL RESONATOR (33.333333 MHz)	CSS1825
	X 3	CRYSTAL OSCILLATOR (32 MHz)	DSS1210
	X 501	OSCILLATOR (16.9344 MHz)	CWX3849
	X 701	CRYSTAL OSCILLATOR (50 MHz)	DSS1209
	CN 701	CONNECTOR	VKN2050
	CN 703	5P CONNECTOR	VKN1374
	CN 705	CONNECTOR	AKM1283
	CN 706	FFC/FPC CONNECTOR	DKP3953
	CN 707	15P CONNECTOR	VKN1419
C	CN 901	13P CONNECTOR	RKN1054
NSP	0	ID LABEL ASSY	AXW7015

RESISTORS

	R 3,20	RS1/16SS82R0F
	R 11,12,18,27	RAB4CQ330J
	R 41,81-88	RAB4CQ220J
	R 99-103,105,107	RAB4CQ220J
	R 104	RS1/16SS4300D
	R 109,111,114,119	RAB4CQ220J
	R 116,117	RS1/16SS5601F
	R 133,301-304,324	RAB4CQ220J
D	R 306,712,723	RS1/10SR0R0J
	R 326,327,330,331	RAB4CQ221J
	R 328,329,753-756	RAB4CQ220J
	R 730	RS1/16SS1002D
	R 731	RS1/16SS1501F
	R 732-735	RS1/10SR49R9F
	R 736-739	RS1/10SR750J
	R 740-743,761-763	RS1/10SR0R0J
	R 779-782	RAB4CQ101J
	R 787	RS1/10SR102J
	R 789	RS1/16SS3301F
E	R 790	RS1/16SS5600F
	R 791	RS1/16SS1002F
	R 792	RS1/10SR153J
	R 831,832	RS1/4SA0R0J
	R 906	RS1/10SR0R0J
	R 931	RS1/10SR821J
	R 932,933	RN1/16SE3902D
	R 934,935	RN1/16SE2200D
	R 936,937,940,941	RN1/16SE2201D
	R 938,939	RN1/16SE3301D
	R 943,944	RN1/16SE2201D
F	Other Resistors	RS1/16SS###J

Mark	No.	Description	Part No.
CAPACITORS			
C	1,2,5,10		CKSSYB104K10
C	3,6,7,14		CKSSYB102K50
C	4,8,9		CKSSYB103K16
C	11-13,30,36		CKSSYB103K16
C	15,18,20,22		CKSSYB104K10
C	16,17,19,21		CKSSYB102K50
C	23,80,81,83		DCH1201
C	24,31,34,37		CKSSYB102K50
C	25-29,32,33		CKSSYB104K10
C	35,38,40-42		CKSSYB104K10
C	39,46,51,55		CKSSYB102K50
C	43,49,52,54		CKSSYB103K16
C	44,45,47,48		CKSSYB104K10
C	50,53,56-62		CKSSYB104K10
C	63,71,72,116		CKSSYB102K50
C	64-69,74-79		CKSSYB104K10
C	70,73,143,147		CKSSYB103K16
C	82,84,86,93		CKSSYB104K10
C	85,87-92		CCSSCH102J50
C	94,106,110-114		DCH1201
C	95		CCSSCH7R0D50
C	96		CCSSCH6R0D50
C	97,98		CCSSCH9R0D50
C	99-105,115		CKSSYB104K10
C	107,716,721		CKSRYB105K10
C	108,339		CEHVAW221M6R3
C	117		CKSSYB333K10
C	118-123,127-129		CCSSCH102J50
C	124-126,133		CKSSYB104K10
C	130,140,338,340		DCH1201
C	131,132,501		CCSSCH102J50
C	134		CKSSYB222K50
C	135,706,710		CKSRYB104K50
C	136-138,141,142		CKSSYB104K10
C	144,146,325-337		CKSSYB102K50
C	145,148-151,153		CKSSYB104K10
C	154,165,319,324		CKSSYB104K10
C	301-316,343		CKSSYB103K16
C	342,547,550,556		CKSSYB104K10
C	344,502,904		CCSSCH101J50
C	345-349,352,353		CKSSYB103K16
C	549,901,908		CKSSYB103K16
C	701,704		CCSSCH221J50
C	707		CKSRYB333K50
C	708,709,743,915		ACG1142
C	712		CCSSCH220J50
C	713-715,718,722		CKSSYB104K10
C	717		CKSSYB471K50
C	720		CKSQYB475K6R3
C	727,755		CKSRYB223K50
C	728		ACG1127
C	729,730,756,758		DCH1201
C	731,732,913,914		CKSSYB104K10
C	744-747,760,761		CKSRYB104K50
C	748,759		DCH1341
C	750		CCSRCH102J50
C	752,753		CKSRYB103K50
C	762,903,907,929		CCH1565
C	902,911,912		CEHVAW470M16

Mark	No. Description	Part No.
	C 905,909	DCH1201
	C 910	CKSSYB104K16
	C 916	ACG1142
	C 921,922	CEHVAW101M16
	C 925,926	CCSRCH681J50
	C 927,928	CCSRCH561J50
	C 932	CCH1565
	C 936	CFHXSQ103J16

F **USBB ASSY**

MISCELLANEOUS

JA 2901	USB CONNECTOR	DKB1106
CN 2901	4P SOCKET	KP200IB4L
CN 2902	5P CONNECTOR	VKN1265

CAPACITORS

C 2902 CCSRCH4R0C50

G DDCB ASSY

SEMICONDUCTORS

⚠	IC 2701	BD9328EFJ
⚠	IC 2702	TPS2557DRB
	IC 2801-2803	TC74LCX541FK
	Q 2701	RN1903

MISCELLANEOUS

L 2701	INDUCTOR	CTH1253
L 2806-2823,2825	CHIP BEADS	VTL1126
JA 2701	USB CONNECTOR	DKN1237
CN 2701	CONNECTOR	CKS4808
CN 2702	4P PLUG	KM200IB4
CN 2801	CONNECTOR	DKN1407
CN 2802	FFC/FPC CONNECTOR	DKP3953

RESISTORS

R 2704	RS1/10SR1100D
R 2705	RS1/10SR4702D
R 2706	RS1/10SR1002D
R 2710	RS1/16SS181J
R 2711,2712	RS1/16SS2202F
R 2713	RS1/16SS103J
R 2801,2803,2804	RS1/16SS221J
R 2805-2808	RAB4CQ221J
Other Resistors	RS1/10SR###J

CAPACITORS

C 2701,2702,2708	CCG1221
C 2703	CKSRYP104K16
C 2704	CCSRCH102J50
C 2705,2706,2805	CKSRYP104K50
C 2707	CKSRYP103K50
C 2712,2720	CCH1565
C 2713,2717,2718	DCH1201
C 2715	CKSSYP104K10
C 2716	CKSSYP103K16
C 2719	CEHVAW101M6R3
C 2801-2803,2807	CKSSYP104K16

Mark	No.	Description	Part No.
		LCDB ASSY	
		<u>SEMICONDUCTORS</u>	
	IC	2001	R1290K103A
	IC	2002	BD81A04EFV
	IC	2601,2602	BD9328EFJ
	Q	2001	2SA1577
	Q	2602	LTA024EEB
	Q	2603	LTC024EEB
	D	2001-2003	DB3S308F0
	D	2004	DB2J41100
	D	2005	RB060M-30

MISCELLANEOUS

L 2005	INDUCTOR	CTF1545
L 2006	SMD SPL INDUCTOR	CTH1571
L 2007	CHOKE COIL	CTH1426
L 2008	INDUCTOR	CTF1635
L 2009,2010	CHIP INDUCTOR (10U)	DTL1105
L 2011	CHIP BEEDS FILTER	BTX1042
L 2012	INDUCTOR	LCTAW101J2520
L 2033,2605-2607	FERRITE BEAD	CTF1528
L 2601,2603	SMD SPL INDUCTOR	CTH1527
S 2601-2611,2613	TACT SWITCH	DSG1134
S 2612	ENCODER	DSX1082
CN2001	FFC/FPC CONNECTOR	CKS6536
CN2003	CONNECTOR	CKS4428
CN2004	FFC/FPC CONNECTOR	DKP3953
CN2601	12P CONNECTOR	VKN1416
CN2602	15P CONNECTOR	VKN1419

RESISTORS

R 2001,2002	RS1/16SS1300D
R 2004	RS1/4SA0R0J
R 2008	RS1/16SS3603D
R 2009	RS1/16SS6802D
R 2010	RS1/16SS3901D
R 2014	RS1/16SS5100F
R 2018	RS1/16SS3302D
R 2020	RS1/16SS2202D
R 2021	RS1/16SS1103D
R 2022	RS1/16SS1002D
R 2024,2027	RS1/16SS1502D
R 2026	RS1/16SS8201D
R 2032	RS1/16SS1203D
R 2033	RS1/16SS1602D
R 2034	RS1/10SR0R0J
R 2035	RS1/16SS3303D
R 2036	RS1/16SS5601D
R 2037	RS1/16SS3902D
R 2039,2052,2073	RS1/16SS39R0D
R 2041,2055	RS1/16SS47R0D
R 2045,2053	RS1/16SS75R0F
R 2051	RS1/16SS51R0D
R 2054,2058	RS1/16SS82R0D
R 2056	RS1/16SS56R0D
R 2057	RS1/16SS1800D
R 2602,2642	RS1/10SR220J
R 2604	RS1/10SR8200D
R 2605	RS1/10SR4702D
R 2606,2646	RS1/10SR1002D
R 2607	RS1/10SR683J

Mark	No.	Description	Part No.
A	R	2609	RS1/10SR472J
	R	2641	RS1/10SR104J
	R	2645	RS1/10SR2702D
	R	2647	RS1/10SR223J
	R	2648	RS1/10SR393J
	Other Resistors		RS1/16SS###J

CAPACITORS

C	C	2001,2012,2021,2025	CCG1236
	C	2002	CKSRYB224K16
	C	2004,2024,2039,2065	CKSSYB102K50
	C	2005	CKSRYB105K16
	C	2006,2018,2642	CKSSYB105K6R3
B	C	2007,2010	CKSQYB105K25
	C	2008,2011,2046-2048	CKSSYB104K10
	C	2014,2078,2088-2090	CKSRYB104K50
	C	2015,2016	CKSQYB474K25
	C	2017,2032,2041-2043	CKSSYB104K16
C	C	2020	CKSSYB224K6R3
	C	2022,2040	CKSYB475K16
	C	2023	CCG1218
	C	2026	CKSQYB475K6R3
	C	2027,2030	CKSSYB332K50
C	C	2028	CKSSYB561K50
	C	2029	CKSSYB103K16
	C	2031,2033,2034,2036	CCG1236
	C	2035	CCG1254
	C	2044,2045	CKSRYB105K10
C	C	2049	DCH1246
	C	2062,2075,2076,2094	CKSSYB104K16
	C	2066	CKSQYB225K16
	C	2067	CKSSYB103K25
	C	2070,2086	CCG1236
D	C	2071	CCG1201
	C	2073	CCG1234
	C	2074	CKSQYB334K50
	C	2077	CKSSYB104K10
	C	2081,2083,2085,2087	CKSSYB102K50
C	C	2091,2612,2637	CCH1565
	C	2092,2605,2606,2630	CKSRYB104K50
	C	2102,2601,2602,2608	CCG1221
	C	2603,2628,2638	CKSRYB104K16
	C	2604,2629	CCSRCH102J50
E	C	2607	CKSRYB222K50
	C	2626,2627,2633	CCG1221
	C	2631	CKSRYB104K50
	C	2632	CKSRYB103K50

PNLB ASSY SEMICONDUCTORS

F	IC	8001	PST8430N
	IC	8003	DYW1840
	Q	8001,8003,8004	LTC124EUB
	Q	8002,8005-8009,8013	LTC114YUB
	Q	8014,8024,8025	LTC114YUB
F	Q	8015-8017,8019,8020	LTC124EUB
	Q	8023	LTA124EUB
	Q	8026	LTC124EUB
	D	8001-8003,8009,8014	SLI-343U8R(HJK)

Mark	No.	Description	Part No.
D	8004-8008,8012,8013		SLI-343Y8Y(KLM)
D	8010		SLI-343M8G(GHJ)
D	8015,8027		SLI-343Y8Y(KLM)
D	8016		SLI-343U8R(HJK)
D	8017		SLR343BC4T(JK)
D	8026		SLR343WBC7T(MN)

MISCELLANEOUS

L	8003	INDUCTOR	CTF1379
VR	8001	VARIABLE RESISTOR	DCS1045
S	8001-8006,8008	TACT SWITCH	DSG1079
S	8007,8009,8013-8016	SWITCH	VSG1024
S	8010-8012	TACT SWITCH	DSG1079
S	8017,8020-8022	TACT SWITCH	DSG1089
S	8018,8019	SWITCH	VSG1024
X	8001	CRYSTAL RESONATOR (15.975 MHz)	DSS1166
CN	8001	12P CONNECTOR	VKN1272
CN	8002	15P CONNECTOR	VKN1275
CN	8004	10P CONNECTOR	VKN1853
JH	8003	4P CABLE HOLDER	51048-0400
JH	8004	7P CABLE HOLDER	51048-0700
JH	8005	3P CABLE HOLDER	51048-0300
JP	8001	3P JUMPER WIRE	D20PDY0310E
JP	8002	JUMPER WIRE	D20PDY0720E
JP	8003	4PJUMPER WIRE	D20PDD0410E

RESISTORS

All Resistors	RS1/10SR###J
---------------	--------------

CAPACITORS

C	8002,8004,8035	CEHAS470M16
C	8003,8005,8013,8019	CKSRYB104K16
C	8006-8010,8017,8018	CCSRCH102J50
C	8011,8012	CKSRYB474K10
C	8014	CEHAS101M10
C	8024,8025	CCSRCH100D50
C	8027,8029,8036,8040	CKSRYB104K16
C	8046,8047,8057,8058	CKSRYB103K50
C	8060	CCSRCH121J50
C	8074	CKSRYB273K16
C	8075	CKSRYB104K16
C	8076	CKSRYB103K50

J KSWB ASSY SEMICONDUCTORS

Q	8501,8504	LTC123JUB
D	8501,8502	SLI-343Y8Y(KLM)
D	8503,8504	SLI-343M8G(GHJ)

MISCELLANEOUS

S	8501,8502	TACT SWITCH	DSG1117
S	8504-8507	SWITCH	VSG1024
CN	8501	7P JUMPER CONNECTOR	52151-0710

RESISTORS

R 8505	RS1/8SQ0R0J
Other Resistors	RS1/10SR###J

Mark No.	Description	Part No.
----------	-------------	----------

K PSWB ASSY

MISCELLANEOUS

S 8801	PUSH SW	ASG1102
CN8801	3P JUMPER CONNECTOR	52147-0310

RESISTORS

All Resistors RS1/10SR###J**L SLDB ASSY**

MISCELLANEOUS

VR 8701	SLIDE VR	DCV1033
JH 8701	4P CABLE HOLDER	51048-0400

CAPACITORS

C 8702	CEJQ470M16
C 8703	CKSRYB104K16

M JOGB ASSY

MISCELLANEOUS

CN 9301 4P JUMPER CONNECTOR 52151-0410

RESISTORS

All Resistors RS1/10SB###I

MISCELLANEOUS

PC 9301 PHOTO INTERRUPTER KE-2K18-15

CAPACITORS

C 9301	CKSRYB104K16
C 9302	CKSRYB103K50

N JFLB ASSY

SEMICONDUCTORS

⚠	IC 9201	MM1856A33N
⚠	IC 9202	TLC555IP
⚠	IC 9203	NJM2374AD
	Q 9201,9202	KTC3198
	Q 9205	KTA1281

Q 9206	RHP020N06
D 9201	DZ2J062M0
D 9202,9213	DA2J101
D 9203	DZ2J068M0
D 9204	DB2J41100

D 9210-9212.9214 RB160M-60

MISCELLANEOUS

L 9201	POWER INDUCTOR	DTL1187
V 9201	FL INDICATOR TUBE	DEL1058
T 9201	POWER TRANSFORMER	DTT1232
CN9201	10P CONNECTOR	VKN1241
CN9203	CONNECTOR	CKS1072

0	FL HOLDER	DNF1735
JH 9202	4P CABLE HOLDER	51048-0400
JP 9202	JUMPER WIRE	D20PYY0405E
P 9201	PROTECTOR (1,000 A)	DEK1122

RESISTORS

R 9210,9215	RS1/4SA2R0J
R 9216,9217	RS1/4SA102J
B 9221	RS1/4SAB51J

Mark No.	Description	Part No.
----------	-------------	----------

R 9222,9223	RS1/4SA271J
R 9225	RS1/8SQ102J

R 9226	RS1/8SQ101J
R 9228	RS1/4SA103J
R 9229	RS1/10SR1201D
R 9230	RS1/10SR1602D
R 9231	RS1/10SR6802D

R 9232	RS1/10SR4302D
R 9233,9234	RS1/10SR2201D
R 9235	RS1/8SQ223J
R 9245	RS1/8SQ181J
Other Resistors	RS1/10SR###J

CAPACITORS

C 9202	CKSRYB223K50
C 9203	CEHAR470M16
C 9204,9226	CKSRYB104K16
C 9206	CEHAZL100M50
C 9207,9212,9215,9218	CKSRYB104K50

C 9208	CEHAR101M10
C 9209,9221	CEHAZL220M50
C 9213,9222-9225	CCSRCH101J50
C 9216	CEHAZL221M25-P35
C 9217	CCSRCH331J50

C 9219,9227	CKSRYB104K50
C 9229,9230	CKSRYB105K16
C 9231	CCSRCH221J50

POWER SUPPLY ASSY

There is no service parts.

P ACIN ASSY

MISCELLANEOUS

⚠	CN 9101	AC INLET/2P	DKP3943
⚠	JP 9101	BOARD IN JUMPER/2P	DKP3945