



EXPLODED VIEW (MECHANISM)

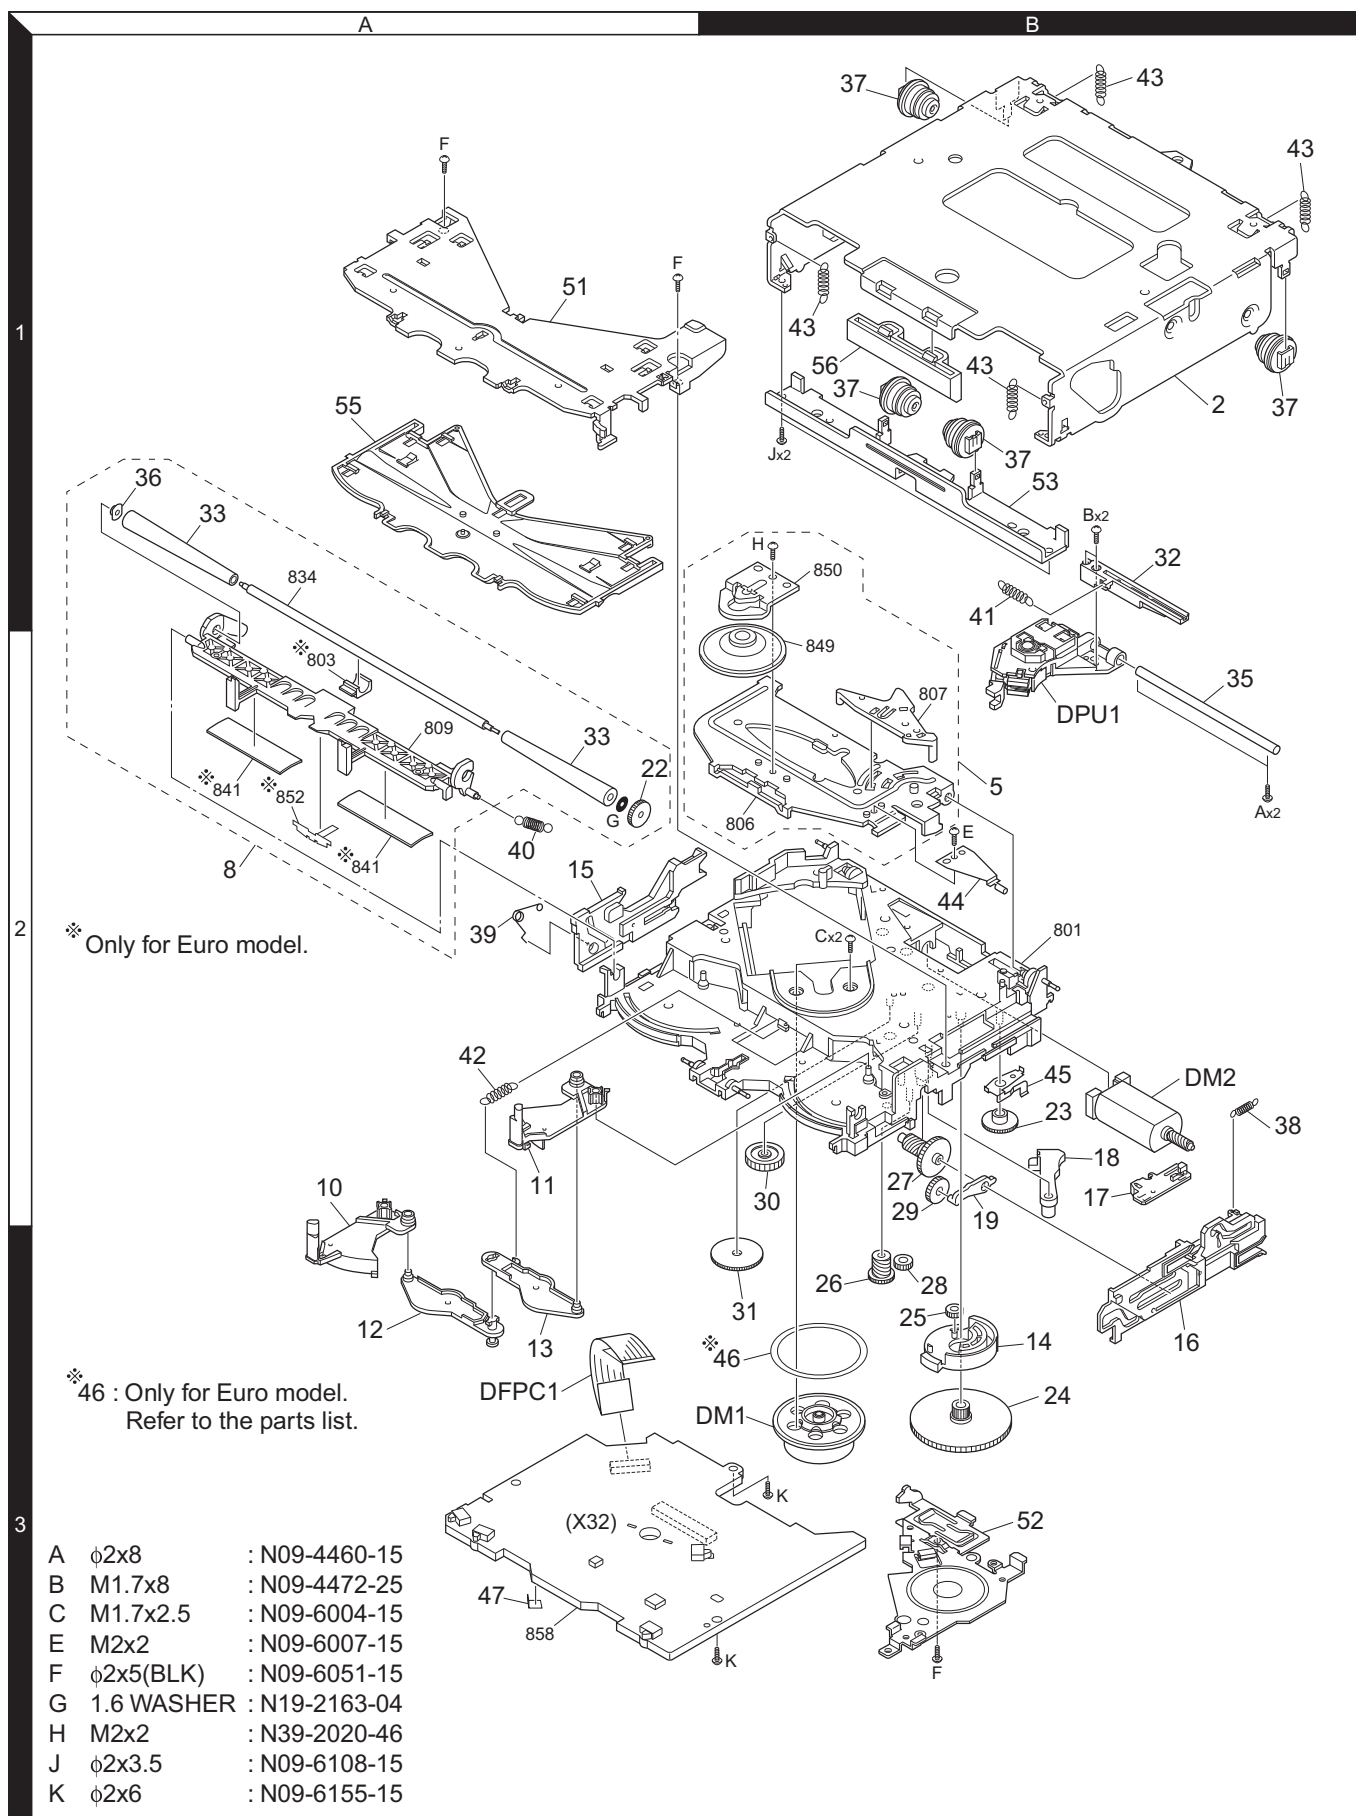

EXPLODED VIEW (UNIT)

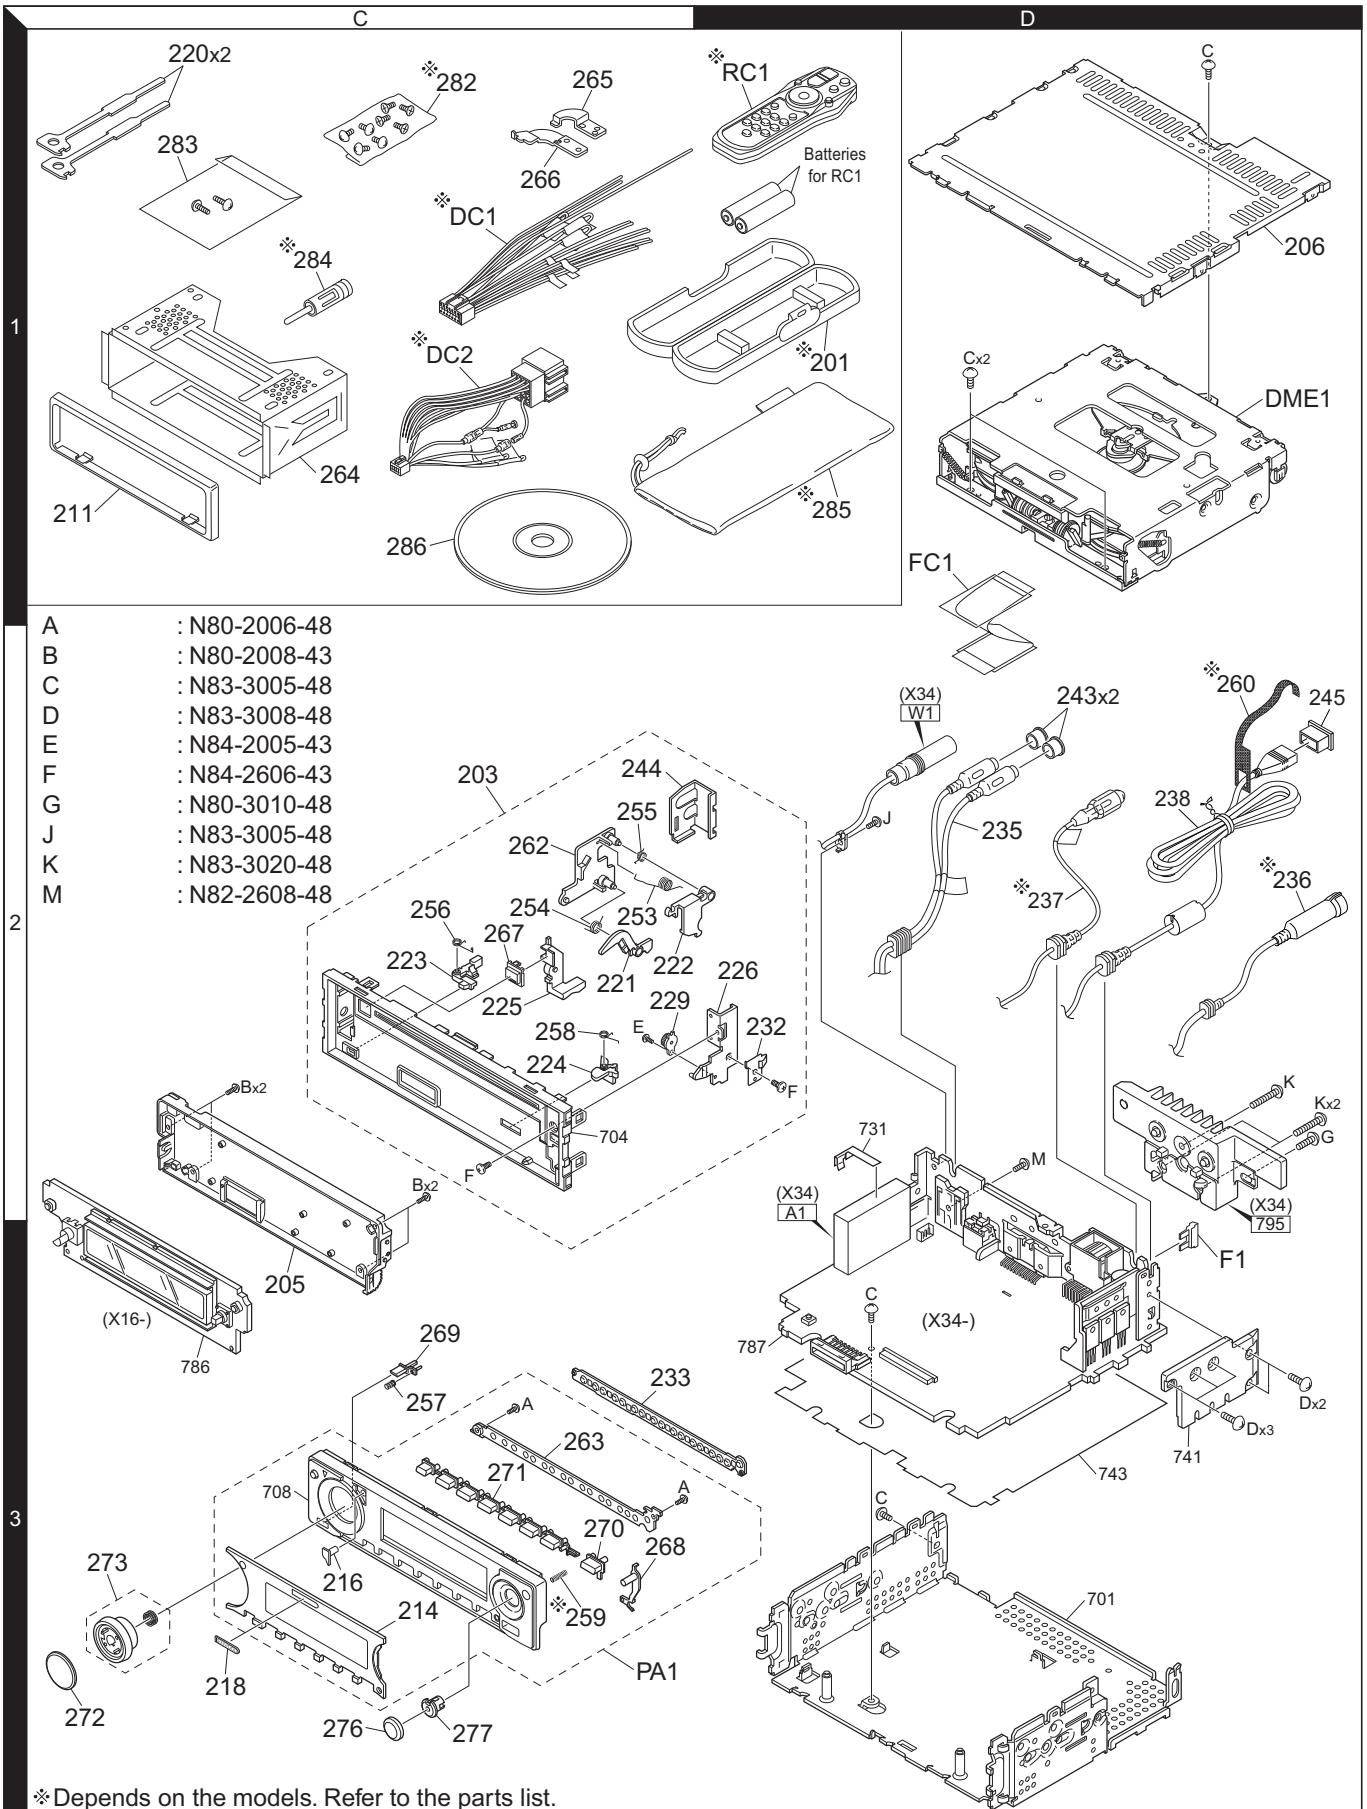

Parts with the exploded numbers larger than 700 are not supplied.

KDC-MP632U KDC-W6534U/UY/X590/X7533U

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP632U/W6534U/UY/X590/X7533U					
201	1D		A02-2743-03	PLASTIC CABINET ASSY	M1
203	2C		A22-3059-12	SUB PANEL ASSY	
205	3C	*	A46-1833-11	REAR COVER	
206	1D		A52-0862-02	TOP PLATE	
PA1	3C	*	A64-3759-01	PANEL ASSY	K
PA1	3C	*	A64-3760-01	PANEL ASSY	K1
PA1	3C	*	A64-3761-01	PANEL ASSY	M1
RC1	1D		A64-3762-01	PANEL ASSY	E1E2
			A70-2067-15	REMOTE CONTROLLER ASSY (RC-527)	KK1M1
-			B46-0612-14	ID CARD	M1E1E2
-			B46-0681-04	ID CARD	KK1
-			B46-0682-00	WARRANTY CARD	KK1M1
-			B46-0682-00	WARRANTY CARD	E1
-			B58-1426-04	CAUTION CARD	KK1
-		*	B59-1850-00	SUB-INSTRUCTION MANUAL	
-		*	B64-3343-00	INST. MANUAL (ENG.FRE.SPA)	KK1
-		*	B64-3344-00	INST. MANUAL (ENG.T-CHI)	M1
-		*	B64-3345-00	INST. MANUAL (ARABIC)	M1
-		*	B64-3346-00	INST. MANUAL (ENGLISH)	E1E2
-		*	B64-3347-00	INST. MANUAL (FRE.GER.DUT)	E1
-		*	B64-3348-00	INST. MANUAL (ITA.SPA.POR)	E1
-		*	B64-3349-00	INST. MANUAL (RUSSIAN)	E2
211	1C		B07-3125-01	ESCUTCHEON	KM1E1
211	1C		B07-3125-01	ESCUTCHEON	E2
211	1C		B07-3126-01	ESCUTCHEON	K1
214	3C	*	B10-4762-02	FRONT GLASS	K
214	3C	*	B10-4763-02	FRONT GLASS	K1
214	3C	*	B10-4764-02	FRONT GLASS	M1
214	3C	*	B10-4765-02	FRONT GLASS	E1E2
216	3C		B19-2364-04	LIGHTING BOARD (REMOTE)	
218	3C		B43-1518-04	BADGE	
220	1C		D10-4589-04	LEVER	
221	2C		D10-4865-03	LEVER (PUSH)	
222	2C		D10-4866-03	LEVER (HOOK)	
223	2C		D10-4867-04	LEVER (LOCK)	
224	2C		D10-4868-04	LEVER (DETECT)	
225	2C		D10-4869-03	LEVER (EJECT)	
226	2D		D10-4870-04	ARM ASSY	
229	2C		D39-0255-05	DAMPER	
232	2D		E29-2028-04	LEAD PLATE	
233	3C	*	E29-2067-03	CONDUCTIVE RUBBER	
235	2D		E30-6290-15	CORD WITH PINPLUG (PREOUT)	KM1
235	2D		E30-6291-15	CORD WITH PINPLUG (AUX)	K1E1E2
236	2D		E30-6420-05	CORD WITH DIN CONNECTOR (OPEL)	E1E2
237	2D	*	E30-6584-05	CORD WITH CONNECTOR (WIRED R.)	K
238	2D	*	E30-6588-05	CORD WITH CONNECTOR (USB) (1m)	
△ DC1	1C		E30-6408-05	DC CORD	KM1
△ DC1	1C		E30-6414-05	DC CORD	K1
△ DC2	1C		E30-6412-05	DC CORD	E1E2
FC1	1D	*	E39-0814-05	FLAT CABLE	
243	2D		F29-0626-04	INSULATING COVER (PREOUT/AUX)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
244	2C		F31-0716-04	REINFORCING HARDWARE	
245	2D	*	F29-0637-04	INSULATING COVER (USB)	
F1	3D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
253	2C		G01-3246-04	TORSION COIL SPRING	
254	2C		G01-3247-04	TORSION COIL SPRING	
255	2C		G01-3248-04	TORSION COIL SPRING	
256	2C		G01-3249-04	TORSION COIL SPRING	
257	3C	*	G01-4611-04	COMPRESSION SPRING (REL)	
258	2C		G01-3270-04	TORSION COIL SPRING	
259	3C	*	G01-3291-04	COMPRESSION SPRING	K1E1E2
-		*	H10-4983-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	KK1M1
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	E2
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1
-		*	H54-3711-03	ITEM CARTON CASE (KDC-X590)	K
-		*	H54-3712-03	ITEM CARTON CASE (KDC-MP632U)	K1
-		*	H54-3713-03	ITEM CARTON CASE (KDC-X7533U)	M1
-		*	H54-3714-03	ITEM CARTON CASE (KDC-W6534U)	E1
-		*	H54-3715-03	ITEM CARTON CASE (KDC-W6534UY)	E2
260	2D	*	H30-0594-04	MAGIC TAPE	KK1
262	2C		J19-7049-03	HOLDER	
263	3C	*	J19-7112-02	HOLDER	
264	1C		J22-0011-03	MOUNTING HARDWARE ASSY	
265	1C		J22-0258-04	MOUNTING HARDWARE (L)	
266	1C		J22-0259-04	MOUNTING HARDWARE (R)	
267	2C		K24-4282-04	PUSH KNOB (EJECT)	
268	3C	*	K24-4460-03	PUSH KNOB (AME)	KM1E1
268	3C	*	K24-4460-03	PUSH KNOB (AME)	E2
268	3C		K24-4461-03	PUSH KNOB (AME)	K1
269	3C	*	K24-4464-03	PUSH KNOB (RELEASE)	
270	3C		K24-4462-03	PUSH KNOB (SRC)	
271	3C	*	K25-1784-02	PUSH KNOB (PRESET)	
272	3C		K28-0103-03	KEY TOP (VOL)	
273	3C	*	K28-0167-03	KNOB ASSY (VOL)	E1E2
273	3C		K29-7200-03	KNOB ASSY (VOL)	KK1M1
276	3C		K28-0106-03	KEY TOP (FM/AM)	
277	3C	*	K28-0122-03	KNOB BASE (FM/AM)	
282	1C		N99-1757-05	SCREW SET	
283	1C	*	N99-1780-05	SCREW SET	KK1M1
A	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
B	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
C	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
D	3D		N83-3008-48	PAN HEAD TAPTITE SCREW	
E	2C		N84-2005-43	PAN HEAD TAPTITE SCREW	
F	2D		N84-2606-43	PAN HEAD TAPTITE SCREW	
284	1C		T90-0523-05	ANTENNA ADAPTOR	E1E2
285	1D		W01-1661-05	CARRYING CASE	K1E1E2
285	1D	*	W01-1664-05	CARRYING CASE	K
286	1C	*	W01-1673-05	COMPACT DISC	KK1M1
286	1C	*	W01-1674-05	COMPACT DISC	E1E2

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY

(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

KDC-MP632U/W6534U/UY/X590/X7533U

Ref. No.	Add	New	Parts No.	Description	Destination
DME1	1D	*	X92-5440-00	MECHANISM ASSY (DXM-6810W)	KK1M1
DME1	1D	*	X92-5440-04	MECHANISM ASSY (DXM-6814W)	E1E2
SWITCH UNIT (X16-374x-xx)					
D1-3			B30-1567-05	LED (1608,RED)	M1E1E2
D4-6			B30-1533-05	LED (1608,PG)	
D7-9			B30-1567-05	LED (1608,RED)	
D10-12			B30-1533-05	LED (1608,PG)	
D13-15			B30-1567-05	LED (1608,RED)	M1E1E2
D16-18			B30-1533-05	LED (1608,PG)	M1E1E2
D19			B30-1567-05	LED (1608,RED)	
D20-23			B30-1729-05	LED (1608,BLUE)	
D25			B30-1567-05	LED (1608,RED)	
D26			B30-1533-05	LED (1608,PG)	M1E1E2
D116			B30-1533-05	LED (1608,PG)	KM1
C8			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73GB1H104K	CHIP C 0.10UF K	
C13-16			CK73GB1H103K	CHIP C 0.010UF K	
C19,20			CK73GB1H104K	CHIP C 0.10UF K	
C27			CC73GCH1H471J	CHIP C 470PF J	
C28			CK73GB1H102K	CHIP C 1000PF K	
C29			CC73GCH1H471J	CHIP C 470PF J	
C31			CK73GB1H104K	CHIP C 0.10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0851-05	RECTANGULAR PLUG	
CP10,11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP14			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP15			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73EB2E101J	CHIP R 100 J 1/4W	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R3-9			RK73EB2E101J	CHIP R 100 J 1/4W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13,14			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R20			RK73GB2A101J	CHIP R 100 J 1/10W	
R23			RK73GB2A473J	CHIP R 47K J 1/10W	
R26			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A473J	CHIP R 47K J 1/10W	
R51			RK73FB2B471J	CHIP R 470 J 1/8W	
R52-54			RK73EB2E681J	CHIP R 680 J 1/4W	
R55,56			RK73EB2E301J	CHIP R 300 J 1/4W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R59,60			RK73EB2E821J	CHIP R 820 J 1/4W	
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1E1
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2
R66,67			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1E1E2
R67			RK73GB2A472J	CHIP R 4.7K J 1/10W	K
R73			RK73PB2H2R2J	CHIP R 2.2 J 1/2W	
R80			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R81			RK73GB2A223J	CHIP R 22K J 1/10W	KM1
R101			RK73GB2A473J	CHIP R 47K J 1/10W	
R106			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R107			RK73GB2A103J	CHIP R 10K J 1/10W	
Ref. No.	Add	New	Parts No.	Description	Destination
R108			RK73GB2A301J	CHIP R 300 J 1/10W	KM1
R109			RK73GB2A223J	CHIP R 22K J 1/10W	KM1
R110			RK73GB2A472J	CHIP R 4.7K J 1/10W	KM1
R112			RK73GB2A104J	CHIP R 100K J 1/10W	
W5			R92-1252-05	CHIP R 0 OHM J 1/16W	
W7,8			R92-1252-05	CHIP R 0 OHM J 1/16W	K1
W8			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2
S2			S70-0106-05	TACT SWITCH	
S10	*		S70-0939-05	TACT SWITCH	
S27	*		S70-0939-05	TACT SWITCH	
S1			T99-0457-15	ROTARY ENCODER	
D102			UDZS5.6B	ZENER DIODE	KM1
D110			DA204U	DIODE	
D115			DAN222	DIODE	
ED1			3-BT-235INK	FLUORESCENT INDICATOR TUBE	
IC2			PNA4S22M02KW	ANALOGUE IC	
Q4			RT1P141U	TRANSISTOR	M1E1E2
Q5			2SC4617	TRANSISTOR	
Q10			2SC4617	TRANSISTOR	
Q12-14			2SA1774	TRANSISTOR	
Q15			2SC4617	TRANSISTOR	KM1E1
Q15			2SC4617	TRANSISTOR	E2
Q18,19			2SC4617	TRANSISTOR	KM1
Q20			DTC144EE	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-5830-00)					
C3			CK73GB1A105K	CHIP C 1.0UF K	
C5			CK73GB1A105K	CHIP C 1.0UF K	
C7			CK73GB0J225K	CHIP C 2.2UF K	
C8			CK73GB1A105K	CHIP C 1.0UF K	
C12-14			CK73GB1H104K	CHIP C 0.10UF K	
C17,18			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1H102K	CHIP C 1000PF K	
C25,26			CK73GB1H104K	CHIP C 0.10UF K	
C28			CK73FB0J106K	CHIP C 10UF K	
C29			CK73GB1H104K	CHIP C 0.10UF K	
C30			CK73GB1H152K	CHIP C 1500PF K	
C31			CC73GCH1H470J	CHIP C 47PF J	
C32			CK73GB1H104K	CHIP C 0.10UF K	
C33			CK73GB0J225K	CHIP C 2.2UF K	
C34			CC73GCH1H560J	CHIP C 56PF J	
C35,36			CK73GB1H104K	CHIP C 0.10UF K	
C37			CK73GB1H102K	CHIP C 1000PF K	
C38			CK73GB1H682K	CHIP C 6800PF K	
C39			CK73GB1H104K	CHIP C 0.10UF K	
C40			CK73GB1A105K	CHIP C 1.0UF K	
C41			CK73GB0J225K	CHIP C 2.2UF K	
C44			CK73GB1A105K	CHIP C 1.0UF K	
C46			CK73GB1H682K	CHIP C 6800PF K	
C47			CK73GB1H104K	CHIP C 0.10UF K	
C48			CC73GCH1H040C	CHIP C 4.0PF C	
C49			CK73GB1H332K	CHIP C 3300PF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CC73GCH1H330J	CHIP C 33PF J	

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C52			CK73FB1A225K	CHIP C 2.2UF K		CP27-30			RK74HB1J100J	CHIP-COM 10 J 1/16W	
C53			CK73GB0J225K	CHIP C 2.2UF K		CP31			RK74GA1J101J	CHIP-COM 100 J 1/16W	
C54,55			CK73GB1H103K	CHIP C 0.010UF K		CP50			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
C56,57			CC73GCH1H391J	CHIP C 390PF J		CP52			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
C58			CK73GB1H472K	CHIP C 4700PF K		CP53			RK74GA1J473J	CHIP-COM 47K J 1/16W	
C59-62			CK73GB1H102K	CHIP C 1000PF K		CP56,57			RK74GA1J103J	CHIP-COM 10K J 1/16W	
C63			CK73GB1H152K	CHIP C 1500PF K		CP300			RK74HB1J680J	CHIP-COM 68 J 1/16W	
C64,65			CK73GB1H104K	CHIP C 0.10UF K		CP301		*	RK74GA1J680J	CHIP-COM 68 J 1/16W	
C66,67			CC73GCH1H100D	CHIP C 10PF D		CP302,303			RK74HB1J101J	CHIP-COM 100 J 1/16W	
C69			CK73FB0J106K	CHIP C 10UF K		R1			RK73GB2A225J	CHIP R 2.2M J 1/10W	
C73			CK73GB1H104K	CHIP C 0.10UF K		R2,3			RK73GB2A223J	CHIP R 22K J 1/10W	
C76,77			CK73GB1H104K	CHIP C 0.10UF K		R5			RK73GB2A101J	CHIP R 100 J 1/10W	
C78			CC73GCH1H151J	CHIP C 150PF J		R6			RK73GH2A223D	CHIP R 22K D 1/10W	
C80			CC73GCH1H151J	CHIP C 150PF J		R7			RK73GB2A223J	CHIP R 22K J 1/10W	
C82			CC73GCH1H681J	CHIP C 680PF J		R8			RK73GH2A393D	CHIP R 39K D 1/10W	
C84			CC73GCH1H681J	CHIP C 680PF J		R9			RK73GB2A223J	CHIP R 22K J 1/10W	
C85			CK73GB1H104K	CHIP C 0.10UF K		R10			RK73GB2A101J	CHIP R 100 J 1/10W	
C86			CK73GB1A105K	CHIP C 1.0UF K		R11			RK73GB2A220J	CHIP R 22 J 1/10W	
C87			CK73GB0J475K	CHIP C 4.7UF K		R12			RK73GB2A223J	CHIP R 22K J 1/10W	
C88			CK73GB1H473K	CHIP C 0.047UF K		R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C89			CK73GB1A105K	CHIP C 1.0UF K		R15			RK73GB2A223J	CHIP R 22K J 1/10W	
C91			CK73GB1H104K	CHIP C 0.10UF K		R17			RK73GB2A221J	CHIP R 220 J 1/10W	
C93-98			CK73GB1H104K	CHIP C 0.10UF K		R18			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C99			CC73GCH1H060D	CHIP C 6.0PF D		R19			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C100			CC73GCH1H020C	CHIP C 2.0PF C		R20			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C101			CK73GB1H104K	CHIP C 0.10UF K		R21,22			RK73GB2A104J	CHIP R 100K J 1/10W	
C102			CK73GB1H102K	CHIP C 1000PF K		R23			RK73GB2A103J	CHIP R 10K J 1/10W	
C103			CK73GB1H103K	CHIP C 0.010UF K		R24			RK73GB2A104J	CHIP R 100K J 1/10W	
C305-308			CK73GB1H103K	CHIP C 0.010UF K		R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C309			CK73GB1H222K	CHIP C 2200PF K		R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C310			CK73GB1H103K	CHIP C 0.010UF K		R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C311,312			CC73GCH1H060D	CHIP C 6.0PF D		R35			RK73GB2A104J	CHIP R 100K J 1/10W	
C313			CK73GB1H103K	CHIP C 0.010UF K		R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
C315			CK73GB1H104K	CHIP C 0.10UF K		R37			RK73GB2A103J	CHIP R 10K J 1/10W	
C316			CK73GB1H103K	CHIP C 0.010UF K		R40			RK73GB2A274J	CHIP R 270K J 1/10W	
C317,318			CK73GB1H102K	CHIP C 1000PF K		R41			RK73GB2A103J	CHIP R 10K J 1/10W	
C319			CK73GB1A105K	CHIP C 1.0UF K		R42			RK73GB2A101J	CHIP R 100 J 1/10W	
C320			CC73GCH1H070D	CHIP C 7.0PF D		R43			RK73GB2A393J	CHIP R 39K J 1/10W	
CN1		*	E41-2630-05	FLAT CABLE CONNECTOR		R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
CN2			E41-2612-05	FLAT CABLE CONNECTOR		R48			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L1		*	L92-0615-05	CHIP FERRITE		R50			RK73GB2A101J	CHIP R 100 J 1/10W	
X1			L77-2863-05	CRYSTAL RESONATOR (16.899MHZ)		R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
X2		*	L78-1215-05	RESONATOR (11.500MHZ)		R52			RK73GB2A163J	CHIP R 16K J 1/10W	
X3		*	L77-2923-05	CRYSTAL RESONATOR (6.000MHZ)		R53			RK73GB2A123J	CHIP R 12K J 1/10W	
						R54			RK73GB2A333J	CHIP R 33K J 1/10W	
CP2			RK74GA1J101J	CHIP-COM 100 J 1/16W		R55			RK73GB2A103J	CHIP R 10K J 1/10W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W		R56			RK73GB2A123J	CHIP R 12K J 1/10W	
CP7			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
CP10			RK74HB1J103J	CHIP-COM 10K J 1/16W		R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CP11			RK74HB1J472J	CHIP-COM 4.7K J 1/16W		R60			RK73GB2A123J	CHIP R 12K J 1/10W	
CP16			RK74HB1J104J	CHIP-COM 100K J 1/16W		R61			RK73GB2A183J	CHIP R 18K J 1/10W	
CP19			RK74GA1J103J	CHIP-COM 10K J 1/16W		R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
CP20-23		*	RK74HB1J153J	CHIP-COM 15K J 1/16W		R63			RK73GB2A133J	CHIP R 13K J 1/10W	
CP24,25			RK74HB1J100J	CHIP-COM 10 J 1/16W		R64			RK73GB2A151J	CHIP R 150 J 1/10W	
CP26		*	RK74GA1J100J	CHIP-COM 10 J 1/16W		R67,68			RK73GB2A152J	CHIP R 1.5K J 1/10W	

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5830-00)

Ref. No.	Add	New	Parts No.	Description	Destination
R69			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R71-73			RK73GB2A101J	CHIP R 100 J 1/10W	
R109			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R110			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R112			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R115			RK73GH2A822D	CHIP R 8.2K D 1/10W	
R116			RK73GH2A682D	CHIP R 6.8K D 1/10W	
R118,119			RK73GH2A100D	CHIP R 10 D 1/10W	
R121			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R132			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R133			RK73GB2A681J	CHIP R 680 J 1/10W	
R138			RK73GB2A101J	CHIP R 100 J 1/10W	
R142			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R144			RK73GB2A223J	CHIP R 22K J 1/10W	
R148			RK73GB2A103J	CHIP R 10K J 1/10W	
R151			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R152			RK73GB2A221J	CHIP R 220 J 1/10W	
R153			RK73GB2A100J	CHIP R 10 J 1/10W	
R154,155			RK73GB2A330J	CHIP R 33 J 1/10W	
R300,301			RK73GB2A680J	CHIP R 68 J 1/10W	
R302			RK73GB2A101J	CHIP R 100 J 1/10W	
R304			RK73GB2A101J	CHIP R 100 J 1/10W	
R306,307			RK73GB2A270J	CHIP R 27 J 1/10W	
R308-310			RK73GB2A153J	CHIP R 15K J 1/10W	
R311-316			RK73GB2A100J	CHIP R 10 J 1/10W	
R320-323			RK73GB2A101J	CHIP R 100 J 1/10W	
R336			RK73GB2A101J	CHIP R 100 J 1/10W	
R337			RK73GB2A153J	CHIP R 15K J 1/10W	
R339			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R345			RK73GB2A103J	CHIP R 10K J 1/10W	
R346			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R348			RK73GB2A223J	CHIP R 22K J 1/10W	
R351			RK73GB2A103J	CHIP R 10K J 1/10W	
R353			RK73GB2A473J	CHIP R 47K J 1/10W	
R358,359			RK73GB2A473J	CHIP R 47K J 1/10W	
R361			RK73GB2A223J	CHIP R 22K J 1/10W	
R363			RK73GB2A223J	CHIP R 22K J 1/10W	
R366			RK73GB2A101J	CHIP R 100 J 1/10W	
R368			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R369			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R370			RK73GB2A101J	CHIP R 100 J 1/10W	
R371			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R372,373			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	
R374			RK73GB2A473J	CHIP R 47K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D2			DA204U	DIODE	
D3			DAN202U	DIODE	
D9			DA204U	DIODE	
IC1		*	M30620FCPPG	MICROCONTROLLER IC	
IC2			UPD63712GC	MOS-IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC4			BA5824FP	ANALOGUE IC	
IC5		*	BD33KA5WFP-E2	ANALOGUE IC	
IC13		*	NJM2100V-ZB	ANALOGUE IC	
IC14			TAR5S50-F	ANALOGUE IC	
IC15			CS7410-IQZ	MOS-IC	
IC16		*	IC42S164007TIG	DRAM IC	
IC17		*	29LV800CBT19V1	ROM IC	
IC18			PCM1754DB	MOS-IC	
IC19		*	R1114N331B-TR	ANALOGUE IC	
IC20		*	S-1132B18U5T1G	ANALOGUE IC	
IC21		*	BD33KA5WFP-E2	ANALOGUE IC	
IC25		*	TDUHC1240F0C00	MOS-IC	
IC26		*	TC74LCX00FT-F	MOS-IC	
IC28		*	TC7WH125FK-F	MOS-IC	
Q3			UMD9N	TRANSISTOR	
Q6			UMD12N	TRANSISTOR	
Q7			DTC124EE	DIGITAL TRANSISTOR	
Q8			2SB0970	TRANSISTOR	
Q9			DTC114YE	DIGITAL TRANSISTOR	
Q10			DTC114YUA	DIGITAL TRANSISTOR	
Q17			DTA143XUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-415x-xx)					
D302			B30-1710-05	LED (RED)	
C1			C90-6746-05	ELECTRO 3300UF 16WV	
C2			CC73GCH1H070D	CHIP C 7.0PF D	
C3			C90-5692-05	ELECTRO 220UF 16WV	
C5			CD04AS1V100M	ELECTRO 10UF 35WV	
C6			CD04AS0J101M	ELECTRO 100UF 6.3WV	
C7			CK73FB1C105K	CHIP C 1.0UF K	
C8			CD04AT1A221M	ELECTRO 220UF 10WV	
C9			CD04BA1C101M	ELECTRO 100UF 16WV	
C10			CK73EB1E105K	CHIP C 1.0UF K	
C11			CD04AS1HR47M	ELECTRO 0.47UF 50WV	
C12			CD04BF1V470M	ELECTRO 47UF 35WV	
C13			CK73GB1H104K	CHIP C 0.10UF K	
C14			CD04AS1C101M	ELECTRO 100UF 16WV	
C15			CD04AS1C220M	ELECTRO 22UF 16WV	
C16			CD04AS1C470M	ELECTRO 47UF 16WV	
C18			CD04BF1E101M	ELECTRO 100UF 25WV	
C20			CD04BK1A221M	ELECTRO 220UF 10WV	
C24			CK73GB1A334K	CHIP C 0.33UF K	
C25			CD04AS1C220M	ELECTRO 22UF 16WV	
C40,41			CC73GCH1H070D	CHIP C 7.0PF D	
C45			CK73GB1H104K	CHIP C 0.10UF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C53			CK73GB1H104K	CHIP C 0.10UF K	
C101			CD04AS1H3R3M	ELECTRO 3.3UF 50WV	
C102			CK73GB1A105K	CHIP C 1.0UF K	
C103			CK73GB1H104K	CHIP C 0.10UF K	
C104			CK73GB1H103K	CHIP C 0.010UF K	
C105			CK73GB1H223K	CHIP C 0.022UF K	
C106			CK73GB1A105K	CHIP C 1.0UF K	
C109-111			CK73GB1H103K	CHIP C 0.010UF K	

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C201 C202 C203,204 C205 C206,207			CD04AS0J470M CK73GB1H103K CC73GCH1H220J CK73GB1H104K CK73GB1H103K	ELECTRO 47UF 6.3WV CHIP C 0.010UF K CHIP C 22PF J CHIP C 0.10UF K CHIP C 0.010UF K	△	CN4 CN5 J1 J2 J3			E41-2446-05 E41-0944-05 E58-0991-05 E56-0855-05 E63-0896-05	PIN ASSY PIN ASSY RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE PIN JACK	KE1E2 K1E1E2
C208 C209 C210,211 C302 C304,305			CK73GB1H102K CK73GB1H103K CK73GB1H471K CK73GB1H103K CK73GB1H103K	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 470PF K CHIP C 0.010UF K CHIP C 0.010UF K		J3 J4 W1	2D		E63-0897-05 E58-0992-05 E30-6218-15	PIN JACK RECTANGULAR RECEPTACLE CORD WITH PLUG	KM1
C306 C307 C308 C309 C310			CD04AS1V100M CK73GB1H103K CD04AS1V100M CK73GB1H103K CD04BF1V470M	ELECTRO 10UF 35WV CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 0.010UF K ELECTRO 47UF 35WV		L1 L3 L201 L203 L301		*	L33-2319-05 L33-2335-05 L41-4795-33 L92-0339-05 L33-2260-05	CHOKO COIL ASSY CHOKO COIL SMALL FIXED INDUCTOR (4.7UH) CHIP FERRITE CHOKO COIL	
C311 C312 C313 C323 C343			CK73GB1H103K CD04BK1C101M CD04AS1V100M CK73GB1H103K CK73GB1H104K	CHIP C 0.010UF K ELECTRO 100UF 16WV ELECTRO 10UF 35WV CHIP C 0.010UF K CHIP C 0.10UF K	K1E1E2	L302-304 L306 L307 X1 X2		*	L41-4795-33 L41-4795-33 L92-0616-05 L77-2880-05 L78-0872-05	SMALL FIXED INDUCTOR (4.7UH) SMALL FIXED INDUCTOR (4.7UH) CHIP FERRITE CRYSTAL RESONATOR (32.768KHZ) RESONATOR (12MHZ)	E1E2
C347 C350 C351 C352 C353			CK73GB1H102K CC73GCH1H331J CK73GB1H103K CK73GB0J225K CD04AS1V100M	CHIP C 1000PF K CHIP C 330PF J CHIP C 0.010UF K CHIP C 2.2UF K ELECTRO 10UF 35WV	E1E2 E1E2 E1E2 E1E2	X3			L77-2002-05	CRYSTAL RESONATOR (4.332MHZ)	E1E2
C354,355 C401 C402,403 C404 C406,407			CC73GCH1H120J CD04AS1C470M CD04AS1H010M CK73GB1A105K CK73FB1A335K	CHIP C 12PF J ELECTRO 47UF 16WV ELECTRO 1UF 50WV CHIP C 1.0UF K CHIP C 3.3UF K	E1E2	G J K M	2D 2D 2D 2D		N80-3010-48 N83-3005-48 N83-3020-48 N82-2608-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
C408,409 C411 C412 C413,414 C415,416			CK73FB1C105K CD04AS1H2R2M CD04AS1V100M CK73FB1E474K CD04AS1H2R2M	CHIP C 1.0UF K ELECTRO 2.2UF 50WV ELECTRO 10UF 35WV CHIP C 0.47UF K ELECTRO 2.2UF 50WV	KK1M1 KM1	CP201,202 CP203 CP206 CP207 CP209			RK74GB1J101J RK74GA1J471J RK74GB1J222J RK74GB1J102J RK74GB1J101J	CHIP-COM 100 J 1/16W CHIP-COM 470 J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 100 J 1/16W	
C417-420 C417-422 C423,424 C426,427 C428			CD04AS1V100M CD04AS1V100M CC73GCH1H070D CK73FB1E474K CD04AS0J470M	ELECTRO 10UF 35WV ELECTRO 10UF 35WV CHIP C 7.0PF D CHIP C 0.47UF K ELECTRO 47UF 6.3WV	K1E1E2 KM1 K1E1E2 K1E1E2	R1 R3 R4 R5 R7			RK73FB2B153J RK73GB2A223J RK73GB2A472J RK73FB2B221J RK73GH2A243D	CHIP R 15K J 1/8W CHIP R 22K J 1/10W CHIP R 4.7K J 1/10W CHIP R 220 J 1/8W CHIP R 24K D 1/10W	
C429 C431 C440 C501 C503-506		*	CK73GB1H103K CD04AS1V100M CC73GCH1H070D CK73FB1C105K C90-6779-05	CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 7.0PF D CHIP C 1.0UF K ELECTRO 0.47UF 16WV	K1E1E2	R8 R9 R10 R11 R12			RK73GH2A432D RK73FB2B152J RK73FB2B222J RK73GH2A273D RK73GH2A332D	CHIP R 4.3K D 1/10W CHIP R 1.5K J 1/8W CHIP R 2.2K J 1/8W CHIP R 27K D 1/10W CHIP R 3.3K D 1/10W	
C429 C431 C440 C501 C503-506		*	CK73GB1H103K CD04AS1V100M CC73GCH1H070D CK73FB1C105K C90-6779-05	CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 7.0PF D CHIP C 1.0UF K ELECTRO 0.47UF 16WV	K1E1E2	R13 R17,18 R20 R21 R22			RK73GB2A102J RK73GB2A223J RK73GB2A473J RK73GB2A103J RK73PB2H220J	CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 22 J 1/2W	KM1
C507 C510,511 C512 C513 C529,530			CK73FB1C105K CK73FB1E474K CD04AS0J470M CK73GB1H103K C90-6711-05	CHIP C 1.0UF K CHIP C 0.47UF K ELECTRO 47UF 6.3WV CHIP C 0.010UF K ELECTRO 1UF 50WV		R23 R24 R25,26 R27 R28,29			RK73GB2A102J RK73GB2A513J RK73GB2A102J RK73GB2A221J RK73GB2A2R2J	CHIP R 1.0K J 1/10W CHIP R 51K J 1/10W CHIP R 1.0K J 1/10W CHIP R 220 J 1/10W CHIP R 2.2 J 1/10W	KM1 KM1 KM1 KM1 KM1
C802 C999			CK73GB1H102K CD04BM1E330M	CHIP C 1000PF K ELECTRO 33UF 25WV		R30 R41 R42 R43,44 R45		*	RK73GB2A332J RK73GB2A201J RK73GB2A121J R92-5110-05 RK73GB2A473J	CHIP R 3.3K J 1/10W CHIP R 200 J 1/10W CHIP R 120 J 1/10W CHIP R 2.7 J 3/4W CHIP R 47K J 1/10W	KM1
CN1 CN2		*	E41-2629-05 E41-0944-05	FLAT CABLE CONNECTOR PIN ASSY							

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R46-51		*	R92-5110-05	CHIP R 2.7 J 3/4W		R240			RK73GB2A101J	CHIP R 100 J 1/10W	
R52			RK73GH2A472D	CHIP R 4.7K D 1/10W		R241			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1
R53			RK73GH2A332D	CHIP R 3.3K D 1/10W		R241,242			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1E1
R55		*	R92-5110-05	CHIP R 2.7 J 3/4W		R241,242			RK73GB2A222J	CHIP R 2.2K J 1/10W	E2
R56			RK73GB2A153J	CHIP R 15K J 1/10W		R243			RK73GB2A473J	CHIP R 47K J 1/10W	K1
R57		*	R92-5110-05	CHIP R 2.7 J 3/4W		R244			RK73GB2A473J	CHIP R 47K J 1/10W	KM1
R101			RK73EB2E102J	CHIP R 1.0K J 1/4W	KM1E1	R244,245			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2
R101			RK73EB2E102J	CHIP R 1.0K J 1/4W	E2	R246			RK73GB2A473J	CHIP R 47K J 1/10W	KK1
R102,103			RK73EB2E103J	CHIP R 10K J 1/4W		R246,247			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R104			RK73EB2E472J	CHIP R 4.7K J 1/4W		R248-250			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1
R105			RK73PB2H221J	CHIP R 220 J 1/2W	KK1M1	R248-250			RK73GB2A473J	CHIP R 47K J 1/10W	E2
R106			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1	R249,250			RK73GB2A473J	CHIP R 47K J 1/10W	M1
R107			RK73FB2B472J	CHIP R 4.7K J 1/8W		R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R108			R92-5024-05	CHIP R 1K J 1/2W		R257,258			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R109			RK73GB2A223J	CHIP R 22K J 1/10W		R259,260			RK73GB2A104J	CHIP R 100K J 1/10W	
R110			R92-5024-05	CHIP R 1K J 1/2W		R261			RK73GB2A333J	CHIP R 33K J 1/10W	
R111			RK73FB2B561J	CHIP R 560 J 1/8W	KM1E1	R262,263			RK73GB2A473J	CHIP R 47K J 1/10W	
R111			RK73FB2B561J	CHIP R 560 J 1/8W	E2	R270			RK73GB2A473J	CHIP R 47K J 1/10W	
R112			RK73GB2A223J	CHIP R 22K J 1/10W		R301			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R113			RK73GB2A473J	CHIP R 47K J 1/10W		R302,303			RK73EB2E101J	CHIP R 100 J 1/4W	
R114			RK73GB2A104J	CHIP R 100K J 1/10W		R304			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R115			RK73FB2B683J	CHIP R 68K J 1/8W		R305-309			RK73EB2E101J	CHIP R 100 J 1/4W	
R116			RK73GB2A393J	CHIP R 39K J 1/10W		R310			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R117			RK73FB2B203J	CHIP R 20K J 1/8W		R311			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R118			RK73GB2A104J	CHIP R 100K J 1/10W		R312			RK73GB2A473J	CHIP R 47K J 1/10W	
R122,123			RK73GB2A103J	CHIP R 10K J 1/10W		R313			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R124			RK73GB2A104J	CHIP R 100K J 1/10W		R316			RK73GB2A104J	CHIP R 100K J 1/10W	
R125			RK73GB2A223J	CHIP R 22K J 1/10W		R317			RK73GB2A471J	CHIP R 470 J 1/10W	
R126			RD14DB2H332J-T	SMALL-RD 3.3K J 1/2W		R318			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R127			RK73EB2E333J	CHIP R 33K J 1/4W		R320			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R128			RK73GB2A103J	CHIP R 10K J 1/10W		R321			RK73GB2A223J	CHIP R 22K J 1/10W	
R130			RK73GB2A102J	CHIP R 1.0K J 1/10W		R322			RK73GB2A471J	CHIP R 470 J 1/10W	
R131			RK73GB2A473J	CHIP R 47K J 1/10W		R323			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R132			RK73PB2H221J	CHIP R 220 J 1/2W	KK1M1	R324			RK73GB2A471J	CHIP R 470 J 1/10W	
R201			RK73GB2A222J	CHIP R 2.2K J 1/10W		R325			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R202			RK73GB2A225J	CHIP R 2.2M J 1/10W		R327			RK73GB2A681J	CHIP R 680 J 1/10W	
R203			RK73GB2A104J	CHIP R 100K J 1/10W		R329-331			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2
R204			RK73GB2A102J	CHIP R 1.0K J 1/10W		R332			RK73GB2A241J	CHIP R 240 J 1/10W	
R206			RK73GB2A102J	CHIP R 1.0K J 1/10W		R333			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2
R207			RK73GB2A103J	CHIP R 10K J 1/10W		R336			RK73GB2A104J	CHIP R 100K J 1/10W	
R208			RK73GB2A102J	CHIP R 1.0K J 1/10W		R337,338			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R210			RK73GB2A473J	CHIP R 47K J 1/10W		R339			RK73GB2A474J	CHIP R 470K J 1/10W	
R211			RK73GB2A102J	CHIP R 1.0K J 1/10W		R342			RK73GB2A471J	CHIP R 470 J 1/10W	
R212			RK73GB2A473J	CHIP R 47K J 1/10W		R401			RK73GB2A103J	CHIP R 10K J 1/10W	
R215			RK73GB2A104J	CHIP R 100K J 1/10W		R402,403			RK73GB2A331J	CHIP R 330 J 1/10W	
R216			RK73GB2A102J	CHIP R 1.0K J 1/10W		R404,405			RK73GB2A223J	CHIP R 22K J 1/10W	
R220			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2	R406,407			RK73GB2A331J	CHIP R 330 J 1/10W	
R221			RK73GB2A104J	CHIP R 100K J 1/10W		R408,409			RK73GB2A223J	CHIP R 22K J 1/10W	
R224			RK73GB2A473J	CHIP R 47K J 1/10W		R410,411			RK73GB2A331J	CHIP R 330 J 1/10W	KM1
R227,228			RK73GB2A472J	CHIP R 4.7K J 1/10W		R412,413			RK73GB2A223J	CHIP R 22K J 1/10W	KM1
R229,230			RK73GB2A473J	CHIP R 47K J 1/10W		R414-419			RK73FB2B181J	CHIP R 180 J 1/8W	KM1
R233			RK73GB2A101J	CHIP R 100 J 1/10W		R414,415			RK73FB2B181J	CHIP R 180 J 1/8W	K1E1E2
R234,235			RK73GB2A392J	CHIP R 3.9K J 1/10W		R420,421			RK73FB2B181J	CHIP R 180 J 1/8W	K1E1E2
R236,237			RK73GB2A473J	CHIP R 47K J 1/10W		R422			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K1E1E2
R239			RK73GB2A222J	CHIP R 2.2K J 1/10W		R423,424			RK73EB2E100J	CHIP R 10 J 1/4W	K1E1E2

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R425			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1E1E2	D107			02DZ4.7F-Y	ZENER DIODE	
R426			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1	D108,109			02DZ6.8F-Y	ZENER DIODE	
R427			RK73GB2A472J	CHIP R 4.7K J 1/10W	KM1	D111			02DZ6.2F-Y	ZENER DIODE	
R428			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1	D301			IMSA-6802-E	SURGE ABSORBER	
R429			RK73GB2A473J	CHIP R 47K J 1/10W	KM1	D303			02DZ9.1F-Z	ZENER DIODE	
R430			RK73GB2A101J	CHIP R 100 J 1/10W		D304			IMSA-6802-E	SURGE ABSORBER	
R431			RK73GB2A100J	CHIP R 10 J 1/10W		D401-403			BAW56W	DIODE	
R432			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		D404			UDZS3.3B	ZENER DIODE	
R433,434			RK73GB2A101J	CHIP R 100 J 1/10W		D405,406			02DZ6.8F-Y	ZENER DIODE	K1E1E2
R435			RK73GB2A102J	CHIP R 1.0K J 1/10W		D407			02DZ5.6F-Y	ZENER DIODE	KM1
R442			RK73GB2A121J	CHIP R 120 J 1/10W		D408			DA204K	DIODE	
R501			RK73GB2A102J	CHIP R 1.0K J 1/10W		D411			BAW56W	DIODE	KM1
R503			RK73GB2A752J	CHIP R 7.5K J 1/10W		D412,413			UDZS5.6B	ZENER DIODE	KK1M1
R505			RK73GB2A432J	CHIP R 4.3K J 1/10W		D414			02DZ6.2F-Y	ZENER DIODE	K1E1E2
R506			RK73GB2A223J	CHIP R 22K J 1/10W		D500-502			BAW56W	DIODE	E1E2
R507			RK73GB2A221J	CHIP R 220 J 1/10W		D501,502			BAW56W	DIODE	KK1M1
R508			RK73EB2E472J	CHIP R 4.7K J 1/4W		D503,504			1SR154-400	DIODE	
R509			RK73EB2E101J	CHIP R 100 J 1/4W		D505,506			1SR139-400T64	DIODE	
R510			RK73EB2E472J	CHIP R 4.7K J 1/4W		D507-510			1SR154-400	DIODE	
R511-515			RK73EB2E101J	CHIP R 100 J 1/4W		D511-515			02DZ6.2F-Y	ZENER DIODE	K1M1
R516,517			RK73EB2E100J	CHIP R 10 J 1/4W		D511-523			02DZ6.2F-Y	ZENER DIODE	KE1E2
R518			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		D518-520			02DZ6.2F-Y	ZENER DIODE	K1M1
R519			RK73GB2A102J	CHIP R 1.0K J 1/10W		D523			02DZ6.2F-Y	ZENER DIODE	K1M1
R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1E1	IC1	*		30624MWWPA86GP	MICROCONTROLLER IC	
R520			RK73EB2E102J	CHIP R 1.0K J 1/4W	E2	IC2			E-TDA7415C	ANALOGUE IC	
R521-523			RK73EB2E471J	CHIP R 470 J 1/4W	E1E2	IC3			M5237ML-CF0J	ANALOGUE IC	
R524			RK73GB2A100J	CHIP R 10 J 1/10W		IC4			E-TDA7560A	ANALOGUE IC	
R530			RK73GB2A100J	CHIP R 10 J 1/10W		IC5			BA00CCWT-V5	ANALOGUE IC	
R531			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		IC6			SN74HC02APWR	MOS-IC	
W2,3			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2	IC7			S-80836CNNB-J	MOS-IC	
W3			R92-1252-05	CHIP R 0 OHM J 1/16W	KK1M1	IC8	*		MIC2026-1YM	MOS-IC	
W14			R92-2053-05	CHIP R 0 OHM J 1/8W	KM1	IC9			E-TDA7479AD	ANALOGUE IC	E1E2
W15			R92-2053-05	CHIP R 0 OHM J 1/8W	K1E1E2	IC10			BR24L04FV-W	ROM IC	
W16			R92-1252-05	CHIP R 0 OHM J 1/16W		IC11			TA75S558F-F	ANALOGUE IC	KM1
W17-20			R92-2053-05	CHIP R 0 OHM J 1/8W		IC12	*		SI-8050RF3NF	ANALOGUE IC	
W21			R92-1252-05	CHIP R 0 OHM J 1/16W		IC13			BA00CC0WFP	ANALOGUE IC	
W931			R92-1252-05	CHIP R 0 OHM J 1/16W		Q1			2SB1565	TRANSISTOR	
W997,998			R92-1252-05	CHIP R 0 OHM J 1/16W		Q2			KTC4075P (Y,GR)	TRANSISTOR	
S3			S74-0822-05	MICRO SWITCH		Q3,4			KTA2014P (Y,GR)	TRANSISTOR	
S4			S70-0931-05	TACT SWITCH		Q5			2SB1565	TRANSISTOR	
D1			S2V60*A	DIODE		Q6			DTA124EUA	DIGITAL TRANSISTOR	
D2			RB160L-40	DIODE		Q7			2SB1565	TRANSISTOR	
D3			02DZ5.6F-Y	ZENER DIODE		Q8			KTC4075P (Y,GR)	TRANSISTOR	
D4			02DZ8.2F-Y	ZENER DIODE		Q9-11			DTC124EUA	DIGITAL TRANSISTOR	
D5		*	02DZ20F-Y	ZENER DIODE		Q12			2SA1488NF	TRANSISTOR	
D6		*	PTZ4.7B	ZENER DIODE		Q13			KTA2014P (Y,GR)	TRANSISTOR	
D8			02DZ12F-X	ZENER DIODE	KM1	Q14,15			KTC4075P(Y,GR)	TRANSISTOR	KM1
D9			1SR154-400	DIODE	KM1	Q16			2SB1443	TRANSISTOR	
D10		*	RB081L-20	DIODE		Q17			DTC144EUA	DIGITAL TRANSISTOR	
D52,53			02DZ6.8F-Y	ZENER DIODE		Q21			KTC4075P (Y,GR)	TRANSISTOR	
D101			10EDA20	DIODE		Q101			2SB1188 (Q,R)	TRANSISTOR	KK1M1
D102-105			1SR154-400	DIODE		Q102			DTC114YUA	DIGITAL TRANSISTOR	KK1M1
D106			02DZ5.6F-Y	ZENER DIODE	KM1E1	Q103			2SB1188 (Q,R)	TRANSISTOR	
D106			02DZ5.6F-Y	ZENER DIODE	E2	Q104			KTA2014P (Y,GR)	TRANSISTOR	
						Q105			DTA114EUA	DIGITAL TRANSISTOR	

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-415x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
Q106			DTC114YUA	DIGITAL TRANSISTOR	KM1E1 E2	38	2B		G01-3072-04	EXTENSION SPRING	
Q107			DTA123JK	DIGITAL TRANSISTOR		39	2A		G01-3073-04	TORSION COIL SPRING	
Q107			DTA123JK	DIGITAL TRANSISTOR		40	2A		G01-3074-04	EXTENSION SPRING	
Q108			DTC144EUA	DIGITAL TRANSISTOR		41	1B		G01-3075-24	EXTENSION SPRING	
Q109			2SC4155A (Q,R,S)	TRANSISTOR		42	2A		G01-3076-04	EXTENSION SPRING	
Q111,112			2SC4155A (Q,R,S)	TRANSISTOR		43	1B		G01-3077-14	EXTENSION SPRING	
Q113			KTA2014P (Y,GR)	TRANSISTOR		44	2B		G02-1399-04	FLAT SPRING	
Q116			DTA124EUA	DIGITAL TRANSISTOR		45	2B		G02-1408-04	FLAT SPRING	
Q300			2SB1689	TRANSISTOR		46	3B		F09-1804-04	SHEET	
Q301			DTC124EUA	DIGITAL TRANSISTOR		47	3A	*	F09-2824-14	SHEET	
Q302			2SB1565	TRANSISTOR		51	1A		J21-9676-32	MOUNTING HARDWARE	
Q303			KTC4075P (Y,GR)	TRANSISTOR		52	3B		J21-9677-22	MOUNTING HARDWARE	
Q304			DTC114YUA	DIGITAL TRANSISTOR		53	1B		J21-9678-13	MOUNTING HARDWARE	
Q305			2SA1577	TRANSISTOR		55	1A		J90-1001-11	GUIDE	
Q306			DTC144EUA	DIGITAL TRANSISTOR		56	1B		J90-1023-03	GUIDE	
Q400-403			DTC143TUA	DIGITAL TRANSISTOR	K1E1E2 KM1 K1E1E2	DFPC1	3A		J86-0027-05	FPC (LEAD FREE)	
Q400-407			DTC143TUA	DIGITAL TRANSISTOR		A	2B		N09-4460-15	TAPTITE SCREW (PT2X8)	
Q406,407			DTC143TUA	DIGITAL TRANSISTOR		B	1B		N09-4472-25	MACHINE SCREW (M1.7X8.0)	
Q408			DTA124EUA	DIGITAL TRANSISTOR		C	2B		N09-6004-15	MACHINE SCREW (M1.7X2.5)	
TH1			PRF18BE471QS2	POSITIVE RESISTOR		E	2B		N09-6007-15	MACHINE SCREW (PAN M2X2)	
A1	2D	*	X86-4000-11	FRONT-END UNIT	KK1M1	F	1A		N09-6051-15	TAPTITE SCREW (BIND PT2X5)	
A1	2D	*	X86-4002-70	FRONT-END UNIT	E1E2	G	2A		N19-2163-04	FLAT WASHER (1.6X6X0.25)	
MECHANISM ASSY (X92-5440-00: K/K1/M1, X92-5440-04: E1/E2)						H	1B		N39-2020-46	PAN HEAD MACHINE SCREW (M2X2)	
2	1B		A10-4827-32	CHASSIS	E1E2 KK1M1	J	1B		N09-6108-15	TAPTITE SCREW (M2X3.5)	
5	2B		D10-4576-93	ARM ASSY		K	3B		N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
8	2A		D10-4787-63	LEVER ASSY		DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
8	2A	*	D10-4901-13	LEVER ASSY		DM2	2B		T42-1067-14	DC MOTOR (LOADING)	
10	2A		D10-4581-13	ARM		DPU1	2B		X93-2010-01	OPTICAL PICKUP ASSY (LEAD FREE)	
11	2A		D10-4582-13	ARM							
12	3A		D10-4583-03	ARM							
13	3A		D10-4584-03	ARM							
14	3B		D10-4585-03	ARM							
15	2A		D10-4586-13	SLIDER							
16	3B		D10-4587-52	SLIDER							
17	2B		D10-4588-13	SLIDER							
18	2B		D10-4595-04	ARM							
19	2B		D10-4596-24	ARM							
22	2A		D13-2151-04	GEAR							
23	2B		D13-2152-04	GEAR							
24	3B		D13-2153-04	GEAR							
25	3B		D13-2154-04	GEAR							
26	3B		D13-2155-04	WORM							
27	2B		D13-2156-14	GEAR							
28	3B		D13-2157-04	GEAR							
29	2B		D13-2158-04	GEAR							
30	2B		D13-2168-04	GEAR							
31	3B		D13-2171-04	GEAR							
32	1B		D13-2172-13	RACK (GEAR)							
33	2A		D14-0759-04	ROLLER							
35	2B		D21-2382-04	SHAFT							
36	1A		D23-0954-04	RETAINER							
37	1B		D39-0246-05	DAMPER							
37	1B		D39-0260-05	DAMPER							

K: KDC-X590 K1: KDC-MP632U M1: KDC-X7533U E1: KDC-W6534U E2: KDC-W6534UY
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.