

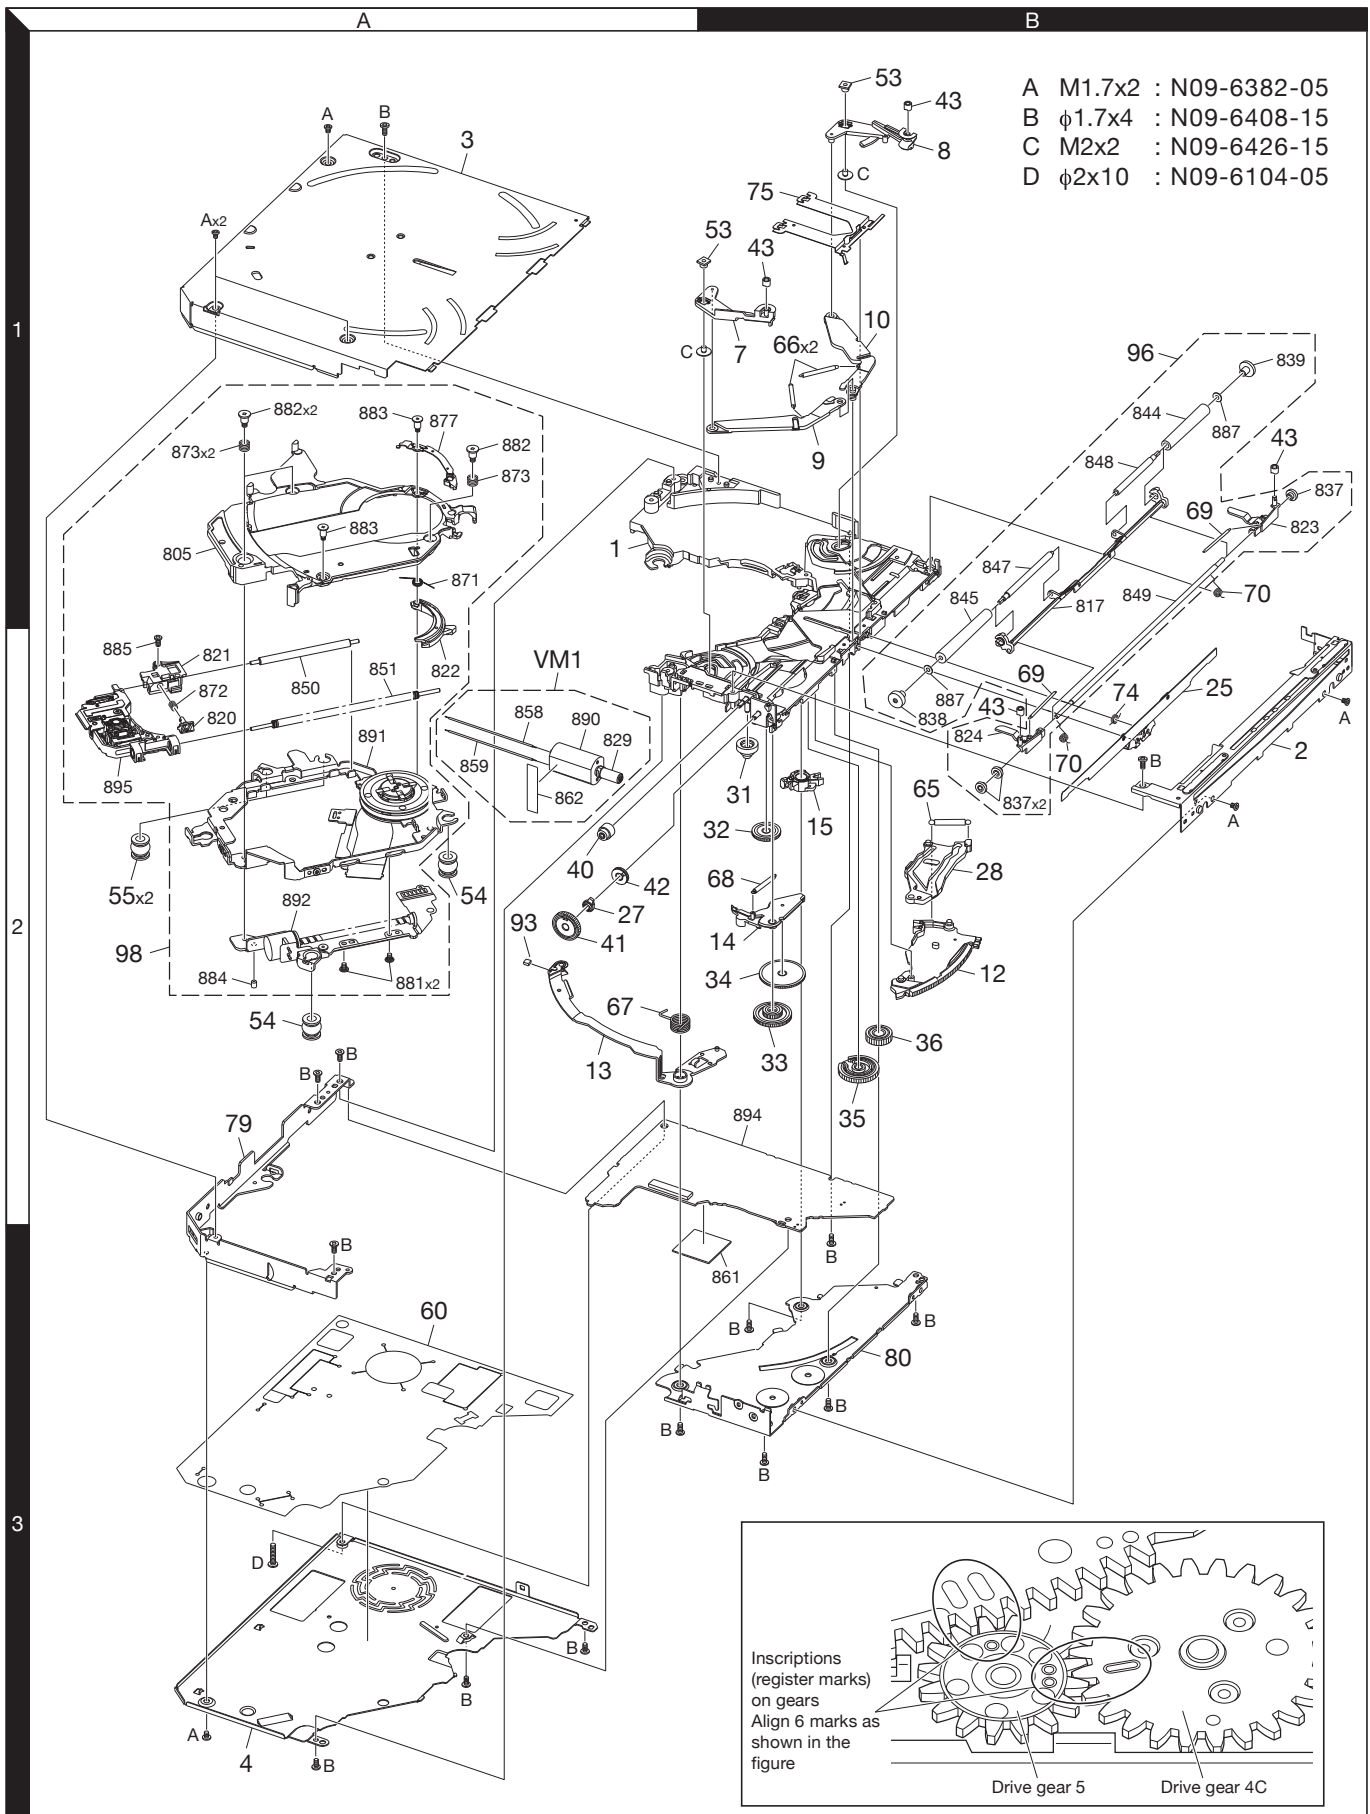


EXPLODED VIEW (DVD MECHANISM)

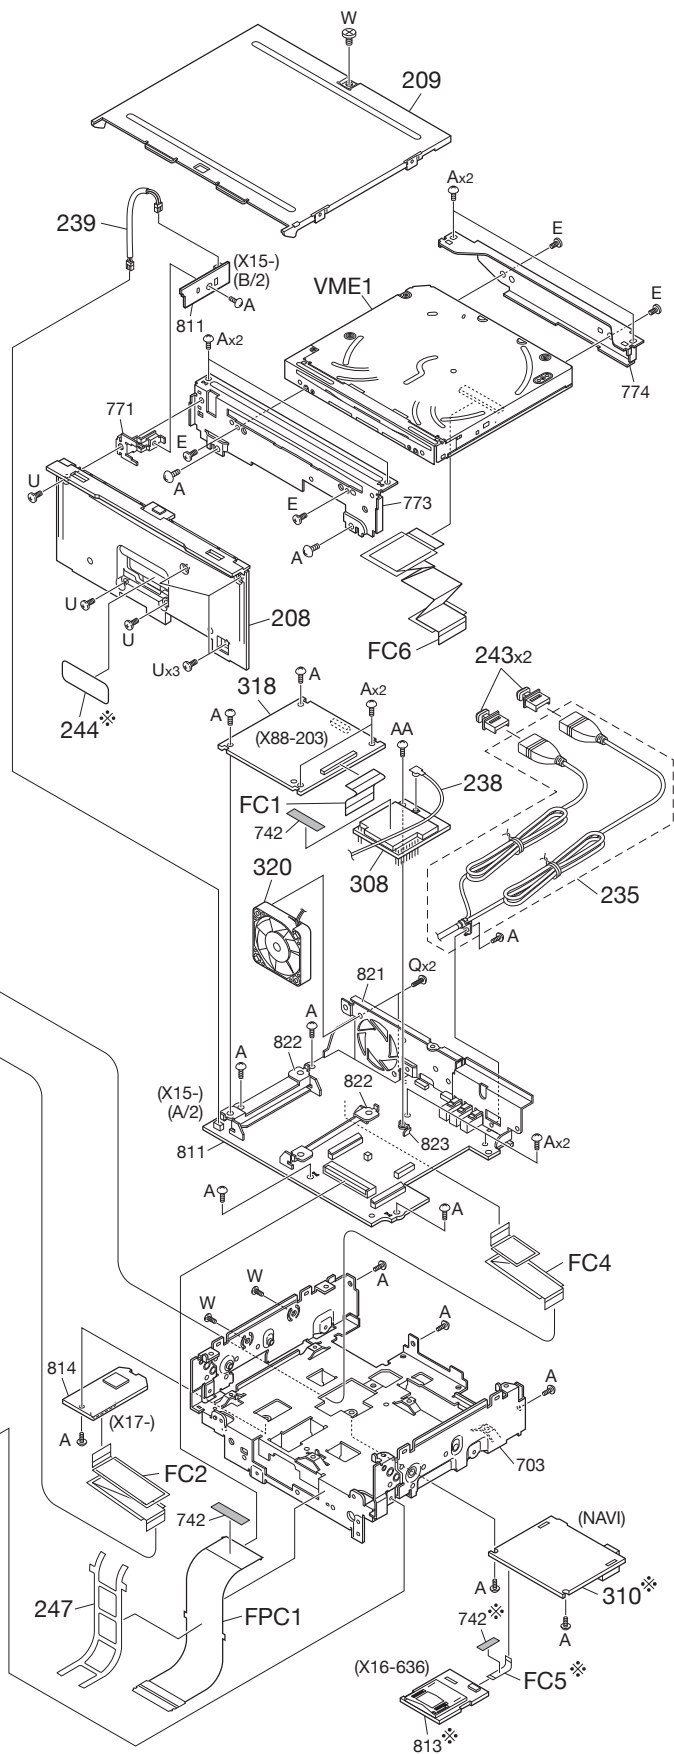

EXPLODED VIEW (UNIT)


A	φ2.6x5	: N86-2605-48
E	M2.6x4	: N35-2604-43
F	PANEL SCREW	: N09-6490-05
Q	M3x11	: N09-6498-05
R	M2.6x27	: N09-6491-05
T	M2.6x5	: N09-6493-05
U	M2.6x6	: N09-6494-05
W	M3x5	: N09-6425-15
AA	M2x3	: N35-2003-48
AB	φ3x8	: N09-6727-05

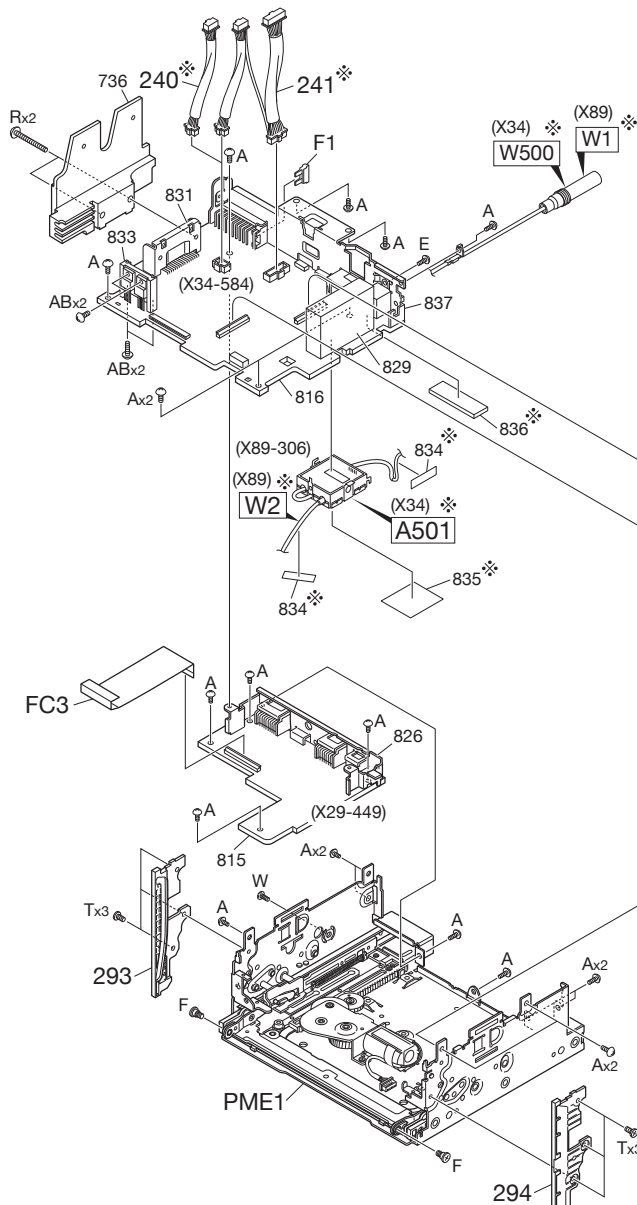

※ Depends on the models. Refer to the parts list.


Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL)

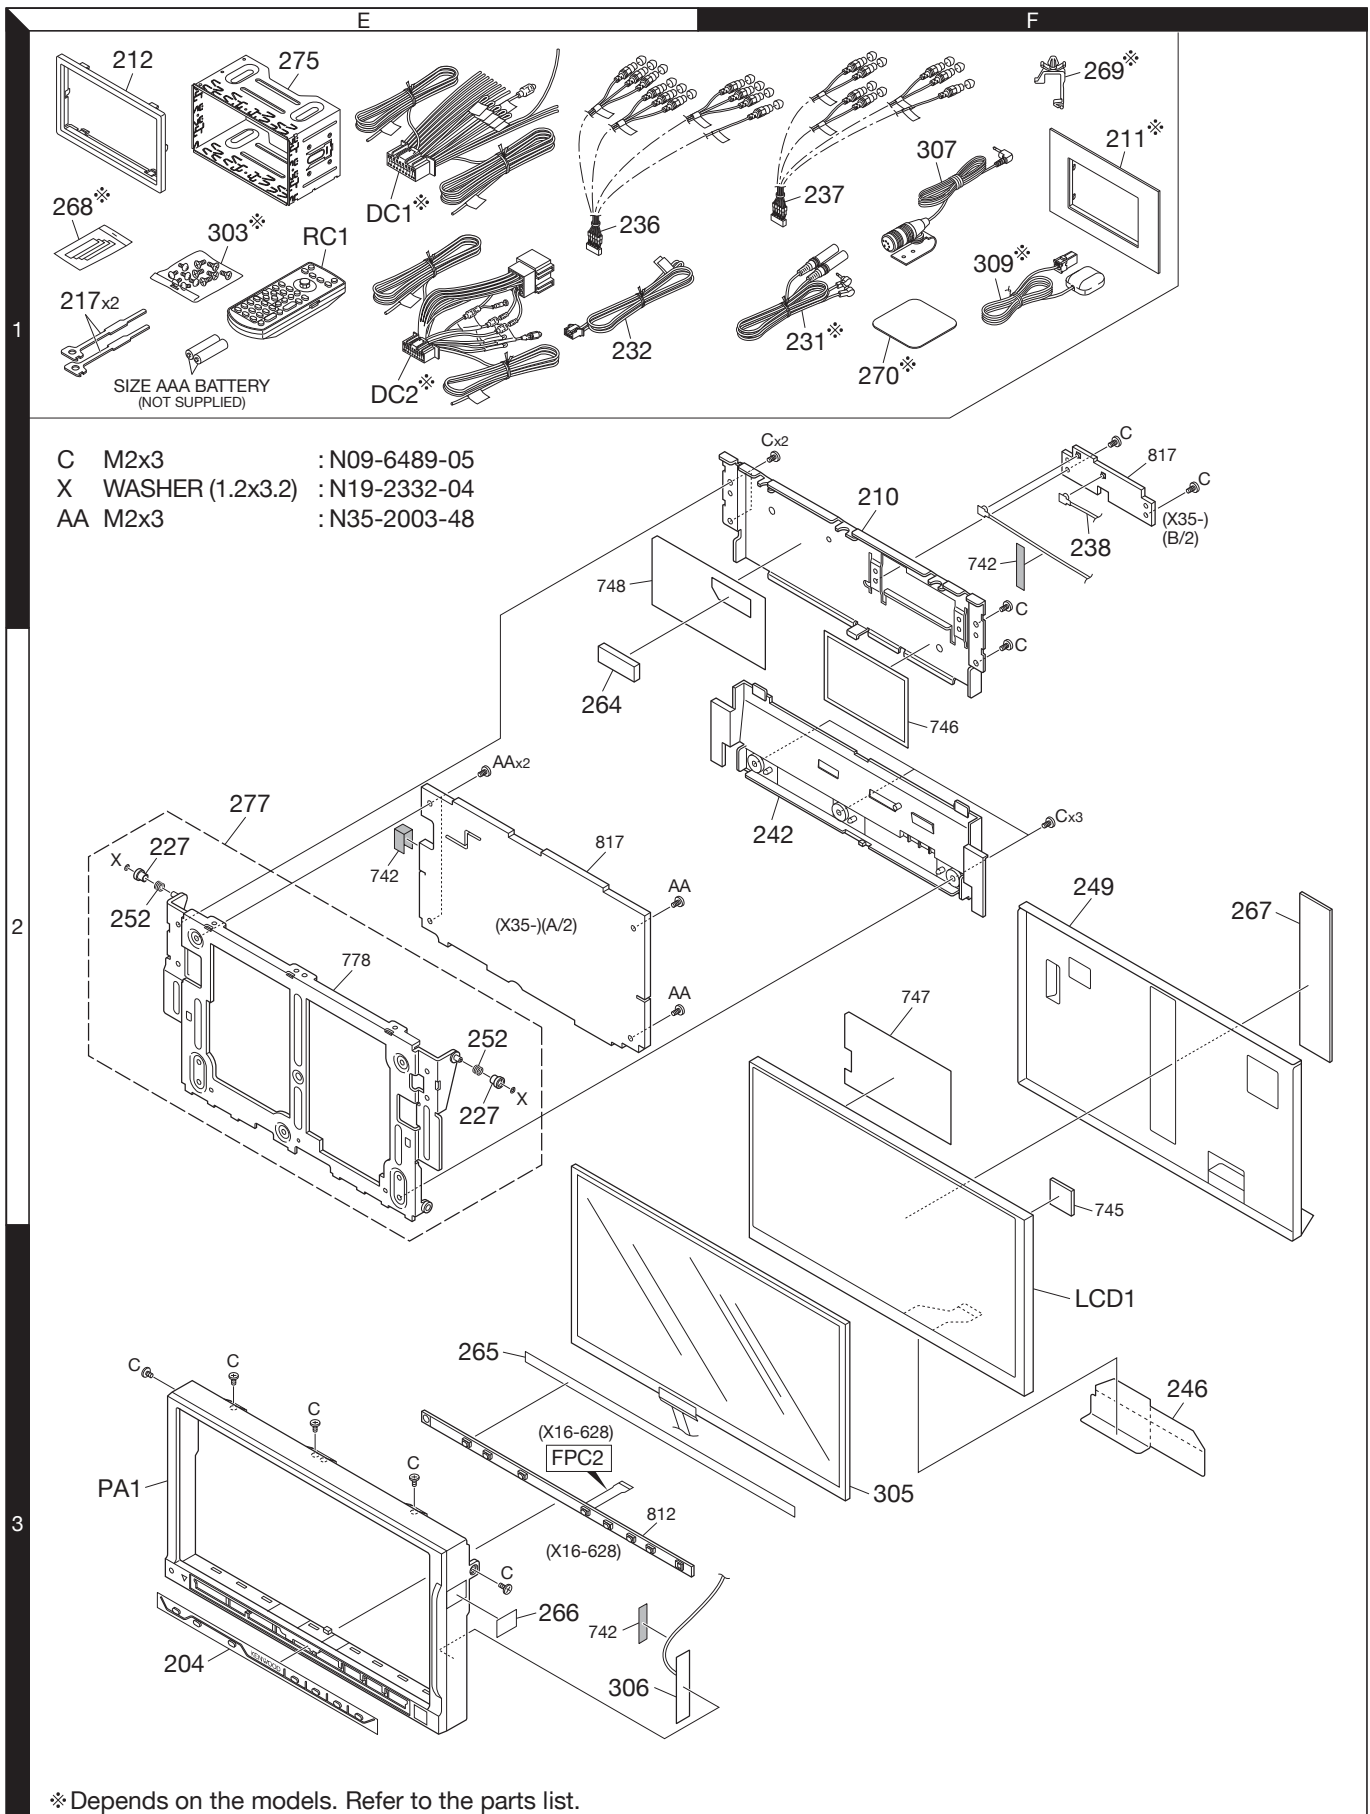

EXPLODED VIEW (DRIVE MECHANISM)

G	M2x2.5	: N09-6361-05
H	M1.7x3.7	: N09-6363-05
J	M2x2.5	: N09-6375-05
K	M2x3.5	: N09-6376-05
L	M2x2.5	: N09-6377-05
M	φ2x2	: N09-6378-05
N	M2.6x4	: N09-6379-05
Y	WASHER	: N19-2321-04

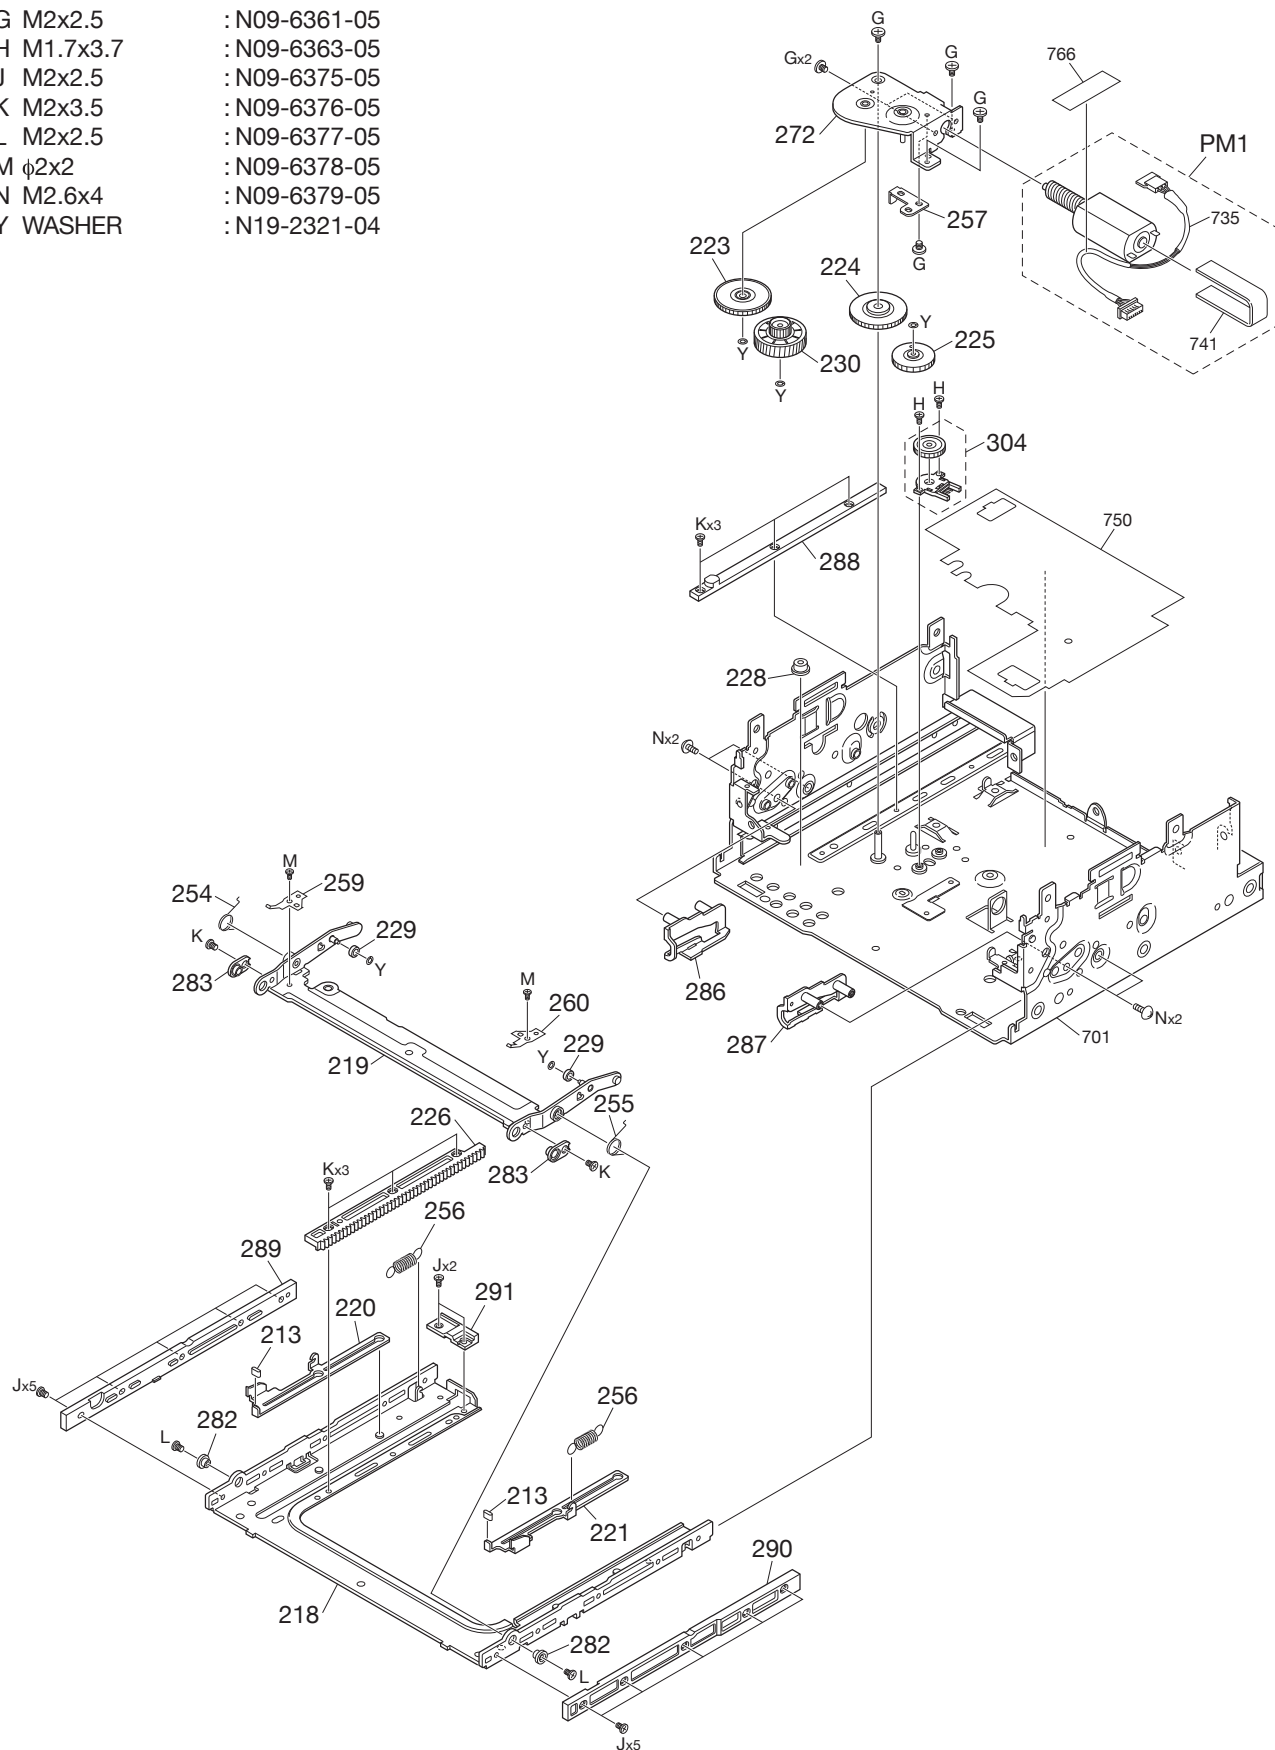

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DDX8022BT/8022BTY/8032BT/8032BTM/812_DNX8120/8220BT						221	3G		D10-4900-03	LEVER	
204	3E	*	A21-6665-03	DRESSING PANEL		223	1H		D13-2394-04	GEAR	
208	1D	*	A22-3169-01	SUB PANEL ASSY	K1E3	224	1H		D13-2395-04	GEAR	
208	1D	*	A22-3173-01	SUB PANEL ASSY	KM1M3	225	1H		D13-2396-04	GEAR	
208	1D	*	A22-3173-01	SUB PANEL ASSY	R1	226	3G		D13-2397-03	RACK (GEAR)	
208	1D	*	A22-3173-01	SUB PANEL ASSY	X1E1E2	227	2E		D14-1024-04	ROLLER	
209	1D		A52-0895-02	TOP PLATE		228	2H		D14-1010-04	ROLLER	
210	1F		A46-1862-02	REAR COVER		229	2G		D14-1011-14	ROLLER	
PA1	3E	*	A64-4493-01	PANEL ASSY	K1	230	1H		D19-0653-23	CLUTCH ASSY	
PA1	3E	*	A64-4494-01	PANEL ASSY	E3	231	1F		E30-6785-05	CORD WITH PLUG (IPOD VIDEO)	KR1K1
PA1	3E	*	A64-4504-01	PANEL ASSY	K	232	1E	*	E30-6786-05	CORD WITH PLUG (RELAY)	
PA1	3E	*	A64-4505-01	PANEL ASSY	R1	235	2D	*	E30-6790-05	CORD WITH PLUG (USB X2)	
PA1	3E	*	A64-4506-01	PANEL ASSY	E1E2	236	1F	*	E30-6791-05	CORD WITH PINPLUG (AV IN/OUT)	
PA1	3E	*	A64-4507-01	PANEL ASSY	M1M3	237	1F	*	E30-6793-05	CORD WITH PINPLUG (PREOUT)	
PA1	3E	*	A64-4508-01	PANEL ASSY	X1	238	2D	*	E30-6819-05	CORD WITH PLUG	
PME1	3C		A10-5300-41	CHASSIS ASSY		239	1D	*	E39-0915-05+	WIRING HARNESS	
RC1	1E		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)		240	2C	*	E39-0983-15	WIRING HARNESS	KM1M3
-		*	B54-4648-00	INSTALLATION MANU (ENG.FRE.SPA)	KR1K1	240	2C	*	E39-0983-15	WIRING HARNESS	R1
-		*	B54-4649-00	INSTALLATION MANUAL (POR.)	R1	240	2C	*	E39-0983-15	WIRING HARNESS	X1E1E2
-		*	B54-4650-00	INSTALLATION MANUAL (ENG.)	E1E2E3	241	2C	*	E39-0986-15	WIRING HARNESS	K1E3
-		*	B54-4651-00	INSTALLATION MANU (F.G.D.I.S.P)	E1E3	DC1	1E	*	E30-6824-05	DC CORD	KR1M1
-		*	B54-4652-00	INSTALLATION MA (ENG.S-CHI.KOR)	M1X1M3	DC1	1E	*	E30-6824-05	DC CORD	X1M3K1
-		*	B54-4663-00	INSTALLATION MANUAL (ARA.)	M3	DC2	1E	*	E30-6825-05	DC CORD	E1E2E3
-		*	B59-1880-00	SUB-INSTRUCTION MANUAL		FC1	2D	*	E39-1003-05	FLAT CABLE	
-		*	B64-4089-00	INSTRUCTION MANUAL (ENG.)	KR1K1	FC2	3D	*	E39-1023-05	FLAT CABLE	
-		*	B64-4090-00	INSTRUCTION MANUAL (FRE.)	KK1	FC3	3C	*	E39-1024-05	FLAT CABLE	
-		*	B64-4091-00	INSTRUCTION MANUAL (SPA.)	KR1K1	FC4	3D	*	E39-1025-05	FLAT CABLE	
-		*	B64-4092-00	INSTRUCTION MANUAL (POR.)	R1	FC5	3D	*	E39-1026-05	FLAT CABLE	K1E3
-		*	B64-4093-00	INSTRUCTION MANUAL (ENG.)	E1E2E3	FC6	2D	*	E39-1027-05	FLAT CABLE	
-		*	B64-4094-00	INSTRUCTION MANUAL (FRE.)	E1E3	242	2F		F07-1192-02	COVER	
-		*	B64-4095-00	INSTRUCTION MANUAL (GER.)	E1E3	243	2D		F09-2929-04	CAP (USB)	
-		*	B64-4096-00	INSTRUCTION MANUAL (DUT.)	E1E3	244	2D		F09-2932-04	SHEET	KM1M3
-		*	B64-4097-00	INSTRUCTION MANUAL (ITA.)	E1E3	244	2D		F09-2932-04	SHEET	R1
-		*	B64-4098-00	INSTRUCTION MANUAL (SPA.)	E1E3	244	2D		F09-2932-04	SHEET	X1E1E2
-		*	B64-4099-00	INSTRUCTION MANUAL (POR.)	E1E3	246	3F		F09-2958-04	SHEET	
-		*	B64-4100-00	INSTRUCTION MANUAL (ENG.)	M1X1M3	247	3D	*	F09-2972-04	SHEET	
-		*	B64-4101-00	INSTRUCTION MANUAL (S-CHI.)	M1	249	2F		F20-2432-03	INSULATING SHEET	
-		*	B64-4102-00	INSTRUCTION MANUAL (KOR.)	M1	△ F1	2C		F52-0007-05	FUSE (MINI BLADE TYPE) 15A	
-		*	B64-4110-00	INSTRUCTION MANUAL (ENG.)	K1	252	2E		G01-4659-04	COMPRESSION SPRING	
-		*	B64-4111-00	INSTRUCTION MANUAL (FRE.SPA.)	K1	254	2G		G01-3288-04	TORSION COIL SPRING	
-		*	B64-4112-00	INSTRUCTION MANUAL (ENG.)	E3	255	2G		G01-3289-04	TORSION COIL SPRING	
-		*	B64-4113-00	INSTRUCTION MANUA (FRE.GER.DUT)	E3	256	3G		G01-3290-04	EXTENSION SPRING	
-		*	B64-4114-00	INSTRUCTION MANUA (ITA.SPA.POR)	E3	257	1H		G02-1539-04	FLAT SPRING	
-		*	B64-4171-00	INSTRUCTION MANUAL (ARA.)	M3	259	2G		G02-1544-04	FLAT SPRING	
211	1F		B07-3172-12	ESCUTCHEON	KR1M1	260	2G		G02-1545-04	FLAT SPRING	
211	1F		B07-3172-12	ESCUTCHEON	X1M3K1	264	2E		G16-1688-04	SHEET	
212	1E		B07-3224-01	ESCUTCHEON		265	3E	*	G16-1713-14	SHEET	
213	3G		B09-0541-04	CAP		266	3E	*	G16-1702-04	SHEET	
LCD1	3F		B38-1199-05	LCD		267	2F		G16-1695-04	SHEET	
217	1E		D10-4589-04	LEVER		-		*	H54-4310-03	ITEM CARTON CASE	K1
218	3G		D10-4895-22	SLIDER ASSY		-		*	H54-4311-03	ITEM CARTON CASE	E3
219	2G		D10-4897-13	ARM ASSY		-		*	H54-4314-03	ITEM CARTON CASE	K
220	3G		D10-4899-03	LEVER		-		*	H54-4315-03	ITEM CARTON CASE	R1
						-		*	H54-4316-03	ITEM CARTON CASE	E1

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)

K : DDX812 K1 : DNX8120 (North America)

X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)

M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DDX8022BT/8022BTY/8032BT/8032BTM/812_DNX8120/8220BT

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-		*	H54-4317-03	ITEM CARTON CASE	E2
-		*	H54-4318-03	ITEM CARTON CASE	M1X1
-		*	H54-4376-03	ITEM CARTON CASE	M3
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KR1M1
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	X1M3K1
269	1F		J11-0660-05	CLAMPER	K1
270	1F		J21-9867-04	MOUNTING HARDWARE (GPS-BOTTOM)	K1E3
272	1H		J22-0444-13	MOUNTING HARDWARE ASSY	
275	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
277	2E	*	J22-0751-02	MOUNTING HARDWARE ASSY	
282	3G		J31-1075-14	COLLAR (ARM COLLAR)	
283	2G		J31-1077-04	COLLAR (PANEL COLLAR)	
286	2H		J90-1124-13	GUIDE ASSY	
287	2H		J90-1126-13	GUIDE ASSY	
288	2H		J90-1128-03	RAIL	
289	3G		J90-1129-23	RAIL	
290	3H		J90-1130-23	RAIL	
291	3G		J90-1131-03	GUIDE	
293	3C		J90-1160-01	RAIL (L)	
294	3C		J90-1161-01	RAIL (R)	
FPC1	3D	*	J86-0051-05	FPC (LEAD FREE)	
303	1E		N99-1779-15	SCREW SET	KR1M1
303	1E		N99-1779-15	SCREW SET	X1M3K1
A	3C		N86-2605-48	BINDING HEAD TAPTITE SCREW	
AA	2D		N35-2003-48	BINDING HEAD MACHINE SCREW	
C	3E	*	N09-6489-05	MACHINE SCREW (M2.0X3.0)	
E	1D		N35-2604-43	BINDING HEAD MACHINE SCREW	
F	3C		N09-6490-05	STEPPED SCREW (PANEL SCREW)	
G	1H		N09-6361-05	MACHINE SCREW (M2X2.5)	
H	1H		N09-6363-05	MACHINE SCREW (M1.7X3.7)	
J	3G		N09-6375-05	MACHINE SCREW (M2X2.5)	
K	2G		N09-6376-05	MACHINE SCREW (M2X3.5)	
L	3G		N09-6377-05	MACHINE SCREW (M2X2.5)	
M	2G		N09-6378-05	TAPTITE SCREW (STITE 2X2)	
N	2H		N09-6379-05	MACHINE SCREW (M2.6X4 BIND)	
R	2C		N09-6491-05	MACHINE SCREW (M2.6X27)	
T	3C		N09-6493-05	MACHINE SCREW (M2.6X5)	
U	1D		N09-6494-05	MACHINE SCREW (M2.6X6)	
W	3C		N09-6425-15	MACHINE SCREW (M3.0X5)	
X	2E		N19-2332-04	FLAT WASHER (1.2X3.2X0.25)	
Y	1H		N19-2321-04	FLAT WASHER (1.6X4X0.25)	
304	1H		R31-0248-05	VARIABLE RESISTOR	
305	3F		S79-0854-05	SWITCH ASSY	
306	3E	*	T90-0588-05	ANTENNA ASSY	
PM1	1H		T42-1322-14	MOTOR ASSY	
307	1F	*	W01-1718-05	MICROPHONE	K1E3
308	2D	*	W02-5280-05	ELECTRIC CIRCUIT MODULE (BT)	K1
309	1F		W02-5305-05	ANTENNA MODULE (GPS-ANT)	E3
310	1D	*	W02-5309-05	NAVIGATION MODULE (NAVI-K)	
310	1D	*	W02-5310-15	NAVIGATION MODULE (NAVI-E)	
318	2D	*	X88-2030-10	DIGITAL I/O UNIT	
VME1	1D	*	X92-6180-01	DVD MECHANISM ASSY (DVS-8561V)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
VIDEO CONTROL UNIT (X15-115x-xx)					
D514			B30-1767-05	LED	
C1			C90-5670-05	ELECTRO	220UF 16WV
C2,3			CK73GB1H104K	CHIP C	0.10UF K
C4			CK73FB0J106K	CHIP C	10UF K
C5			CK73GB1H103K	CHIP C	0.010UF K
C6			CK73GB1H104K	CHIP C	0.10UF K
C7,8			CK73GB1H103K	CHIP C	0.010UF K
C9			CE32BF1C221M	CHIP EL	220UF 16WV
C19			CE32BF1E101M	CHIP EL	100UF 25WV
C38			CK73GB1H103K	CHIP C	0.010UF K
C39			CK73GB1H104K	CHIP C	0.10UF K
C40			CE32BF1E101M	CHIP EL	100UF 25WV
C41			CK73GB1C104K	CHIP C	0.10UF K
C42			CK73GB0J105K	CHIP C	1.0UF K
C53			CE32BJ1C470M	CHIP EL	47UF 16WV
C57			CE32BJ1C100M	CHIP EL	10UF 16WV
C58			CK73GB1H103K	CHIP C	0.010UF K
C59			CK73FB1E474K	CHIP C	0.47UF K
C94			CK73GB1A105K	CHIP C	1.0UF K
C95			CK73GB1C104K	CHIP C	0.10UF K
C96			CE32BF1C221M	CHIP EL	220UF 16WV
C97			CE32BJ1C101M	CHIP EL	100UF 16WV
C102			CK73GB1A105K	CHIP C	1.0UF K
C115			CE32BJ1C100M	CHIP EL	10UF 16WV
C122			CK73GB1H103K	CHIP C	0.010UF K
C124,125			CK73GB1A105K	CHIP C	1.0UF K
C128			CK73GB1A105K	CHIP C	1.0UF K
C129			CK73FB0J106K	CHIP C	10UF K
C133			CK73GB1C104K	CHIP C	0.10UF K
C134			CK73GB1A105K	CHIP C	1.0UF K
C137			CK73FB1C105K	CHIP C	1.0UF K
C200,201			CC73GCH1H101J	CHIP C	100PF J
C202			CK73GB1C473K	CHIP C	0.047UF K
C203,204			CK73GB1H102K	CHIP C	1000PF K
C205			CC73GCH1H221J	CHIP C	220PF J
C206			CC73GCH1H101J	CHIP C	100PF J
C207			CC73GCH1H470J	CHIP C	47PF J
C208			CK73GB1H103K	CHIP C	0.010UF K
C209			CK73GB1H223K	CHIP C	0.022UF K
C210			CK73GB1H103K	CHIP C	0.010UF K
C212,213			CK73GB1H102K	CHIP C	1000PF K
C214			CK73GB1C473K	CHIP C	0.047UF K
C215			CC73GCH1H221J	CHIP C	220PF J
C217			CK73GB1H102K	CHIP C	1000PF K
C218			CK73GB1C473K	CHIP C	0.047UF K
C219			CC73GCH1H221J	CHIP C	220PF J
C220			CC73GCH1H470J	CHIP C	47PF J
C221			CK73GB1H103K	CHIP C	0.010UF K
C222			CK73GB1H153K	CHIP C	0.015UF K
C224,225			CK73GB1H102K	CHIP C	1000PF K
C226			CC73GCH1H470J	CHIP C	47PF J
C227			CK73GB1C473K	CHIP C	0.047UF K

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)

K : DDX812 K1 : DNX8120 (North America)

X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)

M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-115x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C228			CK73GCH1H221J	CHIP C 220PF J		C304-306			CK73EB1E106K	CHIP C 10UF K	
C230			CK73GB1H223K	CHIP C 0.022UF K		C401			CK73HB1E103K	CHIP C 0.010UF K	
C231			CK73GB1H102K	CHIP C 1000PF K		C403,404			CK73HB1A104K	CHIP C 0.10UF K	
C232			CK73FB0J106K	CHIP C 10UF K		C405			CK73HB1E103K	CHIP C 0.010UF K	
C233			CK73GB1C104K	CHIP C 0.10UF K		C406			CC73HCH1H220J	CHIP C 22PF J	
C234			CK73GB1H104K	CHIP C 0.10UF K		C407			CC73HCH1H180J	CHIP C 18PF J	
C235			CK73EB1E225K	CHIP C 2.2UF K		C408			CK73HB0J105K	CHIP C 1.0UF K	
C236-238			CK73GB1H104K	CHIP C 0.10UF K		C409-415			CK73HB1A104K	CHIP C 0.10UF K	
C239,240			CK73GB1H103K	CHIP C 0.010UF K		C416-419			CC73HCH1H471J	CHIP C 470PF J	
C241			CK73GB1H104K	CHIP C 0.10UF K		C420			CK73HB0J105K	CHIP C 1.0UF K	
C242			CK73FB0J106K	CHIP C 10UF K		C421-426			CC73HCH1H101J	CHIP C 100PF J	
C243			CK73GB1C104K	CHIP C 0.10UF K		C427,428			CC73HCH1H100D	CHIP C 10PF D	
C244			CK73GB1H104K	CHIP C 0.10UF K		C429,430			CK73FB0J106K	CHIP C 10UF K	
C245			CK73EB1E225K	CHIP C 2.2UF K		C433			CK73GB1H103K	CHIP C 0.010UF K	
C246-248			CK73GB1H104K	CHIP C 0.10UF K		C434,435			CK73GB1H222K	CHIP C 2200PF K	
C249,250			CK73GB1H103K	CHIP C 0.010UF K		C500			CK73GB1C104K	CHIP C 0.10UF K	
C251			CK73GB1H104K	CHIP C 0.10UF K		C501,502			CC73GCH1H100D	CHIP C 10PF D	
C252			CK73GB1H103K	CHIP C 0.010UF K		C503			CK73GB1H104K	CHIP C 0.10UF K	K1E3
C253			CK73GB1H104K	CHIP C 0.10UF K		C505			CC73GCH1H100D	CHIP C 10PF D	
C254			CK73EB1E106K	CHIP C 10UF K		C506,507			CK73GB1A105K	CHIP C 1.0UF K	
C255			CK73GB1H103K	CHIP C 0.010UF K		C509			CC73GCH1H100D	CHIP C 10PF D	
C256			CK73GB1H104K	CHIP C 0.10UF K		C511,512			CK73GB1A105K	CHIP C 1.0UF K	
C257,258			CE32BQ1E680M	CHIP EL 68UF 25WV		C513			CC73GCH1H101J	CHIP C 100PF J	
C259			CK73GB1H104K	CHIP C 0.10UF K		C514			CE32BJ1C100M	CHIP EL 10UF 16WV	
C260			CK73GB1H103K	CHIP C 0.010UF K		C515			CK73GB1C104K	CHIP C 0.10UF K	
C261			CK73EB1E106K	CHIP C 10UF K		C517			CK73FB0J106K	CHIP C 10UF K	
C262			CK73GB1H102K	CHIP C 1000PF K		C518			CK73GB1H222K	CHIP C 2200PF K	
C263			CE32AV1A121M	CHIP EL 120UF 10WV		C520			CK73GB1H103K	CHIP C 0.010UF K	
C264			CK73GB1H103K	CHIP C 0.010UF K		C521			CE32BJ1C470M	CHIP EL 47UF 16WV	
C265,266			CK73GB1C104K	CHIP C 0.10UF K		C522,523			CK73GB0J475K	CHIP C 4.7UF K	
C267			CK73GB1H103K	CHIP C 0.010UF K		C524,525			CK73GB1C104K	CHIP C 0.10UF K	
C268			CE32AV0J221M	CHIP EL 220UF 6.3WV		C526-528			CK73GB1A474K	CHIP C 0.47UF K	
C269			CK73GB1H102K	CHIP C 1000PF K		C529			CK73GB1H102K	CHIP C 1000PF K	
C270			CK73GB1H103K	CHIP C 0.010UF K		C530			CK73GB1A474K	CHIP C 0.47UF K	
C271			CK73GB1H104K	CHIP C 0.10UF K		C531			CK73GB1C104K	CHIP C 0.10UF K	
C272,273			CK73GB1H102K	CHIP C 1000PF K		C533,534			CK73GB1H222K	CHIP C 2200PF K	
C274			CK73GB1H103K	CHIP C 0.010UF K		C535-538			CK73FB0J106K	CHIP C 10UF K	
C275			CK73GB1H104K	CHIP C 0.10UF K		C600			CK73GB1H103K	CHIP C 0.010UF K	
C276			CK73EB1E106K	CHIP C 10UF K		C601,602			CK73GB0J475K	CHIP C 4.7UF K	
C277			CK73GB1H103K	CHIP C 0.010UF K		C603-605			CK73GB0J105K	CHIP C 1.0UF K	
C278			CK73GB1H104K	CHIP C 0.10UF K		C606			CK73GB0J475K	CHIP C 4.7UF K	
C279			CE32BQ1E680M	CHIP EL 68UF 25WV		C607			CK73GB1H103K	CHIP C 0.010UF K	
C280			CE32BM1E470M	CHIP EL 47UF 25WV		C608			CK73GB0J475K	CHIP C 4.7UF K	
C281			CK73GB1H104K	CHIP C 0.10UF K		C609,610			CK73GB0J105K	CHIP C 1.0UF K	
C282			CK73GB1H102K	CHIP C 1000PF K		C611			CK73GB0J475K	CHIP C 4.7UF K	
C283			CE32AV0G331M	CHIP EL 330UF 4.0WV		C612			CK73GB0J105K	CHIP C 1.0UF K	
C284			CK73GB1H103K	CHIP C 0.010UF K		C613			CK73GB0J475K	CHIP C 4.7UF K	
C285,286			CK73GB1C104K	CHIP C 0.10UF K		C614-616			CK73GB1H103K	CHIP C 0.010UF K	
C287			CK73GB1H102K	CHIP C 1000PF K		C618,619			CK73FB0J106K	CHIP C 10UF K	
C288			CK73GB1H103K	CHIP C 0.010UF K		C620			CK73GB0J475K	CHIP C 4.7UF K	KM1M3
C289			CK73GB1H104K	CHIP C 0.10UF K		C620			CK73GB0J475K	CHIP C 4.7UF K	R1
C290			CK73GB1H103K	CHIP C 0.010UF K		C620			CK73GB0J475K	CHIP C 4.7UF K	X1E1E2
C291			C93-1367-05	CHIP C 10UF K		C621			CK73GB1C104K	CHIP C 0.10UF K	KM1M3
C293			CK73GB1H103K	CHIP C 0.010UF K		C621			CK73GB1C104K	CHIP C 0.10UF K	R1
C294			CE32AV0J221M	CHIP EL 220UF 6.3WV		C621			CK73GB1C104K	CHIP C 0.10UF K	X1E1E2

E1 : DDX8022BT **E2** : DDX8022BTY **E3** : DNX8220BT (Europe)
K : DDX812 **K1** : DNX8120 (North America)
X1 : DDX8032BT (Australia) **R1** : DDX8032BT (Latin America)
M1 : DDX8032BT **M3** : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-115x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
C622 C623,624 C625 C627 C628			CK73FB0J106K CK73GB1C104K CK73GB1H222K CK73GB1H222K CK73GB1C104K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 2200PF K CHIP C 2200PF K CHIP C 0.10UF K	KM1M3
C628 C628 C630 C633 C634			CK73GB1C104K CK73GB1C104K CK73GB1H222K CK73GB1A105K CK73GB1H222K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 2200PF K CHIP C 1.0UF K CHIP C 2200PF K	R1 X1E1E2
C635 C636,637 C638 C640,641 C650			CK73GB1A105K CE32BJ1C220M CK73GB1A105K CK73GB1A105K CK73GB1H222K	CHIP C 1.0UF K CHIP EL 22UF 16WV CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 2200PF K	
C700-702 C703,704 C705 C706 C708			CK73GB1H103K CK73GB1C104K CK73GB1H103K CK73GB1C104K CK73GB1H222K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 2200PF K	
C709 C710,711 C712 C713-716 C850			CE32BF1E101M CK73GB1H103K CK73FB0J106K CK73GB1H222K CK73FB1A225K	CHIP EL 100UF 25WV CHIP C 0.010UF K CHIP C 10UF K CHIP C 2200PF K CHIP C 2.2UF K	
C851-854 C855 C856 C857 C858			CK73GB1C104K CK73FB0J106K CK73GB1C104K CK73FB0J106K CE32BF1C101M	CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP EL 100UF 16WV	
C859,860 C861 C862-868 C869 C870-873			CK73GB1C104K CC73GCH1H101J CK73GB1H103K CK73FB0J106K CK73GB1H222K	CHIP C 0.10UF K CHIP C 100PF J CHIP C 0.010UF K CHIP C 10UF K CHIP C 2200PF K	
CN3 CN500 CN501 CN502 CN503		*	E41-2771-05 E41-2248-05 E41-1476-05 E41-1486-05 E41-2956-05	PIN ASSY PIN ASSY PIN ASSY PIN ASSY SOCKET FOR PIN ASSY	
CN504 CN700 CN701 CN850 CN851		*	E41-2957-05 E41-2608-05 E41-2979-05 E41-2735-05 E41-2980-05	SOCKET FOR PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR PIN ASSY FLAT CABLE CONNECTOR	
CN852 J500,501 J502			E41-2979-05 E11-0625-05 E11-0656-05	FLAT CABLE CONNECTOR PHONE JACK (LGY6502-0900) PHONE JACK (3.5D YELLOW)	
320 F3 F700	2D		F09-2923-05 F53-0297-05 F53-0297-05	FAN FUSE (UL,CSA) 1.6A FUSE (UL,CSA) 1.6A	
L1 L2 L3			L33-2358-05 L41-4795-33 L33-2369-05	CHOKE COIL SMALL FIXED INDUCTOR (4.7U) CHOKE COIL 10UH	
Ref. No.	Ad	New	Parts No.	Description	Destination
L4 L200 L201,202 L203 L204		*	L33-2475-05 L33-2370-05 L33-2369-05 L33-2455-05 L33-2369-05	CHOKE COIL 22UH CHOKE COIL 10UH CHOKE COIL 10UH CHOKE COIL 10UH CHOKE COIL 10UH	K1E3
L205,206 L207 L401,402 L850 X400			L33-2455-05 L33-2417-05 L92-0332-05 L33-2369-05 L77-2921-05	CHOKE COIL 10UH CHOKE COIL 10UH CHIP FERRITE CHOKE COIL CRYSTAL RESONATOR (32.768KHZ)	
X401		*	L77-2975-05	CRYSTAL RESONATOR (11.0592MHZ)	
Q	2D		N09-6498-05	MACHINE SCREW (M3.0X11)	
CP401,402 CP404 CP406 R1 R2			RK74HB1J101J RK74HB1J101J RK74HB1J101J RK73GH2A104D RK73GH2A513D	CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP R 100K D 1/10W CHIP R 51K D 1/10W	
R3 R4,5 R6 R7 R8			RK73GH2A333D RK73GH2A334D RK73GB2A823J RK73GB2A103J RK73GH2A113D	CHIP R 33K D 1/10W CHIP R 330K D 1/10W CHIP R 82K J 1/10W CHIP R 10K J 1/10W CHIP R 11K D 1/10W	
R9,10 R11 R12 R13 R14,15			RK73GB2A224J RK73GH2A104D RK73GB2A100J RK73GH2A683D RK73GB2A224J	CHIP R 220K J 1/10W CHIP R 100K D 1/10W CHIP R 10 J 1/10W CHIP R 68K D 1/10W CHIP R 220K J 1/10W	
R16 R17 R18 R20 R23			RK73GB2A000J RK73GB2A224J RK73GB2A333J RK73GB2A100J RK73GB2A224J	CHIP R 0.0 J 1/10W CHIP R 220K J 1/10W CHIP R 33K J 1/10W CHIP R 10 J 1/10W CHIP R 220K J 1/10W	
R24 R25 R34 R35 R38			RK73GB2A304J RK73GB2A224J RK73GB2A202J RK73GB2A101J RK73GB2A154J	CHIP R 300K J 1/10W CHIP R 220K J 1/10W CHIP R 2.0K J 1/10W CHIP R 100 J 1/10W CHIP R 150K J 1/10W	
R43 R44 R50 R57 R58			RK73GB2A164J RK73FB2B000J RK73GB2A224J RK73GB2A563J RK73GB2A224J	CHIP R 160K J 1/10W CHIP R 0.0 J 1/8W CHIP R 220K J 1/10W CHIP R 56K J 1/10W CHIP R 220K J 1/10W	
R65 R66 R67 R69 R70			RK73GB2A302J RK73GB2A101J RK73FB2B000J RK73GB2A332J RK73GH2A113D	CHIP R 3.0K J 1/10W CHIP R 100 J 1/10W CHIP R 0.0 J 1/8W CHIP R 3.3K J 1/10W CHIP R 11K D 1/10W	
R71 R72 R73 R74 R75			RK73GB2A272J RK73FB2B000J RK73GH2A113D RK73GB2A000J RK73GB2A302J	CHIP R 2.7K J 1/10W CHIP R 0.0 J 1/8W CHIP R 11K D 1/10W CHIP R 0.0 J 1/10W CHIP R 3.0K J 1/10W	
R76			RK73GB2A101J	CHIP R 100 J 1/10W	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-115x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R77			RK73GB2A000J	CHIP R 0.0 J 1/10W		R302			RK73EB2E100J	CHIP R 10 J 1/4W	
R87			RK73GB2A000J	CHIP R 0.0 J 1/10W		R304			R92-5159-05	CHIP R 0.033 J 1/4W	
R88			RK73GB2A332J	CHIP R 3.3K J 1/10W		R306,307			R92-5158-05	CHIP R 0.022 J 1/4W	
R90			RK73GH2A113D	CHIP R 11K D 1/10W		R308-311			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R91			RK73GB2A272J	CHIP R 2.7K J 1/10W		R312			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R92			RK73GH2A113D	CHIP R 11K D 1/10W		R314			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R93			RK73GB2A000J	CHIP R 0.0 J 1/10W		R400,401			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R94			RK73GB2A473J	CHIP R 47K J 1/10W		R402			RK73HB1J103J	CHIP R 10K J 1/16W	
R95			RK73GB2A562J	CHIP R 5.6K J 1/10W		R403			RK73HB1J473J	CHIP R 47K J 1/16W	
R96			RK73GB2A472J	CHIP R 4.7K J 1/10W		R405			RK73HB1J103J	CHIP R 10K J 1/16W	
R97			RK73GB2A561J	CHIP R 560 J 1/10W		R407			RK73HB1J103J	CHIP R 10K J 1/16W	K1E3
R98			RK73GB2A000J	CHIP R 0.0 J 1/10W		R408-410			RK73HB1J103J	CHIP R 10K J 1/16W	R1E1E2
R100			RK73GB2A000J	CHIP R 0.0 J 1/10W		R408-410			RK73HB1J103J	CHIP R 10K J 1/16W	X1
R101			RK73GB2A202J	CHIP R 2.0K J 1/10W		R408-411			RK73HB1J103J	CHIP R 10K J 1/16W	M1M3
R103			RK73GB2A101J	CHIP R 100 J 1/10W		R408,409			RK73HB1J103J	CHIP R 10K J 1/16W	K
R105			RK73GB2A000J	CHIP R 0.0 J 1/10W		R409			RK73HB1J103J	CHIP R 10K J 1/16W	K1
R200			RK73GB2A000J	CHIP R 0.0 J 1/10W		R409,410			RK73HB1J103J	CHIP R 10K J 1/16W	E3
R203-205			RK73GH2A561D	CHIP R 560 D 1/10W		R411			RK73HB1J103J	CHIP R 10K J 1/16W	KK1
R208			RK73GB2A000J	CHIP R 0.0 J 1/10W		R411			RK73HB1J303J	CHIP R 30K J 1/16W	X1
R210			RK73GB2A333J	CHIP R 33K J 1/10W		R411			RK73HB1J332J	CHIP R 3.3K J 1/16W	E1E2E3
R215			RK73GB2A683J	CHIP R 68K J 1/10W		R412			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R218			RK73GB2A103J	CHIP R 10K J 1/10W		R413,414			RK73HB1J101J	CHIP R 100 J 1/16W	
R222			RK73GH2A622D	CHIP R 6.2K D 1/10W		R416-418			RK73HB1J473J	CHIP R 47K J 1/16W	
R233			RK73GH2A912D	CHIP R 9.1K D 1/10W		R419			RK73GB2A101J	CHIP R 100 J 1/10W	
R234			RK73GH2A333D	CHIP R 33K D 1/10W		R420			RK73HB1J473J	CHIP R 47K J 1/16W	
R238			RK73GH2A561D	CHIP R 560 D 1/10W		R422			RK73HB1J473J	CHIP R 47K J 1/16W	
R240			RK73GB2A000J	CHIP R 0.0 J 1/10W		R423			RK73HB1J104J	CHIP R 100K J 1/16W	
R243			RK73GB2A000J	CHIP R 0.0 J 1/10W		R425			RK73HB1J331J	CHIP R 330 J 1/16W	
R245			RK73GH2A681D	CHIP R 680 D 1/10W		R426			RK73HB1J223J	CHIP R 22K J 1/16W	
R246			RK73GH2A562D	CHIP R 5.6K D 1/10W		R427-433			RK73HB1J101J	CHIP R 100 J 1/16W	
R247			RK73GH2A333D	CHIP R 33K D 1/10W		R434			RK73HB1J473J	CHIP R 47K J 1/16W	
R248-250			RK73GB2A000J	CHIP R 0.0 J 1/10W		R435-437			RK73HB1J101J	CHIP R 100 J 1/16W	
R257			RK73GH2A561D	CHIP R 560 D 1/10W		R438			RK73HB1J123J	CHIP R 12K J 1/16W	
R258			RK73GB2A683J	CHIP R 68K J 1/10W		R439			RK73HB1J103J	CHIP R 10K J 1/16W	
R266			RK73GB2A103J	CHIP R 10K J 1/10W		R440			RK73HB1J473J	CHIP R 47K J 1/16W	
R268			RK73GH2A103D	CHIP R 10K D 1/10W		R441-452			RK73HB1J101J	CHIP R 100 J 1/16W	
R273			RK73GH2A333D	CHIP R 33K D 1/10W		R453,454			RK73HB1J473J	CHIP R 47K J 1/16W	
R274,275			RK73GB2A000J	CHIP R 0.0 J 1/10W		R455-457			RK73HB1J101J	CHIP R 100 J 1/16W	
R276			RK73GH2A391D	CHIP R 390 D 1/10W		R458			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R277			RK73GB2A683J	CHIP R 68K J 1/10W		R459			RK73HB1J101J	CHIP R 100 J 1/16W	
R278			RK73GH2A562D	CHIP R 5.6K D 1/10W		R460			RK73HB1J473J	CHIP R 47K J 1/16W	
R280			RK73GH2A333D	CHIP R 33K D 1/10W		R461			RK73HB1J104J	CHIP R 100K J 1/16W	
R281			RK73GB2A000J	CHIP R 0.0 J 1/10W		R462-464			RK73HB1J101J	CHIP R 100 J 1/16W	
R283,284			RK73GB2A000J	CHIP R 0.0 J 1/10W		R465			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R285			RK73GB2A220J	CHIP R 22 J 1/10W		R466			RK73HB1J104J	CHIP R 100K J 1/16W	
R286,287			RK73GB2A000J	CHIP R 0.0 J 1/10W		R467,468			RK73HB1J473J	CHIP R 47K J 1/16W	
R288			RK73EB2E100J	CHIP R 10 J 1/4W		R469			RK73HB1J103J	CHIP R 10K J 1/16W	
R289,290			RK73GB2A220J	CHIP R 22 J 1/10W		R470-473			RK73HB1J101J	CHIP R 100 J 1/16W	
R291			RK73GB2A000J	CHIP R 0.0 J 1/10W		R474			RK73GB2A100J	CHIP R 10 J 1/10W	
R293			RK73EB2E100J	CHIP R 10 J 1/4W		R475			RK73HB1J101J	CHIP R 100 J 1/16W	
R294			RK73GB2A000J	CHIP R 0.0 J 1/10W		R476			RK73HB1J103J	CHIP R 10K J 1/16W	
R295			RK73GB2A220J	CHIP R 22 J 1/10W		R477			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R296,297			R92-5160-05	CHIP R 0.047 J 1/4W		R478-480			RK73HB1J101J	CHIP R 100 J 1/16W	
R298,299			RK73EB2E100J	CHIP R 10 J 1/4W		R481			RK73HB1J104J	CHIP R 100K J 1/16W	
R300			R92-5158-05	CHIP R 0.022 J 1/4W		R482			RK73HB1J000J	CHIP R 0.0 J 1/16W	

E1 : DDX8022BT **E2** : DDX8022BTY **E3** : DNX8220BT (Europe)
K : DDX812 **K1** : DNX8120 (North America)
X1 : DDX8032BT (Australia) **R1** : DDX8032BT (Latin America)
M1 : DDX8032BT **M3** : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-115x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
R483-485 R486 R490 R491,492 R496			RK73HB1J101J RK73HB1J000J RK73HB1J104J RK73HB1J101J RK73HB1J104J	CHIP R 100 J 1/16W CHIP R 0.0 J 1/16W CHIP R 100K J 1/16W CHIP R 100 J 1/16W CHIP R 100K J 1/16W		R600-602 R603 R604 R605 R606			RK73GH2A102D RK73GB2A105J RK73GB2A000J RK73GB2A105J RK73GH2A102D	CHIP R 1.0K D 1/10W CHIP R 1.0M J 1/10W CHIP R 0.0 J 1/10W CHIP R 1.0M J 1/10W CHIP R 1.0K D 1/10W	
R497,498 R499 R500,501 R502 R503			RK73HB1J473J RK73HB1J103J RK73GB2A104J RK73GB2A101J RK73GB2A100J	CHIP R 47K J 1/16W CHIP R 10K J 1/16W CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 10 J 1/10W	K1E3	R607-609 R610,611 R612 R613 R614			RK73GB2A105J RK73GB2A000J RK73GH2A102D RK73GB2A101J RK73GB2A751J	CHIP R 1.0M J 1/10W CHIP R 0.0 J 1/10W CHIP R 1.0K D 1/10W CHIP R 100 J 1/10W CHIP R 750 J 1/10W	
R505 R506 R507 R508,509 R511			RK73GB2A104J RK73GB2A101J RK73GB2A100J RK73GB2A223J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 10 J 1/10W CHIP R 22K J 1/10W CHIP R 100K J 1/10W	K1E3 K1E3	R615 R616 R617 R618 R619			RK73GB2A105J RK73GH2A102D RK73GB2A102J RK73GB2A101J RK73GB2A751J	CHIP R 1.0M J 1/10W CHIP R 1.0K D 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 750 J 1/10W	
R515 R516,517 R518 R519 R520			RK73GB2A104J RK73GB2A223J RK73GB2A131J RK73GB2A222J RK73GB2A000J	CHIP R 100K J 1/10W CHIP R 22K J 1/10W CHIP R 130 J 1/10W CHIP R 2.2K J 1/10W CHIP R 0.0 J 1/10W		R620 R622,623 R626 R627-629 R630,631			RK73GB2A105J RK73GB2A105J RK73GB2A102J RK73GB2A105J RK73GB2A101J	CHIP R 1.0M J 1/10W CHIP R 1.0M J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0M J 1/10W CHIP R 100 J 1/10W	
R521 R522 R523 R524,525 R526			RK73GB2A101J RK73GB2A473J RK73GB2A104J RK73GB2A101J RK73GB2A473J	CHIP R 100 J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W	K1E3	R632 R633,634 R635 R636,637 R638			RK73GB2A751J RK73GB2A101J RK73GB2A102J RK73GB2A4R7J RK73GB2A000J	CHIP R 750 J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7 J 1/10W CHIP R 0.0 J 1/10W	K1E3
R527 R528 R529 R530-532 R533			RK73EB2E101J RK73FB2B101J RK73GB2A750J RK73EB2E100J RK73GB2A223J	CHIP R 100 J 1/4W CHIP R 100 J 1/8W CHIP R 75 J 1/10W CHIP R 10 J 1/4W CHIP R 22K J 1/10W		R639 R640 R641-643 R645 R645			RK73GB2A101J RK73GB2A000J RK73GB2A272J RK73GB2A202J RK73GB2A202J	CHIP R 100 J 1/10W CHIP R 0.0 J 1/10W CHIP R 2.7K J 1/10W CHIP R 2.0K J 1/10W CHIP R 2.0K J 1/10W	KM1M3 R1
R534 R535 R536 R537 R538			RK73GB2A473J RK73GB2A101J RK73EB2E100J RK73GB2A223J RK73GB2A473J	CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 10 J 1/4W CHIP R 22K J 1/10W CHIP R 47K J 1/10W		R645 R646 R647,648 R649 R650			RK73GB2A202J RK73GB2A473J RK73GB2A101J RK73GB2A473J RK73GB2A101J	CHIP R 2.0K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W	X1E1E2
R539 R540 R541,542 R544,545 R546			RK73EB2E101J RK73GB2A101J RK73GB2A473J RK73GB2A101J RK73HB1J101J	CHIP R 100 J 1/4W CHIP R 100 J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/16W		R651,652 R653 R654,655 R656 R656			RK73GB2A000J RK73GB2A473J RK73GB2A103J RK73GB2A562J RK73GB2A562J	CHIP R 0.0 J 1/10W CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 5.6K J 1/10W CHIP R 5.6K J 1/10W	KM1M3 R1
R547 R548,549 R551,552 R553 R554			RK73EB2E101J RK73GB2A101J RK73HB1J000J RK73HB1J472J RK73HB1J103J	CHIP R 100 J 1/4W CHIP R 100 J 1/10W CHIP R 0.0 J 1/16W CHIP R 4.7K J 1/16W CHIP R 10K J 1/16W		R656 R657,658 R657,658 R657,658 R658			RK73GB2A562J RK73GB2A101J RK73GB2A101J RK73GB2A101J RK73GB2A101J	CHIP R 5.6K J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W	X1E1E2 KM1M3 R1 X1E1E2 K1E3
R555 R556,557 R558 R559 R560			RK73HB1J473J RK73GB2A473J RK73GB2A103J RK73GB2A223J RK73GB2A181J	CHIP R 47K J 1/16W CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 180 J 1/10W		R660 R661-663 R664 R665 R666			RK73GB2A103J RK73GB2A000J RK73GH2A151D RK73GB2A101J RK73GB2A000J	CHIP R 10K J 1/10W CHIP R 0.0 J 1/10W CHIP R 150 D 1/10W CHIP R 100 J 1/10W CHIP R 0.0 J 1/10W	
R561,562 R564,565 R566-570 R571,572 R573			RK73GB2A473J RK73HB1J101J RK73HB1J473J RK73GB2A202J RK73GB2A911J	CHIP R 47K J 1/10W CHIP R 100 J 1/16W CHIP R 47K J 1/16W CHIP R 2.0K J 1/10W CHIP R 910 J 1/10W		R669 R670 R676 R677 R678		*	RK73HB1J561J RK73HB1J102J RK73GB2A102J RK73GH2A820D RK73GB2A103J	CHIP R 560 J 1/16W CHIP R 1.0K J 1/16W CHIP R 1.0K J 1/10W CHIP R 82 D 1/10W CHIP R 10K J 1/10W	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)

K : DDX812 K1 : DNX8120 (North America)

X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)

M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-115x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R681			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1E3	IC505			TC4052BFT	MOS-IC	KM1M3 R1 X1E1E2
R689			RK73GB2A101J	CHIP R 100 J 1/10W		IC600,601			NJM2286V-ZB	ANALOGUE IC	
R702			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC604	*		74AHC1GU04GW	MOS-IC	
R703,704			RK73GB2A100J	CHIP R 10 J 1/10W		IC604	*		74AHC1GU04GW	MOS-IC	
R705			RK73EB2E000J	CHIP R 0.0 J 1/4W		IC604	*		74AHC1GU04GW	MOS-IC	KM1M3 R1 X1E1E2
R706-708			RK73GB2A101J	CHIP R 100 J 1/10W		IC606			TC7WH157FU-F	MOS-IC	
R710			RK73GB2A331J	CHIP R 330 J 1/10W		IC608			74LVC3G34DP	MOS-IC	
R711			RK73GB2A100J	CHIP R 10 J 1/10W		IC609			AN15885A-VF	ANALOGUE IC	
R712			RK73GB2A101J	CHIP R 100 J 1/10W		IC612	*		74AHC1GU04GW	MOS-IC	
R713			RK73GB2A221J	CHIP R 220 J 1/10W		IC612	*		74AHC1GU04GW	MOS-IC	
R714-725			RK73GB2A101J	CHIP R 100 J 1/10W		IC612	*		74AHC1GU04GW	MOS-IC	
R726			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC700			LB1836M-TLM-E	ANALOGUE IC	
R727,728			RK73GB2A100J	CHIP R 10 J 1/10W		Q1			DTC144EUA	DIGITAL TRANSISTOR	
R729			RK73GB2A101J	CHIP R 100 J 1/10W	K1E3	Q2			2SA1576A	TRANSISTOR	X1E1E2
R839-842			RK73GB2A101J	CHIP R 100 J 1/10W		Q3			DTC114YUA	DIGITAL TRANSISTOR	
R853			RK73GB2A471J	CHIP R 470 J 1/10W		Q4			2SC4081	TRANSISTOR	
R854			RK73GB2A473J	CHIP R 47K J 1/10W		Q5			2SA1576A	TRANSISTOR	
R856			RK73GB2A473J	CHIP R 47K J 1/10W		Q11			DTC114YUA	DIGITAL TRANSISTOR	
R858			RK73GB2A471J	CHIP R 470 J 1/10W		Q12			DTA114TUA	DIGITAL TRANSISTOR	
R859			RK73GB2A101J	CHIP R 100 J 1/10W		Q13			2SA1576A	TRANSISTOR	
R860,861			RK73GB2A100J	CHIP R 10 J 1/10W		Q14			2SC4081	TRANSISTOR	
R862			RK73GB2A101J	CHIP R 100 J 1/10W		Q15			TPC8110-F	FET	
R863			RK73GB2A470J	CHIP R 47 J 1/10W		Q16			2SA1576A	TRANSISTOR	
R909			RK73FB2B000J	CHIP R 0.0 J 1/8W	K1E3	Q17			2SC4081	TRANSISTOR	K1E3 K1E3 K1E3 KM1M3
R999			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q18			DTA114EUA	DIGITAL TRANSISTOR	
D2			1SR154-400	DIODE		Q19,20			2SC4617	TRANSISTOR	
D3			EP05Q04	DIODE		Q21			2SB1184	TRANSISTOR	
D200-203			1SS357-F	DIODE		Q22			2SC4617	TRANSISTOR	
D501			DAP202U	DIODE		Q23			2SA1774	TRANSISTOR	
D504			AVRM16180M6AB	VARISTOR		Q28			2SB1184	TRANSISTOR	
D505,506			AVRM16120M6AB	VARISTOR		Q29			2SC4081	TRANSISTOR	
D507			AVRM16180M6AB	VARISTOR		Q31			2SC4081	TRANSISTOR	
D511			AVRM16120M6AB	VARISTOR		Q32			2SA1576A	TRANSISTOR	
D512,513			AVRM16270MAAB	VARISTOR	K1E3 E1E2E3 M3	Q35			2SB1184	TRANSISTOR	K1E3 K1E3 K1E3 KM1M3
D700,701			AVRM16180M6AB	VARISTOR		Q37			2SC4081	TRANSISTOR	
D702-710			AVRM16120M6AB	VARISTOR		Q38			2SA1576A	TRANSISTOR	
D850			DAP202U	DIODE		Q39			2SC4081	TRANSISTOR	
D851			02DZ9.1F-Z	ZENER DIODE		Q44			2SB1689	TRANSISTOR	
IC3			SI-3050LUS	ANALOGUE IC		Q45			DTC114YUA	DIGITAL TRANSISTOR	
IC4			R1114N331B-TR	ANALOGUE IC (3.3V LF)		Q46			2SC4081	TRANSISTOR	
IC8			XC6219B332PR	ANALOGUE IC		Q47			2SB1184	TRANSISTOR	
IC200,201			LTC3728LEGN	ANALOGUE IC		Q48			2SB1689	TRANSISTOR	
IC400			W05-1260-00	ROM IC		Q49			DTC114YUA	DIGITAL TRANSISTOR	
IC400			W05-1261-00	ROM IC	M1 R1X1	Q200			DTC144EUA	DIGITAL TRANSISTOR	K1E3 K1E3 K1E3 KM1M3
IC400			W05-1261-00	ROM IC		Q201			DTC114YUA	DIGITAL TRANSISTOR	
IC400			W05-1262-00	ROM IC		Q202-204			DTC144EUA	DIGITAL TRANSISTOR	
IC400			W05-1263-00	ROM IC		Q205-208			HAT2218R-E	DUAL FET	
IC402			S-80835CNNB-G	MOS-IC		Q400			2SA1576A	TRANSISTOR	
IC404		*	30878MJBA24GP	MICROCONTROLLER IC		Q402			DTC144EUA	DIGITAL TRANSISTOR	
IC405			74AHCT1G08GW	MOS-IC		Q403			DTA114YUA	DIGITAL TRANSISTOR	
IC500			NJM4565V-ZB	ANALOGUE IC		Q404			DTC114YUA	DIGITAL TRANSISTOR	
IC501			NJM2505AF-ZB	ANALOGUE IC		Q500			DTA114YUA	DIGITAL TRANSISTOR	
IC502			TC4052BFT	MOS-IC		Q501			2SA1576A	TRANSISTOR	
IC503		*	74AHC2G126DP	MOS-IC	M1 R1X1	Q502-505			DTC114YUA	DIGITAL TRANSISTOR	K1E3 K1E3 KM1M3
IC504			NJM2794RB2ZB	ANALOGUE IC		Q502,503			DTC114YUA	DIGITAL TRANSISTOR	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-115x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q502,503 Q502,503 Q505 Q505 Q505			DTC114YUA DTC114YUA DTC114YUA DTC114YUA DTC114YUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	R1 X1E1E2 KM1M3 R1 X1E1E2
Q506 Q507,508 Q509 Q510 Q600-602			2SC4081 DTC114YUA 2SA1576A 2SC4081 2SA1576A	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q603-605 Q606 Q700 Q850,851 Q852			2SC4081 2SA1576A 2SA1576A DTC643TU DTA114YUA	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
SWITCH UNIT (X16-6280-10)					
D1-21 D22		*	B30-1795-05 B30-1566-05	LED (1608 BLUE) LED (1608 RED)	
C1,2			CK73GB1A105K	CHIP C 1.0UF K	
FPC2	3E	*	J86-0050-15	FPC (LEAD FREE)	
S1 S2-8		*	S70-0948-05 S70-0950-05	TACT SWITCH TACT SWITCH	
D51-73 IC1			AVRM16120M6AB GP1US301XP	VARISTOR ANALOGUE IC	
SUB-CIRCUIT UNIT (X16-6360-10)					
C1			CK73GB1A105K	CHIP C 1.0UF K	K1E3
CN1 J1		*	E41-2451-05 E68-0025-05	FLAT CABLE CONNECTOR JACK (SD CARD SLOT)	K1E3 K1E3
PROCESSOR UNIT (X17-2030-10)					
C1 C2 C3-5 C6-8 C9			CK73HB1H102K CE32CL1C100M CK73EB1C106K CE32BJ1C100M CK73HB1E103K	CHIP C 1000PF K CHIP EL 10UF 16WV CHIP C 10UF K CHIP EL 10UF 16WV CHIP C 0.010UF K	
C10 C11-13 C14 C15-17 C18,19			CC73HCH1H681J CC73HCH1H181J CK73HB1H332K CC73HCH1H331J CK73HB1E103K	CHIP C 680PF J CHIP C 180PF J CHIP C 3300PF K CHIP C 330PF J CHIP C 0.010UF K	
C20,21 C22,23 C24,25 C26,27 C30,31			CE32BJ1C220M CC73HCH1H181J CC73HCH1H331J CK73HB1E103K CE32BJ1C100M	CHIP EL 22UF 16WV CHIP C 180PF J CHIP C 330PF J CHIP C 0.010UF K CHIP EL 10UF 16WV	
C32,33 C34 C35 C36 C37			CK73EB1C106K CE32CL1C100M CK73EB1C106K CE32CL1C100M CK73HB1A104K	CHIP C 10UF K CHIP EL 10UF 16WV CHIP C 10UF K CHIP EL 10UF 16WV CHIP C 0.10UF K	
C38 C39-41			CK73GB1H104K CK73HB1A104K	CHIP C 0.10UF K CHIP C 0.10UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C42 C43 C44 C45 C46			CE32BJ1C100M CK73HB1A104K CE32CL1C100M CE32BJ1C100M CK73HB1A104K	CHIP EL 10UF 16WV CHIP C 0.10UF K CHIP EL 10UF 16WV CHIP EL 10UF 16WV CHIP C 0.10UF K	
C47,48 C49,50 C51-54 C55 C56-58			CK73FB0J226M CC73HCH1H150J CK73HB1A104K CK73FB0J106K CK73HB1A104K	CHIP C 22UF M CHIP C 15PF J CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K	
C59 C60-63 C64 C65 C66			CK73HB1H102K CK73HB1A104K CK73GB1A334K CE32BJ1C100M CE32AU1A560M	CHIP C 1000PF K CHIP C 0.10UF K CHIP C 0.33UF K CHIP EL 10UF 16WV CHIP EL 56UF 10WV	
C68,69 C70 C71 C75 C76,77			CK73HB1H102K CC73HCH1H221J CK73HB1A104K CC73HCH1H471J CK73HB1A104K	CHIP C 1000PF K CHIP C 220PF J CHIP C 0.10UF K CHIP C 470PF J CHIP C 0.10UF K	
C78,79 C80 C82			CK73HB1H102K CK73GB1A105K CK73GB1H102K	CHIP C 1000PF K CHIP C 1.0UF K CHIP C 1000PF K	
CN1		*	E41-2986-05	FLAT CABLE CONNECTOR	
L1 X1			L41-1005-33 L77-2908-05	SMALL FIXED INDUCTOR (10U) CRYSTAL RESONATOR (12.000MHZ)	
R2 R3,4 R5 R6 R7			RK73GB2A4R7J RK73HB1J562J RK73HB1J153J RK73HB1J123J RK73HB1J562J	CHIP R 4.7 J 1/10W CHIP R 5.6K J 1/16W CHIP R 15K J 1/16W CHIP R 12K J 1/16W CHIP R 5.6K J 1/16W	
R8 R9,10 R11 R12 R13,14			RK73HB1J123J RK73HB1J103J RK73HB1J153J RK73HB1J123J RK73HB1J133J	CHIP R 12K J 1/16W CHIP R 10K J 1/16W CHIP R 15K J 1/16W CHIP R 12K J 1/16W CHIP R 13K J 1/16W	
R15,16 R17 R18,19 R20 R21,22			RK73HB1J103J RK73HB1J133J RK73HB1J332J RK73HB1J103J RK73HB1J332J	CHIP R 10K J 1/16W CHIP R 13K J 1/16W CHIP R 3.3K J 1/16W CHIP R 10K J 1/16W CHIP R 3.3K J 1/16W	
R23,24 R25,26 R27,28 R40 R41			RK73HB1J562J RK73HB1J123J RK73HB1J133J RK73GB2A4R7J RK73HB1J470J	CHIP R 5.6K J 1/16W CHIP R 12K J 1/16W CHIP R 13K J 1/16W CHIP R 4.7 J 1/10W CHIP R 47 J 1/16W	
R42 R43-45 R49,50 R52 R53			RK73HB1J472J RK73HB1J470J RK73HB1J470J RK73HB1J470J RK73HB1J000J	CHIP R 4.7K J 1/16W CHIP R 47 J 1/16W CHIP R 47 J 1/16W CHIP R 47 J 1/16W CHIP R 0.0 J 1/16W	
R54-56 R57			RK73HB1J470J RK73GB2A472J	CHIP R 47 J 1/16W CHIP R 4.7K J 1/10W	

E1 : DDX8022BT **E2** : DDX8022BTY **E3** : DNX8220BT (Europe)
K : DDX812 **K1** : DNX8120 (North America)
X1 : DDX8032BT (Australia) **R1** : DDX8032BT (Latin America)
M1 : DDX8032BT **M3** : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

PROCESSOR UNIT (X17-2030-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R61-64			RK73HB1J470J	CHIP R 47 J 1/16W	
R66-72			RK73HB1J470J	CHIP R 47 J 1/16W	
R73			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R74			RK73HB1J104J	CHIP R 100K J 1/16W	
R75			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R76			RK73HB1J471J	CHIP R 470 J 1/16W	
R78-80			RK73HB1J100J	CHIP R 10 J 1/16W	
R81-85			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R86			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R87			RK73HB1J100J	CHIP R 10 J 1/16W	
R88,89			RK73HB1J470J	CHIP R 47 J 1/16W	
R90,91			RK73GB2A000J	CHIP R 0.0 J 1/10W	
D1			CRS04	DIODE	
IC1-4			NJM4580V-ZB	ANALOGUE IC	
IC5			NJM2123V-ZB	ANALOGUE IC	
IC6		*	WM8580AGEFTRV	MOS-IC	
IC7		*	DSPC56371AF17	MOS-IC	
IC8		*	BA033CC0FP	ANALOGUE IC	
IC10			E-LD1117DTC	ANALOGUE IC	

CONTROL CIRCUIT UNIT (X29-4490-10)

C1,2			CK73GB1H103K	CHIP C 0.010UF K	
C7-9			CK73FB1C105K	CHIP C 1.0UF K	
C11			CK73FB1C105K	CHIP C 1.0UF K	
C14			CK73FB1C106K	CHIP C 10UF K	
C15			CK73FB1C105K	CHIP C 1.0UF K	
C16			CE32BJ1C100M	CHIP EL 10UF 16WV	
C17			CK73GB1H102K	CHIP C 1000PF K	
C18,19			CK73GB1H104K	CHIP C 0.10UF K	
C20			CK73GB1H102K	CHIP C 1000PF K	
C21			CE32BJ1C100M	CHIP EL 10UF 16WV	
C24			CD04AT0J331M	ELECTRO 330UF 6.3WV	
C27-29			CK73GB1H104K	CHIP C 0.10UF K	
C100-102			CK73GB1H104K	CHIP C 0.10UF K	
C103,104			CE32BJ1C100M	CHIP EL 10UF 16WV	
C105			CK73GB1H103K	CHIP C 0.010UF K	
C106			CE32BJ1C100M	CHIP EL 10UF 16WV	
C107,108			CK73GB1H102K	CHIP C 1000PF K	
C109-111			CE32BJ1C100M	CHIP EL 10UF 16WV	
C112			CK73GB1H103K	CHIP C 0.010UF K	
C113-115			CE32BJ1C100M	CHIP EL 10UF 16WV	
C116			CK73GB1H102K	CHIP C 1000PF K	
C117			CK73GB1H103K	CHIP C 0.010UF K	
C118			CK73GB1H102K	CHIP C 1000PF K	
C119-121			CE32BJ1C100M	CHIP EL 10UF 16WV	
C122			CK73GB1H103K	CHIP C 0.010UF K	
C123,124			CK73EB1C106K	CHIP C 10UF K	
C125			CK73GB1H102K	CHIP C 1000PF K	
C126			CK73EB1C106K	CHIP C 10UF K	
C127			CK73GB1H103K	CHIP C 0.010UF K	
C128			CK73GB1H102K	CHIP C 1000PF K	
C129-131			CK73EB1C106K	CHIP C 10UF K	
C132			CK73GB1H103K	CHIP C 0.010UF K	
C133			CK73EB1C106K	CHIP C 10UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C134			CD04AS1C101M	ELECTRO 100UF 16WV	
C135-137			CK73EB1E225K	CHIP C 2.2UF K	
C138			CK73EB1C106K	CHIP C 10UF K	
C139			CK73EB1E225K	CHIP C 2.2UF K	
C140			CK73GB1H223K	CHIP C 0.022UF K	
C141			CK73GB1H103K	CHIP C 0.010UF K	
C142,143			CK73EB1C106K	CHIP C 10UF K	
C200			CK73GB1H473K	CHIP C 0.047UF K	
C201			CK73EB1E105K	CHIP C 1.0UF K	
C202			CK73GB1H473K	CHIP C 0.047UF K	
C203			CK73EB1E105K	CHIP C 1.0UF K	
CN1		*	E41-2959-05	PIN ASSY	
CN100		*	E41-2964-05	PIN ASSY	
CN300			E41-2590-05	FLAT CABLE CONNECTOR	
CN302			E40-6469-05	PIN ASSY	
J200			E58-1067-05	RECTANGULAR RECEPTACLE	
WH1		*	E39-0985-15	WIRING HARNESS	
L100			L41-2205-33	SMALL FIXED INDUCTOR (22U)	
R4,5			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R6			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R10			RK73EB2E100J	CHIP R 10 J 1/4W	
R11			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R12			RK73EB2E100J	CHIP R 10 J 1/4W	
R15			RK73EB2E100J	CHIP R 10 J 1/4W	
R16			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R18			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R19			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R20,21			RK73GB2A750J	CHIP R 75 J 1/10W	
R22			RK73GH2A750D	CHIP R 75 D 1/10W	
R24			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R27			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R30			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R31			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R33			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R34			RK73EB2E242J	CHIP R 2.4K J 1/4W	
R35			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R36			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R37			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R40			RK73EB2E100J	CHIP R 10 J 1/4W	
R41			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R43			RK73EB2E100J	CHIP R 10 J 1/4W	
R46			RK73FB2B101J	CHIP R 100 J 1/8W	
R47			RK73GB2A471J	CHIP R 470 J 1/10W	
R48			RK73EB2E750J	CHIP R 75 J 1/4W	
R49			RK73GB2A223J	CHIP R 22K J 1/10W	
R51			RK73GB2A223J	CHIP R 22K J 1/10W	
R53			RK73FB2B101J	CHIP R 100 J 1/8W	
R54			RK73GB2A471J	CHIP R 470 J 1/10W	
R57			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R58,59			RK73GB2A223J	CHIP R 22K J 1/10W	
R100,101			RK73FB2B103J	CHIP R 10K J 1/8W	
R103			RK73GB2A471J	CHIP R 470 J 1/10W	
R104			RK73EB2E820J	CHIP R 82 J 1/4W	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

CONTROL CIRCUIT UNIT (X29-4490-10)

Ref. No.	Added	New	Parts No.	Description	Destination
R105			RK73GB2A104J	CHIP R 100K J 1/10W	
R106			RK73GB2A223J	CHIP R 22K J 1/10W	
R109			RK73GB2A223J	CHIP R 22K J 1/10W	
R111			RK73GB2A104J	CHIP R 100K J 1/10W	
R113			RK73GB2A471J	CHIP R 470 J 1/10W	
R114			RK73EB2E820J	CHIP R 82 J 1/4W	
R115,116			RK73FB2B103J	CHIP R 10K J 1/8W	
R120			RK73GB2A471J	CHIP R 470 J 1/10W	
R121			RK73EB2E820J	CHIP R 82 J 1/4W	
R122,123			RK73FB2B103J	CHIP R 10K J 1/8W	
R124			RK73GB2A104J	CHIP R 100K J 1/10W	
R125			RK73GB2A223J	CHIP R 22K J 1/10W	
R127,128			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R129			RK73GB2A223J	CHIP R 22K J 1/10W	
R131			RK73GB2A104J	CHIP R 100K J 1/10W	
R133			RK73GB2A471J	CHIP R 470 J 1/10W	
R135			RK73EB2E820J	CHIP R 82 J 1/4W	
R136,137			RK73FB2B103J	CHIP R 10K J 1/8W	
R139			RK73GB2A471J	CHIP R 470 J 1/10W	
R140			RK73GB2A104J	CHIP R 100K J 1/10W	
R141			RK73GB2A223J	CHIP R 22K J 1/10W	
R143,144			RK73FB2B103J	CHIP R 10K J 1/8W	
R145			RK73EB2E820J	CHIP R 82 J 1/4W	
R146			RK73GB2A223J	CHIP R 22K J 1/10W	
R148			RK73GB2A104J	CHIP R 100K J 1/10W	
R149			RK73GB2A471J	CHIP R 470 J 1/10W	
R151			RK73EB2E820J	CHIP R 82 J 1/4W	
R152,153			RK73FB2B103J	CHIP R 10K J 1/8W	
R154			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R155			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R156			RK73GB2A750J	CHIP R 75 J 1/10W	
R157			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R158			RK73GB2A470J	CHIP R 47 J 1/10W	
R159			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R160			RK73GB2A274J	CHIP R 270K J 1/10W	
R161			RK73GB2A563J	CHIP R 56K J 1/10W	
R162			RK73GB2A470J	CHIP R 47 J 1/10W	
R163			RK73GB2A103J	CHIP R 10K J 1/10W	
R164,165			RK73GB2A913J	CHIP R 91K J 1/10W	
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R201			RK73GB2A473J	CHIP R 47K J 1/10W	
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	
R203			RK73GB2A473J	CHIP R 47K J 1/10W	
R204			RK73GB2A621J	CHIP R 620 J 1/10W	
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	
R208			RK73GB2A124J	CHIP R 120K J 1/10W	
R209			RK73GB2A103J	CHIP R 10K J 1/10W	
R210			RK73GB2A473J	CHIP R 47K J 1/10W	
R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R212			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R213			RK73GB2A473J	CHIP R 47K J 1/10W	
R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	
R215			RK73GB2A473J	CHIP R 47K J 1/10W	
R216			RK73GB2A621J	CHIP R 620 J 1/10W	

Ref. No.	Added	New	Parts No.	Description	Destination
R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	
R220			RK73GB2A124J	CHIP R 120K J 1/10W	
R221			RK73GB2A103J	CHIP R 10K J 1/10W	
R222			RK73GB2A473J	CHIP R 47K J 1/10W	
R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R300			RK73GB2A105J	CHIP R 1.0M J 1/10W	
D1-3			STZ6.2N	ZENER DIODE	
D4			UDZS8.2B	ZENER DIODE	
D5			UDZS6.2B	ZENER DIODE	
D6			UDZS8.2B	ZENER DIODE	
D7			UDZS6.8B	ZENER DIODE	
D8			UDZS6.2B	ZENER DIODE	
D9			UDZS6.8B	ZENER DIODE	
D10-13			AVRM16270MAAB	VARIATOR	
D14,15			AVRM16180M6AB	VARIATOR	
D16,17			DAP202U	DIODE	
D18			STZ6.2N	ZENER DIODE	
D100-105			AVRM16180M6AB	VARIATOR	
D106-110			DAP202U	DIODE	
D111			UDZS11B	ZENER DIODE	
D112			UDZS5.6B	ZENER DIODE	
D200-203			1SR154-400	DIODE	
IC100-102			NJM4565V-ZB	ANALOGUE IC	
IC103			ICL7660SIBAZ	ANALOGUE IC	
Q4			DTC643TU	DIGITAL TRANSISTOR	
Q5			DTA144EUA	DIGITAL TRANSISTOR	
Q6			DTC643TU	DIGITAL TRANSISTOR	
Q100			DTC643TU	DIGITAL TRANSISTOR	
Q101			DTA144EUA	DIGITAL TRANSISTOR	
Q102-105			DTC643TU	DIGITAL TRANSISTOR	
Q106			DTA144EUA	DIGITAL TRANSISTOR	
Q107			DTC643TU	DIGITAL TRANSISTOR	
Q108			UMC2N	TRANSISTOR	
Q109			2SB1443	TRANSISTOR	
Q110			2SC4081	TRANSISTOR	
Q111			2SA1576A	TRANSISTOR	
Q112			2SC4081	TRANSISTOR	
Q113			2SA1576A	TRANSISTOR	
Q114			2SC4081	TRANSISTOR	
Q115			2SA1576A	TRANSISTOR	
Q116			2SC4081	TRANSISTOR	
Q200			DTC114TUA	DIGITAL TRANSISTOR	
Q201			2SC4081	TRANSISTOR	
Q202			2SB1443	TRANSISTOR	
Q203			2SA1576A	TRANSISTOR	
Q204,205			2SC4081	TRANSISTOR	
Q206			DTC114TUA	DIGITAL TRANSISTOR	
Q207			2SC4081	TRANSISTOR	
Q208			2SB1443	TRANSISTOR	
Q209			2SA1576A	TRANSISTOR	
Q210,211			2SC4081	TRANSISTOR	
ELECTRIC UNIT (X34-584x-xx)					
C1			CE32BJ1H3R3M	CHIP EL 3.3UF 50WV	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-584x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C2			CK73FB1C105K	CHIP C 1.0UF K		C212			CK73EB1C106K	CHIP C 10UF K	
C3			CK73GB1H103K	CHIP C 0.010UF K		C213			CK73FB1A225K	CHIP C 2.2UF K	
C4			CK73FB1C105K	CHIP C 1.0UF K		C214			CK73HB1E103K	CHIP C 0.010UF K	
C5			CK73GB1H104K	CHIP C 0.10UF K		C215			CK73EB1E225K	CHIP C 2.2UF K	
C6,7			CK73FB1C105K	CHIP C 1.0UF K		C216			CK73GB1C104K	CHIP C 0.10UF K	
C8,9			CK73GB1H103K	CHIP C 0.010UF K		C217			CK73GB1A105K	CHIP C 1.0UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K		C218-220			CK73GB1C104K	CHIP C 0.10UF K	
C12			C90-5666-05	ELECTRO 3900UF 25WV		C221			CK73EB1C106K	CHIP C 10UF K	
C13			CK73GB1H103K	CHIP C 0.010UF K		C222-226			CK73HB1A104K	CHIP C 0.10UF K	
C14			CK73FB1E474K	CHIP C 0.47UF K		C227			CK73EB1C106K	CHIP C 10UF K	
C16			CK73GB1H103K	CHIP C 0.010UF K		C228			CK73GB1H103K	CHIP C 0.010UF K	
C17		*	C93-1470-05	CHIP C 15000PF K	E1E2M3	C230			CK73HB1E103K	CHIP C 0.010UF K	
C17		*	C93-1470-05	CHIP C 15000PF K	E3	C231,232			CE32BJ1V100M	CHIP EL 10UF 35WV	
C100			C90-6851-05	ELECTRO 220UF 25WV		C233,234			CK73FB1C105K	CHIP C 1.0UF K	
C101			CK73GB1H104K	CHIP C 0.10UF K		C235,236			CE32BJ1H3R3M	CHIP EL 3.3UF 50WV	
C102			CK73GB1H103K	CHIP C 0.010UF K		C237			CK73FB1C105K	CHIP C 1.0UF K	
C103			CE32BJ1H100M	CHIP EL 10UF 50WV		C238-241			CK73EB1E225K	CHIP C 2.2UF K	
C104			CE32CL1V100M	CHIP EL 10UF 35WV		C242,243			CK73FB1E474K	CHIP C 0.47UF K	
C105			CD04AY1H100M	ELECTRO 10UF 50WV		C244			CE32BJ1H010M	CHIP EL 1.0UF 50WV	
C106			CK73FB1C105K	CHIP C 1.0UF K		C247			CK73GB1H103K	CHIP C 0.010UF K	
C107			CE32BJ1C101M	CHIP EL 100UF 16WV		C248			CE32BJ1V100M	CHIP EL 10UF 35WV	
C108			CD04BA1C100M	ELECTRO 10UF 16WV		C249,250			CK73FB1C105K	CHIP C 1.0UF K	
C109			CC73GCH1H102J	CHIP C 1000PF J		C263			CE32BJ1C470M	CHIP EL 47UF 16WV	
C110			CD04AY0J331M	ELECTRO 330UF 6.3WV		C264,265			C90-6779-05	ELECTRO 0.47UF 16WV	
C111			CK73FB1C105K	CHIP C 1.0UF K	E3	C266			CK73GB1A105K	CHIP C 1.0UF K	
C112			CK73GB1A105K	CHIP C 1.0UF K		C267,268			C90-6780-05	ELECTRO 1UF 16WV	
C113			CE32BJ1C101M	CHIP EL 100UF 16WV	E3	C272			CK73GB1A105K	CHIP C 1.0UF K	
C114,115			CK73GB1C104K	CHIP C 0.10UF K		C274			CK73GB1C104K	CHIP C 0.10UF K	
C116			CK73FB1H334K	CHIP C 0.33UF K		C275,276			C90-6779-05	ELECTRO 0.47UF 16WV	
C117			CC73GCH1H102J	CHIP C 1000PF J		C277			CK73GB1C104K	CHIP C 0.10UF K	
C118			CK73GB1C104K	CHIP C 0.10UF K		C279-284			CC73GCH1H070D	CHIP C 7.0PF D	
C119			CK73FB1E474K	CHIP C 0.47UF K		C300,301			CK73GB1A105K	CHIP C 1.0UF K	
C120			CE32BJ1C100M	CHIP EL 10UF 16WV		C302			CK73GB1C104K	CHIP C 0.10UF K	
C121			CD04BA1C100M	ELECTRO 10UF 16WV		C335			CK73GB1H102K	CHIP C 1000PF K	
C122			CC73GCH1H102J	CHIP C 1000PF J		C338,339			CK73GB1H103K	CHIP C 0.010UF K	
C123			CK73GB1H104K	CHIP C 0.10UF K	KR1K1	C340			CK73GB1H102K	CHIP C 1000PF K	
C124			CK73GB1H103K	CHIP C 0.010UF K		C500,501			CC73GCH1H100D	CHIP C 10PF D	E2M1M3
C125			CK73FB1E474K	CHIP C 0.47UF K		C500,501			CC73GCH1H100D	CHIP C 10PF D	KR1E1
C126			CD04AT1E101M	ELECTRO 100UF 25WV	KR1K1	C500,501			CC73GCH1H100D	CHIP C 10PF D	K1E3
C127			CK73GB1A474K	CHIP C 0.47UF K		C503			CD04AS1V100M	ELECTRO 10UF 35WV	E2M1M3
C128			CD04AY1H220M	ELECTRO 22UF 50WV		C503			CD04AS1V100M	ELECTRO 10UF 35WV	KR1E1
C129			CK73GB1A105K	CHIP C 1.0UF K		C503			CD04AS1V100M	ELECTRO 10UF 35WV	K1E3
C130			CK73GB1A334K	CHIP C 0.33UF K		C504			CK73GB1H103K	CHIP C 0.010UF K	E2M1M3
C131			C90-5692-05	ELECTRO 220UF 16WV		C504			CK73GB1H103K	CHIP C 0.010UF K	KR1E1
C132			CK73GB1C104K	CHIP C 0.10UF K		C504			CK73GB1H103K	CHIP C 0.010UF K	K1E3
C133			CK73GB1H102K	CHIP C 1000PF K	E3	C505			CC73GCH1H331J	CHIP C 330PF J	E2M1M3
C134			CE32BJ1C101M	CHIP EL 100UF 16WV		C505			CC73GCH1H331J	CHIP C 330PF J	KR1E1
C135,136			CK73GB1H103K	CHIP C 0.010UF K		C505			CC73GCH1H331J	CHIP C 330PF J	K1E3
C200-204			CK73FB1A225K	CHIP C 2.2UF K		C506,507			CE32BJ1C220M	CHIP EL 22UF 16WV	
C205			CK73EB1C106K	CHIP C 10UF K		C508			CE32BJ1C100M	CHIP EL 10UF 16WV	
C206			CE32BJ1C220M	CHIP EL 22UF 16WV		C509			CE32BJ1C220M	CHIP EL 22UF 16WV	
C207			CK73GB1C104K	CHIP C 0.10UF K		C515			CE32BJ1C100M	CHIP EL 10UF 16WV	E2M1M3
C208			CK73FB1A225K	CHIP C 2.2UF K		C515			CE32BJ1C100M	CHIP EL 10UF 16WV	KR1E1
C209			CK73GB1C104K	CHIP C 0.10UF K		C515			CE32BJ1C100M	CHIP EL 10UF 16WV	K1E3
C210,211			CK73FB1A225K	CHIP C 2.2UF K		C516-519			CK73GB1H103K	CHIP C 0.010UF K	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-584x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
C520-522 C521,522 C521,522 C521,522 C524			CK73GB1H102K CK73GB1H102K CK73GB1H102K CK73GB1H102K CK73GB1H472K	CHIP C 1000PF K CHIP C 1000PF K CHIP C 1000PF K CHIP C 1000PF K CHIP C 4700PF K	E3 KM1M3 R1K1 X1E1E2	L701 X500 X500 X500 X700			L33-2359-05 L77-2002-05 L77-2002-05 L77-2002-05 L77-2975-05	CHOKE COIL CRYSTAL RESONATOR CRYSTAL RESONATOR CRYSTAL RESONATOR CRYSTAL RESONATOR (FCX-03 11.05)	E2M1M3 KR1E1 K1E3
C550 C551 C552,553 C600-602 C616			CK73GB1C104K CD04AS1C470M CK73GB1A474K CK73GB1A474K CK73GB1H104K	CHIP C 0.10UF K ELECTRO 47UF 16WV CHIP C 0.47UF K CHIP C 0.47UF K CHIP C 0.10UF K		AB E	2C 2C		N09-6727-05 N35-2604-43	TAPTITE SCREW (3X8 T) BINDING HEAD MACHINE SCREW	KR1K1
C617,618 C650-652 C653 C654,655 C656			CK73GB1C104K CK73FB1C105K CK73GB1H103K CC73GCH1H470J CK73GB1H104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 47PF J CHIP C 0.10UF K	KR1K1 KR1K1 KR1K1 KR1K1	R1 R2 R3 R4 R5			RK73GB2A473J RK73GB2A102J RK73EB2E272J RK73FB2B472J RK73GB2A223J	CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 2.7K J 1/4W CHIP R 4.7K J 1/8W CHIP R 22K J 1/10W	
C701 C702 C703 C704 C706,707			CK73GB1H102K CK73GB1C104K CK73GB1H102K CD04BJ0J331M CK73GB1C104K	CHIP C 1000PF K CHIP C 0.10UF K CHIP C 1000PF K ELECTRO 330UF 6.3WV CHIP C 0.10UF K		R6 R7 R8 R9 R10			RK73PB2H102J RK73GB2A473J RK73PB2H102J RK73GB2A473J RK73GB2A103J	CHIP R 1.0K J 1/2W CHIP R 47K J 1/10W CHIP R 1.0K J 1/2W CHIP R 47K J 1/10W CHIP R 10K J 1/10W	
C708,709 C710 C711 C712 C850			CC73GCH1H100D CK73GB1C104K CK73GB1A105K CK73GB1C104K CK73GB1H102K	CHIP C 10PF D CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1000PF K		R11 R12 R13 R14 R15			RK73EB2E103J RK73FB2B000J RK73GB2A104J RK73EB2E272J RK73GB2A102J	CHIP R 10K J 1/4W CHIP R 0.0 J 1/8W CHIP R 100K J 1/10W CHIP R 2.7K J 1/4W CHIP R 1.0K J 1/10W	E1E2E3
C900 C902-904			CK73GB1H102K CK73GB1H472K	CHIP C 1000PF K CHIP C 4700PF K		R16 R16 R17 R17 R18			RK73GB2A103J RK73GB2A103J RK73GB2A222J RK73GB2A222J RK73EB2E102J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 1.0K J 1/4W	KR1M1 X1M3K1 KR1M1 X1M3K1
CN300 CN350 CN400 CN401 CN550		*	E41-2771-05 E41-2979-05 E41-2237-05 E40-6470-05 E41-2772-05	PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR PIN ASSY PIN ASSY	K1E3	R19 R20,21 R20,21 R22 R23			RK73FB2B472J RK73PB2H102J RK73PB2H102J RK73GB2A104J RK73GB2A103J	CHIP R 4.7K J 1/8W CHIP R 1.0K J 1/2W CHIP R 1.0K J 1/2W CHIP R 100K J 1/10W CHIP R 10K J 1/10W	KR1M1 X1M3K1 KR1M1
CN700 CN900 J1 J550 J550		*	E41-2248-05 E41-2986-05 E58-1043-05 E56-0864-05 E56-0864-05	PIN ASSY FLAT CABLE CONNECTOR RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE CYLINDRICAL RECEPTACLE	KM1M3 R1	R23 R24 R25 R26 R27			RK73GB2A103J RK73GB2A223J RK73GB2A103J RK73GB2A183J RK73GB2A473J	CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 18K J 1/10W CHIP R 47K J 1/10W	X1M3K1
J550 J600 J650 W500 W500		*	E56-0864-05 E58-1034-05 E58-1097-05 E30-6797-05 E30-6797-05	CYLINDRICAL RECEPTACLE RECTANGULAR RECEPTACLE RECTANGULAR RECEPTACLE CORD WITH PLUG (FM/AM ANT) CORD WITH PLUG (FM/AM ANT)	X1E1E2 KR1K1 KM1M3 R1K1	R28 R29 R31 R32 R34			RK73GB2A222J RK73GH2A563D RK73FB2B561J RK73GB2A000J RK73EB2E102J	CHIP R 2.2K J 1/10W CHIP R 56K D 1/10W CHIP R 560 J 1/8W CHIP R 0.0 J 1/10W CHIP R 1.0K J 1/4W	
W500		*	E30-6797-05	CORD WITH PLUG (FM/AM ANT)	X1E1E2	R35 R36,37 R38 R39 R40			RK73GH2A333D RK73GB2A104J RK73GB2A473J RK73EB2E103J RK73GB2A104J	CHIP R 33K D 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 10K J 1/4W CHIP R 100K J 1/10W	
F100 F101			F53-0297-05 F53-0306-05	FUSE (UL,CSA) 1.6A FUSE (UL,CSA) 5A	KR1K1	R41 R42,43 R44 R48 R50			RK73GB2A153J RK73EB2E622J RK73GB2A912J RK73FB2B000J RK73FB2B000J	CHIP R 15K J 1/10W CHIP R 6.2K J 1/4W CHIP R 9.1K J 1/10W CHIP R 0.0 J 1/8W CHIP R 0.0 J 1/8W	
L100 L200 L500 L502 L504			L92-0329-05 L41-1005-33 L41-4795-33 L41-4795-33 L41-4795-33	CHIP FERRITE SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (4.7U)	E3 E2M1M3	R101 R102			RK73FB2B221J RK73GB2A104J	CHIP R 220 J 1/8W CHIP R 100K J 1/10W	
L504 L504 L700			L41-4795-33 L41-4795-33 L92-0319-05	SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (4.7U) CHIP FERRITE	KR1E1 K1E3						

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)

K : DDX812 K1 : DNX8120 (North America)

X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)

M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-584x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R103			RK73FB2B152J	CHIP R 1.5K J 1/8W	E3	R215			RK73GB2A104J	CHIP R 100K J 1/10W	
R104			RK73FB2B203J	CHIP R 20K J 1/8W		R216			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R105			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R217			RK73GB2A103J	CHIP R 10K J 1/10W	
R106			RK73FB2B1R0J	CHIP R 1.0 J 1/8W		R218-223			RK73GB2A101J	CHIP R 100 J 1/10W	
R107			RK73FB2B221J	CHIP R 220 J 1/8W		R224			RK73GB2A103J	CHIP R 10K J 1/10W	
R108			RK73GB2A101J	CHIP R 100 J 1/10W		R225			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R109			RK73GB2A472J	CHIP R 4.7K J 1/10W		R226-229			RK73GB2A470J	CHIP R 47 J 1/10W	
R110			RK73GB2A101J	CHIP R 100 J 1/10W		R232			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R111			RK73GB2A103J	CHIP R 10K J 1/10W		R233,234			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R112			RK73GB2A101J	CHIP R 100 J 1/10W		R237			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R113			RK73GH2A153D	CHIP R 15K D 1/10W	E3	R238,239			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R114			RK73GH2A512D	CHIP R 5.1K D 1/10W		R240			RK73GB2A473J	CHIP R 47K J 1/10W	
R115			RK73GB2A103J	CHIP R 10K J 1/10W		R241			RK73GB2A113J	CHIP R 11K J 1/10W	
R116			RK73GH2A102D	CHIP R 1.0K D 1/10W		R243			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R117			RK73GH2A243D	CHIP R 24K D 1/10W		R244			RK73GB2A100J	CHIP R 10 J 1/10W	
R118			RK73GB2A102J	CHIP R 1.0K J 1/10W	E3	R246			RK73GB2A331J	CHIP R 330 J 1/10W	
R119			RK73GH2A203D	CHIP R 20K D 1/10W		R247			RK73GB2A473J	CHIP R 47K J 1/10W	
R120			RK73GB2A102J	CHIP R 1.0K J 1/10W		R248			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R122			RK73GH2A432D	CHIP R 4.3K D 1/10W		R250			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R124			RK73GB2A223J	CHIP R 22K J 1/10W		R251			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R125			RK73GB2A123J	CHIP R 12K J 1/10W		R252			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R126			RK73FB2B222J	CHIP R 2.2K J 1/8W		R254-259			RK73GB2A151J	CHIP R 150 J 1/10W	
R127			RK73GB2A391J	CHIP R 390 J 1/10W		R262			RK73GB2A561J	CHIP R 560 J 1/10W	
R128			RK73GH2A152D	CHIP R 1.5K D 1/10W		R263			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R129			RK73GH2A222D	CHIP R 2.2K D 1/10W		R300,301			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R130			RK73FB2B221J	CHIP R 220 J 1/8W	KR1K1	R302,303			RK73GB2A183J	CHIP R 18K J 1/10W	
R131			RK73GB2A101J	CHIP R 100 J 1/10W		R304,305			RK73GB2A104J	CHIP R 100K J 1/10W	
R132			RK73GB2A823J	CHIP R 82K J 1/10W		R306			RK73GB2A473J	CHIP R 47K J 1/10W	
R133			RK73GB2A103J	CHIP R 10K J 1/10W		R307			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R135			RK73GH2A223D	CHIP R 22K D 1/10W		R308,309			RK73GB2A470J	CHIP R 47 J 1/10W	
R136			RK73GB2A224J	CHIP R 220K J 1/10W	KR1K1	R334			RK73GB2A471J	CHIP R 470 J 1/10W	
R137			RK73GH2A472D	CHIP R 4.7K D 1/10W	KR1K1	R336			RK73GB2A223J	CHIP R 22K J 1/10W	
R138			RK73GB2A333J	CHIP R 33K J 1/10W		R337			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R139			RK73GB2A224J	CHIP R 220K J 1/10W		R340			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R140			RK73GB2A102J	CHIP R 1.0K J 1/10W		R341			RK73GB2A223J	CHIP R 22K J 1/10W	
R142			RK73GB2A101J	CHIP R 100 J 1/10W		R342			RK73GB2A471J	CHIP R 470 J 1/10W	E2M1M3 KR1E1 K1E3
R143			RK73GB2A473J	CHIP R 47K J 1/10W		R500			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R144			RK73FB2B152J	CHIP R 1.5K J 1/8W		R500			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R145			RK73GB2A104J	CHIP R 100K J 1/10W		R500			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R146			RK73GH2A243D	CHIP R 24K D 1/10W		R501			RK73GB2A223J	CHIP R 22K J 1/10W	
R147			RK73GH2A432D	CHIP R 4.3K D 1/10W		R502			RK73GB2A102J	CHIP R 1.0K J 1/10W	E2M1M3 KR1E1 K1E3
R200			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R503			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R201			RK73GB2A102J	CHIP R 1.0K J 1/10W		R504,505			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R202			RK73GB2A682J	CHIP R 6.8K J 1/10W		R504,505			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R203			RK73GB2A103J	CHIP R 10K J 1/10W		R504,505			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R204,205			RK73HB1J101J	CHIP R 100 J 1/16W		R552			RK73GB2A101J	CHIP R 100 J 1/10W	
R206			RK73GH2A123D	CHIP R 12K D 1/10W		R553			RK73EB2E101J	CHIP R 100 J 1/4W	
R207			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R554			RK73GB2A100J	CHIP R 10 J 1/10W	
R208			RK73HB1J103J	CHIP R 10K J 1/16W		R555			RK73EB2E101J	CHIP R 100 J 1/4W	
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W		R556			RK73GB2A100J	CHIP R 10 J 1/10W	
R210			RK73HB1J104J	CHIP R 100K J 1/16W		R557			RK73EB2E101J	CHIP R 100 J 1/4W	
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W		R558			RK73GB2A100J	CHIP R 10 J 1/10W	
R212			RK73HB1J104J	CHIP R 100K J 1/16W		R559			RK73EB2E101J	CHIP R 100 J 1/4W	
R213			RK73HB1J103J	CHIP R 10K J 1/16W		R560			RK73GB2A100J	CHIP R 10 J 1/10W	
R214			RK73HB1J104J	CHIP R 100K J 1/16W		R561-563			RK73GB2A750J	CHIP R 75 J 1/10W	KM1M3

E1 : DDX8022BT **E2** : DDX8022BTY **E3** : DNX8220BT (Europe)
K : DDX812 **K1** : DNX8120 (North America)
X1 : DDX8032BT (Australia) **R1** : DDX8032BT (Latin America)
M1 : DDX8032BT **M3** : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-584x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
R561-563			RK73GB2A750J	CHIP R 75 J 1/10W	R1	R715			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R561-563			RK73GB2A750J	CHIP R 75 J 1/10W	X1E1E2	R716			RK73HB1J101J	CHIP R 100 J 1/16W	
R561-564			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1E3	R717			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R565			RK73GB2A103J	CHIP R 10K J 1/10W	K1E3	R718			RK73HB1J101J	CHIP R 100 J 1/16W	
R565			RK73GB2A750J	CHIP R 75 J 1/10W	KM1M3	R719			RK73HB1J102J	CHIP R 1.0K J 1/16W	E1E2E3
R565			RK73GB2A750J	CHIP R 75 J 1/10W	R1	R719,720			RK73HB1J102J	CHIP R 1.0K J 1/16W	KR1M1
R565			RK73GB2A750J	CHIP R 75 J 1/10W	X1E1E2	R719,720			RK73HB1J102J	CHIP R 1.0K J 1/16W	X1M3K1
R566			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R721,722			RK73HB1J101J	CHIP R 100 J 1/16W	
R567,568			RK73EB2E100J	CHIP R 10 J 1/4W		R723-725			RK73HB1J470J	CHIP R 47 J 1/16W	
R569,570			RK73EB2E102J	CHIP R 1.0K J 1/4W		R726			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R571-574			RK73GB2A911J	CHIP R 910 J 1/10W	K1E3	R727,728			RK73HB1J103J	CHIP R 10K J 1/16W	
R575			RK73EB2E102J	CHIP R 1.0K J 1/4W		R729,730			RK73HB1J473J	CHIP R 47K J 1/16W	
R576-581			RK73GB2A100J	CHIP R 10 J 1/10W		R731			RK73HB1J101J	CHIP R 100 J 1/16W	
R600			RK73EB2E200J	CHIP R 20 J 1/4W		R732,733			RK73HB1J473J	CHIP R 47K J 1/16W	
R601			RK73EB2E100J	CHIP R 10 J 1/4W		R734			RK73HB1J101J	CHIP R 100 J 1/16W	
R602			RK73EB2E200J	CHIP R 20 J 1/4W		R735			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R603-605			RK73EB2E102J	CHIP R 1.0K J 1/4W		R736			RK73HB1J101J	CHIP R 100 J 1/16W	
R606-608			RK73EB2E101J	CHIP R 100 J 1/4W		R737			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R609,610			RK73EB2E102J	CHIP R 1.0K J 1/4W		R738-741			RK73HB1J101J	CHIP R 100 J 1/16W	
R611			RK73EB2E101J	CHIP R 100 J 1/4W		R742			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R612			RK73GB2A100J	CHIP R 10 J 1/10W		R743			RK73HB1J101J	CHIP R 100 J 1/16W	
R613			RK73GB2A750J	CHIP R 75 J 1/10W		R744			RK73GB2A473J	CHIP R 47K J 1/10W	
R650			RK73EB2E200J	CHIP R 20 J 1/4W	KR1K1	R745,746			RK73HB1J101J	CHIP R 100 J 1/16W	
R651			RK73EB2E100J	CHIP R 10 J 1/4W	KR1K1	R747			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R652			RK73EB2E200J	CHIP R 20 J 1/4W	KR1K1	R748			RK73HB1J101J	CHIP R 100 J 1/16W	
R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	KR1K1	R750			RK73HB1J101J	CHIP R 100 J 1/16W	
R655			RK73GB2A473J	CHIP R 47K J 1/10W		R751			RK73GB2A473J	CHIP R 47K J 1/10W	
R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	KR1K1	R752			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R658			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1	R753,754			RK73HB1J101J	CHIP R 100 J 1/16W	E2M1M3
R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	KR1K1	R753,754			RK73HB1J101J	CHIP R 100 J 1/16W	KR1E1
R660			RK73GB2A101J	CHIP R 100 J 1/10W	KR1K1	R753,754			RK73HB1J101J	CHIP R 100 J 1/16W	K1E3
R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	KR1K1	R754			RK73HB1J101J	CHIP R 100 J 1/16W	X1
R664			RK73GB2A103J	CHIP R 10K J 1/10W	KR1K1	R755			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R665			RK73GB2A104J	CHIP R 100K J 1/10W		R756-758			RK73HB1J101J	CHIP R 100 J 1/16W	E2M1M3
R666			RK73GB2A102J	CHIP R 1.0K J 1/10W	KR1K1	R756-758			RK73HB1J101J	CHIP R 100 J 1/16W	KR1E1
R667-669			RK73GB2A100J	CHIP R 10 J 1/10W	KR1K1	R756-758			RK73HB1J101J	CHIP R 100 J 1/16W	K1E3
R670			RK73GB2A101J	CHIP R 100 J 1/10W	KR1K1	R757			RK73HB1J101J	CHIP R 100 J 1/16W	X1
R671			RK73GB2A000J	CHIP R 0.0 J 1/10W		R759			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R673			RK73GB2A103J	CHIP R 10K J 1/10W	KR1K1	R760			RK73HB1J223J	CHIP R 22K J 1/16W	
R700			RK73HB1J103J	CHIP R 10K J 1/16W	KK1	R762-764			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R700			RK73HB1J303J	CHIP R 30K J 1/16W	X1	R765,766			RK73HB1J473J	CHIP R 47K J 1/16W	E2M1M3
R700			RK73HB1J332J	CHIP R 3.3K J 1/16W	E1E2E3	R765,766			RK73HB1J473J	CHIP R 47K J 1/16W	KR1E1
R700,701			RK73HB1J103J	CHIP R 10K J 1/16W	M1M3	R765,766			RK73HB1J473J	CHIP R 47K J 1/16W	K1E3
R701			RK73HB1J103J	CHIP R 10K J 1/16W	R1E1E2	R767			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R701			RK73HB1J103J	CHIP R 10K J 1/16W	X1E3	R768-770			RK73HB1J473J	CHIP R 47K J 1/16W	E2M1M3
R703			RK73HB1J473J	CHIP R 47K J 1/16W		R768-770			RK73HB1J473J	CHIP R 47K J 1/16W	KR1E1
R704			RK73HB1J102J	CHIP R 1.0K J 1/16W		R768-770			RK73HB1J473J	CHIP R 47K J 1/16W	K1E3
R705			RK73HB1J473J	CHIP R 47K J 1/16W	KM1M3	R768,769			RK73HB1J473J	CHIP R 47K J 1/16W	X1
R705			RK73HB1J473J	CHIP R 47K J 1/16W	R1	R771			RK73HB1J470J	CHIP R 47 J 1/16W	
R705			RK73HB1J473J	CHIP R 47K J 1/16W	X1E1E2	R772,773			RK73HB1J102J	CHIP R 1.0K J 1/16W	KR1K1
R706			RK73HB1J473J	CHIP R 47K J 1/16W	K1E3	R774,775			RK73HB1J101J	CHIP R 100 J 1/16W	
R708			RK73HB1J473J	CHIP R 47K J 1/16W		R776			RK73HB1J102J	CHIP R 1.0K J 1/16W	KR1K1
R710,711			RK73HB1J473J	CHIP R 47K J 1/16W		R777			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R712,713			RK73HB1J222J	CHIP R 2.2K J 1/16W		R780,781			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R714			RK73HB1J101J	CHIP R 100 J 1/16W		R782			RK73HB1J472J	CHIP R 4.7K J 1/16W	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-584x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
Q9,10 Q9,10 Q10 Q11 Q13,14			2SC4081 2SC4081 2SC4081 2SA1576A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	KR1M1 X1M3K1 E1E2E3
Q100,101 Q102 Q103 Q104 Q105			UMC2N 2SB1184 2SC5712-F UMC2N KTA1046-P	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	E3
Q106 Q107 Q108-110 Q111 Q112			2SA1576A 2SB1184 2SC4081 2SB1689 DTC124EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	E3
Q113 Q114 Q115 Q116 Q117			DTC114YUA 2SA1576A KTA1046-P DTC124EUA 2SA1576A	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	KR1K1 KR1K1 KR1K1
Q118 Q119 Q120 Q121 Q122			DTA124EUA TPC8110-F UMC2N 2SB1449(R)-E 2SC4081	DIGITAL TRANSISTOR FET TRANSISTOR TRANSISTOR TRANSISTOR	KR1K1
Q200 Q300 Q301 Q302 Q500			2SA1576A DTC643TU DTA144EUA DTC643TU DTC124EUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	KR1K1 KR1K1 KR1K1
Q501 Q650,651 Q652 Q653,654 Q700			2SB1689 2SC4081 DTA114EUA DTC144EUA DTC144EUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	KR1K1 KR1K1 KR1K1
Q701 Q702 Q703 Q704 Q705			RT1N440M DTC114YUA DTC124EUA DTC114TUA 2SK3019	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR FET	
Q706 Q707 TH201			DTA114TUA 2SK3019 PRF18BE471QS2	DIGITAL TRANSISTOR FET POSITIVE RESISTOR	
A500 A500 A500 A500 A501	2C	*	X86-4030-11 X86-4030-11 X86-4032-70 X86-4032-70 X89-3062-71	FRONT-END UNIT FRONT-END UNIT FRONT-END UNIT FRONT-END UNIT DAUGHTER UNIT	KR1X1 K1 E1E2M1 M3E3 E3
VIDEO UNIT (X35-4940-10)					
C1,2 C3-6 C7,8 C9 C10			CK73EB1E106K CK73GB1H103K CK73GB0J225K CK73GB1A474K CK73GB1E183K	CHIP C 10UF K CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 0.47UF K CHIP C 0.018UF K	

Ref. No.	Ad	New	Parts No.	Description	Destination
C11 C12 C13 C14,15 C16			CK73GB1H152K CK73GB0J225K CK73GB1H103K CK73GB1H473K C93-1383-05	CHIP C 1500PF K CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 0.047UF K CHIP C 220PF F	
C18-20 C21-24 C25 C26 C27		*	CK73EB1E106K C93-1283-05 C93-1461-05 C93-1273-05 C93-1466-05	CHIP C 10UF K CHIP C 1.0UF K CHIP C 2700PF F CHIP C 15PF J CHIP C 0.018UF F	
C101 C102 C103 C104-107 C108			CK73FB0J106K CK73GB1H103K CC73GCH1H102J CK73GB1C104K CK73EB1E106K	CHIP C 10UF K CHIP C 0.010UF K CHIP C 1000PF J CHIP C 0.10UF K CHIP C 10UF K	
C109 C110 C111 C112 C113			CK73GB1H104K CK73GB1H103K CK73FB1E154K CC73GCH1H102J CK73GB1C224K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.15UF K CHIP C 1000PF J CHIP C 0.22UF K	
C114 C115 C117,118 C119 C120			CC73GCH1H151J CK73EB1E225K CK73FB1C106K CK73GB1C104K CK73FB1C106K	CHIP C 150PF J CHIP C 2.2UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K	
C121 C122 C124 C131 C140,141			CK73GB1C104K CK73GB1H103K CK73FB1C106K CK73FB1C106K CK73GB1C104K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 10UF K CHIP C 0.10UF K	
C200 C201 C202 C203 C204,205			CK73FB0J106K CK73GB1H103K CK73FB1C106K CK73GB1H103K CK73FB1A475K	CHIP C 10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.010UF K CHIP C 4.7UF K	
C207 C208 C209 C210 C211			CC73GCH1H560J CK73EB1E106K CK73GB1H103K CK73EB1E106K CK73GB1H103K	CHIP C 56PF J CHIP C 10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.010UF K	
C216,217 C218 C219 C221 C301			CK73FB1C106K CK73GB1C104K CC73GCH1H101J CK73FB1C106K CK73HB1E103K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 10UF K CHIP C 0.010UF K	
C302 C303 C304 C305 C306			CK73FB0J106K CK73HB1E103K CK73FB0J106K CK73GB1A105K CK73HB1A104K	CHIP C 10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 1.0UF K CHIP C 0.10UF K	
C308 C309 C310 C311,312 C313			CK73GB1A105K CC73HCH1H560J CC73HCH1H330J CC73HCH1H102J CK73HB1A104K	CHIP C 1.0UF K CHIP C 56PF J CHIP C 33PF J CHIP C 1000PF J CHIP C 0.10UF K	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4940-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C314			CK73FB0J106K	CHIP C 10UF K		R2,3			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C315-334			CK73HB1A104K	CHIP C 0.10UF K		R5			RK73GB2A153J	CHIP R 15K J 1/10W	
C335			CC73HCH1H240J	CHIP C 24PF J		R7			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C336			CC73HCH1H270J	CHIP C 27PF J		R8			RK73GB2A220J	CHIP R 22 J 1/10W	
C337			CK73HB1A104K	CHIP C 0.10UF K		R9			RK73GH2A433D	CHIP R 43K D 1/10W	
C338,339			CK73HB1E103K	CHIP C 0.010UF K		R10			RK73GB2A220J	CHIP R 22 J 1/10W	
C340			CK73HB1A104K	CHIP C 0.10UF K		R11			RK73GB2A515J	CHIP R 5.1M J 1/10W	
C341			CK73FB0J106K	CHIP C 10UF K		R12			RK73GH2A513D	CHIP R 51K D 1/10W	
C342-347			CK73HB1A104K	CHIP C 0.10UF K		R13			RK73GB2A104J	CHIP R 100K J 1/10W	
C349,350			CK73HB1A104K	CHIP C 0.10UF K		R14			RK73GH2A164D	CHIP R 160K D 1/10W	
C360			CK73HB1H102K	CHIP C 1000PF K		R15			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C361			CC73HCH1H820J	CHIP C 82PF J		R16			RK73GB2A105J	CHIP R 1.0M J 1/10W	
C362,363			CK73HB1A104K	CHIP C 0.10UF K		R17			RK73GB2A512J	CHIP R 5.1K J 1/10W	
C372			CK73FB1C105K	CHIP C 1.0UF K		R18			RK73GH2A563D	CHIP R 56K D 1/10W	
C373,374			CK73FB0J106K	CHIP C 10UF K		R19			RK73GH2A754D	CHIP R 750K D 1/10W	
C375			CK73EB1E105K	CHIP C 1.0UF K		R20			RK73GB2A512J	CHIP R 5.1K J 1/10W	
C376-382			CK73HB1A104K	CHIP C 0.10UF K		R21-24			RK73GB2A220J	CHIP R 22 J 1/10W	
C386			CK73HB1A104K	CHIP C 0.10UF K		R25			RK73GH2A471D	CHIP R 470 D 1/10W	
C387			CK73HB1H102K	CHIP C 1000PF K		R27			RK73GH2A103D	CHIP R 10K D 1/10W	
C500,501			CK73GB1H103K	CHIP C 0.010UF K		R32			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C502			CK73FB0J106K	CHIP C 10UF K		R100			RK73GB2A100J	CHIP R 10 J 1/10W	
C601			CK73FB0J106K	CHIP C 10UF K		R101			RK73GB2A754J	CHIP R 750K J 1/10W	
C602			CC73GCH1H221J	CHIP C 220PF J		R102			RK73GB2A473J	CHIP R 47K J 1/10W	
C603			CK73GB1C104K	CHIP C 0.10UF K		R104			RK73GH2A114D	CHIP R 110K D 1/10W	
CN1			E41-2642-05	PIN ASSY		R105			RK73GH2A103D	CHIP R 10K D 1/10W	
CN100		*	E41-2985-05	FLAT CABLE CONNECTOR		R106			RK73GH2A164D	CHIP R 160K D 1/10W	
CN300			E41-2359-05	PIN ASSY		R107			RK73GH2A183D	CHIP R 18K D 1/10W	
CN301			E41-2208-05	FLAT CABLE CONNECTOR		R108-110			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CN500			E41-2088-05	FLAT CABLE CONNECTOR		R111			RK73GB2A222J	CHIP R 2.2K J 1/10W	
CN600		*	E41-2974-05	FLAT CABLE CONNECTOR		R112			RK73GB2A103J	CHIP R 10K J 1/10W	
J1,2			E04-0433-05	RF COAXIAL CABLE RECEPTACLE		R140			RK73GH2A103D	CHIP R 10K D 1/10W	
F100			F53-0280-05	FUSE 0.63A		R141			RK73GH2A513D	CHIP R 51K D 1/10W	
L1			L33-2454-05	CHOKE COIL		R142,143			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L2			L19-0802-05	TRANSFORMER FOR CONVERTER		R201			RK73GB2A223J	CHIP R 22K J 1/10W	
L100			L33-2454-05	CHOKE COIL		R203			RK73GB2A473J	CHIP R 47K J 1/10W	
L101			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)		R205			RK73GH2A392D	CHIP R 3.9K D 1/10W	
L102			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R206			RK73GH2A222D	CHIP R 2.2K D 1/10W	
L103,104			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)		R207			RK73GH2A123D	CHIP R 12K D 1/10W	
L105			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R208			RK73GB2A101J	CHIP R 100 J 1/10W	
L200,201			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R209,210			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L203			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R212			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L300,301			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R216,217			RK73GB2A470J	CHIP R 47 J 1/10W	
L302			L41-2205-33	SMALL FIXED INDUCTOR (22U)		R222,223			RK73GH2A102D	CHIP R 1.0K D 1/10W	
L303			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R224			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L304-306			L92-0319-05	CHIP FERRITE		R228			RK73GH2A153D	CHIP R 15K D 1/10W	
L307			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R229			RK73GH2A103D	CHIP R 10K D 1/10W	
L308-311			L92-0319-05	CHIP FERRITE		R300-302			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L312			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R303,304			RK73FB2B101J	CHIP R 100 J 1/8W	
L313			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)		R305,306			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L315			L92-0319-05	CHIP FERRITE		R307-309			RK73HB1J101J	CHIP R 100 J 1/16W	
L600			L41-1005-33	SMALL FIXED INDUCTOR (10U)		R310-312			RK73HB1J000J	CHIP R 0.0 J 1/16W	
X300			L77-2965-05	CRYSTAL RESONATOR (12.000MHZ)		R313,314			RK73HB1J101J	CHIP R 100 J 1/16W	
R1			RK73FB2B152J	CHIP R 1.5K J 1/8W		R320			RK73HB1J272J	CHIP R 2.7K J 1/16W	
						R321			RK73HB1J100J	CHIP R 10 J 1/16W	
						R322			RK73HB1J101J	CHIP R 100 J 1/16W	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4940-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R323 R324 R325-328 R331,332 R336			RK73HB1J100J RK73HB1J272J RK73HB1J000J RK73HB1J101J RK73HB1J105J	CHIP R 10 J 1/16W CHIP R 2.7K J 1/16W CHIP R 0.0 J 1/16W CHIP R 100 J 1/16W CHIP R 1.0M J 1/16W	
R337 R338 R339-341 R342 R343			RK73HB1J102J RK73HB1J000J RK73HB1J330J RK73HB1J103J RK73HB1J000J	CHIP R 1.0K J 1/16W CHIP R 0.0 J 1/16W CHIP R 33 J 1/16W CHIP R 10K J 1/16W CHIP R 0.0 J 1/16W	
R345,346 R347,348 R351 R353 R354,355			RK73HB1J000J RK73HB1J330J RK73HB1J000J RK73HB1J473J RK73HB1J330J	CHIP R 0.0 J 1/16W CHIP R 33 J 1/16W CHIP R 0.0 J 1/16W CHIP R 47K J 1/16W CHIP R 33 J 1/16W	
R359 R360 R361 R362 R363-370			RK73HB1J472J RK73HB1J181J RK73HB1J101J RK73HB1J560J RK73HB1J101J	CHIP R 4.7K J 1/16W CHIP R 180 J 1/16W CHIP R 100 J 1/16W CHIP R 56 J 1/16W CHIP R 100 J 1/16W	
R372 R373 R392-397 R398 R399			RK73HB1J101J RK73HB1J472J RK73HB1J000J RK73HB1J102J RK73HB1J101J	CHIP R 100 J 1/16W CHIP R 4.7K J 1/16W CHIP R 0.0 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W	
R400-403 R404 R405 R406 R407			RK73HB1J473J RK73HB1J000J RK73HB1J101J RK73GH2A911D RK73GH2A102D	CHIP R 47K J 1/16W CHIP R 0.0 J 1/16W CHIP R 100 J 1/16W CHIP R 910 D 1/10W CHIP R 1.0K D 1/10W	
R410 R413 R414,415 R416 R500,501			RK73HB1J000J RK73HB1J101J RK73HB1J103J RK73FB2B000J RK73GB2A333J	CHIP R 0.0 J 1/16W CHIP R 100 J 1/16W CHIP R 10K J 1/16W CHIP R 0.0 J 1/8W CHIP R 33K J 1/10W	
R504-507 R509 R603-606 R607 R608			RK73EB2E100J RK73FB2B000J RK73EB2E101J RK73EB2E100J RK73EB2E121J	CHIP R 10 J 1/4W CHIP R 0.0 J 1/8W CHIP R 100 J 1/4W CHIP R 10 J 1/4W CHIP R 120 J 1/4W	
R609 R610 R611-614 R615 R616,617			RK73EB2E101J RK73GB2A101J RK73GB2A000J RK73GB2A302J RK73GB2A000J	CHIP R 100 J 1/4W CHIP R 100 J 1/10W CHIP R 0.0 J 1/10W CHIP R 3.0K J 1/10W CHIP R 0.0 J 1/10W	
R618 R619,620 R621 R622 R623			RK73GB2A512J RK73GB2A000J RK73GB2A103J RK73GB2A000J RK73GB2A303J	CHIP R 5.1K J 1/10W CHIP R 0.0 J 1/10W CHIP R 10K J 1/10W CHIP R 0.0 J 1/10W CHIP R 30K J 1/10W	
R624-627 R629-634 R635 R636-638 R643,644			RK73GB2A681J RK73GB2A681J RK73FB2B132J RK73GB2A000J RK73GB2A473J	CHIP R 680 J 1/10W CHIP R 680 J 1/10W CHIP R 1.3K J 1/8W CHIP R 0.0 J 1/10W CHIP R 47K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R645 VR200			RK73GB2A822J R32-0350-05	CHIP R 8.2K J 1/10W SEMI FIXED VARIABLE RESIS (10K)	
D1 D2 D3,4 D5 D6			UDZS5.6B AVRM16120M6AB 1SS355 UDZS5.6B MA2S784-F	ZENER DIODE VARISTOR DIODE ZENER DIODE DIODE	
D7 D8,9 D100 D101-103 D306,307			UDZS5.6B DA204U EP05Q06 EP05Q04 AVRM16270MAAB	ZENER DIODE DIODE DIODE DIODE VARISTOR	
D500-503 D504 D605-608 D609 D610,611			UDZS6.8B DA204U AVRM16120M6AB AVRM16180M6AB AVRM16120M6AB	ZENER DIODE DIODE VARISTOR VARISTOR VARISTOR	
IC1 IC100 IC101 IC102 IC200			OZ964ISN-C-SN TC7WH123FU-F 74AHC1G04GW LT1947-PBF TA75W558FU-F	ANALOGUE IC MOS-IC MOS-IC ANALOGUE IC ANALOGUE IC	
IC300 IC301 IC302 IC303 IC304		*	S-1112B25MCG MST7988LA-ALF 74LVC3G34DP AT25F2048-6Z1 74AHC1G04GW	ANALOGUE IC MOS-IC MOS-IC ROM IC MOS-IC	
Q1 Q2,3 Q4 Q5 Q140			2SC4081 SI5504DC-E3 2SC4081 DTC114YUA 2SC4081	TRANSISTOR DUAL FET TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q141 Q202 Q203 Q205 Q300			2SA1576A 2SC4097 2SA1577 UMZ1N 2SA1576A	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q301 Q302,303 Q304 Q500 Q501			2SC4081 DTC114YUA DTA123JUA DTA143ZUA DTC143ZUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q502 Q503 Q504 Q600 Q601			DTA143ZUA DTC143ZUA DTC114YUA 2SA1576A 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
DVD UNIT (X37-1120-06) IN DVD MECHA.					
C3 C4 C5-7 C8 C11			CK73HB1A104K CC73HCH1H471J CK73HB1E103K CC73HCH1H471J CK73HB1E103K	CHIP C 0.10UF K CHIP C 470PF J CHIP C 0.010UF K CHIP C 470PF J CHIP C 0.010UF K	
C14			CK73GB0J106M	CHIP C 10UF M	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1120-06) IN DVD MECHA.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C15			CK73HB1A104K	CHIP C 0.10UF K		C261,262			CC73HCH1H331J	CHIP C 330PF J	
C16			CK73GB0J106M	CHIP C 10UF M		C263			CK73HB0J105K	CHIP C 1.0UF K	
C17			CK73GB0J475K	CHIP C 4.7UF K		C265			CK73GB1A105K	CHIP C 1.0UF K	
C18			CK73FB0J226M	CHIP C 22UF M		C266			CK73HB1C333K	CHIP C 0.033UF K	
C20			CC73HCH1H102J	CHIP C 1000PF J		C267			CK73FB0J226M	CHIP C 22UF M	
C50,51			C93-1228-05	CHIP C 1UF M		C270			CK73HB0J105K	CHIP C 1.0UF K	
C54			C93-1228-05	CHIP C 1UF M		C271			CC73HCH1H102J	CHIP C 1000PF J	
C59,60			C93-1228-05	CHIP C 1UF M		C272			CK73HB0J105K	CHIP C 1.0UF K	
C62			C93-1228-05	CHIP C 1UF M		C300,301			CC73HCH1H102J	CHIP C 1000PF J	
C63			CK73FB0J226M	CHIP C 22UF M		C302			CK73GB0J106M	CHIP C 10UF M	
C72			CK73HB1A104K	CHIP C 0.10UF K		C304-306			CK73GB0J106M	CHIP C 10UF M	
C73			CK73GB0J106M	CHIP C 10UF M		C350,351			CC73HCH1H102J	CHIP C 1000PF J	
C100-102			CK73HB1A104K	CHIP C 0.10UF K		C434			CK73GB0J106M	CHIP C 10UF M	
C103			C93-1228-05	CHIP C 1UF M		C435			CK73HB1E103K	CHIP C 0.010UF K	
C104			CK73HB1A104K	CHIP C 0.10UF K		C441			CK73HB1A104K	CHIP C 0.10UF K	
C105			C93-1228-05	CHIP C 1UF M		C442-445			CK73FB0J226M	CHIP C 22UF M	
C106,107			CK73HB1A104K	CHIP C 0.10UF K		C446			CK73HB1A104K	CHIP C 0.10UF K	
C108			C93-1228-05	CHIP C 1UF M		C448,449			C93-1228-05	CHIP C 1UF M	
C109			CK73HB1A104K	CHIP C 0.10UF K		C450			CK73HB1A104K	CHIP C 0.10UF K	
C110			C93-1228-05	CHIP C 1UF M		C452			C93-1228-05	CHIP C 1UF M	
C111			CK73HB1C333K	CHIP C 0.033UF K		C454,455			CK73HB1A104K	CHIP C 0.10UF K	
C112,113			CK73HB1A104K	CHIP C 0.10UF K		C456-458			CK73HB1H682K	CHIP C 6800PF K	
C114			CK73GB1H562K	CHIP C 5600PF K		C461			CK73HB1H472K	CHIP C 4700PF K	
C115			CK73HB1C183K	CHIP C 0.018UF K		C462			CK73HB1E103K	CHIP C 0.010UF K	
C117			CK73HB1A104K	CHIP C 0.10UF K		C464			CK73HB0J105K	CHIP C 1.0UF K	
C118			CK73HB0J105K	CHIP C 1.0UF K		C466			CK73HB1A104K	CHIP C 0.10UF K	
C119			C93-1228-05	CHIP C 1UF M		C467			CC73HCH1H121J	CHIP C 120PF J	
C120,121			CK73HB1A104K	CHIP C 0.10UF K		C468,469			CK73HB1A104K	CHIP C 0.10UF K	
C122,123			CK73GB0J106M	CHIP C 10UF M		C470			CK73HB1E103K	CHIP C 0.010UF K	
C126-129			CK73HB1A104K	CHIP C 0.10UF K		C473			CK73HB1A104K	CHIP C 0.10UF K	
C130-133			CC73HCH1H151J	CHIP C 150PF J		C474			CC73HCH1H102J	CHIP C 1000PF J	
C134			CC73HCH1H102J	CHIP C 1000PF J		C476			CC73HCH1H101J	CHIP C 100PF J	
C135,136			C93-1228-05	CHIP C 1UF M		C477-479			CK73FB0J226M	CHIP C 22UF M	
C137,138			CK73HB0J105K	CHIP C 1.0UF K		C480			CK73HB1A104K	CHIP C 0.10UF K	
C139,140			C93-1228-05	CHIP C 1UF M		C481			CC73HCH1H151J	CHIP C 150PF J	
C142			C93-1228-05	CHIP C 1UF M		C482			CC73HCH1H471J	CHIP C 470PF J	
C143,144			CC73HCH1H100D	CHIP C 10PF D		C483			CC73HCH1H102J	CHIP C 1000PF J	
C145-149			CK73HB1A104K	CHIP C 0.10UF K		C484			CK73HB1E103K	CHIP C 0.010UF K	
C151,152			C93-1228-05	CHIP C 1UF M		C485			CC73HCH1H151J	CHIP C 150PF J	
C153,154			CK73HB1A104K	CHIP C 0.10UF K		C486			CC73HCH1H471J	CHIP C 470PF J	
C158			CK73HB1A104K	CHIP C 0.10UF K		C487			CC73HCH1H102J	CHIP C 1000PF J	
C162			CK73HB1A104K	CHIP C 0.10UF K		C488			CK73HB1E103K	CHIP C 0.010UF K	
C164-169			CK73GB0J106M	CHIP C 10UF M		C489			CC73HCH1H151J	CHIP C 150PF J	
C200-203			CK73GB0J106M	CHIP C 10UF M		C490			CC73HCH1H471J	CHIP C 470PF J	
C207,208			CK73HB1A104K	CHIP C 0.10UF K		C491			CC73HCH1H102J	CHIP C 1000PF J	
C220-223			CK73HB0J105K	CHIP C 1.0UF K		C492			CK73HB1E103K	CHIP C 0.010UF K	
C224			CK73HB1E103K	CHIP C 0.010UF K		C493			CC73HCH1H151J	CHIP C 150PF J	
C226			CK73FB0J226M	CHIP C 22UF M		C494			CC73HCH1H471J	CHIP C 470PF J	
C229,230			CK73HB1E103K	CHIP C 0.010UF K		C495			CC73HCH1H102J	CHIP C 1000PF J	
C231			CC73HCH1H102J	CHIP C 1000PF J		C496			CK73HB1E103K	CHIP C 0.010UF K	
C250			CC73HCH1H102J	CHIP C 1000PF J		C497,498			CK73FB0J226M	CHIP C 22UF M	
C251,252			CC73HCH1H221J	CHIP C 220PF J		C504,505			CK73HB1H472K	CHIP C 4700PF K	
C253			CC73HCH1H102J	CHIP C 1000PF J		C506,507			CC73HCH1H102J	CHIP C 1000PF J	
C254,255			CC73HCH1H221J	CHIP C 220PF J		C510			CC73HCH1H102J	CHIP C 1000PF J	
C256			CK73HB1A104K	CHIP C 0.10UF K		C511			CK73GB0J106M	CHIP C 10UF M	

E1 : DDX8022BT **E2** : DDX8022BTY **E3** : DNX8220BT (Europe)
K : DDX812 **K1** : DNX8120 (North America)
X1 : DDX8032BT (Australia) **R1** : DDX8032BT (Latin America)
M1 : DDX8032BT **M3** : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1120-06) IN DVD MECHA.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C512 C513-515 C516 C517 C518,519			CK73HB0J105K CK73HB1A104K CK73HB1C333K CK73HB1E103K CC73HCH1H470J	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.033UF K CHIP C 0.010UF K CHIP C 47PF J	
C520 C521 C522 C523 C524			CC73HCH1H102J CK73HB0J105K CC73HCH1H151J CC73HCH1H471J CC73HCH1H102J	CHIP C 1000PF J CHIP C 1.0UF K CHIP C 150PF J CHIP C 470PF J CHIP C 1000PF J	
C525 C526 C527 C528 C529			CK73HB1E103K CC73HCH1H151J CC73HCH1H471J CC73HCH1H102J CK73HB1E103K	CHIP C 0.010UF K CHIP C 150PF J CHIP C 470PF J CHIP C 1000PF J CHIP C 0.010UF K	
C530			CK73HB0J105K	CHIP C 1.0UF K	
CN1 CN3 CN6 CN10			E41-2594-05 E41-2596-05 E41-2603-05 E41-2602-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
L1 L2-4 L5,6 L7,8 L10			L92-0365-05 L92-0612-05 L92-0611-05 L92-0612-05 L33-2281-05	CHIP FERRITE CHIP FERRITE CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR	
L11 L12-14 L15 L20 L21			L33-2280-05 L92-0365-05 L92-0612-05 L92-0617-05 L92-0612-05	SMALL FIXED INDUCTOR CHIP FERRITE CHIP FERRITE CHIP FERRITE CHIP FERRITE	
L22 X1			L92-0838-05 L77-2924-05	CHIP FERRITE CRYSTAL RESONATOR (27MHZ,30PPM)	
CP1-9 CP36,37 CP44,45 CP54-56 CP57			RK74HB1J470J RK74HB1J103J RK74HB1J330J RK74HB1J330J RK74HB1J820J	CHIP-COM 47 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 82 J 1/16W	
CP58 CP59-68 CP69 CP70-73 R1-4			RK74HB1J330J RK74HB1J103J RK74HB1J220J RK74HB1J103J RK73HB1J103J	CHIP-COM 33 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 10K J 1/16W CHIP R 10K J 1/16W	
R5,6 R10 R16 R17 R19			RK73HH1J123D RK73HB1J163J RK73HB1J103J RK73HB1J271J RK73HB1J301J	CHIP R 12K D 1/16W CHIP R 16K J 1/16W CHIP R 10K J 1/16W CHIP R 270 J 1/16W CHIP R 300 J 1/16W	
R21,22 R24 R79 R80 R81			RK73HH1J103D RK73HB1J4R7J RK73HB1J102J RK73HB1J220J RK73HB1J470J	CHIP R 10K D 1/16W CHIP R 4.7 J 1/16W CHIP R 1.0K J 1/16W CHIP R 22 J 1/16W CHIP R 47 J 1/16W	
R84,85			RK73HB1J202J	CHIP R 2.0K J 1/16W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R86 R87 R89 R90 R91			RK73HB1J105J RK73HB1J102J RK73HH1J303D RK73HB1J223J RK73HB1J470J	CHIP R 1.0M J 1/16W CHIP R 1.0K J 1/16W CHIP R 30K D 1/16W CHIP R 22K J 1/16W CHIP R 47 J 1/16W	
R92 R94 R111 R112,113 R116			RK73HH1J123D RK73HH1J512D RK73HB1J220J RK73HB1J101J RK73HB1J103J	CHIP R 12K D 1/16W CHIP R 5.1K D 1/16W CHIP R 22 J 1/16W CHIP R 100 J 1/16W CHIP R 10K J 1/16W	
R119 R121 R122 R131 R150,151			RK73HB1J103J RK73HB1J182J RK73HB1J472J RK73HB1J220J RK73HB1J100J	CHIP R 10K J 1/16W CHIP R 1.8K J 1/16W CHIP R 4.7K J 1/16W CHIP R 22 J 1/16W CHIP R 10 J 1/16W	
R152,153 R154,155 R156,157 R158,159 R162,163			RK73HB1J471J RK73HB1J751J RK73HB1J560J RK73HB1J2R2J RK73HB1J104J	CHIP R 470 J 1/16W CHIP R 750 J 1/16W CHIP R 56 J 1/16W CHIP R 2.2 J 1/16W CHIP R 100K J 1/16W	
R164,165 R200-203 R204-207 R208 R251			RK73HH1J101D RK73HH1J201D RK73HH1J151D RK73HB1J4R7J RK73HB1J1R0J	CHIP R 100 D 1/16W CHIP R 200 D 1/16W CHIP R 150 D 1/16W CHIP R 4.7 J 1/16W CHIP R 1.0 J 1/16W	
R254 R255 R256 R257 R258			RK73HH1J912D RK73HH1J752D RK73HH1J331D RK73HH1J912D RK73HH1J752D	CHIP R 9.1K D 1/16W CHIP R 7.5K D 1/16W CHIP R 330 D 1/16W CHIP R 9.1K D 1/16W CHIP R 7.5K D 1/16W	
R259 R260 R261 R262 R263			RK73HH1J331D RK73HH1J912D RK73HH1J752D RK73HH1J331D RK73HH1J912D	CHIP R 330 D 1/16W CHIP R 9.1K D 1/16W CHIP R 7.5K D 1/16W CHIP R 330 D 1/16W CHIP R 9.1K D 1/16W	
R264 R265 R266,267 R269 R275,276			RK73HH1J752D RK73HH1J331D RK73HH1J101D RK73HB1J100J RK73HB1J472J	CHIP R 7.5K D 1/16W CHIP R 330 D 1/16W CHIP R 100 D 1/16W CHIP R 10 J 1/16W CHIP R 4.7K J 1/16W	
R300,301 R302,303 R304 R305 R350,351			RK73HH1J472D RK73HH1J183D RK73HH1J202D RK73HB1J163J RK73HB1J4R7J	CHIP R 4.7K D 1/16W CHIP R 18K D 1/16W CHIP R 2.0K D 1/16W CHIP R 16K J 1/16W CHIP R 4.7 J 1/16W	
R400-402 R409 R410,411 R450 R458			RK73HB1J470J RK73HB1J470J RK73HB1J102J RK73HB1J202J RK73HB1J220J	CHIP R 47 J 1/16W CHIP R 47 J 1/16W CHIP R 1.0K J 1/16W CHIP R 2.0K J 1/16W CHIP R 22 J 1/16W	
R464,465 R467 R468-470 R471 R472,473			RK73HH1J101D RK73HB1J470J RK73HB1J103J RK73HB1J820J RK73HB1J330J	CHIP R 100 D 1/16W CHIP R 47 J 1/16W CHIP R 10K J 1/16W CHIP R 82 J 1/16W CHIP R 33 J 1/16W	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1120-06) IN DVD MECHA.

Ref. No.	Add	New	Parts No.	Description	Destination
R475			R92-3350-05	CHIP R 2.2 F 1/10W	
R476			R92-5112-05	CHIP R 4.7 F 1/10W	
R477			RK73GH2A111D	CHIP R 110 D 1/10W	
R478			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R480			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R481			RK73HH1J203D	CHIP R 20K D 1/16W	
R482-484			RK73HB1J820J	CHIP R 82 J 1/16W	
R485			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R486,487			RK73HB1J103J	CHIP R 10K J 1/16W	
R489			RK73HB1J220J	CHIP R 22 J 1/16W	
R491-493			RK73HB1J751J	CHIP R 750 J 1/16W	
R496,497			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R498			RK73HB1J101J	CHIP R 100 J 1/16W	
R501			RK73HH1J132D	CHIP R 1.3K D 1/16W	
R502			RK73HH1J333D	CHIP R 33K D 1/16W	
R503			RK73HH1J203D	CHIP R 20K D 1/16W	
R504			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R505			RK73HB1J821J	CHIP R 820 J 1/16W	
R507			RK73HB1J103J	CHIP R 10K J 1/16W	
R508			RK73HB1J225J	CHIP R 2.2M J 1/16W	
R509			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R510			RK73HB1J103J	CHIP R 10K J 1/16W	
R511			RK73HB1J473J	CHIP R 47K J 1/16W	
R512,513			RK73HB1J103J	CHIP R 10K J 1/16W	
R514-517			RK73HB1J220J	CHIP R 22 J 1/16W	
R518-522			RK73HB1J103J	CHIP R 10K J 1/16W	
R523,524			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R525			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R530			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R531			RK73HB1J471J	CHIP R 470 J 1/16W	
R532			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R533			RK73HH1J683D	CHIP R 68K D 1/16W	
R535-538			RK73HH1J821D	CHIP R 820 D 1/16W	
R539			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R541			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R544-559			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R560			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R561,562			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R563			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R564			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R574-576			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R583,584			RK73HH1J391D	CHIP R 390 D 1/16W	
R588			R92-5112-05	CHIP R 4.7 F 1/10W	
R591			RK73HB1J820J	CHIP R 82 J 1/16W	
R599,600			RK73HB1J103J	CHIP R 10K J 1/16W	
R601-604			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R605,606			RK73HB1J103J	CHIP R 10K J 1/16W	
R614			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R615			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R617			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R619			RK73HB1J513J	CHIP R 51K J 1/16W	
R620			RK73HB1J333J	CHIP R 33K J 1/16W	
R621			RK73HB1J103J	CHIP R 10K J 1/16W	
R622			RK73HB1J333J	CHIP R 33K J 1/16W	
R623			RK73HB1J220J	CHIP R 22 J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R624-626			RK73HH1J332D	CHIP R 3.3K D 1/16W	
R627			RK73HB1J103J	CHIP R 10K J 1/16W	
R628,629			R92-5147-05	CHIP R 1.2 D 1/4W	
R630,631			R92-5146-05	CHIP R 1.0 D 1/4W	
R632			RK73HH1J270D	CHIP R 27 D 1/16W	
R633			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R634			RK73HB1J103J	CHIP R 10K J 1/16W	
R636			RK73HB1J220J	CHIP R 22 J 1/16W	
R638-645			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
S1			S68-0911-15	PUSH SWITCH	
S2			S68-0914-05	PUSH SWITCH	
D5,6			015AZ5.1-F(Y)	ZENER DIODE	
D7			1SS402-F	DIODE	
IC1			MN2DS0016AAUB	MOS-IC	
IC5			-	ROM IC	
IC9			-	ROM IC	
IC10			AN41250A-VB	ANALOGUE IC	
IC12			MM1671XNRE	ANALOGUE IC	
IC15			AK4396VF	MOS-IC	
IC21			-	MOS-IC	
IC39			NJU7042	ANALOGUE IC	
IC42			TC74VHC273FT	MOS-IC	
IC49			TC7SG04FU-F	MOS-IC	
IC50,51			NJM4580V-ZB	ANALOGUE IC	
IC54		*	HY139S12816F7	DRAM IC	
IC55			TC7WH32FU-F	MOS-IC	
IC56			HD74LV1GW57AE	MOS-IC	
IC57			NJM2573V-ZB	ANALOGUE IC	
IC60			-	ANALOGUE IC	
Q1-4			DTA143XE	DIGITAL TRANSISTOR	
Q10,11			2SC4617	TRANSISTOR	
Q12,13			2SB1709	TRANSISTOR	
Q14,15			2SK3019	FET	
Q20,21			2SK3019	FET	
Q24			SSM3J15FU-F	FET	
Q25			DTA143XE	DIGITAL TRANSISTOR	
Q27			DTA143ZE	DIGITAL TRANSISTOR	
Q28,29			2SA1774	TRANSISTOR	
DIGITAL I/O UNIT (X88-2030-10)					
C100,101			CC73HCH1H101J	CHIP C 100PF J	
C102-105			CK73HB1A104K	CHIP C 0.10UF K	
C106			CK73FB0J106K	CHIP C 10UF K	
C107-110			CK73HB1A104K	CHIP C 0.10UF K	
C112			CK73EB0J226K	CHIP C 22UF K	
C113			C92-1983-05	ELECTRO 100UF 4WV	
C114-124			CK73HB1A104K	CHIP C 0.10UF K	
C126-130			CK73HB1A104K	CHIP C 0.10UF K	
C133,134			CK73FB0J106K	CHIP C 10UF K	
C135			CK73HB1A104K	CHIP C 0.10UF K	
C138,139			CC73HCH1H100D	CHIP C 10PF D	
C140			CK73HB0J105K	CHIP C 1.0UF K	
C142			CE32BN0J221M	CHIP EL 220UF 6.3WV	
C143			CK73HB0J105K	CHIP C 1.0UF K	
C144			CK73HB1A104K	CHIP C 0.10UF K	

E1 : DDX8022BT **E2** : DDX8022BTY **E3** : DNX8220BT (Europe)
K : DDX812 **K1** : DNX8120 (North America)
X1 : DDX8032BT (Australia) **R1** : DDX8032BT (Latin America)
M1 : DDX8032BT **M3** : DDX8032BTM (Other Areas)

△ Indicates safety critical components.

The IC5,9,21 and IC60 in the DVD unit (X37-1120-06) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6180-01).

PARTS LIST

DIGITAL I/O UNIT (X88-2030-10)

Ref. No.	Ad	New	Parts No.	Description	Destination
C148 C149 C153 C154 C200			CE32BN0J221M CK73HB1A104K CK73HB0J105K CK73HB1A104K CC73HCH1H220J	CHIP EL 220UF 6.3WV CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 22PF J	
C201 C202 C217-226 C227,228 C233-236			CK73HB1A104K CC73HCH1H220J CK73HB1A104K CK73FB0J106K CK73HB1A104K	CHIP C 0.10UF K CHIP C 22PF J CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K	
C244 C264 C275 C309-312 C318			CK73FB0J106K CK73HB1A104K CK73FB0J106K CK73HB1A104K CK73HB1A104K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C322 C329 C331 C332 C336			CK73HB1A104K CC73HCH1H270J CK73FB0J106K CK73HB1A104K CK73FB0J106K	CHIP C 0.10UF K CHIP C 27PF J CHIP C 10UF K CHIP C 0.10UF K CHIP C 10UF K	
C337,338 C340,341 C342 C456 C460			CK73HB1H152K CC73HCH1H331J CK73HB1E103K CK73EB1A106K CK73HB1A104K	CHIP C 1500PF K CHIP C 330PF J CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.10UF K	
C468 C482 C601,602 C700-713 C715			CK73FB0J106K CK73GB1H222K CC73HCH1H470J CK73HB1H222K CK73HB1A104K	CHIP C 10UF K CHIP C 2200PF K CHIP C 47PF J CHIP C 2200PF K CHIP C 0.10UF K	
C900 C901,902 C903,904 C905 C906			CK73HB1H222K CK73HB1H102K CK73HB1H222K CK73HB1H102K CK73FB0J106K	CHIP C 2200PF K CHIP C 1000PF K CHIP C 2200PF K CHIP C 1000PF K CHIP C 10UF K	
C907,908 C909 C910 C912			CK73HB1A104K CK73FB0J106K CK73HB1C473K CK73HB1A104K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.047UF K CHIP C 0.10UF K	
CN101 CN210 CN328			E41-2839-05 E41-2195-05 E41-2237-05	PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
L900-903 X100 X202			L92-0321-05 L77-2941-05 L77-2917-15	CHIP FERRITE CRYSTAL RESONATOR (14.7456MHZ) CRYSTAL RESONATOR (32.768KHZ)	
CP104-109 CP117-127 CP128-134 CP135-138 CP139-142			RK74HB1J220J RK74HB1J220J RK74HB1J103J RK74HB1J220J RK74HB1J330J	CHIP-COM 22 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 33 J 1/16W	
CP143-146 CP147-154 CP155-160 R1,2			RK74HB1J680J RK74HB1J103J RK74HB1J220J RK73HB1J473J	CHIP-COM 68 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP R 47K J 1/16W	

Ref. No.	Ad	New	Parts No.	Description	Destination
R9,10 R12 R13 R14 R15,16			RK73HB1J220J RK73HB1J000J RK73HB1J473J RK73HB1J561J RK73EB2E000J	CHIP R 22 J 1/16W CHIP R 0.0 J 1/16W CHIP R 47K J 1/16W CHIP R 560 J 1/16W CHIP R 0.0 J 1/4W	
R17,18 R24 R29 R30 R32			RK73HB1J153J RK73HB1J220J RK73HB1J473J RK73HB1J472J RK73HB1J472J	CHIP R 15K J 1/16W CHIP R 22 J 1/16W CHIP R 47K J 1/16W CHIP R 4.7K J 1/16W CHIP R 4.7K J 1/16W	
R33 R34-37 R104 R105 R107-109			RK73HB1J473J RK73FB2B330J RK73HB1J330J RK73HB1J103J RK73HB1J103J	CHIP R 47K J 1/16W CHIP R 33 J 1/8W CHIP R 33 J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W	
R112 R115 R116 R118 R121			RK73HB1J222J RK73HB1J222J RK73HB1J103J RK73HB1J103J RK73HB1J222J	CHIP R 2.2K J 1/16W CHIP R 2.2K J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 2.2K J 1/16W	
R123 R124 R126 R129 R130,131			RK73HB1J222J RK73HB1J473J RK73HB1J473J RK73HB1J222J RK73HB1J220J	CHIP R 2.2K J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W CHIP R 2.2K J 1/16W CHIP R 22 J 1/16W	
R134 R139 R140 R141,142 R145,146			RK73HB1J220J RK73HB1J105J RK73HB1J222J RK73EB2E000J RK73HB1J153J	CHIP R 22 J 1/16W CHIP R 1.0M J 1/16W CHIP R 2.2K J 1/16W CHIP R 0.0 J 1/4W CHIP R 15K J 1/16W	
R147 R148 R149 R150 R153			RK73HB1J220J RK73HB1J473J RK73HB1J472J RK73HB1J220J RK73HB1J000J	CHIP R 22 J 1/16W CHIP R 47K J 1/16W CHIP R 4.7K J 1/16W CHIP R 22 J 1/16W CHIP R 0.0 J 1/16W	
R157-159 R163 R164,165 R166-169 R170,171			RK73HB1J220J RK73HB1J220J RK73HB1J470J RK73HB1J220J RK73HB1J330J	CHIP R 22 J 1/16W CHIP R 22 J 1/16W CHIP R 47 J 1/16W CHIP R 22 J 1/16W CHIP R 33 J 1/16W	
R172,173 R174,175 R176 R177-192 R193-198			RK73HB1J680J RK73HB1J470J RK73HB1J220J RK73HB1J473J RK73HB1J220J	CHIP R 68 J 1/16W CHIP R 47 J 1/16W CHIP R 22 J 1/16W CHIP R 47K J 1/16W CHIP R 22 J 1/16W	
R199 R200 R202 R203 R219-221			RK73HB1J473J RK73HB1J330J RK73HB1J106J RK73HB1J334J RK73HB1J472J	CHIP R 47K J 1/16W CHIP R 33 J 1/16W CHIP R 10M J 1/16W CHIP R 330K J 1/16W CHIP R 4.7K J 1/16W	
R223 R248-250 R255 R258-260 R265-270			RK73HB1J473J RK73HB1J473J RK73HH1J104D RK73HB1J473J RK73HB1J472J	CHIP R 47K J 1/16W CHIP R 47K J 1/16W CHIP R 100K D 1/16W CHIP R 47K J 1/16W CHIP R 4.7K J 1/16W	

E1 : DDX8022BT E2 : DDX8022BTY E3 : DNX8220BT (Europe)
K : DDX812 K1 : DNX8120 (North America)
X1 : DDX8032BT (Australia) R1 : DDX8032BT (Latin America)
M1 : DDX8032BT M3 : DDX8032BTM (Other Areas)

△Indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT (X88-2030-10)

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
R273			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R284-287			RK73HB1J473J	CHIP R 47K J 1/16W	
R291			RK73HB1J330J	CHIP R 33 J 1/16W	
R292-295			RK73HB1J473J	CHIP R 47K J 1/16W	
R297			RK73HB1J103J	CHIP R 10K J 1/16W	
R304,305			RK73HB1J103J	CHIP R 10K J 1/16W	
R308			RK73HB1J103J	CHIP R 10K J 1/16W	
R310			RK73HB1J103J	CHIP R 10K J 1/16W	
R320-322			RK73HB1J103J	CHIP R 10K J 1/16W	
R324,325			RK73HB1J123J	CHIP R 12K J 1/16W	
R326,327			RK73HB1J752J	CHIP R 7.5K J 1/16W	
R328,329			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R332,333			RK73HB1J151J	CHIP R 150 J 1/16W	
R438			RK73HB1J103J	CHIP R 10K J 1/16W	
R440			RK73HB1J103J	CHIP R 10K J 1/16W	
R481,482			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R485-487			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R506,507			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R522			RK73HB1J680J	CHIP R 68 J 1/16W	
R523			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R600,601			RK73HB1J220J	CHIP R 22 J 1/16W	
R602,603			RK73HB1J153J	CHIP R 15K J 1/16W	
R604,605			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R701			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R703			RK73GB2A106J	CHIP R 10M J 1/10W	
R705			RK73HB1J331J	CHIP R 330 J 1/16W	
R707,708			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R710			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R713-715			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R903			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R910-912			RK73HB1J473J	CHIP R 47K J 1/16W	
R917			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R918			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R919			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R923			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R926			RK73GB2A106J	CHIP R 10M J 1/10W	
R927,928			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R929			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R930			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R931			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R933,934			RK73HB1J103J	CHIP R 10K J 1/16W	
D102,103			AVRL1613R3FTA	VARIATOR	
D106,107			AVRL1613R3FTA	VARIATOR	
IC100,101			MIC2005-08YM6	MOS-IC	
IC104		*	74HC1G86GW	MOS-IC	
IC105			SI-3018KM	ANALOGUE IC	
IC106			-	MICROPROCESSOR IC	
IC108			74AHC1G04GW	MOS-IC	
IC200			TC7WHU04FU-F	MOS-IC	
IC202,203			MT48LC16M16P75	DRAM IC	
IC207			341S2094	MICROPROCESSOR IC	
IC211		*	GL256N10TF0A3	ROM IC	
IC302			BH7240AKV	MOS-IC	
IC305			NJM2100V-ZB	ANALOGUE IC	

E1 : DDX8022BT **E2** : DDX8022BTY **E3** : DNX8220BT (Europe)
K : DDX812 **K1** : DNX8120 (North America)
X1 : DDX8032BT (Australia) **R1** : DDX8032BT (Latin America)
M1 : DDX8032BT **M3** : DDX8032BTM (Other Areas)

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
IC901			PCM1754DB	MOS-IC	
IC902			TAR5S50-F	ANALOGUE IC	
IC903			TC7WH08FK-F	MOS-IC	
DAUGHTER UNIT (X89-3062-71)					
C1			CC73GCH1H180J	CHIP C 18PF J	E3
C2			CC73GCH1H070D	CHIP C 7.0PF D	E3
C3			CC73GCH1H150J	CHIP C 15PF J	E3
C4			CC73GCH1H180J	CHIP C 18PF J	E3
C5			CC73GCH1H390J	CHIP C 39PF J	E3
C6			CC73GCH1H020C	CHIP C 2.0PF C	E3
C7			CC73GCH1H120J	CHIP C 12PF J	E3
C8			CK73FB1C105K	CHIP C 1.0UF K	E3
C10-12			CC73GCH1H102J	CHIP C 1000PF J	E3
C13			CC73GCH1H221J	CHIP C 220PF J	E3
C14			CC73GCH1H030C	CHIP C 3.0PF C	E3
C15,16			CC73GCH1H560J	CHIP C 56PF J	E3
C17			CC73GCH1H102J	CHIP C 1000PF J	E3
CN2		*	E41-3009-05	PIN ASSY	E3
W1		*	E30-6804-05	CORD WITH PLUG (JASO)	E3
W2		*	E30-6805-05	CORD WITH PLUG (PIN)	E3
L1			L41-2705-33	SMALL FIXED INDUCTOR (27U)	E3
L2			L41-1588-18	SMALL FIXED INDUCTOR	E3
L3			L41-1805-33	SMALL FIXED INDUCTOR (18U)	E3
L4,5			L41-1588-18	SMALL FIXED INDUCTOR	E3
L6		*	L19-0825-05	BALUN TRANSFORMER	E3
L8		*	L41-1888-18	SMALL FIXED INDUCTOR (0.18U)	E3
R1			RK73GB2A104J	CHIP R 100K J 1/10W	E3
R3			RK73GB2A562J	CHIP R 5.6K J 1/10W	E3
R4			RK73GB2A332J	CHIP R 3.3K J 1/10W	E3
R5			RK73GB2A331J	CHIP R 330 J 1/10W	E3
R6			RK73GB2A391J	CHIP R 390 J 1/10W	E3
R7,8			RK73GB2A330J	CHIP R 33 J 1/10W	E3
R10			RK73GB2A431J	CHIP R 430 J 1/10W	E3
R11			RK73GB2A270J	CHIP R 27 J 1/10W	E3
R12			RK73GB2A431J	CHIP R 430 J 1/10W	E3
R13			RK73GB2A151J	CHIP R 150 J 1/10W	E3
R14			RK73GB2A431J	CHIP R 430 J 1/10W	E3
R15			RK73GB2A270J	CHIP R 27 J 1/10W	E3
R17			RK73GB2A431J	CHIP R 430 J 1/10W	E3
D1			IMSA-6801-E	SURGE ABSORBER	E3
Q1			2SC3357-A	TRANSISTOR	E3
DVD MECHANISM ASSY (X92-6180-01) (DVS-8561V)					
1	1A	*	A10-5331-61	CHASSIS	
2	2B		A10-5332-51	CHASSIS	
3	1A		A10-5333-31	CHASSIS	
4	3A		A10-5460-02	CHASSIS	
7	1B		D10-4918-22	ARM	
8	1B		D10-4919-22	ARM	
9	1B		D10-4920-02	LEVER	
10	1B		D10-4921-02	LEVER	
12	2B		D10-4922-12	SLIDER	
13	2A		D10-7011-02	ARM	

△ Indicates safety critical components.

The IC106 in the Digital I/O unit (X88-2030-10) are not replaceable components. When this IC are defective, replace the whole Digital I/O unit (X88-2030-10).

PARTS LIST

DVD MECHANISM ASSY (X92-6180-01) (DVS-8561V)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
14	2B		D10-4924-13	ARM							
15	2B		D10-4925-12	ARM							
25	2B		D10-4973-04	SLIDER ASSY							
27	2A		D10-4945-04	LEVER							
28	2B		D12-0639-02	CAM							
31	2B		D13-2402-04	GEAR							
32	2B		D13-2403-04	GEAR							
33	2B		D13-2404-04	GEAR							
34	2B		D13-2405-04	GEAR							
35	2B		D13-2406-04	GEAR							
36	2B		D13-2407-04	GEAR							
40	2A		D13-2413-04	GEAR							
41	2A		D13-2415-04	GEAR							
42	2A		D13-2416-04	GEAR							
43	1B		D14-1013-14	ROLLER							
53	1B		D21-2487-24	SHAFT							
54	2A		D39-0275-05	DAMPER							
55	2A		D39-0276-05	DAMPER							
60	3A		F09-2825-23	SHEET							
65	2B		G01-3298-04	EXTENSION SPRING							
66	1B		G01-3299-04	EXTENSION SPRING							
67	2A		G01-3300-14	TORSION COIL SPRING							
68	2B		G01-4601-04	EXTENSION SPRING							
69	1B		G01-4602-04	EXTENSION SPRING							
70	1B		G01-4604-04	TORSION COIL SPRING							
74	2B		G01-4609-14	TORSION COIL SPRING							
75	1B		G02-1564-03	FLAT SPRING							
79	2A		J22-0475-21	MOUNTING HARDWARE							
80	3B		J22-0636-01	MOUNTING HARDWARE							
A	1A		N09-6382-05	MACHINE SCREW (M1.7X2.0)							
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4 P-TITE)							
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW)							
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)							
93	2A		T99-0471-05	MAGNET							
96	1B		X94-2080-00	ROLLER ASSY							
98	2A		X94-2060-00	TRAVERSE ASSY (PICKUP,SPINDLE)							
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)							