
EXPLODED VIEW (MECHANISM)

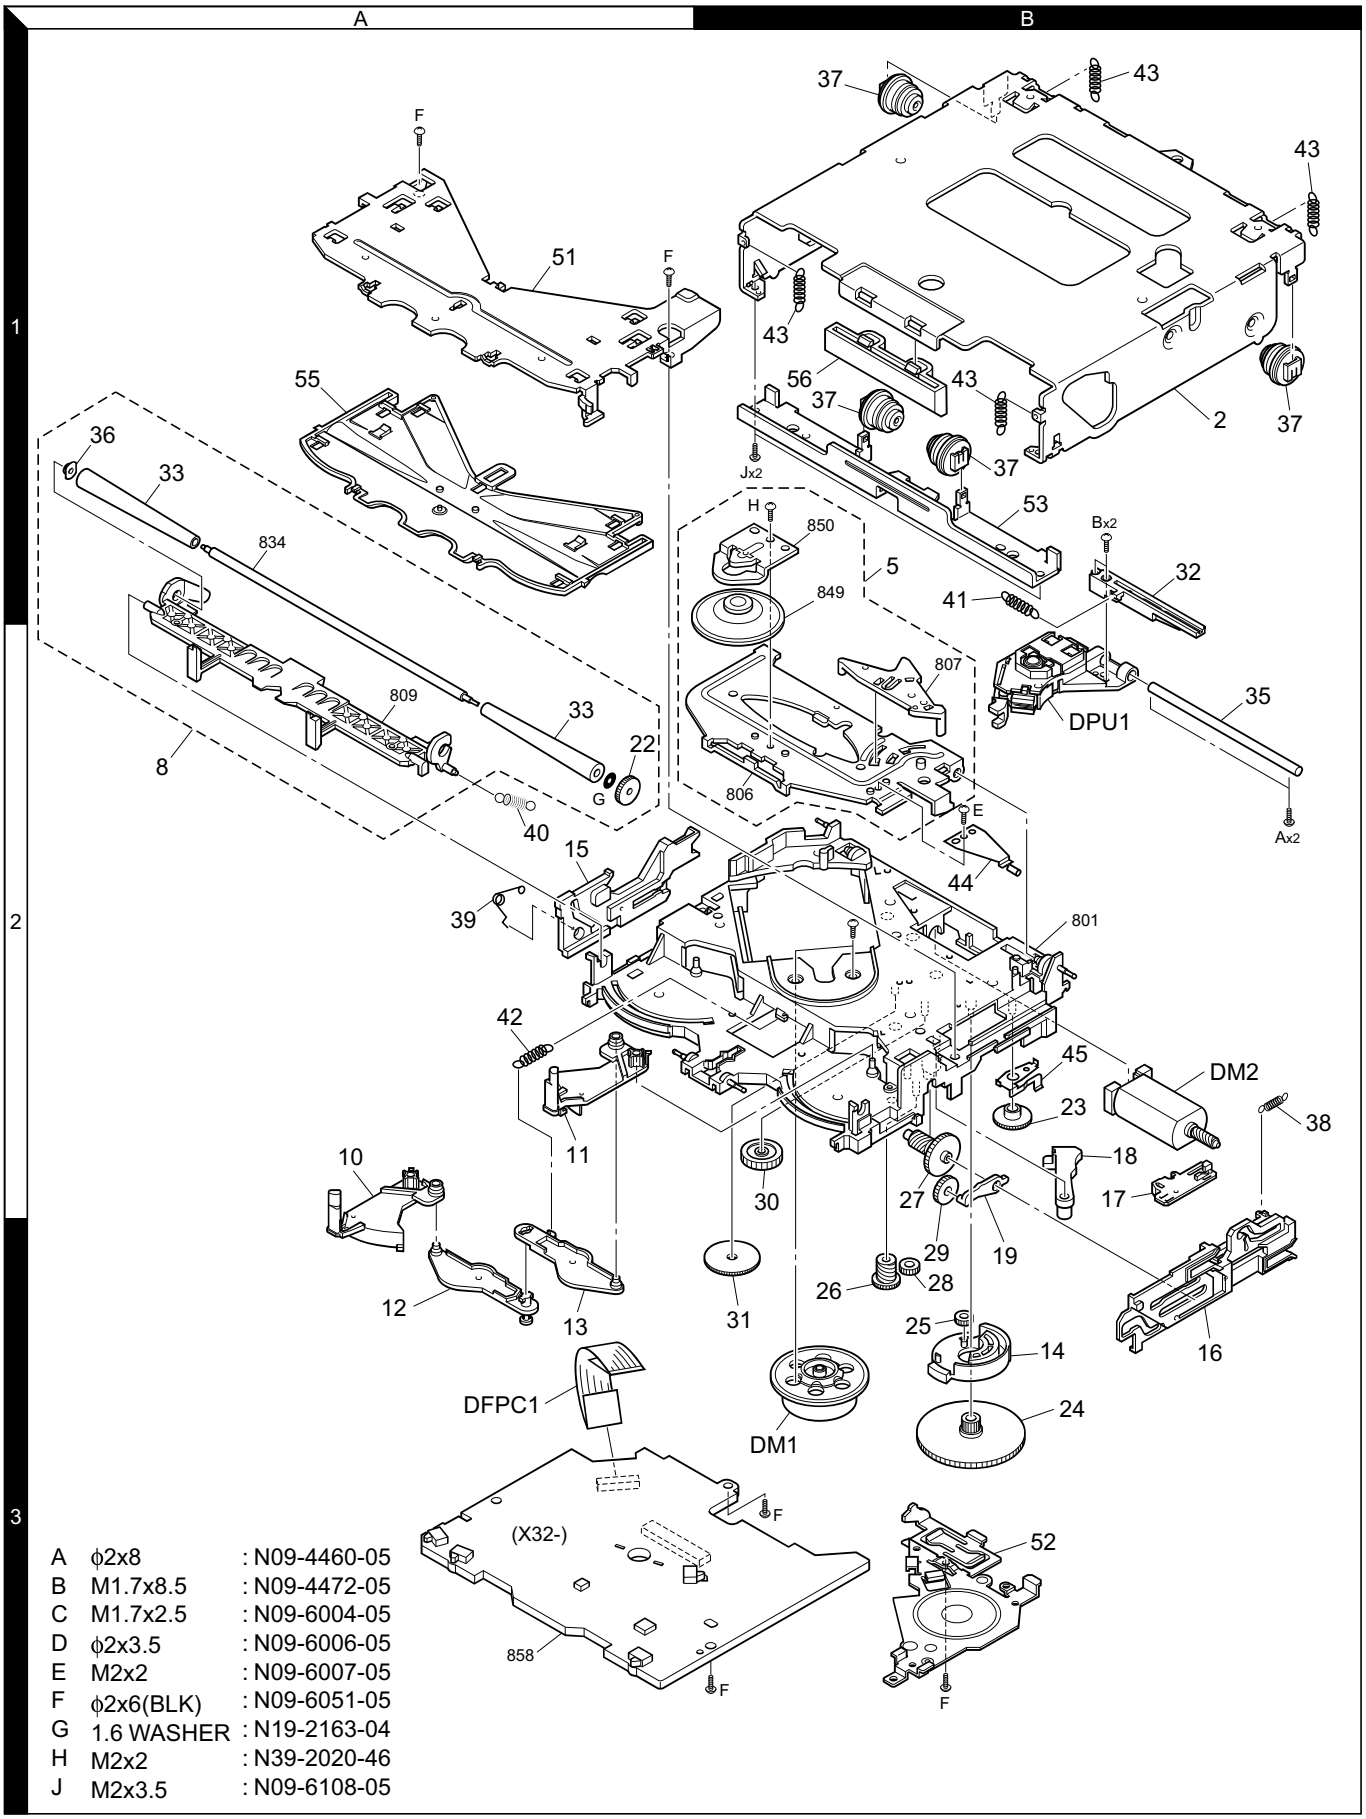


A	ϕ2x8	: N09-4460-05
B	M1.7x8.5	: N09-4472-05
C	M1.7x2.5	: N09-6004-05
D	ϕ2x3.5	: N09-6006-05
E	M2x2	: N09-6007-05
F	ϕ2x6(BLK)	: N09-6051-05
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-46
J	M2x3.5	: N09-6108-05

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

A M2x1.9	: N09-4448-05	P	FLAT WASHER	: N19-2176-04
B	: N09-6073-05	Q	RETAINIING RING	: N24-3015-60
C M2x2	: N09-6087-05	R	M2x2.5	: N38-2025-46
D	: N09-6088-05	S	M2.6x5(BLK)	: N38-2650-45
E M2x3(BLK)	: N09-6089-05	T	M3x5	: N67-3005-46
F ϕ2x5	: N09-6093-05	U	ϕ3x5	: N83-3005-46
G ϕ2x5(BLK)	: N09-6094-05	V	ϕ3x8	: N83-3008-46
H ϕ2x4	: N09-6095-05	W	ϕ2x4(BLK)	: N86-2004-45
J M2x3(BLK)	: N09-6096-05	X	ϕ3x8	: N80-3008-46
K M2x2	: N09-6097-05	Y	ϕ3x10	: N83-3010-46
M ϕ2x5(BLK)	: N09-6105-05	Z	ϕ2x4	: N84-2004-46
N FLAT WASHER	: N19-2175-04			

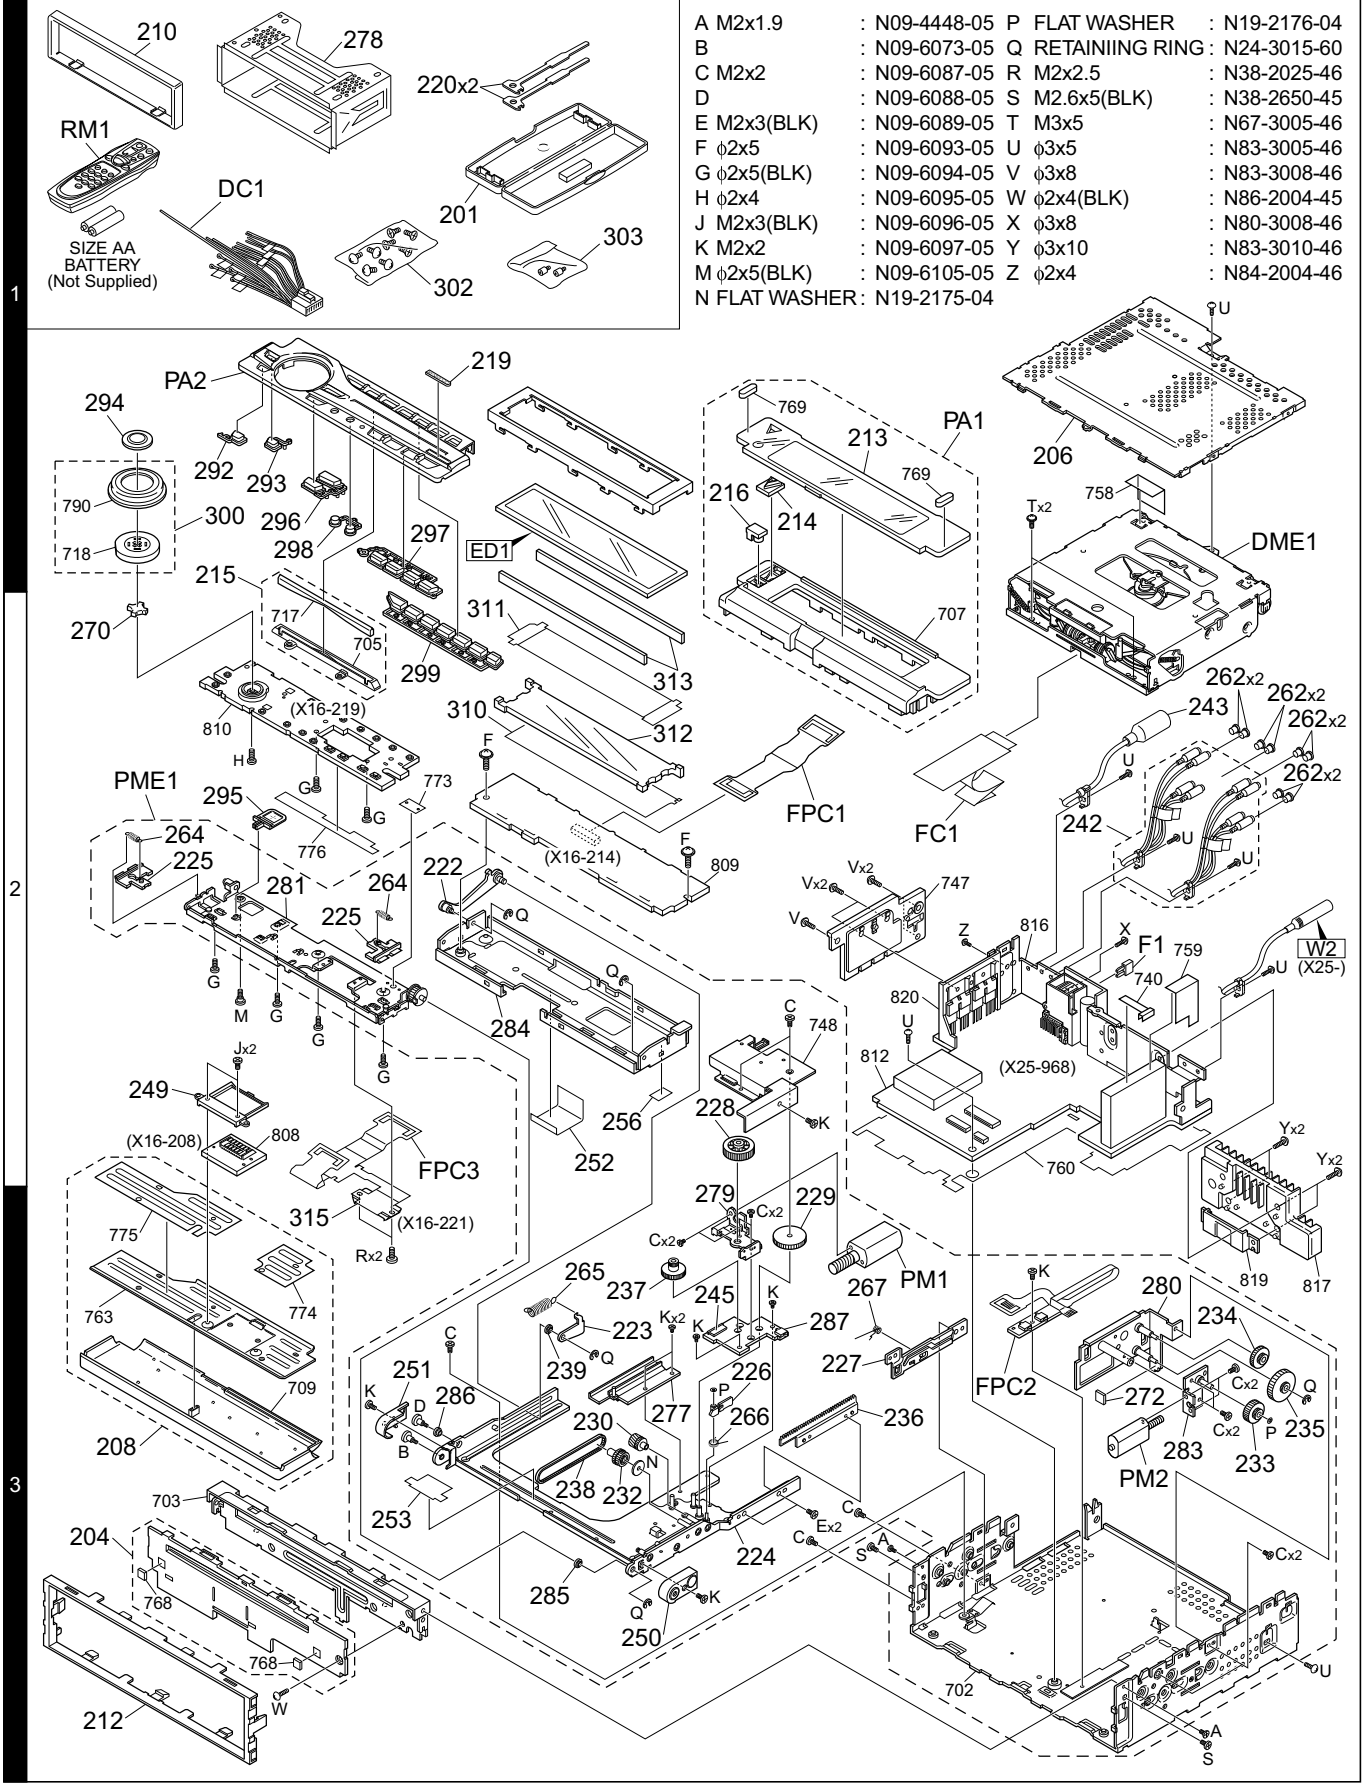

Parts with the exploded numbers larger than 700 are not supplied.

KDC-X769

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KDC-X769					
201	1C	✻	A02-2731-03	PLASTIC CABINET ASSY	
204	3C	✻	A22-2988-03	SUB PANEL ASSY	
206	1D	✻	A52-0831-02	TOP PLATE	
PA1	1D	✻	A64-2980-01	PANEL ASSY	
PA2	1C	✻	A64-3001-02	PANEL ASSY	
PME1	2C	✻	A10-5029-11	CHASSIS ASSY	
RM1	1C		A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-		✻	B46-0648-13	USER CARD	
-		✻	B46-0653-03	USER CARD	
-			B64-2460-00	INSTRUCTION MANUAL (ENGLISH)	
-		✻	B64-2461-10	INSTRUCTION MANUAL (FRE.SPA.)	
208	3C	✻	B03-5016-03	DRESSING PLATE ASSY	
210	1C	✻	B07-3079-01	ESCUTCHEON	
212	3C	✻	B07-3080-02	ESCUTCHEON	
213	1D	✻	B10-4387-01	FRONT GLASS	
214	1C	✻	B12-1221-04	INDICATOR	
215	1C	✻	B12-1222-03	INDICATOR ASSY	
216	1C	✻	B19-2201-04	LIGHTING BOARD	
219	1C	✻	B43-1505-04	KENWOOD BADGE	
220	1C		D10-4674-04	LEVER	
222	2C	✻	D10-4716-04	ARM ASSY	
223	3C	✻	D10-4718-04	ARM ASSY	
224	3D	✻	D10-4721-11	SLIDER ASSY	
225	2C	✻	D10-4749-03	LEVER	
226	3D	✻	D10-4750-04	LEVER	
227	3D	✻	D12-0637-03	CAM	
228	2D	✻	D13-2270-04	GEAR	
229	3D	✻	D13-2272-04	GEAR	
230	3C	✻	D13-2273-14	GEAR	
232	3C	✻	D13-2274-14	GEAR	
233	3D	✻	D13-2276-04	GEAR	
234	3D	✻	D13-2277-04	GEAR	
235	3D	✻	D13-2278-04	GEAR	
236	3D	✻	D13-2289-03	RACK (GEAR)	
237	3C	✻	D13-2290-04	GEAR ASSY	
238	3C	✻	D16-0617-05	BELT	
239	3C	✻	D23-0958-04	RETAINER	
242	2D	✻	E30-6209-05	CORD WITH PINPLUG (3PR+1AUX)	
243	2D	✻	E30-6216-05	CORD WITH DIN CONNECTOR (CH)	
245	3D	✻	E41-0351-05	FLAT CABLE CONNECTOR	
⚠ DC1	1C		E30-6062-05	DC CORD	
FC1	2D	✻	E39-0565-05	FLAT CABLE	
249	2C	✻	F07-1121-03	COVER	
250	3C	✻	F07-1122-03	COVER	
251	3C	✻	F07-1123-03	COVER	
252	2C	✻	F09-1794-04	SHEET	
253	3C	✻	F09-1798-04	SHEET	
256	2D	✻	F09-1842-04	SHEET	
262	2D		F29-0049-05	INSULATING COVER	
⚠ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE)	

Ref. No.	Add	New	Parts No.	Description	Destination
264	2C	✻	G01-3162-04	EXTENSION SPRING	
265	3C	✻	G01-3188-04	EXTENSION SPRING	
266	3C	✻	G01-3189-04	TORSION COIL SPRING	
267	3D	✻	G01-3199-04	TORSION COIL SPRING	
270	2C	✻	G11-3539-04	CUSHION (VOL)	
272	3D	✻	G11-3559-04	CUSHION	
-		✻	H10-4854-12	POLYSTYRENE FOAMED FIXTURE	
-		✻	H21-1151-04	PROTECTION SHEET	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		✻	H54-2720-13	ITEM CARTON CASE	
277	3C	✻	J19-5220-03	HOLDER	
278	1C		J21-9823-03	MOUNTING HARDWARE ASSY	
279	3D	✻	J21-9951-03	MOUNTING HARDWARE ASSY	
280	3D	✻	J21-9954-02	MOUNTING HARDWARE ASSY	
281	2C	✻	J21-9956-12	MOUNTING HARDWARE ASSY	
283	3D	✻	J21-9997-03	MOUNTING HARDWARE ASSY	
284	2C	✻	J21-9999-02	MOUNTING HARDWARE ASSY	
285	3C	✻	J31-1055-04	COLLAR	
286	3C	✻	J31-1056-04	COLLAR	
287	3D	✻	J74-1444-04	RIGID PRINTED WIRING BOARD	
FPC1	2D	✻	J84-0153-05	FLEXIBLE PRINTED WIRING BOARD	
FPC2	3D	✻	J84-0156-04	FLEXIBLE PRINTED WIRING BOARD	
292	1C	✻	K24-4004-04	KNOB (PLAY)	
293	1C	✻	K24-4005-04	KNOB (EJECT)	
294	1C	✻	K24-4006-04	KNOB (ATT)	
295	2C	✻	K24-4007-04	KNOB (OPEN)	
296	1C	✻	K25-1527-03	KNOB (SRC,Q)	
297	1C	✻	K25-1529-03	KNOB (AM/FM)	
298	1C	✻	K25-1530-04	KNOB (SCRL)	
299	2C	✻	K25-1532-03	KNOB (1-6)	
300	1C	✻	K29-7031-03	KNOB ASSY (VOL)	
302	1C		N99-1723-05	SCREW SET	
303	1C	✻	N99-1734-05	SCREW SET	
A	3D		N09-4448-05	MACHINE SCREW	
B	3C	✻	N09-6073-05	STEPPED SCREW	
C	3D	✻	N09-6087-05	MACHINE SCREW	
D	3C	✻	N09-6088-05	STEPPED SCREW	
E	3D	✻	N09-6089-05	MACHINE SCREW	
F	2C	✻	N09-6093-05	TAPTITE SCREW	
G	2C	✻	N09-6094-05	MACHINE SCREW	
H	2C	✻	N09-6095-05	MACHINE SCREW	
J	2C	✻	N09-6096-05	MACHINE SCREW	
K	3C	✻	N09-6097-05	MACHINE SCREW	
M	2C	✻	N09-6105-05	STEPPED SCREW	
N	2C	✻	N19-2175-04	FLAT WASHER	
P	3D	✻	N19-2176-04	FLAT WASHER	
Q	2C		N24-3015-60	E TYPE RETAINING RING	
R	3C		N38-2025-46	PAN HEAD MACHIN SCREW	
S	3D	✻	N38-2650-45	PAN HEAD MACHIN SCREW	
T	2D		N67-3005-46	PAN HEAD SEMS SCREW	
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
V	2D		N83-3008-46	PAN HEAD TAPTITE SCREW	

K : North America

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

KDC-X769

Ref. No.	Add	New	Parts No.	Description	Destination
W	3C		N86-2004-45	BINDING HEAD TAPTITE SCREW	
RLED			RK73GB2A102J	CHIP R 1.0K J 1/10W	
RPH			RK73GB2A104J	CHIP R 100K J 1/10W	
SW1			S68-0871-05	PUSH SWITCH (PANEL MECHA)	
SW2-3			S68-0863-05	PUSH SWITCH (PANEL MECHA)	
SW4			S68-0864-05	PUSH SWITCH (PANEL MECHA)	
PH			T95-0212-05	OPTO ISOLATOR (PANEL MECHA)	
PM1	3D	✻	T42-1076-14	MOTOR ASSY	
PM2	3D	✻	T42-1077-04	MOTOR ASSY	
DME1	1D		X92-4450-01	MECHANISM ASSY	
SUB-CIRCUIT UNIT (X16-2080-10)					
J1			E59-0833-15	RECTANGULAR PLUG	
CP1			R90-1019-05	MULTI-COMP 100 X2	
IC1		✻	BR24C01AFV-W	MEMORY IC	
SUB-CIRCUIT UNIT (X16-2140-10)					
310	2C	✻	B11-1405-04	REFLECTION SHEET	
311	2C	✻	B11-1406-04	OPTICAL DIFFUSER	
312	2C	✻	B19-2204-02	LIGHTING BOARD	
D11			B30-1564-05	LED (1608, BLUE)	
D16-19			B30-1571-05	LED (WHITE)	
ED1		✻	B38-1119-05	LIQUID CRYSTAL	
C1			CC73GCH1H681J	CHIP C 680PF J	
C2-5			CK73GB1C104K	CHIP C 0.10UF K	
C2-5			CK73GB1H104K	CHIP C 0.10UF K	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7			CK73FB1A225K	CHIP C 2.2UF K	
C11			CC73GCH1H681J	CHIP C 680PF J	
C12-14			CK73GB1C104K	CHIP C 0.10UF K	
C12-14			CK73GB1H104K	CHIP C 0.10UF K	
C15			CK73GB1H103K	CHIP C 0.010UF K	
C16			CK73GB1C104K	CHIP C 0.10UF K	
C16			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1H103K	CHIP C 0.010UF K	
C26-29			CK73GB1H103K	CHIP C 0.010UF K	
313	2C	✻	E29-1930-04	CONDUCTIVE RUBBER	
CN1			E40-9364-05	FLAT CABLE CONNECTOR	
CN2			E41-0166-05	FLAT CABLE CONNECTOR	
CP1			R90-1016-05	MULTI-COMP 470 X4	
CP4,5			R90-0724-05	MULTI-COMP 1K X4	
R1			RK73GB2A433J	CHIP R 43K J 1/10W	
R2-5			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R6			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R7,8			RK73GB2A331J	CHIP R 330 J 1/10W	
R9			RK73GB2A101J	CHIP R 100 J 1/10W	
R10			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R12			RK73GB2A751J	CHIP R 750 J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R14			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R15			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R24			RK73GB2A473J	CHIP R 47K J 1/10W	
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31			RK73GB2A433J	CHIP R 43K J 1/10W	
R32-35			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R36			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R41,42			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R51,52			RK73FB2B271J	CHIP R 270 J 1/8W	
R53,54			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R67,68			RK73GB2A331J	CHIP R 330 J 1/10W	
D1			MA3062-M	ZENER DIODE	
D2-5			DA204U	DIODE	
D21,22			FTZ6.8E	ZENER DIODE	
D26			MA3091-M	ZENER DIODE	
IC1			LC75808W	MOS-IC	
IC2			LC75878W	MOS-IC	
IC3			RS-171	ANALOGUE IC	
Q1			DTA114EUA	DIGITAL TRANSISTOR	
Q1			UN5111	DIGITAL TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q6			DTA114EUA	DIGITAL TRANSISTOR	
Q6			UN5111	DIGITAL TRANSISTOR	
Q11			2SC4081	TRANSISTOR	
SWITCH UNIT (X16-2190-10)					
D1-11			B30-1605-05	LED (2COLOR PG/RED)	
D12			B30-1566-05	LED (1608, RED)	
D13			B30-1605-05	LED (2COLOR PG/RED)	
D14			B30-1566-05	LED (1608, RED)	
D15			B30-1605-05	LED (2COLOR PG/RED)	
D16			B30-1566-05	LED (1608, RED)	
D17			B30-1605-05	LED (2COLOR PG/RED)	
D18,19			B30-1566-05	LED (1608, RED)	
D21			B30-1566-05	LED (1608, RED)	
CN1		✻	E41-0419-05	FLAT CABLE CONNECTOR	
R1,2			RK73FB2B511J	CHIP R 510 J 1/8W	
R3-5			RK73FB2B331J	CHIP R 330 J 1/8W	
R6-9			RK73FB2B511J	CHIP R 510 J 1/8W	
R10			RK73FB2B471J	CHIP R 470 J 1/8W	
R15			RK73GB2A241J	CHIP R 240 J 1/10W	
R16-19			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1		✻	S70-0901-05	TACT SWITCH	
S2,3			S70-0864-05	TACT SWITCH	
S4			S70-0856-05	TACT SWITCH	
S5-8			S70-0864-05	TACT SWITCH	
S9			S70-0856-05	TACT SWITCH	
S10-13			S70-0864-05	TACT SWITCH	
S14			S70-0856-05	TACT SWITCH	
S15-18			S70-0864-05	TACT SWITCH	
S19			S70-0856-05	TACT SWITCH	
S20			S70-0864-05	TACT SWITCH	
S21		✻	T99-0445-05	ROTARY ENCODER	

K : North America

⚠ Indicates safety critical components.

KDC-X769

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
D20			DAP202U	DIODE	
D20			MA142WA	DIODE	
Q1			DTA114YUA	DIGITAL TRANSISTOR	
Q1			UN5114	DIGITAL TRANSISTOR	
Q2,3			2SC4081	TRANSISTOR	
SUB-CIRCUIT UNIT (X16-2210-10)					
315	2C	✻	E58-0968-05	RECTANGULAR RECEPTACLE	
FPC3	2C	✻	J84-0154-05	FLEXIBLE PRINTED WIRING BOARD	
ELECTRIC UNIT (X25-9680-10)					
C1,2			C90-2604-05	ELECTRO 0.22UF 50WV	
C3,4			CK73FB1C474K	CHIP C 0.47UF K	
C5,6			CE04NW0J470M	ELECTRO 47UF 6.3WV	
C7,8			CK73FB1C474K	CHIP C 0.47UF K	
C9			CK73GB1A474K	CHIP C 0.47UF K	
C10			CC73GCH1H151J	CHIP C 150PF J	
C11			CK73GB1E223K	CHIP C 0.022UF K	
C11			CK73GB1H223K	CHIP C 0.022UF K	
C12			CK73GB1H103K	CHIP C 0.010UF K	
C13-16			CK73FB1H104K	CHIP C 0.10UF K	
C17-20			CK73GB1C104K	CHIP C 0.10UF K	
C17-20			CK73GB1H104K	CHIP C 0.10UF K	
C21-26			CK73FB1C105K	CHIP C 1.0UF K	
C31-34			C90-5296-05	NP-ELECT 0.22UF 50WV	
C41,42			CE04CW1C220M	ELECTRO 22UF 16WV	
C43,44			CE04NW1C100M	ELECTRO 10UF 16WV	
C45,46			CE04NW1C220M	ELECTRO 22UF 16WV	
C47,48			CE04NW1C100M	ELECTRO 10UF 16WV	
C49,50			CE04NW1C220M	ELECTRO 22UF 16WV	
C51,52			CE04NW1C100M	ELECTRO 10UF 16WV	
C61-66			CK73GB1H222K	CHIP C 2200PF K	
C67-69			CK73FB1H104K	CHIP C 0.10UF K	
C70,71			CK73GB1H103K	CHIP C 0.010UF K	
C100			C90-5484-05	ELECTRO 3900UF 16WV	
C101			CK73GB1H103K	CHIP C 0.010UF K	
C102			C90-2866-05	ELECTRO 220UF 16WV	
C103			CK73GB1H103K	CHIP C 0.010UF K	
C104			CE04NW1C100M	ELECTRO 10UF 16WV	
C105			CE04NW0J101M	ELECTRO 100UF 6.3WV	
C106			CK73GB1A474K	CHIP C 0.47UF K	
C107			CK73FB1C105K	CHIP C 1.0UF K	
C108			CE04CW1A221M	ELECTRO 220UF 10WV	
C109			CE04CW1A101M	ELECTRO 100UF 10WV	
C115			CE04NW1E4R7M	ELECTRO 4.7UF 25WV	
C116			C90-2962-05	ELECTRO 100UF 16WV	
C117-120			CK73EB1C225K	CHIP C 2.2UF K	
C121			CE04NW1C220M	ELECTRO 22UF 16WV	
C122			CK73GB1E223K	CHIP C 0.022UF K	
C122			CK73GB1H223K	CHIP C 0.022UF K	
C123			CK73GB1H103K	CHIP C 0.010UF K	
C124,125			CE04NW1E4R7M	ELECTRO 4.7UF 25WV	
C126			CE04NW1V3R3M	ELECTRO 3.3UF 35WV	
C127			CK73GB1C683K	CHIP C 0.068UF K	
C127			CK73GB1H683K	CHIP C 0.068UF K	
C128			CE04NW1H0R1M	ELECTRO 0.1UF 50WV	

SWITCH UNIT (X16-2190-10)

Ref. No.	Add	New	Parts No.	Description	Destination
C130			CK73GB1E223K	CHIP C 0.022UF K	
C130			CK73GB1H223K	CHIP C 0.022UF K	
C131			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C132			CK73GB1H102K	CHIP C 1000PF K	
C134,135			CK73GB1H103K	CHIP C 0.010UF K	
C200			CE04NW0J470M	ELECTRO 47UF 6.3WV	
C201			CK73GB1H103K	CHIP C 0.010UF K	
C202			CC73GCH1H220J	CHIP C 22PF J	
C203			CC73GCH1H270J	CHIP C 27PF J	
C204			CK73GB0J105K	CHIP C 1.0UF K	
C206			CK73GB0J105K	CHIP C 1.0UF K	
C207,208			CK73GB1H103K	CHIP C 0.010UF K	
C211			CK73GB1H102K	CHIP C 1000PF K	
C213			CK73GB1H103K	CHIP C 0.010UF K	
C250			CE04NW1C470M	ELECTRO 47UF 16WV	
C251			CK73GB1H103K	CHIP C 0.010UF K	
C252			CE04MW1H2R2M	ELECTRO 2.2UF 50WV	
C253,254			CK73GB1C104K	CHIP C 0.10UF K	
C253,254			CK73GB1H104K	CHIP C 0.10UF K	
C255			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C256			CE04NW1C330M	ELECTRO 33UF 16WV	
C257			C90-2935-05	ELECTRO 1.0UF 50WV	
C258			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C259-262			CK73GB1A224K	CHIP C 0.22UF K	
CN1			E41-0224-05	PIN ASSY	
CN2			E40-3237-05	PIN ASSY	
CN3		✻	E41-0384-05	PIN ASSY	
CN4			E40-9527-05	FLAT CABLE CONNECTOR	
CN4			E41-0213-05	FLAT CABLE CONNECTOR	
CN5			E40-9368-05	FLAT CABLE CONNECTOR	
CN6		✻	E41-0399-05	FLAT CABLE CONNECTOR	
CN7			E41-0009-05	PIN ASSY	
⚠ J1			E58-0863-15	RECTANGULAR RECEPTACLE	
W2		✻	E30-6218-05	CORD WITH PLUG	
L1			L33-1170-05	CHOKE COIL ASSY	
L3			L40-2205-91	SMALL FIXED INDUCTOR (22UH,J)	
L4			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L5			L92-0075-05	CHIP FERRITE	
L6			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L7			L33-1039-05	LINE FILTER COIL	
L11			L40-4795-34	SMALL FIXED INDUCTOR	
L11			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	
X1			L78-0821-05	RESONATOR	
X2			L77-2738-05	CRYSTAL RESONATOR	
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
X	2D		N80-3008-46	PAN HEAD TAPTITE SCREW	
Y	2D		N83-3010-46	PAN HEAD TAPTITE SCREW	
Z	2D		N84-2004-46	PAN HEAD TAPTITE SCREW	
R1,2			RK73EB2E100J	CHIP R 10 J 1/4W	
R3,4			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R5,6			RK73EB2E100J	CHIP R 10 J 1/4W	
R7			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R8			RK73GB2A103J	CHIP R 10K J 1/10W	
R9-14			RK73GB2A333J	CHIP R 33K J 1/10W	

K : North America

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9680-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R21,22			RK73FB2B361J	CHIP R 360 J 1/8W	
R23,24			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R25,26			RK73FB2B103J	CHIP R 10K J 1/8W	
R27,28			RK73FB2B223J	CHIP R 22K J 1/8W	
R29,30			RK73FB2B820J	CHIP R 82 J 1/8W	
R33,34			RK73FB2B361J	CHIP R 360 J 1/8W	
R35,36			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R37,38			RK73FB2B103J	CHIP R 10K J 1/8W	
R39,40			RK73FB2B223J	CHIP R 22K J 1/8W	
R41,42			RK73FB2B820J	CHIP R 82 J 1/8W	
R45,46			RK73FB2B361J	CHIP R 360 J 1/8W	
R47,48			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R49,50			RK73FB2B103J	CHIP R 10K J 1/8W	
R51,52			RK73FB2B223J	CHIP R 22K J 1/8W	
R53,54			RK73FB2B820J	CHIP R 82 J 1/8W	
R60,61			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R100			RK73FB2B223J	CHIP R 22K J 1/8W	
R101			RK73GB2A101J	CHIP R 100 J 1/10W	
R102			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R103			RK73GB2A223J	CHIP R 22K J 1/10W	
R104			RK73FB2B221J	CHIP R 220 J 1/8W	
R105			RK73GB2A153J	CHIP R 15K J 1/10W	
R106			R92-3047-05	CHIP R 24K D 1/10W	
R107			R92-3032-05	CHIP R 4.3K D 1/10W	
R108			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R112			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R113			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R114			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R115			RK73GB2A750J	CHIP R 75 J 1/10W	
R116			RK73GB2A103J	CHIP R 10K J 1/10W	
R117			RK73GB2A913J	CHIP R 91K J 1/10W	
R118			RK73GB2A563J	CHIP R 56K J 1/10W	
R119,120			RK73GB2A470J	CHIP R 47 J 1/10W	
R121			RK73GB2A274J	CHIP R 270K J 1/10W	
R122			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R123			RK73GB2A913J	CHIP R 91K J 1/10W	
R124			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R125,126			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	
R127			RK73GB2A223J	CHIP R 22K J 1/10W	
R128,129			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	
R130			RK73GB2A223J	CHIP R 22K J 1/10W	
R131			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R132			RK73FB2B561J	CHIP R 560 J 1/8W	
R133			RK73GB2A104J	CHIP R 100K J 1/10W	
R135			RK73GB2A104J	CHIP R 100K J 1/10W	
R138			RK73GB2A223J	CHIP R 22K J 1/10W	
R139			RK73FB2B103J	CHIP R 10K J 1/8W	
R140			RK73GB2A103J	CHIP R 10K J 1/10W	
R141			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R142			RK73GB2A183J	CHIP R 18K J 1/10W	
R143			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
R144			RK73EB2E473J	CHIP R 47K J 1/4W	
R145			RK73GB2A104J	CHIP R 100K J 1/10W	
R146			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R148			RK73EB2E103J	CHIP R 10K J 1/4W	

Ref. No.	Add	New	Parts No.	Description	Destination
R200			RK73GB2A153J	CHIP R 15K J 1/10W	
R201			RK73GB2A103J	CHIP R 10K J 1/10W	
R202			RK73GB2A104J	CHIP R 100K J 1/10W	
R203			RK73GB2A103J	CHIP R 10K J 1/10W	
R206			RK73GB2A103J	CHIP R 10K J 1/10W	
R207			RK73GB2A104J	CHIP R 100K J 1/10W	
R208,209			RK73GB2A103J	CHIP R 10K J 1/10W	
R212,213			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R214,215			RK73GB2A103J	CHIP R 10K J 1/10W	
R216,217			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R218			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R219,220			RK73GB2A101J	CHIP R 100 J 1/10W	
R221-224			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R228			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R229			RK73GB2A104J	CHIP R 100K J 1/10W	
R230			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R231			RK73GB2A104J	CHIP R 100K J 1/10W	
R232			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R233			RK73GB2A104J	CHIP R 100K J 1/10W	
R234-240			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R241			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R242			RK73GB2A224J	CHIP R 220K J 1/10W	
R243			RK73GB2A104J	CHIP R 100K J 1/10W	
R245,246			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R247			RK73GB2A104J	CHIP R 100K J 1/10W	
R248			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R250-253			RK73GB2A104J	CHIP R 100K J 1/10W	
R254,255			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R256,257			RK73GB2A104J	CHIP R 100K J 1/10W	
R259			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R260,261			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R262			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R264			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R265			RK73GB2A104J	CHIP R 100K J 1/10W	
R266			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R267			RK73GB2A473J	CHIP R 47K J 1/10W	
R268			RK73GB2A333J	CHIP R 33K J 1/10W	
R269			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R270,271			RK73GB2A471J	CHIP R 470 J 1/10W	
R272			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R273			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R274			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R277,278			RK73GB2A471J	CHIP R 470 J 1/10W	
R279,280			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R282			RK73GB2A103J	CHIP R 10K J 1/10W	
R285			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R300,301			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R302			RK73GB2A221J	CHIP R 220 J 1/10W	
R303			RK73GB2A223J	CHIP R 22K J 1/10W	
R305			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R306			RK73GB2A100J	CHIP R 10 J 1/10W	
R307			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R312			RK73EB2E101J	CHIP R 100 J 1/4W	
R313-317			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R318,319			RK73EB2E101J	CHIP R 100 J 1/4W	

K : North America

⚠ Indicates safety critical components.

KDC-X769

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9680-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R321-323			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R324,325			RK73GB2A103J	CHIP R 10K J 1/10W	
R326			RK73GB2A104J	CHIP R 100K J 1/10W	
R327,328			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R329			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R330,331			RK73EB2E101J	CHIP R 100 J 1/4W	
R332			RK73EB2E471J	CHIP R 470 J 1/4W	
R402			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R403			RK73GB2A223J	CHIP R 22K J 1/10W	
D1			1N5393G-M5	DIODE	
D2			RB160L-40	DIODE	
D3			MA4056(N)-M	ZENER DIODE	
D4			MA4082(N)-L	ZENER DIODE	
D6			MA4110-L	ZENER DIODE	
D7			MA4110(N)-M	ZENER DIODE	
D8			MA4056(N)-M	ZENER DIODE	
D9-12			S1J	DIODE	
D9-12			1SR154-400	DIODE	
D13			1SS133	DIODE	
D14			MA4056-M	ZENER DIODE	
D16			MA4068(N)-M	ZENER DIODE	
D17			MA4062(N)-M	ZENER DIODE	
D20			1SS133	DIODE	
D23,24			DAP202U	DIODE	
D23,24			MA142WA	DIODE	
D25-27			RD6.8M(B2)	ZENER DIODE	
D28			RD6.8MW	ZENER DIODE	
D29-31			1SS133	DIODE	
D33-40			S1J	DIODE	
D33-40			1SR154-400	DIODE	
D50			RD6.8M(B2)	ZENER DIODE	
D51			RD6.8MW	ZENER DIODE	
D52,53			MA3062WA	ZENER DIODE	
D60			MA3062WA	ZENER DIODE	
D61			DA204U	DIODE	
D62			MA3062WA	ZENER DIODE	
D63-65			DA204U	DIODE	
D66			IMSA-6801	SURGE ABSORBER	
IC1		✻	UPD703030GC015	MI-COM IC	
IC2			TDA7411	ANALOGUE IC	
IC3			M5237ML	ANALOGUE IC	
IC4			TDA7560	ANALOGUE IC	
IC6			ICL7660SIBA	ANALOGUE IC	
IC7			S-80837CNNB	MOS-IC	
IC8			TC74HC02AF	MOS-IC	
IC9-11			NJM4565M-TE2	ANALOGUE IC	
IC13,14			LB1930M	ANALOGUE IC	
IC15			BR24C01AF-W	ROM IC	
Q1			2SA2057	TRANSISTOR	
Q2			2SC4081	TRANSISTOR	
Q3			2SA1576A	TRANSISTOR	
Q4			DTA124EUA	DIGITAL TRANSISTOR	
Q4			UN5112	DIGITAL TRANSISTOR	
Q5			DTC124EUA	DIGITAL TRANSISTOR	
Q5			UN5212	DIGITAL TRANSISTOR	
Q6			DTC144EUA	DIGITAL TRANSISTOR	
Q6			UN5213	DIGITAL TRANSISTOR	
Q7			DTA124EUA	DIGITAL TRANSISTOR	
Q7			UN5112	DIGITAL TRANSISTOR	
Q8,9			2SA2057	TRANSISTOR	
Q11			DTC124EUA	DIGITAL TRANSISTOR	
Q11			UN5212	DIGITAL TRANSISTOR	
Q12			DTA124EUA	DIGITAL TRANSISTOR	
Q12			UN5112	DIGITAL TRANSISTOR	
Q13			2SA2057	TRANSISTOR	
Q14			2SC4081	TRANSISTOR	
Q15			2SB1443	TRANSISTOR	
Q16,17			2SC4081	TRANSISTOR	
Q18,19			2SA1576A	TRANSISTOR	
Q20,21			2SC4081	TRANSISTOR	
Q22			2SA1576A	TRANSISTOR	
Q23			DTC114YUA	DIGITAL TRANSISTOR	
Q23			UN5214	DIGITAL TRANSISTOR	
Q24,25			2SB1240	TRANSISTOR	
Q26			DTC114YUA	DIGITAL TRANSISTOR	
Q26			UN5214	DIGITAL TRANSISTOR	
Q27			2SA1576A	TRANSISTOR	
Q28			DTA124EUA	DIGITAL TRANSISTOR	
Q28			UN5112	DIGITAL TRANSISTOR	
Q29			DTA123JK	DIGITAL TRANSISTOR	
Q29			KRA105S	DIGITAL TRANSISTOR	
Q30			DTC144EUA	DIGITAL TRANSISTOR	
Q30			UN5213	DIGITAL TRANSISTOR	
Q32-34			2SC4081	TRANSISTOR	
Q51,52			DTA124EUA	DIGITAL TRANSISTOR	
Q51,52			UN5112	DIGITAL TRANSISTOR	
Q53			DTC143TUA	DIGITAL TRANSISTOR	
Q53			UN5216	DIGITAL TRANSISTOR	
Q54			DTC124EUA	DIGITAL TRANSISTOR	
Q54			UN5212	DIGITAL TRANSISTOR	
Q55-60			DTC143TUA	DIGITAL TRANSISTOR	
Q55-60			UN5216	DIGITAL TRANSISTOR	
Q63			DTA124EUA	DIGITAL TRANSISTOR	
Q63			UN5112	DIGITAL TRANSISTOR	
Q102			DTC124EUA	DIGITAL TRANSISTOR	
Q102			UN5212	DIGITAL TRANSISTOR	
Q103			2SB1188(Q,R)	TRANSISTOR	
TH1			PTH9C42BD471Q	POSITIVE RESISTOR	
A1		✻	X86-3730-11	FRONT-END UNIT	

CD PLAYER UNIT (X32-5200-00)

C1,2			CK73GB0J105K	CHIP C	1.0UF	K	
C3			CK73FB1A225K	CHIP C	2.2UF	K	
C4			C92-0566-05	CHIP-TAN	10UF	6.3WV	
C5			CC73GCH1H220J	CHIP C	22PF	J	
C6			CC73GCH1H030C	CHIP C	3.0PF	C	
C7			CK73GB1C104K	CHIP C	0.10UF	K	
C8			CK73GB0J105K	CHIP C	1.0UF	K	
C10			CK73GB1H472K	CHIP C	4700PF	K	

K : North America

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5200-00)

Ref. No.	Add	New	Parts No.	Description	Destination
C11			CK73GB1H682K	CHIP C 6800PF K	
C12			CK73GB1H332K	CHIP C 3300PF K	
C13			CK73GB1C333K	CHIP C 0.033UF K	
C14			CK73GB1H472K	CHIP C 4700PF K	
C15			CK73GB1E473K	CHIP C 0.047UF K	
C16			CC73GCH1H221J	CHIP C 220PF J	
C17			CK73GB1H472K	CHIP C 4700PF K	
C18			CC73GCH1H331J	CHIP C 330PF J	
C19,20			CK73GB1C104K	CHIP C 0.10UF K	
C21			CK73FB1A225K	CHIP C 2.2UF K	
C23			CK73GB1H102K	CHIP C 1000PF K	
C24			CK73GB1E223K	CHIP C 0.022UF K	
C25			CK73GB1H153K	CHIP C 0.015UF K	
C26			CK73GB0J105K	CHIP C 1.0UF K	
C28			CK73GB0J105K	CHIP C 1.0UF K	
C29			CK73GB1C104K	CHIP C 0.10UF K	
C33			CK73GB1C104K	CHIP C 0.10UF K	
C35			CK73GB1C104K	CHIP C 0.10UF K	
C39			CK73GB1H152K	CHIP C 1500PF K	
C40			CK73GB1H103K	CHIP C 0.010UF K	
C41			CK73EB1C225K	CHIP C 2.2UF K	
C42			CK73GB1H152K	CHIP C 1500PF K	
C44			CK73GB1H103K	CHIP C 0.010UF K	
C46			CK73GB1E473K	CHIP C 0.047UF K	
C51			CK73GB1C104K	CHIP C 0.10UF K	
C55			CK73GB1C104K	CHIP C 0.10UF K	
C67,68			CK73GB1C104K	CHIP C 0.10UF K	
C71,72			CK73GB1H471K	CHIP C 470PF K	
C77,78			CC73GCH1H680J	CHIP C 68PF J	
C79,80			CK73GB1H222K	CHIP C 2200PF K	
C85			CK73GB1C104K	CHIP C 0.10UF K	
C89			CK73GB1H222K	CHIP C 2200PF K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR	
CN1			E41-0193-05	FLAT CABLE CONNECTOR	
CN2			E40-9527-05	FLAT CABLE CONNECTOR	
CN2			E41-0213-05	FLAT CABLE CONNECTOR	
X1			L78-0851-05	RESONATOR (16.93MHZ)	
CP1			R90-1019-05	MULTI-COMP 100 X2	
CP2			R90-1014-05	MULTI-COMP 100 X4	
R3			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R5			RK73GB2A361J	CHIP R 360 J 1/10W	
R6			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R7			RK73GB2A104J	CHIP R 100K J 1/10W	
R8			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R9			RK73FB2B100J	CHIP R 10 J 1/8W	
R10,11			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R12			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R13			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R15			RK73GB2A824J	CHIP R 820K J 1/10W	
R16			RK73GB2A223J	CHIP R 22K J 1/10W	
R17			RK73GB2A393J	CHIP R 39K J 1/10W	
R18			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R19			RK73GB2A473J	CHIP R 47K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R20			RK73GB2A104J	CHIP R 100K J 1/10W	
R21			RK73GB2A244J	CHIP R 240K J 1/10W	
R22			RK73GB2A623J	CHIP R 62K J 1/10W	
R32			RK73GB2A683J	CHIP R 68K J 1/10W	
R34			RK73GB2A363J	CHIP R 36K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73GB2A151J	CHIP R 150 J 1/10W	
R37			RK73GB2A471J	CHIP R 470 J 1/10W	
R38			RK73GB2A224J	CHIP R 220K J 1/10W	
R40			RK73GB2A133J	CHIP R 13K J 1/10W	
R46			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R47			RK73GB2A103J	CHIP R 10K J 1/10W	
R49			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R52			RK73GB2A104J	CHIP R 100K J 1/10W	
R53			RK73GB2A103J	CHIP R 10K J 1/10W	
R54			RK73GB2A104J	CHIP R 100K J 1/10W	
R70			RK73GB2A103J	CHIP R 10K J 1/10W	
R71			RK73GB2A183J	CHIP R 18K J 1/10W	
R73			RK73GB2A683J	CHIP R 68K J 1/10W	
R74			RK73GB2A123J	CHIP R 12K J 1/10W	
R75			RK73GB2A333J	CHIP R 33K J 1/10W	
R76			RK73GB2A103J	CHIP R 10K J 1/10W	
R79,80			RK73GB2A103J	CHIP R 10K J 1/10W	
R81			RK73GB2A333J	CHIP R 33K J 1/10W	
R82			RK73GB2A223J	CHIP R 22K J 1/10W	
R84			RK73GB2A103J	CHIP R 10K J 1/10W	
R101,102			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R103,104			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R107,108			RK73FB2B331J	CHIP R 330 J 1/8W	
R110			RK73FB2B201J	CHIP R 200 J 1/8W	
R117,118			RK73FB2B203J	CHIP R 20K J 1/8W	
R121,122			RK73FB2B203J	CHIP R 20K J 1/8W	
R125,126			RK73FB2B203J	CHIP R 20K J 1/8W	
R202			RK73GB2A104J	CHIP R 100K J 1/10W	
R213			RK73GB2A104J	CHIP R 100K J 1/10W	
R218			RK73GB2A473J	CHIP R 47K J 1/10W	
R233			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R234			RK73GB2A103J	CHIP R 10K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DAN202U	DIODE	
D2			MA8051-L	ZENER DIODE	
D3			DA204U	DIODE	
D4			DAN202U	DIODE	
IC1			AN22002AA	ANALOGUE IC	
IC2			MN662773KH2	MOS-IC	
IC4			BA5824FP	ANALOGUE IC	
IC6			NJM4580M1	ANALOGUE IC	
Q1			MCH6101	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3			DTA143XUA	DIGITAL TRANSISTOR	
Q4			2SA1362(Y)	TRANSISTOR	
Q5			DTC124EUA	DIGITAL TRANSISTOR	

K : North America

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
CD MECHANISM ASSY (X92-4450-01)					
2	1B		A10-4827-12	CHASSIS	
5	1B		D10-4576-43	ARM ASSY	
8	2A		D10-4579-03	LEVER ASSY	
10	3A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-22	SLIDER	
17	3B		D10-4588-13	SLIDER	
18	3B		D10-4595-04	ARM	
19	3B		D10-4596-14	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	3B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	3B		D13-2158-04	GEAR	
30	3B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	2B		D13-2172-03	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-04	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
51	1A		J21-9676-22	MOUNTING HARDWARE	
52	3B		J21-9677-02	MOUNTING HARDWARE	
53	1B		J21-9678-03	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-4472-05	MACHINE SCREW (M1.7X8.5)	
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)	
G	2A		N19-2163-04	FLAT WASHER	
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW	
J	1B		N09-6108-05	MACHINE SCREW (M2✻3.5TYPE3)	
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)	
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)	

Ref. No.	Add	New	Parts No.	Description	Destination
DPU1	2D		X93-2000-00	OPTICAL PICKUP ASSY	

K : North America

⚠ Indicates safety critical components.