



EXPLODED VIEW

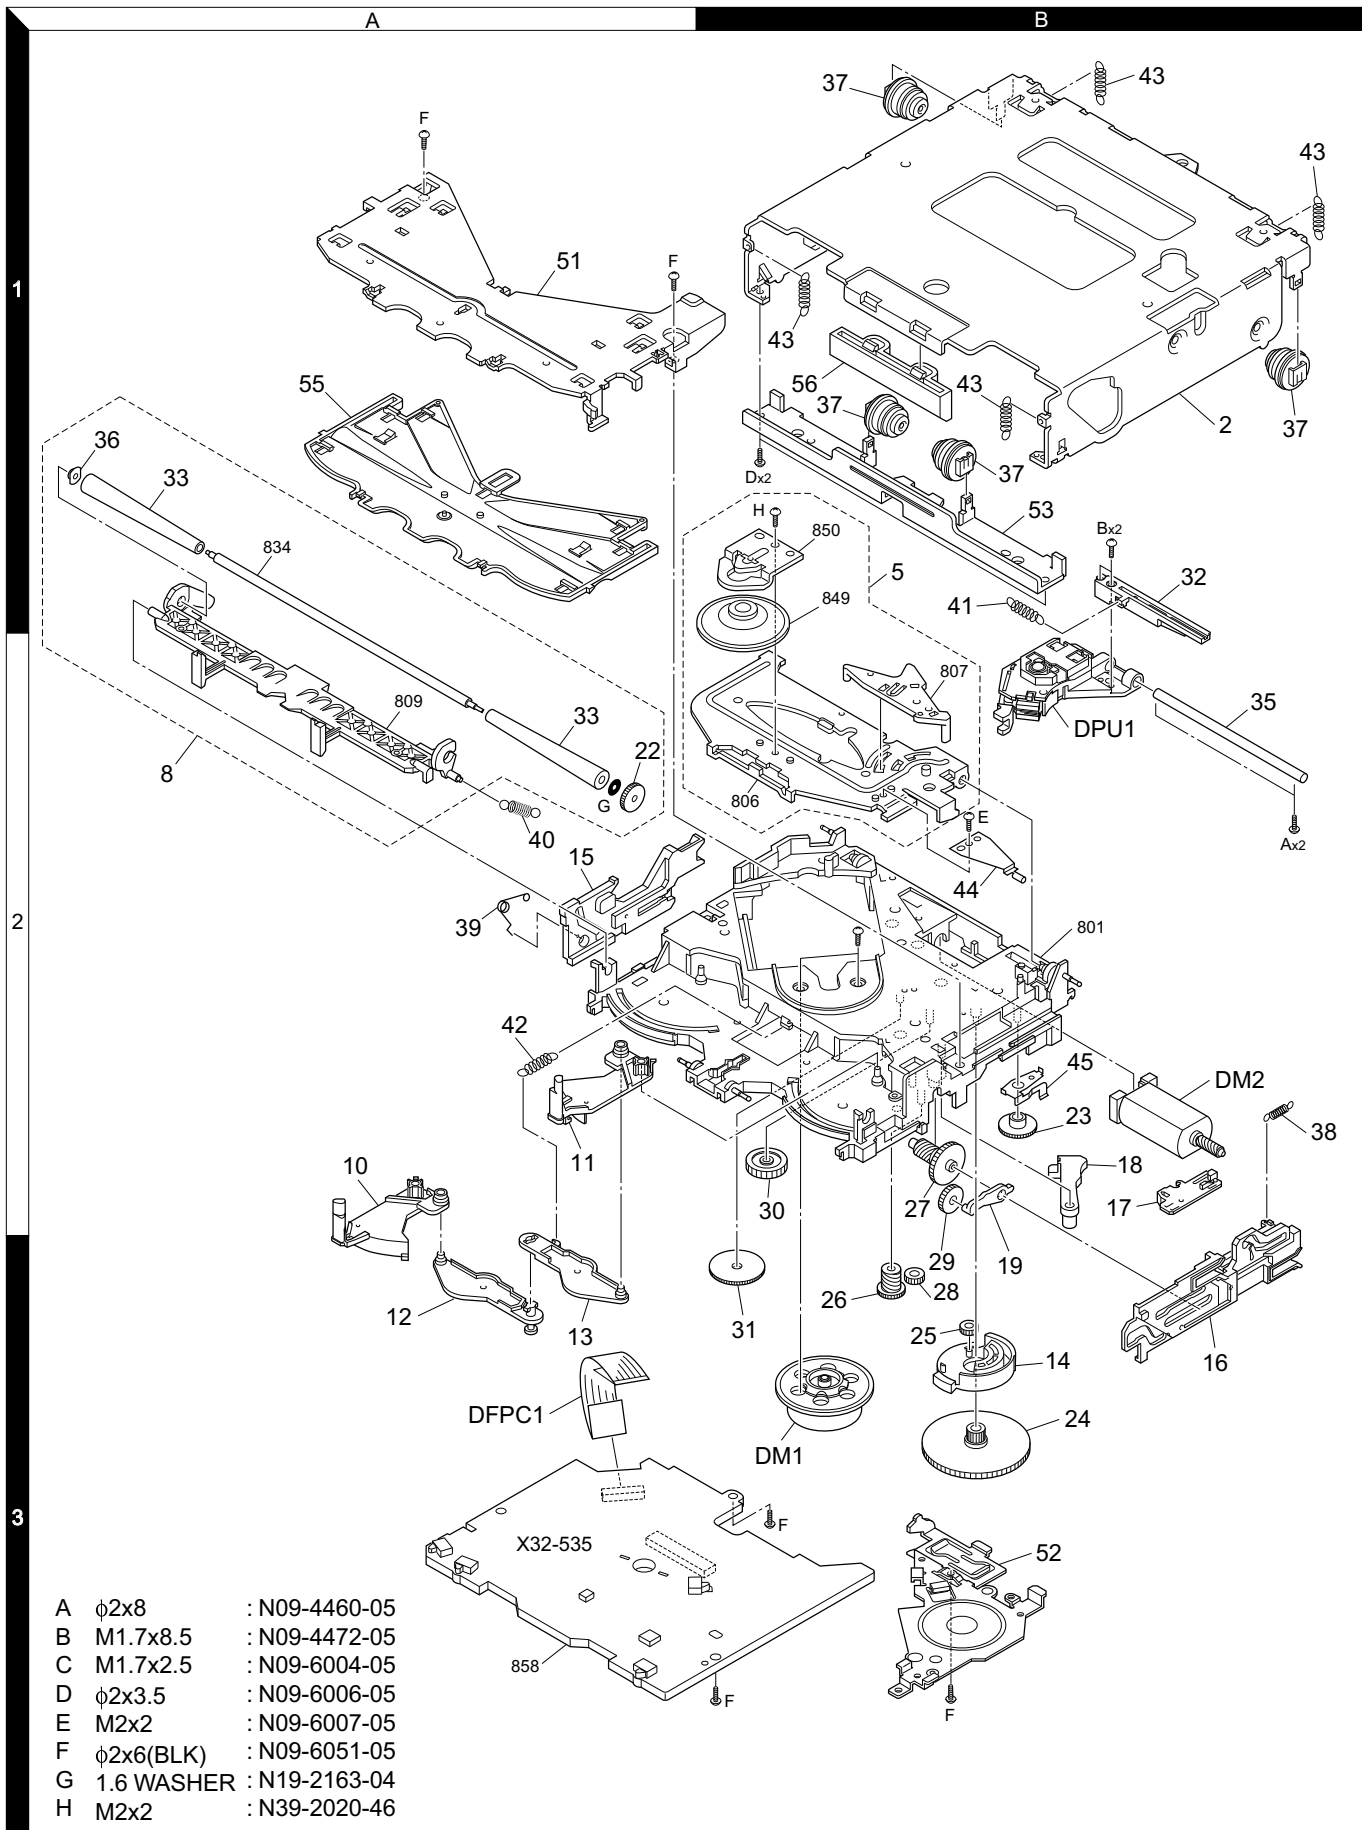

EXPLODED VIEW

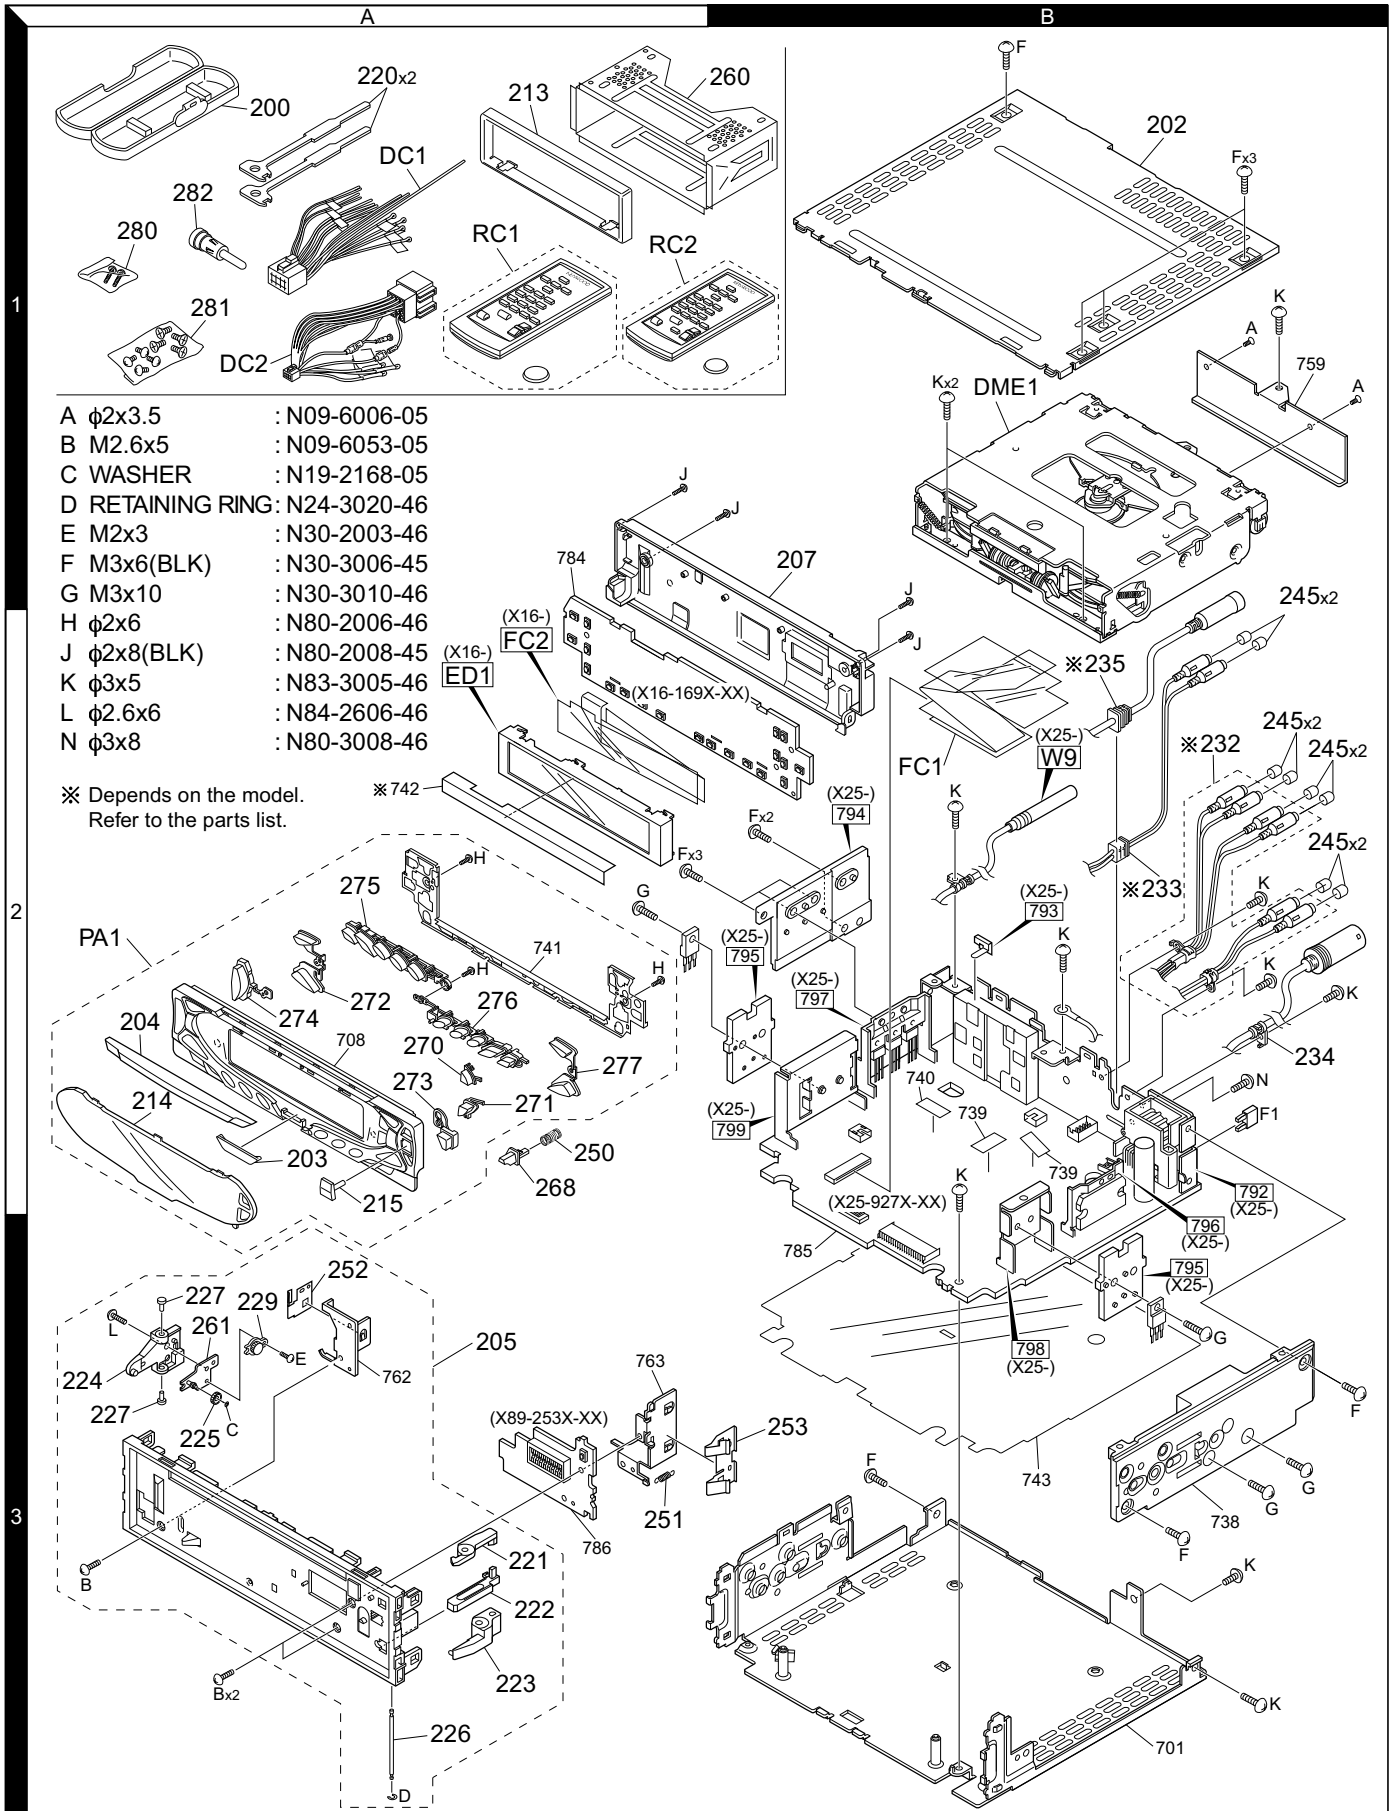

KDC-X959/Z939,Z738,Z838W

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
KDC-X959/Z939,Z738,Z838W					
200	1A		A02-2712-13	PLASTIC CABINET ASSY	E1,M1,E2 K1
202	1B		A52-0811-12	TOP PLATE	
203	2A		A21-4175-04	DRESSING PANEL	
204	2A		A21-4209-02	DRESSING PANEL	
204	2A	*	A21-4213-02	DRESSING PANEL	
205	3A	*	A22-2946-22	SUB PANEL ASSY	K1 M1 E1
207	1B		A46-1756-11	REAR COVER	
PA1	2A	*	A64-2687-11	PANEL ASSY	
PA1	2A	*	A64-2688-11	PANEL ASSY	
PA1	2A	*	A64-2689-11	PANEL ASSY	
PA1	2A	*	A64-2723-11	PANEL ASSY	E2
RC1	1A		A70-2025-05	REMOTE CONTROLLER ASSY (RC-410)	K1
RC2	1A		A70-2026-05	REMOTE CONTROLLER ASSY (RC-420)	E1,M1,E2
213	1A		B07-3050-02	ESCUTCHEON	E1,M1,E2 K1 K1 M1 E1
213	1A		B07-3057-02	ESCUTCHEON	
214	2A	*	B10-4240-01	FRONT GLASS	
214	2A	*	B10-4241-01	FRONT GLASS	
214	2A	*	B10-4242-01	FRONT GLASS	
214	2A	*	B10-4252-01	FRONT GLASS	E2
215	2A		B10-4217-04	FRONT GLASS	K1 E1,M1,E2
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-			B46-0612-14	ID CARD	
-			B46-0645-03	USER CARD	
-			B46-0648-03	USER CARD	K1
-			B58-1365-04	CAUTION CARD	K1
-		*	B64-2257-00	INST. MANUAL (ENGLISH)	K1
-		*	B64-2258-00	INST. MANUAL (FRE,SPA)	K1
-		*	B64-2259-00	INST. MANUAL (ENGLISH)	E1,E2
-		*	B64-2260-00	INST. MANUAL (FRE,GER)	E1,E2
-		*	B64-2261-00	INST. MANUAL (DUT,ITA)	E1,E2
-		*	B64-2262-00	INST. MANUAL (SPA,POR)	E1,E2
-		*	B64-2263-00	INST. MANUAL (ENG,T-CHI)	M1
220	1A		D10-4674-04	LEVER	K1,E1,M1 E2 K1,M1
221	3A		D10-4675-04	LEVER	
222	3A		D10-4676-04	LEVER	
223	3A		D10-4677-04	LEVER	
224	3A		D10-4678-03	LEVER	
225	3A		D13-2242-04	GEAR	K1,E1,M1 E2 K1,M1
226	3A		D21-2406-04	SHAFT	
227	3A		D21-2407-04	SHAFT	
229	3A		D39-0237-05	DAMPER	
232	2B		E30-6064-05	CORD WITH PINPLUG (6P)	
232	2B		E30-6066-05	CORD WITH PINPLUG (4P)	E1,E2
233	2B	*	E30-6067-15	CORD WITH PINPLUG (AUX 2P)	
234	2B		E30-6068-05	CORD WITH DIN CONNECTOR (13P)	
235	2B		E30-6069-05	CORD WITH DIN CONNECTOR (4P)	
DC1	1A		E30-6062-05	DC CORD	K1
DC2	1A		E30-6063-05	DC CORD	E1,M1,E2
FC1	2B		E39-0447-05	FLAT CABLE (24P)	
245	2B		F29-0049-05	INSULATING COVER	K1
F1	2B		F52-0006-05	FUSE (MINI BLADE TYPE) (10A)	



Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
F1	2B		F52-0011-05	FUSE (MINI BLADE TYPE) (10A)	K1,M1 E1,E2 K1 M1 E1 E2
250	2A		G01-3135-04	COMPRESSION SPRING	
251	3A		G01-3136-14	EXTENSION SPRING	
252	3A		G02-1428-04	FLAT SPRING	
253	3B		G02-1429-04	FLAT SPRING	
-		*	H10-4802-12	POLYSTYRENE FOAMED FIXTURE	
-		*	H11-1538-04	POLYSTYRENE FOAMED BOARD	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	
-		*	H54-2392-03	ITEM CARTON CASE	
-		*	H54-2393-03	ITEM CARTON CASE	
-		*	H54-2394-03	ITEM CARTON CASE	
-		*	H54-2511-03	ITEM CARTON CASE	
260	1B		J21-9823-03	MOUNTING HARDWARE ASSY	E1,M1,E2 K1 E1,M1,E2 K1 E1,M1,E2 K1 E1,M1,E2 K1 E1,M1,E2 K1 K1 E1,M1,E2 K1
261	3A		J21-9831-04	MOUNTING HARDWARE ASSY	
268	2A		K24-3837-04	KNOB (OPEN)	
270	2A		K24-3850-04	KNOB (SKIP UP)	
270	2A		K24-3852-04	KNOB (SKIP UP)	
271	2A		K24-3851-04	KNOB (SKIP DOWN)	
271	2A		K24-3853-04	KNOB (SKIP DOWN)	
272	2A	*	K25-1417-13	KNOB (EQ,SRC)	
273	2A		K25-1418-03	KNOB (PAUSE)	
274	2A		K25-1423-03	KNOB (VOL)	
275	2A		K25-1428-03	KNOB (PRE1-3,ATT,Q)	
275	2A		K25-1456-03	KNOB (PRE1-3)	
276	2A		K25-1420-03	KNOB (PRE4-6,TI,DISP)	
276	2A		K25-1429-03	KNOB (PRE4-6,AUTO,DISP)	
277	2A	*	K25-1458-13	KNOB (FM,AM)	
280	1A		N99-1656-05	SCREW SET	K1,M1
281	1A		N99-1723-05	SCREW SET	
A	1B		N09-6006-05	TAPTITE SCREW (PAN ST 2X3.5T)	
B	3A		N09-6053-05	MACHINE SCREW (M2.6X5)	
C	3A		N19-2168-05	FLAT WASHER	
D	3A		N24-3020-46	E TYPE RETAINING RING (2X5X1.7)	
E	3A		N30-2003-46	PAN HEAD MACHINE SCREW	
F	1B		N30-3006-45	PAN HEAD MACHINE SCREW	
G	3B		N30-3010-46	PAN HEAD MACHINE SCREW	
H	2A		N80-2006-46	PAN HEAD TAPTITE SCREW	
J	1A		N80-2008-45	PAN HEAD TAPTITE SCREW	
K	1B		N83-3005-46	PAN HEAD TAPTITE SCREW	
L	3A		N84-2606-46	PAN HEAD TAPTITE SCREW	
282	1A		T90-0523-05	ANTENNA ADAPTOR	
282	1A		T90-0534-05	ANTENNA ADAPTOR	
282	1A		T90-0552-05	ANTENNA ADAPTOR	
DME1	1B		X92-4450-01	MECHANISM ASSY (DXM-6111W)	E2
DME1	1B	*	X92-4590-01	MECHANISM ASSY (DXM-6511W)	K1,E1,M1
SWITCH UNIT (X16-169X-XX)					
C3-5			CK73GB1C104K	CHIP C	0.10UF K
C6			CK73FB1A225K	CHIP C	2.2UF K
C7			CC73GCH1H101J	CHIP C	100PF J
C8			CK73EB0J106K	CHIP C	10UF K

K1 : KDC-X959 M1 : KDC-Z939 E1 : Z838W E2 : Z738

indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

SWITCH UNIT (X16-169X-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C9			CK73FB1A225K	CHIP C 2.2UF K	K1,M1,E1
C10			CK73GB0J105K	CHIP C 1.0UF K	
C11			CK73GB1C104K	CHIP C 0.10UF K	
C16-19			CK73GB1H103K	CHIP C 0.010UF K	
C20,21			CK73GB1C104K	CHIP C 0.10UF K	
C22,23		*	C92-1736-05	CHIP-TAN 2.2UF 35WV	K1,M1,E1
C24-35			CK73GB1C104K	CHIP C 0.10UF K	
C36			C92-0628-05	CHIP-TAN 10UF 10WV	
C37			CK73GB1H104K	CHIP C 0.10UF K	
CN1			E40-5848-05	FLAT CABLE CONNECTOR (30P)	
FC2	2A	*	E39-0449-05	FLAT CABLE (30P)	K1,M1,E1
J1			E59-0829-05	RECTANGULAR PLUG (16P)	
L1,2			L92-0332-05	CHIP FERRITE	
X1		*	L78-0868-05	RESONATOR (5.00MHZ)	
CP3		*	R90-1503-05	MULTI-COMP 47K X4	
CP4		*	R90-0723-05	MULTI-COMP 47K X2	K1,M1,E1
CP5		*	R90-1085-05	MULTI-COMP 22K X4	
CP6		*	R90-1524-05	MULTI-COMP 220 X4	
CP7-15		*	R90-1085-05	MULTI-COMP 22K X4	
CP16		*	R90-1096-05	MULTI-COMP 10K X4	
CP17		*	R90-1502-05	MULTI-COMP 470 X4	K1,M1,E1
CP18		*	R90-1094-05	MULTI-COMP 1K X4	
CP19		*	R90-1524-05	MULTI-COMP 220 X4	
CP20		*	R90-1502-05	MULTI-COMP 470 X4	
CP21,22		*	R90-1524-05	MULTI-COMP 220 X4	
CP23-28		*	R90-1502-05	MULTI-COMP 470 X4	K1,M1,E1
CP29			R90-0737-05	MULTI-COMP 100K X2	
CP30			R90-1020-05	MULTI-COMP 22K X2	
CP32			R90-1022-05	MULTI-COMP 470 X2	
CP33		*	R90-1502-05	MULTI-COMP 470 X4	
CP34		*	R90-1094-05	MULTI-COMP 1K X4	K1,M1,E1
CP35			R90-0726-05	MULTI-COMP 10K X2	
CP37		*	R90-1504-05	MULTI-COMP 100K X4	
CP38		*	R90-1085-05	MULTI-COMP 22K X4	
CP39			R90-1022-05	MULTI-COMP 470 X2	K1,M1,E1
CP40		*	R90-1085-05	MULTI-COMP 22K X4	
CP41-44		*	R90-1524-05	MULTI-COMP 220 X4	
R1			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R2			RK73GB2A183J	CHIP R 18K J 1/10W	
R3			RK73EB2E222J	CHIP R 2.2K J 1/4W	K1,M1,E1
R10			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R11			RK73GB2A101J	CHIP R 100 J 1/10W	
R12			RK73GB2A104J	CHIP R 100K J 1/10W	
R13,14			RK73GB2A274J	CHIP R 270K J 1/10W	
R15,16			RK73GB2A153J	CHIP R 15K J 1/10W	M1,E1,E2
R17			RK73GB2A104J	CHIP R 100K J 1/10W	
R48-50			RK73FB2B471J	CHIP R 470 J 1/8W	
R51-53			RK73FB2B471J	CHIP R 470 J 1/8W	
R56,57			RK73EB2E681J	CHIP R 680 J 1/4W	
R58			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1,M1,E1
R59			RK73GB2A103J	CHIP R 10K J 1/10W	
R60			RK73GB2A223J	CHIP R 22K J 1/10W	
R61			RK73GB2A471J	CHIP R 470 J 1/10W	
R64,65			RK73GB2A102J	CHIP R 1.0K J 1/10W	

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
R66			RK73GB2A223J	CHIP R 22K J 1/10W	E2
R67			RK73GB2A333J	CHIP R 33K J 1/10W	
R69,70			RK73GB2A471J	CHIP R 470 J 1/10W	
R71			RK73GB2A223J	CHIP R 22K J 1/10W	
R72			RK73GB2A103J	CHIP R 10K J 1/10W	
R73			RK73GB2A104J	CHIP R 100K J 1/10W	M1,E1,E2
R74			RK73GB2A471J	CHIP R 470 J 1/10W	
R75			RK73GB2A101J	CHIP R 100 J 1/10W	
R76			RK73GB2A471J	CHIP R 470 J 1/10W	
R79-82			RK73GB2A471J	CHIP R 470 J 1/10W	
S1			S70-0863-05	TACT SWITCH	M1,E1,E2
S2,3			S70-0856-05	TACT SWITCH	
S2,3			S70-0873-05	TACT SWITCH	
S4			S70-0857-05	TACT SWITCH	
S5-10			S70-0856-05	TACT SWITCH	
S5-10			S70-0873-05	TACT SWITCH	K1
S11			S70-0857-05	TACT SWITCH	
S12,13			S70-0856-05	TACT SWITCH	
S12,13			S70-0873-05	TACT SWITCH	
S14			S70-0857-05	TACT SWITCH	
S15-19			S70-0856-05	TACT SWITCH	M1,E1,E2
S15-19			S70-0873-05	TACT SWITCH	
S20			S70-0857-05	TACT SWITCH	
D2,3			FTZ6.8E	ZENER DIODE	
D6			MA8068-M	ZENER DIODE	
D7			DA204U	DIODE	K1,M1,E1
D11			1SR154-400	DIODE	
D12			DAN202K	DIODE	
IC1		*	SI-3033LSA-TL	ANALOGUE IC	
IC2			TC74HC4050AFT	MOS-IC	
IC3			RS-171	ANALOGUE IC	K1,M1,E1
IC4			BA3830F	ANALOGUE IC	
IC5		*	M25P20	ROM IC	
IC6		*	MX23L3213T1109	MEMORY IC	
IC7		*	IS61LV641615TI	SRAM IC	
IC8		*	703107AGJ121	MI-COM IC	M1,E1,E2
IC9			TC7WT126FU	MOS-IC	
IC10			TC7SH08F	MOS-IC	
Q4			DTC123JUA	DIGITAL TRANSISTOR	
Q5			DTC123JUA	DIGITAL TRANSISTOR	M1,E1,E2
Q6			CPH3105	TRANSISTOR	
Q8			DTC114EUA	DIGITAL TRANSISTOR	
Q8			UN5111	DIGITAL TRANSISTOR	
Q9			DTC123JUA	DIGITAL TRANSISTOR	
ED1	2A	*	W02-3324-05	ELECTRIC CIRCUIT MODULE	
ELECTRIC UNIT (X25-927X-XX)					
D101			B30-1566-05	LED (1608,RED)	
C1			C90-5377-05	ELECTRO 3900UF 16WV	
C2			CK73GB1H103K	CHIP C 0.010UF K	
C3			CK73GB1C104K	CHIP C 0.10UF K	
C4			CE04NW1A101M	ELECTRO 100UF 10WV	
C4			C90-5442-05	ELECTRO 100UF 10WV	

K1 : KDC-X959 M1 : KDC-Z939 E1 : Z838W E2 : Z738

⚠ indicates safety critical components.

KDC-X959/Z939,Z738,Z838W

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description			Dest inati on
C5,6 C7 C8 C9 C10			CE04NW1E4R7M CK73FB1C105K CE04DW1A221M CK73FB1C224K CK73GB1H103K	ELECTRO CHIP C ELECTRO CHIP C CHIP C	4.7UF 1.0UF 220UF 0.22UF 0.010UF	25WV K 10WV K K	K1,M1
C11 C12 C13 C16 C19			C90-2966-05 CK73GB1H103K C90-2966-05 CK73GB1C104K CK73GB1H103K	ELECTRO CHIP C ELECTRO CHIP C CHIP C	100UF 0.010UF 100UF 0.10UF 0.010UF	16WV K 16WV K K	
C20 C21 C22 C23 C24			CK73GB1H103K CK73GB1E223K C90-2558-05 CE04NW1E4R7M C90-2966-05	CHIP C CHIP C ELECTRO ELECTRO ELECTRO	0.010UF 0.022UF 1.0UF 4.7UF 100UF	K K 50WV 25WV 16WV	M1,E1,E2 K1,M1,E1 K1,M1,E1
C25-28 C29 C30 C31 C32,33			CK73EB1C225K CE04NW1C220M CK73GB1E223K CK73GB1H103K CE04NW1E4R7M	CHIP C ELECTRO CHIP C CHIP C ELECTRO	2.2UF 22UF 0.022UF 0.010UF 4.7UF	K 16WV K K 25WV	K1,M1,E1 K1,M1,E1 K1,M1,E1 K1,M1,E1 K1,M1,E1
C34 C35 C36 C37 C38,39			C90-2556-05 CK73GB1C683K C90-2562-05 CK73GB1H102K CK73GB1H103K	ELECTRO CHIP C ELECTRO CHIP C CHIP C	3.3UF 0.068UF 0.10UF 1000PF 0.010UF	50WV K 50WV K K	
C40,41 C42 C43 C44 C45			CK73GB1H103K CC73GCH1H270J CC73GCH1H220J CE04NW1A220M CE04NW1C100M	CHIP C CHIP C CHIP C ELECTRO ELECTRO	0.010UF 27PF 22PF 22UF 10UF	K J J 10WV 16WV	K1,M1 K1,M1 K1,M1
C46,47 C48 C49-53 C49-53 C54			C90-2658-05 CK73GB1H103K CE04NW1E4R7M C90-5444-05 CK73GB1H103K	NP-ELEC CHIP C ELECTRO ELECTRO CHIP C	1.0UF 0.010UF 4.7UF 4.7UF 0.010UF	50WV K 25WV 25WV K	K1,M1
C55 C56,57 C58 C59 C60			CK73FB1C105K C90-2524-05 CE04NW1C100M CE04MW1C100M CE04NW1H2R2M	CHIP C NP-ELEC ELECTRO ELECTRO ELECTRO	1.0UF 4.7UF 10UF 10UF 2.2UF	K 16WV 16WV 16WV 50WV	
C63 C65,66 C67,68 C69 C70		*	CE04NW1E4R7MEL C90-2658-05 CE04NW1HR47M CE04NW0J470M CK73GB1A474K	ELECTRO NP-ELEC ELECTRO ELECTRO CHIP C	4.7UF 1.0UF 0.47UF 47UF 0.47UF	25WV 50WV 50WV 6.3WV K	
C71 C72 C73 C74,75 C76-79			CC73GCH1H151J CK73GB1E333K CK73GB1H103K CK73GB1C104K C90-2524-05	CHIP C CHIP C CHIP C CHIP C NP-ELEC	150PF 0.033UF 0.010UF 0.10UF 4.7UF	J K K K 16WV	
C81,82 C83,84 C85,86 C87,88 C89-92			C90-5429-05 CK73FB1C334K CE04NW1HR33M CK73FB1C334K CK73GB1C104K	NP-ELEC CHIP C ELECTRO CHIP C CHIP C	0.33UF 0.33UF 0.33UF 0.33UF 0.10UF	50WV K 50WV K K	

ELECTRIC UNIT (X25-927X-XX)							
Ref.No.	A d d	N e w	Parts No.	Description			Dest inati on
C93,94 C93,94 C95,96 C97,98 C99,100			CE04NW1C100M CE04NW1C220M CE04NW1C100M CK73GB1H222K CE04NW1C100M	ELECTRO ELECTRO ELECTRO CHIP C ELECTRO	10UF 22UF 10UF 2200PF 10UF	16WV 16WV 16WV K 16WV	E2 K1,M1,E1 K1,M1,E1 E2
C99,100 C101,102 C103,104 C105,106 C107,108			CE04NW1C220M CE04NW1C100M CK73GB1H222K CE04NW1C220M CE04NW1C100M	ELECTRO ELECTRO CHIP C ELECTRO ELECTRO	22UF 10UF 2200PF 22UF 10UF	16WV 16WV K 16WV 16WV	K1,M1,E1 K1,M1,E1 K1,M1,E1 K1,M1,E1
C109,110 C111 C113 C114 C115,116			CK73GB1H222K CK73GB1H102K CE04NW1C470M C90-2551-05 C90-2558-05	CHIP C CHIP C ELECTRO ELECTRO ELECTRO	2200PF 1000PF 47UF 33UF 1.0UF	K K 16WV 10WV 50WV	K1,M1,E1
C117-120 C121 C129 C130 C131			C90-5297-05 CK73GB1H103K C90-5308-05 CK73FB1C334K CK73GB1H103K	NP-ELECT CHIP C ELECTRO CHIP C CHIP C	0.22UF 0.010UF 1.0UF 0.33UF 0.010UF	50WV K 50WV K K	M1,E1,E2 K1,M1,E1
C132 C133 C134 C135 C136			CC73GCH1H100D CK73GB1H103K CC73GCH1H100D CK73GB1H103K CC73GCH1H100D	CHIP C CHIP C CHIP C CHIP C CHIP C	10PF 0.010UF 10PF 0.010UF 10PF	D K D K D	
C137 C139 C141 C142,143 C142,143			CK73GB1H103K CK73GB1H103K CK73GB1H331K C90-2597-05 C90-5437-05	CHIP C CHIP C CHIP C ELECTRO ELECTRO	0.010UF 0.010UF 330PF 10UF 10UF	K K K 16WV 16WV	
C144 C145,146 C201,202 C203 C204			CK73GB1H103K CC73GCH1H100D CK73GB1H332K CK73GB1H104K CK73GB1H103K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 10PF 3300PF 0.10UF 0.010UF	K D K K K	K1,M1
C205 C206 C305 C351 C352			CK73GB1H104K CK73GB1C104K CK73FB0J475K CK73GB1H102K CE04NW1C470M	CHIP C CHIP C CHIP C CHIP C ELECTRO	0.10UF 0.10UF 4.7UF 1000PF 47UF	K K K K 16WV	K1,M1 K1,M1
C352 C353 C354 C355 C473			C90-5443-05 CK73GB1H103K CK73FB1C105K CK73GB1C104K C90-2965-05	ELECTRO CHIP C CHIP C CHIP C ELECTRO	47UF 0.010UF 1.0UF 0.10UF 220UF	16WV K K K 10WV	K1,M1,E1
C474,475 C479 C480 C481 C484			C90-2963-05 C90-2547-05 C90-2554-05 CK73GB1H103K CK73GB1H103K	ELECTRO ELECTRO ELECTRO CHIP C CHIP C	100UF 100UF 10UF 0.010UF 0.010UF	25WV 6.3WV 16WV K K	K1,M1,E1 E2
C485 C702 C703 C704 C802			C90-2980-05 CE04NW1C100M CK73GB1H103K CE04NW0J470M CK73FB1H104K	ELECTRO ELECTRO CHIP C ELECTRO CHIP C	220UF 10UF 0.010UF 47UF 0.10UF	16WV 16WV K 6.3WV K	K1,M1,E1

K1 : KDC-X959 M1 : KDC-Z939 E1 : Z838W E2 : Z738

 indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-927X-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
C803,804 C849 C850 C852 C853			CK73FB1H104K C90-2954-05 CK73EB1E105K CK73GB1H103K CK73GB1C104K	CHIP C 0.10UF K ELECTRO 3.3UF 25WV CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.10UF K	E1,E2	CP15 CP16 CP17 R1 R2			R90-1054-05 R90-1058-05 R90-1046-05 RK73GB2A104J RK73FB2B152J	MULTI-COMP 2.2K X4 MULTI-COMP 100K X4 MULTI-COMP 1K X2 CHIP R 100K J 1/10W CHIP R 1.5K J 1/8W	
C855 C856 C858,859 C860,861 C863			CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H104K CK73GB1H103K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	E1,E2	R3 R4 R5 R6 R7			RK73GB2A223J RK73GB2A222J RK73EB2E221J RK73GB2A153J RK73GH1J432D	CHIP R 22K J 1/10W CHIP R 2.2K J 1/10W CHIP R 220 J 1/4W CHIP R 15K J 1/10W CHIP R 4.3K D 1/16W	
C864 C900 C902 C903 C904			CK73FB1A225K CK73GB1H103K CK73GB1C104K CC73GCH1H151J CK73GB1H104K	CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 150PF J CHIP C 0.10UF K		R8 R10 R11 R13 R14			RK73GH1J243D RK73GB2A562J RK73GB2A104J RK73EB2E102J RK73FB2B561J	CHIP R 24K D 1/16W CHIP R 5.6K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/4W CHIP R 560 J 1/8W	
CN1 CN2 CN3 CN4 CN6			E41-0174-05 E40-3299-05 E40-3266-05 E40-3261-05 E40-9490-15	PIN ASSY (10P) PIN ASSY (2P) PIN ASSY (8P) PIN ASSY (3P) PIN ASSY (20P)		R15 R16 R16 R17 R18			RK73EB2E103J RK73GB2A104J RK73GB2A223J RK73GB2A473J RK73EB2E471J	CHIP R 10K J 1/4W CHIP R 100K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 470 J 1/4W	M1,E1,E2 K1 M1,E1,E2 M1,E1,E2
CN7 CN8 CN9 J1 W9			E40-3261-05 E41-0194-05 E40-3263-05 E58-0863-15 E30-6098-05	PIN ASSY (3P) FLAT CABLE CONNECTOR (24P) PIN ASSY (5P) RECTANGULAR RECEPTACLE (16P) CORD WITH PLUG	K1,M1 E1,E2	R19 R20 R21 R23 R24			RK73EB2E103J RK73GB2A104J RK73FB2B102J RK73GB2A750J RK73GB2A272J	CHIP R 10K J 1/4W CHIP R 100K J 1/10W CHIP R 1.0K J 1/8W CHIP R 75 J 1/10W CHIP R 2.7K J 1/10W	K1,M1,E1 K1,M1,E1 K1,M1,E1
L1 L2 L3 L5 L7			L33-1170-05 L33-1153-05 L40-2201-78 L40-4792-78 L33-1039-05	CHOKE COIL ASSY (140UH) SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (22UH) SMALL FIXED INDUCTOR (4.7UH) LINE FILTER COIL (52mH)	K1,M1,E1	R25 R26 R27 R28 R29			RK73GB2A470J RK73GB2A752J RK73GB2A563J RK73GB2A913J RK73GB2A470J	CHIP R 47 J 1/10W CHIP R 7.5K J 1/10W CHIP R 56K J 1/10W CHIP R 91K J 1/10W CHIP R 47 J 1/10W	K1,M1,E1 K1,M1,E1 K1,M1,E1 K1,M1,E1 K1,M1,E1
L9-14 L351 L352 L471 L472			L40-4795-68 L92-0075-05 L40-4792-78 L33-1853-05 L40-4792-78	SMALL FIXED INDUCTOR (4.7UH) CHIP FERRITE SMALL FIXED INDUCTOR (4.7UH) CHOKE COIL (100UH) SMALL FIXED INDUCTOR (4.7UH)	K1,M1,E1	R30 R31,32 R33 R35 R36			RK73GB2A103J RK73GB2A913J RK73GB2A472J RK73GB2A471J RK73GB2A104J	CHIP R 10K J 1/10W CHIP R 91K J 1/10W CHIP R 4.7K J 1/10W CHIP R 470 J 1/10W CHIP R 100K J 1/10W	K1,M1,E1 K1,M1,E1
L500 L501 X1 X3 X4		*	L33-1866-05 L92-0308-05 L78-0821-05 L77-2002-05 L77-2738-05	SMALL FIXED INDUCTOR (4.7UH) FERRITE CORE RESONATOR (20.0MHZ) CRYSTAL RESONATOR (4.332MHZ) CRYSTAL RESONATOR (32.768KHZ)		R37 R38 R39 R40 R41			RK73FB2B472J R92-0365-05 RK73GB2A223J R92-0365-05 RK73GB2A123J	CHIP R 4.7K J 1/8W CHIP R 1.0K J 1/2W CHIP R 22K J 1/10W CHIP R 1.0K J 1/2W CHIP R 12K J 1/10W	
F G K N	2B 2A 2B 2B		N30-3006-45 N30-3010-46 N83-3005-46 N80-3008-46	PAN HEAD MACHINE SCREW PAN HEAD MACHINE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW		R42 R43 R44 R45 R46			RK73GB2A223J RK73GB2A153J RK73GB2A223J RD14DB2H332J RK73EB2E473J	CHIP R 22K J 1/10W CHIP R 15K J 1/10W CHIP R 22K J 1/10W SMALL-RD 3.3K J 1/2W CHIP R 47K J 1/4W	
CP2 CP3,4 CP5 CP6 CP7			R90-1016-05 R90-1022-05 R90-0725-05 R90-1013-05 R90-1048-05	MULTI-COMP 470 X4 MULTI-COMP 470 X2 MULTI-COMP 1K X2 MULTI-COMP 2.2K X2 MULTI-COMP 4.7K X2		R47 R48 R50 R52-54 R55,56			RK73GB2A183J RK73GB2A104J RK73GB2A104J RK73GB2A473J RK73EB2E100J	CHIP R 18K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 10 J 1/4W	K1,M1 K1,M1 K1,M1
CP8 CP9 CP10 CP11-13 CP14			R90-1508-05 R90-1048-05 R90-1045-05 R90-1051-05 R90-1509-05	MULTI-COMP 100 X2 MULTI-COMP 4.7K X2 MULTI-COMP 470 X2 MULTI-COMP 100K X2 MULTI-COMP 100 X4	E1,E2	R57 R58 R98 R103 R111			RK73EB2E4R7J RK73GB2A104J RK73GB2A472J RK73FB2B472J RK73FB2B223J	CHIP R 4.7 J 1/4W CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 4.7K J 1/8W CHIP R 22K J 1/8W	K1,M1 K1

K1 : KDC-X959 M1 : KDC-Z939 E1 : Z838W E2 : Z738

⚠ indicates safety critical components.

KDC-X959/Z939,Z738,Z838W

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description			Dest inati on
R112			R92-0366-05	CHIP R	560	J 1W	K1
R115			RK73GB2A333J	CHIP R	33K	J 1/10W	E1,E2 E1,E2
R121			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R122-124			RK73EB2E471J	CHIP R	470	J 1/4W	
R127			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R130,131			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R132-134			RK73EB2E101J	CHIP R	100	J 1/4W	
R135-137			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R140			RK73GB2A473J	CHIP R	47K	J 1/10W	
R141			RK73GB2A153J	CHIP R	15K	J 1/10W	
R142			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R143			RK73GB2A473J	CHIP R	47K	J 1/10W	
R144			RK73GB2A333J	CHIP R	33K	J 1/10W	
R145			RK73GB2A473J	CHIP R	47K	J 1/10W	
R146			RK73GB2A821J	CHIP R	820	J 1/10W	
R147			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R148			RK73FB2B912J	CHIP R	9.1K	J 1/8W	
R149			RK73FB2B243J	CHIP R	24K	J 1/8W	
R150			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R151			RK73GB2A103J	CHIP R	10K	J 1/10W	
R152			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R153,154			RK73GB2A334J	CHIP R	330K	J 1/10W	
R155,156			RK73EB2E100J	CHIP R	10	J 1/4W	
R157			RK73EB2E477J	CHIP R	4.7	J 1/4W	
R161,162			RK73FB2B471J	CHIP R	470	J 1/8W	
R163,164			RK73FB2B222J	CHIP R	2.2K	J 1/8W	K1,M1,E1 E2
R163,164			RK73FB2B223J	CHIP R	22K	J 1/8W	
R165,166			RK73FB2B103J	CHIP R	10K	J 1/8W	
R167,168			RK73FB2B223J	CHIP R	22K	J 1/8W	
R169,170			RK73FB2B820J	CHIP R	82	J 1/8W	
R171,172			RK73FB2B471J	CHIP R	470	J 1/8W	K1,M1,E1 E2
R173,174			RK73FB2B222J	CHIP R	2.2K	J 1/8W	
R173,174			RK73FB2B223J	CHIP R	22K	J 1/8W	
R175,176			RK73FB2B103J	CHIP R	10K	J 1/8W	
R177,178			RK73FB2B223J	CHIP R	22K	J 1/8W	
R179,180			RK73FB2B820J	CHIP R	82	J 1/8W	K1,M1,E1
R181,182			RK73FB2B471J	CHIP R	470	J 1/8W	
R183,184			RK73FB2B222J	CHIP R	2.2K	J 1/8W	
R185,186			RK73FB2B103J	CHIP R	10K	J 1/8W	
R187,188			RK73FB2B223J	CHIP R	22K	J 1/8W	
R189,190			RK73FB2B820J	CHIP R	82	J 1/8W	K1,M1,E1
R200			RK73GB2A221J	CHIP R	220	J 1/10W	
R201			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R202			RK73GB2A103J	CHIP R	10K	J 1/10W	
R203			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R204			RK73GB2A100J	CHIP R	10	J 1/10W	E2 E2
R205			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R206,207			RK73GB2A104J	CHIP R	100K	J 1/10W	
R210			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R211			RK73GB2A223J	CHIP R	22K	J 1/10W	
R212			RK73FB2B102J	CHIP R	1.0K	J 1/8W	
R213			RK73GB2A223J	CHIP R	22K	J 1/10W	
R230			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R231			RK73GB2A103J	CHIP R	10K	J 1/10W	
R242			RK73GB2A472J	CHIP R	4.7K	J 1/10W	

Ref.No.	A d d	N e w	Parts No.	Description			Dest inati on
R301			RK73GB2A104J	CHIP R	100K	J 1/10W	
R303			RK73GB2A241J	CHIP R	240	J 1/10W	
R305			RK73GB2A394J	CHIP R	390K	J 1/10W	
R306			RK73GB2A101J	CHIP R	100	J 1/10W	
R353			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R355			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R357			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R358			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R359			RK73GB2A104J	CHIP R	100K	J 1/10W	
R360			RK73GB2A471J	CHIP R	470	J 1/10W	
R361,362			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R364			RK73GB2A104J	CHIP R	100K	J 1/10W	
R366			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R367			RK73GB2A473J	CHIP R	47K	J 1/10W	
R370			RK73GB2A104J	CHIP R	100K	J 1/10W	
R375			RK73GB2A105J	CHIP R	1.0M	J 1/10W	K1,M1 E1,E2
R382			RK73GB2A104J	CHIP R	100K	J 1/10W	
R382			RK73GB2A225J	CHIP R	2.2M	J 1/10W	
R384			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R389			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R390			RK73GB2A473J	CHIP R	47K	J 1/10W	K1,M1,E1
R392			RK73GB2A473J	CHIP R	47K	J 1/10W	
R393			RK73GB2A104J	CHIP R	100K	J 1/10W	
R397			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R400			RK73GB2A101J	CHIP R	100	J 1/10W	
R401			RK73GB2A102J	CHIP R	1.0K	J 1/10W	K1,M1 E1,E2 M1,E1,E2
R402			RK73GB2A471J	CHIP R	470	J 1/10W	
R403			RK73GB2A104J	CHIP R	100K	J 1/10W	
R404			RK73GB2A104J	CHIP R	100K	J 1/10W	
R405			RK73GB2A104J	CHIP R	100K	J 1/10W	
R406			RK73GB2A104J	CHIP R	100K	J 1/10W	K1 E2 K1,M1,E1
R407			RK73GB2A104J	CHIP R	100K	J 1/10W	
R408			RK73GB2A104J	CHIP R	100K	J 1/10W	
R410			RK73GB2A104J	CHIP R	100K	J 1/10W	
R412			RK73GB2A104J	CHIP R	100K	J 1/10W	
R414			RK73GB2A104J	CHIP R	100K	J 1/10W	K1,M1,E1
R417			RK73GB2A223J	CHIP R	22K	J 1/10W	
R421			RK73GB2A473J	CHIP R	47K	J 1/10W	
R422			RK73GB2A223J	CHIP R	22K	J 1/10W	
R472			RK73GH1J151D	CHIP R	150	D 1/16W	
R473			RK73GH1J121D	CHIP R	120	D 1/16W	K1,M1,E1 K1,M1,E1 E2 K1,M1,E1
R474			RK73GH1J681D	CHIP R	680	D 1/16W	
R475			RK73FB2B223J	CHIP R	22K	J 1/8W	
R476			RK73FB2B223J	CHIP R	22K	J 1/8W	
R477			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R702			RK73FB2B223J	CHIP R	22K	J 1/8W	
R800			RK73GB2A124J	CHIP R	120K	J 1/10W	
R803			RK73GB2A104J	CHIP R	100K	J 1/10W	
R815			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R850			RK73GH1J154D	CHIP R	150K	D 1/16W	
R851			RK73GH1J123D	CHIP R	12K	D 1/16W	
R901			RK73GB2A477J	CHIP R	4.7	J 1/10W	
R902			RK73GB2A104J	CHIP R	100K	J 1/10W	
R903			RK73GB2A471J	CHIP R	470	J 1/10W	
R905			RK73GB2A471J	CHIP R	470	J 1/10W	

K1 : KDC-X959 M1 : KDC-Z939 E1 : Z838W E2 : Z738

 indicates safety critical components.

PARTS LIST

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-927X-XX)

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
W7,8			R92-1252-05	CHIP R 0 OHM J 1/16W	E1,E2
W11,12			R92-1252-05	CHIP R 0 OHM J 1/16W	
W14			R92-1252-05	CHIP R 0 OHM J 1/16W	K1,M1,E1
W15-18			R92-1252-05	CHIP R 0 OHM J 1/16W	E2
W111			R92-1252-05	CHIP R 0 OHM J 1/16W	M1,E1,E2
W112-117			R92-1252-05	CHIP R 0 OHM J 1/16W	
W121			R92-1252-05	CHIP R 0 OHM J 1/16W	
S1			S74-0809-05	MICRO SWITCH	
D1			RM10ZLF	DIODE	
D3			MA8082-L	ZENER DIODE	
D5			MA8100-L	ZENER DIODE	
D7			MA8056-M	ZENER DIODE	
D8			MA8047-M	ZENER DIODE	M1,E1,E2
D9			MA4110(N)-M	ZENER DIODE	K1,M1,E1
D10			MA4056(N)-M	ZENER DIODE	K1,M1,E1
D13,14			S1J	DIODE	
D13,14			1SR154-400	DIODE	
D15			1SS133	DIODE	
D16			MA4068(N)-M	ZENER DIODE	
D17			MA4062(N)-M	ZENER DIODE	
D19,20			DAP202U	DIODE	
D19,20			MA142WA	DIODE	
D21			DA204U	DIODE	
D22-24			MA4062-L	ZENER DIODE	
D25,26			RD6.8M(B2)	ZENER DIODE	
D27,28			MA8068-M	ZENER DIODE	
D29			MA8062-L	ZENER DIODE	
D30			DAP202U	DIODE	
D30			MA142WA	DIODE	
D31			MA4062-L	ZENER DIODE	
D32			DAN202U	DIODE	
D32			MA142WK	DIODE	
D33-36			S1J	DIODE	
D33-36			1SR154-400	DIODE	
D38-41			1SR154-400	DIODE	
D39,40			S1J	DIODE	
D42			DA204U	DIODE	
D43			IMSA-6801	SURGE ABSORBER	
D44			MA8068-M	ZENER DIODE	K1,M1
D45			MA8062-L	ZENER DIODE	K1,M1
D46			MA8068-M	ZENER DIODE	K1,M1
D50			MA4056(N)-M	ZENER DIODE	
D51-53			FTZ6.8E	ZENER DIODE	
D54			DA204U	DIODE	
D111,112			S1J	DIODE	
D111,112			1SR154-400	DIODE	
D121-124			MA4062-L	ZENER DIODE	E1,E2
D472			SS14	DIODE	K1,M1,E1
D473			MA8056-M	ZENER DIODE	
D474			MA8100-L	ZENER DIODE	
D475,476			SS14	DIODE	E2
D702			MA8056-M	ZENER DIODE	
IC1		*	UPD703033GFA14	MI-COM IC	K1,M1,E1

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on
IC1		*	UPD703033GFA15	MI-COM IC	E2
IC2			TDA7407	ANALOGUE IC	
IC3			M5237ML	IC (VOLTAGE REGULATOR)	
IC4			TDA7560	ANALOGUE IC	
IC5			TDA7401	ANALOGUE IC	
IC6			ICL7660SIBA	ANALOGUE IC	K1,M1,E1
IC7			TC74HC02AF	MOS-IC	
IC8			NJM4565M-TE2	ANALOGUE IC	
IC10-12			NJM4565M-TE2	ANALOGUE IC	K1,M1,E1
IC14			TDA7479D	ANALOGUE IC	
IC16			S-80837ANNP	MOS-IC	
IC20			BA3121F	IC (ISO AMP)	K1,M1
IC21			BA3129F	IC (SWITCH)	K1,M1
IC23			SI-8033JD	ANALOGUE IC	K1,M1,E1
IC24		*	LT1930A	ANALOGUE IC	
IC25			BR24C02F-W	MEMORY IC	
Q1			2SD2375	TRANSISTOR	
Q3			2SA1037K	TRANSISTOR	
Q4			2SA2057	TRANSISTOR	
Q5			DTC144EUA	DIGITAL TRANSISTOR	
Q5			UN5213	DIGITAL TRANSISTOR	
Q6,7			DTA124EUA	DIGITAL TRANSISTOR	
Q6,7			UN5112	DIGITAL TRANSISTOR	
Q8			DTC124EUA	DIGITAL TRANSISTOR	
Q8			UN5212	DIGITAL TRANSISTOR	
Q9			2SB1427	TRANSISTOR	
Q10			2SA2057	TRANSISTOR	
Q11			2SC4081	TRANSISTOR	
Q12			DTC124EUA	DIGITAL TRANSISTOR	
Q12			UN5212	DIGITAL TRANSISTOR	
Q13			DTA124EUA	DIGITAL TRANSISTOR	
Q13			UN5112	DIGITAL TRANSISTOR	
Q14			DTA123JK	DIGITAL TRANSISTOR	
Q14			KRA105S	DIGITAL TRANSISTOR	
Q15			DTC144EUA	DIGITAL TRANSISTOR	
Q15			UN5213	DIGITAL TRANSISTOR	
Q16			2SB1443	TRANSISTOR	K1,M1,E1
Q17			2SC4081	TRANSISTOR	K1,M1,E1
Q18			2SA1576A	TRANSISTOR	K1,M1,E1
Q19			2SC4081	TRANSISTOR	K1,M1,E1
Q20			2SA1576A	TRANSISTOR	K1,M1,E1
Q21,22			2SC4081	TRANSISTOR	K1,M1,E1
Q23			2SA1576A	TRANSISTOR	K1,M1,E1
Q26			2SB1277(Q,R)	TRANSISTOR	
Q27			2SA1576A	TRANSISTOR	
Q28			DTA124EUA	DIGITAL TRANSISTOR	
Q28			UN5112	DIGITAL TRANSISTOR	
Q29			DTC114YUA	DIGITAL TRANSISTOR	
Q29			UN5214	DIGITAL TRANSISTOR	
Q30,31			2SC4081	TRANSISTOR	
Q32,33			DTA124EUA	DIGITAL TRANSISTOR	
Q32,33			UN5112	DIGITAL TRANSISTOR	
Q34			2SC4081	TRANSISTOR	
Q35			DTC124EUA	DIGITAL TRANSISTOR	
Q35			UN5212	DIGITAL TRANSISTOR	

K1 : KDC-X959 M1 : KDC-Z939 E1 : Z838W E2 : Z738

⚠ indicates safety critical components.

PARTS LIST

Teile ohne Parts No. werden nicht geliefert.

Ref.No.	A d d	N e w	Parts No.	Description	Dest inati on

 indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CD PLAYER UNIT (X32-5350-0x)					
C1,2			CK73GB1H222K	CHIP C 2200PF K	
C3			CK73FB1A225K	CHIP C 2.2UF K	
C4,5			CK73EB1A475K	CHIP C 4.7UF K	
C6			CK73GB1C104K	CHIP C 0.10UF K	
C7			CK73GB1H331K	CHIP C 330PF K	
C8,9			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H472K	CHIP C 4700PF K	
C12			CK73GB1H102K	CHIP C 1000PF K	
C14			CK73GB0J105K	CHIP C 1.0UF K	
C15,16			C92-0712-05	CHIP-TAN 22UF 6.3WV	
C17			CK73GB1C104K	CHIP C 0.10UF K	
C18			CK73GB1H152K	CHIP C 1500PF K	
C19			CK73GB1C104K	CHIP C 0.10UF K	
C20			CK73GB1H331K	CHIP C 330PF K	
C21			CK73GB1C104K	CHIP C 0.10UF K	
C22			CK73FB1A105K	CHIP C 1.0UF K	
C23			CK73GB1H103K	CHIP C 0.010UF K	
C24			C92-0628-05	CHIP-TAN 10UF 10WV	
C25			CK73GB1C104K	CHIP C 0.10UF K	
C26,27			CK73EB1A475K	CHIP C 4.7UF K	
C28-32			CK73GB1C104K	CHIP C 0.10UF K	
C33			C92-0712-05	CHIP-TAN 22UF 6.3WV	
C34			CK73EB1A475K	CHIP C 4.7UF K	
C35-38			CK73GB1C104K	CHIP C 0.10UF K	
C40,41			CK73GB1C104K	CHIP C 0.10UF K	
C42			C92-0628-05	CHIP-TAN 10UF 10WV	
C43,44			CK73GB1C104K	CHIP C 0.10UF K	
C45			CK73GB1H152K	CHIP C 1500PF K	
C46			CC73GCH1H470J	CHIP C 47PF J	
C47,48			CK73GB1C104K	CHIP C 0.10UF K	
C49			CC73GCH1H680J	CHIP C 68PF J	
C50			CK73GB1C104K	CHIP C 0.10UF K	
C52,53			CK73GB1C104K	CHIP C 0.10UF K	
C55-57			CK73GB1C104K	CHIP C 0.10UF K	
C59			CC73GCH1H020C	CHIP C 2.0PF C	
C60			CK73GB1C104K	CHIP C 0.10UF K	
C61			CK73GB1H222K	CHIP C 2200PF K	
C62			CK73GB1C104K	CHIP C 0.10UF K	
C63			CK73GB1H332K	CHIP C 3300PF K	
C64			CK73GB1C104K	CHIP C 0.10UF K	
C65			CK73GB1H682K	CHIP C 6800PF K	
C66			CK73GB1H103K	CHIP C 0.010UF K	
C68			CC73GCH1H060D	CHIP C 6.0PF D	
C69-71			CK73GB1C104K	CHIP C 0.10UF K	
C72			C92-0628-05	CHIP-TAN 10UF 10WV	
C73,74			CK73EB1A475K	CHIP C 4.7UF K	
C76			CK73GB1C104K	CHIP C 0.10UF K	
C77-80			CK73GB1H152K	CHIP C 1500PF K	
C81,82			CK73GB1H102K	CHIP C 1000PF K	
C87,88			CK73GB1C104K	CHIP C 0.10UF K	
C90,91			CK73GB1C104K	CHIP C 0.10UF K	
C92,93			CC73GCH1H681J	CHIP C 680PF J	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C94,95			CC73GCH1H680J	CHIP C 68PF J	
C96,97			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E40-9527-05	FLAT CABLE CONNECTOR (24P)	
CN1			E41-0213-05	FLAT CABLE CONNECTOR (24P)	
CN2			E40-9536-05	FLAT CABLE CONNECTOR (16P)	
CN2			E41-0193-05	FLAT CABLE CONNECTOR (16P)	
L1			L92-0329-05	CHIP FERRITE	
L3			L92-0329-05	CHIP FERRITE	
L5			L92-0329-05	CHIP FERRITE	
L7			L92-0329-05	CHIP FERRITE	
X1			L78-0862-05	RESONATOR (16.00MHZ)	
X2			L78-0860-05	RESONATOR (16.93MHZ)	
X3			L78-0861-05	RESONATOR (24.57MHZ)	
CP1			R90-0720-05	MULTI-COMP 100K X4	
CP2			R90-0737-05	MULTI-COMP 100K X2	
CP8-14			R90-1014-05	MULTI-COMP 100 X4	
CP15			R90-0720-05	MULTI-COMP 100K X4	
CP17-20			R90-0720-05	MULTI-COMP 100K X4	
CP21			R90-1019-05	MULTI-COMP 100 X2	
CP22			R90-0714-05	MULTI-COMP 10K X4	
CP23			R90-0737-05	MULTI-COMP 100K X2	
CP24			R90-1019-05	MULTI-COMP 100 X2	
CP27			R90-1014-05	MULTI-COMP 100 X4	
CP28			R90-1019-05	MULTI-COMP 100 X2	
CP31			R90-1019-05	MULTI-COMP 100 X2	
CP32			R90-0718-05	MULTI-COMP 4.7K X4	
R1,2			RK73FB2B331J	CHIP R 330 J 1/8W	
R3			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R11			RK73GB2A133J	CHIP R 13K J 1/10W	
R16			RK73GB2A133J	CHIP R 13K J 1/10W	
R17,18			RK73GB2A104J	CHIP R 100K J 1/10W	
R19			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R20			RK73GB2A123J	CHIP R 12K J 1/10W	
R22			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R23,24			RK73GB2A103J	CHIP R 10K J 1/10W	
R25			RK73GB2A183J	CHIP R 18K J 1/10W	
R26			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R27			RK73GB2A133J	CHIP R 13K J 1/10W	
R28			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R29			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A103J	CHIP R 10K J 1/10W	
R34			RK73GB2A104J	CHIP R 100K J 1/10W	
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R38			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R39			RK73GB2A101J	CHIP R 100 J 1/10W	
R40			RK73GB2A103J	CHIP R 10K J 1/10W	
R42			RK73GB2A364J	CHIP R 360K J 1/10W	
R43,44			RK73GB2A101J	CHIP R 100 J 1/10W	
R46,47			RK73GB2A101J	CHIP R 100 J 1/10W	
R49,50			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R56			RK73GB2A682J	CHIP R 6.8K J 1/10W	

A : X92-4590-00 (DXM-6510W) **A1** : X92-4590-01 (DXM-6511W)

A2 : X92-4590-02 (DXM-6512W) **A3** : X92-4590-03 (DXM-6513W)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5350-0x)

Ref. No.	A d d	N e w	Parts No.	Description			Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	
R57			RK73GB2A333J	CHIP R	33K	J	1/10W	A2A3	13	3A		D10-4584-03	ARM (JOINT R)	
R58			RK73GB2A103J	CHIP R	10K	J	1/10W		14	3B		D10-4585-03	ARM (CARRIER)	
R59,60			RK73GB2A101J	CHIP R	100	J	1/10W		15	2A		D10-4586-03	SLIDER (L)	
R61			RK73GB2A391J	CHIP R	390	J	1/10W		16	3B	*	D10-4587-12	SLIDER (R)	
R63			RK73GB2A104J	CHIP R	100K	J	1/10W		17	3B		D10-4588-03	SLIDER (TRIG)	
R70,71			RK73GB2A103J	CHIP R	10K	J	1/10W		18	3B		D10-4595-04	ARM (LOCK)	
R72			RK73GB2A104J	CHIP R	100K	J	1/10W		19	3B		D10-4596-04	ARM (ROLLER)	
R73			RK73GB2A102J	CHIP R	1.0K	J	1/10W		22	2A		D13-2151-04	GEAR (ROLLER)	
R81			RK73GB2A102J	CHIP R	1.0K	J	1/10W		23	2B		D13-2152-04	GEAR (HELICAL 1)	
R84			RK73GB2A472J	CHIP R	4.7K	J	1/10W		24	3B		D13-2153-04	GEAR (SUN)	
R89-92			RK73GB2A101J	CHIP R	100	J	1/10W		25	3B		D13-2154-04	GEAR (PLANET)	
R96			RK73GB2A102J	CHIP R	1.0K	J	1/10W		26	3B		D13-2155-04	WORM (2)	
R97			RK73GB2A104J	CHIP R	100K	J	1/10W		27	3B		D13-2156-04	GEAR (HELICAL 2)	
R98			RK73GB2A101J	CHIP R	100	J	1/10W		28	3B		D13-2157-04	GEAR (LOAD 1)	
R99			RK73GB2A473J	CHIP R	47K	J	1/10W		29	3B		D13-2158-04	GEAR (LOAD 2)	
R100			RK73GB2A223J	CHIP R	22K	J	1/10W		30	3B		D13-2168-04	GEAR (PICK 1)	
R101			RK73GB2A123J	CHIP R	12K	J	1/10W		31	3B		D13-2171-04	GEAR (PICK 2)	
R110,111			RK73FB2B72J	CHIP R	2.7K	J	1/8W		32	2B		D13-2172-03	RACK (GEAR)	
R112,113			RK73FB2B752J	CHIP R	7.5K	J	1/8W		33	2A		D14-0759-04	ROLLER (N100X3DIES)	
R114,115			R92-3041-05	CHIP R	11K	D	1/10W		35	2B		D21-2382-04	SHAFT (PICK)	
R116,117			RK73FB2B303J	CHIP R	30K	J	1/8W		36	1A		D23-0954-04	RETAINER	
R118,119			R92-3044-05	CHIP R	18K	D	1/10W		37	1B		D39-0246-05	DAMPER	
W2,3			R92-1252-05	CHIP R	0 OHM	J	1/16W		38	2B		G01-3072-04	EXTENSION SPRING (TRIGGER)	
S1,2			S68-0863-05	PUSH SWITCH					39	2A		G01-3073-04	TORSION COIL SPRING (ROLLER L)	
S3			S68-0862-05	PUSH SWITCH					40	2A		G01-3074-04	EXTENSION SPRING (ROLLER R)	
S4			S68-0864-05	PUSH SWITCH					41	2B		G01-3075-04	EXTENSION SPRING (PICKUP)	
									42	2A		G01-3076-04	EXTENSION SPRING (JOINT SP)	
D1			M1F60	DIODE					43	1B		G01-3077-04	EXTENSION SPRING (FLOATING)	
D2			DAP202U	DIODE					44	2B		G02-1399-04	FLAT SPRING (CLAMP)	
IC2			L88MS33T	ANALOGUE IC					45	2B		G02-1408-04	FLAT SPRING (WORM)	
IC3			UPC3025	ANALOGUE IC					51	1A		J21-9676-22	MOUNTING HARDWARE (GUIDE BKT)	
IC4			BA5824FP	ANALOGUE IC					52	3B		J21-9677-02	MOUNTING HARDWARE (GEAR BKT)	
IC5		*	703030BYGF-M01	MI-COM IC					53	1B		J21-9678-03	MOUNTING HARDWARE (DAMPER BKT)	
IC6			TAR5S33	ANALOGUE IC					55	1A		J90-1001-11	GUIDE (1)	
IC7		*	TC7MET541AFK	MOS-IC					56	1B		J90-1023-03	GUIDE (2)	
IC8			UPD61002GC-E01	MOS-IC					DFPC1	2B		J84-0128-15	FLEXIBLE P. W. B. (PICKUP FPC)	
IC9			TC7SHU04FU	MOS-IC					A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
IC10			UPD63760GJ	MOS-IC					B	1B		N09-4472-05	MACHINE SCREW (M1.7X8.5)	
IC11			IS41LV16257	MEMORY IC					C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
IC12			MSM51V4265EP70	MOS-IC					D	1B		N09-6006-05	TAPTITE SCREW (PAN ST 2X3.5T)	
IC13			NJM4580V	ANALOGUE IC					E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
			HD74LV14AT	MOS-IC					F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)	
Q1			DTA143EK	DIGITAL TRANSISTOR					G	2A		N19-2163-04	FLAT WASHER (1.6X0.25X6)	
Q2			MCH6101	TRANSISTOR					H	1B		N39-2020-46	PAN HEAD MACHIN SCREW (M2X2)	
Q3			DTC124EUA	DIGITAL TRANSISTOR					DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)	
Q4			DTA143XUA	DIGITAL TRANSISTOR					DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)	
Q5			DTC124EUA	DIGITAL TRANSISTOR					DPU1	2B		T25-0223-05	OPTICAL PICKUP HEAD	
CD MECHANISM ASSY (X92-4590-0x)														
2	1B		A10-4827-12	CHASSIS (OUTER)										
5	1B		D10-4576-23	ARM ASSY (CLAMPER ASSY)										
8	2A		D10-4579-03	LEVER ASSY (ROLLER ASSY)										
10	3A		D10-4581-13	ARM (DISC L)										
11	2A		D10-4582-13	ARM (DISC L)										
12	3A		D10-4583-03	ARM (JOINT L)										

A : X92-4590-00 (DXM-6510W) A1 : X92-4590-01 (DXM-6511W)

A2 : X92-4590-02 (DXM-6512W) A3 : X92-4590-03 (DXM-6513W)

△ Indicates safety critical components.