


EXPLODED VIEW


- A :N09-2292-05
 B :N67-3008-48
 C :N87-2606-43
 D :N87-2608-48

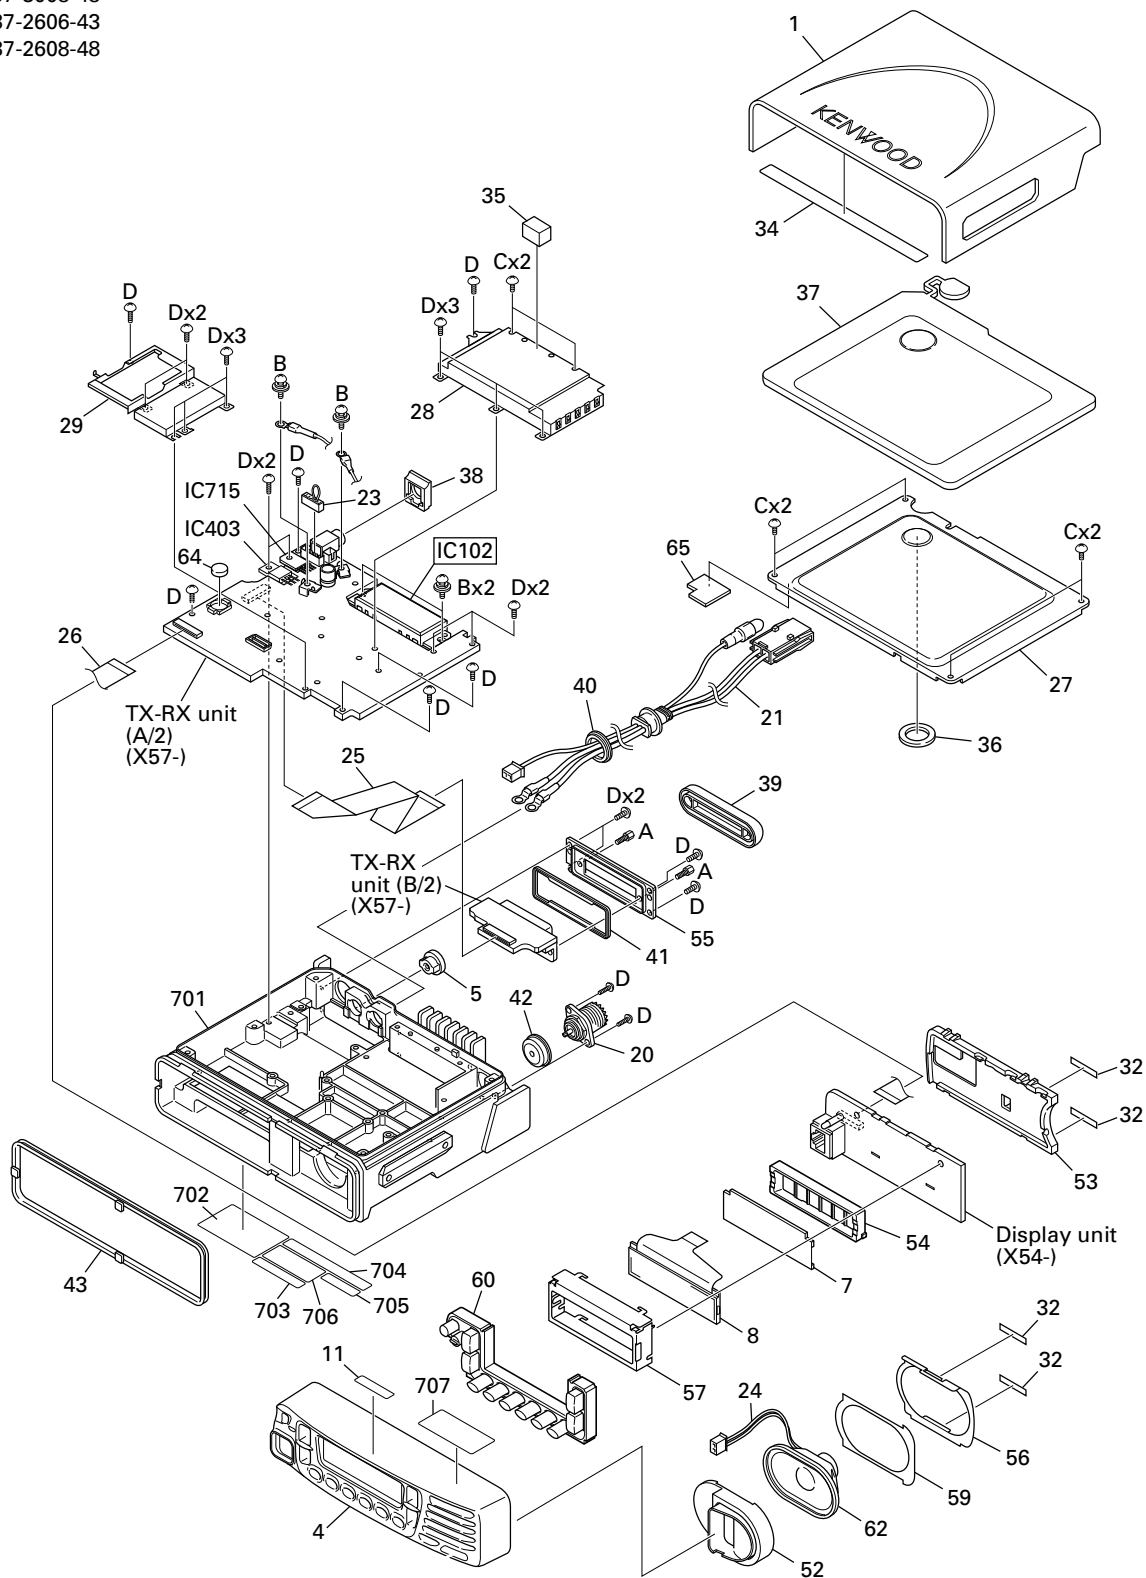

Parts with the exploded numbers larger than 700 are not supplied.

If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB. These parts must be ordered separately.

PACKING

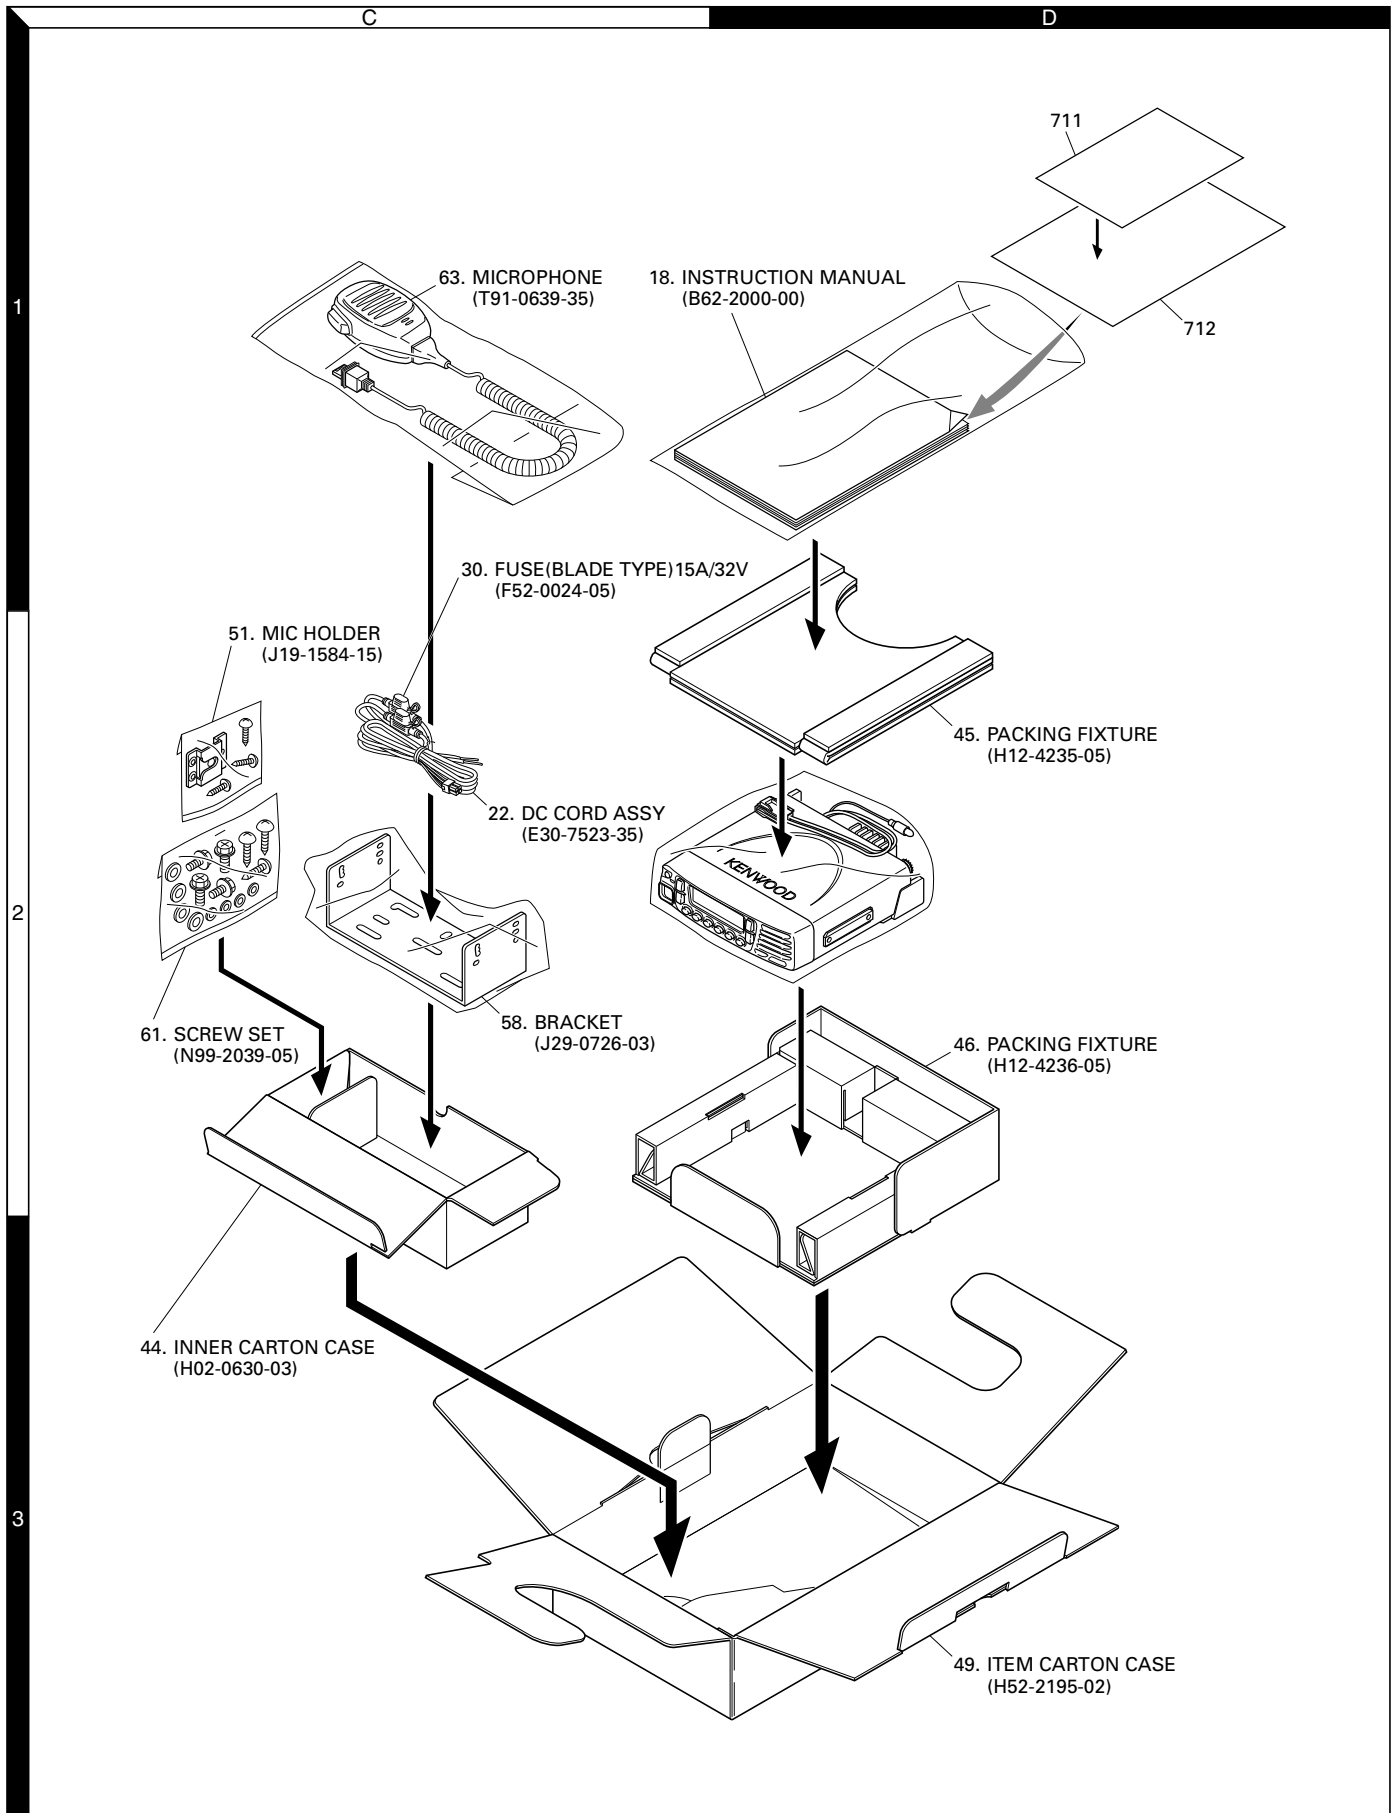

NX-700

PARTS LIST

* New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia K: USA P: Canada
Y: PX (Far East, Hawaii) T: England E: Europe
Y: AAFES (Europe) X: Australia M: Other Areas

NX-700 (Y51-5140-XX)
DISPLAY UNIT (X54-3640-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
NX-700					
1	1B		A01-2194-11	METALLIC CABINET	
4	3A	*	A62-1162-03	PANEL ASSY	
5	2A		B09-0681-03	CAP(KAP-2)	
7	-	*	B11-1850-04	FILTER(LCD)	
8	3B	*	B38-0922-05	LCD ASSY	
11	3A		B42-7296-04	STICKERN(EXEDGE)	
18	1D	*	B62-2000-00	INSTRUCTION MANUAL	
20	2B		E04-0167-15	RF COAXIAL RECEPTACLE(M)	
21	2B		E30-7520-15	DC CORD(PIG TAIL)	
22	2C		E30-7523-35	DC CORD ASSY ACCESSORY	
23	2A		E37-1118-05	LEAD WIRE WITH CONNECTOR(SHORT CABLE)	
24	3B		E37-1124-05	LEAD WIRE WITH CONNECTOR(2P/SP)	
25	2A		E37-1378-05	FLAT CABLE(30P/D-SUB)	
26	2A		E37-1379-05	FLAT CABLE(30P/PANEL)	
27	2B		F10-2488-12	SHIELDING PLATE(CHASSIS)	
28	1A		F10-2489-13	SHIELDING CASE(FINAL)	
29	1A		F10-2490-13	SHIELDING CASE(VCO)	
30	2C		F52-0024-05	FUSE(BLADE TYPE) 15A/32V	
31	-		G10-1322-04	FIBROUS SHEET(PANEL-SP)	
32	2B,3B		G10-1342-04	FIBROUS SHEET(BIRITSUKI)	
33	-		G11-4336-04	SHEET(PANEL-FG)	
34	1B		G11-4343-04	SHEET(STEP)	
35	1A		G13-2018-04	CUSHION(FINAL)	
36	2B		G13-2047-04	CUSHION(DC SCREW)	
65	2B		G13-2262-04	CUSHION(FPC)	
37	1B		G53-1613-11	PACKING(SHIELDPLATE)	
38	1A		G53-1616-03	PACKING(PHONE JACK)	
39	2B		G53-1626-03	PACKING(D-SUB OUTER)	
40	2B		G53-1643-04	PACKING(DC CORD)	
41	2B		G53-1645-03	PACKING(D-SUB INNER)	
42	2A		G53-1662-04	PACKING(ANT)	
43	3A		G53-1676-03	PACKING(CHASSIS)	
44	2C	*	H02-0630-03	INNER CARTON CASE	
45	2D	*	H12-4235-05	PACKING FIXTURE	
46	2D	*	H12-4236-05	PACKING FIXTURE	
49	3D	*	H52-2195-02	ITEM CARTON CASE	
51	2C		J19-1584-15	MIC HOLDER ACCESSORY	
52	3B		J19-5464-13	HOLDER(SP)	
53	3B		J19-5485-12	HOLDER(PANEL)	
54	3B	*	J19-5502-03	HOLDER(LCD)	
55	2B		J21-8479-02	MOUNTING HARDWARE(D-SUB)	
56	3B		J21-8481-03	MOUNTING HARDWARE(SP)	
57	3B	*	J21-8569-03	MOUNTING HARDWARE(LCD)	
58	2C		J29-0726-03	BRACKET ACCESSORY	
59	3B		J30-1289-04	SPACER(SP SHEET)	
60	3A	*	K29-9401-03	KEY TOP	
A	2B		N09-2292-05	HEXAGON HEAD SCREW	
B	1A,2A		N67-3008-48	PAN HEAD SEMS SCREW	
C	1A,2B	*	N87-2606-43	BRAZIER HEAD TAPTITE SCREW	
D	1A,2A,2B		N87-2608-48	BRAZIER HEAD TAPTITE SCREW	
61	2C		N99-2039-05	SCREW SET ACCESSORY	
62	3B		T07-0757-15	SPEAKER	

Ref. No.	Address	New parts	Parts No.	Description	Destination
63	1C	*	T91-0639-35	MICROPHONE ACCESSORY	
64	2A		W09-0971-05	LITHIUM CELL	
DISPLAY UNIT (X54-3640-10)					
D914		*	B30-2304-05	LED(RED/GREEN)	
D915-926			B30-2281-05	LED(Y)	
D927-936			B30-2282-05	LED(Y)	
C903			CK73HB1E103K	CHIP C 0.010UF K	
C905			CK73HB1A104K	CHIP C 0.10UF K	
C906			CK73HB1H222K	CHIP C 2200PF K	
C907-909			CK73HB1H102K	CHIP C 1000PF K	
C910-912			CC73HCH1H101J	CHIP C 100PF J	
C913			CK73HB1A104K	CHIP C 0.10UF K	
C914			CK73HB1H102K	CHIP C 1000PF K	
C915			CK73FB1E475K	CHIP C 4.7UF K	
C916			CK73GB1E105K	CHIP C 1.0UF K	
C917,918			CK73HB1A104K	CHIP C 0.10UF K	
C919			CK73HB1H102K	CHIP C 1000PF K	
C920			CC73HCH1H121J	CHIP C 120PF J	
C921			CK73HB1A104K	CHIP C 0.10UF K	
C922-925			CK73HB1H102K	CHIP C 1000PF K	
C926-929			CK73HB1A104K	CHIP C 0.10UF K	
C930			CK73GB1E105K	CHIP C 1.0UF K	
C931,932			CK73HB1H102K	CHIP C 1000PF K	
C933			CK73GB1E105K	CHIP C 1.0UF K	
C934			CK73HB1H102K	CHIP C 1000PF K	
C935		*	CS77BA1E4R7M	CHIP TNTL 4.7UF 25WV	
C936			CC73HCH1H100D	CHIP C 10PF D	
C938			CC73HCH1H100D	CHIP C 10PF D	
C939			CK73GB1C104K	CHIP C 0.10UF K	
C940			CK73FB1A106K	CHIP C 10UF K	
C941,942			CK73HB1H102K	CHIP C 1000PF K	
C943,944		*	CS77BA1E4R7M	CHIP TNTL 4.7UF 25WV	
C945			CK73GB1H103K	CHIP C 0.010UF K	
C946			CC73HCH1H101J	CHIP C 100PF J	
C947			CK73HB1A104K	CHIP C 0.10UF K	
C948			CC73HCH1H101J	CHIP C 100PF J	
C949-954			CK73GB1E105K	CHIP C 1.0UF K	
C955			CC73HCH1H101J	CHIP C 100PF J	
C956,957			CK73HB1E103K	CHIP C 0.010UF K	
C958			CK73HB1H102K	CHIP C 1000PF K	
C959,960			CK73HB1E103K	CHIP C 0.010UF K	
C961			CK73HB0J105K	CHIP C 1.0UF K	
C962			CK73HB1A104K	CHIP C 0.10UF K	
C963			CC73HCH1H101J	CHIP C 100PF J	
C964			CK73GB1E105K	CHIP C 1.0UF K	
C965			CK73HB1A104K	CHIP C 0.10UF K	
C966,967			CK73HB1H102K	CHIP C 1000PF K	
CN901			E40-6559-05	FLAT CABLE CONNECTOR	
CN902			E41-2671-05	PIN ASSY	
CN905			E40-6557-05	FLAT CABLE CONNECTOR	
J901			E58-0522-05	MODULAR JACK	

PARTS LIST

DISPLAY UNIT (X54-3640-10)
TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L901,902 L903-905 L906 L907 L908			J31-0551-05	COLLAR		R962 R963,964 R965,966 R967-974			RK73HB1J000J RK73GB2A391J RK73GB2A821J RK73HB1J103J	CHIP R 0.0 J 1/16W CHIP R 390 J 1/10W CHIP R 820 J 1/10W CHIP R 10K J 1/16W	
X901			L77-1950-05	CRYSTAL RESONATOR(11.0592MHZ)		R976 R977-979 R981,982 R986 R988			RK73HB1J000J RK73HB1J473J RK73HB1J103J RK73HB1J103J RK73HB1J473J	CHIP R 0.0 J 1/16W CHIP R 47K J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 47K J 1/16W	
CP907,908 CP909 CP910 CP912 CP917		*	RK75HA1JR00J RK74HA1J104J RK74HA1J101J RK74HA1J101J RK74HA1J104J	CHIP-COM 0.00 J 1/16W CHIP-COM 100K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100K J 1/16W		R989 R990 R991 R992 R996			RK73HB1J474J RK73HB1J472J RK73HB1J474J RK73HB1J000J RK73HB1J472J	CHIP R 470K J 1/16W CHIP R 4.7K J 1/16W CHIP R 470K J 1/16W CHIP R 0.0 J 1/16W CHIP R 4.7K J 1/16W	
R900 R901 R902 R904 R905		*	RK73HB1J000J RK73GB2A000J RK73HB1J102J RK73HB1J101J RK73HB1J102J	CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/10W CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W		R997 R998 R999			RK73GB2A000J RK73HB1J000J RK73HB1J101J	CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/16W CHIP R 100 J 1/16W	
R906 R907 R908 R909 R911			RK73HB1J331J RK73HB1J104J RK73HB1J473J RK73HB1J104J RK73HB1J472J	CHIP R 330 J 1/16W CHIP R 100K J 1/16W CHIP R 47K J 1/16W CHIP R 100K J 1/16W CHIP R 4.7K J 1/16W		TX-RX UNIT (X57-7380-11 for service)					
R912 R913 R914 R915 R916,917			RK73HB1J333J RK73HB1J823J RK73HB1J104J RK73HB1J473J RK73HB1J103J	CHIP R 33K J 1/16W CHIP R 82K J 1/16W CHIP R 100K J 1/16W CHIP R 47K J 1/16W CHIP R 10K J 1/16W		D901,902 D903 D904 D906 D907			AVRM16080MAAB 02DZ18F-X,Y AVRM16080MAAB MINISMDC020F 02DZ18F-X,Y	VARISTOR ZENER DIODE VARISTOR VARISTOR ZENER DIODE	
R918 R919 R920,921 R922-925 R926			RK73GB2A100J RK73HB1J103J RK73HB1J101J RK73HB1J102J RK73HB1J103J	CHIP R 10 J 1/10W CHIP R 10K J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W CHIP R 10K J 1/16W		D908 D910 D911,912 D913 D937			HSC119 1SS416 HSC119 DA204U 1SS416	DIODE DIODE DIODE DIODE DIODE	
R927 R928 R929 R930 R931			RK73HB1J473J RK73HB1J103J RK73HB1J474J RK73HB1J103J RK73FB2B561J	CHIP R 47K J 1/16W CHIP R 10K J 1/16W CHIP R 470K J 1/16W CHIP R 10K J 1/16W CHIP R 560 J 1/8W		IC901 IC902 IC903 IC904 IC905			TC7W66FK-F TC7S5S1FE(F) XC6204B502PR XC6204B332M TC7SH126FU-F	MOS-IC MOS-IC MOS-IC MOS-IC MOS-IC	
R932 R933 R934-937 R938,939 R940			RK73FB2B471J RK73HB1J101J RK73HB1J473J RK73HB1J103J RK73HB1J274J	CHIP R 470 J 1/8W CHIP R 100 J 1/16W CHIP R 47K J 1/16W CHIP R 10K J 1/16W CHIP R 270K J 1/16W		IC906 IC907 IC908 IC909 IC910			LM2682MMX TC7WH126FU-F TC7SH08FU-F LMC7101BIM5 TC74LCX245FK	MOS-IC MOS-IC MOS-IC MOS-IC MOS-IC	
R941 R942 R943 R944 R945,946			RK73HB1J124J RK73HB1J000J RK73HB1J102J RK73HB1J104J RK73HB1J000J	CHIP R 120K J 1/16W CHIP R 0.0 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100K J 1/16W CHIP R 0.0 J 1/16W		IC911 IC912 IC913	*		30620SPGPU3C TC7WZ245FK-F 29AL16D7KCCA	MICROPROCESSOR IC MOS-IC ROM IC	
R947 R948 R949 R950 R952			RK73HB1J124J RK73HB1J000J RK73HB1J102J RK73HB1J104J RK73HB1J000J	CHIP R 120K J 1/16W CHIP R 0.0 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100K J 1/16W CHIP R 0.0 J 1/16W		Q901 Q902 Q904 Q905,906 Q908,909			SSM3K15TE(F) DTC144EE DTC144EE DTC114EE DTC114EE	FET DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
R953 R954 R955 R956 R957,958			RK73HB1J474J RK73HB1J103J RK73HB1J102J RK73HB1J473J RK73HB1J000J	CHIP R 470K J 1/16W CHIP R 10K J 1/16W CHIP R 1.0K J 1/16W CHIP R 47K J 1/16W CHIP R 0.0 J 1/16W		Q910 Q911 Q913			12A02CH SSM3K15TE(F) UPA672T-A	TRANSISTOR FET FET	
R959 R960			RK73HB1J000J	CHIP R 0.0 J 1/16W		TH901			ERTJ0EV104H	THERMISTOR	
R961			RK73HB1J000J	CHIP R 0.0 J 1/16W		C1 C2 C3 C5 C6			CK73HB1A104K CK73HB1H471K CK73HB1A104K CC73HCH1H101J CK73HB1E103K	CHIP C 0.10UF K CHIP C 470PF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 0.010UF K	
R962			RK73HB1J000J	CHIP R 0.0 J 1/16W		C7 C8			CC73HCH1H470J CC73HCH1H180J	CHIP C 47PF J CHIP C 18PF J	

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C9			CK73FB1A106K	CHIP C 10UF K		C92			CK73HB1H102K	CHIP C 1000PF K	
C11			CC73HCH1H390J	CHIP C 39PF J		C93			CC73HCH1H050B	CHIP C 5.0PF B	
C12			CK73HB0J105K	CHIP C 1.0UF K		C94			CC73HCH1H150J	CHIP C 15PF J	
						C95 ,96			CK73HB1H102K	CHIP C 1000PF K	
C13			CK73HB1E103K	CHIP C 0.010UF K							
C14			CC73HCH1H101J	CHIP C 100PF J		C97			CK73HB1A104K	CHIP C 0.10UF K	
C15 ,16			CK73HB1E103K	CHIP C 0.010UF K		C98			CC73HCH1H100C	CHIP C 10PF C	
C17			CC73HCH1H101J	CHIP C 100PF J		C101			CK73HB1H471K	CHIP C 470PF K	
C18			CK73GB1E105K	CHIP C 1.0UF K		C102			CK73HB1H102K	CHIP C 1000PF K	
						C103			CK73HB1E103K	CHIP C 0.010UF K	
C19 -23			CC73HCH1H101J	CHIP C 100PF J							
C24			CK73HB1A104K	CHIP C 0.10UF K		C104-107			CK73HB1H471K	CHIP C 470PF K	
C25 ,26			CC73HCH1H101J	CHIP C 100PF J		C108			CK73FB1E475K	CHIP C 4.7UF K	
C27			CK73HB1A104K	CHIP C 0.10UF K		C109			CC73HCH1H330J	CHIP C 33PF J	
C28 ,29			CC73HCH1H101J	CHIP C 100PF J		C110-112			CK73HB1H471K	CHIP C 470PF K	
						C115-117			CK73HB1H471K	CHIP C 470PF K	
C31			CC73HCH1H101J	CHIP C 100PF J							
C32		*	CS77CA1VR15M	CHIP TNTL 0.15UF 35WV		C118			CC73HCH1H560J	CHIP C 56PF J	
C33			CC73HCH1H330J	CHIP C 33PF J		C119			CK73HB1H471K	CHIP C 470PF K	
C34			CS77BA1D100M	CHIP TNTL 10UF 20WV		C120			CC73HCH1H220J	CHIP C 22PF J	
C35			C92-0863-05	TNTL 0.047UF 35WV		C121			CC73HCH1H090B	CHIP C 9.0PF B	
						C122			CC73HCH1H220J	CHIP C 22PF J	
C36			CK73HB1H102K	CHIP C 1000PF K							
C37			C93-0787-05	CHIP C 0.10UF K		C123			CC73HCH1H330J	CHIP C 33PF J	
C38			CK73HB1H102K	CHIP C 1000PF K		C124			CK73HB1H471K	CHIP C 470PF K	
C39			CK73HB1H471K	CHIP C 470PF K		C125			CC73HCH1H220J	CHIP C 22PF J	
C41			CK73HB1H471K	CHIP C 470PF K		C126			CK73HB1H471K	CHIP C 470PF K	
						C127			CC73HCH1H470J	CHIP C 47PF J	
C42 ,43			CC73HCH1H101J	CHIP C 100PF J							
C44 ,45			CK73HB1H471K	CHIP C 470PF K		C128			CC73HCH1H330J	CHIP C 33PF J	
C46			CC73HCH1H470J	CHIP C 47PF J		C130			CC73HCH1H101J	CHIP C 100PF J	
C47			CK73HB0J105K	CHIP C 1.0UF K		C132-134			CK73HB1H471K	CHIP C 470PF K	
C48 -51			CK73HB1H471K	CHIP C 470PF K		C135			CK73FB1H471K	CHIP C 470PF K	
						C136			CC73HCH1H101J	CHIP C 100PF J	
C52			CC73HCH1H390G	CHIP C 39PF G							
C53			CC73HCH1H180G	CHIP C 18PF G		C137			CC73FCH1H180J	CHIP C 18PF J	
C54			CK73HB0J105K	CHIP C 1.0UF K		C138		*	CK73GB0J335K	CHIP C 3.3UF K	
C55			CK73HB1A104K	CHIP C 0.10UF K		C141			CC73HCH1H220J	CHIP C 22PF J	
C56			CC73HCH1H030B	CHIP C 3.0PF B		C145			CC73HCH1H470J	CHIP C 47PF J	
						C148			CC73HCH1H101J	CHIP C 100PF J	
C57			CC73HCH1H020B	CHIP C 2.0PF B							
C61			CC73HCH1H220G	CHIP C 22PF G		C149			CK73HB1H471K	CHIP C 470PF K	
C62			CC73HCH1H390G	CHIP C 39PF G		C151			C92-0875-05	ELECTRO 47UF 25WV	
C63			CK73HB1H471K	CHIP C 470PF K		C154-156			CC73HCH1H101J	CHIP C 100PF J	
C64			CC73HCH1H560J	CHIP C 56PF J		C157-159			CK73HB1H471K	CHIP C 470PF K	
						C162			CK73HB1H821K	CHIP C 820PF K	
C65 ,66			CK73HB1H471K	CHIP C 470PF K							
C67			CC73HCH1H330G	CHIP C 33PF G		C164			CC73FCH1H180J	CHIP C 18PF J	
C68			CK73HB1H102K	CHIP C 1000PF K		C165			CM73F2H121J	CHIP C 120PF J	
C69			CK73HB1H471K	CHIP C 470PF K		C167			CM73F2H430J	CHIP C 43PF J	
C70			CC73HCH1H070B	CHIP C 7.0PF B		C169			CC73GCH1H020B	CHIP C 2.0PF B	
						C170			CK73HB1H471K	CHIP C 470PF K	
C71			CK73HB1H471K	CHIP C 470PF K							
C72			CC73HCH1H100B	CHIP C 10PF B		C171			CC73GCH1H0R5B	CHIP C 0.5PF B	
C73			CK73HB1H471K	CHIP C 470PF K		C172			CK73HB1H471K	CHIP C 470PF K	
C75			CK73FB1A106K	CHIP C 10UF K		C173			CM73F2H470J	CHIP C 47PF J	
C76			CC73HCH1HR75B	CHIP C 0.75PF B		C175			CK73HB1H471K	CHIP C 470PF K	
						C176			CC73GCH1H1R5B	CHIP C 1.5PF B	
C77 ,78			CK73HB1H471K	CHIP C 470PF K							
C79 ,80			CC73HCH1H080B	CHIP C 8.0PF B		C177			CC73GCH1H0R5B	CHIP C 0.5PF B	
C81			CC73HCH1H090B	CHIP C 9.0PF B		C178			CK73HB1H471K	CHIP C 470PF K	
C82			CC73HCH1H080B	CHIP C 8.0PF B		C179			CM73F2H390J	CHIP C 39PF J	
C83			CK73GB1E105K	CHIP C 1.0UF K		C182			CM73F2H220J	CHIP C 22PF J	
						C183			CK73HB1H471K	CHIP C 470PF K	
C84 ,85			CK73GB1H103K	CHIP C 0.010UF K							
C86			CK73HB1H471K	CHIP C 470PF K		C184			CC73GCH1H030B	CHIP C 3.0PF B	
C87 ,88			CC73HCH1H0R5B	CHIP C 0.5PF B		C186			CC73GCH1H0R5B	CHIP C 0.5PF B	
C89			CK73HB1H102K	CHIP C 1000PF K		C188			CM73F2H180J	CHIP C 18PF J	
C90			CK73HB1H471K	CHIP C 470PF K		C190			CK73HB1E103K	CHIP C 0.010UF K	
						C193-195			CK73HB1E103K	CHIP C 0.010UF K	
C91			CC73HCH1H220J	CHIP C 22PF J							

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C197			CK73HB1H102K	CHIP C 1000PF K		C290			CK73HB1H102K	CHIP C 1000PF K	
C198			CK73HB1H471K	CHIP C 470PF K		C291			CC73HCH1H120G	CHIP C 12PF G	
C201			CK73HB1E103K	CHIP C 0.010UF K		C293,294			CK73HB1H102K	CHIP C 1000PF K	
C202-205			CK73HB1A104K	CHIP C 0.10UF K		C295			CC73HCH1H120G	CHIP C 12PF G	
C206			CC73HCH1H100B	CHIP C 10PF B		C296			CK73HB1H102K	CHIP C 1000PF K	
C207,208			CK73HB1E103K	CHIP C 0.010UF K		C297			CC73GCH1H150G	CHIP C 15PF G	
C210			CC73HCH1H100B	CHIP C 10PF B		C298			CK73GB1H104K	CHIP C 0.10UF K	
C211			CC73HCH1H680J	CHIP C 68PF J		C299-301			CK73HB1H102K	CHIP C 1000PF K	
C212-214			CK73HB1A104K	CHIP C 0.10UF K		C302			CC73HCH1H120G	CHIP C 12PF G	
C215			CC73HCH1H101J	CHIP C 100PF J		C304			CK73HB1H102K	CHIP C 1000PF K	
C216			CC73HCH1H680J	CHIP C 68PF J		C308			CK73HB1A104K	CHIP C 0.10UF K	
C217			CC73HCH1H470J	CHIP C 47PF J		C311			CK73HB1H102K	CHIP C 1000PF K	
C218			CK73HB1A104K	CHIP C 0.10UF K		C315			CK73HB1H102K	CHIP C 1000PF K	
C219,220			CK73GB0J475K	CHIP C 4.7UF K		C316			CC73GCH1H180G	CHIP C 18PF G	
C221			CK73FB1A106K	CHIP C 10UF K		C328			CC73HCH1H270G	CHIP C 27PF G	
C222,223			CK73HB1E103K	CHIP C 0.010UF K		C329			CK73HB1H102K	CHIP C 1000PF K	
C224			CK73HB1A104K	CHIP C 0.10UF K		C330-334			CK73HB1A104K	CHIP C 0.10UF K	
C225			CK73FB1A106K	CHIP C 10UF K		C335			CC73HCH1H151J	CHIP C 150PF J	
C226			CC73HCH1H820J	CHIP C 82PF J		C336			CK73HB1E103K	CHIP C 0.010UF K	
C227			CK73HB1A104K	CHIP C 0.10UF K		C337,338			CK73HB1H102K	CHIP C 1000PF K	
C228			CK73HB1E103K	CHIP C 0.010UF K		C341,342			CK73HB1H102K	CHIP C 1000PF K	
C229			CK73HB1A104K	CHIP C 0.10UF K		C348			CK73HB1E103K	CHIP C 0.010UF K	
C230			CK73HB1E103K	CHIP C 0.010UF K		C351			CK73HB0J105K	CHIP C 1.0UF K	
C231,232			CK73HB1A104K	CHIP C 0.10UF K		C352,353			CK73HB1A104K	CHIP C 0.10UF K	
C233			CK73HB0J105K	CHIP C 1.0UF K		C354			CK73FB1A106K	CHIP C 10UF K	
C234			CK73HB1E103K	CHIP C 0.010UF K		C355			CK73HB1A104K	CHIP C 0.10UF K	
C235			CC73HCH1H470J	CHIP C 47PF J		C356			CK73HB1H471K	CHIP C 470PF K	
C237			CK73HB1E103K	CHIP C 0.010UF K		C357			CK73HB1E103K	CHIP C 0.010UF K	
C238			CK73HB1H471K	CHIP C 470PF K		C358			CK73HB1H102K	CHIP C 1000PF K	
C239,240			CK73HB1E103K	CHIP C 0.010UF K		C359			CK73HB1H471K	CHIP C 470PF K	
C242			CK73HB1H471K	CHIP C 470PF K		C401			C92-0777-05	ELECTRO 1000UF 25WV	
C243			CK73HB1E103K	CHIP C 0.010UF K		C403			CK73HB1H471K	CHIP C 470PF K	
C244			CC73HCH1H470J	CHIP C 47PF J		C405			CK73HB1H471K	CHIP C 470PF K	
C245,246			CK73HB1E103K	CHIP C 0.010UF K		C406			CK73HB1H102K	CHIP C 1000PF K	
C247			CK73HB1A104K	CHIP C 0.10UF K		C409			CK73HB1E103K	CHIP C 0.010UF K	
C252			CC73HCH1H010B	CHIP C 1.0PF B		C410			CK73GB1H103K	CHIP C 0.010UF K	
C256			CC73HCH1H010B	CHIP C 1.0PF B		C411			CK73HB1H471K	CHIP C 470PF K	
C259			CK73HB1E103K	CHIP C 0.010UF K		C413			CK73GB1E105K	CHIP C 1.0UF K	
C260,261			CK73HB1H471K	CHIP C 470PF K		C415			CK73HB1H471K	CHIP C 470PF K	
C262,263			CK73HB1E103K	CHIP C 0.010UF K		C417			CK73HB1H471K	CHIP C 470PF K	
C264			CK73HB1H471K	CHIP C 470PF K		C419			CK73HB1H102K	CHIP C 1000PF K	
C265			CK73HB1E103K	CHIP C 0.010UF K		C420			CK73HB1A104K	CHIP C 0.10UF K	
C266			CK73HB1H102K	CHIP C 1000PF K		C421			CK73GB1H473K	CHIP C 0.047UF K	
C267			CK73HB1H471K	CHIP C 470PF K		C422			CK73FB1E475K	CHIP C 4.7UF K	
C268			CK73HB1H102K	CHIP C 1000PF K		C424			CK73GB1E105K	CHIP C 1.0UF K	
C269			CC73HCH1H100C	CHIP C 10PF C		C425			CK73GB1H104K	CHIP C 0.10UF K	
C270			CK73HB1H471K	CHIP C 470PF K		C426			CK73HB1E103K	CHIP C 0.010UF K	
C272			CC73HCH1H180G	CHIP C 18PF G		C427			CK73HB1H471K	CHIP C 470PF K	
C275			CC73HCH1H270G	CHIP C 27PF G		C428			CC73HCH1H101J	CHIP C 100PF J	
C276			CK73HB1H471K	CHIP C 470PF K		C429			CK73GB1H104K	CHIP C 0.10UF K	
C279			CK73HB1H102K	CHIP C 1000PF K		C430,431			CK73FB1E475K	CHIP C 4.7UF K	
C280			CC73HCH1H180G	CHIP C 18PF G		C432			C92-0875-05	ELECTRO 47UF 25WV	
C282			CK73HB1H102K	CHIP C 1000PF K		C433			CK73GB1H104K	CHIP C 0.10UF K	
C283			CK73HB1H471K	CHIP C 470PF K		C434			CK73HB1H102K	CHIP C 1000PF K	
C284			CK73HB1H102K	CHIP C 1000PF K		C435			CK73FB1A106K	CHIP C 10UF K	
C285			CC73HCH1H120G	CHIP C 12PF G		C436		*	CS77BA1A100M	CHIP TNTL 10UF 10WV	
C286			CK73HB1H102K	CHIP C 1000PF K		C437			CK73HB1A224K	CHIP C 0.22UF K	
C287			CC73GCH1H150G	CHIP C 15PF G		C438			CK73FB1A106K	CHIP C 10UF K	
C288			CK73HB1H102K	CHIP C 1000PF K		C439			CK73HB1E103K	CHIP C 0.010UF K	
C289			CK73GB1H104K	CHIP C 0.10UF K		C440			CK73GB1E105K	CHIP C 1.0UF K	

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C441,442 C443,444 C445 C446 C447			CK73HB1E103K CK73GB1E105K CK73FB1A106K C92-0765-05 CK73HB1A224K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 10UF K CHIP TNL 4.7UF 16WV CHIP C 0.22UF K		C568-578 C579 C580 C581-583 C584,585			CC73HCH1H101J CK73HB1H102K CC73HCH1H101J CK73HB1H102K CC73HCH1H101J	CHIP C 100PF J CHIP C 1000PF K CHIP C 100PF J CHIP C 1000PF K CHIP C 100PF J	
C448 C449 C450 C451 C452			CK73HB1E103K CK73GB1C225K CK73HB1E103K CK73GB1C225K CK73HB0J105K	CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 1.0UF K		C586 C587-589 C590,591 C592,593 C594,595			CK73HB1E103K CK73HB1H102K CK73HB1E103K CC73HCH1H101J CK73HB1E103K	CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K CHIP C 100PF J CHIP C 0.010UF K	
C453 C454 C455,456 C457,458 C459			CK73GB1E105K CK73HB1H471K CK73HB1E103K CK73GB1E105K C92-0765-05	CHIP C 1.0UF K CHIP C 470PF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP TNL 4.7UF 16WV		C596 C597-607 C608 C609 C610			CK73HB1A104K CK73HB1H102K CC73HCH1H101J CK73HB1H102K CC73HCH1H101J	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 100PF J CHIP C 1000PF K CHIP C 100PF J	
C460 C461 C462 C463 C464			CK73HB1A104K CC73HCH1H181J CK73HB1H471K CK73HB0J105K CC73HCH1H220J	CHIP C 0.10UF K CHIP C 180PF J CHIP C 470PF K CHIP C 1.0UF K CHIP C 22PF J		C611 C612 C613-616 C618 C620,621			CK73HB1H102K CK73GB1H103K CK73GB1E105K CK73HB1E103K CK73HB1E103K	CHIP C 1000PF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.010UF K	
C465-467 C468 C471 C473 C474		*	CK73GB1E105K CK73HB1E103K CK73HB0J105K CS77BA1E4R7M CK73HB1E103K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP TNL 4.7UF 25WV CHIP C 0.010UF K		C701 C702 C705 C706 C707			CK73GB0J335K CK73HB0J105K CK73HB1H122K CK73HB1H331K CK73HB1A104K	CHIP C 3.3UF K CHIP C 1.0UF K CHIP C 1200PF K CHIP C 330PF K CHIP C 0.10UF K	
C475 C501,502 C503-507 C508 C509			CK73FB1A106K CK73HB0J105K CK73HB1A104K CK73HB1H102K CK73HB1A104K	CHIP C 10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K		C708 C709 C710 C711 C712			CK73HB1H122K CC73HCH1H221J CK73HB1E103K CC73HCH1H181J CC73HCH1H680J	CHIP C 1200PF K CHIP C 220PF J CHIP C 0.010UF K CHIP C 180PF J CHIP C 68PF J	
C511-514 C515 C516,517 C518 C520-523			CK73HB1A104K CK73HB0J105K CK73HB1A104K CK73GB1E105K CK73HB1E103K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.010UF K		C714 C715 C716 C717 C718			CK73HB1E103K CK73HB1H122K CC73HCH1H221J CK73HB1A104K CC73HCH1H221J	CHIP C 0.010UF K CHIP C 1200PF K CHIP C 220PF J CHIP C 0.10UF K CHIP C 220PF J	
C527 C528 C529,530 C531 C532			CK73HB1E103K CK73HB1A104K CK73HB1E103K CK73HB1A104K CK73HB1E103K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K		C719,720 C721 C722 C723,724 C725			CK73HB1A104K CC73HCH1H221J CC73HCH1H470J CK73HB1A104K CK73HB1E103K	CHIP C 0.10UF K CHIP C 220PF J CHIP C 47PF J CHIP C 0.10UF K CHIP C 0.010UF K	
C533 C534 C535 C536 C537,538			CK73HB1A104K CC73HCH1H101J CS77CP0J100M CK73HB1E103K CK73HB1A104K	CHIP C 0.10UF K CHIP C 100PF J CHIP TNL 10UF 6.3WV CHIP C 0.010UF K CHIP C 0.10UF K		C726 C727 C729 C730 C731			CK73HB1A104K CC73HCH1H820J CK73HB1A104K CK73HB1H561K CK73HB1A104K	CHIP C 0.10UF K CHIP C 82PF J CHIP C 0.10UF K CHIP C 560PF K CHIP C 0.10UF K	
C539 C540 C541 C542 C543-546			CK73HB1E103K CK73HB0J105K CK73HB1A104K CS77CP0J100M CC73HCH1H101J	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP TNL 10UF 6.3WV CHIP C 100PF J		C732 C734 C735 C736 C737			CK73HB1E103K CK73HB1E103K CK73FB1E475K CC73HCH1H101J CK73HB1A104K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 4.7UF K CHIP C 100PF J CHIP C 0.10UF K	
C547-550 C551 C552 C553 C554-558			CK73HB1A104K CK73HB1E103K CK73HB0J105K CC73HCH1H101J CK73HB1A104K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 100PF J CHIP C 0.10UF K		C738 C740 C741 C742 C743			CK73HB1H102K CK73HB1H472K CK73HB1A154K CK73HB1A104K CK73HB1E103K	CHIP C 1000PF K CHIP C 4700PF K CHIP C 0.15UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C559 C560 C561-563 C565,566 C567			CK73HB1E103K CK73HB0J105K CC73HCH1H101J CC73HCH1H101J CK73HB1H102K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 100PF J CHIP C 100PF J CHIP C 1000PF K		C744 C745-747 C748-751 C752,753 C754			CK73HB1A104K CK73HB1E103K CK73HB1A104K CK73HB1E103K CK73HB1H102K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1000PF K	

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C757			CC73HCH1H150J	CHIP C 15PF J		CN611,612			E23-1278-05	TERMINAL	
C761			CK73HB1E103K	CHIP C 0.010UF K		CN614			E23-1278-05	TERMINAL	
C762,763			CK73HB1A104K	CHIP C 0.10UF K		CN705			E40-6582-05	PIN ASSY	
C764			CC73HCH1H220J	CHIP C 22PF J							
C765,766			CK73GB1E105K	CHIP C 1.0UF K		CN901			E40-6560-05	FLAT CABLE CONNECTOR	
C767			CK73HB1A104K	CHIP C 0.10UF K		J701			E11-0425-05	3.5D PHONE JACK(3P)	
C768,769			CK73HB1E103K	CHIP C 0.010UF K		J901			E58-0521-05	SUB SOCKET(D)	
C770			CK73HB1A104K	CHIP C 0.10UF K							
C773			CK73HB1A104K	CHIP C 0.10UF K		F401			F53-0328-05	FUSE	
C774			CK73HB1H102K	CHIP C 1000PF K		F501			F53-0352-05	FUSE	
C775			CK73HB1A104K	CHIP C 0.10UF K		CN405			J19-5386-05	HOLDER	
C776			CK73HB0J105K	CHIP C 1.0UF K							
C777			CK73HB1H102K	CHIP C 1000PF K		CD201			L79-1850-05	TUNING COIL	
C778			CK73HB1A104K	CHIP C 0.10UF K							
C779			CC73HCH1H680J	CHIP C 68PF J		CF201			L72-1017-05	CERAMIC FILTER	
						CF202			L72-1021-05	CERAMIC FILTER	
C782-786			CK73HB1A104K	CHIP C 0.10UF K		CF203			L72-1020-05	CERAMIC FILTER	
C787			CK73FB1A106K	CHIP C 10UF K							
C788			CK73HB1A104K	CHIP C 0.10UF K		L1			L41-4795-39	SMALL FIXED INDUCTOR(4.7UH)	
C789			CK73FB1E475K	CHIP C 4.7UF K		L2			L92-0163-05	BEADS CORE	
C790			CK73FB1A106K	CHIP C 10UF K		L3 ,4			L40-1001-86	SMALL FIXED INDUCTOR(10UH)	
						L7 ,8			L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)	
C791			CK73HB1H102K	CHIP C 1000PF K		L10 ,11			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
C792			CC73HCH1H470J	CHIP C 47PF J							
C793			CK73HB1H102K	CHIP C 1000PF K		L12			L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
C794,795			CK73FB1A106K	CHIP C 10UF K		L13 ,14			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
C796-799			CK73HB1A104K	CHIP C 0.10UF K		L15			L40-8275-92	SMALL FIXED INDUCTOR(82NH)	
						L16			L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)	
C801,802			CK73GB1E105K	CHIP C 1.0UF K		L17			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
C803-805			CK73HB1H102K	CHIP C 1000PF K							
C806		*	C92-0906-05	ELECTRO 330UF 16WV		L18			L40-5667-92	SMALL FIXED INDUCTOR(5.6NH)	
C807			C92-0875-05	ELECTRO 47UF 25WV		L19			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
C809			CK73HB1H102K	CHIP C 1000PF K		L20			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	
						L22			L34-4610-05	AIR-CORE COIL	
C810			CK73HB1H471K	CHIP C 470PF K		L23			L34-4607-05	AIR-CORE COIL	
C811			CK73HB1H102K	CHIP C 1000PF K							
C813			CK73FB1A106K	CHIP C 10UF K		L24			L92-0446-05	BEADS CORE	
C814			CK73HB1H471K	CHIP C 470PF K		L25 ,26			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
C815,816			CK73FB1A106K	CHIP C 10UF K		L27			L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
						L28			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
C817			CK73HB1E103K	CHIP C 0.010UF K		L31 -36			L92-0163-05	BEADS CORE	
C818			CK73HB0J105K	CHIP C 1.0UF K							
C820			CK73GB1E105K	CHIP C 1.0UF K		L40 ,41			L92-0163-05	BEADS CORE	
C821			CK73HB1H102K	CHIP C 1000PF K		L101			L40-8275-92	SMALL FIXED INDUCTOR(82NH)	
C824			CK73HB1H102K	CHIP C 1000PF K		L102			L40-6875-92	SMALL FIXED INDUCTOR(68NH)	
						L103			L92-0140-05	CHIP FERRITE	
C825			CC73HC1H101J	CHIP C 100PF J		L104			L40-3375-92	SMALL FIXED INDUCTOR(33NH)	
C901			CC73HCH1H101J	CHIP C 100PF J							
C902			CK73HB1H102K	CHIP C 1000PF K		L105			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	
C903-906			CC73HCH1H101J	CHIP C 100PF J		L106			L92-0140-05	CHIP FERRITE	
C907			CK73HB1H102K	CHIP C 1000PF K		L108,109			L92-0179-05	CHIP FERRITE	
						L110			L34-4638-05	AIR-CORE COIL	
C908-921			CC73HCH1H101J	CHIP C 100PF J		L111			L34-4744-05	AIR-CORE COIL	
C922,923			CK73HB1H102K	CHIP C 1000PF K							
						L112-115			L34-4742-05	AIR-CORE COIL	
CN401,402			E23-1260-04	TERMINAL		L116			L34-4848-05	AIR-CORE COIL	
CN403			E41-1682-05	PIN ASSY		L201			L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
CN502-513			E23-1278-05	TERMINAL		L202			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
CN516,517			E23-1278-05	TERMINAL		L204			L41-4778-45	SMALL FIXED INDUCTOR(47NH)	
CN520			E23-1278-05	TERMINAL							
						L205			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
CN527			E23-1278-05	TERMINAL		L206			L92-0138-05	CHIP FERRITE	
CN540			E23-1278-05	TERMINAL		L207			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
CN542,543			E23-1278-05	TERMINAL		L208			L92-0138-05	CHIP FERRITE	
CN549			E40-6720-05	SOCKET FOR PIN ASSY		L209			L39-1498-05	TOROIDAL COIL	
CN595			E40-6361-05	PIN ASSY							
						L210			L92-0138-05	CHIP FERRITE	
CN597			E40-6558-05	FLAT CABLE CONNECTOR		L211			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
CN600			E40-6560-05	FLAT CABLE CONNECTOR		L212			L39-1498-05	TOROIDAL COIL	

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L213 L214			L40-4775-92 L39-1498-05	SMALL FIXED INDUCTOR(47NH) TOROIDAL COIL		R48			RK73HB1J104J	CHIP R 100K J 1/16W	
L215 L217-219 L220 L221 L222			L40-4775-92 L34-4566-05 L92-0138-05 L34-4566-05 L41-2785-14	SMALL FIXED INDUCTOR(47NH) AIR-CORE COIL CHIP FERRITE AIR-CORE COIL SMALL FIXED INDUCTOR(270NH)		R49 R51 R52 R56 R57			RK73HB1J123J RK73HB1J473J RK73HB1J683J RK73HB1J331J RK73HB1J472J	CHIP R 12K J 1/16W CHIP R 47K J 1/16W CHIP R 68K J 1/16W CHIP R 330 J 1/16W CHIP R 4.7K J 1/16W	
L223 L229,230 L402,403 L404 L405			L40-1585-92 L34-4605-05 L92-0179-05 L92-0639-05 L33-1496-05	SMALL FIXED INDUCTOR(150NH) AIR-CORE COIL CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR		R59 R60 R61 R62 R63			RK73HB1J223J RK73HB1J563J RK73HB1J223J RK73HB1J474J RK73HB1J472J	CHIP R 22K J 1/16W CHIP R 56K J 1/16W CHIP R 22K J 1/16W CHIP R 470K J 1/16W CHIP R 4.7K J 1/16W	
L406 L501-503 L506-511 L512 L517,518			L33-1462-05 L92-0138-05 L92-0138-05 L92-0140-05 L92-0138-05	SMALL FIXED INDUCTOR CHIP FERRITE CHIP FERRITE CHIP FERRITE CHIP FERRITE		R64 ,65 R66 R67 R68 R69			RK73HH1J271D RK73HB1J121J RK73HB1J151J RK73HB1J102J RK73HB1J473J	CHIP R 270 D 1/16W CHIP R 120 J 1/16W CHIP R 150 J 1/16W CHIP R 1.0K J 1/16W CHIP R 47K J 1/16W	
L521-523 L901,902 L903-905			L92-0162-05 L92-0140-05 L92-0162-05	BEADS CORE CHIP FERRITE BEADS CORE		R70 R71 R72 R73 R74			RK73HB1J154J RK73HB1J101J RK73HB1J332J RK73HB1J103J RK73HB1J271J	CHIP R 150K J 1/16W CHIP R 100 J 1/16W CHIP R 3.3K J 1/16W CHIP R 10K J 1/16W CHIP R 270 J 1/16W	
X1 X501 X502			L77-3014-05 L77-1802-05 L77-3015-05	TCXO (19.2MHZ) CRYSTAL RESONATOR(32768HZ) TCXO (18.432MHZ)		R75 R76 R77 R78 R79			RK73HB1J222J RK73HB1J470J RK73HB1J000J RK73HB1J472J RK73HB1J560J	CHIP R 2.2K J 1/16W CHIP R 47 J 1/16W CHIP R 0.0 J 1/16W CHIP R 4.7K J 1/16W CHIP R 56 J 1/16W	
XF202		*	L71-0649-05	MCF (58.05MHZ)		R80 R82 R83 R84 R85			RK73HB1J183J RK73HB1J102J RK73GB2A272J RK73HB1J221J RK73HB1J474J	CHIP R 18K J 1/16W CHIP R 1.0K J 1/16W CHIP R 2.7K J 1/10W CHIP R 220 J 1/16W CHIP R 470K J 1/16W	
R1 ,2 R3 R4 R5 R6 ,7			RK73HH1J223D RK73HB1J274J RK73HB1J224J RK73HB1J101J RK73HB1J472J	CHIP R 22K D 1/16W CHIP R 270K J 1/16W CHIP R 220K J 1/16W CHIP R 100 J 1/16W CHIP R 4.7K J 1/16W		R86 R88 ,89 R90 ,91 R92 ,93 R101			RK73HB1J101J RK73HB1J000J RK73GB2A000J RK73HB1J000J RK73HB1J332J	CHIP R 100 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/16W CHIP R 3.3K J 1/16W	
R9 R10 R11 ,12 R13 R14 ,15			RK73HB1J472J RK73HB1J000J RK73HB1J100J RK73HB1J103J RK73HB1J100J	CHIP R 4.7K J 1/16W CHIP R 0.0 J 1/16W CHIP R 10 J 1/16W CHIP R 10K J 1/16W CHIP R 10 J 1/16W		R102 R103 R104 R105 R106			RK73HB1J271J RK73HB1J180J RK73HB1J271J RK73HB1J333J RK73HB1J103J	CHIP R 270 J 1/16W CHIP R 18 J 1/16W CHIP R 270 J 1/16W CHIP R 33K J 1/16W CHIP R 10K J 1/16W	
R17 R18 R20 R21 R22			RK73HB1J000J RK73HB1J100J RK73HB1J102J RK73HB1J100J RK73HB1J473J	CHIP R 0.0 J 1/16W CHIP R 10 J 1/16W CHIP R 1.0K J 1/16W CHIP R 10 J 1/16W CHIP R 47K J 1/16W		R107 R108 R109 R110 R111			RK73HB1J181J RK73GB2A101J RK73HB1J471J RK73GB2A220J RK73HB1J272J	CHIP R 180 J 1/16W CHIP R 100 J 1/10W CHIP R 470 J 1/16W CHIP R 22 J 1/10W CHIP R 2.7K J 1/16W	
R23 R25 R26 R27 R28			RK73HB1J102J RK73HB1J000J RK73HB1J474J RK73HB1J104J RK73HB1J473J	CHIP R 1.0K J 1/16W CHIP R 0.0 J 1/16W CHIP R 470K J 1/16W CHIP R 100K J 1/16W CHIP R 47K J 1/16W		R112 R113 R114 R115 R116			RK73HB1J182J RK73GB2A220J RK73HB1J331J RK73HB1J473J RK73HB1J223J	CHIP R 1.8K J 1/16W CHIP R 22 J 1/10W CHIP R 330 J 1/16W CHIP R 47K J 1/16W CHIP R 22K J 1/16W	
R29 R30 R31 R33 R34			RK73HB1J683J RK73HB1J000J RK73HB1J151J RK73HB1J184J RK73HB1J473J	CHIP R 68K J 1/16W CHIP R 0.0 J 1/16W CHIP R 150 J 1/16W CHIP R 180K J 1/16W CHIP R 47K J 1/16W		R117 R119 R120 R121 R122			RK73HB1J000J RK73HB1J103J RK73HB1J473J RK73HB1J104J RK73HB1J332J	CHIP R 0.0 J 1/16W CHIP R 10K J 1/16W CHIP R 47K J 1/16W CHIP R 100K J 1/16W CHIP R 3.3K J 1/16W	
R35 R36 R37 R38 R39			RK73HB1J102J RK73HH1J391D RK73HB1J103J RK73HB1J106J RK73HB1J472J	CHIP R 1.0K J 1/16W CHIP R 390 D 1/16W CHIP R 10K J 1/16W CHIP R 10M J 1/16W CHIP R 4.7K J 1/16W		R123 R124,125 R126			RK73FB2B271J RK73FB2B390J RK73HB1J104J	CHIP R 270 J 1/8W CHIP R 39 J 1/8W CHIP R 100K J 1/16W	
R42 ,43 R44 R45 ,46 R47			RK73HB1J000J RK73HB1J104J RK73HB1J223J RK73HB1J000J	CHIP R 0.0 J 1/16W CHIP R 100K J 1/16W CHIP R 22K J 1/16W CHIP R 0.0 J 1/16W							

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R127			RK73FB2B271J	CHIP R 270 J 1/8W		R257			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R130			RK73HB1J104J	CHIP R 100K J 1/16W		R261			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R263			RK73HB1J470J	CHIP R 47 J 1/16W	
R131			RK73HB1J221J	CHIP R 220 J 1/16W							
R132			RK73HB1J334J	CHIP R 330K J 1/16W		R264			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R134			RK73HB1J104J	CHIP R 100K J 1/16W		R265			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R135			RK73HB1J334J	CHIP R 330K J 1/16W		R266			RK73HB1J103J	CHIP R 10K J 1/16W	
R137			RK73EB2E241J	CHIP R 240 J 1/4W		R267			RK73HB1J222J	CHIP R 2.2K J 1/16W	
						R268			RK73HB1J271J	CHIP R 270 J 1/16W	
R138-140			RK73HB1J104J	CHIP R 100K J 1/16W							
R141			RK73GB2A000J	CHIP R 0.0 J 1/10W		R269			RK73HB1J470J	CHIP R 47 J 1/16W	
R142			RK73HB1J824J	CHIP R 820K J 1/16W		R270			RK73HB1J680J	CHIP R 68 J 1/16W	
R143			RK73HB1J823J	CHIP R 82K J 1/16W		R271			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R144,145			RK73HB1J104J	CHIP R 100K J 1/16W		R273			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R274			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R146			RK73HB1J823J	CHIP R 82K J 1/16W							
R147			RK73HB1J822J	CHIP R 8.2K J 1/16W		R275			RK73HB1J181J	CHIP R 180 J 1/16W	
R148			RK73HB1J563J	CHIP R 56K J 1/16W		R276			RK73GB2A330J	CHIP R 33 J 1/10W	
R149			RK73HB1J154J	CHIP R 150K J 1/16W		R277			RK73HB1J121J	CHIP R 120 J 1/16W	
R150			R92-1061-05	JUMPER REST 0 OHM		R278			RK73HB1J181J	CHIP R 180 J 1/16W	
						R279			RK73HB1J470J	CHIP R 47 J 1/16W	
R154			RK73EB2E241J	CHIP R 240 J 1/4W							
R156			RK73HB1J000J	CHIP R 0.0 J 1/16W		R280			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R161			RK73HB1J332J	CHIP R 3.3K J 1/16W		R281			RK73HB1J121J	CHIP R 120 J 1/16W	
R201			RK73HB1J153J	CHIP R 15K J 1/16W		R282,283			RK73HB1J104J	CHIP R 100K J 1/16W	
R202			RK73HB1J470J	CHIP R 47 J 1/16W		R284			RK73HB1J103J	CHIP R 10K J 1/16W	
						R285			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R203,204			RK73HB1J223J	CHIP R 22K J 1/16W							
R205			RK73HB1J334J	CHIP R 330K J 1/16W		R286			RK73HB1J104J	CHIP R 100K J 1/16W	
R206,207			RK73HB1J223J	CHIP R 22K J 1/16W		R287			RK73HB1J274J	CHIP R 270K J 1/16W	
R208			RK73HB1J153J	CHIP R 15K J 1/16W		R288			RK73HB1J104J	CHIP R 100K J 1/16W	
R209,210			RK73HB1J100J	CHIP R 10 J 1/16W		R290,291			RK73HB1J104J	CHIP R 100K J 1/16W	
						R292			RK73HB1J103J	CHIP R 10K J 1/16W	
R211			RK73HB1J102J	CHIP R 1.0K J 1/16W							
R212			RK73HB1J000J	CHIP R 0.0 J 1/16W		R294			RK73HB1J221J	CHIP R 220 J 1/16W	
R213			RK73HB1J102J	CHIP R 1.0K J 1/16W		R296			RK73HB1J274J	CHIP R 270K J 1/16W	
R215			RK73HB1J272J	CHIP R 2.7K J 1/16W		R297			RK73HB1J104J	CHIP R 100K J 1/16W	
R216			RK73HB1J000J	CHIP R 0.0 J 1/16W		R299			RK73HB1J104J	CHIP R 100K J 1/16W	
						R301			RK73HB1J120J	CHIP R 12 J 1/16W	
R218,219			RK73HB1J103J	CHIP R 10K J 1/16W							
R220			RK73HB1J473J	CHIP R 47K J 1/16W		R302			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R221			RK73HB1J183J	CHIP R 18K J 1/16W		R303			RK73HB1J104J	CHIP R 100K J 1/16W	
R222			RK73HB1J222J	CHIP R 2.2K J 1/16W		R304			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R223			RK73HB1J274J	CHIP R 270K J 1/16W		R305			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R306			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R224			RK73HB1J103J	CHIP R 10K J 1/16W							
R225			RK73HB1J153J	CHIP R 15K J 1/16W		R307			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R226			RK73HB1J223J	CHIP R 22K J 1/16W		R310			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R227			RK73HB1J473J	CHIP R 47K J 1/16W		R313			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R228			RK73HB1J104J	CHIP R 100K J 1/16W		R314			RK73HB1J152J	CHIP R 1.5K J 1/16W	
						R315			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R229			RK73HB1J223J	CHIP R 22K J 1/16W							
R231			RK73HB1J222J	CHIP R 2.2K J 1/16W		R319			RK73HB1J104J	CHIP R 100K J 1/16W	
R232			RK73HB1J103J	CHIP R 10K J 1/16W		R320-322			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R234			RK73HB1J221J	CHIP R 220 J 1/16W		R324,325			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R235			RK73HB1J101J	CHIP R 100 J 1/16W		R327			RK73HB1J332J	CHIP R 3.3K J 1/16W	
						R328			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R236			RK73HB1J104J	CHIP R 100K J 1/16W							
R238			RK73HB1J000J	CHIP R 0.0 J 1/16W		R329			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R239			RK73HB1J103J	CHIP R 10K J 1/16W		R330			RK73GB2A100J	CHIP R 10 J 1/10W	
R240			RK73HB1J104J	CHIP R 100K J 1/16W		R331			RK73HB1J473J	CHIP R 47K J 1/16W	
R242			RK73HB1J221J	CHIP R 220 J 1/16W		R332			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R333			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R243			RK73HB1J101J	CHIP R 100 J 1/16W							
R244			RK73HB1J000J	CHIP R 0.0 J 1/16W		R334			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R245			RK73HB1J104J	CHIP R 100K J 1/16W		R338			RK73HB1J103J	CHIP R 10K J 1/16W	
R247			RK73HB1J104J	CHIP R 100K J 1/16W		R339			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R248			RK73HB1J474J	CHIP R 470K J 1/16W		R340,341			RK73GB2A000J	CHIP R 0.0 J 1/10W	
						R342,343			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R250			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R256			RK73HB1J181J	CHIP R 180 J 1/16W		R346			RK73HB1J223J	CHIP R 22K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R347			RK73HB1J000J	CHIP R 0.0 J 1/16W		R527			RK73HB1J104J	CHIP R 100K J 1/16W	
R352,353			RK73HB1J000J	CHIP R 0.0 J 1/16W		R528,529			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R401			RK73HH1J105D	CHIP R 1.0M D 1/16W		R531			RK73HB1J104J	CHIP R 100K J 1/16W	
R402			RK73HB1J471J	CHIP R 470 J 1/16W		R532			RK73HB1J101J	CHIP R 100 J 1/16W	
						R533,534			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R403			RK73HH1J104D	CHIP R 100K D 1/16W							
R404			RK73HB1J103J	CHIP R 10K J 1/16W		R536,537			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R405			RK73HH1J274D	CHIP R 270K D 1/16W		R538			RK73HB1J101J	CHIP R 100 J 1/16W	
R406			RK73HH1J104D	CHIP R 100K D 1/16W		R539			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R407			RK73HB1J473J	CHIP R 47K J 1/16W		R540,541			RK73HB1J101J	CHIP R 100 J 1/16W	
						R542			RK73HB1J104J	CHIP R 100K J 1/16W	
R408			RK73HB1J103J	CHIP R 10K J 1/16W							
R409			RK73HB1J683J	CHIP R 68K J 1/16W		R543			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R410			RK73HB1J684J	CHIP R 680K J 1/16W		R544			RK73HB1J104J	CHIP R 100K J 1/16W	
R411			RK73HB1J104J	CHIP R 100K J 1/16W		R545			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R413			RK73HB1J474J	CHIP R 470K J 1/16W		R548			RK73GB2A000J	CHIP R 0.0 J 1/10W	
						R551			RK73HB1J101J	CHIP R 100 J 1/16W	
R415			RK73HB1J332J	CHIP R 3.3K J 1/16W							
R417			RK73HB1J473J	CHIP R 47K J 1/16W		R552-554			RK73HB1J104J	CHIP R 100K J 1/16W	
R418,419			RK73HB1J103J	CHIP R 10K J 1/16W		R556-558			RK73HB1J104J	CHIP R 100K J 1/16W	
R420			RK73HB1J473J	CHIP R 47K J 1/16W		R560			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R421			RK73HB1J474J	CHIP R 470K J 1/16W		R561			RK73HB1J473J	CHIP R 47K J 1/16W	
						R562			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R422			RK73HB1J103J	CHIP R 10K J 1/16W							
R423-425			RK73GB2A472J	CHIP R 4.7K J 1/10W		R565			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R426			RK73HB1J474J	CHIP R 470K J 1/16W		R567			RK73HB1J151J	CHIP R 150 J 1/16W	
R428,429			RK73HB1J103J	CHIP R 10K J 1/16W		R568			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R430			RK73HH1J124D	CHIP R 120K D 1/16W		R569			RK73HB1J220J	CHIP R 22 J 1/16W	
						R572			RK73HB1J220J	CHIP R 22 J 1/16W	
R431			RK73HH1J183D	CHIP R 18K D 1/16W							
R432			RK73HH1J223D	CHIP R 22K D 1/16W		R574			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R433			RK73HB1J102J	CHIP R 1.0K J 1/16W		R575			RK73HB1J103J	CHIP R 10K J 1/16W	
R434			RK73HB1J330J	CHIP R 33 J 1/16W		R576			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R435			RK73GB2A100J	CHIP R 10 J 1/10W		R577			RK73HB1J102J	CHIP R 1.0K J 1/16W	
						R578-580			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R436			RK73HB1J000J	CHIP R 0.0 J 1/16W							
R437			RK73HB1J474J	CHIP R 470K J 1/16W		R581			RK73HB1J474J	CHIP R 470K J 1/16W	
R438			RK73HB1J154J	CHIP R 150K J 1/16W		R582-586			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R440			RK73HB1J102J	CHIP R 1.0K J 1/16W		R587			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R441			RK73HB1J123J	CHIP R 12K J 1/16W		R588-590			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R591			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R442			RK73HH1J334D	CHIP R 330K D 1/16W							
R443			RK73HH1J223D	CHIP R 22K D 1/16W		R592,593			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R444			RK73HB1J272J	CHIP R 2.7K J 1/16W		R594			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R445			RK73HB1J473J	CHIP R 47K J 1/16W		R595			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R446			RK73GB2A100J	CHIP R 10 J 1/10W		R596			RK73HB1J104J	CHIP R 100K J 1/16W	
						R597			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R447			RK73HB1J473J	CHIP R 47K J 1/16W							
R448			RK73HB1J000J	CHIP R 0.0 J 1/16W		R598-601			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R449			RK73GB2A220J	CHIP R 22 J 1/10W		R602			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R450			RK73HB1J000J	CHIP R 0.0 J 1/16W		R603,604			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R501			RK73HB1J104J	CHIP R 100K J 1/16W		R605			RK73HB1J102J	CHIP R 1.0K J 1/16W	
						R606			RK73HB1J103J	CHIP R 10K J 1/16W	
R503			RK73HB1J102J	CHIP R 1.0K J 1/16W							
R504			RK73HB1J104J	CHIP R 100K J 1/16W		R607,608			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R506			RK73HB1J474J	CHIP R 470K J 1/16W		R610			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R507			RK73HB1J000J	CHIP R 0.0 J 1/16W		R611,612			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R509			RK73HB1J000J	CHIP R 0.0 J 1/16W		R614			RK73HB1J474J	CHIP R 470K J 1/16W	
						R615,616			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R510			RK73HB1J474J	CHIP R 470K J 1/16W							
R511			RK73HB1J220J	CHIP R 22 J 1/16W		R617-620			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R512			RK73HB1J104J	CHIP R 100K J 1/16W		R621,622			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R514			RK73HB1J000J	CHIP R 0.0 J 1/16W		R623-625			RK73HB1J104J	CHIP R 100K J 1/16W	
R515,516			RK73HB1J104J	CHIP R 100K J 1/16W		R627,628			RK73HB1J104J	CHIP R 100K J 1/16W	
						R629			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R520,521			RK73HB1J473J	CHIP R 47K J 1/16W							
R522			RK73HB1J474J	CHIP R 470K J 1/16W		R630			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R523			RK73HB1J473J	CHIP R 47K J 1/16W		R632			RK73HB1J103J	CHIP R 10K J 1/16W	
R524			RK73HB1J000J	CHIP R 0.0 J 1/16W		R633			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R525			RK73HB1J104J	CHIP R 100K J 1/16W		R634			RK73HB1J103J	CHIP R 10K J 1/16W	
						R636			RK73HB1J000J	CHIP R 0.0 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R637			RK73HB1J103J	CHIP R 10K J 1/16W		R744			RK73HB1J473J	CHIP R 47K J 1/16W	
R638			RK73HB1J104J	CHIP R 100K J 1/16W		R745			RK73HB1J104J	CHIP R 100K J 1/16W	
R639			RK73HB1J102J	CHIP R 1.0K J 1/16W		R746			RK73HB1J103J	CHIP R 10K J 1/16W	
R640			RK73HB1J103J	CHIP R 10K J 1/16W		R747			RK73HB1J334J	CHIP R 330K J 1/16W	
R641,642			RK73HB1J104J	CHIP R 100K J 1/16W		R748			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R644			RK73GB2A000J	CHIP R 0.0 J 1/10W		R749			RK73HB1J823J	CHIP R 82K J 1/16W	
R646			RK73HB1J682J	CHIP R 6.8K J 1/16W		R750			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R648			RK73HB1J682J	CHIP R 6.8K J 1/16W		R751			RK73HB1J271J	CHIP R 270 J 1/16W	
R650			RK73GB2A000J	CHIP R 0.0 J 1/10W		R752			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R651			RK73FB2B102J	CHIP R 1.0K J 1/8W		R753			RK73HB1J563J	CHIP R 56K J 1/16W	
R652			RK73HB1J104J	CHIP R 100K J 1/16W		R755			RK73HB1J103J	CHIP R 10K J 1/16W	
R654			RK73GB2A000J	CHIP R 0.0 J 1/10W		R756			RK73HB1J153J	CHIP R 15K J 1/16W	
R656			RK73HB1J471J	CHIP R 470 J 1/16W		R758			RK73HB1J103J	CHIP R 10K J 1/16W	
R658			RK73GB2A000J	CHIP R 0.0 J 1/10W		R759			RK73HB1J104J	CHIP R 100K J 1/16W	
R659-661			RK73HB1J104J	CHIP R 100K J 1/16W		R760			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R662,663			RK73HB1J474J	CHIP R 470K J 1/16W		R761			RK73HB1J104J	CHIP R 100K J 1/16W	
R664-674			RK73HB1J104J	CHIP R 100K J 1/16W		R762			RK73HB1J474J	CHIP R 470K J 1/16W	
R676			RK73HB1J104J	CHIP R 100K J 1/16W		R763			RK73HB1J183J	CHIP R 18K J 1/16W	
R677			RK73HB1J474J	CHIP R 470K J 1/16W		R764			RK73HB1J124J	CHIP R 120K J 1/16W	
R678			RK73HB1J104J	CHIP R 100K J 1/16W		R765			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R680-683			RK73HB1J000J	CHIP R 0.0 J 1/16W		R766			RK73HB1J104J	CHIP R 100K J 1/16W	
R684-686			RK73HB1J104J	CHIP R 100K J 1/16W		R767,768			RK73HB1J473J	CHIP R 47K J 1/16W	
R687,688			RK73HB1J472J	CHIP R 4.7K J 1/16W		R769			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R689,690			RK73HB1J474J	CHIP R 470K J 1/16W		R770			RK73HB1J563J	CHIP R 56K J 1/16W	
R691-696			RK73HB1J104J	CHIP R 100K J 1/16W		R771			RK73HB1J104J	CHIP R 100K J 1/16W	
R697,698			RK73HB1J000J	CHIP R 0.0 J 1/16W		R772			RK73HB1J123J	CHIP R 12K J 1/16W	
R701			RK73HB1J104J	CHIP R 100K J 1/16W		R773			RK73HB1J684J	CHIP R 680K J 1/16W	
R703			RK73HB1J103J	CHIP R 10K J 1/16W		R774			RK73HB1J474J	CHIP R 470K J 1/16W	
R704			RK73HB1J563J	CHIP R 56K J 1/16W		R775			RK73HB1J823J	CHIP R 82K J 1/16W	
R705			RK73HB1J104J	CHIP R 100K J 1/16W		R776			RK73HB1J334J	CHIP R 330K J 1/16W	
R706			RK73HB1J683J	CHIP R 68K J 1/16W		R777			RK73HB1J154J	CHIP R 150K J 1/16W	
R707			RK73HB1J153J	CHIP R 15K J 1/16W		R778			RK73HB1J394J	CHIP R 390K J 1/16W	
R708			RK73HB1J683J	CHIP R 68K J 1/16W		R779			RK73HB1J474J	CHIP R 470K J 1/16W	
R709			RK73HB1J822J	CHIP R 8.2K J 1/16W		R780,781			RK73HB1J104J	CHIP R 100K J 1/16W	
R710			RK73HB1J104J	CHIP R 100K J 1/16W		R782			RK73HB1J153J	CHIP R 15K J 1/16W	
R712			RK73HB1J683J	CHIP R 68K J 1/16W		R783			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R713			RK73HB1J563J	CHIP R 56K J 1/16W		R784			RK73HB1J154J	CHIP R 150K J 1/16W	
R714			RK73HB1J104J	CHIP R 100K J 1/16W		R785			RK73HB1J103J	CHIP R 10K J 1/16W	
R715			RK73HB1J473J	CHIP R 47K J 1/16W		R786			RK73HB1J393J	CHIP R 39K J 1/16W	
R716			RK73HB1J000J	CHIP R 0.0 J 1/16W		R787			RK73HB1J274J	CHIP R 270K J 1/16W	
R717			RK73HB1J473J	CHIP R 47K J 1/16W		R788			RK73HB1J223J	CHIP R 22K J 1/16W	
R718			RK73HB1J000J	CHIP R 0.0 J 1/16W		R789			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R720			RK73HB1J104J	CHIP R 100K J 1/16W		R790			RK73HB1J224J	CHIP R 220K J 1/16W	
R721			RK73HB1J222J	CHIP R 2.2K J 1/16W		R791			RK73HB1J564J	CHIP R 560K J 1/16W	
R722			RK73HB1J683J	CHIP R 68K J 1/16W		R792			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R724			RK73HB1J563J	CHIP R 56K J 1/16W		R793,794			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R725			RK73HB1J683J	CHIP R 68K J 1/16W		R795			RK73HB1J224J	CHIP R 220K J 1/16W	
R726			RK73HB1J100J	CHIP R 10 J 1/16W		R796			RK73HB1J103J	CHIP R 10K J 1/16W	
R727			RK73HB1J274J	CHIP R 270K J 1/16W		R797			RK73HB1J334J	CHIP R 330K J 1/16W	
R728			RK73HB1J000J	CHIP R 0.0 J 1/16W		R798			RK73HB1J684J	CHIP R 680K J 1/16W	
R729			RK73HB1J104J	CHIP R 100K J 1/16W		R799			RK73HB1J563J	CHIP R 56K J 1/16W	
R730			RK73HB1J103J	CHIP R 10K J 1/16W		R800			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R731			RK73HB1J000J	CHIP R 0.0 J 1/16W		R801			RK73HB1J104J	CHIP R 100K J 1/16W	
R732			RK73HB1J473J	CHIP R 47K J 1/16W		R802			RK73HB1J273J	CHIP R 27K J 1/16W	
R733			RK73HB1J333J	CHIP R 33K J 1/16W		R803			RK73HB1J153J	CHIP R 15K J 1/16W	
R734			RK73HB1J223J	CHIP R 22K J 1/16W		R804			RK73HB1J681J	CHIP R 680 J 1/16W	
R737			RK73HB1J473J	CHIP R 47K J 1/16W		R805			RK73HB1J823J	CHIP R 82K J 1/16W	
R738			RK73HB1J102J	CHIP R 1.0K J 1/16W		R806			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R739			RK73HB1J000J	CHIP R 0.0 J 1/16W		R807,808			RK73HB1J103J	CHIP R 10K J 1/16W	
R740,741			RK73HB1J104J	CHIP R 100K J 1/16W		R809			RK73HB1J104J	CHIP R 100K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R810			RK73HB1J102J	CHIP R 1.0K J 1/16W		D511,512			DA204U	DIODE	
R812,813			RK73HB1J472J	CHIP R 4.7K J 1/16W		D702			HSC119	DIODE	
R814-816			RK73HB1J104J	CHIP R 100K J 1/16W		D703-705			RB706F-40	DIODE	
R817			RK73HB1J473J	CHIP R 47K J 1/16W		D706,707			EMZ6.8N	ZENER DIODE	
R818			RK73HB1J333J	CHIP R 33K J 1/16W		D901-904			DA204U	DIODE	
R819			RK73HB1J000J	CHIP R 0.0 J 1/16W		D905,906			02DZ18F-X,Y	ZENER DIODE	
R820			RK73HB1J474J	CHIP R 470K J 1/16W		D907,908			DA204U	DIODE	
R821			RK73HB1J000J	CHIP R 0.0 J 1/16W		D909			1SS355	DIODE	
R822			RK73HB1J101J	CHIP R 100 J 1/16W		D910			02DZ18F-X,Y	ZENER DIODE	
R823			RK73HB1J472J	CHIP R 4.7K J 1/16W		D911,912			DA204U	DIODE	
R825,826			RK73HB1J103J	CHIP R 10K J 1/16W		D913			1SS355	DIODE	
R827			RK73HB1J332J	CHIP R 3.3K J 1/16W		D914			02DZ18F-X,Y	ZENER DIODE	
R828			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC1			LMC7101BIM5	MOS-IC	
R831			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC2			LM73CIMKX-0	MOS-IC	
R833-835			RK73HB1J101J	CHIP R 100 J 1/16W		IC3			Note 1	MOS-IC	
R836			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC4			LMC7101BIM5	MOS-IC	
R837			RK73HB1J472J	CHIP R 4.7K J 1/16W		IC5			TC75W51FK(F)	MOS-IC	
R838			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC101			NJM2904V-ZB	MOS-IC	
R841			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC102			RA30H1317M123	MOS-IC	
R842			RK73FB2B102J	CHIP R 1.0K J 1/8W		IC103			NJM2904V-ZB	MOS-IC	
R843			RK73HB1J471J	CHIP R 470 J 1/16W		IC201			MCP6021-E/OT	MOS-IC	
R845			RK73HB1J102J	CHIP R 1.0K J 1/16W		IC202			TK10931VTL-G	ANALOGUE IC	
R846			RK73HB1J332J	CHIP R 3.3K J 1/16W		IC203			TC75W51FK(F)	MOS-IC	
R901			RK73GB2A471J	CHIP R 470 J 1/10W		IC204			SPM5001	MOS-IC	
R902,903			RK73HB1J101J	CHIP R 100 J 1/16W		IC205,206			LMC7101BIM5	MOS-IC	
R904-913			RK73HB1J471J	CHIP R 470 J 1/16W		IC401		*	XC6108C23CMN	MOS-IC	
R914			RK73GB2A471J	CHIP R 470 J 1/10W		IC402		*	XC6204B332P1	ANALOGUE IC	
R915			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC403		*	NJM78M08FA-ZB	ANALOGUE IC	
R918,919			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC404			TA7805FQ	MOS-IC	
R921			RK73HB1J474J	CHIP R 470K J 1/16W		IC405			LT1616ES6-PBF	ANALOGUE IC	
D3			DA221	DIODE		IC406			TK71733S	BI-POLAR IC	
D5 ,6			HVC131	DIODE		IC407,408			XC6204B332M	MOS-IC	
D7 ,8			1SV325F	VARIABLE CAPACITANCE DIODE		IC409			XC6205B152PRN	ANALOGUE IC	
D11 -16			1SV282-F	VARIABLE CAPACITANCE DIODE		IC410			XC9101D09AKR	ANALOGUE IC	
D18			1SV278F	VARIABLE CAPACITANCE DIODE		IC501		*	Note 1(BGA)	ROM IC	
D19 -21			HVC131	DIODE		IC502		*	Note 1(BGA)	MICROPROCESSOR IC	
D101			HVC131	DIODE		IC503		*	Note 1(BGA)	SRAM IC	
D102			02DZ5.6F-X,Y	ZENER DIODE		IC504			RV5C386A	MOS-IC	
D104			L407CDB	DIODE (50V/1W)		IC505			TC7SH08FU-F	MOS-IC	
D105			L7091CER	DIODE		IC506			XC6109C29ANN	ANALOGUE IC	
D107-109			HSM88AS-E	DIODE		IC507			TC7SH126FU-F	MOS-IC	
D201,202			DAN235E	DIODE		IC508			SM5023CNDH-G	MOS-IC	
D205			HVC131	DIODE		IC509			TC7WT125FUF	MOS-IC	
D207-210			1SV283F	VARIABLE CAPACITANCE DIODE		IC510		*	Note 1(BGA)	MOS-IC	
D213			1SV283F	VARIABLE CAPACITANCE DIODE		IC511			TC7SH08FU-F	MOS-IC	
D215			HVC131	DIODE		IC512,513			TC7SET08FU-F	MOS-IC	
D216-218			1SV283F	VARIABLE CAPACITANCE DIODE		IC514			TC7WBD125AFK	MOS-IC	
D401			02DZ18F-X,Y	ZENER DIODE		IC515			TC7WT126FU-F	MOS-IC	
D403			1SS416	DIODE		IC516			TC7WH126FU-F	MOS-IC	
D404			22ZR-10D	SURGE ABSORBER		IC517			Note 1	MOS-IC	
D405			DSA3A1	DIODE		IC518			ADM202EARNZ	MOS-IC	
D406			HSC119	DIODE		IC701			TC75S51FE(F)	MOS-IC	
D407		*	CRS02-Q	DIODE		IC702,703			TC75W51FK(F)	MOS-IC	
D408			1SS301F	DIODE		IC704			MCP6021-E/OT	MOS-IC	
D409-412			1SS388F	DIODE		IC705,706			TC75W51FK(F)	MOS-IC	
D501,502			1SS388F	DIODE		IC707,708			TC7W53FK(F)	MOS-IC	
D503,504			1SS416	DIODE		IC709			TC75W51FK(F)	MOS-IC	
D506,507			1SS416	DIODE		IC710			TC7W53FK(F)	MOS-IC	
D508			DA204U	DIODE		IC711			TC75W51FK(F)	MOS-IC	
D509,510			1SS416	DIODE		IC712			M62364FP-F	MOS-IC	

PARTS LIST

TX-RX UNIT (X57-7380-11)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
IC713			TC7W53FK(F)	MOS-IC							
IC714			TC75S51FE(F)	MOS-IC							
IC715			LA4425A	MOS-IC							
Q1			2SC5383-T111	TRANSISTOR							
Q2			DTA114YE	DIGITAL TRANSISTOR							
Q3			SSM3K15TE(F)	FET							
Q5			EMD9	TRANSISTOR							
Q6			2SC5636	TRANSISTOR							
Q7			2SC5383-T111	TRANSISTOR							
Q9 ,10			2SK508NV(K52)	FET							
Q11			SSM6L05FU-F	FET							
Q12			2SJ347F	FET							
Q13 ,14			2SC5636	TRANSISTOR							
Q15			2SK1215-E(E)	FET							
Q101			2SC5108(Y)F	TRANSISTOR							
Q102		*	2SC5455-A	TRANSISTOR							
Q105			DTC114EE	DIGITAL TRANSISTOR							
Q106			2SK1830F	FET							
Q201			DTA114EE	DIGITAL TRANSISTOR							
Q202			DTC144EE	DIGITAL TRANSISTOR							
Q203			2SC5636	TRANSISTOR							
Q204,205			2SC3356(R23)	TRANSISTOR							
Q208			2SC5636	TRANSISTOR							
Q210			2SC3357-A	TRANSISTOR							
Q212			EMD9	TRANSISTOR							
Q401,402			DTC114EE	DIGITAL TRANSISTOR							
Q403			DTC114TE	DIGITAL TRANSISTOR							
Q404			2SJ645	FET							
Q405			2SA1955A-F	TRANSISTOR							
Q406			UPA672T-A	FET							
Q407-409			12A02CH	TRANSISTOR							
Q410			SSM3K15TE(F)	FET							
Q411,412			2SA1955A-F	TRANSISTOR							
Q413-415			DTC114EE	DIGITAL TRANSISTOR							
Q416			SSM6L05FU-F	FET							
Q417			SSM5H01TU	FET							
Q501			UPA672T-A	FET							
Q701			SSM3K15TE(F)	FET							
Q702			2SC4617(Q)	TRANSISTOR							
Q703			SSM3K15TE(F)	FET							
Q704			2SC4738(GR)F	TRANSISTOR							
Q705			2SA1832(GR)F	TRANSISTOR							
Q706,707			2SJ243-A	FET							
Q708			2SA1832(GR)F	TRANSISTOR							
Q709			DTC114EE	DIGITAL TRANSISTOR							
Q710			DTC363EU	DIGITAL TRANSISTOR							
Q901,902		*	Q5X6	TRANSISTOR							
TH101,102			ERTJ0EV104H	THERMISTOR							
TH701			ERTJ0EV104H	THERMISTOR							