
2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " " are generally unavailable because they are not in our Master Spare Parts List.*
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lobricants or glue, follow the instructions in this manual.
(In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

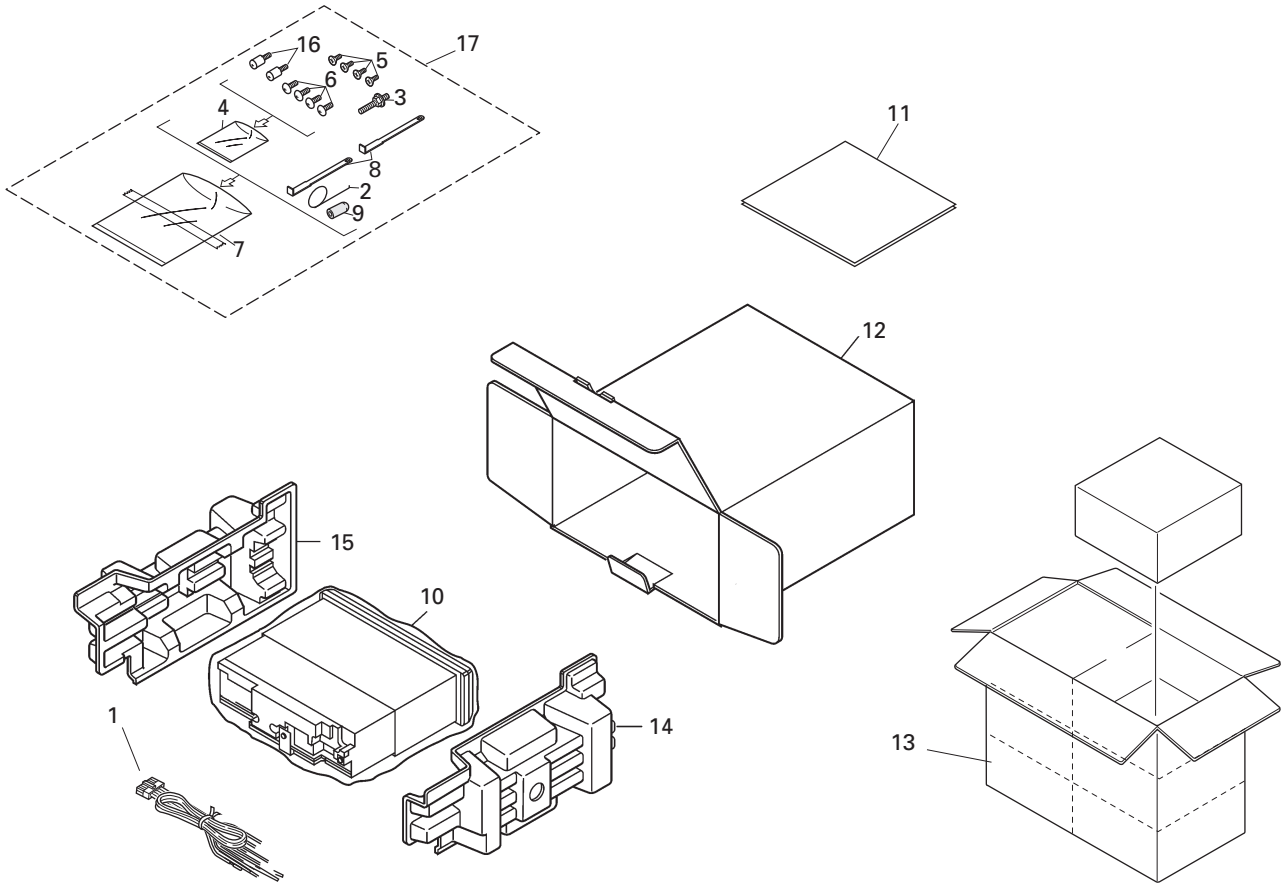

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDE7060
	2	Spring	CBH1650
	3	Screw	CBA1650
*	4	Polyethylene Bag	CEG-127
	5	Screw	CRZ50P090FTC
	6	Screw	TRZ50P080FTC
*	7	Polyethylene Bag	CEG-158
	8	Handle	CNC5395
	9	Bush	CNV3930
	10	Polyethylene Bag	CEG1173
	11-1	Owner's Manual	See Contrast table(2)
	11-2	Installation Manual	See Contrast table(2)
*	11-3	Card	ARY1048
	11-4	Caution Card	See Contrast table(2)
	12	Carton	See Contrast table(2)
	13	Contain Box	See Contrast table(2)
	14	Protector	CHP2663
	15	Protector	CHP2664
	16	Fixing Screw(M2x4)	CBA1488
	17	Accessory Assy	CEA3438

(2) CONTRAST TABLE


DEH-1600/XU/UC, DEH-16/XU/UC and DEH-6/XU/UC are constructed the same except for the following:

Mark	NO	Description	DEH-1600/XU/UC	DEH-16/XU/UC	DEH-6/XU/UC
	11-1	Owner's Manual	YRD5003	YRD5003	YRD5004
	11-2	Installation Manual	YRD5008	YRD5008	YRD5009
*	11-4	Caution Card	Not used	CRP1294	CRP1294
	12	Carton	YHG5004	YHG5005	YHG5006
	13	Contain Box	YHL5004	YHL5005	YHL5006

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-1600/XU/UC	YRD5003	English, French, Spanish
DEH-16/XU/UC	YRD5008	English, French, Spanish
DEH-6/XU/UC	YRD5004	English, French, Spanish
	YRD5009	English, French, Spanish

2.2 EXTERIOR(DEH-1600/XU/UC, DEH-16/XU/UC)

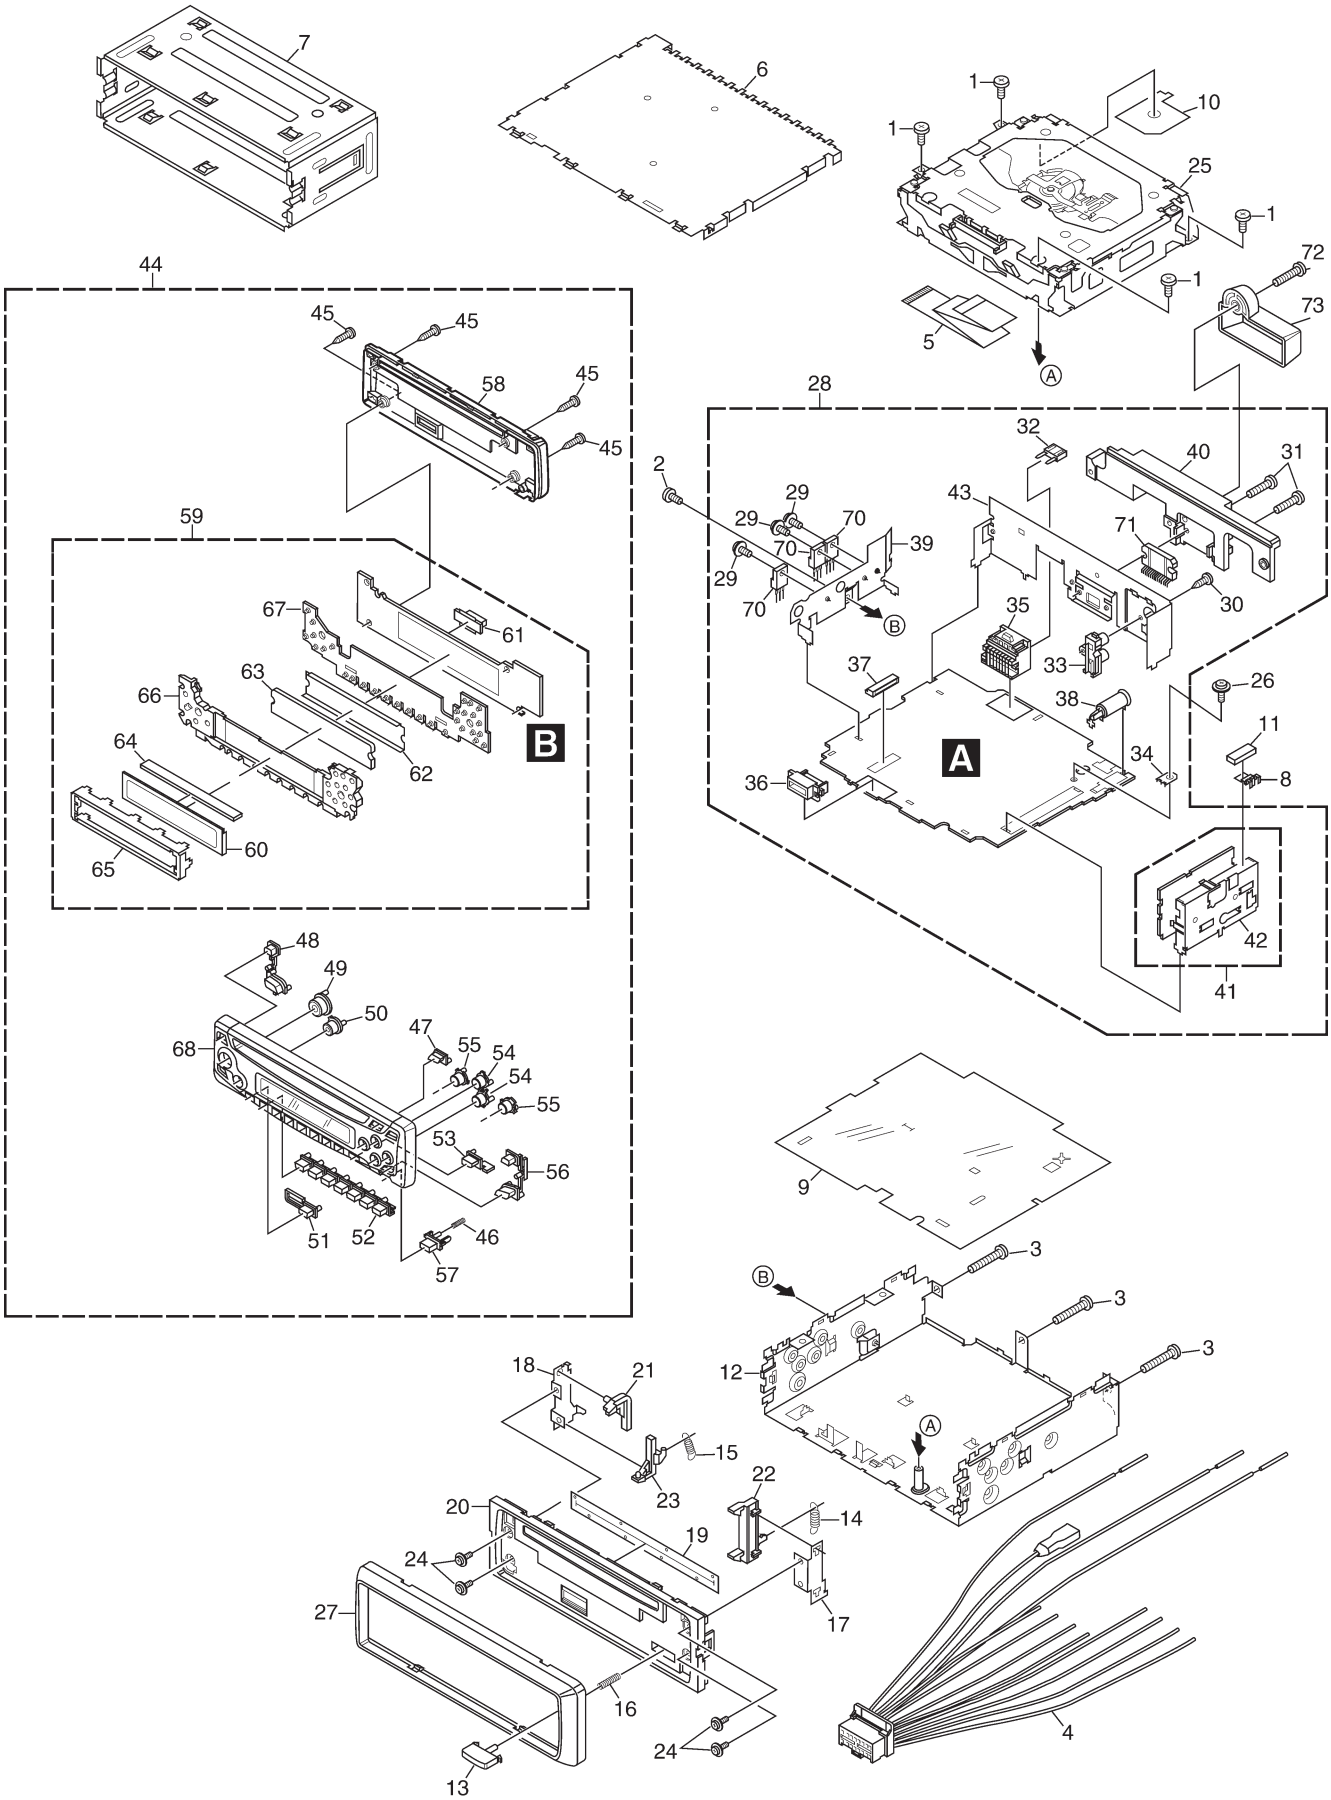

(1) EXTERIOR(DEH-1600/XU/UC, DEH-16/XU/UC) SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Screw	BSZ30P060FTC
	3	Screw	BSZ30P200FTC
	4	Cord Assy	CDE7060
	5	Cable	CDE7113
	6	Case	CNB2793
	7	Holder	CNC8659
	8	Earth Plate	CNC8915
	9	Insulator	CNM8059
	10	Insulator	CNM8174
	11	Cushion	CNM8890
	12	Chassis Unit	CXB9542
	13	Button	CAC4836
	14	Spring	CBH1835
	15	Spring	CBH2208
	16	Spring	CBH2367
	17	Bracket	CNC6791
	18	Holder	CNC8042
	19	Cover	CNM6276
	20	Panel	CNS7238
	21	Arm	CNV4692
	22	Arm	CNV4728
	23	Arm	CNV5576
	24	Screw	IMS20P030FZK
	25	CD Mechanism Module(S10.1)	CXK5602
	26	Screw	ISS26P055FTC
	27	Panel	YNS5029
	28	Tuner Amp Unit	See Contrast table(2)
	29	Screw	ASZ26P060FTC
	30	Screw	BPZ26P080FTC
	31	Screw	BSZ26P160FTC
	32	Fuse(10A)	CEK1208
	33	Pin Jack(CN352)	CKB1057
	34	Terminal(CN402)	CKF1059
	35	Plug(CN901)	CKM1376
	36	Connector(CN831)	CKS3581
	37	Connector(CN651)	CKS3835
	38	Antenna Jack(CN401)	CKX1056
	39	Holder	CND1328
	40	Heat Sink	CNR1668
	41	FM/AM Tuner Unit	CWE1646
	42	Holder	CND1054
	43	Holder	YNC5004
	44	Detach Grille Assy	See Contrast table(2)
	45	Screw	BPZ20P100FZK
	46	Spring	CBH2210
	47	Button(CD EJECT)	YAC5001
	48	Button(CLOCK, EQ)	YAC5004
	49	Button(UP)	YAC5005
	50	Button(DOWN)	YAC5008
	51	Button(SRC)	YAC5011
	52	Button(1-6)	YAC5012
	53	Button(LOUD)	YAC5014
	54	Button(UP, DOWN)	YAC5015
	55	Button(LEFT, RIGHT)	YAC5018
	56	Button(A, BAND)	YAC5021
	57	Button(DETACH)	YAC5023
	58	Cover	YNS5021
	59	Keyboard Unit	See Contrast table(2)
	60	LCD(LCD1801)	See Contrast table(2)
	61	Connector(CN1801)	CKS3580
	62	Sheet	CNM7932
	63	Lens	CNV7060
	64	Connector	CNV7369
	65	Holder	YNC5001
	66	Lighting Conductor	YNV5001
	67	Rubber	YNV5003
	68	Grille Unit	See Contrast table(2)
	69	•••••	
	70	Transistor(Q911, 921, 991)	2SD2396
	71	IC(IC302)	PAL007A
	72	Screw	See Contrast table(2)
	73	Holder	See Contrast table(2)

(2) CONTRAST TABLE

DEH-1600/XU/UC and DEH-16/XU/UC are constructed the same except for the following:

Mark	NO	Description	DEH-1600/XU/UC	DEH-16/XU/UC
	28	Tuner Amp Unit	YWM5005	YWM5013
	44	Detach Grille Assy	YXA5018	YXA5030
	59	Keyboard Unit	YWM5006	YWM5014
	60	LCD(LCD1801)	CAW1802	YAW5012
	68	Grille Unit	YXA5004	YXA5007
	72	Screw	Not used	BMZ40P140FTC
	73	Holder	Not used	CNV7619


2.3 EXTERIOR(DEH-6/XU/UC)

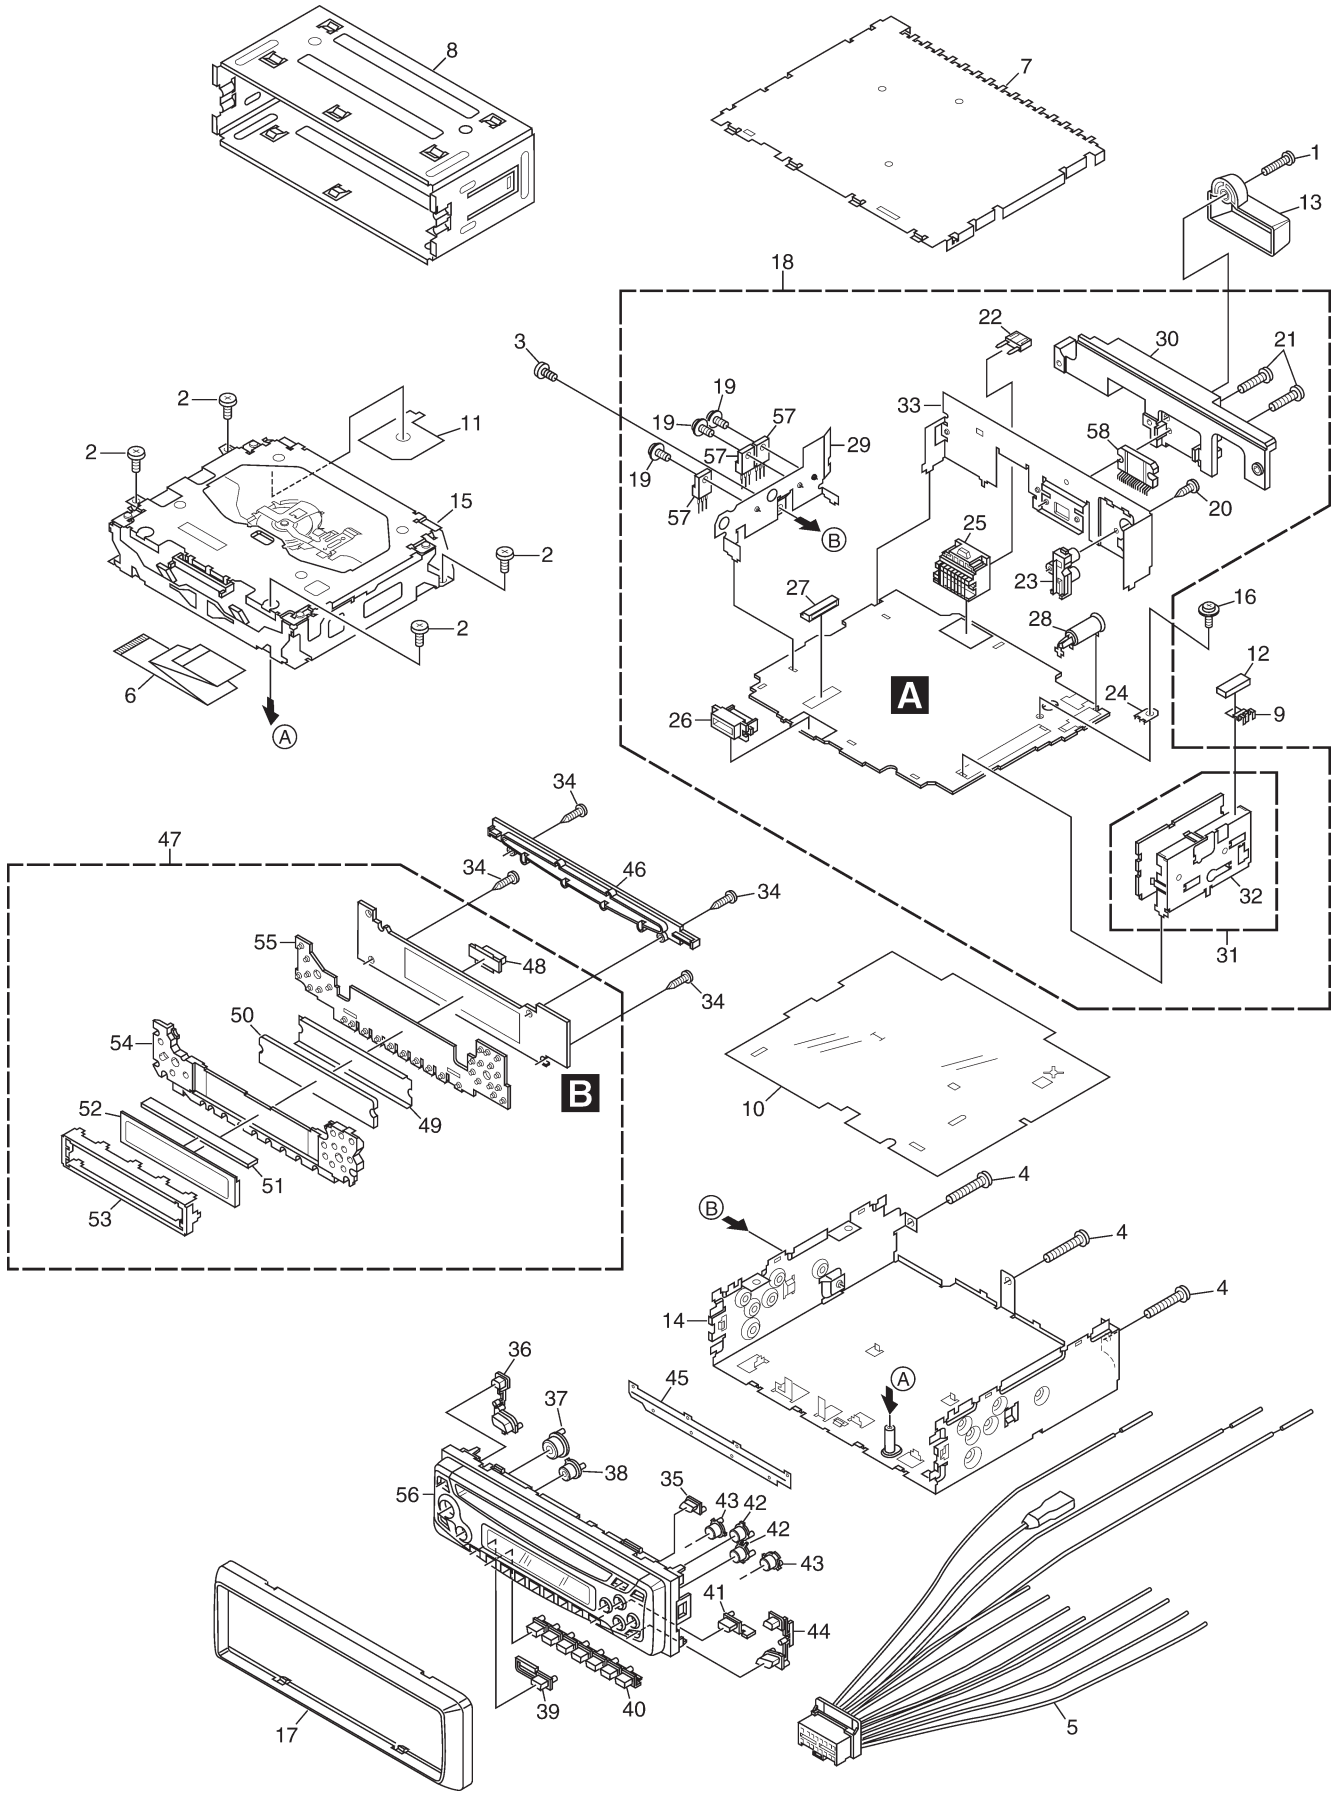

EXTERIOR(DEH-6/XU/UC) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ40P140FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Cord Assy	CDE7060
	6	Cable	CDE7113
	7	Case	CNB2793
	8	Holder	CNC8659
	9	Earth Plate	CNC8915
	10	Insulator	CNM8059
	11	Insulator	CNM8174
	12	Cushion	CNM8890
	13	Holder	CNV7619
	14	Chassis Unit	CXB9542
	15	CD Mechanism Module(S10.1)	CXK5602
	16	Screw	ISS26P055FTC
	17	Panel	YNS5022
	18	Tuner Amp Unit	YWM5015
	19	Screw	ASZ26P060FTC
	20	Screw	BPZ26P080FTC
	21	Screw	BSZ26P160FTC
	22	Fuse(10A)	CEK1208
	23	Pin Jack(CN352)	CKB1057
	24	Terminal(CN402)	CKF1059
	25	Plug(CN901)	CKM1376
	26	Connector(CN831)	CKS3581
	27	Connector(CN651)	CKS3835
	28	Antenna Jack(CN401)	CKX1056
	29	Holder	CND1328
	30	Heat Sink	CNR1668
	31	FM/AM Tuner Unit	CWE1646
	32	Holder	CND1054
	33	Holder	YNC5004
	34	Screw	BPZ20P080FTC
	35	Button(CD EJECT)	YAC5001
	36	Button(CLOCK, BTB)	YAC5002
	37	Button(UP)	YAC5006
	38	Button(DOWN)	YAC5009
	39	Button(SRC)	YAC5011
	40	Button(1-6)	YAC5012
	41	Button(LOUD)	YAC5014
	42	Button(UP, DOWN)	YAC5016
	43	Button(LEFT, RIGHT)	YAC5019
	44	Button(A, BAND)	YAC5021
	45	Cover	YNM5002
	46	Holder	YNV5002
	47	Keyboard Unit	YWM5016
	48	Connector(CN1801)	CKS3580
	49	Sheet	CNM7932
	50	Lens	CNV7060
	51	Connector	CNV7369
	52	LCD(LCD1801)	YAW5001
	53	Holder	YNC5001
	54	Lighting Conductor	YNV5001
	55	Rubber	YNV5003
	56	Grille Unit	YXA5006
	57	Transistor(Q911, 921, 991)	2SD2396
	58	IC(IC302)	TDA7384

2.4 CD MECHANISM MODULE

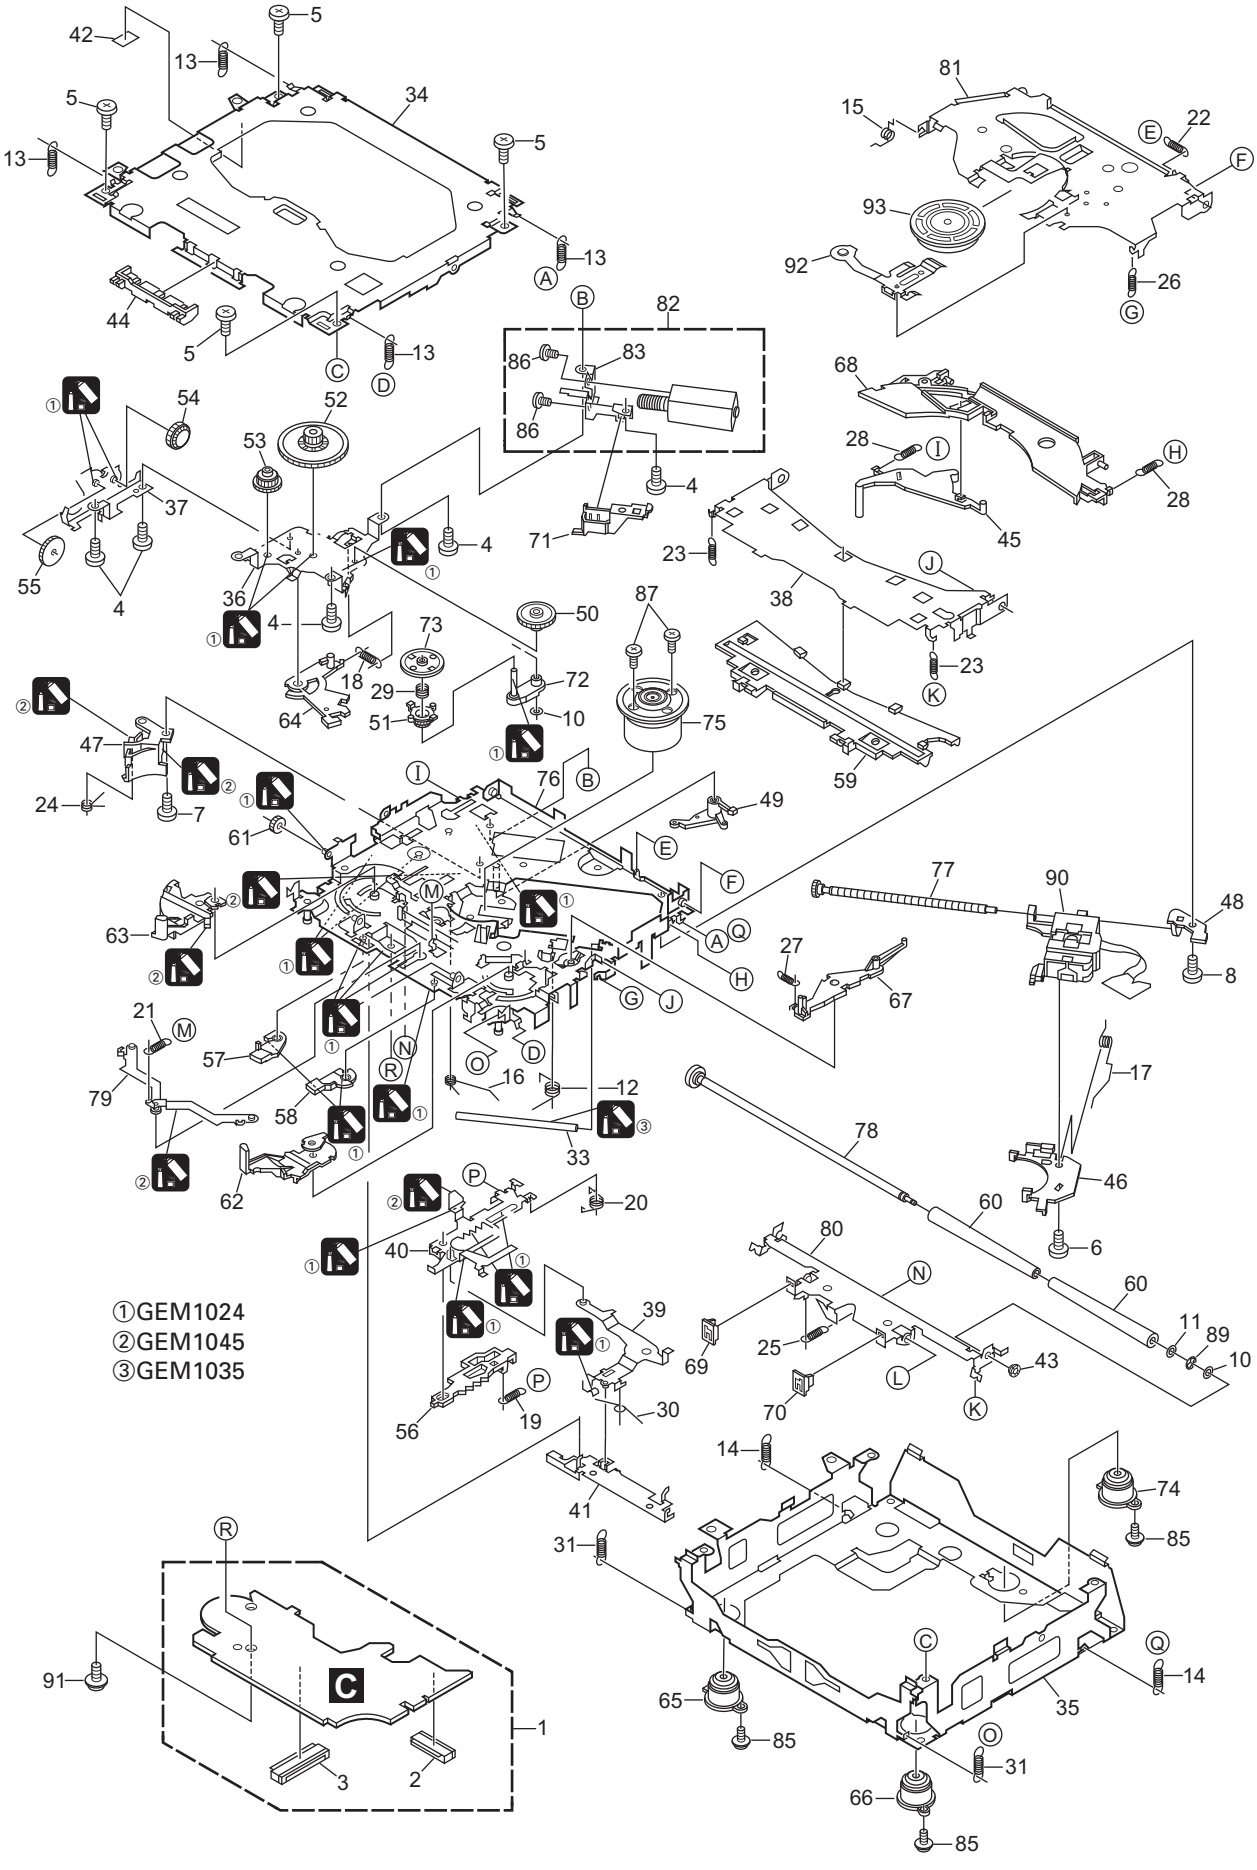

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	CD Core Unit(S10.1)	CWX2947
2	Connector(CN101)	CKS4182
3	Connector(CN701)	CKS4188
4	Screw	BMZ20P035FTC
5	Screw	BSZ20P040FTC
6	Screw(M2x4)	CBA1362
7	Screw(M2x3)	CBA1511
8	Screw(M2x3)	CBA1527
9	•••••	
10	Washer	CBF1038
11	Washer	CBF1060
12	Spring	CBH2390
13	Spring	CBH2606
14	Spring	CBH2607
15	Spring	CBH2608
16	Spring	CBH2609
17	Spring	CBH2610
18	Spring	CBH2735
19	Spring	CBH2612
20	Spring	CBH2613
21	Spring	CBH2614
22	Spring	CBH2615
23	Spring	CBH2616
24	Spring	CBH2617
25	Spring	CBH2620
26	Spring	CBH2621
27	Spring	CBH2641
28	Spring	CBH2642
29	Spring	CBH2643
30	Spring	CBH2659
31	Spring	CBH2688
32	•••••	
33	Shaft	CLA4441
34	Frame	CNC9962
35	Frame	CNC9963
36	Bracket	CNC9966
37	Bracket	CND1895
38	Arm	CNC9968
39	Arm	CND1909
40	Lever	CND2032
41	Lever	CNC9984
42	Sheet	CNM8134
43	Collar	CNV7798
44	Guide	CNV7799
45	Arm	CNV7800
46	Rack	CNV7199
47	Holder	CNV7201
48	Holder	CNV7202
49	Arm	CNV7203
50	Gear	CNV7207
51	Gear	CNV7208
52	Gear	CNV7209
53	Gear	CNV7210
54	Gear	CNV7211
55	Gear	CNV7212
56	Rack	CNV7214
57	Arm	CNV7215
58	Arm	CNV7216
59	Guide	CNV7217
60	Roller	CNV7218
61	Gear	CNV7219
62	Arm	CNV7221
63	Arm	CNV7220
64	Arm	CNV7222
65	Damper	CNV7313
66	Damper	CNV7314
67	Arm	CNV7341
68	Arm	CNV7342
69	Guide	CNV7360
70	Guide	CNV7361
71	Holder	CNV7437
72	Arm	CNV7805
73	Gear	CNV7595
74	Damper	CNV7618
75	Motor Unit(M1)	CXB6007
76	Chassis Unit	CXC2318
77	Screw Unit	CXB8729
78	Gear Unit	CXC2397
79	Arm Unit	CXC2316
80	Arm	CND1896
81	Arm	CND1894
82	Motor Unit(M2)	CXB8933
83	Bracket	CNC9985
84	•••••	
85	Screw(M2x5)	EBA1028
86	Screw	JFZ20P020FTC
87	Screw	JGZ17P022FTC
88	•••••	
89	Washer	YE20FTC
90	Pickup Unit(P10)(Service)	CXX1647
91	Screw	IMS26P030FTC
92	Spring	CBL1635
93	Clamper	CNV7197

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A

Unit Number:YWM5005(DEH-1600/XU/UC)
Unit Number:YWM5013(DEH-16/XU/UC)
Unit Number:YWM5015(DEH-6/XU/UC)
Unit Name:Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 151	IC(DEH-1600,16)	PML003AM
IC 151	IC(DEH-6)	PML010A
IC 302	IC(DEH-1600,16)	PAL007A
IC 302	IC(DEH-6)	TDA7384
IC 551	IC(DEH-6)	TPD1018F
IC 601	IC(DEH-1600,16)	PE5330C
IC 601	IC(DEH-6)	PE5331B
IC 652	IC	TC7SET08FU
IC 961	IC	S-80834CNY
IC 981	IC	NJM2391DL1-33
Q 352	Transistor	IMH3A
Q 452	Transistor	DTC124EU
Q 453	Transistor	DTA124EU
Q 801	Transistor	2SA1036K
Q 821	Transistor	2SA1036K
Q 822	Transistor	DTC114EU
Q 911	Transistor	2SD2396
Q 912	Transistor	IMD2A
Q 921	Transistor	2SD2396
Q 922	Transistor	2SB1243
Q 923	Transistor	DTC114EU
Q 931	Transistor	IMX1
Q 991	Transistor	2SD2396
Q 992	Transistor	IMD2A
D 452	Diode	DAN202U
D 551	Diode(DEH-6)	S5688G
D 552	Diode(DEH-6)	S5688G
D 831	Diode(DEH-1600,16)	1SS133
D 832	Diode(DEH-1600,16)	1SS133
D 833	Diode(DEH-1600,16)	1SS133
D 834	Diode(DEH-1600,16)	1SS133
D 835	Diode(DEH-1600,16)	1SS133
D 836	Diode(DEH-1600,16)	1SS133
D 901	Diode	S5688G
D 902	Diode	S5688G
D 911	Diode	S5688G
D 912	Diode	HZS6L(B2)
D 921	Diode	HZS9L(B3)
D 931	Diode	HZS7L(C3)
D 932	Diode	HZS7L(A1)
D 971	Diode(DEH-1600,16)	S5688G
D 972	Diode(DEH-1600,16)	S5688G
D 981	Diode	S5688G
D 982	Diode	S5688G
D 983	Diode	S5688G
D 991	Diode	HZS9L(B1)
L 151	Inductor	LAU2R2K
L 401	Inductor	LAU1R0K
L 402	Inductor	LAU1R0K
L 404	Ferri-Inductor	LAU4R7K
L 601	Inductor	LAU1R0K
L 801	Inductor	LAU2R2K
L 901	Choke Coil 600µH	CTH1280
X 601	Radiator 12.58291MHz	CSS1402
FU352	Fuse 3A	CEK1286
AR401	Surge Protector	DSP-201M-S00B
	FM/AM Tuner Unit	CWE1646
	Fuse 10A	CEK1208

RESISTORS

R 153		RS1/16S101J
R 154		RS1/16S101J
R 155		RS1/16S101J
R 156		RS1/16S101J
R 157		RAB4C102J
R 301		RD1/4PU153J
R 353		RS1/16S821J
R 354		RS1/16S821J
R 357		RS1/16S223J
R 358		RS1/16S223J
R 405		RS1/16S681J
R 407		RS1/16S681J
R 408		RS1/16S681J
R 409		RS1/16S681J
R 410		RS1/16S681J
R 414		RS1/16S0R0J
R 420		RS1/16S681J
R 421		RS1/16S473J
R 454		RS1/16S103J
R 455		RS1/16S153J
R 456		RS1/16S221J
R 457		RD1/4PU681J
R 601	(DEH-6)	RS1/16S473J
R 602	(DEH-1600,16)	RS1/16S473J
R 603		RS1/16S103J
R 604		RS1/16S103J

Circuit Symbol and No.		Part No.
R 605		RS1/16S221J
R 606		RS1/16S104J
R 607		RD1/4PU222J
R 608		RS1/16S0R0J
R 609		RD1/4PU473J
R 610		RD1/4PU681J
R 611		RS1/16S473J
R 633		RS1/16S104J
R 653		RS1/16S104J
R 654		RS1/16S102J
R 661		RS1/16S221J
R 801		RS1/16S153J
R 802		RS1/16S153J
R 803		RS1/16S222J
R 821		RD1/4PU222J
R 823		RS1/16S103J
R 833		RD1/4PU222J
R 834		RD1/4PU222J
R 836	(DEH-1600,16)	RD1/4PU104J
R 837		RD1/4PU103J
R 838		RD1/4PU102J
R 841		RS1/16S1R0J
R 848		RD1/4PU102J
R 851		RD1/4PU102J
R 911		RS1/16S223J
R 912		RD1/4PU152J
R 921		RS1/16S0R0J
R 923		RD1/4PU681J
R 924		RD1/4PU122J
R 925		RS1/16S103J
R 931		RS1/16S473J
R 932		RS1/16S104J
R 933		RD1/4PU102J
R 934		RS1/16S472J
R 935		RS1/16S473J
R 936		RS1/16S223J
R 940		RS1/16S104J
R 941		RS1/16S104J
R 955		RS1/16S473J
R 961		RS1/16S102J
R 962		RS1/16S822J
R 971	(DEH-6)	RS1/16S0R0J
R 981		RD1/4PU1R8J
R 991		RD1/4PU221J
R 992		RD1/4PU221J
R 993		RS1/16S222J
R 994		RS1/16S472J

CAPACITORS

Circuit Symbol and No.		Part No.
C 151		CKSRYB224K16
C 152		CKSRYB224K16
C 153		CKSRYB105K10
C 154		CKSRYB105K10
C 155		CEJQ4R7M35
C 156		CEJQ4R7M35
C 157	(DEH-1600,16)	CKSRYB153K50
C 158	(DEH-1600,16)	CKSRYB153K50
C 161		CCSRCH100D50
C 162		CCSRCH100D50
C 163		CCSRCH100D50
C 164		CCSRCH100D50
C 165		CKSRYB104K16
C 166		CEJQ470M10
C 167		CEJQ100M16
C 301		CFTNA224J50
C 302		CFTNA224J50
C 303		CFTNA224J50
C 304		CFTNA224J50
C 309		CKSQYB225K10
C 310		CKSQYB225K10
C 353		CEJQ2R2M50
C 311	(DEH-6)	CEJQ2R2M50
C 312		CEJQ100M16
C 313		CKSRYB104K16
C 353		CEJQ2R2M50
C 354		CEJQ2R2M50
C 401		CKSRYB103K50
C 402		CKSRYB103K50
C 403		CEJQ470M6R3
C 404		CEJQ101M10
C 405		CKSRYB103K50
C 420		CCSRCH470J50
C 451		CEJQ330M10
C 551	(DEH-6)	CKSQYB103K50
C 552	(DEH-6)	CKSQYB103K50
C 601		CKSRYB103K50
C 604		CCSRCH200J50
C 605		CCSRCH200J50
C 610		CEJQ4R7M35
C 611		CKSRYB224K16
C 654		CKSRYB104K16
C 801		CKSRYB104K16
C 901	3300µF/16V	CCH1494
C 911		CEJQ470M10
C 912		CKSRYB103K50
C 913	470µF/16V	CCH1331
C 921	330µF/16V	CCH1326
C 922		CEJQ101M16
C 923		CKSRYB103K50
C 961		CKSRYB473K50
C 963		CEJQ100M16
C 981		CKSYB475K10
C 982		CKSRYB103K50
C 983		CEJQ220M16
C 991		CKSRYB473K50
C 992		CEJQ101M10

B

Unit Number:YWM5006(DEH-1600/XU/UC)
Unit Number:YWM5016(DEH-6/XU/UC)
Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1801	IC	PD6340A
D 1801	Diode (DEH-1600)	MA152WK
D 1802	Diode (DEH-1600)	MA152WA
D 1803	LED	SML-310PT
D 1804	LED	SML-310PT

Circuit Symbol and No.		Part No.
D 1805	LED	SML-310PT
D 1806	LED	SML-310PT
D 1807	LED	SML-310PT
D 1808	LED	SML-310PT
D 1809	LED	SML-310PT
D 1810	LED	CL-490S-WF-SD
D 1811	LED	CL-490S-WF-SD
X 1801	Ceramic Resonator 5.00MHz	CSS1547
IL 1801	Lamp 40mA,14V	CEL1651
IL 1802	Lamp 40mA,14V	CEL1651
LCD1801	LCD(DEH-1600)	CAW1802
LCD1801	LCD(DEH-6)	YAW5001

RESISTORS

R 1801		RS1/16S222J
R 1802		RS1/16S222J
R 1803		RS1/16S471J
R 1804		RS1/16S471J
R 1805		RS1/16S471J
R 1806		RS1/16S471J
R 1807		RS1/16S151J
R 1808		RS1/16S181J
R 1809		RS1/16S181J
R 1810		RS1/16S181J
R 1811		RS1/16S151J
R 1812		RS1/16S181J
R 1813		RS1/16S181J
R 1814		RS1/16S181J
R 1815		RS1/16S151J
R 1816		RS1/16S151J
R 1817		RS1/16S151J
R 1818		RS1/16S151J
R 1819		RS1/16S131J
R 1820		RS1/16S131J

CAPACITORS

C 1801		CKSRYB103K50
C 1811		CKSRYF104Z25
C 1812		CKSRYF104Z25

B
Unit Number:YWM5014(DEH-16/XU/UC)
Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1801	IC	PD6340A
D 1801	Diode	MA152WK
D 1802	Diode	MA152WA
D 1803	LED	SML-310VT
D 1804	LED	SML-310VT
D 1805	LED	SML-310VT
D 1806	LED	SML-310VT
D 1807	LED	SML-310VT
D 1808	LED	SML-310VT
D 1809	LED	SML-310VT
D 1810	LED	CL-490S-WF-SD
D 1811	LED	CL-490S-WF-SD
X 1801	Ceramic Resonator 5.00MHz	CSS1547
IL 1801	Lamp 40mA,14V	CEL1662
IL 1802	Lamp 40mA,14V	CEL1662
LCD1801	LCD	YAW5012

RESISTORS

R 1801		RS1/16S222J
R 1802		RS1/16S222J
R 1803		RS1/16S471J
R 1804		RS1/16S471J
R 1805		RS1/16S471J
R 1806		RS1/16S471J
R 1807		RS1/16S151J
R 1808		RS1/16S181J
R 1809		RS1/16S181J
R 1810		RS1/16S181J
R 1811		RS1/16S151J
R 1812		RS1/16S181J
R 1813		RS1/16S181J
R 1814		RS1/16S181J
R 1815		RS1/16S151J
R 1816		RS1/16S181J
R 1817		RS1/16S181J
R 1818		RS1/16S181J
R 1819		RS1/16S131J
R 1820		RS1/16S131J

CAPACITORS

C 1801		CKSRYB103K50
C 1811		CKSRYF104Z25
C 1812		CKSRYF104Z25

C
Unit Number:CWX2947
Unit Name:CD CORE UNIT(S10.1)

MISCELLANEOUS

IC 201	IC	UPD63712AGC
IC 301	IC	BA5835FP
IC 701	IC	NJM2391DL1-33
Q 101	Transistor	2SB1132
D 101	Diode	1SS355
D 701	Diode	1SR154-400
X 201	Ceramic Resonator 16.934MHz	CSS1603
S 901	Switch(HOME)	CSN1051
S 902	Switch(CLAMP)	CSN1051
S 903	Spring Switch(DSCSNS)	CSN1052
S 904	Switch(12EJ)	CSN1051
S 905	Switch(8EJ)	CSN1051

RESISTORS

R 101		RS1/10S1R5J
R 102		RS1/10S1R5J
R 103		RS1/10S1R5J
R 104		RS1/10S1R5J
R 105		RS1/10S1R5J
R 201		RS1/16S102J
R 202		RS1/16S1002D
R 203		RS1/16S1002D

Circuit Symbol and No.		Part No.
R 204		RS1/16S1002D
R 205		RS1/16S1002D
R 206		RS1/16S1002D
R 207		RS1/16S1002D
R 208		RS1/16S1002D
R 209		RS1/16S1002D
R 214		RS1/16S103J
R 215		RS1/16S393J
R 216		RS1/16S122J
R 217		RS1/16S562J
R 218		RS1/16S472J
R 234		RS1/16S0R0J
R 235		RS1/16S103J
R 236		RS1/16S103J
R 301		RS1/16S183J
R 302		RS1/16S822J
R 303		RS1/16S183J
R 304		RS1/16S822J
R 305		RS1/16S183J
R 306		RS1/16S183J
R 307		RS1/16S183J
R 308		RS1/16S183J
R 501		RS1/16S102J
R 503		RS1/16S102J
R 505		RS1/16S102J
R 506		RS1/16S221J
R 507		RS1/16S221J
R 508		RS1/16S221J
R 509		RS1/16S221J
R 601		RS1/16S101J
R 602		RS1/16S101J
R 603		RS1/16S0R0J
R 901		RS1/16S104J
R 902		RS1/16S473J
R 903		RS1/16S273J

CAPACITORS

C 101		CKSRYB104K16
C 102		CKSRYB104K16
C 103	100µF/16V	CCH1504
C 104	47µF/6.3V	CCH1506
C 108		CKSRYB104K16
C 109		CKSRYB104K16
C 201		CKSRYB104K16
C 202		CKSRYB471K50
C 205	22µF/6.3V	CCH1507
C 206		CKSRYB103K25
C 207		CKSRYB104K16
C 209		CKSRYB104K16
C 210		CKSRYB104K16
C 211		CKSRYB104K16
C 212		CKSRYB104K16
C 213		CKSRYB332K50
C 214		CKSRYB473K25
C 215		CKSRYB104K16
C 216		CKSRYB103K25
C 217		CCSRCH560J50
C 218		CCSRCH5R0C50
C 219		CKSRYB104K16

Circuit Symbol and No.		Part No.
C 220		CKSRYB104K16
C 221		CKSRYB104K16
C 222		CKSRYB103K25
C 223		CCSRCH680J50
C 224		CCSRCH470J50
C 225		CKSRYB682K50
C 231		CKSRYB102K50
C 232		CKSRYB102K50
C 301	100µF/16V	CCH1504
C 302		CCSRCH221J50
C 303		CCSRCH221J50
C 304		CKSRYB472K50
C 305		CKSRYB103K25
C 306		CKSRYB104K16
C 501		CKSRYB103K25
C 502		CKSRYB103K25
C 702	100µF/16V	CCH1504
C 703		CKSRYB104K16
C 705	10µF/6.3V	CCH1470

Miscellaneous Parts List

	Pickup Unit(P10)(Service)	CXX1647
M 1	Motor Unit(SPINDLE)	CXB6007
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933