


9. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 • The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.
 Therefore, when replacing, be sure to use parts of identical designation.
 • Screw adjacent to ▽ mark on the product are used for disassembly.
 • For the applying amount of lubricants or glue, follow the instructions in this manual.
 (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

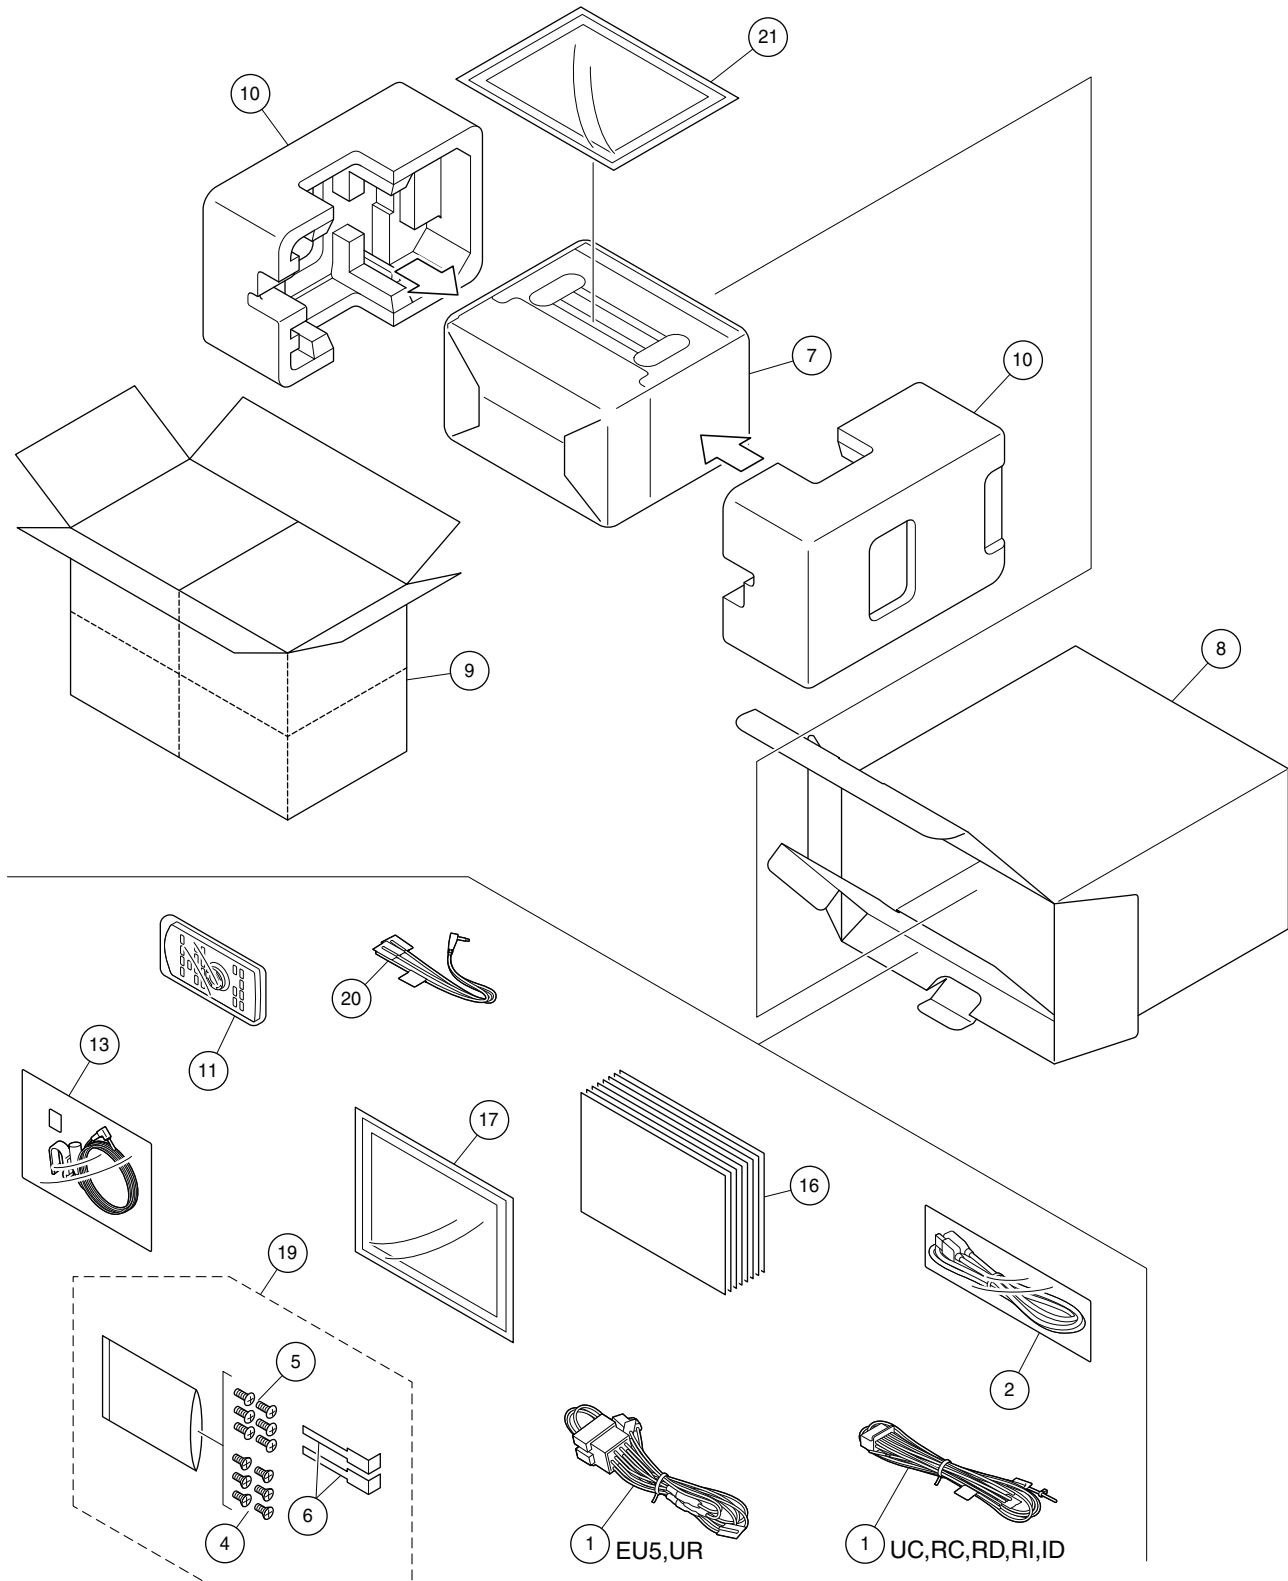

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	See Contrast table (2)	15	*****	
2	USB Extended Cable	CDP1587			
3	*****		16-1	Owner's Manual	See Contrast table (2)
4	Screw (M5 x 9)	See Contrast table (2)	16-2	Quick Start Guide	See Contrast table (2)
5	Screw (M5 x 9)	CBA2384	16-3	Installation Manual	See Contrast table (2)
			16-4	*****	
6	Handle	See Contrast table (2)	16-5	*****	
7	Cover	See Contrast table (2)			
8	Unit Box	See Contrast table (2)	* 16-6	Warranty Card	See Contrast table (2)
9	Contain Box	See Contrast table (2)	17	Panel	See Contrast table (2)
10	Protector	See Contrast table (2)	18	*****	
			19	Accessory Assy	See Contrast table (2)
11	Card Remote Control Unit	See Contrast table (2)	20	Cord Assy	See Contrast table (2)
12	*****				
13	Microphone Assy (3 m)	CPM1113	21	Panel	See Contrast table (2)
14	*****				

(2) CONTRAST TABLE

AVH-1550NEX/XNUC, AVH-1500NEX/XNUC, AVH-Z3200DAB/XNEU5, AVH-Z2200BT/XEVEU5, AVH-Z2200BT/XNUR, AVH-Z2250BT/XNRC, AVH-Z2250BT/XNRD, AVH-Z2250BT/XNRI and AVH-Z2290BT/XNID are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>AVH-1550NEX/XNUC</u>	<u>AVH-1500NEX/XNUC</u>	<u>AVH-Z3200DAB/XNEU5</u>
	1	Cord Assy	CDP1665	CDP1665	CDP1670
	4	Screw (M5 x 9)	CBA2383	CBA2383	CBA2383
	6	Handle	Not used	Not used	CND6289
	7	Cover	CEG1359	CEG1359	CEG1356
	8	Unit Box	QHG4493	QHG4486	QHG4485
	9	Contain Box	QHL4493	QHL4486	QHL4485
	10	Protector	CHP4863	CHP4863	CHP4864
	11	Card Remote Control Unit	CXE5116	Not used	Not used
	16-1	Owner's Manual	See Contents of Web IM (3)	See Contents of Web IM (3)	See Contents of Web IM (3)
	16-2	Quick Start Guide	QRD3665	QRD3665	QRD3664
*	16-3	Installation Manual	QRD3675	QRD3675	QRD3674
	16-6	Warranty Card	QRY3001	QRY3001	CRY1376
	17	Panel	Not used	Not used	Not used
	19	Accessory Assy	*CEC7756	*CEC7756	*CED2427 (Screw Assy)
	20	Cord Assy	Not used	Not used	Not used
	21	Panel	Not used	Not used	Not used

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>AVH-Z2200BT/XEVEU5</u>	<u>AVH-Z2200BT/XNUR</u>	<u>AVH-Z2250BT/XNRC</u>
	1	Cord Assy	CDP1670	CDP1670	CDP1665
	4	Screw (M5 x 9)	CBA2383	CBA2383	Not used
	6	Handle	CND6289	CND6289	Not used
	7	Cover	CEG1356	CEG1356	CEG1356
	8	Unit Box	QHG4487	QHG4492	QHG4489
	9	Contain Box	QHL4487	QHL4492	QHL4489
	10	Protector	CHP4864	CHP4864	CHP4863
	11	Card Remote Control Unit	Not used	Not used	CXE5116
	16-1	Owner's Manual	See Contents of Web IM (3)	QRB3807	QRD3686
	16-2	Quick Start Guide	QRD3664	Not used	Not used
	16-3	Installation Manual	QRD3674	Not used	Not used
*	16-6	Warranty Card	CRY1376	CRY1376	Not used
	17	Panel	Not used	Not used	Not used
	19	Accessory Assy	QEA3354	*CED2427 (Screw Assy)	*CEC7757
	20	Cord Assy	Not used	Not used	CDP1805
	21	Panel	Not used	Not used	CNS9475

Mark	No.	Description	AVH-Z2250BT/XNRD	AVH-Z2250BT/XNRI	AVH-Z2290BT/XNID
A	1	Cord Assy	CDP1665	CDP1665	CDP1665
	4	Screw (M5 x 9)	Not used	Not used	Not used
	6	Handle	Not used	CND6289	Not used
	7	Cover	CEG1356	CEG1356	CEG1356
	8	Unit Box	QHG4490	QHG4488	QHG4491
	9	Contain Box	QHL4490	QHL4488	QHL4491
	10	Protector	CHP4863	CHP4864	CHP4863
	11	Card Remote Control Unit	CXE5116	CXE5116	CXE5116
	16-1	Owner's Manual	QRD3687	QRD3685	See Contents of Web IM (3)
	16-2	Quick Start Guide	Not used	Not used	Not used
B	16-3	Installation Manual	Not used	Not used	QRB3813
	16-6	Warranty Card	Not used	Not used	CRY1304
	17	Panel	Not used	CNS9475	Not used
	19	Accessory Assy	*CEC7757	*CED2428 (Screw Assy)	*CEC7757
	20	Cord Assy	Not used	CDP1805	Not used
	21	Panel	CNS9475	Not used	Not used

Owner's Manual, Quick Start Guide, Installation Manual

Part No.	Language
QRB3807	Russian
QRB3813	English
QRD3664	English, French, Italian, Spanish (Espanol), German, Dutch
QRD3665	English, French, Spanish (Espanol)
QRD3674	English, French, Italian, Spanish (Espanol), German, Dutch
QRD3675	English, French, Spanish (Espanol)
QRD3685	English, Arabic, Persian
QRD3686	English, Traditional Chinese, Thai, Indonesian
QRD3687	English, Spanish (Espanol), Portuguese (B)


(3) CONTENTS OF Web IM

Part No.	Language
*OPM_AVH1500NEXUC_en_A	(UC model) English
*OPM_AVH1500NEXUC_frca_A	(UC model) French
*OPM_AVH1500NEXUC_esmx_A	(UC model) Spanish (Espanol)
*OPM_AVHZ3200DABEU5_engb_A	(EU5 model) English
*OPM_AVHZ3200DABEU5_fr_A	(EU5 model) French
*OPM_AVHZ3200DABEU5_it_A	(EU5 model) Italian
*OPM_AVHZ3200DABEU5_es_A	(EU5 model) Spanish (Espanol)
*OPM_AVHZ3200DABEU5_de_A	(EU5 model) German
*OPM_AVHZ3200DABEU5_nl_A	(EU5 model) Dutch
*OPM_AVHZ3200DABEU5_sv_A	(EU5 model) Swedish
*OPM_AVHZ3200DABEU5_no_A	(EU5 model) Norwegian
*OPM_AVHZ3200DABEU5_fi_A	(EU5 model) Finnish
*OPM_AVHZ3200DABEU5_da_A	(EU5 model) Danish
*OPM_AVHZ3200DABEU5_pt_A	(EU5 model) Portuguese
*OPM_AVHZ3200DABEU5_el_A	(EU5 model) Greek
*OPM_AVHZ3200DABEU5_tr_A	(EU5 model) Turkish
*OPM_AVHZ2290BTID_engb_A	(ID model) English

Above operation manuals are supplied in PDF files by the WEB.

Regarding the availability of paper manual, contact Pioneer Service representative in your region.

9.2 EXTERIOR (1)

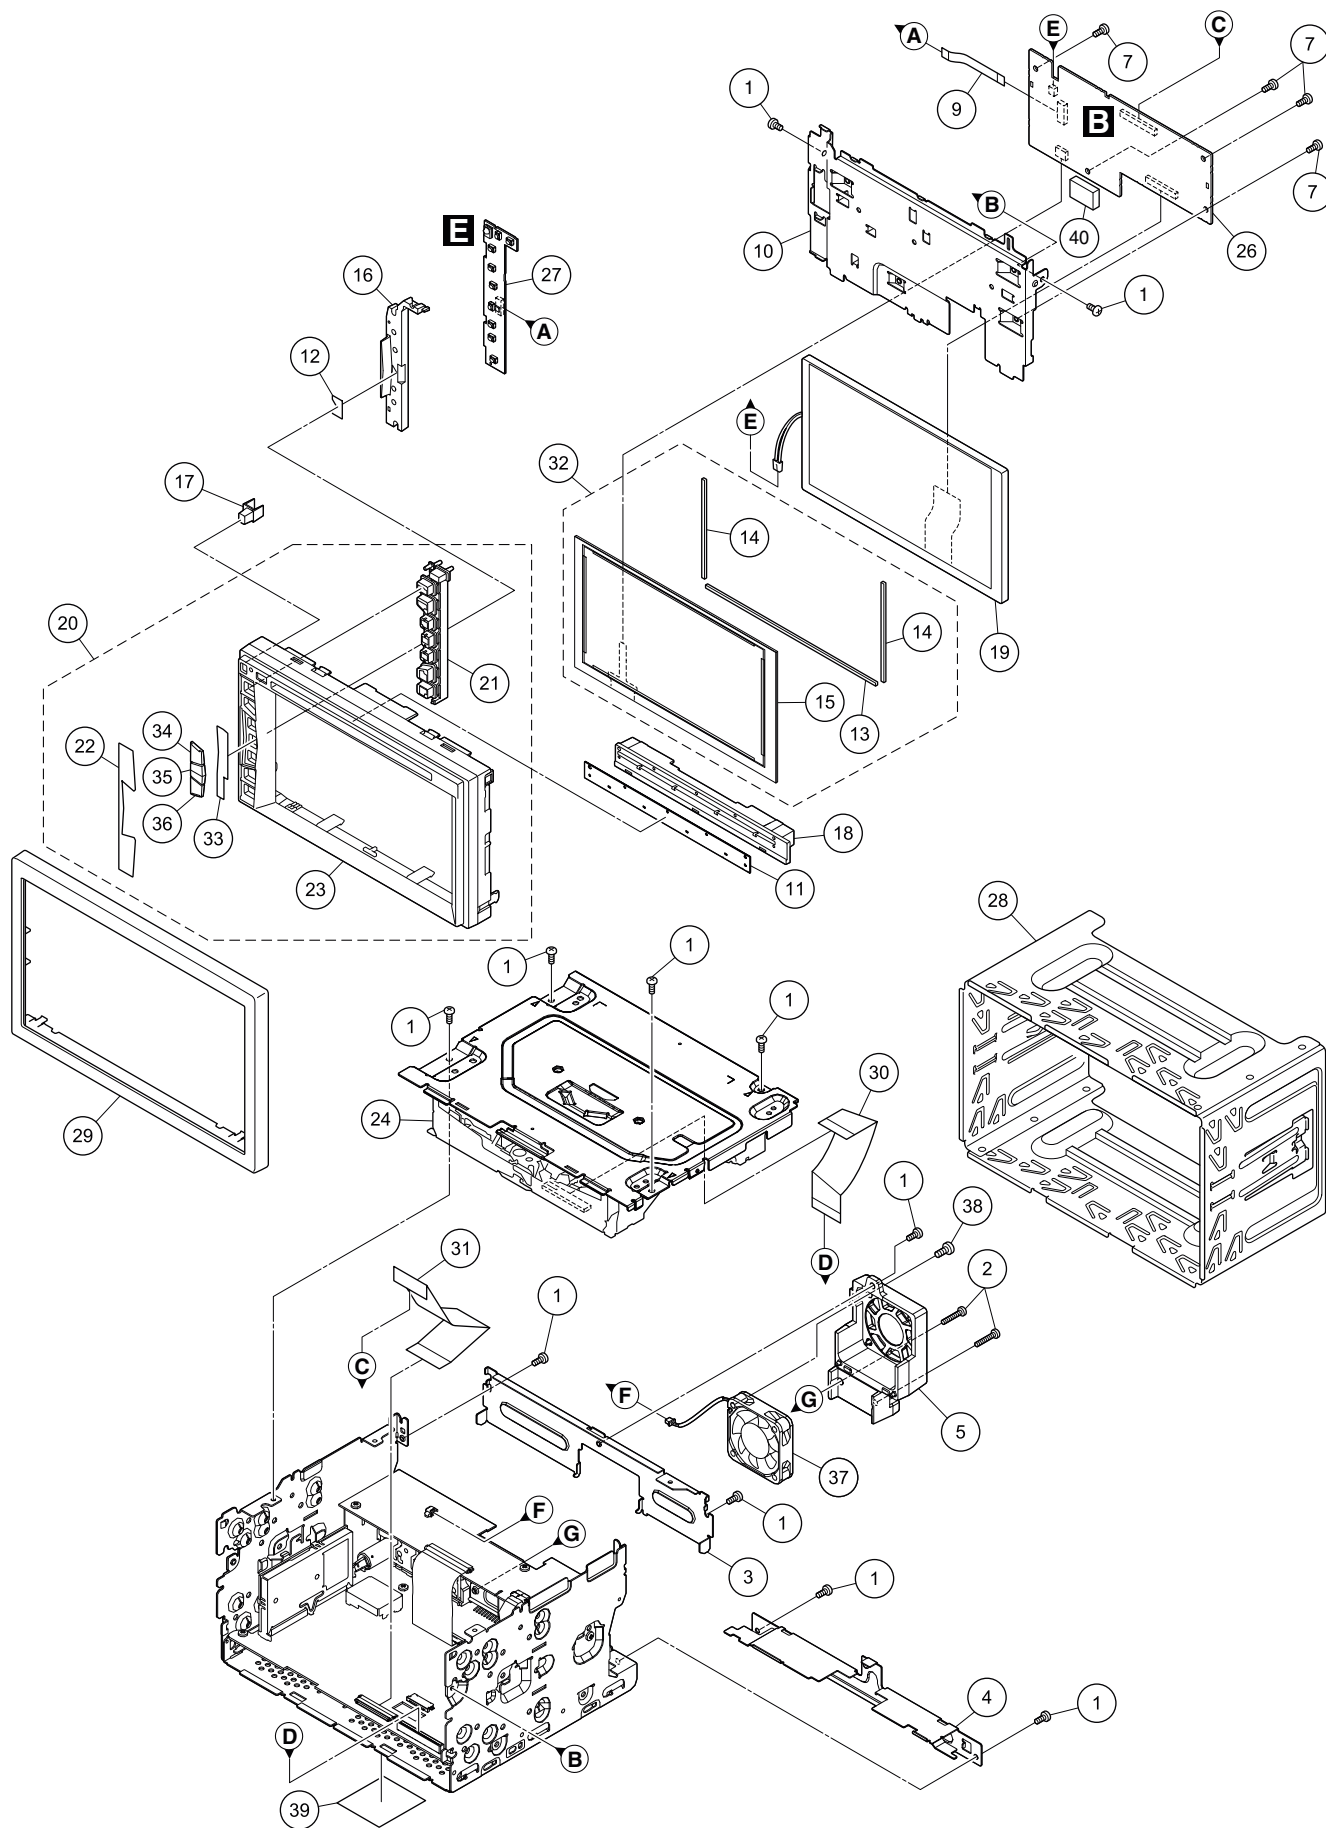

(1) EXTERIOR (1) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 Screw	BSZ26P060FTC	*	21 Button (VOL)	CAI4881
	2 Screw	BSZ26P160FTC	*	22 Plate	CNN5359
	3 Holder	CND7757	*	23 Grille	See Contrast table (2)
	4 Holder	See Contrast table (2)		24 DVD Mechanism Module (LS2.5)	See Contrast table (2)
	5 Heat Sink	CNR2197		25	
	6			26 Service Unit (Monitor)	See Contrast table (2)
	7 Screw	BSZ26P060FTC		27 Service Unit (Keyboard)	QXX3221
	8			28 Holder	See Contrast table (2)
	9 FFC	See Contrast table (2)		29 Panel	See Contrast table (2)
	10 Holder	CND7744		30 FFC	CDD1069
B	11 Cover	CNN4865		31 FFC	See Contrast table (2)
	12 Sheet	CNN5425		32 Touch Panel Unit	CXE8371
	13 Cushion	CNN4273	*	33 DS Tape	CNN5395
	14 Cushion	CNN4964	*	34 Button (MODE)	CAI4878
	15 Touch Panel	CSX1273	*	35 Button (HOME)	CAI4879
	16 Lighting Conductor	CNW3804	*	36 Button (MENU)	CAI4880
	17 Lighting Conductor	CNW3805		37 Motor	CXM1449
	18 Holder	CNW3806		38 Screw	BPZ30P080FTC
	19 TFT LCD	CWX4885		39 Sheet	CNN4831
	20 Grille Assy	See Contrast table (2)		40 Gasket	See Contrast table (2)

(2) CONTRAST TABLE

AVH-1550NEX/XNUC, AVH-1500NEX/XNUC, AVH-Z3200DAB/XNEU5, AVH-Z2200BT/XEVEU5, AVH-Z2200BT/XNUR, AVH-Z2250BT/XNRC, AVH-Z2250BT/XNRD, AVH-Z2250BT/XNRI and AVH-Z2290BT/XNID are constructed the same except for the following:


Mark	No.	Description	AVH-1550NEX/XNUC	AVH-1500NEX/XNUC	AVH-Z3200DAB/XNEU5
D	4	Holder	CND7759	CND7759	CND7758
	9	FFC	CDD1226	CDD1226	CDD1226
	20	Grille Assy	QXA5957	QXA5952	QXA5951
	23	Grille	QNS4397	QNS4392	QNS4391
	24	DVD Mechanism Module (LS2.5)	CXK8100	CXK8100	CXK8100
	26	Service Unit (Monitor)	QXX3319	QXX3318	QXX3317
	28	Holder	Not used	Not used	CND7102
	29	Panel	Not used	Not used	CNU2645
	31	FFC	CDD1225	CDD1225	CDD1239
	40	Gasket	Not used	Not used	Not used

Mark	No.	Description	AVH-Z2200BT/XEVEU5	AVH-Z2200BT/XNUR	AVH-Z2250BT/XNRC
E	4	Holder	CND7758	CND7758	CND7758
	9	FFC	CDD1226	CDD1240	CDD1240
	20	Grille Assy	QXA5953	QXA5956	QXA5954
	23	Grille	QNS4393	QNS4396	QNS4394
	24	DVD Mechanism Module (LS2.5)	CXK8110	CXK8100	CXK8100
	26	Service Unit (Monitor)	QXX3320	QXX3320	QXX3320
	28	Holder	CND7102	CND7102	Not used
	29	Panel	CNU2645	CNU2645	Not used
	31	FFC	CDD1225	CDD1239	CDD1239
	40	Gasket	Not used	Not used	CNN5260

Mark	No.	Description	AVH-Z2250BT/XNRD	AVH-Z2250BT/XNRI	AVH-Z2290BT/XNID
*	4	Holder	CND7758	CND7758	CND7759
	9	FFC	CDD1240	CDD1240	CDD1240
	20	Grille Assy	QXA5954	QXA5954	QXA5955
	23	Grille	QNS4394	QNS4394	QNS4395
	24	DVD Mechanism Module (LS2.5)	CXK8100	CXK8100	CXK8100
	26	Service Unit (Monitor)	QXX3320	QXX3320	QXX3320
	28	Holder	Not used	CND7102	Not used
	29	Panel	Not used	CNU2645	Not used
	31	FFC	CDD1239	CDD1239	CDD1239
	40	Gasket	Not used	Not used	Not used

4

F

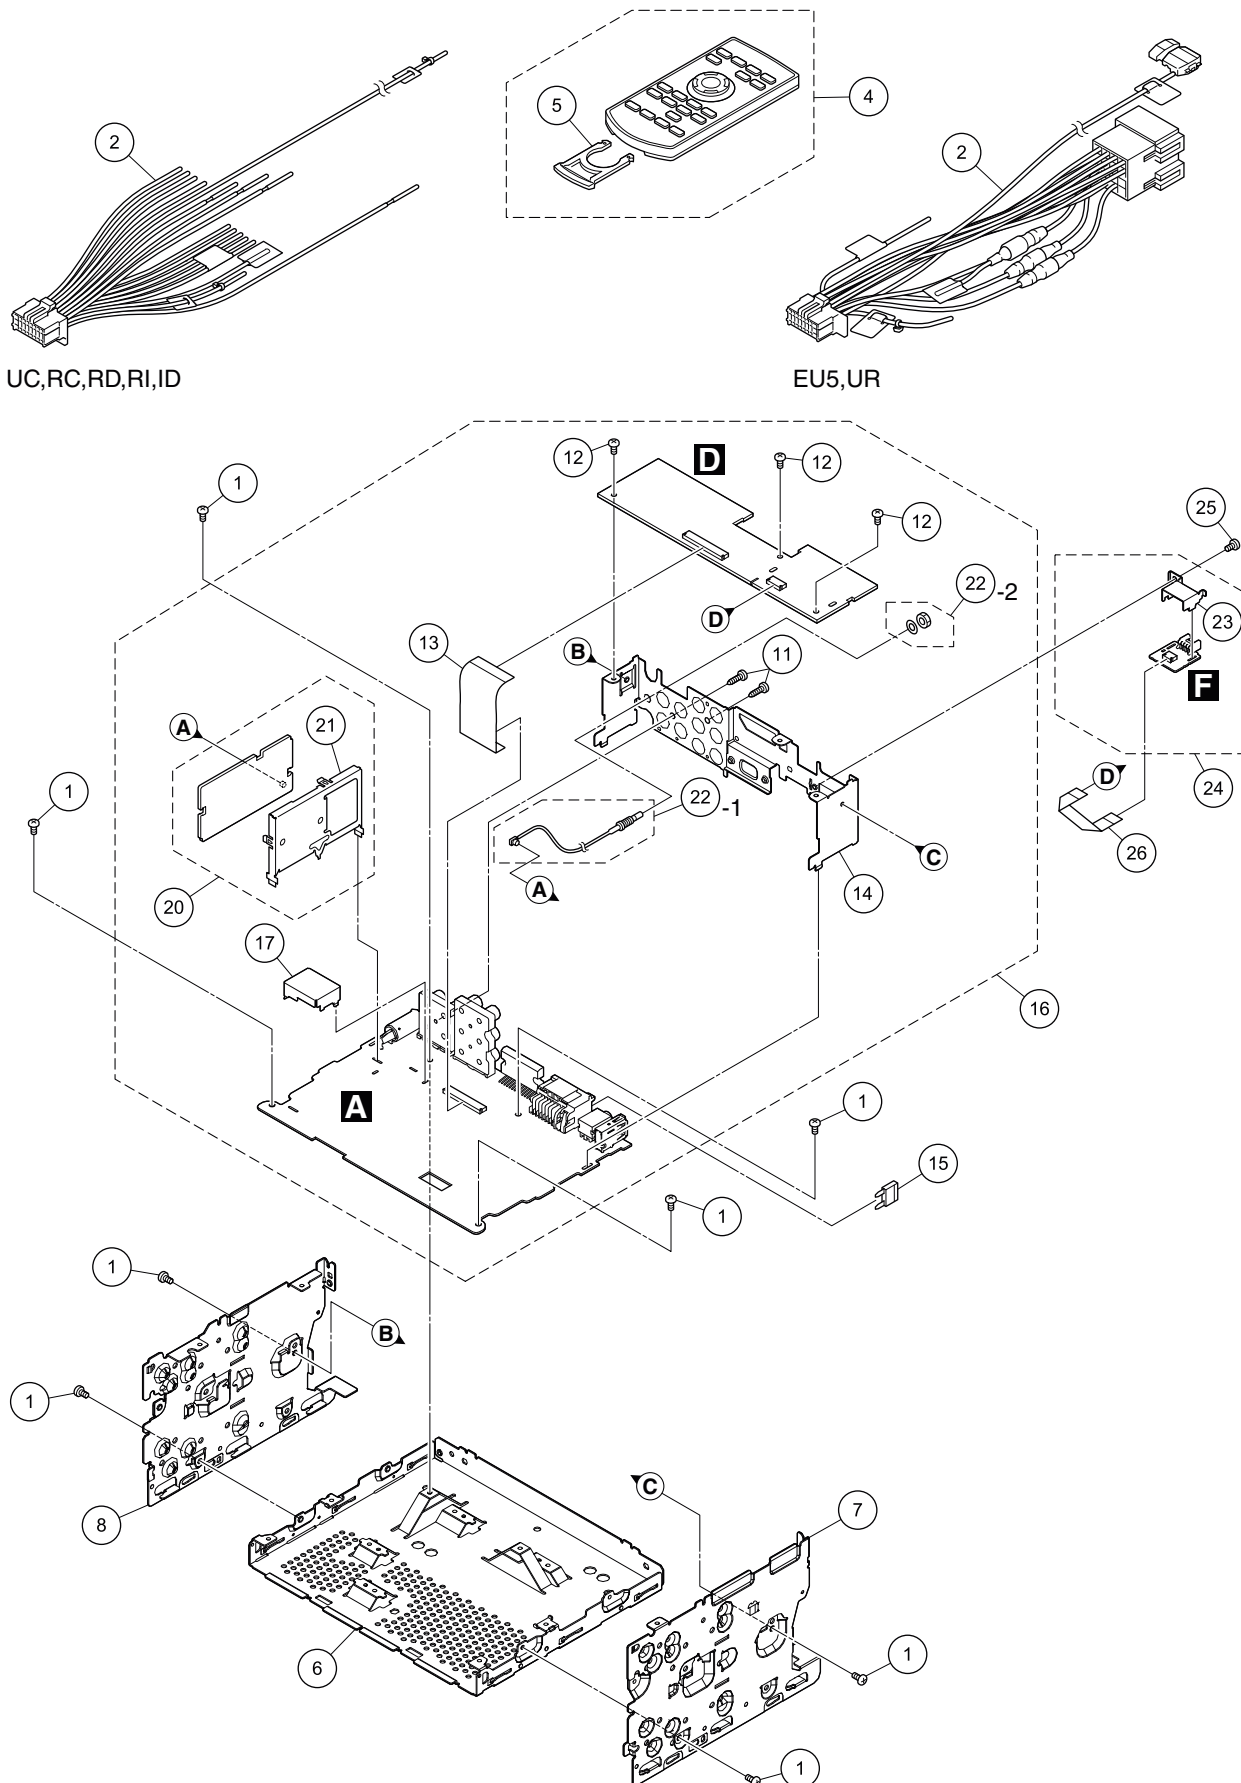

(1) EXTERIOR (2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	BSZ26P060FTC	⚠ 15	Fuse (10 A)	YEK5001
2	Cord Assy	See Contrast table (2)			
3			16	Service Unit (Mother I/F)	See Contrast table (2)
4	Card Remote Control Unit	See Contrast table (2)	17	Shield Case	See Contrast table (2)
5	Battery Cover	See Contrast table (2)	18		
			19		
6	Chassis	CNA3310	20	WWR Tuner Unit (U1801)	See Contrast table (2)
7	Bracket	CND6985			
8	Bracket	CND6986	21	Holder	See Contrast table (2)
9			22	Antenna Cable Assy	See Contrast table (2)
10			23	Holder	See Contrast table (2)
			24	Service Unit (I-Data)	See Contrast table (2)
11	Screw	BPZ26P080FTC	25	Screw	See Contrast table (2)
12	Screw	BSZ26P060FTC			
13	FFC	See Contrast table (2)	26	FFC	See Contrast table (2)
14	Holder	See Contrast table (2)			

(2) CONTRAST TABLE

AVH-1550NEX/XNUC, AVH-1500NEX/XNUC, AVH-Z3200DAB/XNEU5, AVH-Z2200BT/XEVEU5, AVH-Z2200BT/XNUR, AVH-Z2250BT/XNRC, AVH-Z2250BT/XNRD, AVH-Z2250BT/XNRI and AVH-Z2290BT/XNID are constructed the same except for the following:

Mark	No.	Description	AVH-1550NEX/XNUC	AVH-1500NEX/XNUC	AVH-Z3200DAB/XNEU5
	2	Cord Assy	CDP1665	CDP1665	CDP1670
	4	Card Remote Control Unit	CXE5116	Not used	Not used
	5	Battery Cover	CNU1624	Not used	Not used
	13	FFC	CDD1220	CDD1219	CDD1219
	14	Holder	CND7745	CND8133	CND7746
	16	Service Unit (Mother I/F)	QXX3306	QXX3305	QXX3304
	17	Shield Case	Not used	Not used	CND7762
	20	WWR Tuner Unit (U1801)	Not used	Not used	CWE2571
	21	Holder	Not used	Not used	CND7288
	22	Antenna Cable Assy	Not used	Not used	CXE7975
	23	Holder	CND7760	Not used	Not used
	24	Service Unit (I-Data)	QXX3322	Not used	Not used
	25	Screw	BSZ26P060FTC	Not used	Not used
	26	FFC	CDD1222	Not used	Not used

Mark	No.	Description	AVH-Z2200BT/XEVEU5	AVH-Z2200BT/XNUR	AVH-Z2250BT/XNRC
	2	Cord Assy	CDP1670	CDP1670	CDP1665
	4	Card Remote Control Unit	Not used	Not used	CXE5116
	5	Battery Cover	Not used	Not used	CNU1624
	13	FFC	CDD1219	CDD1219	CDD1219
	14	Holder	CND7746	CND7746	CND7746
	16	Service Unit (Mother I/F)	QXX3307	QXX3312	QXX3308
	17	Shield Case	Not used	Not used	Not used
	20	WWR Tuner Unit (U1801)	Not used	Not used	Not used
	21	Holder	Not used	Not used	Not used
	22	Antenna Cable Assy	Not used	Not used	Not used
	23	Holder	Not used	Not used	Not used
	24	Service Unit (I-Data)	Not used	Not used	Not used
	25	Screw	Not used	Not used	Not used
	26	FFC	Not used	Not used	Not used

A

B

Mark	No.	Description	AVH-Z2250BT/XNRD	AVH-Z2250BT/XNRI	AVH-Z2290BT/XNID
A	2	Cord Assy	CDP1665	CDP1665	CDP1665
	4	Card Remote Control Unit	CXE5116	CXE5116	CXE5116
	5	Battery Cover	CNU1624	CNU1624	CNU1624
	13	FFC	CDD1219	CDD1219	CDD1219
	14	Holder	CND7746	CND7746	CND7746
	16	Service Unit (Mother I/F)	QXX3309	QXX3310	QXX3311
	17	Shield Case	Not used	Not used	Not used
	20	WWR Tuner Unit (U1801)	Not used	Not used	Not used
	21	Holder	Not used	Not used	Not used
	22	Antenna Cable Assy	Not used	Not used	Not used
B	23	Holder	Not used	Not used	Not used
	24	Service Unit (I-Data)	Not used	Not used	Not used
	25	Screw	Not used	Not used	Not used
	26	FFC	Not used	Not used	Not used


C

D

E

F

9.4 DVD MECHANISM MODULE (1)

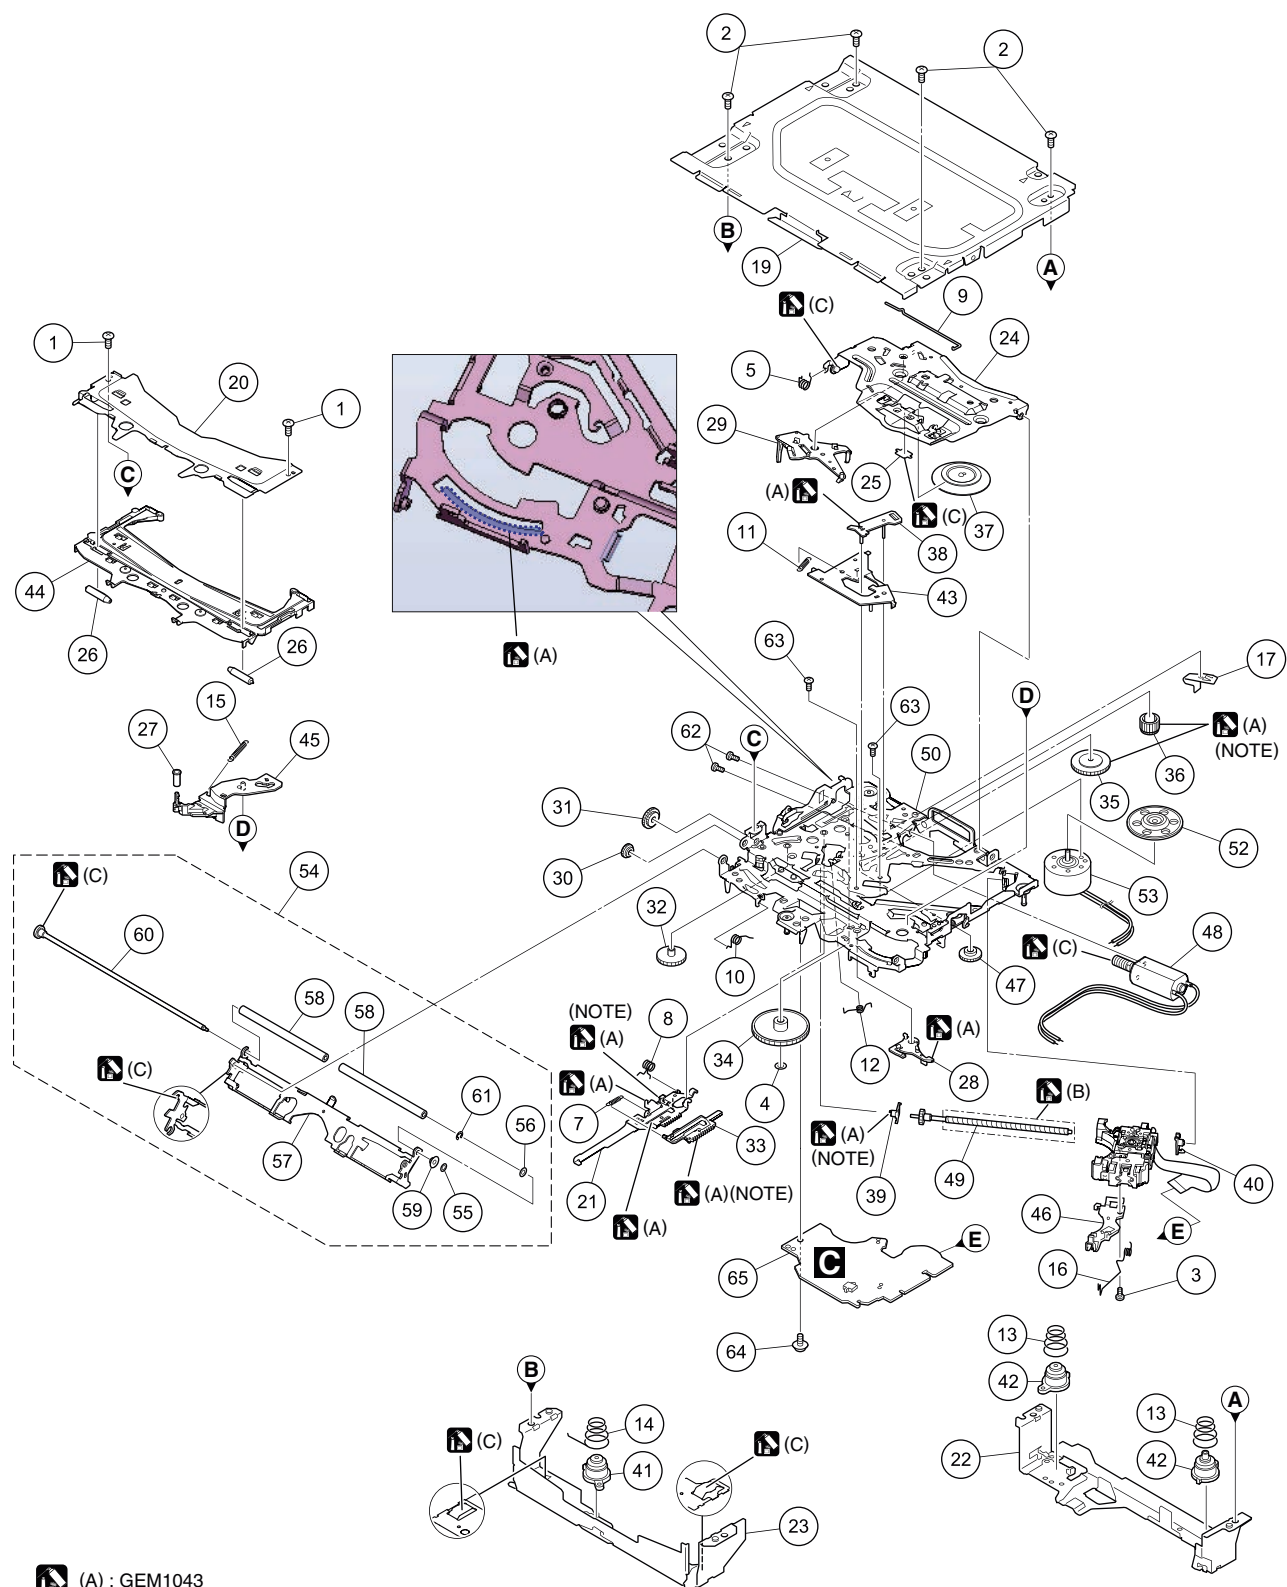

- (A) : GEM1043
- (B) : GEM1045
- (C) : GEM1024

(NOTE) Apply grease to the whole part.

DVD MECHANISM MODULE (1) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 Screw	BSZ20P040FTC	50	Chassis Unit	CXE9532
	2 Screw	BSZ26P060FTC	51	*****	
	3 Screw (M2 x 4)	CBA1835	* 52	Support Wheel	CNW2052
	4 Washer	CBF1038	* 53	Spindle Motor	EXM5003
	5 Spring	CBH2855	54	Arm Assy	CXE9036
	6 *****		55	Washer	CBF1037
	7 Spring	CBH3010	56	Washer	CBF1038
	8 Spring	CBH3011	57	Arm	CND6779
	9 Spring	CBH3014	58	Roller	CNW2500
	10 Spring	CBH3015	59	Collar	CNW2444
B	11 Spring	CBH3016	60	Gear Unit	CXE8952
	12 Spring	CBH3017	61	Washer	YE15FTC
	13 Spring	CBH3019	62	Screw	JFZ20P025FTC
	14 Spring	CBH3086	63	Screw	JGZ17P020FTC
	15 Coil Spring	CBH3095	64	Screw (M2 x 5)	EBA1028
	16 Torsion Spring	CBH3096	65	DVD Core Unit	CWX4609
	17 Leaf Spring	CBL1824			
	18 *****				
	19 Case	CNB3928			
	20 Bracket	CND4553			
C	21 Lever	CND7225			
	22 Bracket	CND5710			
	23 Bracket	CND6127			
	24 Arm	CND7224			
	25 Sheet	CNN3678			
	26 Roller	CNW1172			
	27 Roller	CNW1175			
	28 Arm	CNW1177			
	29 Arm	CNW1178			
	30 Gear	CNW1180			
D	31 Gear	CNW1181			
	32 Gear	CNW1183			
	33 Rack	CNW1184			
	34 Gear	CNW1185			
	35 Gear	CNW1186			
	36 Gear	CNW1187			
	37 Clamper	CNW1190			
	38 Arm	CNW1192			
	39 Holder	CNW1193			
	40 Holder	CNW1194			
E	41 Damper	CNW2439			
	42 Damper	CNW2440			
	43 Arm	CNW1726			
	44 Guide	CNW3489			
	45 Arm	CNW2241			
	46 Rack	CNW2265			
	47 Gear	CNW2287			
	48 Motor Unit	CXF1847			
	49 Screw Unit	CXC8894			

Pickup, Spindle Motor and Support Wheel are not available as service parts, because they need adjustment by special equipment after replacing.

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A: AVH-1550NEX/XNUC	
B: AVH-1500NEX/XNUC	
C: AVH-Z3200DAB/XNEU5	
D: AVH-Z2200BT/XEVEU5	
E: AVH-Z2200BT/XNUR	
F: AVH-Z2250BT/XNRC	
G: AVH-Z2250BT/XNRD	
H: AVH-Z2250BT/XNRI	
I: AVH-Z2290BT/XNID	
Unit Number : QXX3306 (A)	
Unit Number : QXX3305 (B)	
Unit Number : QXX3304 (C)	
Unit Number : QXX3307 (D)	
Unit Number : QXX3312 (E)	
Unit Number : QXX3308 (F)	
Unit Number : QXX3309 (G)	
Unit Number : QXX3310 (H)	
Unit Number : QXX3311 (I)	
Unit Name : Service Unit (Mother I/F)	
Unit Number : QXX3319 (A)	
Unit Number : QXX3318 (B)	
Unit Number : QXX3317 (C)	
Unit Number : QXX3320 (D, E, F, G, H, I)	
Unit Name : Service Unit (Monitor)	
Unit Number : CWX4609	
Unit Name : DVD Core Unit	
Unit Number : QXX3321	
Unit Name : Service Unit (Keyboard)	
Unit Number : QXX3322 (A)	

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
Unit Name : Service Unit (I-Data)	

Service Unit (Mother I/F)

Consists of

Mother PCB

Interface PCB

A D

Unit Number : QXX3306 (A)	
Unit Number : QXX3305 (B)	
Unit Number : QXX3304 (C)	
Unit Number : QXX3307 (D)	
Unit Number : QXX3312 (E)	
Unit Number : QXX3308 (F)	
Unit Number : QXX3309 (G)	
Unit Number : QXX3310 (H)	
Unit Number : QXX3311 (I)	
Unit Name : Service Unit (Mother I/F)	

MISCELLANEOUS

IC 101	Regulator IC	NJW4181U3-33B
IC 111	Regulator IC	NJW4184DL3-08A
IC 141	Regulator IC	MM3411A33N
IC 161	Regulator IC	RP108J081D-AE
IC 231	Regulator IC	MM1856A50N
IC 271	Regulator IC	MM1856A58N
IC 301	Regulator IC(C)	MM3479A33P
IC 302	Regulator IC(C)	MM3479A12P
IC 303	Regulator IC(C)	MM3479A33P
IC 304	Regulator IC	MM3479A33P
IC 351	DC/DC CONV IC	KBD9876EFJ
IC 401	IC	AN33012UA
IC 451	DC/DC CONV IC	MM3630BR
IC 501	DC/DC CONV IC	TLV62065TDSGQ1
*IC 601	Flash Blank UC IC	MN103LFA5RXW
IC 901	U-PRO IC	MN2KSC100M
IC 1101	CONV IC	AK5720VT
IC 1131	IC	CA0024AN
IC 1191	IC	337S3959
IC 1301	Flash ROM Unit(A)	CVQ1205

	1			2	3			4
	<u>Circuit Symbol and No.</u>			<u>Part No.</u>	<u>Circuit Symbol and No.</u>			<u>Part No.</u>
A	IC	1301	Flash ROM Unit(B)	CVQ1204	D	8	Zener Diode	UDZV6R8(B)
	IC	1301	Flash ROM Unit(C,D,E,F,G,H,I)	CVQ1206	D	9	Switching Diode	1SS355VM
	IC	1321	Flash Memory IC(A,B)	W25Q64JVSSIQ	D	10	Zener Diode	UDZV5R6(B)
	IC	1321	Flash Memory IC(C,D,E,F,G,H,I)	W25Q16JVSSIQ	D	12	Switching Diode	1SS355VM
	IC	1341	Flash ROM Unit	CVQ1208	D	13	Switching Diode	1SS355VM
■	IC	1401	RAM IC	W631GG6MB-12	D	14	Schottky Diode	RB080LAM-30TF
	IC	1402	RAM IC	W631GG6MB-12	D	163	Schottky Diode	RB056LAM-40TF
	IC	1501	IC	AK4223VQ	D	164	Schottky Diode	RB056LAM-40TF
	IC	1601	OP AMP IC	NJW1240V	D	303	Zener Diode(C)	UDZV16(B)
	IC	1721	Logic IC	TC7SH32FUS2	D	351	Schottky Diode	RB056LAM-40TF
B	IC	1901	Logic IC	TC7SZU04FUS2	D	401	Schottky Diode	RB056LAM-40TF
	IC	2101	Logic IC	TC7SZ32FUS2	D	402	Schottky Diode	RB056LAM-40TF
	IC	2451	Interface IC	STCC2540IQ	D	451	Schottky Diode	RB080LAM-30TF
	IC	2501	Comparator IC	TC75S57FU	D	601	Schottky Diode	RB751SM-40
	IC	4011	Variable Regulator	BA00CC0WFP	D	602	Schottky Diode	RB751SM-40
■	IC	4021	IC	CA0023AN	D	801	Zener Diode	RSB6R8SM
	IC	4022	IC	CA0023AN	D	871	Zener Diode	RSB6R8SM
	IC	4131	Buffer Logic IC(A,B)	TC7SH126FUS1	D	872	Zener Diode	RSB6R8SM
	IC	4132	AND Logic IC(A,B)	MC74VHC1GT08DFG	D	873	Zener Diode	RSB6R8SM
	IC	4171	AND Logic IC(A)	MC74VHC1GT08DFG	D	874	Zener Diode	RSB6R8SM
C	IC	4172	AND Logic IC(A)	MC74VHC1GT08DFG	D	1901	Zener Diode	RSB6R8SM
	IC	4201	OP AMP IC	NJU7043V	D	1904	Zener Diode	RSB6R8SM
	IC	8401	Tuner IC	TEF6686HN-V102	D	1905	Zener Diode	RSB6R8SM
	IC	9001	E-VOL SYS LSI	PM9015A	D	2211	Zener Diode	RSB6R8SM
	IC	9201	Power AMP IC	TCB501HQ	D	2301	Diode	RSB18V
■	Q	3	Bipolar TR	HN1C01FUS1	D	2302	Diode	RSB18V
	Q	5	Resistor Built-IN TR	LTC014EEB	D	2303	Diode	RSB18V
	Q	6	Bipolar TR	LSCR523UB	D	2304	Diode	RSB18V
	Q	7	Bipolar TR	LSAR523UB	D	2305	Zener Diode	UDZV3R9(B)
	Q	8	Bipolar TR	LSAR523UB	D	2352	Diode	RSB18V
D	Q	190	Resistor Built-IN TR	LTC014EEB	D	2353	Diode	RSB18V
	Q	191	Bipolar TR	LSAR523UB	D	2354	Diode	RSB18V
	Q	301	Transistor(C)	2SD2153	D	2451	Diode	EZAEG2A50AX
	Q	302	Transistor(C)	2SAR293PGZE	D	2452	Diode	EZAEG2A50AX
	Q	303	Resistor Built-IN TR(C)	LTC014EEB	D	4171	Switching Diode(A)	1SS355VM
■	Q	401	Power MOS FET	SFT1342	D	8451	Diode	EZAEG2A50AX
	Q	402	Power MOS FET	SFT1342	D	8452	Diode	EZAEG2A50AX
	Q	601	Bipolar TR	LSCR523UB	D	8453	Zener Diode	RSB6R8SM
	Q	602	Resistor Built-IN TR(F,G,H,I)	RN4982S1	L	3	Choke Coil 120 uH	CTH1636
	Q	603	Resistor Built-IN TR(F,G,H,I)	RN4982S1	L	51	Choke Coil(C) 3.6 uH	CTH1479
■	Q	604	Resistor Built-IN TR(F,G,H,I)	RN4982S1	L	101	Chip Beads	VTL1127
	Q	605	Resistor Built-IN TR(F,G,H,I)	RN4982S1	L	351	SMD SPL Inductor	CTH1524
	Q	1131	Bipolar TR	LSCR523UB	L	401	SMD SPL Inductor	CTH1544
	Q	1132	Bipolar TR	LSCR523UB	L	402	Choke Coil 7.0 uH	CTH1381
	Q	1133	Bipolar TR	LSCR523UB	L	451	SMD SPL Inductor	CTH1584
E	Q	1134	Bipolar TR	LSCR523UB	L	501	Inductor	CTH1629
	Q	1191	Bipolar TR	LSAR523UB	L	801	Inductor	CTF1645
	Q	1601	Resistor Built-IN TR	LTC044EEB	L	802	Inductor	CTF1740
	Q	1721	Resistor Built-IN TR	LTC043ZEB	L	803	Inductor	CTF1645
	Q	1901	Transistor	2SAR502UB	L	804	SMD Ferrite Beads	CTF1869
■	Q	1902	Resistor Built-IN TR	LTC023YEB	L	1801	Inductor(C)	CTF1786
	Q	2251	Bipolar TR	HN1B04FUS1	L	1802	Inductor(C)	CTF1872
	Q	2301	Transistor	2SD2114K	L	1803	Inductor(C)	CTF1872
	Q	2302	Resistor Built-IN TR	RN4984S1	L	1901	SMD Ferrite Beads	CTF1869
	Q	2303	Resistor Built-IN TR	RN4984S1	L	2103	Chip Beads	VTL1127
F	Q	4011	Resistor Built-IN TR	LTC014EEB	L	2301	Chip Beads	VTL1126
	Q	4201	Bipolar TR	LSCR523UB	L	2302	Chip Beads	VTL1126
	D	4	Diode	D1F60-5053	L	2303	Chip Beads	VTL1126
	D	5	Diode	D1F60-5053	L	2304	Chip Beads	VTL1126
	D	7	Zener Diode	UDZV6R2(B)	L	2351	Chip Beads	VTL1126

5			6		7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>		<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
L	2352	Chip Beads	VTL1126		JA	2451	USB Jack	CKN1136		
L	2353	Chip Beads	VTL1126		JA	4081	3.5 DIA Jack	CKS6437		
L	2354	Chip Beads	VTL1126		JA	4101	Jack	CKN1101		A
L	2355	Chip Beads	VTL1126		JA	4121	RCA Jack	CKB1106		
L	2356	Chip Beads	VTL1126		JA	4131	Connector(A,B)	CKS6495		
L	2357	Chip Beads	VTL1126		JA	8451	Antenna Jack	CKX1104		
L	2401	Chip Beads	VTL1126		U	1801	WWR Tuner Unit(C)	CWE2571		
L	2402	Chip Beads	VTL1126		U	1901	BT Module	CWX4751		
L	2403	Chip Beads	VTL1126		RESISTORS					
L	2404	Chip Beads	VTL1126		R	51	(A,B,D,E,F,G,H,I)	RS1/4SA0R0J		
L	2405	Chip Beads	VTL1126		R	53		RS1/16SS103J		
L	2406	Chip Beads	VTL1126		R	55		RS1/16SS473J		
L	2407	SMD Ferrite Beads	CTF1869		R	56		RS1/16SS472J		B
L	2451	Noise Filter	CTF1887		R	57		RS1/16SS104J		
L	4021	SMD SPL Inductor	LCYA100J2016		R	58		RS1/16SS473J		
L	4083	Chip Beads	VTL1126		R	59		RS1/4SA102J		
L	4084	Chip Beads	VTL1126		R	60		RS1/16SS103J		
L	4104	Chip Beads	VTL1126		R	61		RS1/16SS472J		
L	4105	Chip Beads	VTL1126		R	62		RS1/4SA102J		
L	4122	Chip Beads	VTL1126		R	63		RS1/16SS473J		
L	4123	Chip Beads	VTL1126		R	64		RS1/16SS104J		
L	4201	Ferrite Bead	CTF1528		R	65		RS1/16SS472J		
L	8401	SMD Ferrite Beads	CTF1893		R	66		RS1/4SA102J		
L	8403	Inductor	LCYC150K1608		R	67		RS1/16SS102J		C
L	8405	Inductor	LCMAR27J1608		R	68		RS1/16SS473J		
L	8409	Inductor	CTF1787		R	69		RS1/16SS223J		
X	601	Crystal Resonator 12.500 MHz	CSS1839		R	70		RS1/16SS103J		
X	801	Resonator 24 MHz	CSS1773		R	71		RS1/16SS223J		
X	1901	Resonator 32.768 kHz	CSS1807		R	72		RS1/16SS102J		
X	8401	Crystal Resonator 9.216 MHz	CSS1888		R	73		RS1/16SS473J		
⚠	P301	Poly Switch(A,B)	FSMD110-24R		R	74		RS1/16SS103J		
⚠	P301	Poly Switch(C)	FSMD050-R		R	161		RS1/16SS5601D		
⚠	P301	Poly Switch(D,E,F,G,H,I)	FSMD020-R		R	162		RS1/16SS1202D		
⚠	P2201	Fuse 0.75 A	CEK1398		R	190		RS1/16SS222J		D
⚠	P2352	Poly Switch	FSMD075-24R		R	191		RS1/16SS222J		
⚠	P2401	Poly Switch	FSMD075-24R		R	304	(C)	RS1/16SS102J		
⚠	P4021	Poly Switch	FSMD075-24R		R	307	(C)	RS1/16SS102J		
⚠	P4081	Poly Switch	FSMD075-24R		R	308		RS1/16SS102J		
P	8451	Surge Absorber	IMSA-6803-01Y900		R	315	(C)	RS1/16SS911J		
F	9001	EMI Filter	CCG1142		R	316	(C)	RS1/16SS103J		
F	9002	EMI Filter	CCG1142		R	317	(C)	RS1/4SA471J		
F	9201	EMI Filter	CCG1142		R	318	(C)	RS1/4SA471J		
F	9202	EMI Filter	CCG1142		R	319	(C)	RS1/16SS104J		
TH	801	Thermistor	CCX1084		R	320	(C)	RS1/16SS183J		
VL	8401	Variable Coil	CTC1215		R	321	(C)	RS1/16SS102J		E
CN	2101	Connector	CKS3871		R	351		RS1/16SS302J		
CN	2201	FFC/FPC Connector	CKS6645		R	352		RS1/16SS4702D		
CN	2251	FFC/FPC Connector(B,C,D,E,F,G,H,I)	CKS6710		R	353		RS1/16SS1202D		
CN	2252	FFC/FPC Connector(A)	CKS6703		R	354		RS1/16SS822J		
CN	4001	FFC/FPC Connector(B,C,D,E,F,G,H,I)	CKS6645		R	357		RS1/8SQ331J		
CN	4002	FFC/FPC Connector(A)	CKS6646		R	401		RS1/16SS561J		
CN	4011	Connector	CKS4977		R	402		RS1/16SS1502D		
CN	4021	Connector	CKS4497		R	403		RS1/16SS1301D		
CN	4171	FFC/FPC Connector(A)	CKS6634		R	404		RS1/16SS5101D		
JA	1	Connector	CKM1613		R	405		RS1/16SS222J		F
JA	2301	3.5 DIA Jack	CKN1106		R	406		RS1/16SS103J		
JA	2351	RCA Jack	CKB1110		R	408	11 mohm	CCN1341		
JA	2401	RCA Jack	CKB1113		R	409		RS1/16SS204J		

1			2		3			4	
<u>Circuit Symbol and No.</u>			<u>Part No.</u>		<u>Circuit Symbol and No.</u>			<u>Part No.</u>	
R	410		RS1/16SS394J		R	651	(F,G,H,I)	RS1/16SS1001D	
R	411	15 mohm	CCN1328		R	652	(F,G,H,I)	RS1/16SS6800D	
A	R	412	RS1/16SS224J		R	656		RS1/16SS822J	
	R	413	RS1/16SS272J		R	657		RS1/16SS471J	
	R	414	RS1/16SS1101D		R	659		RS1/16SS473J	
	R	415	RS1/16SS1001D		R	660		RS1/16SS473J	
R	416		RS1/16SS1502D		R	661		RS1/16SS222J	
R	417		RS1/16SS221J		R	662		RS1/16SS104J	
■	R	422	RS1/16SS473J		R	665		RS1/16SS221J	
	R	423	RS1/16SS473J		R	666		RS1/16SS221J	
	R	432	CCN1328		R	668		RS1/16SS221J	
		15 mohm							
R	437		RS1/4SA331J		R	669		RS1/16SS104J	
R	451		RS1/16SS123J		R	670	(H,I)	RS1/16SS104J	
B	R	452	RS1/16SS3001D		R	671	(D,E,F,G)	RS1/16SS104J	
	R	453	RS1/16SS1602D		R	672	(F,G)	RS1/16SS104J	
	R	455	RS1/16SS2001D		R	673	(D,E,H,I)	RS1/16SS104J	
R	456		RS1/16SS473J		R	674	(E,G,I)	RS1/16SS104J	
R	457		RS1/16SS304J		R	675	(D,F,H)	RS1/16SS104J	
■	R	458	CCN1339		R	676	(D,F,G,H,I)	RS1/16SS104J	
	R	461	RS1/4SA331J		R	677	(E)	RS1/16SS104J	
	R	463	RS1/16SS0R0J		R	678	(B)	RS1/16SS104J	
		100 mohm							
R	464		RS1/16SS0R0J		R	679	(A,C,D,E,F,G,H,I)	RS1/16SS104J	
R	502		RS1/16SS473J		R	683		RS1/16SS103J	
R	505		RS1/16SS1803D		R	684		RS1/16SS221J	
C	R	507	RS1/16SS2703D		R	685		RS1/16SS104J	
	R	603	RS1/16SS472J		R	686		RS1/16SS103J	
	R	604	RS1/16SS104J		R	687		RS1/16SS221J	
R	605		RS1/16SS473J		R	688		RS1/16SS104J	
R	606		RS1/16SS473J		R	689		RS1/16SS104J	
■	R	607	RS1/16SS221J		R	690		RS1/16SS101J	
	R	608	RS1/16SS221J		R	691		RS1/16SS221J	
	R	609	RS1/16SS472J		R	692		RS1/16SS221J	
R	610		RS1/16SS102J		R	693		RS1/16SS221J	
R	611		RS1/16SS103J		R	694		RS1/16SS104J	
D	R	612	RS1/16SS471J		R	695		RS1/16SS471J	
	R	613	RS1/16SS473J		R	696		RS1/16SS103J	
	R	614	RS1/16SS471J		R	698		RS1/16SS473J	
R	615		RS1/16SS473J		R	699		RS1/16SS471J	
R	618		RS1/16SS472J		R	700		RS1/16SS472J	
■	R	619	RS1/16SS472J		R	701		RS1/16SS471J	
	R	621	RS1/16SS473J		R	702		RS1/16SS472J	
	R	622	RS1/16SS473J		R	703		RS1/16SS221J	
R	624		RS1/16SS104J		R	706	(F,G,H,I)	RS1/16SS6800D	
R	625		RS1/16SS102J		R	708		RS1/16SS473J	
E	R	626	RS1/16SS0R0J		R	709	(F,G,H,I)	RS1/16SS8201D	
	R	627	RS1/16SS102J		R	710	(F,G,H,I)	RS1/16SS8201D	
	R	628	RS1/16SS104J		R	711	(A,B,C,D,E)	RS1/16SS102J	
R	629		RS1/16SS473J		R	711	(F,G,H,I)	RS1/16SS1001D	
R	631		RS1/16SS121J		R	716		RS1/16SS103J	
R	632		RS1/16SS104J		R	717		RS1/16SS101J	
■	R	633	RS1/16SS121J		R	720		RS1/16SS0R0J	
	R	634	RS1/16SS0R0J		R	800		RS1/16SS473J	
	R	635	RS1/16SS102J		R	802		RS1/16SS183J	
R	636		RS1/16SS473J		R	804		RS1/16SS101J	
R	640		RS1/16SS682J		R	807	(A,B)	RS1/16SS473J	
F	R	643	RS1/16SS102J		R	808	(A,B)	RS1/16SS0R0J	
		(C)							
	R	644	RS1/16SS104J		R	809	(A,B)	RS1/16SS0R0J	
	R	649	RS1/16SS0R0J		R	812	(A)	RS1/16SS0R0J	
R	650		RS1/16SS101J		R	815	(A,B)	RS1/16SS0R0J	
R	651	(A,B,C,D,E)	RS1/16SS102J		R	825		RS1/16SS103J	

5		6		7		8	
Circuit Symbol and No.		Part No.		Circuit Symbol and No.		Part No.	
R	830	RS1/16SS121J		R	938	RS1/10SR2400D	
R	831	(A)	RS1/16SS0R0J	R	940	RAB4CQ200J	
R	834		RS1/16SS473J	R	941	RAB4CQ200J	
R	835		RS1/16SS473J	R	942	RAB4CQ200J	
R	836		RS1/16SS473J	R	943	RAB4CQ200J	
R	837		RS1/16SS473J	R	944	RAB4CQ200J	
R	840	RS1/16SS473J		R	945	RS1/16SS200J	
R	841	RS1/16SS473J		R	946	RS1/16SS200J	
R	842	RS1/16SS473J		R	947	RS1/16SS200J	
R	843	RS1/16SS473J		R	948	RS1/16SS200J	
R	844	RS1/16SS473J		R	949	RS1/16SS200J	
R	845	RS1/16SS103J		R	950	RS1/16SS200J	
R	852	RS1/16SS104J		R	953	RS1/16SS101J	
R	856	RS1/16SS473J		R	955	RS1/16SS680J	
R	861	RAB4CQ390J		R	956	RS1/16SS101J	
R	862	RAB4CQ390J		R	957	RS1/16SS101J	
R	863	RAB4CQ390J		R	958	RS1/16SS680J	
R	864	RAB4CQ390J		R	959	RS1/16SS680J	
R	865	RAB4CQ390J		R	960	RS1/16SS680J	
R	866	RAB4CQ390J		R	961	RS1/16SS680J	
R	869	RS1/16SS390J		R	962	RS1/16SS101J	
R	870	RS1/16SS101J		R	963	RS1/16SS101J	
R	871	RS1/16SS101J		R	964	RS1/16SS101J	
R	882	RAB4CQ390J		R	1102	RS1/16SS472J	
R	884	RS1/16SS680J		R	1104	RS1/16SS0R0J	
R	885	RS1/16SS271J		R	1105	RS1/16SS0R0J	
R	886	RS1/16SS101J		R	1107	RS1/16SS0R0J	
R	887	RS1/16SS101J		R	1109	RS1/16SS222J	
R	888	RS1/16SS101J		R	1110	RS1/16SS103J	
R	889	RS1/16SS101J		R	1111	RS1/16SS0R0J	
R	890	RAB4CQ390J		R	1115	RS1/10SR0R0J	
R	891	RS1/16SS473J		R	1116	RS1/10SR0R0J	
R	892	RS1/16SS473J		R	1117	RS1/16SS0R0J	
R	893	RS1/16SS222J		R	1118	RS1/16SS0R0J	
R	894	RS1/16SS222J		R	1119	RS1/16SS0R0J	
R	896	RAB4CQ103J		R	1120	RS1/16SS0R0J	
R	899	RAB4CQ103J		R	1122	RS1/16SS103J	
R	900	RS1/16SS104J		R	1123	RS1/16SS103J	
R	901	RS1/16SS104J		R	1124	RS1/16SS0R0J	
R	902	RS1/16SS104J		R	1125	RS1/16SS0R0J	
R	903	RS1/16SS104J		R	1132	RS1/16SS103J	
R	904	RS1/16SS105J		R	1134	RS1/16SS104J	
R	905	RS1/16SS102J		R	1135	RS1/16SS153J	
R	906	RS1/16SS2202D		R	1136	RS1/16SS471J	
R	907	RS1/16SS5601D		R	1139	RS1/16SS0R0J	
R	908	RS1/16SS3301D		R	1143	RS1/16SS471J	
R	911	RS1/16SS104J		R	1146	RS1/16SS471J	
R	912	RS1/16SS104J		R	1149	RS1/16SS471J	
R	913	RS1/16SS1R0J		R	1150	RS1/16SS104J	
R	924	RS1/16SS390J		R	1151	RS1/16SS104J	
R	925	RS1/16SS104J		R	1155	RS1/16SS104J	
R	926	RS1/16SS473J		R	1172	RS1/16SS102J	
R	929	RS1/16SS104J		R	1173	RS1/16SS103J	
R	930	RS1/16SS390J		R	1174	RAB4CQ103J	
R	931	RS1/16SS390J		R	1191	RS1/16SS472J	
R	932	RS1/16SS390J		R	1192	RS1/16SS473J	
R	933	RS1/16SS2402D		R	1193	RS1/16SS183J	
R	935	RS1/16SS103J		R	1195	RS1/16SS222J	
R	936	RS1/16SS1802D		R	1196	RS1/16SS222J	
R	937	RS1/16SS6201D		R	1197	RS1/16SS220J	

1		2		3		4	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R	1198	RS1/16SS222J		R	1925	RS1/16SS0R0J	
A	R 1401	RS1/16SS4700D		R	1926	RS1/16SS0R0J	
	R 1402	RS1/16SS4700D		R	1927	RS1/16SS103J	
	R 1403	RS1/16SS4700D		R	1928	RS1/16SS103J	
	R 1404	RS1/16SS4700D		R	1931	RS1/16SS0R0J	
	R 1405	RS1/16SS103J		R	1932	RS1/16SS103J	
■	R 1406	RS1/16SS103J		R	1933	RS1/10SR221J	
	R 1409	RS1/16SS103J		R	1936	RS1/16SS121J	
	R 1411	RS1/16SS2200D		R	1937	RS1/16SS0R0J	
	R 1412	RS1/16SS2200D		R	1939	RS1/16SS473J	
	R 1413	RS1/16SS2400F		R	2105	RS1/16SS471J	
B	R 1414	RS1/16SS2400F		R	2106	RS1/16SS221J	
	R 1509	RS1/16SS75R0D		R	2107	RS1/16SS221J	
	R 1510	RS1/16SS104J		R	2108	RS1/16SS221J	
	R 1511	RS1/16SS75R0D		R	2109	RS1/16SS221J	
	R 1512	RS1/16SS2200D		R	2110	RS1/16SS221J	
■	R 1514	RS1/16SS750J		R	2122	RS1/16SS473J	
	R 1517	RS1/16SS101J		R	2124	CCN1424	
	R 1518	RS1/16SS101J		R	2251	RS1/16SS0R0J	(A,B)
	R 1519	RS1/16SS101J		R	2252	RS1/16SS0R0J	(A,B)
	R 1520	RS1/16SS101J		R	2256	RS1/16SS562J	
C	R 1521	RS1/16SS101J		R	2258	RS1/16SS103J	
	R 1522	RS1/16SS101J		R	2259	RS1/16SS103J	
	R 1523 (E,F,G,H)	RS1/16SS0R0J		R	2260	RS1/10SR222J	
	R 1524 (E,F,G,H)	RS1/16SS104J		R	2261	RS1/16SS332J	
	R 1527 (A,B,C,D,I)	RS1/16SS0R0J		R	2263	RS1/16SS0R0J	
■	R 1528 (A,B,C,D,I)	RS1/16SS0R0J		R	2305	RS1/16SS223J	
	R 1535 (E,F,G,H)	RS1/16SS0R0J		R	2306	RS1/16SS223J	
	R 1536 (E,F,G,H)	RS1/16SS0R0J		R	2308	RS1/16SS103J	
	R 1537 (E,F,G,H)	RS1/16SS0R0J		R	2309	RS1/16SS122J	
	R 1538	RS1/16SS470J		R	2310	RS1/16SS152J	
D	R 1541 (E,F,G,H)	RS1/16SS0R0J		R	2311	RS1/16SS0R0J	
	R 1601	RS1/16SS103J		R	2359	RS1/16SS223J	
	R 1602	RS1/16SS684J		R	2360	RS1/16SS223J	
	R 1604	RS1/16SS100J		R	2408	RS1/16SS223J	
	R 1605	RS1/16SS102J		R	2410	RS1/16SS223J	
■	R 1701	RS1/16SS0R0J		R	2414	RS1/16SS223J	
	R 1702	RS1/16SS103J		R	2417	RS1/16SS223J	
	R 1723	RS1/16SS683J		R	2420	RS1/16SS223J	
	R 1724	RS1/16SS683J		R	2423	RS1/16SS223J	
	R 1725	RS1/16SS221J		R	2451	RS1/16SS103J	
E	R 1801 (C)	RS1/16SS0R0J		R	2452	RS1/16SS183J	
	R 1802 (C)	RS1/16SS0R0J		R	2453	RS1/16SS102J	
	R 1803 (C)	RS1/16SS0R0J		R	2454	RS1/16SS103J	
	R 1805 (C)	RS1/16SS221J		R	2455	RS1/16SS103J	
	R 1806 (C)	RS1/16SS221J		R	2504	RS1/16SS2002D	
■	R 1807 (C)	RS1/16SS221J		R	2505	RS1/16SS1302D	
	R 1808 (C)	RS1/16SS221J		R	2506	RS1/16SS682J	
	R 1821 (C)	RS1/16SS0R0J		R	2507	RS1/16SS103J	
	R 1901	RS1/16SS0R0J		R	2508	RS1/16SS0R0J	
	R 1902	RS1/16SS121J		R	2509	RS1/16SS103J	
F	R 1903	RS1/16SS121J		R	2551	RS1/16SS0R0J	
	R 1904	RS1/16SS121J		R	2554	RS1/16SS0R0J	
	R 1917	RS1/16SS0R0J		R	2555	RS1/16SS0R0J	
	R 1918	RS1/16SS106J		R	2563	RS1/10SR0R0J	
	R 1919	RS1/16SS105J		R	2564	RS1/16SS0R0J	
F	R 1920	RS1/16SS103J		R	2565	RS1/16SS0R0J	
	R 1921	RS1/16SS103J		R	2570	RS1/16SS0R0J	
	R 1923	RS1/16SS103J		R	2571	RS1/16SS0R0J	
	R 1924	RS1/16SS0R0J		R	2572	RS1/16SS0R0J	

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R	2573	RS1/10SR0R0J		R	8412	RS1/16SS391J	
R	2574	RS1/16SS0R0J		R	8413	RS1/16SS105J	
R	4011	RS1/16SS473J		R	8414	RS1/16SS105J	A
R	4012	RS1/16SS3601D		R	8432	RS1/10SR0R0J	
R	4013	RS1/16SS7501D		R	8433	RS1/10SR0R0J	
R	4014	RS1/16SS1601D		R	8434	RS1/10SR0R0J	
R	4026	RAB4CQ750J		R	8435	RS1/10SR0R0J	
R	4027	RS1/16SS223J		R	9058	RS1/16SS0R0J	
R	4028	RS1/16SS223J		R	9208	RS1/10SR0R0J	
R	4029	RS1/16SS562J		<u>CAPACITORS</u>			
R	4030	RS1/16SS101J					
R	4031	RS1/16SS101J		C	46	CKSRYX105K16	
R	4032	RS1/16SS101J		C	48	CKSSYB102K50	
R	4033	RS1/16SS102J		C	50 (C)	CKSYX106K35	B
R	4034	RS1/16SS102J		C	51	CEAT472M16	
R	4035	RS1/16SS471J		C	52 (C)	CKSYX106K35	
R	4036	RS1/16SS471J		C	53 (C)	CKSSYB102K50	
R	4037	RS1/16SS272J		C	102	CKSRYX104K50	
R	4038	RS1/16SS272J		C	103	CKSSYB104K10	
R	4039	RS1/16SS103J		C	104	CKSRYX475K6R3	
R	4040	RS1/16SS0R0J		C	111	CKSRYX105K25	
R	4121	RS1/16SS750J		C	112	CKSSYB104K16	
R	4142 (A,B)	RS1/16SS471J		C	114	CKSRYX104K50	
R	4143 (A,B)	RS1/16SS223J		C	115	CKSQYX475K25	
R	4144 (A,B)	RS1/16SS223J		C	140	CKSRYB474K16	C
R	4145 (A,B)	RS1/16SS181J		C	141	CKSQYX106K10	
R	4146 (A,B)	RS1/16SS181J		C	143	CKSRYB474K16	
R	4147 (A,B)	RS1/10SR822J		C	161	CKSQYX106K10	
R	4148 (A,B)	RS1/10SR471J		C	162	CKSQYX106K10	
R	4149 (A,B)	RS1/16SS104J		C	190	CKSSYB104K10	
R	4151 (A,B)	RS1/16SS471J		C	231	CKSRYX105K16	
R	4152 (A,B)	RS1/16SS0R0J		C	232	CKSSYX105K10	
R	4153 (A,B)	RS1/16SS0R0J		C	271	CKSRYX105K16	
R	4172 (A)	RS1/16SS101J		C	272	CKSRYX105K16	
R	4174 (A)	RS1/16SS103J		C	302 (C)	CKSSYX105K10	
R	4176 (A)	RS1/16SS104J		C	303 (C)	CKSSYX105K10	D
R	4177 (A)	RS1/16SS0R0J		C	304 (C)	CKSSYX105K10	
R	4178 (A)	RS1/16SS102J		C	305 (C)	CKSSYX105K10	
R	4179 (A)	RS1/16SS0R0J		C	306 (C)	CKSSYX105K10	
R	4180 (A)	RS1/16SS0R0J		C	307 (C)	CKSSYX105K10	
R	4201	RS1/16SS0R0J		C	308 (C)	CKSSYB104K10	
R	4202	RS1/16SS0R0J		C	309	CKSSYX105K10	
R	4203	RS1/16SS102J		C	310	CKSSYX105K10	
R	4204	RS1/16SS222J		C	312 (C)	CKSSYB104K10	
R	4205	RS1/16SS332J		C	313 (C)	CKSSYB104K16	
R	4206	RS1/16SS472J		C	314 (C)	CKSRYX104K50	E
R	4207	RS1/16SS103J		C	315	CKSSYB104K10	
R	4208	RS1/16SS824J		C	316 (C)	CKSSYB104K10	
R	4209	RS1/16SS563J		C	317 (C)	CKSSYB104K10	
R	4210	RS1/16SS0R0J		C	318	CKSSYB102K50	
R	4212	RS1/16SS472J		C	347	CKSQYX106K10	
R	4213	RS1/16SS102J		C	352	CKSSYB103K16	
R	4214	RS1/16SS102J		C	353	CKSQYX106K10	
R	8401	RS1/16SS0R0J		C	356	CKSSYB473K16	
R	8404	RS1/16SS103J		C	357	CKSSYB103K50	
R	8406	RS1/16SS103J		C	358	CKSYX106K35	
R	8407	RS1/16SS472J		C	359	CKSSYB103K50	F
R	8408	RS1/16SS472J		C	362 47 uF	CCG1256	
R	8409	RS1/16SS101J		C	401	CKSSYB102K50	
R	8410	RS1/16SS101J					

1		2		3		4	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
A	C 402	CKSSYB223K16		C 629		CKSSYB104K10	
	C 403	CCSSCH8R0D50		C 630		CKSQYX226M6R3	
	C 404	CCSSCH8R0D50		C 632		CKSSYB104K10	
	C 405	CKSSYB223K16		C 635		CCSSCH471J50	
	C 406	CKSSYB102K50		C 801		CKSQYX106K10	
B	C 407	CKSSYB102K50		C 802		CKSQYX476M6R3	
	C 408	CKSSYB104K16		C 803		CKSQYX106K10	
	C 409	CKSYX226M16		C 807		CKSSYB104K10	
	C 410	CKSYX226M16		C 810		CKSQYX106K10	
	C 413	CKSRYP473K50		C 811		CKSSYB104K10	
C	C 414	CKSSYB102K50		C 817		CKSSYB104K10	
	C 416	CKSSYB104K10		C 818		CKSSYX105K10	
	C 419	CKSSYB104K16		C 819		CKSSYX105K10	
	C 420	CKSSYB103K16		C 840		CCSSCH120J50	
	C 421	CKSSYB104K10		C 841		CCSSCH100D50	
D	C 422	CKSRYP105K16		C 860		CKSSYX105K10	
	C 425	CKSYX226M16		C 901		CKSSYB104K10	
	C 426	CKSYX226M16		C 902		CKSSYB104K10	
	C 427	CKSSYB104K16		C 903		CKSSYB104K10	
	C 428	CKSSYB102K50		C 904		CKSSYB104K10	
E	C 433	CKSYX106K35		C 905		CKSSYB104K10	
	C 436	CKSYX106K35		C 906		CKSSYB104K10	
	C 451	CKSSYB153K16		C 907		CKSSYB104K10	
	C 452	CKSSYB222K50		C 908		CKSSYB104K10	
	C 454	CKSSYB331K50		C 909		CKSSYB104K10	
F	C 455	CKSSYX105K10		C 910		CKSSYB104K10	
	C 456	CKSRYP104K50		C 911		CKSSYB104K10	
	C 457	CKSYX226M16		C 912		CKSSYB104K10	
	C 458	CKSRYP225K10		C 913		CKSSYB104K10	
	C 459	CEVW101M16		C 914		CKSSYB104K10	
G	C 460	CKSRYP224K16		C 915		CKSSYB104K10	
	C 461	CEVW470M16		C 916		CKSSYB104K10	
	C 462	CKSYX106K35		C 917		CKSSYB104K10	
	C 465	CKSSYX105K10		C 918		CKSSYB104K10	
	C 502	CKSQYX106K10		C 919		CKSSYB104K10	
H	C 503	CCSSCH220J50		C 920		CKSSYB104K10	
	C 504	CKSQYX106K10		C 921		CKSSYB104K10	
	C 505	CKSSYB103K16		C 922		CKSSYB104K10	
	C 601 (C)	CKSSYB104K10		C 923		CKSSYB104K10	
	C 602	CCSSCH100D50		C 924		CKSSYB104K10	
I	C 603	CCSSCH120J50		C 925		CKSSYB104K10	
	C 604	CKSSYX105K10		C 926		CKSSYB104K10	
	C 605	CKSSYB104K10		C 927		CKSSYB104K10	
	C 606	CKSRYP105K16		C 928		CKSSYB104K10	
	C 607	CKSSYB104K10		C 929		CKSSYB104K10	
J	C 608	CKSSYB104K10		C 930		CKSSYB104K10	
	C 609	CKSSYB104K10		C 931		CCSSCH100D50	
	C 610	CKSSYB104K10		C 932		CKSSYB104K10	
	C 611	CKSSYX105K10		C 933		CKSSYX105K10	
	C 615	CKSSYB104K10		C 934		CKSSYX105K10	
K	C 616	CKSSYX105K10		C 935		CKSSYX105K10	
	C 620	CKSSYB104K10		C 936		CKSSYX105K10	
	C 621	CKSSYB103K16		C 937		CKSSYX105K10	
	C 622	CCSSCH102J50		C 938		CKSSYX105K10	
	C 623	CKSSYB104K10		C 939		CKSSYX105K10	
L	C 624	CKSSYX105K10		C 940		CKSSYX105K10	
	C 625	CKSSYB104K10		C 941		CKSSYB103K16	
	C 626	CKSSYB104K10		C 942		CKSSYB102K50	
	C 627	CKSSYB104K10		C 943		CKSSYB104K10	
	C 628	CKSSYB104K10		C 944		CKSSYB104K10	

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C 945		CKSSYB104K10		C 1501		CKSSYX105K10	
C 946		CKSSYB104K10		C 1502		CKSSYX105K10	
C 947		CKSSYB104K10		C 1503		CKSSYX105K10	A
C 948		CKSSYB104K10		C 1504		CKSSYX105K10	
C 949		CKSSYB104K10		C 1506 (E,F,G,H)		CKSSYB104K10	
C 1102		CKSSYX105K10		C 1507		CKSSYB104K10	
C 1104		CKSSYX474K6R3		C 1508		CKSSYB104K10	
C 1105		CKSQYX106K10		C 1510		CKSSYB104K10	
C 1106		CKSQYX106K10		C 1512		CKSSYB104K10	
C 1107		CKSSYB104K10		C 1514		CKSSYB104K10	
C 1108		CKSSYB104K10		C 1515		CKSSYB104K10	
C 1109		CKSRYX225K10		C 1516		CKSSYB104K10	
C 1131		CKSQYX106K10		C 1517		CKSSYB104K10	
C 1132		CKSQYX106K10		C 1518 (E,F,G,H)		CKSSYX105K10	B
C 1133		CKSQYX106K10		C 1519		CKSSYB104K10	
C 1134		CKSQYX106K10		C 1520 (E,F,G,H)		CKSSYX105K10	
C 1135		CKSQYX106K10		C 1521		CKSSYB104K10	
C 1136		CKSQYX106K10		C 1522 (E,F,G,H)		CKSSYX105K10	
C 1137		CKSQYX106K10		C 1523		CKSSYB104K10	
C 1138		CKSSYB103K16		C 1524		CKSQYX106K10	
C 1139		CKSQYX106K10		C 1525		CKSSYB104K10	
C 1148		CKSSYB104K10		C 1529		CKSQYX106K10	
C 1151		CCSSCH100D50		C 1530		CKSQYX106K10	
C 1191		CKSSYB104K10		C 1531 (E,F,G,H)		CKSSYB104K10	
C 1192		CKSSYB104K10		C 1532		CCSSCH181J50	C
C 1193		CKSSYB103K16		C 1601		CKSRYX105K25	
C 1302		CKSSYB104K10		C 1602		CKSRYX105K25	
C 1321		CKSSYB104K10		C 1603		CKSRYX105K25	
C 1342		CKSSYB104K10		C 1604		CKSRYX105K25	
C 1352		CKSRYX225K10		C 1605		CKSRYX105K25	
C 1353		CKSQYX106K10		C 1606		CKSRYX105K25	
C 1401		CKSRYX106M6R3		C 1607		CKSRYX105K25	
C 1402		CKSRYX106M6R3		C 1608		CKSRYX105K25	
C 1403		CKSRYX106M6R3		C 1609		CKSRYX105K25	
C 1404		CKSRYX106M6R3		C 1610		CKSRYX105K25	
C 1405		CKSSYB104K10		C 1612		CKSRYX105K25	D
C 1406		CKSSYB104K10		C 1613		CKSRYX105K25	
C 1407		CKSSYB104K10		C 1721		CKSSYB104K10	
C 1408		CKSSYB104K10		C 1722		CKSQYX475K10	
C 1409		CKSSYB104K10		C 1801 (C)		CKSSYB104K10	
C 1410		CKSSYB104K10		C 1803 (C)		CKSQYX106K10	
C 1411		CKSSYB104K10		C 1804 (C)		CKSSYB104K10	
C 1412		CKSSYB104K10		C 1805 (C)		CKSQYX106K10	
C 1413		CKSSYB104K10		C 1806 (C)		CKSSYB104K10	
C 1414		CKSSYB104K10		C 1808 (C)		CKSSYB104K10	
C 1415		CKSSYB104K10		C 1809 (C)		CCSSCH101J50	
C 1416		CKSSYB104K10		C 1810 (C)		CCSSCH101J50	E
C 1417		CKSSYB104K10		C 1811 (C)		CCSSCH101J50	
C 1418		CKSSYB104K10		C 1812 (C)		CCSSCH101J50	
C 1419		CKSSYB104K10		C 1901		CCSSCH100D50	
C 1420		CKSSYB104K10		C 1902		CCSSCH120J50	
C 1421		CKSSYB104K10		C 1903		CKSSYB104K10	
C 1422		CKSSYB104K10		C 1904		CKSRYX106M6R3	
C 1423		CKSSYB104K10		C 1905		CKSRYX106M6R3	
C 1424		CKSSYB104K10		C 1906		CKSSYB104K10	
C 1425		CKSSYB104K10		C 1907		CKSSYB104K10	
C 1426		CKSSYB104K10		C 1910		CKSQYX106K10	F
C 1427		CKSSYB104K10		C 1912		CKSQYX106K10	
C 1428		CKSSYB104K10		C 1913		CKSSYX105K6R3	
C 1431		CKSSYB104K10		C 1914		CKSQYX476M6R3	

1		2		3		4	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
C	1915	CKSQYX476M6R3		C	4036	CKSSYX105K10	
C	1916	CKSSYX105K10		C	4037	CKSSYX105K10	
A	C 2104	CKSSYB104K16		C	4038	CKSSYX105K10	
	C 2106	CCSSCH221J50		C	4039	CKSSYX105K10	
	C 2113	CKSSYB104K10		C	4040	CKSSYX105K10	
	C 2114	CCSSCH390J50		C	4081	CKSSYB102K50	
	C 2201	CKSQYX475K10		C	4082	CKSSYB102K50	
■	C 2202	CKSQYX106K10		C	4101	CKSSYB102K50	
	C 2203	CEVW101M16		C	4102	CKSSYB102K50	
	C 2303	CKSSYB102K50		C	4121	CKSSYB221K50	
	C 2304	CKSSYB471K50		C	4122	CKSSYB102K50	
	C 2305	CKSRYX225K10		C	4135 (A,B)	CKSSYB104K10	
B	C 2306	CKSSYB102K50		C	4136 (A,B)	CKSSYB104K10	
	C 2307	CKSSYB102K50		C	4137 (A,B)	CKSRYX104K50	
	C 2308	CCSSCH101J50		C	4172 (A)	CKSSYB104K10	
	C 2351	CKSSYB472K50		C	4174 (A)	CKSSYB104K10	
	C 2352	CKSRYX105K16		C	4202	CKSRYX106M6R3	
■	C 2353	CKSRYX104K50		C	4203	CKSSYB104K10	
	C 2354	CKSSYB103K25		C	4204	CKSSYX105K10	
	C 2355	CKSRYX225K10		C	4205	CKSSYB104K10	
	C 2357	CKSSYB102K50		C	4206	CCSSCH101J50	
	C 2358	CCSSCH101J50		C	4207	CKSRYB224K16	
C	C 2359	CKSSYB102K50		C	4208	CKSSYX105K10	
	C 2360	CKSSYB102K50		C	4209	CCSSCH6R0D50	
	C 2361	CKSSYB102K50		C	4210	CCSSCH220J50	
	C 2401	CKSSYB102K50		C	4211	CKSSYB104K10	
	C 2402	CKSSYB102K50		C	4212	CKSQYX226M6R3	
■	C 2403	CKSSYB102K50		C	4214	CCSSCH6R0D50	
	C 2404	CKSSYB102K50		C	4215	CKSSYB102K50	
	C 2405	CKSSYB102K50		C	8401	CKSSYB104K16	
	C 2406	CKSSYB102K50		C	8402	CKSSYB104K16	
	C 2407	CKSQYX475K10		C	8403	CKSQYX106K10	
D	C 2408	CKSQYX475K10		C	8404	CKSQYX106K10	
	C 2409	CKSQYX475K10		C	8405	CKSSYB104K16	
	C 2410	CKSQYX475K10		C	8406	CKSRYX106M6R3	
	C 2411	CKSQYX475K10		C	8407	CKSSYB224K6R3	
	C 2412	CKSQYX475K10		C	8408	CKSSYB102K50	
■	C 2414	CKSRYX225K16		C	8409	CKSSYB104K16	
	C 2415	CKSSYB102K50		C	8410	CKSRYX106M6R3	
	C 2416	CKSSYB102K50		C	8411	CCSSCH220J50	
	C 2451	CKSQYX106K10		C	8412	CCSSCH331J50	
	C 2452	CKSSYB104K10		C	8415	CKSSYB104K16	
E	C 2501	CKSSYB104K10		C	8416	CKSRYX106M6R3	
	C 2502	CKSSYB104K10		C	8418	CCSSCH102J50	
	C 2504	CKSSYX105K10		C	8419	CCSSCH471J50	
	C 4011	CKSQYB334K50		C	8423	CKSSYB152K50	
	C 4014	CEVW220M16		C	8427	CCSSCH100D50	
■	C 4021	CKSSYB102K50		C	9002 (A,B)	CKSRYX105K16	
	C 4022	CKSSYB102K50		C	9003 (A,B)	CKSRYX105K16	
	C 4023	CKSSYB102K50		C	9004	CKSRYX105K16	
	C 4024	CKSSYB102K50		C	9005	CKSRYX105K16	
	C 4025	CCSSCH180J50		C	9006	CKSSYX105K10	
F	C 4026	CCSSCH180J50		C	9007	CKSSYX105K10	
	C 4027	CKSSYB102K50		C	9010	CKSRYX105K16	
	C 4028	CKSSYB104K10		C	9011	CKSRYX105K16	
	C 4029	CKSQYX106K10		C	9015	CKSSYX105K10	
	C 4030	CKSSYB104K10		C	9016	CKSRYX105K16	
■	C 4033	CKSSYX105K10		C	9017	CKSRYX105K16	
	C 4034	CKSSYX105K10		C	9018 (A,B)	CKSRYX105K16	
	C 4035	CKSSYX105K10		C	9019 (A,B)	CKSRYX105K16	

5			6		7			8		
Circuit Symbol and No.			Part No.		Circuit Symbol and No.			Part No.		
C	9020		CKSSYB104K16		Q	5301	Bipolar TR	LSAR523UB		
C	9021	100 uF/16 V	CCH1962		Q	5302	Bipolar TR	LSCR523UB		
					D	5101	Schottky Diode	RB162MM-40TF		
C	9022		CKSSYB104K16							
C	9023		CEVW470M16		D	5102	Rectifier Diode	RR264MM-400TF		A
C	9024		CEVW470M16		D	5201	Schottky Diode	RB551VM-30		
C	9025		CKSSYB104K10		D	5202	Diode	RB548W		
C	9026	10 uF	CCG1332		D	5203	Diode	RB548W		
					D	5204	Diode	RB548W		
C	9027		CKSSYB104K10							
C	9029		CEVW470M16		L	5101	Inductor	BTH1112		
C	9032		CKSSYB104K16		L	5102	SMD Ferrite Beads(C)	CTF1869		
C	9033		CKSSYB104K16		L	5201	Choke Coil 22 uH	CTH1426		
C	9034		CKSSYB472K50		L	5202	Chip Beads(C)	VTL1128		
					L	5301	Inductor	CTF1765		
C	9035		CKSSYB103K16							
C	9036		CKSSYB103K16		TH	5001	Thermistor	CCX1084		B
C	9039		CCSSCH151J50		CN	5001	Connector(2P)	DKN1361		
C	9040		CCSSCH151J50		CN	5002	FFC/FPC Connector	CKS6645		
C	9043		CKSRYB102K50		CN	5003	FFC/FPC Connector	CKS6625		
					CN	5051	FFC/FPC Connector	CKS6757		
C	9044		CKSRYB102K50							
C	9201	0.68 uF	CCE1064		CN	5301	FFC/FPC Connector	CKS6729		
C	9202		CKSRYB684K10							
C	9203		CKSRYB684K10							
C	9204	0.68 uF	CCE1064							
C	9206	10 uF/25 V	CCH2108							
C	9207	0.47 uF	CCG1328							
C	9208	2.2 uF	CCG1322							
C	9209	4700 uF/16 V	CCH2085							
C	9210	0.1 uF/50 V	CCG1425							
C	9212		CKSRYX104K50							
C	9213		CKSSYB102K50							
C	9214		CKSSYB102K50							
C	9215		CKSSYB102K50							
C	9216		CKSSYB102K50							
C	9217		CKSSYB102K50							
C	9218		CKSSYB102K50							
C	9219		CKSSYB102K50							
C	9220		CKSSYB102K50							D
C	9223		CKSRYX105K16							
C	9224		CKSRYX105K16							
C	9225		CKSRYX105K16							
C	9226		CKSRYX105K16							
C	9228	0.1 uF	CCG1321							
C	9229		CCSRCH101J50							
B Unit Number : QXX3319 (A) Unit Number : QXX3318 (B) Unit Number : QXX3317 (C) Unit Number : QXX3320 (D, E, F, G, H, I) Unit Name : Service Unit (Monitor)										
								</		

MISCELLANEOUS

Circuit Symbol and No.

R 5211
R 5212

A

R 5213
R 5214
R 5216
R 5217
R 5218

R 5219
R 5220
R 5221
R 5222 (A,B,D,E,F,G,H,I)
R 5225

B

R 5326
R 5327
R 5329
R 5331
R 5332

R 5333
R 5334
R 5335
R 5339

CAPACITORS

C

C 5001
C 5002
C 5003
C 5004
C 5005

■

C 5006
C 5007
C 5008
C 5009
C 5010

D

C 5013
C 5014
C 5101
C 5103
C 5106

■

C 5107
C 5108
C 5109
C 5110
C 5111 (C)

E

C 5112
C 5114
C 5117 (C)
C 5201
C 5203

■

C 5204
C 5205
C 5206
C 5207 (A,B,D,E,F,G,H,I)
C 5207 (C)

F

C 5208
C 5209
C 5210
C 5212
C 5213

C 5214

Part No.

RS1/16SS332J
RS1/16SS2702D

RS1/16SS2201D
RS1/8SQ2R2J
RS1/16SS7502D
RS1/16SS3902D
RS1/16SS1202D

RS1/16SS472J
RS1/16SS103J
RS1/16SS332J
RS1/16SS0R0J
RS1/16SS272J

RS1/8SQ0R0J
RS1/16SS153J
RS1/16SS105J
RS1/16SS153J
RS1/16SS472J

RS1/16SS101J
RS1/16SS223J
RS1/16SS473J
RS1/16SS472J

CKSSYB104K10
CKSSYB103K16
CKSSYB103K16
CKSSYB104K10
CKSSYB104K10

CKSSYB103K16
CKSSYB103K16
CKSRYX106M6R3
CKSSYB104K10
CKSSYB104K10

CKSSYX105K10
CKSSYX105K10
CKSSYB332K50
CKSQYX106K16
CKSSYX105K16

CKSSYX105K16
CKSSYB104K16
CKSSYX105K10
CCSSCH101J50
CCSSCH471J50

CKSYX106K35
CKSRYB224K16
CCSSCH471J50
CKSSYB224K6R3
CKSSYX105K10

CKSSYB224K6R3
CKSRYB224K16
CKSSYB222K50
CKSSYB102K50
CKSSYB104K10

CKSSYX105K16
CKSSYX105K10
CKSRYX105K25
CKSRYX105K50
CKSRYX104K50

CKSRYX104K50

Circuit Symbol and No.

C 5215
C 5217
C 5218
C 5219

C 5220
C 5221
C 5222
C 5224
C 5303

C 5309
C 5311
C 5312
C 5314
C 5315

C 5317
C 5318
C 5319
C 5321
C 5322

C 5323
C 5324
C 5326
C 5327
C 5328

C 5330
C 5331
C 5402

C**Unit Number : CWX4609****Unit Name : DVD Core Unit****MISCELLANEOUS**

IC 1002 Regulator IC
IC 1004 IC
IC 1251 IC
IC 1401 Flash ROM Unit
IC 1402 Flash ROM Unit

IC 1480 RAM IC
IC 1501 IC
IC 1953 IC
Q 1101 Bipolar TR
Q 1102 Bipolar TR

Q 1103 Transistor
Q 1104 Transistor
L 1501 Inductor
L 1511 Chip Beads
L 1902 Inductor

L 1903 Inductor
L 1904 Resistor
X 1501 Crystal Resonator 27.000 MHz
S 1 Lever Switch
S 3 Lever Switch

F 1001 Filter
F 1002 EMI Filter
VR 1101 SMD Semi Fixed VR 6.8 kohm(B)
VR 1102 SMD Semi Fixed VR 15 kohm(B)
CN 1101 FFC/FPC Connector

Part No.

CKSRYX104K50
CKSQYX475K25
CKSSYB682K25
CKSRYX475K6R3

CCSSCH101J50
CKSSYB561K50
CKSQYX475K25
CCSSCH102J50
CKSSYB102K50

CKSSYB104K16
CKSYX106K35
CKSSYB102K50
CKSSYB104K10
CKSQYX106K10

CKSSYB102K50
CKSRYX104K50
CKSQYB334K50
CKSSYB102K50
CKSSYB104K16

CKSRYX475K10
CKSRYX225K10
CKSSYB104K10
CKSYX106K35
CKSSYX104K50

CKSSYB102K50
CKSSYB102K50
CKSQYX475K10

MM1886A50P
NJM2855DL1-33
BA5839FP
CWJ3337
CWJ3338

M12L64164A-5TG2Y
MN2DS0018MA
S-1135D12-A6
LSCR523UB
LSCR523UB

2SAR293PGZE
2SAR293PGZE
CTF1743
VTL1126
CTF1487

CTF1558
RS1/16SS0R0J
CSS1823
CSN1090
CSN1089

DTF1106
DTL1106
CCP1661
CCP1573
CKS6776

5
Circuit Symbol and No.
CN 1952 Connector

RESISTORS

R 1004	RS1/16SS4702F
R 1007	RS1/16SS6801F
R 1019	RS1/16SS101J
R 1025	RS1/16SS101J
R 1027	RS1/16SS101J
R 1101	RS1/16SS104J
R 1102	RS1/16SS104J
R 1103	RS1/16SS4300F
R 1104	RS1/16SS5100F
R 1105	RS1/16SS4300F
R 1106	RS1/16SS5600F
R 1109	RS1/16SS3R3J
R 1110	RS1/16SS3R3J
R 1111	RS1/10SR3R3J
R 1112	RS1/10SR3R3J
R 1113	RS1/10SR3R9J
R 1114	RS1/10SR3R3J
R 1115	RS1/10SR2R7J
R 1116	RS1/10SR2R7J
R 1117	RS1/10SR3R9J
R 1118	RS1/10SR3R9J
R 1223	RS1/16SS561J
R 1225	RS1/16SS471J
R 1251	RS1/16SS333J
R 1252	RS1/16SS473J
R 1253	RS1/16SS333J
R 1254	RS1/16SS473J
R 1255	RS1/16SS183J
R 1256	RS1/16SS153J
R 1257	RS1/16SS221J
R 1258	RS1/16SS221J
R 1401	RS1/16SS221J
R 1402	RS1/16SS104J
R 1405	RS1/16SS104J
R 1406	RS1/16SS472J
R 1480	RAB4CQ560J
R 1481	RAB4CQ560J
R 1482	RAB4CQ560J
R 1483	RAB4CQ560J
R 1484	RAB4CQ560J
R 1485	RAB4CQ560J
R 1486	RAB4CQ560J
R 1487	RAB4CQ560J
R 1488	RAB4CQ560J
R 1489	RS1/16SS560J
R 1490	RS1/16SS560J
R 1501	RS1/16SS122J
R 1503	RS1/16SS105J
R 1504	RS1/16SS121J
R 1509	RS1/16SS102J
R 1510	RS1/16SS102J
R 1512	RS1/16SS470J
R 1513	RS1/16SS203J
R 1514	RS1/16SS183J
R 1516	RS1/16SS104J
R 1517	RS1/16SS103J

6
Part No.
CKS4926

7
Circuit Symbol and No.

R 1518
R 1522
R 1523
R 1524
R 1525
R 1526
R 1527
R 1528
R 1529
R 1530
R 1531
R 1533
R 1534
R 1535
R 1536
R 1537
R 1538
R 1539
R 1540
R 1541
R 1542
R 1546
R 1601
R 1602
R 1603
R 1604
R 1605
R 1670
R 1671
R 1672
R 1674
R 1982
R 1983
R 1990
R 1991
R 1996
R 1997
R 2002
R 2003

CAPACITORS

C 1002	
C 1003	
C 1004	4.7 uF
C 1005	
C 1011	
C 1015	
C 1016	
C 1018	
C 1040	
C 1041	
C 1101	10 uF
C 1104	
C 1105	
C 1106	
C 1107	
C 1108	
C 1109	
C 1110	
C 1111	

RS1/16SS103J
RS1/16SS104J
RS1/16SS221J
RS1/16SS472J
RS1/16SS103J
RS1/16SS103J
RS1/16SS682J
RS1/16SS103J
RS1/16SS103J
RS1/16SS103J
RS1/16SS103J
RS1/16SS103J
RS1/16SS104J
RS1/16SS103J
RS1/16SS103J
RS1/16SS104J
RS1/16SS221J
RS1/16SS104J
RS1/16SS104J
RS1/16SS104J
RS1/16SS104J
RS1/16SS221J
RS1/16SS221J
RS1/16SS103J
RS1/16SS682J
RS1/16SS123J
RS1/16SS123J
RS1/16SS1002D
RS1/16SS105J
RS1/16SS105J
RS1/16SS1002D
RS1/16SS2402D
RS1/16SS2000D
RS1/16SS3002D
RS1/16SS822J
RS1/16SS1000D
RS1/16SS2000D
RS1/16SS101J
RS1/16SS2000D
RS1/16SS101J
RS1/16SS2000D
RS1/16SS101J
CKSSYB104K16
CKSSYB104K16
CCG1201
CKSRYB105K16
CKSRYB105K10
CKSSYB102K50
CKSSYB102K50
CKSSYB104K10
CCSRCH821J50
CCSRCH271J50
DCH1201
CKSSYB104K10
CKSSYB104K10
CKSSYB103K16
CKSSYB103K16
CKSSYB103K16
CKSRYB224K16
CKSSYB103K16
CKSRYB224K16

1 <u>Circuit Symbol and No.</u>			2 <u>Part No.</u>	
C	1112	22 uF	DCH1256	
A	C	1113	DCH1256	
	C	1210	CKSSYB104K16	
	C	1251	CEVW101M16	
	C	1252	CCG1222	
	C	1253	CKSSYB104K16	
	C	1254	CKSSYB104K16	
	C	1255	CKSSYB104K16	
	C	1401	CKSSYB104K16	
	C	1403	CKSSYB104K10	
	C	1408	CKSSYB104K10	
B	C	1410	CKSSYB104K16	
	C	1480	CKSSYB104K10	
	C	1481	CKSSYB104K10	
	C	1482	CKSSYB104K10	
	C	1484	CKSSYB104K10	
	C	1485	CKSSYB104K10	
	C	1487	CKSSYB104K10	
	C	1488	CKSSYB104K10	
	C	1489	DCH1201	
	C	1490	CKSSYB102K50	
C	C	1501	DCH1201	
	C	1502	DCH1201	
	C	1503	CKSSYB104K10	
	C	1504	CKSSYB104K10	
	C	1505	CKSSYB104K10	
	C	1506	CKSSYB104K10	
	C	1507	CKSSYB104K10	
	C	1508	CKSSYB104K10	
	C	1509	CKSSYB104K10	
	C	1510	CCSSCH120J50	
D	C	1511	CKSSYB104K10	
	C	1512	CCSSCH120J50	
	C	1513	CKSSYB104K10	
	C	1514	CKSSYB104K10	
	C	1515	CKSSYB104K10	
	C	1516	CKSSYB104K10	
	C	1517	CKSSYB104K10	
	C	1518	CKSSYB104K10	
	C	1519	CKSSYB104K10	
	C	1520	CKSSYB104K10	
E	C	1521	CKSSYB104K10	
	C	1522	CKSSYB104K10	
	C	1523	CKSSYB104K10	
	C	1524	CKSSYB473K16	
	C	1526	CKSSYB103K16	
	C	1528	CKSSYB471K50	
	C	1601	CKSSYB103K16	
	C	1602	CCSSCH101J50	
	C	1603	CCSSCH101J50	
	C	1604	CCSSCH680J50	
	C	1605	CCSSCH680J50	
	C	1606	CKSSYB104K10	
	C	1607	DCH1201	
	C	1608	CCG1201	
	C	1609	CKSSYB104K10	
F	C	1612	CKSSYB104K10	
	C	1613	CKSSYB104K10	
	C	1614	CKSSYB104K10	
	C	1615	CKSSYB104K10	

3 <u>Circuit Symbol and No.</u>			4 <u>Part No.</u>	
C	1616		CKSSYB104K10	
C	1617		CKSSYB104K10	
C	1618		CCSSCH101J50	
C	1619		CKSSYB562K25	
C	1620		CKSSYB224K6R3	
C	1621		CKSSYB224K6R3	
C	1622		CKSSYB333K16	
C	1623		CKSRYB105K10	
C	1624		CKSSYB104K10	
C	1625		CKSSYB104K10	
C	1671		CKSSYB104K10	
C	1673		CKSSYB104K10	
C	1674		CKSSYB104K10	
C	1676		CKSRYB105K10	
C	1809		CKSSYB102K50	
C	1954		CKSRYB105K10	
C	1955		CKSSYB104K16	
C	1962		CKSRYB105K10	

E

Unit Number : QXX3321

Unit Name : Service Unit (Keyboard)

MISCELLANEOUS

IC	6001	IR RC REC Module	PNJ4833M
D	6001	LED	NSSM124-6717
S	6001	Push Switch	CSG1155
S	6002	Push Switch	CSG1155
S	6003	Push Switch	CSG1155
S	6004	Push Switch	CSG1155
S	6005	Push Switch	CSG1155
S	6006	Push Switch	CSG1155
S	6007	Push Switch	CSG1155
S	6008	Push Switch	CSG1155
S	6009	Push Switch	CSG1155
CN	6001	FFC/FPC Connector	CKS6757

RESISTORS

R	6001	RS1/16SS470J
R	6002	RS1/16SS392J
R	6003	RS1/16SS472J
R	6004	RS1/16SS123J
R	6005	RS1/16SS182J
R	6006	RS1/16SS222J
R	6007	RS1/16SS472J

CAPACITORS

C	6004	CKSQYX106K10
C	6006	CKSSYB104K16

F

Unit Number : QXX3322 (A)

Unit Name : Service Unit (I-Data)

5
Circuit Symbol and No.

6
Part No.

7

8

MISCELLANEOUS

CN 3201 Connector(A)
CN 3202 FFC/FPC Connector(A)

CKS6603
CKS6634

A

RESISTORS

R 3202 (A)

RS1/16SS102J

B

C

D

E

F