
9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

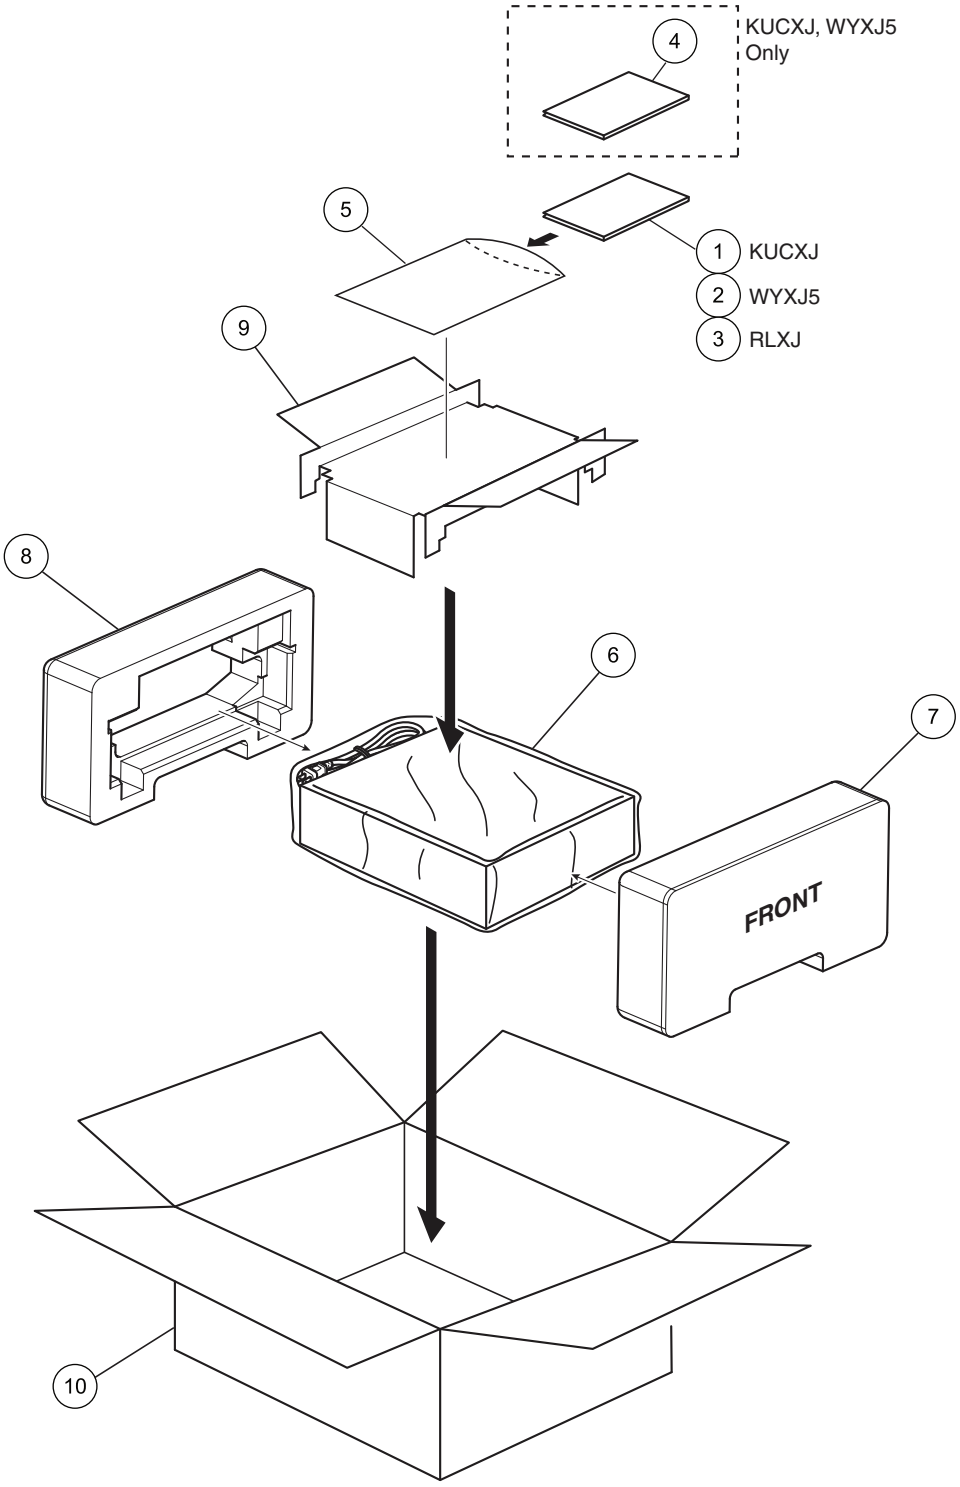

(1) PACKING SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	Operating Instructions (English)	See Contrast table (2)
	2	Operating Instructions (English, French, German, Italian, Dutch, Spanish, Russian)	See Contrast table (2)
	3	Operating Instructions (English, Spanish, Chinese)	See Contrast table (2)
NSP	4	Warranty Card	See Contrast table (2)
NSP	5	Polyethylene Bag (0.06 x 230 x 340)	AHG7117
	6	Packing Sheet	AHG7010
	7	Pad F	DHA1741
	8	Pad R	DHA1742
	9	Pad T	DHA1764
	10	Carton Box	See Contrast table (2)

(2) CONTRAST TABLE

DJM-700-S/KUCXJ, WYXJ5, RLXJ, DJM-700-K/KUCXJ, WYXJ5 and RLXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-700-S /KUCXJ	DJM-700-S /WYXJ5	DJM-700-S /RLXJ	DJM-700-K /KUCXJ	DJM-700-K /WYXJ5	DJM-700-K /RLXJ
	1	Operating Instructions (English)	DRB1426	Not used	Not used	DRB1426	Not used	Not used
	2	Operating Instructions (English, French, German, Italian, Dutch, Spanish, Russian)	Not used	DRB1425	Not used	Not used	DRB1425	Not used
	3	Operating Instructions (English, Spanish, Chinese)	Not used	Not used	DRB1427	Not used	Not used	DRB1427
NSP	4	Warranty Card	ARY7043	ARY7107	Not used	ARY7043	ARY7107	Not used
	10	Carton Box	DHG2690	DHG2689	DHG2691	DHG2696	DHG2695	DHG2715

9.2 EXTERIOR SECTION

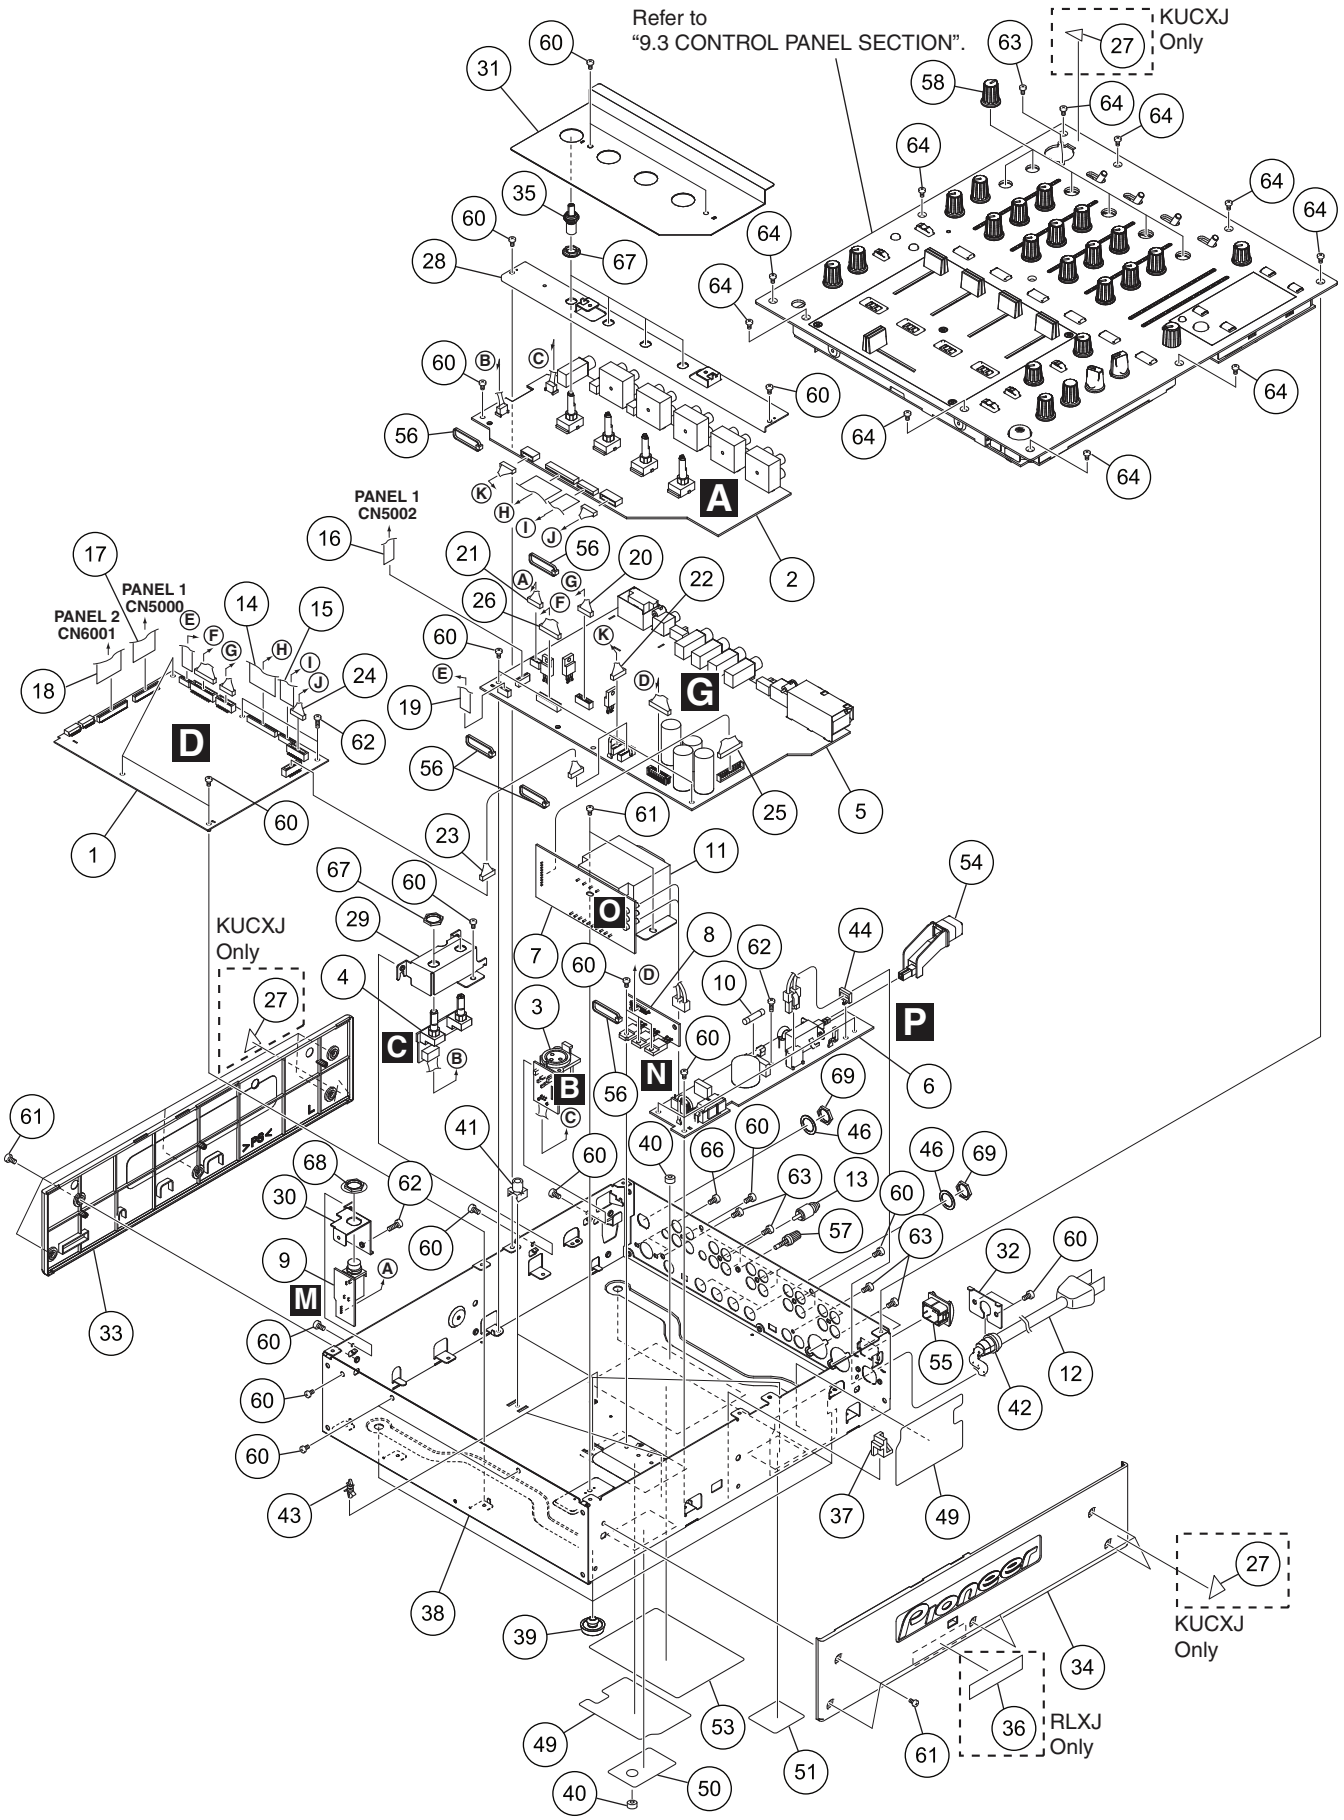

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.
	1	MAIN Assy	DWX2674
	2	INPUT Assy	DWX2675
	3	MIC1 JACK Assy	DWX2685
	4	MIC VR Assy	DWX2686
	5	OUTPUT Assy	DWX2676
⚠	6	PRIMARY Assy	See Contrast table (2)
	7	TRANS Assy	See Contrast table (2)
	8	REG Assy	DWX2689
	9	HP JACK Assy	DWX2690
⚠	10	Fuse (FU1901:T500mA)	AEK1051
⚠	11	Power Transformer	See Contrast table (2)
⚠	12	AC Power Cord	See Contrast table (2)
	13	Short Pin Plug	AKM7008
	14	30P FFC	DDD1362
	15	16P FFC	DDD1363
	16	11P FFC	DDD1366
	17	27P FFC	DDD1367
	18	31P FFC	DDD1368
	19	9P FFC	DDD1364
	20	Connector Assy	DKP3787
	21	Connector Assy	PF04PP-D27
	22	Connector Assy	PF06PP-D10
	23	Connector Assy	PF07PP-S12
	24	Connector Assy	PF08PP-D12
	25	Connector Assy	PF10EE-S22
	26	Connector Assy	PF11PP-D10
NSP	27	Label	See Contrast table (2)
	28	Trim Stay	DNF1765
	29	MIC VR Stay	DNF1766
	30	HP Stay	DNF1767
	31	Input Shield	DNF1770
	32	Power Cord Stay	DNF1792
	33	Side Panel L	DNK4945
	34	Side Panel R	See Contrast table (2)
	35	Extension Shaft	DNK4948
NSP	36	V Select Label	See Contrast table (2)
	37	Stopper (Screw)	DNK5084
	38	Chassis Assy	See Contrast table (2)
	39	Foot Assy	REC-434
	40	Spacer	AEB7092
	41	PCB Mold (PP)	AMR2534
	42	Cord Stopper	See Contrast table (2)
	43	Spacer	DEC2369
	44	Locking Mini Clamp	DEC2439
	45	•••••	
	46	Washer	DEC2920
	47	•••••	
	48	•••••	
	49	Bottom Sheet A	DEC3020
	50	Bottom Sheet B	DEC3021
	51	Bottom Sheet C	DEC3022
	52	•••••	
NSP	53	Label	See Contrast table (2)
	54	Button (POWER)	DAC2394
	55	Power Knob Guard	DNK4534
	56	Binder	ZCA-SKB90BK
	57	Terminal Screw	AKE-031
	58	Knob (BLACK)	DAA1212
	59	•••••	
	60	Screw	BBZ30P060FTB
	61	Screw	BBZ40P060FTB
	62	Screw	BCZ30P140FTC
	63	Screw	BPZ30P080FTB
	64	Screw	See Contrast table (2)
	65	•••••	
	66	Screw	PMH30P100FTB
	67	Flange Nut M9	DBN1008
	68	Flange Nut M12	DBN1012
	69	Nut M12	NKX2FNI

(2) CONTRAST TABLE

DJM-700-S/KUCXJ, WYXJ5, RLXJ, DJM-700-K/KUCXJ, WYXJ5 and RLXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-700-S /KUCXJ	DJM-700-S /WYXJ5	DJM-700-S /RLXJ	DJM-700-K /KUCXJ	DJM-700-K /WYXJ5	DJM-700-K /RLXJ
⚠	6	PRIMARY Assy	DWX2687	DWX2687	DWX2692	DWX2687	DWX2687	DWX2692
	7	TRANS Assy	DWX2688	DWX2688	DWX2757	DWX2688	DWX2688	DWX2757
⚠	11	Power Transformer	DTT1209	DTT1208	DTT1208	DTT1209	DTT1208	DTT1208
⚠	12	AC Power Cord	VDG1075	Not used	Not used	VDG1075	Not used	Not used
⚠	12	Power Cord with Plug	Not used	VDG1061	VDG1061	Not used	VDG1061	VDG1061
NSP	27	Label	DRW1975	Not used	Not used	DRW1975	Not used	Not used
	34	Side Panel R	DNK4946	DNK4946	DNK4947	DNK4946	DNK4946	DNK4947
NSP	36	V Select Label	Not used	Not used	DRW2349	Not used	Not used	DRW2349
	38	Chassis Assy	DXB1952	DXB1951	DXB1951	DXB1952	DXB1951	DXB1951
	42	Cord Stopper	CM-22C	CM-22B	CM-22B	CM-22C	CM-22B	CM-22B
NSP	53	Label	DRW2351	DRW2350	DRW2352	DRW2357	DRW2356	DRW2358
	64	Screw	CCZ30P060FNI	CCZ30P060FNI	CCZ30P060FNI	CCZ30P060FTB	CCZ30P060FTB	CCZ30P060FTB

9.3 CONTROL PANEL SECTION

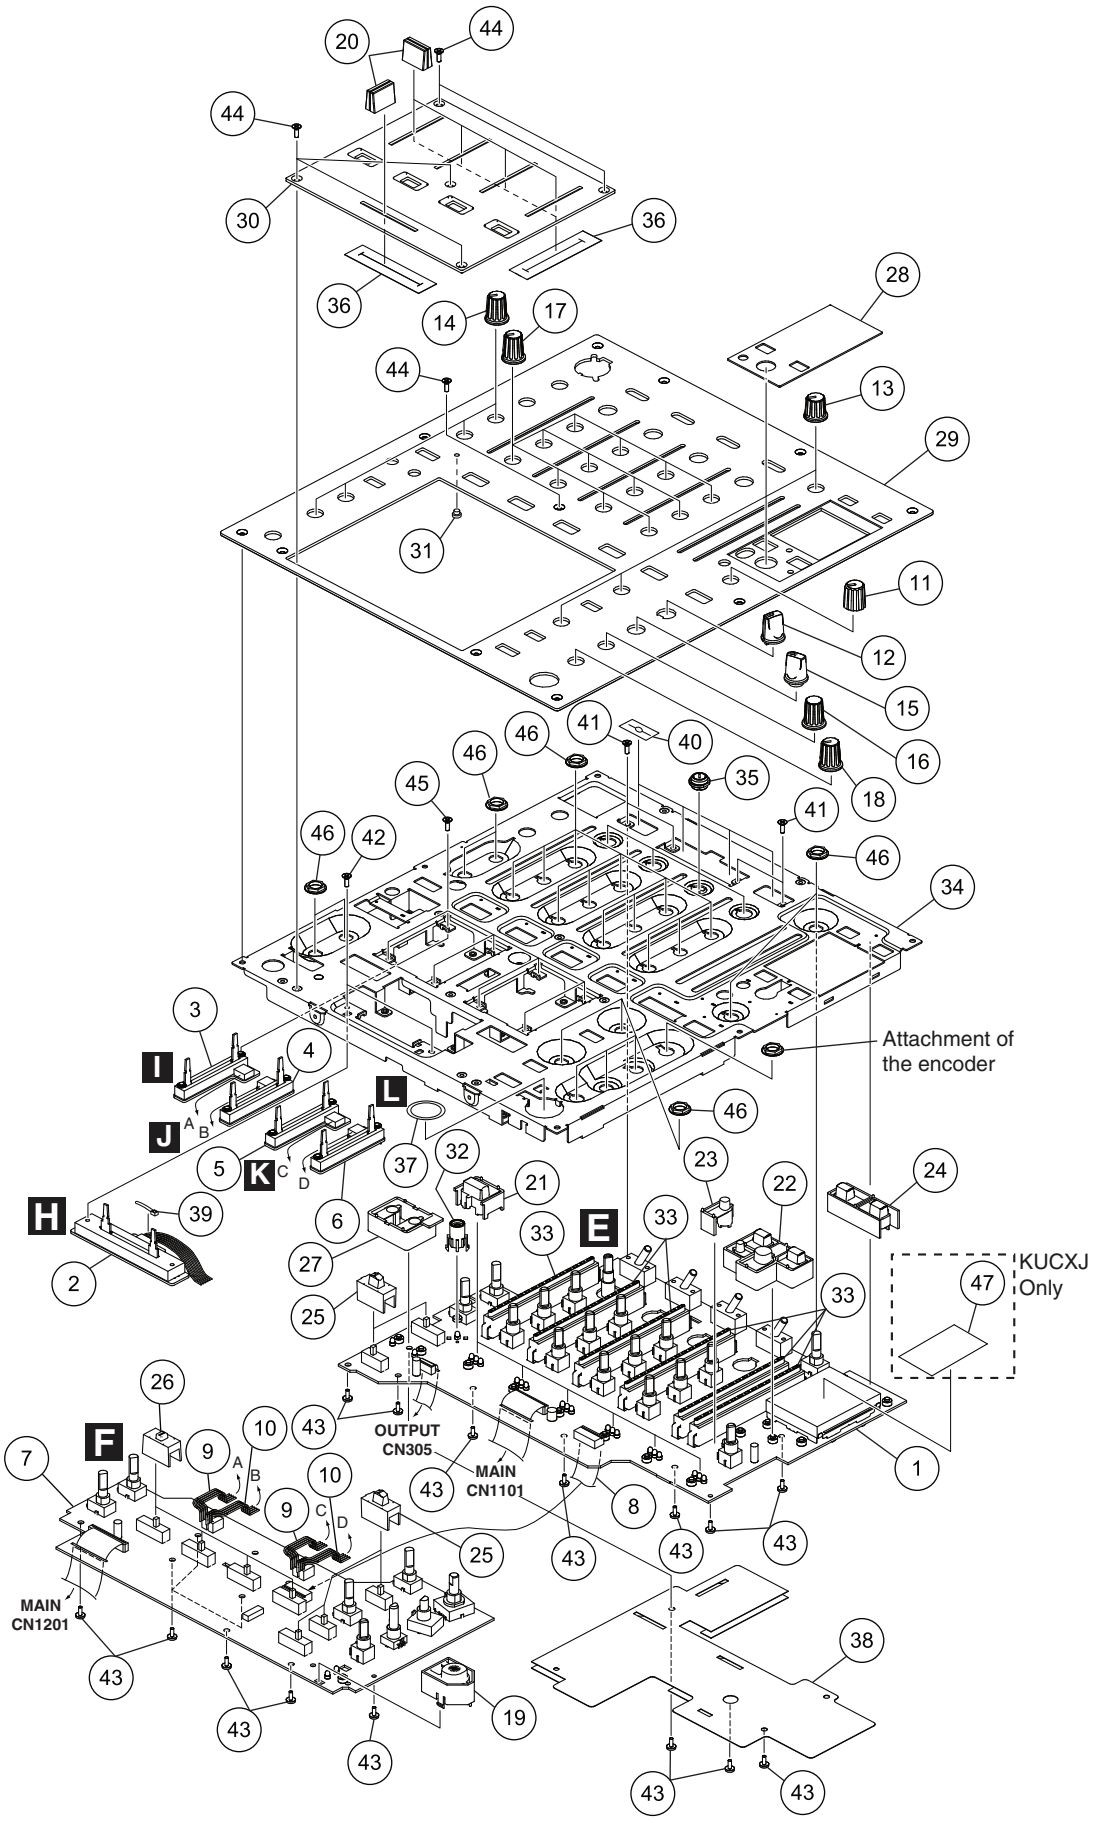

(1) CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	PANEL 1 Assy	DWX2677
	2	FADER (CROSS) Assy	DWX2680
	3	FADER (CH1) Assy	DWX2681
	4	FADER (CH2) Assy	DWX2682
	5	FADER (CH3) Assy	DWX2683
	6	FADER (CH4) Assy	DWX2684
	7	PANEL 2 Assy	DWX2678
	8	13P FFC	DDD1369
	9	Connector Assy	PF04PP-B05
	10	Connector Assy	PF04PP4B05
	11	Rotary SW Knob (HM)	DAA1197
	12	Select Knob	DAA1205
	13	Knob (MA)	DAA1210
	14	Knob (BLACK)	DAA1212
	15	FX SEL Knob	DAA1213
	16	Knob (TIME)	DAA1214
	17	Rotary SW Knob (G)	DAA1219
	18	Rotary Knob (BN)	DAA1220
	19	Effect Knob	DAC2304
	20	Slider Knob (L2)	DAC2371
	21	Button (CUE)	DAC2395
	22	Button (TAP)	DAC2397
	23	Button (FL)	DAC2398
	24	Button (MIDI)	DAC2399
	25	Slide SW Cap	DAC2400
	26	Slide SW Cap (W)	DAC2401
	27	Button (FS)	DAC2422
	28	Display Window	See Contrast table (2)
	29	Control Panel	See Contrast table (2)
	30	Fader Panel	See Contrast table (2)
	31	Lens	DNK4532
	32	Lens Holder	DNK4533
	33	Level Meter Assy	DXB1882
	34	Panel Stay	DNF1764
	35	Bush	DNK4996
	36	Fader Packing	DEC2903
	37	SW Packing	DEC2929
	38	Barrier (PANEL)	DEC3009
	39	Binder	ZCA-SKB90BK
	40	SW Packing	DED1177
	41	Screw	AMZ26P040FTC
	42	Screw	AMZ30P040FTC
	43	Screw	BBZ30P060FTB
	44	Screw	See Contrast table (2)
	45	Screw	PMA20P040FTC
	46	Flange Nut M9	DBN1008
	47	Barrier (FL)	See Contrast table (2)

(2) CONTRAST TABLE

DJM-700-S/KUCXJ, WYXJ5, RLXJ, DJM-700-K/KUCXJ, WYXJ5 and RLXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-700-S /KUCXJ	DJM-700-S /WYXJ5	DJM-700-S /RLXJ	DJM-700-K /KUCXJ	DJM-700-K /WYXJ5	DJM-700-K /RLXJ
	28	Display Window S	DAH2542	DAH2542	DAH2542	Not used	Not used	Not used
	28	Display Window B	Not used	Not used	Not used	DAH2543	DAH2543	DAH2543
	29	Control Panel	DNB1152	DNB1152	DNB1152	Not used	Not used	Not used
	29	Control Panel B	Not used	Not used	Not used	DNB1153	DNB1153	DNB1153
	30	Fader Panel	DNB1154	DNB1154	DNB1154	Not used	Not used	Not used
	30	Fader Panel B	Not used	Not used	Not used	DNB1155	DNB1155	DNB1155
	44	Screw	CCZ30P060FNI	CCZ30P060FNI	CCZ30P060FNI	CCZ30P060FTB	CCZ30P060FTB	CCZ30P060FTB
	47	Barrier (FL)	DEC3058	Not used	Not used	DEC3058	Not used	Not used

■ PCB PARTS LIST FOR DJM-700-S/KUCXJ UNLESS OTHER WISE NOTED

A INPUT ASSY

SEMICONDUCTORS

Mark No.	Description	Part No.
IC3001,3002,3007,3008		NJM2121MD
IC3003,3006,3009,3012		NJM4580MD
IC3013,3014,3019,3020		NJM2121MD
IC3015,3018,3021		NJM4580MD
IC3024-3028		RNB4580F
Q3001-3003,3008-3010		RT1N241M
Q3004-3007,3011-3014		2SK209
Q3015,3020		RT1N241M
Q3016-3019,3021,3022		2SK209
Q3023,3024,3027,3028		2SC5938A
Q3025,3026		2SK209
D3001,3002		UDZS5R6(B)
D3003-3008		1SS355

MISCELLANEOUS

Mark No.	Description	Part No.
L3001-3004	FERRITE CORE	VTF1093
JA3001,3005,3007,3008	JACK	DKB1083
JA3002,3006	JACK	RKN1004
JA3010	JACK	DKB1083
JA3012	HP JACK	DKN1452
VR3001-3004	POTENTIOMETER	DCS1098
CN3003	CONNECTOR	S6B-PH
CN3004	30P CONNECTOR	VKN1290
CN3011,3013	CONNECTOR	CKS2643
CN3014	16P CONNECTOR	VKN1276

RESISTORS

Mark No.	Description	Part No.
R3005-3008,3063,3064		RN1/16SE1001D
R3011-3014,3077,3078		RN1/16SE1102D
R3015-3018,3083,3084		RN1/16SE1502D
R3027,3028,3095,3096		RN1/16SE3002D
R3029,3030,3097,3098		RN1/16SE2002D
R3031,3032,3099,3100		RN1/16SE1303D
R3067,3068,3073,3074		RN1/16SE1501D
R3071,3072,3137,3138		RN1/16SE2401D
R3081,3082,3145,3146		RN1/16SE1800D
R3085,3086,3149,3150		RN1/16SE1002D
R3131,3132,3195		RN1/16SE1001D
R3135,3136,3139,3140		RN1/16SE1501D
R3143,3144,3207,3208		RN1/16SE1102D
R3147,3148,3211,3212		RN1/16SE1502D
R3159,3160,3223,3224		RN1/16SE3002D
R3161,3162,3225,3226		RN1/16SE2002D
R3163,3164,3227,3228		RN1/16SE1303D
R3199,3200,3203,3204		RN1/16SE1501D
R3201,3202		RN1/16SE2401D
R3209,3210		RN1/16SE1800D
R3213,3214		RN1/16SE1002D
R3257,3258,3262,3273		RS1/16S5101D
R3259,3263,3276,3281		RS1/16S4702D
R3260,3264,3278,3282		RS1/16S1303D
R3261,3266,3279,3283		RS1/16S4701D
R3265,3284		RS1/16S4301D
R3271,3272,3289,3290		RD1/2VM331J
R3274,3280		RS1/16S5101D
R3293,3295		RS1/16S2201D
R3294		RN1/16SE2201D
R3298,3299,3303		RS1/16S3302D
R3301,3302,3304		RN1/16SE2000D
R3305,3306,3309		RS1/16S1002D
R3307,3308,3310,3311		RS1/16S3301D
R3317,3319		RN1/16SE2200D
R3375-3380		RS1/10S0R0J
Other Resistors		RS1/16S###J

CAPACITORS

Mark No.	Description	Part No.
C3001,3006,3051,3054		CFTLA103J50
C3002-3005,3007-3010		CCSRCH101J50
C3015,3016,3018,3020		CKSRYB104K25
C3023-3028,3085-3090		CFTNA334J50
C3032,3033,3068,3069		CKSRYB104K25
C3047,3048,3055,3056		CCSRCH101J50
C3049,3050,3111,3112		CCSRCH221J50
C3059,3060,3117,3118		CCSRCH471J50
C3061,3062,3119,3120		CKSRYB223K25
C3063,3064,3121,3122		CCSRCH331J50
C3065,3066,3123,3124		CEHAT221M10
C3070,3071,3129,3130		CQMA752J50
C3073,3074,3131,3132		CEAL100M50
C3077,3078,3080,3082		CKSRYB104K25
C3094,3095,3126,3127		CKSRYB104K25
C3109,3110,3115,3116		CCSRCH101J50
C3135,3136,3138,3140		CKSRYB104K25
C3143-3148,3201-3206		CFTNA334J50
C3152,3153,3184,3185		CKSRYB104K25
C3167,3168,3173,3174		CCSRCH101J50
C3169,3170		CCSRCH221J50
C3175,3176		CCSRCH471J50
C3177,3178		CKSRYB223K25
C3179,3180,3272,3273		CCSRCH331J50
C3181,3182		CEHAT221M10
C3186,3187		CQMA752J50
C3189,3190,3269-3271		CEAL100M50
C3193,3194,3196,3198		CKSRYB104K25
C3210,3211,3232,3233		CKSRYB104K25
C3227,3249		CKSRYB472K50
C3228,3250		CKSRYB562K50
C3235,3236,3274,3278		CKSRYB104K25
C3239,3253		CCSRCH560J50
C3240,3254		CCSRCH270J50
C3241,3242,3255,3256		CKSRYB473K25
C3245,3246,3257,3258		CQMA472J50
C3247,3248,3259,3260		CEANP100M35
C3251,3291		CKSRYB152K50
C3252,3290		CKSRYB182K50
C3261,3262		CQMA103J50
C3263,3264,3267,3276		CCSRCH102J50
C3265,3266,3268		CCSRCH4R0C50
C3275		CCSRCH331J50
C3277,3279		CCSRCH102J50
C3280,3281,3285,3286		CKSRYB104K25
C3282,3283		CEALNP220M16
C3288,3289		CEAL100M50
C3298,3299		CEHAT101M25
C3300-3305		CCSRCH181J50
C3306-3309		CKSRYB334K10

Mark	No.	Description	Part No.
B		**MIC1 JACK ASSY**	
		MISCELLANEOUS	
	JA7501	CONNECTOR	DKN1136
	CN7502	PLUG	CKS3153
C		**MIC VR ASSY**	
		MISCELLANEOUS	
	VR7601,7602	POTENTIOMETER	DCS1099
	CN7601	PLUG	CKS3153
D		**MAIN ASSY**	
		SEMICONDUCTORS	
⚠	IC1001		S-1200B33-M5
⚠	IC1002		BD9109FVM
⚠	IC1003		BD9106FVM
⚠	IC1004		S-1200B25-M5
	IC1101		DYW1761
	IC1204,1301,1303,1306		TC7SH08FUS1
	IC1205		DYW1760
	IC1302,1307		TC7SHU04FUS1
	IC1304		XC3S50-4TQG144C
	IC1305		BU4230G
	IC1308,1309		TC7SH08FUS1
	IC1401		D610A003BPYPA225
	IC1402		K4S641632K-UC75
	IC1501-1508		NJM4580MD
	IC1509,1510		RNB4580F
	IC1511-1514		WM8786GEDS/V
	IC1601,1602,1605,1611		AK4387ET
	IC1603		PCM1738EG-3
	IC1604,1610		AK5358AET
	IC1606,1607		NJM5532MD
	IC1701		TC7S04FU
	IC1702		AD1895AYRS
	IC1703		AK4114VQ
	Q1101		2SC4154
	Q1202		RT1P241M
	Q1301		2SC3052
	Q1401		RT1N241M
	D1101-1106,1201-1206		1SS355
	D1401		SML-310DT
	D1501-1516,1601-1604		RB706D-40
	D1605,1606		UDZS3R3(B)
		MISCELLANEOUS	
	L1001,1002	INDUCTOR	BTH1112
	L1004	INDUCTOR (470 uH)	DTL1123
	L1180,1266	CHIP COIL	LCTAW330J2520
	F1401	COIL	RTF1189
	KN1002-1005	EARTH METAL FITTING	VNF1109
	X1302	CRYSTAL RESONATOR (24 MHz)	ASS7025
	X1303	CRYSTAL RESONATOR (20 MHz)	ASS7023
	CN1001,1603	CONNECTOR	AKM1278
	CN1101	27P CONNECTOR	VKN1431
	CN1102,1202	CONNECTOR	VKN1945
	CN1201	31P CONNECTOR	VKN1435
	CN1501	30P CONNECTOR	VKN1434
	CN1502	16P CONNECTOR	VKN1420
	CN1503	CONNECTOR	AKM1279
	CN1602	CONNECTOR	AKM1282
	CN1701	9P CONNECTOR	VKN1413
		RESISTORS	
	R1003,1011,1018,1129		RS1/10S0R0J
	R1014		RS1/16S1002D
	R1015		RS1/16S2002D
	R1019,1020		RS1/8S0R0J
	R1172,1181,1238,1260		RS1/10S0R0J
	R1267,1301,1304,1341		RS1/10S0R0J
	R1325,1328-1331		RAB4C220J
	R1333-1335,1427-1433		RAB4C220J
	R1407,1749,1763		RS1/10S0R0J
	R1509-1524,1541-1548		RN1/16SE3301D
	R1525-1532,1581-1588		RN1/16SE2401D
	R1549,1552,1553,1556		RN1/16SE1201D
	R1550,1551,1554,1555		RN1/16SE3601D
	R1557,1560,1561,1564		RN1/16SE1201D
	R1558,1559,1562,1563		RN1/16SE3601D
	R1565-1580,1597-1604		RN1/16SE3301D
	R1605,1608,1609,1612		RN1/16SE1201D
	R1606,1607,1610,1611		RN1/16SE3601D
	R1613,1616,1617,1620		RN1/16SE1201D
	R1614,1615,1618,1619		RN1/16SE3601D
	R1683		RN1/16SE1602D
	R1695-1698		RN1/16SE1201D
	R1755		RN1/16SE1802D
	Other Resistors		RS1/16S###J
		CAPACITORS	
	C1001,1003,1005,1008		CEVW101M10
	C1002,1004,1006,1007		CKSRYB104K25
	C1009-1013,1017,1020		CKSRYB104K25
	C1014,1015,1022,1023		CKSYB106K10
	C1016,1021,1104,1111		CEVW101M10
	C1018		CKSRYB331K50
	C1019		CCSRCH751J25
	C1024-1036,1103,1105		CKSRYB104K25
	C1037		CEVW331M6R3
	C1101,1107-1110,1205		CKSRYB103K50
	C1102,1206,1316		CKSRYF105Z10
	C1106,1112,1113		CKSRYB104K25
	C1114,1208,1218,1221		CEVW101M10
	C1201-1204,1207,1209		CKSRYB104K25
	C1210,1219,1220		CKSRYB104K25
	C1211-1215		CKSRYB471K50
	C1216,1217,1317,1319		CKSRYB103K50
	C1301,1305,1331,1405		CEVW101M10
	C1302-1304,1306-1315		CKSRYB104K25
	C1318,1320-1330,1332		CKSRYB104K25
	C1333,1337		CCSRCH180J50
	C1334,1338		CCSRCH150J50
	C1335,1336,1339,1401		CKSRYB104K25
	C1402,1455,1464		CEVW100M16
	C1403,1404,1406-1408		CKSRYB104K25

Mark No.	Description	Part No.
C1409,1454,1601,1602		CKSRYB103K50
C1410-1453,1456		CKSRYB104K25
C1458-1463,1502,1503		CKSRYB104K25
C1501,1504,1507,1510		CEVW100M25
C1505,1506,1508,1509		CKSRYB104K25
C1511,1514,1633,1635		CEVW100M25
C1512,1513,1523-1530		CKSRYB104K25
C1515-1522,1531-1538		CCSRCH101J50
C1539,1540,1543-1546		CKSRYB104K25
C1541,1542,1701,1709		CEVW101M10
C1547-1550		CCH1585
C1551-1554,1579-1582		CEVW100M16
C1555-1558,1567-1570		CKSRYB104K25
C1559-1566		CKSRYB272K50
C1571-1574		CKSYB106K10
C1575-1578,1605		CKSRYB104K25
C1604,1606-1609		CEVW100M16
C1610-1612,1616-1619		CKSRYB104K25
C1613-1615,1621,1623		CEVW100M16
C1620,1622,1649,1651		CKSRYB103K50
C1624,1640,1643,1645		CEVW100M16
C1625,1632,1634,1636		CKSRYB104K25
C1628-1631		CCSRCH222J50
C1637,1639		CEVW100M25
C1638,1641,1642,1647		CKSRYB104K25
C1646,1650,1657,1660		CEVW100M16
C1648,1653,1658,1659		CKSRYB104K25
C1662-1665		CEVW100M16
C1702,1705,1707		CKSRYB103K50
C1703,1704,1706,1708		CKSRYB104K25
C1714-1717		CKSRYB104K25
SEMICONDUCTORS		
IC1403		DYW1762

E PANEL 1 ASSY

Mark No.	Description	Part No.
SEMICONDUCTORS		
IC5000,5001		TC74HC4052AF
IC5002		NJM2903M
Q5000,5008-5010		2SC3052
Q5001-5005,5011		2SC4154
Q5006,5023,5027,5029		DTC143EK
Q5007,5024,5026,5028		2SB1188
Q5012-5015,5020,5022		2SC3052
Q5016-5019,5021		2SC4154
Q5025		RT1N431M
Q5030,5032,5034		2SB1188
Q5031,5033		DTC143EK
Q5035		RT1P431M
D5000,5001,5019-5026		1SS355
D5004,5006,5008,5010		SLI-343YYW(RST)
D5012,5014,5017,5018		SLI-343YYW(RST)
D5015		SLR343BC4T(JKLM)
D5016,5027,5028,5043		SLR-343VC(NPQ)
D5029-5032,5045-5048		SLI-343YYW(RST)
D5033-5041,5049-5057		SLR-343MC(NPQ)
D5042,5058,5059,5075		1SS355
D5044,5060,5061,5076		SLR-343VC(NPQ)
D5062-5065,5078-5081		SLI-343YYW(RST)
D5066-5074,5082-5090		SLR-343MC(NPQ)
D5077,5094,5095,5109		SLR-343VC(NPQ)
D5091-5093,5124-5126		1SS355
D5096-5099,5111-5114		SLI-343YYW(RST)
D5100-5108,5115-5123		SLR-343MC(NPQ)
D5110		SLR-343VC(NPQ)
D5134		1SS355
MISCELLANEOUS		
V5000	FL INDICATOR TUBE	DEL1063
VR5000-5009,5013	POTENTIOMETER	DCS1065
VR5010	POTENTIOMETER	DCS1095
VR5011	POTENTIOMETER	DCS1096
VR5012,5014	POTENTIOMETER	DCS1097
VR5015	POTENTIOMETER	DCS1065
S5000,5003,5004,5006	TACT SWITCH	DSG1079
S5001	SLIDE SWITCH	DSH1058
S5002,5005,5008	LEVER SWITCH	DSK1033
S5007,5009,5010	TACT SWITCH	DSG1079
S5011	LEVER SWITCH	DSK1033
S5012-5019	TACT SWITCH	DSG1079
S5020	SLIDE SWITCH	DSH1066
CN5000	27P CONNECTOR	VKN1258
CN5001	CONNECTOR 13P	52492-1320
CN5002	11P CONNECTOR	VKN1242
0	FL HOLDER	DNF1772
RESISTORS		
R5019,5037,5039,5041		RS1/10S391J
R5043,5045,5047		RS1/10S391J
R5056,5057		RS1/8S100J
R5186		RS1/10S0R0J
Other Resistors		RS1/16S###J
CAPACITORS		
C5000		CEJQ101M10
C5001-5010,5012		CKSRYB104K25
C5011		CEAT471M6R3
C5017-5019,5021-5054		CKSRYB104K25
C5020		CEAT470M35

F PANEL 2 ASSY

Mark No.	Description	Part No.
SEMICONDUCTORS		
IC6001		TC74HC4052AF
IC6002		TC74HCT08AF
Q6001		2SC4154
D6001,6002,6005-6028		1SS355
D6003,6004		SLI-343YYW(RST)
MISCELLANEOUS		
VR6001,6005	POTENTIOMETER	DCS1096
VR6002	POTENTIONETER	DCS1065
VR6003,6004	POTENTIOMETER	DCS1097
S6001	12MM GS ENCODER	DSX1064
S6002	TACT SWITCH	DSG1079
S6003	ROTARY SWITCH	DSG1098
S6004,6006	SLIDE SWITCH	DSH1058
S6005,6007	SLIDE SWITCH	DSH1066
S6008-6010	SLIDE SWITCH	DSH1058
S6011	ROTARY ENCODER	DSX1068

Mark	No.	Description	Part No.
	CN6001	31P CONNECTOR	VKN1262
	CN6002,6004	CONNECTOR	B4B-PH-K-Y
	CN6003,6006	CONNECTOR	B4B-PH
	CN6005	WIRE ASSEMBLY	PG06MR-E07
	CN6007	CONNECTOR 13P	52492-1320
	RESISTORS		
	All Resistors		RS1/16S###J
	CAPACITORS		
	C6001,6004,6006-6015		CKSRYB104K25
	C6002,6003		CKSRYB103K50
	C6016		CEAT101M10
	C6017-6025		CKSRYB104K25

G OUTPUT ASSY

Mark	No.	Description	Part No.
	SEMICONDUCTORS		
⚠	IC301		BD9703T-V5
	IC302		TC7S04FU
⚠	IC303		NJM78M05FA
⚠	IC304		NJM79M05FA
	IC4001,4002,4005,4006		NJM4580MD
	IC4003,4004,4012		NJM5532DD
	IC4007,4008,4011		RNB4580F
	Q301,305		2SD1859X
	Q302		2SB1238X
⚠	Q303		2SD2012
	Q306,307		2SC4154
	Q308		2SC1740S
	Q4001-4004,4019,4020		2SC5938A
	Q4005-4008,4013,4014		2SK209
	Q4009-4012,4015,4016		INC2001AC1
	Q4017,4018,4025,4026		2SK209
	Q4021		2SC2412K
	Q4022,4035		RT1N241M
	Q4027,4028		2SC5938A
	Q4029,4031		2SC4081
	Q4030,4032		2SA1576A
	Q4033,4034		2SK209
	Q4036		RT1P241M
⚠	D302-305,308,309		1SR154-400
⚠	D306,307		RB060L-40
⚠	D310		RB160L-40
	D311		UDZS5R1(B)
⚠	D312,321,323,324		1SR154-400
	D313		UDZS5R6(B)
	D314,315		RB501V-40
	D316		UDZS30(B)
	D317,318,322		1SS355
	D4001-4008,4010,4011		1SS355
	D4021		1SS355
	MISCELLANEOUS		
	L301	RADIAL LEAD INDUCTOR	DTL1168
	L4001	FERRITE CORE	VTF1091
	L4003-4006	FERRITE CORE	VTF1093
	JA4001,4002	CANON CONNECTOR	DKB1077
	JA4003	JACK	PKB1034
	JA4004-4007	HP JACK	DKN1452
	JA4008	JACK BOARD	PKB1033
	JA4009	CONNECTOR	DKN1188
	KN301,4001	WRAPPING TERMINAL	VNF1084
	S4001	SLIDE SWITCH	DSH1063
	S4002	SLIDE SWITCH	DSH1025
	CN301	10P TOP POST	B10B-EH
	CN302	CONNECTOR	B6B-PH
	CN303	9P JUMPER CONNECTOR	52147-0910
	CN304,4002	CONNECTOR POST	B7B-PH
	CN305	11P CONNECTOR	VKN1242
	CN4001	CONNECTOR	B11B-PH
	CN4003	9P CONNECTOR	VKN1240
	CN4004	CONNECTOR	B4B-PH
	0	SHIELD CASE (MIDI)	DNH2736
	0	CANON SHIELD	DNF1789
	JH301	PCB BINDER	VEF1040
⚠	P105	PROTECTOR (3.5 A)	AEK7017
⚠	P306	PROTECTOR (250 mA)	AEK7002
⚠	P311	PROTECTOR (315 mA)	AEK7003
	RESISTORS		
	R304		RD1/2VM562J
	R308		RS1/16S3301F
	R309		RS1/16S8200F
⚠	R315		RD1/2VM102J
	R4001-4008		RN1/16SE4301D
	R4021-4024,4037-4040		RN1/16SE3901D
	R4025-4032		RN1/16SE2001D
	R4055-4062		RN1/16SE4701D
	R4070-4073		RD1/2VM391J
	R4074-4077,4110,4111		RN1/16SE1002D
	R4078-4081		RN1/16SE9101D
	R4084,4087,4088,4091		RN1/16SE1201D
	R4085,4086,4089,4090		RN1/16SE3601D
	R4102-4105		RN1/16SE1202D
	R4106-4109		RN1/16SE1502D
	R4112,4113		RD1/2VM331J
	R4114,4115		RN1/16SE1002D
	R4122,4123,4126,4127		RS1/16S4701D
	R4124,4125,4130,4131		RS1/16S4702D
	R4132,4133		RS1/16S4301D
	R4134,4135		RN1/16SE3602D
	R4138,4139		RD1/2VM821J
	R4151,4152,4159		RS1/10S0R0J
	R4155		RS1/16S1801F
	R4156		RS1/16S3901F
	R4157,4158		RD1/2VM221J
	R4164,4165		RS1/16S5601D
	R4166,4167,4172,4173		RS1/16S1102D
	R4176,4177		RS1/16S3302D
	R4212,4213		RS2LMF150J
	R4227-4230		RD1/2VM100J
⚠	R4235,4236		RD1/4MUF100J
	Other Resistors		RS1/16S###J

Mark	No.	Description	Part No.
CAPACITORS			
	C301,303,307		CKSRYB473K50
	C302,304,306,308		CKSRYB473K25
	C305,318-320,322		CKSRYB104K25
	C309,4026,4028,4030		CKSRYB473K25
	C310		CEHAT471M50
	C311		CEAT682M25
	C312		CEAT102M25
	C313		CKSQYB105K16
	C314,315		CEAT332M35
	C316,317,4017,4023		CEHAT101M25
	C321		CKSYB106K10
	C323,328,4018,4019		CKSRYB104K25
	C324		CEAT682M16
	C325		CEAT222M16
	C326,327,331-334		CEAT100M50
	C329,4110		CEHAT101M10
	C330		CKSRYB104K50
	C335		CEANP2R2M50
	C336		CEAT471M35
	C4001-4004		CQMA821J50
	C4009-4016		CCSRCH471J50
	C4021,4022,4042,4043		CKSRYB104K25
	C4025,4027,4029,4031		CCH1357
	C4032,4073,4074,4097		CKSRYB473K25
	C4037-4040,4047-4050		CCSRCH820J50
	C4041,4044,4051,4052		CEHAT101M25
	C4045,4046,4065,4066		CKSRYB104K25
	C4053-4056		CQMA222J50
	C4061-4064,4083,4084		CCSRCH101J50
	C4067,4068,4075,4076		CEANP100M35
	C4069,4070,4092,4094		CKSRYB104K25
	C4071,4072		CCSRCH151J50
	C4077,4078		CQMA152J50
	C4079,4080,4091,4096		CEAT100M50
	C4081,4082		CKSRYB472K50
	C4085,4086		CKSRYB152K50
	C4087,4088		CCSRCH102J50
	C4089,4090,4101,4102		CEANP100M35
	C4093,4095		CCSRCH560J50
	C4098,4136,4137		CKSRYB473K25
	C4099,4100,4109,4125		CKSRYB104K25
	C4103,4104,4118,4119		CEAT100M50
	C4105,4106		CQMA472J50
	C4107,4108		CFTLA103J50
	C4111,4114		CKSRYB103K50
	C4120,4121		CKSRYB332K50
	C4122,4123		CCSRCH271J50
	C4127,4133,4135		CKSRYB104K25
	C4128,4129,4132,4134		CEAT100M50
	C4130,4131		CCSRCH181J50
	C4138-4141,4146-4149		CKSRYB104K25
	C4142,4143		CEAT221M16
	C4144,4145		CKSRYB334K10

Mark	No.	Description	Part No.
H	**FADER (CROSS) ASSY**		
MISCELLANEOUS			
	VR7001	VARIABLE RESISTOR	DCV1006
	CN7001	CONNECTOR(MT)	173979-6
I	**FADER (CH1) ASSY**		
MISCELLANEOUS			
	VR7101	VARIABLE RESISTOR	DCV1010
J	**FADER (CH2) ASSY**		
MISCELLANEOUS			
	VR7201	VARIABLE RESISTOR	DCV1010
	CN7201	CONNECTOR	S4B-PH
K	**FADER (CH3) ASSY**		
MISCELLANEOUS			
	VR7301	VARIABLE RESISTOR	DCV1010
L	**FADER (CH4) ASSY**		
MISCELLANEOUS			
	VR7401	VARIABLE RESISTOR	DCV1010
	CN7401	CONNECTOR	S4B-PH
M	**HP JACK ASSY**		
MISCELLANEOUS			
	L7701-7703	FERRITE CORE	VTF1093
	JA7702	HEADPHONE JACK	DKN1281
	CN7701	CONNECTOR	S4B-PH
CAPACITORS			
	C7701,7702		CKSRYB104K25
N	**REG ASSY**		
SEMICONDUCTORS			
	⚠ IC201		NJM78M15FA
	⚠ IC202		NJM79M15FA
	⚠ IC203		BA05T
	D201,202		RB501V-40
MISCELLANEOUS			
	J1	JUMPER WIRE	D20PDY0910E
	JH201	9P CABLE HOLDER	51048-0900
CAPACITORS			
	C201,202		CKSRYB104K50
	C203-206		CKSRYB104K25

Mark	No.	Description	Part No.

O TRANS ASSY

MISCELLANEOUS

⚠	J2	CONNECTOR ASSY	DKP3785
	CN102	10P TOP POST	B10B-EH

RESISTORS

	All Resistors		RS1/16S###J

MISCELLANEOUS

⚠	P101,103	PROTECTOR (3 A)	AEK7015
⚠	P102,104	PROTECTOR (3.5 A)	AEK7017
⚠	P312	PROTECTOR (750 mA)	AEK7007

P PRIMARY ASSY

MISCELLANEOUS

⚠	L2	FILTER	DTL1131
	H2,3	FUSE CLIP	AKR7001
⚠	S3	SWITCH	DSA1035
⚠	CN5	CONNECTOR	B2P3-VH
⚠	CN6	AC CORD SOCKET	RKP1751
	JH1,2	PCB BINDER	VEF1040

CAPACITORS

⚠	C1		ACG7033
⚠	C2		ACE7027
⚠	C5		ACG7030