


EXPLODED VIEW

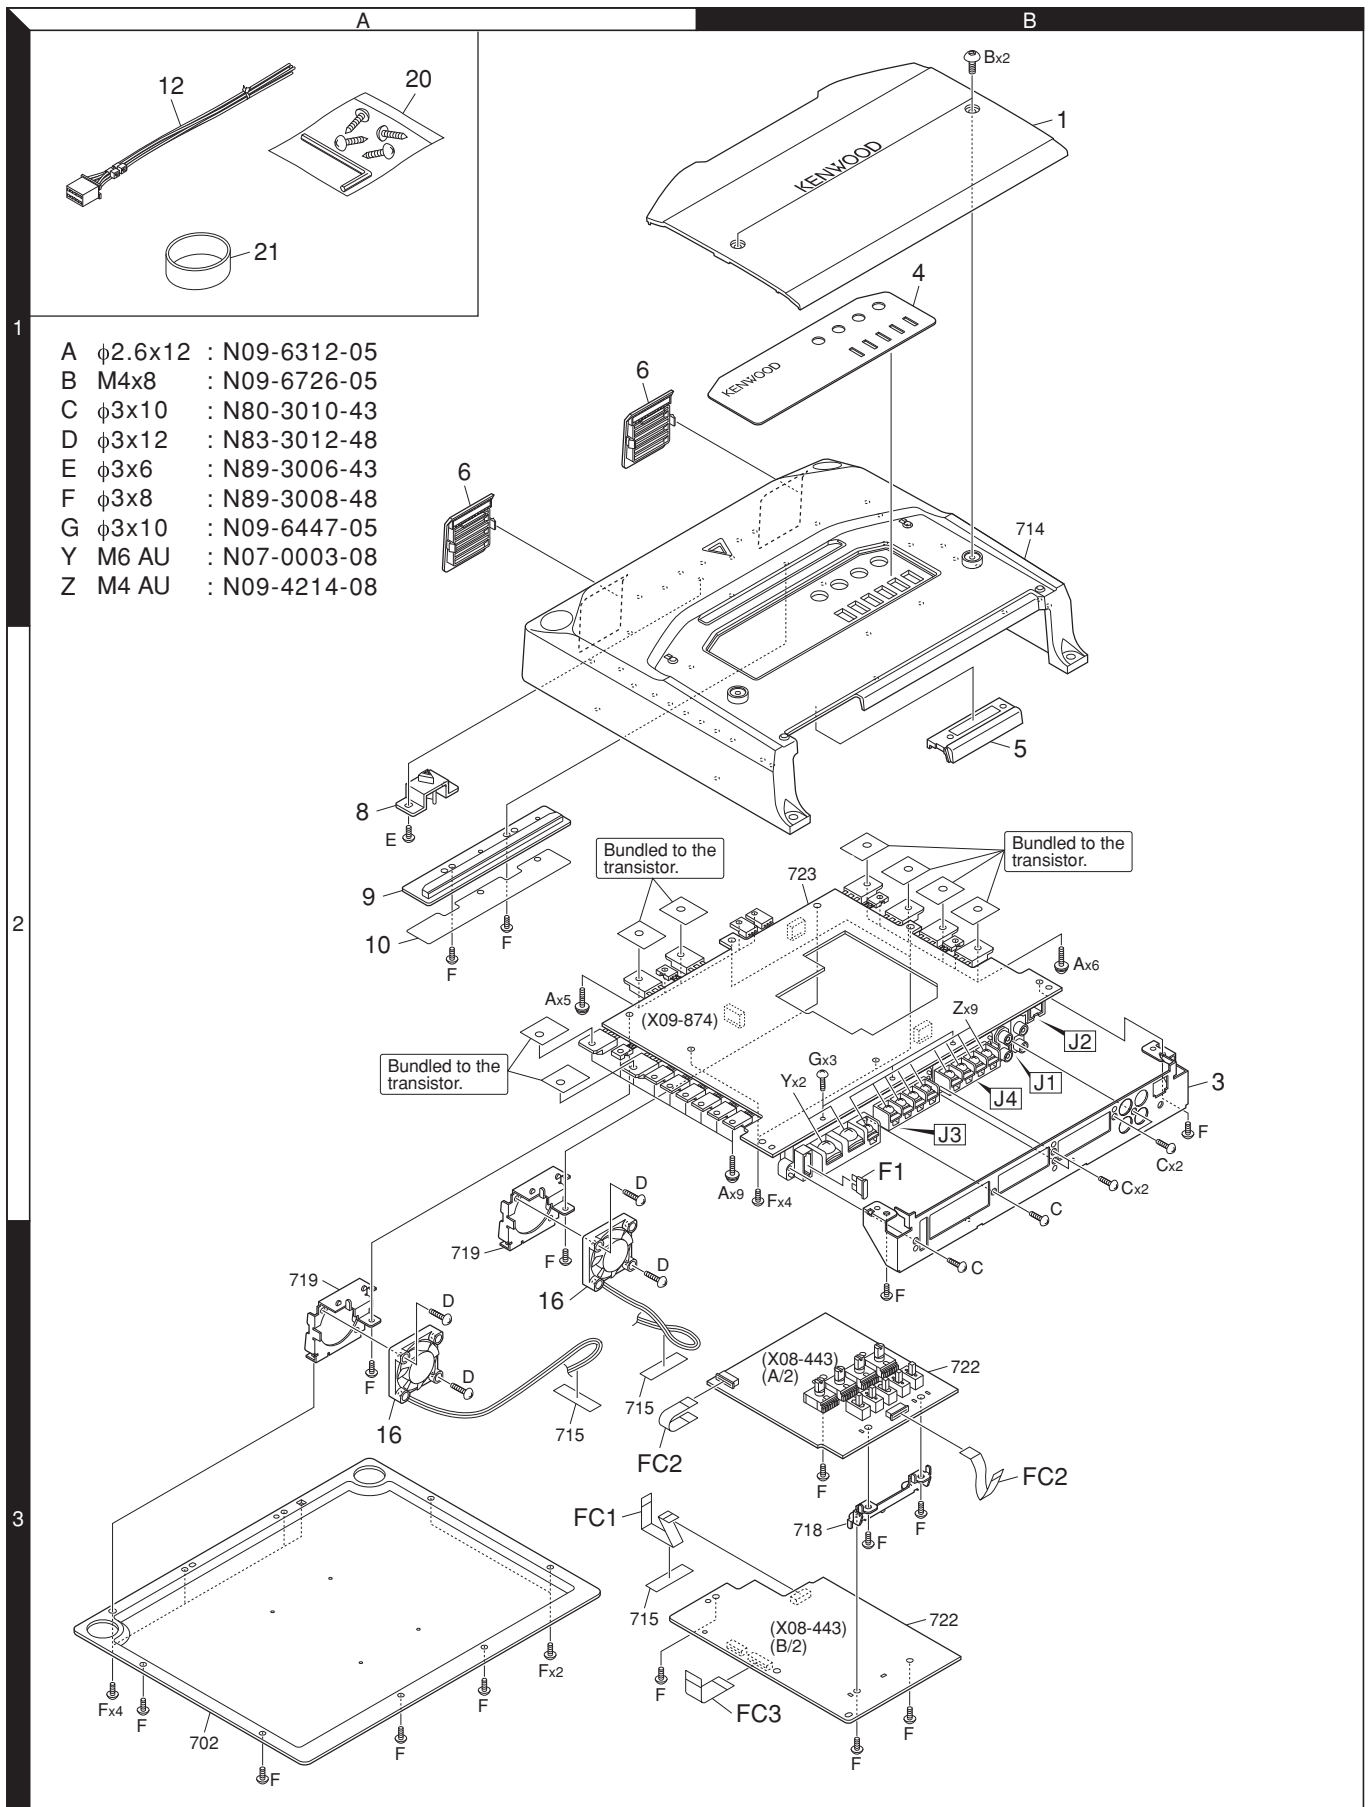

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Ad	New	Parts No.	Description	Destination
KAC-8404					
1	1B	*	A21-6635-02	DRESSING PANEL	KE1
1	1B	*	A21-6636-02	DRESSING PANEL	M1
3	2B	*	A64-4419-02	PANEL	
4	1B	*	B03-5097-02	DRESSING PLATE	
5	2B	*	B07-3231-03	ESCUTCHEON (DENGEN)	
6	1A	*	B07-3232-02	ESCUTCHEON (FAN)	
8	2A	*	B19-2324-03	LIGHTING BOARD (TRIANGLE)	
9	2A	*	B19-2468-03	LIGHTING BOARD	
10	2A	*	B19-2502-03	LIGHTING BOARD	KE1
-		*	B64-3935-00	INSTRUCTION MANUAL (ENG.FRE.SPA)	E1
-		*	B64-3936-00	INSTRUCTION MANUAL (GE.DU.IT.PO)	M1
-		*	B64-3937-00	INSTRUCTION MANUAL (ENG.S-CHI.)	
12	1A	*	E30-6144-05	CONNECTING CORD ASSY	
FC1	3A	*	E39-0967-05	FLAT CABLE	
FC2	3B	*	E39-0968-05	FLAT CABLE	
FC3	3B	*	E39-0970-05	FLAT CABLE	
16	3A	*	F09-2974-05	FAN	
F1	2B	*	F52-0016-05	FUSE (BLADE TYPE) 40A	
-		*	H54-4237-03	ITEM CARTON CASE	K
-		*	H54-4238-03	ITEM CARTON CASE	E1
-		*	H54-4239-03	ITEM CARTON CASE	M1
20	1A	*	N99-1820-05	SCREW & WRENCH KEY SET	
A	2B	*	N09-6312-05	SEMS (TAPTITE SCREW) (2.6X12)	
B	1B	*	N09-6726-05	DRESSED SCREW (M4X8)	
C	2B	*	N80-3010-43	PAN HEAD TAPTITE SCREW	
D	3A	*	N83-3012-48	PAN HEAD TAPTITE SCREW	
E	2A	*	N89-3006-43	BINDING HEAD TAPTITE SCREW	
F	3A	*	N89-3008-48	BINDING HEAD TAPTITE SCREW	
Y	2B	*	N07-0003-08	TERMINAL SCREW (M6 AU)	
Z	2B	*	N09-4214-08	TERMINAL SCREW (M4 AU)	
21	1A	*	W01-1606-05	ACCESSORIES	
PREAMPLIFIER UNIT (X08-4430-10)					
C1-4			CK73FB1C105K	CHIP C 1.0UF K	
C5,6			CD04BJ1H100M	ELECTRO 10UF 50WV	
C101,102			CK73GB1H103K	CHIP C 0.010UF K	
C103,104			CK73GB1H473K	CHIP C 0.047UF K	
C105,106			CK73FB1H334K	CHIP C 0.33UF K	
C107-110			CK73GB1H103K	CHIP C 0.010UF K	
C111-114			CD04AS1V100M	ELECTRO 10UF 35WV	
C115			CK73GB1H472K	CHIP C 4700PF K	
C116,117			CK73GB1H103K	CHIP C 0.010UF K	
C118			CC73GCH1H470J	CHIP C 47PF J	
C119			CD04BJ1H100M	ELECTRO 10UF 50WV	
C201,202			CK73GB1H103K	CHIP C 0.010UF K	
C203,204			CC73GCH1H101J	CHIP C 100PF J	
C205-208			CK73GB1H103K	CHIP C 0.010UF K	
C209,210			CK73GB1A474K	CHIP C 0.47UF K	
C211,212			CD04AU1H4R7M	NP-ELEC 4.7UF 50WV	
C213,214			CK73FB1H334K	CHIP C 0.33UF K	
C215,216			CK73GB1H473K	CHIP C 0.047UF K	
C217-220			CK73GB1H103K	CHIP C 0.010UF K	

Ref. No.	Ad	New	Parts No.	Description	Destination
C221-226			CD04BJ1H100M	ELECTRO 10UF 50WV	
C227			CK73GB1H472K	CHIP C 4700PF K	
C228			CC73GCH1H470J	CHIP C 47PF J	
C229			CD04BJ1H100M	ELECTRO 10UF 50WV	
C301,302			CD04BJ1H100M	ELECTRO 10UF 50WV	
C303,304			CC73GCH1H471J	CHIP C 470PF J	
C305,306			CC73GCH1H470J	CHIP C 47PF J	
C307,308			CK73GB1H472K	CHIP C 4700PF K	
C309,310			CD04BJ1E470M	ELECTRO 47UF 25WV	
C311,312			CC73GCH1H060D	CHIP C 6.0PF D	
C313,314			CC73GCH1H101J	CHIP C 100PF J	
C315,316			CC73GCH1H030C	CHIP C 3.0PF C	
C317,318			CC73GCH1H101J	CHIP C 100PF J	
C319			CD04BJ1V221M	ELECTRO 220UF 35WV	
C322,323			CC73GCH1H101J	CHIP C 100PF J	
C401,402			CD04BJ1H100M	ELECTRO 10UF 50WV	
C403,404			CC73GCH1H471J	CHIP C 470PF J	
C405,406			CC73GCH1H470J	CHIP C 47PF J	
C407,408			CK73GB1H472K	CHIP C 4700PF K	
C409,410			CD04BJ1E470M	ELECTRO 47UF 25WV	
C411,412			CC73GCH1H060D	CHIP C 6.0PF D	
C413,414			CC73GCH1H101J	CHIP C 100PF J	
C415,416			CC73GCH1H030C	CHIP C 3.0PF C	
C417,418			CC73GCH1H101J	CHIP C 100PF J	
C422,423			CC73GCH1H101J	CHIP C 100PF J	
C701-703			CK73GB1H103K	CHIP C 0.010UF K	
C704			CD04BJ1A101M	ELECTRO 100UF 10WV	
C705			CK73GB1H104K	CHIP C 0.10UF K	
C706			CD04BJ1A221M	ELECTRO 220UF 10WV	
C707,708			CD04BJ1H100M	ELECTRO 10UF 50WV	
C709			CK73GB1H103K	CHIP C 0.010UF K	
C710,711			CD04BJ1H100M	ELECTRO 10UF 50WV	
C712,713			CK73GB1H103K	CHIP C 0.010UF K	
C714			CD04BJ1H100M	ELECTRO 10UF 50WV	
C901-908			CC73GCH1H221J	CHIP C 220PF J	
CN2			E41-2447-05	FLAT CABLE CONNECTOR	
CN3	*		E41-2925-05	FLAT CABLE CONNECTOR	
CN4			E41-2447-05	FLAT CABLE CONNECTOR	
CN5	*		E41-1705-05	PIN ASSY	
CN6,7			E41-1699-05	PIN ASSY	
CN11			E41-2447-05	FLAT CABLE CONNECTOR	
CN22			E41-2447-05	FLAT CABLE CONNECTOR	
R101-106			RK73GB2A103J	CHIP R 10K J 1/10W	
R107,108			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R109,110			RK73GB2A103J	CHIP R 10K J 1/10W	
R111,112			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R113,114			RK73GB2A163J	CHIP R 16K J 1/10W	
R115-118			RK73GB2A223J	CHIP R 22K J 1/10W	
R119			RK73GB2A101J	CHIP R 100 J 1/10W	
R120,121			RK73GB2A153J	CHIP R 15K J 1/10W	
R122,123			RK73GB2A391J	CHIP R 390 J 1/10W	
R203,204			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R205,206			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R207-210			RK73GB2A103J	CHIP R 10K J 1/10W	

E1 : KAC-8404 (Europe) K : KAC-8404 (North America) M1 : KAC-8404 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

PREAMPLIFIER UNIT (X08-4430-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R211,212			RK73GB2A333J	CHIP R 33K J 1/10W		R706			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R213,214			RK73GB2A221J	CHIP R 220 J 1/10W		R707			RK73GB2A473J	CHIP R 47K J 1/10W	
R219,220			RK73GB2A104J	CHIP R 100K J 1/10W		R708			RK73GB2A333J	CHIP R 33K J 1/10W	
R221,222			RK73GB2A103J	CHIP R 10K J 1/10W		R709			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R223,224			RK73GB2A302J	CHIP R 3.0K J 1/10W		R710,711			RK73GB2A153J	CHIP R 15K J 1/10W	
R225,226			RK73GB2A103J	CHIP R 10K J 1/10W		R712,713			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R227,228			RK73GB2A222J	CHIP R 2.2K J 1/10W		R714,715			RK73GB2A103J	CHIP R 10K J 1/10W	
R231,232			RK73GB2A163J	CHIP R 16K J 1/10W		R716,717			RK73GB2A220J	CHIP R 22 J 1/10W	
R233-238			RK73GB2A223J	CHIP R 22K J 1/10W		R718			RK73GB2A473J	CHIP R 47K J 1/10W	
R239			RK73GB2A101J	CHIP R 100 J 1/10W		R719			RK73GB2A103J	CHIP R 10K J 1/10W	
R240,241			RK73GB2A153J	CHIP R 15K J 1/10W		R720			RK73GB2A123J	CHIP R 12K J 1/10W	
R242,243			RK73GB2A391J	CHIP R 390 J 1/10W		R721			RK73GB2A681J	CHIP R 680 J 1/10W	
R301,302			RK73GB2A103J	CHIP R 10K J 1/10W		R722			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R303,304			RK73GB2A113J	CHIP R 11K J 1/10W		R723			RK73GB2A154J	CHIP R 150K J 1/10W	
R305,306			RK73GB2A103J	CHIP R 10K J 1/10W		R724			RK73GB2A104J	CHIP R 100K J 1/10W	
R307,308			RK73GB2A104J	CHIP R 100K J 1/10W		R725			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R309,310			RK73GB2A473J	CHIP R 47K J 1/10W		R726			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R311,312			RK73GB2A153J	CHIP R 15K J 1/10W		R727			RK73GB2A154J	CHIP R 150K J 1/10W	
R313,314			RK73GB2A272J	CHIP R 2.7K J 1/10W		R728			RK73GB2A103J	CHIP R 10K J 1/10W	
R315,316			RK73GB2A101J	CHIP R 100 J 1/10W		R729			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R317,318			RK73GB2A272J	CHIP R 2.7K J 1/10W		R730			RK73GB2A103J	CHIP R 10K J 1/10W	
R319,320			RK73GB2A122J	CHIP R 1.2K J 1/10W		R731			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R321,322			RK73EB2E473J	CHIP R 47K J 1/4W		R732			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R323,324			RK73GB2A221J	CHIP R 220 J 1/10W		R733			RK73GB2A154J	CHIP R 150K J 1/10W	
R325,326			RK73EB2E472J	CHIP R 4.7K J 1/4W		R734			RK73GB2A103J	CHIP R 10K J 1/10W	
R327,328			RK73GB2A221J	CHIP R 220 J 1/10W		R735			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R329,330			RK73GB2A181J	CHIP R 180 J 1/10W		R736			RK73GB2A103J	CHIP R 10K J 1/10W	
R333,334			RK73GB2A511J	CHIP R 510 J 1/10W		VR1			R31-0241-05	VARIABLE RESISTOR	
R337			RD14NB2E100J	RD 10 J 1/4W		VR2			R31-0238-05	VARIABLE RESISTOR	
R338,339			RK73GB2A302J	CHIP R 3.0K J 1/10W		VR3			R31-0241-05	VARIABLE RESISTOR	
R341,342			RK73GB2A103J	CHIP R 10K J 1/10W		VR4			R31-0238-05	VARIABLE RESISTOR	
R343,344			RK73GB2A153J	CHIP R 15K J 1/10W		VR5-8			R32-0340-05	SEMI FIXED VARIABLE RESISTOR	
R401,402			RK73GB2A103J	CHIP R 10K J 1/10W		W201,202			R92-2053-05	CHIP R 0 OHM J 1/8W	
R403,404			RK73GB2A113J	CHIP R 11K J 1/10W		W203			R92-1252-05	CHIP R 0 OHM J 1/16W	
R405,406			RK73GB2A103J	CHIP R 10K J 1/10W		W204			R92-2053-05	CHIP R 0 OHM J 1/8W	
R407,408			RK73GB2A104J	CHIP R 100K J 1/10W		W205			R92-1252-05	CHIP R 0 OHM J 1/16W	
R409,410			RK73GB2A473J	CHIP R 47K J 1/10W		W206			R92-2053-05	CHIP R 0 OHM J 1/8W	
R411,412			RK73GB2A153J	CHIP R 15K J 1/10W		W207-210			R92-1252-05	CHIP R 0 OHM J 1/16W	
R413,414			RK73GB2A272J	CHIP R 2.7K J 1/10W		W211-214			R92-2053-05	CHIP R 0 OHM J 1/8W	
R415,416			RK73GB2A101J	CHIP R 100 J 1/10W		W215			R92-1252-05	CHIP R 0 OHM J 1/16W	
R417,418			RK73GB2A272J	CHIP R 2.7K J 1/10W		W216-222			R92-2053-05	CHIP R 0 OHM J 1/8W	
R419,420			RK73GB2A122J	CHIP R 1.2K J 1/10W		W223,224			R92-1252-05	CHIP R 0 OHM J 1/16W	
R421,422			RK73EB2E473J	CHIP R 47K J 1/4W		W225-231			R92-2053-05	CHIP R 0 OHM J 1/8W	
R423,424			RK73GB2A221J	CHIP R 220 J 1/10W		W232			R92-1252-05	CHIP R 0 OHM J 1/16W	
R425,426			RK73EB2E472J	CHIP R 4.7K J 1/4W		W233			R92-2053-05	CHIP R 0 OHM J 1/8W	
R427,428			RK73GB2A221J	CHIP R 220 J 1/10W		W234			R92-1252-05	CHIP R 0 OHM J 1/16W	
R429,430			RK73GB2A181J	CHIP R 180 J 1/10W		W235			R92-2053-05	CHIP R 0 OHM J 1/8W	
R433,434			RK73GB2A511J	CHIP R 510 J 1/10W		W236			R92-1252-05	CHIP R 0 OHM J 1/16W	
R437,438			RK73GB2A302J	CHIP R 3.0K J 1/10W		W237-246			R92-2053-05	CHIP R 0 OHM J 1/8W	
R441,442			RK73GB2A103J	CHIP R 10K J 1/10W		W247-249			R92-1252-05	CHIP R 0 OHM J 1/16W	
R443,444			RK73GB2A153J	CHIP R 15K J 1/10W		W250			R92-2053-05	CHIP R 0 OHM J 1/8W	
R701			RK73EB2E222J	CHIP R 2.2K J 1/4W		W251-254			R92-1252-05	CHIP R 0 OHM J 1/16W	
R702			RK73GB2A103J	CHIP R 10K J 1/10W		W255			R92-2053-05	CHIP R 0 OHM J 1/8W	
R703			RK73GB2A222J	CHIP R 2.2K J 1/10W		W256-260			R92-1252-05	CHIP R 0 OHM J 1/16W	
R704,705			RK73GB2A123J	CHIP R 12K J 1/10W		W261			R92-2053-05	CHIP R 0 OHM J 1/8W	

E1 : KAC-8404 (Europe) K : KAC-8404 (North America) M1 : KAC-8404 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

PREAMPLIFIER UNIT (X08-4430-10)

Ref. No.	Add	New	Parts No.	Description	Destination
W262			R92-1252-05	CHIP R 0 OHM J 1/16W	
W263			R92-2053-05	CHIP R 0 OHM J 1/8W	
W264,265			R92-1252-05	CHIP R 0 OHM J 1/16W	
W267			R92-1252-05	CHIP R 0 OHM J 1/16W	
W268			R92-2053-05	CHIP R 0 OHM J 1/8W	
W269,270			R92-1252-05	CHIP R 0 OHM J 1/16W	
W271			R92-2053-05	CHIP R 0 OHM J 1/8W	
W272-277			R92-1252-05	CHIP R 0 OHM J 1/16W	
W278-280			R92-2053-05	CHIP R 0 OHM J 1/8W	
W281,282			R92-1252-05	CHIP R 0 OHM J 1/16W	
W901,902			R92-1252-05	CHIP R 0 OHM J 1/16W	
W935,936			R92-1252-05	CHIP R 0 OHM J 1/16W	
W945,946			R92-1252-05	CHIP R 0 OHM J 1/16W	
S2-4			S62-0879-05	SLIDE SWITCH	
S5,6			S62-0880-05	SLIDE SWITCH	
D301-304			1SS355	DIODE	
D305			LM1MA142WK-G	DIODE	
D306			LM1MA142WA-G	DIODE	
D401-404			1SS355	DIODE	
D405			LM1MA142WK-G	DIODE	
D406			LM1MA142WA-G	DIODE	
D701			UDZS10B	ZENER DIODE	
D702,703			1SS355	DIODE	
D704			UDZS12B	ZENER DIODE	
D705			1SS355	DIODE	
IC1-10			BA4560RF	ANALOGUE IC	
Q301-304			2SC4081	TRANSISTOR	
Q305-308			2SA1576A(R,S)	TRANSISTOR	
Q309,310			2SC1845-A(F,E)	TRANSISTOR	
Q311,312			2SA992-A(F,E)	TRANSISTOR	
Q313,314			2SC1845-A(F,E)	TRANSISTOR	
Q315,316			2SC4081	TRANSISTOR	
Q401-404			2SC4081	TRANSISTOR	
Q405-408			2SA1576A(R,S)	TRANSISTOR	
Q409,410			2SC1845-A(F,E)	TRANSISTOR	
Q411,412			2SA992-A(F,E)	TRANSISTOR	
Q413,414			2SC1845-A(F,E)	TRANSISTOR	
Q415,416			2SC4081	TRANSISTOR	
Q701			2SA1576A(R,S)	TRANSISTOR	
Q702-705			2SC4081	TRANSISTOR	
Q706			2SA1576A(R,S)	TRANSISTOR	
Q707			2SC4081	TRANSISTOR	
Q708			2SA1576A(R,S)	TRANSISTOR	
Q709			2SC4081	TRANSISTOR	
Q710			2SD1863	TRANSISTOR	
AUDIO UNIT (X09-8740-10)					
D708,709			B30-1770-05	LED (BLUE)	
D710			B30-1743-05	LED (RED LED)	
C1			CD04AU1H100M	NP-ELEC 10UF 50WV	
C2			CD04BJ1H100M	ELECTRO 10UF 50WV	
C3			CK73GB1H102K	CHIP C 1000PF K	
C4			CD04BJ1E470M	ELECTRO 47UF 25WV	
C5			CK73GB1H103K	CHIP C 0.010UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C6			CD04AU1H2R2M	NP-ELEC 2.2UF 50WV	
C7			CK73GB1H152K	CHIP C 1500PF K	
C8,9			CD04AZ1C222M	ELECTRO 2200UF 16WV	
C10,11			CK73GB1H152K	CHIP C 1500PF K	
C12,13			C90-6782-05	ELECTRO 3300UF 50WV	
C14,15			CD04BJ1E101M	ELECTRO 100UF 25WV	
C16,17			CD04BJ1E470M	ELECTRO 47UF 25WV	
C100			CK45FB1H102K	CERAMIC 1000PF K	
C101,102			CK73GB1H102K	CHIP C 1000PF K	
C103,104			CD04BJ1H100M	ELECTRO 10UF 50WV	
C105,106			CC73GCH1H150J	CHIP C 15PF J	
C107,108			CC73GCH1H101J	CHIP C 100PF J	
C109,110			CC73GCH1H150J	CHIP C 15PF J	
C111,112			CC73GCH1H101J	CHIP C 100PF J	
C113-116			CK73GB1H103K	CHIP C 0.010UF K	
C117,118			CD04BJ1E470M	ELECTRO 47UF 25WV	
C122			CK73GB1H103K	CHIP C 0.010UF K	
C123-126			CD04BJ1H100M	ELECTRO 10UF 50WV	
C201,202			CK73GB1H102K	CHIP C 1000PF K	
C203,204			CD04BJ1H100M	ELECTRO 10UF 50WV	
C205,206			CC73GCH1H150J	CHIP C 15PF J	
C207,208			CC73GCH1H101J	CHIP C 100PF J	
C209,210			CC73GCH1H150J	CHIP C 15PF J	
C211,212			CC73GCH1H101J	CHIP C 100PF J	
C213-216			CK73GB1H103K	CHIP C 0.010UF K	
C217,218			CD04BJ1E470M	ELECTRO 47UF 25WV	
C222			CK73GB1H103K	CHIP C 0.010UF K	
C223-226			CD04BJ1H100M	ELECTRO 10UF 50WV	
C301,302			CK73GB1H103K	CHIP C 0.010UF K	
C303-306			CK73GB1H102K	CHIP C 1000PF K	
C307,308			CK73GB1H473K	CHIP C 0.047UF K	
C401,402			CK73GB1H103K	CHIP C 0.010UF K	
C403-406			CK73GB1H102K	CHIP C 1000PF K	
C407,408			CK73GB1H473K	CHIP C 0.047UF K	
C701,702			CD04BJ1H100M	ELECTRO 10UF 50WV	
C703			CD04BJ1V330M	ELECTRO 33UF 35WV	
C704,705			CD04BJ1H100M	ELECTRO 10UF 50WV	
C706			CK73GB1H102K	CHIP C 1000PF K	
CN1		*	E41-2945-05	FLAT CABLE CONNECTOR	
CN33		*	E41-2946-05	FLAT CABLE CONNECTOR	
CN44		*	E41-2945-05	FLAT CABLE CONNECTOR	
J1			E63-0947-05	PIN JACK	
J2			E58-1031-05	RECTANGULAR RECEPTACLE	
J3			E70-0832-15	SCREW TERMINAL BOARD	
J4		*	E70-0850-05	SCREW TERMINAL BOARD	
WH5		*	E39-0976-05	WIRING HARNESS	
L2		*	L19-0813-05	TRANSFORMER FOR CONVERTER	
L3		*	L33-2435-05	CHOKE COIL	
G	2B		N09-6447-05	TAPTITE SCREW (3X10 P)	
R1			RK73GB2A103J	CHIP R 10K J 1/10W	
R2			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R3			RK73GB2A103J	CHIP R 10K J 1/10W	
R4			RK73GB2A223J	CHIP R 22K J 1/10W	

E1 : KAC-8404 (Europe) K : KAC-8404 (North America) M1 : KAC-8404 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8740-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R5			RK73GB2A104J	CHIP R 100K J 1/10W		R708			RK73EB2E302J	CHIP R 3.0K J 1/4W	
R7			RK73GB2A472J	CHIP R 4.7K J 1/10W		R709			RK73GB2A333J	CHIP R 33K J 1/10W	
R8			RK73GB2A471J	CHIP R 470 J 1/10W		R710			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R9			RK73GB2A103J	CHIP R 10K J 1/10W		R711			RK73GB2A103J	CHIP R 10K J 1/10W	
R10			RK73GB2A682J	CHIP R 6.8K J 1/10W		R712			RK73GB2A333J	CHIP R 33K J 1/10W	
R11			RK73GB2A105J	CHIP R 1.0M J 1/10W		R713			RK73GB2A103J	CHIP R 10K J 1/10W	
R12			RK73GB2A103J	CHIP R 10K J 1/10W		R714			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R13,14			RK73GB2A152J	CHIP R 1.5K J 1/10W		R715			RK73EB2E152J	CHIP R 1.5K J 1/4W	
R15,16			RK73GB2A560J	CHIP R 56 J 1/10W		R716			RK73EB2E101J	CHIP R 100 J 1/4W	
R17,18			RK73GB2A472J	CHIP R 4.7K J 1/10W		R717-720			RK73GB2A473J	CHIP R 47K J 1/10W	
R19-22			RK73GB2A560J	CHIP R 56 J 1/10W		R721			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R23			RD14DB2H100J	SMALL-RD 10 J 1/2W		R722			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R24,25			RK73PB2H100J	CHIP R 10 J 1/2W		R723			RK73GB2A104J	CHIP R 100K J 1/10W	
R26,27			RK73GB2A562J	CHIP R 5.6K J 1/10W		R724			RK73GB2A103J	CHIP R 10K J 1/10W	
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W		R725			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R100-102			RK73EB2E102J	CHIP R 1.0K J 1/4W		R726			RK73GB2A103J	CHIP R 10K J 1/10W	
R103,104			RK73GB2A103J	CHIP R 10K J 1/10W		R727			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R105,106			RK73GB2A472J	CHIP R 4.7K J 1/10W		W201			R92-1252-05	CHIP R 0 OHM J 1/16W	
R107,108			RK73GB2A103J	CHIP R 10K J 1/10W		W202-204			R92-2053-05	CHIP R 0 OHM J 1/8W	
R109,110			RK73GB2A123J	CHIP R 12K J 1/10W		W205			R92-1252-05	CHIP R 0 OHM J 1/16W	
R111-118			RK73GH2A103D	CHIP R 10K D 1/10W		W206			R92-2053-05	CHIP R 0 OHM J 1/8W	
R119,120			RK73GB2A473J	CHIP R 47K J 1/10W		W207			R92-1252-05	CHIP R 0 OHM J 1/16W	
R125,126			RK73EB2E222J	CHIP R 2.2K J 1/4W		W208			R92-2053-05	CHIP R 0 OHM J 1/8W	
R127-130			RK73EB2E104J	CHIP R 100K J 1/4W		W209-211			R92-1252-05	CHIP R 0 OHM J 1/16W	
R201,202			RK73EB2E102J	CHIP R 1.0K J 1/4W		W212			R92-2053-05	CHIP R 0 OHM J 1/8W	
R203,204			RK73GB2A103J	CHIP R 10K J 1/10W		W213-217			R92-1252-05	CHIP R 0 OHM J 1/16W	
R205,206			RK73GB2A472J	CHIP R 4.7K J 1/10W		W218,219			R92-2053-05	CHIP R 0 OHM J 1/8W	
R207,208			RK73GB2A103J	CHIP R 10K J 1/10W		W220,221			R92-1252-05	CHIP R 0 OHM J 1/16W	
R209,210			RK73GB2A123J	CHIP R 12K J 1/10W		W222			R92-2053-05	CHIP R 0 OHM J 1/8W	
R211-218			RK73GH2A103D	CHIP R 10K D 1/10W		W223-228			R92-1252-05	CHIP R 0 OHM J 1/16W	
R219,220			RK73GB2A473J	CHIP R 47K J 1/10W		W229			R92-2053-05	CHIP R 0 OHM J 1/8W	
R225,226			RK73EB2E222J	CHIP R 2.2K J 1/4W		W230			R92-1252-05	CHIP R 0 OHM J 1/16W	
R227-230			RK73EB2E104J	CHIP R 100K J 1/4W		W231,232			R92-2053-05	CHIP R 0 OHM J 1/8W	
R301-304			RK73EB2E101J	CHIP R 100 J 1/4W		W233			R92-1252-05	CHIP R 0 OHM J 1/16W	
R305-308			RK73GB2A122J	CHIP R 1.2K J 1/10W		W234,235			R92-2053-05	CHIP R 0 OHM J 1/8W	
R309,310			RK73GB2A471J	CHIP R 470 J 1/10W		W236,237			R92-1252-05	CHIP R 0 OHM J 1/16W	
R311-314			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		W238-242			R92-2053-05	CHIP R 0 OHM J 1/8W	
R315-318			RK73GB2A102J	CHIP R 1.0K J 1/10W		W243			R92-1252-05	CHIP R 0 OHM J 1/16W	
R319-322			R92-0205-05	METAL-PLATE 0.1 K 2W		W244			R92-2053-05	CHIP R 0 OHM J 1/8W	
R323,324			RD14DB2H100J	SMALL-RD 10 J 1/2W		W245			R92-1252-05	CHIP R 0 OHM J 1/16W	
R331,332			RK73GB2A182J	CHIP R 1.8K J 1/10W		W246,247			R92-2053-05	CHIP R 0 OHM J 1/8W	
R401-404			RK73EB2E101J	CHIP R 100 J 1/4W		W248-252			R92-1252-05	CHIP R 0 OHM J 1/16W	
R405-408			RK73GB2A122J	CHIP R 1.2K J 1/10W		W253-255			R92-2053-05	CHIP R 0 OHM J 1/8W	
R409,410			RK73GB2A471J	CHIP R 470 J 1/10W		W256			R92-1252-05	CHIP R 0 OHM J 1/16W	
R411-414			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		W257-263			R92-2053-05	CHIP R 0 OHM J 1/8W	
R415-418			RK73GB2A102J	CHIP R 1.0K J 1/10W		W264,265			R92-1252-05	CHIP R 0 OHM J 1/16W	
R419-422			R92-0205-05	METAL-PLATE 0.1 K 2W		W266			R92-2053-05	CHIP R 0 OHM J 1/8W	
R423,424			RD14DB2H100J	SMALL-RD 10 J 1/2W		W267			R92-1252-05	CHIP R 0 OHM J 1/16W	
R431,432			RK73GB2A182J	CHIP R 1.8K J 1/10W		W268			R92-2053-05	CHIP R 0 OHM J 1/8W	
R701			RK73GB2A392J	CHIP R 3.9K J 1/10W		W269,270			R92-1252-05	CHIP R 0 OHM J 1/16W	
R702,703			RK73EB2E392J	CHIP R 3.9K J 1/4W		W271,272			R92-2053-05	CHIP R 0 OHM J 1/8W	
R704			RK73GB2A303J	CHIP R 30K J 1/10W		W273,274			R92-1252-05	CHIP R 0 OHM J 1/16W	
R705			RK73GB2A392J	CHIP R 3.9K J 1/10W		W275-277			R92-2053-05	CHIP R 0 OHM J 1/8W	
R706			RK73GB2A152J	CHIP R 1.5K J 1/10W		W278-293			R92-1252-05	CHIP R 0 OHM J 1/16W	
R707			RK73GB2A682J	CHIP R 6.8K J 1/10W		W294-296			R92-2053-05	CHIP R 0 OHM J 1/8W	

E1 : KAC-8404 (Europe) K : KAC-8404 (North America) M1 : KAC-8404 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8740-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W297,298 W299-302 W303-312 W313 W906			R92-1252-05 R92-2053-05 R92-1252-05 R92-2053-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/8W CHIP R 0 OHM J 1/16W		Q708 TH1			2SC4081 NCP18WB473J0S	TRANSISTOR THERMISTOR	
D1 D2-4 D5 D6 D7			RM4ZLF-J4NF 1SS355 LM1MA142WK-G FCH10A20 FRH10A20	DIODE DIODE DIODE DIODE DIODE							
D8,9 D101 D102 D103 D201			UDZS16B LM1MA142WK-G LM1MA142WA-G UMZ6.8N LM1MA142WK-G	ZENER DIODE DIODE DIODE ZENER DIODE DIODE							
D202 D203 D301,302 D303,304 D401,402			LM1MA142WA-G UMZ6.8N 1SS355 LM1MA142WA-G 1SS355	DIODE ZENER DIODE DIODE DIODE DIODE							
D403,404 D701 D702 D703 D704			LM1MA142WA-G UDZS6.8B UDZS15B 1SS355 UDZS10B	DIODE ZENER DIODE ZENER DIODE DIODE ZENER DIODE							
D705-707 D711,712 D713 IC1-4 IC5			1SS355 LM1MA142WK-G 1SS355 BA4560RF TL494IDR	DIODE DIODE DIODE ANALOGUE IC ANALOGUE IC							
Q1,2 Q3,4 Q5,6 Q7-10 Q11			DTA114EUA 2SC4097 2SA1577 STP60NF06FP 2SD2012-F	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR FET TRANSISTOR							
Q12 Q301,302 Q303,304 Q305,306 Q307,308			2SB1375-F 2SC3419(Y)-F 2SC1845-A(F,E) 2SA992-A(F,E) 2SC1627A-F	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR							
Q309,310 Q311,312 Q313,314 Q401,402 Q403,404			2SA817A-F 2SC4468NF 2SA1695NF 2SC3419(Y)-F 2SC1845-A(F,E)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR							
Q405,406 Q407,408 Q409,410 Q411,412 Q413,414			2SA992-A(F,E) 2SC1627A-F 2SA817A-F 2SC4468NF 2SA1695NF	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR							
Q701 Q702-704 Q705 Q706 Q707			2SB1241 2SC4081 2SA1576A(R,S) 2SC4081 2SA1576A(R,S)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR							

E1 : KAC-8404 (Europe) K : KAC-8404 (North America) M1 : KAC-8404 (Other Areas)

⚠ Indicates safety critical components.