
2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING(DEH-P550MP/XN/UC, DEH-P5500MP/XN/UC)

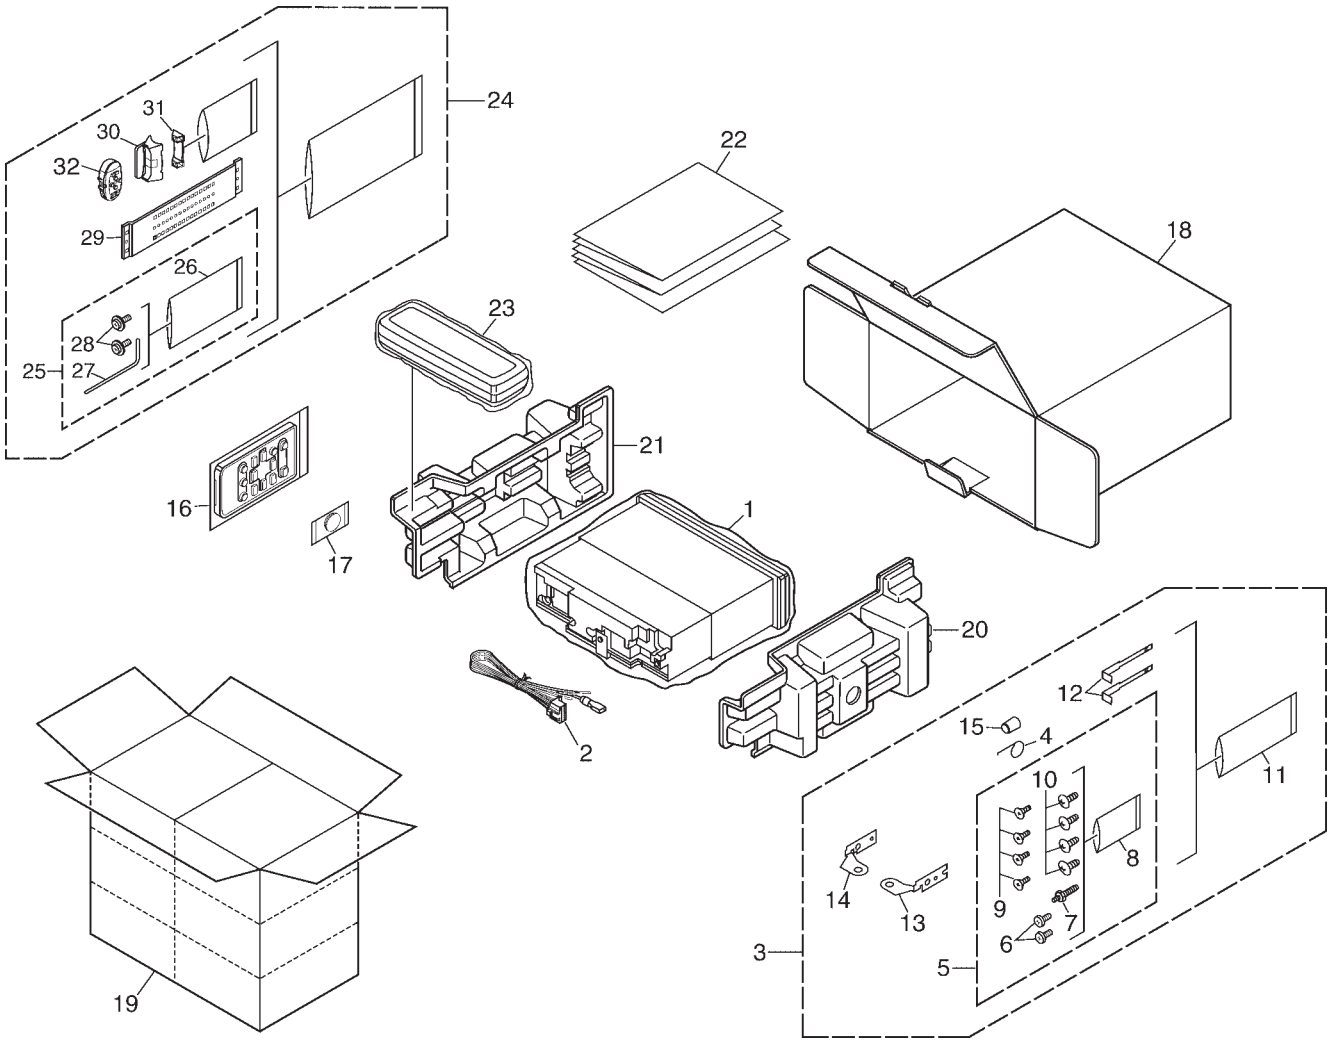

NOTE:

- Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
  (In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING(DEH-P550MP/XN/UC, DEH-P5500MP/XN/UC) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG1173
	2	Cord Assy	CDE7154
	3	Accessory Assy	CEA3376
	4	Spring	CBH1650
	5	Screw Assy	CEA3848
	6	Fixing Screw	BPZ20P060FZK
	7	Screw	CBA1650
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FTC
	10	Screw	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CNC5395
	13	Holder	CND1249
	14	Holder	CND1250
	15	Bush	CNV3930
	16	Remote Control Unit	See Contrast table(2)
*	17	Battery	See Contrast table(2)
	18	Carton	See Contrast table(2)
	19	Contain Box	See Contrast table(2)
	20	Protector	CHP2663
	21	Protector	CHP2664
	22-1	Owner's Manual	See Contrast table(2)
	22-2	Installation Manual	See Contrast table(2)
*	22-3	Warranty Card	See Contrast table(2)
*	22-4	Card	See Contrast table(2)
	23	Case Assy	CXB3520
	24	Remote Control Assy	See Contrast table(2)
	25	Screw Assy	See Contrast table(2)
*	26	Polyethylene Bag	See Contrast table(2)
*	27	Hexagonal Wrench	See Contrast table(2)
*	28	Screw	See Contrast table(2)
	29	Belt	See Contrast table(2)
	30	Holder Assy	See Contrast table(2)
	31	Holder Assy	See Contrast table(2)
	32	Remote Control Assy	See Contrast table(2)

(2) CONTRAST TABLE


DEH-P550MP/XN/UC and DEH-P5500MP/XN/UC are constructed the same except for the following:

Mark	No.	Symbol and Description	Part No. DEH-P550MP/XN/UC	Part No. DEH-P5500MP/XN/UC
	16	Remote Control Unit	Not used	CXC1265
*	17	Battery	CEX1030	CEX1065
	18	Carton	CHG4942	CHG4943
	19	Contain Box	CHL4942	CHL4943
	22-1	Owner's Manual	CRD3720	CRD3722
	22-2	Installation Manual	CRD3721	CRD3723
*	22-3	Warranty Card	CRY1070	Not used
*	22-4	Card	Not used	ARY1048
	24	Remote Control Assy	CXB9202	Not used
	25	Screw Assy	CZE3169	Not used
*	26	Polyethylene Bag	CEG-127	Not used
*	27	Hexagonal Wrench	CZE3176	Not used
*	28	Screw	RMZ30H060FBK	Not used
	29	Belt	CZN7661	Not used
	30	Holder Assy	CZX3172	Not used
	31	Holder Assy	CZX3173	Not used
	32	Remote Control Assy	CZX3257	Not used

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P550MP/XN/UC	CRD3720	English, French, Spanish
	CRD3721	
DEH-P5500MP/XN/UC	CRD3722	English, French, Spanish
	CRD3723	

2.2 PACKING(DEH-P5550MP/XN/ES)

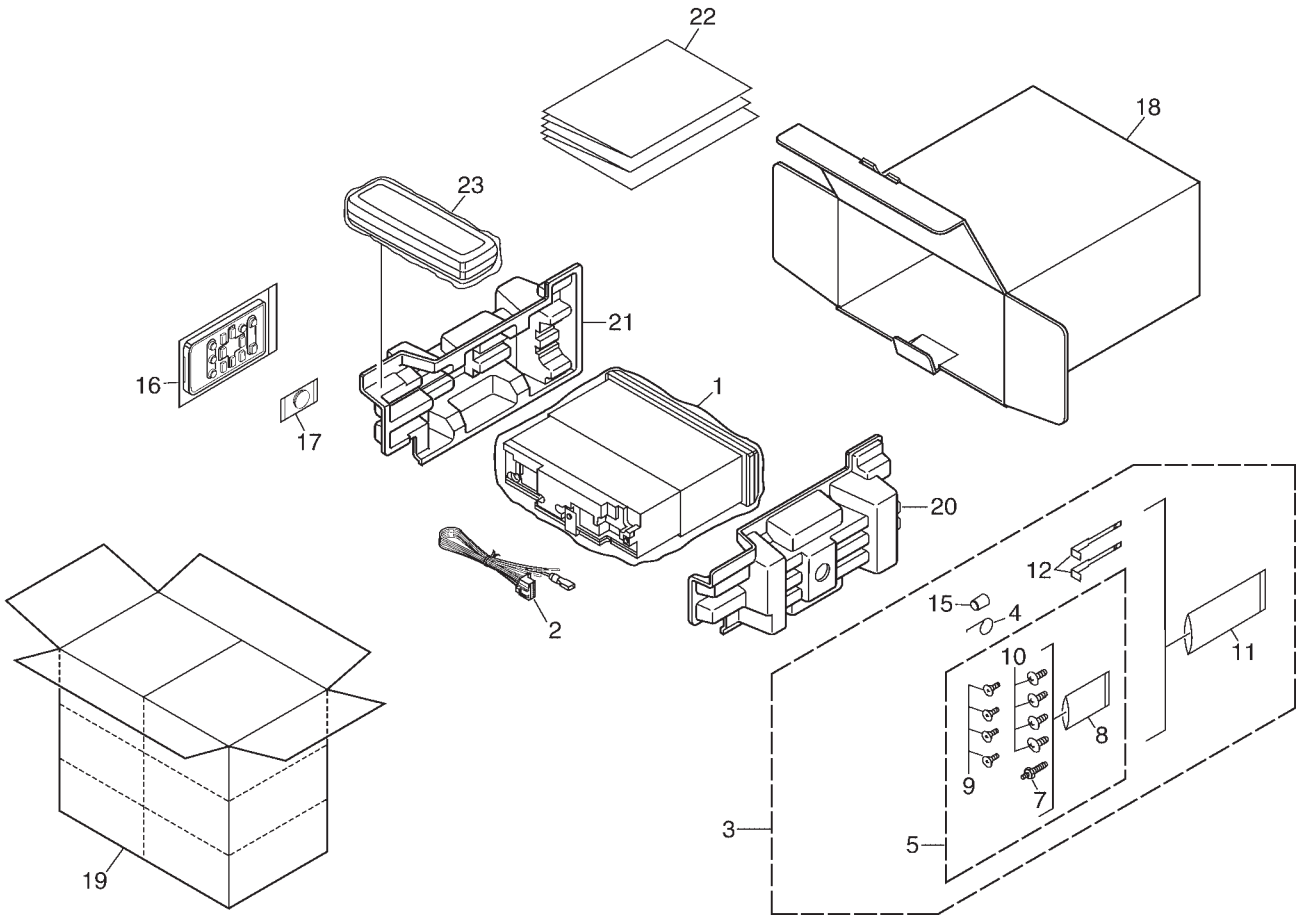


● PACKING(DEH-P5550MP/XN/ES) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG-162
	2	Cord Assy	CDE7154
	3	Accessory Assy	CEA3439
	4	Spring	CBH1650
	5	Screw Assy	CEA3849
	6	•••••	
	7	Screw	CBA1650
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FTC
	10	Screw	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CNC5395
	13	•••••	
	14	•••••	
	15	Bush	CNV3930
	16	Remote Control Unit	CXC1265
*	17	Battery	CEX1065
	18	Carton	CHG4944
	19	Contain Box	CHL4944
	20	Protector	CHP2663
	21	Protector	CHP2664
	22-1	Owner's Manual	CRD3724
	22-2	Owner's Manual	CRD3725
	22-3	Installation Manual	CRD3726
	23	Case Assy	CXB3520

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-P5550MP/XN/ES	CRD3724	English, Spanish, Portuguese(B)
	CRD3725	Traditional Chinese, Arabic
	CRD3726	English, Spanish, Portuguese(B) Traditional Chinese, Arabic

2.3 EXTERIOR

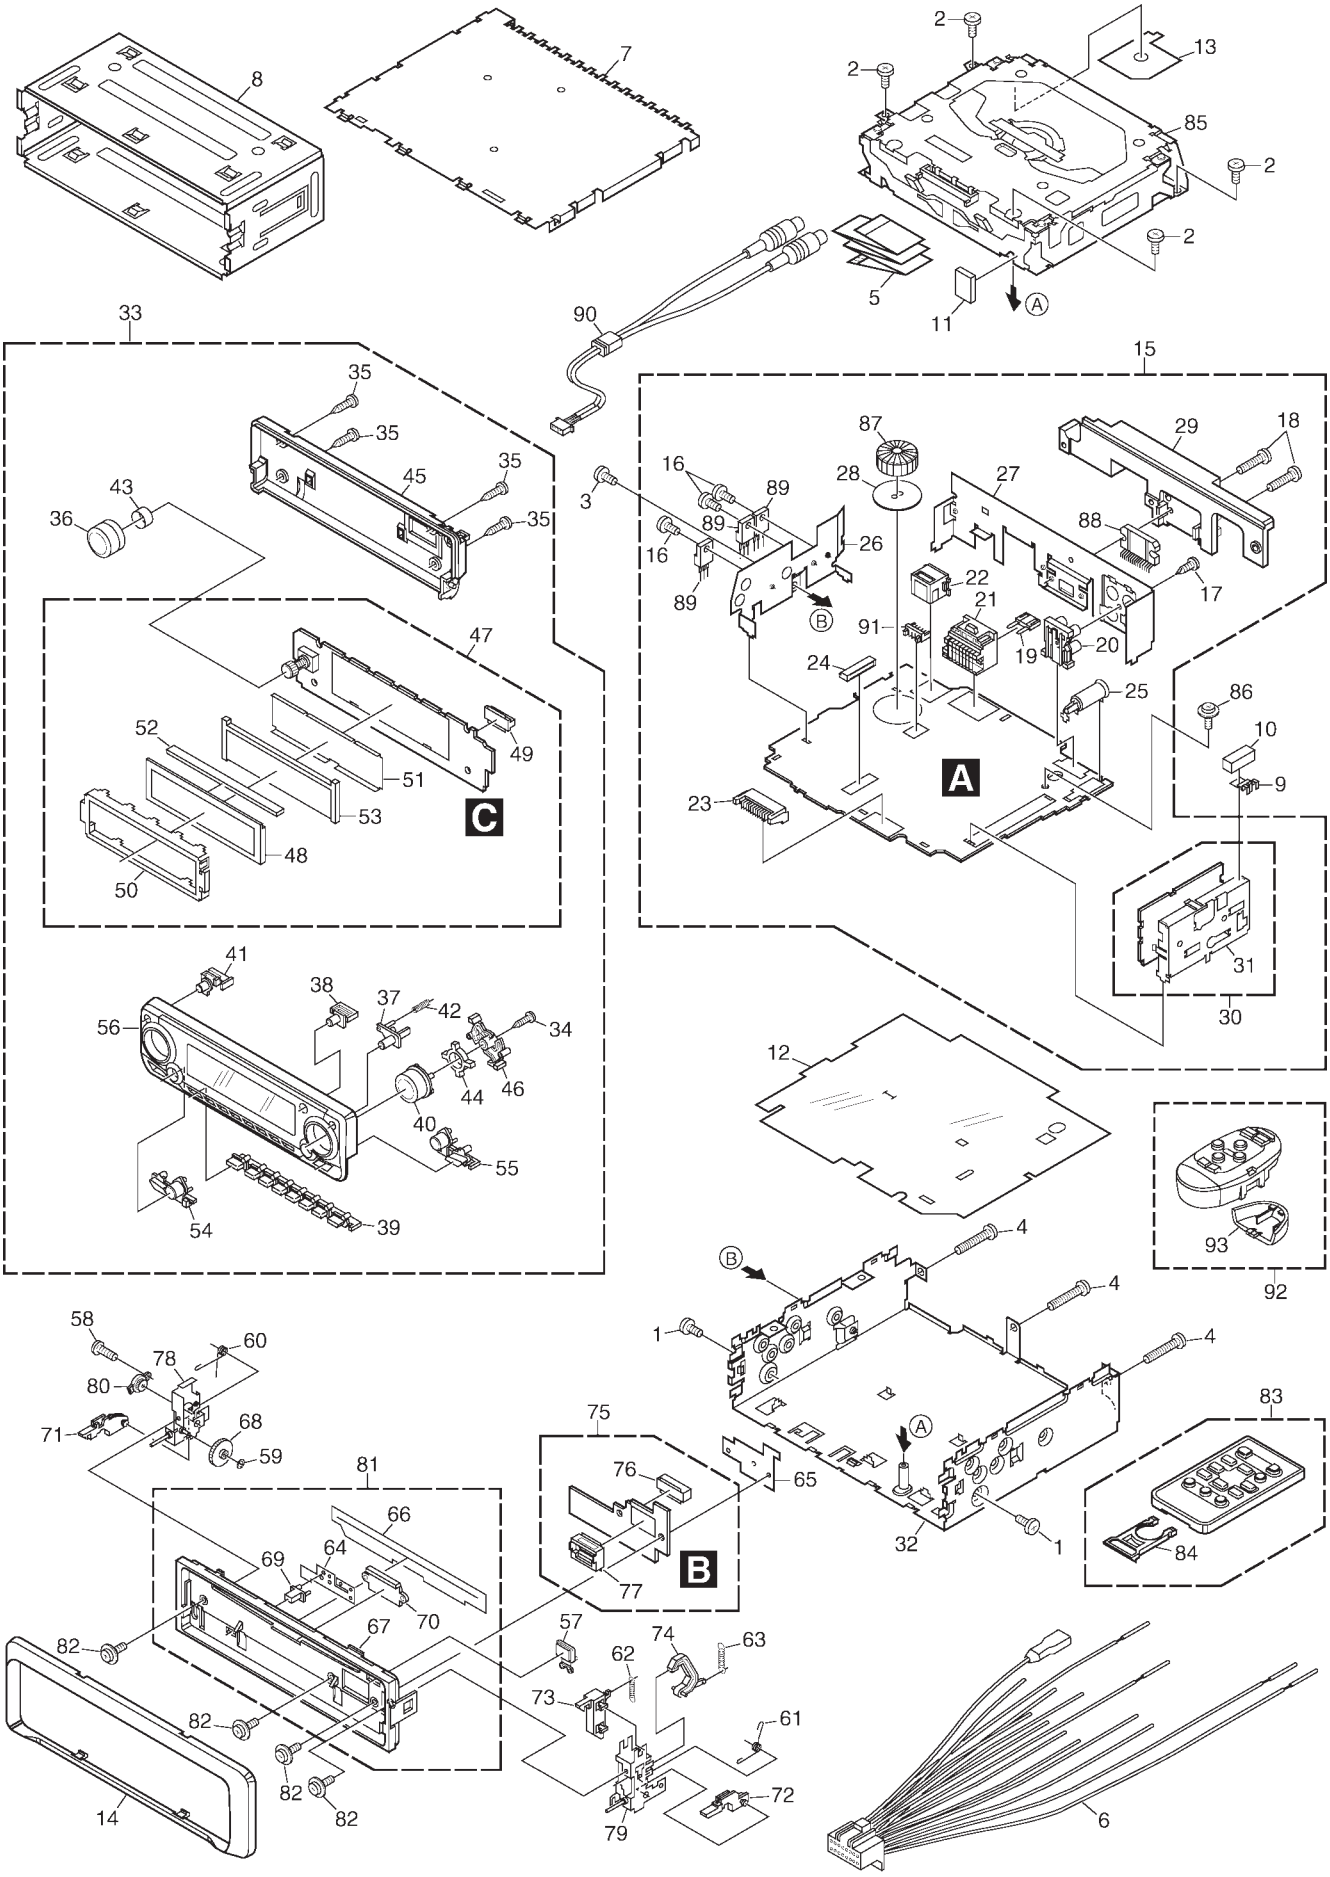
A
B
C
D
E
F
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ30P040FZK
2	Screw	BSZ26P060FTC
3	Screw	BSZ30P060FTC
4	Screw	BSZ30P200FTC
5	Cable	CDE7065
6	Cord Assy	CDE7154
7	Case	CNB2870
8	Holder	CNC8659
9	Earth Plate	CNC8915
10	Cushion	CNM4870
11	Insulator	CNM7682
12	Insulator	CNM7935
13	Insulator	CNM8174
14	Panel	See Contrast table(2)
15	Tuner Amp Unit	See Contrast table(2)
16	Screw	ASZ26P060FTC
17	Screw	BPZ26P080FTC
18	Screw	BSZ26P160FTC
19	Fuse(10A)	CEK1208
20	Pin Jack(CN352)	CKB1051
21	Plug(CN901)	CKM1376
22	Connector(CN101)	CKS3408
23	Plug(CN801)	CKS3537
24	Connector(CN651)	CKS3837
25	Antenna Jack(CN401)	CKX1056
26	Holder	CND1352
27	Holder	See Contrast table(2)
28	Insulator	CNM8245
29	Heat Sink	CNR1668
30	FM/AM Tuner Unit	CWE1646
31	Holder	CND1054
32	Chassis Unit	CXB9528
33	Detach Grille Assy	See Contrast table(2)
34	Screw	BPZ20P060FTC
35	Screw	BPZ20P100FZK
36	Knob	See Contrast table(2)
37	Button(OPEN)	CAC7728
38	Button(AUDIO)	CAC7729
39	Button(DISP, 1-6, FUNC)	CAC7730
40	Button(SELECT)	See Contrast table(2)
41	Button(CLK)	CAC7751
42	Spring	CBH2654
43	Spring	CBL1470
44	Cushion	CNM8291
45	Cover	CNS7247


Mark No.	Description	Part No.
46	Holder	CNV7405
47	Keyboard Unit	CWM8605
48	LCD	CAW1755
49	Connector(CN1901)	CKS4524
50	Holder	CND1215
51	Sheet	CNM7921
52	Connector	CNV7365
53	Lighting Conductor	CNV7406
54	Button Unit(SRC, EQ)	CXB9924
55	Button Unit(BAND, EQ-EX)	CXB9925
56	Sub Grille Assy	See Contrast table(2)
57	Button(EJECT)	CAC7752
58	Screw(M2x4)	CBA1649
59	Washer	CBF1038
60	Spring	CBH2650
61	Spring	CBH2651
62	Spring	CBH2652
63	Spring	CBH2653
64	Spring	CBL1512
65	Holder	CND1254
66	Cover	CNM6854
67	Panel	CNS7245
68	Gear	CNV5997
69	Pin	CNV6486
70	Lighting Conductor	CNV6487
71	Arm	CNV7400
72	Arm	CNV7401
73	Arm	CNV7402
74	Arm	CNV7403
75	Panel Unit	CWM8758
76	Socket(CN1950)	CKS3550
77	Connector(CN1951)	CKS4462
78	Holder Unit	CXB9501
79	Holder Unit	CXB9502
80	Damper Unit	CXB9503
81	Service Panel Unit	CXX1691
82	Screw	IMS20P045FZK
83	Remote Control Unit	See Contrast table(2)
84	Cover	See Contrast table(2)
85	CD Mechanism Module(S10MP3)	CXK5661
86	Screw	ISS26P055FTC
87	Choke Coil(L301)	CTH1280
88	IC(IC301)	PAL007A
89	Transistor(Q651, 911, 921)	2SD2396
90	Cord Assy	See Contrast table(2)
91	Plug(CN351)	See Contrast table(2)
92	Remote Control Assy	See Contrast table(2)
93	Cover	See Contrast table(2)

(2) CONTRAST TABLE

DEH-P550MP/XN/UC, DEH-P5500MP/XN/UC and DEH-P5550MP/XN/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.		
		DEH-P550MP/XN/UC	DEH-P5500MP/XN/UC	DEH-P5550MP/XN/ES
14	Panel	CNS6935	CNS6934	CNS6935
15	Tuner Amp Unit	CWM8588	CWM8589	CWM8590
27	Holder	CND1239	CND1477	CND1477
33	Detach Grille Assy	CXB9672	CXB9673	CXB9674
36	Knob	CAA2755	CAA2753	CAA2755
40	Button(SELECT)	CAC7733	CAC7731	CAC7733
56	Sub Grille Assy	CXB9971	CXB9972	CXB9973
83	Remote Control Unit	Not used	CXC1265	CXC1265
84	Cover	Not used	CNS7068	CNS7068
90	Cord Assy	CDE7129	Not used	Not used
91	Plug(CN351)	CKS1238	Not used	Not used
92	Remote Control Assy	CZX3257	Not used	Not used
93	Cover	CZN7655	Not used	Not used

2.4 CD MECHANISM MODULE

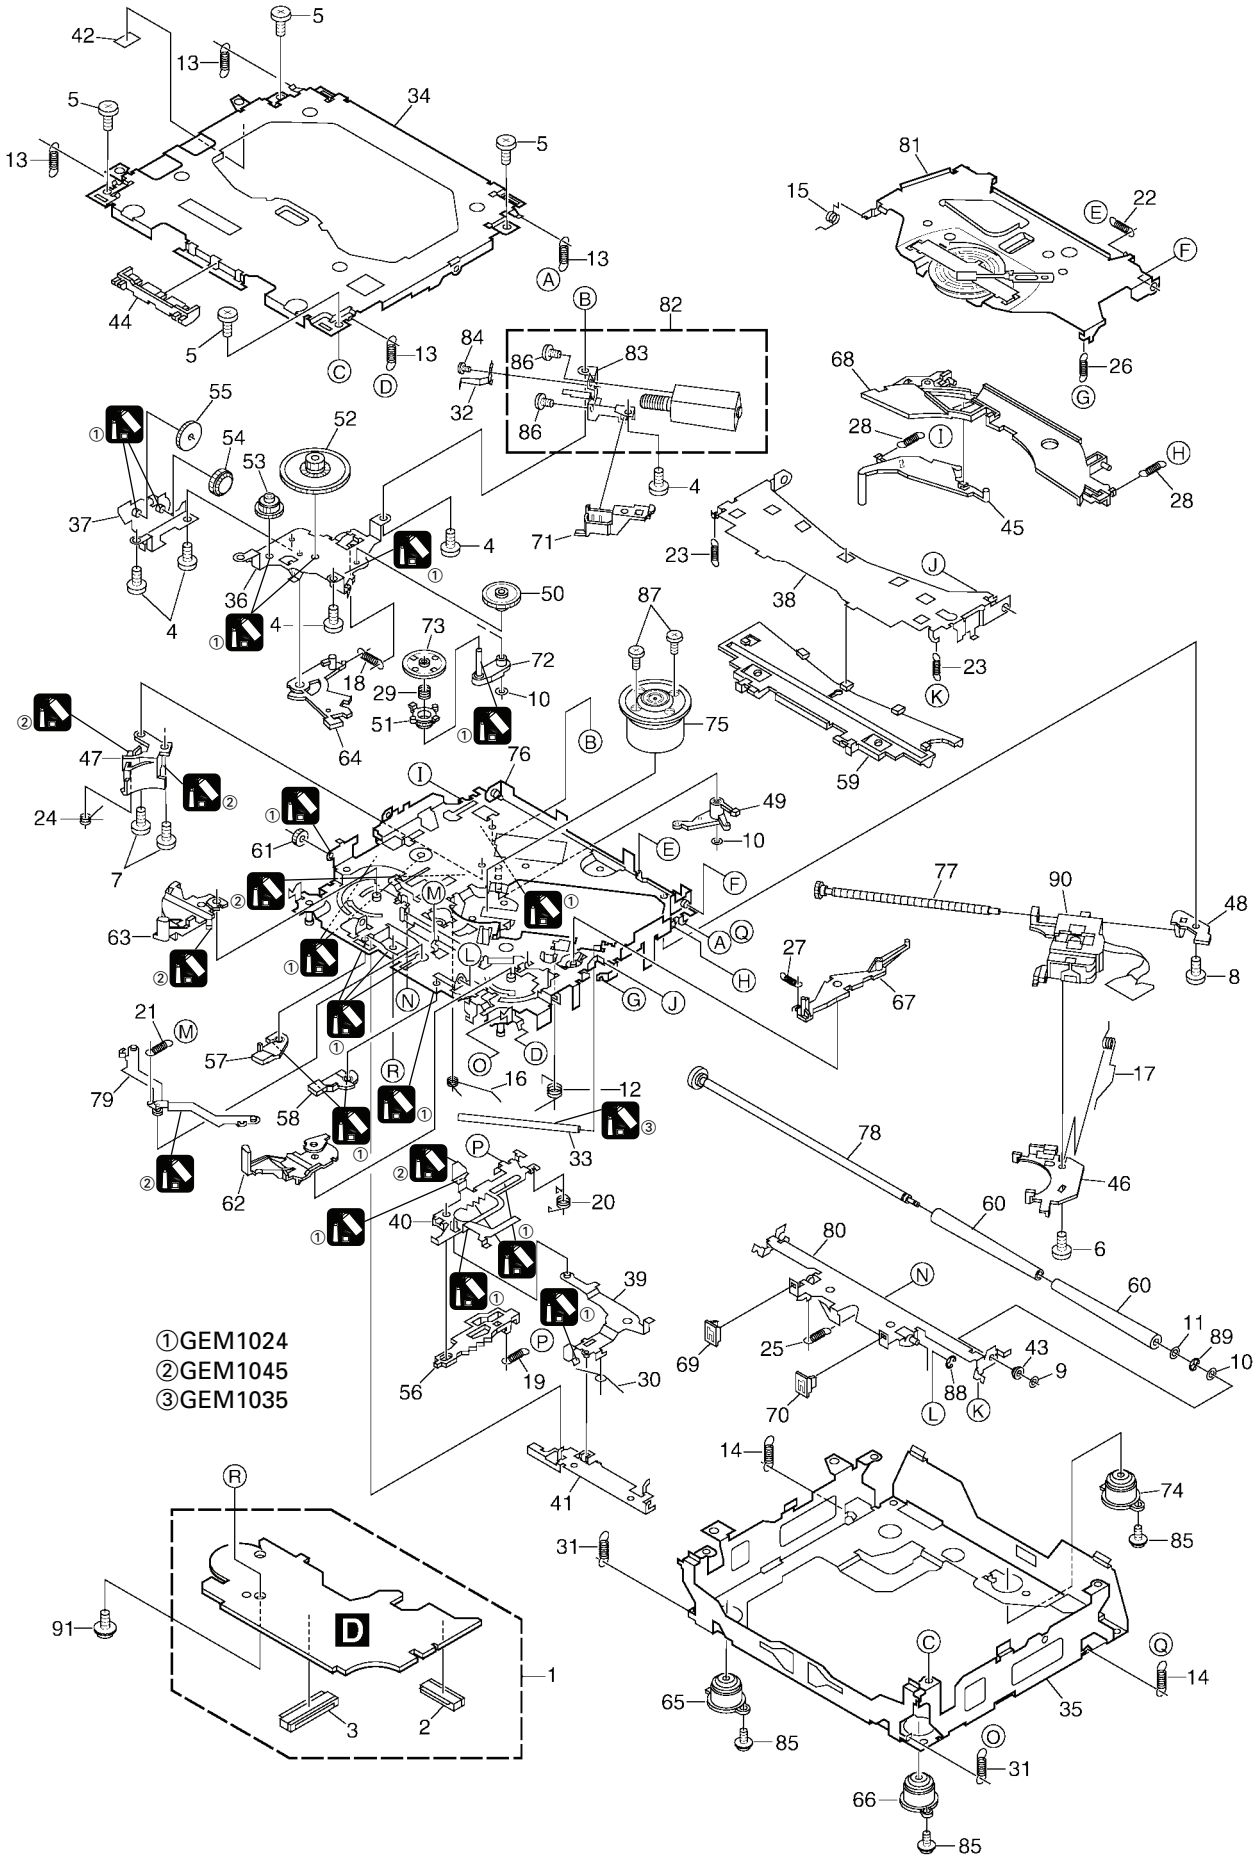

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10MP3)	CWX2743
	2	Connector(CN101)	CKS4182
	3	Connector(CN901)	CKS4017
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1511
	8	Screw(M2x3)	CBA1527
	9	Washer	CBF1037
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2611
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
*	32	Spring	CBL1614
	33	Shaft	CLA3845
	34	Frame	CNC9962
	35	Frame	CNC9963
	36	Bracket	CNC9966
	37	Bracket	CNC9967
	38	Arm	CNC9968
	39	Arm	CNC9973
	40	Lever	CNC9983
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV6906
	44	Guide	CNV6925
	45	Arm	CNV7198

Mark	No.	Description	Part No.
	46	Rack	CNV7199
	47	Holder	CNV7201
	48	Holder	CNV7202
	49	Arm	CNV7203
	50	Gear	CNV7207
	51	Gear	CNV7208
	52	Gear	CNV7209
	53	Gear	CNV7210
	54	Gear	CNV7211
	55	Gear	CNV7212
	56	Rack	CNV7214
	57	Arm	CNV7215
	58	Arm	CNV7216
	59	Guide	CNV7217
	60	Roller	CNV7218
	61	Gear	CNV7219
	62	Arm	CNV7221
	63	Arm	CNV7220
	64	Arm	CNV7222
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV7341
	68	Arm	CNV7342
	69	Guide	CNV7360
	70	Guide	CNV7361
	71	Holder	CNV7437
	72	Arm	CNV7444
	73	Gear	CNV7595
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXB6007
	76	Chassis Unit	CXB8728
	77	Screw Unit	CXB8729
	78	Gear Unit	CXB8731
	79	Arm Unit	CXB8732
	80	Arm Unit	CXB8735
	81	Arm Unit	CXB8852
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	Screw	JFZ20P020FTC
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	Washer	YE15FTC
	89	Washer	YE20FTC
	90	Pickup Unit(Service)(P10)	CXX1641
	91	Screw	IMS26P030FMC

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM8588(DEH-P550MP/XN/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	101	IC	HA12187FP
IC	131	IC	NJM4558MD
IC	201	IC	PML009A
IC	301	IC	PAL007A
IC	401	IC	NJM2391DL1-33
IC	601	IC	PD5800A
IC	602	IC	S-80835ANUP-EDZ
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC114EU
Q	301	Transistor	DTC124EU
Q	351	Transistor	IMH3A
Q	352	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	650	Transistor	2SD1760F5
Q	651	Transistor	2SD2396
Q	652	Transistor	IMD2A
Q	803	Transistor	2SD1767
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EU
Q	806	Transistor	IMD14
Q	807	Transistor	2SA1037K
Q	808	Transistor	DTC114EU
Q	911	Transistor	2SD2396
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	DTC114EU
Q	923	Transistor	2SB1243
Q	931	Transistor	IMX1
Q	932	Transistor	DTC114EU
Q	951	Transistor	2SA1037K
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
D	131	Diode Network	DA204U
D	132	Diode Network	DA204U
D	133	Diode	DAN202U
D	134	Diode	DAP202U
D	301	Diode	S5688G
D	302	Diode	S5688G
D	303	Diode	S5688G
D	304	Diode	S5688G
D	401	Diode	S5688G
D	402	Diode	S5688G
D	403	Diode	S5688G
D	650	Diode	HZS6L(C1)
D	651	Diode	HZS9L(B1)
D	803	Diode Network	DA204U
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	806	Diode	DAN202U
D	807	Diode	DAP202U
D	808	Diode	HZS11L(A1)
D	911	Diode	S5688G
D	912	Diode	HZS6L(B2)
D	921	Diode	HZS9L(B3)
D	931	Diode	HZS7L(A1)
D	932	Diode	HZS7L(C3)
D	937	Diode	MA110
D	951	Diode	DAN202U
D	981	Diode	DAN202U
D	982	Diode	HZS9L(A2)
L	101	Inductor	LAU2R2K
L	201	Ferri-Inductor	LAU4R7K
L	301	Choke Coil 600µH	CTH1280
L	401	Ferri-Inductor	LAU4R7K
L	403	Inductor	LAU1R0K
L	404	Inductor	LAU1R0K
L	406	Inductor	CTF1385
L	601	Ferri-Inductor	LAU100K
L	683	Ferri-Inductor	LAU4R7K
L	801	Inductor	LAU2R2K
L	951	Inductor	LAU2R2K
X	601	Radiator 10.00MHz	CSS1599
S	802	Switch(DSENSE)	CSN1039
		FM/AM Tuner Unit	CWE1646
		Fuse 10A	CEK1208
BZ	641	Buzzer	CPV1062
AR	401	Surge Protector	DSP-201M-S00B

RESISTORS

R	101	RS1/16S101J
R	102	RS1/16S620J
R	103	RS1/16S101J
R	104	RS1/16S222J
R	105	RS1/16S103J
R	106	RS1/16S472J
R	107	RS1/16S223J
R	108	RS1/16S472J
R	109	RS1/16S821J
R	110	RS1/16S821J
R	111	RS1/16S223J
R	112	RS1/16S223J
R	113	RS1/16S102J
R	114	RS1/16S102J
R	133	RS1/16S563J
R	134	RS1/16S104J
R	139	RS1/16S563J
R	140	RS1/16S104J
R	147	RS1/16S474J
R	148	RS1/16S474J
R	201	RAB4C102J
R	241	RS1/16S102J
R	242	RS1/16S102J
R	247	RS1/16S101J
R	248	RS1/16S101J

=====Circuit Symbol and No.	===Part Name	Part No.
R 249		RS1/16S101J
R 250		RS1/16S101J
R 301		RS1/16S103J
R 302		RS1/16S103J
R 303		RS1/16S153J
R 304		RS1/16S331J
R 351		RS1/16S821J
R 352		RS1/16S821J
R 353		RS1/16S821J
R 354		RS1/16S821J
R 355		RS1/16S821J
R 356		RS1/16S821J
R 357		RS1/16S223J
R 358		RS1/16S223J
R 359		RS1/16S223J
R 360		RS1/16S223J
R 361		RS1/16S223J
R 362		RS1/16S223J
R 403		RS1/16S681J
R 404		RS1/16S0R0J
R 405		RS1/16S681J
R 406		RS1/16S681J
R 407		RS1/16S681J
R 408		RS1/16S681J
R 410		RS1/16S681J
R 413		RS1/16S0R0J
R 416		RS1/16S681J
R 417		RS1/16S681J
R 419		RS1/16S681J
R 421		RS1/16S681J
R 423		RD1/4PU0R0J
R 602		RS1/16S104J
R 605		RS1/16S0R0J
R 606		RS1/16S104J
R 607		RS1/16S822J
R 608		RS1/16S221J
R 609		RS1/16S221J
R 610		RS1/16S682J
R 611		RS1/16S682J
R 612		RS1/16S104J
R 613		RS1/16S102J
R 615		RS1/16S0R0J
R 616		RS1/16S473J
R 617		RS1/16S102J
R 618		RS1/16S104J
R 630		RS1/16S104J
R 632		RS1/16S104J
R 641		RS1/16S102J
R 645		RS1/16S271J
R 651		RD1/4PU221J
R 652		RD1/4PU221J
R 656		RS1/16S102J
R 657		RS1/16S102J
R 665		RD1/4PU0R0J
R 666		RS1/16S0R0J
R 669		RS1/16S0R0J
R 671		RS1/16S0R0J
R 672		RS1/16S0R0J
R 676		RS1/16S102J
R 677		RS1/16S104J
R 678		RS1/16S102J
R 680		RS1/16S222J
R 681		RS1/16S104J
R 689		RS1/16S0R0J
R 802		RS1/16S222J

=====Circuit Symbol and No.	===Part Name	Part No.
R 803		RS1/16S472J
R 804		RS1/16S1R0J
R 805		RS1/16S391J
R 806		RS1/16S391J
R 807		RS1/16S473J
R 808		RS1/16S473J
R 809		RS1/16S102J
R 810		RS1/16S222J
R 811		RS1/16S222J
R 812		RS1/16S222J
R 813		RS1/16S222J
R 814		RS1/16S222J
R 815		RS1/16S473J
R 816		RS1/16S104J
R 817		RD1/4PU391J
R 818		RS1/16S104J
R 819		RS1/16S222J
R 820		RS1/16S222J
R 821		RS1/16S472J
R 822		RS1/16S0R0J
R 823		RS1/16S102J
R 824		RS1/16S473J
R 825		RS1/16S102J
R 826		RS1/16S102J
R 827		RS1/16S102J
R 828		RS1/16S102J
R 903		RS1/16S223J
R 912		RS1/16S222J
R 913		RS1/16S223J
R 914		RS1/16S104J
R 915		RS1/16S104J
R 916		RS1/16S104J
R 923		RS1/16S103J
R 924		RD1/4PU122J
R 925		RS1/16S182J
R 931		RS1/16S472J
R 932		RS1/16S473J
R 933		RS1/16S103J
R 934		RS1/16S473J
R 935		RS1/16S104J
R 936		RS1/16S103J
R 938		RD1/4PU102J
R 939		RD1/4PU102J
R 951		RD1/4PU153J
R 952		RS1/16S472J
R 953		RS1/16S472J
R 954		RS1/16S102J
R 983		RS1/16S223J
R 984		RS1/16S473J
R 985		RS1/16S102J

CAPACITORS

C 101		CKSRYB104K16
C 102		CKSRYB473K25
C 131		CKSRYB104K16
C 132		CKSRYB104K16
C 141		CKSRYB104K16
C 142		CKSRYB103K50
C 143		CKSRYB474K10
C 144		CKSRYB474K10
C 145		CCSRCH101J50
C 146		CCSRCH101J50
C 147		CKSRYB104K16
C 201		CEJQ1R0M50
C 202		CEJQ1R0M50
C 203		CKSRYB104K16
C 204		CKSRYB104K16

=====Circuit Symbol and No.		===Part Name	Part No.
C	205		CKSRYB104K16
C	206		CEJQ470M16
C	207		CEJQ1R0M50
C	208		CEJQ1R0M50
C	209		CEJQ1R0M50
C	210		CEJQ1R0M50
C	211		CEJQ4R7M35
C	212		CEJQ4R7M35
C	213		CEJQ4R7M35
C	214		CEJQ4R7M35
C	215		CEJQ4R7M35
C	216		CEJQ4R7M35
C	217		CEJQ4R7M35
C	218		CEJQ4R7M35
C	219		CCSRCH120J50
C	220		CCSRCH120J50
C	221		CCSRCH120J50
C	222		CCSRCH120J50
C	225		CEJQ100M16
C	241		CKSRYB152K50
C	242		CKSRYB152K50
C	301		CKSRYB104K16
C	306		CEJQ330M10
C	307	3300µF/16V	CCH1486
C	309		CKSRYB104K16
C	310		CEJQ100M16
C	311		CKSYB475K16
C	312		CKSYB475K16
C	317		CKSRYB474K10
C	318		CKSRYB474K10
C	319		CKSRYB474K10
C	320		CKSRYB474K10
C	321		CKSRYB474K10
C	322		CKSRYB474K10
C	323		CKSRYB474K10
C	324		CKSRYB474K10
C	325		CKSQYB225K10
C	326		CKSQYB225K10
C	351		CEJQ4R7M35
C	352		CEJQ4R7M35
C	353		CEJQ4R7M35
C	354		CEJQ4R7M35
C	355		CEJQ4R7M35
C	356		CEJQ4R7M35
C	401		CKSRYB103K50
C	402		CEJQ101M10
C	403		CKSQYB105K16
C	404		CKSYB475K10
C	406		CEJQ470M10
C	408		CKSYB475K10
C	409		CEJQ1R0M50
C	411		CCSRCH101J50
C	412		CCSRCH470J50
C	601		CEJQ4R7M35
C	602		CKSQYB105K16
C	603		CEJQ2R2M50
C	604		CCSRCH200J50
C	605		CCSRCH200J50
C	609		CCSRCH101J50
C	644		CEJQ101M10
C	645		CKSRYB473K25
C	646		CCSRCH470J50
C	651		CEJQ101M10
C	652		CKSRYB473K25
C	654		CKSRYB152K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	655		CKSRYB152K50
C	657		CCSRCH470J50
C	658	470µF/16V	CCH1183
C	662		CCSRCH471J50
C	755		CKSRYB104K16
C	806		CKSRYB473K25
C	807		CKSRYB473K25
C	811		CKSQYB105K16
C	854		CKSRYB473K25
C	911	470µF/16V	CCH1331
C	912		CKSRYB472K50
C	913		CKSRYB103K50
C	914		CEJQ470M10
C	921		CEJQ221M10
C	922		CKSRYB103K50
C	923		CEJQ101M16
C	931		CEJQ1R0M50

A Unit Number : CWM8589(DEH-P5500MP/XN/UC)
CWM8590(DEH-P5550MP/XN/ES)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	HA12187FP
IC	131	IC	NJM4558MD
IC	201	IC	PML009A
IC	301	IC	PAL007A
IC	401	IC	NJM2391DL1-33
IC	601	IC	PD5800A
IC	602	IC	S-80835ANUP-EDZ
Q	101	Transistor	2SA1037K
Q	102	Transistor	DTC114EU
Q	301	Transistor	DTC124EU
Q	352	Transistor	IMH3A
Q	353	Transistor	IMH3A
Q	650	Transistor	2SD1760F5
Q	651	Transistor	2SD2396
Q	652	Transistor	IMD2A
Q	803	Transistor	2SD1767
Q	804	Transistor	IMD2A
Q	805	Transistor	DTC143EU
Q	806	Transistor	IMD14
Q	807	Transistor	2SA1037K
Q	808	Transistor	DTC114EU
Q	911	Transistor	2SD2396
Q	913	Transistor	IMD2A
Q	921	Transistor	2SD2396
Q	922	Transistor	DTC114EU
Q	923	Transistor	2SB1243
Q	931	Transistor	IMX1
Q	932	Transistor	DTC114EU
Q	951	Transistor	2SA1037K
Q	981	Transistor	2SC2412K
Q	982	Transistor	IMD2A
D	131	Diode Network	DA204U
D	132	Diode Network	DA204U
D	133	Diode	DAN202U
D	134	Diode	DAP202U
D	301	Diode	S5688G
D	302	Diode	S5688G
D	303	Diode	S5688G
D	304	Diode	S5688G
D	401	Diode	S5688G
D	402	Diode	S5688G
D	403	Diode	S5688G
D	650	Diode	HZS6L(C1)
D	651	Diode	HZS9L(B1)
D	803	Diode Network	DA204U

=====Circuit Symbol and No.		===Part Name	Part No.
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	806	Diode	DAN202U
D	807	Diode	DAP202U
D	808	Diode	HZS11L(A1)
D	911	Diode	S5688G
D	912	Diode	HZS6L(B2)
D	921	Diode	HZS9L(B3)
D	931	Diode	HZS7L(A1)
D	932	Diode	HZS7L(C3)
D	937	Diode	MA110
D	951	Diode	DAN202U
D	981	Diode	DAN202U
D	982	Diode	HZS9L(A2)
L	101	Inductor	LAU2R2K
L	201	Ferri-Inductor	LAU4R7K
L	301	Choke Coil 600µH	CTH1280
L	401	Ferri-Inductor	LAU4R7K
L	403	Inductor	LAU1R0K
L	404	Inductor	LAU1R0K
L	406	Inductor	CTF1385
L	601	Ferri-Inductor	LAU100K
L	683	Ferri-Inductor	LAU4R7K
L	801	Inductor	LAU2R2K
L	951	Inductor	LAU2R2K
X	601	Radiator 10.00MHz	CSS1599
S	802	Switch(DSENSE)	CSN1039
		Fuse 10A	CEK1208
		FM/AM Tuner Unit	CWE1646
BZ	641	Buzzer	CPV1062
AR	401	Surge Protector	DSP-201M-S00B

RESISTORS

R	101		RS1/16S101J
R	102		RS1/16S620J
R	103		RS1/16S101J
R	104		RS1/16S222J
R	105		RS1/16S103J
R	106		RS1/16S472J
R	107		RS1/16S223J
R	108		RS1/16S472J
R	109		RS1/16S821J
R	110		RS1/16S821J
R	111		RS1/16S223J
R	112		RS1/16S223J
R	113		RS1/16S102J
R	114		RS1/16S102J
R	133		RS1/16S563J
R	134		RS1/16S104J
R	139		RS1/16S563J
R	140		RS1/16S104J
R	147		RS1/16S474J
R	148		RS1/16S474J
R	201		RAB4C102J
R	241		RS1/16S102J
R	242		RS1/16S102J
R	247		RS1/16S101J
R	248		RS1/16S101J
R	249		RS1/16S101J
R	250		RS1/16S101J
R	301		RS1/16S103J
R	302		RS1/16S103J
R	303		RS1/16S153J
R	304		RS1/16S331J
R	353		RS1/16S821J
R	354		RS1/16S821J
R	355		RS1/16S821J
R	356		RS1/16S821J

=====Circuit Symbol and No.		===Part Name	Part No.
R	359		RS1/16S223J
R	360		RS1/16S223J
R	361		RS1/16S223J
R	362		RS1/16S223J
R	403		RS1/16S681J
R	404		RS1/16S0R0J
R	405		RS1/16S681J
R	406		RS1/16S681J
R	407		RS1/16S681J
R	408		RS1/16S681J
R	410		RS1/16S681J
R	413		RS1/16S0R0J
R	416		RS1/16S681J
R	417		RS1/16S681J
R	419		RS1/16S681J
R	421		RS1/16S681J
R	423		RD1/4PU0R0J
R	601	(DEH-P5550MP/XN/ES)	RS1/16S104J
R	602	(DEH-P5500MP/XN/UC)	RS1/16S104J
R	605		RS1/16S0R0J
R	606		RS1/16S104J
R	607		RS1/16S822J
R	608		RS1/16S221J
R	609		RS1/16S221J
R	610		RS1/16S682J
R	611		RS1/16S682J
R	612		RS1/16S104J
R	613		RS1/16S102J
R	615		RS1/16S0R0J
R	616		RS1/16S473J
R	617		RS1/16S102J
R	618		RS1/16S104J
R	630		RS1/16S104J
R	632		RS1/16S104J
R	641		RS1/16S102J
R	645		RS1/16S271J
R	651		RD1/4PU221J
R	652		RD1/4PU221J
R	656		RS1/16S102J
R	657		RS1/16S102J
R	665		RD1/4PU0R0J
R	666		RS1/16S0R0J
R	669		RS1/16S0R0J
R	671		RS1/16S0R0J
R	672		RS1/16S0R0J
R	676		RS1/16S102J
R	677		RS1/16S104J
R	678		RS1/16S102J
R	680		RS1/16S222J
R	681		RS1/16S104J
R	689		RS1/16S0R0J
R	802		RS1/16S222J
R	803		RS1/16S472J
R	804		RS1/16S1R0J
R	805		RS1/16S391J
R	806		RS1/16S391J
R	807		RS1/16S473J
R	808		RS1/16S473J
R	809		RS1/16S102J
R	810		RS1/16S222J
R	811		RS1/16S222J
R	812		RS1/16S222J
R	813		RS1/16S222J
R	814		RS1/16S222J
R	815		RS1/16S473J

=====Circuit Symbol and No.	===	Part Name	Part No.
R	816		RS1/16S104J
R	817		RD1/4PU391J
R	818		RS1/16S104J
R	819		RS1/16S222J
R	820		RS1/16S222J
R	821		RS1/16S472J
R	822		RS1/16S0R0J
R	823		RS1/16S102J
R	824		RS1/16S473J
R	825		RS1/16S102J
R	826		RS1/16S102J
R	827		RS1/16S102J
R	828		RS1/16S102J
R	903		RS1/16S223J
R	912		RS1/16S222J
R	913		RS1/16S223J
R	914		RS1/16S104J
R	915		RS1/16S104J
R	916		RS1/16S104J
R	923		RS1/16S103J
R	924		RD1/4PU122J
R	925		RS1/16S182J
R	931		RS1/16S472J
R	932		RS1/16S473J
R	933		RS1/16S103J
R	934		RS1/16S473J
R	935		RS1/16S104J
R	936		RS1/16S103J
R	938		RD1/4PU102J
R	939		RD1/4PU102J
R	951		RD1/4PU153J
R	952		RS1/16S472J
R	953		RS1/16S472J
R	954		RS1/16S102J
R	983		RS1/16S223J
R	984		RS1/16S473J
R	985		RS1/16S102J

CAPACITORS

C	101		CKSRYB104K16
C	102		CKSRYB473K25
C	131		CKSRYB104K16
C	132		CKSRYB104K16
C	141		CKSRYB104K16
C	142		CKSRYB103K50
C	143		CKSRYB474K10
C	144		CKSRYB474K10
C	145		CCSRCH101J50
C	146		CCSRCH101J50
C	147		CKSRYB104K16
C	201		CEJQ1R0M50
C	202		CEJQ1R0M50
C	203		CKSRYB104K16
C	204		CKSRYB104K16
C	205		CKSRYB104K16
C	206		CEJQ470M16
C	207		CEJQ1R0M50
C	208		CEJQ1R0M50
C	209		CEJQ1R0M50
C	210		CEJQ1R0M50
C	211		CEJQ4R7M35
C	212		CEJQ4R7M35
C	213		CEJQ4R7M35
C	214		CEJQ4R7M35
C	215		CEJQ4R7M35
C	216		CEJQ4R7M35
C	217		CEJQ4R7M35
C	218		CEJQ4R7M35
C	219		CCSRCH120J50

=====Circuit Symbol and No.	===	Part Name	Part No.
C	220		CCSRCH120J50
C	221		CCSRCH120J50
C	222		CCSRCH120J50
C	225		CEJQ100M16
C	241		CKSRYB152K50
C	242		CKSRYB152K50
C	301		CKSRYB104K16
C	306		CEJQ330M10
C	307	3300µF/16V	CCH1486
C	309		CKSRYB104K16
C	310		CEJQ100M16
C	311		CKSYB475K16
C	312		CKSYB475K16
C	317		CKSRYB474K10
C	318		CKSRYB474K10
C	319		CKSRYB474K10
C	320		CKSRYB474K10
C	321		CKSRYB474K10
C	322		CKSRYB474K10
C	323		CKSRYB474K10
C	324		CKSRYB474K10
C	325		CKSQYB225K10
C	326		CKSQYB225K10
C	353		CEJQ4R7M35
C	354		CEJQ4R7M35
C	355		CEJQ4R7M35
C	356		CEJQ4R7M35
C	401		CKSRYB103K50
C	402		CEJQ101M10
C	403		CKSQYB105K16
C	404		CKSYB475K10
C	406		CEJQ470M10
C	408		CKSYB475K10
C	409		CEJQ1R0M50
C	411		CCSRCH101J50
C	412		CCSRCH470J50
C	601		CEJQ4R7M35
C	602		CKSQYB105K16
C	603		CEJQ2R2M50
C	604		CCSRCH200J50
C	605		CCSRCH200J50
C	609		CCSRCH101J50
C	644		CEJQ101M10
C	645		CKSRYB473K25
C	646		CCSRCH470J50
C	651		CEJQ101M10
C	652		CKSRYB473K25
C	654		CKSRYB152K50
C	655		CKSRYB152K50
C	657		CCSRCH470J50
C	658	470µF/16V	CCH1183
C	662		CCSRCH471J50
C	755		CKSRYB104K16
C	806		CKSRYB473K25
C	807		CKSRYB473K25
C	811		CKSQYB105K16
C	854		CKSRYB473K25
C	911	470µF/16V	CCH1331
C	912		CKSRYB472K50
C	913		CKSRYB103K50
C	914		CEJQ470M10
C	921		CEJQ221M10
C	922		CKSRYB103K50
C	923		CEJQ101M16
C	931		CEJQ1R0M50

=====Circuit Symbol and No.	Part Name	Part No.

C Unit Number : CWM8605
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1900	IC	PD6294A
IC	1901	HIC Module	RS-140
Q	1910	Transistor	DTC114EU
D	1902	Diode Network	DA204U
D	1910	LED	NSSW440-9159
D	1912	LED	NSSW440-9159
D	1914	LED	NSSW440-9159
D	1930	LED	CL-195PG-CD
D	1931	LED	CL-195PG-CD
D	1932	LED	CL-195PG-CD
D	1935	LED	CL-195PG-CD
D	1942	LED	CL190UBX
D	1943	LED	CL190UBX
D	1946	LED	CL-195PG-CD
D	1947	LED	CL-195PG-CD
X	1900	Ceramic Resonator 5.00MHz	CSS1547
S	1901	Push Switch	CSG1112
S	1902	Push Switch	CSG1112
S	1903	Switch	CSG1107
S	1904	Switch	CSG1107
S	1905	Switch	CSG1107
S	1906	Switch	CSG1107
S	1907	Switch	CSG1107
S	1908	Switch	CSG1107
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Push Switch	CSG1112
S	1912	Push Switch	CSG1160
S	1913	Push Switch	CSG1112
S	1914	Push Switch	CSG1160
S	1915	Push Switch	CSG1112
S	1916	Push Switch	CSG1112
S	1917	Push Switch	CSG1111
S	1918	Push Switch	CSG1111
S	1950	Encoder	CSD1059
		LCD	CAW1755

RESISTORS

R	1900		RS1/16S222J
R	1901		RS1/16S222J
R	1902		RS1/16S121J
R	1903		RS1/16S2R2J
R	1910		RS1/16S101J
R	1912		RS1/16S680J
R	1914		RS1/16S181J
R	1915		RS1/16S181J
R	1919		RS1/16S101J
R	1930		RS1/16S560J
R	1932		RS1/16S560J
R	1934		RS1/16S560J
R	1936		RS1/16S560J
R	1938		RS1/16S330J
R	1939		RS1/16S680J
R	1940		RS1/16S560J
R	1941		RS1/16S151J
R	1942		RS1/16S0R0J
R	1943		RS1/16S151J
R	1950		RS1/16S472J
R	1960		RS1/16S473J

=====Circuit Symbol and No.	Part Name	Part No.

CAPACITORS

C	1900		CKSRYB104K16
C	1901		CKSYF106Z10
C	1902		CKSRYB104K16
C	1903		CKSRYB104K16
C	1904		CKSRYB104K16
C	1910		CKSRYF104Z25
C	1911		CKSRYF104Z25
C	1913		CKSRYF104Z25
C	1942		CKSRYF104Z25
C	1943		CKSRYF104Z25

B Unit Number : CWM8758
Unit Name : Panel Unit

MISCELLANEOUS

D	1970	LED	CL220PGC
S	1970	Push Switch(EJECT)	CSG1112

RESISTORS

R	1970		RS1/16S101J
R	1971		RS1/16S101J
R	1972		RS1/16S0R0J

CAPACITORS

C	1970		CKSRYB104K16

D Unit Number : CWX2743
Unit Name : CD Core Unit(S10MP3)

MISCELLANEOUS

IC	201	IC	UPD63760GJ
IC	202	IC	MSM51V4265EP-70TS
IC	203	IC	BA033SFP
IC	301	IC	BA5996FM
IC	501	IC	UPD61002GC
IC	502	IC	BA25BC0WFP
IC	701	IC	PE5352B
IC	702	IC	TC74VHCT08AFT
IC	703	IC	S-818A33AUC-BGN
Q	101	Transistor	2SB1132
Q	601	Transistor	DTC323TK
Q	602	Transistor	DTC323TK
Q	603	Transistor	2SB709A
Q	701	Transistor	UN2111
D	101	Diode	1SS355
D	201	Diode	1SR154-400
D	501	Diode	1SR154-400
D	601	Diode	MA152WA
L	201	Inductor	CTF1386
L	202	Inductor	CTF1386
L	204	Inductor	CTF1386
L	205	Inductor	CTF1386
L	206	Inductor	CTF1386
L	207	Inductor	CTF1386
L	208	Inductor	CTF1386
L	209	Inductor	CTF1386
L	211	Inductor	CTF1386
L	212	Inductor	CTF1386
L	501	Inductor	CTF1386
L	502	Inductor	CTF1386
L	503	Inductor	CTF1386
L	701	Inductor	CTF1386
L	702	Inductor	LCYBR22J1608
L	703	Inductor	CTF1386
L	704	Inductor	CTF1386

=====Circuit Symbol and No.		===Part Name	Part No.
TH	701	Thermistor	CCX1037
X	201	Ceramic Resonator 16.934MHz	CSS1603
X	202	Ceramic Resonator 24.57MHz	CSS1615
X	701	Ceramic Resonator 16.00MHz	CSS1616
S	901	Switch(HOME)	CSN1051
S	902	Switch(CLAMP)	CSN1051
S	903	Spring Switch(DSCSNS)	CSN1052
S	904	Switch(12EJ)	CSN1051
S	905	Switch(8EJ)	CSN1051

RESISTORS

R	101		RS1/10S1R5J
R	102		RS1/10S1R5J
R	103		RS1/10S1R5J
R	104		RS1/10S1R5J
R	105		RS1/10S1R5J
R	201		RS1/16SS102J
R	202		RS1/16SS333J
R	203		RS1/16SS333J
R	204		RS1/16SS333J
R	206		RS1/16SS0R0J
R	208		RS1/16SS0R0J
R	210		RS1/16SS0R0J
R	212		RS1/16SS221J
R	213		RS1/16SS1002D
R	214		RS1/16SS1002D
R	215		RS1/16SS6801D
R	216		RS1/16SS6801D
R	217		RS1/16SS1002D
R	218		RS1/16SS1002D
R	219		RS1/16SS1002D
R	220		RS1/16SS1002D
R	221		RS1/16SS103J
R	222		RS1/16SS103J
R	223		RS1/16SS103J
R	224		RS1/16SS103J
R	225		RS1/16SS103J
R	226		RS1/16SS393J
R	227		RS1/16SS103J
R	228		RS1/16SS182J
R	229		RS1/16SS103J
R	231		RS1/16SS0R0J
R	232		RS1/16SS182J
R	233		RS1/16SS0R0J
R	237		RS1/16SS104J
R	238		RS1/16SS473J
R	240		RS1/16SS0R0J
R	241		RS1/16SS221J
R	301		RS1/16SS183J
R	302		RS1/16SS822J
R	303		RS1/16SS0R0J
R	304		RS1/16SS183J
R	305		RS1/16SS822J
R	306		RS1/16SS0R0J
R	307		RS1/16SS183J
R	308		RS1/16SS822J
R	309		RS1/16SS183J
R	310		RS1/16SS822J
R	311		RS1/16SS0R0J
R	501		RS1/16SS221J
R	502		RS1/16SS221J
R	503		RS1/16SS221J
R	504		RAB4CQ223J
R	505		RAB4CQ223J
R	506		RAB4CQ223J
R	507		RS1/16SS223J

=====Circuit Symbol and No.		===Part Name	Part No.
R	508		RS1/16SS223J
R	509		RS1/16SS102J
R	510		RS1/16SS223J
R	511		RS1/16SS223J
R	512		RS1/16SS223J
R	601		RS1/16S101J
R	602		RS1/16S101J
R	603		RS1/16S223J
R	604		RS1/16S223J
R	605		RS1/16SS103J
R	707		RS1/16SS0R0J
R	708		RS1/16SS102J
R	709		RS1/16SS102J
R	710		RS1/16SS102J
R	711		RS1/16SS102J
R	712		RS1/16SS102J
R	713		RS1/16SS102J
R	714		RS1/16SS473J
R	715		RAB4CQ221J
R	716		RAB4CQ221J
R	717		RAB4CQ221J
R	718		RAB4CQ221J
R	719		RAB4CQ221J
R	720		RS1/16SS471J
R	721		RS1/16SS471J
R	722		RAB4CQ221J
R	723		RS1/16SS102J
R	724		RN1/16SE1302D
R	725		RS1/16SS222J
R	726		RS1/16SS103J
R	727		RS1/16SS473J
R	728		RS1/16SS473J
R	729		RS1/16SS223J
R	730		RS1/16SS473J
R	731		RS1/16SS104J
R	732		RS1/16SS104J
R	733		RS1/16SS104J
R	737		RAB4CQ473J
R	739		RAB4CQ473J
R	740		RS1/16SS473J
R	741		RS1/16SS104J
R	742		RS1/16SS104J
R	745		RS1/16SS473J
R	746		RS1/16SS104J
R	747		RS1/16SS104J
R	748		RS1/16SS104J
R	754		RS1/16SS102J
R	755		RS1/16SS102J
R	756		RS1/16SS104J
R	801		RS1/16SS104J
R	802		RS1/16SS473J
R	803		RS1/16SS273J
R	901		RS1/16SS221J
R	902		RS1/16SS221J
R	903		RS1/16SS221J
R	904		RS1/16SS221J
R	905		RS1/16SS221J
R	906		RS1/16SS221J

CAPACITORS

C	101		CKSSYB104K10
C	102		CKSSYB104K10
C	103		CEV101M16
C	104		CEV101M4
C	105		CKSSYB104K10

=====Circuit Symbol and No.		===Part Name	Part No.
C	106		CCSRCH101J50
C	108		CKSSYB104K10
C	109		CEV100M16
C	201		CKSSYB471K50
C	202		CKSSYB104K10
C	203		CKSSYB104K10
C	204		CEV220M6R3
C	205		CKSSYB103K16
C	206		CKSSYB103K16
C	207		CEV221M4
C	208		CKSSYB104K10
C	209		CKSSYB104K10
C	210		CKSSYB104K10
C	211		CKSSYB104K10
C	216		CKSSYB332K50
C	217		CKSSYB104K10
C	218		CKSSYB223K16
C	219		CKSSYB104K10
C	220		CKSSYB103K16
C	221		CKSSYB104K10
C	222		CCSSCH270J50
C	223		CCSSCJ3R0C50
C	224		CKSSYB104K10
C	225		CKSSYB103K16
C	226		CCSSCH680J50
C	227		CCSSCH470J50
C	228		CKSSYB682K25
C	230		CKSSYB104K10
C	232		CKSSYB104K10
C	233	47µF/6.3V	CCH1436
C	234		CEV221M4
C	235		CKSRYB224K16
C	237		CKSSYB104K10
C	238		CKSSYB104K10
C	239		CCSSCH9R0D50
C	242		CKSSYB104K10
C	243		CKSSYB104K10
C	245		CKSSYB104K10
C	246		CKSSYB104K10
C	301		CKSSYB331K50
C	302		CKSSYB331K50
C	303		CKSSYB472K25
C	304		CKSSYB472K25
C	305		CEV101M16
C	306		CKSRYB224K16
C	501		CKSSYB104K10
C	502		CKSSYB471K50
C	503		CKSSYB104K10
C	504	47µF/6.3V	CCH1436
C	505		CKSRYB224K16
C	506		CKSSYB104K10
C	508		CKSSYB104K10
C	509		CKSSYB104K10
C	510		CKSSYB104K10
C	511		CKSSYB104K10
C	601		CCSRCH102J50
C	602		CCSRCH102J50
C	603	4.7µF/25V	CCH1508
C	604	4.7µF/25V	CCH1508
C	701		CKSSYB104K10
C	702		CKSSYB471K50
C	703		CKSSYB103K16
C	704		CEV1R0M50
C	705		CKSSYB104K10
C	706		CKSSYB471K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	707		CKSSYB104K10
C	708		CKSSYB104K10
C	709		CKSSYB103K16
C	710		CKSSYB104K10
C	711	10µF/10V	CCH1349
C	712		CKSRYB224K16
C	713		CKSSYB104K10
C	714		CKSSYB104K10
C	715		CKSSYB103K16
C	716		CKSSYB103K16
C	901		CKSSYB104K10
C	903		CCSRCH101J50

Miscellaneous Parts List

		Pickup Unit(Service)(P10)	CXX1641
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB8933