



EXPLODED VIEW / PARTS LIST

Main section

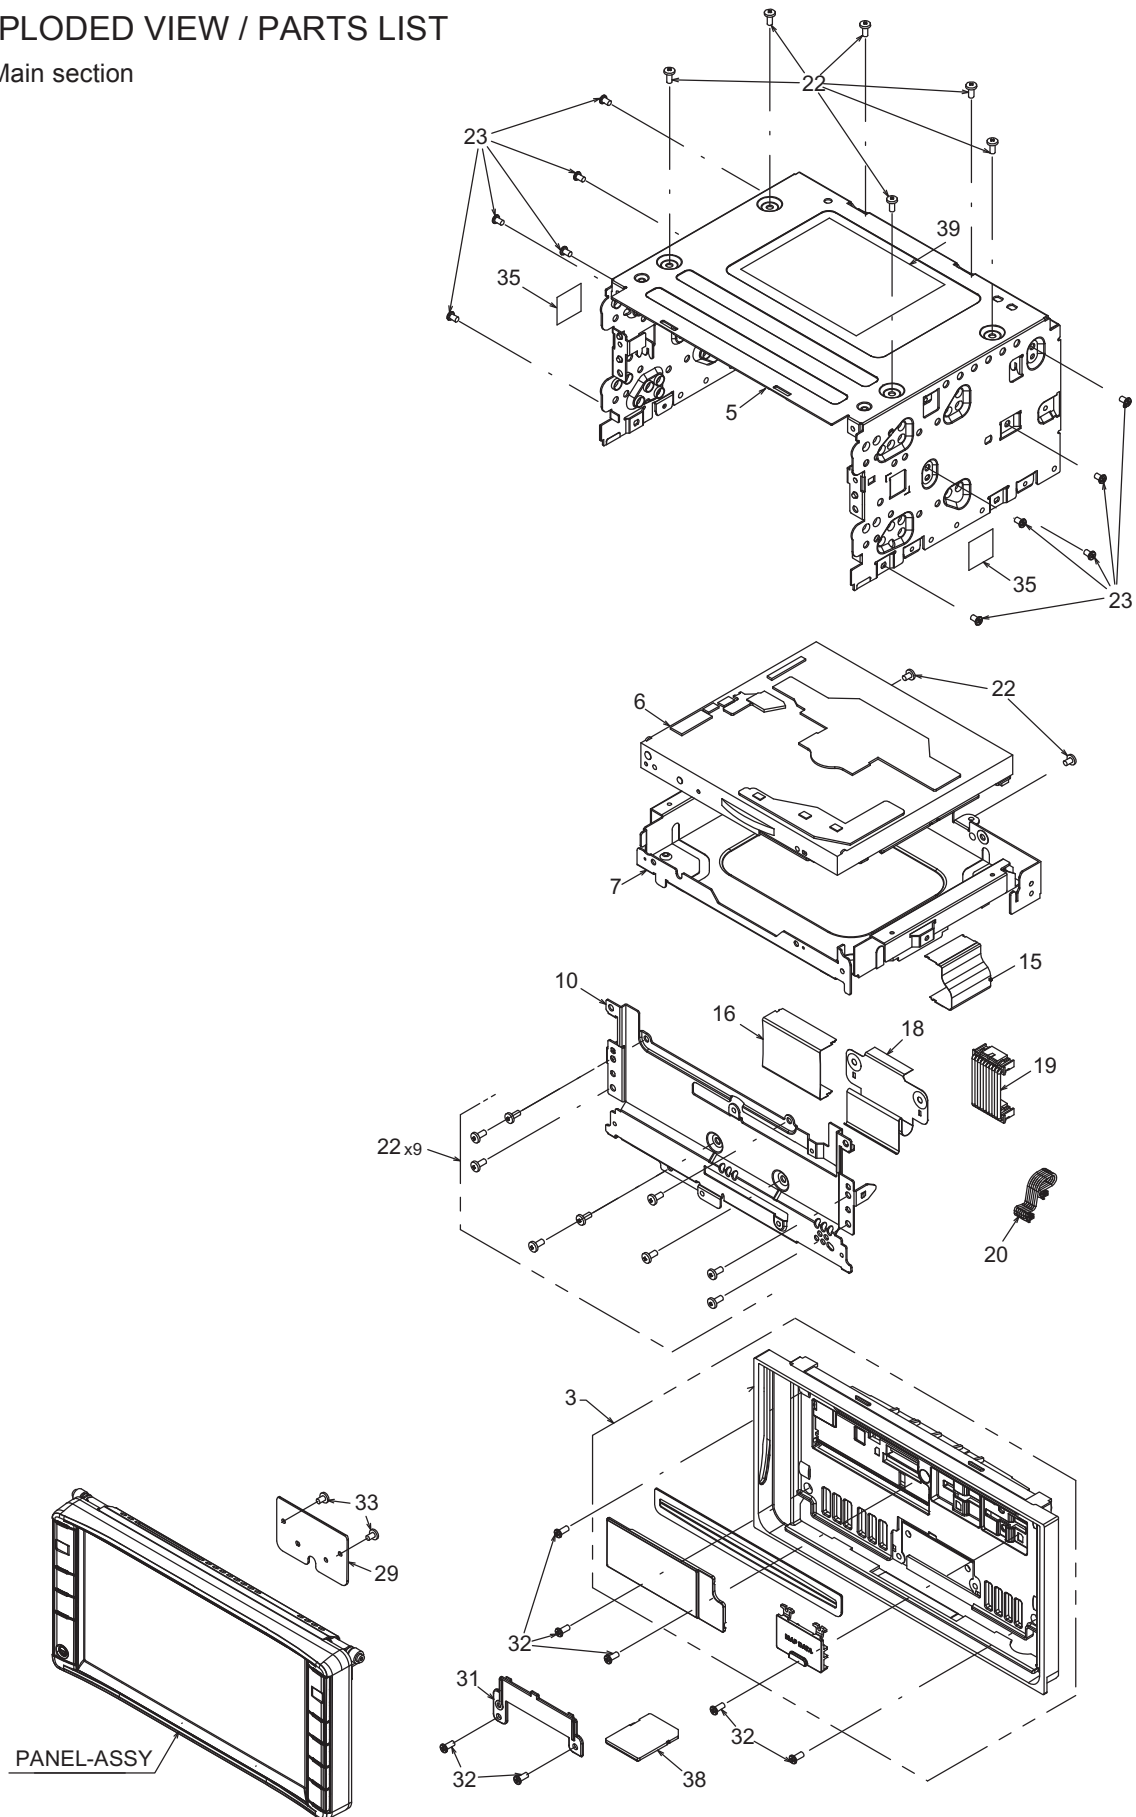

(QY-7376M-A-VA(2/2))


QY-7375M-A

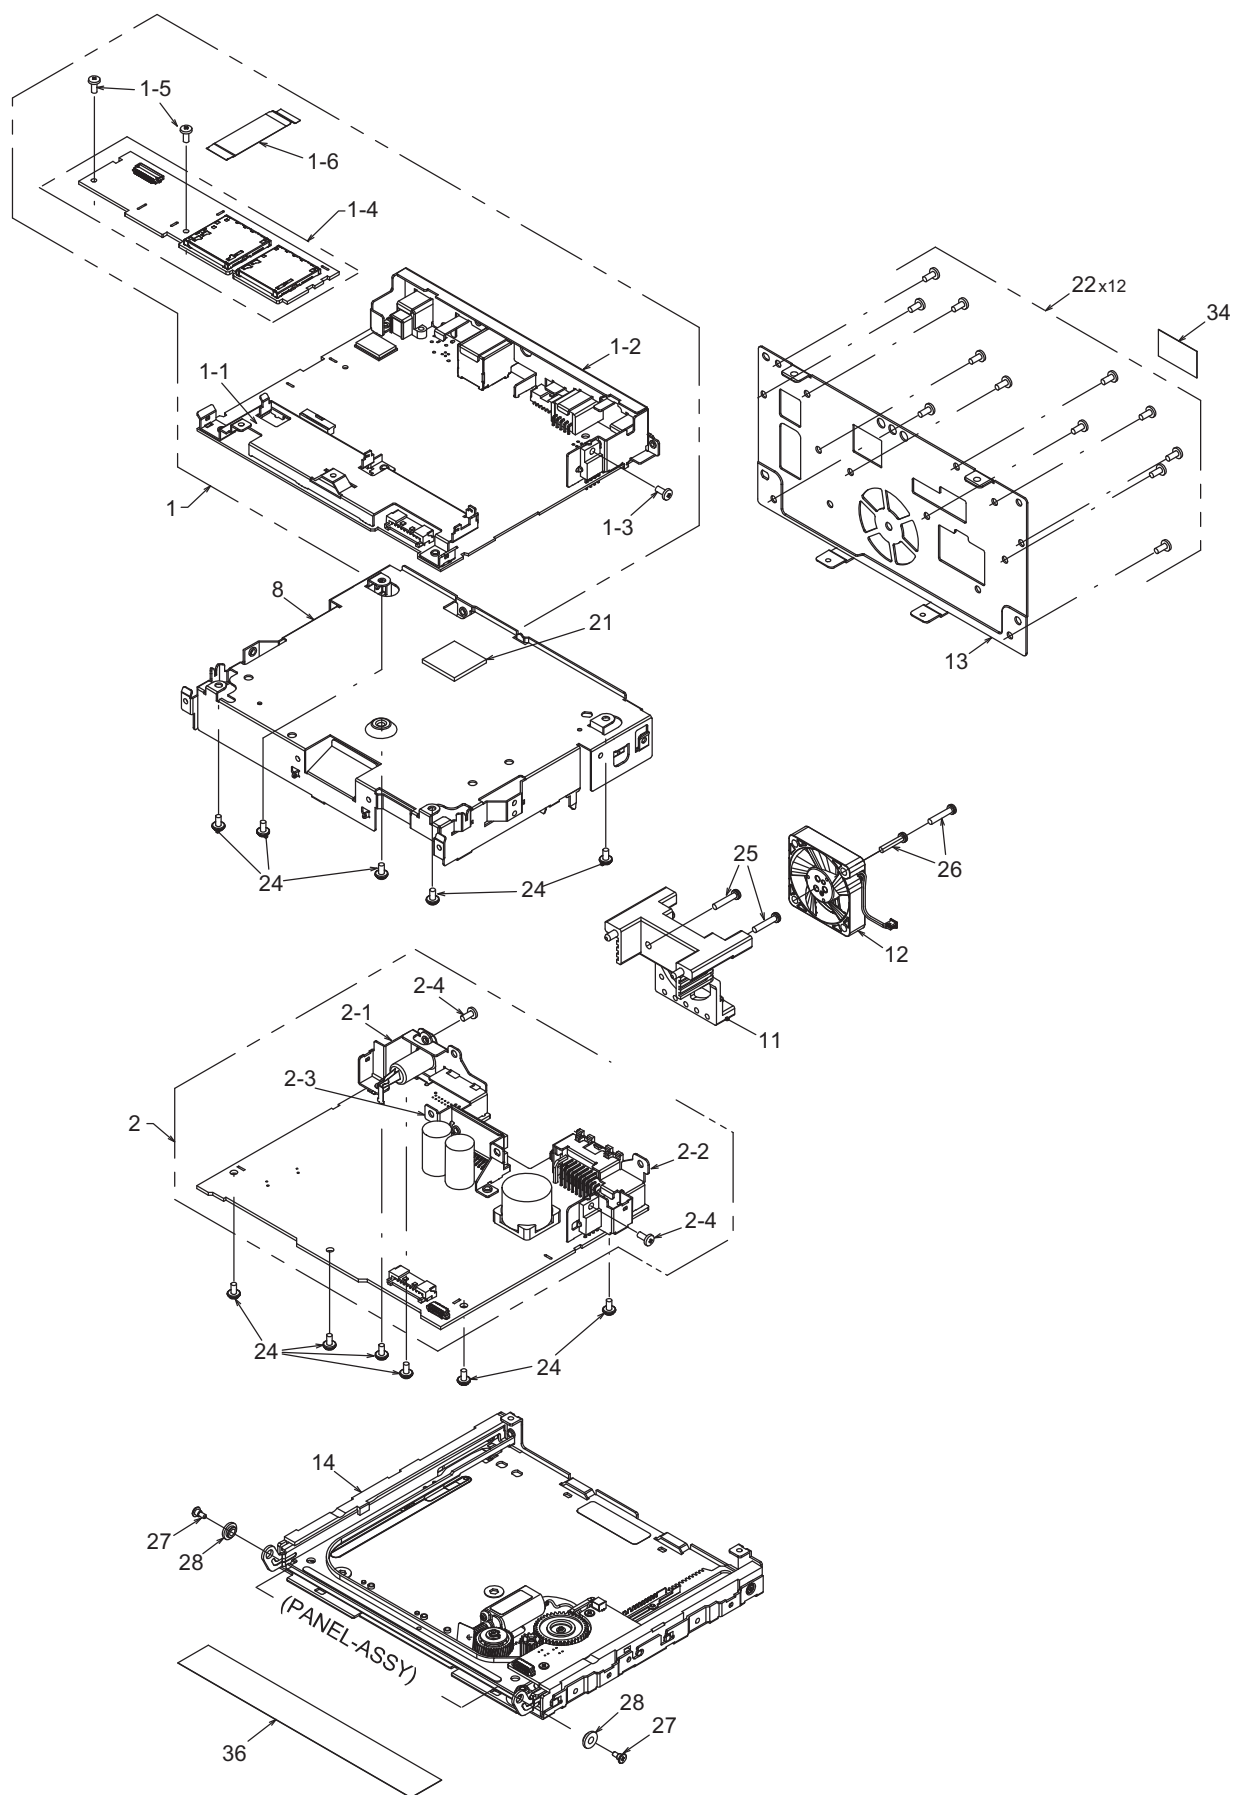

* Do not reuse the adhesive coating screw.

NO.	PART NO.	DESCRIPTION	Q'TY	NO.	PART NO.	DESCRIPTION	Q'TY
1	-----	CPU-PWB-ASSY(7375A7-71)	1	16	816-3108-55	FLAT WIRE	1
1-1	331-5378-00	CPU-HOLDER(F)	1	17	-----	<Missing Ref.No.>	-
1-2	331-5438-00	CPU-HOLDER(R)	1	18	039-4015-01	FPC	1
1-3	714-2606-8B	MACHINE SCREW(M2.6x6)	1	19	854-4667-50	EXTENSION LEAD	1
1-4	.990-0821A	SD-A-PWB-ASSY(7376A9-74)	1	20	854-4638-50	EXTENSION LEAD	1
1-5	780-2604-50	IT SCREW(M2.6X4)	2	21	345-6682-00	CUSHION	1
1-6	816-3109-05	FLAT WIRE	1	22	714-2604-8B	MACHINE SCREW(M2.6x4)	29
2	-----	AUDIO-PWB-ASSY(7375A7-70)	1	23	780-2604-51	SPECIAL SCREW(M2.6x4)	10
2-1	331-5439-00	AUDIO-BRKT(L)	1	24	780-2604-50	IT SCREW(M2.6X4)	11
2-2	331-5440-00	AUDIO-BRKT(R)	1	25	714-2612-8B	MACHINE SCREW(M2.6x12)	2
2-3	331-5406-00	IC-HOLDER	1	26	732-2612-1B	SEMS SCREW(M2.6x12)	2
2-4	714-2606-8B	MACHINE SCREW(M2.6x6)	2	27	716-3738-00	DECORATIVE SCREW (M2.6 adhesive coating screw)	2
3	940-8698-00	INNER-ES-ASSY	1	28	073-9000-00	TERMINAL	2
4	-----	<Missing Ref.No.>	-	29	331-4990-10	FPC-COVER	1
5	310-1996-00	TOP CASE	1	30	-----	<Missing Ref.No.>	-
6	929-2300-80	DIGITAL-MECH	1	31	335-8874-01	FPC-COVER(W)	1
7	331-5389-00	MECH-BRKT	1	32	780-6016-00	SPECIAL SCREW(M2.6x6)	7
8	312-0545-01	INNER CHASSIS	1	33	716-1851-02	SPECIAL SCREW (M2 adhesive coating screw)	2
9	-----	<Missing Ref.No.>	-	34	290-0744-00	LABEL	1
10	946-0105-00	FRONT PLATE-ASSY	1	35	347-9024-00	COVER FILM	2
11	313-2166-00	HEAT SINK	1	36	347-6039-00	SHADE	1
12	020-3061-20	DC-MOTOR	1	37	-----	<Missing Ref.No.>	-
13	307-0805-20	BACK COVER	1	38	-----	SD-ASSY(7375A0-40)	1
14	932-0144-80	SLIDE MECH	1	39	276-1138-10	SETPLATE	1
15	816-3110-55	FLAT WIRE	1				

Panel assembly section

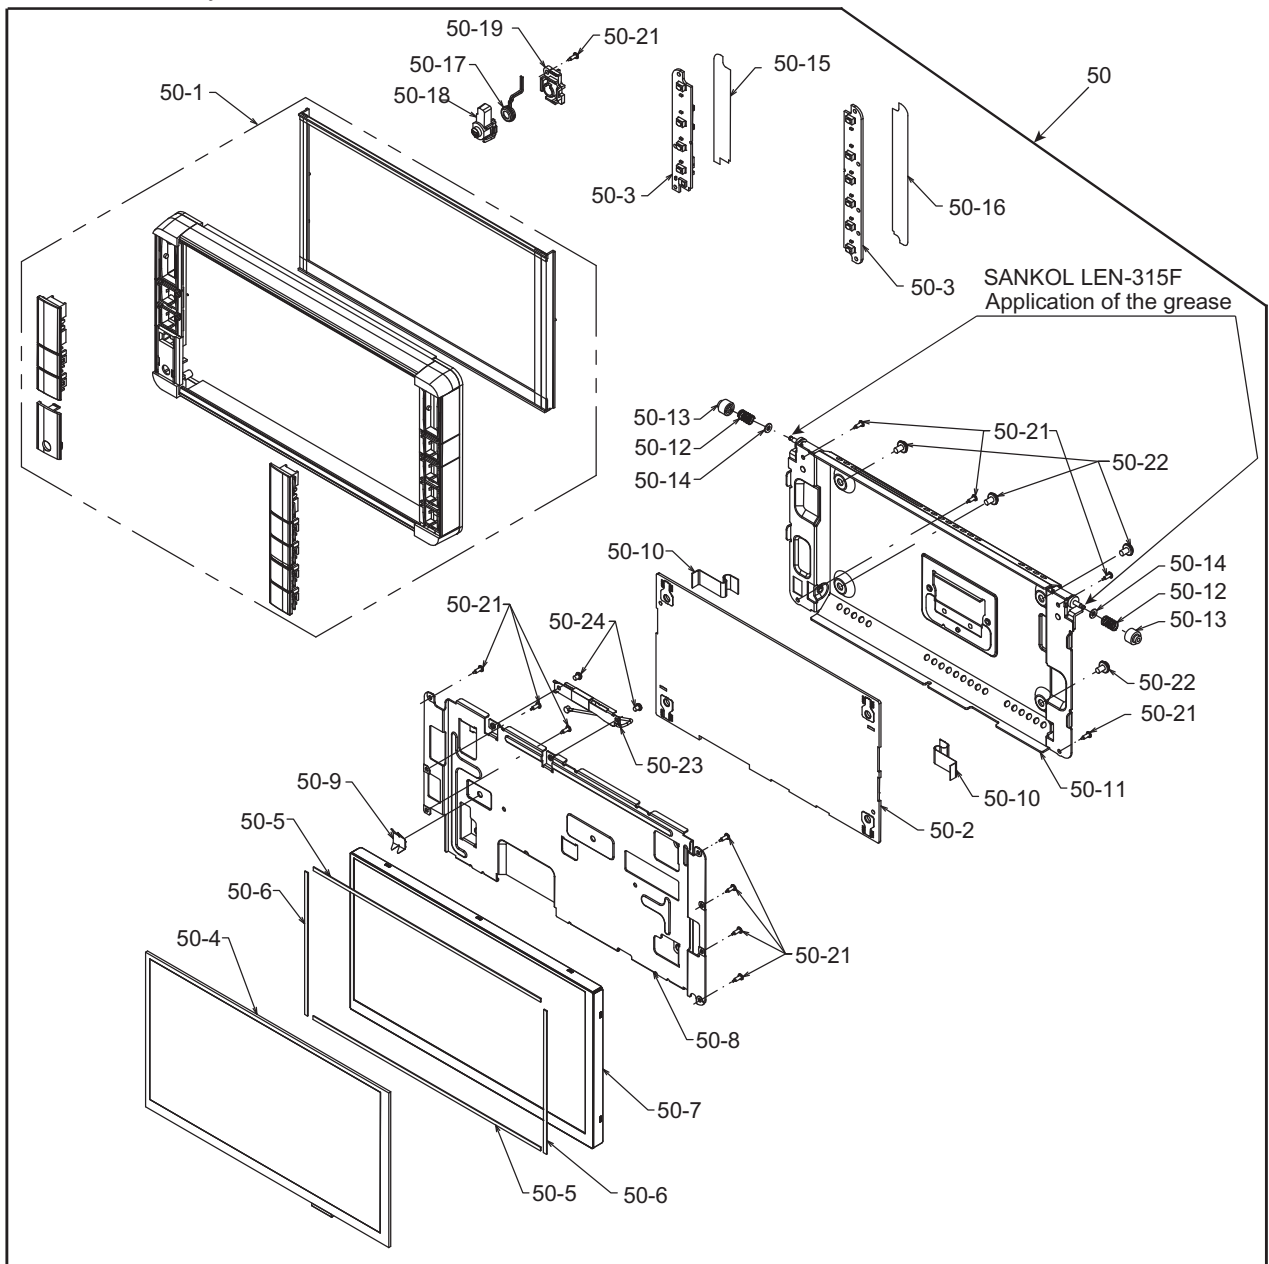

When LCD-A-PWB-ASSY(No.50-2) or LCD(No.50-7) is exchanged,
it is necessary to adjust the panel unit with a special equipment.

NO.	PART NO.	DESCRIPTION	Q'TY	NO.	PART NO.	DESCRIPTION	Q'TY
50	-----	PANEL-ASSY(7375A0-46)	1	50-13	335-8937-00	ROLLER-R	2
50-1	940-8534-61	ESCUTCHEON-ASSY	1	50-14	347-8902-00	SPACER	2
50-2	-----	LCD-A-PWB-ASSY(7375A9-72)	1	50-15	347-8835-00	INSULATOR(L)	1
50-3	.990-0819A	SW-A-PWB-ASSY(7376A9-76)	1	50-16	347-8836-00	INSULATOR(R)	1
50-4	013-9734-00	TOUCH PANEL	1	50-17	081-0040-00	MICROPHONE	1
50-5	347-8740-00	SPACER	2	50-18	335-9397-00	MIC HOLDER(F)	1
50-6	347-8741-00	SPACER	2	50-19	335-9398-00	MIC HOLDER(R)	1
50-7	379-0481-00	INDICATOR	1	50-20	-----	<Missing Ref.No.>	-
50-8	331-5462-00	LCD-HOLDER	1	50-21	716-0872-61	PAD SCREW($\varnothing$ 1.7x6)	12
50-9	331-3038-50	EARTH PLATE	1	50-22	716-1611-50	SPECIAL SCREW(M2.6x4)	4
50-10	816-3057-55	FLAT WIRE	2	50-23	060-8146-00	B/T-ANT	1
50-11	331-5010-20	REAR COVER	1	50-24	716-1468-01	SPECIAL SCREW(M2x2.5)	2
50-12	750-7937-00	ROLLER SPRING	2				