


EXPLODED VIEW (DVD MECHANISM)




Parts with the exploded numbers larger than 700 are not supplied.

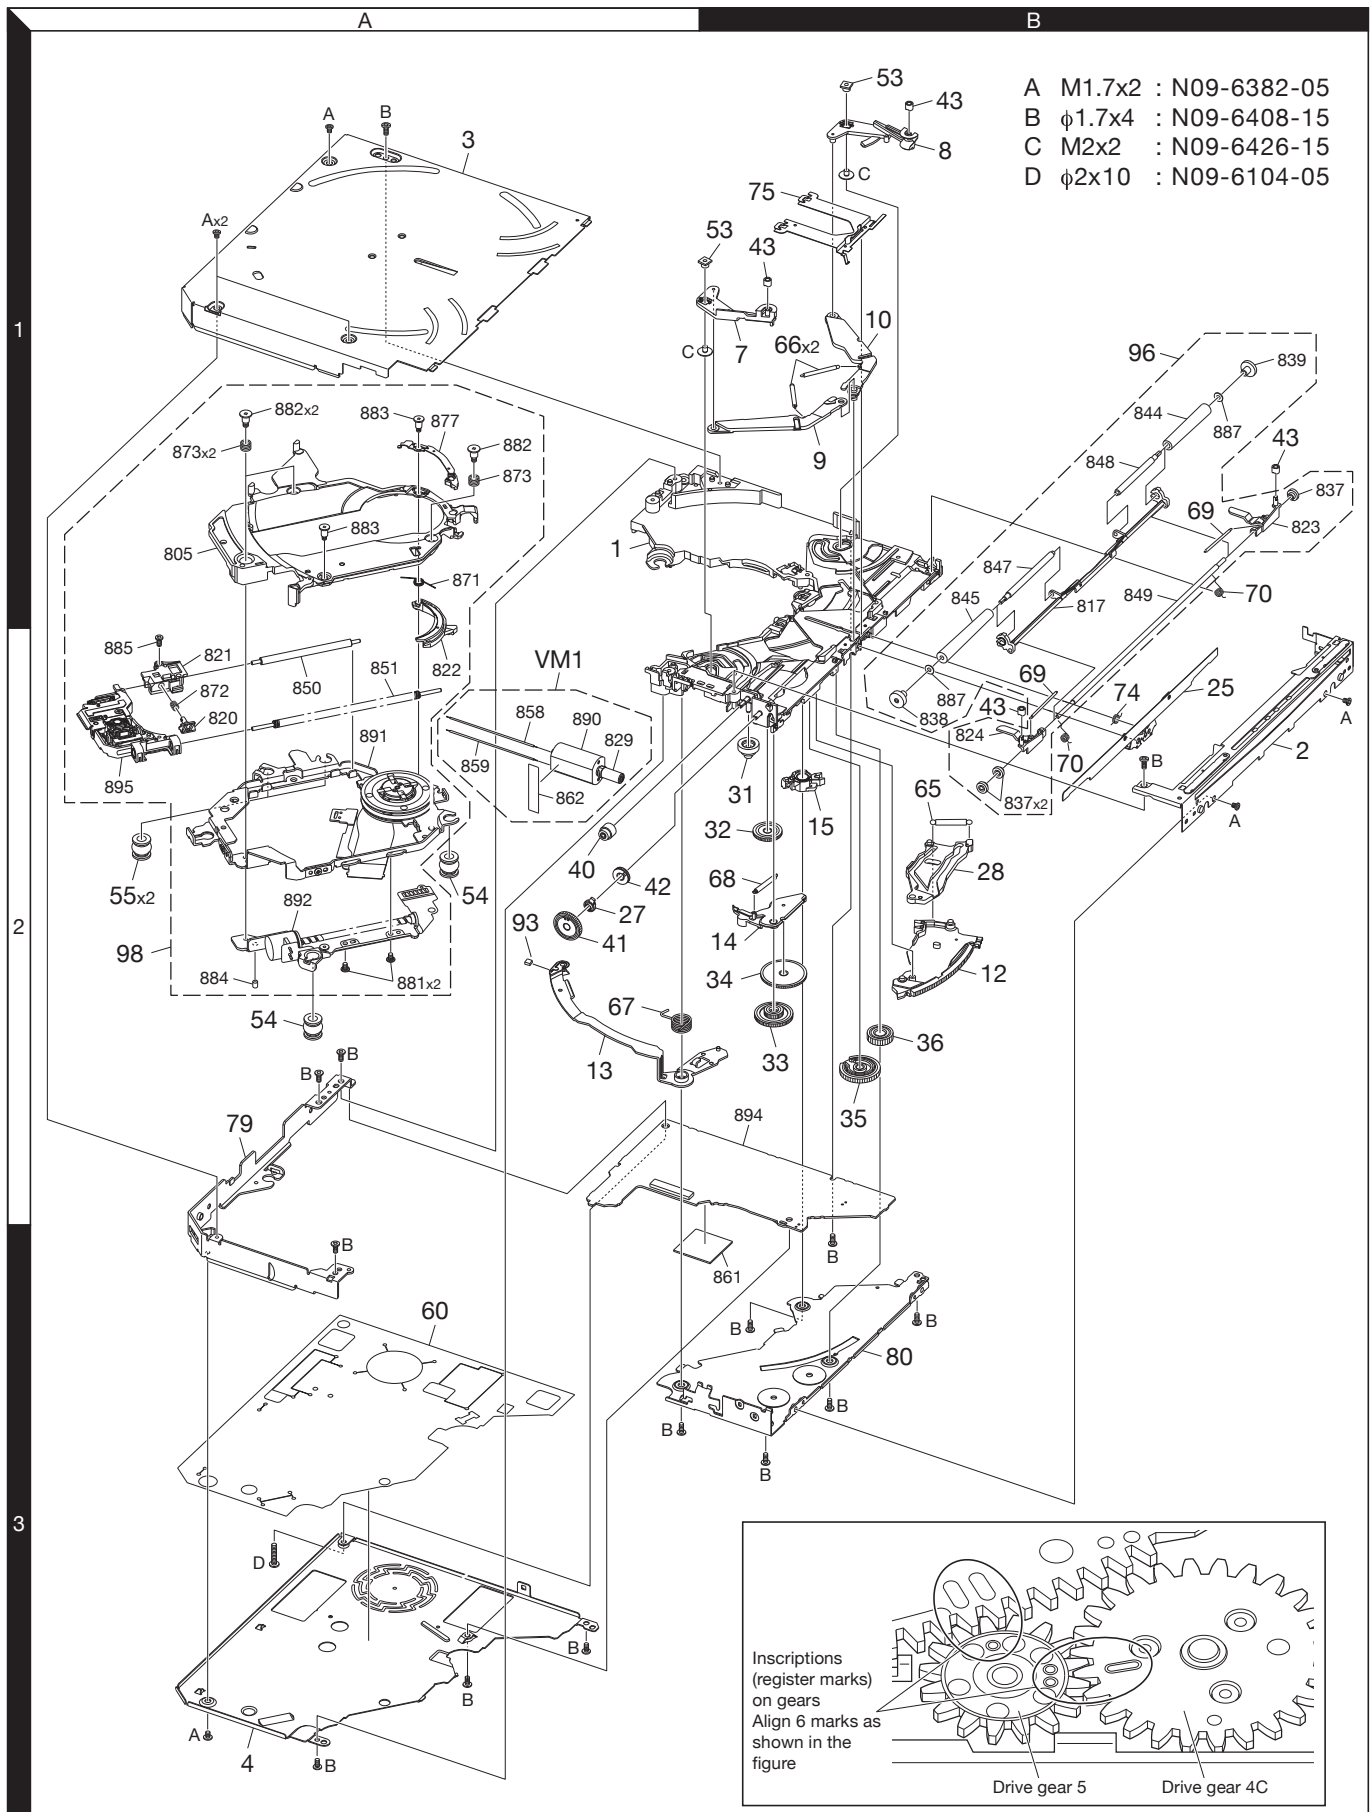

72


EXPLODED VIEW (PANEL)

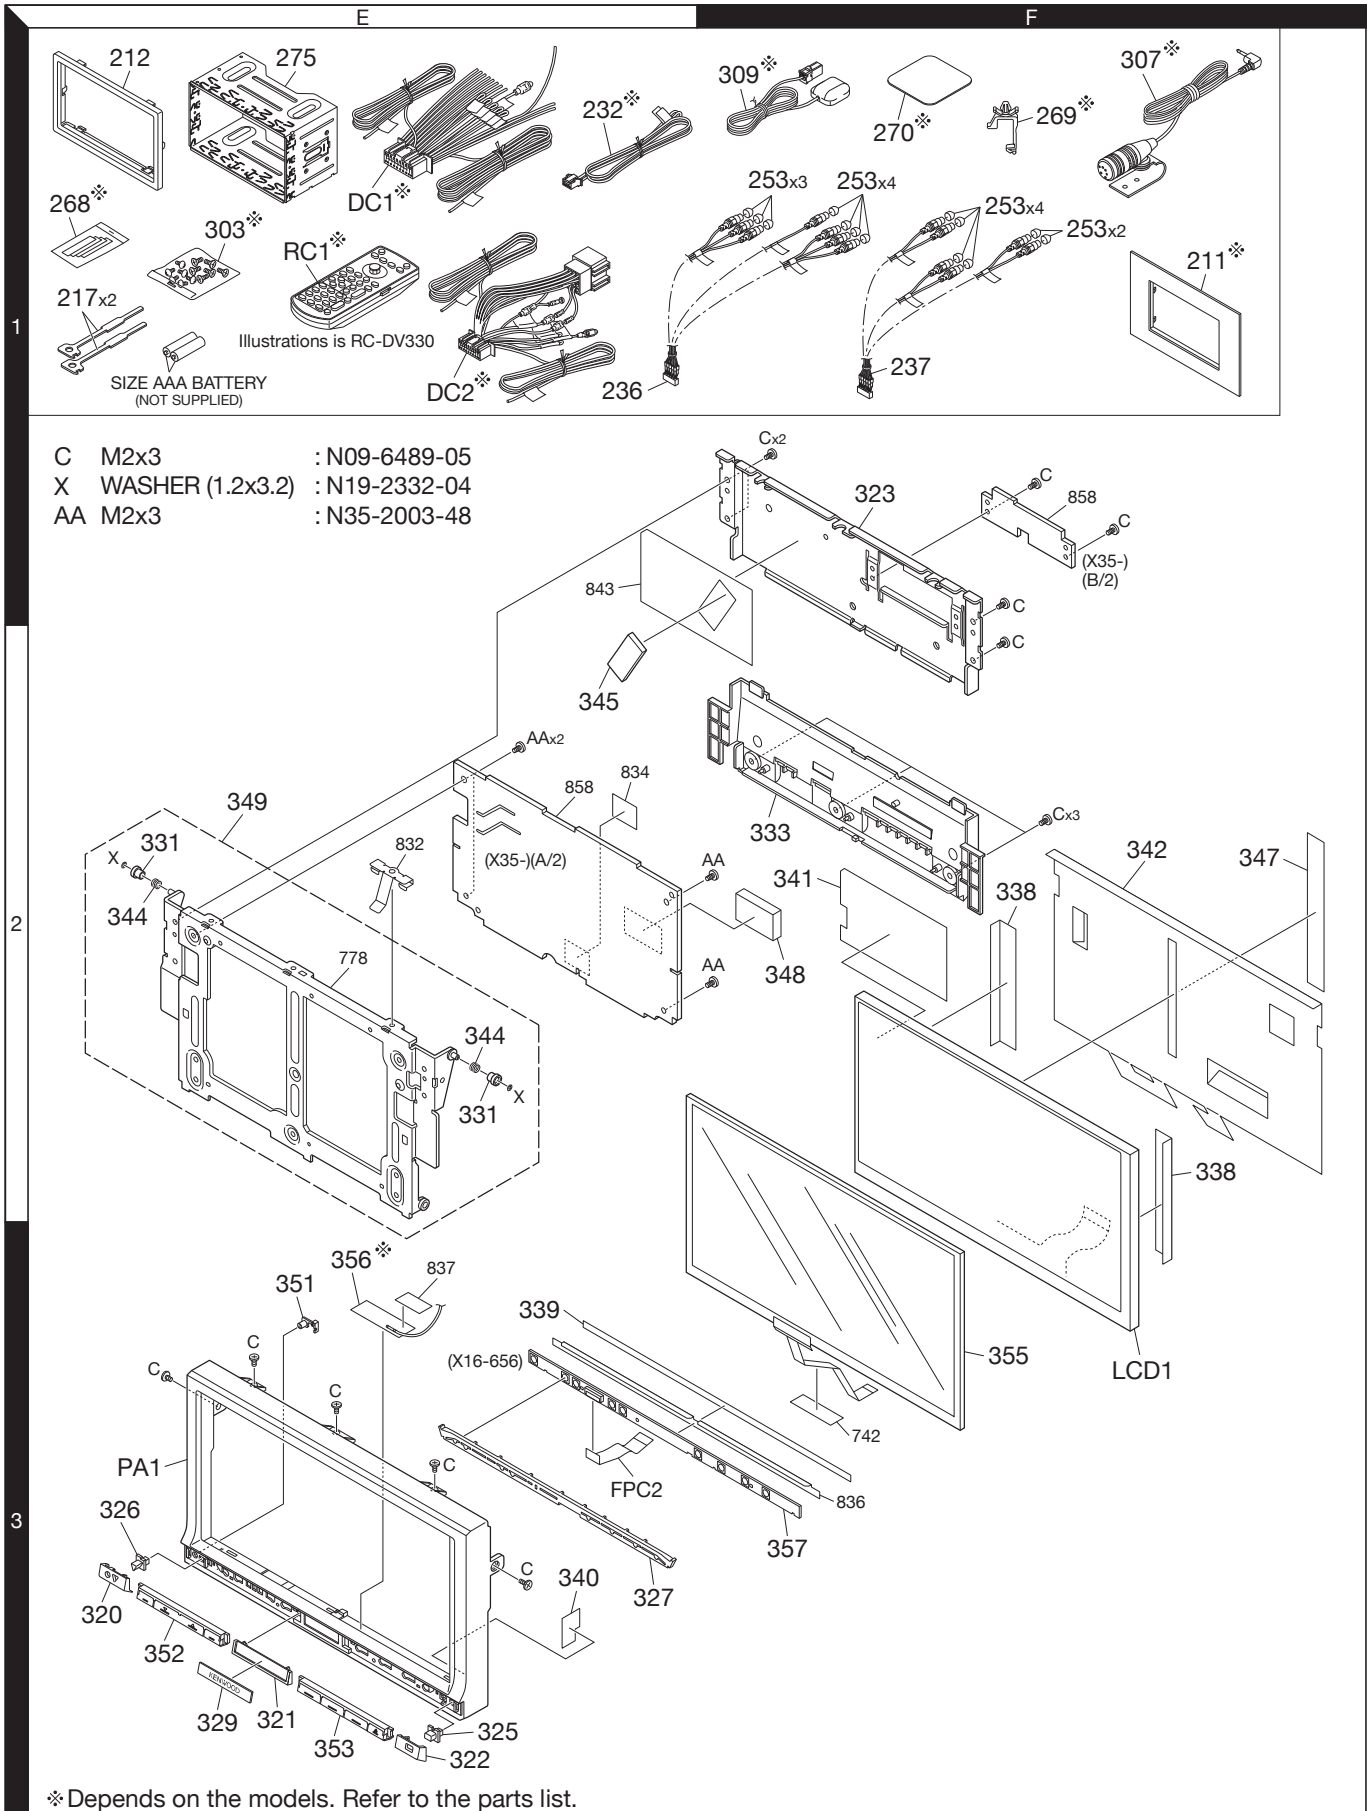

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (DRIVE MECHANISM)

G	M2x2.5	: N09-6361-05
H	M1.7x3.7	: N09-6363-05
J	M2x2.5	: N09-6375-05
K	M2x3.5	: N09-6376-05
L	M2x2.5	: N09-6377-05
M	φ2x2	: N09-6378-05
N	M2.6x4	: N09-6379-05
Y	WASHER	: N19-2321-04

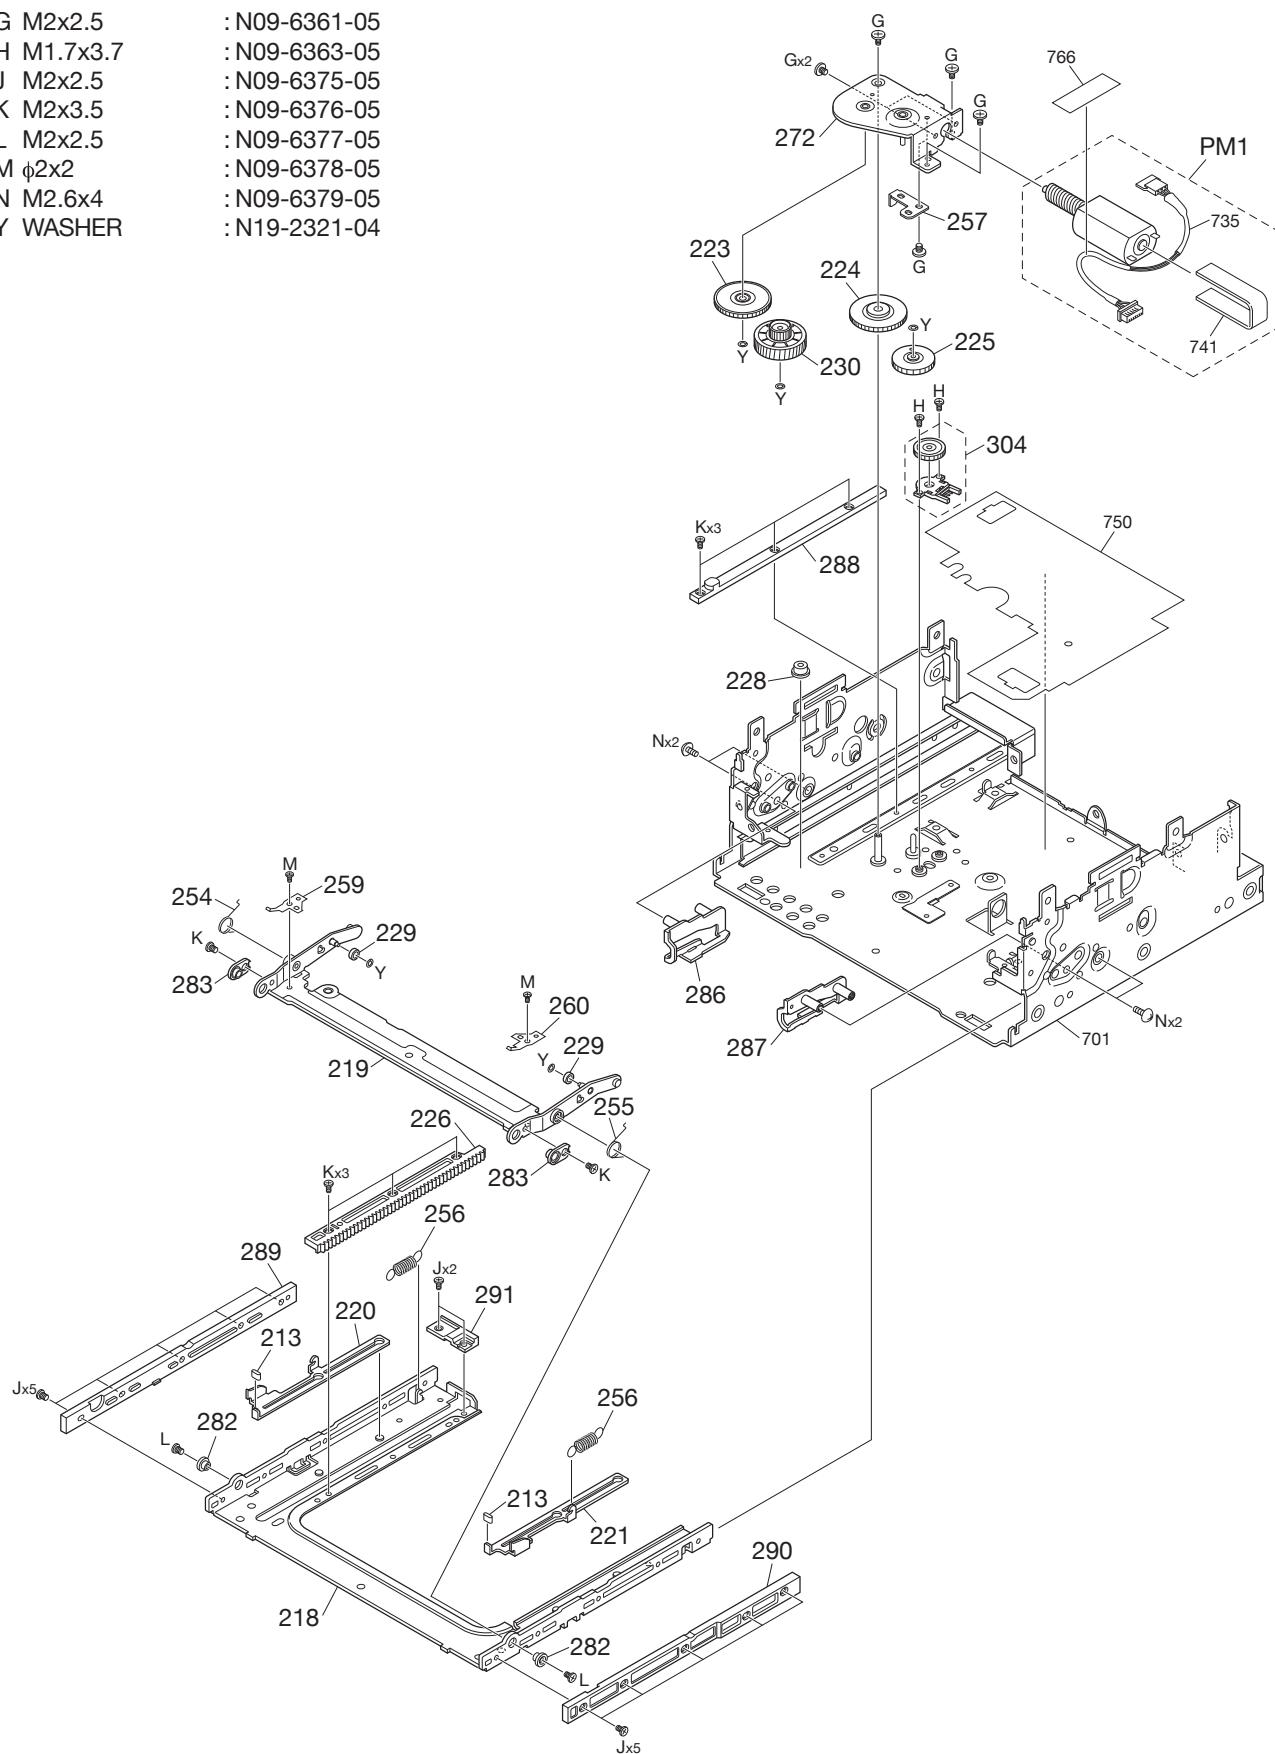

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DDX6034/6034M/6054/7034BT/7034BTM/714 DNX7000EX/7140/7240BT/7340BT						-		*	B64-4377-00	INSTRUCTION MANUAL (ARA.)	M2M4
208	1D	*	A22-3223-01	SUB PANEL ASSY	M5X3	211	1F		B07-3172-12	ESCUTCHEON	KM1M2
208	1D	*	A22-3224-11	SUB PANEL ASSY	M1M2X1	211	1F		B07-3172-12	ESCUTCHEON	K1K2M5
208	1D	*	A22-3238-11	SUB PANEL ASSY	K1K2	211	1F		B07-3172-12	ESCUTCHEON	M3M4X1
208	1D	*	A22-3239-01	SUB PANEL ASSY	E1	211	1F		B07-3172-12	ESCUTCHEON	X2R1Q1
208	1D	*	A22-3240-11	SUB PANEL ASSY	K						
208	1D	*	A22-3242-01	SUB PANEL ASSY	Q1M3M4	211	1F		B07-3172-12	ESCUTCHEON	X3
208	1D	*	A22-3242-01	SUB PANEL ASSY	X2	212	1E		B07-3224-31	ESCUTCHEON	
208	1D	*	A22-3253-01	SUB PANEL ASSY	R1	213	3G		B09-0541-04	CAP	
209	1D		A52-0895-02	TOP PLATE		217	1E		D10-7012-04	LEVER	
PME1	3C		A10-5300-51	CHASSIS ASSY		218	3G		D10-4895-22	SLIDER ASSY	
RC1	1E		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	K1K2M5	219	2G		D10-4897-13	ARM ASSY	
RC1	1E		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	X3E1	220	3G		D10-4899-03	LEVER (L)	
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	M4X2	221	3G		D10-4900-03	LEVER (R)	
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	R1M1M2						
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	X1Q1M3	223	1H		D13-2394-04	GEAR	
-		*	B54-4714-00	INSTALLATION MANU (ENG.FRE.SPA)	KR1K1	224	1H		D13-2395-04	GEAR	
-		*	B54-4714-00	INSTALLATION MANU (ENG.FRE.SPA)	K2	225	1H		D13-2396-04	GEAR	
-		*	B54-4715-00	INSTALLATION MANUAL (POR.)	R1	226	3G		D13-2397-03	RACK (GEAR)	
-		*	B54-4716-00	INSTALLATION MANUAL (ENG.)	Q1E1	228	2H		D14-1010-04	ROLLER	
-		*	B54-4717-00	INSTALLATION MANUAL (RUS.UKR.)	Q1	229	2G		D14-1011-14	ROLLER	
-		*	B54-4718-00	INSTALLATION MANUAL (ENG.)	M1M2X1	230	1H		D19-0653-23	CLUTCH ASSY	
-		*	B54-4718-00	INSTALLATION MANUAL (ENG.)	M3M4X2						
-		*	B54-4718-00	INSTALLATION MANUAL (ENG.)	M5X3	232	1F		E30-6786-05	CORD WITH PLUG (RELAY)	E1
-		*	B54-4719-00	INSTALLATION MANUAL (S-CHI.HOR.)	M1M3M5	232	1F		E30-6786-05	CORD WITH PLUG (RELAY)	KR1M1
-		*	B54-4720-00	INSTALLATION MANUA (F.G.D.I.S.P)	E1	232	1F		E30-6786-05	CORD WITH PLUG (RELAY)	K2M5X3
-		*	B54-4721-00	INSTALLATION MANUAL (ARA.)	M2M4	232	1F		E30-6786-05	CORD WITH PLUG (RELAY)	M2X1K1
-		*	B64-4338-00	INSTRUCTION MANUAL (ENG.)	K1K2	236	1E	*	E30-6899-05	CORD WITH PINPLUG (AV)	
-		*	B64-4339-00	INSTRUCTION MANUAL (FRE.SPA.)	K1K2	237	1F	*	E30-6898-05	CORD WITH PINPLUG (PRE)	
-		*	B64-4340-00	INSTRUCTION MANUAL (ENG.)	E1	238	2D	*	E30-6888-05	CORD WITH CONNECTOR	E1
-		*	B64-4341-00	INSTRUCTION MANUA (FRE.GER.DUT)	E1	238	2D	*	E30-6888-05	CORD WITH CONNECTOR	KR1M1
-		*	B64-4342-00	INSTRUCTION MANUA (ITA.SPA.POR)	E1	238	2D	*	E30-6888-05	CORD WITH CONNECTOR	K2M5X3
-		*	B64-4343-00	INSTRUCTION MANUAL (ENG.S-CHI.)	M5	238	2D	*	E30-6888-05	CORD WITH CONNECTOR	M2X1K1
-		*	B64-4346-00	INSTRUCTION MANUAL (ENG.)	X3	239	1D		E39-0915-05+	WIRING HARNESS	
-		*	B64-4361-00	INSTRUCTION MANUAL (ENG.)	KR1K1	240	1C	*	E39-1079-05	WIRING HARNESS	
-		*	B64-4361-00	INSTRUCTION MANUAL (ENG.)	K2	DC1	1E		E30-6881-15	DC CORD	KR1M1
-		*	B64-4362-00	INSTRUCTION MANUAL (FRE.)	KK1K2	DC1	1E		E30-6881-15	DC CORD	K2M5X3
-		*	B64-4363-00	INSTRUCTION MANUAL (SPA.)	KR1K1	DC1	1E		E30-6881-15	DC CORD	M2X1M3
-		*	B64-4363-00	INSTRUCTION MANUAL (SPA.)	K2	DC1	1E		E30-6881-15	DC CORD	
-		*	B64-4364-00	INSTRUCTION MANUAL (POR.)	R1	DC1	1E		E30-6881-15	DC CORD	M4X2K1
-		*	B64-4365-00	INSTRUCTION MANUAL (ENG.)	Q1E1	DC2	1E		E30-6796-05	DC CORD (ISO)	Q1E1
-		*	B64-4366-00	INSTRUCTION MANUAL (FRE.)	E1	FC1	2C	*	E39-1074-05	FLAT CABLE	
-		*	B64-4367-00	INSTRUCTION MANUAL (GER.)	E1	FC3	3C		E39-1024-05	FLAT CABLE	
-		*	B64-4368-00	INSTRUCTION MANUAL (DUT.)	E1	FC4	2C	*	E39-1073-05	FLAT CABLE	
-		*	B64-4369-00	INSTRUCTION MANUAL (ITA.)	E1	FC6	1D	*	E39-1075-05	FLAT CABLE	
-		*	B64-4370-00	INSTRUCTION MANUAL (SPA.)	E1	WH5	3D	*	E39-1078-05	WIRING HARNESS	M1M2X1
-		*	B64-4371-00	INSTRUCTION MANUAL (POR.)	E1						
-		*	B64-4372-00	INSTRUCTION MANUAL (RUS.)	Q1	243	1D		F09-2929-04	CAP	
-		*	B64-4373-00	INSTRUCTION MANUAL (UKR.)	Q1	247	3D		F09-2972-04	SHEET	E1
-		*	B64-4374-00	INSTRUCTION MANUAL (ENG.)	M1M2X1	247	3D		F09-2972-04	SHEET	KR1M1
-		*	B64-4374-00	INSTRUCTION MANUAL (ENG.)	M3M4X2	247	3D		F09-2972-04	SHEET	K2M5X3
-		*	B64-4374-00	INSTRUCTION MANUAL (ENG.)	M5X3	247	3D		F09-2972-04	SHEET	M2X1K1
-		*	B64-4375-00	INSTRUCTION MANUAL (S-CHI.)	M1M3M5	248	3D	*	F12-0978-04	SHIELDING SHEET	
-		*	B64-4376-00	INSTRUCTION MANUAL (KOR.)	M1M3	249	2D	*	F12-0979-04	SHIELDING SHEET	
						253	1F		F29-0626-04	INSULATING COVER	
						△ F1	2C		F52-0007-05	FUSE (MINI BLADE TYPE) 15A	
						254	2G		G01-3288-04	TORSION COIL SPRING	
						255	2G		G01-3289-04	TORSION COIL SPRING	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

DDX6034/6034M/6054/7034BT/7034BTM/714
DNX7000EX/7140/7240BT/7340BT

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
256	3G		G01-3290-04	EXTENSION SPRING	
257	1H		G02-1539-04	FLAT SPRING	
259	2G		G02-1544-04	FLAT SPRING	
260	2G		G02-1545-04	FLAT SPRING	
261	3D	*	G11-3799-04	CUSHION	
-		*	H54-4560-03	ITEM CARTON CASE	K1
-		*	H54-4561-13	ITEM CARTON CASE	K2
-		*	H54-4562-03	ITEM CARTON CASE	E1
-		*	H54-4563-03	ITEM CARTON CASE	M5X3
-		*	H54-4565-03	ITEM CARTON CASE	K
-		*	H54-4566-03	ITEM CARTON CASE	R1
-		*	H54-4567-03	ITEM CARTON CASE	M1X1
-		*	H54-4568-03	ITEM CARTON CASE	M2
-		*	H54-4569-03	ITEM CARTON CASE	Q1
-		*	H54-4570-03	ITEM CARTON CASE	M3X2
-		*	H54-4571-03	ITEM CARTON CASE	M4
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KM1M2
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K1K2M5
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M3M4X1
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	X2R1Q1
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	X3
269	1F		J11-0660-05	CLAMPER	K1K2
270	1F		J21-9867-04	MOUNTING HARDWARE (GPS-ANT)	K1K2M5
270	1F		J21-9867-04	MOUNTING HARDWARE (GPS-ANT)	X3E1
272	1H		J22-0444-13	MOUNTING HARDWARE ASSY (MOTOR)	
275	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
282	3G		J31-1075-14	COLLAR (ARM COLLAR)	
283	2G		J31-1077-04	COLLAR (PANEL COLLAR)	
286	2H		J90-1124-13	GUIDE ASSY	
287	2H		J90-1126-13	GUIDE ASSY	
288	2H		J90-1128-03	RAIL	
289	3G		J90-1129-23	RAIL	
290	3H		J90-1130-23	RAIL	
291	3G		J90-1131-03	GUIDE	
293	3C		J90-1160-01	RAIL	
294	3C		J90-1161-01	RAIL	
FPC1	3D	*	J86-0057-05	FPC (LEAD FREE)	
303	1E		N99-1779-15	SCREW SET	KR1M1
303	1E		N99-1779-15	SCREW SET	K2M5X3
303	1E		N99-1779-15	SCREW SET	M2X1M3
303	1E		N99-1779-15	SCREW SET	M4X2K1
A	3C		N86-2605-48	BINDING HEAD TAPTITE SCREW	
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	E1
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	KR1M1
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	K2M5X3
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	M2X1K1
C	3E		N09-6489-05	MACHINE SCREW (M2.0X3.0)	
F	3C		N09-6490-05	STEPPED SCREW (PANEL SCREW)	
G	1H		N09-6361-05	MACHINE SCREW (M2X2.5)	
H	1H		N09-6363-05	MACHINE SCREW (M1.7X3.7)	
J	3G		N09-6375-05	MACHINE SCREW (M2X2.5)	
K	2G		N09-6376-05	MACHINE SCREW (M2X3.5)	
L	3G		N09-6377-05	MACHINE SCREW (M2X2.5)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
M	2G		N09-6378-05	TAPTITE SCREW (STITE 2X2)	
N	2H		N09-6379-05	MACHINE SCREW (M2.6X4 BIND)	
R	2C		N09-6491-05	MACHINE SCREW (M2.6X27)	
T	3C		N09-6493-05	MACHINE SCREW (M2.6X5)	
U	1D		N09-6494-05	MACHINE SCREW (M2.6X6)	
W	3C		N09-6425-15	MACHINE SCREW (M3.0X5)	
Y	1H		N19-2321-04	FLAT WASHER (1.6X4X0.25)	
304	1H		R31-0248-05	VARIABLE RESISTOR	
PM1	1H		T42-1322-24	MOTOR ASSY	
307	1F		W01-1718-05	MICROPHONE	E1
307	1F		W01-1718-05	MICROPHONE	KR1M1
307	1F		W01-1718-05	MICROPHONE	K2M5X3
307	1F		W01-1718-05	MICROPHONE	M2X1K1
308	2D	*	W02-5360-05	ELECTRIC CIRCUIT MODULE (BT)	E1
308	2D	*	W02-5360-05	ELECTRIC CIRCUIT MODULE (BT)	KR1M1
308	2D	*	W02-5360-05	ELECTRIC CIRCUIT MODULE (BT)	K2M5X3
308	2D	*	W02-5360-05	ELECTRIC CIRCUIT MODULE (BT)	M2X1K1
309	1F		W02-5305-05	ANTENNA MODULE (GPS)	K1K2M5
309	1F		W02-5305-05	ANTENNA MODULE (GPS)	X3E1
311	2D	*	X15-1230-10	VIDEO CONTROL UNIT	K1
311	2D	*	X15-1230-11	VIDEO CONTROL UNIT	K2
311	2D	*	X15-1230-21	VIDEO CONTROL UNIT	M5
311	2D	*	X15-1230-71	VIDEO CONTROL UNIT	X3
311	2D	*	X15-1232-71	VIDEO CONTROL UNIT	E1
311	2D	*	X15-1340-10	VIDEO CONTROL UNIT	K
311	2D	*	X15-1340-21	VIDEO CONTROL UNIT	M1
311	2D	*	X15-1340-22	VIDEO CONTROL UNIT	M2
311	2D	*	X15-1340-23	VIDEO CONTROL UNIT	M3
311	2D	*	X15-1340-24	VIDEO CONTROL UNIT	M4
311	2D	*	X15-1340-71	VIDEO CONTROL UNIT	X1
311	2D	*	X15-1340-72	VIDEO CONTROL UNIT	X2
311	2D	*	X15-1343-21	VIDEO CONTROL UNIT	R1
311	2D	*	X15-1343-81	VIDEO CONTROL UNIT	Q1
313	3D	*	X16-6590-20	SUB-CIRCUIT UNIT	M1M2X1
313	3D	*	X16-6590-21	SUB-CIRCUIT UNIT	M5X3
DISPLAY ASSY					
320	3E	*	A21-6723-03	DRESSING PANEL	
321	3E	*	A21-6724-03	DRESSING PANEL	
322	3E	*	A21-6725-03	DRESSING PANEL	
323	1F	*	A46-1893-02	REAR COVER	
PA1	3E	*	A64-4834-11	PANEL	K1
PA1	3E	*	A64-4835-11	PANEL	K2
PA1	3E	*	A64-4836-11	PANEL	E1
PA1	3E	*	A64-4837-11	PANEL	M5X3
PA1	3E	*	A64-4839-11	PANEL	K
PA1	3E	*	A64-4840-11	PANEL	R1
PA1	3E	*	A64-4841-11	PANEL	M1M2X1
PA1	3E	*	A64-4843-11	PANEL	M3M4X2
PA1	3E	*	A64-4924-11	PANEL	Q1
325	3E	*	B10-5266-04	FRONT GLASS	
326	3E	*	B10-5267-04	FRONT GLASS	
327	3E	*	B11-2031-13	OPTICAL DIFFUSER	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

DISPLAY ASSY

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
329 LCD1	3E	*	B43-1548-04	BADGE		C10			CK73GB1A105K	CHIP C	1.0UF K
	3F	*	B38-1215-05	LCD		C11			CE32BQ1C221M	CHIP EL	220UF 16WV
331	2E		D14-1024-04	ROLLER		C12			CK73FBQJ106K	CHIP C	10UF K
333	2F	*	F07-2208-02	COVER		C13 -16			CK73GB1A105K	CHIP C	1.0UF K
338	2F	*	F09-3017-04	SHEET		C18			CK73GB1H104K	CHIP C	0.10UF K
339	3E	*	F09-3025-04	SHEET		C19			CE32BQ1E101M	CHIP EL	100UF 25WV
340	3E	*	F12-0976-04	SHIELDING SHEET		C20			CK73GB1H103K	CHIP C	0.010UF K
341	2F		F20-2433-04	INSULATING SHEET		C21			CK73GB1H104K	CHIP C	0.10UF K
342	2F	*	F20-2487-03	INSULATING SHEET		C51			CK73HB1A104K	CHIP C	0.10UF K
344	2E		G01-4659-04	COMPRESSION SPRING		C52			CK73HB1E103K	CHIP C	0.010UF K
345	2E		G16-1688-04	SHEET		C53			CK73GB1H103K	CHIP C	0.010UF K
347	2F	*	G16-1749-04	SHEET		C54			CK73FBQJ106K	CHIP C	10UF K
348	2F	*	G16-1755-04	SHEET		C55			CE32BJ1C100M	CHIP EL	10UF 16WV
349 FPC2	2E	*	J22-0869-02	MOUNTING HARDWARE ASSY		C56			CK73GB1H102K	CHIP C	1000PF K
	3E	*	J86-0060-05	FPC (LEAD FREE)		C61			CK73HB1E103K	CHIP C	0.010UF K
351	3E	*	K24-5011-04	PUSH KNOB (RESET)		C62			CK73HB1A104K	CHIP C	0.10UF K
352	3E	*	K25-1960-13	KNOB ASSY (ATT,VOL,AUD)		C101,102			CK73GB1H104K	CHIP C	0.10UF K
353	3E	*	K25-1962-13	KNOB ASSY (NAV,SRC,TEL,EJ)	K1K2M5	C103,104			CK73GB1H103K	CHIP C	0.010UF K
353	3E	*	K25-1962-13	KNOB ASSY (NAV,SRC,TEL,EJ)	X3E1	C105,106			CK73GB1H102K	CHIP C	1000PF K
353	3E	*	K25-1966-13	KNOB ASSY (TOP,SRC,TEL,EJ)	KM1M2	C109-112			CK73EB1E106K	CHIP C	10UF K
353	3E	*	K25-1966-13	KNOB ASSY (TOP,SRC,TEL,EJ)	M3M4X1	C113,114			CK73GB1H104K	CHIP C	0.10UF K
353	3E	*	K25-1966-13	KNOB ASSY (TOP,SRC,TEL,EJ)	X2R1Q1	C115,116			CK73GB1H103K	CHIP C	0.010UF K
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW		C117,118			CK73GB1H104K	CHIP C	0.10UF K
C	1F		N09-6489-05	MACHINE SCREW (M2.0X3.0)		C119-122			CK73GB1H102K	CHIP C	1000PF K
X	2E		N19-2332-04	FLAT WASHER (1.2X3.2X0.25)		C123			CE32AV1A121M	CHIP EL	120UF 10WV
355	3F	*	S79-0868-05	SWITCH ASSY (TOUCH PANEL)		C124			CE32AV0J221M	CHIP EL	220UF 6.3WV
356	3E	*	T90-0596-05	ANTENNA ASSY (BT)	E1	C125,126			CK73GB1H104K	CHIP C	0.10UF K
356	3E	*	T90-0596-05	ANTENNA ASSY (BT)	KR1M1	C127,128			CK73GB1H103K	CHIP C	0.010UF K
356	3E	*	T90-0596-05	ANTENNA ASSY (BT)	K2M5X3	C131,132			CC73GCH1H221J	CHIP C	220PF J
356	3E	*	T90-0596-05	ANTENNA ASSY (BT)	M2X1K1	C133			CK73GB1H473K	CHIP C	0.047UF K
357	3F	*	X16-6560-10	SWITCH UNIT		C134			CK73GB1H103K	CHIP C	0.010UF K
DVD PLAYER ASSY						C135			CK73GB1H223K	CHIP C	0.022UF K
E	1D		N35-2604-43	BINDING HEAD MACHINE SCREW		C136			CK73GB1H103K	CHIP C	0.010UF K
VME1	1D		X92-6400-00	DVD MECHANISM ASSY (DVS-8220W)		C137			CC73GCH1H101J	CHIP C	100PF J
CONTROL ASSY (NAVI)						C138			CC73GCH1H470J	CHIP C	47PF J
FC5	3D		E39-1026-05	FLAT CABLE	M5X3	C139			CK73GB1H103K	CHIP C	0.010UF K
362	3D	*	W02-5351-05	NAVIGATION MODULE (K)	K1K2	C140			CK73GB1H102K	CHIP C	1000PF K
362	3D	*	W02-5352-05	NAVIGATION MODULE (E)	E1	C141			CC73GCH1H101J	CHIP C	100PF J
362	3D	*	W02-5353-05	NAVIGATION MODULE (M)	M5X3	C142,143			CK73GB1H102K	CHIP C	1000PF K
VIDEO CONTROL UNIT (X15-123x/134x-xx)						C144			CK73EB1E225K	CHIP C	2.2UF K
D91			B30-1767-05	LED		C145			CK73GB1H104K	CHIP C	0.10UF K
C1			C90-5670-05	ELECTRO	2200UF 16WV	C146			CK73FBQJ106K	CHIP C	10UF K
C2 ,3			CK73GB1H104K	CHIP C	0.10UF K	C147			CK73GB1H104K	CHIP C	0.10UF K
C6			CK73GB1H103K	CHIP C	0.010UF K	C148			CK73HB1E103K	CHIP C	0.010UF K
C7			CK73GB1H104K	CHIP C	0.10UF K	C151,152			CK73GB1H104K	CHIP C	0.10UF K
C8			C93-1470-05	CHIP C	15000PF K	C153,154			CK73GB1H103K	CHIP C	0.010UF K
C8			C93-1470-05	CHIP C	15000PF K	C155,156			CK73GB1H102K	CHIP C	1000PF K
					E1	C159-162			CK73EB1E106K	CHIP C	10UF K
					M2Q1M4	C163,164			CK73GB1H104K	CHIP C	0.10UF K
						C165,166			CK73GB1H103K	CHIP C	0.010UF K
						C167,168			CK73GB1H104K	CHIP C	0.10UF K
						C169-172			CK73GB1H102K	CHIP C	1000PF K
						C173			CE32AV0J221M	CHIP EL	220UF 6.3WV
						C174			CE32AV0G331M	CHIP EL	330UF 4.0WV
						C175,176			CK73GB1H104K	CHIP C	0.10UF K

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation	Ref. No.	Ad	New	Parts No.	Description	Desti- nation
C177,178 C179,180 C181-183 C184 C185-188			CK73GB1H103K CC73GCH1H101J CK73GB1H103K CK73GB1H223K CC73GCH1H470J	CHIP C 0.010UF K CHIP C 100PF J CHIP C 0.010UF K CHIP C 0.022UF K CHIP C 47PF J		C421 C421 C421 C421 C422			CK73FB0J106K CK73FB0J106K CK73FB0J106K CK73FB0J106K CK73HB1A104K	CHIP C 10UF K CHIP C 10UF K CHIP C 10UF K CHIP C 10UF K CHIP C 0.10UF K	E1 KR1M1 K2M5X3 M2X1K1 E1
C189 C190 C191 C192 C193			CK73GB1H103K CK73GB1H102K CC73GCH1H101J CK73FB0J106K CK73GB1H104K	CHIP C 0.010UF K CHIP C 1000PF K CHIP C 100PF J CHIP C 10UF K CHIP C 0.10UF K		C422 C422 C422 C423 C423			CK73HB1A104K CK73HB1A104K CK73HB1A104K CC73HCH1H101J CC73HCH1H101J	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 100PF J	KR1M1 K2M5X3 M2X1K1 E1 KR1M1
C194 C195 C201 C202 C203			CK73EB1E225K CK73GB1H104K CK73FB0J106K CK73GB1H222K CK73FB0J106K	CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 2200PF K CHIP C 10UF K		C423 C423 C424 C424 C424			CC73HCH1H101J CC73HCH1H101J CK73HB1A104K CK73HB1A104K CK73HB1A104K	CHIP C 100PF J CHIP C 100PF J CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	K2M5X3 M2X1K1 E1 KR1M1 K2M5X3
C204 C205 C206 C207 C208,209			CK73GB1H222K CC73HCH1H150J CC73HCH1H120J CK73HB1A104K CC73HCH1H080D	CHIP C 2200PF K CHIP C 15PF J CHIP C 12PF J CHIP C 0.10UF K CHIP C 8.0PF D		C424 C425 C425 C425 C425			CK73HB1A104K CE32BJ1C100M CE32BJ1C100M CE32BJ1C100M CE32BJ1C100M	CHIP C 0.10UF K CHIP EL 10UF 16WV CHIP EL 10UF 16WV CHIP EL 10UF 16WV CHIP EL 10UF 16WV	M2X1K1 E1 KR1M1 K2M5X3 M2X1K1
C210 C212-215 C216,217 C218,219 C221			CK73HB1A104K CK73HB1A104K CK73HB1E103K CC73HCH1H101J CC73HCH1H101J	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 100PF J CHIP C 100PF J		C426 C426 C426 C426 C428			CK73HB1A104K CK73HB1A104K CK73HB1A104K CK73HB1A104K CK73FB0J106K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 10UF K	E1 KR1M1 K2M5X3 M2X1K1 E1
C222 C223 C224 C225,226 C227,228			CK73HB1A104K CK73HB1H102K CC73HCH1H101J CK73HB0J105K CK73HB1E103K	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 100PF J CHIP C 1.0UF K CHIP C 0.010UF K		C428 C428 C428 C431-434 C431-434			CK73FB0J106K CK73FB0J106K CK73FB0J106K CK73GB1A105K CK73GB1A105K	CHIP C 10UF K CHIP C 10UF K CHIP C 10UF K CHIP C 1.0UF K CHIP C 1.0UF K	KR1M1 K2M5X3 M2X1K1 E1 KR1M1
C231 C235-237 C238 C240 C240			CK73HB1E103K CK73HB1A104K CK73HB1E103K CK73HB1A104K CK73HB1A104K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.10UF K	KR1Q1 K1K2	C431-434 C431-434 C435-438 C435-438 C435-438			CK73GB1A105K CK73GB1A105K CC73GCH1H100D CC73GCH1H100D CC73GCH1H100D	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 10PF D CHIP C 10PF D CHIP C 10PF D	K2M5X3 M2X1K1 E1 KR1M1 K2M5X3
C240 C241,242 C244 C244 C301			CK73HB1A104K CK73HB1E103K CK73HB1E103K CK73HB1E103K CK73GB1H103K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K	M3M4X2 K1K2M5 X3E1	C435-438 C491 C500-503 C504 C505,506			CC73GCH1H100D CK73FB1A225K CK73GB1A105K CK73HB1A104K CK73FB0J106K	CHIP C 10PF D CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF K	M2X1K1
C302 C304 C305 C308 C309			CK73GB1H104K CK73GB1H103K CK73GB1H104K CK73GB1H471K CK73EB1E106K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 470PF K CHIP C 10UF K		C507 C509 C510,511 C512,513 C514			CK73HB1A104K CK73HB1A104K CK73EB1A106K CK73HB1H222K CK73HB1A104K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 2200PF K CHIP C 0.10UF K	
C310 C311 C312-314 C403 C403			CK73GB1H471K CK73EB1E106K CK73HB1A104K CK73GB1H104K CK73GB1H104K	CHIP C 470PF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	K1K2M5 X3E1	C515 C516 C517 C518 C519			CK73FB0J106K CK73GB1A105K CK73HB1H221K CK73HB1A104K CK73HB1H221K	CHIP C 10UF K CHIP C 1.0UF K CHIP C 220PF K CHIP C 0.10UF K CHIP C 220PF K	
C404 C404 C405,406 C407 C411			CK73GB1H103K CK73GB1H103K CK73GB1A474K CE32BJ0J470M CK73HB1E103K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.47UF K CHIP EL 47UF 6.3WV CHIP C 0.010UF K	K1K2M5 X3E1	C520 C522 C524 C525 C526			CK73HB1E103K CK73GB1A105K CK73FB0J106K CK73HB1A104K CK73GB1A105K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 1.0UF K	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C528			CK73HB1A104K	CHIP C 0.10UF K		C936,937			CK73FB0J106K	CHIP C 10UF K	
C529			CK73FB0J106K	CHIP C 10UF K		C938-941			CK73HB1A104K	CHIP C 0.10UF K	
C530			CK73HB1A104K	CHIP C 0.10UF K		C942			CK73FB0J106K	CHIP C 10UF K	
C531,532			CK73FB0J106K	CHIP C 10UF K		C943			CK73GB0J225K	CHIP C 2.2UF K	
C534			CK73FB0J106K	CHIP C 10UF K		C944-950			CK73HB1A104K	CHIP C 0.10UF K	
C535			CK73HB1A104K	CHIP C 0.10UF K	M1M2X1	C951			CK73HB0J105K	CHIP C 1.0UF K	
C536			CK73FB0J106K	CHIP C 10UF K		C952			CK73HB1A104K	CHIP C 0.10UF K	
C537			CK73HB0J105K	CHIP C 1.0UF K	M1M2X1	C953			CK73FB0J106K	CHIP C 10UF K	
C538			CK73FB0J106K	CHIP C 10UF K		C954			CE32BQ0J331M	CHIP EL 330UF 6.3WV	
C540			CK73HB1A104K	CHIP C 0.10UF K		C955			CK73HB1A104K	CHIP C 0.10UF K	
C541			CK73HB0J105K	CHIP C 1.0UF K		C956			CK73FB0J106K	CHIP C 10UF K	
C542			CK73HB1A104K	CHIP C 0.10UF K		C957-965			CK73HB1A104K	CHIP C 0.10UF K	
C543			CK73HB0J105K	CHIP C 1.0UF K		C966,967			CK73HB0J105K	CHIP C 1.0UF K	
C544			CK73HB1A104K	CHIP C 0.10UF K		C968			CK73HB1A104K	CHIP C 0.10UF K	
C550,551			CK73HB1E103K	CHIP C 0.010UF K		CN1			E41-2961-05	PIN ASSY	
C580-582			CK73FB0J226M	CHIP C 22UF M		CN2 ,3			E41-2979-05	FLAT CABLE CONNECTOR	
C600,601			CC73HCH1H100D	CHIP C 10PF D		CN4			E41-2359-05	PIN ASSY	
C602-604			CK73HB1A104K	CHIP C 0.10UF K		CN5			E41-2248-05	PIN ASSY	
C605			CK73FB0J106K	CHIP C 10UF K		CN7			E41-1476-05	PIN ASSY	
C606			CK73HB1H102K	CHIP C 1000PF K		CN8			E41-1486-05	PIN ASSY	
C607			CC73HCH1H101J	CHIP C 100PF J		CN301			E41-2985-05	FLAT CABLE CONNECTOR	
C608			CK73HB1A104K	CHIP C 0.10UF K		CN401	*		E41-3061-05	PIN ASSY	K1K2M5
C609			CK73GB0J475K	CHIP C 4.7UF K		CN401	*		E41-3061-05	PIN ASSY	X3E1
C610			CK73HB1A104K	CHIP C 0.10UF K		CN402	*		E41-3064-05	SOCKET FOR PIN ASSY	E1
C612			CE32BF1C221M	CHIP EL 220UF 16WV		CN402	*		E41-3064-05	SOCKET FOR PIN ASSY	KR1M1
C615,616			CK73HB1A104K	CHIP C 0.10UF K		CN402	*		E41-3064-05	SOCKET FOR PIN ASSY	K2M5X3
C620			CK73FB0J106K	CHIP C 10UF K		CN402	*		E41-3064-05	SOCKET FOR PIN ASSY	M2X1K1
C622			CK73HB1A104K	CHIP C 0.10UF K		CN403	*		E41-3063-05	SOCKET FOR PIN ASSY	E1
C624,625			CK73HB1A104K	CHIP C 0.10UF K		CN403	*		E41-3063-05	SOCKET FOR PIN ASSY	KR1M1
C701			CK73HB1E103K	CHIP C 0.010UF K		CN403	*		E41-3063-05	SOCKET FOR PIN ASSY	K2M5X3
C704			CK73FB0J106K	CHIP C 10UF K		CN403	*		E41-3063-05	SOCKET FOR PIN ASSY	M2X1K1
C707			CK73FB0J106K	CHIP C 10UF K		CN404			E41-2735-05	PIN ASSY	
C708			CE32BQ0J560M	CHIP EL 56UF 6.3WV		CN600	*		E41-2948-05	PIN ASSY	M1M2X1
C709			CK73FB0J106K	CHIP C 10UF K		CN700			E41-2979-05	FLAT CABLE CONNECTOR	
C712-714			CK73HB1A104K	CHIP C 0.10UF K		J401			E56-0809-15	CYLINDRICAL RECEPTACLE	KM1M2
C718,719			CK73HB1E103K	CHIP C 0.010UF K		J401			E56-0809-15	CYLINDRICAL RECEPTACLE	M3M4X1
C800-813			CK73HB1A104K	CHIP C 0.10UF K		J401			E56-0809-15	CYLINDRICAL RECEPTACLE	X2R1Q1
C814			CK73FB0J106K	CHIP C 10UF K		J402			E11-0625-05	PHONE JACK (LGY6502-0900)	E1
C815,816			CC73HCH1H470J	CHIP C 47PF J		J402			E11-0625-05	PHONE JACK (LGY6502-0900)	KR1M1
C817,818			CK73HB1A104K	CHIP C 0.10UF K		J402			E11-0625-05	PHONE JACK (LGY6502-0900)	K2M5X3
C819			CK73FB0J106K	CHIP C 10UF K		J402			E11-0625-05	PHONE JACK (LGY6502-0900)	M2X1K1
C820,821			CK73HB1A104K	CHIP C 0.10UF K		J500			E11-0625-05	PHONE JACK (LGY6502-0900)	
C822			CK73HB1E103K	CHIP C 0.010UF K		W600	2D	*	E30-6897-05	CORD WITH PLUG (USB)	
C823			CK73FB0J106K	CHIP C 10UF K		365	2D		F09-2923-05	FAN	
C824			CK73HB1A104K	CHIP C 0.10UF K		F301		*	F53-0369-05	FUSE 1.6A	
C825			CC73HCH1H150J	CHIP C 15PF J		F302		*	F53-0371-05	FUSE 2.5A	
C826			CK73HB1E103K	CHIP C 0.010UF K		△ L1			L33-2358-05	CHOKE COIL	
C827			CK73HB1A104K	CHIP C 0.10UF K		L103			L33-2457-05	SMALL FIXED INDUCTOR	
C828			CC73HCH1H150J	CHIP C 15PF J		L104		*	L33-2519-05	CHOKE COIL	
C829-838			CK73HB1A104K	CHIP C 0.10UF K		L107		*	L33-2519-05	CHOKE COIL	
C839,840			CC73HCH1H100D	CHIP C 10PF D		L108			L33-2467-05	SMALL FIXED INDUCTOR	
C841-860			CK73HB1A104K	CHIP C 0.10UF K		L201,202			L92-0332-05	CHIP FERRITE	
C870			CK73FB0J106K	CHIP C 10UF K		L301,302			L33-2457-05	SMALL FIXED INDUCTOR	
C900,901			CK73HB1A104K	CHIP C 0.10UF K		L401			L92-0373-05	CHIP FERRITE	E1
C920-935			CK73HB1A104K	CHIP C 0.10UF K							

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation	Ref. No.	Ad	New	Parts No.	Description	Desti- nation
L401 L401 L401 L500 L503			L92-0373-05 L92-0373-05 L92-0373-05 L41-1005-33 L92-0373-05	CHIP FERRITE CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR (10U) CHIP FERRITE	KR1M1 K2M5X3 M2X1K1	R44 R45 R46 R52 R59			RK73GB2A333J RK73GB2A224J RK73GB2A473J RK73HB1J000J RK73HB1J101J	CHIP R 33K J 1/10W CHIP R 220K J 1/10W CHIP R 47K J 1/10W CHIP R 0.0 J 1/16W CHIP R 100 J 1/16W	
L600 L604 L606 L610 L700			L92-0319-05 L92-0641-05 L92-0641-05 L92-0319-05 L92-0373-05	CHIP FERRITE FERRITE CORE FERRITE CORE CHIP FERRITE CHIP FERRITE		R61 -63 R64 -66 R64 -66 R64 -66 R64 -66			RK73HB1J101J RK73HB1J000J RK73HB1J000J RK73HB1J000J RK73HB1J000J	CHIP R 100 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W	M1M2X1 Q1M3M4 X2E1M5 X3
L701 L800-809 L920-922 X201 X202			L33-2457-05 L92-0373-05 L92-0373-05 L77-2975-05 L77-2921-15	SMALL FIXED INDUCTOR CHIP FERRITE CHIP FERRITE CRYSTAL RESONATOR (11.0592MHZ) CRYSTAL RESONATOR (32.768KHZ, 1		R65 ,66 R65 ,66 R67 ,68 R69 R71			RK73HB1J000J RK73HB1J000J RK73HB1J103J RK73HB1J100J RK73HB1J000J	CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 10K J 1/16W CHIP R 10 J 1/16W CHIP R 0.0 J 1/16W	KR1K1 K2
X800 X801 X803		*	L77-2951-05 L77-2886-05 L77-3813-05	CRYSTAL RESONATOR (12.00MHZ) CRYSTAL RESONATOR (27.00MHZ) CRYSTAL RESONATOR (3225 24MHZ)		R81 -86 R91 -93 R95 R101,102 R103,104			RK73GB2A101J RK73GB2A101J RK73GB2A471J RK73GB2A100J RK73GB2A000J	CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 470 J 1/10W CHIP R 10 J 1/10W CHIP R 0.0 J 1/10W	
Q	2D		N09-6498-05	MACHINE SCREW (M3.0X11)		R105,106 R107 R108 R109 R110			RK73EB2E100J R92-5255-05 R92-5244-05 R92-5255-05 R92-5244-05	CHIP R 10 J 1/4W CHIP R 0.1 1/3W CHIP R 0.039 1/3W CHIP R 0.1 1/3W CHIP R 0.039 1/3W	
CP201-205 CP701 CP702 CP704 CP705			RK74HB1J101J RK74HB1J101J RK74HB1J103J RK74HB1J101J RK74HB1J103J	CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W		R111,112 R113 R114 R115 R116			RK73GB2A000J RK73GB2A333J RK73GB2A683J RK73GH2A561D RK73GB2A000J	CHIP R 0.0 J 1/10W CHIP R 33K J 1/10W CHIP R 68K J 1/10W CHIP R 560 D 1/10W CHIP R 0.0 J 1/10W	
CP706-709 CP800-804 CP920-927 CP929-933 CP934,935			RK74HB1J101J RK74HB1J220J RK74HB1J220J RK74HB1J220J RK74HB1J331J	CHIP-COM 100 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 330 J 1/16W		R117 R118 R119,120 R121,122 R123			RK73GH2A561D RK73GB2A000J RK73GH2A561D RK73GH2A333D RK73GH2A622D	CHIP R 560 D 1/10W CHIP R 0.0 J 1/10W CHIP R 560 D 1/10W CHIP R 33K D 1/10W CHIP R 6.2K D 1/10W	
CP936-939 CP940-944 CP945-948 CP949-955 R1			RK74HB1J220J RK74HB1J331J RK74HB1J220J RK74HB1J331J RK73GH2A104D	CHIP-COM 22 J 1/16W CHIP-COM 330 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 330 J 1/16W CHIP R 100K D 1/10W		R124 R125 R126 R127 R128			RK73GH2A562D RK73GB2A000J RK73GH2A681D RK73GH2A912D RK73GB2A103J	CHIP R 5.6K D 1/10W CHIP R 0.0 J 1/10W CHIP R 680 D 1/10W CHIP R 9.1K D 1/10W CHIP R 10K J 1/10W	
R2 R3 R4 ,5 R6 R7			RK73GH2A513D RK73GH2A333D RK73GB2A224J RK73GH2A113D RK73GH2A104D	CHIP R 51K D 1/10W CHIP R 33K D 1/10W CHIP R 220K J 1/10W CHIP R 11K D 1/10W CHIP R 100K D 1/10W		R129 R130 R135 R136 R141,142			RK73FB2B2R2J RK73GB2A000J RK73HB1J104J RK73GB2A100J RK73GB2A100J	CHIP R 2.2 J 1/8W CHIP R 0.0 J 1/10W CHIP R 100K J 1/16W CHIP R 10 J 1/10W CHIP R 10 J 1/10W	
R8 R9 ,10 R11 ,12 R13 R14			RK73GH2A683D RK73GH2A334D RK73GB2A224J RK73GB2A000J RK73GB2A224J	CHIP R 68K D 1/10W CHIP R 330K D 1/10W CHIP R 220K J 1/10W CHIP R 0.0 J 1/10W CHIP R 220K J 1/10W		R143,144 R145,146 R147-150 R151-154 R155,156			RK73GB2A2R2J RK73EB2E100J R92-5244-05 RK73GB2A100J RK73GH2A333D	CHIP R 2.2 J 1/10W CHIP R 10 J 1/4W CHIP R 0.039 1/3W CHIP R 10 J 1/10W CHIP R 33K D 1/10W	
R17 R21 ,22 R26 ,27 R31 R32			RK73GB2A000J RK73GB2A000J RK73GB2A000J RK73GB2A000J RK73GB2A473J	CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/10W CHIP R 47K J 1/10W		R157 R158 R159 R160 R161,162			RK73GH2A562D RK73GH2A103D RK73GH2A511D RK73GH2A561D RK73GB2A000J	CHIP R 5.6K D 1/10W CHIP R 10K D 1/10W CHIP R 510 D 1/10W CHIP R 560 D 1/10W CHIP R 0.0 J 1/10W	
R33 R34 ,35 R41 R42 R43			RK73GB2A152J RK73GB2A000J RK73GB2A823J RK73GB2A103J RK73GB2A224J	CHIP R 1.5K J 1/10W CHIP R 0.0 J 1/10W CHIP R 82K J 1/10W CHIP R 10K J 1/10W CHIP R 220K J 1/10W							

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R163			RK73GB2A203J	CHIP R 20K J 1/10W		R247-249			RK73HB1J104J	CHIP R 100K J 1/16W	
R164			RK73GB2A153J	CHIP R 15K J 1/10W		R250			RK73HB1J103J	CHIP R 10K J 1/16W	
R165			RK73GB2A000J	CHIP R 0.0 J 1/10W		R251			RK73HB1J104J	CHIP R 100K J 1/16W	KR1Q1
R166			RK73FB2B2R2J	CHIP R 2.2 J 1/8W		R251			RK73HB1J104J	CHIP R 100K J 1/16W	K1K2E1
R167			RK73GB2A103J	CHIP R 10K J 1/10W		R251			RK73HB1J104J	CHIP R 100K J 1/16W	M3M4X2
R168			RK73GB2A000J	CHIP R 0.0 J 1/10W		R252			RK73HB1J104J	CHIP R 100K J 1/16W	M1M2X1
R169,170			RK73HB1J000J	CHIP R 0.0 J 1/16W		R252			RK73HB1J104J	CHIP R 100K J 1/16W	M5X3
R181-188			RK73GB2A000J	CHIP R 0.0 J 1/10W		R253			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R201			RK73HB1J101J	CHIP R 100 J 1/16W		R255,256			RK73HB1J101J	CHIP R 100 J 1/16W	
R202			RK73HB1J222J	CHIP R 2.2K J 1/16W		R257			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R203			RK73HB1J101J	CHIP R 100 J 1/16W		R257			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R204			RK73HB1J104J	CHIP R 100K J 1/16W		R257			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R205			RK73HB1J101J	CHIP R 100 J 1/16W		R257			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R206			RK73HB1J104J	CHIP R 100K J 1/16W		R257,258			RK73HB1J104J	CHIP R 100K J 1/16W	Q1M3M4
R207			RK73HB1J101J	CHIP R 100 J 1/16W	Q1M3M4	R257,258			RK73HB1J104J	CHIP R 100K J 1/16W	X2
R207			RK73HB1J101J	CHIP R 100 J 1/16W	X2	R259			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	E1	R259			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	KR1M1	R259			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	K2M5X3	R259			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1K1	R260			RK73HB1J103J	CHIP R 10K J 1/16W	
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W	E1	R261			RK73HB1J104J	CHIP R 100K J 1/16W	Q1M3M4
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W	KR1M1	R261			RK73HB1J104J	CHIP R 100K J 1/16W	X2
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W	K2M5X3	R262			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W	M2X1K1	R262			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R210			RK73HB1J101J	CHIP R 100 J 1/16W	E1	R262			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R210			RK73HB1J101J	CHIP R 100 J 1/16W	KR1M1	R262			RK73HB1J104J	CHIP R 100K J 1/16W	
R210			RK73HB1J101J	CHIP R 100 J 1/16W	K2M5X3	R263			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1K1
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	M2X1K1	R264			RK73HB1J104J	CHIP R 100K J 1/16W	
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	E1	R265			RK73HB1J101J	CHIP R 100 J 1/16W	
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	KR1M1	R267			RK73HB1J104J	CHIP R 100K J 1/16W	
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	K2M5X3	R269			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	M2X1K1	R269			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R215			RK73HB1J101J	CHIP R 100 J 1/16W		R269			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R216			RK73HB1J104J	CHIP R 100K J 1/16W		R269			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R217			RK73HB1J101J	CHIP R 100 J 1/16W		R269,270			RK73HB1J104J	CHIP R 100K J 1/16W	Q1M3M4
R218			RK73HB1J104J	CHIP R 100K J 1/16W		R269,270			RK73HB1J104J	CHIP R 100K J 1/16W	X2
R219			RK73HB1J101J	CHIP R 100 J 1/16W		R271,272			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R220			RK73HB1J104J	CHIP R 100K J 1/16W		R271,272			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R221			RK73HB1J473J	CHIP R 47K J 1/16W		R271,272			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R222			RK73HB1J000J	CHIP R 0.0 J 1/16W		R271,272			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R223			RK73GB2A101J	CHIP R 100 J 1/10W		R272			RK73HB1J104J	CHIP R 100K J 1/16W	Q1M3M4
R224			RK73HB1J561J	CHIP R 560 J 1/16W		R272			RK73HB1J104J	CHIP R 100K J 1/16W	X2
R226			RK73HB1J473J	CHIP R 47K J 1/16W		R274			RK73HB1J101J	CHIP R 100 J 1/16W	
R227,228			RK73HB1J101J	CHIP R 100 J 1/16W		R275			RK73HB1J104J	CHIP R 100K J 1/16W	KR1Q1
R229			RK73HB1J104J	CHIP R 100K J 1/16W		R275			RK73HB1J104J	CHIP R 100K J 1/16W	K1K2
R230-232			RK73HB1J101J	CHIP R 100 J 1/16W		R275			RK73HB1J104J	CHIP R 100K J 1/16W	M3M4X2
R233			RK73HB1J104J	CHIP R 100K J 1/16W		R275,276			RK73HB1J104J	CHIP R 100K J 1/16W	E1M5X3
R234			RK73HB1J101J	CHIP R 100 J 1/16W		R275,276			RK73HB1J104J	CHIP R 100K J 1/16W	M1M2X1
R235			RK73HB1J104J	CHIP R 100K J 1/16W		R277			RK73HB1J104J	CHIP R 100K J 1/16W	KR1Q1
R236			RK73HB1J000J	CHIP R 0.0 J 1/16W		R277			RK73HB1J104J	CHIP R 100K J 1/16W	K1K2
R237			RK73HB1J101J	CHIP R 100 J 1/16W		R277			RK73HB1J104J	CHIP R 100K J 1/16W	M3M4X2
R239-243			RK73HB1J101J	CHIP R 100 J 1/16W		R279			RK73HB1J104J	CHIP R 100K J 1/16W	
R244			RK73HB1J472J	CHIP R 4.7K J 1/16W		R280			RK73HB1J101J	CHIP R 100 J 1/16W	
R245			RK73HB1J101J	CHIP R 100 J 1/16W		R281			RK73HB1J104J	CHIP R 100K J 1/16W	
R246			RK73HB1J472J	CHIP R 4.7K J 1/16W		R282			RK73HB1J101J	CHIP R 100 J 1/16W	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation
R283			RK73HB1J104J	CHIP R 100K J 1/16W	
R285			RK73HB1J101J	CHIP R 100 J 1/16W	
R286			RK73HB1J104J	CHIP R 100K J 1/16W	
R288			RK73HB1J104J	CHIP R 100K J 1/16W	
R289			RK73HB1J101J	CHIP R 100 J 1/16W	
R292			RK73HB1J101J	CHIP R 100 J 1/16W	
R293			RK73HB1J104J	CHIP R 100K J 1/16W	
R294			RK73HB1J101J	CHIP R 100 J 1/16W	
R295			RK73HB1J104J	CHIP R 100K J 1/16W	
R296			RK73HB1J101J	CHIP R 100 J 1/16W	
R297			RK73HB1J104J	CHIP R 100K J 1/16W	
R298			RK73HB1J101J	CHIP R 100 J 1/16W	
R299			RK73GB2A103J	CHIP R 10K J 1/10W	M4X2E1
R299			RK73GB2A103J	CHIP R 10K J 1/10W	M5X3
R299			RK73GB2A103J	CHIP R 10K J 1/10W	R1M1M2
R299			RK73GB2A103J	CHIP R 10K J 1/10W	X1Q1M3
R300			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2
R300			RK73GB2A153J	CHIP R 15K J 1/10W	M1M2M3
R300			RK73GB2A153J	CHIP R 15K J 1/10W	M4M5
R300			RK73GB2A242J	CHIP R 2.4K J 1/10W	E1
R300			RK73GB2A393J	CHIP R 39K J 1/10W	X1X2X3
R300			RK73GB2A682J	CHIP R 6.8K J 1/10W	Q1
R301			RK73HB1J103J	CHIP R 10K J 1/16W	K1K2M5
R301			RK73HB1J103J	CHIP R 10K J 1/16W	X3E1
R302			RK73HB1J103J	CHIP R 10K J 1/16W	KM1M2
R302			RK73HB1J103J	CHIP R 10K J 1/16W	M3M4X1
R302			RK73HB1J103J	CHIP R 10K J 1/16W	X2R1Q1
R303			RK73HB1J123J	CHIP R 12K J 1/16W	
R306			RK73HB1J223J	CHIP R 22K J 1/16W	
R307			RK73HB1J101J	CHIP R 100 J 1/16W	
R308			RK73HB1J104J	CHIP R 100K J 1/16W	
R309,310			RK73HB1J101J	CHIP R 100 J 1/16W	
R313			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R314			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R316			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R318			RK73HB1J101J	CHIP R 100 J 1/16W	
R321			RK73HB1J101J	CHIP R 100 J 1/16W	
R322			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R323			RK73HB1J104J	CHIP R 100K J 1/16W	
R325			RK73HB1J101J	CHIP R 100 J 1/16W	
R326			RK73HB1J103J	CHIP R 10K J 1/16W	
R327			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R328			RK73GH2A101D	CHIP R 100 D 1/10W	
R329			RK73HB1J104J	CHIP R 100K J 1/16W	KM1M2
R329			RK73HB1J104J	CHIP R 100K J 1/16W	K1E1M5
R329			RK73HB1J104J	CHIP R 100K J 1/16W	M3M4X1
R329			RK73HB1J104J	CHIP R 100K J 1/16W	X2R1Q1
R329			RK73HB1J104J	CHIP R 100K J 1/16W	X3
R330			RK73HB1J104J	CHIP R 100K J 1/16W	K2
R331,332			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R333,334			RK73HB1J101J	CHIP R 100 J 1/16W	
R337,338			RK73HB1J103J	CHIP R 10K J 1/16W	
R339,340			RK73HB1J473J	CHIP R 47K J 1/16W	
R341,342			RK73HB1J103J	CHIP R 10K J 1/16W	
R346			RK73HB1J472J	CHIP R 4.7K J 1/16W	
Ref. No.	Ad	New	Parts No.	Description	Desti- nation
R348			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R349			RK73GH2A101D	CHIP R 100 D 1/10W	
R350			RK73HB1J101J	CHIP R 100 J 1/16W	
R351			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R352			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R353			RK73HB1J473J	CHIP R 47K J 1/16W	
R355			RK73HB1J103J	CHIP R 10K J 1/16W	KR1Q1
R355			RK73HB1J103J	CHIP R 10K J 1/16W	K1K2
R355			RK73HB1J103J	CHIP R 10K J 1/16W	M3M4X2
R356			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1M2
R356			RK73HB1J000J	CHIP R 0.0 J 1/16W	M3M4X1
R356			RK73HB1J000J	CHIP R 0.0 J 1/16W	X2R1Q1
R357			RK73HB1J104J	CHIP R 100K J 1/16W	K1K2M5
R357			RK73HB1J104J	CHIP R 100K J 1/16W	X3E1
R361-364			RK73HB1J101J	CHIP R 100 J 1/16W	
R366-374			RK73HB1J101J	CHIP R 100 J 1/16W	
R375,376			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R377-379			RK73HB1J101J	CHIP R 100 J 1/16W	
R381			RK73HB1J104J	CHIP R 100K J 1/16W	
R382			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R383-385			RK73HB1J104J	CHIP R 100K J 1/16W	
R386			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R388			RK73HB1J101J	CHIP R 100 J 1/16W	
R389			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R390-392			RK73HB1J470J	CHIP R 47 J 1/16W	K1K2M5
R390-392			RK73HB1J470J	CHIP R 47 J 1/16W	X3E1
R390-394			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1M2
R390-394			RK73HB1J000J	CHIP R 0.0 J 1/16W	M3M4X1
R390-394			RK73HB1J000J	CHIP R 0.0 J 1/16W	X2R1Q1
R393,394			RK73HB1J000J	CHIP R 0.0 J 1/16W	K1K2M5
R393,394			RK73HB1J000J	CHIP R 0.0 J 1/16W	X3E1
R395,396			RK73HB1J104J	CHIP R 100K J 1/16W	
R401,402			RK73HB1J100J	CHIP R 10 J 1/16W	K1K2M5
R401,402			RK73HB1J100J	CHIP R 10 J 1/16W	X3E1
R403			RK73HB1J101J	CHIP R 100 J 1/16W	K1K2M5
R403			RK73HB1J101J	CHIP R 100 J 1/16W	X3E1
R404			RK73HB1J000J	CHIP R 0.0 J 1/16W	K1K2M5
R404			RK73HB1J000J	CHIP R 0.0 J 1/16W	X3E1
R405			RK73HB1J102J	CHIP R 1.0K J 1/16W	K1K2M5
R405			RK73HB1J102J	CHIP R 1.0K J 1/16W	X3E1
R406			RK73HB1J511J	CHIP R 510 J 1/16W	K1K2M5
R406			RK73HB1J511J	CHIP R 510 J 1/16W	X3E1
R407-409			RK73HB1J000J	CHIP R 0.0 J 1/16W	K1K2M5
R407-409			RK73HB1J000J	CHIP R 0.0 J 1/16W	X3E1
R410,411			RK73HB1J100J	CHIP R 10 J 1/16W	K1K2M5
R410,411			RK73HB1J100J	CHIP R 10 J 1/16W	X3E1
R412			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	K1K2M5
R412			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	X3E1
R413,414			RK73FB2B100J	CHIP R 10 J 1/8W	KM1M2
R413,414			RK73FB2B100J	CHIP R 10 J 1/8W	M3M4X1
R413,414			RK73FB2B100J	CHIP R 10 J 1/8W	X2R1Q1
R415			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	KM1M2
R415			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	M3M4X1
R415			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	X2R1Q1
R416-418			RK73GB2A100J	CHIP R 10 J 1/10W	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R419,420			RK73FB2B102J	CHIP R 1.0K J 1/8W	KM1M2	R504,505			RK73HB1J153J	CHIP R 15K J 1/16W	
R419,420			RK73FB2B102J	CHIP R 1.0K J 1/8W	M3M4X1	R506			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R419,420			RK73FB2B102J	CHIP R 1.0K J 1/8W	X2R1Q1	R507,508			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R421-424			RK73GB2A750J	CHIP R 75 J 1/10W	KM1M2	R510			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R421-424			RK73GB2A750J	CHIP R 75 J 1/10W	M3M4X1	R511,512			RK73HB1J153J	CHIP R 15K J 1/16W	
R421-424			RK73GB2A750J	CHIP R 75 J 1/10W	X2R1Q1	R513			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R425-428			RK73FB2B101J	CHIP R 100 J 1/8W	KM1M2	R514			RK73GH2A181D	CHIP R 180 D 1/10W	
R425-428			RK73FB2B101J	CHIP R 100 J 1/8W	M3M4X1	R516			RK73GB2A100J	CHIP R 10 J 1/10W	
R425-428			RK73FB2B101J	CHIP R 100 J 1/8W	X2R1Q1	R517			RK73GH2A751D	CHIP R 750 D 1/10W	
R429-432			RK73GB2A100J	CHIP R 10 J 1/10W	KM1M2	R518-520			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R429-432			RK73GB2A100J	CHIP R 10 J 1/10W	M3M4X1	R524,525			RK73HB1J101J	CHIP R 100 J 1/16W	
R429-432			RK73GB2A100J	CHIP R 10 J 1/10W	X2R1Q1	R526			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R433-435			RK73GH2A750D	CHIP R 75 D 1/10W	K1K2M5	R527			RK73EB2E151J	CHIP R 150 J 1/4W	
R433-435			RK73GH2A750D	CHIP R 75 D 1/10W	X3E1	R529			RK73GH2A162D	CHIP R 1.6K D 1/10W	
R436			RK73FB2B102J	CHIP R 1.0K J 1/8W	KM1M2	R530			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R436			RK73FB2B102J	CHIP R 1.0K J 1/8W	M3M4X1	R533			RK73HB1J151J	CHIP R 150 J 1/16W	
R436			RK73FB2B102J	CHIP R 1.0K J 1/8W	X2R1Q1	R534			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R437			RK73GB2A750J	CHIP R 75 J 1/10W	K1K2M5	R535			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R437			RK73GB2A750J	CHIP R 75 J 1/10W	X3E1	R536			RK73GH2A751D	CHIP R 750 D 1/10W	
R441,442			RK73HB1J000J	CHIP R 0.0 J 1/16W		R537			RK73GH2A332D	CHIP R 3.3K D 1/10W	
R443			RK73HB1J104J	CHIP R 100K J 1/16W		R539			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1
R444			RK73HB1J000J	CHIP R 0.0 J 1/16W	KR1K1	R541			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1
R444			RK73HB1J000J	CHIP R 0.0 J 1/16W	K2	R542			RK73GH2A242D	CHIP R 2.4K D 1/10W	M1M2X1
R445			RK73HB1J101J	CHIP R 100 J 1/16W		R543			RK73GH2A562D	CHIP R 5.6K D 1/10W	M1M2X1
R448			RK73HB1J000J	CHIP R 0.0 J 1/16W		R544			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R451,452			RK73FB2B101J	CHIP R 100 J 1/8W	E1	R546-551			RK73HB1J204J	CHIP R 200K J 1/16W	
R451,452			RK73FB2B101J	CHIP R 100 J 1/8W	KR1M1	R554,555			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R451,452			RK73FB2B101J	CHIP R 100 J 1/8W	K2M5X3	R600-603			RK73HB1J104J	CHIP R 100K J 1/16W	
R451,452			RK73FB2B101J	CHIP R 100 J 1/8W	M2X1K1	R604,605			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R453,454			RK73GB2A101J	CHIP R 100 J 1/10W	E1	R606,607			RK73HB1J103J	CHIP R 10K J 1/16W	
R453,454			RK73GB2A101J	CHIP R 100 J 1/10W	KR1M1	R608,609			RK73HB1J473J	CHIP R 47K J 1/16W	
R453,454			RK73GB2A101J	CHIP R 100 J 1/10W	K2M5X3	R612			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R453,454			RK73GB2A101J	CHIP R 100 J 1/10W	M2X1K1	R613			RK73HB1J223J	CHIP R 22K J 1/16W	
R455-458			RK73GB2A223J	CHIP R 22K J 1/10W	E1	R614			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R455-458			RK73GB2A223J	CHIP R 22K J 1/10W	KR1M1	R616			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R455-458			RK73GB2A223J	CHIP R 22K J 1/10W	K2M5X3	R617			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R455-458			RK73GB2A223J	CHIP R 22K J 1/10W	M2X1K1	R618			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R459-462			RK73GB2A104J	CHIP R 100K J 1/10W	E1	R619			RK73HB1J220J	CHIP R 22 J 1/16W	
R459-462			RK73GB2A104J	CHIP R 100K J 1/10W	KR1M1	R623			RK73HB1J220J	CHIP R 22 J 1/16W	
R459-462			RK73GB2A104J	CHIP R 100K J 1/10W	K2M5X3	R625			RK73HB1J473J	CHIP R 47K J 1/16W	
R459-462			RK73GB2A104J	CHIP R 100K J 1/10W	M2X1K1	R626			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R463			RK73HB1J102J	CHIP R 1.0K J 1/16W	E1	R627			RK73HB1J331J	CHIP R 330 J 1/16W	
R463			RK73HB1J102J	CHIP R 1.0K J 1/16W	KR1M1	R629			RK73HB1J103J	CHIP R 10K J 1/16W	
R463			RK73HB1J102J	CHIP R 1.0K J 1/16W	K2M5X3	R634			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R463			RK73HB1J102J	CHIP R 1.0K J 1/16W	M2X1K1	R637			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R464			RK73HB1J100J	CHIP R 10 J 1/16W	E1	R644			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R464			RK73HB1J100J	CHIP R 10 J 1/16W	KR1M1	R646,647			RK73HB1J000J	CHIP R 0.0 J 1/16W	M1M2X1
R464			RK73HB1J100J	CHIP R 10 J 1/16W	K2M5X3	R648			RK73HB1J000J	CHIP R 0.0 J 1/16W	K1K2E1
R464			RK73HB1J100J	CHIP R 10 J 1/16W	M2X1K1	R650			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R467,468			RK73HB1J473J	CHIP R 47K J 1/16W	E1	R652			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R467,468			RK73HB1J473J	CHIP R 47K J 1/16W	KR1M1	R655			RK73HB1J000J	CHIP R 0.0 J 1/16W	K1K2E1
R467,468			RK73HB1J473J	CHIP R 47K J 1/16W	K2M5X3	R656			RK73HB1J103J	CHIP R 10K J 1/16W	
R500-502			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1K1	R673			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R503			RK73GB2A000J	CHIP R 0.0 J 1/10W		R700,701			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R703			RK73HB1J103J	CHIP R 10K J 1/16W	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R704,705 R707,708 R711 R713 R714			RK73HB1J000J RK73HB1J000J RK73HB1J000J RK73HB1J000J RK73HB1J103J	CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 10K J 1/16W	
R715-718 R720,721 R760 R801,802 R803			RK73HB1J000J RK73HB1J103J RK73HB1J000J RK73HB1J000J RK73HB1J472J	CHIP R 0.0 J 1/16W CHIP R 10K J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 4.7K J 1/16W	
R804 R805 R806 R807 R808			RK73HB1J103J RK73HB1J101J RK73HB1J000J RK73HB1J101J RK73HB1J000J	CHIP R 10K J 1/16W CHIP R 100 J 1/16W CHIP R 0.0 J 1/16W CHIP R 100 J 1/16W CHIP R 0.0 J 1/16W	
R809 R810 R812-815 R818 R821-823			RK73GB2A000J RK73HB1J101J RK73HB1J101J RK73HB1J103J RK73HB1J103J	CHIP R 0.0 J 1/10W CHIP R 100 J 1/16W CHIP R 100 J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W	
R825 R826 R827 R828 R829			RK73HB1J332J RK73HB1J220J RK73HB1J103J RK73HB1J102J RK73HB1J332J	CHIP R 3.3K J 1/16W CHIP R 22 J 1/16W CHIP R 10K J 1/16W CHIP R 1.0K J 1/16W CHIP R 3.3K J 1/16W	
R832,833 R834 R836,837 R838 R839			RK73HB1J000J RK73HB1J101J RK73HB1J101J RK73HB1J102J RK73HB1J101J	CHIP R 0.0 J 1/16W CHIP R 100 J 1/16W CHIP R 100 J 1/16W CHIP R 1.0K J 1/16W CHIP R 100 J 1/16W	
R840 R841 R844 R846 R846			RK73HB1J220J RK73HB1J103J RK73HB1J103J RK73HB1J220J RK73HB1J220J	CHIP R 22 J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 22 J 1/16W CHIP R 22 J 1/16W	KR1Q1 K1K2
R846 R848 R848 R848 R849			RK73HB1J220J RK73HB1J000J RK73HB1J000J RK73HB1J000J RK73HB1J220J	CHIP R 22 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 22 J 1/16W	M3M4X2 KR1Q1 K1K2 M3M4X2
R850 R851 R851 R851,852 R851,852			RK73FB2B000J RK73HB1J220J RK73HB1J220J RK73HB1J220J RK73HB1J220J	CHIP R 0.0 J 1/8W CHIP R 22 J 1/16W CHIP R 22 J 1/16W CHIP R 22 J 1/16W CHIP R 22 J 1/16W	E1M5X3 M1M2X1 KR1Q1 K1K2
R851,852 R855 R858 R860 R862			RK73HB1J220J RK73HB1J103J RK73HB1J103J RK73HB1J103J RK73HB1J220J	CHIP R 22 J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 22 J 1/16W	M3M4X2
R863 R864,865 R866-869 R870 R871,872			RK73HB1J103J RK73HB1J220J RK73HB1J103J RK73GH2A622D RK73HB1J332J	CHIP R 10K J 1/16W CHIP R 22 J 1/16W CHIP R 10K J 1/16W CHIP R 6.2K D 1/10W CHIP R 3.3K J 1/16W	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R873 R874 R876 R877 R878			RK73GH2A820D RK73GH2A180D RK73HB1J000J RK73HB1J102J RK73GH2A820D	CHIP R 82 D 1/10W CHIP R 18 D 1/10W CHIP R 0.0 J 1/16W CHIP R 1.0K J 1/16W CHIP R 82 D 1/10W	
R879 R880 R881,882 R884,885 R887,888			RK73GH2A180D RK73HB1J223J RK73GH2A750D RK73GH2A750D RK73GH2A750D	CHIP R 18 D 1/10W CHIP R 22K J 1/16W CHIP R 75 D 1/10W CHIP R 75 D 1/10W CHIP R 75 D 1/10W	
R889 R890 R891 R892 R893			RK73HB1J220J RK73FB2B000J RK73GH2A750D RK73HB1J220J RK73GH2A750D	CHIP R 22 J 1/16W CHIP R 0.0 J 1/8W CHIP R 75 D 1/10W CHIP R 22 J 1/16W CHIP R 75 D 1/10W	
R894,895 R896 R897 R898 R899			RK73HB1J220J RK73HB1J472J RK73HB1J152J RK73HB1J473J RK73HB1J152J	CHIP R 22 J 1/16W CHIP R 4.7K J 1/16W CHIP R 1.5K J 1/16W CHIP R 47K J 1/16W CHIP R 1.5K J 1/16W	
R900 R901 R902 R903 R904			RK73HB1J000J RK73HB1J105J RK73HB1J220J RK73HB1J222J RK73HB1J103J	CHIP R 0.0 J 1/16W CHIP R 1.0M J 1/16W CHIP R 22 J 1/16W CHIP R 2.2K J 1/16W CHIP R 10K J 1/16W	
R905 R907 R908 R909 R910			RK73HB1J000J RK73HB1J000J RK73HB1J102J RK73HB1J000J RK73HB1J102J	CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W CHIP R 1.0K J 1/16W CHIP R 0.0 J 1/16W CHIP R 1.0K J 1/16W	
R911 R912 R913,914 R920-927 R932-939			RK73GB2A000J RK73HB1J000J RK73GB2A000J RK73HB1J220J RK73HB1J331J	CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/10W CHIP R 22 J 1/16W CHIP R 330 J 1/16W	
R940-945 R946 R950,951 R952 R992		*	RK73HB1J220J RK73HB1J100J RK73GB2A000J RK74HB1J000J RK73HB1J101J	CHIP R 22 J 1/16W CHIP R 10 J 1/16W CHIP R 0.0 J 1/10W CHIP-COM 0.0 J 1/16W CHIP R 100 J 1/16W	
R994 R995 R996			RK73HB1J105J RK73HH1J123D RK73EB2E000J	CHIP R 1.0M J 1/16W CHIP R 12K D 1/16W CHIP R 0.0 J 1/4W	
D2 D101-104 D201 D201 D201			1SS355 1SS357-F 1SS355 1SS355 1SS355	DIODE DIODE DIODE DIODE DIODE	KR1Q1 K1K2 M3M4X2
D402-404 D402-404 D402-404 D405-408 D405-408			CVS10A180M CVS10A180M CVS10A180M CVL10C270M300 CVL10C270M300	VARISTOR VARISTOR VARISTOR VARISTOR VARISTOR	KM1M2 M3M4X1 X2R1Q1 KM1M2 M3M4X1
D405-408			CVL10C270M300	VARISTOR	X2R1Q1

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

The IC101,102 and IC801 in the Video control unit (X15-123/134) are not replaceable components. When these ICs are defective, replace the whole Video control unit (X15-123/134).

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
D409-411			UDZW6.2(B)	ZENER DIODE	KM1M2	IC607			MF1341S2162	MICROPROCESSOR IC	
D409-411			UDZW6.2(B)	ZENER DIODE	M3M4X1	IC703		*	GL128P90TF6B4	ROM IC	
D409-411			UDZW6.2(B)	ZENER DIODE	X2R1Q1	IC704,705			74AHC1GU04GW	MOS-IC	
D461,462			CVS10A120M	VARISTOR	E1	IC800		*	FM24C64-G	FERAM IC	
D461,462			CVS10A120M	VARISTOR	KR1M1	IC801		*	-	MICROPROCESSOR IC	
D461,462			CVS10A120M	VARISTOR	K2M5X3	IC920			BD3533FVM	ANALOGUE IC	
D461,462			CVS10A120M	VARISTOR	M2X1K1	IC921,922		*	HY5D561622FT3	DRAM IC	
D463			UDZW3.9(B)	ZENER DIODE	E1	IC923		*	USB2513I-AEZG	MOS-IC	
D463			UDZW3.9(B)	ZENER DIODE	KR1M1	Q1			2SC4081	TRANSISTOR	
D463			UDZW3.9(B)	ZENER DIODE	K2M5X3	Q2			2SA1576A	TRANSISTOR	
D463			UDZW3.9(B)	ZENER DIODE	M2X1K1	Q3			DTA114TUA	DIGITAL TRANSISTOR	
D502			CVL10C270M300	VARISTOR		Q4			DTC114YUA	DIGITAL TRANSISTOR	
IC1			XC6201P502PR	ANALOGUE IC		Q5			2SC4081	TRANSISTOR	
IC2			R1114N331B-TR	ANALOGUE IC (3.3V LF)		Q6			2SA1576A	TRANSISTOR	
IC5			NJM4565V-ZB	ANALOGUE IC		Q7			2SC4081	TRANSISTOR	
IC101		*	-	ANALOGUE IC		Q8			DTA114EUA	DIGITAL TRANSISTOR	
IC102		*	-	ANALOGUE IC		Q9			DTC144EUA	DIGITAL TRANSISTOR	
IC103			74AHC1GU04GW	MOS-IC		Q10			2SB1689	TRANSISTOR	
IC201		*	30878MJB35GP	MICROCONTROLLER IC		Q11			DTC144EUA	DIGITAL TRANSISTOR	
IC202			S-80835CNNB-G	MOS-IC		Q14			DTC144EUA	DIGITAL TRANSISTOR	
IC203		*	W05-1506-00	ROM IC (K)	KK1K2	Q15,16			2SA1576A	TRANSISTOR	
IC203		*	W05-1507-00	ROM IC (E)	E1M2M4	Q17			TPC8110-F	FET	
IC203		*	W05-1508-00	ROM IC (M)	M1M3M5	Q18			DTC144EUA	DIGITAL TRANSISTOR	
IC203		*	W05-1509-00	ROM IC (X)	X1X2X3	Q91			DTC143ZUA	DIGITAL TRANSISTOR	
IC203		*	W05-1509-00	ROM IC (R)	R1	Q101,102			HAT2218R-E	DUAL FET	
IC203		*	W05-1510-00	ROM IC (Q)	Q1	Q103,104			DTC144EUA	DIGITAL TRANSISTOR	
IC203		*	W05-1511-00	ROM IC (V)	V	Q105			DTC114YUA	DIGITAL TRANSISTOR	
IC205			74AHCT1G08GW	MOS-IC	K1K2M5	Q107,108			HAT2218R-E	DUAL FET	
IC205			74AHCT1G08GW	MOS-IC	X3E1	Q201			2SA1576A	TRANSISTOR	
IC207,208			74AHCT1G08GW	MOS-IC		Q202			DTC144EUA	DIGITAL TRANSISTOR	
IC209,210			74LVC3G34DP	MOS-IC		Q203,204			2SA1576A	TRANSISTOR	
IC301			TC7SH125FU-F	MOS-IC		Q206,207			DTA114YUA	DIGITAL TRANSISTOR	KR1Q1
IC302			TC7W02FU-F	MOS-IC		Q206,207			DTA114YUA	DIGITAL TRANSISTOR	K1K2
IC303			TC7SH02FU-F	MOS-IC		Q206,207			DTA114YUA	DIGITAL TRANSISTOR	M3M4X2
IC401			74AHCT1G08GW	MOS-IC		Q207			DTA114YUA	DIGITAL TRANSISTOR	E1M5X3
IC403			74AHC2G126DP	MOS-IC	E1	Q207			DTA114YUA	DIGITAL TRANSISTOR	M1M2X1
IC403			74AHC2G126DP	MOS-IC	KR1M1	Q500			2SB1184	TRANSISTOR	
IC403			74AHC2G126DP	MOS-IC	K2M5X3	Q501			2SC4081	TRANSISTOR	
IC403			74AHC2G126DP	MOS-IC	M2X1K1	Q504			2SC4081	TRANSISTOR	
IC404			NJM4565V-ZB	ANALOGUE IC	E1	Q505			2SA1576A	TRANSISTOR	
IC404			NJM4565V-ZB	ANALOGUE IC	KR1M1	SWITCH UNIT (X16-6560-10)					
IC404			NJM4565V-ZB	ANALOGUE IC	K2M5X3	D1			B30-1566-05	LED (1608,RED)	
IC500			PCM1754DB	MOS-IC	M2X1K1	D4			B30-1784-05	LED (RGB SIDE)	
IC501		*	NJM2516VC3-ZB	ANALOGUE IC		D6			B30-1784-05	LED (RGB SIDE)	
IC502		*	NJM2561F1-ZB	ANALOGUE IC		CN1		*	E41-3101-05	FLAT CABLE CONNECTOR	
IC503		*	NJM4565V-ZB	ANALOGUE IC		R2			RK73GB2A242J	CHIP R 2.4K J 1/10W	
IC504		*	R1173S001D-F	ANALOGUE IC (LDO ADJ)		R3			RK73GB2A362J	CHIP R 3.6K J 1/10W	
IC505		*	XC6201P502MR	ANALOGUE IC		R5			RK73GB2A622J	CHIP R 6.2K J 1/10W	
IC506		*	R1173S001D-F	ANALOGUE IC (LDO ADJ)	KR1Q1	R6			RK73GB2A123J	CHIP R 12K J 1/10W	
IC506		*	R1173S001D-F	ANALOGUE IC (LDO ADJ)	K1K2M5	R7			RK73GB2A363J	CHIP R 36K J 1/10W	
IC506		*	R1173S001D-F	ANALOGUE IC (LDO ADJ)	M3M4X2	S1 -9			S70-0948-05	TACT SWITCH	
IC506		*	R1173S001D-F	ANALOGUE IC (LDO ADJ)	X3E1	D2 ,3			CVS10A120M	VARISTOR	
IC506,507		*	R1173S001D-F	ANALOGUE IC (LDO ADJ)	M1M2X1	D5		*	MKZM120HGL	ZENER DIODE	
IC605			MIC2005-08YM6	MOS-IC							

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-6560-10)

Ref. No.	Ad	New	Parts No.	Description	Destination
D7 IC1			CVS10A120M PIC95603	VARISTOR ANALOGUE IC	
SUB-CIRCUIT UNIT (X16-6590-2x)					
C1			CK73GB1A105K	CHIP C 1.0UF K	M5X3
C2			CK73GB1H103K	CHIP C 0.010UF K	M5X3
C3			CK73GB1A105K	CHIP C 1.0UF K	M5X3
C4			CK73GB0J475K	CHIP C 4.7UF K	M1M2X1
C5			CK73GB1A105K	CHIP C 1.0UF K	M1M2X1
C6			CK73GB1H104K	CHIP C 0.10UF K	M1M2X1
C7 ,8			CC73GCH1H150J	CHIP C 15PF J	M1M2X1
C9 -11			CK73GB1H104K	CHIP C 0.10UF K	M1M2X1
C12			CK73GB0J475K	CHIP C 4.7UF K	M1M2X1
C13			CK73GB1A105K	CHIP C 1.0UF K	M1M2X1
C14 -17			CK73GB1H104K	CHIP C 0.10UF K	M1M2X1
CN1		*	E41-2451-15	FLAT CABLE CONNECTOR	M5X3
CN2			E41-2806-05	PIN ASSY	M1M2X1
J1			E68-0025-05	JACK (SD CARD SLOT)	M1M2X1
J1			E68-0025-05	JACK (SD CARD SLOT)	M5X3
X1			L77-2943-05	CRYSTAL RESONATOR (24.000MHZ)	M1M2X1
R1			RK73GB2A103J	CHIP R 10K J 1/10W	M5X3
R2			RK73GB2A224J	CHIP R 220K J 1/10W	M5X3
R3 ,4			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1
R5			RK73GB2A222J	CHIP R 2.2K J 1/10W	M1M2X1
R6 -11			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1
R12			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2X1
R13 ,14			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1
R15			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1
R16 -19			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1
R20			RK73GH2A123D	CHIP R 12K D 1/10W	M1M2X1
R21			RK73GB2A105J	CHIP R 1.0M J 1/10W	M1M2X1
R22 ,23			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1
R24 ,25			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1
IC1		*	-	MOS-IC	M1M2X1
Q1			RTQ025P02	FET	M5X3
CONTROL CIRCUIT UNIT (X29-4490-xx)					
C1			CK73GB1H103K	CHIP C 0.010UF K	
C11			CK73FB1C105K	CHIP C 1.0UF K	
C14			CK73FB1C106K	CHIP C 10UF K	
C15			CK73FB1C105K	CHIP C 1.0UF K	
C16			CE32BJ1C100M	CHIP EL 10UF 16WV	
C17			CK73GB1H102K	CHIP C 1000PF K	
C18 ,19			CK73GB1H104K	CHIP C 0.10UF K	
C20			CK73GB1H102K	CHIP C 1000PF K	
C21			CE32BJ1C100M	CHIP EL 10UF 16WV	
C24			CD04AT0J331M	ELECTRO 330UF 6.3WV	
C27 -29			CK73GB1H104K	CHIP C 0.10UF K	
C100-102			CK73GB1H104K	CHIP C 0.10UF K	
C104			CE32BJ1C100M	CHIP EL 10UF 16WV	
C107,108			CK73GB1H102K	CHIP C 1000PF K	
C110			CE32BJ1C100M	CHIP EL 10UF 16WV	
C114			CE32BJ1C100M	CHIP EL 10UF 16WV	
C116			CK73GB1H102K	CHIP C 1000PF K	

The IC1 in the Sub-circuit unit (X16-6590-2x) are not replaceable components. When these ICs are defective, replace the whole Sub-circuit unit (X16-6590-2x).

Ref. No.	Ad	New	Parts No.	Description	Destination
C118			CK73GB1H102K	CHIP C 1000PF K	
C120			CE32BJ1C100M	CHIP EL 10UF 16WV	
C124			CK73EB1C106K	CHIP C 10UF K	
C125			CK73GB1H102K	CHIP C 1000PF K	
C128			CK73GB1H102K	CHIP C 1000PF K	
C130			CK73EB1C106K	CHIP C 10UF K	
C200			CK73GB1H473K	CHIP C 0.047UF K	E1
C200			CK73GB1H473K	CHIP C 0.047UF K	KR1M1
C200			CK73GB1H473K	CHIP C 0.047UF K	K2M5X3
C200			CK73GB1H473K	CHIP C 0.047UF K	M2X1K1
C201			CK73EB1E105K	CHIP C 1.0UF K	E1
C201			CK73EB1E105K	CHIP C 1.0UF K	KR1M1
C201			CK73EB1E105K	CHIP C 1.0UF K	K2M5X3
C201			CK73EB1E105K	CHIP C 1.0UF K	M2X1K1
C202			CK73GB1H473K	CHIP C 0.047UF K	E1
C202			CK73GB1H473K	CHIP C 0.047UF K	KR1M1
C202			CK73GB1H473K	CHIP C 0.047UF K	K2M5X3
C202			CK73GB1H473K	CHIP C 0.047UF K	M2X1K1
C203			CK73EB1E105K	CHIP C 1.0UF K	E1
C203			CK73EB1E105K	CHIP C 1.0UF K	KR1M1
C203			CK73EB1E105K	CHIP C 1.0UF K	K2M5X3
C203			CK73EB1E105K	CHIP C 1.0UF K	M2X1K1
CN1			E41-2959-05	PIN ASSY	
CN100			E41-2964-05	PIN ASSY	
CN300			E41-2980-05	FLAT CABLE CONNECTOR	
CN302			E40-6469-05	PIN ASSY	
J200			E58-1067-05	RECTANGULAR RECEPTACLE	E1
J200			E58-1067-05	RECTANGULAR RECEPTACLE	KR1M1
J200			E58-1067-05	RECTANGULAR RECEPTACLE	K2M5X3
J200			E58-1067-05	RECTANGULAR RECEPTACLE	M2X1K1
WH1		2C	E39-0985-15	WIRING HARNESS	
R4			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R9			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R10			RK73EB2E100J	CHIP R 10 J 1/4W	
R11			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R14			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R15			RK73EB2E100J	CHIP R 10 J 1/4W	
R19			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R20			RK73GB2A750J	CHIP R 75 J 1/10W	
R22			RK73GH2A750D	CHIP R 75 D 1/10W	
R25			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R30			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R40			RK73EB2E332J	CHIP R 3.3K J 1/4W	
R41			RK73EB2E162J	CHIP R 1.6K J 1/4W	
R43			RK73EB2E332J	CHIP R 3.3K J 1/4W	
R46			RK73FB2B101J	CHIP R 100 J 1/8W	
R47			RK73GB2A471J	CHIP R 470 J 1/10W	
R48			RK73EB2E750J	CHIP R 75 J 1/4W	
R49			RK73GB2A223J	CHIP R 22K J 1/10W	
R51			RK73GB2A223J	CHIP R 22K J 1/10W	
R53			RK73FB2B101J	CHIP R 100 J 1/8W	
R54			RK73GB2A471J	CHIP R 470 J 1/10W	
R55 ,56			RK73GB2A103J	CHIP R 10K J 1/10W	
R102			RK73EB2E101J	CHIP R 100 J 1/4W	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

CONTROL CIRCUIT UNIT (X29-4490-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R103			RK73GB2A471J	CHIP R 470 J 1/10W		R210			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R106			RK73GB2A223J	CHIP R 22K J 1/10W		R210			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R109			RK73GB2A223J	CHIP R 22K J 1/10W		R210			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R113			RK73GB2A471J	CHIP R 470 J 1/10W		R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	E1
R117			RK73EB2E101J	CHIP R 100 J 1/4W		R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	KR1M1
R119			RK73EB2E101J	CHIP R 100 J 1/4W		R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	K2M5X3
R120			RK73GB2A471J	CHIP R 470 J 1/10W		R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	M2X1K1
R125			RK73GB2A223J	CHIP R 22K J 1/10W		R211			RK73GB2A472J	CHIP R 4.7K J 1/10W	E1
R129			RK73GB2A223J	CHIP R 22K J 1/10W		R212			RK73GB2A472J	CHIP R 4.7K J 1/10W	KR1M1
R132			RK73GB2A000J	CHIP R 0.0 J 1/10W		R212			RK73GB2A472J	CHIP R 4.7K J 1/10W	K2M5X3
R133			RK73GB2A471J	CHIP R 470 J 1/10W		R212			RK73GB2A472J	CHIP R 4.7K J 1/10W	M2X1K1
R134			RK73EB2E101J	CHIP R 100 J 1/4W		R213			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R138			RK73EB2E101J	CHIP R 100 J 1/4W		R213			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R139			RK73GB2A471J	CHIP R 470 J 1/10W		R213			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R141			RK73GB2A223J	CHIP R 22K J 1/10W		R213			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R146			RK73GB2A223J	CHIP R 22K J 1/10W		R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	E1
R149			RK73GB2A471J	CHIP R 470 J 1/10W		R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	KR1M1
R150			RK73EB2E101J	CHIP R 100 J 1/4W		R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	K2M5X3
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	E1	R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	M2X1K1
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	KR1M1	R215			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	K2M5X3	R215			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	M2X1K1	R215			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R201			RK73GB2A473J	CHIP R 47K J 1/10W	E1	R215			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R201			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1	R216			RK73GB2A621J	CHIP R 620 J 1/10W	E1
R201			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3	R216			RK73GB2A621J	CHIP R 620 J 1/10W	KR1M1
R201			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1	R216			RK73GB2A621J	CHIP R 620 J 1/10W	K2M5X3
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	E1	R216			RK73GB2A621J	CHIP R 620 J 1/10W	M2X1K1
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	KR1M1	R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	E1
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	K2M5X3	R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	KR1M1
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	M2X1K1	R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	K2M5X3
R203			RK73GB2A473J	CHIP R 47K J 1/10W	E1	R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	M2X1K1
R203			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1	R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	E1
R203			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3	R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	KR1M1
R203			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1	R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	K2M5X3
R204			RK73GB2A621J	CHIP R 620 J 1/10W	E1	R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	M2X1K1
R204			RK73GB2A621J	CHIP R 620 J 1/10W	KR1M1	R220			RK73GB2A124J	CHIP R 120K J 1/10W	E1
R204			RK73GB2A621J	CHIP R 620 J 1/10W	K2M5X3	R220			RK73GB2A124J	CHIP R 120K J 1/10W	KR1M1
R204			RK73GB2A621J	CHIP R 620 J 1/10W	M2X1K1	R220			RK73GB2A124J	CHIP R 120K J 1/10W	K2M5X3
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	E1	R220			RK73GB2A124J	CHIP R 120K J 1/10W	M2X1K1
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	KR1M1	R221			RK73GB2A103J	CHIP R 10K J 1/10W	E1
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	K2M5X3	R221			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	M2X1K1	R221			RK73GB2A103J	CHIP R 10K J 1/10W	K2M5X3
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	E1	R221			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K1
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	KR1M1	R222			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	K2M5X3	R222			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	M2X1K1	R222			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R208			RK73GB2A124J	CHIP R 120K J 1/10W	E1	R222			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R208			RK73GB2A124J	CHIP R 120K J 1/10W	KR1M1	R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	E1
R208			RK73GB2A124J	CHIP R 120K J 1/10W	K2M5X3	R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	KR1M1
R208			RK73GB2A124J	CHIP R 120K J 1/10W	M2X1K1	R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	K2M5X3
R209			RK73GB2A103J	CHIP R 10K J 1/10W	E1	R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	M2X1K1
R209			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R300			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R209			RK73GB2A103J	CHIP R 10K J 1/10W	K2M5X3						
R209			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K1						
R210			RK73GB2A473J	CHIP R 47K J 1/10W	E1						
						D1			STZ6.2N	ZENER DIODE	
						D3			STZ6.2N	ZENER DIODE	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

CONTROL CIRCUIT UNIT (X29-4490-xx)

Ref. No.	Added	New	Parts No.	Description	Destination
D4 D5 D6 D10 D12 ,13			UDZW6.8(B) UDZW6.2(B) UDZW6.8(B) AVRM16270MAAB AVRM16270MAAB	ZENER DIODE ZENER DIODE ZENER DIODE VARISTOR VARISTOR	
D14 ,15 D16 ,17 D18 D100-105 D106-110			AVRM16180M6AB DAP202U STZ6.2N AVRM16180M6AB DAP202U	VARISTOR DIODE ZENER DIODE VARISTOR DIODE	
D200-203 D200-203 D200-203 D200-203 D307-309			1SR154-400 1SR154-400 1SR154-400 1SR154-400 CVS10A120M	DIODE DIODE DIODE DIODE VARISTOR	E1 KR1M1 K2M5X3 M2X1K1
Q4 Q5 Q6 Q100 Q101			DTC143TUA DTA144EUA DTC143TUA DTC143TUA DTA144EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q102-105 Q106 Q107 Q200 Q200			DTC143TUA DTA144EUA DTC143TUA DTC114TUA DTC114TUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	E1 KR1M1
Q200 Q200 Q201 Q201 Q201			DTC114TUA DTC114TUA 2SC4081 2SC4081 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	K2M5X3 M2X1K1 E1 KR1M1 K2M5X3
Q201 Q202 Q202 Q202 Q202			2SC4081 2SB1443 2SB1443 2SB1443 2SB1443	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M2X1K1 E1 KR1M1 K2M5X3 M2X1K1
Q203 Q203 Q203 Q203 Q204,205			2SA1576A 2SA1576A 2SA1576A 2SA1576A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	E1 KR1M1 K2M5X3 M2X1K1 E1
Q204,205 Q204,205 Q204,205 Q206 Q206			2SC4081 2SC4081 2SC4081 DTC114TUA DTC114TUA	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	KR1M1 K2M5X3 M2X1K1 E1 KR1M1
Q206 Q206 Q207 Q207 Q207			DTC114TUA DTC114TUA 2SC4081 2SC4081 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	K2M5X3 M2X1K1 E1 KR1M1 K2M5X3
Q207 Q208 Q208 Q208 Q208			2SC4081 2SB1443 2SB1443 2SB1443 2SB1443	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M2X1K1 E1 KR1M1 K2M5X3 M2X1K1

Ref. No.	Added	New	Parts No.	Description	Destination
Q209 Q209 Q209 Q209 Q210,211			2SA1576A 2SA1576A 2SA1576A 2SA1576A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	E1 KR1M1 K2M5X3 M2X1K1 E1
Q210,211 Q210,211 Q210,211			2SC4081 2SC4081 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR	KR1M1 K2M5X3 M2X1K1
ELECTRIC UNIT (X34-634x-xx)					
C1 C2 ,3 C4 C4 C4			C90-5666-05 CK73GB1H103K C93-1470-05 C93-1470-05 C93-1470-05	ELECTRO CHIP C CHIP C CHIP C CHIP C	3900UF 25WV 0.010UF K 15000PF K 15000PF K 15000PF K
C5 C6 ,7 C8 C9 C10			CK73GB1H103K CK73FB1C105K CK73GB1H103K CK73FB1C105K CK73FB1E474K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF K 1.0UF K 0.010UF K 1.0UF K 0.47UF K
C11 C12 C13 C14 C101			CK73FB1A335K CK73FB1C105K CK73GB1H104K CK73GB1H103K CK73FB1H334K	CHIP C CHIP C CHIP C CHIP C CHIP C	3.3UF K 1.0UF K 0.10UF K 0.010UF K 0.33UF K
C102 C103 C104 C105 C106			CK73GB1H103K CK73GB1A105K C90-5692-05 CK73GB1H103K CK73GB1H104K	CHIP C CHIP C ELECTRO CHIP C CHIP C	0.010UF K 1.0UF K 220UF 16WV 0.010UF K 0.10UF K
C106 C106 C111 C111 C111			CK73GB1H104K CK73GB1H104K CK73FB1H334K CK73FB1H334K CK73FB1H334K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF K 0.10UF K 0.33UF K 0.33UF K 0.33UF K
C111 C112 C112 C112 C112			CK73FB1H334K CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H103K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.33UF K 0.010UF K 0.010UF K 0.010UF K 0.010UF K
C113 C113 C113 C113 C114			CK73GB1A105K CK73GB1A105K CK73GB1A105K CK73GB1A105K CD04AY1A101M	CHIP C CHIP C CHIP C CHIP C ELECTRO	1.0UF K 1.0UF K 1.0UF K 1.0UF K 100UF 10WV
C114 C114 C114 C115 C116			CD04AY1A101M CD04AY1A101M CD04AY1A101M CK73GB1A105K CD04BD1C221M	ELECTRO ELECTRO ELECTRO CHIP C ELECTRO	100UF 10WV 100UF 10WV 100UF 10WV 1.0UF K 220UF 16WV
C117 C118 C123 C128 C129			CK73GB1H102K CD04AT1A101M CK73FB1H334K C90-6851-05 CK73FB1A225K	CHIP C ELECTRO CHIP C ELECTRO CHIP C	1000PF K 100UF 10WV 0.33UF K 220UF 25WV 2.2UF K

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C130			CK73GB1A105K	CHIP C 1.0UF K		C504			CK73GB1H103K	CHIP C 0.010UF K	E1M5
C131,132			CK73GB1C104K	CHIP C 0.10UF K		C504			CK73GB1H103K	CHIP C 0.010UF K	KR1M1
C133			CK73FB0J106K	CHIP C 10UF K		C504			CK73GB1H103K	CHIP C 0.010UF K	M2Q1M3
C151			CK73GB1H103K	CHIP C 0.010UF K		C504			CK73GB1H103K	CHIP C 0.010UF K	M4K1K2
C152,153			CK73GB1H104K	CHIP C 0.10UF K		C505			CC73GCH1H331J	CHIP C 330PF J	E1M5
C154,155			CK73GB1H103K	CHIP C 0.010UF K		C505			CC73GCH1H331J	CHIP C 330PF J	KR1M1
C301			CK73GB1H103K	CHIP C 0.010UF K		C505			CC73GCH1H331J	CHIP C 330PF J	M2Q1M3
C302			CK73GB1H473K	CHIP C 0.047UF K		C505			CC73GCH1H331J	CHIP C 330PF J	M4K1K2
C303,304			CK73GB1H103K	CHIP C 0.010UF K		C515			CD04AS1V100M	ELECTRO 10UF 35WV	E1M5
C305			CK73GB1H102K	CHIP C 1000PF K		C515			CD04AS1V100M	ELECTRO 10UF 35WV	KR1M1
C306,307			CK73GB1H103K	CHIP C 0.010UF K		C515			CD04AS1V100M	ELECTRO 10UF 35WV	M2Q1M3
C308			CK73GB1C104K	CHIP C 0.10UF K		C515			CD04AS1V100M	ELECTRO 10UF 35WV	M4K1K2
C309			CK73FB0J106K	CHIP C 10UF K		C516-519			CK73GB1H103K	CHIP C 0.010UF K	
C401,402			CK73GB1A105K	CHIP C 1.0UF K		C520			CK73GB1H102K	CHIP C 1000PF K	E1
C403,404			CK73GB1A474K	CHIP C 0.47UF K		C524			CK73GB1H102K	CHIP C 1000PF K	
C405			CK73GB1A105K	CHIP C 1.0UF K		C597			CK73GB1H102K	CHIP C 1000PF K	
C406			CE32BJ1H010M	CHIP EL 1.0UF 50WV		C598			CC73GCH1H101J	CHIP C 100PF J	E1
C407			CE32BD1C470M	CHIP EL 47UF 16WV		C598			CC73GCH1H101J	CHIP C 100PF J	KR1M1
C408			CK73GB1H103K	CHIP C 0.010UF K		C598			CC73GCH1H101J	CHIP C 100PF J	K2M5X3
C409,410			CK73GB1A105K	CHIP C 1.0UF K		C598			CC73GCH1H101J	CHIP C 100PF J	M2X1K1
C413,414			CK73GB1A105K	CHIP C 1.0UF K		C600-602			CK73GB1A105K	CHIP C 1.0UF K	
C417			CE32BJ1V100M	CHIP EL 10UF 35WV		C605			CK73GB1H103K	CHIP C 0.010UF K	KR1K1
C431,432			CK73EB1E225K	CHIP C 2.2UF K		C605			CK73GB1H103K	CHIP C 0.010UF K	K2
C433-436			CK73GB1A105K	CHIP C 1.0UF K		C616			CK73GB1H104K	CHIP C 0.10UF K	KR1K1
C443			CK73GB1A105K	CHIP C 1.0UF K		C616			CK73GB1H104K	CHIP C 0.10UF K	K2
C444			CK73FB1C106K	CHIP C 10UF K		C616-618			CK73GB1H104K	CHIP C 0.10UF K	M1M2X1
C445			CK73GB1A105K	CHIP C 1.0UF K		C616-618			CK73GB1H104K	CHIP C 0.10UF K	Q1M3M4
C451			CK73FB1C106K	CHIP C 10UF K		C616-618			CK73GB1H104K	CHIP C 0.10UF K	X2E1M5
C452			CK73GB1C104K	CHIP C 0.10UF K		C616-618			CK73GB1H104K	CHIP C 0.10UF K	X3
C453			CK73FB0J106K	CHIP C 10UF K		C618			CK73GB1H104K	CHIP C 0.10UF K	KR1K1
C454			CK73GB1C104K	CHIP C 0.10UF K		C618			CK73GB1H104K	CHIP C 0.10UF K	K2
C455			CK73GB1A105K	CHIP C 1.0UF K		C650-652			CK73FB1C105K	CHIP C 1.0UF K	KR1Q1
C456			CE32BJ1C220M	CHIP EL 22UF 16WV		C650-652			CK73FB1C105K	CHIP C 1.0UF K	K1K2
C457			CK73GB1C104K	CHIP C 0.10UF K		C650-652			CK73FB1C105K	CHIP C 1.0UF K	M3M4X2
C458			CK73FB0J106K	CHIP C 10UF K		C653			CK73GB1C104K	CHIP C 0.10UF K	KR1Q1
C462,463			CK73GB1A105K	CHIP C 1.0UF K	Q1M3M4	C653			CK73GB1C104K	CHIP C 0.10UF K	K1K2
C462,463			CK73GB1A105K	CHIP C 1.0UF K	X2	C653			CK73GB1C104K	CHIP C 0.10UF K	M3M4X2
C463-467			CK73GB1A105K	CHIP C 1.0UF K	E1	C654			CC73GCH1H470J	CHIP C 47PF J	KR1Q1
C463-467			CK73GB1A105K	CHIP C 1.0UF K	KR1M1	C654			CC73GCH1H470J	CHIP C 47PF J	K1K2
C463-467			CK73GB1A105K	CHIP C 1.0UF K	K2M5X3	C654			CC73GCH1H470J	CHIP C 47PF J	M3M4X2
C463-467			CK73GB1A105K	CHIP C 1.0UF K		C701,702			CC73GCH1H102J	CHIP C 1000PF J	
C466,467			CK73GB1A105K	CHIP C 1.0UF K	M2X1K1	C751			CK73FB1C106K	CHIP C 10UF K	E1
C466,467			CK73GB1A105K	CHIP C 1.0UF K	Q1M3M4	C751			CK73FB1C106K	CHIP C 10UF K	KR1M1
C469-474			CK73GB1A105K	CHIP C 1.0UF K	X2	C751			CK73FB1C106K	CHIP C 10UF K	K2M5X3
C469-474			CK73GB1A105K	CHIP C 1.0UF K	KR1Q1	C751			CK73FB1C106K	CHIP C 10UF K	M2X1K1
C469-474			CK73GB1A105K	CHIP C 1.0UF K	K1K2	C752			CK73HB1A104K	CHIP C 0.10UF K	E1
C469-474			CK73GB1A105K	CHIP C 1.0UF K		C752			CK73HB1A104K	CHIP C 0.10UF K	KR1M1
C469-477			CK73GB1A105K	CHIP C 1.0UF K	M3M4X2	C752			CK73HB1A104K	CHIP C 0.10UF K	K2M5X3
C469-477			CK73GB1A105K	CHIP C 1.0UF K	E1M5X3	C752			CK73HB1A104K	CHIP C 0.10UF K	M2X1K1
C469-477			CK73GB1A105K	CHIP C 1.0UF K	M1M2X1	C752			CK73HB1A104K	CHIP C 0.10UF K	E1
C479			CK73GB1A105K	CHIP C 1.0UF K	Q1M3M4	C753			CK73GB0J225K	CHIP C 2.2UF K	KR1M1
C479			CK73GB1A105K	CHIP C 1.0UF K	X2	C753			CK73GB0J225K	CHIP C 2.2UF K	K2M5X3
C482-487			CK73GB1A105K	CHIP C 1.0UF K		C753			CK73GB0J225K	CHIP C 2.2UF K	M2X1K1
C500,501			CC73GCH1H100D	CHIP C 10PF D	E1M5	C754			CK73HB1A104K	CHIP C 0.10UF K	E1
C500,501			CC73GCH1H100D	CHIP C 10PF D	KR1M1	C754			CK73HB1A104K	CHIP C 0.10UF K	KR1M1
C500,501			CC73GCH1H100D	CHIP C 10PF D	M2Q1M3						
C500,501			CC73GCH1H100D	CHIP C 10PF D	M4K1K2						

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation
C754 C754 C755,756 C755,756 C755,756			CK73HB1A104K CK73HB1A104K CK73GB1A105K CK73GB1A105K CK73GB1A105K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K	K2M5X3 M2X1K1 E1 KR1M1 K2M5X3
C755,756 C758 C758 C758 C758			CK73GB1A105K CK73GB1H102K CK73GB1H102K CK73GB1H102K CK73GB1H102K	CHIP C 1.0UF K CHIP C 1000PF K CHIP C 1000PF K CHIP C 1000PF K CHIP C 1000PF K	M2X1K1 E1 KR1M1 K2M5X3 M2X1K1
C759 C759 C759 C759 C760			CE32BD1C100M CE32BD1C100M CE32BD1C100M CE32BD1C100M CK73HB1A104K	CHIP EL 10UF 16WV CHIP EL 10UF 16WV CHIP EL 10UF 16WV CHIP EL 10UF 16WV CHIP C 0.10UF K	E1 KR1M1 K2M5X3 M2X1K1 E1
C760 C760 C760 C763-768 C763-768			CK73HB1A104K CK73HB1A104K CK73HB1A104K CK73HB1H222K CK73HB1H222K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 2200PF K CHIP C 2200PF K	KR1M1 K2M5X3 M2X1K1 E1 KR1M1
C763-768 C763-768 C775 C775 C775			CK73HB1H222K CK73HB1H222K CK73FB1C106K CK73FB1C106K CK73FB1C106K	CHIP C 2200PF K CHIP C 2200PF K CHIP C 10UF K CHIP C 10UF K CHIP C 10UF K	K2M5X3 M2X1K1 E1 KR1M1 K2M5X3
C775 C776 C776 C776 C776			CK73FB1C106K CK73GB1H104K CK73GB1H104K CK73GB1H104K CK73GB1H104K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	M2X1K1 E1 KR1M1 K2M5X3 M2X1K1
C777,778 C777,778 C777,778 C777,778 C779			CC73GCH1H100D CC73GCH1H100D CC73GCH1H100D CC73GCH1H100D CK73GB1A105K	CHIP C 10PF D CHIP C 10PF D CHIP C 10PF D CHIP C 10PF D CHIP C 1.0UF K	E1 KR1M1 K2M5X3 M2X1K1 E1
C779 C779 C779 C782 C782			CK73GB1A105K CK73GB1A105K CK73GB1A105K CK73HB1E103K CK73HB1E103K	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.010UF K	KR1M1 K2M5X3 M2X1K1 E1 KR1M1
C782 C782 C784 C784 C784			CK73HB1E103K CK73HB1E103K CK73HB1E103K CK73HB1E103K CK73HB1E103K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K	K2M5X3 M2X1K1 E1 KR1M1 K2M5X3
C784 C786,787 C786,787 C786,787 C786,787			CK73HB1E103K CK73GB1A105K CK73GB1A105K CK73GB1A105K CK73GB1A105K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K	M2X1K1 E1 KR1M1 K2M5X3 M2X1K1
C789-792 C789-792 C789-792 C789-792 C901-904			CK73GB1A105K CK73GB1A105K CK73GB1A105K CK73GB1A105K C90-6768-05	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K ELECTRO 0.22UF 16WV	E1 KR1M1 K2M5X3 M2X1K1
Ref. No.	Ad	New	Parts No.	Description	Desti- nation
C905 C906 C907 C909 C913-920			CK73GB1A105K CD04BA1E330M C90-6780-05 CK73GB1A105K CK73GB1H222K	CHIP C 1.0UF K ELECTRO 33UF 25WV ELECTRO 1UF 16WV CHIP C 1.0UF K CHIP C 2200PF K	
C921-928 C931-934			CC73GCH1H221J CC73GCH1H101J	CHIP C 220PF J CHIP C 100PF J	
CN201 CN202 CN203,204 CN205 J1			E41-2237-05 E40-6470-05 E41-2979-05 E41-2958-05 E58-1043-05	FLAT CABLE CONNECTOR PIN ASSY FLAT CABLE CONNECTOR PIN ASSY RECTANGULAR RECEPTACLE (DCCN)	
J600 J650 J650 J650 J701			E58-1034-05 E58-1097-05 E58-1097-05 E58-1097-05 E11-0625-05	RECTANGULAR RECEPTACLE (TV-TU) RECTANGULAR RECEPTACLE (KAB) RECTANGULAR RECEPTACLE (KAB) RECTANGULAR RECEPTACLE (KAB) PHONE JACK (LGY6502-0900)	KR1Q1 K1K2 M3M4X2
J702 W500 W500 W500 W500		*	E11-0656-05 E30-6883-05 E30-6883-05 E30-6883-05 E30-6883-05	PHONE JACK (3.5D YELLOW) CORD WITH PLUG (ANT) CORD WITH PLUG (ANT) CORD WITH PLUG (ANT) CORD WITH PLUG (ANT)	KM1M2 K1K2M5 M3M4X1 X2R1Q1
W500		*	E30-6883-05	CORD WITH PLUG (ANT)	X3
F101 F101 F101 F102			F53-0306-05 F53-0306-05 F53-0306-05 F53-0297-05	FUSE(UL,CSA) 5A FUSE(UL,CSA) 5A FUSE(UL,CSA) 5A FUSE(UL,CSA) 1.6A	KR1Q1 K1K2 M3M4X2
L1 L104 L451,452 L502 L505			L33-2436-05 L41-1005-33 L41-1005-33 L41-4795-33 L92-0329-05	CHOKE COIL ASSY SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (4.7U) CHIP FERRITE	E1
X500 X500 X500 X500 X751			L77-2002-05 L77-2002-05 L77-2002-05 L77-2002-05 L77-3810-05	CRYSTAL RESONATOR CRYSTAL RESONATOR CRYSTAL RESONATOR CRYSTAL RESONATOR CRYSTAL RESONATOR (11.2896MHZ)	E1M5 KR1M1 M2Q1M3 M4K1K2 E1
X751 X751 X751			L77-3810-05 L77-3810-05 L77-3810-05	CRYSTAL RESONATOR (11.2896MHZ) CRYSTAL RESONATOR (11.2896MHZ) CRYSTAL RESONATOR (11.2896MHZ)	KR1M1 K2M5X3 M2X1K1
AB E E E	2C 2C 2C 2C		N09-6727-05 N35-2604-43 N35-2604-43 N35-2604-43	TAPTITE SCREW (3X8) BINDING HEAD MACHINE SCREW BINDING HEAD MACHINE SCREW BINDING HEAD MACHINE SCREW	KR1Q1 K1K2 M3M4X2
R1 R2 R4 R5 R6			RK73EB2E272J RK73GB2A102J RK73EB2E103J RK73GB2A000J RK73GB2A103J	CHIP R 2.7K J 1/4W CHIP R 1.0K J 1/10W CHIP R 10K J 1/4W CHIP R 0.0 J 1/10W CHIP R 10K J 1/10W	
R7 ,8 R9 R10 R12			RK73GB2A473J RK73EB2E272J RK73GB2A102J RK73EB2E102J	CHIP R 47K J 1/10W CHIP R 2.7K J 1/4W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/4W	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R13 ,14			RK73EB2E622J	CHIP R 6.2K J 1/4W		R115			RK73FB2B221J	CHIP R 220 J 1/8W	
R15			RK73GB2A153J	CHIP R 15K J 1/10W		R116			RK73GH2A243D	CHIP R 24K D 1/10W	
R16			RK73GB2A912J	CHIP R 9.1K J 1/10W		R117			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R18			RK73FB2B472J	CHIP R 4.7K J 1/8W		R118			RK73GH2A512D	CHIP R 5.1K D 1/10W	E1
R19			RK73PB2H102J	CHIP R 1.0K J 1/2W		R118			RK73GH2A512D	CHIP R 5.1K D 1/10W	KR1M1
R20			RK73GB2A223J	CHIP R 22K J 1/10W		R118			RK73GH2A512D	CHIP R 5.1K D 1/10W	K2M5X3
R21			RK73PB2H102J	CHIP R 1.0K J 1/2W		R118			RK73GH2A512D	CHIP R 5.1K D 1/10W	M2X1K1
R22			RK73FB2B472J	CHIP R 4.7K J 1/8W		R120			RK73FB2B223J	CHIP R 22K J 1/8W	
R24			RK73FB2B000J	CHIP R 0.0 J 1/8W	Q1E1	R121,122			RK73GB2A101J	CHIP R 100 J 1/10W	
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	KR1M1	R123			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	K2M5X3	R125-127			RK73EB2E100J	CHIP R 10 J 1/4W	E1
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	M2X1M3	R125-127			RK73EB2E100J	CHIP R 10 J 1/4W	KR1M1
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	M4X2K1	R125-127			RK73EB2E100J	CHIP R 10 J 1/4W	K2M5X3
R26			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R125-127			RK73EB2E100J	CHIP R 10 J 1/4W	M2X1K1
R26			RK73GB2A103J	CHIP R 10K J 1/10W	K2M5X3	R133			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1
R26			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1M3	R133			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1
R26			RK73GB2A103J	CHIP R 10K J 1/10W	M4X2K1	R133			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	KR1M1	R133			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	K2M5X3	R135			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	M2X1M3	R135			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	M4X2K1	R135			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3
R28			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R135			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1
R28			RK73GB2A103J	CHIP R 10K J 1/10W	K2M5X3	R301,302			RK73GB2A303J	CHIP R 30K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1M3	R303			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	M4X2K1	R304			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1M1	R305			RK73GH2A333D	CHIP R 33K D 1/10W	
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	K2M5X3	R306			RK73GH2A222D	CHIP R 2.2K D 1/10W	
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	M2X1M3	R307			RK73GH2A153D	CHIP R 15K D 1/10W	
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	M4X2K1	R308			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R30			RK73EB2E103J	CHIP R 10K J 1/4W		R309			RK73GB2A623J	CHIP R 62K J 1/10W	
R31			RK73GB2A104J	CHIP R 100K J 1/10W		R310			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R32			RK73GB2A473J	CHIP R 47K J 1/10W		R311			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R101			RK73FB2B221J	CHIP R 220 J 1/8W		R312,313			RK73GB2A473J	CHIP R 47K J 1/10W	
R102			RK73GH2A243D	CHIP R 24K D 1/10W		R314			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R103			RK73GH2A432D	CHIP R 4.3K D 1/10W		R315			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R104			RK73GB2A223J	CHIP R 22K J 1/10W		R316			RK73GB2A104J	CHIP R 100K J 1/10W	
R105			RK73FB2B222J	CHIP R 2.2K J 1/8W		R317			RK73GB2A473J	CHIP R 47K J 1/10W	
R106			RK73GB2A823J	CHIP R 82K J 1/10W	KR1Q1	R318			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R106			RK73GB2A823J	CHIP R 82K J 1/10W	K1K2	R319			RK73GB2A104J	CHIP R 100K J 1/10W	
R106			RK73GB2A823J	CHIP R 82K J 1/10W	M3M4X2	R320			RK73GB2A473J	CHIP R 47K J 1/10W	
R107			RK73GB2A103J	CHIP R 10K J 1/10W	KR1Q1	R321			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R107			RK73GB2A103J	CHIP R 10K J 1/10W	K1K2	R401			RK73GB2A104J	CHIP R 100K J 1/10W	
R107			RK73GB2A103J	CHIP R 10K J 1/10W	M3M4X2	R402			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R108			RK73FB2B221J	CHIP R 220 J 1/8W	E1	R403			RK73GB2A103J	CHIP R 10K J 1/10W	
R108			RK73FB2B221J	CHIP R 220 J 1/8W	KR1M1	R404,405			RK73GB2A101J	CHIP R 100 J 1/10W	
R108			RK73FB2B221J	CHIP R 220 J 1/8W	K2M5X3	R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R108			RK73FB2B221J	CHIP R 220 J 1/8W	M2X1K1	R408			RK73GB2A103J	CHIP R 10K J 1/10W	
R109			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R417,418			RK73GB2A101J	CHIP R 100 J 1/10W	
R110			RK73GB2A473J	CHIP R 47K J 1/10W	KR1Q1	R451			RK73GB2A101J	CHIP R 100 J 1/10W	
R110			RK73GB2A473J	CHIP R 47K J 1/10W	K1K2	R453			RK73GB2A101J	CHIP R 100 J 1/10W	
R110			RK73GB2A473J	CHIP R 47K J 1/10W	M3M4X2	R456			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R114			RK73GH2A153D	CHIP R 15K D 1/10W	E1	R462			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1K2M5
R114			RK73GH2A153D	CHIP R 15K D 1/10W	KR1M1	R462			RK73GB2A000J	CHIP R 0.0 J 1/10W	X3E1
R114			RK73GH2A153D	CHIP R 15K D 1/10W	K2M5X3	R463			RK73GH2A471D	CHIP R 470 D 1/10W	
R114			RK73GH2A153D	CHIP R 15K D 1/10W	M2X1K1	R465			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1K2M5

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
R465			RK73GB2A000J	CHIP R 0.0 J 1/10W	X3E1	R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	KR1Q1
R465,466			RK73GB2A000J	CHIP R 0.0 J 1/10W	KM1M2	R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	K1K2
R465,466			RK73GB2A000J	CHIP R 0.0 J 1/10W	M3M4X1	R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	M3M4X2
R465,466			RK73GB2A000J	CHIP R 0.0 J 1/10W	X2R1Q1	R652			RK73EB2E100J	CHIP R 10 J 1/4W	KR1Q1
R467			RK73GH2A471D	CHIP R 470 D 1/10W		R652			RK73EB2E100J	CHIP R 10 J 1/4W	K1K2
R471-473			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1Q1	R652			RK73EB2E100J	CHIP R 10 J 1/4W	M3M4X2
R471-473			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1K2	R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	KR1Q1
R471-473			RK73GB2A000J	CHIP R 0.0 J 1/10W	M3M4X2	R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	K1K2
R475,476			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1	R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	M3M4X2
R475,476			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1	R655			RK73GB2A473J	CHIP R 47K J 1/10W	
R475,476			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3	R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	KR1Q1
R475,476			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1	R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	K1K2
R486			RK73GB2A000J	CHIP R 0.0 J 1/10W		R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	M3M4X2
R500			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1M5	R658			RK73HB1J472J	CHIP R 4.7K J 1/16W	KR1Q1
R500			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1M1	R658			RK73HB1J472J	CHIP R 4.7K J 1/16W	K1K2
R500			RK73GB2A222J	CHIP R 2.2K J 1/10W		R658			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R500			RK73GB2A222J	CHIP R 2.2K J 1/10W	M2Q1M3	R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	KR1Q1
R500			RK73GB2A222J	CHIP R 2.2K J 1/10W	M4K1K2	R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	K1K2
R501			RK73GB2A223J	CHIP R 22K J 1/10W		R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	M3M4X2
R502			RK73GB2A102J	CHIP R 1.0K J 1/10W		R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	KR1Q1
R504,505			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1M5	R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	
R504,505			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1M1	R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	K1K2
R504,505			RK73GB2A222J	CHIP R 2.2K J 1/10W	M2Q1M3	R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	M3M4X2
R504,505			RK73GB2A222J	CHIP R 2.2K J 1/10W	M4K1K2	R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	KR1Q1
R506			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	E1M5	R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	K1K2
R506			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	KR1M1	R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	M3M4X2
R506			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R666-669			RK73GB2A100J	CHIP R 10 J 1/10W	KR1Q1
R506			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	M2Q1M3	R666-669			RK73GB2A100J	CHIP R 10 J 1/10W	K1K2
R509			RK73GB2A000J	CHIP R 0.0 J 1/10W	M4K1K2	R666-669			RK73GB2A100J	CHIP R 10 J 1/10W	M3M4X2
R511			RK73GB2A000J	CHIP R 0.0 J 1/10W		R670			RK73GB2A223J	CHIP R 22K J 1/10W	KR1Q1
R515-517			RK73GB2A000J	CHIP R 0.0 J 1/10W		R670			RK73GB2A223J	CHIP R 22K J 1/10W	K1K2
R598			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	E1	R670			RK73GB2A223J	CHIP R 22K J 1/10W	M3M4X2
R598			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	KR1M1	R673			RK73HB1J103J	CHIP R 10K J 1/16W	KR1Q1
R598			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	K2M5X3	R673			RK73HB1J103J	CHIP R 10K J 1/16W	K1K2
R598			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	M2X1K1	R673			RK73HB1J103J	CHIP R 10K J 1/16W	M3M4X2
R600			RK73EB2E200J	CHIP R 20 J 1/4W		R701-703			RK73EB2E100J	CHIP R 10 J 1/4W	
R601			RK73EB2E100J	CHIP R 10 J 1/4W		R705,706			RK73GB2A223J	CHIP R 22K J 1/10W	
R602			RK73EB2E200J	CHIP R 20 J 1/4W		R707			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R603			RK73EB2E102J	CHIP R 1.0K J 1/4W		R709,710			RK73EB2E101J	CHIP R 100 J 1/4W	
R604			RK73EB2E101J	CHIP R 100 J 1/4W		R711			RK73GB2A680J	CHIP R 68 J 1/10W	
R605			RK73EB2E102J	CHIP R 1.0K J 1/4W		R722,723			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R606-608			RK73EB2E101J	CHIP R 100 J 1/4W		R725			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R609,610			RK73EB2E102J	CHIP R 1.0K J 1/4W		R726			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R611			RK73EB2E101J	CHIP R 100 J 1/4W		R731			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R612			RK73GB2A100J	CHIP R 10 J 1/10W		R755			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	E1
R613			RK73GB2A750J	CHIP R 75 J 1/10W		R755			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	KR1M1
R614			RK73GB2A473J	CHIP R 47K J 1/10W		R755			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	K2M5X3
R615			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1	R755			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	M2X1K1
R615			RK73GB2A000J	CHIP R 0.0 J 1/10W	Q1M3M4	R757-762			RK73HB1J471J	CHIP R 470 J 1/16W	E1
R615			RK73GB2A000J	CHIP R 0.0 J 1/10W	X2E1M5	R757-762			RK73HB1J471J	CHIP R 470 J 1/16W	KR1M1
R615			RK73GB2A000J	CHIP R 0.0 J 1/10W	X3	R757-762			RK73HB1J471J	CHIP R 470 J 1/16W	K2M5X3
R616			RK73GB2A473J	CHIP R 47K J 1/10W	KR1K1	R757-762			RK73HB1J471J	CHIP R 470 J 1/16W	M2X1K1
R616			RK73GB2A473J	CHIP R 47K J 1/10W	K2	R770			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	E1
R617			RK73GB2A101J	CHIP R 100 J 1/10W	KR1K1	R770			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	KR1M1
R617			RK73GB2A101J	CHIP R 100 J 1/10W	K2	R770			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	K2M5X3
R618-620			RK73GB2A100J	CHIP R 10 J 1/10W		R770			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	M2X1K1

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1	D610,611			UDZW6.2(B)	ZENER DIODE	
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	KR1M1	D612,613			UDZW6.8(B)	ZENER DIODE	
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2M5X3	D650,651			UDZW6.8(B)	ZENER DIODE	KR1Q1
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	M2X1K1	D650,651			UDZW6.8(B)	ZENER DIODE	K1K2
R773			RK73GB2A105J	CHIP R 1.0M J 1/10W	E1	D650,651			UDZW6.8(B)	ZENER DIODE	M3M4X2
R773			RK73GB2A105J	CHIP R 1.0M J 1/10W	KR1M1	D652			UDZW6.2(B)	ZENER DIODE	KR1Q1
R773			RK73GB2A105J	CHIP R 1.0M J 1/10W	K2M5X3	D652			UDZW6.2(B)	ZENER DIODE	K1K2
R773			RK73GB2A105J	CHIP R 1.0M J 1/10W	M2X1K1	D652			UDZW6.2(B)	ZENER DIODE	M3M4X2
R780			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1	D653			CVS10A180M	VARIATOR	KR1Q1
R780			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1	D653			CVS10A180M	VARIATOR	K1K2
R780			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3	D653			CVS10A180M	VARIATOR	M3M4X2
R780			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1	D654			1SS355	DIODE	KR1Q1
R781-783			RK73HB1J101J	CHIP R 100 J 1/16W	E1	D654			1SS355	DIODE	K1K2
R781-783			RK73HB1J101J	CHIP R 100 J 1/16W	KR1M1	D654			1SS355	DIODE	M3M4X2
R781-783			RK73HB1J101J	CHIP R 100 J 1/16W	K2M5X3	D657,658			UDZW6.2(B)	ZENER DIODE	KR1Q1
R781-783			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1K1	D657,658			UDZW6.2(B)	ZENER DIODE	K1K2
R784			RK73GB2A104J	CHIP R 100K J 1/10W	E1	D657,658			UDZW6.2(B)	ZENER DIODE	M3M4X2
R784			RK73GB2A104J	CHIP R 100K J 1/10W	KR1M1	D662,663			CVS10A180M	VARIATOR	KR1Q1
R784			RK73GB2A104J	CHIP R 100K J 1/10W	K2M5X3	D662,663			CVS10A180M	VARIATOR	K1K2
R784			RK73GB2A104J	CHIP R 100K J 1/10W	M2X1K1	D662,663			CVS10A180M	VARIATOR	M3M4X2
R785			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1	D701,702			CVL10C270M300	VARIATOR	
R785			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1	D703-705			CVS10A120M	VARIATOR	
R785			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3	D901			DAP202U	DIODE	
R785			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1	D902			1SS355	DIODE	
R832			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1	IC101			M5237ML-CF0J	ANALOGUE IC	
R832			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1	IC103,104			M5237ML-CF0J	ANALOGUE IC	E1
R832			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3	IC103,104			M5237ML-CF0J	ANALOGUE IC	KR1M1
R832			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1	IC103,104			M5237ML-CF0J	ANALOGUE IC	K2M5X3
R837			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1	IC103,104			M5237ML-CF0J	ANALOGUE IC	M2X1K1
R837			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1	IC104			M5237ML-CF0J	ANALOGUE IC	Q1M3M4
R837			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3	IC104			M5237ML-CF0J	ANALOGUE IC	X2
R837			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1	IC106			XC6201P502PR	ANALOGUE IC	
R905			RK73GB2A333J	CHIP R 33K J 1/10W		IC151			LB1836M-TLM-E	ANALOGUE IC	
R906			RK73GB2A123J	CHIP R 12K J 1/10W		IC401			E-TDA7415CB	ANALOGUE IC	
R907			RK73GB2A300J	CHIP R 30 J 1/10W		IC451		*	AN15887A-VTU	ANALOGUE IC	
R908			RK73GB2A223J	CHIP R 22K J 1/10W		IC500			E-TDA7478AD	ANALOGUE IC	E1M5
R909			RK73GB2A221J	CHIP R 220 J 1/10W		IC500			E-TDA7478AD	ANALOGUE IC	KR1M1
R910			RK73GB2A822J	CHIP R 8.2K J 1/10W		IC500			E-TDA7478AD	ANALOGUE IC	M2Q1M3
R911-914			RK73GB2A820J	CHIP R 82 J 1/10W		IC500			E-TDA7478AD	ANALOGUE IC	M4K1K2
R915			RK73GB2A473J	CHIP R 47K J 1/10W		IC600			74AHCT1G08GW	MOS-IC	KR1K1
D1			RM30LF014-102	DIODE		IC600			74AHCT1G08GW	MOS-IC	K2
D2 -4			1SS355	DIODE		IC651			74AHCT08PW	MOS-IC	KR1Q1
D5			UDZW6.2(B)	ZENER DIODE		IC651			74AHCT08PW	MOS-IC	K1K2
D6			1SS355	DIODE		IC651			74AHCT08PW	MOS-IC	M3M4X2
D7			UDZW6.2(B)	ZENER DIODE		IC751			AK7600VF	MOS-IC	E1
D8 ,9			M1F60-6063	DIODE		IC751			AK7600VF	MOS-IC	KR1M1
D10			1SS355	DIODE		IC751			AK7600VF	MOS-IC	K2M5X3
D11 ,12			M1F60-6063	DIODE		IC751			AK7600VF	MOS-IC	M2X1K1
D13			UDZW4.7(B)	ZENER DIODE		IC901			E-TDA7850A	ANALOGUE IC	
D104			UDZW6.8(B)	ZENER DIODE		Q1			DTC124EUA	DIGITAL TRANSISTOR	
D301			DA204U	DIODE		Q2			2SA1576A	TRANSISTOR	
D401-403			DAP202U	DIODE		Q3			DTC124EUA	DIGITAL TRANSISTOR	
D404,405			1SS355	DIODE		Q4			2SC4081	TRANSISTOR	
D601-608			UDZW6.2(B)	ZENER DIODE		Q5			2SB1188(Q,R)	TRANSISTOR	
D609			CVS10A120M	VARIATOR		Q6			2SA1576A	TRANSISTOR	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q7			DTA114EUA	DIGITAL TRANSISTOR	
Q8			DTC143ZUA	DIGITAL TRANSISTOR	
Q9			2SB1188(R)	TRANSISTOR	KR1M1
Q9			2SB1188(R)	TRANSISTOR	K2M5X3
Q9			2SB1188(R)	TRANSISTOR	M2X1M3
Q9			2SB1188(R)	TRANSISTOR	M4X2K1
Q10			2SC4081	TRANSISTOR	KR1M1
Q10			2SC4081	TRANSISTOR	K2M5X3
Q10			2SC4081	TRANSISTOR	M2X1M3
Q10			2SC4081	TRANSISTOR	M4X2K1
Q101			DTC124EUA	DIGITAL TRANSISTOR	
Q102			DTA124EUA	DIGITAL TRANSISTOR	
Q103			DTC124EUA	DIGITAL TRANSISTOR	
Q104			DTA124EUA	DIGITAL TRANSISTOR	
Q105			KTA1046-P	TRANSISTOR	
Q106			DTC124EUA	DIGITAL TRANSISTOR	
Q107			2SB1689	TRANSISTOR	
Q108			DTC143ZUA	DIGITAL TRANSISTOR	KR1Q1
Q108			DTC143ZUA	DIGITAL TRANSISTOR	K1K2
Q108			DTC143ZUA	DIGITAL TRANSISTOR	M3M4X2
Q109			DTC124EUA	DIGITAL TRANSISTOR	E1
Q109			DTC124EUA	DIGITAL TRANSISTOR	KR1M1
Q109			DTC124EUA	DIGITAL TRANSISTOR	K2M5X3
Q109			DTC124EUA	DIGITAL TRANSISTOR	M2X1K1
Q110			DTA124EUA	DIGITAL TRANSISTOR	E1
Q110			DTA124EUA	DIGITAL TRANSISTOR	KR1M1
Q110			DTA124EUA	DIGITAL TRANSISTOR	K2M5X3
Q110			DTA124EUA	DIGITAL TRANSISTOR	M2X1K1
Q111			TPC8110-F	FET	KR1Q1
Q111			TPC8110-F	FET	K1K2
Q111			TPC8110-F	FET	M3M4X2
Q115			DTC124EUA	DIGITAL TRANSISTOR	
Q116			DTA124EUA	DIGITAL TRANSISTOR	
Q117			2SB1449(R)-E	TRANSISTOR	
Q118			KTA1046-P	TRANSISTOR	
Q119			2SC4081	TRANSISTOR	
Q120			2SB1184(Q,R)	TRANSISTOR	E1
Q120			2SB1184(Q,R)	TRANSISTOR	KR1M1
Q120			2SB1184(Q,R)	TRANSISTOR	K2M5X3
Q120			2SB1184(Q,R)	TRANSISTOR	M2X1K1
Q301-305			2SC4081	TRANSISTOR	
Q306			2SA1576A	TRANSISTOR	
Q307			2SC4081	TRANSISTOR	
Q308			2SA1576A	TRANSISTOR	
Q500			DTC143ZUA	DIGITAL TRANSISTOR	
Q501			2SA1577	TRANSISTOR	
Q650,651			2SC4081	TRANSISTOR	KR1Q1
Q650,651			2SC4081	TRANSISTOR	K1K2
Q650,651			2SC4081	TRANSISTOR	M3M4X2
Q653,654			DTC144EUA	DIGITAL TRANSISTOR	KR1Q1
Q653,654			DTC144EUA	DIGITAL TRANSISTOR	K1K2
Q653,654			DTC144EUA	DIGITAL TRANSISTOR	M3M4X2
Q656,657			DTC143ZUA	DIGITAL TRANSISTOR	
Q659			DTC143ZUA	DIGITAL TRANSISTOR	
Q660			DTC114TUA	DIGITAL TRANSISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
TH901			PRF18BE471QS2	POSITIVE RESISTOR	
A500			X86-4030-11	FRONT-END UNIT	KR1X1
A500			X86-4030-11	FRONT-END UNIT	X2K1K2
A500			X86-4030-11	FRONT-END UNIT	X3
A500			X86-4032-70	FRONT-END UNIT	M1M2Q1
A500			X86-4032-70	FRONT-END UNIT	3M4E1
A500			X86-4032-70	FRONT-END UNIT	
A501		*	X89-3062-72	DAUGHTER UNIT	M5 E1
VIDEO UNIT (X35-5010-xx)					
C1			CK73GB1H103K	CHIP C	0.010UF K
C2			CK73GB1H104K	CHIP C	0.10UF K
C3			CK73EB1E106K	CHIP C	10UF K
C4			C93-1383-05	CHIP C	220PF F
C5 -8			CK73GB1A105K	CHIP C	1.0UF K
C11		*	C92-2018-05	ELECTRO	82UF 6.3WV
C12			CK73GB1H103K	CHIP C	0.010UF K
C13			CK73GB1H104K	CHIP C	0.10UF K
C14 ,15			CK73HB1C333K	CHIP C	0.033UF K
C16			CK73HB1E103K	CHIP C	0.010UF K
C17 ,18			CC73HCH1H101J	CHIP C	100PF J
C19			CK73HB1A683K	CHIP C	0.068UF K
C20			CK73HB1E103K	CHIP C	0.010UF K
C21			CK73HB1C333K	CHIP C	0.033UF K
C22 -24			CC73HCH1H221J	CHIP C	220PF J
C25 -28			CC73HCH1H101J	CHIP C	100PF J
C29			CC73HCH1H471J	CHIP C	470PF J
C30		*	C93-1509-05	CHIP C	100PF F
C31			CK73HB0J474K	CHIP C	0.47UF K
C33 -35			CK73HB1E103K	CHIP C	0.010UF K
C36			CK73HB1A104K	CHIP C	0.10UF K
C37			CK73GB0J106M	CHIP C	10UF M
C38			CK73HB0J105K	CHIP C	1.0UF K
C39			CK73GB0J225K	CHIP C	2.2UF K
C40			CK73EB1E105K	CHIP C	1.0UF K
C41 ,42			CK73GB1H103K	CHIP C	0.010UF K
C43			CK73HB1E103K	CHIP C	0.010UF K
C44 ,45			CK73GB1H104K	CHIP C	0.10UF K
C46			CK73HB0J474K	CHIP C	0.47UF K
C47 ,48			CK73GB0J106M	CHIP C	10UF M
C49			CK73HB0J474K	CHIP C	0.47UF K
C50 ,51			CK73GB1H103K	CHIP C	0.010UF K
C52 ,53			CK73GB1H104K	CHIP C	0.10UF K
C54			CK73HB1E103K	CHIP C	0.010UF K
C55 ,56			CK73GB0J106M	CHIP C	10UF M
C57			CK73FB1C105K	CHIP C	1.0UF K
C58			CC73GCH1H102J	CHIP C	1000PF J
C59			C93-1383-05	CHIP C	220PF F
C60			CK73HB1H472K	CHIP C	4700PF K
C61			CK73HB1A104K	CHIP C	0.10UF K
C62			CK73HB0J105K	CHIP C	1.0UF K
C63			CK73HB0J474K	CHIP C	0.47UF K
C64			CK73HB1E103K	CHIP C	0.010UF K
C65 -67			CC73GCH1H102J	CHIP C	1000PF J
C68			CK73HB1E223K	CHIP C	0.022UF K

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5010-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C69 ,70 C71 C72 ,73 C74 C75		*	CK73GB1H103K CK73GB1H104K CC73GCH1H102J CK73GB1H104K C92-2017-05	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 1000PF J CHIP C 0.10UF K ELECTRO 100UF 4WV		C222 C223 C224 C225 C226-235			CK73HB1A104K CK73EB1E105K CK73HB1A104K CK73GB0J106M CK73HB1A104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 0.10UF K	
C76 ,77 C78 ,79 C80 ,81 C82 C83 ,84			CC73GCH1H102J CK73FB1C106K CK73GB1H103K CK73FB1C106K CK73GB1H104K	CHIP C 1000PF J CHIP C 10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.10UF K		C236 C237,238 C239-245 C246 C247			CK73HB1E103K CK73HB1A104K CK73HB1E103K CK73GB0J106M CK73HB1A104K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 10UF M CHIP C 0.10UF K	
C85 C86 -88 C89 -92 C93 C95			C92-2020-05 CK73EB1E106K C93-1283-05 CK73HB1A104K CK73FB0J226M	ELECTRO 33UF 16WV CHIP C 10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 22UF M		C249 C250-254 C255 C256 C257			CK73GB0J106M CK73HB1A104K CC73HCH1H150J CK73GB0J106M CC73HCH1H180J	CHIP C 10UF M CHIP C 0.10UF K CHIP C 15PF J CHIP C 10UF M CHIP C 18PF J	
C96 C97 C98 C99 C100		*	CK73FB1E475K CK73FB1C106K CK73EB1E106K C93-1458-05 CK73HB1A104K	CHIP C 4.7UF K CHIP C 10UF K CHIP C 10UF K CHIP C 1500PF F CHIP C 0.10UF K		C258-263 C265,266 C267-273 C274,275 C277-279			CK73HB1A104K CK73FB0J226M CK73HB1A104K CK73FB0J226M CC73HCH1H101J	CHIP C 0.10UF K CHIP C 22UF M CHIP C 0.10UF K CHIP C 22UF M CHIP C 100PF J	
C101 C103 C104 C105 C107		*	CK73EB1E106K C93-1273-05 C93-1465-05 CK73EB1E106K CK73FB0J226M	CHIP C 10UF K CHIP C 15PF J CHIP C 0.015UF F CHIP C 10UF K CHIP C 22UF M		C281,282 C283-285 C286-288 C289 C290			CK73HB1E103K CK73GB0J106M CK73FB0J226M CK73GB0J106M CK73HB1E103K	CHIP C 0.010UF K CHIP C 10UF M CHIP C 22UF M CHIP C 10UF M CHIP C 0.010UF K	
C108,109 C110,111 C112 C113 C114			CK73FB1C106K CK73EB1E106K CK73GB1H104K CK73GB1H103K CK73EB1E106K	CHIP C 10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 10UF K		C291 C292 C293 C294 C295			CK73HB1A104K CK73HB1E103K CK73HB1A104K CK73HB1E103K CK73GB1H104K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C115 C116,117 C118,119 C120 C121			CK73FB1E475K CK73GB1H103K CK73GB1H104K CK73GB1H103K CK73GB1H104K	CHIP C 4.7UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K		C296 C297 C298 C299 C300			CK73HB1E103K CK73GB1H104K CK73HB1E103K CK73HB1A104K CK73HB1E103K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C122 C123 C124-127 C128 C129			CK73GB1H103K CK73FB1E475K CK73EB1E106K CK73GB1A105K CK73FB1C106K	CHIP C 0.010UF K CHIP C 4.7UF K CHIP C 10UF K CHIP C 1.0UF K CHIP C 10UF K		C301 C391-397 C398 C399 C404			CK73GB1H104K CC73HCH1H102J CK73HB1A104K CK73GB0J106M CK73FB1C106K	CHIP C 0.10UF K CHIP C 1000PF J CHIP C 0.10UF K CHIP C 10UF M CHIP C 10UF K	
C130 C131 C132 C133 C201			CK73FB1E475K CK73FB0J226M CK73FB1E475K CK73GB0J106M CK73HB1A104K	CHIP C 4.7UF K CHIP C 22UF M CHIP C 4.7UF K CHIP C 10UF M CHIP C 0.10UF K		C406 C407 C408 C409 C410			CC73HCH1H560J CK73FB1C106K CK73HB1E103K CK73FB1C106K CK73HB1E103K	CHIP C 56PF J CHIP C 10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.010UF K	
C203 C204 C205,206 C207 C208-213			CK73HB1A104K CK73GB1A105K CK73HB1A104K CK73GB0J106M CK73HB1A104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 0.10UF K		C411,412 C413 C414 C415 C416			CK73FB1C106K CK73GB1H104K CC73HCH1H101J CK73FB1C106K CK73GB0J106M	CHIP C 10UF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 10UF K CHIP C 10UF M	
C214 C215,216 C217 C218-220 C221			CC73HCH1H820J CK73HB1A104K CK73EB1E105K CK73HB1A104K CK73GB0J106M	CHIP C 82PF J CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF M		C417 C418 C419 C500 C501,502			CK73HB1E103K CK73GB0J106M CK73HB1E103K CK73FB0J106K CK73HB1E103K	CHIP C 0.010UF K CHIP C 10UF M CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.010UF K	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5010-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
C600 C603 C700 C701,702 C703			CK73GB1H103K CK73FB0J226M CC73HCH1H101J CK73GB0J106M CK73FB0J226M	CHIP C 0.010UF K CHIP C 22UF M CHIP C 100PF J CHIP C 10UF M CHIP C 22UF M		R2 R3 R4 R5 R7			RK73HH1J434D RK73HB1J103J RK73HH1J104D RK73GH2A752D RK73HB1J100J	CHIP R 430K D 1/16W CHIP R 10K J 1/16W CHIP R 100K D 1/16W CHIP R 7.5K D 1/10W CHIP R 10 J 1/16W	
C704-710 C711 C713			CC73HCH1H151J CK73HB1A104K CK73GB0J106M	CHIP C 150PF J CHIP C 0.10UF K CHIP C 10UF M		R8 R9 ,10 R11 ,12 R13 R14			RK73EB2E100J RK73HB1J101J RK73FB2B000J RK73HH1J303D RK73HH1J203D	CHIP R 10 J 1/4W CHIP R 100 J 1/16W CHIP R 0.0 J 1/8W CHIP R 30K D 1/16W CHIP R 20K D 1/16W	
CN1 CN2 CN200 CN201 CN500			E41-2985-05 E41-2642-05 E41-2359-05 E41-2594-05 E41-2088-05	FLAT CABLE CONNECTOR PIN ASSY PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR		R15 R16 R17 R18 R19 ,20		*	RK73HH1J123D RK73HH1J302D RK73HB1J303J RK73HB1J162J RK73HB1J103J	CHIP R 12K D 1/16W CHIP R 3.0K D 1/16W CHIP R 30K J 1/16W CHIP R 1.6K J 1/16W CHIP R 10K J 1/16W	
CN600 J1 ,2 J1 ,2 J1 ,2 J1 ,2		*	E41-3102-05 E04-0433-05 E04-0433-05 E04-0433-05 E04-0433-05	FLAT CABLE CONNECTOR RF COAXIAL CABLE RECEPTACLE RF COAXIAL CABLE RECEPTACLE RF COAXIAL CABLE RECEPTACLE RF COAXIAL CABLE RECEPTACLE	E1 KR1M1 K2M5X3 M2X1K1	R22 R23 R24 R25 R27			RK73HB1J473J RK73HB1J102J RK73FB2B000J RK73HB1J203J RK73HH1J163D	CHIP R 47K J 1/16W CHIP R 1.0K J 1/16W CHIP R 0.0 J 1/8W CHIP R 20K J 1/16W CHIP R 16K D 1/16W	
L1 L2 L3 L4 -6 L7		*	L33-2370-05 L33-2520-05 L33-2369-05 L33-2517-05 L33-2513-05	CHOKE COIL CHOKE COIL CHOKE COIL CHOKE COIL CHOKE COIL		R28 R29 R30 R31 R32		*	RK73HH1J202D RK73HH1J333D RK73HH1J513D RK73HH1J683D RK73HH1J163D	CHIP R 2.0K D 1/16W CHIP R 33K D 1/16W CHIP R 51K D 1/16W CHIP R 68K D 1/16W CHIP R 16K D 1/16W	
L8 L9 L10 L11 L12		*	L33-2534-05 L33-2514-05 L33-2351-05 L41-1005-39 L92-0319-05	CHOKE COIL CHOKE COIL CHOKE COIL SMALL FIXED INDUCTOR (10UH/2520) CHIP FERRITE		R33 R34 -38 R39 R40 R41		*	RK73HH1J513D RK73HB1J000J RK73HB1J103J RK73HB1J682J RK73HB1J103J	CHIP R 51K D 1/16W CHIP R 0.0 J 1/16W CHIP R 10K J 1/16W CHIP R 6.8K J 1/16W CHIP R 10K J 1/16W	
L13 L14 L15 L16 ,17 L201-203			L41-1005-39 L19-0788-05 L33-2454-05 L41-1005-39 L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520) TRANSFORMER FOR CONVERTER CHOKE COIL SMALL FIXED INDUCTOR (10UH/2520) SMALL FIXED INDUCTOR (10UH/2520)		R43 R45 R46 R47 ,48 R50		*	RK73HB1J103J RK73EB2E220J RK73HB1J103J RK73HB1J220J RK73HB1J101J	CHIP R 10K J 1/16W CHIP R 22 J 1/4W CHIP R 10K J 1/16W CHIP R 22 J 1/16W CHIP R 100 J 1/16W	
L204 L205 L207-212 L214 L215			L41-8281-15 L41-1005-39 L41-1005-39 L41-1005-39 L92-0364-05	SMALL FIXED INDUCTOR (0.82U) SMALL FIXED INDUCTOR (10UH/2520) SMALL FIXED INDUCTOR (10UH/2520) SMALL FIXED INDUCTOR (10UH/2520) CHIP FERRITE		R51 R52 R53 ,54 R55 R56			RK73HB1J103J RK73HB1J512J RK73HB1J220J RK73HB1J512J RK73HB1J563J	CHIP R 10K J 1/16W CHIP R 5.1K J 1/16W CHIP R 22 J 1/16W CHIP R 5.1K J 1/16W CHIP R 56K J 1/16W	
L216,217 L218,219 L220,221 L224 L225-228			L92-0319-05 L41-1005-39 L92-0319-05 L92-0378-05 L92-0373-05	CHIP FERRITE SMALL FIXED INDUCTOR (10UH/2520) CHIP FERRITE CHIP FERRITE CHIP FERRITE		R57 R58 R59 R60 R61			RK73HB1J363J RK73HB1J512J RK73HB1J123J RK73GH2A301D RK73HB1J100J	CHIP R 36K J 1/16W CHIP R 5.1K J 1/16W CHIP R 12K J 1/16W CHIP R 300 D 1/10W CHIP R 10 J 1/16W	
L229 L248 L249,250 L401-405 L600		*	L92-0378-05 L92-0667-05 L92-0668-05 L41-1005-39 L41-1005-39	CHIP FERRITE CHIP FERRITE CHIP FERRITE SMALL FIXED INDUCTOR (10UH/2520) SMALL FIXED INDUCTOR (10UH/2520)		R62 R63 R64 R65 R66 -69			RK73EB2E100J RK73HB1J103J RK73HB1J105J RK73EB2E100J RK73HB1J220J	CHIP R 10 J 1/4W CHIP R 10K J 1/16W CHIP R 1.0M J 1/16W CHIP R 10 J 1/4W CHIP R 22 J 1/16W	
X200		*	L77-2996-05	CRYSTAL RESONATOR (14.31818MHZ)		R70 R71 R72 ,73 R74 R75 ,76			RK73HH1J274D RK73HH1J473D RK73EB2E100J RK73HH1J473D RK73HH1J103D	CHIP R 270K D 1/16W CHIP R 47K D 1/16W CHIP R 10 J 1/4W CHIP R 47K D 1/16W CHIP R 10K D 1/16W	
CP201-203 CP207-211 CP212-215 CP217-220 R1			RK74HB1J101J RK74HB1J101J RK74HB1J560J RK74HB1J820J RK73GH2A301D	CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 56 J 1/16W CHIP-COM 82 J 1/16W CHIP R 300 D 1/10W							

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5010-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R78			RK73HB1J472J	CHIP R 4.7K J 1/16W		R250			RK73HB1J101J	CHIP R 100 J 1/16W	
R79		*	RK73HH1J243D	CHIP R 24K D 1/16W		R251			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R80			RK73HB1J302J	CHIP R 3.0K J 1/16W		R253-255			RK73HB1J103J	CHIP R 10K J 1/16W	
R81			RK73HB1J472J	CHIP R 4.7K J 1/16W		R256			RK73HH1J153D	CHIP R 15K D 1/16W	
R82			RK73HH1J681D	CHIP R 680 D 1/16W		R257			RK73HH1J123D	CHIP R 12K D 1/16W	
R83			RK73HB1J272J	CHIP R 2.7K J 1/16W		R258			RK73HB1J103J	CHIP R 10K J 1/16W	
R84			RK73HB1J332J	CHIP R 3.3K J 1/16W		R260			RK73HH1J123D	CHIP R 12K D 1/16W	
R85			RK73HH1J912D	CHIP R 9.1K D 1/16W		R261			RK73HH1J273D	CHIP R 27K D 1/16W	
R86			RK73GB2A122J	CHIP R 1.2K J 1/10W		R262			RK73HB1J103J	CHIP R 10K J 1/16W	
R87			RK73HB1J272J	CHIP R 2.7K J 1/16W		R266			RK73HB1J104J	CHIP R 100K J 1/16W	
R88			RK73HH1J153D	CHIP R 15K D 1/16W		R267			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R89			RK73HH1J622D	CHIP R 6.2K D 1/16W		R268			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R90			RK73HB1J000J	CHIP R 0.0 J 1/16W		R269			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R91		*	RK73HH1J621D	CHIP R 620 D 1/16W		R270			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R92			RK73FB2B000J	CHIP R 0.0 J 1/8W		R273			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R93			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R274			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R94 ,95			RK73FB2B000J	CHIP R 0.0 J 1/8W		R275			RK73HH1J303D	CHIP R 30K D 1/16W	
R96 ,97			RK73GB2A000J	CHIP R 0.0 J 1/10W		R278			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R98			RK73FB2B000J	CHIP R 0.0 J 1/8W		R279			RK73HB1J101J	CHIP R 100 J 1/16W	
R99 ,100			RK73GB2A000J	CHIP R 0.0 J 1/10W		R280			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R102			RK73HB1J103J	CHIP R 10K J 1/16W		R281			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R103			RK73HB1J101J	CHIP R 100 J 1/16W		R296,297			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R105-107			RK73HB1J000J	CHIP R 0.0 J 1/16W		R298-300			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R108			RK73HB1J101J	CHIP R 100 J 1/16W		R304-307			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R110,111			RK73GB2A000J	CHIP R 0.0 J 1/10W		R317-319			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R112			RK73HB1J101J	CHIP R 100 J 1/16W		R320,321			RK73HB1J101J	CHIP R 100 J 1/16W	
R113			RK73HB1J102J	CHIP R 1.0K J 1/16W		R323,324			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R114,115			RK73HB1J103J	CHIP R 10K J 1/16W		R326,327			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R116			RK73HB1J101J	CHIP R 100 J 1/16W		R328,329			RK73HB1J560J	CHIP R 56 J 1/16W	
R117			RK73HB1J102J	CHIP R 1.0K J 1/16W		R330			RK73HB1J470J	CHIP R 47 J 1/16W	
R118			RK73HB1J103J	CHIP R 10K J 1/16W		R331,332			RK73HB1J820J	CHIP R 82 J 1/16W	
R119			RK73GB2A000J	CHIP R 0.0 J 1/10W		R333,334			RK73HB1J101J	CHIP R 100 J 1/16W	
R121,122			RK73GB2A000J	CHIP R 0.0 J 1/10W		R336			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R123			RK73HB1J473J	CHIP R 47K J 1/16W		R338-344			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R126,127			RK73GB2A000J	CHIP R 0.0 J 1/10W		R345			RK73HH1J473D	CHIP R 47K D 1/16W	
R200,201			RK73HB1J101J	CHIP R 100 J 1/16W		R347			RK73HB1J103J	CHIP R 10K J 1/16W	
R202			RK73HB1J330J	CHIP R 33 J 1/16W		R348			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R203			RK73HB1J472J	CHIP R 4.7K J 1/16W		R350			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R205			RK73GB2A000J	CHIP R 0.0 J 1/10W		R351			RK73HB1J101J	CHIP R 100 J 1/16W	
R206			RK73HB1J330J	CHIP R 33 J 1/16W		R352			RK73EB2E392J	CHIP R 3.9K J 1/4W	
R208			RK73HB1J472J	CHIP R 4.7K J 1/16W		R353,354			RK73HB1J101J	CHIP R 100 J 1/16W	
R211			RK73HB1J000J	CHIP R 0.0 J 1/16W		R355			RK73HB1J103J	CHIP R 10K J 1/16W	
R214,215			RK73HB1J101J	CHIP R 100 J 1/16W		R404		*	RK73HH1J392D	CHIP R 3.9K D 1/16W	
R216,217			RK73HB1J330J	CHIP R 33 J 1/16W		R405			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R218-223			RK73HB1J101J	CHIP R 100 J 1/16W		R406			RK73HH1J123D	CHIP R 12K D 1/16W	
R227			RK73HB1J103J	CHIP R 10K J 1/16W		R408			RK73HB1J101J	CHIP R 100 J 1/16W	
R231			RK73HB1J103J	CHIP R 10K J 1/16W		R409			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R232			RK73HB1J123J	CHIP R 12K J 1/16W		R411			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R234			RK73HB1J103J	CHIP R 10K J 1/16W		R413,414			RK73FB2B470J	CHIP R 47 J 1/8W	
R235			RK73HB1J181J	CHIP R 180 J 1/16W		R415			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R236-245			RK73HB1J103J	CHIP R 10K J 1/16W		R416			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R246			RK73HB1J000J	CHIP R 0.0 J 1/16W		R417			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R247			RK73HB1J101J	CHIP R 100 J 1/16W		R418			RK73HH1J153D	CHIP R 15K D 1/16W	
R248			RK73HB1J330J	CHIP R 33 J 1/16W		R419			RK73HH1J103D	CHIP R 10K D 1/16W	
R249			RK73HB1J000J	CHIP R 0.0 J 1/16W		R420			RK73HH1J752D	CHIP R 7.5K D 1/16W	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5010-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
R421			RK73HH1J103D	CHIP R 10K D 1/16W	
R422			RK73HH1J332D	CHIP R 3.3K D 1/16W	
R423			RK73HH1J103D	CHIP R 10K D 1/16W	
R425			RK73HB1J103J	CHIP R 10K J 1/16W	
R426			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R500			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R501,502			RK73HB1J333J	CHIP R 33K J 1/16W	
R504-507			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R512-515			RK73GB2A100J	CHIP R 10 J 1/10W	
R604-607			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R610-613			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R614			RK73EB2E101J	CHIP R 100 J 1/4W	
R615			RK73EB2E121J	CHIP R 120 J 1/4W	
R616-619			RK73EB2E101J	CHIP R 100 J 1/4W	
R620-623			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R624-626			RK73GH2A331D	CHIP R 330 D 1/10W	
R627-629			RK73EB2E100J	CHIP R 10 J 1/4W	
R632			RK73HB1J221J	CHIP R 220 J 1/16W	
R633			RK73EB2E100J	CHIP R 10 J 1/4W	
R634-636			RK73GH2A361D	CHIP R 360 D 1/10W	
R640,641			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R642-648			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R649,650			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R651			RK73GH2A331D	CHIP R 330 D 1/10W	
R652			RK73GH2A361D	CHIP R 360 D 1/10W	
R653-656			RK73HB1J473J	CHIP R 47K J 1/16W	
D1			1SS355	DIODE	
D2			EC31QS04AG	DIODE	
D3			MA2S784-F	DIODE	
D4			DAP202U	DIODE	
D5			1SS355	DIODE	
D6			EC31QS04AG	DIODE	
D7			EP05Q04	DIODE	
D8			EP05Q06	DIODE	
D9			EP05Q04	DIODE	
D10			DA204U	DIODE	
D12			DA204U	DIODE	
D100			DA204U	DIODE	
D200			DA204U	DIODE	
D500			DA204U	DIODE	
D501-504			CVS10A120M	VARISTOR	
D600,601			DA204U	DIODE	
D603,604			CVL10C270M300	VARISTOR	
D607-612			CVS10A120M	VARISTOR	
D613-616			CVS10A180M	VARISTOR	
IC1			XC6219B332PR	ANALOGUE IC	
IC2			XC6219B182PR	ANALOGUE IC	
IC3		*	OZ9922ITN-A11	ANALOGUE IC	
IC4			SI-3012KM	ANALOGUE IC	
IC5			XC6201P332PR	ANALOGUE IC	
IC200		*	AT25DF321-8B1	ROM IC	
IC201		*	MST7702-A-LF	MOS-IC	
IC203		*	M12L641645TIR	DRAM IC	
IC400			TA75W558FU-F	ANALOGUE IC	

Ref. No.	Ad	New	Parts No.	Description	Destination
IC401			NJM2107F-ZB	ANALOGUE IC	
Q1			DTC114YE	DIGITAL TRANSISTOR	
Q2		*	TPC8020-H	FET	
Q3			DTA114YE	DIGITAL TRANSISTOR	
Q4		*	TPCF8104-F	FET	
Q6 -8		*	TPCP8201-F	DUAL FET	
Q9			DTA114YE	DIGITAL TRANSISTOR	
Q10			DTC114YE	DIGITAL TRANSISTOR	
Q11			2SC4081	TRANSISTOR	
Q12			2SA1576A	TRANSISTOR	
Q13			2SB1188(R)	TRANSISTOR	
Q14			2SC4081	TRANSISTOR	
Q15			2SA1576A	TRANSISTOR	
Q16			2SC4081	TRANSISTOR	
Q17		*	TPCF8104-F	FET	
Q18			2SC4097	TRANSISTOR	
Q19			DTC114YE	DIGITAL TRANSISTOR	
Q20			DTA114YE	DIGITAL TRANSISTOR	
Q21			2SA1577	TRANSISTOR	
Q22			2SA1576A	TRANSISTOR	
Q23			2SC4081	TRANSISTOR	
Q24			DTC114YE	DIGITAL TRANSISTOR	
Q25			DTA114YE	DIGITAL TRANSISTOR	
Q26			DTC114YE	DIGITAL TRANSISTOR	
Q27			DTA114YE	DIGITAL TRANSISTOR	
Q28			DTC114YE	DIGITAL TRANSISTOR	
Q200			DTC114YE	DIGITAL TRANSISTOR	
Q201			2SC4081	TRANSISTOR	
Q401			2SC4097	TRANSISTOR	
Q402			2SA1577	TRANSISTOR	
Q403			UMZ1N	TRANSISTOR	
Q500			DTC114YE	DIGITAL TRANSISTOR	
Q501			DTC143ZE	DIGITAL TRANSISTOR	
Q502			DTA143ZE	DIGITAL TRANSISTOR	
Q503			DTC143ZE	DIGITAL TRANSISTOR	
Q504			DTA143ZE	DIGITAL TRANSISTOR	
Q505			DTC114YE	DIGITAL TRANSISTOR	
Q600-603			2SC4081	TRANSISTOR	
DVD UNIT (X37-1250-00) IN DVD MECHA.					
C3			CK73HB1A104K	CHIP C 0.10UF K	
C4			CC73HCH1H471J	CHIP C 470PF J	
C5 -7			CK73HB1E103K	CHIP C 0.010UF K	
C8			CC73HCH1H471J	CHIP C 470PF J	
C9			CK73HB0J105K	CHIP C 1.0UF K	
C11 ,12			CK73HB1E103K	CHIP C 0.010UF K	
C13			CK73HB1H472K	CHIP C 4700PF K	
C14			CK73GB0J106M	CHIP C 10UF M	
C15			CK73HB1A104K	CHIP C 0.10UF K	
C16			CK73GB0J106M	CHIP C 10UF M	
C17			CK73GB0J475K	CHIP C 4.7UF K	
C18			CK73FB0J226M	CHIP C 22UF M	
C21			CK73GB0J106M	CHIP C 10UF M	
C22 ,23			CK73GB0J475K	CHIP C 4.7UF K	
C50			CK73HB1E103K	CHIP C 0.010UF K	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)

X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)

K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)

E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1250-00) IN DVD MECHA.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C51			CK73HB1A104K	CHIP C 0.10UF K		CN3			E41-2596-05	FLAT CABLE CONNECTOR	
C52			CK73HB1E223K	CHIP C 0.022UF K		L1			L92-0365-05	CHIP FERRITE	
C53			CC73HCH1H470J	CHIP C 47PF J		L5			L92-0365-05	CHIP FERRITE	
C54			CC73HCH1H102J	CHIP C 1000PF J		X2			L77-3803-05	CRYSTAL RESONATOR (16.897849MHZ)	
C55			CC73HCH1H100D	CHIP C 10PF D							
C56			CC73HCH1H102J	CHIP C 1000PF J		CP2 -4			RK74HB1J103J	CHIP-COM 10K J 1/16W	
C57			CC73HCH1E681J	CHIP C 680PF J		CP5 -9			RK74HB1J330J	CHIP-COM 33 J 1/16W	
C58			CK73HB1H682K	CHIP C 6800PF K		CP10			RK74HB1J820J	CHIP-COM 82 J 1/16W	
C60 ,61			CK73HB1A104K	CHIP C 0.10UF K		CP11			RK74HB1J103J	CHIP-COM 10K J 1/16W	
C62			CC73HCH1H102J	CHIP C 1000PF J		R1			RK73HB1J103J	CHIP R 10K J 1/16W	
C63			CC73HCH1H331J	CHIP C 330PF J		R3 ,4			RK73HB1J103J	CHIP R 10K J 1/16W	
C64			CK73HB1H222K	CHIP C 2200PF K		R5 ,6			RK73HH1J123D	CHIP R 12K D 1/16W	
C65			CC73HCH1E681J	CHIP C 680PF J		R7			RK73HH1J333D	CHIP R 33K D 1/16W	
C66			CK73HB1H152K	CHIP C 1500PF K		R8 ,9			RK73HB1J103J	CHIP R 10K J 1/16W	
C67 ,68			CC73HCH1H102J	CHIP C 1000PF J		R10			RK73HB1J163J	CHIP R 16K J 1/16W	
C69 -72			CC73HCH1H151J	CHIP C 150PF J		R11			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C73 -82			CK73HB1A104K	CHIP C 0.10UF K		R13			RK73HB1J103J	CHIP R 10K J 1/16W	
C84			CK73HB0J105K	CHIP C 1.0UF K		R16			RK73HB1J103J	CHIP R 10K J 1/16W	
C85			CK73HB1A104K	CHIP C 0.10UF K		R17			RK73HB1J271J	CHIP R 270 J 1/16W	
C90			CK73HB1E103K	CHIP C 0.010UF K		R19			RK73HB1J301J	CHIP R 300 J 1/16W	
C93 -95			CK73HB1A104K	CHIP C 0.10UF K		R21 ,22			RK73HH1J103D	CHIP R 10K D 1/16W	
C97			CK73HB1A104K	CHIP C 0.10UF K		R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C99			CK73HB1A104K	CHIP C 0.10UF K		R50 ,51			RK73HB1J510J	CHIP R 51 J 1/16W	
C100			CK73FB0J226M	CHIP C 22UF M		R52			RK73HH1J153D	CHIP R 15K D 1/16W	
C101			CK73GB0J475K	CHIP C 4.7UF K		R53			RK73HB1J105J	CHIP R 1.0M J 1/16W	
C103			CK73FB0J226M	CHIP C 22UF M		R54			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C104			CK73GB0J475K	CHIP C 4.7UF K		R55			RK73HB1J103J	CHIP R 10K J 1/16W	
C120,121			CK73HB1E223K	CHIP C 0.022UF K		R56			RK73HH1J472D	CHIP R 4.7K D 1/16W	
C143,144			CC73HCH1H100D	CHIP C 10PF D		R57 ,58			RK73HB1J202J	CHIP R 2.0K J 1/16W	
C202			CK73FB0J226M	CHIP C 22UF M		R59 ,60			RK73HB1J103J	CHIP R 10K J 1/16W	
C207,208			CK73HB1A104K	CHIP C 0.10UF K		R63			RK73HB1J103J	CHIP R 10K J 1/16W	
C210			CK73HB1A104K	CHIP C 0.10UF K		R64 ,65			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C212			CK73HB1A104K	CHIP C 0.10UF K		R81			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C213			CK73HB1H332K	CHIP C 3300PF K		R83 ,84			RK73HB1J473J	CHIP R 47K J 1/16W	
C214,215			CK73HB1A104K	CHIP C 0.10UF K		R85			RK73HB1J223J	CHIP R 22K J 1/16W	
C216			CC73HCH1H471J	CHIP C 470PF J		R86			RK73HB1J103J	CHIP R 10K J 1/16W	
C217			CK73HB1A104K	CHIP C 0.10UF K		R87			RK73HB1J105J	CHIP R 1.0M J 1/16W	
C218			CK73HB1C473K	CHIP C 0.047UF K		R88			RK73HB1J222J	CHIP R 2.2K J 1/16W	
C219-222			CK73HB1A104K	CHIP C 0.10UF K		R89 ,90			RK73HB1J123J	CHIP R 12K J 1/16W	
C223			CK73HB0J105K	CHIP C 1.0UF K		R91			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C224			CK73HB1A104K	CHIP C 0.10UF K		R92			RK73HB1J273J	CHIP R 27K J 1/16W	
C225			CK73GB0J475K	CHIP C 4.7UF K		R96			RK73HB1J103J	CHIP R 10K J 1/16W	
C227			CK73FB0J226M	CHIP C 22UF M		R98			RK73HB1J202J	CHIP R 2.0K J 1/16W	
C434			CK73GB0J106M	CHIP C 10UF M		R101			RK73HH1J273D	CHIP R 27K D 1/16W	
C435			CK73HB1E103K	CHIP C 0.010UF K		R105			RK73HB1J103J	CHIP R 10K J 1/16W	
C440-442			CK73FB0J226M	CHIP C 22UF M		R120			RK73HB1J103J	CHIP R 10K J 1/16W	
C446			CC73HCH1H101J	CHIP C 100PF J		R121			RK73HB1J820J	CHIP R 82 J 1/16W	
C447,448			CC73HCH1H102J	CHIP C 1000PF J		R122			RK73HB1J103J	CHIP R 10K J 1/16W	
C449,450			CK73HB1H472K	CHIP C 4700PF K		R123			RK73HB1J330J	CHIP R 33 J 1/16W	
C451			CC73HCH1H102J	CHIP C 1000PF J		R124-126			RK73HB1J820J	CHIP R 82 J 1/16W	
C452-454			CK73HB0J105K	CHIP C 1.0UF K		R150,151			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C455			CK73FB0J226M	CHIP C 22UF M		R152,153			RK73HB1J104J	CHIP R 100K J 1/16W	
						R154,155			RK73HB1J103J	CHIP R 10K J 1/16W	
CN1			E41-2594-05	FLAT CABLE CONNECTOR		R158,159			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
CN2			E41-2114-15	FLAT CABLE CONNECTOR		R160			R92-3350-05	CHIP R 2.2 F 1/10W	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1250-00) IN DVD MECHA.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R162,163 R164,165 R167 R168 R169			RK73HB1J104J RK73HH1J101D RK73HH1J113D RK73HH1J273D RK73HB1J125J	CHIP R 100K J 1/16W CHIP R 100 D 1/16W CHIP R 11K D 1/16W CHIP R 27K D 1/16W CHIP R 1.2M J 1/16W	
R255 R257 R260 R261 R262			R92-5112-05 RK73HH1J202D RK73HH1J132D RK73HH1J203D RK73HB1J821J	CHIP R 4.7 F 1/10W CHIP R 2.0K D 1/16W CHIP R 1.3K D 1/16W CHIP R 20K D 1/16W CHIP R 820 J 1/16W	
R263 R272 R273 R274 R275			RK73HB1J242J RK73HH1J682D RK73HH1J122D RK73HH1J682D RK73HH1J122D	CHIP R 2.4K J 1/16W CHIP R 6.8K D 1/16W CHIP R 1.2K D 1/16W CHIP R 6.8K D 1/16W CHIP R 1.2K D 1/16W	
R278 R284 R288 R289 R297			R92-5112-05 RK73HB1J000J R92-3416-05 RK73HB1J000J RK73HB1J000J	CHIP R 4.7 F 1/10W CHIP R 0.0 J 1/16W CHIP R 0.27 1/2W CHIP R 0.0 J 1/16W CHIP R 0.0 J 1/16W	
R298,299 R300			RK73HB1J330J RK73HB1J103J	CHIP R 33 J 1/16W CHIP R 10K J 1/16W	
S1 S2			S68-0911-15 S68-0917-05	PUSH SWITCH PUSH SWITCH	
D1 D5 ,6 D8 IC1 IC3		*	1SS402-F 015AZ5.1-F(Y) 1SS387-F AN22022ABV -	DIODE ZENER DIODE DIODE ANALOGUE IC ROM IC	
IC4 IC5 IC10 IC11 IC13		*	MN103S71F S1000N28I4T1G AN41250A-VB - NJM2845DL115B	MOS-IC ANALOGUE IC ANALOGUE IC ROM IC ANALOGUE IC	
IC14 Q1 -4 Q12 ,13 Q16			NJM2845DL133B DTA143XE 2SB1709 UM6K1N	ANALOGUE IC DIGITAL TRANSISTOR TRANSISTOR DUAL FET	
DAUGHTER UNIT (X89-3062-72)					
C1 C2 C3 C4 C5			CC73GCH1H180J CC73GCH1H070D CC73GCH1H150J CC73GCH1H180J CC73GCH1H390J	CHIP C 18PF J CHIP C 7.0PF D CHIP C 15PF J CHIP C 18PF J CHIP C 39PF J	E1 E1 E1 E1 E1
C6 C7 C8 C10 -12 C13			CC73GCH1H020C CC73GCH1H120J CK73FB1C105K CC73GCH1H102J CC73GCH1H221J	CHIP C 2.0PF C CHIP C 12PF J CHIP C 1.0UF K CHIP C 1000PF J CHIP C 220PF J	E1 E1 E1 E1 E1
C14 C15 ,16 C17			CC73GCH1H030C CC73GCH1H560J CC73GCH1H102J	CHIP C 3.0PF C CHIP C 56PF J CHIP C 1000PF J	E1 E1 E1
CN2			E41-3009-05	PIN ASSY	E1

The IC3, and IC11 in the DVD unit (X37-1250-00) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6400-00).

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
W1 W2		*	E30-6884-05 E30-6885-05	CORD WITH PLUG CORD WITH PLUG	E1 E1
L1 L2 L3 L4 ,5 L6			L41-2705-33 L41-1588-18 L41-1805-33 L41-1588-18 L19-0825-05	SMALL FIXED INDUCTOR (27U) SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (18U) SMALL FIXED INDUCTOR BALUN TRANSFORMER	E1 E1 E1 E1 E1
L8			L41-1888-18	SMALL FIXED INDUCTOR (0.18U)	E1
R1 R3 R4 R5 R6			RK73GB2A104J RK73GB2A562J RK73GB2A332J RK73GB2A331J RK73GB2A391J	CHIP R 100K J 1/10W CHIP R 5.6K J 1/10W CHIP R 3.3K J 1/10W CHIP R 330 J 1/10W CHIP R 390 J 1/10W	E1 E1 E1 E1 E1
R7 ,8 R10 R11 R12 R13			RK73GB2A330J RK73GB2A431J RK73GB2A270J RK73GB2A431J RK73GB2A151J	CHIP R 33 J 1/10W CHIP R 430 J 1/10W CHIP R 27 J 1/10W CHIP R 430 J 1/10W CHIP R 150 J 1/10W	E1 E1 E1 E1 E1
R14 R15 R17			RK73GB2A431J RK73GB2A270J RK73GB2A431J	CHIP R 430 J 1/10W CHIP R 27 J 1/10W CHIP R 430 J 1/10W	E1 E1 E1
D1 Q1			IMSA-6801-E 2SC3357-A	SURGE ABSORBER TRANSISTOR	E1 E1
DVD MECHANISM ASSY (X92-6400-00) (DVS-8220W)					
1 2 3 4	1A 2B 1A 3A		A10-5523-01+ A10-5524-01+ A10-5525-01+ A10-5526-02+	CHASSIS CHASSIS CHASSIS CHASSIS	
7 8 9 10 12	1B 1B 1B 1B 2B		D10-7080-02+ D10-7081-02+ D10-7082-02+ D10-7083-02+ D10-7084-02+	ARM ARM LEVER LEVER SLIDER	
13 14 15 25 27	2A 2B 2B 2B 2A		D10-7085-02+ D10-7086-03+ D10-7087-02+ D10-7092-04+ D10-7091-04+	ARM ARM ARM SLIDER ASSY LEVER	
28 31 32 33 34	2B 2B 2B 2B 2B		D12-0640-02+ D13-3029-04+ D13-3030-04+ D13-3031-04+ D13-3032-04+	CAM GEAR GEAR GEAR GEAR	
35 36 40 41 42	2B 2B 2A 2A 2A		D13-3033-04+ D13-3034-04+ D13-3038-04+ D13-3039-04+ D13-3040-04+	GEAR GEAR GEAR GEAR GEAR	
43 53 54 55	1B 1B 2A 2A		D14-1034-04+ D21-2487-24 D39-0275-05 D39-0276-05	ROLLER SHAFT DAMPER DAMPER	

M1: DDX7034BT M2: DDX7034BTM M3: DDX6034 M4: DDX6034M M5: DNX7340BT (Other Areas)
X1: DDX7034BT X2: DDX6034 X3: DNX7340BT (Australia) R1: DDX7034BT (Latin America)
K: DDX714 K1: DNX7140 K2: DNX7000EX (North America)
E1: DNX7240BT (Europe) Q1: DDX6054 (Russian)

△Indicates safety critical components.

PARTS LIST

DVD MECHANISM ASSY (X92-6400-00) (DVS-8220W)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
60	3A		F09-3019-03	SHEET							
65	2B		G01-4734-04	EXTENSION SPRING							
66	1B		G01-3299-04+	EXTENSION SPRING							
67	2A		G01-3300-14+	TORSION COIL SPRING							
68	2B		G01-4601-04+	EXTENSION SPRING							
69	1B		G01-4738-04	EXTENSION SPRING							
70	1B		G01-4740-04	TORSION COIL SPRING							
74	2B		G01-4609-14+	TORSION COIL SPRING							
75	1B		G02-1904-03+	FLAT SPRING							
79	2A		J22-0890-01+	MOUNTING HARDWARE							
80	3B		J22-0891-01+	MOUNTING HARDWARE							
A	1A		N09-6382-05	MACHINE SCREW (M1.7X2.0)							
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4 P-TITE)							
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW)							
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)							
93	2A		T99-0471-05	MAGNET							
96	1B		X94-2080-00	ROLLER ASSY							
98	2A		X94-2060-00	TRAVERSE ASSY (PICKUP, SPINDLE)							
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)							

M1: DDX7034BT **M2:** DDX7034BTM **M3:** DDX6034 **M4:** DDX6034M **M5:** DNX7340BT (Other Areas)
X1: DDX7034BT **X2:** DDX6034 **X3:** DNX7340BT (Australia) **R1:** DDX7034BT (Latin America)
K: DDX714 **K1:** DNX7140 **K2:** DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1:** DDX6054 (Russian)

△ Indicates safety critical components.