



KDC-4022/422/6023

EXPLODED VIEW (MECHANISM)

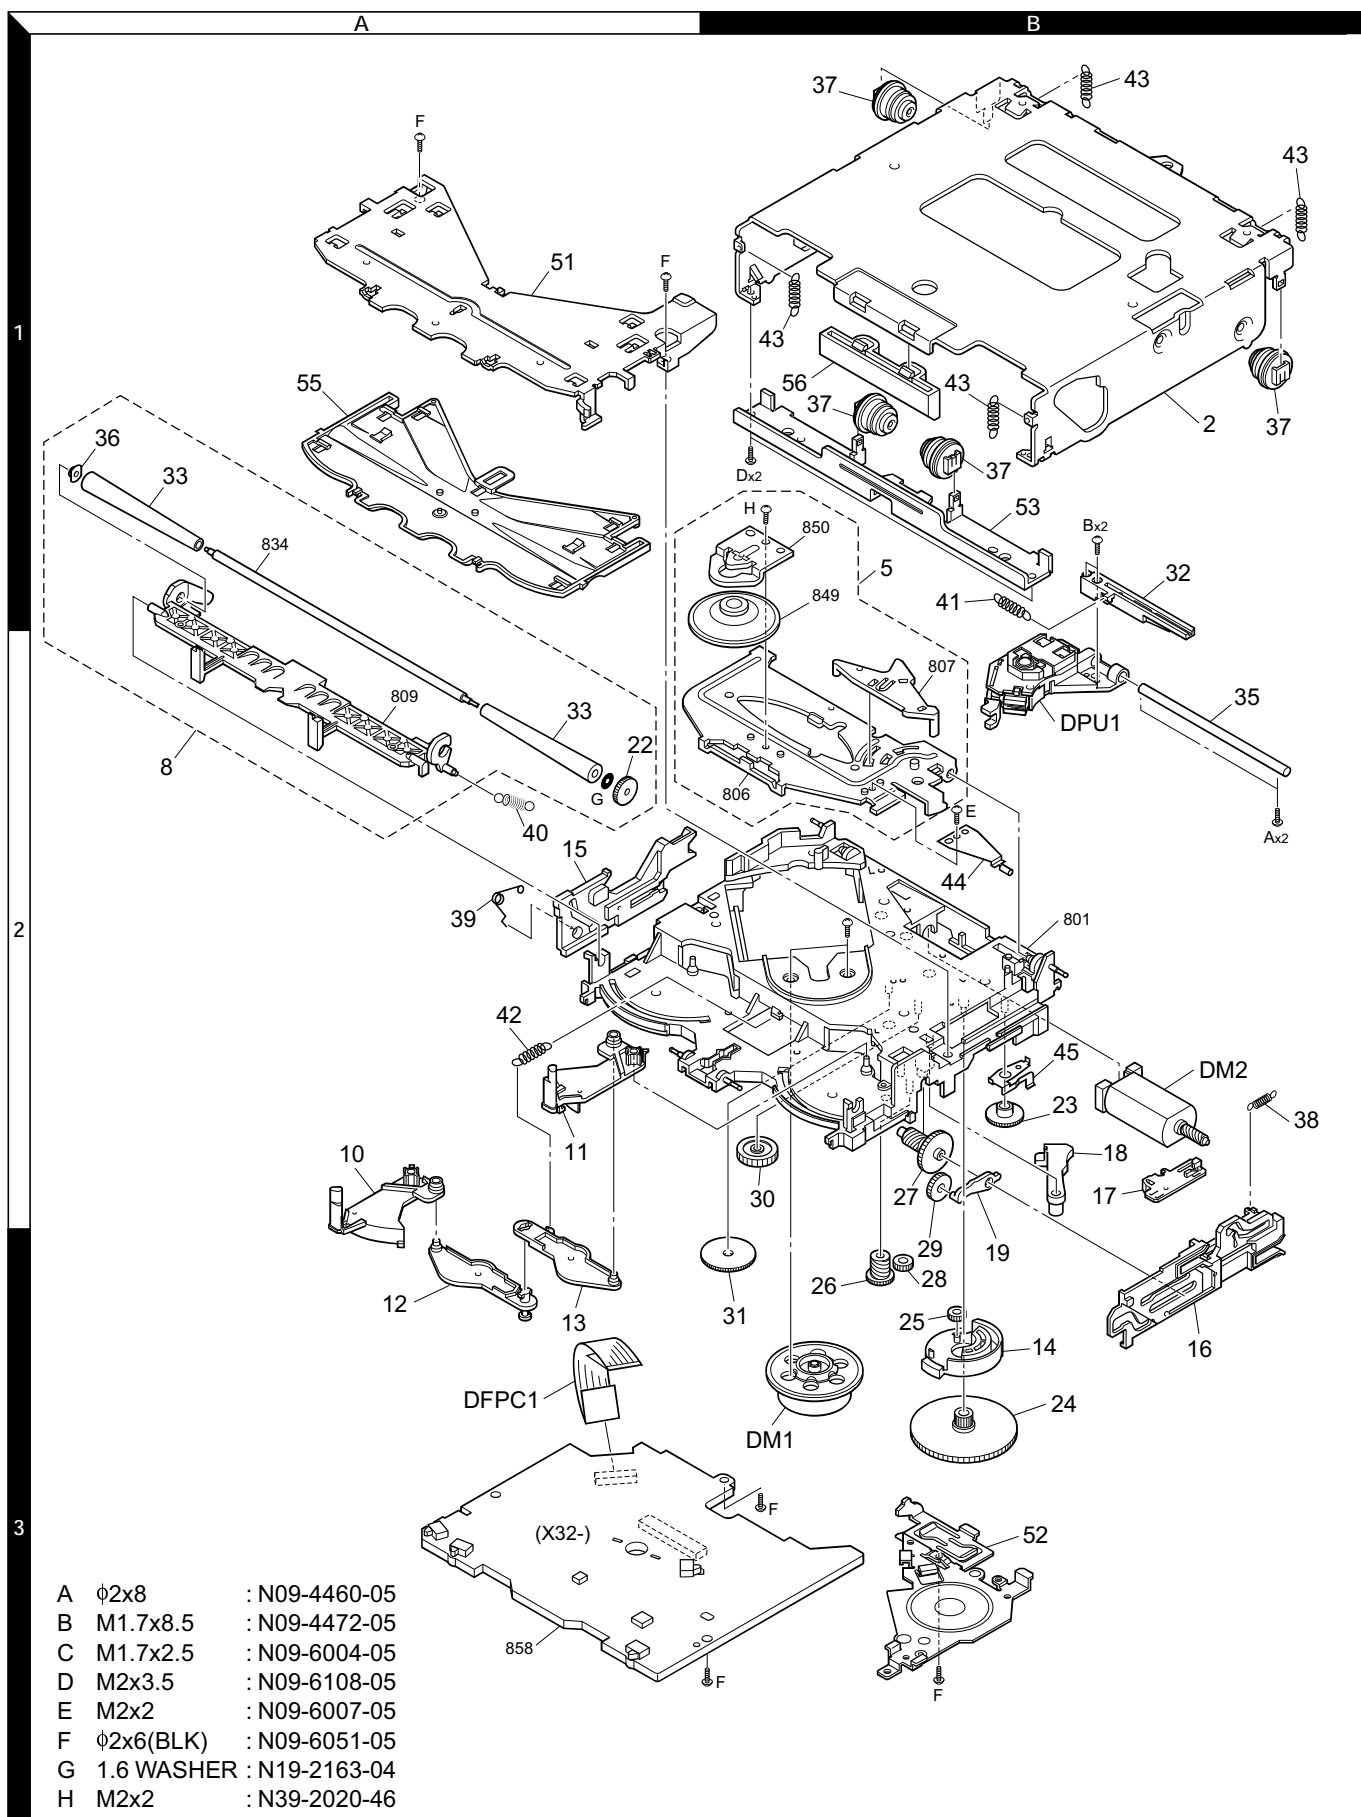

KDC-4022/422/6023

EXPLODED VIEW (UNIT)

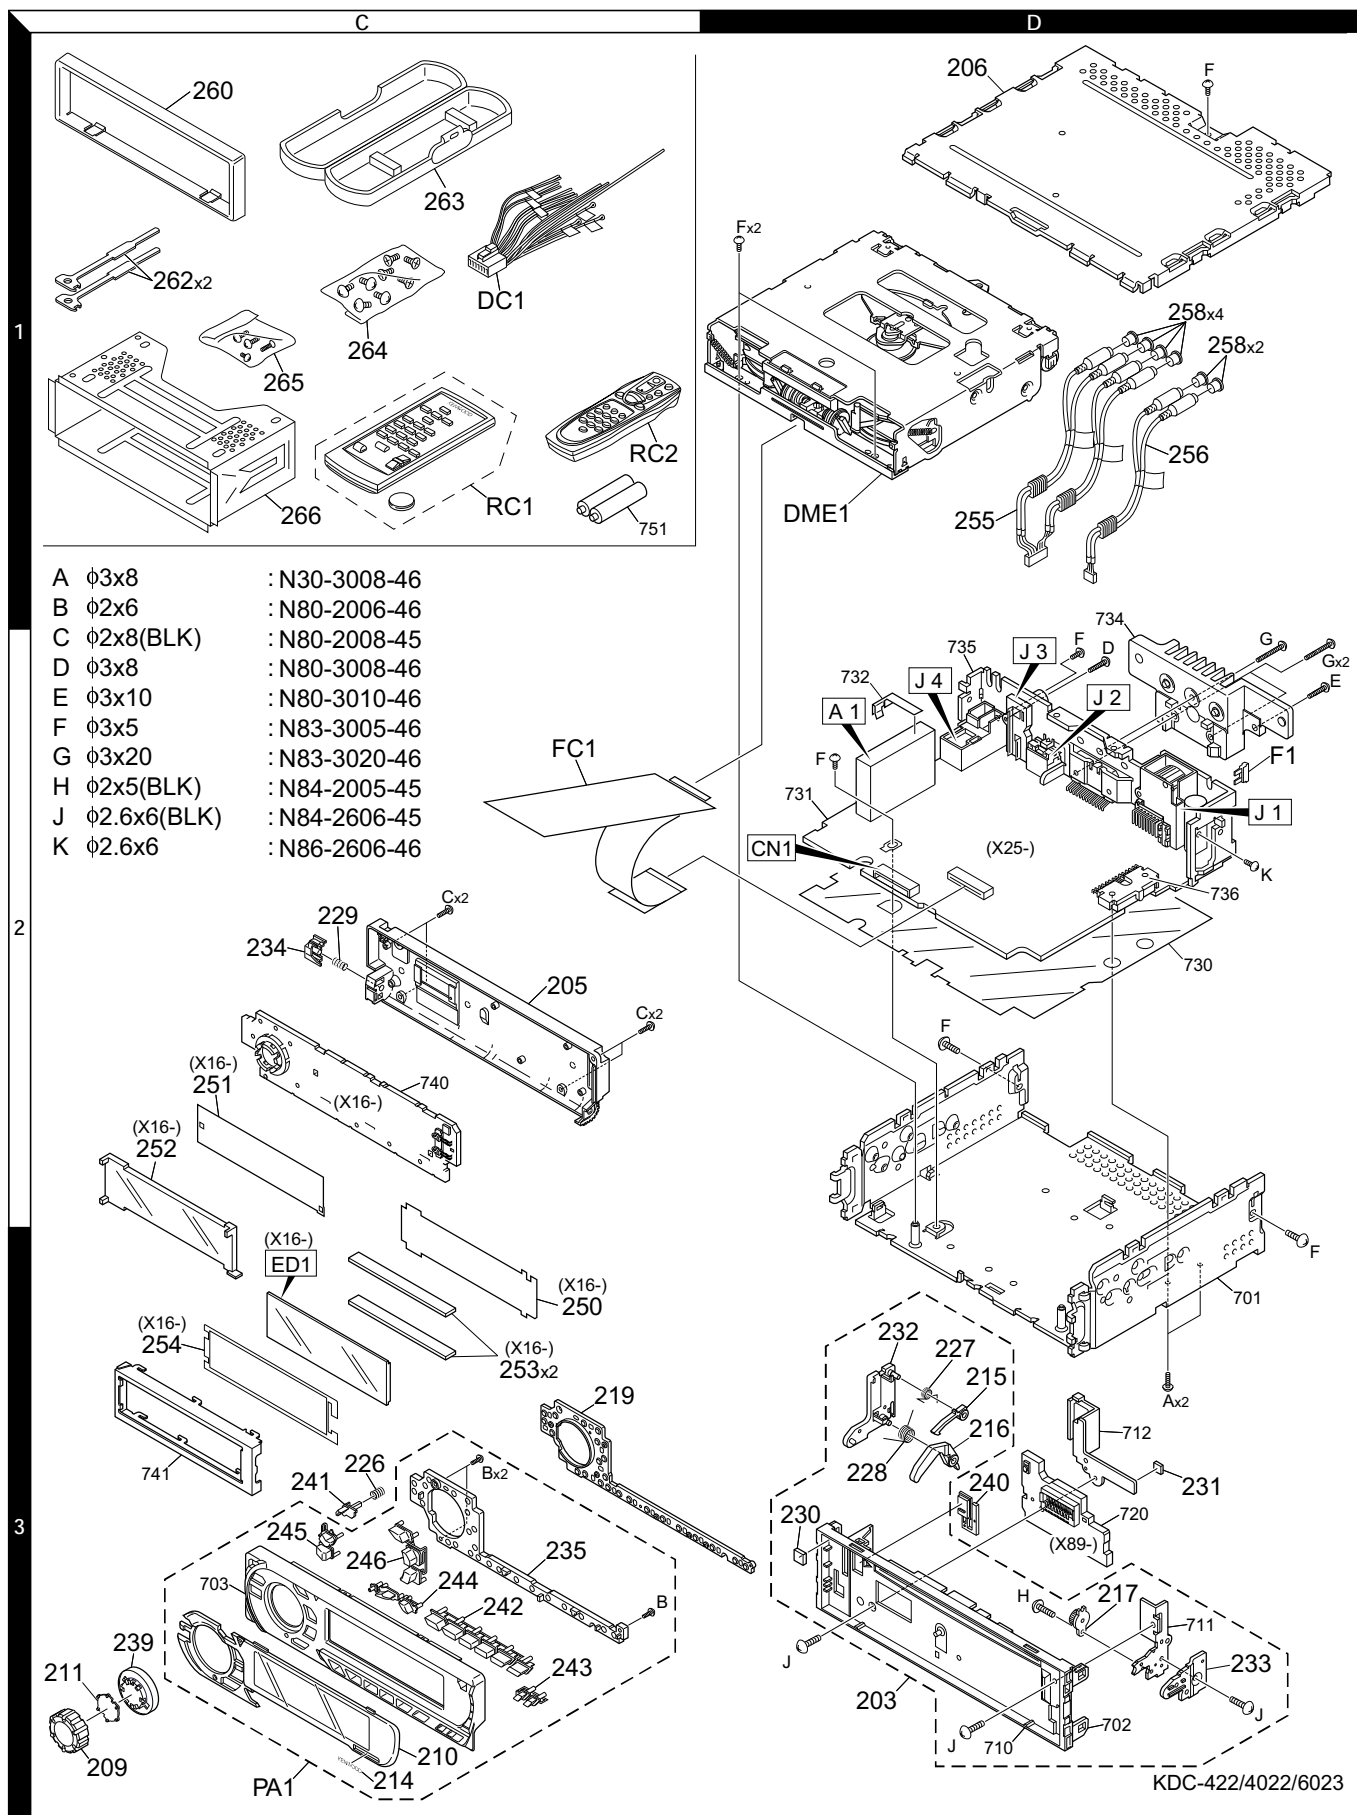

KDC-4022/422/6023

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
KDC-4022/422/6023					
203	3D	*	A22-2982-02	SUB PANEL ASSY	K3
205	2C		A46-1778-01	REAR COVER	
206	1D	*	A52-0829-02	TOP PLATE	
263	1C		A02-1486-13	PLASTIC CABINET ASSY	
PA1	3C	*	A64-2823-02	PANEL ASSY	
PA1	3C	*	A64-2832-02	PANEL ASSY	M
RC1	1C	*	A64-2853-02	PANEL ASSY	K4
RC2	1C	*	A70-2026-05	REMOTE CONTROLLER ASSY(RC-410)	M
		*	A70-2040-05	REMOTE CONTROLLER ASSY(RC-505)	K3K4
-			B46-0100-50	WARRANTY CARD	K3K4
-			B46-0606-04	ID CARD	
-			B46-0612-14	ID CARD	
-			B46-0653-03	USER CARD	M
-		*	B64-2516-00	INST. MANUAL (ENG,FRE,SPA)	K3K4
-		*	B64-2517-00	INST. MANUAL (ENG,T-CHI)	M
-		*	B64-2518-00	INST. MANUAL (ARABIC)	M
209	3C	*	B09-0529-03	CAP	K3
210	3C	*	B10-4303-01	FRONT GLASS	
210	3C	*	B10-4309-01	FRONT GLASS	
210	3C	*	B10-4326-01	FRONT GLASS	K4
211	3C	*	B19-2200-04	LIGHTING BOARD	M
214	3C		B43-1284-04	BADGE	
260	1C		B07-3022-02	ESCUTCHEON	
215	3D		D10-4730-03	LEVER	
216	3D		D10-4731-03	LEVER	
217	3D		D39-0255-05	DAMPER	K3K4
262	1C		D10-4589-04	LEVER	
219	3C	*	E29-1927-02	CONDUCTIVE RUBBER	
255	1D	*	E30-6228-05	CORD WITH PINPLUG	
256	1D	*	E30-6229-05	CORD WITH PINPLUG	
DC1	1C		E30-4940-05	DC CORD	M
FC1	2C		E39-0438-05	FLAT CABLE (24PIN)	
258	1D		F29-0626-04	INSULATING COVER	
F1	2D		F52-0006-05	FUSE(MINI BLADE TYPE : 10A)	
226	3C		G01-3129-04	COMPRESSION SPRING	K3
227	3D	*	G01-3171-04	TORSION COIL SPRING	
228	3D	*	G01-3172-04	TORSION COIL SPRING	
229	2C	*	G01-3173-04	COMPRESSION SPRING	
230	3D	*	G13-1267-04	CUSHION	
231	3D	*	G13-1268-04	CUSHION	K4
-			H10-4856-12	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-2777-03	ITEM CARTON CASE	
-		*	H54-2778-03	ITEM CARTON CASE	M
-		*	H54-2785-03	ITEM CARTON CASE	M
232	3D	*	J19-5203-03	HOLDER	K3
233	3D	*	J19-5204-03	HOLDER	
234	2C	*	J19-5205-03	HOLDER	
235	3C	*	J19-5206-02	HOLDER	
266	1C		J21-9716-03	MOUNTING HARDWARE ASSY	

K3: KDC-422

K4: KDC-4022

M: KDC-6023

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
239	3C	*	K23-1072-13	KNOB (VOL)	M K3K4 K3 K4 M
240	3D	*	K24-4000-03	KNOB (EJECT)	
241	3C	*	K24-4002-04	KNOB (DOOR)	
242	3C	*	K25-1521-03	KNOB (1-6)	
243	3C	*	K25-1522-04	KNOB (DISP)	
244	3C	*	K25-1523-03	KNOB (PLAY,STOP)	
245	3C	*	K25-1524-03	KNOB (FM,AM)	
246	3C	*	K25-1525-03	KNOB (SRC,SKIP)	
264	1C	*	N99-1719-05	SCREW SET	
265	1C		N99-1730-15	SCREW SET	
A	3D		N30-3008-46	PAN HEAD MACHINE SCREW	
B	3C		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-45	PAN HEAD TAPTITE SCREW	
F	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
H	3D		N84-2005-45	PAN HEAD TAPTITE SCREW	
J	3D		N84-2606-45	PAN HEAD TAPTITE SCREW	
-		*	X16-2020-10	SWITCH UNIT	
-		*	X16-2020-12	SWITCH UNIT	
-		*	X25-9800-11	ELECTRIC UNIT	
-		*	X25-9800-12	ELECTRIC UNIT	
-		*	X25-9800-21	ELECTRIC UNIT	
-		*	X89-2570-10	DAUGHTER UNIT	
DME1	1D	*	X92-4660-00	MECHANISM ASSY (DXM-6060W)	
SWITCH UNIT (X16-2020-10/12)					
250	3C	*	B11-1396-04	OPTICAL DIFFUSER	K3K4 M
251	2C	*	B11-1397-04	REFLECTION SHEET	
252	2C	*	B19-2199-03	LIGHTING BOARD	
D1 -14			B30-1566-05	LED(1608,RED)	
D1 -14			B30-1605-05	LED(2COLOR PG/RED)	
D15 ,16			B30-1564-05	LED(1608,BLUE)	
D17 ,18			B30-1571-05	LED(WHITE)	
ED1			B38-1103-05	LIQUID CRYSTAL	
C1			CK73GB1H102K	CHIP C 1000PF K	
C2 -5			CK73GB1C104K	CHIP C 0.10UF K	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7			CK73FB1A225K	CHIP C 2.2UF K	
C8 -13			CK73GB1H103K	CHIP C 0.010UF K	
253	3C		E29-1925-04	CONDUCTIVE RUBBER	M
J1			E59-0829-05	RECTANGULAR PLUG	
254	3C	*	F09-1823-04	SHEET	
CP1			R90-0714-05	MULTI-COMP 10K X4	
CP3			R90-1016-05	MULTI-COMP 470 X4	
R1			RK73GB2A303J	CHIP R 30K J 1/10W	
R2 -5			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R6			RK73GB2A473J	CHIP R 47K J 1/10W	
R9			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R10			RK73GB2A751J	CHIP R 750 J 1/10W	
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R13			RK73GB2A101J	CHIP R 100 J 1/10W	
R15			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R16 -19			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R20 -23			RK73FB2B331J	CHIP R 330 J 1/8W	

△ indicates safety critical components.

KDC-4022/422/6023

PARTS LIST

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
R24 ,25 R26 R27 ,28			RK73FB2B361J RK73FB2B271J RK73GB2A472J	CHIP R 360 J 1/8W CHIP R 270 J 1/8W CHIP R 4.7K J 1/10W	
S24			T99-0446-05	ROTARY ENCODER	
D19 IC1 IC2 Q1 Q2			MA3091-L LC75808W PNA4S22M 2SC4081 DTA114EUA	ZENER DIODE MOS-IC ANALOGUE IC TRANSISTOR DIGITAL TRANSISTOR	
Q3 -5 Q5			2SC4081 2SC4081	TRANSISTOR TRANSISTOR	M K3K4
ELECTRIC UNIT (X25-9800-11/12/21)					
C1 C2 C3 C4 -6 C20			C90-5242-05 CK73GB1H103K CK73GB1H102K CK73GB1H103K C90-2962-05	ELECTRO 3300UF 16WV CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K ELECTRO 100UF 16WV	△
C21 C22 ,23 C24 ,25 C26 C27			CE04NW1A101M CE04NW1E100M CE04NW1C100M CE04NW1E100M CE04CW1H100M	ELECTRO 100UF 10WV ELECTRO 10UF 25WV ELECTRO 10UF 16WV ELECTRO 10UF 25WV ELECTRO 10UF 50WV	
C28 C29 C32 C33 C34			C90-2980-05 CE04NW1C100M CK73GB1E223K CE04NW1H010M CK73GB1H103K	ELECTRO 220UF 16WV ELECTRO 10UF 16WV CHIP C 0.022UF K ELECTRO 1.0UF 50WV CHIP C 0.010UF K	
C51 ,52 C111 C119 C163 C201,202			CK73GB1H103K CK73GB1H102K CK73GB1H103K CK73GB1A224K CE04NW1HR47M	CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.22UF K ELECTRO 0.47UF 50WV	
C203 C204 C205 C206 C207,208			CK73GB1H223K CK73GB1H103K CK73GB1A474K CC73GCH1H151J CE04NW1H010M	CHIP C 0.022UF K CHIP C 0.010UF K CHIP C 0.47UF K CHIP C 150PF J ELECTRO 1.0UF 50WV	K4M
C209 C210 C211 C212,213 C214,215			CE04NW1H2R2M CK73GB1H103K CE04NW1A470M CK73GB1C104K CK73GB1H103K	ELECTRO 2.2UF 50WV CHIP C 0.010UF K ELECTRO 47UF 10WV CHIP C 0.10UF K CHIP C 0.010UF K	
C216,217 C218-221 C251-254 C255 C256			CE04NW1H010M CE04NW1H0R1M C90-5296-05 CE04NW1HR47M CE04NW1C220M	ELECTRO 1.0UF 50WV ELECTRO 0.1UF 50WV NP-ELECT 0.22UF 50WV ELECTRO 0.47UF 50WV ELECTRO 22UF 16WV	
C257 C258 C301,302 C303 C304			CK73GB1C104K CE04NW1H010M CE04NW1HR47M CE04NW1A470M CK73GB1H103K	CHIP C 0.10UF K ELECTRO 1.0UF 50WV ELECTRO 0.47UF 50WV ELECTRO 47UF 10WV CHIP C 0.010UF K	
C351-354			CE04NW1C100M	ELECTRO 10UF 16WV	

K3: KDC-422 K4: KDC-4022 M: KDC-6023

SWITCH UNIT (X16-2020-10/12)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
C355 C356,357 C358,359 C360 C401-404			CE04NW1A470M CK73GB1H103K CE04NW1HR47M CK73GB1H103K CK73GB1C104K	ELECTRO 47UF 10WV CHIP C 0.010UF K ELECTRO 0.47UF 50WV CHIP C 0.010UF K CHIP C 0.10UF K	M M M
C405 C406 C407 C408 C409			CK73GB0J105K CK73GB1C104K CC73GCH1H220J CC73GCH1H270J CE04CW0J470M	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 22PF J CHIP C 27PF J ELECTRO 47UF 6.3WV	
C500 C501,502 C503			CK73FB1A225K CK73GB1H103K CK73GB1H472K	CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 4700PF K	
CN1 CN2 CN3 CN4 J1			E41-0167-05 E41-0168-05 E40-3238-05 E40-3241-05 E58-0863-15	PIN ASSY (18PIN) FLAT CABLE CONNECTOR (24PIN) PIN ASSY (3PIN) PIN ASSY (6PIN) RECTANGULAR RECEPTACLE	K3K4 M
J2 J3 J4 P1 W1 -9			E56-0834-05 E63-0887-05 E04-0312-05 E23-0745-05 E31-0001-00	CYLINDRICAL RECEPTACLE PIN JACK RF COAXIAL CABLE RECEPTACLE TERMINAL JUMPER WIRE	
W11 W16 -27 W29 -34			E31-0001-00 E31-0001-00 E31-0001-00	JUMPER WIRE JUMPER WIRE JUMPER WIRE	
L1 L2 L3 L6 -8 L10 ,11			L33-1170-05 L33-1926-05 L33-1123-05 L40-4795-91 L40-4795-91	CHOKE COIL ASSY CHOKE COIL LINE FILTER COIL SMALL FIXED INDUCTOR(4.7UH,J) SMALL FIXED INDUCTOR(4.7UH,J)	
X1 X2			L78-0821-05 L77-2738-05	RESONATOR (20MHz) CRYSTAL RESONATOR (32.768KHz)	
D E F G K	2D 2D 2D 2D 2D		N80-3008-46 N80-3010-46 N83-3005-46 N83-3020-46 N86-2606-46	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
R1 R2 R3 R4 R5 ,6			RK73GB2A823J RK73GB2A363J RK73GB2A104J RK73FB2B203J RK73GB2A103J	CHIP R 82K J 1/10W CHIP R 36K J 1/10W CHIP R 100K J 1/10W CHIP R 20K J 1/8W CHIP R 10K J 1/10W	
R7 R8 R9 R10 R11			RK73GB2A223J RD14DB2H332J RD14BB2C333J RK73GB2A223J RK73GB2A104J	CHIP R 22K J 1/10W SMALL-RD 3.3K J 1/2W RD 33K J 1/6W CHIP R 22K J 1/10W CHIP R 100K J 1/10W	
R12 R13 R21 R22 ,23 R24 -28			RK73GB2A473J RK73GB2A562J RK73FB2B152J RD14BB2C472J RK73GB2A103J	CHIP R 47K J 1/10W CHIP R 5.6K J 1/10W CHIP R 1.5K J 1/8W RD 4.7K J 1/6W CHIP R 10K J 1/10W	

△ indicates safety critical components.

KDC-4022/422/6023

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9800-11/12/21)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
R32			RK73GB2A104J	CHIP R 100K J 1/10W		R351,352			RK73GB2A361J	CHIP R 360 J 1/10W	
R34			RK73EB2E103J	CHIP R 10K J 1/4W		R355,356			RK73GB2A223J	CHIP R 22K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W		R357,358			RK73EB2E181J	CHIP R 180 J 1/4W	
R36			RK73GB2A222J	CHIP R 2.2K J 1/10W		R359,360			RK73GB2A361J	CHIP R 360 J 1/10W	
R51 ,52			RK73GB2A222J	CHIP R 2.2K J 1/10W		R361,362			RK73GB2A223J	CHIP R 22K J 1/10W	
R53 -56			RK73GB2A102J	CHIP R 1.0K J 1/10W		R363,364			RK73EB2E181J	CHIP R 180 J 1/4W	
R57 ,58			RK73GB2A222J	CHIP R 2.2K J 1/10W		R365			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	M
R59			RK73GB2A101J	CHIP R 100 J 1/10W		R373			RK73GB2A102J	CHIP R 1.0K J 1/10W	M
R60			RK73GB2A222J	CHIP R 2.2K J 1/10W		R376,377			RK73GB2A912J	CHIP R 9.1K J 1/10W	M
R61 ,62			RK73GB2A104J	CHIP R 100K J 1/10W		R378,379			RK73FB2B102J	CHIP R 1.0K J 1/8W	M
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W		R401-408			RK73GB2A104J	CHIP R 100K J 1/10W	
R64 ,65			RK73GB2A104J	CHIP R 100K J 1/10W		R409			RK73GB2A153J	CHIP R 15K J 1/10W	
R67 ,68			RK73GB2A471J	CHIP R 470 J 1/10W		R410			RK73GB2A104J	CHIP R 100K J 1/10W	K3K4
R101			RK73GB2A102J	CHIP R 1.0K J 1/10W		R410,411			RK73GB2A104J	CHIP R 100K J 1/10W	M
R102			RK73GB2A471J	CHIP R 470 J 1/10W		R412			RK73GB2A104J	CHIP R 100K J 1/10W	K3K4
R103			RK73GB2A472J	CHIP R 4.7K J 1/10W		R415,416			RK73GB2A104J	CHIP R 100K J 1/10W	
R104			RK73GB2A471J	CHIP R 470 J 1/10W		R419			RK73GB2A104J	CHIP R 100K J 1/10W	K3M
R105			RK73GB2A472J	CHIP R 4.7K J 1/10W		R419,420			RK73GB2A104J	CHIP R 100K J 1/10W	K4
R106			RK73GB2A222J	CHIP R 2.2K J 1/10W		R421			RK73GB2A104J	CHIP R 100K J 1/10W	K3M
R152			RK73GB2A102J	CHIP R 1.0K J 1/10W		R422			RK73GB2A103J	CHIP R 10K J 1/10W	
R153			RK73GB2A471J	CHIP R 470 J 1/10W		W105-108			R92-1252-05	CHIP R 0 OHM J 1/16W	M
R154			RK73GB2A102J	CHIP R 1.0K J 1/10W		S1			S74-0821-05	MICRO SWITCH	
R155			RK73GB2A222J	CHIP R 2.2K J 1/10W		D1			1N5393G-M6	DIODE	
R157,158			RK73GB2A471J	CHIP R 470 J 1/10W		D2 -4			MA4068(N)-M	ZENER DIODE	
R159			RK73GB2A102J	CHIP R 1.0K J 1/10W		D21			MA4082(N)-L	ZENER DIODE	
R160			RK73GB2A222J	CHIP R 2.2K J 1/10W		D22 -25			AM01Z	DIODE	
R161			RK73GB2A225J	CHIP R 2.2M J 1/10W		D26			DAN202U	DIODE	
R162,163			RK73GB2A104J	CHIP R 100K J 1/10W		D26			MA142WK	DIODE	
R164,165			RK73GB2A473J	CHIP R 47K J 1/10W		D151-155			DA204K	DIODE	
R166			RK73GB2A472J	CHIP R 4.7K J 1/10W		D151-155			KDS226	DIODE	
R167			RK73GB2A474J	CHIP R 470K J 1/10W		D157-162			DA204K	DIODE	
R168,169			RK73GB2A102J	CHIP R 1.0K J 1/10W		D157-162			KDS226	DIODE	
R185,186			RK73GB2A474J	CHIP R 470K J 1/10W		D163			MA4062-L	ZENER DIODE	
R187			RK73GB2A222J	CHIP R 2.2K J 1/10W		D164			MA4120-L	ZENER DIODE	
R188			RK73GB2A473J	CHIP R 47K J 1/10W		D165			MA4062-L	ZENER DIODE	
R201			RK73GB2A103J	CHIP R 10K J 1/10W		D166			DA204U	DIODE	
R202-204			RK73GB2A472J	CHIP R 4.7K J 1/10W		D201,202			RD6.8M(B2)	ZENER DIODE	
R205			RK73GB2A222J	CHIP R 2.2K J 1/10W		D203-205			DAP202U	DIODE	
R206-208			RK73GB2A102J	CHIP R 1.0K J 1/10W		D203-205			MA142WA	DIODE	
R209,210			RK73GB2A103J	CHIP R 10K J 1/10W		D251-258			AM01Z	DIODE	
R211,212			RK73GB2A333J	CHIP R 33K J 1/10W		D269-271			1SS133	DIODE	
R251			RK73GB2A103J	CHIP R 10K J 1/10W		D301			MA4062-L	ZENER DIODE	
R252,253			RK73GB2A473J	CHIP R 47K J 1/10W		D303,304			MA4062-L	ZENER DIODE	
R254			RK73GB2A152J	CHIP R 1.5K J 1/10W		D307,308			MA4062-L	ZENER DIODE	
R255			RK73GB2A101J	CHIP R 100 J 1/10W		D309-311			MA4068(N)-M	ZENER DIODE	
R256			RK73GB2A103J	CHIP R 10K J 1/10W		D356			MA4062-L	ZENER DIODE	M
R257			RK73GB2A153J	CHIP R 15K J 1/10W		D357,358			MA4068(N)-M	ZENER DIODE	M
R259-262			RK73GB2A223J	CHIP R 22K J 1/10W		D359			DA204U	DIODE	M
R301,302			RK73EB2E100J	CHIP R 10 J 1/4W		D401			1SS133	DIODE	
R303			RK73EB2E101J	CHIP R 100 J 1/4W		IC1		*	UPD703030GC013	MI-COM IC	
R304,305			RK73EB2E472J	CHIP R 4.7K J 1/4W		IC2		*	TDA7411	ANALOGUE IC	
R306			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		IC3			BA4911-V4	ANALOGUE IC	
R307-309			RK73EB2E472J	CHIP R 4.7K J 1/4W		IC4			TA8273H	ANALOGUE IC	
R310,311			RK73EB2E101J	CHIP R 100 J 1/4W							
R312-315			RK73GB2A104J	CHIP R 100K J 1/10W							

K3: KDC-422

K4: KDC-4022

M: KDC-6023

△ indicates safety critical components.

KDC-4022/422/6023

PARTS LIST

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
IC6 IC8 Q1 -3 Q4 Q21		*	HD74HC27FP PST3436UL 2SC4081 2SA1036K 2SD2375	MOS-IC MOS-IC TRANSISTOR TRANSISTOR TRANSISTOR	
Q22 ,23 Q31 Q31 Q31 Q151			UMC2N DTC144EUA KRC404 UN5213 DTA114YUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q151 Q151 Q152 Q153 Q153			KRA307 UN5114 2SA1576A DTC144EUA KRC404	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q153 Q154 Q201 Q201 Q201			UN5213 2SA1577 DTC143TUA KRC410 UN5216	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q350 Q350 Q350 Q351,352 Q351,352			DTA124EUA KRA303 UN5112 DTC143TUA KRC410	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q351,352 Q354 Q354 Q354 Q355,356			UN5216 DTA124EUA KRA303 UN5112 DTC143TUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q355,356 Q355,356 TH1			KRC410 UN5216 PTH9C42BE471Q	DIGITAL TRANSISTOR DIGITAL TRANSISTOR POSITIVE RESISTOR	
A1		*	X86-3720-11	FRONT-END UNIT	
CD PLAYER UNIT (X32-5400-00)					
C1 C2 C3 C5 C6			C92-0566-05 CK73FB1A225K CK73GB0J105K CC73GCH1H020C CC73GCH1H390J	CHIP-TAN 10UF 6.3WV CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 2.0PF C CHIP C 39PF J	
C7 C8 C9 C10 C11			CK73GB1C104K CK73GB0J105K CK73GB1H472K CK73GB1C333K CK73GB1H682K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 4700PF K CHIP C 0.033UF K CHIP C 6800PF K	
C12 C13 C14 C15 C16			CK73GB1H332K CC73GCH1H271J CK73GB1H472K CK73GB1H222K CC73GCH1H331J	CHIP C 3300PF K CHIP C 270PF J CHIP C 4700PF K CHIP C 2200PF K CHIP C 330PF J	
C17 ,18 C31 -34 C36 C37 -39			CK73GB1C104K CK73GB1C104K CK73FB1A225K CK73GB1H103K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 2.2UF K CHIP C 0.010UF K	

K3: KDC-422 K4: KDC-4022 M: KDC-6023

ELECTRIC UNIT (X25-9800-11/12/21)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
C40 C41 C42 C43 C44			CK73GB1H153K CK73GB1H102K CK73GB1E473K CK73GB1H222K CK73GB1H102K	CHIP C 0.015UF K CHIP C 1000PF K CHIP C 0.047UF K CHIP C 2200PF K CHIP C 1000PF K	
C45 -47 C48 C49 C50 C51			CK73GB1C104K CK73GB1H682K CK73GB1H152K CK73GB1H682K CK73GB1H152K	CHIP C 0.10UF K CHIP C 6800PF K CHIP C 1500PF K CHIP C 6800PF K CHIP C 1500PF K	
C52 C61 C62 C71 ,72 C73 ,74			CK73GB1C104K CK73FB1A225K CK73GB1C104K CK73GB1H471K CC73GCH1H680J	CHIP C 0.10UF K CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 470PF K CHIP C 68PF J	
C75 ,76 C77 ,78 C100-102			CK73GB1H222K CK73GB1C104K CK73GB1H102K	CHIP C 2200PF K CHIP C 0.10UF K CHIP C 1000PF K	
CN1 CN1 CN2 CN2			E40-9536-05 E41-0193-05 E40-9527-05 E41-0213-05	FLAT CABLE CONNECTOR (16PIN) FLAT CABLE CONNECTOR (16PIN) FLAT CABLE CONNECTOR (24PIN) FLAT CABLE CONNECTOR (24PIN)	
		*	J74-1486-12	RIGID PRINTED WIRING BOARD	
X1			L78-0851-05	RESONATOR (16.93MHZ)	
CP1 CP2 CP3 CP4 CP5			R90-1019-05 R90-1014-05 R90-0974-05 R90-0718-05 R90-0720-05	MULTI-COMP 100 X2 MULTI-COMP 100 X4 MULT R 1.8KX4 MULTI-COMP 4.7K X4 MULTI-COMP 100K X4	
R1 R2 ,3 R4 R5 ,6 R7			RK73GB2A910J RK73GB2A562J RK73FB2B100J RK73GB2A332J RK73GB2A362J	CHIP R 91 J 1/10W CHIP R 5.6K J 1/10W CHIP R 10 J 1/8W CHIP R 3.3K J 1/10W CHIP R 3.6K J 1/10W	
R8 R9 R10 R11 R12			RK73GB2A273J RK73GB2A392J RK73GB2A104J RK73GB2A333J RK73GB2A244J	CHIP R 27K J 1/10W CHIP R 3.9K J 1/10W CHIP R 100K J 1/10W CHIP R 33K J 1/10W CHIP R 240K J 1/10W	
R13 R14 R15 R31 R32			RK73GB2A914J RK73GB2A104J RK73GB2A472J RK73GB2A273J RK73GB2A103J	CHIP R 910K J 1/10W CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 27K J 1/10W CHIP R 10K J 1/10W	
R33 R34 R35 R36 R37			RK73GB2A183J RK73GB2A103J RK73GB2A393J RK73GB2A103J RK73GB2A622J	CHIP R 18K J 1/10W CHIP R 10K J 1/10W CHIP R 39K J 1/10W CHIP R 10K J 1/10W CHIP R 6.2K J 1/10W	
R38 R39 R40 R41			RK73GB2A224J RK73GB2A104J RK73GB2A821J RK73GB2A473J	CHIP R 220K J 1/10W CHIP R 100K J 1/10W CHIP R 820 J 1/10W CHIP R 47K J 1/10W	

⚠ indicates safety critical components.

KDC-4022/422/6023

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5400-00)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
R42			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R43			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R44 ,45			RK73GB2A103J	CHIP R 10K J 1/10W	
R46			RK73GB2A273J	CHIP R 27K J 1/10W	
R47			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R48			RK73GB2A103J	CHIP R 10K J 1/10W	
R49			RK73GB2A393J	CHIP R 39K J 1/10W	
R50			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52 ,53			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R71			RK73GB2A133J	CHIP R 13K J 1/10W	
R72			RK73FB2B201J	CHIP R 200 J 1/8W	
R81 -86			RK73FB2B203J	CHIP R 20K J 1/8W	
R87 ,88			RK73FB2B331J	CHIP R 330 J 1/8W	
R89 ,90			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R91 ,92			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R100			RK73GB2A100J	CHIP R 10 J 1/10W	
S1 ,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DAN202U	DIODE	
D1			MA142WK	DIODE	
D2			MA8051-L	ZENER DIODE	
D3			DA204U	DIODE	
IC1			AN22002AA	ANALOGUE IC	
IC2			MN6627771KP	MOS-IC	
IC3			BA5824FP	ANALOGUE IC	
IC4			NJM4580M1	ANALOGUE IC	
Q1			MCH6101	TRANSISTOR	
Q2			2SA1362(Y)	TRANSISTOR	
Q3			DTC124EUA	DIGITAL TRANSISTOR	
Q3			UN5212	DIGITAL TRANSISTOR	
Q4			DTA143XUA	DIGITAL TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	
DAUGHTER UNIT (X89-2570-10)					
D1			B30-1566-05	LED(1608,RED)	
C1			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-0169-05	SOCKET FOR PIN ASSY (18PIN)	
J1			E58-0865-05	RECTANGULAR RECEPTACLE (16PIN)	
R1			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R2 -5			RK73EB2E471J	CHIP R 470 J 1/4W	
R6 ,7			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R8			RK73EB2E241J	CHIP R 240 J 1/4W	
R9 ,10			RK73EB2E471J	CHIP R 470 J 1/4W	
R11 -13			RK73EB2E102J	CHIP R 1.0K J 1/4W	
S1			S70-0871-05	TACT SWITCH	
MECHANISM ASSY (X92-4660-00)					
2	1B		A10-4827-12	CHASSIS	
5	1B		D10-4576-33	ARM ASSY	
8	1A		D10-4579-03	LEVER ASSY	

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
10	3A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	2A		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-22	SLIDER	
17	3B		D10-4588-03	SLIDER	
18	3B		D10-4595-04	ARM	
19	3B		D10-4596-14	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	3B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	3B		D13-2158-04	GEAR	
30	3B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	3B		D13-2172-03	RACK (GEAR)	
33	2B		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	2B		G01-3075-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-04	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
51	1A		J21-9676-22	MOUNTING HARDWARE	
52	3B		J21-9677-02	MOUNTING HARDWARE	
53	1B		J21-9678-03	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	2B		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-4472-05	MACHINE SCREW (M1.7X8.5)	
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
D	1B		N09-6108-05	MACHINE SCREW (M2*3.5TYPE3)	
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)	
G	2A		N19-2163-04	FLAT WASHER	
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW	
DM1	3B		T42-1066-04	DC MOTOR ASSY (SPINDOL)	
DM2	2B		T42-1067-04	DC MOTOR ASSY (LOADING)	
-	3A		X32-5400-00	CD PLAYER UNIT	
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY	

K3: KDC-422

K4: KDC-4022

M: KDC-6023

△ indicates safety critical components.