
2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

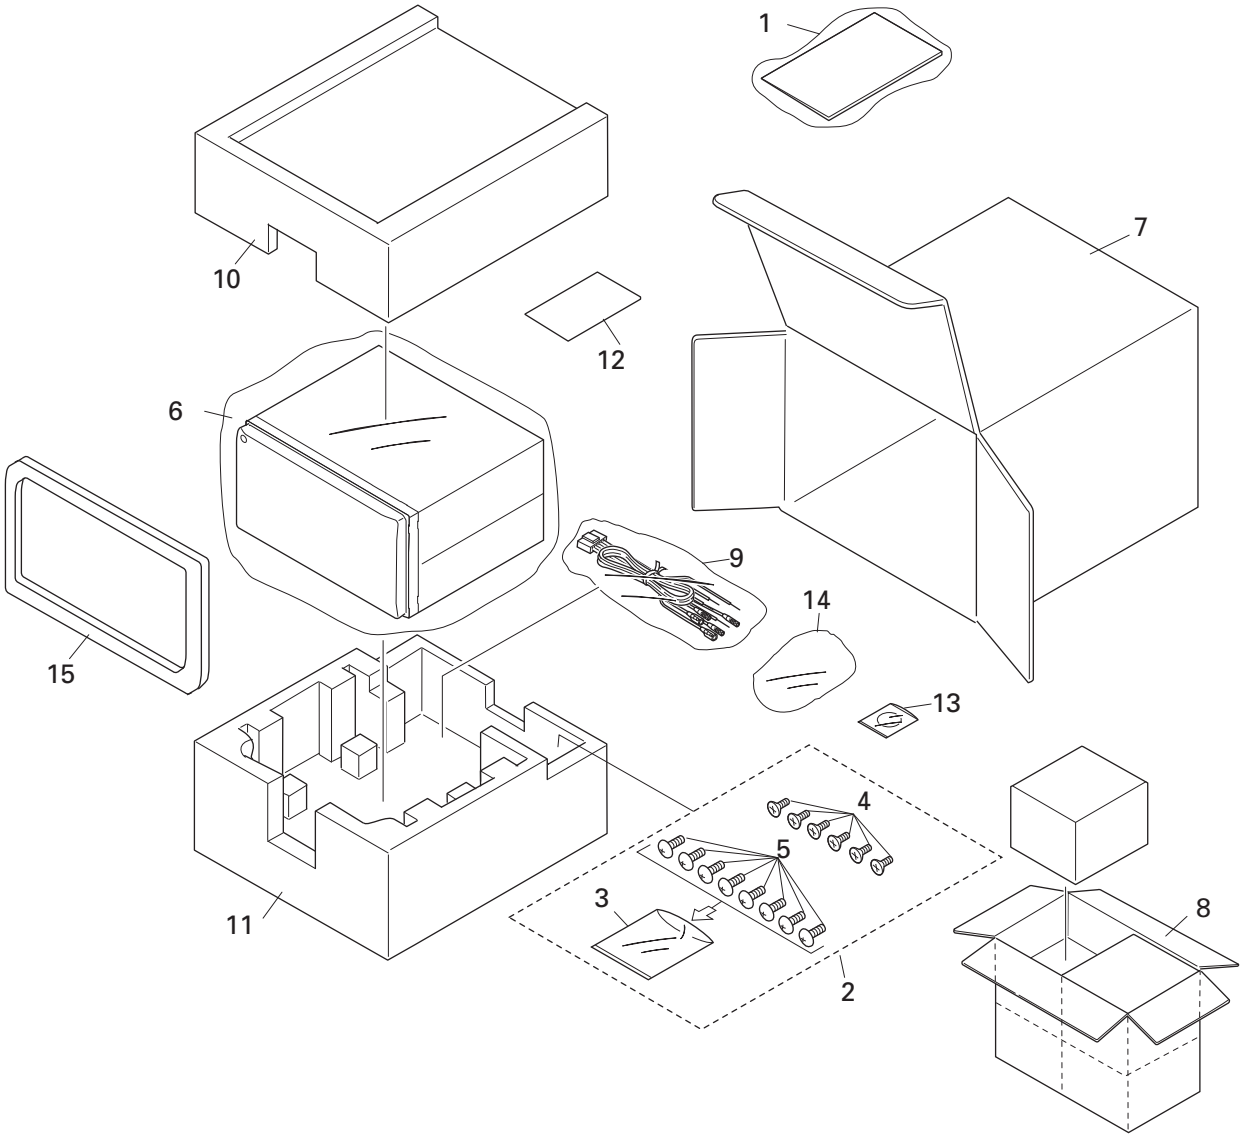

NOTE:

- Parts marked by "*"are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

● PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1-1	Owner's Manual	See Contrast table(2)
	1-2	Owner's Manual	See Contrast table(2)
*	1-3	Polyethylene Bag	E36-634
	2	Screw Assy	CEA1991
*	3	Polyethylene Bag	CNM4338
	4	Screw	CRZ50P090FMC
	5	Screw	TRZ50P080FMC
	6	Cover	See Contrast table(2)
	7	Carton	See Contrast table(2)
	8	Contain Box	See Contrast table(2)
	9	Cord Assy	See Contrast table(2)
	10	Protector	CHP2061
	11	Protector	CHP2062
*	12	Card	See Contrast table(2)
	13	Battery	CEX1030
	14	Remote Control Unit	CXB3456
	15	Panel	See Contrast table(2)

(2) CONTRAST TABLE


FH-P404/UC and FH-P404/ES are constructed same except for the following:

Mark No.	Symbol and Description	Part No.	
		FH-P404/UC	FH-P404/ES
1-1	Owner's Manual	CRB1508	CRB1510
1-2	Owner's Manual	CRB1509	CRB1511
6	Cover	CEG1177	CEG1074
7	Carton	CHG3516	CHG3515
8	Contain Box	CHL3516	CHL3515
9	Cord Assy	CDE5793	CDE5788
* 12	Card	ARY1048	Not used
15	Panel	CAH1543	Not used

● Owner's Manual

Model	Part No.	Language
FH-P404/UC	CRB1508	English
	CRB1509	French
FH-P404/ES	CRB1510	English
	CRB1511	Spanish

2.2 EXTERIOR

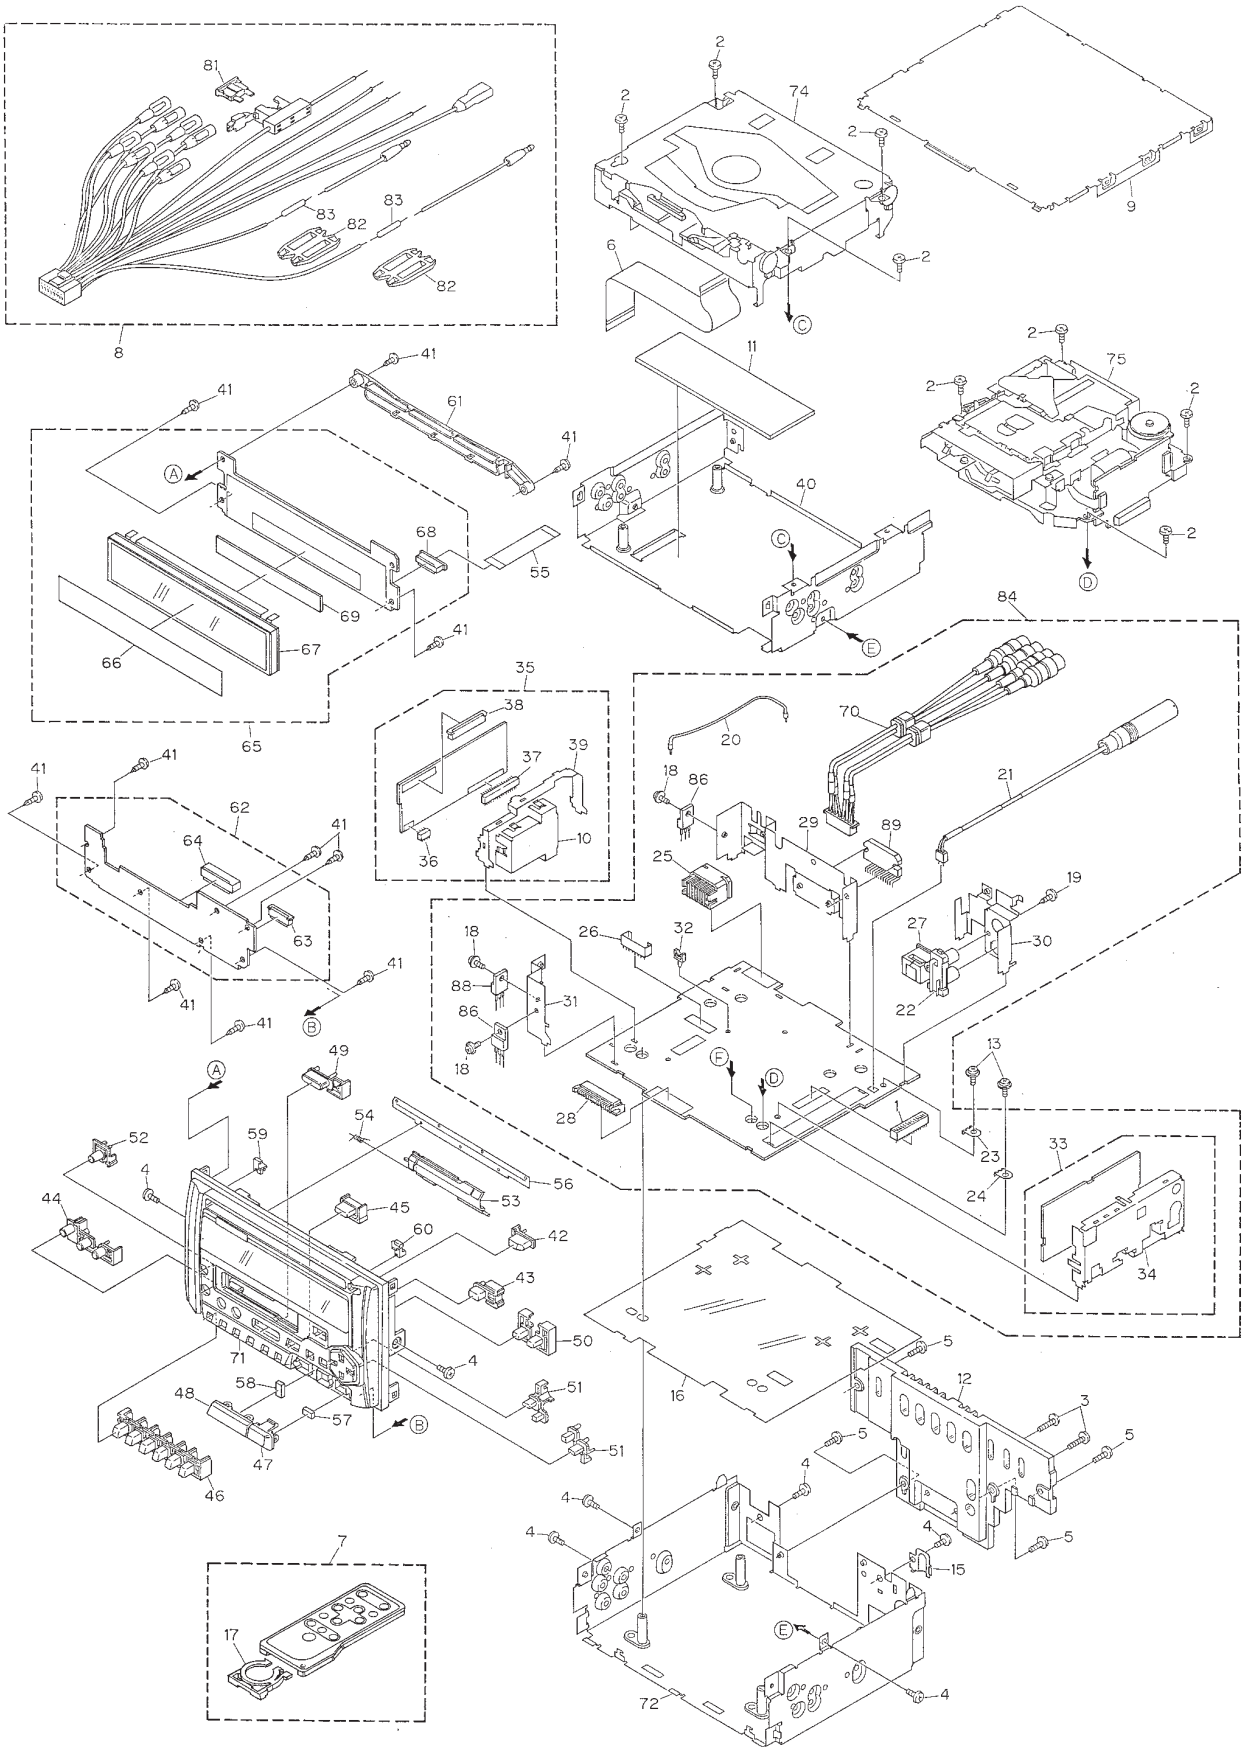
81
83
82
83
82
8
2
74
2
2
9
6
Ⓒ
11
41
41
61
41
Ⓐ
68
55
69
67
66
41
65
40
Ⓒ
Ⓔ
2
75
2
2
2
Ⓓ
84
35
38
37
39
10
36
20
70
18
86
29
89
21
25
19
27
30
22
41
41
62
64
41
63
41
41
41
Ⓑ
18
88
86
18
31
26
32
Ⓕ
Ⓓ
28
1
13
23
24
33
34
Ⓐ
49
54
56
53
52
59
4
44
45
60
42
43
50
71
4
58
48
57
Ⓑ
51
51
47
46
16
5
12
3
5
5
5
4
4
4
4
15
Ⓔ
72
4
7
17

● EXTERIOR SECTION PARTS LIST

(1) PARTS LIST


Mark	No.	Description	Part No.
	1	Connector(CN401)	CKS3568
	2	Screw	BSZ26P060FMC
	3	Screw	BSZ26P120FMC
	4	Screw	BSZ30P060FMC
	5	Screw	BSZ30P080FMC
	6	Cable	CDE5269
	7	Remote Control Unit	CXB3456
	8	Cord Assy	See Contrast table(2)
	9	Case	CNB2311
	10	Shield	CNC8052
	11	Spacer	CNM5971
	12	Heat Sink	CNR1486
	13	Screw	ASZ26P055FUC
	14	•••••	
	15	Holder	CNC4963
	16	Insulator	CNM5770
	17	Cover	CNS4948
	18	Screw	ASZ26P080FMC
	19	Screw	BPZ26P080FMC
	20	Cord(CN951)	CDC1039
	21	Antenna Cord(CN501)	CDH1249
	22	Pin Jack(CN251)	CKB1028
	23	Terminal(CN502)	CKF1059
	24	Terminal(CN503)	CKF1059
	25	Plug(CN901)	CKM1278
	26	Plug(CN281)	CKS1242
	27	Connector(CN101)	CKS3408
	28	Plug(CN801)	CKS3540
	29	Holder	CNC7744
	30	Holder	CNC7746
	31	Holder	CNC7896
	32	Clamper	CNV1335
	33	FM/AM Tuner Unit	See Contrast table(2)
	34	Holder	CNC6555
	35	DD Converter Unit	CWM6152
	36	Plug(CN1801)	CKS1614
	37	Plug(CN1602)	CKS1624
	38	Connector(CN1601)	CKS1963
	39	Holder	CNC7747
	40	Chassis Unit	CXB2552
	41	Screw	BPZ20P080FMC
	42	Button(CD EJ)	See Contrast table(2)
	43	Button(EJ)	CAC5586
	44	Button(TI,S/A,D)	CAC5762
	45	Button(◁▷)	CAC5597
	46	Button(1-6)	See Contrast table(2)
	47	Button(SOURCE)	See Contrast table(2)
	48	Button(VOL)	See Contrast table(2)
	49	Button(DIRECT,EQ)	CAC5592
	50	Button(A,F)	CAC5593
	51	Button	CAC5594
	52	Button(P)	CAC5596
	53	Door	CAT1955
	54	Spring	CBH2211
	55	Connector	CDE5642
	56	Cover	CNM4369
	57	Cushion	CNM5757
	58	Cushion	CNM5758
	59	Lighting Conductor	CNV5596
	60	Lighting Conductor	CNV5595
	61	Holder	CNV5349
	62	Switch Unit	See Contrast table(2)
	63	Connector(CN1903)	CKS2412
	64	Socket(CN1901)	CKS3553
	65	FL Unit	See Contrast table(2)
	66	Plate	CAH1661
	67	FL Tube(CN1902)	CAW1482
	68	Connector(CN1904)	CKS2762
	69	Tape	CNM5759
	70	Cord	CDE5786
	71	Grille Unit	See Contrast table(2)
	72	Chassis Unit	CXB2861
	73	•••••	
	74	CD Mechanism Module	CXK5004
	75	Cassette Mechanism Module	EXK3620
	76-80	•••••	
	81	Fuse(10A)	CEK1136
	82	Cap	CNS1472
	83	Resistor	RS1/2P102JL
	84	Tuner Deck Amp Unit	See Contrast table(2)
	85	•••••	
	86	Transistor(Q351,806)	2SD2396
	87	•••••	
	88	Transistor(Q805)	2SB1566
	89	IC(IC151)	TDA7386

(2) CONTRAST TABLE

FH-P404/UC and FH-P404/ES are constructed same except for the following:

Mark No.	Symbol and Description	Part No.	
		FH-P404/UC	FH-P404/ES
8	Cord Assy	CDE5793	CDE5788
33	FM/AM Tuner Unit	CWE1417	CWE1485
42	Button(CD EJ)	CAC5636	CAC5585
46	Button(1-6)	CAC5598	CAC5589
47	Button(SOURCE)	CAC5599	CAC5590
48	Button(VOL)	CAC5600	CAC5591
62	Switch Unit	CWM5887	CWM5884
65	FL Unit	CWM5918	CWM5917
71	Grille Unit	CXB2519	CXB2518
84	Tuner Deck Amp Unit	CWM5886	CWM5883


2.3 CD MECHANISM MODULE

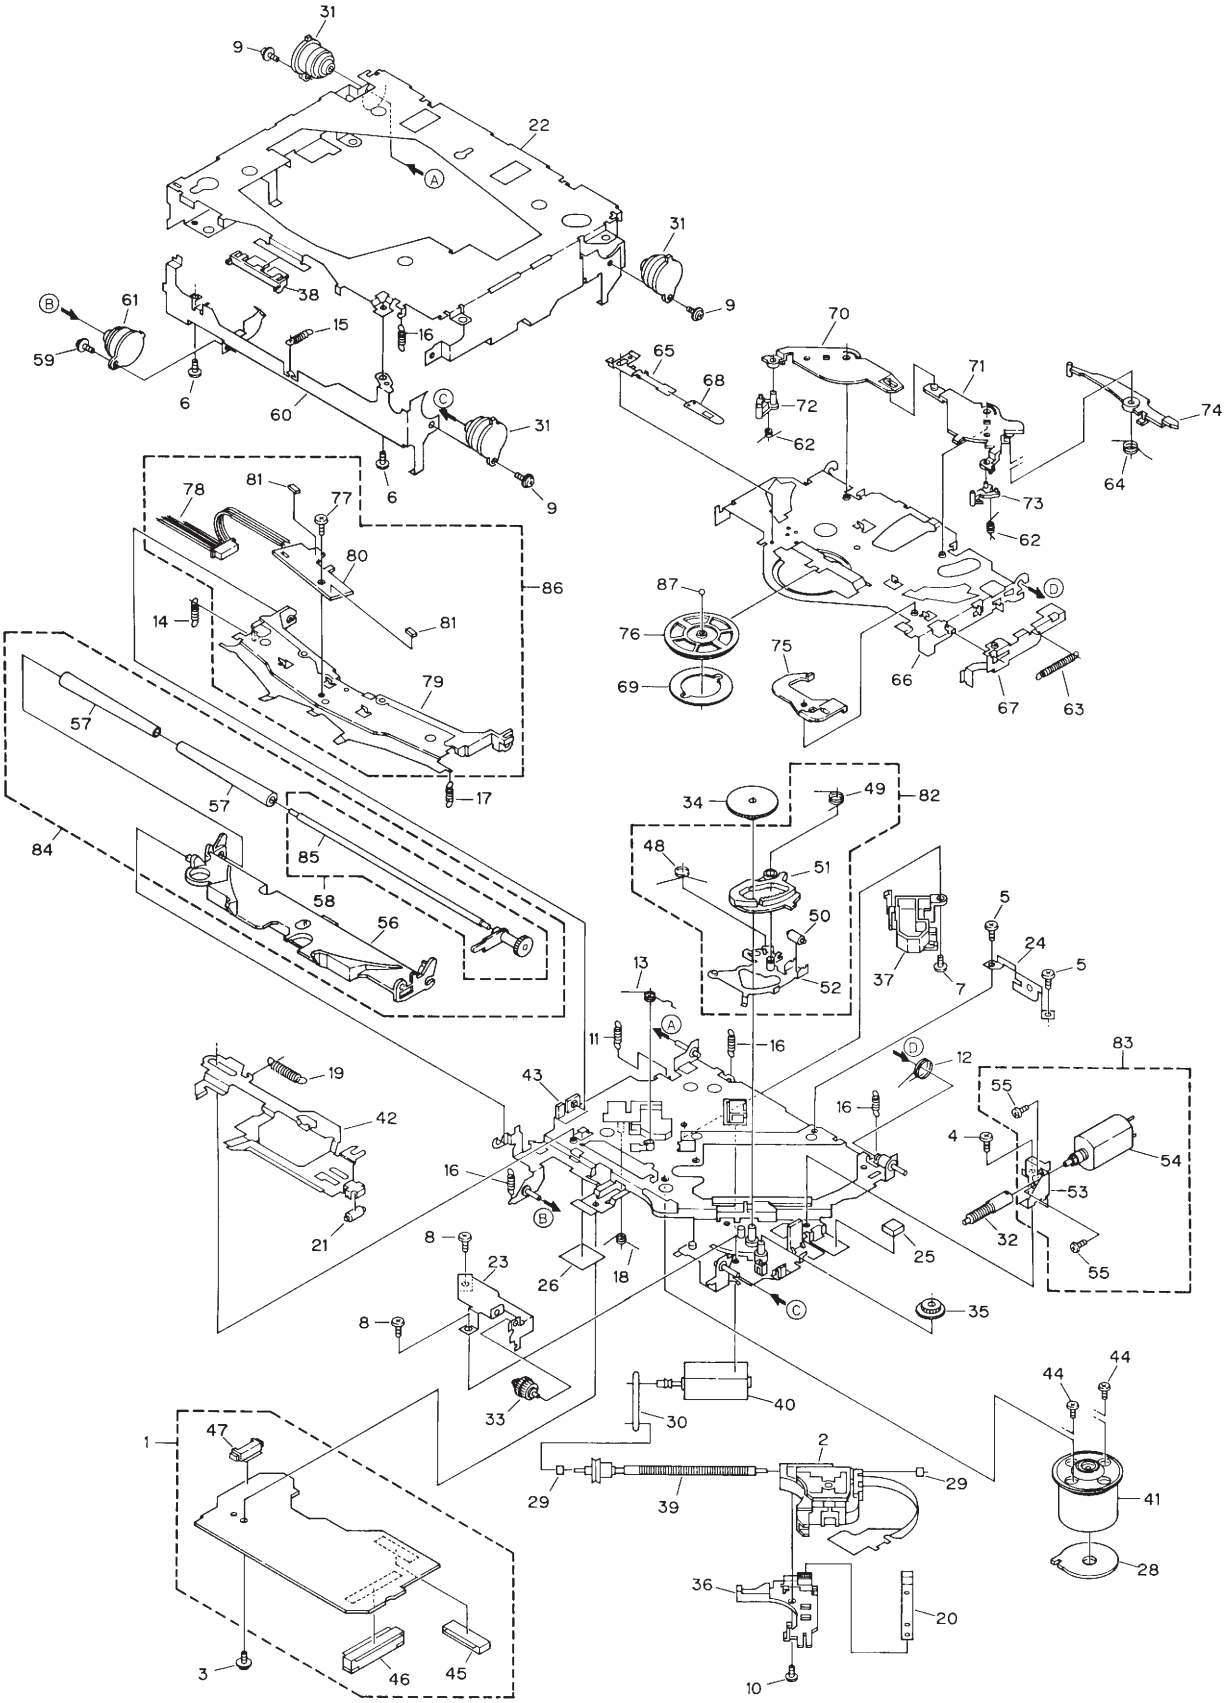

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX2285
	2	Pickup Unit(Service)	CXX1230
	3	Screw	IMS26P035FMC
	4	Screw	BMZ20P025FMC
	5	Screw	BMZ20P040FMC
	6	Screw	BSZ20P040FMC
	7	Screw	CBA1077
	8	Screw	CBA1250
	9	Screw	CBA1455
	10	Screw	CBA1362
	11	Spring	CBH1724
	12	Spring	CBH1729
	13	Spring	CBH1730
	14	Spring	CBH1731
	15	Spring	CBH1732
	16	Spring	CBH1745
	17	Spring	CBH1848
	18	Spring	CBH1849
	19	Spring	CBH1939
	20	Spring	CBL1214
	21	Roller	CLA2627
	22	Frame	CNC5796
	23	Bracket	CNC5871
*	24	Bracket	CNC6376
	25	Cushion	CNM3917
	26	Sheet	CNM4873
	27	•••••	
	28	PCB	CNP4230
	29	Bearing	CNR1415
	30	Belt	CNT1071
	31	Damper	CNV3974
	32	Gear	CNV4128
	33	Gear	CNV4129
	34	Gear	CNV4857
	35	Gear	CNV4131
	36	Holder	CNV4663
	37	Holder	CNV5071
	38	Guide	CNV4484
	39	Screw Unit(S7)	CXA8699
	40	CRG Motor Unit(S7)	CXB3043
	41	Motor Unit	CXA8912
	42	Lever Unit	CXA9300
	43	Chassis Unit	CXB2574
	44	Screw	JFZ20P025FMC
	45	Connector(CN101)	CKS1953
	46	Connector(CN701)	CKS2774
	47	Connector(CN801)	CKS2196
	48	Spring	CBH1832
	49	Spring	CBH1833
	50	Roller	CLA2627
	51	Arm	CNV4136
	52	Arm Unit	CXA8565
	53	Bracket	CNC6056
	54	Load Motor Unit(S7)	CXA8702
	55	Screw	JFZ20P025FMC
	56	Arm	CNV4120
	57	Roller	CNV4509
	58	Gear Unit(S7)	CXA8701
	59	Screw	CBA1296
	60	Frame	CNC5797
	61	Damper	CNV3974
	62	Spring	CBH1736
	63	Spring	CBH1863
	64	Spring	CBH1945
	65	Spring	CBL1269
	66	Arm	CNC5799
	67	Lever	CNC6054
	68	Spacer	CNM3315
	69	Sheet	CNM4849
	70	Arm	CNV5436
	71	Arm	CNV4123
	72	Arm	CNV4124
	73	Arm	CNV4125
	74	Arm	CNV4138
	75	Arm	CNV4139
	76	Clamper	CNV5308
	77	Screw	CBA1250
	78	Connector(CN1)	CDE4576
	79	Arm	CNC7383
*	80	Gathering PCB	CNX2445
	81	Photo-transistor(Q1, 2)	CPT-230S-X
	82	ELBO Arm Assy(S7)	CXA8889
	83	Load Motor Assy(S7)	CXA8891
	84	LO Arm Assy(S7)	CXA8892
	85	Shaft	CLA3133
	86	Guide Arm Assy(S7)	CXB1850
	87	Ball	CNR1189

2.4 CASSETTE MECHANISM MODULE

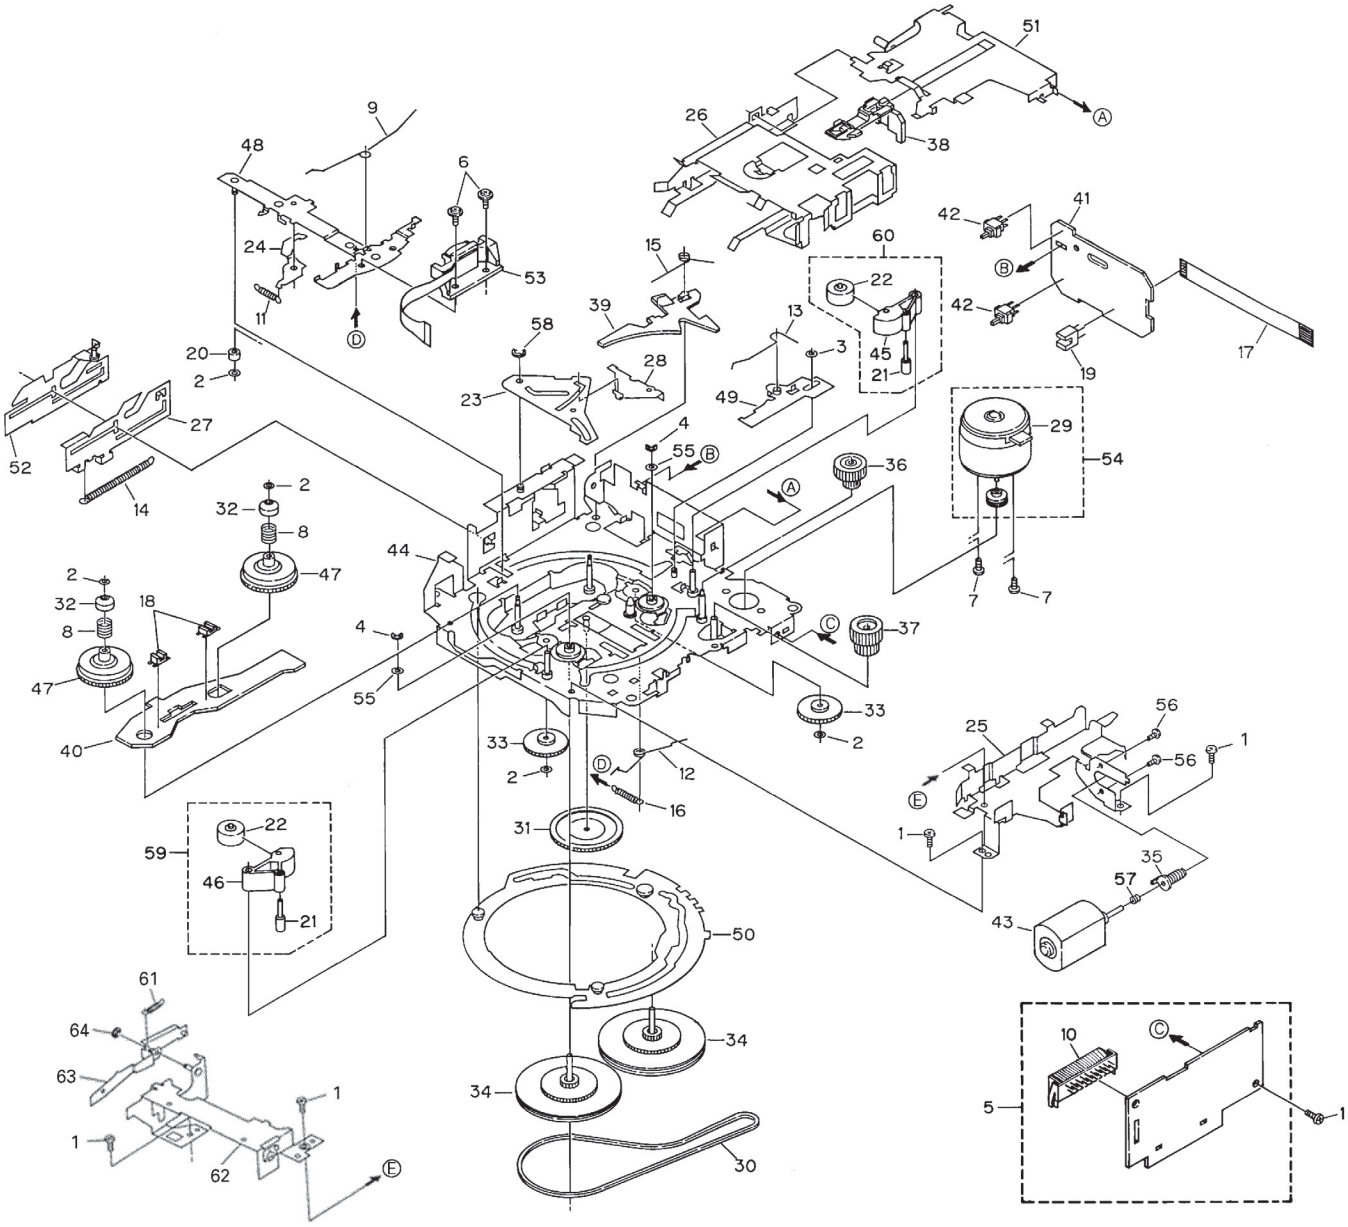

● CASSETTE MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BSZ20P040FMC
2	Washer	CBF1037
3	Washer	CBF1038
4	Washer	CBG1003
5	Deck Unit	EWM1010
6	Screw	EBA1028
7	Screw	EBA1037
8	Spring	EBH1531
9	Spring	EBH1575
10	Plug(CN251)	CKS3540
11	Spring	EBH1515
12	Spring	EBH1587
13	Spring	EBH1517
14	Spring	EBH1518
15	Spring	EBH1519
16	Spring	EBH1537
17	Cord	EDD1020
18	Photo-interrupter(EGN2,3)	EGN1006
19	Photo-interrupter(EGN1)	EGN1005
20	Roller	ENR1031
21	Shaft	ELA1373
22	Pinch Roller	ENV1518
23	Arm	ENC1489
24	Arm	ENC1397
25	Guide	ENC1481
26	Holder	ENC1417
27	Lever	ENC1448
28	Arm	ENC1488
29	Motor	EXM1028
30	Belt	ENT1027
31	Gear	ENV1347
32	Collar	ENV1508
33	Gear	ENV1350
34	Flywheel	ENV1410
35	Worm Gear	ENV1439
36	Worm Wheel	ENV1440
37	Gear	ENR1028
38	Lever	ENV1442
39	Arm	ENV1445
40	Gathering PCB	ENX1037
41	Gathering PCB	ENX1042
42	Switch(S1,2)	ESG1004
43	Motor Unit(M2)	EXA1485
44	Chassis Unit	EXA1511
45	Pinch Holder	ENV1485
46	Pinch Holder	ENV1486
47	Reel Unit	EXA1537
48	Head Base Unit	EXA1457
49	Lever Unit	EXA1438
50	Gear Unit	EXA1436
51	Frame Unit	EXA1458
52	Lever Unit	EXA1439
53	Head Assy(HD1)	EXA1506
54	Motor Unit(M1)	EXA1464
55	Washer	HBF-179
56	Screw	BMZ20P022FMC
57	Spring	EBH1545
58	Washer	YE20FUC
59	Pinch Holder Unit	EXA1529
60	Pinch Holder Unit	EXA1528
61	Spring	EBH1533
62	Guide Unit	EXA1409
63	Arm Unit	EXA1487
64	Washer	YE15FUC

5. ELECTRICAL PARTS LIST

NOTES:

● Parts whose parts numbers are omitted are subject to being not supplied.

● The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

B Unit Number : CWE1417(FH-P404/UC)
Unit Name : FM/AM Tuner Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	1	IC	PA4023B
IC	2	IC	PA4024A
Q	1	Transistor	2SC2412K
Q	2	Transistor	DTC124EU
Q	3	FET	3SK263
Q	31	Transistor	2SC2412K
Q	201	FET	2SK932
Q	202	Transistor	2SC2412K
Q	203	Transistor	DTC124EU
D	1	Diode	RD39JS
D	2	Diode	RD39JS
D	4	Diode	1SV250
D	5	Diode	KV1410-F1
D	6	Diode	MA157
D	7	Diode	KV1410-F1
D	8	Diode	KV1410-F1
D	201	Diode	MA157
D	202	Diode	MA157
D	231	Diode	SVC253
L	2	Coil	CTC1108
L	3	Inductor	LCTB2R2K2125
L	4	Coil	CTC1108
L	5	Coil	CTC1107
L	51	Ferri-Inductor	LAU150K
L	201	Ferri-Inductor	LAU4R7K
L	202	Ferri-Inductor	LAU330K
L	203	Inductor	CTF1287
L	208	Inductor	LAU121K
L	231	Inductor	LCTA3R3J3225
T	31	Coil	CTE1116
T	51	Coil	CTC1136
CF	51	Ceramic Filter	CTF1290
CF	52	Ceramic Filter	CTF1290
CF	53	Ceramic Filter	CTF1290
CF	232	Ceramic Filter	CTF1348
X	151	Resonator 920.5kHz	CSS1365
X	231	Crystal Resonator 10.26MHz	CSS1111
VR	154	Semi-fixed 150kΩ(B)	CCP1213

RESISTORS

=====Circuit Symbol and No.		===Part Name	Part No.
R	1		RS1/16S225J
R	2		RS1/16S225J
R	4		RS1/16S154J
R	5		RS1/16S391J
R	6		RS1/16S223J
R	7		RS1/16S123J
R	8		RS1/16S332J
R	9		RS1/16S473J
R	10		RS1/16S223J
R	11		RS1/16S124J
R	13		RS1/16S563J
R	15		RS1/16S271J
R	16		RS1/16S104J
R	17		RS1/16S332J
R	18		RS1/16S332J
R	31		RS1/16S470J
R	32		RS1/16S822J
R	33		RS1/16S822J
R	34		RS1/16S331J
R	35		RS1/16S331J
R	51		RS1/16S271J
R	52		RS1/16S560J
R	55		RS1/16S102J
R	56		RS1/16S823J
R	61		RS1/16S392J
R	62		RS1/16S273J
R	101		RS1/16S272J
R	102		RS1/16S682J
R	103		RS1/16S333J
R	104		RS1/16S334J
R	105		RS1/16S683J
R	107		RS1/16S222J
R	151		RS1/16S222J
R	152		RS1/16S393J
R	155		RS1/16S273J
R	156		RS1/16S243J
R	157		RS1/16S203J
R	160		RS1/16S222J
R	161		RS1/16S563J
R	162		RS1/16S105J
R	163		RS1/16S223J
R	202		RS1/16S223J
R	203		RS1/16S225J
R	204		RS1/16S103J
R	206		RS1/16S220J
R	207		RS1/16S101J
R	208		RS1/16S102J
R	209		RS1/16S471J
R	214		RS1/16S822J
R	215		RS1/16S822J
R	217		RS1/16S102J
R	231		RS1/16S272J
R	232		RS1/16S473J
R	237		RS1/16S103J
R	238		RS1/16S104J
R	239		RS1/16S104J
R	240		RS1/16S332J
R	241		RS1/16S202J
R	243		RS1/16S183J
R	244		RS1/16S392J
R	247		RS1/16S123J

=====Circuit Symbol and No.	Part Name	Part No.
CAPACITORS		
C 1		CCSQCH6R0D50
C 2		CCSRCK2R0C50
C 4		CCSRCH820J50
C 6		CCSRCH820J50
C 8		CKSRYB103K25
C 9		CKSQYB104K16
C 10		CCSRCKR50C50
C 11		CEJA1R0M50
C 12		CKSRYB222K50
C 13		CKSRYB222K50
C 14		CCSRCH220J50
C 15		CCSRCH6R0D50
C 16		CCSRCH8R0D50
C 17		CKSRYB222K50
C 18		CKSRYB103K25
C 19		CKSRYB222K50
C 20		CKSRYB222K50
C 21		CEJA100M16
C 22		CCSRTH9R0D50
C 23		CCSRTH120J50
C 24		CCSRCH471J50
C 25		CKSRYB103K25
C 26		CCSRCH101J50
C 31		CKSRYB103K25
C 32		CKSQYB472K50
C 33		CCSRCH5R0C50
C 34		CKSQYB104K16
C 36		CCSRRH201J50
C 51		CKSRYB223K25
C 52		CKSRYB103K25
C 54		CCSRCH470J50
C 55		CKSQYB223K25
C 56		CKSQYB104K16
C 57		CKSRYB472K50
C 58		CEJA330M10
C 59		CKSRYB103K25
C 60		CKSRYB102K50
C 61		CCSRCH270J50
C 62		CKSRYB103K25
C 63		CEJAR22M50
C 101		CEJANP100M10
C 102		CKSRYB182K50
C 103		CKSRYB682K25
C 104		CEJA2R2M50
C 105		CKSRYB103K25
C 106		CCSRCH151J50
C 107		CKSRYB103K25
C 151		CKSRYB472K50
C 152		CKSQYB104K16
C 153		CEJA3R3M50
C 154		CKSQYB104K16
C 157		CEJA3R3M50
C 158		CKSYB474K16
C 159		CEJA220M6R3
C 160		CKSQYB104K16
C 161		CKSQYB104K16
C 162		CEJA3R3M50
C 163		CKSRYB102K50
C 170		CCSRCH100D50
C 201		CCSRCH471J50
C 202		CCSRCH100D50
C 203		CKSRYB332K50
C 204		CKSQYB473K16
C 205		CKSQYB473K16
C 206		CKSQYB104K16
C 207		CCSRCH560J50
C 209		CKSQYB104K16
C 211		CCSRCH101J50
C 212		CEJA470M6R3
C 213		CKSRYB103K25
C 216		CCSRCH101J50
C 217		CEJA1R5M50
C 219		CCSRCH471J50
C 220		CKSRYB103K25
C 230		CKSRYB103K25
C 231		CCSRCH330J50
C 232		CCSRCH150J50
C 233		CKSQYB104K16
C 234		CEJA330M10
C 235		CKSRYB332K50
C 236		CKSQYB473K16
C 237		CCSRCH120J50
C 239		CKSRYB472K50
C 240		CEJAR47M50
C 241		CKSQYB104K16
C 242		CEJAR47M50
C 243		CEJAR33M50
C 244		CKSQYB473K16
C 245		CKSRYB333K16
C 246		CKSQYB473K16
C 250		CCSRCH471J50

B Unit Number : CWE1485(FH-P404/ES)
Unit Name : FM/AM Tuner Unit

MISCELLANEOUS		
IC 1	IC	PA4023B
IC 2	IC	PA4024A
Q 1	Transistor	2SC2412K
Q 2	Transistor	DTC124EU
Q 3	FET	3SK263
Q 31	Transistor	2SC2412K
Q 201	FET	2SK932
Q 202	Transistor	2SC2412K
Q 203	Transistor	DTC124EU
D 1	Diode	RD39JS
D 2	Diode	RD39JS
D 4	Diode	1SV250
D 5	Diode	KV1410-F1
D 6	Diode	MA157
D 7	Diode	KV1410-F1
D 8	Diode	KV1410-F1
D 201	Diode	MA157
D 202	Diode	MA157
D 231	Diode	SVC253
L 2	Coil	CTC1108
L 3	Inductor	LCTB2R2K2125
L 4	Coil	CTC1108
L 5	Coil	CTC1107
L 6	Inductor	LCTBR15K1608
L 51	Ferri-Inductor	LAU150K
L 201	Ferri-Inductor	LAU4R7K
L 202	Ferri-Inductor	LAU330K
L 203	Inductor	CTF1287
L 208	Inductor	LAU121K
L 231	Inductor	LCTA3R3J3225
T 31	Coil	CTE1117
T 51	Coil	CTC1136
CF 51	Ceramic Filter	CTF1290
CF 52	Ceramic Filter	CTF1290
CF 53	Ceramic Filter	CTF1290

Circuit Symbol and No.		Part Name	Part No.
CF	232	Ceramic Filter	CTF1348
X	151	Resonator 918.5Hz	CSS1365
X	231	Crystal Resonator 10.26MHz	CSS1111
VR	154	Semi-fixed 150kΩ(B)	CCP1213
RESISTORS			
R	1		RS1/16S225J
R	2		RS1/16S225J
R	4		RS1/16S154J
R	5		RS1/16S391J
R	6		RS1/16S223J
R	7		RS1/16S123J
R	8		RS1/16S332J
R	9		RS1/16S473J
R	10		RS1/16S223J
R	11		RS1/16S124J
R	13		RS1/16S563J
R	15		RS1/16S271J
R	16		RS1/16S104J
R	17		RS1/16S332J
R	18		RS1/16S332J
R	31		RS1/16S470J
R	32		RS1/16S822J
R	33		RS1/16S822J
R	34		RS1/16S331J
R	35		RS1/16S331J
R	51		RS1/16S271J
R	52		RS1/16S560J
R	55		RS1/16S102J
R	56		RS1/16S823J
R	61		RS1/16S392J
R	62		RS1/16S273J
R	101		RS1/16S272J
R	102		RS1/16S682J
R	103		RS1/16S333J
R	104		RS1/16S334J
R	105		RS1/16S683J
R	107		RS1/16S222J
R	151		RS1/16S222J
R	152		RS1/16S393J
R	155		RS1/16S273J
R	156		RS1/16S243J
R	157		RS1/16S203J
R	160		RS1/16S222J
R	161		RS1/16S563J
R	162		RS1/16S105J
R	163		RS1/16S223J
R	202		RS1/16S223J
R	203		RS1/16S225J
R	204		RS1/16S103J
R	206		RS1/16S220J
R	207		RS1/16S101J
R	208		RS1/16S102J
R	209		RS1/16S471J
R	214		RS1/16S822J
R	215		RS1/16S822J
R	217		RS1/16S102J
R	231		RS1/16S272J
R	232		RS1/16S473J
R	237		RS1/16S103J
R	238		RS1/16S104J
R	239		RS1/16S104J
R	240		RS1/16S332J
R	241		RS1/16S202J
R	243		RS1/16S183J
R	244		RS1/16S392J
R	247		RS1/16S123J

Circuit Symbol and No.		Part Name	Part No.
CAPACITORS			
C	1		CCSQCH6R0D50
C	2		CCSRCK2R0C50
C	4		CCSRCH820J50
C	6		CCSRCH820J50
C	8		CKSRYB103K25
C	9		CKSQYB104K16
C	10		CCSRCKR50C50
C	11		CEJA1R0M50
C	12		CKSRYB222K50
C	13		CKSRYB222K50
C	14		CCSRCH220J50
C	15		CCSRCH6R0D50
C	16		CCSRCH8R0D50
C	17		CKSRYB222K50
C	18		CKSRYB103K25
C	19		CKSRYB222K50
C	20		CKSRYB222K50
C	21		CEJA100M16
C	22		CCSRTH9R0D50
C	23		CCSRTH120J50
C	24		CCSRCH471J50
C	25		CKSRYB103K25
C	31		CKSRYB103K25
C	32		CKSQYB472K50
C	33		CCSRCH5R0C50
C	34		CKSQYB104K16
C	36		CCSRRH201J50
C	51		CKSRYB223K25
C	52		CKSRYB103K25
C	54		CCSRCH470J50
C	55		CKSQYB223K25
C	56		CKSQYB104K16
C	57		CKSRYB472K50
C	58		CEJA330M10
C	59		CKSRYB103K25
C	60		CKSRYB102K50
C	61		CCSRCH270J50
C	62		CKSRYB103K25
C	63		CEJAR22M50
C	101		CEJANP100M10
C	102		CKSRYB182K50
C	103		CKSRYB682K25
C	104		CEJA2R2M50
C	105		CKSRYB103K25
C	106		CCSRCH151J50
C	107		CKSRYB103K25
C	151		CKSRYB472K50
C	152		CKSQYB104K16
C	153		CEJA3R3M50
C	154		CKSQYB104K16
C	157		CEJA3R3M50
C	158		CKSYB474K16
C	159		CEJA220M6R3
C	160		CKSQYB104K16
C	161		CKSQYB104K16
C	162		CEJA3R3M50
C	163		CKSRYB102K50
C	170		CCSRCH100D50
C	201		CCSRCH471J50
C	202		CCSRCH100D50
C	203		CKSRYB332K50
C	204		CKSQYB473K16
C	205		CKSQYB473K16
C	206		CKSQYB104K16
C	207		CCSRCH560J50

=====Circuit Symbol and No.		===Part Name	Part No.
C	209		CKSQYB104K16
C	211		CCSRCH101J50
C	212		CEJA470M6R3
C	213		CKSRYB103K25
C	216		CCSRCH101J50
C	217		CEJA1R5M50
C	219		CCSRCH471J50
C	220		CKSRYB103K25
C	230		CKSRYB103K25
C	231		CCSRCH330J50
C	232		CCSRCH150J50
C	233		CKSQYB104K16
C	234		CEJA330M10
C	235		CKSRYB332K50
C	236		CKSQYB473K16
C	237		CCSRCH120J50
C	239		CKSRYB472K50
C	240		CEJAR47M50
C	241		CKSQYB104K16
C	242		CEJAR47M50
C	243		CEJAR33M50
C	244		CKSQYB473K16
C	245		CKSRYB333K16
C	246		CKSQYB473K16
C	250		CCSRCH471J50

A Unit Number :CWM5886(FH-P404/UC)
Unit Number :CWM5883(FH-P404/ES)
Unit Name :Tuner Deck Amp Unit

MISCELLANEOUS

IC	101	IC	TA2050S
IC	102	IC	CA0008AM
IC	151	IC	TDA7386
IC	201	IC	SN761027DL
IC	251	IC	M5282FP
IC	252	IC	NJM4558MD
IC	253	IC	NJM4558MD
IC	254	IC	MC14052BF
IC	301	IC	M62412P
IC	501	IC	LC72146M
IC	601	IC	PD4947A
IC	931	IC	TPD1018F
IC	971	IC	See Contrast table
IC	981	IC	S-80734ANDYI
Q	101	Chip Transistor	2SA1162
Q	102	Transistor	DTC124EK
Q	151	Transistor	DTC124EK
Q	152	Transistor	DTA124EK
Q	153	Transistor	2SC2412K
Q	154	Transistor	DTC124EK
Q	201	Transistor	2SC2412K
Q	251	Transistor	IMH1A
Q	252	Transistor	IMD2A
Q	253	Transistor	IMH3A
Q	281	Transistor	IMH3A
Q	282	Transistor	IMH3A
Q	321	Transistor	DTA124EK
Q	322	Transistor	IMH3A
Q	351	Transistor	2SD2396
Q	352	Transistor	IMD2A
Q	501	Transistor	2SC2412K
Q	502	Transistor	2SK208
Q	503	Transistor	2SC2412K
Q	504	Transistor	See Contrast table
Q	601	Transistor	DTA114EK
Q	602	Transistor	DTC124EK
Q	801	Transistor	2SB1132
Q	802	Transistor	DTC143EK
Q	803	Transistor	2SA1797
Q	804	Transistor	DTC143EK

=====Circuit Symbol and No.		===Part Name	Part No.
Q	805	Transistor	2SB1566
Q	806	Transistor	2SD2396
Q	911	Transistor	2SD1760F5
Q	921	Transistor	2SC2412K
Q	922	Transistor	2SC2412K
Q	923	Transistor	2SC2412K
Q	941	Transistor	See Contrast table
Q	951	Transistor	2SD1760F5
Q	952	Chip Transistor	2SA1162
Q	953	Transistor	DTC124EK
Q	961	Transistor	2SA1674
Q	962	Transistor	2SA1674
Q	963	Transistor	DTC143EK
Q	964	Transistor	DTC143EK
D	151	Diode	DAN202K
D	152	Diode	MA3082(L)
D	251	Diode	DAN202K
D	252	Diode	MA8047(L)
D	351	Diode	HZS9L(B1)
D	401	Diode	1SS133
D	501	Diode	DAN202K
D	502	Diode	HZS3LL(B)
D	801	Diode	MA3056(L)
D	802	Diode	HZS11L(C3)
D	803	Diode	DAN202K
D	804	Diode	MA3068(M)
D	901	Diode	ERA15-02VH
D	902	Diode	ERA15-02VH
D	911	Diode	ERA15-02VH
D	912	Diode	HZS6L(B1)
D	921	Diode	HZS7L(C3)
D	922	Diode	MA3062(H)
D	931	Diode	ERA15-02VH
D	932	Diode	ERA15-02VH
D	940	Diode	See Contrast table
D	941	Diode	See Contrast table
D	951	Diode	HZS9L(B2)
D	971	Diode	See Contrast table
D	972	Diode	See Contrast table
D	981	Diode	MA110
L	101	Ferri-Inductor	LAU2R2K
L	351	Inductor	CTF1420
L	501	Ferri-Inductor	LAU2R2K
L	503	Ferri-Inductor	LAU2R2K
L	601	Ferri-Inductor	LAU2R2K
L	602	Ferri-Inductor	LAU2R2K
L	603	Ferri-Inductor	LAU2R2K
L	604	Ferri-Inductor	LAU2R2K
L	605	Ferri-Inductor	LAU2R2K
L	606	Ferri-Inductor	LAU2R2K
L	901	Choke Coil 600mH	CTH1213
L	941	Ferri-Inductor	See Contrast table
X	501	Crystal Resonator 7.2MHz	CSS1334
X	601	Resonator 12.58291MHz	CSS1402
FU	801	Micro Fuse 1A	CEK1191
FU	802	Micro Fuse 1A	CEK1191
BZ	601	Buzzer	CPV1012
		DD Converter Unit	CWM6152
		FM/AM Tuner Unit	See Contrast table

RESISTORS

R	101	RS1/10S620J
R	102	RS1/10S101J
R	103	RS1/10S101J
R	104	RS1/10S222J
R	105	RS1/10S122J
R	106	RS1/10S122J
R	107	RS1/10S181J
R	108	RS1/10S181J
R	109	RS1/10S153J
R	110	RS1/10S153J

=====Circuit Symbol and No.	===Part Name	Part No.
R 111		RS1/10S222J
R 112		RS1/10S222J
R 113		RS1/10S102J
R 114		RS1/10S102J
R 115		RS1/10S473J
R 116		RS1/10S473J
R 117		RS1/10S332J
R 118		RS1/10S682J
R 119		RS1/10S103J
R 151		RS1/10S103J
R 152		RS1/10S103J
R 153		RS1/10S331J
R 154		RS1/10S103J
R 155		RS1/10S472J
R 156		RS1/10S472J
R 157		RS1/10S103J
R 158		RS1/10S473J
R 159		RS1/10S102J
R 201		RS1/10S102J
R 202		RS1/10S473J
R 203		RS1/10S473J
R 204		RS1/10S272J
R 205		RS1/10S272J
R 206		RS1/10S151J
R 207		RS1/10S151J
R 210		RS1/10S202J
R 211		RS1/10S202J
R 212		RS1/10S102J
R 213		RS1/10S102J
R 214		RS1/10S102J
R 215		RS1/16S102J
R 216		RS1/10S222J
R 217		RS1/16S222J
R 218		RS1/10S103J
R 219		RS1/10S103J
R 220		RS1/10S272J
R 221		RS1/10S272J
R 222		RS1/10S162J
R 223		RS1/10S162J
R 224		RS1/10S104J
R 251		RS1/16S104J
R 252		RS1/16S104J
R 253		RS1/16S104J
R 254		RS1/16S683J
R 255		RS1/16S104J
R 256		RS1/16S104J
R 257		RS1/16S104J
R 258		RS1/16S103J
R 259		RS1/16S183J
R 260		RS1/16S183J
R 261		RS1/10S243J
R 262		RS1/10S0R0J
R 263		RS1/10S473J
R 264		RS1/16S105J
R 265		RS1/16S105J
R 266		RS1/16S103J
R 267		RS1/16S103J
R 268		RS1/16S821J
R 269		RS1/16S821J
R 270		RS1/10S223J
R 271		RS1/10S223J
R 272		RS1/16S301J
R 281		RS1/10S821J
R 282		RS1/10S821J
R 283		RS1/10S471J
R 284		RS1/10S471J
R 285		RS1/10S223J
R 286		RS1/10S223J
R 287		RS1/10S223J
R 288		RS1/10S223J

=====Circuit Symbol and No.	===Part Name	Part No.
R 301		RS1/16S105J
R 302		RS1/10S105J
R 303		RS1/16S682J
R 304		RS1/16S682J
R 305		RS1/10S303J
R 306		RS1/10S303J
R 309		RS1/10S101J
R 310		RS1/10S101J
R 311		RS1/10S123J
R 312		RS1/10S123J
R 321		RS1/10S821J
R 322		RS1/10S821J
R 323		RS1/10S104J
R 324		RS1/10S104J
R 351		RD1/4PU221J
R 352		RS1/10S221J
R 353		RS1/10S472J
R 354		RS1/10S222J
R 401		RS1/10S222J
R 402		RS1/10S103J
R 403		RS1/10S222J
R 404		RS1/10S222J
R 405		RS1/10S103J
R 406		RA4C222J
R 407		RA4C222J
R 408		RA4C473J
R 409		RS1/10S103J
R 410		RS1/10S392J
R 501		RS1/10S102J
R 502		RS1/10S473J
R 503		RS1/10S393J
R 504		RS1/10S103J
R 505		RS1/10S223J
R 506		RS1/16S473J
R 507		RS1/10S102J
R 508		RS1/10S331J
R 509		RS1/10S103J
R 510		See Contrast table
R 511		RS1/10S472J
R 512		RS1/10S102J
R 513		RS1/10S472J
R 514		RS1/10S103J
R 515		RS1/10S152J
R 516		RS1/10S103J
R 517		RS1/10S222J
R 518		RS1/10S102J
R 519		RS1/10S222J
R 520		RA4C473J
R 521		See Contrast table
R 524		RA4C681J
R 525		See Contrast table
R 528		RS1/10S4R7J
R 530		RS1/16S222J
R 601		RS1/10S102J
R 604		RS1/10S473J
R 605		RS1/10S473J
R 606		RS1/10S472J
R 607		RS1/10S472J
R 608		RA4C473J
R 609		RS1/10S473J
R 610		See Contrast table
R 611		See Contrast table
R 612		RA4C221J
R 613		RS1/10S221J
R 614		RS1/10S473J
R 617		RA4C473J
R 621		RS1/10S102J
R 622		RS1/10S102J
R 623		RS1/10S473J
R 624		RS1/10S0R0J

=====Circuit Symbol and No.		===Part Name	Part No.
R	625		RS1/16S473J
R	801		RS1/10S222J
R	802		RD1/4PU102J
R	803		RS1/10S222J
R	804		RD1/4PU102J
R	807		RS1/10S560J
R	808		RS1/10S0R0J
R	809		RS1/10S0R0J
R	810		RS1/10S102J
R	811		RA4C101J
R	815		RD1/4PU301J
R	816		RS1/10S103J
R	817		RS1/10S102J
R	911		RS1/8S332J
R	912		RS1/10S101J
R	921		RS1/10S103J
R	922		RS1/10S473J
R	923		RS1/10S103J
R	924		RS1/10S473J
R	925		RS1/10S472J
R	926		RS1/10S103J
R	927		RS1/10S223J
R	931		RS1/10S102J
R	941		See Contrast table
R	942		See Contrast table
R	943		See Contrast table
R	944		See Contrast table
R	951		RS1/8S151J
R	952		RS1/8S151J
R	954		RS1/10S222J
R	956		RS1/10S473J
R	961		RS1/10S472J
R	962		RD1/4PU102J
R	963		RS1/10S472J
R	964		RD1/4PU102J
R	971		See Contrast table
R	981		RS1/10S123J
R	982		RS1/10S102J
R	983		RS1/10S124J
R	984		RS1/10S102J

CAPACITORS

C	103		CKSQYB105K10
C	104		CKSQYB105K10
C	105		CKSQYB105K10
C	106		CKSQYB105K10
C	107		CEJA100M16
C	108		CKSQYB473K50
C	109		CKSQYB104K50
C	110		CKSQYB473K50
C	151		CKSYB224K16
C	152		CKSYB224K16
C	153		CKSYB224K16
C	154		CKSYB224K16
C	155	4700µF/16V	CCH1188
C	156		CKSQYB103K50
C	157		CEJA100M16
C	158		CKSQYB105K10
C	159		CKSQYB105K10
C	160		CEJA330M10
C	201		CKSQYB105K10
C	202		CEJA4R7M35
C	203		CEJA4R7M35
C	204		CEJA4R7M35
C	205		CEJA4R7M35
C	206		CEJA4R7M35
C	207		CEJA4R7M35

=====Circuit Symbol and No.		===Part Name	Part No.
C	208		CEJA4R7M35
C	209		CEJA4R7M35
C	210		CKSQYB104K50
C	211		CEJA470M10
C	212		CEJA100M16
C	213		CEJA100M16
C	214		CKSQYB822K50
C	215		CKSQYB822K50
C	216		CKSQYB105K10
C	217		CKSQYB105K10
C	218		CKSQYB183K50
C	219		CKSQYB183K50
C	220		CKSQYB102K50
C	221		CKSQYB102K50
C	222		CKSYB225K16
C	223		CKSYB225K16
C	224		CKSQYB333K50
C	225		CKSQYB333K50
C	226		CEJA2R2M50
C	227		CEJA220M6R3
C	228		CKSQYB103K50
C	229		CKSQYB104K50
C	230		CKSQYB473K50
C	231		CKSQYB473K50
C	232		CKSQYB105K10
C	233		CKSQYB105K10
C	251		CKSQYB105K10
C	252		CKSQYB105K10
C	253		CKSQYB222K50
C	254		CKSQYB183K50
C	255		CKSQYB273K50
C	256		CKSQYB473K50
C	257		CKSQYB223K50
C	258		CKSQYB153K50
C	259		CKSQYB103K50
C	260		CEJANP220M10
C	261		CKSQYB472K50
C	262		CEJA101M10
C	263		CEJANP220M10
C	264		CEJA4R7M35
C	265		CKSQYB473K50
C	266		CKSQYB473K50
C	267		CKSQYB103K50
C	268		CEJA4R7M35
C	269		CEJA4R7M35
C	270		CKSQYB221K50
C	271		CKSQYB221K50
C	272		CKSQYB473K50
C	281		CEJA4R7M35
C	282		CEJA4R7M35
C	283		CEJA4R7M35
C	284		CEJA4R7M35
C	285		CKSQYB221K50
C	286		CKSQYB221K50
C	287		CKSQYB221K50
C	288		CKSQYB221K50
C	301		CEJANP100M16
C	302		CEJANP100M16
C	303		CKSQYB105K10
C	304		CKSQYB105K10
C	305		CEJANP100M16
C	306		CEJANP100M16
C	307		CKSQYB223K50
C	308		CKSQYB223K50
C	309		CKSQYB472K50
C	310		CKSQYB472K50
C	311		CKSQYB104K50
C	312		CKSQYB104K50
C	313		CEJA470M10
C	321		CEJA2R2M50

=====Circuit Symbol and No.		===Part Name	Part No.
C	322		CEJA2R2M50
C	351		CKSQYB473K50
C	352		CKSQYB102K50
C	353		CEJA101M10
C	354		CCSQCH470J50
C	401		CEJA220M10
C	402		CEJA100M16
C	403		CEJA4R7M35
C	404		CEJA4R7M35
C	501		CKSQYB223K50
C	502		CKSQYB223K50
C	503		CKSQYB103K50
C	504		CKSQYB225K10
C	505		CKSQYB273K50
C	506		CCSQCH101J50
C	507		CKSQYB473K50
C	508		See Contrast table
C	509		CKSQYB103K50
C	510		CCSQCH101J50
C	511		CASA100M10
C	512		CCSQCH101J50
C	513		CKSQYB223K50
C	515		CKSQYB223K50
C	516		CKLSR473K16
C	517		CKSQYB103K50
C	519		CKSQYB223K50
C	520		CEJA100M16
C	521	4.7µF/16V	CCH1250
C	522		CKSQYB103K50
C	523		CCSQCH101J50
C	524		CCSQCH101J50
C	525		CCSQCH150K50
C	526		CCSQCH150K50
C	527		CCSQCH101J50
C	529		CKSQYB103K50
C	601		CCSQCH470J50
C	602		CEJA4R7M35
C	603		CCSQCH101J50
C	604		CCSQCH200J50
C	605		CCSQCH200J50
C	606		CKSQYB105K10
C	610		CCSQCH101J50
C	612		CCSQCH101J50
C	613		CCSQCH101J50
C	801		CKSYB225K16
C	803		CKSYB225K16
C	804		CKSYB225K16
C	805		CEV100M16
C	806		CKSYB225K16
C	807		CEV100M16
C	901		CKSQYB103K50
C	911		CKSQYB103K50
C	913		CKSQYB472K50
C	914	1500µF/16V	CCH1201
C	915		CEJA470M10
C	921		CEJA100M16
C	931		CKSQYB473K50
C	932		CKSYB105K16
C	951		CKSQYB103K50
C	952		CEJA100M16
C	953		CKSQYB103K50
C	954	330µF/10V	CCH1181
C	955		CEJA101M10
C	971		See Contrast table
C	972		See Contrast table
C	981		CKSQYB225K10

=====Circuit Symbol and No.		===Part Name	Part No.

CONTRAST TABLE of TUNER DECK AMP UNIT
FH-P404/UC and FH-P404/ES have the same construction except for the following:

Symbol and Description		Part No. FH-P404/UC	Part No. FH-P404/ES
IC971	IC	Not used	TPD1018F
Q504	Transistor	Not used	DTC124EK
Q941	Chip Transistor	Not used	2SA1162
D940	Diode	Not used	DAN202K
D941	Diode	Not used	MA110
D971,972	Diode	Not used	ERA15-02VH
L941	Ferri-Inductor	Not used	LAU2R2K
R510,521		RS1/10S0R0J	Not used
R525		Not used	RS1/10S182J
R610		RS1/10S473J	RS1/10S243J
R611		RS1/10S243J	RS1/10S473J
R941		Not used	RS1/10S183J
R942		Not used	RS1/10S272J
R943		Not used	RS1/10S472J
R944,971		Not used	RS1/10S102J
C508		Not used	CKSQYB103K50
C971		Not used	CKSQYB104K50
C972		Not used	CKSYB105K16
FM/AM Tuner Unit		CWE1417	CWE1485

I Unit Number :CWX2285
Unit Name :Control Unit

MISCELLANEOUS

IC	101	IC	UPC2572GS
IC	201	IC	UPD63702AGF
IC	301	IC	BA6997FM
IC	302	IC	BA6285FP
IC	601	IC	TA2063F
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664
Q	102	Transistor	UMD2N
D	701	Diode	1SR154-400
D	801	Chip LED	CL200IRX
D	802	Chip LED	CL200IRX
X	201	Ceramic Resonator 16.93MHz	CSS1363
S	801	Switch (Home)	CSN1028
S	802	Spring Switch (Clamp)	CSN1044

RESISTORS

R	101	RS1/8S100J
R	102	RS1/8S120J
R	103	RS1/16S102J
R	104	RS1/16S822J
R	105	RS1/16S682J
R	106	RS1/16S183J
R	107	RS1/16S822J
R	108	RS1/16S333J
R	109	RS1/16S683J
R	110	RS1/16S134J
R	111	RS1/16S273J
R	112	RS1/16S222J
R	113	RS1/16S103J
R	114	RS1/16S103J
R	115	RS1/16S102J
R	116	RS1/16S163J
R	117	RS1/16S163J
R	201	RS1/16S104J
R	202	RS1/16S473J
R	501	RS1/16S0R0J

=====Circuit Symbol and No.		===Part Name	Part No.
R	505		RS1/16S102J
R	507		RA3C102J
R	508		RA4C681J
R	601		RS1/16S102J
R	602		RS1/16S102J
R	603		RS1/16S223J
R	604		RS1/16S223J
R	801		RS1/8S751J
R	802		RS1/8S751J
CAPACITORS			
C	101		CEV101M6R3
C	102		CKSQYB104K16
C	103		CEV470M6R3
C	104		CKSYB334K16
C	105		CCSRCH330J50
C	106		CKSRYB103K25
C	107		CEV4R7M35
C	108		CKSQYB273K50
C	109		CCSRCH101J50
C	110		CKSQYB104K16
C	111		CKSRYB332K50
C	112		CKSQYB473K16
C	113		CKSRYB103K25
C	114		CKSRYB391K50
C	115		CCSRCH121J50
C	116		CKSRYB682K50
C	117		CKSRYB333K16
C	118		CKSYB334K16
C	119		CKSYB334K16
C	120		CKSYB334K16
C	121		CKSYB334K16
C	122		CKSQYB104K16
C	123		CKSRYB472K50
C	124		CKSQYB104K16
C	125		CCSRCH6R0D50
C	126		CKSRYB153K25
C	127		CCSRCH102J25
C	201		CKSYB334K16
C	202		CKSQYB104K16
C	203		CKSQYB104K16
C	303		CEV470M16
C	304		CKSRYB103K25
C	305		CKSRYB103K25
C	306		CKSRYB103K25
C	307		CEV100M25
C	502		CKSRYB471K50
C	601		CEV101M6R3
C	602		CKSQYB104K16
C	603		CEV4R7M35
C	604		CEV4R7M35
C	605		CKSRYB152K50
C	606		CKSRYB152K50
C	607		CEV220M6R3
C	701	22µF/6.3V	CCH1300
C	702		CKSYB334K16
C	703		CEV101M6R3
C	901		CCSRCH471J50
C	902		CCSRCH271J50
C	903		CCSRCH471J50
C	904		CCSRCH101J50

J Unit Number :
Unit Name :Photo Unit

Q	1	Photo-transistor	CPT-230S-X
Q	2	Photo-transistor	CPT-230S-X

=====Circuit Symbol and No.		===Part Name	Part No.

D Unit Number :EWM1010
Unit Name :Deck Unit

MISCELLANEOUS

IC	251	IC	HA12192F
IC	351	IC	PA2020A
Q	271	Transistor	2SC4116
Q	351	Transistor	2SB1260
Q	352	Transistor	2SC4102
Q	401	Transistor	DTC114EU
D	351	Diode	1SS355
VR	301	Semi-fixed 33kΩ(B)	CCP1280
VR	302	Semi-fixed 33kΩ(B)	CCP1280

RESISTORS

R	255		RS1/16S181J
R	256		RS1/16S181J
R	257		RS1/16S183J
R	258		RS1/16S183J
R	259		RS1/16S133J
R	260		RS1/16S133J
R	261		RS1/16S274J
R	262		RS1/16S274J
R	271		RS1/16S183J
R	275		RS1/16S473J
R	276		RS1/16S104J
R	277		RS1/16S224J
R	278		RS1/16S104J
R	281		RS1/8S0R0J
R	282		RS1/8S0R0J
R	283		RS1/8S0R0J
R	284		RS1/8S0R0J
R	285		RS1/16S0R0J
R	286		RS1/16S0R0J
R	287		RS1/16S0R0J
R	288		RS1/8S0R0J
R	289		RS1/8S0R0J
R	290		RS1/8S0R0J
R	301		RS1/16S0R0J
R	321		RS1/8S0R0J
R	351		RS1/16S102J
R	352		RS1/16S102J
R	353		RS1/16S102J
R	354		RS1/16S102J
R	355		RS1/10S274J
R	356		RS1/10S202J
R	357		RS1/10S472J
R	358		RS1/10S103J
R	359		RS1/10S103J
R	360		RS1/10S102J
R	361		RS1/10S622J
R	362		RS1/8S181J
R	373		RS1/8S0R0J
R	374		RS1/8S0R0J
R	375		RS1/8S0R0J
R	401		RS1/16S123J
R	402		RS1/16S332J
R	403		RS1/16S911J
R	404		RS1/16S274J
R	421		RS1/8S0R0J

CAPACITORS

C	251		CKSRYB391K50
C	252		CKSRYB391K50
C	253		CKSRYB391K50
C	254		CKSRYB391K50
C	255		CKSRYB103K50

=====Circuit Symbol and No.	===Part Name	Part No.
C 256		CKSRYB103K50
C 271		CEJA1R0M50
C 272		CKSQYB104K16
C 301		CKSYB474K16
C 302		CKSYB474K16
C 303		CKSQYB104K16
C 304		CKSQYB104K16
C 351		CKSYB224K25
C 352		CKSQYB392K50
C 353		CKSQYB103K50
C 354		CKSQYB473K50
C 355		CKSYB104K50
C 356		CKSQYB103K50
C 401		CKSRYB472K50
C 402		CEJA1R0M50
C 403		CKSRYB223K25
C 404		CKSRYB103K50
C 405		CKSRYB333K16

E Unit Number :
Unit Name :PCB Unit

S	1	Switch(Load)	ESG1004
S	2	Switch(70μS)	ESG1004
EGN	1	Photo-interrupter	EGN1005

F Unit Number :
Unit Name :Reel PCB

EGN	2	Photo-interrupter	EGN1006
EGN	3	Photo-interrupter	EGN1006

C Unit Number :CWM6152
Unit Name :DD Converter Unit

MISCELLANEOUS

IC	1601	IC	PD4982A
IC	1801	IC	M5291FP
Q	1601	Transistor	DTA124EK
Q	1801	Transistor	2SB1198K
Q	1802	Transistor	2SC3518-Z
Q	1803	Transistor	2SD1782K
D	1801	Diode	ERA92-02VH
L	1802	Choke Coil 390mH	CTH1209
L	1803	Choke Coil 4.7mH	CTH1210
X	1601	Resonator 8.380MHz	CSS1354

RESISTORS

R 1601		RS1/10S681J
R 1602		RS1/10S102J
R 1603		RS1/10S102J
R 1604		RS1/10S102J
R 1605		RS1/10S473J
R 1606		RS1/10S473J
R 1607		RS1/10S473J
R 1608		RS1/10S222J
R 1609		RS1/10S222J
R 1610		RS1/10S103J
R 1611		RS1/10S203J
R 1612		RS1/10S473J
R 1613		RS1/10S222J
R 1614		RS1/10S221J
R 1615		RA4C221J
R 1801		RS1/10S103J
R 1802		RS1/10S103J
R 1803		RS1/10S103J
R 1804		RS1/10S222J
R 1805		RS1/10S473J

=====Circuit Symbol and No.	===Part Name	Part No.
R 1806		RN1/10SE4703D
R 1807		RN1/10SE1302D
R 1808		RS1/10S103J
R 1809		RS1/10S103J
R 1810		RN1/10SE3301D
R 1811		RS1/10S333J
R 1813		RS1/2PMFR33J
R 1814		RS1/10S0R0J
R 1815		RS1/10S0R0J

CAPACITORS

C	1601		CCSQCH470J50
C	1603		CEJA4R7M35
C	1801		CEJA101M16
C	1802	100μF/50V	CCH1315
C	1803	47μF/50V	CCH1314
C	1804		CKSQYB473K50
C	1805		CCSQCH680J50
C	1806		CKSQYB102K50
C	1808		CKSQYB223K50
C	1809		CKSQYB473K50

H Unit Number :CWM5918(FH-P404/UC)
Unit Number :CWM5917(FH-P404/ES)
Unit Name :FL Unit

MISCELLANEOUS

IC	1901	IC	PD4942A
IC	1902	IC	UPD16306BGF
IC	1904	IC	TC7S04FU
IC	1905	IC	BA3834F
Q	1912	Transistor	2SD1782K
Q	1913	Transistor	2SD1782K
Q	1914	Transistor	2SD1782K
Q	1915	Transistor	2SD1782K
Q	1916	Transistor	2SD1782K
Q	1917	Transistor	2SD1782K
D	1906	LED	CL170PGCD
D	1907	LED	CL170PGCD
D	1908	LED	CL170PGCD
L	1901	Inductor	LCTB2R2K2125
L	1902	Inductor	LCTB2R2K2125
X	1901	Ceramic Resonator 4.72MHz	CSS1430
S	1923	Switch	CSG1043
		FL	CAW1482

RESISTORS

R 1911		RS1/16S101J
R 1944		RS1/16S102J
R 1946		RA3C473J
R 1947		RS1/16S124J
R 1948		RS1/16S103J
R 1949		RS1/16S473J
R 1950		RS1/16S473J
R 1951		RS1/4S561J
R 1954		RS1/16S473J
R 1955		RS1/10S473J
R 1956		RA3C102J
R 1957		RA3C101J
R 1958		RA3C101J
R 1959		RS1/10S101J
R 1960		RS1/10S103J
R 1961		RS1/10S101J
R 1962		RS1/10S103J
R 1963		RS1/10S101J
R 1964		RS1/10S103J
R 1965		RS1/10S101J

=====Circuit Symbol and No.		===Part Name	Part No.
R	1966		RS1/10S103J
R	1967		RS1/10S101J
R	1968		RS1/10S103J
R	1969		RS1/10S101J
R	1970		RS1/10S103J
R	1971		RS1/10S0R0J
R	1972		RS1/10S0R0J
R	1973		RS1/10S0R0J
R	1974		RS1/10S0R0J
R	1975		RS1/10S0R0J
R	1976		RS1/10S0R0J
R	1977		RS1/8S331J

CAPACITORS

C	1909		CCSRCH101J50
C	1910		CKSYB225K16
C	1912		CKSQYB104K50
C	1913		CKSQYB104K50
C	1914		CKSQYB105K10
C	1915		CKSQYB103K50
C	1916		CKSQYB105K10
C	1917		CCSRCH101J50
C	1918		CCSRCH101J50
C	1919		CKSRYB102K50
C	1922		CCSQCH101J50
C	1923		CCSQCH101J50
C	1924		CCSQCH101J50
C	1925		CCSQCH101J50
C	1926		CCSQCH101J50
C	1927		CCSQCH101J50

G Unit Number :CWM5887(FH-P404/UC)
Unit Number :CWM5884(FH-P404/ES)
Unit Name :Switch Unit

MISCELLANEOUS

IC	1903	HIC Module	RS-140
Q	1911	Transistor	XP4311
D	1901	LED	CL170SBX
D	1902	LED	CL170SBX
D	1903	LED	CL170PGCD
D	1904	LED	CL170PGCD
D	1905	LED	CL170PGCD
D	1909	LED	CL170PGCD
S	1901	Switch	CSG1107
S	1902	Switch	CSG1108
S	1903	Switch	CSG1108
S	1904	Switch	CSG1107
S	1905	Switch	CSG1108
S	1906	Switch	CSG1108
S	1907	Switch	CSG1043
S	1908	Switch	CSG1107
S	1909	Switch	CSG1108
S	1910	Switch	CSG1108
S	1911	Switch	CSG1108
S	1912	Switch	CSG1108
S	1913	Switch	CSG1108
S	1914	Switch	CSG1107
S	1915	Switch	CSG1107
S	1916	Switch	CSG1108
S	1917	Push Switch	CSG1109
S	1918	Switch	CSG1043
S	1919	Switch	CSG1043
S	1920	Switch	CSG1043
S	1921	Switch	CSG1043
S	1922	Switch	CSG1107

=====Circuit Symbol and No.		===Part Name	Part No.
S	1924	Switch	CSG1043

RESISTORS

R	1901		RS1/16S101J
R	1902		RS1/16S102J
R	1903		RS1/4S561J
R	1904		RS1/4S561J
R	1905		RS1/4S561J
R	1906		RS1/4S561J
R	1907		RS1/4S561J
R	1908		RS1/4S561J
R	1909		RS1/4S102J
R	1910		RS1/4S102J
R	1914		RS1/16S472J
R	1915		RS1/16S821J
R	1916		RS1/16S122J
R	1917		RS1/16S182J
R	1918		RS1/16S302J
R	1919		RS1/16S622J
R	1920		RS1/16S223J
R	1921		RS1/16S472J
R	1922		RS1/16S821J
R	1923		RS1/16S122J
R	1924		RS1/16S182J
R	1925		RS1/16S302J
R	1926		RS1/16S622J
R	1927		RS1/16S472J
R	1928		RS1/16S821J
R	1929		RS1/16S122J
R	1930		RS1/16S182J
R	1931		RS1/16S302J
R	1932		RS1/16S622J
R	1933		RS1/16S223J
R	1934		RS1/16S472J
R	1935		RS1/16S821J
R	1936		RS1/16S122J
R	1937		RS1/16S182J
R	1938		RS1/16S302J
R	1939		RS1/16S622J
R	1940		RS1/16S223J
R	1942		RS1/4S751J
R	1943		RS1/4S751J
R	1953		RS1/16S0R0J

CAPACITORS

C	1901		CKSYB225K16
C	1902		CCSRCH101J50
C	1903		CKSQYB104K50
C	1904		CKSQYB104K50

Miscellaneous Parts List

		Pickup Unit (Service)	CXX1230
M	1	Motor Unit (Spindle)	CXA8912
M	2	CRG Motor Unit	CXB3043
M	3	Load Motor Unit	CXA8702
M	1	Motor Unit (Main)	EXA1464
M	2	Motor Unit (Sub)	EXA1485
HD	1	Head Assy	EXA1506