



EXPLODED VIEW (DVD MECHANISM)

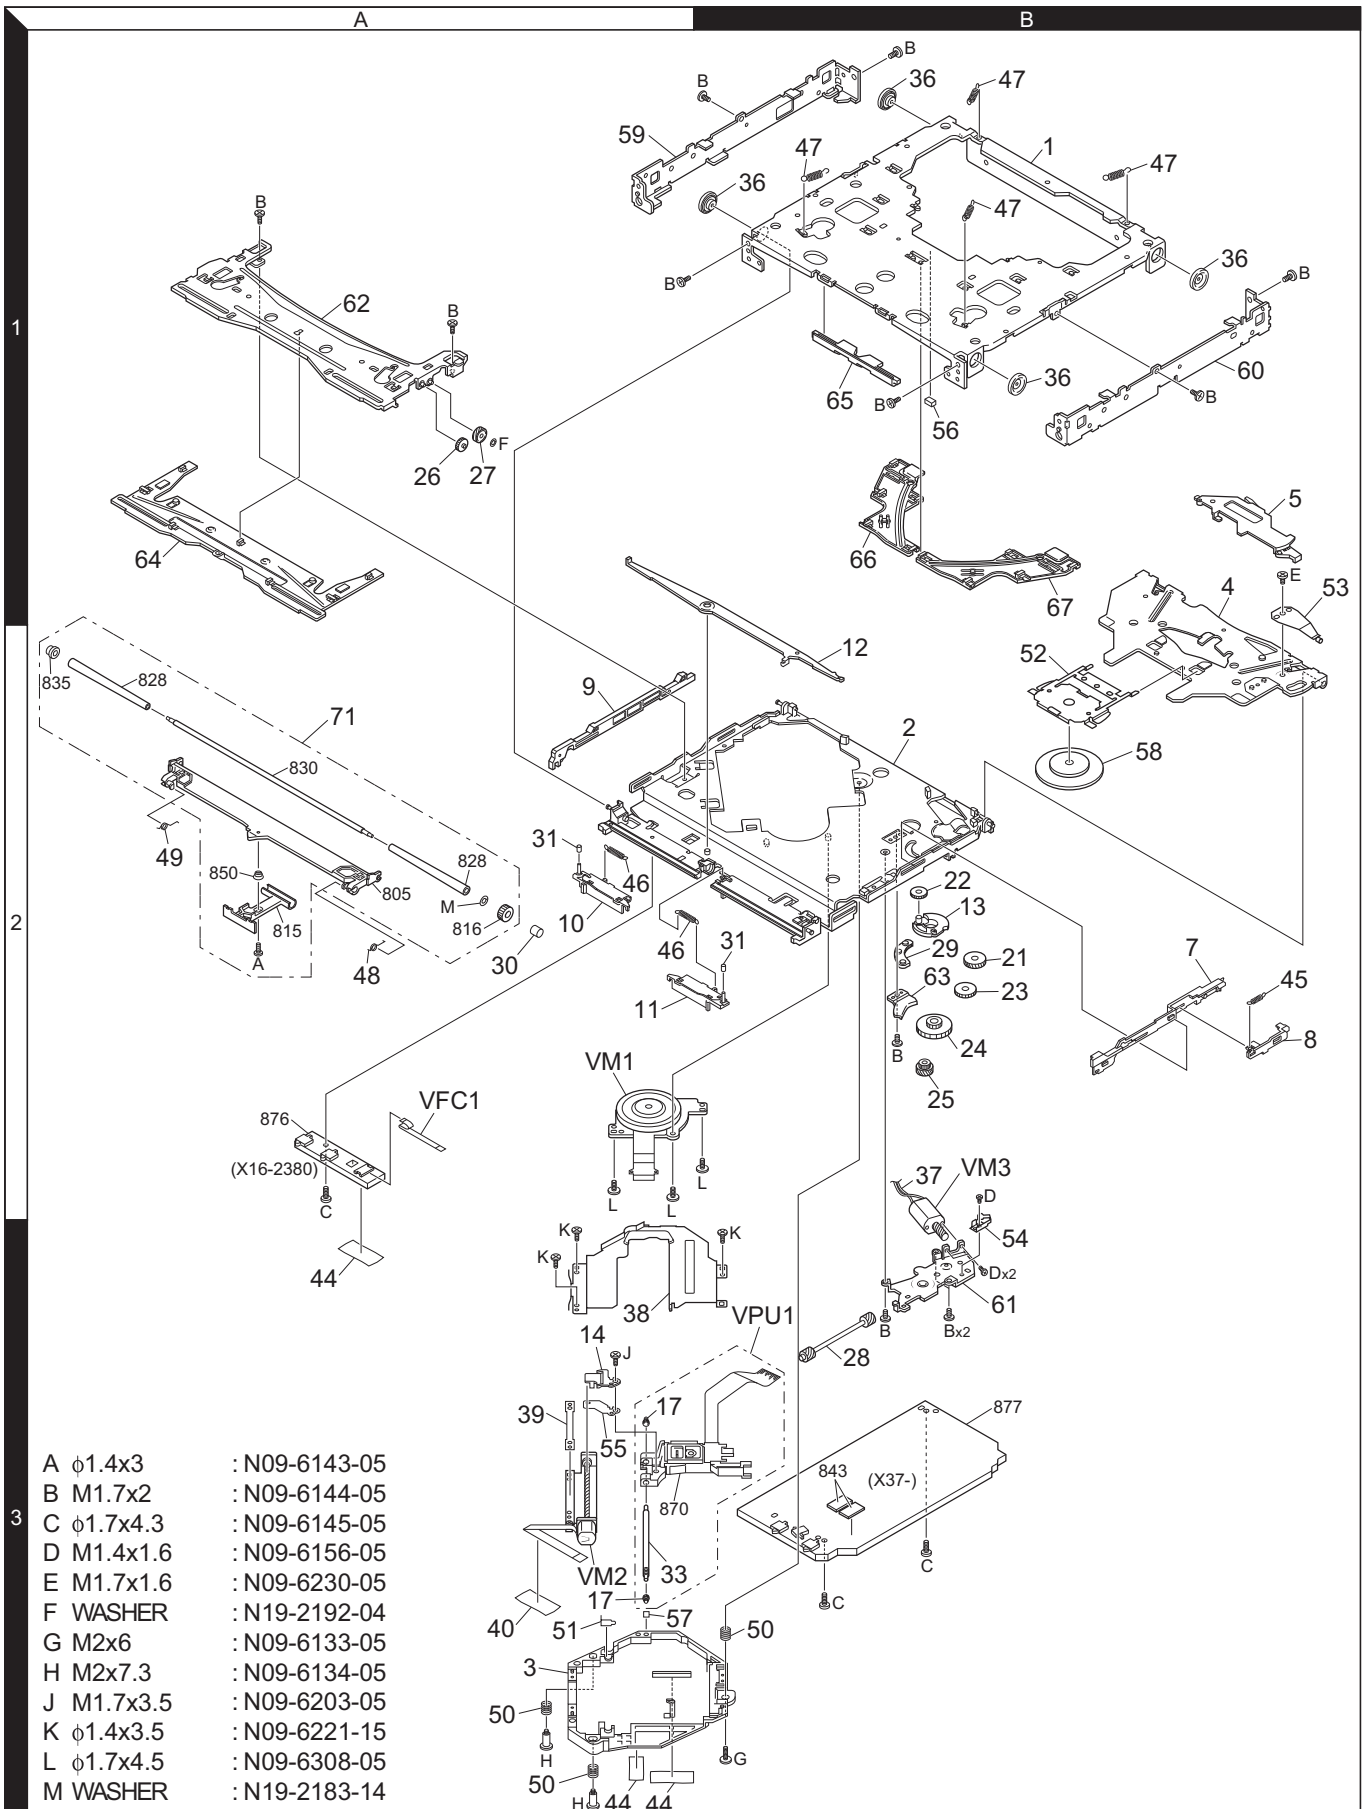


Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

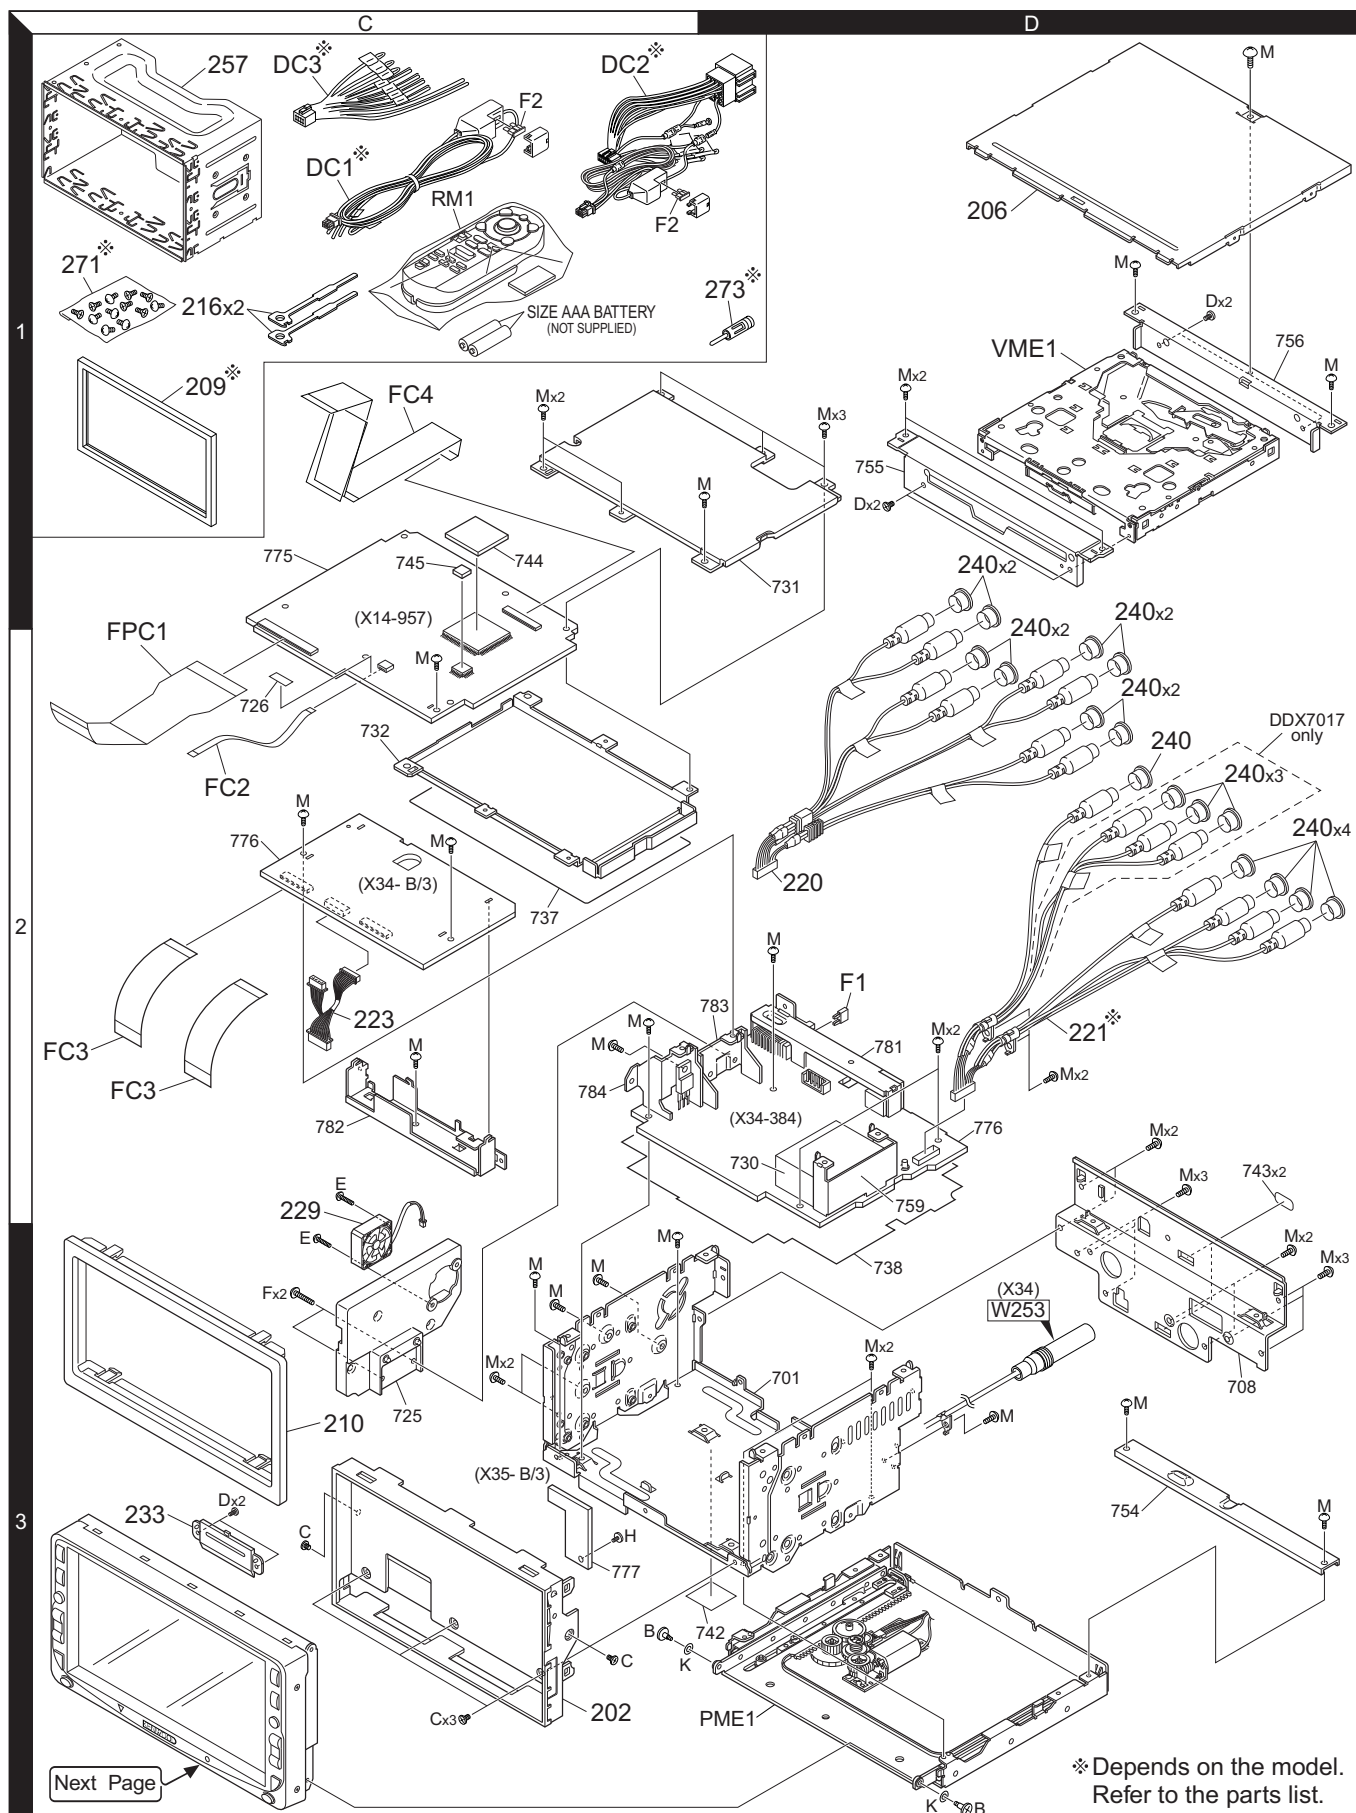


EXPLODED VIEW (PANEL)

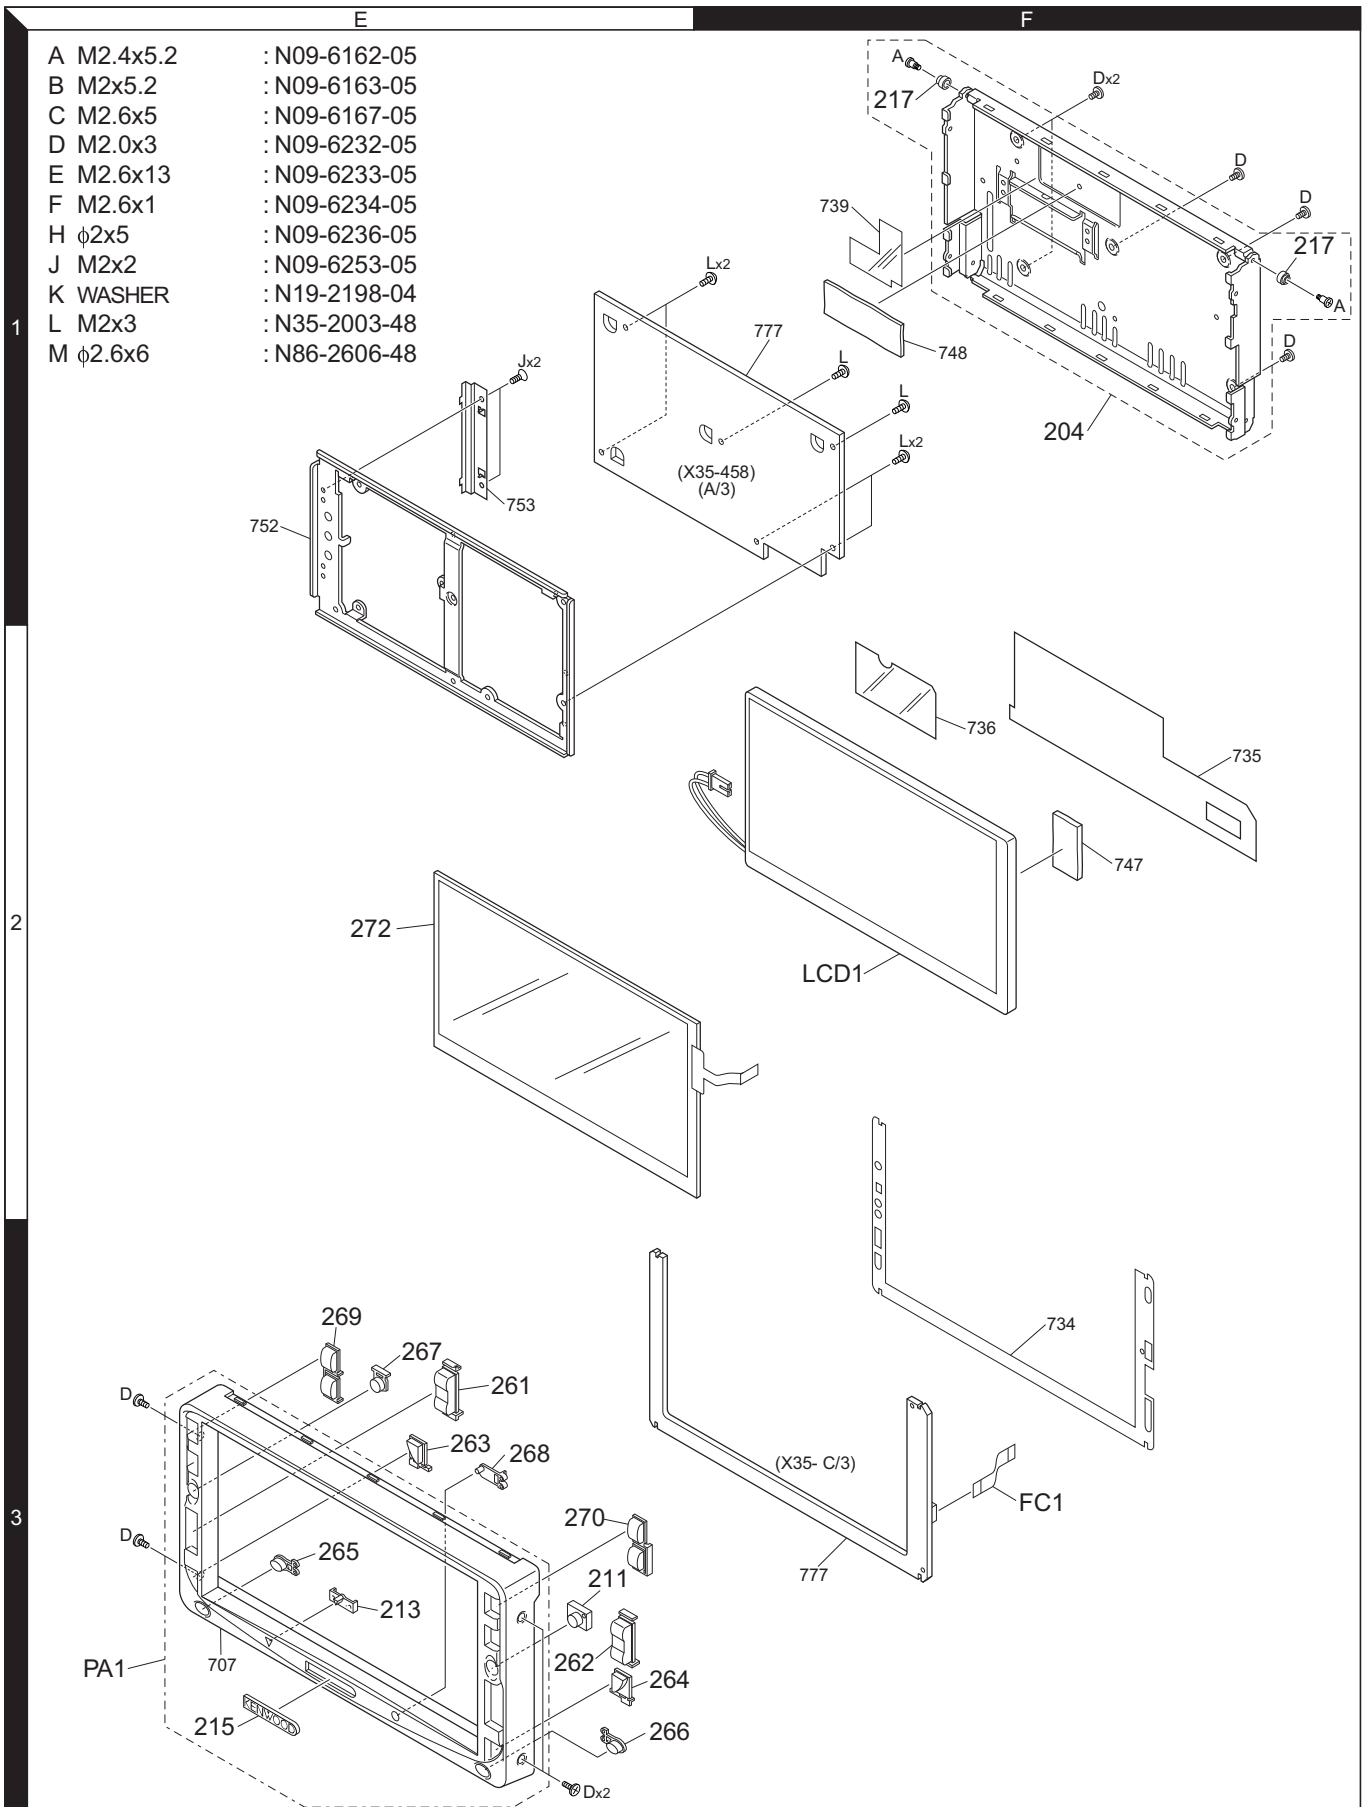

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL MECHANISM)

A	M1.7x4	: N09-6147-08
B	φ2x2.3	: N09-6148-08
D	φ2x2.3	: N09-6150-08
E		: N09-6151-08
F	WASHER1.6x3.5	: N19-2105-14

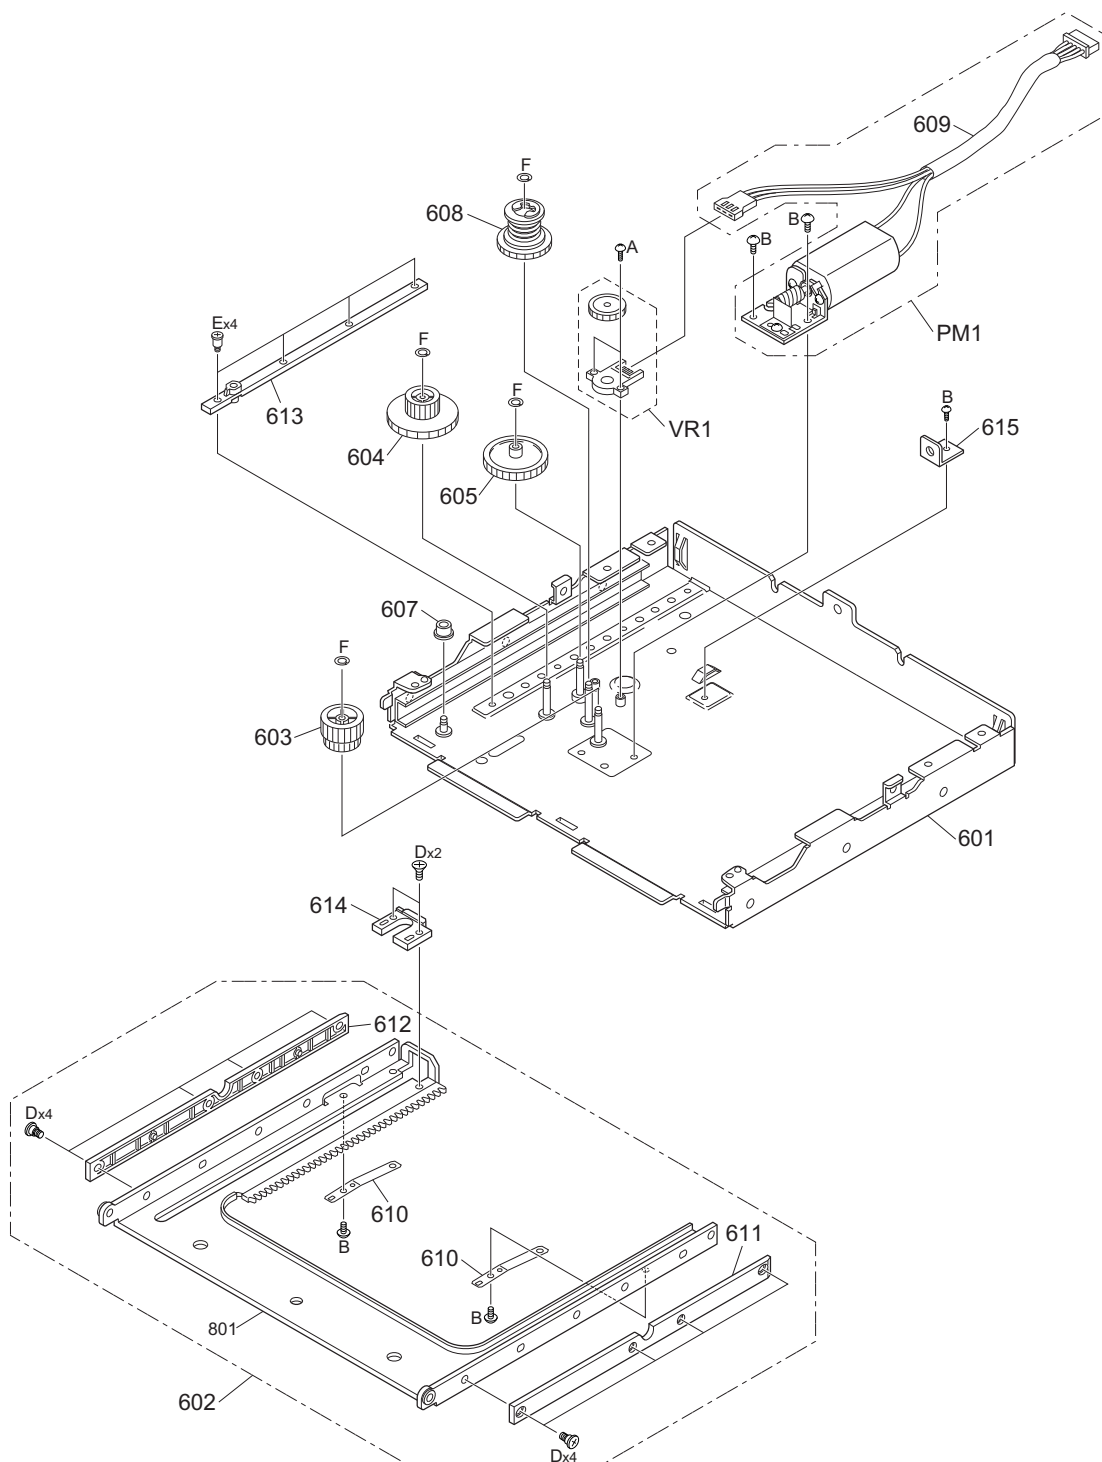

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DDX6027/6027Y/7017/7037/7047/7067						DC3	1C	*	E30-6478-05	DC CORD	K1R1M2 X2C1
202	3C	*	A22-3088-02	SUB PANEL ASSY	K1	DC3	1C	*	E30-6478-05	DC CORD	
202	3C	*	A22-3089-02	SUB PANEL ASSY	M2X2C1	FC1	3F	*	E39-0780-05	FLAT CABLE	
202	3C	*	A22-3089-02	SUB PANEL ASSY	R1E3E4	FC2	2C	*	E39-0781-05	FLAT CABLE	
204	1F	*	A46-1801-13	REAR COVER ASSY		FC3	2C	*	E39-0773-05	FLAT CABLE	
206	1D		A52-0854-12	TOP PLATE		FC4	1C	*	E39-0770-15	FLAT CABLE	
PA1	3E	*	A64-3581-01	PANEL ASSY	K1	229	2C	*	F09-1992-05	FAN	
PA1	3E	*	A64-3582-01	PANEL ASSY	R1X2	233	3C		F19-1426-03	COVER	
PA1	3E	*	A64-3583-01	PANEL ASSY	E3E4	240	2D		F29-0626-04	INSULATING COVER	
PA1	3E	*	A64-3584-01	PANEL ASSY	M2	△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) 10A	
PA1	3E	*	A64-3586-01	PANEL ASSY	C1	△ F2	1C		F52-0004-05	FUSE (MINI BLADE TYPE) 5A	
RM1	1C		A70-2072-05	REMOTE CONTROLLER AS (RC-DV601)		-			H10-4917-02	POLYSTYRENE FOAMED FIXTURE	
-			B46-0100-50	WARRANTY CARD	E3E4R1	-			H10-4918-02	POLYSTYRENE FOAMED FIXTURE	
-			B46-0100-50	WARRANTY CARD	K1M2X2	-			H12-2745-04	PACKING FIXTURE	
-			B46-0612-14	ID CARD	E3E4M2	-			H25-0338-04	PROTECTION BAG (250X350X0.03)	
-			B46-0612-14	ID CARD	X2	-			H25-1127-04	PROTECTION BAG (0.5X350X450)	
-			B46-0639-00	WARRANTY CARD	C1	-		*	H54-3530-03	ITEM CARTON CASE	K1
-			B46-0657-04	ID CARD	C1	-		*	H54-3531-03	ITEM CARTON CASE	R1
-		*	B54-4467-00	INSTALLATION MANUAL	K1R1	-		*	H54-3532-03	ITEM CARTON CASE	E3
-		*	B54-4468-00	INSTALLATION MANUAL	E3E4	-		*	H54-3533-03	ITEM CARTON CASE	E4
-		*	B54-4469-00	INSTALLATION MANUAL	M2X2C1	-		*	H54-3534-03	ITEM CARTON CASE	M2
-		*	B64-3115-00	INSTRUCTION MANUAL (ENGLISH)	K1R1	-		*	H54-3535-03	ITEM CARTON CASE	X2
-		*	B64-3116-00	INSTRUCTION MANUAL (FRENCH)	K1	-		*	H54-3536-03	ITEM CARTON CASE	C1
-		*	B64-3117-00	INSTRUCTION MANUAL (SPANISH)	K1R1	257	1C		J22-0171-03	MOUNTING HARDWARE ASSY	
-		*	B64-3118-00	INSTRUCTION MANUAL (PORTUGUESE)	R1	FPC1	2C		J84-0173-05	FLEXIBLE PRINTED WIRING BOARD	
-		*	B64-3119-00	INSTRUCTION MANUAL (ENGLISH)	E3E4	261	3E	*	K24-4412-03	PUSH KNOB (SEEK)	
-		*	B64-3120-00	INSTRUCTION MANUAL (FRENCH)	E3	262	3E	*	K24-4411-03	PUSH KNOB (VOL)	
-		*	B64-3121-00	INSTRUCTION MANUAL (GERMAN)	E3	263	3E	*	K24-4413-03	PUSH KNOB (ATT)	
-		*	B64-3122-00	INSTRUCTION MANUAL (DUTCH)	E3	264	3E	*	K24-4414-03	PUSH KNOB (AUTO)	C1
-		*	B64-3123-00	INSTRUCTION MANUAL (ITALIAN)	E3	264	3E	*	K24-4414-03	PUSH KNOB (AUTO)	K1R1X2
-		*	B64-3124-00	INSTRUCTION MANUAL (SPANISH)	E3	264	3E	*	K24-4415-03	PUSH KNOB (TI)	
-		*	B64-3125-00	INSTRUCTION MANUAL (PORTUGUESE)	E3	265	3E	*	K24-4416-03	PUSH KNOB (VSEL)	E3E4M2
-		*	B64-3127-00	INSTRUCTION MANUAL (ENGLISH)	M2X2C1	266	3E	*	K24-4417-03	PUSH KNOB (PLAY/PAUSE)	
-		*	B64-3128-00	INSTRUCTION MANUAL (T-CHINESE)	M2	267	3E		K24-4155-13	PUSH KNOB (SRC)	
-		*	B64-3129-00	INSTRUCTION MANUAL (KOREAN)	M2	268	3E		K24-4156-14	PUSH KNOB (RESET)	
-		*	B64-3130-00	INSTRUCTION MANUAL (S-CHINESE)	C1	269	3E	*	K25-1772-03	PUSH KNOB (EJECT,FUNC)	
209	1C		B07-3046-04	ESCUTCHEON ASSY	M2X2C1	270	3E	*	K25-1773-03	PUSH KNOB (MODE,SCRN)	
210	3C		B07-3105-02	ESCUTCHEON		271	1C	*	N99-1776-05	SCREW SET	K1R1M2 X2C1
211	3E		B10-4546-13	FRONT GLASS		271	1C	*	N99-1776-05	SCREW SET	
213	3E		B19-2262-03	LIGHTING BOARD		A	1F		N09-6162-05	STEPPED SCREW (M2.4X5.2)	
215	3E		B43-1271-04	KENWOOD BADGE		B	3D		N09-6163-05	STEPPED SCREW (M2X5.2)	
LCD1	2F		B38-1153-05	LCD		C	3C		N09-6167-05	MACHINE SCREW (M2.6X5)	
216	1C		D10-4674-04	LEVER		D	3C		N09-6232-05	MACHINE SCREW (M2.0X3)	
217	1F		D14-0792-04	ROLLER		E	2C		N09-6233-05	MACHINE SCREW (M2.6X13)	
PME1	3D		D40-2201-15	PANEL MECHANISM ASSY		F	3C		N09-6234-05	MACHINE SCREW (M2.6X1)	
220	2D	*	E30-6488-15	CORD WITH PINPLUG		H	3C		N09-6236-05	SEMS (TAPTITE SCREW) (T2.0X 5)	
221	2D	*	E30-6489-15	CORD WITH PINPLUG	K1	J	1E		N09-6253-05	MACHINE SCREW (M2X2)	
221	2D	*	E30-6490-25	CORD WITH PINPLUG	M2X2C1	K	3D		N19-2198-04	FLAT WASHER (F2.5)	
221	2D	*	E30-6490-25	CORD WITH PINPLUG	R1E3E4	L	1F		N35-2003-48	BINDING HEAD MACHINE SCREW	
223	2C	*	E39-0779-15	WIRING HARNESS		M	2C		N86-2606-48	BINDING HEAD TAPTITE SCREW	
DC1	1C		E30-6475-15	DC CORD	K1R1M2	272	2E		S79-0846-05	SWITCH ASSY	
DC1	1C		E30-6475-15	DC CORD	X2C1						
DC2	1C	*	E30-6477-15	DC CORD	E3E4						

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DDX6027/6027Y/7017/7037/7047/7067

Ref. No.	Add	New	Parts No.	Description	Destination
273	1C		T90-0552-05	ANTENNA ADAPTOR	E3E4
VME1	1D		X92-5130-00	DVD MECHANISM ASSY (DVS-7000V)	
VIDEO CONTROL UNIT (X14-957/958x-xx)					
C31,32 C48,49 C100 C101 C102			CC73GCH1H471J CC73GCH1H471J CK73GB1H103K C90-5670-05 CK73GB1H103K	CHIP C 470PF J CHIP C 470PF J CHIP C 0.010UF K ELECTRO 2200UF 16WV CHIP C 0.010UF K	
C103-105 C108 C109-111 C113 C114			CC73GCH1H151J CK73GB1A105K CK73GB1H104K CK73GB1H104K CK73EB1H474K	CHIP C 150PF J CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.47UF K	
C115-117 C118 C119-121 C122 C123-126			CK73GB1H104K CE32BM1C221M CK73GB1H104K CK73FB1C105K CK73GB1H104K	CHIP C 0.10UF K CHIP EL 220UF 16WV CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K	
C127 C128 C130-133 C134 C135			CK73EB1C106K CK73FB0J106K C93-1367-05 CC73GCH1H101J CC73GCH1H391J	CHIP C 10UF K CHIP C 10UF K CHIP C 10UF K CHIP C 100PF J CHIP C 390PF J	
C136 C137-139 C140 C141 C142			C93-1367-05 CK73GB1H104K CK73GB1H102K C93-1367-05 CK73GB1H104K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 1000PF K CHIP C 10UF K CHIP C 0.10UF K	
C143,144 C145 C146 C147 C148,149			CE32AU1A560M CE32AU0J121M CE32AU1A560M CK73GB1H102K CK73GB1H104K	CHIP EL 56UF 10WV CHIP EL 120UF 6.3WV CHIP EL 56UF 10WV CHIP C 1000PF K CHIP C 0.10UF K	
C150 C151 C152 C153-155 C156			CK73EB1E225K CK73GB1H104K CE32AU1A560M CK73GB1H104K CK73GB1A474K	CHIP C 2.2UF K CHIP C 0.10UF K CHIP EL 56UF 10WV CHIP C 0.10UF K CHIP C 0.47UF K	
C158 C159,160 C161 C162 C163			CK73GB1H104K C92-1909-05 C92-1685-05 CK73GB1H102K CK73GB1A474K	CHIP C 0.10UF K ELECTRO 22UF 12.5WV ELECTRO 47UF 6.3WV CHIP C 1000PF K CHIP C 0.47UF K	
C164 C165 C166 C167,168 C169			CK73GB1H102K CK73GB1A474K CK73GB1H102K CK73GB1H104K CK73GB1H102K	CHIP C 1000PF K CHIP C 0.47UF K CHIP C 1000PF K CHIP C 0.10UF K CHIP C 1000PF K	
C170 C171 C172,173 C174 C175			CK73GB1H104K CK73GB1H102K CK73GB1H104K CK73GB1H102K CK73GB1H104K	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K CHIP C 1000PF K CHIP C 0.10UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C180,181 C200,201 C202 C203 C204			CK73FB1C105K CK73GB1H103K CC73GCH1H180J CC73GCH1H220J CK73GB1A105K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 18PF J CHIP C 22PF J CHIP C 1.0UF K	
C205 C206-209 C210 C211,212 C213,214			CK73FB0J106K CK73GB1H104K CK73GB1H103K CK73GB1H104K CK73GB1H103K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C216 C217 C218,219 C220,221 C301			CK73GB1H103K CK73GB1H104K CK73GB1H103K CK73GB1H104K CK73FB0J106K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 10UF K	
C303 C303 C304 C306 C306			CK73GB1H104K CK73GB1H104K CK73FB0J106K CC73GCH1H270J CC73GCH1H270J	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 27PF J CHIP C 27PF J	E3E4M2 X2C1 E3E4M2 X2C1
C306 C307 C309 C309 C310			CC73GCH1H470J CK73GB1H104K CC73GCH1H180J CC73GCH1H180J CC73GCH1H220J	CHIP C 47PF J CHIP C 0.10UF K CHIP C 18PF J CHIP C 18PF J CHIP C 22PF J	K1R1 E3E4M2 X2C1
C311-313 C311-313 C312,313 C316 C317			CK73GB1H104K CK73GB1H104K CK73GB1H104K CK73GB1H104K CC73GCH1H180J	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 18PF J	E3E4M2 X2C1 K1R1
C318 C318 C319,320 C321-323 C324			CC73GCH1H270J CC73GCH1H270J CK73GB0J225K CK73GB1A105K CK73GB1H223K	CHIP C 27PF J CHIP C 27PF J CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 0.022UF K	E3E4M2 X2C1
C325 C326 C332,333 C332,333 C334			CK73GB0J475K CK73GB1H473K CK73GB1A105K CK73GB1A105K CK73GB1H104K	CHIP C 4.7UF K CHIP C 0.047UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.10UF K	E3E4M2 X2C1
C335,336 C335,336 C337 C338 C339			CK73GB1A105K CK73GB1A105K CK73GB1A474K CK73FB0J106K CK73GB1H472K	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.47UF K CHIP C 10UF K CHIP C 4700PF K	E3E4M2 X2C1
C340 C341 C342,343 C344 C345-350			CK73GB1A105K CK73FB0J106K CK73GB1A105K CK73GB1H223K CK73GB1A105K	CHIP C 1.0UF K CHIP C 10UF K CHIP C 1.0UF K CHIP C 0.022UF K CHIP C 1.0UF K	
C351 C352 C353 C354,355 C361			CK73FB1A225K CK73GB1A105K CK73GB1H103K CK73FB1A225K C92-1685-05	CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 2.2UF K ELECTRO 47UF 6.3WV	

E3 : DDX6027 E4 : DDX6027Y (Europe)
K1 : DDX7017 (North America)
X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)
C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-957/958x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C362			CK73GB1H104K	CHIP C 0.10UF K		C673,674			CK73GB1H104K	CHIP C 0.10UF K	
C363			CK73FB0J106K	CHIP C 10UF K		C675			CK73GB1A105K	CHIP C 1.0UF K	
C364			CC73GCH1H331J	CHIP C 330PF J		C701			CK73GB1H332K	CHIP C 3300PF K	
C365			CK73GB1A105K	CHIP C 1.0UF K		C702,703			CC73GCH1H681J	CHIP C 680PF J	
C366,367			CK73GB1H104K	CHIP C 0.10UF K		C704			CK73GB1H104K	CHIP C 0.10UF K	
C368			CK73GB1A105K	CHIP C 1.0UF K		C705			CK73EB1C106K	CHIP C 10UF K	
C369			CK73GB1H104K	CHIP C 0.10UF K		C706			CK73EB1A475K	CHIP C 4.7UF K	
C370			CK73GB1H103K	CHIP C 0.010UF K		C707			CC73GCH1H101J	CHIP C 100PF J	
C371			CK73GB0J475K	CHIP C 4.7UF K		C708			CK73GB1H332K	CHIP C 3300PF K	
C372			CK73GB1H153K	CHIP C 0.015UF K		C709,710			CC73GCH1H681J	CHIP C 680PF J	
C373			CC73GCH1H151J	CHIP C 150PF J		C711			CK73EB1A475K	CHIP C 4.7UF K	
C374			CC73GCH1E102J	CHIP C 1000PF J		C712			CC73GCH1H101J	CHIP C 100PF J	
C375			CC73GCH1H390J	CHIP C 39PF J		C713			CK73EB1C106K	CHIP C 10UF K	
C376			CC73GCH1H150J	CHIP C 15PF J		C714,715			CK73GB1H104K	CHIP C 0.10UF K	
C377			C93-1394-05	CHIP C 5PF J		C717			CK73FB0J106K	CHIP C 10UF K	
C390			CK73GB1A105K	CHIP C 1.0UF K		C718			CK73GB1H104K	CHIP C 0.10UF K	
C402			CK73FB0J106K	CHIP C 10UF K		C752			CK73GB1H104K	CHIP C 0.10UF K	
C403			CK73GB1H104K	CHIP C 0.10UF K		C770,771			CK73GB1H104K	CHIP C 0.10UF K	
C404			CK73GB1A105K	CHIP C 1.0UF K		C772			CK73FB0J106K	CHIP C 10UF K	
C405-409			CK73GB1H104K	CHIP C 0.10UF K		C773-775			CK73GB1H104K	CHIP C 0.10UF K	
C410			CK73FB0J106K	CHIP C 10UF K		C800			CC73GCH1H101J	CHIP C 100PF J	
C411			CK73GB1H104K	CHIP C 0.10UF K		C802			CK73GB1A105K	CHIP C 1.0UF K	
C412			CK73GB1A105K	CHIP C 1.0UF K		C803			CC73GCH1H101J	CHIP C 100PF J	
C413-416			CK73GB1H104K	CHIP C 0.10UF K		C804			CK73GB1H104K	CHIP C 0.10UF K	
C419-423			CK73GB1H104K	CHIP C 0.10UF K		C850,851			CK73GB1H104K	CHIP C 0.10UF K	
C424,425			CK73GB1H103K	CHIP C 0.010UF K		C918			CK73FB0J106K	CHIP C 10UF K	
C426			CC73GCH1H100D	CHIP C 10PF D		C926,927			CK73GB1H104K	CHIP C 0.10UF K	
C429,430			CC73GCH1H020C	CHIP C 2.0PF C		CN101			E41-2550-05	PIN ASSY	
C501			CK73GB1H104K	CHIP C 0.10UF K		CN501			E41-2197-05	FLAT CABLE CONNECTOR	
C502			C92-1452-05	ELECTRO 100UF 10WV		CN802			E41-2051-05	PIN ASSY	
C520			CK73FB0J106K	CHIP C 10UF K		CN850			E41-2526-05	FLAT CABLE CONNECTOR	
C540			CK73GB1A105K	CHIP C 1.0UF K		CN851	*		E41-2542-05	FLAT CABLE CONNECTOR	
C541,542			CC73GCH1H100D	CHIP C 10PF D		CN904			E41-2529-05	PIN ASSY	
C560			CK73FB0J106K	CHIP C 10UF K		J961			E56-0854-05	CYLINDRICAL RECEPTACLE	
C561-567			CK73GB1H104K	CHIP C 0.10UF K		CF100-105			L72-0780-05	CERAMIC FILTER	
C581			CK73GB1H104K	CHIP C 0.10UF K		L8			L19-0733-15	TRANSFORMER FOR CONVERTER	
C601-606			CK73GB1H104K	CHIP C 0.10UF K		L100			L92-0373-05	CHIP FERRITE	
C607			CK73GB1A105K	CHIP C 1.0UF K		L101,102			L33-1914-05	CHOKE COIL	
C608-615			CK73GB1H104K	CHIP C 0.10UF K		L103			L33-2277-05	CHOKE COIL	
C616			CK73FB0J106K	CHIP C 10UF K		L104,105			L33-2248-05	CHOKE COIL	
C617			CK73GB1A105K	CHIP C 1.0UF K		L106,107			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C618-628			CK73GB1H104K	CHIP C 0.10UF K		L108			L79-0958-05	LINE FILTER	
C650			CK73GB1H104K	CHIP C 0.10UF K		L109			L92-0373-05	CHIP FERRITE	
C651,652			CK73GB1A105K	CHIP C 1.0UF K		L200			L92-0319-05	CHIP FERRITE	
C654-656			CK73GB1A105K	CHIP C 1.0UF K		L300			L41-4705-33	SMALL FIXED INDUCTOR	
C657,658			CK73GB1H104K	CHIP C 0.10UF K		L301			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C659			C92-1452-05	ELECTRO 100UF 10WV		L350			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C660			CK73FB0J106K	CHIP C 10UF K		L400			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C661,662			CK73GB1H104K	CHIP C 0.10UF K		L402			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C663			CK73FB0J106K	CHIP C 10UF K		L520			L92-0373-05	CHIP FERRITE	
C664			C92-1685-05	ELECTRO 47UF 6.3WV		L540			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C665-668			CK73GB1H104K	CHIP C 0.10UF K		L560			L92-0373-05	CHIP FERRITE	
C669			CK73FB0J106K	CHIP C 10UF K		L601			L92-0373-05	CHIP FERRITE	
C670			CK73GB1H104K	CHIP C 0.10UF K		L603			L92-0373-05	CHIP FERRITE	
C671,672			CK73GB1A105K	CHIP C 1.0UF K							

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-957/958x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
L650 L651 L701,702 X200 X201			L41-1005-33 L92-0373-05 L41-1005-33 L78-1210-05 L77-2917-05	SMALL FIXED INDUCTOR (10U) CHIP FERRITE SMALL FIXED INDUCTOR (10U) RESONATOR (4.95MHZ) CRYSTAL RESONATOR (32.768KHZ)		R142 R143 R144 R145 R146,147			RK73GB2A273J RK73GB2A100J RK73GB2A222J RK73GB2A332J RK73GB2A100J	CHIP R 27K J 1/10W CHIP R 10 J 1/10W CHIP R 2.2K J 1/10W CHIP R 3.3K J 1/10W CHIP R 10 J 1/10W	
X300 X301 X301 X360 X540			L77-2806-05 L77-2807-05 L77-2807-05 L78-0549-05 L77-2866-05	CRYSTAL RESONATOR (3.579545MHZ) CRYSTAL RESONATOR (4.433619MHZ) CRYSTAL RESONATOR (4.433619MHZ) RESONATOR (15.734KHZ) CRYSTAL RESONATOR (27MHZ)	E3E4M2 X2C1	R148 R149 R150 R151 R152			RN73GH1J133D RN73GH1J103D RN73GH1J132D RN73GH1J473D RN73GH1J153D	CHIP R 13K D 1/16W CHIP R 10K D 1/16W CHIP R 1.3K D 1/16W CHIP R 47K D 1/16W CHIP R 15K D 1/16W	
CP400-407 CP501-505 CP506-510 CP601-604 CP605			RK74HB1J330J RK74HB1J471J RK74HB1J103J RK74HB1J472J RK74HB1J470J	CHIP-COM 33 J 1/16W CHIP-COM 470 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 47 J 1/16W		R153 R154 R155 R156 R157			RN73GH1J163D RN73GH1J182D RN73GH1J132D RN73GH1J683D RN73GH1J393D	CHIP R 16K D 1/16W CHIP R 1.8K D 1/16W CHIP R 1.3K D 1/16W CHIP R 68K D 1/16W CHIP R 39K D 1/16W	
CP606-612 CP613,614 CP615-618 CP619-625 R11-14			RK74HB1J101J RK74HB1J330J RK74HB1J472J RK74HB1J220J RK73GB2A220J	CHIP-COM 100 J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 22 J 1/16W CHIP R 22 J 1/10W		R158 R159 R161 R162 R163			RN73GH1J4021D RN73GH1J103D R92-3475-05 RK73GB2A104J RN73GH1J243D	CHIP R 4.02K D 1/16W CHIP R 10K D 1/16W CHIP R 0.27 F 1/2W CHIP R 100K J 1/10W CHIP R 24K D 1/16W	
R15,16 R39,40 R44 R51,52 R96			RK73GB2A101J RK73GB2A101J RK73GB2A103J RK73GB2A101J RK73GB2A222J	CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W CHIP R 2.2K J 1/10W		R164 R165 R166 R167 R168			RK73GB2A102J RK73GB2A473J RK73GB2A272J RK73GB2A224J RK73GB2A102J	CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W CHIP R 2.7K J 1/10W CHIP R 220K J 1/10W CHIP R 1.0K J 1/10W	
R97 R98 R99 R100 R101			RK73GB2A473J RN73GH1J243D RN73GH1J472D RN73GH1J104D RN73GH1J513D	CHIP R 47K J 1/10W CHIP R 24K D 1/16W CHIP R 4.7K D 1/16W CHIP R 100K D 1/16W CHIP R 51K D 1/16W		R169 R170 R171 R172 R174			RK73GB2A223J RK73GB2A103J RK73GB2A563J RK73GB2A102J RN73GH1J114D	CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 56K J 1/10W CHIP R 1.0K J 1/10W CHIP R 110K D 1/16W	
R102 R103 R104 R105 R106			RN73GH1J393D RK73GB2A122J RN73GH1J393D RN73GH1J333D RN73GH1J393D	CHIP R 39K D 1/16W CHIP R 1.2K J 1/10W CHIP R 39K D 1/16W CHIP R 33K D 1/16W CHIP R 39K D 1/16W		R176 R178 R179 R180 R181			RN73GH1J114D RN73GH1J114D RN73GH1J133D RK73GB2A392J RK73GB2A222J	CHIP R 110K D 1/16W CHIP R 110K D 1/16W CHIP R 13K D 1/16W CHIP R 3.9K J 1/10W CHIP R 2.2K J 1/10W	
R107 R109 R110 R111 R112			RK73GB2A103J RK73GB2A103J RK73GH2A334D RK73GB2A562J RK73GH2A334D	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 330K D 1/10W CHIP R 5.6K J 1/10W CHIP R 330K D 1/10W		R182 R183 R184 R186 R188			RK73GB2A153J RK73GB2A104J RK73GB2A303J RK73GB2A104J RK73GB2A104J	CHIP R 15K J 1/10W CHIP R 100K J 1/10W CHIP R 30K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W	
R113 R114 R115 R116 R117			RK73GB2A224J RN73GH1J682D R92-5088-05 RK73GB2A912J RK73GB2A153J	CHIP R 220K J 1/10W CHIP R 6.8K D 1/16W CHIP R 3.3K J 3/4W CHIP R 9.1K J 1/10W CHIP R 15K J 1/10W		R189 R190 R191 R192,193 R195			RN73GH1J243D RN73GH1J133D RK73GB2A104J RK73GB2A100J RK73EB2E331J	CHIP R 24K D 1/16W CHIP R 13K D 1/16W CHIP R 100K J 1/10W CHIP R 10 J 1/10W CHIP R 330 J 1/4W	
R118 R119 R120 R121 R122-124			RK73FB2B123J RN73GH1J104D RN73GH1J683D RK73GB2A473J RK73GB2A104J	CHIP R 12K J 1/8W CHIP R 100K D 1/16W CHIP R 68K D 1/16W CHIP R 47K J 1/10W CHIP R 100K J 1/10W		R196 R197 R198 R199 R200			RN73GH1J243D RN73GH1J133D RK73GB2A104J RK73EB2E331J RK73GB2A103J	CHIP R 24K D 1/16W CHIP R 13K D 1/16W CHIP R 100K J 1/10W CHIP R 330 J 1/4W CHIP R 10K J 1/10W	
R125-127 R129 R137 R140 R141			RK73GB2A224J RK73GB2A473J RK73GB2A473J RK73GB2A101J RK73GB2A103J	CHIP R 220K J 1/10W CHIP R 47K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W		R202 R203 R203,204 R204 R205			RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73GB2A103J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W	R1X2C1 K1 E3E4M2 R1 X2C1

E3 : DDX6027 E4 : DDX6027Y (Europe)
K1 : DDX7017 (North America)
X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)
C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-957/958x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R205,206			RK73GB2A103J	CHIP R 10K J 1/10W	K1	R313			RK73GB2A473J	CHIP R 47K J 1/10W	
R206			RK73GB2A103J	CHIP R 10K J 1/10W	R1M2	R320			RK73GB2A101J	CHIP R 100 J 1/10W	
R207			RK73GB2A103J	CHIP R 10K J 1/10W	C1	R321			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R207			RK73GB2A103J	CHIP R 10K J 1/10W	E3E4X2	R360,361			RK73GB2A303J	CHIP R 30K J 1/10W	
R211,212			RK73GB2A103J	CHIP R 10K J 1/10W		R362			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R217,218			RK73GB2A473J	CHIP R 47K J 1/10W		R363			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R219			RK73GB2A333J	CHIP R 33K J 1/10W		R364			RK73GB2A361J	CHIP R 360 J 1/10W	
R220-224			RK73GB2A473J	CHIP R 47K J 1/10W		R365			RK73GB2A914J	CHIP R 910K J 1/10W	
R225			RK73GB2A104J	CHIP R 100K J 1/10W		R366,367			RK73GB2A471J	CHIP R 470 J 1/10W	
R226			RK73GB2A103J	CHIP R 10K J 1/10W		R368			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R227			RK73GB2A104J	CHIP R 100K J 1/10W		R369			RK73GB2A470J	CHIP R 47 J 1/10W	
R229			RK73GB2A471J	CHIP R 470 J 1/10W		R370			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R230,231			RK73GB2A101J	CHIP R 100 J 1/10W		R371			RN73GH1J182D	CHIP R 1.8K D 1/16W	
R232			RK73GB2A102J	CHIP R 1.0K J 1/10W		R372			RN73GH1J471D	CHIP R 470 D 1/16W	
R233			RK73GB2A104J	CHIP R 100K J 1/10W		R374			RK73GB2A471J	CHIP R 470 J 1/10W	
R234,235			RK73GB2A101J	CHIP R 100 J 1/10W		R375			RK73GB2A101J	CHIP R 100 J 1/10W	
R236			RK73GB2A514J	CHIP R 510K J 1/10W		R377			RK73GB2A103J	CHIP R 10K J 1/10W	
R237-239			RK73GB2A102J	CHIP R 1.0K J 1/10W		R380-383			RK73GB2A101J	CHIP R 100 J 1/10W	
R242-244			RK73GB2A473J	CHIP R 47K J 1/10W		R385			RK73GB2A471J	CHIP R 470 J 1/10W	
R245			RK73GB2A123J	CHIP R 12K J 1/10W		R386			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R246			RK73GB2A102J	CHIP R 1.0K J 1/10W		R387			RN73GH1J473D	CHIP R 47K D 1/16W	
R247			RK73GB2A473J	CHIP R 47K J 1/10W		R388			RK73GB2A471J	CHIP R 470 J 1/10W	
R248,249			RK73GB2A123J	CHIP R 12K J 1/10W		R389			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R250-253			RK73GB2A104J	CHIP R 100K J 1/10W		R391			RN73GH1J203D	CHIP R 20K D 1/16W	
R254			RK73GB2A123J	CHIP R 12K J 1/10W		R392			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R258			RK73GB2A104J	CHIP R 100K J 1/10W		R393			RK73GB2A104J	CHIP R 100K J 1/10W	
R259			RK73GB2A153J	CHIP R 15K J 1/10W		R394			RN73GH1J303D	CHIP R 30K D 1/16W	
R260			RN73GH1J163D	CHIP R 16K D 1/16W		R400			RK73GB2A103J	CHIP R 10K J 1/10W	
R261			RN73GH1J392D	CHIP R 3.9K D 1/16W		R401			RK73GB2A680J	CHIP R 68 J 1/10W	
R262			RN73GH1J333D	CHIP R 33K D 1/16W		R402			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R263			RK73GB2A100J	CHIP R 10 J 1/10W		R403			RK73GB2A101J	CHIP R 100 J 1/10W	
R264			RK73GB2A104J	CHIP R 100K J 1/10W		R404			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R265			RK73GB2A100J	CHIP R 10 J 1/10W		R405			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R266			RK73GB2A104J	CHIP R 100K J 1/10W		R406			RK73GB2A101J	CHIP R 100 J 1/10W	
R267			RK73GB2A912J	CHIP R 9.1K J 1/10W		R407			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R268			RK73GB2A112J	CHIP R 1.1K J 1/10W		R408			RK73GB2A101J	CHIP R 100 J 1/10W	
R269			RK73GB2A105J	CHIP R 1.0M J 1/10W		R409			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R270			RN73GH1J473D	CHIP R 47K D 1/16W		R410,411			RK73GB2A104J	CHIP R 100K J 1/10W	
R271			RN73GH1J392D	CHIP R 3.9K D 1/16W		R412			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R272			RK73GB2A151J	CHIP R 150 J 1/10W		R413			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R273,274			RK73GB2A105J	CHIP R 1.0M J 1/10W		R415-417			RK73GB2A201J	CHIP R 200 J 1/10W	
R275			RK73GB2A104J	CHIP R 100K J 1/10W		R419			RK73GB2A101J	CHIP R 100 J 1/10W	
R276			RK73GB2A203J	CHIP R 20K J 1/10W		R420,421			RK73GB2A153J	CHIP R 15K J 1/10W	
R279,280			RK73GB2A101J	CHIP R 100 J 1/10W		R422,423			RK73GB2A561J	CHIP R 560 J 1/10W	
R281			RK73GB2A104J	CHIP R 100K J 1/10W		R424			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R300			RK73GB2A471J	CHIP R 470 J 1/10W		R427			RK73GB2A470J	CHIP R 47 J 1/10W	
R301			RK73GB2A103J	CHIP R 10K J 1/10W	E3E4X2	R500			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R301			RK73GB2A103J	CHIP R 10K J 1/10W	X2C1	R501			RK73GB2A330J	CHIP R 33 J 1/10W	
R302			RK73GB2A152J	CHIP R 1.5K J 1/10W		R502			RK73GB2A103J	CHIP R 10K J 1/10W	
R303			RK73GB2A752J	CHIP R 7.5K J 1/10W		R503			RK73GB2A820J	CHIP R 82 J 1/10W	
R304,305			RK73GB2A101J	CHIP R 100 J 1/10W		R504,505			RK73GB2A220J	CHIP R 22 J 1/10W	
R306			RK73GB2A103J	CHIP R 10K J 1/10W		R506,507			RK73GB2A820J	CHIP R 82 J 1/10W	
R307			RK73GB2A682J	CHIP R 6.8K J 1/10W		R508			RK73GB2A471J	CHIP R 470 J 1/10W	
R308			RK73GB2A105J	CHIP R 1.0M J 1/10W		R509			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R309-312			RK73GB2A101J	CHIP R 100 J 1/10W		R520			RK73GB2A472J	CHIP R 4.7K J 1/10W	

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-957/958x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R522-528 R529 R540,541 R542 R544			RK73GB2A103J RK73GB2A472J RK73GB2A330J RK73GB2A105J RK73GB2A102J	CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 33 J 1/10W CHIP R 1.0M J 1/10W CHIP R 1.0K J 1/10W	
R560 R601-603 R604 R605-610 R611			RK73GB2A101J RK73GB2A472J RK73GB2A470J RK73GB2A101J RK73GB2A102J	CHIP R 100 J 1/10W CHIP R 4.7K J 1/10W CHIP R 47 J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W	
R612,613 R614 R615-617 R618,619 R620-622			RK73GB2A101J RK73GB2A330J RK73GB2A472J RK73GB2A220J RK73GB2A472J	CHIP R 100 J 1/10W CHIP R 33 J 1/10W CHIP R 4.7K J 1/10W CHIP R 22 J 1/10W CHIP R 4.7K J 1/10W	
R625-627 R629 R651-654 R655 R656			RK73GB2A472J RK73GB2A101J RK73GB2A102J RK73EB2E750J RK73GB2A511J	CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 75 J 1/4W CHIP R 510 J 1/10W	
R657 R658,659 R660 R661,662 R663,664			RK73GB2A152J RK73GB2A102J RK73GB2A103J RK73GB2A472J RK73GB2A101J	CHIP R 1.5K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W	
R665-668 R669 R670 R671,672 R673			RN73GH1J750D RN73GH1J151D RK73GB2A103J RK73GB2A104J RN73GH1J151D	CHIP R 75 D 1/16W CHIP R 150 D 1/16W CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 150 D 1/16W	
R675 R676 R678 R679 R682			RK73GB2A103J RK73GB2A102J RK73GB2A472J RK73GB2A102J RK73GB2A472J	CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W	
R683-687 R701,702 R703 R704,705 R706			RK73GB2A102J RK73GB2A472J RK73GB2A302J RK73GB2A201J RK73GB2A302J	CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 3.0K J 1/10W CHIP R 200 J 1/10W CHIP R 3.0K J 1/10W	
R707 R708 R709 R710,711 R712			RK73GB2A471J RK73GB2A182J RK73GB2A100J RK73GB2A472J RK73GB2A302J	CHIP R 470 J 1/10W CHIP R 1.8K J 1/10W CHIP R 10 J 1/10W CHIP R 4.7K J 1/10W CHIP R 3.0K J 1/10W	
R713,714 R715 R716 R717 R718			RK73GB2A201J RK73GB2A302J RK73GB2A471J RK73GB2A182J RK73GB2A100J	CHIP R 200 J 1/10W CHIP R 3.0K J 1/10W CHIP R 470 J 1/10W CHIP R 1.8K J 1/10W CHIP R 10 J 1/10W	
R719 R720 R721 R722 R723,724			RK73GB2A682J RK73GB2A222J RK73GB2A392J RK73GB2A102J RK73GB2A223J	CHIP R 6.8K J 1/10W CHIP R 2.2K J 1/10W CHIP R 3.9K J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R725 R753 R770 R771 R772-774			RK73GB2A103J RK73GB2A151J RK73GB2A103J RK73GB2A222J RK73GB2A472J	CHIP R 10K J 1/10W CHIP R 150 J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/10W	
R776 R777 R801-804 R805-810 R850-856			RK73GB2A472J RK73GB2A102J RK73EB2E102J RK73EB2E101J RK73GB2A101J	CHIP R 4.7K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/10W	
R859-866 R922 R924 R925 R926			RK73GB2A101J RK73GB2A102J RK73GB2A103J RN73GH1J123D RN73GH1J152D	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 12K D 1/16W CHIP R 1.5K D 1/16W	
R927 R964 R966 VR361 W100,101			RN73GH1J243D RK73EB2E151J RK73EB2E150J R32-0327-05 R92-1252-05	CHIP R 24K D 1/16W CHIP R 150 J 1/4W CHIP R 15 J 1/4W SEMI FIXED VARIABLE RESISTOR CHIP R 0 OHM J 1/16W	
W103,104 W111-117 W121,122 W183 W201-203			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W205 W301 W304 W306-308 W311-313			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W360 W365 W401 W403 W405			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W408-415 W501 W522 W581 W601			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W604 W606-609 W650 W652 W654			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W658 W660 W662,663 W701 W750			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W770 W772-776 W800 W851-853 W857,858			R92-1252-05 R92-1252-05 RK73EB2E000J R92-1252-05 RK73FB2B000J	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0.0 J 1/4W CHIP R 0 OHM J 1/16W CHIP R 0.0 J 1/8W	

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-957/958x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
W859-863			R92-1252-05	CHIP R 0 OHM J 1/16W		IC403			TC7S02FU-F	MOS-IC	
W867			R92-1252-05	CHIP R 0 OHM J 1/16W		IC404			TC7SH04FU-F	MOS-IC	
W869,870			R92-1252-05	CHIP R 0 OHM J 1/16W		IC405			TC7W08FU-F	MOS-IC	
W872-874			R92-1252-05	CHIP R 0 OHM J 1/16W		IC406			TC7W32FU-F	MOS-IC	
W881,882			RK73EB2E000J	CHIP R 0.0 J 1/4W		IC500			PQ070XH02ZPH	ANALOGUE IC	
W884-886			RK73EB2E000J	CHIP R 0.0 J 1/4W		IC520			M29LV160T72U5	ROM IC	
W887,888			R92-1252-05	CHIP R 0 OHM J 1/16W		IC540,541			TC7SHU04FU-F	MOS-IC	
W889			RK73EB2E000J	CHIP R 0.0 J 1/4W		IC560			K4S281632FUP75	DRAM IC	
W893			R92-1252-05	CHIP R 0 OHM J 1/16W		IC601			ES6218SF	MOS-IC	
						IC650			MM1567AJBE-E	ANALOGUE IC	
D100			1SR154-400	DIODE		IC651			UPC2905ATAZ	ANALOGUE IC	
D104			DAN202U	DIODE		IC652			ADV7170KSUZ	MOS-IC	
D105			UDZS6.8B	ZENER DIODE		IC654			MM1508XNRE-E	ANALOGUE IC	
D106			DAN202U	DIODE		IC701			NJM4580V-ZB	ANALOGUE IC	
D107			UDZS6.2B	ZENER DIODE		IC702			TA78L05F-F	ANALOGUE IC	
D108-111			EC31QS04AG	DIODE		IC703			AK4382AVT	ANALOGUE IC	
D113			EC31QS04AG	DIODE		IC750			TC7SET04FU-F	MOS-IC	
D114,115			SB05-05CP-E	DIODE		IC770			M43212VNI8R01	MOS-IC	
D116			MA2S784-F	DIODE		IC850			TC7SH00FU-F	MOS-IC	
D180,181			DAN202U	DIODE		Q100			DTC144EUA	DIGITAL TRANSISTOR	
D300			DAN202U	DIODE		Q101			2SC4081	TRANSISTOR	
D501,502			DA204U	DIODE		Q102			DTC144EUA	DIGITAL TRANSISTOR	
D701			DAP202U	DIODE		Q103			2SA1576A	TRANSISTOR	
D702			DA204U	DIODE		Q104			2SC4081	TRANSISTOR	
D704,705			STZ6.2N	ZENER DIODE		Q105			2SA1576A	TRANSISTOR	
D850-854			AVRM1608120M6A	VARISTOR		Q106			HAT1038R-E	FET	
D857-860			AVRM1608120M6A	VARISTOR		Q107			2SC4081	TRANSISTOR	
D861			UDZS6.2B	ZENER DIODE		Q108			DTA124EUA	DIGITAL TRANSISTOR	
D862			DA204U	DIODE		Q109-111			HAT1024R-E	FET	
D924			AVRM1608120M6A	VARISTOR		Q112			DTC144EUA	DIGITAL TRANSISTOR	
D962			DA204U	DIODE		Q113			2SA1576A	TRANSISTOR	
D963			AVRM1608270MAA	VARISTOR		Q114			2SC4081	TRANSISTOR	
IC100-102			FA7707E-H1	ANALOGUE IC		Q115			2SB1189	TRANSISTOR	
IC103			TA58L05F	ANALOGUE IC		Q116			2SC4081	TRANSISTOR	
IC104			PQ1X331M2ZPH	ANALOGUE IC		Q120			2SA1576A	TRANSISTOR	
IC108			SI-3012KM	ANALOGUE IC		Q121			DTC144EUA	DIGITAL TRANSISTOR	
IC200			BR24L08FV-W	ROM IC		Q122			2SA1576A	TRANSISTOR	
IC203			LB1836M-TLM-E	ANALOGUE IC		Q123-125			2SC4081	TRANSISTOR	
IC204			703265YGJ501A	MICROCONTROLLER IC		Q126			DTA114TUA	DIGITAL TRANSISTOR	
IC205			TC7SH08FU-F	MOS-IC		Q127			DTA114EUA	DIGITAL TRANSISTOR	
IC206			S-80830CNNB-G	MOS-IC		Q128			DTA144EUA	DIGITAL TRANSISTOR	
IC207			TC74VHCT08AFT	MOS-IC		Q129			IMX9	TRANSISTOR	
IC301			TDA4665T-F	ANALOGUE IC	E3E4M2	Q170			DTC144EUA	DIGITAL TRANSISTOR	
IC301			TDA4665T-F	ANALOGUE IC	X2C1	Q172			DTC144EUA	DIGITAL TRANSISTOR	
IC303			AN2546FH-AV	ANALOGUE IC		Q175			DTC144EUA	DIGITAL TRANSISTOR	
IC304			MM1389XFB-E	ANALOGUE IC		Q180,181			2SC4081	TRANSISTOR	
IC306			TC7SH04FU-F	MOS-IC		Q182			2SA1576A	TRANSISTOR	
IC361			TC7W00FU-F	MOS-IC		Q183			DTC124EUA	DIGITAL TRANSISTOR	
IC362			NJW1303V-ZB	ANALOGUE IC		Q184			DTC143EUA	DIGITAL TRANSISTOR	
IC363,364			TC7W34FU-F	MOS-IC		Q202			DTC144EUA	DIGITAL TRANSISTOR	
IC365			TC7WH123FU-F	MOS-IC		Q203			DTB123YK	DIGITAL TRANSISTOR	
IC366			TC7SH04FU-F	MOS-IC		Q204			DTC144EUA	DIGITAL TRANSISTOR	
IC400			LC74735NW9817E	MOS-IC		Q205			DTB123YK	DIGITAL TRANSISTOR	
IC401			MB29LV8T9T0U1	ROM IC		Q206			DTA144EUA	DIGITAL TRANSISTOR	
IC402			TC74LCX74FT	MOS-IC		Q207			DTC144EUA	DIGITAL TRANSISTOR	

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-957/958x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q210 Q211 Q212 Q213 Q214			2SA1576A 2SC4081 2SA1576A 2SC4081 DTA114TUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q215 Q216 Q217 Q218 Q219			2SC4081 DTA114TUA 2SC4081 DTA114TUA DTC114TUA	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q300 Q300 Q301 Q360 Q361,362			2SA1576A 2SA1576A DTC114TUA 2SC4081 2SA1576A	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	E3E4M2 X2C1 E3E4
Q363 Q364 Q390 Q391 Q400-402			DTA114EUA DTC144EUA 2SC4081 2SA1576A 2SA1576A	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q404,405 Q650 Q651,652 Q653 Q701-703			2SC4081 DTA114TUA DTC144EUA DTC114TUA 2SC4081	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q704 Q705,706			DTC114TUA DTA114TUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
SWITCH UNIT (X16-2380-00): IN DVD MECHA.					
CN1			E41-2036-05	FLAT CABLE CONNECTOR	
S1,2			S68-0863-05	PUSH SWITCH	
ELECTRIC UNIT (X34-384/385x-xx)					
C5 C6 C7 C8 C9,10			C90-6744-05 CK73GB1H104K CK73FB1C105K CD04BA1H3R3M CK73GB1H103K	ELECTRO 3900UF 16WV CHIP C 0.10UF K CHIP C 1.0UF K ELECTRO 3.3UF 50WV CHIP C 0.010UF K	
C51 C52 C55 C56 C58			CK73GB1H473K CD04AS1V100M CD04BJ1E221M CD04BJ1A101M CD04AS1C220M	CHIP C 0.047UF K ELECTRO 10UF 35WV ELECTRO 220UF 25WV ELECTRO 100UF 10WV ELECTRO 22UF 16WV	
C59 C60-62 C63 C64 C65		*	CD04BG1C101M CK73EB1E225K CD04BA1C220M CK73EB1E225K CK73FB1C105K	ELECTRO 100UF 16WV CHIP C 2.2UF K ELECTRO 22UF 16WV CHIP C 2.2UF K CHIP C 1.0UF K	
C67 C69 C70 C71 C72			CD04AY1A221M CK73FB1C105K CD04AY1A221M CK73GB1H223K CK73GB1H103K	ELECTRO 220UF 10WV CHIP C 1.0UF K ELECTRO 220UF 10WV CHIP C 0.022UF K CHIP C 0.010UF K	
C73,74 C101			CK73EB1E225K CK73GB1A105K	CHIP C 2.2UF K CHIP C 1.0UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C103 C104 C108-112 C113 C150			CK73GB1A105K CD04AS1C101M C90-6742-05 CK73GB1H103K CD04AS1C470M	CHIP C 1.0UF K ELECTRO 100UF 16WV NP-ELECT 4.7UF 16WV CHIP C 0.010UF K ELECTRO 47UF 16WV	
C151,152 C153 C154,155 C162,163 C164			CK73GB1H152K CD04AS1V100M CK73FB1C105K CD04AS1V100M CK73GB1H103K	CHIP C 1500PF K ELECTRO 10UF 35WV CHIP C 1.0UF K ELECTRO 10UF 35WV CHIP C 0.010UF K	
C165 C166 C167 C168 C169			CD04AS1V100M CK73GB1H104K CK73GB1H103K CD04AT1H010M CD04AS1H010M	ELECTRO 10UF 35WV CHIP C 0.10UF K CHIP C 0.010UF K ELECTRO 1UF 50WV ELECTRO 1UF 50WV	
C170 C171 C172 C173 C174			CD04AS1C470M CD04AS1H010M CK73GB1H102K CD04AS1H4R7M CK73FB1E474K	ELECTRO 47UF 16WV ELECTRO 1UF 50WV CHIP C 1000PF K ELECTRO 4.7UF 50WV CHIP C 0.47UF K	
C175 C176 C177 C178,179 C180,181			CK73GB1H102K CK73FB1E474K CD04AS1C101M CD04AS1H3R3M CK73FB1A225K	CHIP C 1000PF K CHIP C 0.47UF K ELECTRO 100UF 16WV ELECTRO 3.3UF 50WV CHIP C 2.2UF K	
C182-185 C186 C187,188 C200 C201			CC73GCH1H101J CK73FB1C105K CD04AS1H3R3M CD04AS1C220M CD04AS1V100M	CHIP C 100PF J CHIP C 1.0UF K ELECTRO 3.3UF 50WV ELECTRO 22UF 16WV ELECTRO 10UF 35WV	
C202 C203,204 C205 C206 C207			CK73GB1H103K CD04AS1V100M CK73GB1H102K CD04AS1V100M CK73GB1H103K	CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 1000PF K ELECTRO 10UF 35WV CHIP C 0.010UF K	
C208 C209-213 C214 C215,216 C217-219			CK73GB1H102K CD04AS1V100M CK73GB1H103K CK73GB1H102K CD04AS1V100M	CHIP C 1000PF K ELECTRO 10UF 35WV CHIP C 0.010UF K CHIP C 1000PF K ELECTRO 10UF 35WV	
C220 C221 C222-224 C225 C226			CK73GB1H103K CK73GB1H102K CD04AS1V100M CK73GB1H103K CK73GB1H102K	CHIP C 0.010UF K CHIP C 1000PF K ELECTRO 10UF 35WV CHIP C 0.010UF K CHIP C 1000PF K	
C227-229 C230 C231 C233 C234			CD04AS1V100M CK73GB1H103K CD04AS1C220M CD04AS1V100M CK73GB1H222K	ELECTRO 10UF 35WV CHIP C 0.010UF K ELECTRO 22UF 16WV ELECTRO 10UF 35WV CHIP C 2200PF K	
C235,236 C237 C238 C239 C240			CK73GB1H102K CK73GB1H222K CD04AS1V100M CD04AS0J101M CD04AS1H4R7M	CHIP C 1000PF K CHIP C 2200PF K ELECTRO 10UF 35WV ELECTRO 100UF 6.3WV ELECTRO 4.7UF 50WV	K1 K1

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-384/385x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C241			CD04AS1C220M	ELECTRO 22UF 16WV	K1	C432			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C242			CK73GB1H103K	CHIP C 0.010UF K	K1	C433			CK73GB1H104K	CHIP C 0.10UF K	
C243			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	K1	C434-436			CK73GB0J225K	CHIP C 2.2UF K	
C244			CD04AS0J101M	ELECTRO 100UF 6.3WV		C437			CD04BJ1C471M	ELECTRO 470UF 16WV	
C245			CD04AS1H4R7M	ELECTRO 4.7UF 50WV		C438			CK73GB1H104K	CHIP C 0.10UF K	
C246			CD04AS1C220M	ELECTRO 22UF 16WV		C442			CD04AS1V100M	ELECTRO 10UF 35WV	
C247			CK73GB1H103K	CHIP C 0.010UF K		C448,449			CK73GB1H103K	CHIP C 0.010UF K	
C248			CD04AS1H4R7M	ELECTRO 4.7UF 50WV		C450-452			CD04AY1H220M	ELECTRO 22UF 50WV	
C251,252			CC73GCH1H100D	CHIP C 10PF D	E4M2	C454,455			CK73GB1A105K	CHIP C 1.0UF K	
C251,252			CC73GCH1H100D	CHIP C 10PF D	K1R1E3	C457,458			CK73GB1A105K	CHIP C 1.0UF K	K1
C255			CE32BM1C100M	CHIP EL 10UF 16WV	E4M2	C458			CK73GB1A105K	CHIP C 1.0UF K	M2X2C1
C255			CE32BM1C100M	CHIP EL 10UF 16WV	K1R1E3	C458			CK73GB1A105K	CHIP C 1.0UF K	R1E3E4
C256			CC73GCH1H331J	CHIP C 330PF J	E4M2	C461-463			CK73GB1H104K	CHIP C 0.10UF K	K1
C256			CC73GCH1H331J	CHIP C 330PF J	K1R1E3	C462,463			CK73GB1H104K	CHIP C 0.10UF K	M2X2C1
C257			CE32BM1C100M	CHIP EL 10UF 16WV	E4M2	C462,463			CK73GB1H104K	CHIP C 0.10UF K	R1E3E4
C257			CE32BM1C100M	CHIP EL 10UF 16WV	K1R1E3	C500			CK73GB1H103K	CHIP C 0.010UF K	
C258			CK73GB1H103K	CHIP C 0.010UF K	E4M2	C501,502			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C258			CK73GB1H103K	CHIP C 0.010UF K	K1R1E3	C503			CD04AS0J101M	ELECTRO 100UF 6.3WV	
C267-270			CK73GB1H103K	CHIP C 0.010UF K		C504			CD04AS1C220M	ELECTRO 22UF 16WV	
C300			CK73GB1H103K	CHIP C 0.010UF K		C505			CD04AS1V100M	ELECTRO 10UF 35WV	
C301,302			CK73GB1H104K	CHIP C 0.10UF K		C506,507			CK73GB1H104K	CHIP C 0.10UF K	
C303			CK73GB1H103K	CHIP C 0.010UF K		C508			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C304			CK73GB1A105K	CHIP C 1.0UF K		C509			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C308			CD04BJ0J331M	ELECTRO 330UF 6.3WV		C510,511			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C309			CK73GB1H103K	CHIP C 0.010UF K		C512			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C310			CK73GB1H102K	CHIP C 1000PF K		C513			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C400,401			CK73GB1A105K	CHIP C 1.0UF K	E3E4	C514			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C401			CK73GB1A105K	CHIP C 1.0UF K	K1R1M2	C515,516			CD04AS1H4R7M	ELECTRO 4.7UF 50WV	
C401			CK73GB1A105K	CHIP C 1.0UF K	X2C1	C600			CK73GB1H102K	CHIP C 1000PF K	
C403			CD04AS0J470M	ELECTRO 47UF 6.3WV		C803			CK73GB1H103K	CHIP C 0.010UF K	M2X2C1
C404			CK73GB1H104K	CHIP C 0.10UF K		C803			CK73GB1H103K	CHIP C 0.010UF K	R1E3E4
C405,406			CK73GB1A105K	CHIP C 1.0UF K	E3E4	C803,804			CK73GB1H103K	CHIP C 0.010UF K	K1
C406			CK73GB1A105K	CHIP C 1.0UF K	K1R1M2	C808			CK73GB1H103K	CHIP C 0.010UF K	
C406			CK73GB1A105K	CHIP C 1.0UF K	X2C1	C809			CK73GB1H222K	CHIP C 2200PF K	
C408			CD04AS0J470M	ELECTRO 47UF 6.3WV		C850			CK73GB1H222K	CHIP C 2200PF K	
C409			CK73GB1H104K	CHIP C 0.10UF K		C851			CK73GB1H472K	CHIP C 4700PF K	
C410,411			CK73GB1A105K	CHIP C 1.0UF K	E3E4	C852			CK73FB1H152K	CHIP C 1500PF K	X2
C411			CK73GB1A105K	CHIP C 1.0UF K	K1R1M2	CN2			E41-0959-05	PIN ASSY	
C411			CK73GB1A105K	CHIP C 1.0UF K	X2C1	CN8		*	E41-2478-05	PIN ASSY	
C413			CD04AS0J470M	ELECTRO 47UF 6.3WV		CN9,10		*	E41-2474-05	FLAT CABLE CONNECTOR	
C414			CK73GB1H104K	CHIP C 0.10UF K		CN11,12		*	E41-2476-05	FLAT CABLE CONNECTOR	
C415			CK73GB1H103K	CHIP C 0.010UF K		CN13		*	E41-2484-05	PIN ASSY	
C416			CK73GB1H561K	CHIP C 560PF K		CN14		*	E41-2521-05	PIN ASSY	
C417			CK73GB1A105K	CHIP C 1.0UF K		CN15		*	E41-2522-05	PIN ASSY	
C418			CK73GB1H561K	CHIP C 560PF K		CN250,251			E41-2383-05	PIN ASSY	
C419			CK73GB1H103K	CHIP C 0.010UF K		CN252,253			E40-9423-05	SOCKET FOR PIN ASSY	
C420,421			CK73GB1H104K	CHIP C 0.10UF K		J1			E58-0991-05	RECTANGULAR RECEPTACLE	
C422			CK73GB1H103K	CHIP C 0.010UF K		J2			E58-0899-05	RECTANGULAR RECEPTACLE	
C423			CD04AS1C220M	ELECTRO 22UF 16WV		J500			E56-0865-05	CYLINDRICAL RECEPTACLE	
C424			CD04AS1V100M	ELECTRO 10UF 35WV		J502			E58-1034-05	RECTANGULAR RECEPTACLE	
C425			CK73GB1A105K	CHIP C 1.0UF K	M2X2C1	J503			E56-0864-05	CYLINDRICAL RECEPTACLE	
C425			CK73GB1A105K	CHIP C 1.0UF K	R1E3E4	W253	3D	*	E30-6492-05	CORD WITH PLUG	
C425,426			CK73GB1A105K	CHIP C 1.0UF K	K1	WH1		*	E39-0778-05	WIRING HARNESS	
C428			CK73GB1H104K	CHIP C 0.10UF K							
C429-431			CK73GB1A105K	CHIP C 1.0UF K							

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-384/385x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
L1 L50 L150 L250 L250			L33-1063-25 L41-2205-33 L41-4795-33 L41-4795-33 L41-4795-33	CHOKE COIL SMALL FIXED INDUCTOR (22U) SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (4.7U)	E4M2 K1R1E3	R72 R73 R74 R75 R76			RK73GB2A752J RK73GB2A274J RK73GB2A563J RK73GB2A470J RK73GB2A103J	CHIP R 7.5K J 1/10W CHIP R 270K J 1/10W CHIP R 56K J 1/10W CHIP R 47 J 1/10W CHIP R 10K J 1/10W	
L252 L254 L255 L256 L300			L41-4795-33 L41-4795-33 L33-1977-05 L41-4795-33 L41-1005-33	SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (4.7U) CHOKE COIL SMALL FIXED INDUCTOR (4.7U) SMALL FIXED INDUCTOR (10U)		R77,78 R79 R80 R100 R101			RK73GB2A913J RK73GB2A750J RK73GB2A101J RK73GB2A103J RK73GB2A432J	CHIP R 91K J 1/10W CHIP R 75 J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 4.3K J 1/10W	
L400-402 L800-802 X250 X250 X300			L41-1005-33 L92-0373-05 L77-2002-05 L77-2002-05 L78-0892-05	SMALL FIXED INDUCTOR (10U) CHIP FERRITE CRYSTAL RESONATOR CRYSTAL RESONATOR RESONATOR (19M)	E4M2 K1R1E3	R102 R103 R104,105 R106 R107			RK73GB2A103J RK73GB2A333J RK73GB2A103J RK73GB2A223J RK73GB2A221J	CHIP R 10K J 1/10W CHIP R 33K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 220 J 1/10W	
M	2C		N86-2606-48	BINDING HEAD TAPTITE SCREW		R108 R110 R111 R113 R114-117			RK73GB2A182J RK73GB2A103J RK73GB2A390J RK73GB2A104J RK73GB2A471J	CHIP R 1.8K J 1/10W CHIP R 10K J 1/10W CHIP R 39 J 1/10W CHIP R 100K J 1/10W CHIP R 470 J 1/10W	
R6 R7 R10,11 R12 R13,14			RK73EB2E102J RK73EB2E103J RK73PB2H102J RK73GB2A223J RK73FB2B472J	CHIP R 1.0K J 1/4W CHIP R 10K J 1/4W CHIP R 1.0K J 1/2W CHIP R 22K J 1/10W CHIP R 4.7K J 1/8W		R118 R120 R121 R122 R150			RK73GB2A102J RK73GB2A223J RK73GB2A431J RK73GB2A100J RK73EB2E2R2J	CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 430 J 1/10W CHIP R 10 J 1/10W CHIP R 2.2 J 1/4W	
R15 R15 R16,17 R16,17 R17			RK73SB3A561J RK73SB3A561J RK73GB2A223J RK73GB2A223J RK73GB2A223J	CHIP R 560 J 1W CHIP R 560 J 1W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W	K1R1M2 X2C1 K1R1M2 X2C1 E3E4	R151,152 R159 R160 R162 R163			RK73GB2A102J RK73GB2A391J RK73GB2A242J RK73GH2A512D RK73GH2A472D	CHIP R 1.0K J 1/10W CHIP R 390 J 1/10W CHIP R 2.4K J 1/10W CHIP R 5.1K D 1/10W CHIP R 4.7K D 1/10W	
R18 R19 R20 R21 R22			RK73GB2A103J RK73GB2A104J RK73GB2A183J RK73FB2B561J RK73GB2A473J	CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 18K J 1/10W CHIP R 560 J 1/8W CHIP R 47K J 1/10W		R164 R165 R166 R167,168 R169			RK73GB2A562J RK73GB2A103J RK73GB2A101J RK73GB2A102J RK73FB2B152J	CHIP R 5.6K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.5K J 1/8W	
R24 R25 R26 R27 R28			RK73GB2A683J RK73GB2A393J RK73GB2A104J RK73EB2E101J RK73GB2A104J	CHIP R 68K J 1/10W CHIP R 39K J 1/10W CHIP R 100K J 1/10W CHIP R 100 J 1/4W CHIP R 100K J 1/10W		R170 R171 R172 R173,174 R176			RK73GB2A104J RK73FB2B4R7J RK73GB2A332J RK73GB2A101J RK73GB2A100J	CHIP R 100K J 1/10W CHIP R 4.7 J 1/8W CHIP R 3.3K J 1/10W CHIP R 100 J 1/10W CHIP R 10 J 1/10W	
R29 R30 R50 R51 R53			RK73GB2A103J RK73GB2A474J RK73FB2B182J RK73GB2A104J RK73GB2A101J	CHIP R 10K J 1/10W CHIP R 470K J 1/10W CHIP R 1.8K J 1/8W CHIP R 100K J 1/10W CHIP R 100 J 1/10W		R177-180 R181,182 R184 R200 R201			RK73GB2A101J RK73GB2A103J RK73FB2B1R0J RK73FB2B203J RK73FB2B103J	CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 1.0 J 1/8W CHIP R 20K J 1/8W CHIP R 10K J 1/8W	
R55 R56 R58 R59 R60			RK73FB2B203J RK73FB2B221J RK73FB2B221J RK73FB2B272J RK73GB2A223J	CHIP R 20K J 1/8W CHIP R 220 J 1/8W CHIP R 220 J 1/8W CHIP R 2.7K J 1/8W CHIP R 22K J 1/10W		R202 R203 R204 R205 R206			RK73EB2E820J RK73GB2A361J RK73GB2A104J RK73GB2A223J RK73EB2E820J	CHIP R 82 J 1/4W CHIP R 360 J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W CHIP R 82 J 1/4W	
R61 R63 R64 R67 R68			RK73GB2A153J RK73GH2A243D RK73GH2A432D RK73GB2A272J RK73GB2A153J	CHIP R 15K J 1/10W CHIP R 24K D 1/10W CHIP R 4.3K D 1/10W CHIP R 2.7K J 1/10W CHIP R 15K J 1/10W		R207 R208 R209 R210 R211			RK73FB2B203J RK73FB2B103J RK73GB2A223J RK73GB2A104J RK73GB2A361J	CHIP R 20K J 1/8W CHIP R 10K J 1/8W CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 360 J 1/10W	
R69 R70 R71			RK73GB2A470J RK73GH2A153D RK73GH2A512D	CHIP R 47 J 1/10W CHIP R 15K D 1/10W CHIP R 5.1K D 1/10W							

E3 : DDX6027 E4 : DDX6027Y (Europe)
K1 : DDX7017 (North America)
X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)
C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-384/385x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R212			RK73EB2E820J	CHIP R 82 J 1/4W		R304			RK73GB2A101J	CHIP R 100 J 1/10W	
R213			RK73FB2B203J	CHIP R 20K J 1/8W		R305			RK73GB2A104J	CHIP R 100K J 1/10W	
R214			RK73FB2B103J	CHIP R 10K J 1/8W		R306			RK73GB2A103J	CHIP R 10K J 1/10W	
R215			RK73GB2A361J	CHIP R 360 J 1/10W		R313			RK73GB2A104J	CHIP R 100K J 1/10W	
R216			RK73GB2A104J	CHIP R 100K J 1/10W		R314			RK73GB2A103J	CHIP R 10K J 1/10W	
R217			RK73GB2A223J	CHIP R 22K J 1/10W		R315			RK73GB2A101J	CHIP R 100 J 1/10W	
R218,219			RK73GB2A473J	CHIP R 47K J 1/10W		R316			RK73GB2A103J	CHIP R 10K J 1/10W	
R220			RK73GB2A223J	CHIP R 22K J 1/10W		R317			RK73GB2A101J	CHIP R 100 J 1/10W	
R221			RK73GB2A104J	CHIP R 100K J 1/10W		R319			RK73GB2A473J	CHIP R 47K J 1/10W	
R222			RK73EB2E820J	CHIP R 82 J 1/4W		R320,321			RK73GB2A104J	CHIP R 100K J 1/10W	
R223			RK73FB2B203J	CHIP R 20K J 1/8W		R322			RK73GB2A101J	CHIP R 100 J 1/10W	
R224			RK73FB2B103J	CHIP R 10K J 1/8W		R323			RK73GB2A104J	CHIP R 100K J 1/10W	
R225,226			RK73GB2A361J	CHIP R 360 J 1/10W		R324			RK73GB2A101J	CHIP R 100 J 1/10W	
R227			RK73FB2B203J	CHIP R 20K J 1/8W		R325			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R228			RK73FB2B103J	CHIP R 10K J 1/8W		R326			RK73GB2A101J	CHIP R 100 J 1/10W	
R229			RK73GB2A104J	CHIP R 100K J 1/10W		R327			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R230			RK73EB2E820J	CHIP R 82 J 1/4W		R328			RK73GB2A104J	CHIP R 100K J 1/10W	
R231,232			RK73GB2A223J	CHIP R 22K J 1/10W		R330			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R233			RK73GB2A104J	CHIP R 100K J 1/10W		R331			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R234			RK73GB2A361J	CHIP R 360 J 1/10W		R332			RK73GB2A104J	CHIP R 100K J 1/10W	
R235			RK73EB2E820J	CHIP R 82 J 1/4W		R335			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R236			RK73FB2B203J	CHIP R 20K J 1/8W		R339			RK73GB2A103J	CHIP R 10K J 1/10W	
R237			RK73FB2B103J	CHIP R 10K J 1/8W		R343-345			RK73GB2A101J	CHIP R 100 J 1/10W	
R238			RK73EB2E750J	CHIP R 75 J 1/4W		R347			RK73GB2A101J	CHIP R 100 J 1/10W	
R239			RK73EB2E101J	CHIP R 100 J 1/4W		R349			RK73GB2A101J	CHIP R 100 J 1/10W	
R240			RK73GB2A361J	CHIP R 360 J 1/10W		R350			RK73GB2A104J	CHIP R 100K J 1/10W	
R241,242			RK73GB2A223J	CHIP R 22K J 1/10W		R351			RK73GB2A101J	CHIP R 100 J 1/10W	
R243			RK73EB2E101J	CHIP R 100 J 1/4W		R352			RK73GB2A104J	CHIP R 100K J 1/10W	
R244			RK73GB2A361J	CHIP R 360 J 1/10W		R353			RK73GB2A101J	CHIP R 100 J 1/10W	
R245			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K1	R354			RK73GB2A104J	CHIP R 100K J 1/10W	
R246			RK73EB2E100J	CHIP R 10 J 1/4W	K1	R355			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R247			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1	R356			RK73GB2A104J	CHIP R 100K J 1/10W	
R248			RK73GB2A471J	CHIP R 470 J 1/10W		R357			RK73GB2A223J	CHIP R 22K J 1/10W	
R249			RK73EB2E100J	CHIP R 10 J 1/4W	K1	R358-360			RK73GB2A104J	CHIP R 100K J 1/10W	
R250			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R362			RK73GB2A223J	CHIP R 22K J 1/10W	
R251			RK73EB2E100J	CHIP R 10 J 1/4W		R363			RK73GB2A103J	CHIP R 10K J 1/10W	
R252			RK73GB2A222J	CHIP R 2.2K J 1/10W		R365			RK73GB2A103J	CHIP R 10K J 1/10W	
R253			RK73EB2E101J	CHIP R 100 J 1/4W	K1	R366,367			RK73GB2A103J	CHIP R 10K J 1/10W	R1X2C1 K1E3E4
R254			RK73EB2E100J	CHIP R 10 J 1/4W		R366,367			RK73GB2A103J	CHIP R 10K J 1/10W	M2
R255,256			RK73GB2A750J	CHIP R 75 J 1/10W	K1	R367			RK73GB2A103J	CHIP R 10K J 1/10W	R1X2C1
R256			RK73GB2A750J	CHIP R 75 J 1/10W	M2X2C1	R369			RK73GB2A103J	CHIP R 10K J 1/10W	M2
R256			RK73GB2A750J	CHIP R 75 J 1/10W	R1E3E4	R369			RK73GB2A103J	CHIP R 10K J 1/10W	R1E3E4
R257			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4M2	R370			RK73GB2A103J	CHIP R 10K J 1/10W	X2C1
R257			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1R1E3	R370,371			RK73GB2A103J	CHIP R 10K J 1/10W	K1
R260			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4M2	R371			RK73GB2A103J	CHIP R 10K J 1/10W	R1M2
R260			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1R1E3	R372,373			RK73GB2A103J	CHIP R 10K J 1/10W	C1
R261			RK73EB2E101J	CHIP R 100 J 1/4W		R372,373			RK73GB2A103J	CHIP R 10K J 1/10W	E3E4X2
R262			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4M2	R373			RK73GB2A103J	CHIP R 10K J 1/10W	K1R1M2
R262			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1R1E3	R400			RK73GB2A103J	CHIP R 10K J 1/10W	
R263			RK73GB2A223J	CHIP R 22K J 1/10W		R401			RK73GB2A334J	CHIP R 330K J 1/10W	
R265			RK73GB2A102J	CHIP R 1.0K J 1/10W		R402			RK73GB2A561J	CHIP R 560 J 1/10W	
R266			RK73EB2E101J	CHIP R 100 J 1/4W		R403			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R267			RK73GB2A750J	CHIP R 75 J 1/10W		R404			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R300			RK73GB2A104J	CHIP R 100K J 1/10W		R412-415			RK73GB2A103J	CHIP R 10K J 1/10W	
R301,302			RK73GB2A101J	CHIP R 100 J 1/10W		R500,501			RK73EB2E100J	CHIP R 10 J 1/4W	

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-384/385x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R502 R503 R504 R505 R506			RK73EB2E4R7J RK73GB2A102J RK73GB2A222J RK73EB2E472J RK73EB2E101J	CHIP R 4.7 J 1/4W CHIP R 1.0K J 1/10W CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W	
R507-510 R511,512 R513,514 R515 R517			RK73EB2E472J RK73EB2E101J RK73GB2A103J RK73GB2A102J RK73GB2A102J	CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W	
R518 R519-521 R522 R527 R528			RK73GB2A101J RK73GB2A102J RK73GB2A101J RK73GB2A750J RK73GB2A681J	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 75 J 1/10W CHIP R 680 J 1/10W	
R529 R530 R531 R532 R533			RK73GB2A4R7J RK73GB2A150J RK73EB2E100J RK73EB2E4R7J RK73EB2E100J	CHIP R 4.7 J 1/10W CHIP R 15 J 1/10W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W	
R534,535 R536-538 R539,540 R541-548 R544-548			RK73EB2E102J RK73EB2E101J RK73EB2E102J RK73GB2A750J RK73GB2A750J	CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 75 J 1/10W CHIP R 75 J 1/10W	E3E4 K1R1M2
R544-548 R549-551 R552 R553,554 R565			RK73GB2A750J RK73EB2E102J RK73EB2E4R7J RK73EB2E100J RK73EB2E101J	CHIP R 75 J 1/10W CHIP R 1.0K J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 100 J 1/4W	X2C1 K1R1M2
R565 R565-572 R569-572 R569-572 R578			RK73EB2E101J RK73EB2E101J RK73EB2E101J RK73EB2E101J RK73EB2E101J	CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 100 J 1/4W	X2C1 E3E4 K1R1M2 X2C1
R579 R580 R581 R582 R594			RK73EB2E472J RK73EB2E101J RK73EB2E223J RK73EB2E102J RK73GB2A104J	CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W CHIP R 22K J 1/4W CHIP R 1.0K J 1/4W CHIP R 100K J 1/10W	
R600 R800 R801 R802 R802			RK73GB2A100J RK73EB2E102J RK73GB2A104J RK73GB2A102J RK73GB2A102J	CHIP R 10 J 1/10W CHIP R 1.0K J 1/4W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/10W	M2X2C1 R1E3E4
R802,803 R804-811 R850-856 W1 W50			RK73GB2A102J RK73GB2A103J RK73GB2A101J R92-1252-05 RK73EB2E000J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W CHIP R 0 OHM J 1/16W CHIP R 0.0 J 1/4W	K1 E3E4
W100 W300 W852			R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
D1-8			M1F60-5063	DIODE	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D9 D10 D10,11 D10,11 D12			RM10ZLFNF 1SR154-400 1SR154-400 1SR154-400 DAP202U	DIODE DIODE DIODE DIODE DIODE	E3E4 K1R1M2 X2C1
D13,14 D15 D16 D17 D18			1SR154-400 UDZS6.8B UDZS5.6B UDZS4.7B DAP202U	DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	
D19 D52 D54,55 D100,101 D150			UDZS6.8B UDZS11B UDZS5.6B DAP202U UDZS6.8B	ZENER DIODE ZENER DIODE ZENER DIODE DIODE ZENER DIODE	
D151 D152 D155-157 D200 D201			DA227 UDZS16B DAP202U DAP202U STZ6.2N	DIODE ZENER DIODE DIODE DIODE ZENER DIODE	
D203,204 D205 D206 D207-209 D209			DAP202U UDZS4.7B STZ6.2N STZ6.8N STZ6.8N	DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K1 K1 M2X2C1
D209 D210 D211 D212-214 D216			STZ6.8N STZ6.2N STZ6.8N DAP202U DAP202U	ZENER DIODE ZENER DIODE ZENER DIODE DIODE DIODE	R1E3E4
D218 D252 D300 D413 D414			STZ6.8N IMS-A6801-E DA227 UDZS4.7B DAP202U	ZENER DIODE SURGE ABSORBER DIODE ZENER DIODE DIODE	
D500 D501 D502 D503 D504-507			STZ6.8N STZ6.2N UDZS4.7B DAP202U STZ6.2N	ZENER DIODE ZENER DIODE ZENER DIODE DIODE ZENER DIODE	
D508 D521 D522-525 D522-525 D522-535			DAN202U STZ6.8N STZ6.2N STZ6.2N STZ6.2N	DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K1R1M2 X2C1 E3E4
D529-535 D529-535 D536,537 D538 D539			STZ6.2N STZ6.2N DA204U STZ6.2N STZ6.8N	ZENER DIODE ZENER DIODE DIODE ZENER DIODE ZENER DIODE	K1R1M2 X2C1
D550 D800 IC50 IC52 IC54			STZ6.2N STZ6.2N M5237ML-CF0J ICL7660SIBAZ M5237ML-CF0J	ZENER DIODE ZENER DIODE ANALOGUE IC ANALOGUE IC ANALOGUE IC	

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-384/385x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
IC100 IC150 IC151 IC200-202 IC203,204			E-TDA7560A NJM4565V-ZB E-TDA7415 NJM4565V-ZB BA3121F	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	K1
IC204 IC204 IC251 IC251 IC300			BA3121F BA3121F E-TDA7479AD E-TDA7479AD S-80842CNNB-G	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	M2X2C1 R1E3E4 E4M2 K1R1E3
IC301 IC302 IC303 IC400-402 IC403			SN74HC02APWR BR24L02FV-W 703030YGCJ13A MM1503-E MM1108XFFE-E	MOS-IC ROM IC MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC	
IC404 IC405 IC406 IC407,408 IC413,414			BA7653AFV BA3121F BA7652AF MM1228XFB-E TC4052BFT	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC415 IC416 IC500 IC501 IC502			MM1503-E BA7652AF BA3121F TC7SET04FU-F TC7SH08FU-F	ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC	
Q6,7 Q6,7 Q7 Q8 Q9,10			DTC114YUA DTC114YUA DTC114YUA DTA114EUA 2SB1188(Q,R)	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	K1R1M2 X2C1 E3E4 K1R1M2
Q9,10 Q10 Q11 Q12 Q13			2SB1188(Q,R) 2SB1188(Q,R) 2SA1576A 2SC4081 DTA123JK	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	X2C1 E3E4
Q14 Q15 Q50 Q51 Q52			2SA1576A 2SC4081 2SB1443 2SC4081 UMC2N	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q54 Q55 Q58 Q59 Q61			2SC4081 UMC2N 2SB1184 2SB1565 UMC2N	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q62 Q63 Q64 Q65 Q66			DTC114EUA 2SA1576A 2SB1184 2SA1576A 2SC4081	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q67 Q68 Q69 Q70 Q150			2SA1576A 2SC4617 2SA1774 2SC4617 UMC2N	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q151 Q152 Q200-202 Q203 Q204-207			2SA1774 2SC2873-F DTC323TU 2SA1576A DTC323TU	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q208 Q209 Q250 Q252 Q403-406			DTA144EUA DTC323TU DTC124EUA 2SB1689 DTC124EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q500 TH100			DTA124EUA PRF18BE471QS2	DIGITAL TRANSISTOR POSITIVE RESISTOR	
A250 A250 A250		*	X86-3930-13 X86-3932-72 X86-3942-12	FRONT-END UNIT FRONT-END UNIT FRONT-END UNIT	K1R1X2 E3E4M2 C1
VIDEO UNIT (X35-458/459x-10)					
D508 D666 D667-677 D680 D701			B30-1566-05 B30-1564-05 B30-1605-05 B30-1605-05 B30-1547-05	LED (1608, RED) LED (1608, BLUE) LED (2COLOR PG/RED) LED (2COLOR PG/RED) LED	
D702 D703 D704			B30-1566-05 B30-1547-05 B30-1566-05	LED (1608, RED) LED LED (1608, RED)	
C1 C3 C4 C5 C6			C92-1857-05 C93-1283-05 C92-1857-05 C93-1363-05 C93-1361-05	ELECTRO 33UF 10WV CHIP C 1.0UF K ELECTRO 33UF 10WV CHIP C 10PF 3KWV CHIP C 0.012UF 16WV	
C7 C8 C9 C10 C11			CK73GB1H473K C93-1269-05 CK73GB0J225K CK73GB1H103K CK73GB0J225K	CHIP C 0.047UF K CHIP C 220PF J CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 2.2UF K	
C12 C13 C14 C15 C16			CK73GB1H103K CK73GB1A474K CK73GB1H103K CK73GB1H473K CK73GB1E183K	CHIP C 0.010UF K CHIP C 0.47UF K CHIP C 0.010UF K CHIP C 0.047UF K CHIP C 0.018UF K	
C17 C18 C21 C22 C24			CK73GB1H103K C93-1283-05 CK73GB0J225K CK73GB1H152K CK73GB1H103K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 1500PF K CHIP C 0.010UF K	
C25 C26 C27 C102 C103		*	C93-1285-05 CK73GB1H103K C93-1283-05 CK73EB1C106K CK73GB1H103K	CHIP C 0.0022UF 50WV CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 10UF K CHIP C 0.010UF K	
C105 C106 C108 C109 C110			CE32AU1C220M CK73GB1H103K CE32AU1C220M CK73FB1C105K CK73GB1H103K	CHIP EL 22UF 16WV CHIP C 0.010UF K CHIP EL 22UF 16WV CHIP C 1.0UF K CHIP C 0.010UF K	

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-458/459x-10)

Ref. No.	Add	New	Parts No.	Description	Destination
C112			CK73FB1E154K	CHIP C 0.15UF K	
C113			CK73EB1E225K	CHIP C 2.2UF K	
C114			CK73GB1C224K	CHIP C 0.22UF K	
C115			CK73GB1H104K	CHIP C 0.10UF K	
C116			C92-1685-05	ELECTRO 47UF 6.3WV	
C118			CK73GB1H103K	CHIP C 0.010UF K	
C119			CC73GCH1H151J	CHIP C 150PF J	
C211			CK73EB1A475K	CHIP C 4.7UF K	
C230			CK73GB1H103K	CHIP C 0.010UF K	
C231,232			CK73DF1E106Z	CHIP C 10UF Z	
C233			CK73GB1H103K	CHIP C 0.010UF K	
C234			CC73GCH1H560J	CHIP C 56PF J	
C300			CK73GB1H103K	CHIP C 0.010UF K	
C301,302			CK73DF1E106Z	CHIP C 10UF Z	
C303			CK73GB1H103K	CHIP C 0.010UF K	
C304			CK73GB1H104K	CHIP C 0.10UF K	
C305			CK73GB1H103K	CHIP C 0.010UF K	
C306			CC73GCH1H101J	CHIP C 100PF J	
C307			CK73EB1C106K	CHIP C 10UF K	
C308			CK73GB1H103K	CHIP C 0.010UF K	
C309			CC73GCH1H100D	CHIP C 10PF D	
C310			CK73GB1H561K	CHIP C 560PF K	
C311-314			CK73GB1H103K	CHIP C 0.010UF K	
C315,316			CK73GB1H104K	CHIP C 0.10UF K	
C317			CK73GB1H103K	CHIP C 0.010UF K	
C318,319			CK73GB1H104K	CHIP C 0.10UF K	
C320			CC73GCH1H560J	CHIP C 56PF J	
C321			CK73GB1H104K	CHIP C 0.10UF K	
C322			CC73GCH1E102J	CHIP C 1000PF J	
C323			CC73GCH1H101J	CHIP C 100PF J	
C324,325			CK73GB1H103K	CHIP C 0.010UF K	
C326			CC73GCH1H681J	CHIP C 680PF J	
C327,328			CK73GB1H104K	CHIP C 0.10UF K	
C330			CK73EB1A106K	CHIP C 10UF K	
C331,332			CC73GCH1H390J	CHIP C 39PF J	
C333			CK73GB1H104K	CHIP C 0.10UF K	
C334			CK73GB1H103K	CHIP C 0.010UF K	
C335,336			CK73GB1H104K	CHIP C 0.10UF K	
C341			CC73GCH1H100D	CHIP C 10PF D	
C425			CK73FB1C105K	CHIP C 1.0UF K	
C426			CK73EB1E105K	CHIP C 1.0UF K	
C427			CK73FB1A225K	CHIP C 2.2UF K	
C428			CK73EB1C106K	CHIP C 10UF K	
C502,503			CK73GB1H103K	CHIP C 0.010UF K	
C504			CK73EB1A106K	CHIP C 10UF K	
C505			CK73GB1H271K	CHIP C 270PF K	
C506			CC73GCH1H101J	CHIP C 100PF J	
C601			CK73GB1H221K	CHIP C 220PF K	
C602			CK73GB1H103K	CHIP C 0.010UF K	
C603			CK73GB0J225K	CHIP C 2.2UF K	
C604			CC73GCH1H101J	CHIP C 100PF J	
C605			CK73EB1A106K	CHIP C 10UF K	
CN1			E41-2483-05	PIN ASSY	
CN302		*	E41-2525-05	FLAT CABLE CONNECTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
CN303			E41-2065-05	FLAT CABLE CONNECTOR	
CN501			E41-2088-05	FLAT CABLE CONNECTOR	
CN602			E41-0451-25	FLAT CABLE CONNECTOR	
CN604			E41-2208-05	FLAT CABLE CONNECTOR	
CN701		*	E41-2542-05	FLAT CABLE CONNECTOR	
F1			F53-0297-05	FUSE (UL, CSA)	
F107			F53-0314-05	FUSE (UL, CSA)	
L1			L19-0783-05	TRANSFORMER FOR CONVERTER	
L2			L33-1933-05	CHOKE COIL	
L101,102			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)	
L103			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)	
L104-106			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L306			L41-5695-33	SMALL FIXED INDUCTOR (5.6U)	
L307			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)	
L501			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L601			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
CP301,302			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP303			RK74GB1J101J	CHIP-COM 100 J 1/16W	
R1			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R2			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R3			RK73GB2A220J	CHIP R 22 J 1/10W	
R4			RN73GH1J433D	CHIP R 43K D 1/16W	
R5			RK73GB2A153J	CHIP R 15K J 1/10W	
R6			RN73GH1J513D	CHIP R 51K D 1/16W	
R7			RK73GB2A220J	CHIP R 22 J 1/10W	
R8			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R9			RK73GH2A244D	CHIP R 240K D 1/10W	
R10			RK73GB2A331J	CHIP R 330 J 1/10W	
R11			RK73GB2A220J	CHIP R 22 J 1/10W	
R12			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R13			RK73GB2A220J	CHIP R 22 J 1/10W	
R14			RN73GH1J4530D	CHIP R 453.0 D 1/16W	
R15			RN73GH1J513D	CHIP R 51K D 1/16W	
R16,17			RK73GB2A220J	CHIP R 22 J 1/10W	
R18			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R19			RK73GB2A104J	CHIP R 100K J 1/10W	
R101			RK73GH2A104D	CHIP R 100K D 1/10W	
R102			RK73GH2A113D	CHIP R 11K D 1/10W	
R103			RK73GH2A184D	CHIP R 180K D 1/10W	
R104			RK73GH2A133D	CHIP R 13K D 1/10W	
R105			RK73GB2A473J	CHIP R 47K J 1/10W	
R106			RK73GB2A100J	CHIP R 10 J 1/10W	
R107			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R219			RK73GB2A473J	CHIP R 47K J 1/10W	
R234			RN73GH1J472D	CHIP R 4.7K D 1/16W	
R235			RN73GH1J912D	CHIP R 9.1K D 1/16W	
R236			RN73GH1J222D	CHIP R 2.2K D 1/16W	
R240			RK73GB2A470J	CHIP R 47 J 1/10W	
R242			RK73GB2A470J	CHIP R 47 J 1/10W	
R300			RK73GB2A103J	CHIP R 10K J 1/10W	
R301			RK73GB2A101J	CHIP R 100 J 1/10W	
R302			RK73GB2A221J	CHIP R 220 J 1/10W	
R303-306			RK73GB2A102J	CHIP R 1.0K J 1/10W	

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-458/459x-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R307			RK73GB2A101J	CHIP R 100 J 1/10W		R619,620			RK73GB2A101J	CHIP R 100 J 1/10W	
R308			RK73GB2A621J	CHIP R 620 J 1/10W		R621			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R309			RK73GB2A102J	CHIP R 1.0K J 1/10W		R623			RK73GB2A511J	CHIP R 510 J 1/10W	
R310,311			RK73GB2A103J	CHIP R 10K J 1/10W		R624			RK73GB2A104J	CHIP R 100K J 1/10W	
R312			RK73GB2A101J	CHIP R 100 J 1/10W		R625			RK73GB2A101J	CHIP R 100 J 1/10W	
R316			RK73GB2A102J	CHIP R 1.0K J 1/10W		R702			RK73FB2B561J	CHIP R 560 J 1/8W	
R318			RK73GB2A102J	CHIP R 1.0K J 1/10W		R703			RK73FB2B331J	CHIP R 330 J 1/8W	
R321			RN73GH1J472D	CHIP R 4.7K D 1/16W		VR203			R32-0328-05	SEMI FIXED VARIABLE RESISTOR	
R324,325			RN73GH1J472D	CHIP R 4.7K D 1/16W		VR301			R32-0328-05	SEMI FIXED VARIABLE RESISTOR	
R326			RK73GH2A473D	CHIP R 47K D 1/10W		W3			R92-1252-05	CHIP R 0 OHM J 1/16W	
R327			RK73GH2A683D	CHIP R 68K D 1/10W		W216,217			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R328			RK73GH2A153D	CHIP R 15K D 1/10W		W253			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R329			RK73GH2A101D	CHIP R 100 D 1/10W		W254,255			R92-1252-05	CHIP R 0 OHM J 1/16W	
R330			RK73GH2A182D	CHIP R 1.8K D 1/10W		W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	
R331			RK73GH2A331D	CHIP R 330 D 1/10W		W309,310			R92-1252-05	CHIP R 0 OHM J 1/16W	
R332			RK73GH2A332D	CHIP R 3.3K D 1/10W		W320			R92-1252-05	CHIP R 0 OHM J 1/16W	
R337,338			RK73GB2A101J	CHIP R 100 J 1/10W		W323			R92-1252-05	CHIP R 0 OHM J 1/16W	
R339			RK73GB2A102J	CHIP R 1.0K J 1/10W		W333-335			R92-1252-05	CHIP R 0 OHM J 1/16W	
R340-344			RK73GB2A101J	CHIP R 100 J 1/10W		W354-357			R92-1252-05	CHIP R 0 OHM J 1/16W	
R345			RK73GH2A683D	CHIP R 68K D 1/10W		W366			R92-1252-05	CHIP R 0 OHM J 1/16W	
R346			RK73GB2A105J	CHIP R 1.0M J 1/10W		W371			R92-1252-05	CHIP R 0 OHM J 1/16W	
R347			RK73GH2A153D	CHIP R 15K D 1/10W		W385			R92-1252-05	CHIP R 0 OHM J 1/16W	
R348			RK73GB2A362J	CHIP R 3.6K J 1/10W		W392			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R349			RK73GB2A752J	CHIP R 7.5K J 1/10W		W398			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R350-352			RK73GB2A101J	CHIP R 100 J 1/10W		S601			S70-0901-05	TACT SWITCH	
R353		*	RK73GB2A300J	CHIP R 30 J 1/10W		S602,603			S70-0919-05	TACT SWITCH	
R354			RK73GB2A820J	CHIP R 82 J 1/10W		S604,605			S70-0901-05	TACT SWITCH	
R359,360			RK73GB2A100J	CHIP R 10 J 1/10W		S606-608			S70-0919-05	TACT SWITCH	
R361			RK73GB2A562J	CHIP R 5.6K J 1/10W		S609			S70-0901-05	TACT SWITCH	
R373,374			RK73GB2A561J	CHIP R 560 J 1/10W		S614			S70-0919-05	TACT SWITCH	
R380,381			RK73EB2E101J	CHIP R 100 J 1/4W		S615			S70-0910-05	TACT SWITCH	
R385,386			RK73EB2E100J	CHIP R 10 J 1/4W		S616			S70-0919-05	TACT SWITCH	
R387,388			RK73EB2E101J	CHIP R 100 J 1/4W		S617,618			S70-0901-05	TACT SWITCH	
R391			RK73EB2E101J	CHIP R 100 J 1/4W		D1,2			UDZS4.7B	ZENER DIODE	
R393-397			RK73EB2E101J	CHIP R 100 J 1/4W		D3			1SS355	DIODE	
R501,502			RK73GB2A333J	CHIP R 33K J 1/10W		D4,5			DA204U	DIODE	
R503-506			RK73EB2E100J	CHIP R 10 J 1/4W		D6			MA2S784-F	DIODE	
R601			RK73GB2A101J	CHIP R 100 J 1/10W		D7			UDZS5.6B	ZENER DIODE	
R602			RK73GB2A242J	CHIP R 2.4K J 1/10W		D8			AVRM1608120M6A	VARIATOR	
R603			RK73GB2A362J	CHIP R 3.6K J 1/10W		D101			EP05Q04	DIODE	
R604			RK73GB2A622J	CHIP R 6.2K J 1/10W		D102			EP05Q06	DIODE	
R605			RK73GB2A123J	CHIP R 12K J 1/10W		D103,104			EP05Q04	DIODE	
R606			RK73GB2A101J	CHIP R 100 J 1/10W		D301			UDZS5.1B	ZENER DIODE	
R607			RK73GB2A242J	CHIP R 2.4K J 1/10W		D302,303			DA204U	DIODE	
R608			RK73GB2A362J	CHIP R 3.6K J 1/10W		D304			UDZS5.1B	ZENER DIODE	
R609			RK73GB2A622J	CHIP R 6.2K J 1/10W		D309			1SV231-F	VARIABLE CAPACITANCE DIODE	
R610			RK73GB2A123J	CHIP R 12K J 1/10W		D310			AVRM1608180M6A	VARIATOR	
R611			RK73GB2A363J	CHIP R 36K J 1/10W		D501-504			UDZS6.2B	ZENER DIODE	
R612			RK73GB2A361J	CHIP R 360 J 1/10W		D601-603			AVRM1608180M6A	VARIATOR	
R613			RK73GB2A101J	CHIP R 100 J 1/10W		D612			AVRM1608180M6A	VARIATOR	
R614			RK73GB2A361J	CHIP R 360 J 1/10W		D615,616			AVRM1608180M6A	VARIATOR	
R615			RK73GB2A101J	CHIP R 100 J 1/10W		D622,623			AVRM1608180M6A	VARIATOR	
R616			RK73GB2A361J	CHIP R 360 J 1/10W		D627,628			AVRM1608180M6A	VARIATOR	
R617			RK73GB2A101J	CHIP R 100 J 1/10W		D636-638			AVRM1608180M6A	VARIATOR	
R618			RK73GB2A361J	CHIP R 360 J 1/10W							

E3 : DDX6027 E4 : DDX6027Y (Europe)

K1 : DDX7017 (North America)

X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)

C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-458/459x-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D639 D690 IC1 IC101 IC203			DA204U DAN202U OZ964ISN-C LT1947-PBF TA75W558FU-F	DIODE DIODE ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC300 IC301 IC302 IC303 IC601			TC7WH126FU-F TC200G02G0104 TC7SH08FU-F NJM2107F-ZB RS-181	MOS-IC MOS-IC MOS-IC ANALOGUE IC ANALOGUE IC	
Q1 Q2,3 Q5 Q101 Q102			2SC4081 SI5513DC-E3 2SC4081 DTC124EUA DTA124EUA	TRANSISTOR DUAL FET TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q202 Q203 Q300 Q301 Q302,303			2SC4097 2SA1577 DTC124EUA 2SC4097 DTA123JUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q304,305 Q306 Q307,308 Q601 Q602			DTC123JUA DTC124EUA 2SC4081 DTC124EUA DTA124EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q604 Q605 Q701			DTC124EUA DTA143EUA DTC124EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	

DVD UNIT (X37-1070-00)

C1-3 C4,5 C6 C7 C8			CK73HB1A104K CK73HB0J105K CK73GB0J475K CK73FB0J106M CK73FB0J226M	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 4.7UF K CHIP C 10UF M CHIP C 22UF M	
C10 C14 C15 C16 C17			CK73HB1A104K CK73FB0J106M CK73HB0J105K CK73HB1A104K CK73HB0J105K	CHIP C 0.10UF K CHIP C 10UF M CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K	
C18 C19 C20 C21 C23			CK73HB1H332K CK73HB1A104K CK73FB0J106M CK73FB0J226M CK73HB1A104K	CHIP C 3300PF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 22UF M CHIP C 0.10UF K	
C24 C25 C26 C27 C28			CC73GCH1H471J CK73HB1A104K CK73HB1A473K CK73HB1A104K CK73HB1C103K	CHIP C 470PF J CHIP C 0.10UF K CHIP C 0.047UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C29 C31 C32 C33 C35			CK73HB0J105K CK73HB1C223K CC73HCH1H470J CC73GCH1H102J CC73GCH1H102J	CHIP C 1.0UF K CHIP C 0.022UF K CHIP C 47PF J CHIP C 1000PF J CHIP C 1000PF J	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C36 C37 C38 C39 C40			CC73GCH1H681J CK73HB1E682K CK73HB0J105K CC73GCH1H331J CC73GCH1H102J	CHIP C 680PF J CHIP C 6800PF K CHIP C 1.0UF K CHIP C 330PF J CHIP C 1000PF J	
C41 C42 C43 C44 C45			CK73HB0J105K CC73GCH1H681J CK73HB1H222K CK73HB1H152K CK73HB1H102K	CHIP C 1.0UF K CHIP C 680PF J CHIP C 2200PF K CHIP C 1500PF K CHIP C 1000PF K	
C46 C47-52 C53 C54,55 C56			CK73HB1A104K CK73HB0J105K CK73HB1A104K CK73HB0J105K C93-1228-05	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 1.0UF M	
C57,58 C60 C61 C62,63 C64			CK73HB0J105K CK73HB0J105K C93-1228-05 CC73HCH1H120J CK73HB1C103K	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF M CHIP C 12PF J CHIP C 0.010UF K	
C66 C67 C68,69 C70 C71			CK73FB0J106M C93-1228-05 CK73HB0J105K CK73HB1A104K CK73FB0J226M	CHIP C 10UF M CHIP C 1.0UF M CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 22UF M	
C72,73 C76 C80 C81 C82			CK73HB1A104K CK73HB1A104K CK73FB0J106M CK73FB0J226M CK73HB1A104K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 22UF M CHIP C 0.10UF K	
C83,84 C85,86 C87-89 C90 C91			C92-1908-05 CK73HB1H102K CK73HB1C103K CK73HB1C223K CK73HB1A333K	ELECTRO 47UF 6.3WV CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.022UF K CHIP C 0.033UF K	
C92,93 C94 C95 C96 C97			CK73HB1C103K CK73GB0J475K CK73FB0J106M CK73FB0J226M CK73HB1C103K	CHIP C 0.010UF K CHIP C 4.7UF K CHIP C 10UF M CHIP C 22UF M CHIP C 0.010UF K	
C98 C99 C101 C102 C104			CK73GB0J475K CK73FB0J226M CK73FB0J226M C92-1908-05 CC73HCH1H100D	CHIP C 4.7UF K CHIP C 22UF M CHIP C 22UF M ELECTRO 47UF 6.3WV CHIP C 10PF D	
C105-108 C109,110 C120,121			CC73HCH1H151J CK73HB1H102K CK73HB1C223K	CHIP C 150PF J CHIP C 1000PF K CHIP C 0.022UF K	
CN1 CN2 CN3 CN4 CN5			E41-2194-05 E41-2156-05 E41-2158-05 E41-2197-05 E41-2189-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
CN6			E41-2050-05	SOCKET FOR PIN ASSY	

E3 : DDX6027 E4 : DDX6027Y (Europe)
K1 : DDX7017 (North America)
X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)
C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1070-00)

Ref. No.	Add	New	Parts No.	Description	Destination
L1-5 X1			L92-0365-05 L77-2870-05	CHIP FERRITE CRYSTAL RESONATOR (16.897849M)	
CP2-4 CP5-9 CP10 R1 R2,3			RK74HB1J103J RK74HB1J330J RK74HB1J820J RK73GH2A101D RK73HB1J104J	CHIP-COM 10K J 1/16W CHIP-COM 33 J 1/16W CHIP-COM 82 J 1/16W CHIP R 100 D 1/10W CHIP R 100K J 1/16W	
R8 R10 R11 R12 R15			RK73HB1J104J RK73HB1J103J RK73HB1J225J RK73HB1J103J RK73GH2A113D	CHIP R 100K J 1/16W CHIP R 10K J 1/16W CHIP R 2.2M J 1/16W CHIP R 10K J 1/16W CHIP R 11K D 1/10W	
R16 R18 R21 R22 R23			RK73GH2A273D RK73HB1J125J RK73GH2A153D RK73HB1J105J RK73HB1J472J	CHIP R 27K D 1/10W CHIP R 1.2M J 1/16W CHIP R 15K D 1/10W CHIP R 1.0M J 1/16W CHIP R 4.7K J 1/16W	
R24 R25-27 R28,29 R30-32 R33			RK73GH2A123D RK73HB1J103J RK73HB1J102J RK73HB1J132J RK73HB1J103J	CHIP R 12K D 1/10W CHIP R 10K J 1/16W CHIP R 1.0K J 1/16W CHIP R 1.3K J 1/16W CHIP R 10K J 1/16W	
R34,35 R36 R37 R38,39 R40,41			RK73HB1J472J RK73HB1J102J RK73HB1J132J RK73HB1J102J RK73HB1J473J	CHIP R 4.7K J 1/16W CHIP R 1.0K J 1/16W CHIP R 1.3K J 1/16W CHIP R 1.0K J 1/16W CHIP R 47K J 1/16W	
R45 R46 R47 R49 R51			RK73HB1J105J RK73HB1J152J RK73HB1J472J RK73HB1J273J RK73HB1J102J	CHIP R 1.0M J 1/16W CHIP R 1.5K J 1/16W CHIP R 4.7K J 1/16W CHIP R 27K J 1/16W CHIP R 1.0K J 1/16W	
R52 R53 R54 R55 R56,57			RK73HB1J132J RK73HB1J103J RK73HB1J220J RK73HB1J202J RK73HB1J221J	CHIP R 1.3K J 1/16W CHIP R 10K J 1/16W CHIP R 22 J 1/16W CHIP R 2.0K J 1/16W CHIP R 220 J 1/16W	
R58 R59 R61 R62 R63			RK73GH2A273D RK73GB2A150J RK73GB2A121J R92-3475-05 RK73GB2A241J	CHIP R 27K D 1/10W CHIP R 15 J 1/10W CHIP R 120 J 1/10W CHIP R 0.27 F 1/2W CHIP R 240 J 1/10W	
R64 R65,66 R67 R68,69 R70,71			RK73HB1J222J RK73HB1J103J RK73HB1J472J RK73HB1J102J RK73GH2A123D	CHIP R 2.2K J 1/16W CHIP R 10K J 1/16W CHIP R 4.7K J 1/16W CHIP R 1.0K J 1/16W CHIP R 12K D 1/10W	
R72 R73 R74 R75 R76			RK73GH2A333D RK73GH2A203D RK73HB1J123J RK73HB1J152J RK73HB1J751J	CHIP R 33K D 1/10W CHIP R 20K D 1/10W CHIP R 12K J 1/16W CHIP R 1.5K J 1/16W CHIP R 750 J 1/16W	
R77 R78			RK73HB1J431J RK73HB1J472J	CHIP R 430 J 1/16W CHIP R 4.7K J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R79 R80 R81 R82 R83			R92-5031-05 RK73GB2A3R6J RK73HB1J134J RK73HB1J103J RK73HB1J820J	CHIP R 5.1 F 1/8W CHIP R 3.6 J 1/10W CHIP R 130K J 1/16W CHIP R 10K J 1/16W CHIP R 82 J 1/16W	
R84 R85 R86-88 R89,90 R91			RK73HB1J103J RK73HB1J330J RK73HB1J820J RK73HB1J103J RK73GH2A101D	CHIP R 10K J 1/16W CHIP R 33 J 1/16W CHIP R 82 J 1/16W CHIP R 10K J 1/16W CHIP R 100 D 1/10W	
R92 R93 R95 R96,97 R98			RK73HB1J104J RK73HB1J222J R92-5031-05 RK73HB1J102J R92-5025-05	CHIP R 100K J 1/16W CHIP R 2.2K J 1/16W CHIP R 5.1 F 1/8W CHIP R 1.0K J 1/16W CHIP R 3.3 F 1/8W	
R100,101 R102,103 R104 R105 R106,107			RK73HB1J510J RK73HB1J202J RK73HB1J103J RK73HB1J132J RK73HB1J103J	CHIP R 51 J 1/16W CHIP R 2.0K J 1/16W CHIP R 10K J 1/16W CHIP R 1.3K J 1/16W CHIP R 10K J 1/16W	
R108 R109 R110 R117,118 R120,121			RK73HB1J223J RK73HB1J123J RK73GH2A132D RK73HB1J103J RK73HB1J123J	CHIP R 22K J 1/16W CHIP R 12K J 1/16W CHIP R 1.3K D 1/10W CHIP R 10K J 1/16W CHIP R 12K J 1/16W	
R122,123 W1-4			RK73HB1J1R0J R92-1252-05	CHIP R 1.0 J 1/16W CHIP R 0 OHM J 1/16W	
S3-5			S68-0895-05	PUSH SWITCH	
D1,2 D3 D4-6 D7 IC1			MAZS0510M MA4ZD03 DAP202U MA2S111 AN22022A-V	ZENER DIODE DIODE DIODE DIODE ANALOGUE IC	
IC2 IC3 IC4 IC5 IC8			AN41204A M29W400DB55N6E MN103S71F S-80829CNP S-80813CNP	ANALOGUE IC ROM IC MOS-IC ANALOGUE IC ANALOGUE IC	
IC9 IC10 IC11 Q1,2 Q7,8			NJM2880U115 NJM2886DL2-33 S-24CS04AFT 2SK3018 2SB0970	ANALOGUE IC ANALOGUE IC ROM IC FET TRANSISTOR	
Q9,10 Q11-14 TH1			2SJ0536 DTA114YUA TH11-3H103FT	FET DIGITAL TRANSISTOR THERMISTOR	
DVD MECHANISM ASSY (X92-5130-00)					
1 2 3	1B 2B 3B		A10-5084-31 A10-5083-21 A11-1631-21	CHASSIS CHASSIS ASSY SUB CHASSIS	
4 5 7	1B 1B 2B		D10-4763-32 D10-4764-23 D10-4768-12	ARM ARM SLIDER	

E3 : DDX6027 E4 : DDX6027Y (Europe)
K1 : DDX7017 (North America)
X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)
C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DVD MECHANISM ASSY (X92-5130-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
8	2B		D10-4769-03	SLIDER	
9	2A		D10-4771-02	SLIDER	
10	2A		D10-4772-03	SLIDER	
11	2A		D10-4773-13	SLIDER	
12	2B		D10-4774-03	LEVER	
13	2B		D10-4776-23	ARM	
14	3A		D10-4795-23	ARM	
17	3B		D12-0638-13	CAM	
21	2B		D13-2298-04	GEAR	
22	2B		D13-2299-04	GEAR	
23	2B		D13-2303-04	GEAR	
24	2B		D13-2305-04	GEAR	
25	2B		D13-2306-04	GEAR	
26	1A		D13-2308-04	GEAR	
27	1A		D13-2309-04	GEAR	
28	3B		D13-2316-24	GEAR ASSY	
29	2B		D13-2300-14	GEAR	
30	2A		D14-0799-14	ROLLER	
31	2A		D14-1006-04	ROLLER	
33	3A		D21-2429-13	SHAFT	
36	1A		D39-0259-05	DAMPER	
37	2B		E39-0556-05	LEAD WIRE	
VFC1	2A		E39-0602-05	FLAT CABLE	
38	3A		F07-1134-12	COVER	
39	3A		F09-1930-14	SHEET	
40	3A		F09-1960-04	SHEET	
44	3A		F09-1870-04	SHEET	
45	2B		G01-3192-04	EXTENSION SPRING	
46	2A		G01-3194-24	EXTENSION SPRING	
47	1B		G01-3195-14	EXTENSION SPRING	
48	2A		G01-3206-24	TORSION COIL SPRING	
49	2A		G01-3207-24	TORSION COIL SPRING	
50	3A		G01-3209-04	COMPRESSION SPRING	
51	3A		G02-1468-04	FLAT SPRING	
52	2B		G02-1504-33	FLAT SPRING ASSY	
53	1B		G02-1466-24	FLAT SPRING	
54	3B		G02-1488-04	FLAT SPRING	
55	3A		G02-1473-04	FLAT SPRING	
56	1B		G11-3614-04	CUSHION (SR-S-24P)	
57	3B		G11-3622-04	CUSHION (PORON)	
58	2B		J11-0654-13	CLAMPER	
59	1A		J22-0042-12	MOUNTING HARDWARE	
60	1B		J22-0043-12	MOUNTING HARDWARE	
61	3B		J22-0044-03	MOUNTING HARDWARE	
62	1A		J22-0103-23	MOUNTING HARDWARE ASSY	
63	2B		J22-0177-14	MOUNTING HARDWARE	
64	1A		J90-1066-41	GUIDE	
65	1B		J90-1067-13	GUIDE	
66	1B		J90-1087-32	GUIDE	
67	1B		J90-1088-32	GUIDE	
A	2A		N09-6143-05	MACHINE SCREW	
B	1A		N09-6144-05	MACHINE SCREW	
C	3B		N09-6145-05	MACHINE SCREW	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D	3B		N09-6156-05	MACHINE SCREW (M1.4X1.6)	
E	1B		N09-6230-05	MACHINE SCREW	
F	1A		N19-2192-04	FLAT WASHER	
G	3B		N09-6133-05	MACHINE SCREW (SERRATED)	
H	3A		N09-6134-05	STEPPED SCREW (STEPPED)	
J	3A		N09-6203-05	MACHINE SCREW	
K	3A		N09-6221-15	MACHINE SCREW (P 1.4X3.5)	
L	2A		N09-6308-05	MACHINE SCREW (P 1.4X4.5)	
M	2A		N19-2183-14	FLAT WASHER	
VM1	2A		T42-1321-05	MOTOR ASSY	
VM2	3A		T42-1084-15	MOTOR ASSY	
VM3	2B		X94-2000-00	MOTORASSY (LO)	
71	2A		X94-2010-00	ROLLER ASSY	
VPU1	3B		X94-2020-00	OPTICAL PICKUP ASSY	
PANEL MECHANISM ASSY (D40-2201-15)					
601	2H		A10-5174-28	CHASSIS CALKING ASSY	
602	3G		D10-4801-38	SLIDER ASSY	
603	2G		D13-2324-08	GEAR	
604	2G		D13-2325-08	GEAR	
605	2G		D13-2326-08	GEAR	
607	2G		D14-0789-08	ROLLER	
608	1G		D19-0650-08	CLUTCH ASSY	
609	1H		E39-0671-08	WIRING HARNESS	
610	3G		G02-1480-08	FLAT SPRING	
611	3H		J22-0118-28	SLIDE RAIL	
612	3G		J22-0119-28	SLIDE RAIL	
613	2G		J22-0120-08	SLIDE RAIL	
614	2G		J90-1083-08	GUIDE	
615	2H		J22-0213-08	MOUNTING HARDWARE (MOTOR)	
A	1H		N09-6147-08	SCREW (M1.7X4)	
B	1H		N09-6148-08	SCREW (S2X2.3)	
D	3G		N09-6150-08	SCREW	
E	3G		N09-6151-08	SCREW	
F	1G		N19-2105-14	CUT WASHER (1.6X3.5Xt0.35)	
PM1	1H		T42-1100-18	MOTOR ASSY	
VR1	1H		T99-0448-05	SPEED DETECTOR	

E3 : DDX6027 E4 : DDX6027Y (Europe)
K1 : DDX7017 (North America)
X2 : DDX7047 (Australia) R1 : DDX7047 (Latin America)
C1 : DDX7067 (China) M2 : DDX7037 (Other Areas)

△ Indicates safety critical components.