



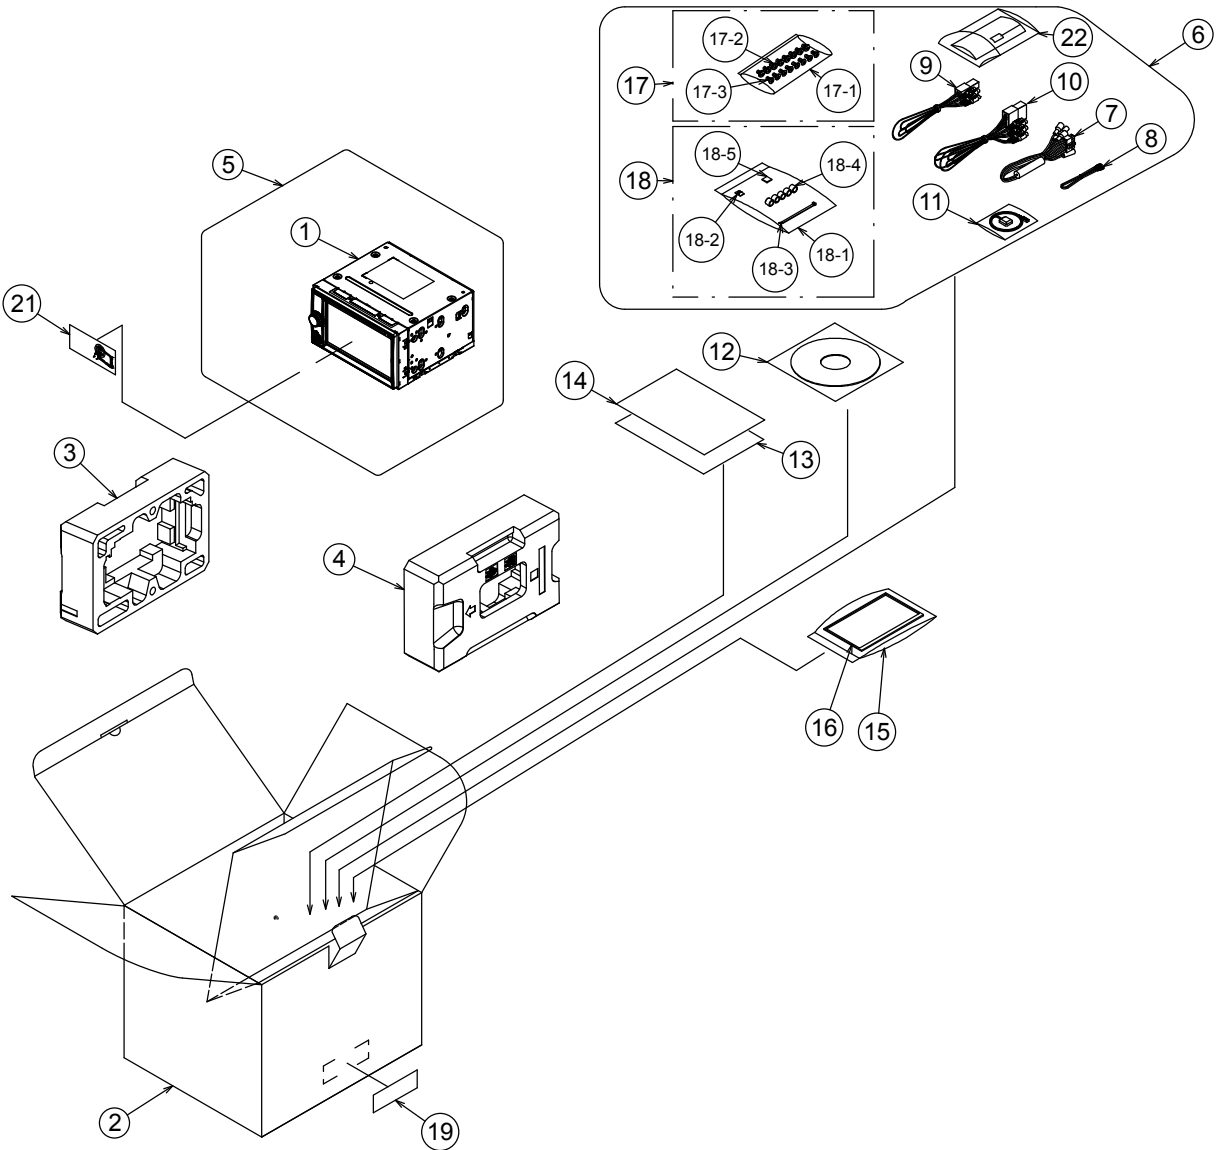

1.	MAIN UNIT	-----	1
2.	CARTON	-----	1
3.	INNER CARTON (L)	-----	1
4.	INNER CARTON (R)	-----	1
5.	PLASTIC BAG	-----	1
6.	PLASTIC BAG	-----	1
7.	POWER SUPPLY CABLE	854-6471-50	1
8.	USB CABLE (1.5m)	855-0714-51	1
9.	RCA PIN CABLE (4CH)		
	(REAR AUX-IN/REAR VIDEO OUT)	855-5483-51	1
10.	RCA PIN CABLE (6CH)	855-5591-51	1
11.	GPS ANTENNA	096-0169-01	1
12.	CD ROM (OWNER'S MANUAL)	-----	1
13.	QUICK START GUIDE & INSTALLATION MANUAL		
		280-9351-00	1
14.	WARRANTY CARD	-----	1
15.	PLASTIC BAG	-----	1
16.	FINISHER	383-0752-00	1


17.	PARTS BAG	-----	1
17-1.	PLASTIC BAG	-----	1
17-2.	FLAT HEAD SCREW (M5x8)	714-5008-4B	8
17-3.	HEXAGONAL BOLT (M5x8)	716-0496-51	8
18.	PARTS BAG	-----	1
18-1.	PLASTIC BAG	-----	1
18-2.	CABLE HOLDER	321-1026-01	1
18-3.	CABLE TIE	335-3847-00	1
18-4.	RUBBER CAP	345-3799-20	5
	(FOR RCA PIN CABLE)		
18-5.	DOUBLE-SIDED TAPE		
	FOR FASTENING GPS ANTENNA	347-6369-00	1
19.	BAR CODE LABEL	-----	1
20.	-	-	-
21.	LABEL (CAUTION)	-----	1
22.	MICROPHONE	081-0039-01	1

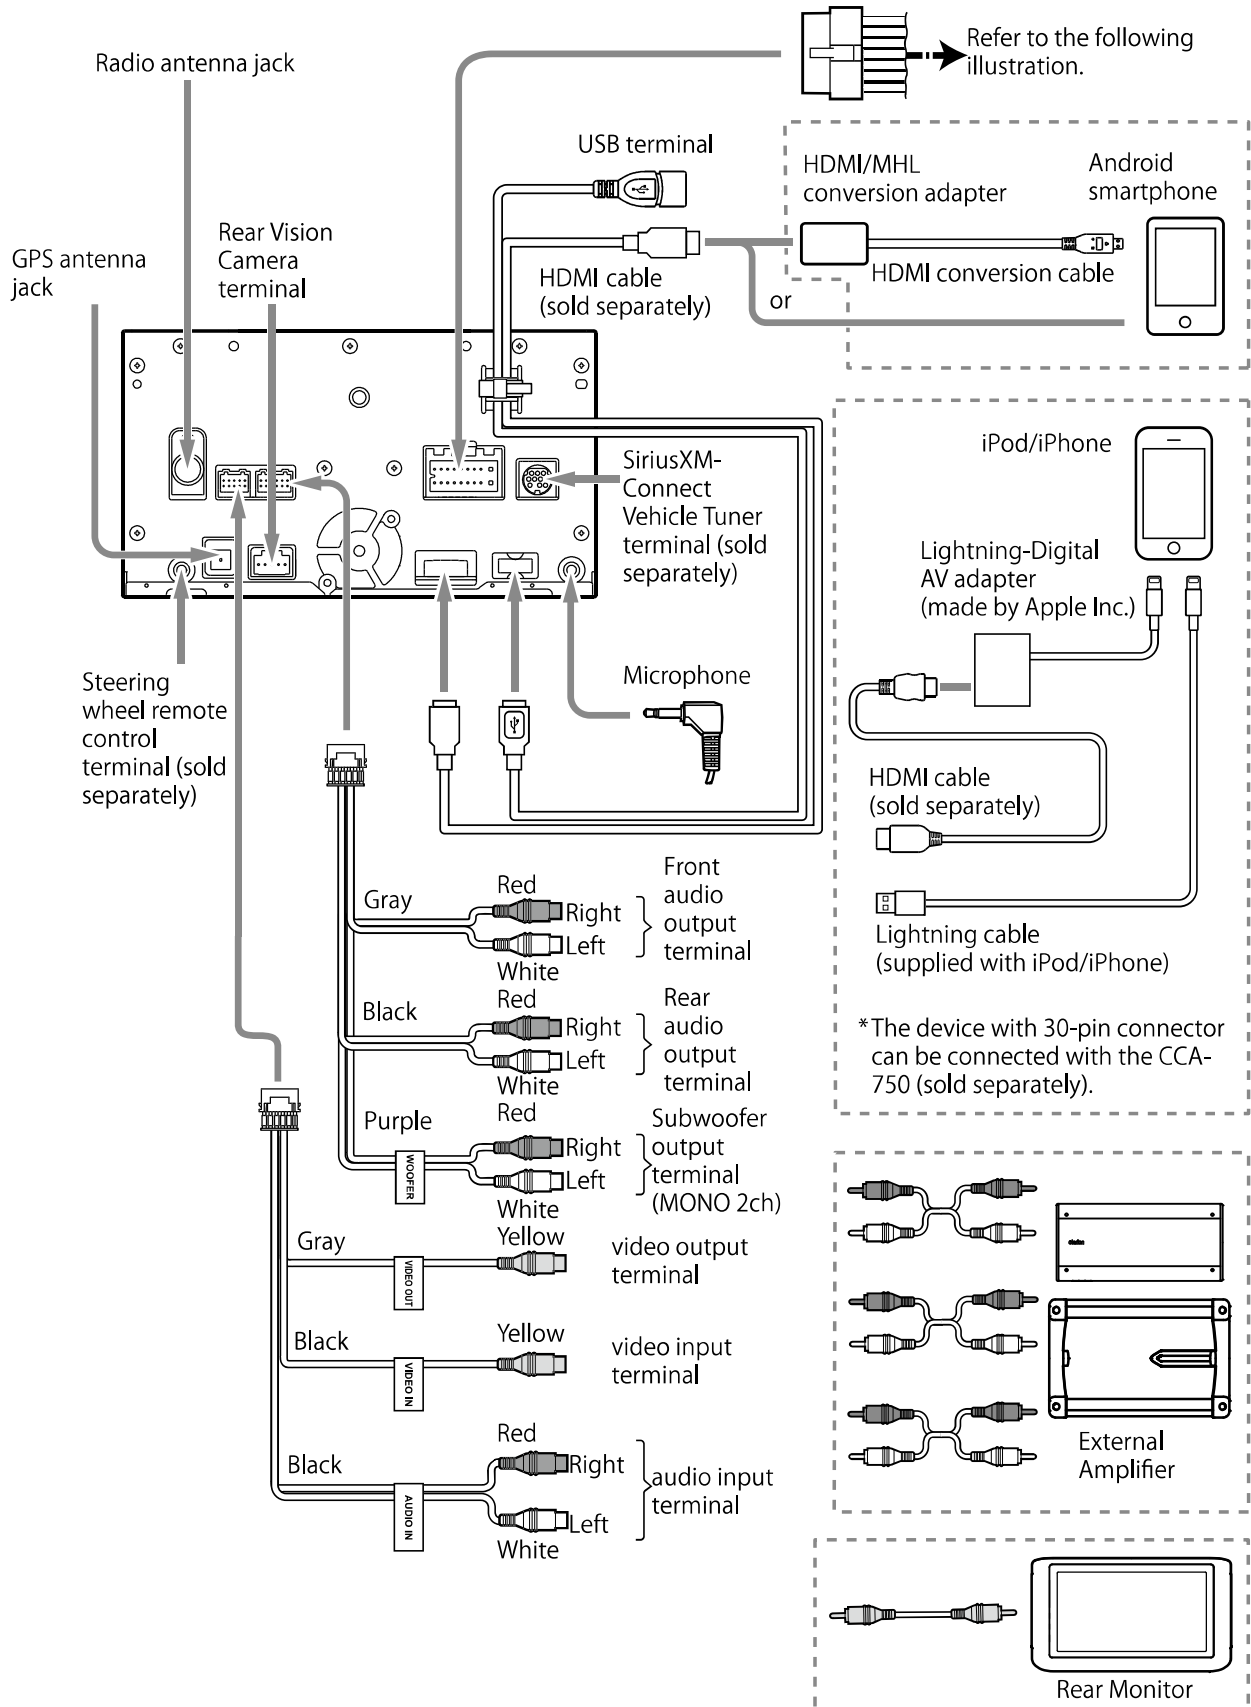


WIRE VIEW

POWER SUPPLY CABLE: (854-6471-50)

(: mm)

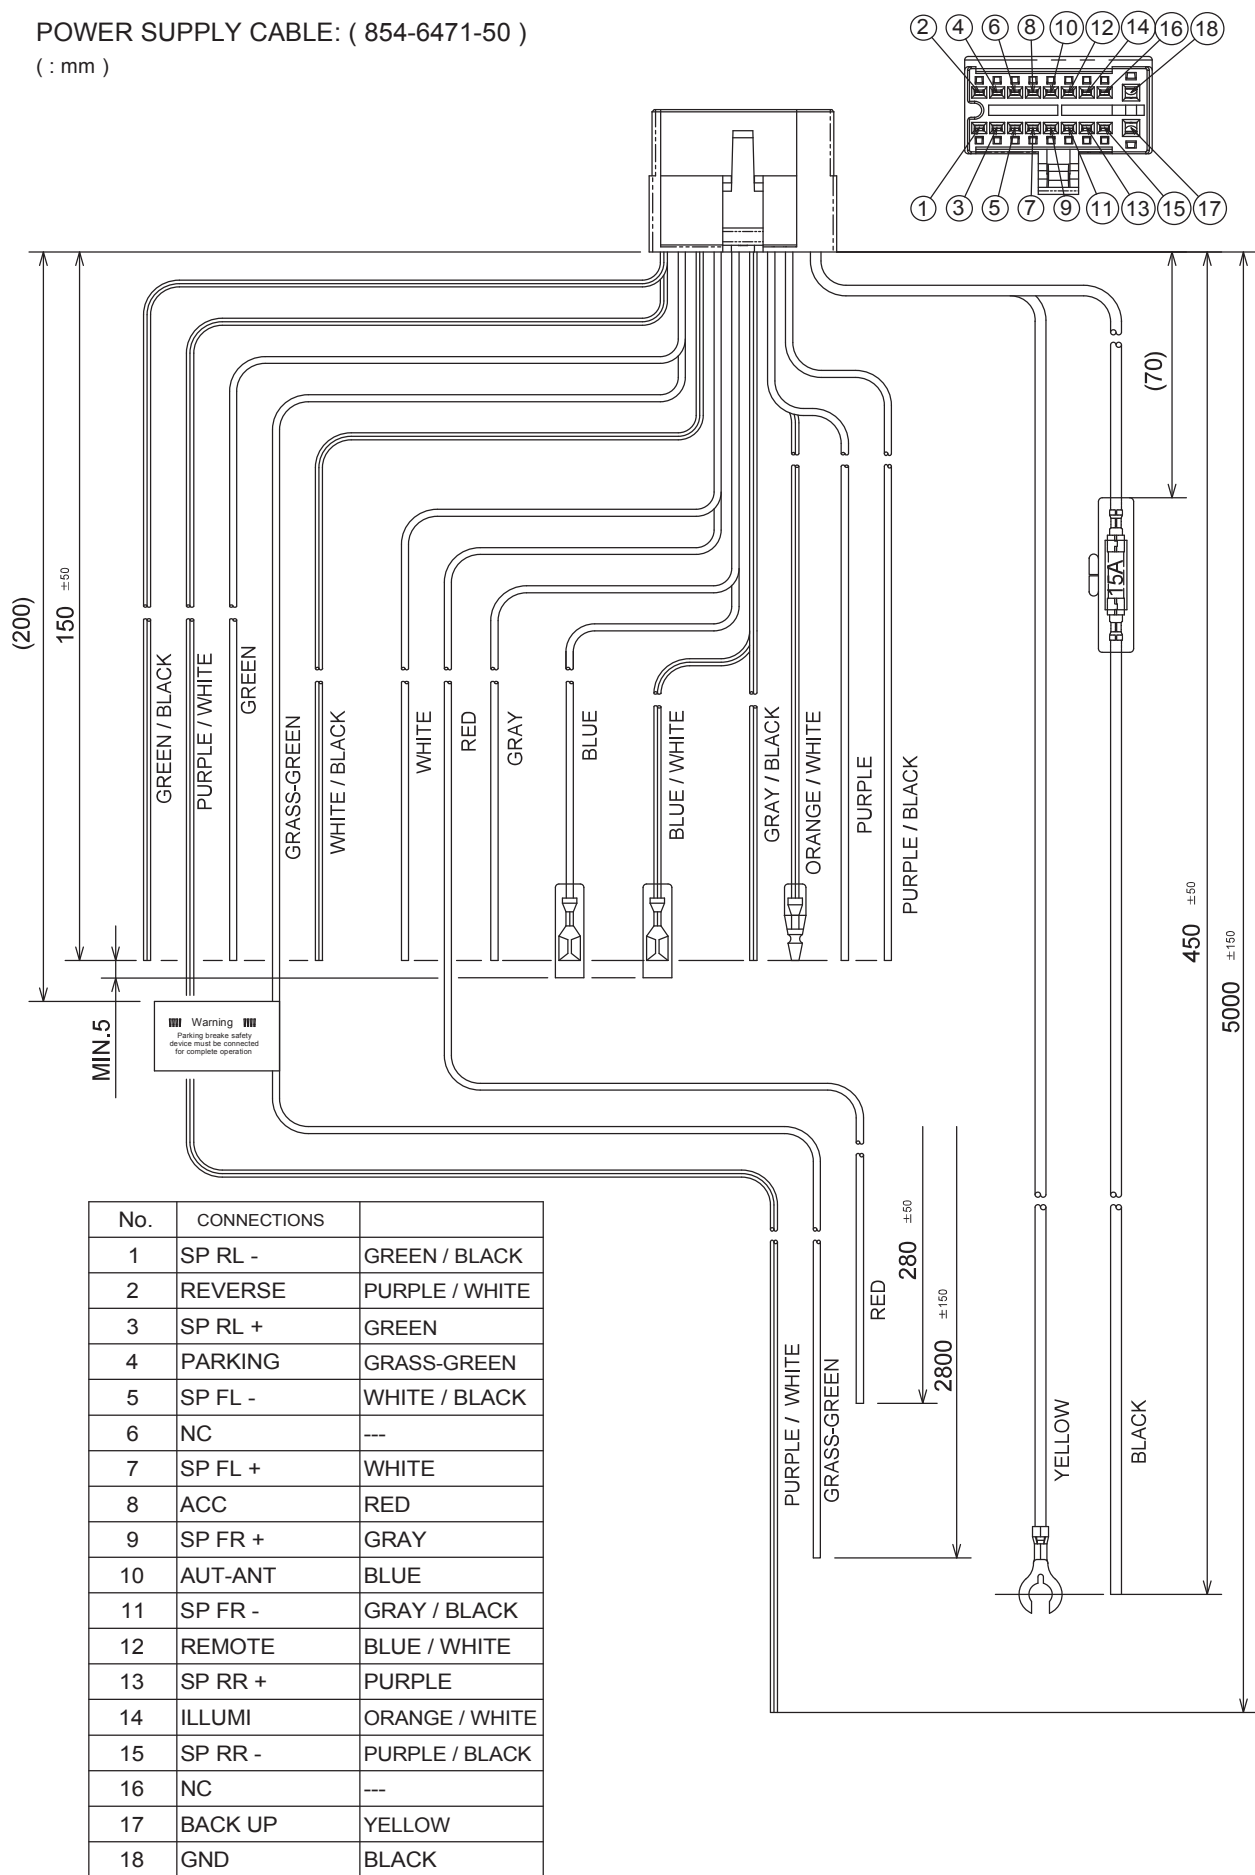


RCA PIN CABLE: (855-5483-51)
 (Rear AUX-IN / Rear Video Out)
 (: mm)

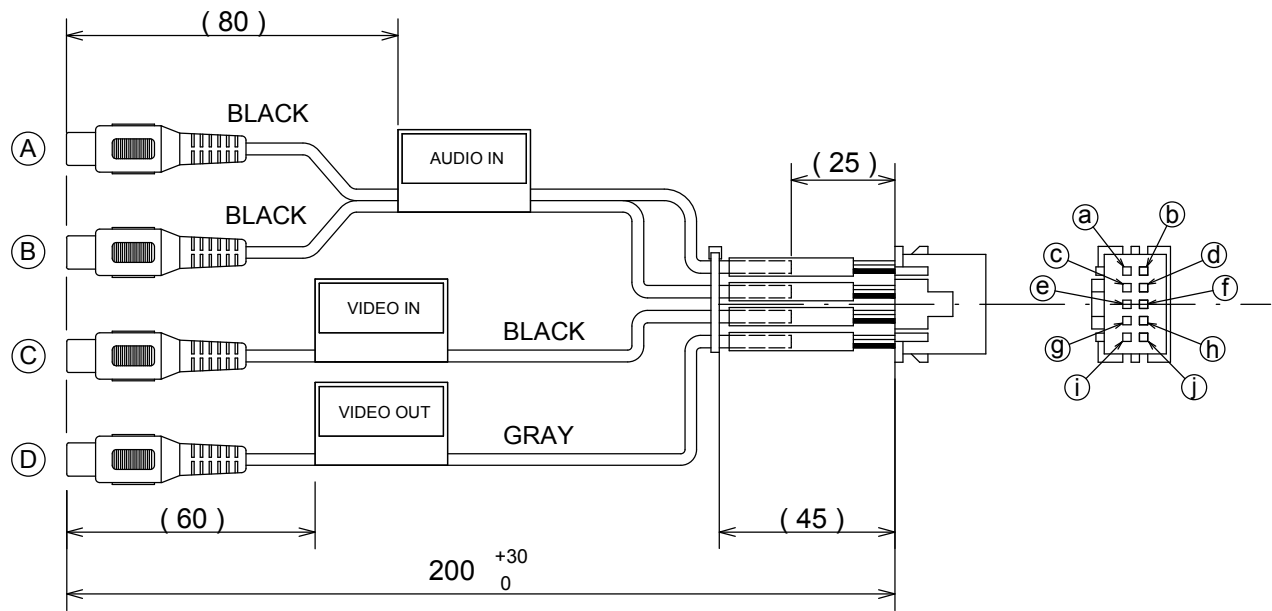


A	HOT	a	BLACK	AUDIO-Rch
	EARTH	b		
B	HOT	c	BLACK	AUDIO-Lch
	EARTH	d		
	---	e	N.C	---
		f		
C	HOT	g	BLACK	VIDEO-IN
	EARTH	h		
D	HOT	i	GRAY	VIDEO-OUT
	EARTH	j		
RCA JACK		PIN No.	COLOR	FUNCTION

a	R-IN	RED
b	S-GND	BLACK Shield (Common)
c	L-IN	WHITE
d	S-GND	BLACK Shield (Common)
e	N.C	---
f	N.C	---
g	V-IN	RED
h	S-GND	BLACK Shield (Common)
i	V-OUT	WHITE
j	S-GND	BLACK Shield (Common)
PIN No.	FUNCTION	COLOR


USB CABLE: (855-0714-51)
 (: mm)

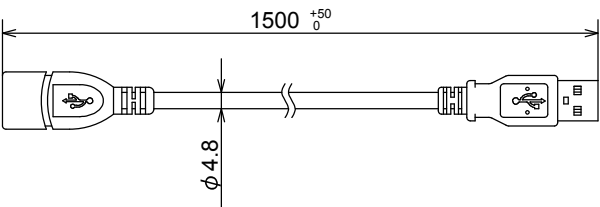

GPS ANTENNA: (096-0169-01)
 (: mm)

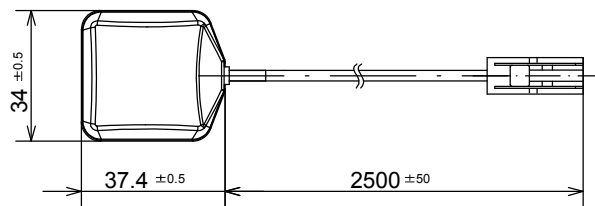

(: mm)

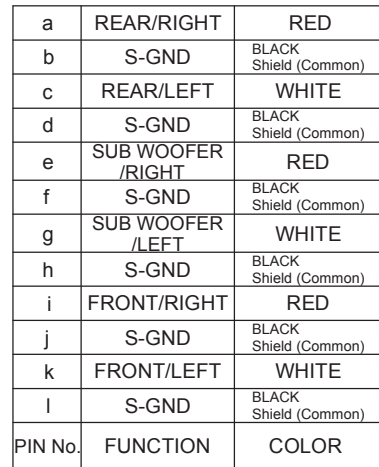


(: mm)



EXPLODED VIEW / PARTS LIST

Main section

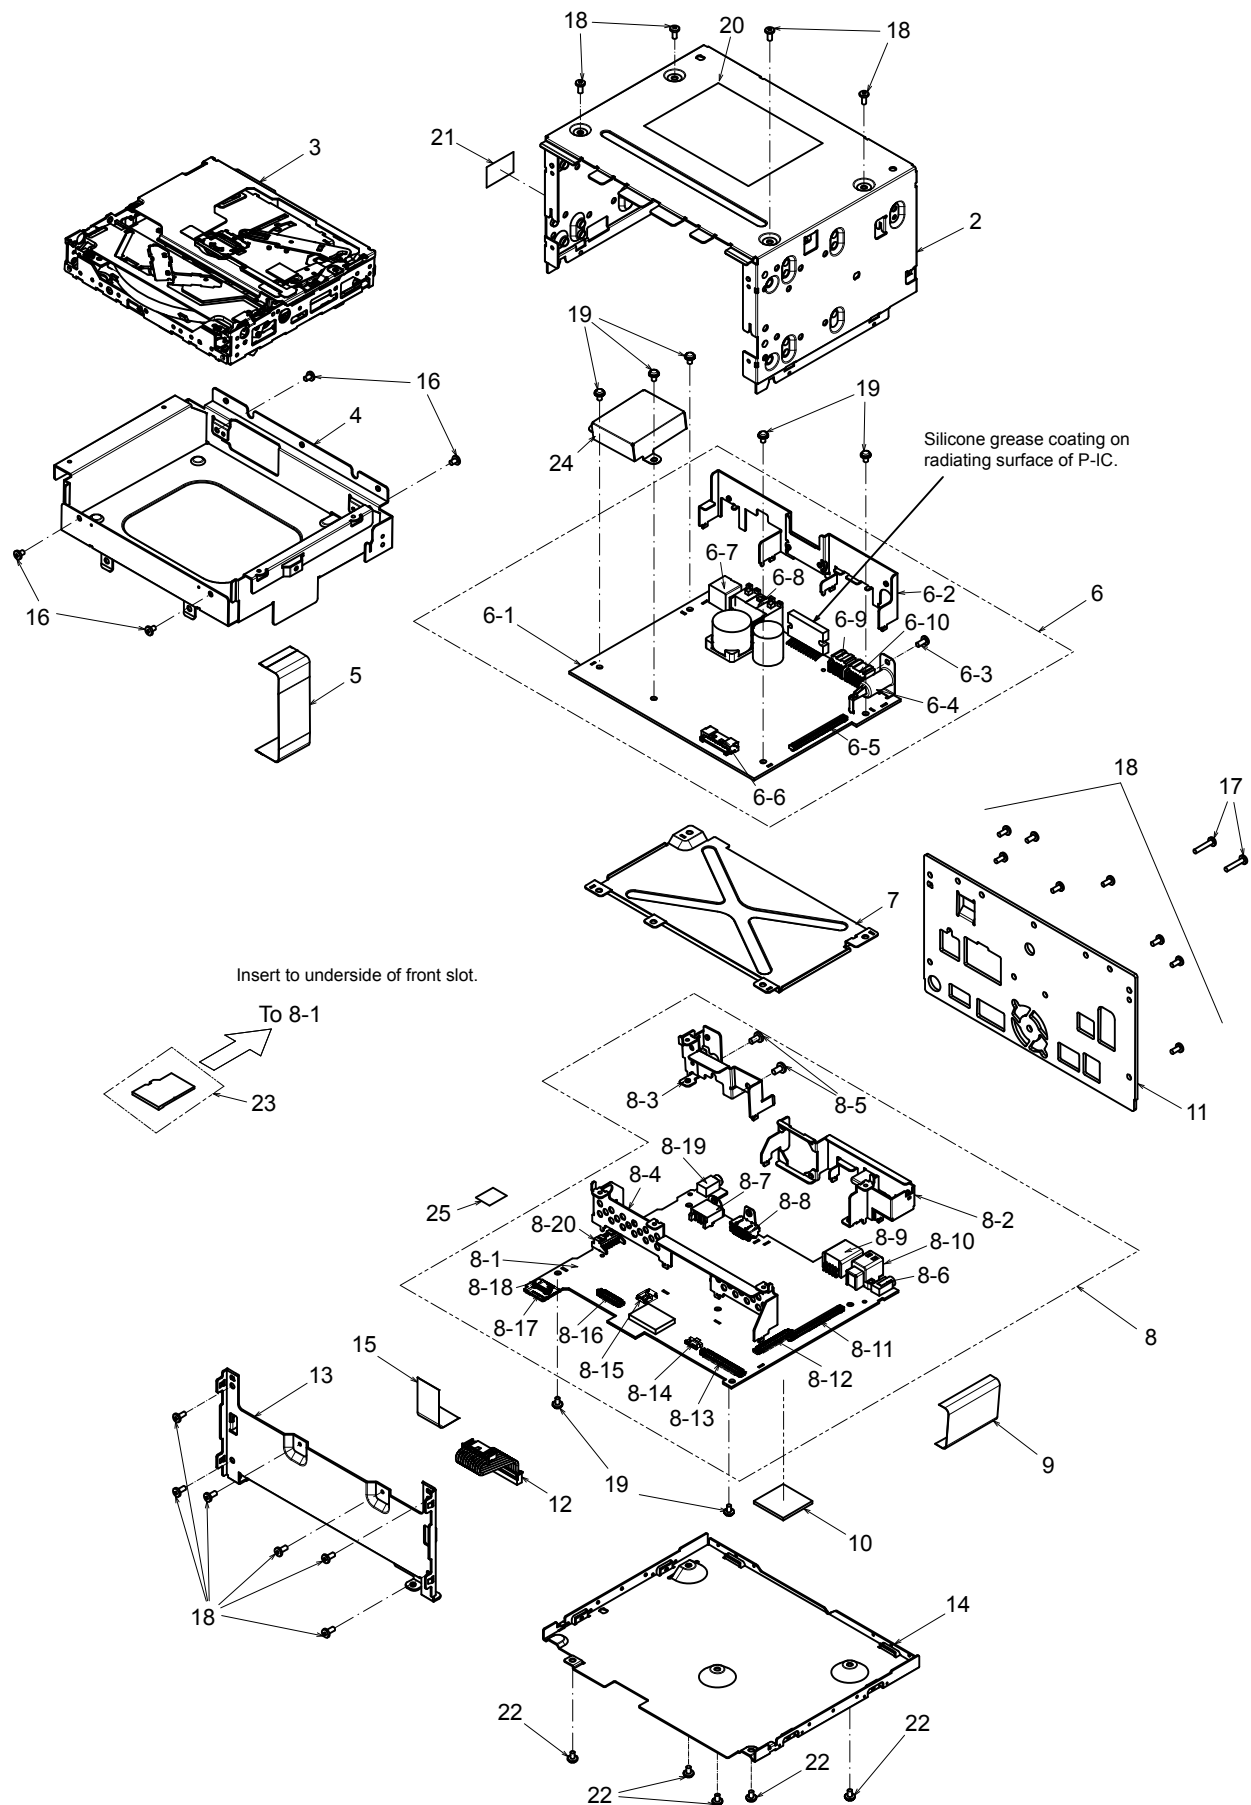

This exploded view diagram illustrates the assembly of a car stereo unit. The components are labeled with numbers 1-1 through 1-16, indicating the sequence of assembly. The main unit (1-1) is shown with various connectors and components being attached. The diagram includes a perspective view of the unit with components 1-1 through 1-16 shown in their relative positions. A detailed view of the front panel (1-3) and its mounting (1-4) is shown, along with the rear panel (1-6) and its mounting (1-9). The diagram also shows the installation of the unit into the car's dashboard (1-10) using a bracket (1-11) and screws (1-12). The diagram includes a detailed view of the front panel (1-3) and its mounting (1-4) showing the internal components and the mounting bracket (1-11) and screws (1-12). The diagram also shows the installation of the unit into the car's dashboard (1-10) using a bracket (1-11) and screws (1-12). The diagram includes a detailed view of the front panel (1-3) and its mounting (1-4) showing the internal components and the mounting bracket (1-11) and screws (1-12). The diagram also shows the installation of the unit into the car's dashboard (1-10) using a bracket (1-11) and screws (1-12).

NO.	PART NO.	DESCRIPTION	Q'TY
1	-	-	-
△ 1-1	940-8806-23	ESCUTCHEON-ASSY(QY1110UA)	1
	940-8806-40	ESCUTCHEON-ASSY(QY1210UA)	1
1-2	948-1084-00	KNOB-ASSY	1
1-3	013-9737-00	TOUCH PANEL	1
1-4	379-0494-00	TFT	1
1-5	MUZ2421	SHEETMSV10X20	1
1-6	331-5499-00	LCD-HOLDER	1
1-7	081-0048-00	MICROPHONE	1
1-8	345-6737-00	CUSHION MIC	1
1-9	-----	SW-PWB-ASSY(1120A7-76)	1
1-10	816-3166-55	FLAT WIRE	1
1-11	346-0310-00	LEATHER SHEET	1
1-12	335-9476-00	DISC GUIDE	1
1-13	716-0778-51	TAPPING SCREW(Φ2 x 6)	6
1-14	716-1816-50	SCREW(M2x4)	5
1-15	384-0094-00	BUTTON(EJECT)	1
1-16	331-3038-50	EARTH PLATE	1
2	310-2020-00	UPPER CASE	1
3	929-2360-80	DVD-MECH-MODULE	1
4	331-5493-00	MECH BRKT	1
5	816-3145-55	FLAT WIRE	1
6	-----	AUDIO-PWB-ASSY(1110A7-70)	1
6-1	-----	AUDIO-PWB(449400-039)	1
6-2	331-5497-00	BRKT-C	1
6-3	714-2606-8B	MACHINE SCREW(M2.6 x 6)	1
6-4	092-0702-50	RADIO-ANT	1
6-5	074-2248-80	OUTLET SOCKET	1
6-6	076-6021-60	PLUG	1
6-7	074-1170-00	OUTLET SOCKET(BB)	1
6-8	074-4030-00	OUTLET SOCKET(MAIN CP)	1
6-9	076-0714-12	PLUG(LINE OUT)	1
6-10	076-0714-10	PLUG(V-IN&V-OUT)	1
7	331-5498-10	SHIELD PLATE	1
8	-----	NAVI-PWB-ASSY(1110A7-71)	1
△ 8-1	-----	NAVI-PWB(444601-039)	1
8-2	331-5764-00	BRKT-R	1

NO.	PART NO.	DESCRIPTION	Q'TY
8-3	331-5496-10	BRKT-L	1
8-4	331-5494-00	BRKT-F	1
8-5	714-3006-8B	MACHINE SCREW(M3 x 6)	2
8-6	075-0339-00	JACK(REMOTE CONT.)	1
8-7	074-4104-00	OUTLET SOCKET(USB)	1
8-8	074-4103-00	OUTLET SOCKET(HDMI)	1
8-9	074-4000-05	OUTLET SOCKET(R-CAMERA)	1
8-10	092-2249-00	ANT-RECEPT(GPS-ANT)	1
8-11	074-2248-80	OUTLET SOCKET	1
8-12	074-2248-50	OUTLET SOCKET	1
8-13	074-2248-60	OUTLET SOCKET	1
8-14	074-2249-04	OUTLET SOCKET	1
8-15	076-0568-00	PLUG	1
8-16	074-2248-30	OUTLET SOCKET	1
8-17	074-8019-90	OUTLET SOCKET	1
8-18	074-8020-90	OUTLET SOCKET	1
8-19	075-0374-00	JACK(MIC)	1
8-20	076-6023-07	PLUG	1
9	816-3105-55	FLAT WIRE	1
10	345-6682-00	CUSHION	1
11	313-2187-21	HEAT SINK	1
12	854-4667-52	EXTENSION LEAD	1
13	309-1970-00	FRONT PLATE	1
14	311-2070-00	LOWER CASE	1
15	816-3135-55	FLAT WIRE	1
16	714-2604-8B	MACHINE SCREW(M2.6 x 4)	4
17	714-2614-8H	MACHINE SCREW(M2.6 x 14)	2
18	714-2606-8B	MACHINE SCREW(M2.6 x 6)	17
19	716-0878-50	IT SCREW	7
△20	276-1470-00	SETPLATE(QY1110UA)	1
	276-1557-00	SETPLATE(QY1210UA)	1
21	347-8527-00	SHADE	1
22	780-2604-51	SPECIAL SCREW	5
△23	-----	MICRO SD CARD(002010-065)(QY1110UA)	1
	-----	MICRO SD CARD(002001-065)(QY1210UA)	1
24	331-5787-00	SHIELD CASE	1
25	-	N/A(LABEL)	-