


9. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to  mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

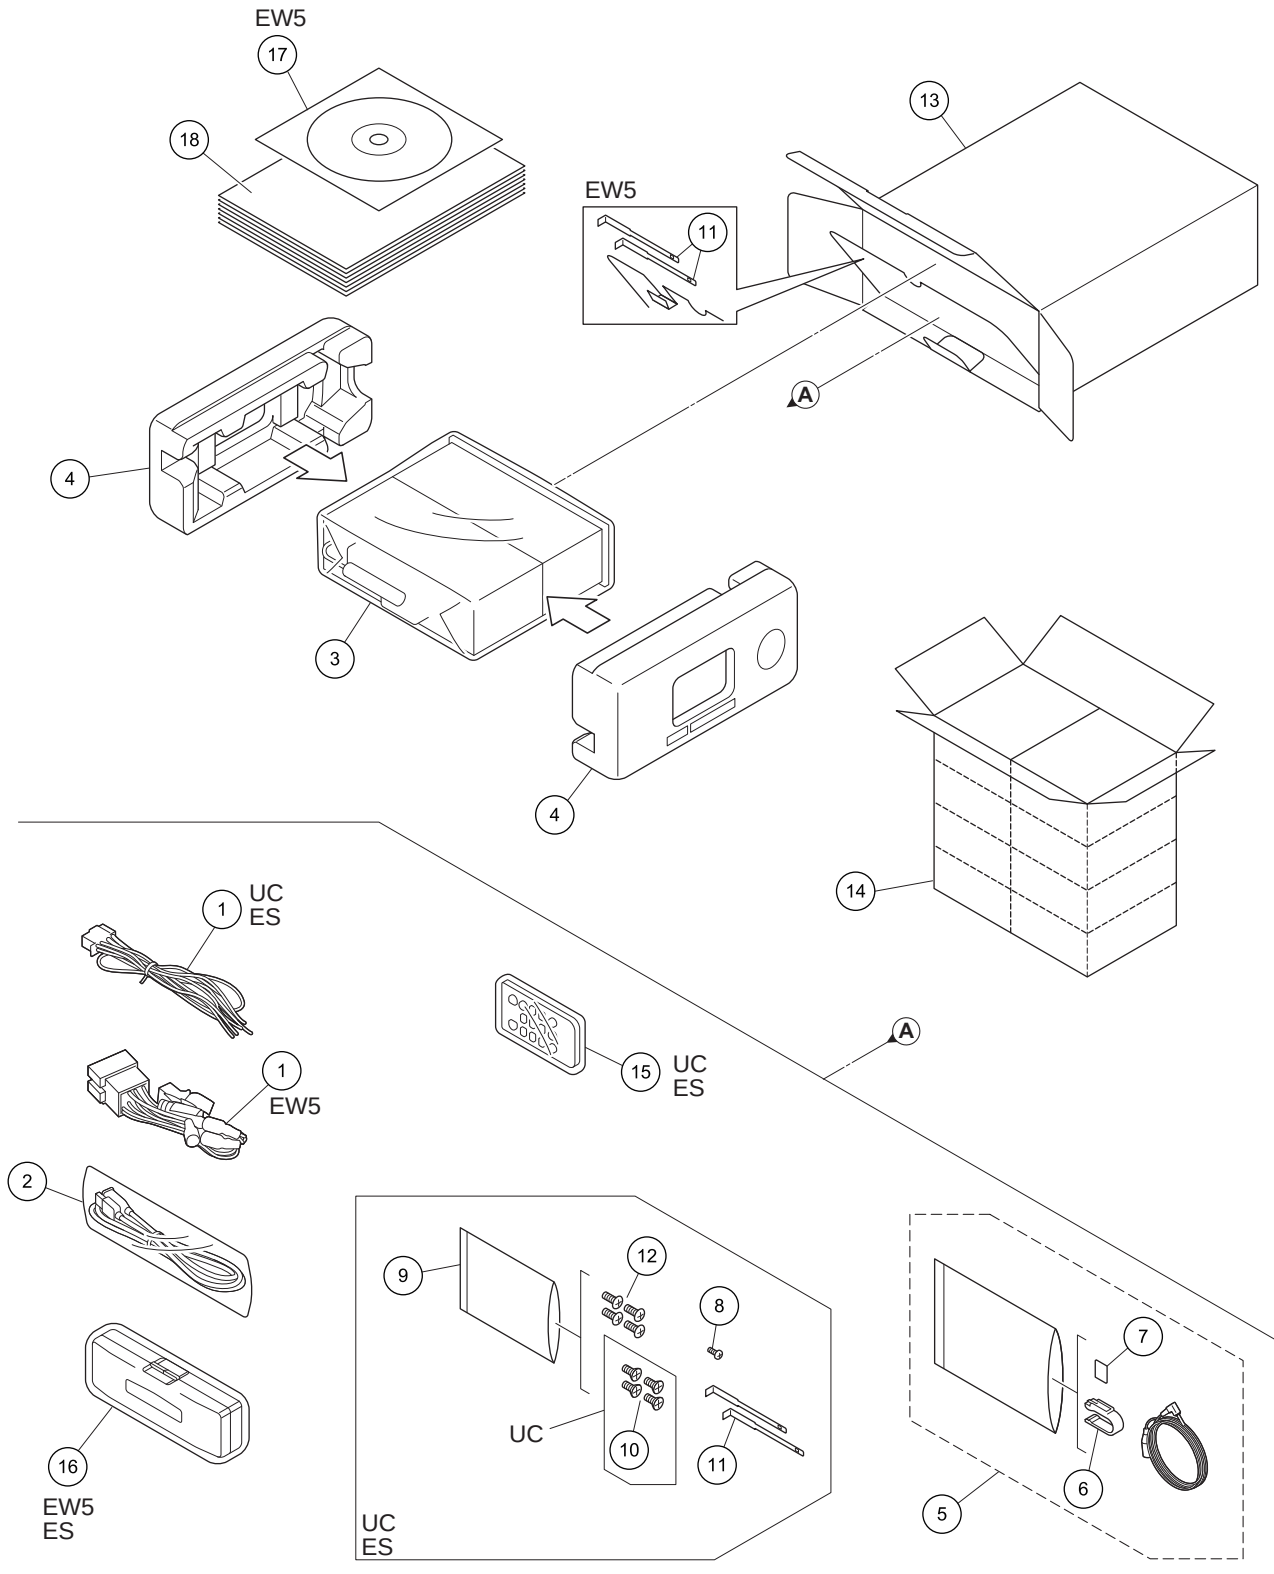

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	See Contrast table(2)	13	Unit Box	See Contrast table(2)
2	USB Extended Cable	CDP1585	14	Contain Box	See Contrast table(2)
3	Polyethylene Bag	See Contrast table(2)	15	Card Remote Control Unit	See Contrast table(2)
4	Protector	CHP4594			
5	Microphone Assy	CPM1083	16	Case Assy	See Contrast table(2)
			17	IM CD-ROM	See Contrast table(2)
6	Holder	CZN7192	18-1	Owner's Manual	See Contrast table(2)
7	Cushion	CZN7193	*	18-2 Caution Card	See Contrast table(2)
8	Screw	See Contrast table(2)	*	18-3 Caution Card	See Contrast table(2)
9	Polyethylene Bag	See Contrast table(2)			
10	Screw	See Contrast table(2)	*	18-4 Caution Card	See Contrast table(2)
			*	18-5 Warranty Card	See Contrast table(2)
11	Handle	QNC3021	18-6	Quick Start Guide	See Contrast table(2)
12	Screw	See Contrast table(2)	18-7	Installation Manual	See Contrast table(2)

(2) CONTRAST TABLE


DEH-X8500BS/XNUC, DEH-X8500BT/XNEW5 and DEH-X8550BT/XNES are constructed the same except for the following:

Mark	No.	Description	DEH-X8500BS/XNUC	DEH-X8500BT/XNEW5	DEH-X8550BT/XNES
	1	Cord Assy	CDP1484	QDP3024	CDP1484
	3	Polyethylene Bag	CEG1173	QEG3001	QEG3001
	8	Screw	BPZ20P060FTC	Not used	Not used
	9	Polyethylene Bag	CEG1160	Not used	CEG1160
	10	Screw	CRZ50P090FTC	Not used	Not used
	12	Screw	TRZ50P080FTC	Not used	TRZ50P080FTC
	13	Unit Box	QHG3406	QHG3404	QHG3405
	14	Contain Box	QHL3405	QHL3404	QHL3406
	15	Card Remote Control Unit	QXE1044	Not used	QXE1044
	16	Case Assy	Not used	YXA5856	YXA5856
	17	IM CD-ROM	Not used	QPJ3018	Not used
	18-1	Owner's Manual	QRD3150	Not used	QRD3151
*	18-2	Caution Card	Not used	CRP1438	Not used
*	18-3	Caution Card	Not used	CRP1441	Not used
*	18-4	Caution Card	Not used	QRP3016	Not used
*	18-5	Warranty Card	QRY3001	CRY1376	Not used
	18-6	Quick Start Guide	Not used	QRD3148	Not used
	18-7	Installation Manual	Not used	QRD3149	Not used

Owner's Manual,Installation Manual

Part No.	Language
QRD3150	English, French, Spanish(Espanol)
QRD3148	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3149	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3151	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian

9.2 EXTERIOR

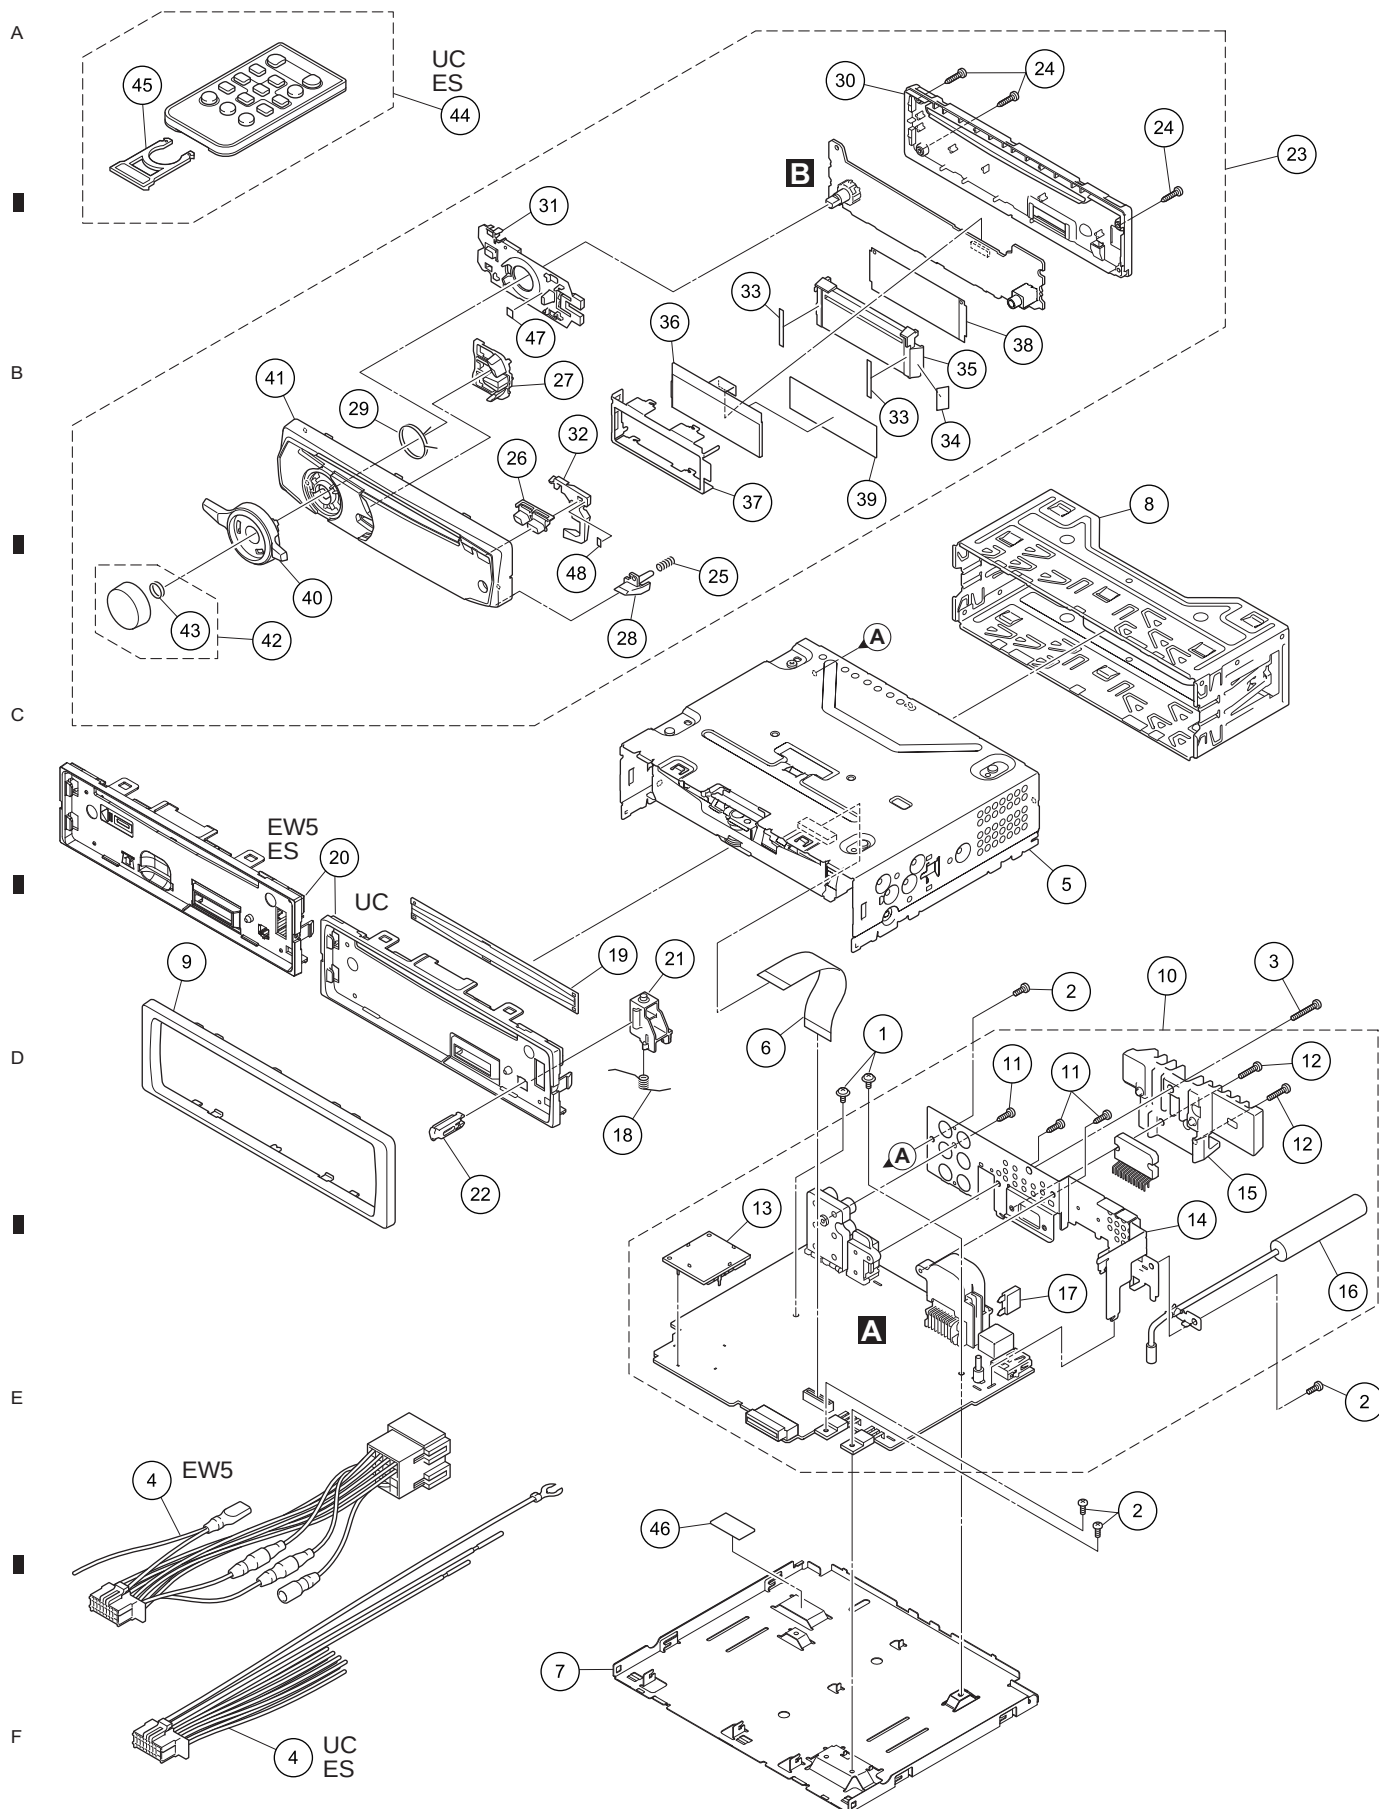

(1) EXTERIOR SECTION PARTS LIST


Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	
	1	Screw	ASZ26P050FTC		26	Button (EJECT/PHONE)	QAC3096	A
	2	Screw	BSZ26P060FTC		27	Button (MIX)	QAC3097	
	3	Screw	BSZ26P120FTC		28	Button (DETACH)	QAC3098	
	4	Cord Assy	See Contrast table(2)		29	Spring	QBH3005	
	5	CD Mechanism Module (S11.6)	CXK5804		30	Cover	QNS3446	
	6	FFC	QDE3029		31	Lighting Conductor	QNV3063	
	7	Case	QNB3009		32	Lighting Conductor	QNV3064	
	8	Holder	QNC3020		33	Tape	QNM3063	
	9	Panel	QNS3447		34	Sheet	QNM3076	
	10	Tuner Amp Unit	See Contrast table(2)		35	Lighting Conductor	QNV3067	
	11	Screw	BPZ26P080FTC		36	STN LCD	YAW5112	B
	12	Screw	BSZ26P120FTC		37	Holder	YNC5101	
	13	BT Module	CWX4317		38	Sheet	YNM5187	
	14	Holder	See Contrast table(2)		39	Sheet	YNM5200	
	15	Heat Sink	See Contrast table(2)		40	Lever Unit	QXA3725	
	16	Antenna Attached Cable	YDH5001		41	Grille Unit	See Contrast table(2)	
⚠	17	Fuse (10A)	YEK5001		42	Knob Unit	YXC5158	
	18	Spring	QBH3001		43	Spring	YBL5010	
	19	Cover	QNM3029		44	Card Remote Control Unit	See Contrast table(2)	
	20	Panel	See Contrast table(2)		45	Cover	See Contrast table(2)	
	21	Arm	QNV3025		46	Sheet	YNM5198	C
	22	Button	QNV3026		47	Sheet	QNM3084	
	23	Detachable Grille Assy	See Contrast table(2)		48	Sheet	QNM3085	
	24	Screw	BPZ20P100FTC					
	25	Spring	CBH2210					

(2) CONTRAST TABLE

DEH-X8500BS/XNUC, DEH-X8500BT/XNEW5 and DEH-X8550BT/XNES are constructed the same except for the following:

Mark	No.	Description	DEH-X8500BS/XNUC	DEH-X8500BT/XNEW5	DEH-X8550BT/XNES	
	4	Cord Assy	CDP1484	QDP3024	CDP1484	D
	10	Tuner Amp Unit	QWM3569	QWM3568	QWM3570	
	14	Holder	QNC3062	YNC5100	YNC5108	
	15	Heat Sink	QNR3010	QNR3010	QNR3002	
	20	Panel	QNS3449	QNS3448	QNS3448	
	23	Detachable Grille Assy	QXA3787	QXA3786	QXA3788	
	41	Grille Unit	QXA3771	QXA3770	QXA3772	
	44	Card Remote Control Unit	QXE1044	Not used	QXE1044	
	45	Cover	CNS7068	Not used	CNS7068	

9.3 CD MECHANISM MODULE

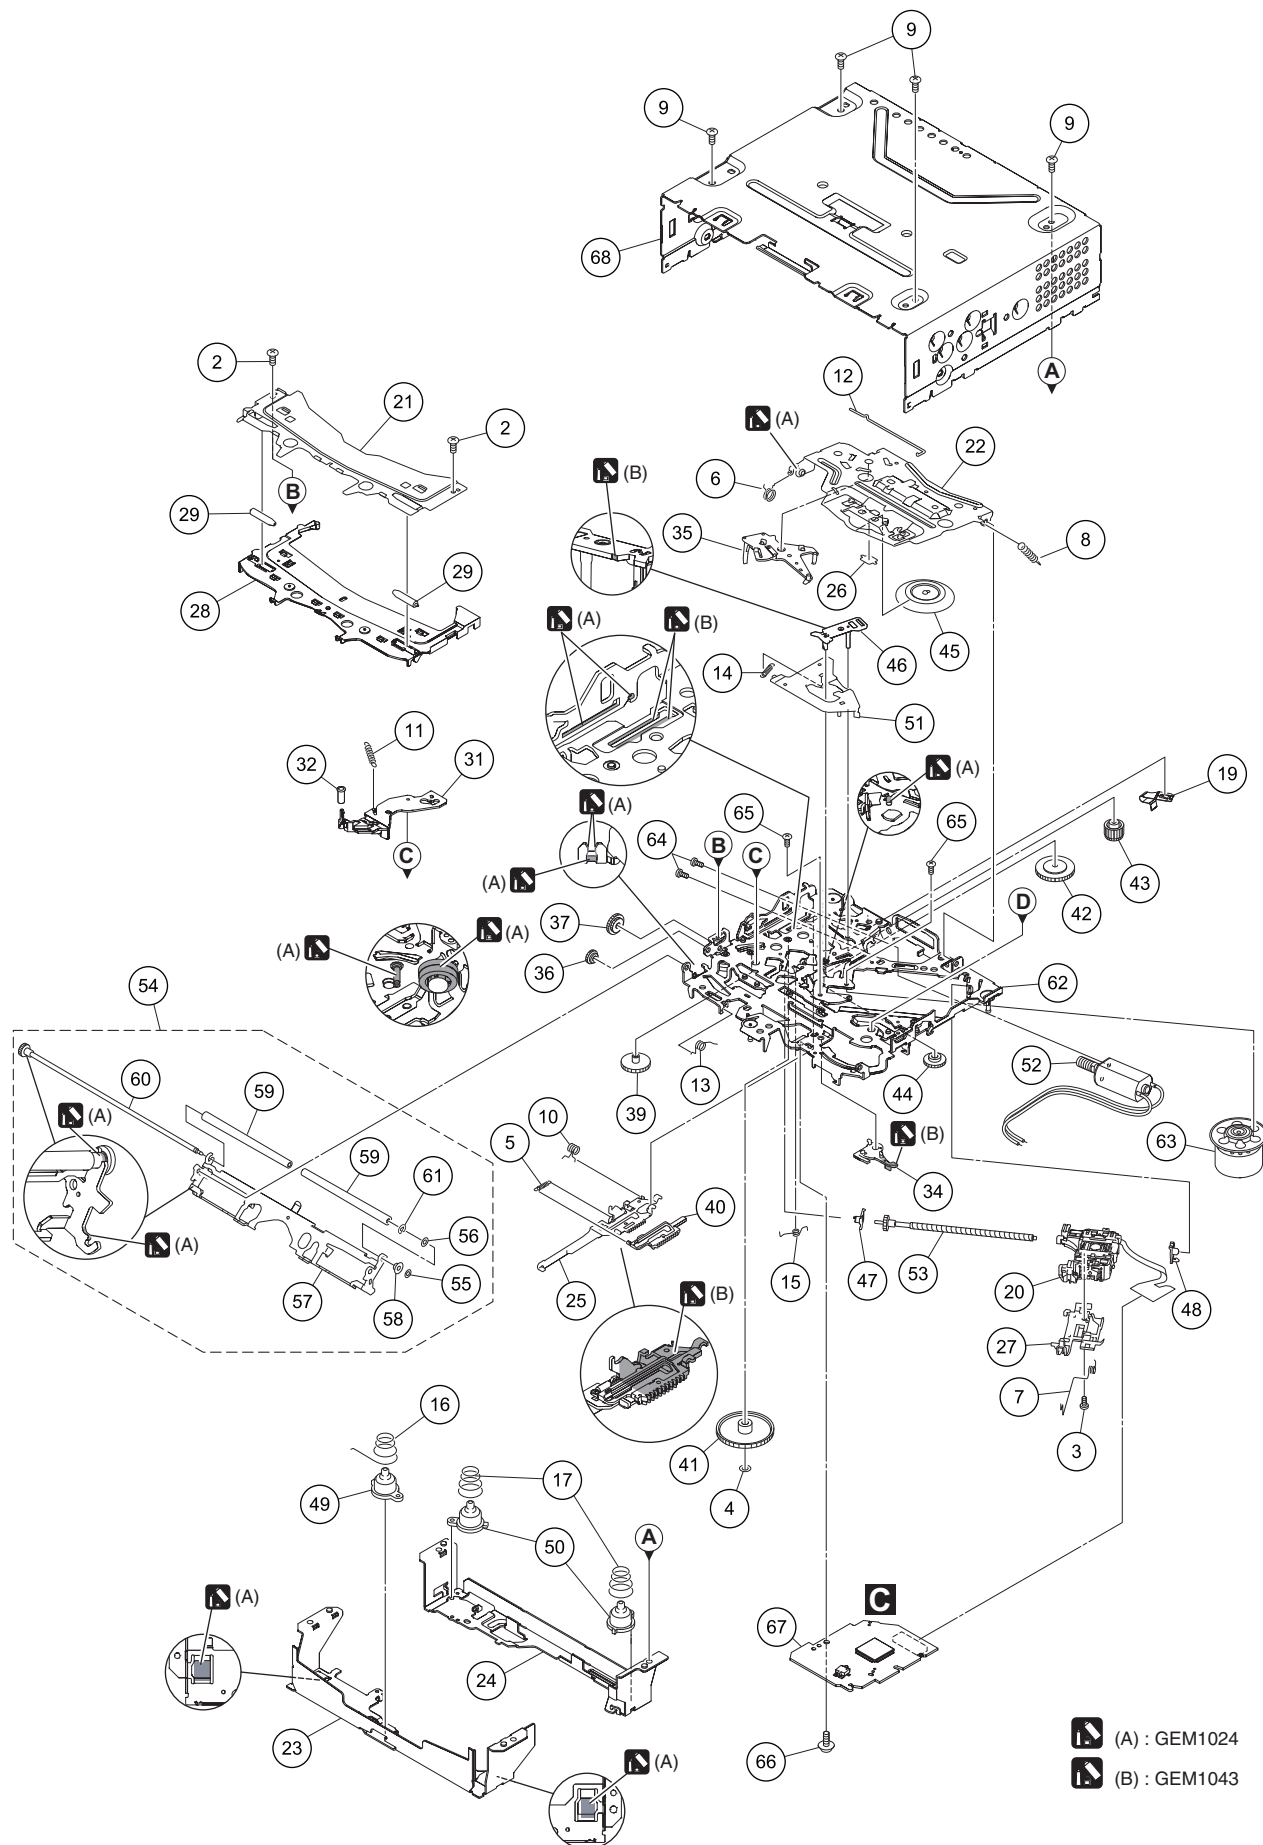

DEH-X8500BS/XNUC

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE6232	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNW2444	
			59	Roller	CNW2500	
11	Coil Spring	CBH3095	60	Gear Unit	CXE6225	B
12	Spring	CBH3014				
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
			64	Screw	JFZ20P025FTC	
16	Spring	CBH3086	65	Screw	JGZ17P022FTC	
17	Spring	CBH3019				
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6STD)	CWX4023	
20	Pickup Unit(P10.6)(Service)	CXX3556	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND6406				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30						
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by u instead of μ . Please do not make a mistake.

<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
A:	DEH-X8500BS/XNUC		IC 603	(A,127,46) IC	S-80827CNMC-B8M
	B:DEH-X8500BT/XNEW5		IC 604	(A,101,82) IC(A)	TC7SH126FU
			IC 605	(A,97,82) L-MOS And Gate(A)	TC7SET08FUS1
C:DEH-X8550BT/XNES			IC 651	(A,70,68) IC	R5S726B0D216FP
Unit Number : QWM3569(A)			IC 701	(A,43,70) IC	M12L64164A-5TG2Y
Unit Number : QWM3568(B)			IC 721	(A,33,92) Regulator IC	S-1155B12-U5
Unit Number : QWM3570(C)			IC 731	(A,72,89) Flash ROM Unit	PEB055A8
Unit Name : Tuner Amp Unit			IC 741	(A,84,52) IC(A,B)	MX25L4006EM2I-12G
Unit Number :			IC 881	(A,54,93) IC	337S3959
Unit Name : Keyboard Unit			IC 901	(A,13,63) Regulator IC	BD9876EFJ
Unit Number :			IC 931	(A,27,57) Regulator IC	S-1172B33-E6
Unit Name : CD Core Unit (S11.6STD)			IC 941	(A,140,42) IC	NJM2388F84
			IC 991	(A,116,110) IC	TPD1052F
			IC 992	(A,90,81) IC(B)	TC7MB3257FK
A			Q 181	(A,92,109) Transistor	LSCR523UB
			Q 182	(A,99,110) FET	RSF014N03
			Q 183	(A,93,105) Transistor	DRC9A43E0
			Q 301	(A,11,130) Transistor	IMH23
			Q 302	(A,19,130) Transistor	IMH23
Unit Number : QWM3569(A)			Q 303	(A,28,130) Transistor	IMH23
	Unit Number : QWM3568(B)		Q 321	(A,91,123) Transistor	LTC014YEB
			Q 351	(A,59,133) Transistor	LSCR523UB
			Q 352	(A,61,129) Chip Transistor	RN4983
			Q 353	(A,66,130) Transistor	LTC014EEB
Unit Number : QWM3570(C)			Q 471	(A,119,88) Transistor(A)	2SB1132
	Unit Name : Tuner Amp Unit		Q 472	(A,125,94) Transistor(A)	2SD1664
			Q 473	(A,118,82) Transistor(A)	LTC014EEB
			Q 701	(A,34,84) Transistor	LSAR523UB
			Q 771	(A,155,41) Transistor	2SD2396
<u>MISCELLANEOUS</u>			Q 772	(A,153,46) Chip Transistor	RN4983
IC 151	(A,81,115) IC	PM9012A	Q 831	(A,114,28) Transistor	2SA1577
IC 181	(A,100,105) IC	TK11840L	Q 832	(A,114,31) Transistor	LTC143EUB
IC 201	(A,40,110) IC	AN33014UA	Q 841	(A,107,29) Transistor	LSAR523UB
IC 221	(A,14,110) IC(B)	AN33014UA	Q 842	(A,110,31) Transistor	LTC014EEB
IC 271	(A,27,48) Regulator IC	S-1172B18-E6	Q 851	(A,53,40) Chip Transistor(B,C)	2SB1689
IC 281	(A,20,48) Regulator IC	S-1170B33UC-OTS	Q 852	(A,55,40) Transistor(B,C)	LTC014EEB
IC 321	(A,81,142) IC	PA2030A	Q 853	(A,58,40) Transistor(B,C)	DTA123EU
IC 371	(A,62,88) IC	WM8761BGED			
IC 391	(A,136,60) Regulator IC	NJM2885DL1-05			
IC 401	(A,141,87) IC	TDA7706			
IC 601	(A,106,65) IC(A)	PEQ118A8			
	(A,106,65) IC(B)	PEQ119A8			
	(A,106,65) IC(C)	PEQ120A8			
			Q 881	(A,50,87) Transistor	LSAR523UB
			Q 921	(A,20,54) Transistor	2SD2153
			Q 922	(A,21,59) Chip Transistor	RN4983

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
Q 931	(A,42,52) Chip Transistor	RN1903		X 601	(A,93,66) Resonator 20.000 MHz	CSS1795	
Q 951	(A,143,130) Chip Transistor	HN1C01FU		X 651	(A,85,66) Resonator 12.000 MHz	YSS5005	
Q 961	(A,93,120) Transistor	LTC014EEB		X 652	(A,77,84) Resonator 16.93 MHz	CSS1794	
D 181	(B,94,106) Diode	RKZ15KG(B2)		P 301	(A,37,128) Poly Switch	FSMD075-24R	A
D 182	(A,97,113) Diode	RB551VM-30		P 401	(A,152,112) Surge Absorber	IMSA-6803-01Y900	
D 201	(A,45,109) Diode	RB070M-30		△P471	(A,127,99) Fuse 0.75 A(A)	CEK1380	
D 202	(B,58,119) Diode	RB050LA-30		BZ601	(A,87,29) Buzzer	CPV1062	
D 221	(A,20,109) Diode(B)	RB070M-30		VA121	(A,38,132) Varistor	VR105C5R0AAA	
D 351	(A,56,129) Diode	DA2J101		VA122	(A,50,133) Varistor	VR105C5R0AAA	
D 352	(A,56,131) Diode	RKZ8.2KG(B2)		VA123	(A,41,131) Varistor	VR105C5R0AAA	
D 353	(A,62,132) Diode	DAN202UM		VA124	(A,40,132) Varistor	VR105C5R0AAA	
D 401	(A,149,102) Diode	RN731VN		VA201	(B,161,137) Varistor	EZJZ1V800AM	
D 402	(A,148,95) Diode	RN731VN		VA202	(B,165,137) Varistor	EZJZ1V800AM	
D 471	(A,121,95) Diode(A)	RKZ16KG(B2)		VA221	(B,161,136) Varistor(B)	EZJZ1V800AM	
D 603	(A,127,50) Diode	DA2J101		VA222	(B,165,136) Varistor(B)	EZJZ1V800AM	B
D 771	(A,156,46) Diode	RKZ8.2KG(B2)		VA801	(B,102,22) Varistor	EZJZ1V270RM	
D 801	(B,106,22) Diode	DZ2S068C		VA802	(B,113,22) Varistor	EZJZ1V270RM	
D 802	(B,108,22) Diode	DZ2S068C		VA803	(B,119,22) Varistor	EZJZ1V270RM	
D 803	(B,110,22) Diode	DZ2S068C		VA804	(B,117,22) Varistor	EZJZ1V270RM	
D 901	(A,12,68) Diode	RB056L-40		VA805	(B,115,22) Varistor	EZJZ1V270RM	
D 902	(B,8,72) Diode	1SR154-400		VA806	(B,121,22) Varistor	EZJZ1V270RM	
D 903	(B,25,54) Diode	CRG03		VA807	(B,122,22) Varistor	EZJZ1V270RM	
D 922	(B,20,56) Diode	RKZ5.6KG(B2)		VA808	(B,120,12) Varistor	EZJZ1V270RM	
D 923	(B,12,44) Diode	DA2J101		CN251	(A,48,34) Connector	CKS6346	
D 924	(B,14,50) Diode(A,B)	DB2J31400		CN751	(A,116,38) Connector	VKN1192	C
D 951	(A,134,126) Diode	HZU7L(C3)		CN802	(A,111,4) Connector	CKS6452	
D 952	(A,140,131) Diode	HZU7L(A1)		JA101	(A,145,143) Connector(A)	CKS3806	
D 961	(B,104,125) Diode	CRG03		JA122	(A,45,141) Jack	YKS5035	
D 981	(A,135,132) Diode	1SR154-400		JA201	(A,163,135) Connector(A,C)	CKN1091	
D 982	(A,135,128) Diode	1SR154-400			(A,163,135) Connector(B)	YKS5043	
D 991	(B,95,127) Diode	CRG03		JA301	(A,22,138) Pin Jack	XKB7001	
D 992	(B,119,141) Diode	CRG03		JA401	(A,157,116) ANT Pigtail Cable	YDH5001	
L 151	(A,92,115) Inductor	LCTAW6R8J2520		JA851	(A,66,21) Connector(B,C)	YKS5040	
L 181	(A,104,110) Choke Coil 47 uH	CTH1388		JA981	(A,116,141) Connector	CKM1613	
L 201	(A,154,125) Inductor	CTF1713		RESISTORS			
L 202	(A,50,106) Inductor	CTH1524		R 101	(A,152,134) (A)	RS1/10SR0R0J	D
L 221	(A,154,123) Inductor(B)	CTF1713		R 102	(B,144,132) (A)	RS1/10SR473J	
L 222	(A,24,106) Inductor(B)	CTH1524		R 103	(A,148,134) (A)	RS1/16SS102J	
L 251	(A,14,35) Inductor	CTF1786		R 104	(A,148,132) (A)	RS1/16SS102J	
L 252	(A,14,33) Inductor	CTF1786		R 105	(A,147,132) (A)	RS1/16SS102J	
L 371	(A,58,96) Chip Ferrite Bead	DTL1107		R 106	(A,146,132) (A)	RS1/16SS102J	
L 402	(A,142,97) Inductor	CTF1786		R 107	(A,149,134) (A)	RS1/16SS181J	
L 403	(A,139,99) Inductor	CTF1786		R 108	(B,148,134) (A)	RS1/10SR223J	
L 404	(A,149,98) Chip Coil	LCTAWR15J2520		R 109	(B,148,135) (A)	RS1/10SR223J	
L 405	(A,146,99) Chip Coil	LCTAWR27J2520		R 110	(A,150,134) (A)	RS1/16SS181J	
L 406	(A,140,101) Inductor	CTF1389		R 121	(A,45,129)	RS1/10SR102J	
L 409	(A,133,95) Inductor	LCTC1R5K1608		R 122	(A,44,129)	RS1/10SR102J	E
L 410	(A,151,92) Inductor	CTF1786		R 151	(A,72,107)	RS1/16SS223J	
L 411	(A,151,91) Inductor	CTF1786		R 152	(A,86,107)	RS1/16SS223J	
L 412	(A,128,87) Chip Coil	LCTAW470J2520		R 153	(A,73,107)	RS1/16SS331J	
L 414	(A,132,78) Inductor	CTF1786		R 154	(A,73,124)	RS1/16SS102J	
L 415	(A,146,78) Inductor	CTF1786		R 155	(A,72,124)	RS1/16SS102J	
L 651	(A,83,63) Chip Beads	VTL1126		R 156	(A,73,123)	RS1/16SS102J	
L 652	(A,37,88) Inductor(C)	CTF1786		R 181	(A,94,113)	RS1/16SS681J	
L 653	(A,44,53) Chip Ferrite Bead	DTL1107		R 182	(B,106,104)	RS1/10SR0R0J	
L 701	(A,31,78) Chip Ferrite Bead	DTL1107		R 183	(A,106,105)	RS1/16SS3003D	
L 731	(B,75,88) Inductor	CTF1389		R 184	(A,105,103)	RS1/16SS1002D	F
L 851	(B,55,36) Inductor(B,C)	CTF1389		R 185	(A,97,108)	RS1/16SS512J	
L 901	(A,10,74) Inductor	CTH1521		R 186	(A,99,108)	RS1/16SS0R0J	
L 981	(A,114,141) Choke Coil 600 uH	CTH1432					
X 401	(A,152,85) Resonator 36.480 MHz	CSS1805					

	1		2		3		4
	<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>
	R 187 (B,100,107)		RS1/10SR621J		R 331 (B,73,131)		RS1/10SR103J
	R 189 (A,95,105)		RS1/16SS331J		R 350 (A,95,133)		RS1/16SS103J
	R 190 (A,95,106)		RS1/16SS4301D		R 351 (A,62,127)		RS1/16SS473J
A	R 191 (A,95,104)		RS1/16SS222J		R 352 (A,56,133)		RS1/16SS473J
	R 192 (A,107,111)		RS1/10SR0R0J		R 353 (B,57,132)		RS1/10SR473J
	R 196 (A,94,104)		RS1/16SS3302D		R 354 (A,56,134)		RS1/16SS104J
	R 202 (A,55,103)		RS1/10SR681J		R 355 (A,69,129)		RS1/16SS103J
	R 203 (A,55,104)		RS1/10SR681J		R 356 (B,57,131)		RS1/10SR102J
					R 358 (A,68,131)		RS1/16SS681J
	R 204 (A,47,113) 0.056 ohm		ACN7160				
	R 206 (A,40,103)		RS1/16SS4702D		R 371 (A,78,96)		RS1/16SS821J
	R 207 (A,37,103)		RS1/16SS224J		R 372 (A,78,94)		RS1/16SS821J
	R 208 (A,33,117)		RS1/16SS152J		R 401 (A,144,103)		RS1/16SS105J
	R 210 (A,34,116)		RS1/16SS3302D		R 402 (A,152,102)		RS1/16SS221J
					R 403 (A,151,95)		RS1/16SS751J
B	R 211 (A,34,114)		RS1/16SS8201D				
	R 212 (A,35,116)		RS1/16SS223J		R 404 (A,131,95)		RS1/16SS331J
	R 218 (A,151,126)		RS1/16SS0R0J		R 405 (A,135,95)		RS1/16SS105J
	R 219 (A,151,125)		RS1/16SS0R0J		R 406 (A,130,91)		RS1/16SS471J
	R 222 (A,29,104) (B)		RS1/10SR681J		R 407 (A,131,90)		RS1/16SS330J
					R 408 (A,131,88)		RS1/16SS681J
	R 223 (A,29,103) (B)		RS1/10SR681J				
	R 224 (A,22,113) 0.056 ohm (B)		ACN7160		R 410 (A,128,80)		RS1/4SA8R2J
	R 226 (A,14,103) (B)		RS1/16SS4702D		R 411 (A,126,80)		RS1/4SA8R2J
	R 227 (A,11,103) (B)		RS1/16SS224J		R 413 (A,137,74)		RS1/16SS102J
	R 228 (A,8,117) (B)		RS1/16SS152J		R 415 (A,132,79)		RS1/16SS0R0J
					R 420 (B,144,105) (A)		RS1/8SQ0R0J
	R 230 (A,8,116) (B)		RS1/16SS3302D				
C	R 231 (A,8,114) (B)		RS1/16SS8201D		R 421 (B,152,100) (A)		RS1/8SQ0R0J
	R 232 (A,10,116) (B)		RS1/16SS223J		R 422 (B,148,100) (A)		RS1/8SQ0R0J
	R 238 (A,151,124) (B)		RS1/16SS0R0J		R 424 (A,129,98)		RS1/8SQ0R0J
	R 239 (A,151,123) (B)		RS1/16SS0R0J		R 425 (A,139,106)		RS1/8SQ0R0J
	R 251 (B,55,29)		RS1/10SR221J		R 471 (A,125,99) (A)		RS1/10SR102J
	R 252 (B,55,32)		RS1/10SR221J		R 473 (A,119,85) (A)		RS1/16SS1003F
	R 253 (B,55,31)		RS1/10SR221J		R 474 (A,117,84) (A)		RS1/16SS1802D
	R 254 (A,50,41)		RS1/16SS102J		R 475 (A,123,82) (A)		RS1/4SA471J
	R 255 (A,49,41)		RS1/16SS102J		R 476 (A,120,82) (A)		RS1/4SA471J
	R 256 (A,16,36)		RS1/16SS102J		R 478 (A,123,87) (A)		RS1/10SR103J
	R 257 (B,48,43)		RS1/10SR101J		R 601 (A,92,35)		RS1/16SS102J
D	R 258 (B,46,43)		RS1/10SR101J		R 602 (B,102,71)		RS1/10SR154J
	R 259 (B,44,43)		RS1/10SR102J		R 603 (A,98,56)		RS1/16SS222J
	R 260 (A,16,32)		RS1/16SS0R0J		R 604 (A,95,65)		RS1/16SS105J
	R 301 (A,8,129)		RS1/16SS820J		R 606 (B,94,62)		RS1/10SR104J
	R 302 (A,14,129)		RS1/16SS820J		R 607 (A,98,55)		RS1/16SS104J
	R 303 (A,16,129)		RS1/16SS820J		R 608 (A,99,54)		RS1/16SS104J
	R 304 (A,23,129)		RS1/16SS820J		R 609 (A,92,71)		RS1/16SS104J
	R 305 (A,25,129)		RS1/16SS820J		R 610 (A,99,76)		RS1/16SS104J
	R 306 (A,31,129)		RS1/16SS820J		R 611 (A,93,60)		RS1/16SS104J
	R 307 (A,8,130)		RS1/16SS223J		R 612 (A,93,58)		RS1/16SS104J
E	R 308 (A,14,130)		RS1/16SS223J		R 613 (A,105,82)		RS1/16SS104J
	R 309 (A,16,130)		RS1/16SS223J		R 614 (A,96,64)		RS1/16SS104J
	R 310 (A,23,130)		RS1/16SS223J		R 615 (A,96,66)		RS1/16SS101J
	R 311 (A,25,130)		RS1/16SS223J		R 617 (A,103,76) (C)		RS1/16SS104J
					R 618 (B,106,52)		RS1/10SR472J
	R 312 (A,31,130)		RS1/16SS223J				
	R 321 (A,78,125)		RS1/16SS362J		R 619 (A,112,76)		RS1/16SS103J
	R 322 (A,79,125)		RS1/16SS362J		R 620 (B,106,64)		RS1/10SR104J
	R 323 (A,82,125)		RS1/16SS362J		R 621 (A,104,54)		RS1/16SS104J
	R 324 (A,83,125)		RS1/16SS362J		R 622 (B,93,50)		RS1/10SR104J
					R 623 (B,95,50)		RS1/10SR104J
	R 325 (A,77,127)		RS1/16SS562J				
	R 326 (A,79,127)		RS1/16SS562J		R 624 (B,108,77)		RS1/10SR104J
F	R 327 (A,82,127)		RS1/16SS562J		R 627 (A,110,53) (B)		RS1/16SS104J
	R 328 (A,84,127)		RS1/16SS562J		R 628 (A,116,68)		RS1/16SS104J
	R 329 (B,75,131)		RS1/10SR562J		R 631 (A,116,64)		RS1/16SS104J
					R 632 (A,116,73)		RS1/16SS472J
	R 330 (B,70,131)		RS1/10SR103J		R 633 (A,116,72)		RS1/16SS472J

5		6		7		8		
Circuit Symbol and No.		Part No.		Circuit Symbol and No.		Part No.		
R 636	(A,124,46)	RS1/16SS104J		R 744	(A,79,54) (A,B)	RS1/16SS101J		A
R 638	(A,123,46)	RS1/16SS152J		R 745	(A,85,56) (A,B)	RS1/16SS473J		
R 639	(A,122,57)	RS1/16SS104J		R 751	(B,110,33)	RS1/10SR472J		
R 642	(B,94,64)	RS1/10SR104J		R 752	(B,106,34)	RS1/10SR473J		
R 643	(B,98,70)	RS1/10SR104J		R 753	(B,113,33)	RS1/10SR472J		B
R 646	(A,119,69)	RS1/16SS104J		R 754	(A,116,41)	RS1/16SS104J		
R 647	(A,104,82)	RS1/16SS103J		R 755	(B,115,33)	RS1/10SR472J		
R 648	(B,101,82) (A)	RS1/10SR473J		R 756	(A,104,39)	RS1/16SS221J		
R 650	(A,91,73) (A)	RS1/16SS0R0J		R 757	(A,104,40)	RS1/16SS221J		C
R 652	(A,80,56) (C)	RS1/16SS473J		R 758	(A,104,38)	RS1/16SS101J		
R 653	(A,76,49) (C)	RS1/16SS473J		R 759	(A,110,41)	RS1/16SS221J		
R 657	(A,87,62)	RS1/16SS101J		R 760	(A,104,37)	RS1/16SS101J		
R 660	(B,84,69)	RS1/10SR221J		R 761	(A,115,41)	RS1/16SS102J		D
R 661	(B,58,86)	RS1/10SR221J		R 762	(A,117,34)	RS1/16SS151J		
R 662	(A,84,62)	RS1/16SS101J		R 763	(A,119,41)	RS1/16SS151J		
R 663	(A,83,67)	RS1/16SS332J		R 764	(A,119,34)	RS1/16SS151J		
R 664	(B,77,71)	RS1/10SR473J		R 765	(A,123,41)	RS1/16SS221J		E
R 666	(B,77,75)	RS1/10SR473J		R 766	(A,122,41)	RS1/16SS104J		
R 669	(A,69,81)	RS1/16SS101J		R 767	(B,105,37)	RS1/10SR104J		
R 670	(A,70,83)	RS1/16SS101J		R 771	(B,143,41)	RS1/10SR473J		
R 671	(A,71,83)	RS1/16SS101J		R 772	(B,143,43)	RS1/10SR103J		F
R 672	(A,72,83)	RS1/16SS101J		R 773	(A,151,46)	RS1/10SR821J		
R 673	(A,73,81)	RS1/16SS101J		R 803	(A,107,22)	RS1/10SR101J		
R 674	(A,74,81)	RS1/16SS101J		R 804	(A,109,22)	RS1/10SR101J		
R 675	(A,65,81)	RS1/16SS221J		R 805	(A,105,22)	RS1/10SR222J		A
R 676	(A,65,82)	RS1/16SS221J		R 806	(A,111,22)	RS1/10SR222J		
R 677	(A,67,81)	RS1/16SS221J		R 807	(A,117,22)	RS1/10SR222J		
R 678	(B,69,81)	RS1/10SR221J		R 808	(A,116,22)	RS1/10SR222J		
R 679	(A,76,81)	RS1/16SS332J		R 809	(A,115,22)	RS1/10SR222J		B
R 680	(A,37,89) (A,B)	RS1/16SS0R0J		R 810	(A,119,22)	RS1/10SR222J		
R 681	(A,84,81)	RAB4CQ473J		R 811	(A,120,22)	RS1/10SR222J		
R 682	(A,83,69)	RS1/16SS153J		R 812	(B,95,20)	RS1/10SR102J		
R 683	(A,83,70)	RS1/16SS153J		R 813	(B,95,22)	RS1/10SR104J		C
R 684	(A,88,71)	RS1/16SS153J		R 831	(B,100,24)	RS1/10SR1R0J		
R 685	(A,88,72)	RS1/16SS153J		R 832	(B,109,26)	RS1/10SR473J		
R 686	(A,83,72)	RS1/16SS473J		R 833	(B,116,29)	RS1/10SR332J		
R 687	(A,83,73)	RS1/16SS473J		R 834	(A,117,28)	RS1/10SR103J		D
R 688	(A,86,76)	RS1/16SS473J		R 841	(A,105,29)	RS1/10SR472J		
R 689	(A,85,77)	RS1/16SS473J		R 842	(B,106,30)	RS1/10SR102J		
R 690	(B,58,72)	RS1/10SR473J		R 843	(B,105,30)	RS1/10SR103J		
R 691	(B,84,63)	RS1/10SR0R0J		R 844	(A,78,37)	RS1/16SS0R0J		E
R 692	(B,67,80)	RS1/10SR473J		R 845	(A,98,33)	RS1/16SS472J		
R 693	(A,56,64) (B,C)	RS1/16SS221J		R 851	(B,59,39) (B,C)	RS1/10SR221J		
R 701	(B,43,76)	RS1/10SR473J		R 852	(A,60,38) (B,C)	RS1/16SS221J		
R 702	(A,43,79)	RS1/16SS472J		R 854	(A,70,37) (B,C)	RS1/16SS221J		F
R 703	(A,41,79)	RAB4CQ220J		R 855	(B,67,44) (B,C)	RS1/10SR221J		
R 704	(A,37,79)	RAB4CQ220J		R 856	(B,69,44) (B,C)	RS1/10SR221J		
R 705	(A,34,79)	RAB4CQ220J		R 857	(A,55,37) (B,C)	RS1/16SS102J		
R 707	(A,37,83)	RS1/16SS472J		R 858	(B,54,41) (B,C)	RS1/10SR821J		A
R 708	(A,41,61)	RS1/16SS220J		R 859	(B,53,44) (B,C)	RS1/10SR103J		
R 710	(A,37,61)	RAB4CQ220J		R 860	(A,70,38)	RS1/16SS473J		
R 711	(A,34,61)	RAB4CQ220J		R 862	(A,69,38) (B,C)	RS1/16SS221J		
R 731	(A,73,93)	RS1/16SS473J		R 863	(B,65,44)	RS1/10SR473J		B
R 732	(B,71,92)	RS1/10SR473J		R 864	(B,60,45) (A)	RS1/10SR0R0J		
R 733	(A,72,93)	RS1/16SS473J		R 865	(B,71,44)	RS1/10SR473J		
R 734	(A,78,90)	RS1/16SS473J		R 866	(B,60,36)	RS1/10SR473J		
R 735	(A,78,87)	RS1/16SS473J		R 867	(B,62,36)	RS1/10SR473J		C
R 741	(A,82,56) (A,B)	RS1/16SS101J		R 869	(B,62,45)	RS1/10SR473J		
R 742	(A,74,49) (A,B)	RS1/16SS101J		R 881	(A,47,87)	RS1/10SR103J		
R 743	(A,79,53) (A,B)	RS1/16SS101J		R 882	(A,55,96)	RS1/16SS473J		

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 883 (A,54,96)
R 884 (A,53,90)
R 885 (A,54,89)

RS1/16SS222J
RS1/16SS222J
RS1/16SS272J

C 164 (A,86,114)
C 165 (A,87,117) 10 uF
C 166 (A,89,115) 10 uF
C 168 (A,86,125)

CKSBYB105K10
CCG1192
CCG1192
CKSQYB225K16

A

R 886 (A,53,85)
R 887 (A,53,96)
R 888 (A,53,89)
R 889 (A,56,89)
R 901 (B,26,72)

RS1/16SS472J
RS1/16SS101J
RS1/16SS101J
RS1/16SS472J
RS1/10SR102J

C 170 (A,88,122)
C 181 (A,91,108)
C 182 (B,92,107)
C 184 (A,105,105)
C 185 (A,96,110) 4.7 uF

CKSQYB225K16
CKSSYB104K16
CKSBYB104K16
CKSSYB103K16
CCG1222

R 902 (A,7,61)
R 903 (A,9,62)
R 904 (A,7,62)
R 905 (A,6,63)
R 921 (B,21,58)

RS1/16SS512J
RS1/16SS473J
RS1/16SS103J
RS1/16SS103J
RS1/10SR223J

C 186 (B,96,102)
C 187 (B,100,103)
C 188 (B,100,105) 4.7 uF
C 189 (A,96,106)
C 201 (A,46,118)

CKSBYB104K16
CKSBYB104K16
CCG1222
CCSSCH271J50
CKSSYB104K10

B

R 922 (B,21,60)
R 931 (A,31,52)
R 941 (B,130,43)
R 942 (A,126,53)
R 951 (A,142,133)
R 952 (A,141,128)

RS1/10SR332J
RS1/16SS473J
RS1/10SR473J
RS1/16SS0R0J
RS1/16SS103J
RS1/16SS104J

C 202 (A,51,112) 22 uF
C 204 (A,38,103)
C 205 (A,42,104)
C 206 (A,36,103)
C 207 (A,41,103)

CCG1254
CKSSYB102K50
CKSSYB104K16
CKSSYB472K25
CKSSYB104K16

R 953 (A,142,134)
R 954 (A,142,130)
R 955 (B,120,128)
R 956 (A,119,129)
R 961 (B,99,126)

RS1/16SS473J
RS1/16SS473J
RS1/10SR472J
RS1/4SA102J
RS1/10SR103J

C 208 (A,32,116)
C 209 (A,38,115) 1 uF
C 210 (A,37,116)
C 211 (A,43,117) 10 uF
C 212 (A,35,115)
C 213 (A,61,109)

CCSSCH151J50
DCH1246
CKSSYB472K25
DCH1165
CCSSCH270J50
CEVW101M25

C

R 962 (A,114,129)
R 991 (A,118,115)
R 992 (A,116,114)
R 993 (A,114,113)
R 1001 (A,87,76) (A,C)
R 1002 (A,88,76) (B)

RS1/4SA102J
RS1/16SS103J
RS1/16SS103J
RS1/16SS105J
RS1/16SS220J
RS1/16SS180J

C 214 (A,39,116)
C 215 (A,52,117) Capacitor
C 216 (A,47,118) (A,C)
C 217 (B,66,112) 22 uF
C 222 (A,25,112) 22 uF(B)

CKSSYB104K16
CEHVW101M6R3
CKSSYB102K50
CCG1254
CCG1254

R 1003 (A,90,77) (A,C)
R 1004 (A,91,77) (B)
R 1006 (A,87,78) (B)
R 1007 (A,88,85) (B)
R 1008 (A,86,87) (B)

RS1/16SS220J
RS1/16SS180J
RS1/16SS102J
RS1/16SS102J
RS1/16SS7502D

C 224 (A,12,103) (B)
C 225 (A,16,104) (B)
C 226 (A,10,103) (B)
C 227 (A,15,103) (B)
C 228 (A,7,116) (B)

CKSSYB102K50
CKSSYB104K16
CKSSYB472K25
CKSSYB104K16
CCSSCH151J50

D

R 1009 (A,82,88) (B)
R 1010 (A,82,87) (B)
R 1011 (A,88,88) (B)
R 1012 (A,88,87) (B)
R 1013 (A,84,87) (B)

RS1/16SS3302D
RS1/16SS1002D
RS1/16SS1003D
RS1/16SS1003D
RS1/16SS1003D

C 229 (A,13,115) 1 uF(B)
C 230 (A,12,116) (B)
C 231 (A,18,117) 22 uF(B)
C 232 (A,10,115) (B)
C 233 (A,14,117) (B)
C 234 (A,27,117) (B)
C 251 (A,36,48)

DCH1246
CKSSYB472K25
CCG1254
CCSSCH270J50
CKSSYB104K16
XCEVW101M16
XCEVW471M10

R 1014 (A,83,87) (B)

RS1/16SS1003D

CAPACITORS

C 101 (B,146,142) (A)
C 121 (B,55,148)
C 122 (B,37,129)
C 123 (B,39,132)
C 151 (A,74,113)

CKSBYB105K16
CKSBYB102K50
CKSBYB102K50
CKSBYB102K50
CKSBYB105K10

C 253 (A,16,34)
C 255 (B,40,32) 4.7 uF
C 256 (B,40,34) 4.7 uF
C 262 (B,49,34)
C 264 (B,55,34)

CKSBYB105K16
CCG1212
CCG1212
CCSRCH270J50
CKSBYB104K16

E

C 152 (A,87,112)
C 153 (A,74,112)
C 154 (B,92,111)
C 155 (B,104,113) (A)
C 156 (B,104,111) (A)

CKSBYB105K10
CKSBYB224K16
CKSBYB224K16
CKSBYB105K10
CKSBYB105K10

C 272 (B,26,45) 4.7 uF
C 273 (B,26,50) 4.7 uF
C 281 (B,22,45) 4.7 uF
C 284 (B,18,45) 4.7 uF
C 301 (A,9,126) 10 uF

CCG1212
CCG1212
CCG1212
CCG1212
CCG1192

C 157 (B,98,114) (A)
C 158 (B,98,113) (A)
C 159 (A,74,110)
C 160 (A,87,109)
C 161 (A,74,109) 2.2 uF

CKSBYB105K10
CKSBYB105K10
CKSBYB105K10
CKSBYB105K10
CCG1205

C 302 (A,13,126) 10 uF
C 303 (A,17,126) 10 uF
C 304 (A,22,126) 10 uF
C 305 (A,26,126) 10 uF
C 306 (A,30,126) 10 uF

CCG1192
CCG1192
CCG1192
CCG1192
CCG1192

F

C 163 (A,75,115)

CKSBYB105K10

C 307 (A,8,131)
C 308 (A,14,131)
C 309 (A,16,131)
C 310 (A,23,131)

CKSSYB103K16
CKSSYB103K16
CKSSYB103K16
CKSSYB103K16

1

2

3

4

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
C 311	(A,25,131)		CKSSYB103K16			C 447	(A,150,79) 2.2 uF		CCG1205		
C 312	(A,31,131)		CKSSYB103K16			C 449	(A,148,82) (A,C)		CKSSYB104K10		
C 315	(B,33,142)		CKSRYB102K50			C 450	(A,145,80)		CKSSYB104K10		A
C 325	(B,77,131)		CKSRYB224K16			C 451	(A,135,79)		CKSSYB102K50		
C 326	(B,79,131)		CKSRYB224K16			C 452	(A,144,80) 1 uF		DCH1246		
C 327	(B,82,131)		CKSRYB224K16			C 453	(A,144,78) 2.2 uF		CCG1205		
C 328	(B,84,131)		CKSRYB224K16			C 454	(A,138,79)		CKSSYB104K10		
C 333	(A,62,136)		CKSRYB105K16			C 456	(A,152,113) (A)		CCSSCJ3R0C50		
C 335	(B,61,137)		CKSRYB102K50			C 459	(A,128,84)		CCSSCH100D50		
C 337	(B,63,141)		CKSRYB103K50			C 472	(A,131,103) (A)		CKSRYB104K16		
C 338	(B,63,143) 10 uF		CCG1236			C 473	(A,119,95) (A)		CKSRYB104K16		
C 339	(B,88,143)		CKSRYB104K16			C 601	(A,92,68)		CCSSCH100D50		
C 340	(A,128,123) 3 300 uF/16 V		CCH1486			C 602	(A,92,64)		CCSSCH120J50		
C 344	(B,66,137)		CKSRYB103K50			C 604	(A,92,70)		CKSSYB104K10		B
C 351	(A,50,129)		XCEVW220M16			C 605	(B,99,65)		CKSRYB105K10		
C 352	(B,63,133) 2.2 uF		CCG1205			C 608	(B,113,64)		CKSRYB105K10		
C 375	(A,67,90) 4.7 uF		CCG1212			C 610	(A,103,50)		CKSRYB104K50		
C 376	(A,58,93)		CKSSYB103K16			C 612	(B,120,47)		CKSRYB105K10		
C 377	(A,59,95) 4.7 uF		CCG1212			C 615	(B,97,65) 10 uF		DCH1201		
C 378	(B,65,96)		CKSRYB104K16			C 616	(A,103,82) (A)		CKSSYB104K10		
C 379	(A,80,96)		CKSSYB182K50			C 617	(A,96,80) (A)		CKSSYB104K10		
C 380	(A,80,94)		CKSSYB182K50			C 651	(B,68,58)		CKSRYB104K16		
C 391	(A,141,57) 4.7 uF		CCG1212			C 652	(B,76,61)		CKSRYB104K16		
C 393	(A,130,57)		CKSQYB474K16			C 653	(B,85,56)		CKSRYB104K16		
C 401	(A,147,102)		CCSSCH330J50			C 654	(B,61,58)		CKSRYB104K16		C
C 402	(A,143,100)		CKSSYB103K16			C 655	(B,67,62)		CKSRYB104K16		
C 403	(A,148,100)		CCSSCH6R0D50			C 656	(B,72,62)		CKSRYB104K16		
C 404	(A,150,100)		CKSSYB103K16			C 657	(B,78,57)		CKSRYB104K16		
C 405	(A,141,97)		CKSSYB104K10			C 658	(A,56,65) (C)		CCSSCH100D50		
C 406	(A,137,96)		CKSSYB104K10			C 659	(B,81,63)		CKSRYB104K16		
C 410	(A,150,97)		CKSSYB103K16			C 660	(B,85,60)		CCSRCH100D50		
C 411	(A,139,97)		CKSSYB104K10			C 661	(B,59,62)		CKSRYB104K16		
C 412	(A,152,97)		CKSSYB103K16			C 662	(A,86,64)		CCSSCH120J50		
C 413	(A,137,97)		CKSSYB103K16			C 663	(B,81,67)		CKSRYB104K16		
C 414	(A,135,98) 10 uF		CCG1192			C 664	(A,57,65) (C)		CCSSCH100D50		
C 415	(A,134,98) (A,C)		CCSSCK2R0C50			C 665	(B,59,66)		CKSRYB104K16		D
C 416	(B,134,85) (A)		CCSRCH100D50			C 666	(B,81,65)		CKSRYB104K16		
C 419	(A,135,96)		CKSSYB223K16			C 667	(A,57,70) (C)		CCSSCH100D50		
C 420	(A,139,95)		CKSSYB103K16			C 668	(B,59,69)		CKSRYB104K16		
C 421	(A,144,95)		CKSSYB104K10			C 669	(A,86,69)		CCSSCH120J50		
C 422	(A,146,97)		CKSSYB103K16			C 670	(B,81,70)		CKSRYB104K16		
C 423	(A,143,97)		CKSRYB105K10			C 671	(B,60,72)		CKSRYB104K16		
C 424	(A,149,93)		CKSRYB224K16			C 672	(B,81,76)		CKSRYB104K16		
C 426	(A,133,93)		CKSSYB103K16			C 673	(B,81,78)		CKSRYB104K16		
C 427	(A,148,90)		CKSSYB104K10			C 674	(B,65,80)		CKSRYB104K16		
C 428	(A,130,92) 10 uF		CCG1192			C 675	(B,71,75)		CKSRYB104K16		
C 429	(A,150,90)		CKSRYB105K10			C 676	(B,76,79)		CKSRYB104K16		E
C 430	(A,131,91)		CKSSYB104K10			C 677	(B,63,80)		CKSRYB104K16		
C 431	(A,154,88)		CKSSYB472K25			C 678	(B,69,79)		CKSRYB104K16		
C 432	(A,154,90)		CKSSYB472K25			C 679	(B,66,65)		CCSRCH100D50		
C 433	(A,130,90)		CCSSCH101J50			C 680	(B,66,67)		CCSRCH100D50		
C 434	(A,135,94)		CKSSYB104K10			C 682	(A,37,86) 4.7 uF		CCG1212		
C 435	(A,128,90)		CKSSYB103K16			C 683	(B,49,52) 4.7 uF		CCG1212		
C 436	(A,152,87)		CCSSCH100D50			C 685	(A,74,83)		CCSSCH120J50		
C 437	(A,149,87)		CKSSYB104K10			C 686	(A,79,84)		CCSSCH120J50		
C 438	(A,132,88)		CCSSCH820J50			C 687	(B,47,52)		CKSRYB104K50		
C 441	(A,130,82)		CKSRYB474K10			C 688	(B,44,52) 4.7 uF		CCG1212		
C 443	(A,131,80)		CCSRCH471J50			C 696	(A,64,81) (A,C)		CCSSCH220J50		F
C 444	(A,152,82)		CCSSCH100D50			C 701	(B,53,71)		CKSRYB104K16		
C 445	(A,153,79)		CKSSYB104K10			C 702	(B,51,71)		CKSRYB104K16		
						C 703	(B,47,71)		CKSRYB104K16		

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.****B****Unit Number :****Unit Name : Keyboard Unit****MISCELLANEOUS**

C 704	(B,43,71)	CKSRYB104K16
C 705	(B,34,73)	CKSRYB104K16
C 706	(B,49,65)	CKSRYB104K16
C 707	(B,44,65)	CKSRYB104K16
C 708	(B,31,82) 2.2 uF	CCG1205
C 711	(B,51,37)	CKSRYB104K16
C 712	(B,53,49)	CKSRYB104K16
C 721	(A,35,87) 10 uF	CCG1192
C 722	(A,32,87) 10 uF	CCG1192
C 731	(B,75,92)	CKSRYB104K16
C 741	(A,77,50) (A,B)	CKSSYB104K10
C 752	(A,120,34)	CCSSCH220J50
C 753	(A,121,41)	CCSSCH100D50
C 754	(A,116,34)	CCSSCH220J50
C 755	(B,106,37)	CKSRYB103K50
C 758	(A,93,38)	CKSSYB102K50
C 760	(A,112,41)	CKSSYB221K50
C 770	(B,123,42)	CKSRYB104K16
C 771	(B,151,41) 10 uF	DCH1201
C 773	(A,155,45)	CKSSYB473K16
C 802	(B,111,14)	CKSRYB221K50
C 803	(A,103,21)	CKSRYB104K16
C 805	(B,100,14)	CKSRYB104K16
C 806	(B,104,22)	CKSRYB104K16
C 807	(B,98,11)	CKSRYB104K16
C 809	(B,117,48)	CKSRYB104K16
C 810	(B,82,36)	CKSRYB104K16
C 811	(B,100,19)	CKSRYB105K16
C 812	(A,95,20)	CKSRYB104K16
C 831	(B,112,26)	CKSQYB105K16
C 841	(A,103,29)	CKSRYB104K16
C 851	(A,67,38) (B,C)	CKSQYB105K16
C 881	(A,57,90)	CKSSYB104K10
C 882	(A,56,90)	CKSSYB104K10
C 891	(A,37,92)	CKSRYB104K16
C 892	(A,50,92)	CKSRYB104K16
C 901	(A,15,79) (A,C)	CKSSYB102K50
C 902	(A,16,79)	CKSRYB105K16
C 903	(A,22,74)	CEVQW221M6R3
C 904	(A,6,64)	CKSSYB102K50
C 905	(A,8,63)	CKSSYB682K25
C 906	(A,18,64)	CKSSYB103K16
C 908	(A,18,66)	CKSRYB105K16
C 909	(A,11,55) 1 000 uF/16 V	CCH2024
C 921	(B,17,55)	CKSRYB104K16
C 922	(B,21,53)	CKSRYB103K50
C 931	(A,29,63) 10 uF	CCG1192
C 932	(A,31,55) 10 uF	CCG1192
C 941	(B,136,40)	CKSRYB104K16
C 942	(A,135,49)	XCEVW221M10
C 943	(A,143,42)	CKSQYB105K16
C 951	(B,115,128)	CKSRYB104K16
C 961	(B,104,128)	CKSRYB105K10
C 991	(B,116,140)	CKSRYB104K16
C 992	(A,118,107)	CKSRYB104K16
C 994	(A,119,112)	CKSRYB104K16
C 995	(A,114,114)	CKSSYB333K16
C 1002	(A,85,87) (B)	CKSSYB104K10

IC 1621	(A,132,14) IC	BH2228FV
IC 1701	(B,84,21) IC	PEQ124A8
IC 1702	(A,103,22) Flash ROM Unit(A)	PEH394A8
	(A,103,22) Flash ROM Unit(B)	PEH385A8
	(A,103,22) Flash ROM Unit(C)	PEH384A8

Q 1631	(B,54,17) Transistor	LSCR523UB
Q 1632	(B,57,14) Transistor	LSCR523UB
Q 1633	(B,57,11) Transistor	LSCR523UB
Q 1634	(B,52,12) Transistor	LSCR523UB
Q 1635	(B,17,27) Transistor	LSCR523UB

Q 1636	(B,18,15) Transistor	LSCR523UB
Q 1661	(A,137,12) Transistor	LSCR523UB
Q 1662	(A,138,20) Transistor	LSCR523UB
Q 1663	(A,138,24) Transistor	LSCR523UB
Q 1670	(B,140,27) Transistor	LSCR523UB

Q 1671	(B,139,22) Transistor	LSCR523UB
Q 1673	(A,141,14) Transistor	LSCR523UB
Q 1681	(B,63,18) Transistor	LTC014EEB
Q 1682	(B,66,17) Transistor	LTC014YEB
D 1631	(A,14,24) LED	SMLVN6RGB2U(A)

D 1632	(A,162,31) LED	SMLVN6RGB2U(A)
D 1633	(A,59,25) LED	SMLVN6RGB2U(A)
D 1634	(A,59,12) LED	SMLVN6RGB2U(A)
D 1661	(A,152,11) LED	SMLVN6RGB2U(A)
D 1662	(A,152,18) LED	SMLVN6RGB2U(A)

D 1681	(A,72,19) LED(Red)	SML-D12V8W(PQ)
D 1701	(B,69,18) Diode	DA2J101
L 1781	(B,152,20) Inductor	CTF1389
L 1782	(B,152,24) Inductor	CTF1389
L 1783	(B,152,16) Inductor	CTF1389

X 1701	(B,73,20) Ceramic Resonator 16.000 MHz	CSS1616
S 1611	(A,37,19) Encoder(MULTI-CONTROL)	CSD1168
S 1731	(A,147,38) Push Switch	CSG1155
S 1732	(A,162,38) Push Switch	CSG1155
S 1733	(A,11,12) Push Switch	CSG1155

S 1735	(A,59,6) Push Switch	CSG1155
S 1737	(A,75,7) Push Switch	CSG1155
S 1738	(A,59,31) Push Switch	CSG1155
S 1739	(A,11,35) Push Switch	CSG1155
S 1740	(A,27,12) Spring Switch	CSN1080

S 1741	(A,27,26) Spring Switch	CSN1081
S 1742	(A,75,30) Push Switch	CSG1155
S 1743	(A,77,19) Push Switch	CSG1155
U 1731	(A,155,29) Remote Receiver Unit	RS-470
CN1601	(B,109,10) Connector	CKS6451

CN1751	(B,116,30) Connector	CKS6228
JA1781	(A,161,20) Jack	CKN1096

RESISTORS

R 1601	(B,92,9)	RS1/10SR222J
R 1602	(B,92,11)	RS1/10SR222J
R 1611	(B,50,25)	RS1/16SS103J
R 1621	(A,127,17)	RS1/10SR272J
R 1622	(A,127,16)	RS1/10SR272J

5 6 7 8 77

Circuit Symbol and No.**Part No.**

R 311	(B,30,10)	RS1/16SS472J
R 312	(B,30,11)	RS1/16SS472J
R 313	(B,30,12)	RS1/16SS472J
R 701	(A,21,38)	RS1/16SS101J
R 702	(A,23,38)	RS1/16SS101J
R 706	(A,32,42)	RS1/16SS221J

CAPACITORS

C 104	(B,12,57)	CKSQYB475K6R3
C 203	(B,22,47)	CKSSYB104K10
C 209	(B,28,47)	CKSRYB104K16
C 210	(B,33,43)	CKSSYB104K10
C 211	(B,33,41)	CKSSYB104K10
C 212	(B,22,28)	CKSSYB104K10
C 213	(B,18,26)	CKSSYB332K50
C 214	(B,17,26)	CKSSYB473K16
C 215	(B,19,28)	CKSSYB104K10
C 216	(B,12,33)	CKSSYB182K50
C 217	(B,10,34)	CCSSCH560J50
C 218	(B,10,36)	CCSSCH4R0C50
C 219	(B,14,34)	CKSSYB104K10
C 220	(A,18,38)	CKSSYB104K10
C 221	(B,14,32)	CKSSYB104K10
C 222	(B,13,37)	CKSSYB104K10
C 223	(B,12,42)	CCSSCH680J50
C 224	(B,13,45)	CCSSCH470J50
C 225	(B,13,46)	CKSSYB103K16
C 228	(B,10,33)	CCSSCH270J50
C 229	(B,9,40)	CKSSYB104K10
C 233	(B,32,46)	CKSSYB103K16
C 236	(B,8,40)	CKSSYB104K10
C 238	(A,25,44)	CKSRYB104K16
C 299	(A,26,41)	CKSSYB104K10
C 302	(B,28,12)	CKSSYB102K50
C 303	(B,29,12)	CKSSYB102K50
C 304	(B,27,12)	CKSSYB223K16
C 305	(B,26,12)	CKSSYB104K10
C 306	(A,31,7)	CKSSYB104K10
C 307	(A,41,19)	CKSRYB105K10
C 308	(A,31,15)	CKSRYB105K10
C 710	(A,34,42)	CKSSYB102K50