


NX-820H(G)/820H


EXPLODED VIEW

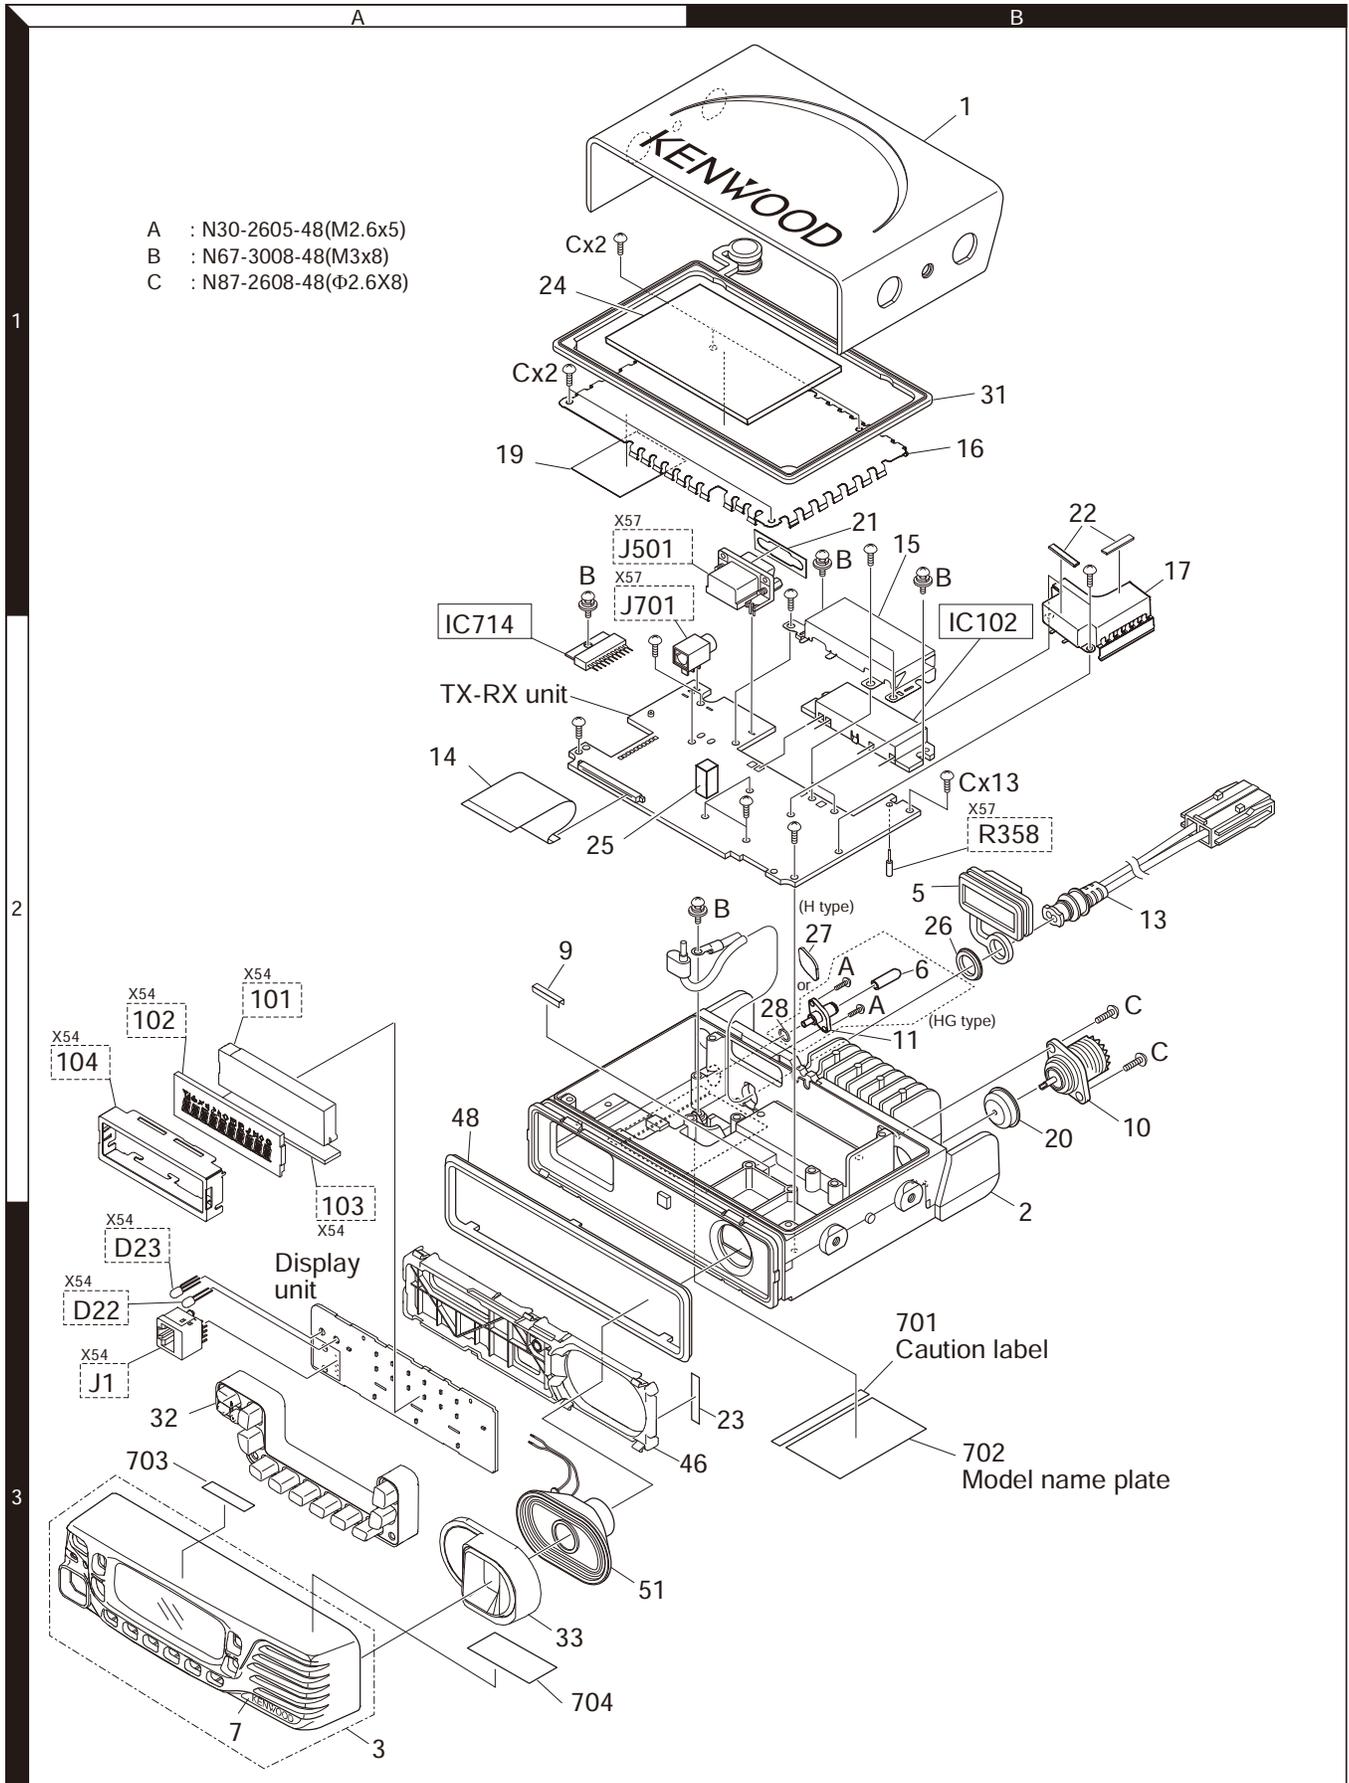

Parts with the exploded numbers larger than 700 are not supplied.
 If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB.
 These parts must be ordered separately.

NX-820H(G)/820H

PACKING

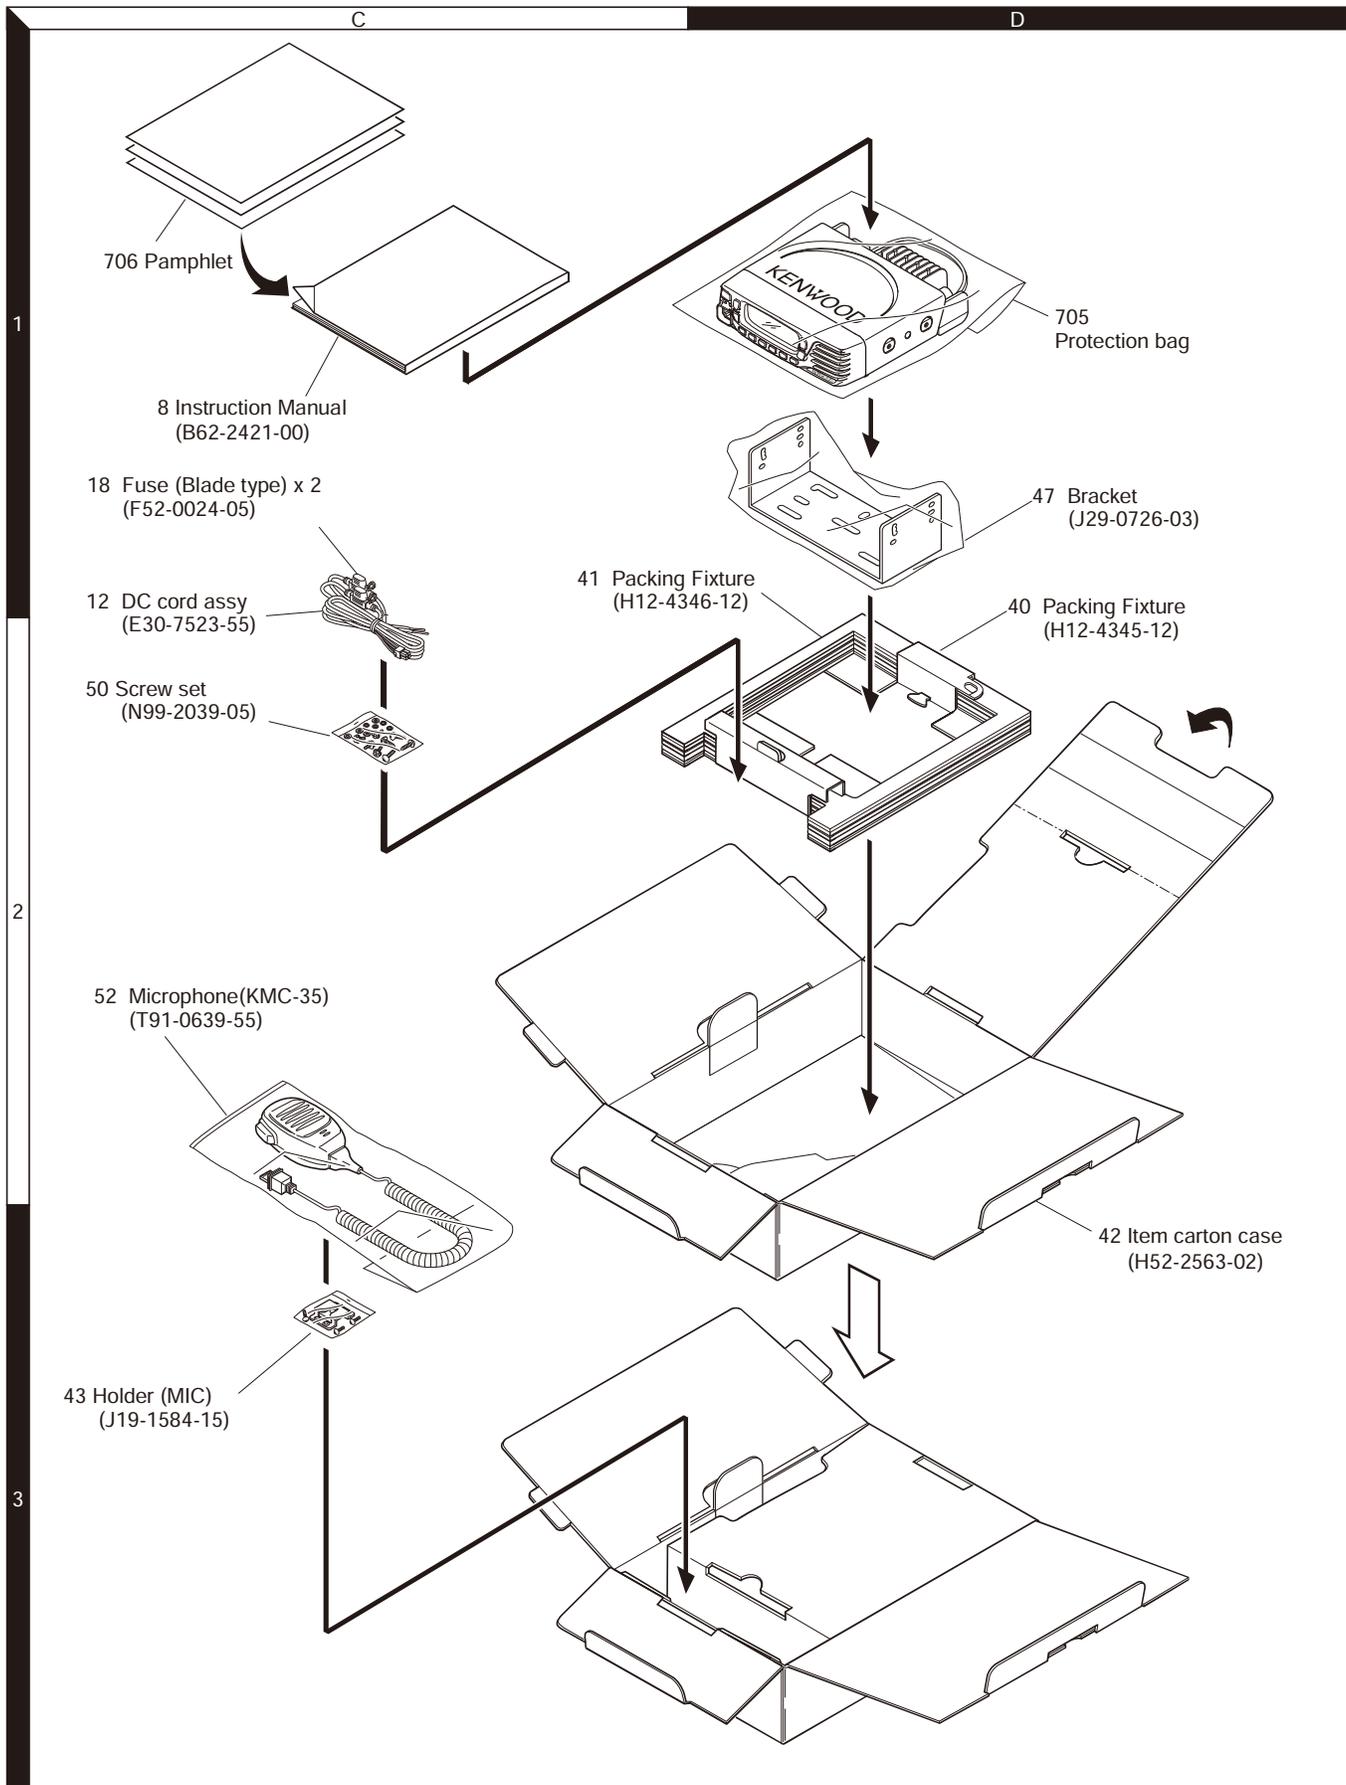

NX-820H(G)/820H

PARTS LIST

* New Parts. Δ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

L : Scandinavia

Y : PX (Far East, Hawaii)

C : China

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

NX-820H(G) / 820H
DISPLAY UNIT (X54-3830-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
NX-820H(G)/820H						DISPLAY UNIT (X54-3830-10)					
1	1B		A02-4073-21	PLASTIC CABINET		101	2A		B11-1885-03	ILLUMINATION GUIDE	
2	2B	*	A10-4161-01	CHASSIS		102	2A		B38-0936-05	LCD	
3	3A	*	A62-1200-03	PANEL ASSY		D5 -9			B30-2337-05	LED(YELLOW)	
5	2B		B09-0732-03	CAP(D-SUB)		D11 -21			B30-2337-05	LED(YELLOW)	
6	2B		B09-0754-05	CAP(SMA)	HGK,HGK2	D22	3A		B30-2321-05	LED(BLUE)	
7	3A		B43-1675-04	BADGE		D23	3A		B30-2151-05	LED(RED/GREEN)	
8	1C	*	B62-2421-00	INSTRUCTION MANUAL(E/S/F)		D24			B30-2337-05	LED(YELLOW)	
9	3B	*	E29-1244-14	RELAY HARDWARE		C1			CC73HCH1H101J	CHIP C 100PF	J
10	2B		E04-0167-15	RF COAXIAL RECEPTACLE(M)		C2 ,3			CC73HCH1H221J	CHIP C 220PF	J
11	2B		E04-0492-05	RF COAXIAL RECEPTACLE(SMA)	HGK,HGK2	C4			CC73HCH1H101J	CHIP C 100PF	J
12	1C		E30-7523-55	DC CORD ASSY ACCESSORY		C5			CC73HCH1H221J	CHIP C 220PF	J
13	1C		E30-7684-15	DC CORD		C6			CK73HB1H471K	CHIP C 470PF	K
14	2A		E37-1461-05	FLAT CABLE(30P)		C7			CK73HB1H102K	CHIP C 1000PF	K
15	2B	*	F10-3183-03	SHIELDING CASE(POWER MODULE)		C10			CK73HB1H102K	CHIP C 1000PF	K
16	1B	*	F10-3184-03	SHIELDING COVER(TOP)		C11			CC73HCH1H221J	CHIP C 220PF	J
17	1B	*	F10-3203-02	SHIELDING CASE(LPF)		C12			CC73HCH1H101J	CHIP C 100PF	J
18	1C		F52-0024-05	FUSE(15A/BLADE) ACCESSORY		C13			CK73HB1E103K	CHIP C 0.010UF	K
19	1A		G11-4353-04	SHEET(SHIELDING/BOTTOM)		C14 ,15			CK73HB1H102K	CHIP C 1000PF	K
20	2B		G11-4578-04	SHEET(FOR W/O SMA)	HK,HK2	C21			CK73HB1E103K	CHIP C 0.010UF	K
21	1B		G11-4611-04	SHEET(D-SUB)		C23			CK73HB1H102K	CHIP C 1000PF	K
22	1B		G13-2102-04	CONDUCTIVE CUSHION		C24 ,25			CK73HB1E103K	CHIP C 0.010UF	K
23	3B		G13-2363-04	CUSHION(PANELHOLDER)		C27			CK73HB1A105K	CHIP C 1.0UF	K
24	1B		G13-2389-04	CUSHION(SHIELDING/TOP)		C31			CK73HB1H102K	CHIP C 1000PF	K
25	2B		G13-2395-04	CUSHION(X57)		C32 ,33			CK73HB1C473K	CHIP C 0.047UF	K
26	2B		G53-1643-04	PACKING(DC CORD)		C34			CC73HCH1H470J	CHIP C 47PF	J
27	2B		G53-1662-04	PACKING(M/ANT)		C35 ,36			CC73HCH1H221J	CHIP C 220PF	J
28	2B		G53-1768-04	PACKING(SMA)	HGK,HGK2	103	3A		E29-1231-15	INTER CONNECTOR(LCD)	
31	1B		G53-1819-21	PACKING(CHASSIS)		CN1			E40-6924-05	FLAT CABLE CONNECTOR(30P)	
32	3A		G53-1820-03	PACKING(PANEL)		J1	3A		E58-0535-05	MODULAR JACK(MIC)	
33	3A		G53-1858-03	PACKING(SP)		104	2A		J21-8629-03	MOUNTING HARDWARE(LCD)	
40	2D	*	H12-4345-12	PACKING FIXTURE		L1			L92-0138-05	CHIP FERRITE	
41	2D	*	H12-4346-12	PACKING FIXTURE		L2 ,3			L92-0140-05	CHIP FERRITE	
42	2D	*	H52-2568-02	ITEM CARTON CASE		CP1			RK74HB1J101J	CHIP-COM 100 J	1/16W
43	3C		J19-1584-15	HOLDER(MIC) ACCESSORY		R1			RK73HB1J101J	CHIP R 100 J	1/16W
46	3A		J19-5542-02	HOLDER(PANEL)		R2 -4			RK73HB1J103J	CHIP R 10K J	1/16W
47	1D		J29-0726-03	BRACKET ACCESSORY		R5			RK73HB1J102J	CHIP R 1.0K J	1/16W
48	3A		K29-9479-01	KEY TOP		R7			RK73HB1J000J	CHIP R 0 J	1/16W
A	2B		N30-2605-48	PAN HEAD MACHINE SCREW(SMA)	HGK,HGK2	R9			RK73HB1J000J	CHIP R 0 J	1/16W
B	2A,2B		N67-3008-48	PAN HEAD SEMS SCREW		R12			RK73HB1J101J	CHIP R 100 J	1/16W
C	2A,2B		N87-2608-48	BRAZIER HEAD TAPTITE SCREW		R14			RK73HB1J122J	CHIP R 1.2K J	1/16W
50	2C		N99-2039-05	SCREW SET ACCESSORY		R15			RK73HB1J000J	CHIP R 0 J	1/16W
51	3A		T07-0785-15	SPEAKER		R17			RK73HB1J000J	CHIP R 0 J	1/16W
52	2C		T91-0639-55	MICROPHONE(KMC-35) ACCESSORY		R18			RK73GB2A331J	CHIP R 330 J	1/10W
			X57-8240-14	TX-RX UNIT(FOR SERVICE)	HGK	R19			RK73GB2A221J	CHIP R 220 J	1/10W
			X57-8240-15	TX-RX UNIT(FOR SERVICE)	HK	R20			RK73HB1J000J	CHIP R 0 J	1/16W
			X57-8240-16	TX-RX UNIT(FOR SERVICE)	HGK2	R22			RK73HB1J000J	CHIP R 0 J	1/16W
			X57-8240-17	TX-RX UNIT(FOR SERVICE)	HK2	R23			RK73HB1J473J	CHIP R 47K J	1/16W
						R24 ,25			RK73HB1J332J	CHIP R 3.3K J	1/16W
						R26			RK73HB1J472J	CHIP R 4.7K J	1/16W
						R28			RK73FB2B121J	CHIP R 120 J	1/8W
						R29			RK73FB2B221J	CHIP R 220 J	1/8W
						R34 -37			RK73GB2A271J	CHIP R 270 J	1/10W

NX-820H(G)/820H

PARTS LIST

DISPLAY UNIT (X54-3830-10)

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R38 -40			RK73HB1J472J	CHIP R 4.7K J 1/16W		C55			CK73HB0J105K	CHIP C 1.0UF K	
R41			RK73HB1J101J	CHIP R 100 J 1/16W		C56			CC73HCH1H060B	CHIP C 6.0PF B	
R42			RK73HB1J272J	CHIP R 2.7K J 1/16W		C57 ,58			CK73HB1H471K	CHIP C 470PF K	
R43			RK73HB1J103J	CHIP R 10K J 1/16W		C59			CC73HCH1H200G	CHIP C 20PF G	HGK,HK
R44			RK73HB1J222J	CHIP R 2.2K J 1/16W		C59			CC73HCH1H240G	CHIP C 24PF G	HGK2,HK2
R45			RK73HB1J472J	CHIP R 4.7K J 1/16W		C61			CC73HCH1H0R5B	CHIP C 0.5PF B	HGK,HK
D1			DZ2J062(M)	ZENER DIODE		C63			CC73HCH1H0R5B	CHIP C 0.5PF B	
D2			DA3S101F	DIODE		C64			CK73FB1A106K	CHIP C 10UF K	
D25			MINISMDC020F	VARISTOR		C65			CK73HB1H471K	CHIP C 470PF K	
D26			HN2S03FE	DIODE		C66			CC73HCH1H060B	CHIP C 6.0PF B	HGK,HK
D27			DZ2J062(M)	ZENER DIODE		C66			CC73HCH1H070B	CHIP C 7.0PF B	HGK2,HK2
IC1			LC75857W-E	MOS-IC		C67			CC73HCH1H040B	CHIP C 4.0PF B	HGK,HK
Q3			KTC4075E(Y,GR)	TRANSISTOR		C67			CC73HCH1H050B	CHIP C 5.0PF B	HGK2,HK2
Q6			KTC4075E(Y,GR)	TRANSISTOR		C68			CC73HCH1H030B	CHIP C 3.0PF B	HGK,HK
Q8			KTC4075E(Y,GR)	TRANSISTOR		C68 ,69			CC73HCH1H060B	CHIP C 6.0PF B	HGK2,HK2
Q9			QST7	TRANSISTOR		C69			CC73HCH1H060B	CHIP C 6.0PF B	HGK,HK
Q10			LTC014EEBFS8	TRANSISTOR		C70			CK73GB1E105K	CHIP C 1.0UF K	
Q11			KTC4075E(Y,GR)	TRANSISTOR		C71			CC73HCH1H180G	CHIP C 18PF B	
TX-RX UNIT (X57-8240-XX) -10:HGK -11:HK -12:HGK2 -13:HK2						C72			CC73HCH1H040B	CHIP C 4.0PF B	HGK2,HK2
						C72			CC73HCH1H050B	CHIP C 5.0PF B	HGK,HK
C1			CK73HB1E103K	CHIP C 0.010UF K		C73			CK73HB1H471K	CHIP C 470PF K	
C2			CC73HCH1H101J	CHIP C 100PF J		C74			CC73HCH1H0R5B	CHIP C 0.5PF B	
C3 ,4			CK73HB1H103K	CHIP C 0.010UF K		C76			CC73HCH1H0R5B	CHIP C 0.5PF B	
C5 ,6			CC73HCH1H100B	CHIP C 10PF B		C78			CK73HB1H471K	CHIP C 470PF K	
C7			CK73HB1H103K	CHIP C 0.010UF K		C80			CK73HB1H471K	CHIP C 470PF K	
C8			CK73HB1H471K	CHIP C 470PF K		C81			CC73HCH1H070B	CHIP C 7.0PF B	
C9			CC73HCH1H100B	CHIP C 10PF B		C82			CK73HB1H471K	CHIP C 470PF K	
C10 ,11			CK73HB1H103K	CHIP C 0.010UF K		C83			CC73HCH1H100B	CHIP C 10PF B	
C12			CC73HCH1H050B	CHIP C 5.0PF B	HGK,HK	C84			CC73HCH1H030B	CHIP C 3.0PF B	
C12			CC73HCH1H070B	CHIP C 7.0PF B	HGK2,HK2	C85 -87			CK73HB1H471K	CHIP C 470PF K	
C16 -21			CC73HCH1H101J	CHIP C 100PF J		C88			CK73HB1A104K	CHIP C 0.10UF K	
C22			CK73HB1A104K	CHIP C 0.10UF K		C89			CC73HCH1H060B	CHIP C 6.0PF B	
C23			CC73HCH1H101J	CHIP C 100PF J		C90			CC73HCH1H070B	CHIP C 7.0PF B	HGK,HK
C25 ,26			CC73HCH1H101J	CHIP C 100PF J		C90			CC73HCH1H100B	CHIP C 10PF B	HGK2,HK2
C28			CC73HCH1H101J	CHIP C 100PF J		C91			C93-0787-05	CHIP C 0.1UF J	
C29			CS77MA1VR15M	CHIP TNTL 0.15UF 35WV		C102			CK73HB1H471K	CHIP C 470PF K	
C30			CK73GB1E105K	CHIP C 1.0UF K		C103			CK73HB1H103K	CHIP C 0.010UF K	
C31			CC73HCH1H470J	CHIP C 47PF J		C104			CK73HB1H471K	CHIP C 470PF K	
C32			CS77BA1D100M	CHIP TNTL 10UF 20WV		C106,107			CK73HB1H471K	CHIP C 470PF K	
C33			CK73HB1H103K	CHIP C 0.010UF K		C108			CK73FB1E475K	CHIP C 4.7UF K	
C34			C93-1906-05	CHIP FILM 0.047UF J		C109			CC73HCH1H060B	CHIP C 6.0PF B	
C36			CC73HCH1H101J	CHIP C 100PF J		C110,111			CK73HB1H471K	CHIP C 470PF K	
C39			CC73HCH1H330J	CHIP C 33PF J		C113			CC73HCH1H101J	CHIP C 100PF J	
C41			CK73HB1H471K	CHIP C 470PF K		C116			CC73HCH1H101J	CHIP C 100PF J	
C43			CK73HB1H471K	CHIP C 470PF K		C117,118			CK73HB1H471K	CHIP C 470PF K	
C46			CC73HCH1H050B	CHIP C 5.0PF B		C119			CC73HCH1H060B	CHIP C 6.0PF B	
C47			CC73HCH1H030B	CHIP C 3.0PF B	HGK,HK	C124			CC73HCH1H060B	CHIP C 6.0PF B	HGK,HK
C47			CC73HCH1H040B	CHIP C 4.0PF B	HGK2,HK2	C124			CC73HCH1H070B	CHIP C 7.0PF B	HGK2,HK2
C48			CC73HCH1H050B	CHIP C 5.0PF B		C125			CK73HB1H471K	CHIP C 470PF K	
C49			CC73HCH1H100B	CHIP C 10PF B	HGK2,HK2	C127			CC73HCH1H220J	CHIP C 22PF J	
C49			CC73HCH1H180G	CHIP C 18PF G	HGK,HK	C128			CC73HCH1H470J	CHIP C 47PF J	
C50			CC73HCH1H151J	CHIP C 150PF J	HGK2,HK2	C129			CC73HCH1H060B	CHIP C 6.0PF B	HGK,HK
C50			CC73HCH1H271J	CHIP C 270PF J	HGK,HK	C129			CC73HCH1H070B	CHIP C 7.0PF B	HGK2,HK2
C51			CC73HCH1H271J	CHIP C 270PF J	HGK2,HK2	C131			CC73HCH1H101J	CHIP C 100PF J	
C51			CK73HB1H471K	CHIP C 470PF K	HGK,HK	C133			CC73HCH1H221J	CHIP C 220PF J	HGK2,HK2
C53			CC73HCH1H050B	CHIP C 5.0PF B	HGK2,HK2	C134			CK73HB1H471K	CHIP C 470PF K	HGK,HK
C53 ,54			CC73HCH1H050B	CHIP C 5.0PF B	HGK,HK	C134,135			CK73HB1H471K	CHIP C 470PF K	HGK2,HK2
C54			CC73HCH1H080B	CHIP C 8.0PF B	HGK2,HK2	C136			CK73FB1H471K	CHIP C 470PF K	
						C137			CC73HCH1H101J	CHIP C 100PF J	HGK2,HK2
						C140			CS77LA1C4R7M	CHIP TNTL 4.7UF 16WV	

NX-820H(G)/820H

PARTS LIST

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C142			CC73HCH1H220J	CHIP C 22PF J	HGK2,HK2	C219			CK73HB1H471K	CHIP C 470PF K	HGK,HK
C144			CC73HCH1H470J	CHIP C 47PF J	HGK2,HK2	C220			CC73HCH1H120G	CHIP C 12PF G	HGK,HK
C145			CK73HB1A104K	CHIP C 1.5PF K	HGK2,HK2	C220			CC73HCH1H150G	CHIP C 15PF G	HGK2,HK2
C146			C93-0550-05	CHIP C 1.0PF C	HGK,HK	C221			CC73HCH1H040B	CHIP C 4.0PF B	HGK,HK
C148			CC73HCH1H101J	CHIP C 100PF J	HGK2,HK2	C221			CC73HCH1H080B	CHIP C 8.0PF B	HGK2,HK2
C149			CC73HCH1H220J	CHIP C 22PF J	HGK,HK	C222			CC73HCH1H020B	CHIP C 2.0PF B	HGK,HK
C149			CK73HB1H471K	CHIP C 470PF K	HGK2,HK2	C222			CC73HCH1H100B	CHIP C 10PF B	HGK2,HK2
C150			CK73GB1E105K	CHIP C 1.0UF K	HGK2,HK2	C223			CK73HB1H471K	CHIP C 470PF K	HGK,HK
C151			C93-0551-05	CHIP C 1.5PF C	HGK,HK	C224			CC73HCH1H130G	CHIP C 13PF G	HGK,HK
C151			C93-0553-05	CHIP C 3.0PF C	HGK2,HK2	C224			CC73HCH1H150G	CHIP C 15PF G	HGK2,HK2
C152			C92-0875-05	ELECTRO 47UF 25WV		C225			CC73HCH1H040B	CHIP C 4.0PF B	HGK2,HK2
C154			CK73HB1E223K	CHIP C 0.022UF K		C225			CC73HCH1H080B	CHIP C 8.0PF B	HGK,HK
C155			CK73HB1H471K	CHIP C 470PF K		C226			CC73HCH1H040B	CHIP C 4.0PF B	HGK,HK
C156			CC73HCH1H101J	CHIP C 100PF J		C226			CC73HCH1H050B	CHIP C 5.0PF B	HGK2,HK2
C157			CK73HB1H102K	CHIP C 1000PF K		C227,228			CK73HB1H471K	CHIP C 470PF K	
C158			CK73HB1H471K	CHIP C 470PF K		C230			CC73HCH1H100B	CHIP C 10PF B	HGK2,HK2
C161			CC73GCH1H040C	CHIP C 4.0PF C		C230,231			CC73HCH1H080B	CHIP C 8.0PF B	HGK,HK
C165			CK73HB1H471K	CHIP C 470PF K		C231			CC73HCH1H050B	CHIP C 5.0PF B	HGK2,HK2
C167			CC73GCH1H040C	CHIP C 4.0PF C		C232			CC73HCH1H050B	CHIP C 5.0PF B	HGK,HK
C168			CK73HB1H471K	CHIP C 470PF K		C232			CC73HCH1H090B	CHIP C 9.0PF B	HGK2,HK2
C169			CK73HB1H102K	CHIP C 1000PF K		C233			CK73HB1H471K	CHIP C 470PF K	
C171			CC73HCH1H101J	CHIP C 100PF J		C234			CC73HCH1H100B	CHIP C 10PF B	
C172,173			CK73HB1H471K	CHIP C 470PF K		C239			CK73GB1H104K	CHIP C 0.10UF K	
C175			CC73FCH1H020B	CHIP C 2.0PF B	HGK,HK	C240			CK73GB1E105K	CHIP C 1.0UF K	
C175			CC73FCH1H060B	CHIP C 6.0PF B	HGK2,HK2	C246			CK73HB1H471K	CHIP C 470PF K	
C177			C93-1871-05	CHIP C 100PF 250WV		C250			CK73HB1H471K	CHIP C 470PF K	
C179			C93-0553-05	CHIP C 3.0PF C	HGK,HK	C251			CC73HCH1H070B	CHIP C 7.0PF B	
C179			C93-0554-05	CHIP C 4.0PF C	HGK2,HK2	C252,253			CK73HB1H471K	CHIP C 470PF K	
C180			C93-0555-05	CHIP C 5.0PF C	HGK,HK	C254			CC73HCH1H040B	CHIP C 4.0PF B	HGK2,HK2
C180			C93-0556-05	CHIP C 6.0PF D	HGK2,HK2	C254			CC73HCH1H050B	CHIP C 5.0PF B	HGK,HK
C183			C93-1852-05	CHIP C 6.0PF 250WV	HGK,HK	C255			CC73HCH1H020B	CHIP C 2.0PF B	HGK,HK
C184			C93-0557-05	CHIP C 7.0PF D	HGK2,HK2	C256			CC73HCH1H180G	CHIP C 18PF G	HGK2,HK2
C187,188			CK73HB1H102K	CHIP C 1000PF K		C256			CC73HCH1H220G	CHIP C 22PF G	HGK,HK
C190			CC73HCH1H070B	CHIP C 7.0PF B		C263			CC73HCH1H070B	CHIP C 7.0PF B	HGK,HK
C191			CC73GCH1H220J	CHIP C 22PF J		C263			CC73HCH1H100B	CHIP C 10PF B	HGK2,HK2
C192			CC73GCH1H120J	CHIP C 12PF J		C289			CC73HCH1H101J	CHIP C 100PF J	
C193			CC73GCH1H330J	CHIP C 33PF J		C290			CC73HCH1H030B	CHIP C 3.0PF B	HGK2,HK2
C194			CC73GCH1H100D	CHIP C 10PF D		C290,291			CC73HCH1H020B	CHIP C 2.0PF B	HGK,HK
C197			C93-1855-05	CHIP C 7.0PF 250WV	HGK,HK	C291			CC73HCH1H020B	CHIP C 2.0PF B	HGK2,HK2
C197			C93-1857-05	CHIP C 8.0PF 250WV	HGK2,HK2	C292			CC73HCH1H080B	CHIP C 8.0PF B	HGK2,HK2
C201,202			CK73HB1E103K	CHIP C 0.010UF K		C292			CC73HCH1H100B	CHIP C 10PF B	HGK,HK
C203			CK73HB1H471K	CHIP C 470PF K		C293			CK73HB1H471K	CHIP C 470PF K	
C204			CK73FB1E475K	CHIP C 4.7UF K		C294			CC73HCH1H100B	CHIP C 10PF B	
C205			CK73HB1H471K	CHIP C 470PF K		C295			CC73HCH1H060B	CHIP C 6.0PF B	
C206			CC73HCH1H1R5B	CHIP C 1.5PF B		C296			CC73HCH1H180G	CHIP C 18PF G	HGK2,HK2
C207			CK73HB1H471K	CHIP C 470PF K		C296,297			CC73HCH1H101J	CHIP C 100PF J	HGK,HK
C208			CC73HCH1H040B	CHIP C 4.0PF B	HGK,HK	C297			CC73HCH1H101J	CHIP C 100PF J	HGK2,HK2
C208			CC73HCH1H060B	CHIP C 6.0PF B	HGK2,HK2	C299			CK73HB1H471K	CHIP C 470PF K	
C209			CC73HCH1H120J	CHIP C 12PF J		C306			CK73HB1E103K	CHIP C 0.010UF K	
C210			CK73HB1E103K	CHIP C 0.010UF K		C307			CK73HB1A104K	CHIP C 0.10UF K	
C211			CC73HCH1H010B	CHIP C 1.0PF B		C309			CC73HCH1H100B	CHIP C 10PF B	
C212			CC73HCH1H080B	CHIP C 8.0PF B	HGK,HK	C312			CK73HB1H103K	CHIP C 0.010UF K	
C212			CC73HCH1H120G	CHIP C 12PF G	HGK2,HK2	C313			CK73HB1A104K	CHIP C 0.10UF K	
C213			CC73HCH1H020B	CHIP C 2.0PF B		C315			CK73HB1E103K	CHIP C 0.010UF K	
C214			CC73HCH1H070B	CHIP C 7.0PF B	HGK,HK	C316			CC73HCH1H100B	CHIP C 10PF B	
C214			CC73HCH1H080B	CHIP C 8.0PF B	HGK2,HK2	C317			CC73HCH1H101J	CHIP C 100PF J	
C215,216			CK73HB1H471K	CHIP C 470PF K		C322			CC73HCH1H101J	CHIP C 100PF J	
C217			CC73HCH1H020B	CHIP C 2.0PF B		C323			CC73HCH1H151J	CHIP C 150PF J	
C218			CC73HCH1H050B	CHIP C 5.0PF B	HGK2,HK2	C324			CC73HCH1H330G	CHIP C 33PF G	
C218			CC73HCH1H060B	CHIP C 6.0PF B	HGK,HK	C325			CC73HCH1H680G	CHIP C 68PF G	

NX-820H(G)/820H

PARTS LIST

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C326			CC73HCH1H100B	CHIP C 10PF B		C453			CK73HB1H103K	CHIP C 0.010UF K	
C327			CK73HB1A104K	CHIP C 0.10UF K		C454,455			CK73GB1C225K	CHIP C 2.2UF K	
C330			CK73HB1A104K	CHIP C 0.10UF K		C456			CK73HB1H103K	CHIP C 0.010UF K	
C332-335			CK73HB1A104K	CHIP C 0.10UF K		C457,458			CC73HCH1H101J	CHIP C 100PF J	
C336			CK73FB1A106K	CHIP C 10UF K		C460			CC73HCH1H101J	CHIP C 100PF J	
C337			CK73HB1A104K	CHIP C 0.10UF K		C461			CK73HB1A105K	CHIP C 1.0UF K	
C338			CK73FB1A106K	CHIP C 10UF K		C462			CK73GB1E105K	CHIP C 1.0UF K	
C339			CK73HB1A104K	CHIP C 0.10UF K		C463			CC73HCH1H101J	CHIP C 100PF J	
C340			CK73HB1H103K	CHIP C 0.010UF K		C464			CK73HB1A105K	CHIP C 1.0UF K	
C341			CK73HB1A104K	CHIP C 0.10UF K		C465,466			CK73GB1E105K	CHIP C 1.0UF K	
C342			CK73HB1A105K	CHIP C 1.0UF K		C468			CK73HB1H103K	CHIP C 0.010UF K	
C343-345			CK73HB1A104K	CHIP C 0.10UF K		C469			CK73HB1A105K	CHIP C 1.0UF K	
C346			CK73HB1A105K	CHIP C 1.0UF K		C471			CC73HCH1H101J	CHIP C 100PF J	
C347			CK73HB1H103K	CHIP C 0.010UF K		C472			CK73HB1H102K	CHIP C 1000PF K	
C348			CC73HCH1H470J	CHIP C 47PF J		C475			CK73GB1E105K	CHIP C 1.0UF K	
C350			CK73HB1H103K	CHIP C 0.010UF K		C476			CK73HB1A104K	CHIP C 0.10UF K	
C351			CC73HCH1H101J	CHIP C 100PF J		C477			CK73GB1H104K	CHIP C 0.10UF K	
C357			CC73HCH1H0R5B	CHIP C 0.5PF B		C501-504			CK73HB1A104K	CHIP C 0.10UF K	
C358			CC73HCH1H100B	CHIP C 10PF B		C505-507			CK73GB0J106K	CHIP C 10UF K	
C359-361			CK73HB1E103K	CHIP C 0.010UF K		C508,509			CK73HB1A105K	CHIP C 1.0UF K	
C363			CC73HCH1H220G	CHIP C 22PF G		C510			CK73HB1A104K	CHIP C 0.10UF K	
C366			CK73HB1E103K	CHIP C 0.010UF K		C512			CK73HB1A104K	CHIP C 0.10UF K	
C367			CK73HB1H103K	CHIP C 0.010UF K		C514-516			CK73HB1A104K	CHIP C 0.10UF K	
C368			CK73HB1H471K	CHIP C 470PF K		C518-520			CK73HB1A104K	CHIP C 0.10UF K	
C369			CK73HB1H103K	CHIP C 0.010UF K		C521			CC73HCH1H101J	CHIP C 100PF J	
C371			CK73HB1H103K	CHIP C 0.010UF K		C522,523			CK73HB1A104K	CHIP C 0.10UF K	
C401			C92-0968-05	ELECTRO 470UF 25WV		C524			CK73HB1A105K	CHIP C 1.0UF K	
C403			CK73HB1H471K	CHIP C 470PF K		C525-531			CK73HB1A104K	CHIP C 0.10UF K	
C405			CK73HB1H103K	CHIP C 0.010UF K		C532			CK73HB1H103K	CHIP C 0.010UF K	
C408,409			CK73HB1H103K	CHIP C 0.010UF K		C533			CK73GB0J106K	CHIP C 10UF K	
C410			CK73GB1C225K	CHIP C 2.2UF K		C534			CK73HB1A104K	CHIP C 0.10UF K	
C411			CK73GB1H104K	CHIP C 0.10UF K		C535			CK73HB1H272K	CHIP C 2700PF K	
C413			CC73HCH1H101J	CHIP C 100PF J		C536			CK73HB1A104K	CHIP C 0.10UF K	
C416			CK73HB1H103K	CHIP C 0.010UF K		C537			CK73HB1H102K	CHIP C 1000PF K	
C417			CC73HCH1H101J	CHIP C 100PF J		C541			CK73HB1A104K	CHIP C 0.10UF K	
C420			CK73GB1E105K	CHIP C 1.0UF K		C542			CK73HB1H103K	CHIP C 0.010UF K	
C422			CK73HB1H102K	CHIP C 1000PF K		C543,544			CK73HB1A104K	CHIP C 0.10UF K	
C423,424			CC73HCH1H101J	CHIP C 100PF J		C545			CK73FB1A106K	CHIP C 10UF K	
C425			CK73HB1H103K	CHIP C 0.010UF K		C546			CK73HB1H103K	CHIP C 0.010UF K	
C427			CK73GB1H473K	CHIP C 0.047UF K		C547			CC73HCH1H101J	CHIP C 100PF J	
C428			CK73HB1A104K	CHIP C 0.10UF K		C548			CK73HB1H103K	CHIP C 0.010UF K	
C429			CK73HB1H471K	CHIP C 470PF K		C549			CK73HB1A104K	CHIP C 0.10UF K	
C430			CK73FB1E475K	CHIP C 4.7UF K		C551			CK73HB1A104K	CHIP C 0.10UF K	
C431			CC73HCH1H101J	CHIP C 100PF J		C552			CK73HB1H103K	CHIP C 0.010UF K	
C432			CK73GB1H104K	CHIP C 0.10UF K		C553			CK73HB1A105K	CHIP C 1.0UF K	
C433,434			CK73FB1E475K	CHIP C 4.7UF K		C555,556			CK73HB1H103K	CHIP C 0.010UF K	
C435			CK73GB1C225K	CHIP C 2.2UF K		C558			CK73HB1A104K	CHIP C 0.10UF K	
C436			CK73HB1H103K	CHIP C 0.010UF K		C559			CK73FB1A106K	CHIP C 10UF K	
C437			CK73FB1E475K	CHIP C 4.7UF K		C560			CC73HCH1H030B	CHIP C 3.0PF B	
C438,439			CK73GB1H104K	CHIP C 0.10UF K		C563			CC73HCH1H101J	CHIP C 100PF J	
C440			C92-0875-05	ELECTRO 47UF 25WV		C565-568			CK73HB1A104K	CHIP C 0.10UF K	
C441			CK73GB1C225K	CHIP C 2.2UF K		C569			CK73HB1H103K	CHIP C 0.010UF K	
C442			CK73HB1H103K	CHIP C 0.010UF K		C570			CK73HB1A105K	CHIP C 1.0UF K	
C443			CK73GB1E105K	CHIP C 1.0UF K		C572-576			CK73HB1A104K	CHIP C 0.10UF K	
C445,446			CK73HB1H103K	CHIP C 0.010UF K		C577			CK73HB1H103K	CHIP C 0.010UF K	
C447			CK73GB1E105K	CHIP C 1.0UF K		C578			CK73HB1A105K	CHIP C 1.0UF K	
C448			CK73HB1H103K	CHIP C 0.010UF K		C579-581			CK73HB1H103K	CHIP C 0.010UF K	
C449			CK73GB1E105K	CHIP C 1.0UF K		C602			CK73HB1H103K	CHIP C 0.010UF K	
C450,451			CK73FB1A106K	CHIP C 10UF K		C603			CC73HCH1H101J	CHIP C 100PF J	
C452			CS77LA1C4R7M	CHIP TNL 4.7UF 16WV		C604			CK73HB1H102K	CHIP C 1000PF K	

NX-820H(G)/820H

PARTS LIST

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C605			CC73HCH1H101J	CHIP C 100PF J		C762			CK73HB1H103K	CHIP C 0.010UF K	
C607			CC73HCH1H101J	CHIP C 100PF J		C765			CC73HCH1H220J	CHIP C 22PF J	
C609-611			CC73HCH1H470J	CHIP C 47PF J		C766,767			CK73GB0J475K	CHIP C 4.7UF K	
C612			CC73HCH1H101J	CHIP C 100PF J		C769			CK73HB1E103K	CHIP C 0.010UF K	
C613			CK73HB1H103K	CHIP C 0.010UF K		C770			CK73HB1A104K	CHIP C 0.10UF K	
C614-618			CC73HCH1H101J	CHIP C 100PF J		C771			CK73HB1H122K	CHIP C 1200PF K	
C620			CC73HCH1H101J	CHIP C 100PF J		C773			CK73HB1E103K	CHIP C 0.010UF K	
C621			CK73HB1H102K	CHIP C 1000PF K		C774			CK73HB1A104K	CHIP C 0.10UF K	
C622-624			CK73HB1H103K	CHIP C 0.010UF K		C775			CC73HCH1H101J	CHIP C 100PF J	
C625			CK73HB1A104K	CHIP C 0.10UF K		C776			CK73HB1A393K	CHIP C 0.039UF K	
C626			CK73GB1H103K	CHIP C 0.010UF K		C777			CK73HB1A104K	CHIP C 0.10UF K	
C627-630			CK73GB1E105K	CHIP C 1.0UF K		C778			CK73HB1A105K	CHIP C 1.0UF K	
C632			CK73HB1H102K	CHIP C 1000PF K		C779,780			CC73HCH1H101J	CHIP C 100PF J	
C633-642			CC73HCH1H101J	CHIP C 100PF J		C782			CK73HB1A104K	CHIP C 0.10UF K	
C643			CK73HB1E223K	CHIP C 0.022UF K		C784			CK73FB1A106K	CHIP C 10UF K	
C644			CC73HCH1H101J	CHIP C 100PF J		C786			CK73HB1A104K	CHIP C 0.10UF K	
C645			CK73GB1H103K	CHIP C 0.010UF K		C788			CK73FB1E475K	CHIP C 4.7UF K	
C646			CC73HCH1H101J	CHIP C 100PF J		C790,791			CK73FB1A106K	CHIP C 10UF K	
C647			CK73HB1H103K	CHIP C 0.010UF K		C796			CK73GB1E105K	CHIP C 1.0UF K	
C648			CK73GB1H104K	CHIP C 0.10UF K		C797,798			CK73GB1C224K	CHIP C 0.22UF K	
C649			CK73GB1H103K	CHIP C 0.010UF K		C801			C92-0875-05	ELECTRO 47UF 25WV	
C650-652			CK73HB1A104K	CHIP C 0.10UF K		C802			CK73HB1H102K	CHIP C 1000PF K	
C660			CC73HCH1H101J	CHIP C 100PF J		C803,804			C92-0906-05	ELECTRO 330UF 16WV	
C661			CC73HCH1H470J	CHIP C 47PF J		C805			CK73HB1H102K	CHIP C 1000PF K	
C680			CK73HB1A104K	CHIP C 0.10UF K		C806			CK73GB1E105K	CHIP C 1.0UF K	
C701			CK73HB1H682K	CHIP C 6800PF K		C807			CK73HB1C473K	CHIP C 0.047UF K	
C702			CK73HB1H102K	CHIP C 1000PF K		C808			CK73HB1A683K	CHIP C 0.068UF K	
C704			CK73HB1A105K	CHIP C 1.0UF K		C809			CK73HB1H102K	CHIP C 1000PF K	HGK,HGK2
C705			CC73HCH1H470J	CHIP C 47PF J		C810			CK73FB1E475K	CHIP C 4.7UF K	
C706			CK73HB1A104K	CHIP C 0.10UF K		C811			CK73HB1H102K	CHIP C 1000PF K	
C707			CK73HB1H681K	CHIP C 680PF K		C812			CK73FB1A106K	CHIP C 10UF K	
C708			CK73HB1H102K	CHIP C 1000PF K		C813			CK73GB0J106K	CHIP C 10UF K	HK,HK2
C709			CC73HCH1H270J	CHIP C 27PF J		C813,814			CK73GB0J106K	CHIP C 10UF K	HGK,HGK2
C711			CC73HCH1H331J	CHIP C 330PF J		C815			CK73HB1A104K	CHIP C 0.10UF K	HGK,HGK2
C712			CC73HCH1H181J	CHIP C 180PF J		C816			CK73HB1H102K	CHIP C 1000PF K	HGK,HGK2
C714			CC73HCH1H680J	CHIP C 68PF J		C820			CK73HB1A104K	CHIP C 0.10UF K	HGK,HGK2
C716			CC73HCH1H101J	CHIP C 100PF J		C821,822			CC73HCH1H180J	CHIP C 18PF J	HGK,HGK2
C718			CK73HB1A104K	CHIP C 0.10UF K		C823			CK73HB1H102K	CHIP C 1000PF K	HGK,HGK2
C719			CC73HCH1H101J	CHIP C 100PF J		C824,825			CC73HCH1H180J	CHIP C 18PF J	HGK,HGK2
C720			CK73HB1A104K	CHIP C 0.10UF K		C826			CK73HB1A104K	CHIP C 0.10UF K	HGK,HGK2
C722			CK73HB1A104K	CHIP C 0.10UF K		C829			CK73GB0J106K	CHIP C 10UF K	
C723			CC73HCH1H470J	CHIP C 47PF J		C830,831			CK73HB1A104K	CHIP C 0.10UF K	
C725			CC73HCH1H121J	CHIP C 120PF J		C832,833			CK73HB1H102K	CHIP C 1000PF K	
C728			CK73HB1H821K	CHIP C 820PF K		CN10-12			E23-1278-05	TERMINAL	HGK2,HK2
C729			CK73HB1H681K	CHIP C 680PF K		CN10-15			E23-1278-05	TERMINAL	HGK,HK
C732			CK73HB1H102K	CHIP C 1000PF K		CN14,15			E23-1278-05	TERMINAL	HGK2,HK2
C733			CK73FB1E475K	CHIP C 4.7UF K		CN203-206			E23-1278-05	TERMINAL	
C734			CK73HB1H472K	CHIP C 4700PF K		CN514			E40-6847-05	FLAT CABLE CONNECTOR	
C735			CK73GB0J106K	CHIP C 10UF K		CN801			E04-0410-05	PIN SOCKET(3P)	HGK,HGK2
C738			CK73HB1A104K	CHIP C 0.10UF K		J501			E58-0536-05	D-SUB SOCKET(15P)	
C739			CK73HB1A105K	CHIP C 1.0UF K		J701			E11-0425-05	3.5D PHONE JACK(EXT-SP)	
C740			CK73HB1H102K	CHIP C 1000PF K		F401			F53-0328-15	FUSE(5A)	
C741			CK73HB1A224K	CHIP C 0.22UF K		F501			F53-0324-15	FUSE(2.5A)	
C743			CC73HCH1H470J	CHIP C 47PF J		F502,503			F53-0315-15	FUSE(250MA)	
C744			CK73HB1A224K	CHIP C 0.22UF K		F701			F53-0324-15	FUSE(2.5A)	
C746			CK73HB1A104K	CHIP C 0.10UF K		CF1			L72-1017-05	CERAMIC FILTER(450KHZ)	
C747			CC73HCH1H221J	CHIP C 220PF J		CF2			L72-1040-05	CERAMIC FILTER(450KHZ)	
C749			CK73HB1H102K	CHIP C 1000PF K		L1			L92-0163-05	BEADS CORE	
C752,753			CK73HB1A104K	CHIP C 0.10UF K		L2			L41-4795-39	SMALL FIXED INDUCTOR(4.7U/2520)	
C758			CC73HCH1H101J	CHIP C 100PF J							

NX-820H(G)/820H

PARTS LIST

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
L3			L92-0163-05	BEADS CORE		L302			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L5			L92-0163-05	BEADS CORE		L304			L40-5675-92	SMALL FIXED INDUCTOR(56NH)	
L6 ,7			L40-1001-86	SMALL FIXED INDUCTOR(10UH)		L307			L40-2291-86	SMALL FIXED INDUCTOR(2.2UH)	
L9			L40-5675-71	SMALL FIXED INDUCTOR(56NH)		L309			L40-1085-57	SMALL FIXED INDUCTOR(100NH)	
L11			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	HGK2,HK2	L310			L92-0138-05	CHIP FERRITE	
L11 -16			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	HGK,HK	L312			L41-1585-14	SMALL FIXED INDUCTOR(150NH)	
L12			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	HGK2,HK2	L315			L41-3985-39	SMALL FIXED INDUCTOR(0.39UH)	
L13			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	HGK2,HK2	L316			L41-1885-39	SMALL FIXED INDUCTOR(0.18UH)	
L14 -16			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	HGK2,HK2	L404			L92-0639-05	CHIP FERRITE	
L17			L34-4607-15	AIR-CORE COIL(6T)	HGK,HK	L405			L33-1496-05	SMALL FIXED INDUCTOR(22UH)	
L17			L34-4608-15	AIR-CORE COIL(7T)	HGK2,HK2	L501			L92-0138-05	CHIP FERRITE	
L18			L34-4608-15	AIR-CORE COIL(7T)	HGK,HK	L503			L92-0138-05	CHIP FERRITE	
L18			L34-4609-15	AIR-CORE COIL(8T)	HGK2,HK2	L504-506			L92-0162-05	BEADS CORE	
L19			L92-0163-05	BEADS CORE		L508			L92-0138-05	CHIP FERRITE	
L20			L40-1275-92	SMALL FIXED INDUCTOR(12NH)		L510			L92-0138-05	CHIP FERRITE	
L21			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	HGK,HK	L801			L79-1958-05	FILTER	HGK,HGK2
L21			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	HGK2,HK2	L802			L40-2775-57	SMALL FIXED INDUCTOR(27.0NH)	HGK,HGK2
L22			L92-0446-05	BEADS CORE		L805,806			L92-0138-05	CHIP FERRITE	HGK,HGK2
L23 ,24			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	HGK,HK	X1			L77-3073-05	TCXO(16.8MHZ)	
L23 ,24			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	HGK2,HK2	X501			L77-3015-05	TCXO(18.432MHZ)	
L25			L40-2775-71	SMALL FIXED INDUCTOR(27NH)		XF1			L71-0678-05	MCF(49.95MHZ)	
L26			L92-0163-05	BEADS CORE		CP1			RK74HB1J100J	CHIP-COM 10 J 1/16W	
L27			L40-3975-92	SMALL FIXED INDUCTOR(39NH)		CP501			RK74HB1J104J	CHIP-COM 100K J 1/16W	
L29			L40-2285-92	SMALL FIXED INDUCTOR(220NH)		CP502			RK74HA1J104J	CHIP-COM 100K J 1/16W	
L40 ,41			L92-0163-05	BEADS CORE		CP503			RK74HB1J104J	CHIP-COM 100K J 1/16W	
L101			L40-2275-92	SMALL FIXED INDUCTOR(22NH)		CP504			RK74HA1J101J	CHIP-COM 100 J 1/16W	
L102			L40-1875-92	SMALL FIXED INDUCTOR(18NH)		CP505			RK74HA1J104J	CHIP-COM 100K J 1/16W	
L103			L92-0140-05	CHIP FERRITE		CP506-508			RK74HB1J104J	CHIP-COM 100K J 1/16W	
L105			L92-0163-05	BEADS CORE		CP510			RK74HA1J104J	CHIP-COM 100K J 1/16W	
L106			L40-1875-92	SMALL FIXED INDUCTOR(18NH)		CP511			RK74HA1J101J	CHIP-COM 100 J 1/16W	
L107			L92-0140-05	CHIP FERRITE		CP512			RK74HA1J104J	CHIP-COM 100K J 1/16W	
L108-110			L92-0179-05	CHIP FERRITE		CP513			RK74HB1J104J	CHIP-COM 100K J 1/16W	
L111			L92-0163-05	BEADS CORE		CP514			RK74HA1J104J	CHIP-COM 100K J 1/16W	
L112			L34-4667-05	AIR-CORE COIL(9.5T)		CP515			RK74HA1J101J	CHIP-COM 100 J 1/16W	
L113			L34-4694-05	AIR-CORE COIL(1.5T)		CP516			RK74HB1J101J	CHIP-COM 100 J 1/16W	
L114			L34-4667-05	AIR-CORE COIL(9.5T)		CP701			RK74HB1J101J	CHIP-COM 100 J 1/16W	
L115			L34-4912-05	AIR-CORE COIL(1T)		CP703,704			RK74HB1J104J	CHIP-COM 100K J 1/16W	
L116,117			L34-4669-05	AIR-CORE COIL(2.5T)		CP705,706			RK74HA1J104J	CHIP-COM 100K J 1/16W	
L118			L40-2275-92	SMALL FIXED INDUCTOR(22NH)		CP707			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
L121			L40-1575-71	SMALL FIXED INDUCTOR(15NH)		R1			RK73HB1J000J	CHIP R 0 J 1/16W	HGK,HK
L201			L92-0138-05	CHIP FERRITE		R2			RK73HB1J000J	CHIP R 0 J 1/16W	HGK2,HK2
L202			L41-5685-39	SMALL FIXED INDUCTOR(0.56UH)		R5			RK73HB1J000J	CHIP R 0 J 1/16W	
L203			L41-2785-39	SMALL FIXED INDUCTOR(0.27UH)		R10			RK73HB1J100J	CHIP R 10 J 1/16W	
L204,205			L40-1575-71	SMALL FIXED INDUCTOR(15NH)	HGK,HK	R12			RK73HB1J683J	CHIP R 68K J 1/16W	
L204,205			L40-1875-71	SMALL FIXED INDUCTOR(18NH)	HGK2,HK2	R13 ,14			RK73HB1J473J	CHIP R 47K J 1/16W	
L206			L40-3975-71	SMALL FIXED INDUCTOR(39NH)	HGK,HK	R15			RK73HB1J100J	CHIP R 10 J 1/16W	
L206			L40-4775-71	SMALL FIXED INDUCTOR(47NH)	HGK2,HK2	R16			RK73HB1J102J	CHIP R 1.0K J 1/16W	
L207-209			L41-2778-14	SMALL FIXED INDUCTOR(27NH)	HGK,HK	R17			RK73HB1J104J	CHIP R 100K J 1/16W	
L207-209			L41-3378-14	SMALL FIXED INDUCTOR(33NH)	HGK2,HK2	R18			RK73HB1J102J	CHIP R 1.0K J 1/16W	
L210			L41-6878-14	SMALL FIXED INDUCTOR(68NH)	HGK,HK	R19 ,20			RK73HB1J000J	CHIP R 0 J 1/16W	
L210			L41-8278-14	SMALL FIXED INDUCTOR(82NH)	HGK2,HK2	R21			RK73HB1J470J	CHIP R 47 J 1/16W	
L211			L41-2778-14	SMALL FIXED INDUCTOR(27NH)	HGK,HK	R22			RK73HB1J181J	CHIP R 180 J 1/16W	
L211			L41-3378-14	SMALL FIXED INDUCTOR(33NH)	HGK2,HK2	R23			RK73HB1J100J	CHIP R 10 J 1/16W	
L212			L92-0138-05	CHIP FERRITE		R24			RK73HH1J391D	CHIP R 390 D 1/16W	
L213,214			L41-1878-14	SMALL FIXED INDUCTOR(18NH)	HGK,HK	R25			RK73HB1J104J	CHIP R 100K J 1/16W	
L213,214			L41-2278-14	SMALL FIXED INDUCTOR(22NH)	HGK2,HK2	R26			RK73HB1J102J	CHIP R 1.0K J 1/16W	
L215,216			L41-2778-14	SMALL FIXED INDUCTOR(27NH)	HGK,HK						
L215,216			L41-3378-14	SMALL FIXED INDUCTOR(33NH)	HGK2,HK2						
L228			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	HGK,HK						
L228			L40-2763-92	SMALL FIXED INDUCTOR(2.7NH)	HGK2,HK2						

NX-820H(G)/820H

PARTS LIST

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R27			RK73HB1J103J	CHIP R 10K J 1/16W		R125			RK73FB2B821J	CHIP R 820 J 1/8W	
R28			RK73HB1J106J	CHIP R 10M J 1/16W		R128			RK73HB1J221J	CHIP R 220 J 1/16W	
R29			RK73HB1J470J	CHIP R 47 J 1/16W		R130			RK73HB1J153J	CHIP R 15K J 1/16W	HGK2,HK2
R30			RK73HB1J184J	CHIP R 180K J 1/16W		R131			RK73HB1J103J	CHIP R 10K J 1/16W	
R31			RK73HB1J473J	CHIP R 47K J 1/16W		R133			RK73HB1J123J	CHIP R 12K J 1/16W	
R33			RK73HB1J472J	CHIP R 4.7K J 1/16W		R134			RK73GB2A121J	CHIP R 120 J 1/10W	
R34 -36			RK73HB1J000J	CHIP R 0 J 1/16W		R135			RK73HB1J823J	CHIP R 82K J 1/16W	
R40 ,41			RK73HB1J000J	CHIP R 0 J 1/16W		R136			RK73GB2A151J	CHIP R 150 J 1/10W	
R46			RK73HB1J330J	CHIP R 33 J 1/16W	HGK2,HK2	R137			RK73HB1J104J	CHIP R 100K J 1/16W	
R46			RK73HB1J680J	CHIP R 68 J 1/16W	HGK,HK	R138			RK73HB1J103J	CHIP R 10K J 1/16W	
R48			RK73HB1J472J	CHIP R 4.7K J 1/16W		R139,140			RK73GB2A151J	CHIP R 150 J 1/10W	
R49			RK73HB1J473J	CHIP R 47K J 1/16W		R141			RK73HB1J333J	CHIP R 33K J 1/16W	
R50			RN73HH1J100D	CHIP R 10 D 1/16W		R142			RK73HB1J000J	CHIP R 0 J 1/16W	
R52			RK73HB1J474J	CHIP R 470K J 1/16W		R143			RK73HB1J104J	CHIP R 100K J 1/16W	
R53 ,54			RK73HB1J333J	CHIP R 33K J 1/16W		R145			RK73GB2A100J	CHIP R 10 J 1/10W	
R55			RN73HH1J151D	CHIP R 150 D 1/16W	HGK,HK	R146			RK73HB1J393J	CHIP R 39K J 1/16W	
R55			RN73HH1J181D	CHIP R 180 D 1/16W	HGK2,HK2	R147			RK73HB1J104J	CHIP R 100K J 1/16W	
R56			RK73HB1J000J	CHIP R 0 J 1/16W		R148			RK73HB1J000J	CHIP R 0 J 1/16W	
R57			RN73HH1J151D	CHIP R 150 D 1/16W	HGK,HK	R149			RK73HB1J103J	CHIP R 10K J 1/16W	
R57			RN73HH1J181D	CHIP R 180 D 1/16W	HGK2,HK2	R150			RK73HB1J124J	CHIP R 120K J 1/16W	
R58			RN73HH1J100D	CHIP R 10 D 1/16W		R152			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R59			RK73HB1J102J	CHIP R 1.0K J 1/16W		R154			RK73HB1J000J	CHIP R 0 J 1/16W	
R60			RK73HB1J473J	CHIP R 47K J 1/16W		R155			RK73HB1J223J	CHIP R 22K J 1/16W	
R61			RK73HB1J154J	CHIP R 150K J 1/16W		R157,158			RK73HB1J333J	CHIP R 33K J 1/16W	
R62			RK73HB1J101J	CHIP R 100 J 1/16W		R159,160			RK73HB1J000J	CHIP R 0 J 1/16W	
R63			RK73HB1J682J	CHIP R 6.8K J 1/16W		R161			RK73HB1J104J	CHIP R 100K J 1/16W	
R64			RK73HB1J103J	CHIP R 10K J 1/16W		R167			RK73HB1J153J	CHIP R 15K J 1/16W	
R65			RK73HB1J221J	CHIP R 220 J 1/16W		R168,169			RK73EB2E241J	CHIP R 240 J 1/4W	
R66			RK73HB1J391J	CHIP R 390 J 1/16W		R170			RK73GB2A000J	CHIP R 0 J 1/10W	
R67			RK73HB1J101J	CHIP R 100 J 1/16W		R171			R92-1061-05	JUMPER REST 0 OHM	
R69			RK73HB1J102J	CHIP R 1.0K J 1/16W		R176			RK73GB2A221J	CHIP R 220 J 1/10W	
R70			RK73HB1J474J	CHIP R 470K J 1/16W		R177,178			RK73HB1J000J	CHIP R 0 J 1/16W	
R71			RK73HB1J101J	CHIP R 100 J 1/16W		R179,180			RK73HB1J333J	CHIP R 33K J 1/16W	
R72			RK73HB1J102J	CHIP R 1.0K J 1/16W		R181			RK73HB1J000J	CHIP R 0 J 1/16W	
R73			RK73GB2A000J	CHIP R 0 J 1/10W		R183			RK73HB1J103J	CHIP R 10K J 1/16W	
R75			RK73HB1J100J	CHIP R 10 J 1/16W		R184,185			RK73HB1J471J	CHIP R 470 J 1/16W	HGK2,HK2
R76			RK73HB1J000J	CHIP R 0 J 1/16W		R184,185			RK73HB1J821J	CHIP R 820 J 1/16W	HGK,HK
R80 -85			RK73GB2A000J	CHIP R 0 J 1/10W	HGK,HK	R187			RK73HB1J473J	CHIP R 47K J 1/16W	
R80 ,81			RK73GB2A000J	CHIP R 0 J 1/10W	HGK2,HK2	R188			RK73GB2A120J	CHIP R 12 J 1/10W	HGK2,HK2
R83 ,84			RK73GB2A000J	CHIP R 0 J 1/10W	HGK2,HK2	R188			RK73GB2A5R6J	CHIP R 5.6 J 1/10W	HGK,HK
R86			RK73HB1J000J	CHIP R 0 J 1/16W	HGK,HK	R201			RK73HB1J470J	CHIP R 47 J 1/16W	
R87			RK73HB1J000J	CHIP R 0 J 1/16W		R203			RK73HB1J681J	CHIP R 680 J 1/16W	
R90			RK73HB1J105J	CHIP R 1.0M J 1/16W	HGK,HK	R204			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R101			RK73HB1J332J	CHIP R 3.3K J 1/16W		R205			RK73HB1J151J	CHIP R 150 J 1/16W	
R102			RK73HB1J221J	CHIP R 220 J 1/16W	HGK2,HK2	R207			RK73HB1J104J	CHIP R 100K J 1/16W	
R102			RK73HB1J471J	CHIP R 470 J 1/16W	HGK,HK	R208			RK73HB1J184J	CHIP R 180K J 1/16W	
R103			RK73HB1J120J	CHIP R 12 J 1/16W	HGK,HK	R209			RK73HB1J104J	CHIP R 100K J 1/16W	
R103			RK73HB1J220J	CHIP R 22 J 1/16W	HGK2,HK2	R210			RK73HB1J224J	CHIP R 220K J 1/16W	
R104			RK73HB1J221J	CHIP R 220 J 1/16W	HGK2,HK2	R213-217			RK73HB1J104J	CHIP R 100K J 1/16W	
R104			RK73HB1J471J	CHIP R 470 J 1/16W	HGK,HK	R218			RK73HB1J000J	CHIP R 0 J 1/16W	
R108			RK73GB2A680J	CHIP R 68 J 1/10W		R223			RK73HB1J000J	CHIP R 0 J 1/16W	
R109			RK73HB1J221J	CHIP R 220 J 1/16W		R230			RK73HB1J000J	CHIP R 0 J 1/16W	
R110			RK73GB2A220J	CHIP R 22 J 1/10W		R233			RK73HB1J274J	CHIP R 270K J 1/16W	
R111			RK73HB1J272J	CHIP R 2.7K J 1/16W		R234			RK73HB1J104J	CHIP R 100K J 1/16W	
R112			RK73HB1J681J	CHIP R 680 J 1/16W		R235			RK73HB1J103J	CHIP R 10K J 1/16W	
R113			RK73GB2A150J	CHIP R 15 J 1/10W		R241			RK73HB1J103J	CHIP R 10K J 1/16W	
R114			RK73HB1J471J	CHIP R 470 J 1/16W		R242			RK73HB1J274J	CHIP R 270K J 1/16W	
R120			RK73HB1J153J	CHIP R 15K J 1/16W		R243			RK73HB1J104J	CHIP R 100K J 1/16W	
R121			RK73FB2B821J	CHIP R 820 J 1/8W		R245			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R122,123			RK73FB2B120J	CHIP R 12 J 1/8W		R247			RK73HB1J470J	CHIP R 47 J 1/16W	

NX-820H(G)/820H

PARTS LIST

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R249,250			RK73HB1J183J	CHIP R 18K J 1/16W	HGK,HK	R429			RK73HB1J000J	CHIP R 0 J 1/16W	HGK,HGK2
R255-257			RK73HB1J104J	CHIP R 100K J 1/16W		R430			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R259			RK73HB1J000J	CHIP R 0 J 1/16W		R431			RK73HB1J000J	CHIP R 0 J 1/16W	
R290			RK73HB1J000J	CHIP R 0 J 1/16W		R432			RK73HB1J103J	CHIP R 10K J 1/16W	
R291,292			RK73GB2A000J	CHIP R 0 J 1/10W		R433			RK73HB1J274J	CHIP R 270K J 1/16W	
R303-305			RK73HB1J102J	CHIP R 1.0K J 1/16W		R434			RK73HB1J103J	CHIP R 10K J 1/16W	
R306			RK73HB1J334J	CHIP R 330K J 1/16W		R435			RK73HB1J000J	CHIP R 0 J 1/16W	
R307			RK73HB1J561J	CHIP R 560 J 1/16W		R438			RK73GB2A100J	CHIP R 10 J 1/10W	
R308			RK73HB1J000J	CHIP R 0 J 1/16W		R439			RK73HB1J474J	CHIP R 470K J 1/16W	
R315			RK73HB1J000J	CHIP R 0 J 1/16W		R440			RK73HB1J000J	CHIP R 0 J 1/16W	
R316			RK73HB1J332J	CHIP R 3.3K J 1/16W		R441			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R323			RK73HB1J000J	CHIP R 0 J 1/16W		R501			RK73HB1J220J	CHIP R 22 J 1/16W	
R324			RK73HB1J183J	CHIP R 18K J 1/16W		R503,504			RK73HB1J104J	CHIP R 100K J 1/16W	
R326			RK73GB2A331J	CHIP R 330 J 1/10W		R505,506			RK73GB2A000J	CHIP R 0 J 1/10W	
R328			RK73HB1J183J	CHIP R 18K J 1/16W		R508-511			RK73HB1J101J	CHIP R 100 J 1/16W	
R329			RK73HB1J100J	CHIP R 10 J 1/16W		R512			RK73HB1J104J	CHIP R 100K J 1/16W	
R332			RK73HB1J000J	CHIP R 0 J 1/16W		R513			RK73HB1J000J	CHIP R 0 J 1/16W	
R336,337			RK73HB1J102J	CHIP R 1.0K J 1/16W		R515-517			RK73HB1J000J	CHIP R 0 J 1/16W	
R338			RK73HB1J473J	CHIP R 47K J 1/16W		R518			RK73HB1J101J	CHIP R 100 J 1/16W	
R339			RK73HB1J153J	CHIP R 15K J 1/16W	R519			RK73HB1J000J	CHIP R 0 J 1/16W		
R340			RK73HB1J274J	CHIP R 270K J 1/16W	R521,522			RK73HB1J104J	CHIP R 100K J 1/16W		
R341			RK73HB1J103J	CHIP R 10K J 1/16W	R524			RK73HB1J000J	CHIP R 0 J 1/16W		
R342			RK73HB1J104J	CHIP R 100K J 1/16W	R525			RK73HB1J474J	CHIP R 470K J 1/16W		
R343			RK73HB1J223J	CHIP R 22K J 1/16W	R526			RK73HB1J104J	CHIP R 100K J 1/16W		
R344			RK73HB1J272J	CHIP R 2.7K J 1/16W	R531			RK73HB1J104J	CHIP R 100K J 1/16W		
R345			RK73HB1J000J	CHIP R 0 J 1/16W	R532			RK73HB1J000J	CHIP R 0 J 1/16W		
R350			RK73HB1J103J	CHIP R 10K J 1/16W	R533,534			RK73HB1J473J	CHIP R 47K J 1/16W		
R351			RK73HB1J104J	CHIP R 100K J 1/16W	R536			RK73HB1J000J	CHIP R 0 J 1/16W		
R355			RK73HB1J000J	CHIP R 0 J 1/16W	R541			RK73HB1J101J	CHIP R 100 J 1/16W		
R357			RK73HB1J104J	CHIP R 100K J 1/16W	R546			RK73HB1J000J	CHIP R 0 J 1/16W		
R358			RK73HB1J333J	CHIP R 33K J 1/16W	R549			RK73HB1J103J	CHIP R 10K J 1/16W		
R368			RK73HB1J221J	CHIP R 220 J 1/16W	R550			RK73HB1J104J	CHIP R 100K J 1/16W		
R378			RK73HB1J394J	CHIP R 390K J 1/16W	R552,553			RK73HB1J472J	CHIP R 4.7K J 1/16W		
R379			RK73HB1J222J	CHIP R 2.2K J 1/16W	R554			RK73HB1J332J	CHIP R 3.3K J 1/16W		
R381			RK73HB1J221J	CHIP R 220 J 1/16W	R555			RK73HB1J102J	CHIP R 1.0K J 1/16W		
R390			RK73HB1J103J	CHIP R 10K J 1/16W	R556			RK73HB1J220J	CHIP R 22 J 1/16W		
R394			RK73HB1J181J	CHIP R 180 J 1/16W	R557			RK73HB1J153J	CHIP R 15K J 1/16W		
R401			RK73HB1J471J	CHIP R 470 J 1/16W	R558			RK73HB1J220J	CHIP R 22 J 1/16W		
R402			RK73HB1J103J	CHIP R 10K J 1/16W	R559			RK73HB1J392J	CHIP R 3.9K J 1/16W		
R403			RK73HH1J274D	CHIP R 270K D 1/16W	R560			RK73HB1J474J	CHIP R 470K J 1/16W		
R404			RK73HH1J104D	CHIP R 100K D 1/16W	R561			RK73HB1J000J	CHIP R 0 J 1/16W		
R405,406			RK73HB1J103J	CHIP R 10K J 1/16W	R566			RK73HB1J474J	CHIP R 470K J 1/16W		
R407			RK73HB1J472J	CHIP R 4.7K J 1/16W	R567			RK73HB1J102J	CHIP R 1.0K J 1/16W		
R408			RK73HB1J684J	CHIP R 680K J 1/16W	R568,569			RK73HB1J000J	CHIP R 0 J 1/16W		
R409			RK73HB1J104J	CHIP R 100K J 1/16W	R571,572			RK73HB1J000J	CHIP R 0 J 1/16W		
R410			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	R580			RK73HB1J332J	CHIP R 3.3K J 1/16W		
R411			RK73HB1J473J	CHIP R 47K J 1/16W	R581			RK73HB1J104J	CHIP R 100K J 1/16W		
R412,413			RK73GB2A100J	CHIP R 10 J 1/10W	R583			RK73HH1J104D	CHIP R 100K D 1/16W		
R414,415			RK73HB1J103J	CHIP R 10K J 1/16W	R584			RK73HB1J473J	CHIP R 47K J 1/16W		
R417			RK73HB1J104J	CHIP R 100K J 1/16W	R599			RK73HB1J104J	CHIP R 100K J 1/16W		
R418			RK73HB1J000J	CHIP R 0 J 1/16W	R603			RK73HB1J474J	CHIP R 470K J 1/16W		
R419			RK73HB1J272J	CHIP R 2.7K J 1/16W	R606			RK73HB1J105J	CHIP R 1.0M J 1/16W		
R421			RK73HB1J472J	CHIP R 4.7K J 1/16W	R610			RK73HB1J474J	CHIP R 470K J 1/16W		
R422			RK73HB1J474J	CHIP R 470K J 1/16W	R611			RK73HB1J103J	CHIP R 10K J 1/16W		
R423			RK73HB1J472J	CHIP R 4.7K J 1/16W	R612			RK73HB1J102J	CHIP R 1.0K J 1/16W		
R424			RK73HB1J103J	CHIP R 10K J 1/16W	R613			RK73HB1J103J	CHIP R 10K J 1/16W		
R425			RK73HH1J124D	CHIP R 120K D 1/16W	R614			RK73HB1J000J	CHIP R 0 J 1/16W		
R426			RK73HH1J183D	CHIP R 18K D 1/16W	R615			RK73HB1J472J	CHIP R 4.7K J 1/16W		
R427			RK73HH1J223D	CHIP R 22K D 1/16W	R616			RK73HB1J474J	CHIP R 470K J 1/16W		
R428			RK73HB1J102J	CHIP R 1.0K J 1/16W	R617			RK73HB1J000J	CHIP R 0 J 1/16W		

NX-820H(G)/820H

PARTS LIST

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R620			RK73HB1J103J	CHIP R 10K J 1/16W		R748,749			RK73HB1J104J	CHIP R 100K J 1/16W	
R621-624			RK73HB1J104J	CHIP R 100K J 1/16W		R750			RK73HB1J393J	CHIP R 39K J 1/16W	
R626			RK73HB1J101J	CHIP R 100 J 1/16W		R751			RK73HB1J104J	CHIP R 100K J 1/16W	
R627,628			RK73HB1J682J	CHIP R 6.8K J 1/16W		R752			RK73HB1J394J	CHIP R 390K J 1/16W	
R629			RK73HB1J104J	CHIP R 100K J 1/16W		R754			RK73HB1J563J	CHIP R 56K J 1/16W	
R631			RK73HB1J104J	CHIP R 100K J 1/16W		R755			RK73HB1J224J	CHIP R 220K J 1/16W	
R632			RK73GB2A000J	CHIP R 0 J 1/10W		R756			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R634			RK73HB1J101J	CHIP R 100 J 1/16W		R769			RK73HB1J684J	CHIP R 680K J 1/16W	
R635			RK73GB2A000J	CHIP R 0 J 1/10W		R770,771			RK73HB1J473J	CHIP R 47K J 1/16W	
R636			RK73HB1J474J	CHIP R 470K J 1/16W		R772			RK73HB1J153J	CHIP R 15K J 1/16W	
R637,638			RK73FB2B102J	CHIP R 1.0K J 1/8W		R773			RK73HB1J000J	CHIP R 0 J 1/16W	
R639			RK73HB1J471J	CHIP R 470 J 1/16W		R775			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R641			RK73GB2A000J	CHIP R 0 J 1/10W		R776,777			RK73HB1J103J	CHIP R 10K J 1/16W	
R643			RK73GB2A000J	CHIP R 0 J 1/10W		R778			RK73HB1J273J	CHIP R 27K J 1/16W	
R657			RK73HB1J472J	CHIP R 4.7K J 1/16W		R779			RK73HB1J223J	CHIP R 22K J 1/16W	
R658,659			RK73GB2A000J	CHIP R 0 J 1/10W		R781			RK73HB1J000J	CHIP R 0 J 1/16W	HGK,HK
R661			RK73HB1J473J	CHIP R 47K J 1/16W		R783			RK73HB1J154J	CHIP R 150K J 1/16W	
R662			RK73GB2A000J	CHIP R 0 J 1/10W		R785			RK73HB1J000J	CHIP R 0 J 1/16W	
R664			RK73GB2A000J	CHIP R 0 J 1/10W		R786			RK73HB1J563J	CHIP R 56K J 1/16W	
R667			RK73GB2A101J	CHIP R 100 J 1/10W		R787			RK73HB1J123J	CHIP R 12K J 1/16W	
R668			RK73HB1J471J	CHIP R 470 J 1/16W		R796,797			RK73GB2A000J	CHIP R 0 J 1/10W	
R669-671			RK73HB1J101J	CHIP R 100 J 1/16W		R800			RK73HB1J104J	CHIP R 100K J 1/16W	
R672			RK73GB2A471J	CHIP R 470 J 1/10W		R801			RK73HB1J102J	CHIP R 1.0K J 1/16W	HK,HK2
R673			RK73HB1J104J	CHIP R 100K J 1/16W		R801,802			RK73HB1J102J	CHIP R 1.0K J 1/16W	HGK,HGK2
R674			RK73HB1J105J	CHIP R 1.0M J 1/16W		R803,804			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R677-680			RK73GB2A000J	CHIP R 0 J 1/10W		R805,806			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R681			RK73HB1J000J	CHIP R 0 J 1/16W		R810			RK73HB1J123J	CHIP R 12K J 1/16W	
R682,683			RK73GB2A000J	CHIP R 0 J 1/10W		R811			RK73HB1J103J	CHIP R 10K J 1/16W	
R684			RK73HB1J473J	CHIP R 47K J 1/16W		R813			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R685			RK73HB1J103J	CHIP R 10K J 1/16W		R814			RK73HB1J391J	CHIP R 390 J 1/16W	
R686			RK73HB1J223J	CHIP R 22K J 1/16W		R816			RK73HB1J123J	CHIP R 12K J 1/16W	
R687			RK73HB1J103J	CHIP R 10K J 1/16W		R818			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R688			RK73HB1J102J	CHIP R 1.0K J 1/16W		R819,820			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R690			RK73HB1J102J	CHIP R 1.0K J 1/16W		R821,822			RK73GB2A000J	CHIP R 0 J 1/10W	
R701			RK73HB1J103J	CHIP R 10K J 1/16W		R823			RK73HB1J123J	CHIP R 12K J 1/16W	
R702			RK73HB1J222J	CHIP R 2.2K J 1/16W		R824			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R703			RK73HB1J563J	CHIP R 56K J 1/16W		R825			RK73HB1J000J	CHIP R 0 J 1/16W	
R704			RK73HB1J153J	CHIP R 15K J 1/16W		R826			RK73HB1J103J	CHIP R 10K J 1/16W	
R705			RK73HB1J683J	CHIP R 68K J 1/16W		R827			RK73HB1J823J	CHIP R 82K J 1/16W	
R706			RK73HB1J823J	CHIP R 82K J 1/16W		R831,832			RK73HB1J683J	CHIP R 68K J 1/16W	
R707			RK73HB1J182J	CHIP R 1.8K J 1/16W		R833			RK73HB1J101J	CHIP R 100 J 1/16W	
R708			RK73HB1J333J	CHIP R 33K J 1/16W		R834			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R709			RK73HB1J104J	CHIP R 100K J 1/16W		R835			RK73HB1J100J	CHIP R 10 J 1/16W	HGK,HGK2
R710			RK73HB1J563J	CHIP R 56K J 1/16W		R837			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R711			RK73HB1J104J	CHIP R 100K J 1/16W		R838			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R712			RK73HB1J473J	CHIP R 47K J 1/16W		R839			RK73EB2E100J	CHIP R 10 J 1/4W	HGK,HGK2
R713			RK73HB1J223J	CHIP R 22K J 1/16W		R842-844			RK73HB1J000J	CHIP R 0 J 1/16W	HGK,HGK2
R716			RK73HB1J104J	CHIP R 100K J 1/16W		R845			RK73HB1J101J	CHIP R 100 J 1/16W	
R720			RK73HB1J334J	CHIP R 330K J 1/16W		R846,847			RK73HB1J223J	CHIP R 22K J 1/16W	
R722			RK73HB1J104J	CHIP R 100K J 1/16W		D2			DZ2J091(M)	ZENER DIODE	
R724			RK73HB1J473J	CHIP R 47K J 1/16W		D3 ,4			1SV323F	VARIABLE CAPACITANCE DIODE	
R728			RK73HB1J393J	CHIP R 39K J 1/16W		D7 -12			1SV282-F	VARIABLE CAPACITANCE DIODE	
R730			RK73HB1J473J	CHIP R 47K J 1/16W		D13			1SV278F	VARIABLE CAPACITANCE DIODE	
R738			RK73HB1J103J	CHIP R 10K J 1/16W		D14			DA2S101	DIODE	
R739			RK73HB1J334J	CHIP R 330K J 1/16W		D16 ,17			RKS151KJ	DIODE	
R741			RK73HB1J470J	CHIP R 47 J 1/16W		D101			DZ2J056(M)	ZENER DIODE	
R742			RK73HB1J332J	CHIP R 3.3K J 1/16W		D102			DA3S101F	DIODE	HGK2,HK2
R743			RK73HB1J471J	CHIP R 470 J 1/16W		D103			RKS151KJ	DIODE	
R745			RK73HB1J104J	CHIP R 100K J 1/16W		D104,105			HSB88AS-E	DIODE	
R746			RK73HB1J103J	CHIP R 10K J 1/16W							

NX-820H(G)/820H

PARTS LIST

TX-RX UNIT (X57-8240-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
D106			D22J056(M)	ZENER DIODE		IC705			BU7242NUX	MOS-IC	
D107			RKP351KW-1P2	DIODE		IC711			BU7462NUX	MOS-IC	
D108,109			RB520SM-30	DIODE		IC712			R2A20178NP	DAC IC	
D110,111			L407CDB	DIODE (50V/1W)		IC713			TC7W53FK(F)	MOS-IC	
D112-114			RN142S	DIODE		IC714	2A		LA4600	BI-POLAR IC	
D201-206			1SV278F	VARIABLE CAPACITANCE DIODE		IC716			TC7WT126FU-F	MOS-IC	
D401			DZ2J180(M)	ZENER DIODE		IC801			TC7WH126FU-F	MOS-IC	HGK,HGK2
D403			RB520SM-30	DIODE		Q1			LTC014EEBFS8	TRANSISTOR	
D404			DA2S101	DIODE		Q2			2SJ648-A	FET	
D405			DB2S310	DIODE		Q4			2SC5383-T111	TRANSISTOR	
D406			DB22306	DIODE		Q5 ,6			MCH3914(8)-H	FET	
D407			RB520SM-30	DIODE		Q8			EM6M1	FET	
D408,409			DB2S310	DIODE		Q9			SSM3J15FS	FET	
D410			22ZR-10D	SURGE ABSORBER		Q10 ,11			2SC5108(Y)F	TRANSISTOR	
D411			DSA3A1	DIODE		Q101			2SC3356-A(R24)	TRANSISTOR	
D502			DB2S310	DIODE		Q102			2SC3357-A	TRANSISTOR	
D504			DB2S310	DIODE		Q105			FK330301	FET	
D505-510			MC2850	DIODE		Q106			EMD5	TRANSISTOR	
D511-513			DB2S310	DIODE		Q201			3SK318	FET	
D601			DB2S310	DIODE		Q202			NESE240034	TRANSISTOR	
D701			DA2S101	DIODE		Q303			2SC5108(Y)F	TRANSISTOR	
D702			1SS422	DIODE		Q305			2SC4215-F(Y)	TRANSISTOR	
D703,704			DA3S101F	DIODE		Q401			LTC014EEBFS8	TRANSISTOR	
D705,706			EMZ6.8N	ZENER DIODE		Q402			2SA1955A-F	TRANSISTOR	
D801,802			RN142S	DIODE	HGK,HGK2	Q403			MTM981400BF	FET	
IC1			TA7808F-NQ	ANALOGUE IC		Q404			2SA1955A-F	TRANSISTOR	
IC2			SKY72310-362	MOS-IC		Q405			LTC014EEBFS8	TRANSISTOR	
IC3			BD7542FVM	MOS-IC		Q407			FK330301	FET	
IC102	2B		RA60H40471101	POWER MODULE	HGK2,HK2	Q408			EMD5	TRANSISTOR	
IC102	2B		RA60H44521101	POWER MODULE	HGK,HK	Q409			EM6M1	FET	
IC103			NJM12904RB1	MOS-IC		Q410			2SA1955A-F	TRANSISTOR	
IC201			BD7542FVM	MOS-IC		Q411,412			LTC014EEBFS8	TRANSISTOR	
IC301			TC7SH08FU-F	MOS-IC		Q414			EMD9	TRANSISTOR	
IC303			TK10931VTL-G	ANALOGUE IC		Q415			2SC4738(GR)F	TRANSISTOR	
IC304			BU7445HFV	MOS-IC		Q416			2SA1832(GR)F	TRANSISTOR	
IC401			XC6209B332M-G	MOS-IC		Q417			EMD5	TRANSISTOR	
IC402			XC6118C23CMR	MOS-IC		Q418			LTC014EEBFS8	TRANSISTOR	
IC404			XC6209B502P-G	MOS-IC		Q501			FK330301	FET	
IC405			LT1616ES6-PBF	ANALOGUE IC		Q502			LTC014TEBFS8	TRANSISTOR	
IC406			XC6209B332M-G	MOS-IC		Q503			MTM981400BF	FET	
IC407			NJM2878F4-33	BI-POLAR IC		Q504			LTC014TEBFS8	TRANSISTOR	
IC408			XC6205B152P-G	MOS-IC		Q701			FK330301	FET	
IC409			NJM2878F4-33	BI-POLAR IC		Q702			KTC4075E(Y,GR)	TRANSISTOR	
IC501			Note1(BGA)	ROM IC		Q703			2SA1832(GR)F	TRANSISTOR	
IC502			Note1(BGA)	ASIC		Q704			2SC4738(GR)F	TRANSISTOR	
IC503			Note1(BGA)	SRAM IC		Q705,706			SSM3J15FS	FET	
IC504			BD5329FVE	MOS-IC		Q708			LTC014EEBFS8	TRANSISTOR	
IC506			SM5023CNDH-G	MOS-IC		Q709			SSM6N37FE	FET	
IC507			Note1(BGA)	MOS-IC		TH1			ERTJ0EV104H	THERMISTOR(100K)	HGK2,HK2
IC508			TC7SH08FU-F	MOS-IC		TH1 ,2			ERTJ0EV104H	THERMISTOR(100K)	HGK,HK
IC509			TC7WH126FU-F	MOS-IC		TH101			ERTJ0EV104H	THERMISTOR(100K)	
IC511			TC74VHCT244AFK	MOS-IC		TH103			ERTJ0EV104H	THERMISTOR(100K)	
IC512			TC7WBD125AFK	MOS-IC		TH701			ERTJ0EV104H	THERMISTOR(100K)	
IC513			TC7WT126FU-F	MOS-IC							
IC514			TC7WH126FU-F	MOS-IC		A801			W02-3768-05	GPS MODULE	HGK,HGK2
IC515			PCA9535BS	MOS-IC							
IC516			ADM202EARNZ	MOS-IC							
IC701			BU7462NUX	MOS-IC							
IC702			BU7242NUX	MOS-IC							
IC703			BU7462NUX	MOS-IC							